





# SIMILAR VIDEO TUTORIAL



This video shows the replacement procedure of a similar car part on another vehicle

# i Important!

This replacement procedure can be used for: BMW Z4 Roadster (E85) M

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW X5 (E53) 3.0 i

CLUB.AUTODOC.CO.UK 1-13







# REPLACEMENT: BRAKE PADS – BMW Z4 ROADSTER (E85). LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Brake cleaner
- Anti-squeal paste
- Copper grease
- HEX bit no.H7.

- Wheel impact socket #19
- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Crow bar
- Wheel chock

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-13







### Replacement: brake pads – BMW Z4 Roadster (E85). Tip from AUTODOC:

- Perform the replacement of brake pads in complete set for each axis. This
  provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Please note: all work on the car BMW Z4 Roadster (E85) should be done with the engine switched off.

## CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the bonnet.
- Remove the protective cover.



Remove the rubber strip.



CLUB.AUTODOC.CO.UK 3-13







4 Unscrew the brake fluid reservoir cap.



Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #19.



- Raise the rear of the car and secure on supports.
- 8 Unscrew the wheel bolts.



Replacement: brake pads – BMW Z4 Roadster (E85). Tip:

• To avoid injury, hold up the wheel when unscrewing the bolts.

CLUB.AUTODOC.CO.UK 4–13







9 Remove the wheel.

12



10 Spread the brake pads. Use a crowbar.



Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



CLUB.AUTODOC.CO.UK 5-13







Detach the brake caliper retaining spring. Use a crowbar.



14 Remove the brake caliper.



# Replacement: brake pads – BMW Z4 Roadster (E85). AUTODOC experts recommend:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

Remove the brake pads. Use a crowbar.

15



CLUB.AUTODOC.CO.UK 6-13







# Replacement: brake pads – BMW Z4 Roadster (E85). AUTODOC recommends:

 Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

16

Remove the connector of the brake pad wear sensor. Use a crowbar.



### Please note!

• Some cars are not equipped with the brake pad wear sensor.

17

Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



### **AUTODOC** recommends:

 Replacement: brake pads – BMW Z4 Roadster (E85). After applying the spray, wait a few minutes.

CLUB.AUTODOC.CO.UK 7–13







Press in the brake caliper piston. Use brake caliper wind back tool.



Treat the back side of the new brake pads. Use anti-squeal paste.



Replacement: brake pads – BMW Z4 Roadster (E85). Professionals recommend:

• Make sure the disc surface is clean before installing the pads.

20 Install new brake pads.



CLUB.AUTODOC.CO.UK 8-13








# Replacement: brake pads – BMW Z4 Roadster (E85). Tip from AUTODOC:

• Make sure the pads are installed with linings facing the disc.

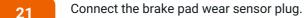



Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



Install the dust boot caps of the brake caliper guide pins.



Install the brake caliper retaining spring.

24



CLUB.AUTODOC.CO.UK 9-13







Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



26 Install the wheel.



### **AUTODOC** recommends:

- Important! Hold the wheel while screwing in the fastening bolts. BMW Z4 Roadster (E85)
- Screw in the wheel bolts. Use wheel impact socket #19.



Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 140 nm torque.



CLUB.AUTODOC.CO.UK 10-13