






VIDEO TUTORIAL

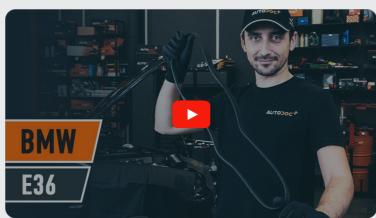

(i) Important!

This replacement procedure can be used for:

BMW 3 Saloon (E36) 320i 2.0, BMW 3 Coupe (E36) 320i 2.0, BMW 3 Saloon (E36) 325i 2.5, BMW 3 Coupe (E36) 325i 2.5, BMW 5 Saloon (E34) 520i 2.0 24V, BMW 5 Saloon (E34) 525i 2.5 24V, BMW 5 Saloon (E34) 525iX 2.5 24V, BMW 5 Touring (E34) 520i 2.0, BMW 5 Touring (E34) 525i 2.5, BMW 5 Touring (E34) 525ix 2.5, BMW 3 Convertible (E36) 320i 2.0, BMW 3 Convertible (E36) 325i 2.5, BMW 3 Touring (E36) 320i 2.0, BMW 3 Touring (E36) 328i 2.8, BMW 3 Saloon (E36) 328i 2.8, (+ 19)

The steps may slightly vary depending on the car design.


CLUB.AUTODOC.CO.UK 1–9







REPLACEMENT: SERPENTINE BELT – BMW E36. TOOLS YOU MIGHT NEED:

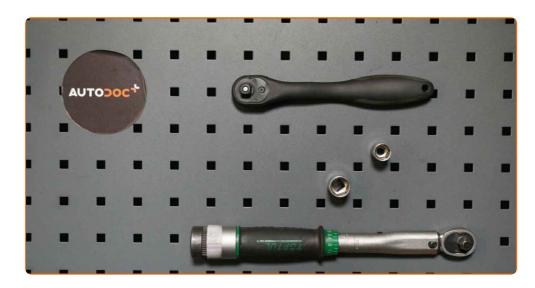

- Torque wrench
- Drive socket # 13
- Drive socket # 16

- Ratchet wrench
- Fender cover

BUY TOOLS

CLUB.AUTODOC.CO.UK 2–9







Replacement: serpentine belt – BMW E36. Tip from AUTODOC:

• All work should be done with the engine stopped.

REPLACEMENT: SERPENTINE BELT – BMW E36. RECOMMENDED SEQUENCE OF STEPS:

1 Open

3

Open the hood.



Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



Lift the car using a jack or place it over an inspection pit.



CLUB.AUTODOC.CO.UK 3–9








Pull aside the AC compressor belt tensioner pulley. Use a drive socket #13. Use a ratchet wrench.



Remove the AC compressor belt.

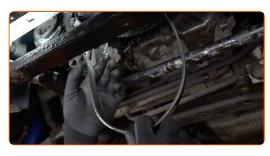

- Return the tensioner pulley to its initial position.
- Pull aside the V-ribbed belt tensioner pulley. Use a drive socket #16. Use a ratchet wrench.



Remove the V-ribbed belt.



CLUB.AUTODOC.CO.UK 4-9







Replacement: serpentine belt – BMW E36. AUTODOC experts recommend:

 Check the condition of the tensioner pulley and idler pulley. Replace them if necessary.

9

Install the V-ribbed belt.



Replacement: serpentine belt – BMW E36. AUTODOC recommends:

• Make sure that the V-ribbed belt fits all pulleys snugly.

10

Return the tensioner pulley to its initial position. Use a drive socket #16. Use a ratchet wrench.



11

Pull aside the AC compressor belt tensioner pulley. Use a drive socket #13.



CLUB.AUTODOC.CO.UK 5–9







12 Install the AC compressor belt.



Return the tensioner pulley to its initial position.



Screw in the fastener of the AC compressor belt tensioner pulley. Use a drive socket #13. Use a torque wrench. Tighten it to 7 Nm torque.



Lower the car.

16



Run the engine for a few minutes. This is necessary in order to make sure that the component operates properly.



CLUB.AUTODOC.CO.UK 6–9







- 17 Shut off the engine.
- 18 Remove the fender protection cover.



Close the hood.





VIEW MORE TUTORIALS


CLUB.AUTODOC.CO.UK 7-9







AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

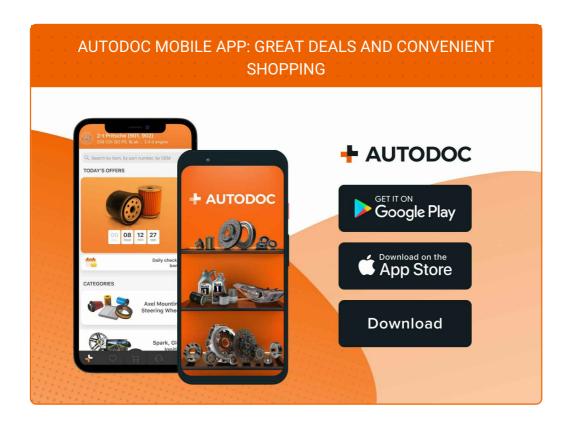

A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR BMW

SERPENTINE BELT: A WIDE SELECTION

CLUB.AUTODOC.CO.UK 8-9