






### SIMILAR VIDEO TUTORIAL

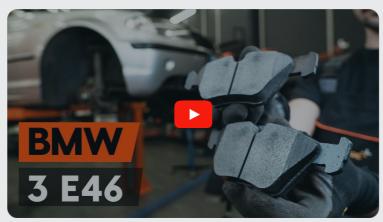

This video shows the replacement procedure of a similar car part on another vehicle

# (i) Important!

This replacement procedure can be used for: BMW Z4 Coupe (E86) 3.0 si

The steps may slightly vary depending on the car design.

This tutorial was created based on the replacement procedure for a similar car part on: BMW 3 Touring (E46) 330d 3.0

CLUB.AUTODOC.CO.UK 1–12







# REPLACEMENT: BRAKE PADS – BMW Z4 COUPE (E86). TOOLS YOU'LL NEED:



- Wire brush
- Brake cleaner
- Copper grease
- Anti-squeal paste
- HEX bit No.H7.
- Wheel impact socket #17

- Ratchet wrench
- Torque wrench
- Brake caliper wind back tool
- Crow bar
- Wheel chock

**Buy tools** 

CLUB.AUTODOC.CO.UK 2-12







#### Replacement: brake pads – BMW Z4 Coupe (E86). Tip from AUTODOC:

- Perform the replacement of brake pads in complete set for each axis. This
  provides effective braking.
- The replacement procedure is identical for all brake pads on the same axle.
- Warning! Shut down the engine before starting any work BMW Z4 Coupe (E86).

### CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:

- Open the bonnet. Unscrew the brake fluid reservoir cap.
- Secure the wheels with chocks.



Loosen the wheel mounting bolts. Use wheel impact socket #17.



Raise the front of the car and secure on supports.

CLUB.AUTODOC.CO.UK 3-12







5 Unscrew the wheel bolts.



Replacement: brake pads – BMW Z4 Coupe (E86). AUTODOC experts recommend:

- To avoid injury, hold up the wheel when unscrewing the bolts.
- 6 Remove the wheel.

8



7 Spread the brake pads. Use a crowbar.



Detach the brake caliper retaining spring. Use a crowbar.



CLUB.AUTODOC.CO.UK 4-12







Remove the dust boot caps of the brake caliper guide pins. Use a crowbar.



Unscrew the brake caliper fastening. Use HEX No.H7. Use a ratchet wrench.



11 Remove the brake caliper.



CLUB.AUTODOC.CO.UK 5-12







#### Replacement: brake pads – BMW Z4 Coupe (E86). AUTODOC recommends:

- Tie the caliper to the suspension or to the body with a wire without disconnecting from the brake hose to prevent depressurization of the brake system.
- Make sure that the brake caliper is not hanging on the brake hose.
- Don't press the brake pedal after the brake caliper has been removed. As a result, the piston can fall out from the brake cylinder, and brake fluid leakage and depressurization of the system may occur.

12 Rem

Remove the brake pads.



## Replacement: brake pads – BMW Z4 Coupe (E86). Tip:

 Measure the brake disc thickness. Upon reaching the wear limit the part must be replaced.

13

Treat the brake caliper piston. Use a brake cleaner.



CLUB.AUTODOC.CO.UK 6-12







### Replacement: brake pads – BMW Z4 Coupe (E86). Professionals recommend:

• After applying the spray, wait a few minutes.





Clean the brake caliper bracket from dirt and dust. Use a wire brush. Use a brake cleaner.



15

16

#### **AUTODOC** recommends:

- Replacement: brake pads BMW Z4 Coupe (E86). After applying the spray, wait a few minutes.
- Treat the brake caliper bracket where it contacts the brake pads. Use anti-squeal paste.



CLUB.AUTODOC.CO.UK 7–12







# Replacement: brake pads – BMW Z4 Coupe (E86). Tip from AUTODOC experts:

• Make sure the disc surface is clean before installing the pads.

17 Install new brake pads.



#### Replacement: brake pads – BMW Z4 Coupe (E86). Tip:

- Make sure the pads are installed with linings facing the disc.
- Install the brake caliper and fix it. Use HEX No.H7. Use a torque wrench. Tighten it to 30 Nm torque.



Install the dust boot caps of the brake caliper guide pins.



CLUB.AUTODOC.CO.UK 8-12







20 Install the brake caliper retaining spring.



Clean the brake disk surface. Use a brake cleaner.



#### **AUTODOC** recommends:

- Replacement: brake pads BMW Z4 Coupe (E86). After applying the spray, wait a few minutes.
- Treat the surface where the brake disc contacts the wheel rim. Use copper grease.



Install the wheel.



CLUB.AUTODOC.CO.UK 9-12







#### Replacement: brake pads – BMW Z4 Coupe (E86). Tip from AUTODOC experts:

• To avoid injury, hold up the wheel when screwing in the fastening bolts.



Screw in the wheel bolts. Use wheel impact socket #17.



Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 nm torque.



26

Remove the jacks and chocks.



Replacement: brake pads – BMW Z4 Coupe (E86). AUTODOC recommends:

• Check the brake fluid level in the expansion tank and refill if necessary.

CLUB.AUTODOC.CO.UK 10-12