

Laser Dust Module

(Model No.: ZH03B)

Manual

Version: 2.1

Valid from: 2019-04-15

Zhengzhou Winsen Electronics Technology Co., Ltd

Statement

This manual copyright belongs to Zhengzhou Winsen Electronics Technology Co., LTD. Without the written permission, any part of this manual shall not be copied, translated, stored in database or retrieval system, also can't spread through electronic, copying, record ways.

Thanks for purchasing our product. In order to let customers using it better and reduce the faults caused by misuse, please read the manual carefully and operate it correctly in accordance with the instructions. If users disobey the terms or remove, disassemble, change the components inside of the sensor, we shall not be responsible for the loss.

The specific such as color, appearance, sizes & etc., please in kind prevail.

We are devoting ourselves to products development and technical innovation, so we reserve the right to improve the products without notice. Please confirm it is the valid version before using this manual. At the same time, users' comments on optimized using way are welcome.

Please keep the manual properly, in order to get help if you have questions during the usage in the future.

Zhengzhou Winsen Electronics Technology CO., LTD

ZH03B Laser Dust Sensor Module

Profile

Laser Dust sensor module is a common type, small size sensor, using laser scattering principle to detect the dust particles in air, with good selectivity and stability. It is easy to use, with serial port output & PWM output.



Features

Good consistency, Real time response Accurate data, Low power consumption Minus resolution of particle diameter 0.3 μm

Main Applications

It's widely used in air purifiers, ventilation systems, portable instrument, air quality monitoring equipment, air conditioner, and smart home equipment.

Technical Parameters stable1.

Model	ZH03B				
Detection diameter range	0.3~10 μ m				
Valid range	0~1000 μ g/m³				
Detection interval	1s				
	$0^{\sim}100~\mu~g/m^3:\pm15~\mu~g/m^3$				
PM2.5 detection accuracy	101~1000 \upmu g/m³ : \pm 15%reading				
FINIZ.3 detection accuracy	(test conditions: 25±2°C,50±				
	10%RH,TSI8530,ciggrates,GBT18801-2015)				
Stabilization time after power on	30s				
	UART_TTL OUTPUT(3.3V level, default)				
Output	PWM output(3.3V level, default)				
Working Voltage	4.9V~5.5V(DC)				
Working Current	<120mA				
Dormancy current	<20mA				
Response Time	T ₉₀ <45s				
Working Humidity	0~80%RH (no condensation)				
Working Temperature	-10~50°C				
Storage Temperature	-30~70℃				
Dimension	50x32.4x21mm(LxWxH)				
Weight	<38g				
MTTF	Continuous without interruption>10000h				

Fig1.Pins

Fig2.Part no. of Pins(A=8x1.25)

Stable2. Pins definition

PIN1	VDD	DC +5V
PIN2	GND	GND
PIN3	_	NC
PIN4	RXD	Serial port receive TTL@3.3V
PIN5	TXD	Serial port send TTL@3.3V
PIN6	-	hang in air for users
PIN7	-	NC
PIN8	PWM output	TTL@3. 3V

Communication Protocol

1. General Settings

Baud rate	9600
Date byte	8 bytes
Stop byte	1 byte
Check byte	no

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: <u>sales@winsensor.com</u>



2. Initiative upload

No.		Instruction		Data
0	Byte 1	Start byte 1		0x42
1	Byte 2	Start byte 2		0x4D
2	Byte 3	Frame length	high 8 bits	0x00
3	Byte 4		low 8 bits	0x14
4	Byte 5	Data 1	high 8 bits	Reserved
5	Byte 6		low 8 bits	
6	Byte 7	Data 2	high 8 bits	Reserved
7	Byte 8		low 8 bits	
8	Byte 9	Data 3	high 8 bits	Reserved
9	Byte 10		low 8 bits	
10	Byte 11	Data 4	high 8 bits	PM1.0 concentration
11	Byte 12		low 8 bits	(ug/m³)
12	Byte 13	Data 5	high 8 bits	PM2.5 concentration
13	Byte 14		low 8 bits	(ug/m³)
14	Byte 15	Data 6	high 8 bits	PM10 concentration
15	Byte 16		low 8 bits	(ug/m³)
16	Byte 17	Data 7	high 8 bits	reserved
17	Byte 18		low 8 bits	
18	Byte 19	Data 8	high 8 bits	reserved
19	Byte 20		low 8 bits	
20	Byte 21	Data 9	high 8 bits	reserved
21	Byte 22		low 8 bits	
22	Byte 23	Checksum	high 8 bits	Initiative upload check
23	Byte 24		low 8 bits	= byte1++byte 22

NOTE:

- 1. The default communication mode is **initiative uploading mode.**
- 2. Take an example to explain calculate method:

Receiving the following data frames:

No.	0	1	2	3	4	5	6	7	8	9	10	11
Data	0x42	0x4D	0x00	0x14	0x00	0x54	0x00	0x6E	0x00	0x7C	0x00	0x54
No.	12	13	14	15	16	17	18	19	20	21	22	23
Data	0x00	0x6E	0x00	0x7C	0x00	0x00	0x00	0x00	0x00	0x00	0x03	0x1F

Check value=

0x42 + 0x4D + 0x00 + 0x14 + 0x00 + 0x54 + 0x00 + 0x6E + 0x00 + 0x7C + 0x00 + 0x6E + 0x00 +

High 8 bits 0x03 is in 23th byte of data frame, low 8 bits 0x1F is in 24th byte of data frame.

PM1.0 value=0x00*256+0x54=84ug/m3

PM2.5 value=0x00*256+0x6E=110ug/m3

PM10 value=0x00*256+0x7C=124ug/m3

The range for PM1.0, PM2.5 and PM10 are all 0-1000ug/m3.

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: <u>sales@winsensor.com</u>



3. Question & answer mode (Q&A mode)

Send the command:

0	1	2	3	4	5	6	7	8
Starting	Reserve	command	reserve	reserve	reserve	reserve	reserve	Check
byte								value
0XFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	0x79

Return value as follow:

0	1	2	3	4	5	6	7	8
Starting	Command	PM2	.5 (ug/m3)	PM10 (ug/m3)		PM1.0 (ug/m3)		
byte		High 8 bits	Low 8 bits	High 8 bits	Low 8 bits	High 8 bits	Low 8 bits	Check
		(ug/m³)	(ug/m³)	(ug/m³)	(ug/m³)	(ug/m³)	(ug/m³)	value
0xFF	0x86	0x00	0x85	0x00	0x96	0x00	0x65	0xFA

Note: The Q&A data frame check value calculation method is different from the method of initiative uploading the data frame. Please refer to the Q&A check value calculation example.

4. Switch between Q&A mode and Initiative uploading mode

Send command to set Q&A mode:

0	1	2	3	4	5	6	7	8
Starting	Reserve	command	Q&A	Reserve	Reserve	Reserve	Reserve	Check
byte								value
0XFF	0x01	0x78	0x41	0x00	0x00	0x00	0x00	0x46

Send command to set initiative uploading mode:

()	1	2	3	4	5	6	7	8
	Starting byte	Reserve	Command	Upload	Reserve	Reserve	Reserve	Reserve	Check value
(OxFF	0x01	0x78	0x40	0x00	0x00	0x00	0x00	0x47

5. Dormant mode.


Send command to set dormant mode:

0	1	2	3	4	5	6	7	8
Starting	Reserve	Main	Command to	Reserve	Reserve	Reserve	Reserve	Check
byte		command	be dormant					value
0xFF	0x01	0xA7	Enter:0x01	0x00	0x00	0x00	0x00	0x57
			Quit:0x00					0x58

Return value as follow:

0	1	2	3	4	5	6	7	8
Starting	Main	Return	Reserv	Reserve	Reserve	Reserve	Docomio	Check
byte	command	Return	e				Reserve	value
0.55		Successful: 0x01	0x00	0x00	0x00	0x00	0x00	0x58
0xFF	0xA7	Failure: 0x00	UXUU	UXUU	UXUU	UXUU	UXUU	0x59

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: <u>sales@winsensor.com</u>



Calculate method for check value under Q&A mode:

```
unsigned char FucCheckSum(unsigned char *i, unsigned char In)
{
    unsigned char j,tempq=0;
    i+=1;
    for(j=0;j<(ln-2);j++)
         tempq+=*i;
         i++;
    tempq=(~tempq)+1;
    return(tempq);
 }
```

How to calculate under Q&A mode:

If the returning data as follow:

0	1	2	3	4	5	6	7	8
Starting	Command	PM2.5 (ug/m3)		PM10 (ug/m3)		PM1.0 (ug/m3)		
byte		High 8 bits	Low 8 bits	High 8 bits	Low 8 bits	High 8 bits	Low 8 bits	Check
		(ug/m³)	(ug/m³)	(ug/m³)	(ug/m³)	(ug/m³)	(ug/m³)	value
0xFF	0x86	0x00	0x85	0x00	0x96	0x00	0x65	0xFA

Check value = 0x86 + 0x00 + 0x85 + 0x00 + 0x96 + 0x00 + 0x65


```
= 0x06 (keep low 8 bits only)
= 0xF9 (negation)
= 0xFA (plus 1)
```

PM1.0 value=0x00*256+0x65=101ug/m3 **PM2.5 value**=0x00*256+0x85=133ug/m3

PM10 value=0x00*256+0x96=150ug/m3

The range for PM1.0, PM2.5 and PM10 are all 0-1000ug/m3.

PWM output way

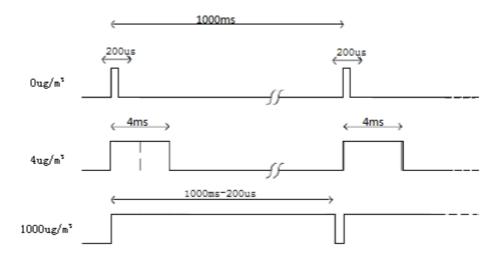

To calculate PM2.5 concentration through PWM:

 $P (ug/m^3)=1000x(TH)/(TH+TL)$

P (ug/m³) is calculated value of PM2.5 concentration, its unit is ug/m³

TH is the time of high level during one period

TL is the time of low level during one period


PWM signal instruction

Detection Range	0-1000ug/m ³
PWM signal voltage	3.3V-TTL default
PM2.5 concentration output range	0-1000ug/m ³
Period	1000ms±5%
High level output at the period start	200us(theoretical value)
Middle of the period	1000ms±5%
Low level output at the period end	200us (theoretical value)


NOTE: PWM signal output has PM2.5 value only.



Working Principle:

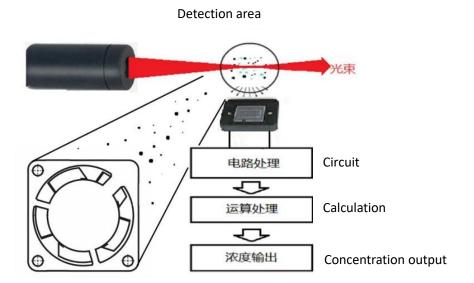



Structure and Sizes:

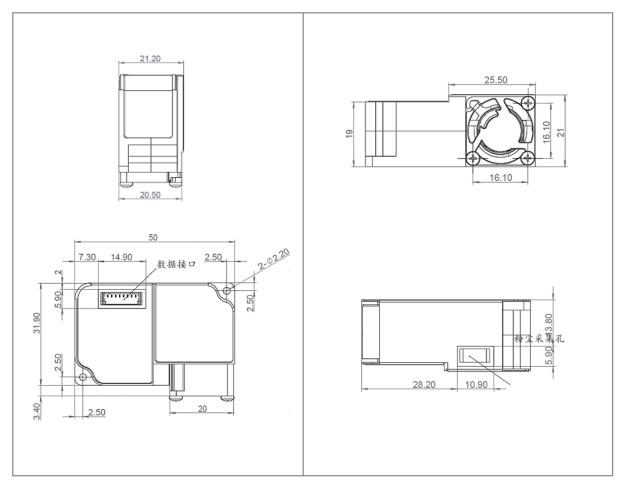



Air inlet hole requests good ventilation. The fan is at the place of air outlet. When the module is installed or used, please avoid strong air flow; if the strong air flow can't be avoided, please make the outside flow direction is vertical to inside flow direction.

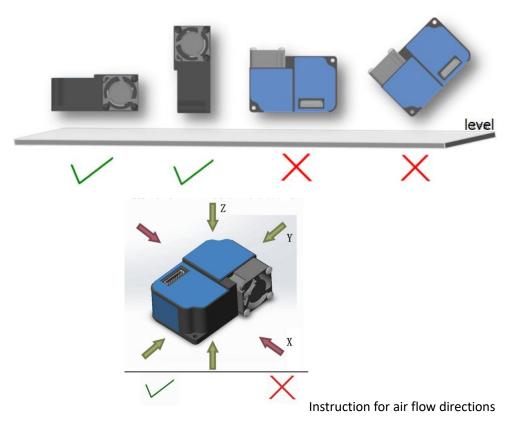

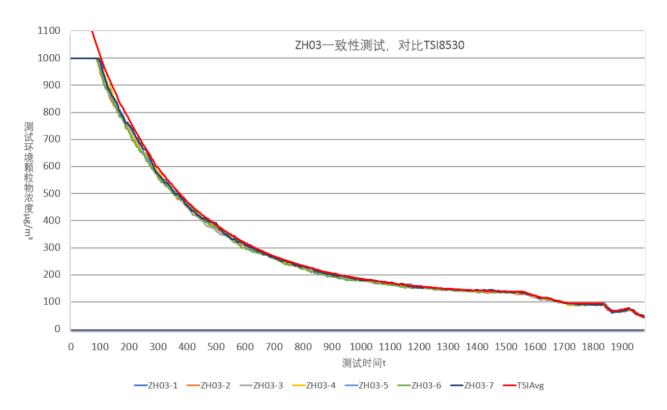

Cautions:

- 1. It is forbidden to disassemble the shield cover of the sensor and the fixing screw on the sensor. The sensor shield is connected to the internal power supply through internal spring, if the sensor shield is removed, the anti-interference ability of the sensor will be deteriorated and sensors' output value will jump leading that performance is degraded. It is also important to note that the sensor's metal shield should be protected from contacting with other external circuits or conductive components, to reduce the effects of external interference.
- 2. Excessive impact or vibration will affect the sensors' accuracy and lifespan, so the sensor should be protected from falling or vibrating during installation and use.¥
- 3. The sensor is suitable for the detection of dust particles in ordinary indoor environment. The actual use environment should avoid the soot environment, excessive dust particles, high humidity environment, such as: kitchen, bathroom, smoking room, outdoor environment. If used in such an environment, it should be added appropriate protective procedures to prevent viscous particles or large particles from entering the sensor and forming a reservoir inside the sensor that affects the performance of the sensor. (For example, in the environment where flocs or fibers are used, the corresponding coarse filter should be added in front of the air inlet of the sensor to avoid flocs or large debris entering the sensor and blocking the light path, thus affecting the sensors' accuracy.)
- 4. The fan is the air outlet, and the dust collecting hole is the air inlet. During the use of the sensor, the sensor should avoid placing directly inside the purifier's own air duct. If it is unavoidable, an independent space structure should be set for the sensor installation position. Referring to figure, the sensor should not be affected by the airflow in the direction of the red arrow. There should be no obstruction within 2cm around the air outlet of the sensor fan. In this independent space, the airflow from the sensor outlet should be prevented from flowing directly back to the air inlet, thus affecting the accuracy.
- 5. Under the normal working condition with normal temperature and normal pressure, the key component laser can work continuously for more than 10,000 hours. It can also increase the service life of the sensor by setting the dormancy mode and working interval. The maximum cumulative working life of the sensor can reach more than 3 years.
- 6. The sensor data mentioned in this manual is to ensure the consistency between the individual manufacturers of the sensor, and does not use third-party testing instruments or data as a comparison standard. If users want the final measurement result to be consistent with the third-party detection device, users can perform data fitting correction according to the actual collection result.