

CG2028 Lecture 5 : Cache Memory Principles

Rajesh Panicker, NUS

CG2028


Acknowledgement:

- Some slides from Prof. Bharadwaj Veeravalli
- Text by Patterson and Hennessey and companion slides
- Text and companion slides by Harris and Harris

Note:

 Not all slides will be covered in the lecture. The rest are left as a self-learning exercise.

Data Memory Interface

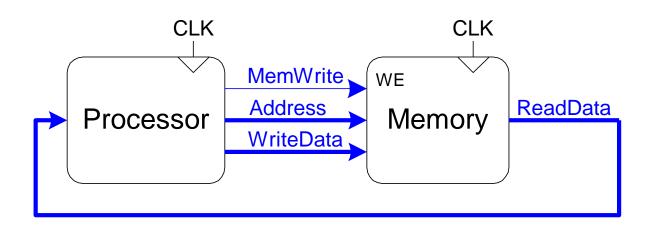


- WriteData and ReadData often combined into a single bidirectional bus interface
- Data Memory is typically composed of non-volatile memories (ROM/Flash) and volatile (RAM) memories. RAM has no contents at power on – a location should be written before it is read (i.e., there should be an STR to a location before LDR)
- Instruction memory is also external to the processor (not shown here)

Storage Media – Access Times and Costs

- Static RAM (SRAM)
 - Data stored in flip-flops
 - Usually used for cache
 - 0.5ns 2.5ns, \$2000 \$5000 per GB
- Dynamic RAM (DRAM)
 - Data stored in capacitors refresh circuitry required
 - Usually used for Main Memory (MM)
 - 50ns 70ns, \$20 \$75 per GB
- Magnetic disk (hard disk)
 - 5ms 20ms, \$0.20 \$2 per GB
 - Getting replaced by faster and more reliable (but costlier) flash-based solid state drives (SSDs)
- Ideal memory best of both worlds
 - Access time of SRAM; capacity and cost/GB of disk

Memory Hierarchy

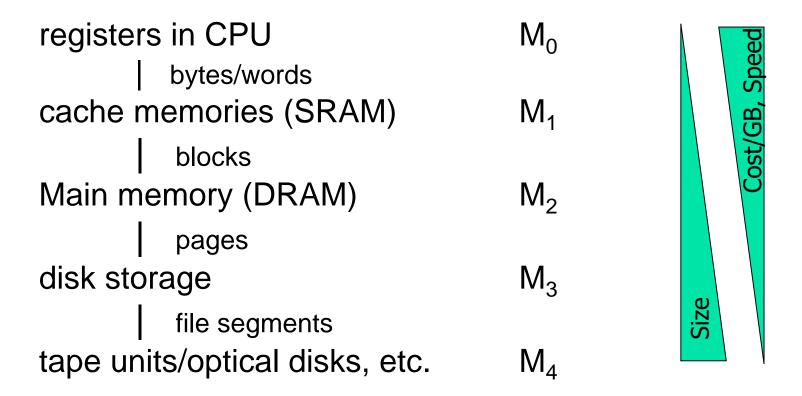

Basic idea

- Each level holds the most frequently accessed data from the immediate higher level
- Reduces the effect of lower speed of the higher level without increasing the overall cost significantly

Memory Hierarchy Properties

Coherence (consistency) Property

- Emphasizes the need for the copies of same data to have same information at all the levels where the data is currently residing
- If a word is modified in the cache, it must be updated at all levels

Locality of references

- The memory access pattern tends to be clustered in certain regions in time, space, and ordering
- 90-10 rule by Hennessy and Patterson (1990) a typical program may spend 90% of its execution time on only 10% of the code such as the innermost loop of a nested loop
- Temporal: Recently referenced items are likely to be referenced in the near future - keep recently accessed data at a faster level
- Spatial: Refers to the tendency of a process to access the items whose addresses are near to one another - when accessing data, bring nearby data also into a faster level

Memory Capacity Planning

Hit ratios

- When a memory M_i is accessed and if the desired word is found, it is referred to as a *hit*, otherwise *miss*
- The hit ratio (h_i) is the probability that a word/information will be found when accessed in M_i. Miss ratio is 1-h_i
- The hit ratios at successive levels are a function of memory capacities, management policies, and program behaviour
- $h_0=0$ and $h_n=1$. This means that the CPU always access M_1 first and access to the outermost level is always a hit
- Access frequency at a level i is defined as
 - $f_i = (1-h_1)(1-h_2)...(1-h_{i-1}) h_i$
 - Note that $f_1 + f_2 + ... + f_n = 1$ and $f_1 = h_1$
 - Due to the locality property, the access frequencies decrease rapidly from the lower levels, i.e., access freq at level i is greater than i+1
 - This means that the inner levels are accessed more often than the outer levels

Memory Capacity Planning ...

Effective Access Time is defined as

$$T_{\text{eff}} = f_1 t_1 + f_2 t_{2+...} f_n t_n$$

where t_i is the access time at level i

The total cost of a memory hierarchy is estimated as

$$C_{\text{total}} = c_1 s_1 + c_2 s_2 + ... + c_n s_n$$

where c_i is the cost/MB and s_i is the size (in MB) at level i

Hierarchy optimization involves minimizing


$$T_{eff}$$
 given $C_{total} < C_{max}$ or C_{total} given $T_{eff} < T_{max}$

 The optimal design should result in a T_{eff} close to t₁ and a total cost close to c_n

Cache Working Principle

- When a read request is received from CPU, the contents of a block of memory words containing the location specified are transferred to the cache
 - Block is also called *cache line*, typically ~64 bytes
 - Where to place the incoming block in the cache is decided by the mapping function
- Subsequently, when the program asks for any of the locations from this block, the desired contents are read directly from cache
 - CPU need not even be aware of the presence of the cache and issues addresses meant for main memory (MM, usually DRAM)
 - Checking if the required data/block is present in the cache is performed by the cache controller
 - If yes, a cache hit is said to occur

Cache Working Principle ...

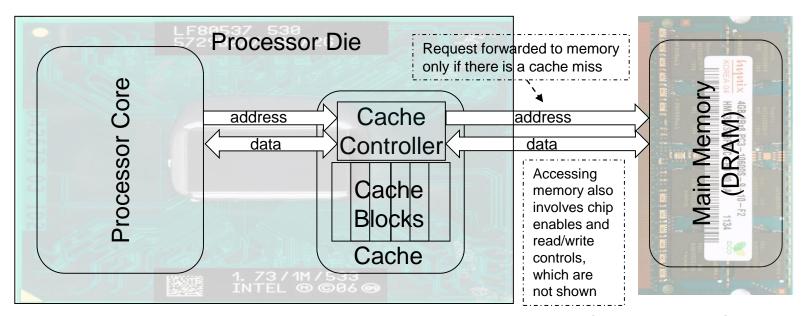

- When a block occupying cache is not referenced for a long time, it is pushed back to the MM to make space for another block
 - Which block to replace is decided by replacement algorithms
- Miss penalty: time taken to retrieve a block from slower level in the hierarchy

Read Misses

Read miss

- When a read miss happens, the block containing the word is loaded into the cache and then the desired word is sent to the CPU
- Load-through (early restart)
 - Alternatively, this word may be sent to the CPU as soon as it is read from the MM
 - Reduces CPU's waiting time, but additional circuitry needed
- Valid bit
 - If a location which is currently cached is modified in the main memory by an action which bypasses the CPU (eg: DMA), a valid bit for the corresponding cache block is cleared
 - The cache controller treats access to this location as a cache miss
 - Valid bits are set to 0 on power on!

Handling Writes

Write-through

- In this case, the cache and MM locations are simultaneously updated
- Simple, but results in unnecessary write operations in MM when cache is updated several times

Write-back

- Update only the cache location and mark it as updated with an associated flag bit, often called as dirty or modified bit
- The MM word is updated later, when the block containing the word is removed from the cache by a replacement algorithm
- May also lead to unnecessary write operations when a cache block is written back to the memory, all the words of the block are written back, even if only a single word in that block was modified when it was in the cache



Mapping Techniques


- There are three different mapping techniques that are followed in practice
 - Direct mapping
 - Associative mapping
 - Set-Associative mapping
- The following example is used to illustrate the mapping algorithms
 - The cache consists of 128 blocks of 16 words each; a total of 2048 (2K) words
 - Assume that the MM is addressable by a 16-bit word address (not byte address, for simplicity)
 - MM has 64K words, which we will view as 4K blocks of 16 words each

Direct Mapping

- Direct mapping
 block j of MM -> block j modulo 128 of Cache
- MM blocks 0,128,256,... -> block 0 of cache
 MM blocks 1,129,257,... -> block 1 of cache, and so on

5	7	4
Tag	Block	Word

- Total of 16 bits
- lower order -> select a word within the block
- middle order -> block number in the cache
- high order -> which of the 32 blocks (4K/128 = 32 = 2⁵) from MM is residing currently in the cache block

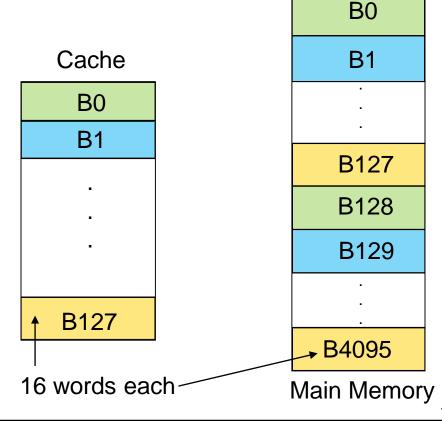




- Note that the tag field in the above example is nothing but the higher order 5 bits of the word address
- These 5 bits are stored along with that block in the cache
- The tag field can be used to determine whether the block at this location is the required block – the tag field is unique for each block from MM which can be mapped to the same block in the cache
- Note that even when the cache is not full, contention may arise for a location
- In this case, the replacement algorithm is trivial (a main memory block is mapped to a unique cache block)


Direct Mapping ...

Note: Word access within the block is not shown

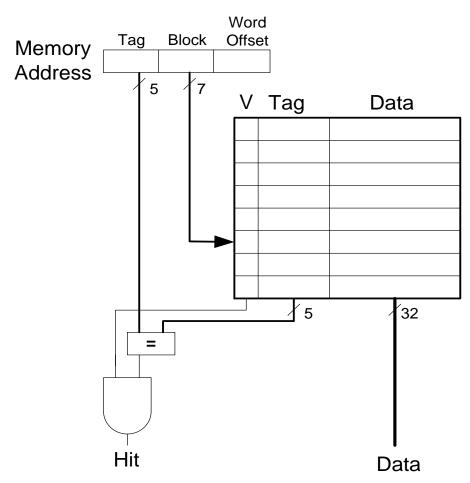



- (Fully) Associative mapping
- In this technique, a block of MM can be placed anywhere in the cache



- From the CPU generated address, the higher order 12 bits are stored along with the block in the cache (which makes sense as each cache block can be from any of the 4096 = 2¹² MM blocks)
- When the request arrives, the tag field is compared for all the blocks in the cache to see if there is a match



Associative Mapping

- This technique gives a complete freedom in choosing where in the cache a particular MM block is placed
 - Cache space is utilized more efficiently
- Disadvantage: Search 128 blocks to match for a single tag
 - This comparison has to be done for every memory access!
 - Parallel search schemes can be used
 - Still, costly and difficult to achieve high speeds
- The replacement follows one of the standard techniques such as LRU, FIFO, etc.




Set-Associative Mapping

- Set-Associative mapping
- This is a combination of / compromise between the previous techniques
- Here, blocks of cache are grouped into sets, and the mapping allows a block of the MM to reside in any block within a specific set (there is associativity within a set)
 - The contention problem of the direct method is eased by having a few choices for block placement
 - The hardware cost is reduced and speed is increased by decreasing the size of the associative search procedure
 - If there are N blocks per set, the memory is called N-way set associative

Set-Associative Mapping ...


- Suppose if we allow two blocks per set in the cache. The memory blocks 0,64,128,...,4032 map into cache set 0, and they can occupy either of the two block positions within the set
- With 128 cache blocks and 2 blocks per set, we have 64 sets
 -> we need 6 bits to identify the right set and 4 bits for a word, leaving 6 bits for the Tag field (which makes sense as each cache block can be from any of the 4096/64 = 64 = 26 MM blocks)

6	6	4
Tag	Set	Word

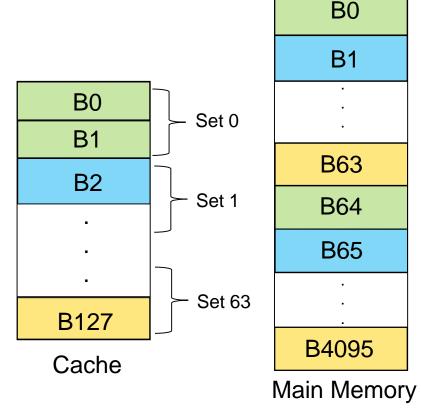

2-Way Set-Associative Mapping

Note: Word access within the block is not shown

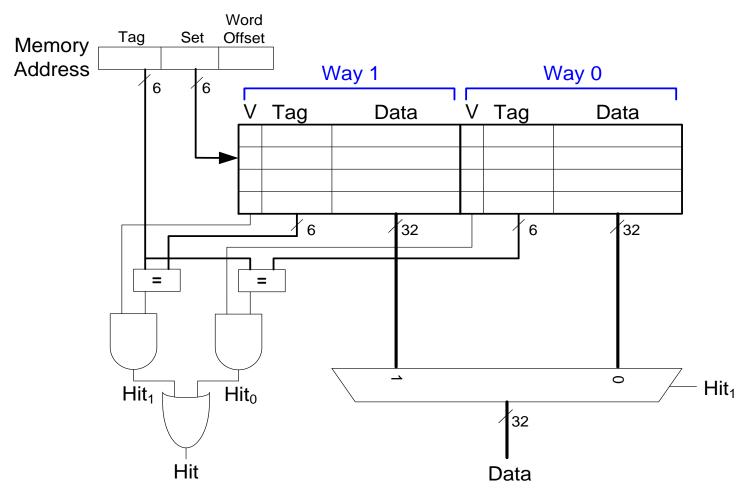


Replacement Algorithms

- In the case of associative and set-associative mapping, there is some flexibility in deciding which block should be thrown out if a new block is brought into the cache
 - Retain blocks that are likely to be referenced in the "near future"
 - Can't predict future not easy to decide on "how long to hold a block"
- First-In-First-Out
 - Replace the oldest block in the memory
- Least Recently Used (LRU)
 - Replace the block that has not been referenced for a long time
- Optimal Algorithm: (Ideal assumes knowing the future)
 - Replace the block that will not be used for a longest period of time
 - Cannot be implemented in practice, used only for analysis purpose

Replacement Algorithm: FIFO


- In the example, assume that the cache is fully associative and has 4 blocks
- FIFO works well if the access follows a sequential pattern (arrays etc.)

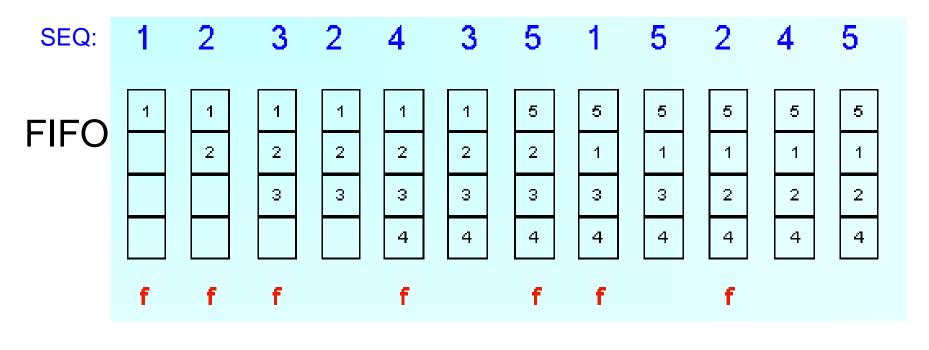

f: miss


Replacement Algorithm: LRU

- It makes sense to overwrite a block that resided in the cache for a long time (LRU block) without being referenced
 - Temporal locality of reference

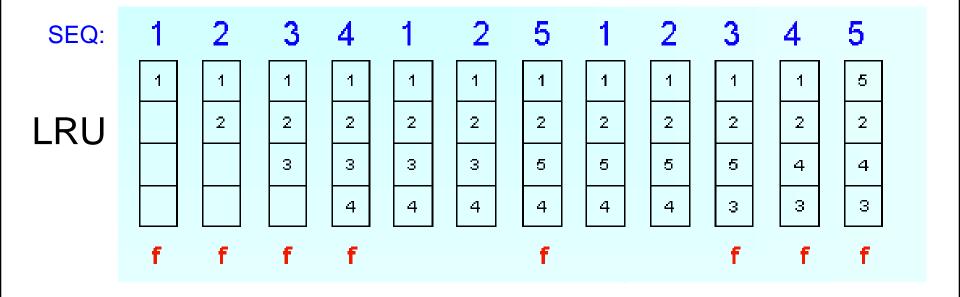



Replacement Algorithm: Optimal

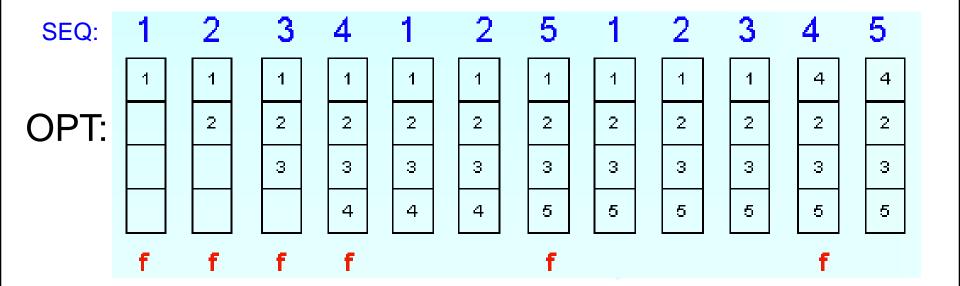

Multilevel Caches

- Larger caches have lower miss rates, but longer access times
- Expand memory hierarchy to multiple levels of caches
- Most modern PCs have L1, L2, and L3 cache
 - Intel Coffee Lake has
 - Level 1: small and fast, 32 KB, 5-6 cycles
 - Level 2: larger and slower, 256 KB, 12 cycles
 - Level 3: 2MB x number of cores, shared among cores, 42 cycles
 - Level 4: 128MB (only in some models) per package
 - In contrast, main memory has a 42 cycles + 51 ns latency (about 200 cycles in total)

Summary

- Cache basic principles
- Hit rate and effective access times
- Handling read and write misses
- Mapping techniques
- Replacement algorithms
- More of memory stuff, such as memory management algorithms, virtual memory etc. in CG2271
- Caches need to be coherent, which is tricky in multiprocessor systems. More on this, DMA etc. in CG3207