ECE 3710 LAB IV

Due Date: Week of October 26th 2015 (20 Points)

Objectives

The student should learn how to implement an **interrupt service routine** (ISR) in C. The student will also become familiar with the PS/2 (not Play Station 2) protocol for a keyboard. To learn more about interrupts and their configuration.

Overview


You have applied for a position with the NSA (No Such Agency). As part of your interview they have given you a PS/2 keyboard, breadboard, and the micro controller that you are using in this class. They have explained to that they want you to create a hardware keylogger to be used to spy on a potential target. They do realize that this one won't be very discreet but a good proof of concept. They ask you to display the ASCII characters via RS-232.

Preparation

- 1. You can find more information on hardware keyloggers at: https://en.wikipedia.org/wiki/Hardware keylogger
- 2. Read over interrupts in your textbook and uC datasheet.
 - a. V1.Ch9.5,7 of your textbook
 - b. data sheet section 10.2.2
- 3. Read over the web pages that give a brief description of the PS/2 protocol, such as:
 - a. http://www.computer-engineering.org/ps2protocol/
 - b. http://pcbheaven.com/wikipages/The PS2 protocol/
- 4. Checkout a PS/2-to-USB adapter and purchase a PS/2 extension cable from the ECE store. (You will find PS/2 keyboards in the lab).

Hardware

Cut the PS/2 extension cable in half (DO NOT CUT THE KEYBOARD CABLE!). Now peel back the out insulator exposing the 5 wires on the inside on both sides of the extender. Strip back the insulators on the inside wires exposing the wire. Try not strip them longer then need to make proper connection in a bread board. Next you want to splice the wire back together using the bread board. To make it easier to put the wires in the bread board a solder tinning of each wire can be used. This process won't let your wires fray. If you wish to do this there are many you tube videos instructing the process; solder and soldering irons are available in the ECE store.

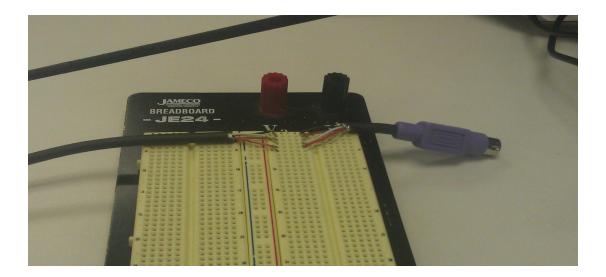

Use the logic analyzer and multimeter to identify the wires. First find out wire is power and which is ground using the multimeter (usually red and black respectively). Next connect the other wires to the logic analyzer. The remaining wires will be n/c, Clock, and Data.

After finding the Clock and the Data wire you will need to determine how to connect these to your board. The keyboard utilizes 5V logic while the Tiva C uses 3.3V logic. If connected improperly, this could fry your board. Refer to the datasheet and report which pins are not 5V tolerant. Include this in your lab report.

The Clock and Data wires should be connected to an external interrupt pin and a digital input pin, respectively.

Software

Your microcontroller will be getting data from the keyboard. This data must be stored in in memory until a button is pressed that sends the characters to the computer via RS-232. This means that the key code for the key stokes must be converted to ASCII. This can be done by a look up table (we have provided an array that can be used for this purpose on the wiki).

Remember, the keyboard sends codes for each keystroke: once for a key down and another for a key up (see the lecture slides related to PS/2). The ISR must be called every time a bit is transmitted by the keyboard (i.e. each clock tick should trigger an interrupt). This ISR will be used to store the keystrokes somewhere in memory. You can ignore communication from the PC to the keyboard.

Requirements

Your program should accomplish the following:

- 1. The ISR must be triggered for each clock tick.
- 2. The keystrokes must be stored in memory.

- 3. You need to have a button that starts/stops the keylogger. Once the keylogger has been stopped, the captured keystrokes should be sent to the computer via RS-232.
- 4. You must make use of interrupts to interface with the button. The button should have a higher priority than the clock interrupt.
- 5. The program only needs to be able to capture and display lowercase alphanumeric characters and space.

Connecting to the PC

The computers in the Lab don't have a PS/2 ports on them. This is why we will need a PS/2 to USB adapter. Plug this into any of the USB ports. Next plug the spliced extension into the adapter then plug the keyboard into the extension.

Report Requirements

Your lab report should demonstrate that your program works as stated in the requirements by including:

- 1. A list of which Tiva C pins are not 5V tolerant.
- 2. Output from the logic analyzer that shows:
 - The clock signal of the keyboard with data from the keyboard.
- 3. Capture the waveform or logical values of a typed character. In Keil, grab a screenshot of the register that contains the value of the captured character.
- 4. A picture of the ASCII characters on Putty or some other serial watch program.
- 5. Circuit diagram of the spliced extension cable and how it wires into the Microcontroller.