ETISBEmbedded Signal Processing



Indhold

1	Introduction, number formats and Blackfin			5
	1.1	Lektic	on 30-01-2018	5
		1.1.1	Typical embedded system	5
		1.1.2	Number formats (fixed- and floating-point)	6
		1.1.3	Conversion between different number formats	9
		1.1.4	(Blackfin) DSP Architecture	9
		1.1.5	Choice of processor	9
		1.1.6	Blackfin	10
2	Qua	antizat	ion and fixed-point effects	17
	2.1		on 06-02-2018	17
		2.1.1	ADC Quantization	17
		2.1.2	Coefficient- and Product-Quantization	19
		2.1.3	Quantization and Noise models	19
		2.1.4	Overflow/Underflow and Coefficient Scaling	20
		2.1.5	Notch- and Peak-filters	21
3	The	e Black	fin Platform EzKit (BF533)	23
	3.1	Lektic	on 20-02-2018	23
		3.1.1	Interfaces to CODEC, SPORT and SPI	23
		3.1.2	Sample and Block Processing	25
		3 1 3	Memory and DMA	29

Introduction, number formats and Blackfin

1.1 Lektion 30-01-2018

- 1. Course introduction
- 2. Typical embedded system
- 3. Number formats (fixed- and floating-point)
- 4. Conversion between different number formats
- 5. (Blackfin) DSP Architecture
 - ESP Chapter 1.1 + 1.2
 - ESP 5.1 + 5.2.1
 - ESP Chapter 6.1.1 (only p.217-p.222) and 6.1.3 6.1.5

1.1.1 Typical embedded system


- **Dedicated functions:** Embedded systems usually execute a specific task repeatedly.
- **Tight constraints:** There are many constraints in designing an embedded system, such as; cost, processing speed, size, power consuption.
- Reactive and real-time performance: Many embedded systems must continuously react to changes of the system's input.

1.1.2 Number formats (fixed- and floating-point)

- Fixedpoint
- Floatingpoint
- Blockfloatingpoint

Fixed-point

- Binary data format signed and unsigned
 - The 2's complement format is the most popular signed number in DSP processors.
 - Most DSP processors support both integer and fractional data formats.
 - * In an integer format, the radix point is located to the right of the least significant bit (LSB).
 - * In a fractional number format, the radix point is located within the binary number.
 - The number to the right of the radix point assumes a fractional binary bit, with a weighting of 2^{-p} .
 - · For the number to the left of the radix point, the weighting increases from 2^q . The weighting of the MSB (or sign bit) depends on whether the number is signed or unsigned.
 - * (N.M) notation
 - · N is the number of bits to the left of the radix point (integer part).
 - · M is the number of bits to the right of the radix point (fractional part).
 - · The symbol "." represents the radix point.
 - · Total number of bits in the data word is B = N + M.

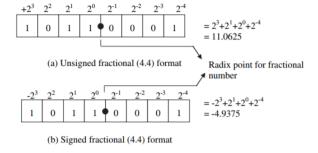

Figur 1.1: Example of 8-bit binary data formats for a fractional number.

• Dynamic Ranges and Precisions

- The maximum positive number in (1.15) format is $12^{15} (= 0.999969482421875) (0x7FFF)$.
- The minimum negative number in (1.15) format is 1 (0x8000).
- The 1.15 format has a **dynamic range** of [+0.999969482421875 to 1]
 - * Numbers exceeding this range cannot be represented in 1.15 format.
- The smallest increment (or precision) within the (1.15) format is 2^{15} .

Format (N.M)	Largest Positive Value (0x7FFF)	Least Negative Value (0x8000)	Precision (0x0001)
(1.15)	0.999969482421875	-1	0.00003051757813
(2.14)	1.99993896484375	-2	0.00006103515625
(3.13)	3.9998779296875	-4	0.00012207031250
(4.12)	7.999755859375	-8	0.00024414062500
(5.11)	15.99951171875	-16	0.00048828125000
(6.10)	31.9990234375	-32	0.00097656250000
(7.9)	63.998046875	-64	0.00195312500000
(8.8)	127.99609375	-128	0.00390625000000
(9.7)	255.9921875	-256	0.00781250000000
(10.6)	511.984375	-512	0.015625000000000
(11.5)	1,023.96875	-1,024	0.031250000000000
(12.4)	2,047.9375	-2,048	0.062500000000000
(13.3)	4,095.875	-4,096	0.1250000000000000
(14.2)	8,191.75	-8,192	0.250000000000000
(15.1)	16,383.5	-16,384	0.5000000000000000
(16.0)	32,767	-32,768	1.000000000000000

Figur 1.2: Dynamic ranges and precisions of 16-bit numbers using different formats.

• Scaling Factors

A number in (N.M) format cannot be represented in the programs because most compilers and assemblers only recognize numbers in integer or (16.0) format.

- * Convert the fractional number in (N.M) format into its integer equivalent.
- * Its radix point must be accounted for by the programmers.
 - · To convert a number 0.6 in (1.15) format to its integer representation, multiply it by 2^{15} (or 32768) and round the product to its nearest integer to become 19661 (0x4CCD).

In Table 1.2 all 16 possible (N.M) formats for 16-bit numbers. Different formats give different dynamic ranges and precisions. There is a trade-off between the dynamic range and precision.

• As the dynamic range increases, precision becomes coarser.

Format	Scaling Factor (2 ^M)	Range in Hex (fractional value)
(1.15)	$2^{15} = 32,768$	$0x7FFF (0.99) \rightarrow 0x8000 (-1)$
(2.14)	$2^{14} = 16,384$	$0x7FFF (1.99) \rightarrow 0x8000 (-2)$
(3.13)	$2^{13} = 8,192$	$0x7FFF (3.99) \rightarrow 0x8000 (-4)$
(4.12)	$2^{12} = 4,096$	$0x7FFF (7.99) \rightarrow 0x8000 (-8)$
(5.11)	$2^{11} = 2,048$	$0x7FFF (15.99) \rightarrow 0x8000 (-16)$
(6.10)	$2^{10} = 1,024$	$0x7FFF (31.99) \rightarrow 0x8000 (-32)$
(7.9)	$2^9 = 512$	$0x7FFF (63.99) \rightarrow 0x8000 (-64)$
(8.8)	$2^8 = 256$	$0x7FFF (127.99) \rightarrow 0x8000 (-128)$
(9.7)	$2^7 = 128$	$0x7FFF (511.99) \rightarrow 0x8000 (-512)$
(10.6)	$2^6 = 64$	$0x7FFF (1,023.99) \rightarrow 0x8000 (-1,024)$
(11.5)	$2^5 = 32$	$0x7FFF (2,047.99) \rightarrow 0x8000 (-2,048)$
(12.4)	$2^4 = 16$	$0x7FFF (4,095.99) \rightarrow 0x8000 (-4,096)$
(13.3)	$2^3 = 8$	$0x7FFF (4,095.99) \rightarrow 0x8000 (-4,096)$
(14.2)	$2^2 = 4$	$0x7FFF (8,191.99) \rightarrow 0x8000 (-8,192)$
(15.1)	$2^1 = 2$	$0x7FFF (16,383.99) \rightarrow 0x8000 (-16,384)$
(16.0)	$2^0 = 1$ (integer)	$0x7FFF (32,767) \rightarrow 0x8000h (-32,768)$

Figur 1.3: Scaling factors and dynamic ranges for 16-bit numbers using different formats.

1.1.3 Conversion between different number formats

Fixed-Point Data Types

The Blackfin C compiler supports eight scalar data types and two fractional data types.

Туре		Number Representation
char		8-bit signed integer
unsigned	char	8-bit unsigned integer
short		16-bit signed integer
unsigned	short	16-bit unsigned integer
int		32-bit signed integer
unsigned	int	32-bit unsigned integer
long		32-bit signed integer
unsigned	long	32-bit unsigned integer
fract16		16-bit signed (1.15) fractional number
fract32		32-bit signed (1.31) fractional number

Figur 1.4: Fixed-Point Data Types.

1.1.4 (Blackfin) DSP Architecture

- Von Neumann architecture uses a single memory to hold both data and instructions.
- The Harvard architecture uses separate memories for data and instructions, providing higher speed.
- The Super Harvard Architecture improves upon Harvard design by adding an instruction cache and a dedicated I/O controller.

1.1.5 Choice of processor

- DSP
 - Harvard memory architecture (optimized for the operational needs of digital signal processing).
 - Handle real time processing, architecture is specially designed to fetch multiple data at the same time.
 - Can handle floating numbers directly in the data flow path.
 - Calculations are usually carried out by fixed point arithmetic process in order to speed them up.

- Microcontroller
- Generalpurpose CPU
 - Most general-purpose CPU can also execute DSP algorithms, but dedicated DSPs usually have better power efficiency.
- FPGA
- GPU


1.1.6 Blackfin

- Blackfin is a MSA Processor.
 - MCU and DSP in same processor.
 - * Cheap and low power consumption.
- Architecture optimized for multimedia processing (Audio and Video).
- Dataflow oriented tasks (DSP).
- Control flow oriented tasks (MCU).
- Good tools and compiler support.

BF533 Overview

- 16-bit fixed-point processors that are based on the MSA core.
- The processor targets power-sensitive applications (portable audio players, cell phones, digital cameras).
- Direct memory access (DMA) controller transfers data between external devices/memories and the internal memories without processor intervention.
 - L1 cache memory for quick accessing of both data and instructions.
- BF533 system peripherals:
 - Parallel peripheral interface (PPI)
 - Serial peripheral interface (SPI)
 - Serial ports (SPORTs)

- General-purpose timers
- Universal asynchronous receiver transmitter (UART)
- Real-time clock (RTC)
- Watchdog timer
- General-purpose input/output (I/O) ports

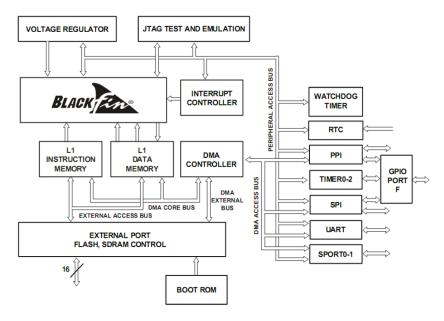

Figur 1.5: BF533 Overview.


Data Arithmetic Unit

Computational units get data from data registers and perform fixed-point operations. The data registers receive data from the data buses and transfer the data to the computational units for processing. Computational results are moved to the data registers before transferring to the memory via data buses.

- Two 16-bit multipliers represented as X_{16} in 1.6.
- Two 40-bit accumulators (ACC0 and ACC1).
 - 16-bit lower-half (A0.L, A1.L)
 - 16-bit upper-half (A0.H, A1.H)
 - 8-bit extension (A0.X, A1.X)
- Two 40-bit arithmetic logic units (ALUs) represented as V_{40} in 1.6.

- \bullet Four 8-bit video ALUs represented as V_8 in 1.6.
- A 40-bit barrel shifter.

• Eight 32-bit data registers (R0 to R7) or 16 independent 16-bit registers (R0.L to R7.L and R0.H to R7.H).

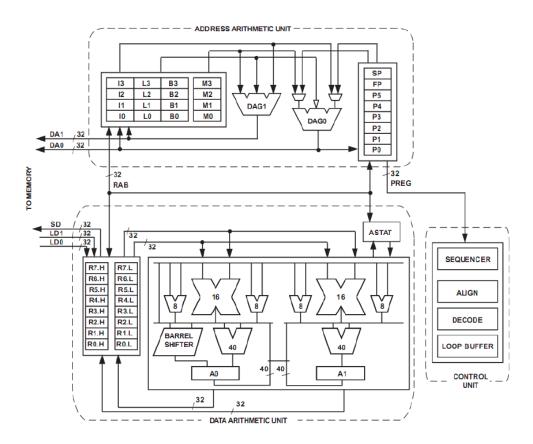

Figur 1.6: BF533 Core, Fixed-point processor.

Arithmetic Operations

- Dual and single versions of add and sub
 - Single 16-bit addition using three registers
 - * R3.H = R1.L+R2.H (ns);
 - · Saturation flag (s)
 - · No saturation flag (ns)
 - · End of instruction ;
 - Dual 16-bit add/subtract using three registers
 - * R3 = R1 + |-R2;

- Quad 16-bit add/subtract using four registers

$$*$$
 R3 = R1+|-R2, R4 = R1-|+R2;

- Two operations can be operated on the same pair of 16-bit registers
- · Separate two instructions operated at same cycle;
- Single 32-Bit Operations

$$* R3 = R1+R2;$$

- Dual 32-Bit Operations

$$*$$
 R3 = R1+R2, R4 = R1-R2

Mode	Option	Example and Explanation
Dual and quad 16-bit operation	S	Saturate the result at 16 bit R3 = R1+ -R2 (s);
(opt_mode_0)	CO	Cross option that swaps the order of the results in the destination registers for use in complex math R3 = R1+ -R2 (co);
	SCO	Combination of S and CO options
Dual 32-bit and 40-bit operation (opt_mode_1)	S	Saturate result at 32 bit. R3 = R1+R2, R4 = R1-R2 (s);
Quad 16-bit operation (opt_mode_2)	ASR	Arithmetic shift right that halves the result before storing to the destination register R3 = R1+ -R2, R4 = R1- +R2 (s,asr); Scaling is performed for the results before saturation.
	ASL	Arithmetic shift left that doubles the result before storing to the destination register

Figur 1.7: Arithmetic Modes and Options.

- Single 16-Bit Multiply Operations

$$* R3 = R1.L*R2.H;$$

- Single 16-bit MAC using two registers and an accumulator

```
* AO += R1.L*R2.L;
```

- · Multiplies the contents of R1.L with R2.L, and the result is added to the value in the accumulator A0
- Dual 16-bit multiplications using two registers and two accumulators
 - * A1 = R1.H*R2.H, A0 = R1.L*R2.L;
 - · Two pairs of input are stored in registers R1 and R2

- · Two 32-bit results are stored in the accumulators A0 and A1
- Dual 16-Bit Multiply Operations Using Two 32-Bit Registers
 - * R0 = R2.H*R3.H, R1 = R2.L*R3.L
 - · Dual 32-bit results are stored in R0 and R1
 - · Destination registers must be used in pairs as R0:R1, R2:R3, R4:R5, or R6:R7

Option	Description
Default (no option)	Input data operand is signed fraction.
(FU)	Input data operands are unsigned fraction. No shift correction.
(IS)	Input data operands are signed integer. No shift correction.
(IU)	Input data operands are unsigned integer. No shift correction.
(T)	Input data operands are signed fraction. When copying to the destination half-register, truncates the lower 16 bits of the accumulator contents.
(TFU)	Input data operands are unsigned fraction. When copying to the destination half-register, truncates the lower 16 bits of the accumulator contents.

Figur 1.8: Multiplier Options.

Address Arithmetic Unit

The address arithmetic unit consists of the following hardware units:


- Two data address generators (DAG0 and DAG1):
 - Generate addresses for data moves to and from memory. The advantage of using two data address generators is to allow dual-data fetches in a single instruction.
- Six 32-bit general-purpose address pointer registers (P0 to P5).
- One 32-bit frame pointer (FP) pointing to the current procedure's activation record.
- One 32-bit stack pointer (SP) pointing to the last location on the run time user stack.
- A set of 32-bit data address generator registers:
 - Indexing registers, I0 to I3, contain the effective addresses.

 Modifying registers, M0 to M3, contain offset values for add/subtract with the index registers.

- Base address registers, B0 to B3, contain the starting addresses of the circular buffers.
- Length value registers, L0 to L3, contain the lengths (in byte unit) of the circular buffers.


Control Unit

A program sequencer controls the instruction execution flow, which includes instruction alignment and instruction decoding. The address generated by the program sequencer is a 32-bit memory instruction address. A 32-bit program counter (PC) is used to indicate the current instruction being fetched.

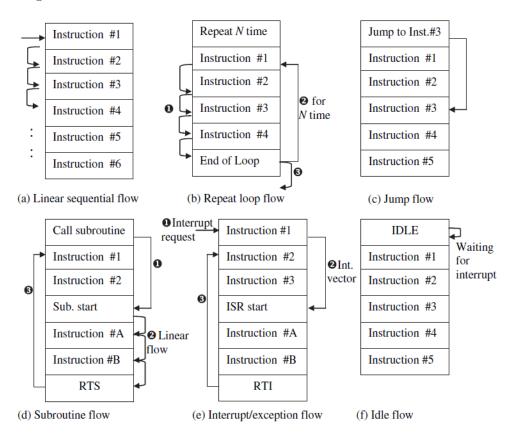

Figur 1.9: Different types of program flow.

The pipeline is used to maximize the distribution of workload among the processor's functional units, which results in efficient parallel processing among the processor's hardware. The Blackfin processor has a 10-stage instruction pipeline.

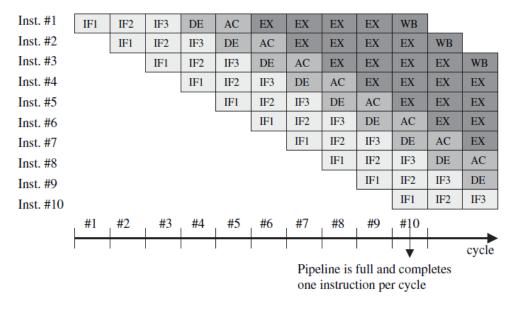

Figur 1.10: Ten pipeline stages of the Blackfin processor.

Each instruction can be executed in a single clock cycle when the pipeline is full, giving a throughput of one instruction per clock cycle. However, any nonsequential program flow (Fig. 1.9) can potentially decrease the processor's throughput.

Pipeline Stage	Description	
Instruction fetch 1 (IF1)	Start instruction memory access.	
Instruction fetch 2 (IF2)	Intermediate memory pipeline.	
Instruction fetch 3 (IF3)	Finish L1 instruction memory access.	
Instruction decode (DEC)	Align instruction, start instruction decode, and access pointer register file.	
Execute 1 (EX1)	Start access of data memory (program sequencer).	
Execute 2 (EX2)	Register file read (data registers).	
Execute 3 (EX3)	Finish access of data memory and start execution of dual- cycle instructions (multiplier and video unit).	
Execute 4 (EX4)	Execute single-cycle instruction (ALU, shifter, accumulator).	
Write back (WB)	Write states to data and pointer register files and process event.	

Extracted from Blackfin Processor Hardware Reference [23].

Figur 1.11: Stages of Instruction Pipeline.

Quantization and fixed-point effects

2.1 Lektion 06-02-2018

- 1. ADC Quantization
- 2. Coefficient- and Product-Quantization
- 3. Overflow/Underflow and Coefficient Scaling
- 4. Notch- and Peak-filters as example
 - ESP 6.1.1 (only p. 222 229)
 - ESP 6.2.2, 6.2.3 (p. 240 243)
 - ESP 3.4.2 + 3.4,3

2.1.1 ADC Quantization


Dynamic Range and Signal-to-Quantization Noise Ratio

The dynamic range of a digital signal is defined as the difference between the largest and smallest signal values. If noise is present in the system, the dynamic range is the difference between the largest signal level and the noise floor. When performing signal processing, a higher precision (>16 bits) is normally preferred to maintain this level of dynamic range.

- Dynamic range
 - Typical in relation to "0 dB full scale"

$$dynamic range = 20 \log(\frac{max \ signal \ level}{noise \ floor})[dB]$$
 (2.1)

- SQNR [dB] $\approx 6 \cdot n \text{ dB (n = bits precision)}$
 - Signal-to-quantization noise ratio = $20 \log(2^n)$
 - Different wordlengths of ADC's
 - * 16-bit fixed-point 96 dB
 - * 24-bit fixed-point 144 dB
 - * 32-bit fixed-point 192 dB
- Dynamic [dB] = Peak Level [dB] Noise Floor [dB]

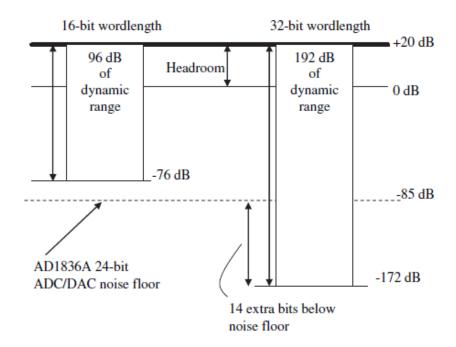

Figur 2.1: Comparison of different wordlenghts.

Other sources of quantization errors

Besides analog-to-digital and digital-to-analog quantization noise, there are other sources of quantization errors in digital systems.

- Coefficient quantization
- Computational overflow
- Quantization error due to truncation and rounding

2.1.2 Coefficient- and Product-Quantization

Coefficient Quantization

When a digital system is designed for computer simulation, the coefficients are generally represented with floating-point format. However, these parameters are usually represented with a finite number of bits in fixed-point processors with a typical wordlength of 16 bits.

Coefficient quantization of an IIR filter can affect pole/zero locations, thus altering the frequency response and even the stability of the digital filter.

- Only specific values possible for eg. filter coefficients
- Only discrete points in pole-zero plane
- Deterministic effect known in advance

Product Quantization

Truncation or rounding is used after multiplication to store the result back into the memory.

In general, the distribution of errors caused by rounding is uniform, resulting in quantization errors with zero mean and variance of $\Delta 2/12$. Truncation has a bias mean of $\Delta/2$ and a variance of $\Delta 2/12$.

- Happens after multiplication (=product) of both fixed- and floatingpoint numbers (unless using double number bits)
- Can be considered as an added noise term (stochastic)
- Limit-cycles may occur

2.1.3 Quantization and Noise models

Noise is introduced by multiplications between variables, a noise signal is added e(n).


Signal Flow Graphs

- Illustration of implementation
- Useful for illustration of quantization errors

• Different filter-forms available most try to reduce effects of quantization for fixed-point implementations

Assumed that noise e is equal distributed

• Product quantization $0 \le |e| \le 2^{-(m+1)}$

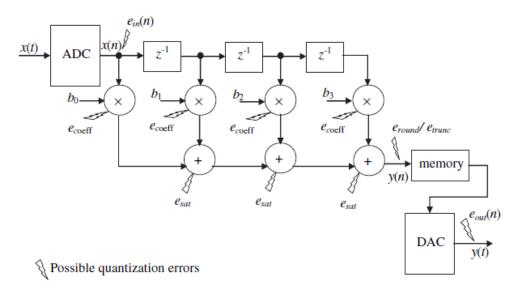

Figur 2.2: Quantization error sources in a 4-tap FIR filter.

2.1.4 Overflow/Underflow and Coefficient Scaling

Because of the finite memory/register length, the results of arithmetic operations may have too many bits to be fitted into the wordlength of the memory or register.

• Causing "random" results or no output

A sum of M B-bit numbers requires $B + \log_2 M$ bits to represent the final result without overflow.

• eg. If 256 32-bit numbers are added, a total of $32 + \log_2 256 = 40$ bits are required to save the final result.

Overflow/underflow can be avoided with "clever" scaling or, at least, avoided "with a high probability"

- Block floating point
- Exponent checking
- Saturation
- Coefficient scaling

2.1.5 Notch- and Peak-filters

- Can be designed by pole-zero placement
- Pole radii and angle determine frequency response
- Common buildingblocks for higher-order IIR

Notch-filter


A notch filter contains one or more deep notches in its magnitude response. To create a notch at frequency ω_0 , a pair of complex-conjugate zeros on the unit circle at angle ω_0 as $z = e^{\pm j\omega_0}$.

Transfer function of **FIR** notch filter is $H(z) = (1-e^{j\omega_0}z^{-1})(1-e^{-j\omega_0}z^{-1})$. This is a filter of order 2 because there are two zeros in the system. Note that a pair of complex-conjugate zeros guarantees that the filter will have real-valued coefficients.

The magnitude response has a relatively wide bandwidth, which means that other frequency components around the null are severely attenuated. To reduce the bandwidth of the null, we may introduce poles into the system $z_p = re^{\pm j\phi_0}$. r is the radius, ϕ_0 is the angle of poles.

Transfer function of **IIR** notch filter is $H(z) = \frac{(1-e^{j\omega_0}z^{-1})(1-e^{-j\omega_0}z^{-1})}{(1-r\cdot e^{j\phi_0}z^{-1})(1-r\cdot e^{-j\phi_0}z^{-1})}$.

This is a IIR filter of order 2 because there are two poles in the system.

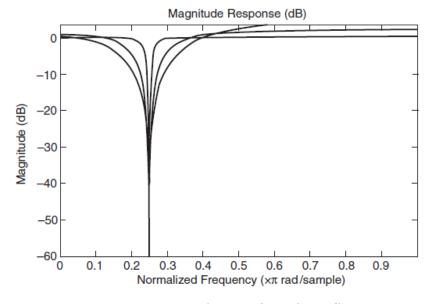

Figur 2.3: Magnitude responses of notch filter for different values of r.

Peak-filter


To create a peak (or narrow passband) at frequency ω_0 , we may think we can simply follow the example of designing a notch filter by introducing a pair of complex-conjugate poles on the unit circle at angle ω_0 . However the resulting second-order IIR filter will be unstable. To solve this problem, we have to move the poles slightly inside the unit circle $(r_p < 1)$ as $z_p = r_p e^{\pm j\omega_0}$.

Transfer function of IIR peak filter is
$$H(z) = \frac{1}{1 - r_p e^{j\omega_0} z^{-1})(1 - r_p e^{-j\omega_0} z^{-1})}$$
.

Similar to the second-order IIR notch filter, the magnitude response has a relatively wide bandwidth, which means that other frequency components around the peak will also be amplified. To reduce the bandwidth of the peak, we may introduce zeros into the system.

Transfer function of IIR peak filter is
$$H(z) = \frac{1 - r_z e^{j\omega_0} z^{-1})(1 - r_z e^{-j\omega_0} z^{-1})}{1 - r_p e^{j\omega_0} z^{-1})(1 - r_p e^{-j\omega_0} z^{-1})}$$
.

The poles must be closer to the unit circle as $r_p > r_z$.

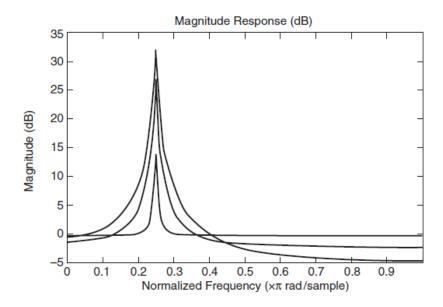

Figur 2.4: Magnitude responses of peak filter with poles $(r_p = 0.99)$ and different radius of zeros.

The Blackfin Platform EzKit (BF533)

3.1 Lektion 20-02-2018

- 1. Interfaces to CODEC, SPORT and SPI
- 2. Sample and Block Processing
- 3. Memory and DMA
 - ESP 5.1.4 (Memory)
 - ESP 6.3 (Sample and block processing)
 - ESP 7.1 (CODEC and SPORT)
 - ESP 7.2 (DMA)

3.1.1 Interfaces to CODEC, SPORT and SPI

Transfer of data between the ADC and memory, within memory spaces, and between memory and peripherals with DMA.

CODEC

- A CODEC consists of both ADC and DAC with associated analog antialiasing and reconstruction low-pass filters.
 - 2 stereo ADC, 3 stereo DAC.
 - * Operates in 16-, 18-, 20-, or 24-bit resolution.
 - TDM mode, 48-kHz sampling rate.
 - I2S mode, 96 kHz sampling rate, only primary channels active.

SPI

One SPI provides high-speed serial communication of up to SCLK/4. It interfaces with another processor, data converters, and display.

• CODEC setup using SPI interface.


SPORT

Two synchronous serial ports (SPORT0 and SPORT1) provide high-speed serial communication with a maximum speed of SCLK/2. This provides an efficient interface with CODEC.

- Receive clock (Internal or External)
- Transmission synchronized with CODEC
- Buffers to handle Rx and Tx data
- I2S mode is standard for stereo channels (L/R)
- TDM mode (Time Division Multiplex)
- Tansfers 8 channels in every frame
- Configuration: bits, DMA, interrupts, bit order
 - ESP 7.1.2

I2S


- Three-wire serial bus standard protocol.
- Two time slots for left and right channels.

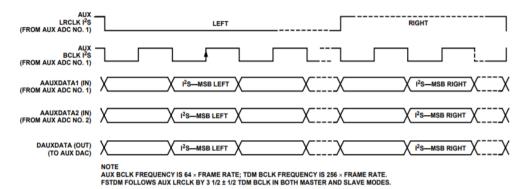

Figur 3.1: AUX I2S Interface

TDM

- Time-Division Multiplex Mode.
- Two ADC left channels (L0 and L1) and two right channels (R0 and R1) occupy slots #1, #2, #5, and #6 of ASDATA1.
- Six DAC channels occupy the six time slots of DSDATA1.
- Special TDM auxiliary mode allows two external stereo ADCs and one external stereo DAC to be interfaced to form a total of eight input and eight output transfers.

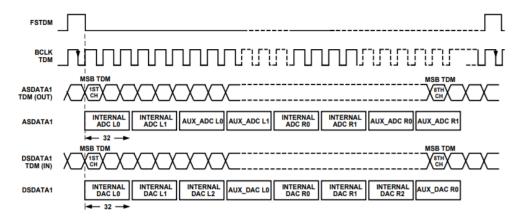


Figur 3.2: TDM Interface.

3.1.2 Sample and Block Processing

• Sample-by-Sample Processing

- Requires that all operations must be completed within the given sampling period.
- Latency of processing is the total time from the instant the data sample is read to the time the digital output is written to the memory.
 - * T_{in} = time needed for the processor to copy current sample from ADC into processor memory. Also includes program access time.
 - * T_{sp} = time needed for processing current data samples. Duration depends on complexity of the algorithm and efficiency of the program.
 - * T_{out} = time needed to output the processed data to the DAC.

- Overall overhead time for sample-by-sample processing is denoted as T_{os} .
 - * Includes T_{in} and T_{out} and response time to interrupt.
- Terminated processing before next sample/block.
 - * $T_{sp} \leq T_s T_{os}$
- Advantages?
 - * Predictable processing time (T_s) .
 - * Delay between input and output within one sample.
 - * Low memory usage for storage will though increase for multichannel applications.
 - * Results are kept current within the sampling period.
- Disadvantages?
 - * Overhead of setup, access, interrupt for every sample.
 - * DSP must be fast enough to complete all task before the arrival of next input sample.
 - * Not suitable for block based algorithms like Fourier transformation.

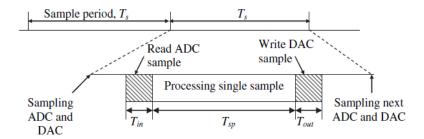


Figur 3.3: Timing details for sample-by-sample processing mode.


• Block Processing

- Samples are gathered in input buffer for N samples received
- Interrupt for every sample block of size N
- Block delay = $2 \cdot N \cdot T_s$
- Doublet buffering for input and output samples
- DMA used to move data between SPORT and buffers (Sample buffer)

- Advantages?
 - * Instruction cycle to compute a block of samples is shorter compared to sample-by-sample processing.
- Disadvantages?
 - * Memory of 4 buffers for holding input and output data samples.
 - * Block delay $2 \cdot N \cdot T_s$.
 - * Complexity in programming switching between buffers.

The block processing system starts by sampling the first five input samples from the ADC to form block i. The system continues to sample another five data samples to form block i+1. At the same time, the processor operates on data samples in block i and sends the five previously processed samples to the DAC. During the next block period, i+2, another five newer samples are acquired. The processor operates on the data samples in block i+1 and outputs the processed data samples in block i.

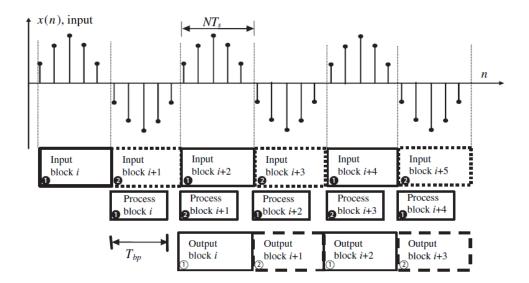

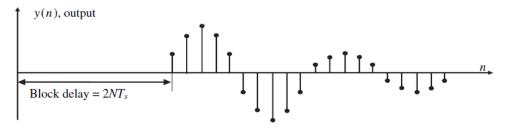

Figur 3.4: Block processing mode (N = 5).

Example of Sample-by-Sample Processing

```
EX_INTERRUPT_HANDLER(Sport0_RX_ISR)
{
// confirm interrupt handling
*pDMA1_IRQ_STATUS = 0x0001;
// Move data from receive buffer to local buffer
// Retrieve all the samples from receive buffer to process buffer
sChOLeftIn = sDataBufferRX[INTERNAL_ADC_LO];
sChORightIn = sDataBufferRX[INTERNAL_ADC_RO];
sCh1LeftIn = sDataBufferRX[INTERNAL_ADC_L1];
sCh1RightIn = sDataBufferRX[INTERNAL_ADC_R1];
Process_Data();
sDataBufferTX[INTERNAL_DAC_L0] = sCh0LeftOut;
sDataBufferTX[INTERNAL_DAC_RO] = sChORightOut;
sDataBufferTX[INTERNAL_DAC_L1] = sCh1LeftOut;
sDataBufferTX[INTERNAL_DAC_R1] = sCh1RightOut;
Example of Block Processing
EX_INTERRUPT_HANDLER(Sport0_RX_ISR)
{
int i;
static short j=0;
// confirm interrupt handling
*pDMA1_IRQ_STATUS = 0x0001;
// Move data from receive buffer to local buffer
for (i = 0; i < INPUT_SIZE; i++)
{
        // Retrieve all the samples from receive buffer to process buffer
        sChOLeftIn[i] = sDataBufferRX[INTERNAL_ADC_LO+j];
        sChORightIn[i] = sDataBufferRX[INTERNAL_ADC_RO+j];
        sCh1LeftIn[i] = sDataBufferRX[INTERNAL_ADC_L1+j];
        sCh1RightIn[i] = sDataBufferRX[INTERNAL_ADC_R1+j];
        // use the builtin circular buffer to update the index
        j = circindex(j, 4, 4*INPUT_SIZE*TOTAL_FRAME);
Process_Data();
```


3.1.3 Memory and DMA

Memory Types

- L1 Instruction and Data memory
 - Blackfin processor supports a hierarchical memory model.
 - Single-cycle execute and access.
 - 10's of kBytes speed > 600 MHz (CCLK).
 - Transfer data from memory to registers is arranged in a hierarchy from the slowest (L3 memory) to the fastest (L1 memory).

• L3 Extern memory

- External off-chip memory like SDRAM.
- Used to hold large program and data.
- -100's of Mbytes speed $< 133\,\mathrm{MHz}$ (SCLK).

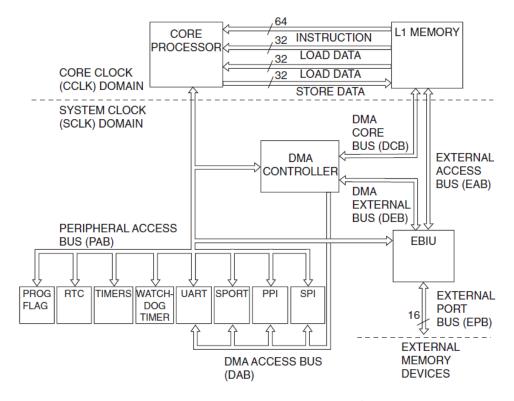

Figur 3.5: BF533 processor memory architecture.

DMA Modes

- Stop Mode
 - Stopped after transfer is completed
- Auto Buffer Mode
 - Automatic restart when data transfer is completed
- Descriptor Mode
 - Descriptor list in memory that specifies the next data transfer (source and destination address).
 - Descriptor is automatic read by the DMA controller.

DMA Initialization

- Start address
- Peripheral device map

```
- DMA1_PERIPHERAL_MAP = 0x1000; // channel 1 for SPORTO RX
```

- DMA2_PERIPHERAL_MAP = 0x2000; // channel 2 for SPORTO TX
- Configuration
 - Set DMA channel 1 for autobuffer mode, enable data interrupt, retain DMA buffer, 1D DMA using 16-bit transfers, DMA is a memory write, and DMA channel 1 is not enabled.
 - * DMA1_CONFIG = 0001 0000 1000 0110b
 - Set DMA channel 2 for autobuffer mode, disable data interrupt, retain DMA buffer, 1D DMA using 16-bit transfers, DMA is a memory read, and DMA channel 2 is not enabled.
 - * DMA2_CONFIG = 0001 0000 0000 0100b
- Count (X,Y)
- Modify (X,Y)