# Laboratory Exercise 4

## Input/Output in an Embedded System

The purpose of this exercise is to investigate the use of devices that provide input and output capabilities for a processor. There are two basic techniques for dealing with I/O devices: program-controlled polling and interrupt-driven approaches. You will use the polling approach in this exercise, writing programs in the ARM assembly language. Your programs will be executed on an ARM Cortex A9 processor in the DE1-SoC Computer, implemented on an Intel DE1-SoC board. Parallel port interfaces, as well as a timer module, will be used as examples of I/O hardware.

A parallel port provides for data transfer in either the input or output direction. The transfer of data is done in parallel and it may involve from 1 to 32 bits. The number of bits, n, and the type of transfer depend on the specifications of the specific parallel port being used. The parallel port interface can contain the four registers shown in Figure 1.

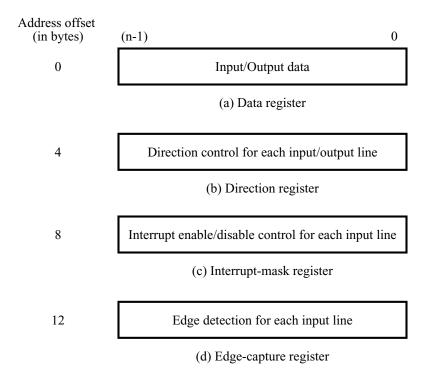


Figure 1: Registers in the parallel port interface.

Each register is n bits long. The registers have the following purpose:

• *Data* register: holds the *n* bits of data that are transferred between the parallel port and the ARM processor. It can be implemented as an input, output, or a bidirectional register.

- *Direction* register: defines the direction of transfer for each of the *n* data bits when a bidirectional interface is generated.
- *Interrupt-mask* register: used to enable interrupts from the input lines connected to the parallel port.
- *Edge-capture* register: indicates when a change of logic value is detected in the signals on the input lines connected to the parallel port. Once a bit in the edge capture register becomes asserted, it will remain asserted. An edge-capture bit can be de-asserted by writing to it using the ARM processor.

Not all of these registers are present in some parallel ports. For example, the *Direction* register is included only when a bidirectional interface is specified. The *Interrupt-mask* and *Edge-capture* registers must be included if interrupt-driven input/output is used.

The parallel port registers are memory mapped, starting at a specific *base* address. The base address has to be a multiple of four if the parallel port is to be accessed using word accesses from the ARM processor. The base address becomes the address of the *Data* register in the parallel port. The addresses of the other three registers have offsets of 4, 8, or 12 bytes (1, 2, or 3 words) from this base address. The DE1-SoC Computer has parallel ports connected to slide switches, pushbutton KEYs, LEDs, and seven-segment displays.

### Part I

Write an ARM assembly language program that displays a decimal digit on the seven-segment display HEX0 on the DE1-SoC board. The other seven-segment displays HEX5 - 1 should be blank.

The parallel port in the DE1-SoC Computer connected to the seven-segment displays HEX3 - 0 is memory mapped at the address 0xFF200020, and the port connected to HEX5 - 4 is at the address 0xFF200030. Figure 2 shows how the display segments are connected to the parallel ports.

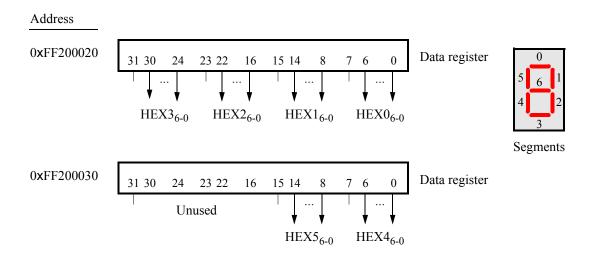


Figure 2: The parallel ports connected to the seven-segment displays HEX5 - 0.

If  $KEY_0$  is pressed on the DE1-SoC board, you should set the number displayed on HEX0 to 0. If  $KEY_1$  is

pressed then increment the displayed number, and if  $KEY_2$  is pressed then decrement the number. Pressing  $KEY_3$  should blank the display, and pressing any other KEY after that should return the display to 0. The parallel port connected to the pushbutton  $KEY_3$  has the base address 0xFF200050, as illustrated in Figure 3. In your program, use polled I/O to read the *Data* register to see when a button is being pressed. When you are not pressing any KEY the *Data* register provides 0, and when you press  $KEY_i$  the *Data* register provides the value 1 in bit position i. Once a button-press is detected, be sure that your program waits until the button is released. You should not use the *Interruptmask* or *Edgecapture* registers for this part of the exercise.

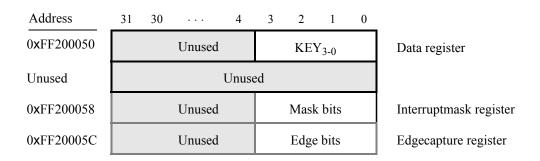


Figure 3: The parallel port connected to the pushbutton *KEYs*.

## Perform the following:

- 1. Create a new folder to hold your Monitor Program project for this part. Create a file called *part1.s* and type your assembly language code into this file. You may want to refer to a discussion, and examples of assembly-language code, in Part IV of Lab Exercise 2 about displaying numbers on seven-segment displays.
- 2. Make a new Monitor Program project in the folder where you stored the *part1.s* file. Use the DE1-SoC Computer for this project, and select the ARM A9 as the target processor architecture.
- 3. Compile, download, and test your program.

#### Part II

Write an ARM assembly language program that displays a two-digit decimal counter on the seven-segment displays HEX1-0. The counter should be incremented approximately every 0.25 seconds. When the counter reaches the value 99, it should start again at 0. The counter should stop/start when any pushbutton KEY is pressed.

To achieve a delay of approximately 0.25 seconds, use a delay-loop in your assembly language code. A suitable example of such a loop is shown below.

DO\_DELAY: LDR R7, =200000000 // delay counter

SUB\_LOOP: SUBS R7, R7, #1

BNE SUB\_LOOP

To avoid "missing" any button presses while the processor is executing the delay loop, you should use the *Edgecapture* register in the *KEY* port, shown in Figure 3. When a pushbutton is pressed, the corresponding bit in the *Edgecapture* register is set to 1, and it remains set until reset to 0 by writing into the register. Perform the following:

- 1. Create a new folder to hold your Monitor Program project for this part. Create a file called *part2.s* and type your assembly language code into this file.
- 2. Make a new Monitor Program project in the folder where you stored the *part2.s* file. Use the DE1-SoC Computer for this project, and select the ARM A9 as the target processor architecture.
- 3. Compile, download, and test your program.

#### Part III

In Part II you used a delay loop to cause the ARM processor to wait for approximately 0.25 seconds. The processor loaded a large value into a register before the loop, and then decremented that value until it reached 0. In this part you are to modify your code so that a hardware timer is used to measure an exact delay of 0.25 seconds. You should use polled I/O to cause the ARM processor to wait for the timer.

The DE1-SoC Computer includes a number of hardware timers. For this exercise use the timer called the A9 *Private Timer*. As shown in Figure 4 this timer has four registers, starting at the base address 0xFFFEC600. To use the timer you need to write a suitable value into the *Load* register. Then, you need to set the enable bit E in the *Control* register to 1, to start the timer. The timer starts counting from the initial value in the *Load* register and counts down to 0 at a frequency of 200 MHz. The counter will automatically reload the value in the *Load* register and continue counting if the E bit in the *Control* register is set to 1. When it reaches 0, the timer sets the E bit in the *Interrupt status* register to 1. You should poll this bit in your program to cause the A9 processor to wait for the timer. To reset the E bit to 0 you have to write a 1 into this bit-position.

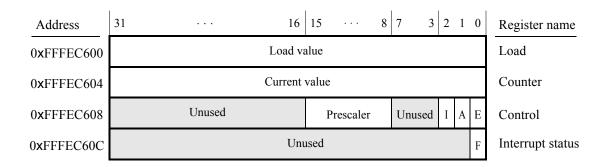


Figure 4: The A9 Private Timer registers.

Make a new folder to hold your Monitor Program project for this part. Create a file called *part3.s* and type your assembly language code into this file. Make a new Monitor Program project for this part of the exercise, and then compile, download, and test your program.

## Part IV

In this part you are to write an assembly language program that implements a real-time clock. Display the time on the seven-segment displays HEX3 - 0 in the format SS:DD, where SS are seconds and DD are hundredths of a second. Measure time intervals of 0.01 seconds in your program by using polled I/O with the A9 Private Timer. You should be able to stop/run the clock by pressing any pushbutton KEY. When the clock reaches 59:99, it should wrap around to 00:00.

Make a new folder to hold your Monitor Program project for this part. Create a file called *part4.s* and type your code into this file. Make a new Monitor Program project for this part of the exercise, and then compile, download, and test your program.

Copyright © 1991-2016 Intel Corporation. All rights reserved. Intel, The Programmable Solutions Company, the stylized Intel logo, specific device designations, and all other words and logos that are identified as trademarks and/or service marks are, unless noted otherwise, the trademarks and service marks of Intel Corporation in the U.S. and other countries. All other product or service names are the property of their respective holders. Intel products are protected under numerous U.S. and foreign patents and pending applications, mask work rights, and copyrights. Intel warrants performance of its semiconductor products to current specifications in accordance with Intel's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Intel assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Intel Corporation. Intel customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.

This document is being provided on an "as-is" basis and as an accommodation and therefore all warranties, representations or guarantees of any kind (whether express, implied or statutory) including, without limitation, warranties of merchantability, non-infringement, or fitness for a particular purpose, are specifically disclaimed.