Advanced Computer Architecures notes

Elia Ravella July 31, 2021

Contents

Ι	Int	troduction	3											
1	Tax 1.1	conomy of Computer Architectures Flynn Taxonomy	3											
II	P	erformance and Cost	4											
2	Per	formance	4											
	2.1	Evaluating performance	4											
	2.2	Quantifying the Design Process	4											
	2.3	Indexes on performance	4											
	2.4	Benchmarking	Ę											
	2.5	Energy, Power	Ę											
II	I F	Pipelining	6											
3	MII	PS architecture	6											
	3.1	Assembly basics	6											
	3.2	MIPS instruction execution	6											
	3.3	MIPS Chip Architecture	7											
4	Dat	a and Control	8											
5	Haz	zards	ç											
	5.1	Structural Hazards	Ć											
	5.2	Data Hazards	ç											
	5.3	Control Hazards	10											
		5.3.1 Branch Prediction	11											
	5.4	Hazards and Dependences	13											
		5.4.1 Name Dependences	13											
		5.4.2 Data Dependences	14											
		5.4.3 Control Dependences	14											
I	7 F	Parallelism	15											
6	Inst	truction Level Parallelism	15											
	6.1	Complex Pipeline	15											
	6.2	VLIW	16											
		6.2.1 Enforcing ILP	16											
7	V													
	7.1	Scoreboard	17											
		7.1.1 Scoreboard Data Structures	17											
	7.0	7.1.2 Scoreboard - The Algorithm	19											
	7.2	Tomasulo Algorithm	20											
		7.2.1 The reservation stations	20											
		7.2.3 Three stages Tomasulo architecture	21											
		1.2.9 Timee stages Tomasmo architecture	21											
v	Τn	nterrupts and Exceptions + Handling	22											

8 Interrupts	22
8.1 Asynchronous Interrupts	$\frac{22}{22}$
9 How to Handle Interrupts in a Five Stage Pipeline	23
VI Beyond $CPI = 1$	24
10 Superscalar Approaches	24
11 Limits of ILP Exploiting	24
VII Beyond Instruction Level Parallelism	2 5
12 How to Handle Explicit Parallelism 12.1 Multithread Single Core Architectures - Multiprocessors	25 25
13 Parallel Architectures	2 6
13.1 SIMD	26
13.2 MIMD	28 28
14 GPUs	29
14.1 Procedural Synthesis	29
14.2 GPUs and CPUs	29
14.3 The GPU Pipeline	30
VIII Vague Memory Hierarchy Notions	31
15 Models for Memory and Caching	31
15.1 Shared Memory Problems - Coherence	32
15.1.1 Snoopy Bus	32
IX Formulae	36
16 Useful Formulae for the Exam	36

Part I

Introduction

1 Taxonomy of Computer Architectures

1.1 Flynn Taxonomy

Flynn defined four categories to group computing architectures. This so called taxonomy helps system architects to distinguish among possible models of processors or system themselves.

- 1. SISD: Single Instruction Single Data, uniprocessor systems;
- 2. MISD: Multiple Instructions Single Data, no commercial application;
- 3. SIMD: Single Instruction Multiple Data, low overhead, used in custom integrated circuits;
- 4. MIMD: Multiple Instruction Multiple Data, off the shelf micros

SISD is the simplest and most diffuse model of computation, one data stream in input and a *single* instruction executed per istant of time. SIMD introduces parallelism in a vector fashion: multiple processes execute a single instruction (the *same* instruction) on different data elements. Another type of parallelism: MIMD. Just SIMD with multiple different instructions per instant.

Part II

Performance and Cost

2 Performance

2.1 Evaluating performance

We need to distinguish between how to measure performance of a computer architecture and what impacts it without affecting performance. The amount of memory used is not a performance evaluator, but it affects performance in some way. The power consumed, the latency and the execution time are. To evaluate the performance of a CA I must use all the performance indicator and find the right tradeoff. Also, context! A CA is inserted in a context that bounds its scope, so the environment itself shapes the way performance is evaluated

Every performance indicator says something about the CA. So, the whole system must be evaluated with a whole set of indexes that each tell a different thing about the system itself. This provides a full view of the system strengths and weaknesses and highlights the things to optimize.

2.2 Quantifying the Design Process

"The frequent case" case: when designing a CA, the "frequent case" represents the set of conditions met the most times during a standard computation run. Optimizing the standard case means optimizing singnificately all the system behaviour.

Amdahl's Law Amdahl's law describes the concept of the speedup as a function of execution time. The set of formulas that describes the law is

$$EXTIME_{new} = EXTIME_{old} \times \left[(1 - Fraction_{enhanced}) + \frac{Fraction_{enhanced}}{Speedup_{enhanced}} \right]$$
(1)

$$SPEEDUP_{overall} = \frac{EXTIME_{old}}{EXTIME_{new}} = (1 - Fraction_{enhanced} + \frac{Fraction_{enhanced}}{Speedup_{enhanced}})^{-1}$$
 (2)

and calculates the speedup of a system taking into account all his part, the speedupped one and the invariate one.

2.3 Indexes on performance

Overview of performance indicators and measurements.

- Instruction Count: the effective number of instructions executed. This is influenced also by the program we're trying to execute.
- Time per Cycle: the clock rate. OBVIOUSLY influenced by the hardware architecture.
- MIPS and MFLOPS indicates already a very *program bound*-like perfomance indicator. They represents the number of integer/floating point operations that the architecture can carry out in a second. They're very synthetic indexes.
- CPI Average CPI (clock per instruction) represents obviously the amount of clock cicles that are necessary to carry out a specific operation. The element that most impacts the CPI is the ISA: the alphabet we use shapes the words we can create.

Notice how execution time is not present. That's because reducing execution time is the goal, so execution time does not modify performance, it just represents it.

2.4 Benchmarking

Benchmarking is "running a fake program with the sole purpose to evaluate a system and find bottlenecks". It's a technical test. Workloading a CA means feeding it with a real work load to test what is a response to a non-syntethic stimulus. Benchmarking must be

- 1. representative: we need to benchmark the right aspects of the architecture we're testing.
- 2. updated: old benchmark does not test the architecture well, because of the very architecture is changed and the benchmark is *not anymore representative* because it's *old*.

2.5 Energy, Power

Energy and power consumption are a "cost - like" performance indicator. The less the power, the less the cost of keep the architecture running, and tha's easy. Also, reducing the power consumed means reducing the power needed from a battery and this impacts a lot in the mobile scenario. Energy per task is a good indicator for energy consumption. The power used by an architecture is influenced by a ton of factors, not least the TDP (thermal design power). Also architecture-bound aspects (clock rate, voltages, busses) influence power consumption heavily.

Part III

Pipelining

3 MIPS architecture

Reference architecture for this course is MIPS.

MIPS is a RISC architecture (Reduced Instruction Set Computer) this means that the only possible operation (that are very optimized) are basic operations. This kind of architecture is the opposite of CISC (Complex ISC) where more complex operation are supported at chip level.

MIPS is a LOAD/STORE architecture. This means that data cannot come into the ALU from anywhere besides the CPU general purpose registers. MIPS uses 32-bit instructions that can be

- Register Register operations
- Register Immediate operations
- Branch operations
- Jump/Call operations

Operand length is 6-bit. We have 64 possible operations.

3.1 Assembly basics

We'll see three classes of MIPS instructions:

- ALU: add "reg target" "reg source" "reg source", or sub "reg target" "reg source" "immediate"
- LOAD/STORE: lw "reg target" "offset register" (load word)
- Branches/Jumps: classic bne or bge or jmp operations

3.2 MIPS instruction execution

A fetch - decode - execute cycle in this architecture works this way:

- 1. Fetching the instruction means sending the PC content to the memory in order to access the memory location where the instruction is. Then, the PC is updated (PC + 4, each instruction take 32 bits).
- 2. Decoding the instruction: in this phase a fixed-field operation is put in place to deconde the instruction itself, and the registers needed for the computation are read.
- 3. Execute operation: the ALU calculates the result of the instruction supplied.
- 4. Memory Access and Write Back phases: in these two phases the CPU takes care of the memory access (LOAD or STORE instructions) and the registers update.

3.3 MIPS Chip Architecture

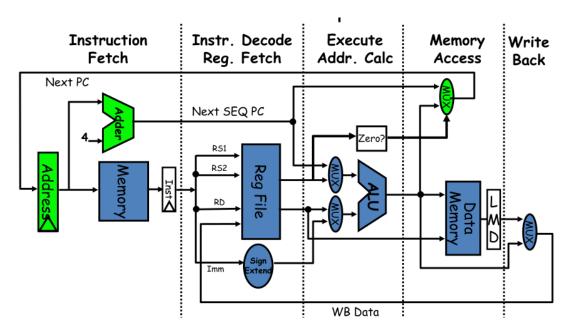


Figure 1: The MIPS data path with pipeline stages highlighted

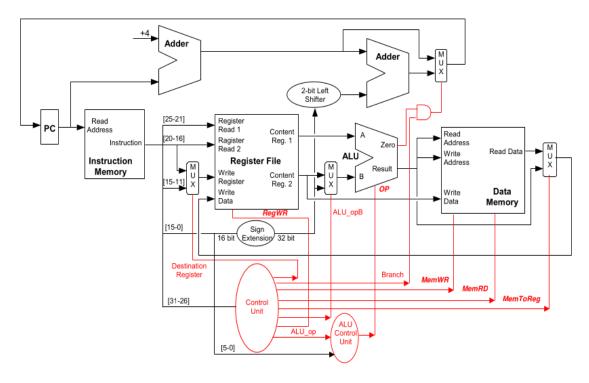


Figure 2: The MIPS full CPU, data path integrated with control unit

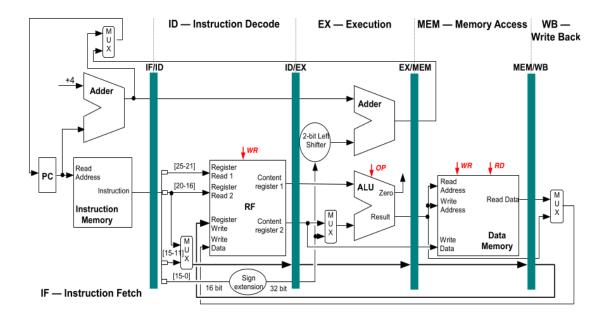


Figure 3: Pipelined MIPS


4 Data and Control

Every computer architecture is composed of 2 main parts: the one that computes data (datapath) and the one that controls the execution (control unit).

Datapath The datapath runs the house. All data pass through this module, and the registers here are used to pipeline operation.

Control Unit The CU guides the computations. It takes "run time decisions" in order to pilot execution of intructions. The registers here are architecture-specific.

Memory And memory? "Slow primary memory" is connected with the CPU (so $\mathrm{DP} + \mathrm{CU}$) by means of buses. The structure is similar to:

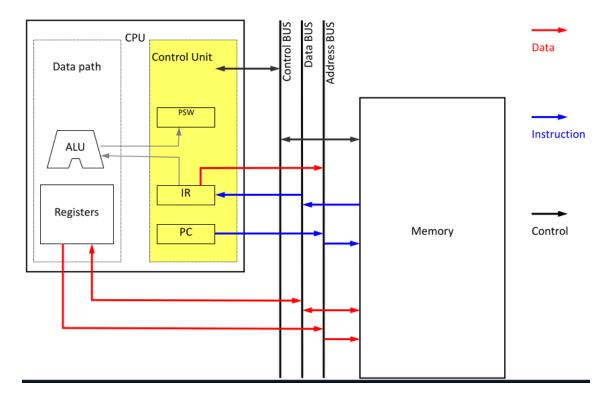

Things to be noted:

- 1. the datapath does not connect to the control path
- 2. the control unit does not write on the data bus

5 Hazards

Pipelining is cool, parallele, throughput enhancing and overall faster. Does she have drawbacks? YES, hazards. Both the ID and the WB phases in the pipeline we have an access to the registers, that can overlap. This is usually overcome assigning (for example) rising edge of the clock to reading and falling edge to writing.

But what are hazards? An hazard is generated by dependency between two instructions. Hazards can be classificated in

- 1. Structural hazards: the registers example. Different phases of the same pipeline access simoultaneously the same resource.
- 2. Data hazards: attempting to reading the future: accessing a piece of data that's not be computed yet.
- 3. Control hazards: making a decision basing on a condition not yet evaluated.

5.1 Structural Hazards

The attempt to use the same mutual exclusive hardware resource at the same time. No structural hazards in the reference architecture (edge - based synchronization)

5.2 Data Hazards

Utilizing a piece of data that is not ready is called the condition of data hazard (or data conflict). This is generally generated by two (or more) consecutive instructions that generate and use the same value.

We can further classify the types of data hazards:

Read after Write conflicts are generated by two consecutive operations, the first writes a value and the second reads it. In a pipelined environment, this can cause problems. This is the most common hazard.

This kind of conflicts can be handled at compilation time (the compiler itself detects a dependence of this kind and inserts delays in the execution ("bubbles" or "stalls") of the instructions to distanciate "enough" the read and write operation. The cost is incremented overhead and increased execution time. This approach can also be implemented at architecture level. The difference is that compiler will delay instructions with NOP instructions, while at architecture level clock cycle are just "skipped".

Another way to resolve this kind of conflicts is to reschedule instructions (taking advantage of the dependencies between them) in order to

- 1. distanciate enough the write-read conflicts
- 2. not inserting dead times

Forwarding, instead, is the technique that "bypasses" the WB phase and makes available the result of the ALU evaluation directly in the pipeline. So additional EX-EX, MEM-EX, MEM-MEM, MEM-ID¹ paths are introduced in the architecture. This approach does not cover certain type of conflicts, like load - use hazards. This conflict, however, is the only one possible in the reference architecture: all the other data hazards are solved with the insertion of forwarding paths.

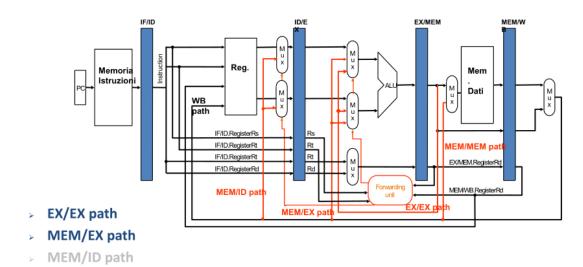


Figure 4: MIPSarchitecture with forwarding paths

Write after Write It's a overwriting conflict. This is a problem when a WB stage of a instructions happens after the WB phase of a following instruction. This conflict can't happen in the reference architecture: all instructions takes 5 clock cycles.

Write after Read In a out-of-order scenario we can have a write operation of an instruction happens after the read operation of an instruction preceding her. This, again, is only possible when instructions can take more stages at executing than the instructions following them, so not possible in the reference architecture.

5.3 Control Hazards

MEM/MEM path

Conditional instructions at assembly level are jumps (oversimplifying). The jump target address is computed just after the condition is evaluated (it can be PC + 1 or "TargetAddress"). In the reference pipeline the PC is updated in the last pipeline stage, BUT we can skip the MEM

¹The MEM-ID path is not needed at all if we introduce that same-cycle read write in the architecture.

phase because the PC is updated in the MEM phase itself. This kind of instructions (beq, bne) terminates after the MEM stage. This means that further instructions must wait for the MEM phase of the conditional statement in order to be fired, so at least 4 cycles.

The standard procedure to deal with this kind of instructions structure is to preload in the pipeline the "true" branch, and then flush it if the condition is not met. Also, data forwarding reduces the number of stalls to be introduced: EX-ID path, for example, reduces the number of stalls from 3 to 2.

Early Evaluation What if we anticipate the condition evaluation the most that we can? We can move an ALU for conditions in the second stage of the pipeline (ID) in order to recompute faster the condition. This reduces the number of bubbles needed to 1.

This technique combined with the "betting on the true branch" reduces the scope of the pipeline flush needed in the case the bet result is bad. BUT early evaluation introduces data hazards when the same registers must be accessed by two consecutive instructions where the second one is a branch. Also, this approach does not free us from stalls: in fact, we still need to insert a single stall before the IF of the next instruction.

5.3.1 Branch Prediction

Ok, so we reduced the flush scope of a prediction to one instruction (with the early evaluation of branch condition). Can we go further? Yes, we can pre-load a branch of the conditional execution in order to anticipate the jump.

These techniques can be classified in two major families, static and dynamic, if they're fixed or acts basing on the data they've got.

Static Branch Prediction Techniques

- Branch Always Not Taken: the next instruction to be fetched is PC + 4. Easy.
- Branch Always Taken: next instruction to be fetched is the one computed by ID stage.
- Backward Taken Forward Not Taken: this techniques "try to predict basing on the direction of the jump". So the assumption is "forward jumps are conditions, we enters them; backward jumps are loops, we always take them".
- Profile Driven Prediction: statistic approach. This method can use compiler hints.
- Delayed Branch: rescheduling. This approach takes an instruction "near" the branch instruction and reschedule it after the branch one, because either if the branch is taken or not no penalty clock cycles are to be taken. Obviously, the moved instruction must not be data dependent from the condition or the branch itself. There are three possible ways in which the branch delay slot (the first instruction after the branch instruction) can be filled:
 - From before: the instruction to fill the delay slot is taken from before the branch instruction
 - From target: the instruction is taken from the target of the branch (useful when loops are common: it's preloading the loop body)
 - From fall-through: the instruction to fill the delay slot is taken from the taken forward path

Dynamic Branch Prediction Techniques How can we enhance the "branch bet" choice at runtime? Basing on the data we gather at runtime, change the predicted branch. This is implemented with an associative table that links *PC bits with target addresses*. The whole predictor mechanism can be described by two parallel computations:

Branch Outcome Prediction BOP is the procedure that selects the actual label to jump to. If we're using a one-bit predictor, the behaviour is schematized by a super simple FSA that acts this way:


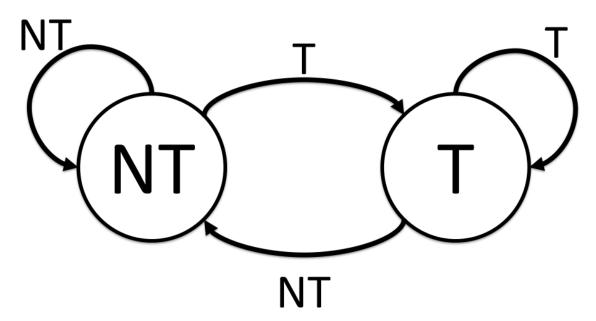


Figure 5: The NT stands for Not Taken, and T for Taken

This models the behaviour of the predictor of which branch is to be taken. Important remark: the BHT FSA may overlap predictions (in the case for example of nested loops) if the prediction is based on different loops. An enhanced model use a 2-bit register to switch state:

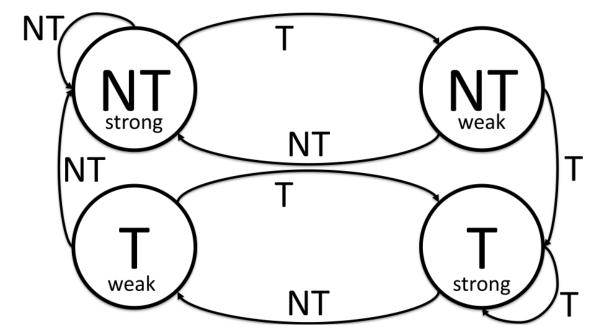

We could also add a third, fourth bit to the memory of the FSA, but sperimental data show that a 2-bit BHT predictor is the best tradeoff between complexity and accuracy.


Another approach is to lenghten the scope of the prediction: what if two threads of execution have a similar pattern in branches, but they're "unlucky"? We could add a dedicated branch predictor that matches previous behaviours with the current one to look for patterns and better decide which path to take. This "multilevel predictors" relies on 2 factors: the lenght of the *behaviour branch* to be analyzed **and stored** and the number of bits used to discrimine the branch taken (so as the

simple predictor: in fact, simple FSA predictors are (0, 2) correlating predictors).

Correlating predictors, in practice, memorize the "story" of a execution path and then feed this story to a normal FSA predictor to compute the outcome.

Even more formally, a (m, n) predictor uses the behaviour of the last m branches to choose from 2^m branch predictors, each of which is a n-bit predictor for a single branch. From the implementation point of view, the history of branches is memorized in a shift register of length m.

Branch Target Predictor Simply enough, the BTP is a cache that stores the predicted address to jump to if a branch is taken. It's structured as an hashmap of jump addresses \rightarrow PC-relative jump targets. Every associative entry must also have some validity bits, in order to signal whether the branch is "in use" or not. Usually, these bits are signaled by the Branch Outcome Predictor.

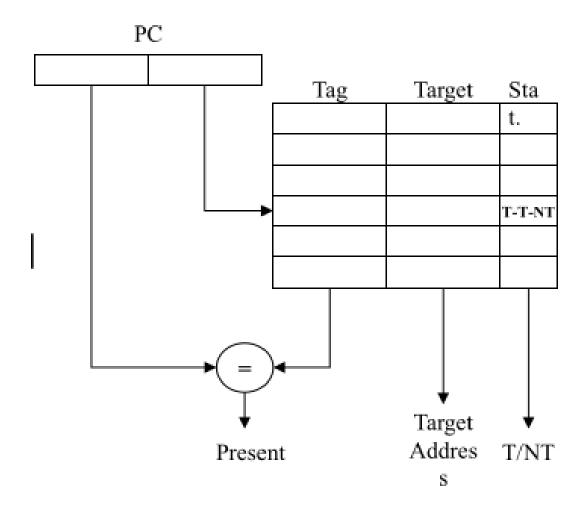

5.4 Hazards and Dependences

Hazards are hardware issues caused by *code dependences*, that are only related to the instructions to be executed. We can have various type of dependences:

5.4.1 Name Dependences

Name dependences, to be formal, occurs when two instructions use the *same identifier* for a memory location or register, **but** there's no data flowing between the instructions associated with that name. Careful here: the two instructions does not have a *flow of data between them* does not mean that they're indipendent: they're just sharing a name for a place. If there's no renaming in the architecture, this causes conflicts.

- Antidependences: an instructions write data in a named space that a following instruction will read (if not managed, this causes WAR hazard, but remember: hazards are pipeline properties, dependences are program properties)
- Output dependence: two instructions write data in the same named location (WAW)

5.4.2 Data Dependences

True data dependences are the classic logic dependences that cause RAW hazards.

5.4.3 Control Dependences

Control dependences are those relationships among instructions that must be executed after a control operation that can vary the program flow.

Part IV

Parallelism

6 Instruction Level Parallelism

"Potential overlapping of of execution among unrelated instructions". This definition of parallelism includes pipelined architectures: in fact, at every clock cycle, a pipeline is executing a number of instructions that's up to the number of stage it's composed of. *Actual* parallelism can be achieved by parallel architectures (so hardware that is designed to handle multiple instructions per clock cycle) such as superscalar architectures and VLIW.

ILP is *not* parallel processing! The first is just pipeline operations to enhance throughput, the second is a non-user-transparent way of *executing programs*.

ILP is possible \Leftrightarrow there are no WAR, WAW, RAW conflicts, neither structural hazards or control stalls.

At first, we must introduce the Complex Pipeline in order to understand the aim of the procedures to implement ILP.

6.1 Complex Pipeline

The complex pipeline has multiple path between the DECODE step and the WRITE BACK phase. This means that *right after* the decode phase an additional phase (called "issue") that send the operation to the correct pipeline must be introduced. The complex pipeline *does not create real parallelism between instructions* because in any case the EXE stage will not be shared among instructions. It just introduces the problem of having to deal with *multiple data path* that each introduce a potential critical path to the architecture. Each one of those additional datapath can have a different clock count (an integer operation could take less than a "load word" operation, in terms of clock cycles) and thus enhance throughput. This, however, could lead to problems in the fetch phase of operations.

A possible solution (in fact, the superscalar once) is to load two instructions per clock cycle, and send them down different paths if they're "different" (basing on the dedicated hardware for each). The additional assumption is, every alternative EXE path is delayed in order to have a homogeneous clock cycles number before the WB stage.

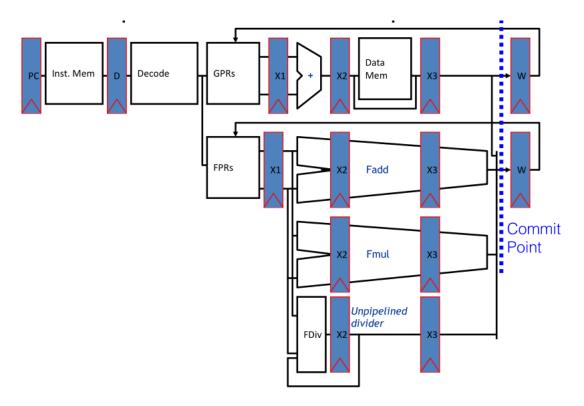


Figure 6: Here we see how the three different EXE stages are delayed-stalled all to match the longest data path (the FAdd, FMul one)

6.2 VLIW

Very Long Instruction Word allows actual parallelism between instructions. This is done with the aim to raise the CPI above one \Rightarrow having multiple instructions completed *simultaneously*. The idea is to delegate the scheduling of the operations *entirely* to the compiler, and enable the processor to fetch more than one operation per cycle. To do so, an additional distinction between instrutions and operations is needed:

- Operation is the basic unit of computation
- Instruction is a batch of operations; all the operations in the batch can be executed simultaneously

The compiler now has to arrange operations in these batches (the VLIW instructions) that (due to their dimension) justify the name "Very Long Instruction". The Fetch, Decode, Mem and Write Back phases are *unchanged* in these architectures, juste the EXE block is replicated and parallelized.

6.2.1 Enforcing ILP

In a regular program, it's difficult to find parallel-prone batches of instruction. The compiler has to figure out how to enhance code translation in order to fully use the parallel architecture underneath.

Loop Unrolling A simple example is the way loops that access sequential (or random access) data structure, just as a simple foreach, can be "unrolled", so more iteration of it can be executed at the same time. N.B.: this must be compatible with the conflicts in the code!

Software Pipelining In order to enhance Loop Unrolling performance, again rescheduling comes in hand. In which way? Basically "anticipating the next loop iteration" at a scheduling level. This is made by anticipating operations in order to free slots in the pipeline that can be used to startup next iterations. It's probable that some "compensating instructions" must be added.

We can see Software Pipelining as a Loop Unrolling *enhanced* because it's just LU that pays the "startup" and "wind down" operation just one time per loop instead of once per iteration.

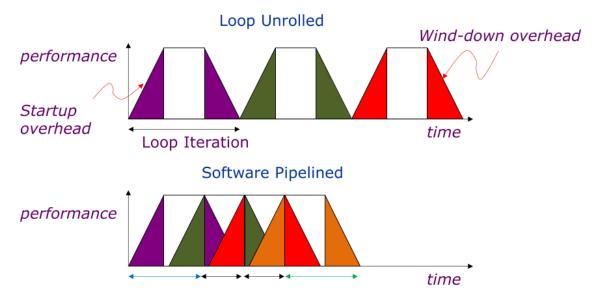


Figure 7: Visualization of the improvement of Software Pipelining

REMEMBER: SP is a compiler solution, that just exploits efficently a VLIW architeture.

Trace Scheduling A trace is a loop free sequence of basic blocks (of instructions) embedded in the control graph. It's an "execution path" for the application. The idea behind trace scheduling is to execute application and profile the traces (against fixed input) to find the *most probable to be executed*. Then, consider the entire string of "probable blocks" as a single one, in order to apply heavy rescheduling to the whole operations set, to enhance performance.

Messing with Code Compensating code (like decreasing a counter afterwards having anticipated the increment) can be super cool when it comes to rescheduling operations in order to exploit hardware parallelism. BUT it must be handled with care, just like rescheduling *itself*. There are some well established techniques:

- Speculative execution: "move around" code that we think (probabilistically) can be executed.
- Predicated execution: we use the parallelization at the hardware level to simultaneously execute different branches of a conditional block and then *validating* only the right one.

7 Dynamic Scheduling

So, dynamic scheduling is the procedure to "rearranging instructions/operations" in order to fully exploit the hardware. Keep in mind that we're talking about *hardware solutions* to reschedule operations, so the additional hardware needed to analyze instructions, look for dependencies and dispatch executions increases (significantly) the overall complexity of the architecture.

7.1 Scoreboard

7.1.1 Scoreboard Data Structures

In order to properly manage the complex pipeline and "give the right timing" to each instructions, functional unit and register, the scoreboard architecture makes use of additional data structures. The most important is a "hash map"-like stucture that links every functional unit to a set of flags and pointers, in detail:

1. A busy flag that signals whether the FU is in use

- 2. A op vector that describes the available operation in that FU. This is also used to tell multifunctional units which is the desired operation
- 3. Three pointers to the registers (one for the destination, two for the sources, obviously)
- 4. Two pointers to the functional units that should produce the desired value (this pointer is used to detect RAW conflicts) and that is linked to the source/destination register pointer (in fact, if we call F_i and F_j the two source registers, these two pointers would be Q_i, Q_j). More than pointers, this are FU ids, like "integer module 1" or "adder 2"
- 5. Two additional flags (R_j, R_k) that signals when F_j, F_i are ready. These two bits are used alongside the other flags and pointers to signal if the instruction is waiting for data, but their meaning changes depending on the type of instruction and the phase of it

This hashmap (which index is the FU) is called *functional unit status* and works with an additional array of signals the status of all registers, the *register result status*.

Scoreboard Example

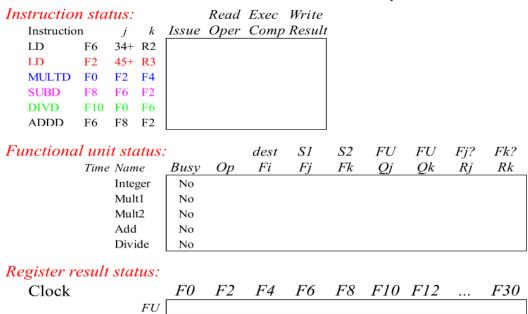


Figure 8: The scoreboard blank data structures

Instruction status:						Read	Exec	Write					
	Instruction j k		Issue	Oper	Comp	Result							
	LD	F6	34+	R2	1	2	3	4					
	LD	F2	45+	R3	5	6							
	MULTD	F0	F2	F4	6								
	SUBD	F8	F6	F2									
	DIVD	F10	F0	F6									
	ADDD	F6	F8	F2									
Functional unit status:				:		dest	SI	<i>S2</i>	FU	FU	Fj?	Fk?	
	Time Name			Busy	Op	Fi	Fj	Fk	Qj	Qk	Rj	Rk	
	Integer			Yes	Load	F2		R3				Yes	
Mult1			Yes	Mult	F0	F2	F4	Integer		No	Yes		
Mult2			No										
Add			No										
			Divi	de	No								
Register result status:													
Clock				F0	<i>F2</i>	F4	F6	F8	F10	F12		F30	
	6			FU	Mult1	Integer							

Figure 9: The scoreboard data structures executing an instruction

7.1.2 Scoreboard - The Algorithm

Environment: complex pipeline with "ISSUE" stage, we need to implement out of order execution. The basic solution is to split the ID stage in two, the first that analyzes the instruction and the second that *computes the operands and detects hazards*. An instruction is allowed to fire if there are no hazards. So if instruction 2 follows instruction 1 and the latter is blocked due to an hazard but 2 is free to fire, 2 will execute normally.

That means that a scoreboard dynamic scheduled pipeline is

- In order issued
- out of order executed
- out of order committed (writebacked)

The Scoreboard pipeline is ultimately divided in 4 main stages:

- 1. The issue stage decodes the instruction and detects the hazards. Instructions are issued in program order. Stalling this phase is used to avoid WAW and structural hazards, and it's done if
 - There's not a functional unit ready for this type of operation
 - There's a conflict in the target register

If no hazards are detected, the Read Operands stage is entered

- 2. Due to the fact that there's no possible forwarding in this pipeline, scoreboard hardware needs to tell each FU when it can read from registers. This is the stage to be stalled in order to avoid RAW hazards. An instruction is stalled here if one (or both) of its R_i is set to false.
- 3. Execution stage: the FU gets the operands when the scoreboard enables the Read Operands stage "right behind" the exe stage, and this stage notifies the scoreboard when the result is ready. The execution phase can take up different amount of clock cycles based on the kind of operation performed.

4. Accessing to the registers in order to write back the results of instructions execution. This stage can be stalled if a WAR is detected.

Ultimately, the Scoreboarding approach removes RAW hazards, by issuing an operation only when its operands are available, and WAR hazards, by stalling the writeback phase if needed. WAW hazards are still to be taken care of.

7.2 Tomasulo Algorithm

Tomasulo algorithm is a dynamic algorithm that enables out of order execution and out of order completion for instructions (issuing is still handled in order). The goal of this algorithm is the same of scoreboard: high performance without compiler intervention. The main difference between Tomasulo and Scoreboard is how the control logic is handled: in Scoreboard is centralized, while in Tomasulo approach are distributed and *nearer* to the functional units. Operand buffers are called *reservation station*. Tomasulo's architectures resolves WAW and WAR hazards efficiently by exploiting *register renaming*.

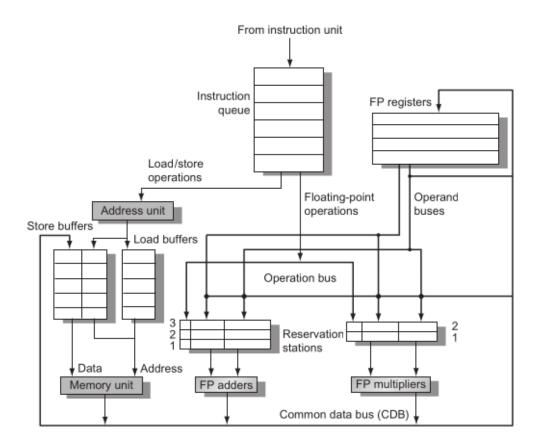


Figure 10: Basic Tomasulo architecture

7.2.1 The reservation stations

The reservation stations are the core of the Tomasulo mechanism. They're the buffer between the register file and the actual functional units, and *embody the register renaming approach* that lies under the Tomasulo algorithm. Also, proxies are introduced for the "load from memory" operations (load buffers) and for the write back operations (store buffers).

The reservation stations can access a common data bus (the hearth and nervous system of the Tomasulo architecture) that makes available / read the values broadcasted from Reservation Stations.

7.2.2 Tomasulo data structures

Tomasulo decentralized approach does not affect much the kind of information needed in solving this problem. In fact, the *very same information of the scoreboarding approach* is just scattered near the functional units, inside the reservation station. The reservation station, in fact, are made up of:

- A string indicating the type of operation needed
- V_i and V_k the values of the source operands (value = copies)
- Q_j and Q_k pointers to the reservation station that produces V_j and V_k . Can be used to bypass V_j and V_k
- a "busy" flag

7.2.3 Three stages Tomasulo architecture

The Tomasulo pipeline is divided in

ISSUE stage Get the instruction from the queue and if a RS is ready, set the right values of it, that can be either in the registers or in a issued computation; in the latter case, the pointers to the FU that will produce the right value are given to the issued intruction. If there's no station available, the operation is stalled: we're in presence of a structural hazards. In this step registers are renamed, avoiding WAR and WAW hazards.

EXECUTION stage If an operand is not ready it will arrive from the shared data bus. In this stage operands are "waited" monitoring the CDB, and each RS and FU knows which other will produce the desired value because of the ISSUE stage providing this information earlier.

WRITE stage In this phase the result of the FU computations are broadcasted on the common data bus and stored in the RS that requested it and in the Store Buffers, in order to be stored in memory or in the RF eventually.

Part V

Interrupts and Exceptions + Handling

8 Interrupts

An interrupt is a "signal" that alter the normal control flow of a program, at runtime. An interrupt must be handled by a dedicated interrupt handler and then the architecture should be able to resume the normal execution of the program. An interrupt can come from the program that's executing as well as the external environment. An ACA definition of an interrupt is "an event that requests the attention of the processor". We can characterize interrupts in a super complicated way:

- 1. A/Synchronous
- 2. User requested or coerced
- 3. User maskable or unmaskable
- 4. Within or between instructions
- 5. Resume/Terminate events

8.1 Asynchronous Interrupts

Hardware signals, timer expirates are all async interrupts. They're all caused from external sources instead of the currently running program. These kind of interrupts can be handled at the end of the execution of the current instruction, and thus they're far easy to manage wrt sync interrupts.

The Interrupt Handler When an external interrupt is invoked (an I/O change, for example) the CPU should switch the context of the execution from the currently executing program to the code of the interrupt handler, the piece of code that carries out the managing of the event. So all the instruction up to I_i , so I_{i-1} ... must be completed (this defines a precise interrupt, also²), the PC must be saved and the execution must be transferred to a dedicated kernel-level interrupt handler.

8.2 Synchronous Interrupts

Synchronous interrupts (also called *exceptions*) are interrupts and errors generated by the curently running program. Undefined opcode, program error (zero division) or misaligned memory are all interrupts that come from the running program itself. These exceptions are rare, but they're problems, and they must be handled carefully.

A synchronous interrupt is caused by a particular instruction (so generally is a *within instruction* kind of interrupt) and generally cause the instruction itself (if not the entire routine) must be restarted.

²An interrupt is said to be precise if an istant can be identified so that all instruction before that moment can commit their state and no subsequent (to the interrupt) instruction modifies the saved state. Precise interrupts are desiderable because (obviously) execution can be resumed easily and because they generate a "safe state" to proceed back from. Preciseness is a property that's sufficent to restartability, but not necessary.

Exception type	Synchronous vs. asynchronous	User request vs. coerced	User maskable vs. nonmaskable	Within vs. between instructions	Resume vs. terminate
I/O device request	Asynchronous	Coerced	Nonmaskable	Between	Resume
Invoke operating system	Synchronous	User request	Nonmaskable	Between	Resume
Tracing instruction execution	Synchronous	User request	User maskable	Between	Resume
Breakpoint	Synchronous	User request	User maskable	Between	Resume
Integer arithmetic overflow	Synchronous	Coerced	User maskable	Within	Resume
Floating-point arithmetic overflow or underflow	Synchronous	Coerced	User maskable	Within	Resume
Page fault	Synchronous	Coerced	Nonmaskable	Within	Resume
Misaligned memory accesses	Synchronous	Coerced	User maskable	Within	Resume
Memory protection violations	Synchronous	Coerced	Nonmaskable	Within	Resume
Using undefined instructions	Synchronous	Coerced	Nonmaskable	Within	Terminate
Hardware malfunctions	Asynchronous	Coerced	Nonmaskable	Within	Terminate
Power failure	Asynchronous	Coerced	Nonmaskable	Within	Terminate

Figure 11: Classification of most common events.

9 How to Handle Interrupts in a Five Stage Pipeline

For each stage of a pipelined architecture, additional hardware must be deployed in order to catch interrupts and handle them. This is due to the fact that every stage can cause errors: arithmetic faults are caused by the ALU, wrong opcodes are catched in the first stage, memory errors are generated in the last one and so on.

A valid method is to add a flag to the instructions that signals whether that instruction has caused an exception or not. Interrupts-generating instructions are then NOPped and the pipeline flushed. The next instructions to be fetched are the ones of the interrupt handler. In which order are exceptions handled? If we wait till the last pipieline stage (the commit point) and then we collect the exceptions flag and execute the handlers in order we solve the problems related to have multiple parallel instructions faulting at the same time.

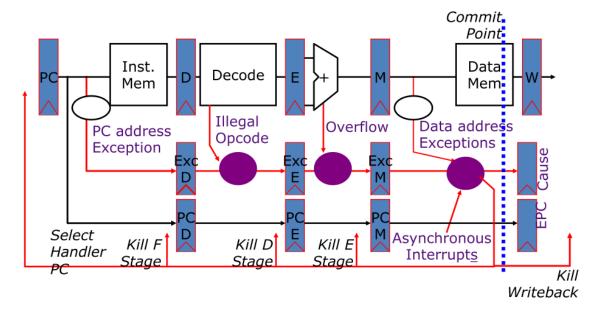


Figure 12: MIPS pipeline with hardware to manage exceptions.

Part VI

Beyond CPI = 1

10 Superscalar Approaches

"Why not fetch multiple instructions at the same clock cycle?"

Superscalar architectures do exactly this: they enable the fetch unit to retrieve more instructions per clock cycle (theoretically we have a CPI < 1!) and make extensive use of register renaming, dynamic scheduling and dynamic branch prediction techniques in order to avoid data hazards.

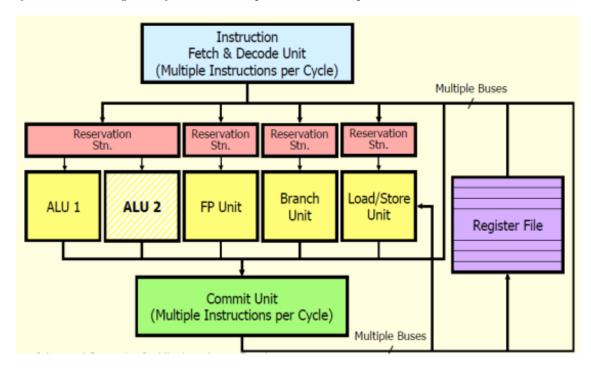


Figure 13: A classic superscalar microarchitecture. Note the resemblance with a classic Tomasulo-like processor.

11 Limits of ILP Exploiting

Instruction Level Parallelism cannot be squeezed beyond a certain point.

- 1. Dynamic scheduling is very expensive, and also very hard to design and to verify
- 2. Register renaming also has its limits: using a bottomless buffer for names is not a realistic idea, and ultimaltely does not resolve all conflicts
- 3. Jump and branch predictions are not 100% accurate
- 4. We have still to deal with latency in memory
- 5. In case of superscalar architectures, we cannot issue *too many* instructions at the same time: we still have to deal with hazards

Summing up: ILP has an upper bound. This upper bound is dependant *surely* on the technology we use to implement CPUs, but not only: it is influenced by the complexity inherent in the executing of multiple instructions at the same time, considering overlaps, jumps, conditional jumps, exceptions. All these aspects must also take into account power consumption (technological barrier: still a relevant issue) and design complexity.

Here, at the top of the upper bound of ILP exploitation, we can see the real limit of SISD architectures. We should look further to different type of architectures in order to increase performance again.

Part VII

Beyond Instruction Level Parallelism

12 How to Handle Explicit Parallelism

Ok so, we reached ILP. We next step is to introduce *real* parallelism (*explicit parallelism*). As usual, multiple models can be adopted in order to introduce parallelism into the process model:

- 1. Single process single thread: no parallelism
- 2. Single process multiple threads
- 3. Multiple process single thread
- 4. Multiple processes multiple threads

Obviously, switching between two processes is heavier than switching between two threads.

12.1 Multithread Single Core Architectures - Multiprocessors

To introduce real parallelism in a non-parallel architecture, we must rely on a super fast control unit that handles a lot of thread-context-switches at a time. Assuming this kind of CU exists, how thread can interleave in a pipeline?

Temporal Multithreading An architecture that exploits temporal multithreading uses the processor for a single task at a time. The parallelism is put in place by switching between tasks over time and preemptively, in order to give the illusion of parallelization. This is not really hardware multithreading, because the maximum number of tasks (processes, threads) in execution at the very same time is always one.

We can distinguish between:

- 1. Fine grain parallelism: each *instruction* is followed by another thread *instruction*. This hides short and long stalls, because a stalled thread "leaves the pipeline free" for another thread. The overall completion rate of threads is lowered, though.
- 2. Coarse grain parallelism: switch between threads only when a long stall is asked from a thread. This enables the threads to interleave in a more efficient way.

Simultaneous Multithreading Can we exploit ILP methodologies to enhance parallelization instead of single-thread-throughput? Yes; simultaneous multithreading. We can use a superscalar architecture to fetch instruction from different indipendent threads when loading instructions; this is made possible by keeping track of two (or more) different program counters. BUT this is not a real limitation, because we can make large use of register renaming. Moreover, the intrinsic OOO execution of the tasks in a superscalar processor allows threads to execute in real parallelism. Actually, SMT (alongside pure multiprocessing, where the CPU is "split in lanes" that executes each a thread per time) implements hardware parallelism.

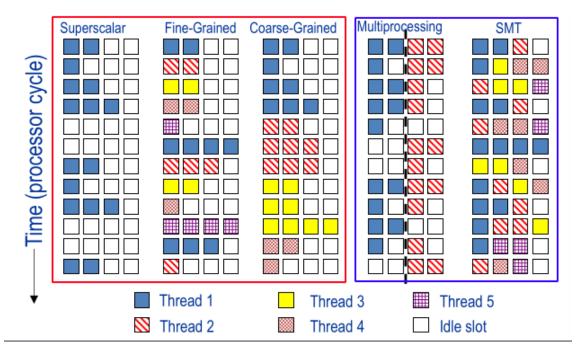


Figure 14: In red, temporal multithreading approaches. In blue, simultaneous multithreading approaches.

Comparison of approaches Without surprise, temporal multithreading is not as "thought-putful" as simoultaneous multithreading, being the second an actual *hardware* multithreading approach, with more process simoultaneously on the same chip.

This is due also to the fact that fetching instructions from multiple threads enables to always execute the best candidate (basing on the number of unresolved branches, load misses ecc) to execute, and thus committing more instructions. As usual, a more "intelligent" architecture is also more difficult to design: having to deal with

- 1. Multiple executions contexts
- 2. Multiple fetch candidates
- 3. Cross thread commit conflicts

add complexity to the hardware (that drives more power consumption ecc ecc).

13 Parallel Architectures

As a formal definition of a parallel computer is a "set of computers that can *cooperate and communicate* to solve a problem". In this definition is made relevant that the *communication infrastructure* of a parallel architecture is one of the performance indicator for it. An architecture can achieve single core performance like no other, but if the communication infrastructure is poor this power is thrown away.

We can have at least three models of parallelisms (according to Flynn's taxonomy, SIMD, MISD, MIMD). The first parallel architectures (the '80) were *parallel SIMD architectures* and were used for vector computations. MIMD is the "way to go": if we can achieve real parallelism on-chip *on multiple data* we will have an higher processing per chip ratio (to say one).

13.1 SIMD

First in the list of parallel architectures, single instruction stream on multiple memory units (vector computation).

³completely made up on the spot


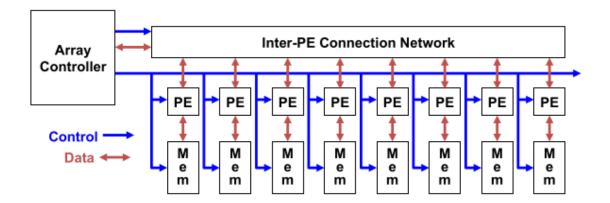


Figure 15: A traditional SIMD computation, with a central arbiter that delivers to each *processing* element the same instructions to execute on their private memory

SIMD architectures can be seen as an orchestra made of an array of a unique instrument, all the intruments playing the same note at the same time.

Vector computation is peculiar in the sense that each processing element (each instrument in the orchestra) must have his memory space; this leads to a "vectorized" architecture on more levels: also registers must be vectorized, buses and I/O ports. Even more: loop unrolling can be easily performed when a VISA is available: an entire loop can be summed up in a single vector instruction (if iterations are indipendent) saving up a lot of time; a single instruction is needed instead of a loop.

Vector ISAs To deal with vectorized architectures, we also need *vector instructions* that can deal with multi-dimensional memory and processing elements. A VISA is compact (bundles together several operations in a single instruction) and scalable (just add lanes!). It is also super expressive: a single vector instruction not only bundles together multiple operations, but also "means more" in terms of memory access, data dependancy and independency between operations. As an example, MIPS-like code comparison for a simple sequential pipeline loop and a vectorized architecture:

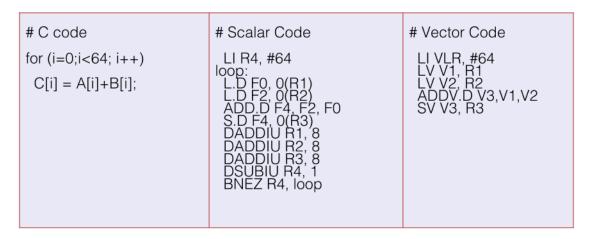

It's obvious that not every cycle will be exactly as long as the vector length: to ensure that the vector architecture is fully exploited, two techniques are used:

1. Strip mining: assembly code is generated in a way that every cycle is unrolled (but more in general, every operation is generate as) to always fit the mvl^4 and no further. A vectorized loop handles all the multiple-of-mvl long operations and then a scalar clean-up loop handles the remaining part of the data.

⁴maximum vector lenght

2. Vector mask control: when for example a loop contains operations on data that depends on a condition (like, increment only odd values of an array) an array of boolean values is generated and only the flagged generated data are then transcribed in the register file.

A Vector Architecture A vector architecture is composed of

- 1. A scalar unit (can be out of order, vliw...)
- 2. A vector unit

Wrt the vector unit, we have two different architectures:

- 1. Memory to memory: all operations take inputs from memory and write results in memory
- 2. Vector registers: vector-equivalent load store architecures.

13.2 MIMD

MIMD architectures pushes heterogeneous approaches. Why? Because having multiple instructions executing at the same time on different data means that potentially perform super different computations at the same time on the same chip. The perfect example is mobile multi purpose devices, that have to handle a ton of computations at the same time that are not so computationally expensive, but they're all different from one another: text processing lives besides video processing and communications.

MIMD processors are arrays of processors that work asynchronoulsy on different data. Little detail: this vague definition of MIMD machines includes parallel omogeneous architectures as well as heterogeneous chips and also clusters of indipendent machines.

Remember also that MIMD architectures can be used as an high performance approach to a single task, or as a multi purpose processor executing different tasks simultaneausly.

13.2.1 Console War Examples: Cell vs Xenon

The classic console war between XBox 360 by Microsoft and Playstation 3 by Sony took place also behind the scenes, where the two tech giants were trying to achieve the best performance for their console. This reflected in a serious developing of the architecture that then went inside the machine: both companies had their chip produced by IBM and used the IBM powercore as main brain of it, but the two solutions were *incredibly different*.

Playstation 3 Solution: the Cell processor The Cell processor was composed of

- A single 64 bit Power core
- 8 specialized SIMD coprocessors

This enabled Sony to maintain fairly unchanged the Power core ISA and still embedding some additional vector processing in their chip.

XBox 360 Solution: the Xenon processor The Xenon processor was produced in a totally different way: it was composed by three identical CPU that *each* embeds a SIMD extension, that was also an ISA modification.

Comparison So, who did it better? Let's compare the approaches, starting from the thing they did at the same way: both Sony and Microsoft embedded SIMD vector processing in their solution, well aware of the fact that it was the best way to implement graphic computations. They also combined different approaches to have a MIMD architecture at their disposal: they did not rely on only vector processing to get the work done. So what are the differences?

1. Sony went for an heterogeneous solution, that combines different processors. The ISA remain fairly unchanged, but the main Power core CPU could use different parallel coprocessors in order to create hardware parallelism

2. Microsoft created a homogeneous multicore solution, where the very same modified version of the Power core was replicated three times on the chip. The ISA was changed to adapt to the customizations needed: this time, the vector processors were embedded directly in the main core and then they were replicated three times on the chip

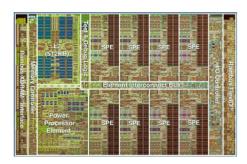


Figure 16: The Cell processor

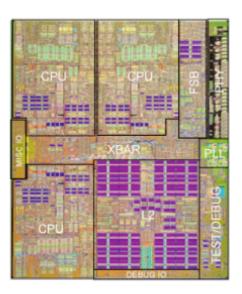


Figure 17: The Xenon processor

14 GPUs

When talking about heterogeneous architectures, we cannot avoid thinking about dedicated hardware, and GPUs are the best example. The gaming (and physics) industry carried the developing of processing units that were *dedicated* to graphical processing, to speed up execution for example in games, or simulators.

14.1 Procedural Synthesis

Procedural synthesis is a method to *generate content* dynamically basing on random or pseudo random seeds. This technique is used to generate for example low level geometry for landscape in videogames. In this very case, objects are composed of polygones that are stored in memory as set of vertices.

XBox 360's Solutions to Procedural Synthesis Xbox 360 by Microsoft uses this workflow to render scenes of videogames:

- 1. Store in the main memory high level descriptions of the objects to render.
- 2. Use the CPU to carry out the procedural synthesis of the *geometry* at runtime, to create the skeleton of the scene.
- 3. Use the GPU to load then the graphic components such as textures, and put together the full scene.

14.2 GPUs and CPUs

Architecturally, GPUs are completely different from standard CPUs. While CPUs are oriented to serial execution of instructions, GPUs are more tailored to highly parallel execution to achieve higher volumes of computation.

14.3 The GPU Pipeline

The GPU work is to receive geometry as input and produce an image corresponding to that geometry as an output. This is made possible through the workflow

- 1. interface with the host: this stage of the pipeline gets the information (so vertices) from the CPU and the other main geometry infos (vectors and stuff).
- 2. vertex processing: in this stage all the vertices are connected to form the right shapes.
- 3. triangle setup: all the forms outputted from the vertex processing stage are processed in order to realize which portions of which geometry elements should be mapped on the final figure.
- 4. pixel processing: all the textures are applied in this portion of the pipeline.
- 5. last stage: memory interface.

Part VIII

Vague Memory Hierarchy Notions

15 Models for Memory and Caching

We can classify MIMD machines either by the address space model or the physical implementation of the memory itself:

- single shared address space memory architectures, where all processors share the same memory addresses⁵ (it's usually up to the OS to maintain coherence). This solution provides low overhead: there's no difference for a process to load data from memory and passing data to another process. On the other hand, the management of the address space is a mess. Also, it does not scale well.
- multiple private address spaces, in which every processor access his own memory. Usually this kind of architectures provides send/receive primitives to enable data sharing, through some implementation of a message passing protocol.

for the address space, and

- Centralized shared memory architectures, where cores⁶ share the same physical memory banks. These archs are usually called Uniform Memory Access.
- Distributed memory architectures, where each core has his own main memory. These solutions often need a high bandwith interconnection, but usually can support more cores. Are usually called NUMA (Non Uniform Memory Access).

for the physical memory implementation. These models cohesists: to cite professor Santambrogio: The concepts of addressing space (single/multiple) and the physical memory organization (centralized/distributed) are orthogonal to each other.

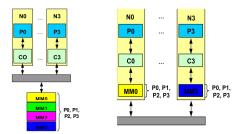


Figure 18: Shared address space architectures: centralized memory vs distributed memory

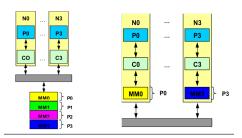


Figure 19: Message Passing architectures: centralized memory vs distributed memory

This kind of shared vs indipendent models can be also seen in the programming model that finally ends up in the developer hands. However, every programming model can be implemented on top of every kind of architecture.

Reference Model For all the subsequent examples, we'll use a Bus Based Symmetric Shared Memory system:

- Bus Based: all processing units share a communication media that's uniform (and easy to monitor)
- Symmetric: all processing units are "equal" with respect to the bus
- Shared Memory: every processor access the same memory through the bus itself.

⁵NOT THE SAME MEMORY, but only the addressing space. Can be the same memory though.

 $^{^6}$ better if not too many, max 100

The key improvement to this model (also, the one we'll consider) adds caches to the processing units. These can be organized and managed to be coherent with the central memory by the hardware itself.

15.1 Shared Memory Problems - Coherence

Coherence in memory can be seen as the problem to maintain the property "any read on a block must return the most recently written value on that block". This plain concept is crazily difficult to implement, so it turned in a serialization property. The core idea behind memory coherence is that every processing unit should not read data that's outdated. "Memory coherence" itself contains two concepts:

- Coherence itself: this term refers to which value should be returned by a read
- Consistency: determines when the effect of a write can be seen by other units

From the Patterson Hennessy: Coherence and consistency are complementary: Coherence defines the behavior of reads and writes to the same memory location, while consistency defines the behavior of reads and writes with respect to accesses to other memory locations.

Before digging into consistency protocols, we need two basic definitions for writing policies:

- 1. Write back caches hold the updated value in the cache until an explicit flush is called
- 2. Write through caches immediatly flush the updated value to the main memory on a write operation

Now, consistency protocols: there are plenty of solutions to enforce consistency and coherence in memory hierarchies, we'll se Snooping Protocols.


15.1.1 Snoopy Bus

The bus is intrisecally a broadcast communication medium between all processing units. This suggests the PU to monitor it looking for changes, and to be able to understand when a cached value is not anymore valid. These protocols can be divided in two main categories, depending on what happens when a write operation is issued.

Write Invalidate Write Invalidate protocols add an "invalidate" signal to the write operation: this tells all other units attached to the bus that they have an outdated value for the written memory block. All processors will now fetch the updated value from the main memory on their own.


Write Update The fat brother of Write Invalidate is Write Update: "update all values in all caches when a write operation is performed". Fat because logically it needs much more bandwidth that WI.

MSI Modified Shared Invalid protocol: the functioning of this protool is explaind by the automaton

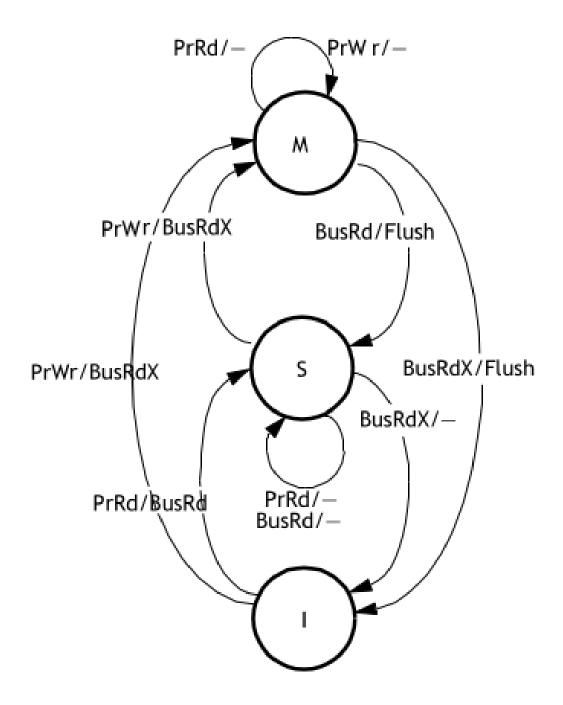


This simple protocol marks the cache blocks with different labels and acts accordingly. This approach is shared by all consistency protocols: a cache block has a state associated that evolves as the automaton says.

MESI is MSI plus the Exclusive state, which is inserted in the automaton this way:

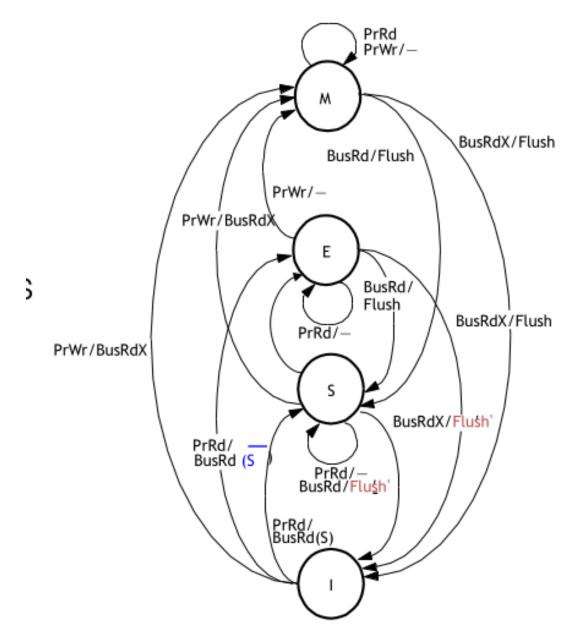

Why this is an enhancement wrt MSI? Because we are introducing a state that does not need to "tell everybody their data is not valid" when it writes, slimming communication between processes. The interaction between processes can be seen also as two sinchronizing automata:

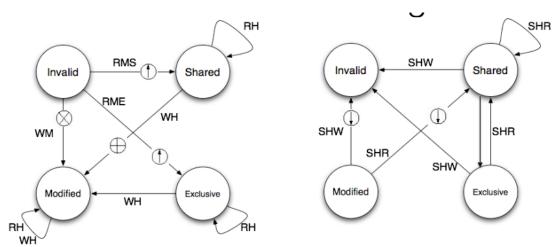

Cache line in the "acting" processor

Transaction due to events snooped on the common BUS

BUS Transactions

RH = Read Hit
RMS = Read Miss, Shared
RME = Read Miss, Exclusive
WH = Write Hit
WM = Write Miss
SHR = Snoop Hit on a Read
SHW = Snoop Hit on a Write or
Read-with-Intent-to-Modify

= Snoop Push

= Invalidate Transaction = Read-with-Intent-to-Modify

= Cache Block Fill

Part IX

Formulae

16 Useful Formulae for the Exam

• Amdahl's law:

$$EXTIME_{new} = EXTIME_{old} \times \left[(1 - Fraction_{enhanced}) + \frac{Fraction_{enhanced}}{Speedup_{enhanced}} \right]$$
(3)

$$SPEEDUP_{overall} = \frac{EXTIME_{old}}{EXTIME_{new}} = (1 - Fraction_{enhanced} + \frac{Fraction_{enhanced}}{Speedup_{enhanced}})^{-1} \quad (4)$$

• CPI:

$$CPI = \frac{Clock\ cycles\ needed}{Number\ of\ instructions\ executed} \tag{5}$$

• CPU time:

$$TCPU = \frac{CPI \times Number of intructions}{clock frequency} \tag{6}$$

• MIPS and MFLOPS:

$$MIPS = \frac{Number of intructions}{(Execution time)^6} \tag{7}$$

$$MFLOPS = \frac{Number of floating point intructions}{(Execution time) \times 10^{6}}$$
 (8)