

Modeling of a CPW Using Numeric TEM Ports

This tutorial model shows how to set up port features in a physics interface when designing a coplanar waveguide (CPW) circuit that is useful for mmWave applications.

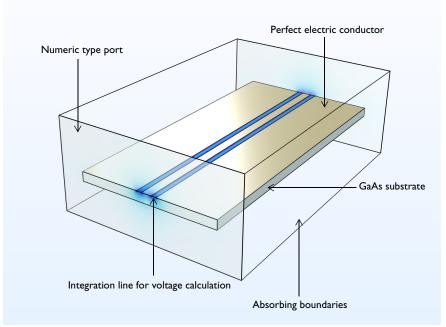


Figure 1: Coplanar waveguide (CPW) simulation model.

Model Definition

There are multiple ways to excite and terminate a CPW using ports or lumped ports. In this tutorial, a basic CPW circuit is modeled using **Numeric** type ports with the **Analyze as** a TEM field option. This configuration requires adding a Boundary Mode Analysis in the study and add an Integration Line for Voltage subfeature for each port feature to calculate the TEM mode characteristic impedance. The TEM mode characteristic impedance is calculated based on the power on port boundaries and voltage obtained from the userdefined integration through the abovementioned subfeature. The computed impedance

scales the mode field that is mapped to the port boundaries to excite or terminate the end cross-section of the circuit.

TABLE 1: KEY ITEMS TO CHARACTERIZE A GROUNDED COPLANAR WAVEGUIDE

	Physics feature	Subfeature	Study step
Item in Model Builder	Port	Integration Line for Voltage	Boundary Mode Analysis
Notable configuration	Numeric type Analyze as a TEM field Include via edges	Set on a line geometry between two conductive boundaries	

All conductive boundaries representing metalized or plated surfaces are defined as perfect electric conductors to simplify the modeling steps. If the loss due to the finite conductivity is assumed to be nonnegligible, these boundaries can be replaced by a transition boundary condition to take the loss in the model into account.

A scattering boundary conditions is applied to the outermost boundaries. A scattering boundary condition absorbs any possible radiation from the circuit and mimics an open space.

Results and Discussion

The computed S-parameters indicate that the reflection due to the impedance mismatch is marginal (below -30 dB) and the insertion loss is below 0.05 dB. When the computation is completed, three defaults plots are automatically generated. From the electric field norm plot, it is possible to see where the strong electric fields are confined, along the conductive edges around slots between the center conductor and a pair of ground planes. When performing a boundary mode analysis for each port, the default mode field plot is available with an annotation of the computed impedance value. See the Modeling Instruction section for more details.

Application Library path: RF Module/Transmission Lines and Waveguides/ cpw numeric tem port

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click 1 3D.
- 2 In the Select Physics tree, select Radio Frequency>Electromagnetic Waves, Frequency Domain (emw).
- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select Preset Studies for Selected Physics Interfaces> Boundary Mode Analysis.
- 6 Click **M** Done.

STUDY I

Step 1: Boundary Mode Analysis

Define the study frequency ahead of performing any frequency-dependent operation such as building mesh. The physics-controlled mesh uses the specified frequency value.

- I In the Model Builder window, under Study I click Step I: Boundary Mode Analysis.
- 2 In the Settings window for Boundary Mode Analysis, locate the Study Settings section.
- 3 In the Mode analysis frequency text field, type 10[GHz].
- 4 Select the **Search for modes around shift** check box. In the associated text field, type sqrt(12.9)/1.5.
- 5 Right-click Study I>Step I: Boundary Mode Analysis and choose Duplicate.

Step 3: Boundary Mode Analysis I

- I In the Model Builder window, click Step 3: Boundary Mode Analysis I.
- 2 Drag and drop below Step 1: Boundary Mode Analysis.
- 3 In the Settings window for Boundary Mode Analysis, locate the Study Settings section.
- 4 In the Port name text field, type 2.

Step 3: Frequency Domain

- I In the Model Builder window, click Step 3: Frequency Domain.
- 2 In the Settings window for Frequency Domain, locate the Study Settings section.
- 3 In the Frequencies text field, type 10[GHz].

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

Name	Expression	Value	Description
w_c	200[um]	2E-4 m	CPW, center conductor width
w_s	w_c+2*125[um]	4.5E-4 m	CPW, center conductor and slot width
thickness	200[um]	2E-4 m	Wafer thickness

GEOMETRY I

- I In the Model Builder window, under Component I (compl) click Geometry I.
- 2 In the Settings window for Geometry, locate the Units section.
- 3 From the Length unit list, choose μm .


Block I (blk I)

- I In the Geometry toolbar, click Block.
- 2 In the Settings window for Block, locate the Size and Shape section.
- 3 In the Width text field, type 6000.
- 4 In the **Depth** text field, type 4000.
- 5 In the Height text field, type 2000.
- **6** Locate the **Position** section. In the **y** text field, type -500.

Block 2 (blk2)

- I In the Geometry toolbar, click **Block**.
- 2 In the Settings window for Block, locate the Size and Shape section.
- **3** In the **Width** text field, type 6000.
- 4 In the **Depth** text field, type 3000.
- 5 In the **Height** text field, type thickness.
- 6 Locate the Position section. In the z text field, type 1000-thickness.
- 7 Click Pauld Selected.

8 Click the Wireframe Rendering button in the Graphics toolbar.

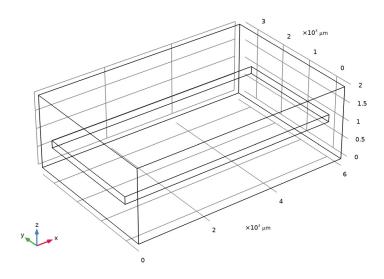

Work Plane I (wbl)

- I In the Geometry toolbar, click Work Plane.
- 2 In the Settings window for Work Plane, locate the Plane Definition section.
- 3 From the Plane type list, choose Face parallel.
- 4 On the object blk2, select Boundary 4 only.

Work Plane I (wp I)>Plane Geometry

In the Model Builder window, click Plane Geometry.

Work Plane I (wpl)>Rectangle I (rl)

- I In the Work Plane toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type 6000.
- 4 In the **Height** text field, type w_c.
- 5 Locate the Position section. From the Base list, choose Center.
- 6 Right-click Rectangle I (rI) and choose Duplicate.


Work Plane I (wp I)>Rectangle 2 (r2)

- I In the Model Builder window, click Rectangle 2 (r2).
- 2 In the Settings window for Rectangle, locate the Size and Shape section.

3 In the Height text field, type w_s.

Work Plane I (wpl)>Difference I (difl)

- I In the Work Plane toolbar, click Booleans and Partitions and choose Difference.
- 2 Select the object r2 only.
- 3 In the Settings window for Difference, locate the Difference section.
- 4 Click to select the Activate Selection toggle button for Objects to subtract.
- **5** Select the object **r1** only.
- 6 Right-click Difference I (dif1) and choose Build All Objects.

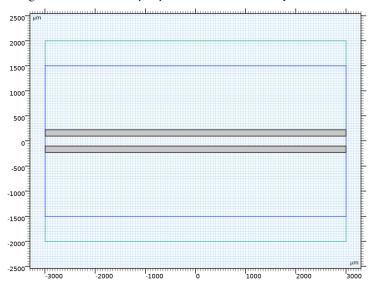

MATERIALS

Material I (mat1)


- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, locate the Material Contents section.

3 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	1	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

Material 2 (mat2)

- I Right-click Materials and choose Blank Material.
- 2 Select Domain 2 only.

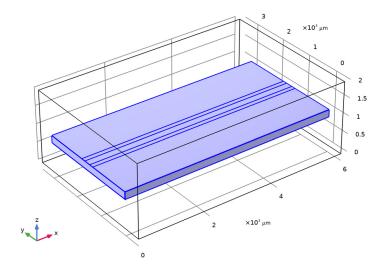

3 In the Settings window for Material, locate the Material Contents section.


4 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilonr_iso; epsilonrii = epsilonr_iso, epsilonrij = 0	12.9	I	Basic
Relative permeability	mur_iso; murii = mur_iso, murij = 0	1	I	Basic
Electrical conductivity	sigma_iso; sigmaii = sigma_iso, sigmaij = 0	0	S/m	Basic

ELECTROMAGNETIC WAVES, FREQUENCY DOMAIN (EMW)


Perfect Electric Conductor 2

- I In the Model Builder window, under Component I (compl) right-click Electromagnetic Waves, Frequency Domain (emw) and choose the boundary condition Perfect Electric Conductor.
- 2 Select Boundaries 8, 10, and 12 only.

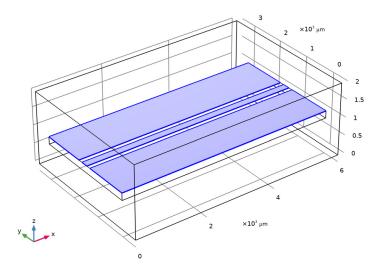


Scattering Boundary Condition I

- I In the Physics toolbar, click **Boundaries** and choose **Scattering Boundary Condition**.
- **2** Select Boundaries 2–4 and 14 only.

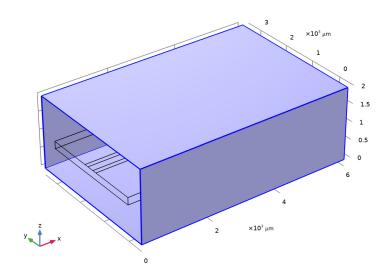

Port I I In the **Physics** toolbar, click **Boundaries** and choose **Port**.

2 Select Boundaries 1 and 5 only.

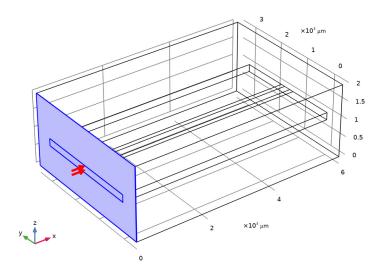


- 3 In the Settings window for Port, locate the Port Properties section.
- 4 From the Type of port list, choose Numeric.
- 5 Select the Analyze as a TEM field check box.

Integration Line for Voltage I


- I In the Physics toolbar, click 🕞 Attributes and choose Integration Line for Voltage.
- 2 In the Settings window for Integration Line for Voltage, locate the Edge Selection section.
- 3 Click Clear Selection.

4 Select Edge 11 only.

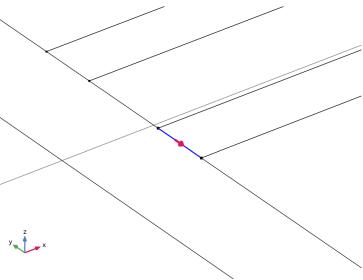

Port 2

- I In the Physics toolbar, click **Boundaries** and choose Port.
- 2 Select Boundaries 15 and 16 only.

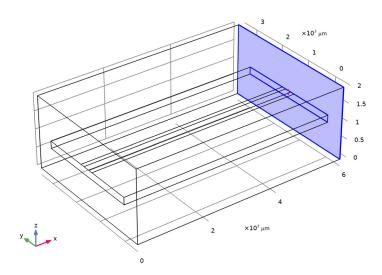


3 In the Settings window for Port, locate the Port Properties section.

- 4 From the Type of port list, choose Numeric.
- 5 Select the Analyze as a TEM field check box.


Integration Line for Voltage 1

- I In the Physics toolbar, click 💂 Attributes and choose Integration Line for Voltage.
- 2 In the Settings window for Integration Line for Voltage, locate the Edge Selection section.
- 3 Click Clear Selection.
- 4 Select Edge 31 only.
- 5 Locate the Settings section. Click Toggle Voltage Drop Direction.

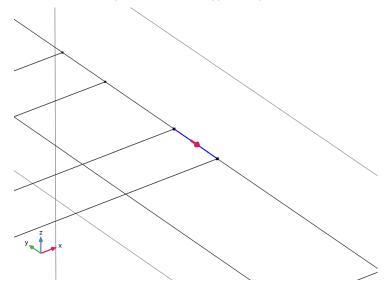


MESH I

I In the Model Builder window, under Component I (compl) right-click Mesh I and choose Build All.

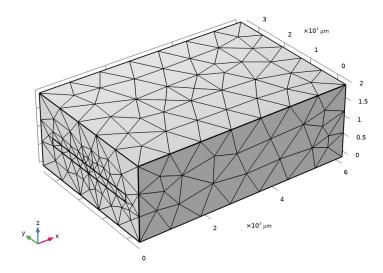


- 2 In the Graphics window toolbar, click ▼ next to ☐ Select Edges, then choose Select Boundaries.
- 3 Click the 🥸 Click and Hide button in the Graphics toolbar.
- 4 Select Boundaries 2 and 4 only.

5 Click the 🥸 Click and Hide button in the Graphics toolbar.

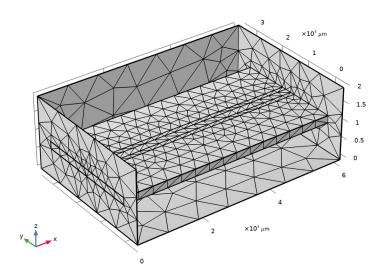

- 6 In the Settings window for Mesh, locate the Electromagnetic Waves, Frequency Domain (emw) section.
- 7 Select the Refine conductive edges check box.
- 8 In the Relative size to default mesh text field, type 0.02/sqrt(12.9).

9 Click III Build All.

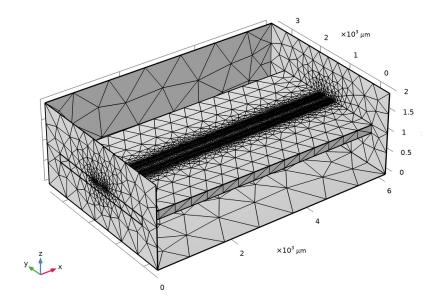


10 In the Home toolbar, click **Compute**.

RESULTS

Multislice

- I In the Model Builder window, expand the Electric Field (emw) node, then click Multislice.
- 2 In the Settings window for Multislice, locate the Multiplane Data section.
- 3 Find the X-planes subsection. In the Planes text field, type 0.
- 4 Find the Y-planes subsection. In the Planes text field, type 0.
- 5 Locate the Coloring and Style section. Click Change Color Table.
- 6 In the Color Table dialog box, select Thermal>HeatCameraLight in the tree.


7 Click OK.

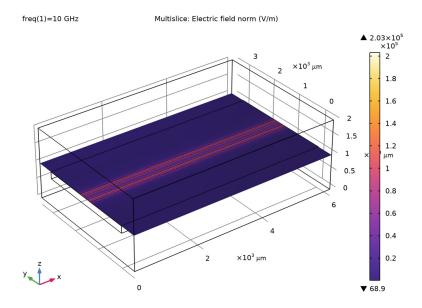

Inspect the mode field and the computed TEM mode impedance in the following default plots.

Electric Mode Field, Port I (emw)

In the Model Builder window, under Results click Electric Mode Field, Port I (emw).

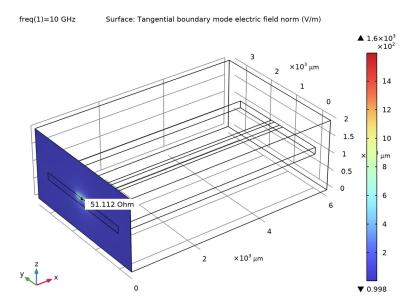

Electric Mode Field, Port 2 (emw)

In the Model Builder window, click Electric Mode Field, Port 2 (emw).

