CHAPTER 8

AVR HARDWARE CONNECTION, HEX FILE, AND FLASH LOADERS

OBJECTIVES

Upon completion of this chapter, you will be able to:

- >> Explain the function of the reset pin of the AVR microcontroller
- >> Show the hardware connection of the AVR chip
- >> Show the use of a crystal oscillator for a clock source
- >> Explain how to design an AVR-based system
- >> Explain the role of brown-out detection voltage (BOD) in system reset
- >> Explain the role of the fuse bytes in an AVR-based system
- >> Show the design of the AVR trainer
- >> Code a test program in Assembly and C for testing the AVR
- >> Show how to download programs into the AVR system using AVRISP
- >> Explain the hex file characteristics

This chapter describes the process of physically connecting and testing AVR-based systems. In the first section we describe the functions of ATmega32 pins. The fuse bits of the AVR are explored in Section 8.2. In Section 8.3 we explain the characteristics of hex files that are produced by AVR Studio. In Section 8.4 we discuss the various methods of loading a program into the AVR microcontroller. It also shows the hardware connection for an AVR trainer using the ATmega16 or ATmega32 chips.

SECTION 8.1: ATMEGA32 PIN CONNECTION

The ATmega family members come in different packages, such as DIP (dual in-line package), MLF (Micro Lead Frame Package), and QFP (quad flat package). They all have many pins that are dedicated to various functions such as I/O, ADC, timer, and interrupts. Notice that Atmel provides a 28-pin version of the ATmega family (ATmega8) with a reduced number of I/O ports for less demanding applications. In Chapter 1 you can see members of the ATmega family and their characteristics. Because the vast majority of educational trainers use the 40-pin chip, we will concentrate on that. Figure 8-1 shows the pins for the ATmega32.

Examine Figure 8-1. Notice that of the 40 pins, a total of 32 are set aside for the four Ports A, B, C, and D, with their alternate functions. The rest of the pins are designated as VCC, AVCC, AREF, GND, XTAL1, XTAL2, and RESET. Next, we describe the function of each pin.

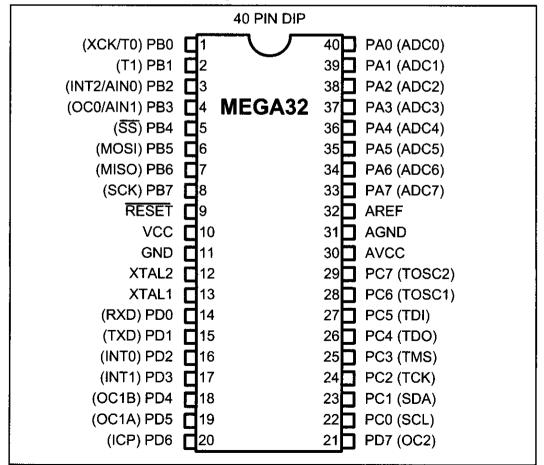


Figure 8-1. ATmega32 Pin Diagram

VCC

This pin provides supply voltage to the chip. The typical voltage source is +5 V. Some AVR family members have lower voltage for VCC pins in order to reduce the noise and power dissipation of the AVR system. For example, ATmega32L operation voltage is 2.7–5.5 V. We can choose other options for the operating voltage level by setting BOD fuse bits. The BOD fuse bits are discussed in the next section.

AVCC

AVCC is the supply voltage pin for Port A and the A/D Converter. It should be externally connected to VCC, even if the ADC is not used. In Chapter 13 you will see how to connect this pin if you want to use ADC.

AREF

AREF is the analog reference pin for ADC. In Chapter 13 we will discuss it further.

GND

Two pins are also used for ground. In chips with 40 pins and more, it is common to have multiple pins for VCC and GND. This will help reduce the noise (ground bounce) in high-frequency systems.

XTAL1 and XTAL2

The ATmega32 has many options for the clock source. Most often a quartz crystal oscillator is connected to input pins XTAL1 and XTAL2. The quartz crystal oscillator connected to the XTAL1 and XTAL2 pins also needs two capacitors. One side of each capacitor is connected to the ground as shown in Figure 8-2. Notice that ATmega32 microcontrollers can have speeds of 0 Hz to 16 MHz.

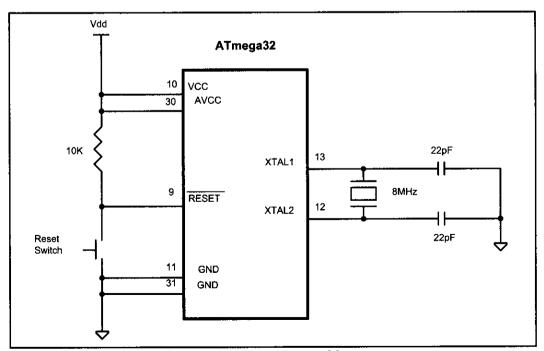


Figure 8-2. Minimum Connection for ATmega32

We can choose options for the clock source and frequency by setting some fuse bits. The fuse bits are discussed in the next section.

RESET

Pin 9 (in the ATmega32, 40-pin DIP) is the RESET pin. It is an input and is active-LOW (normally HIGH). When a LOW pulse is applied to this pin, the microcontroller will reset and terminate all activities. After applying reset, contents of all registers and SRAM locations will be cleared. Notice that after applying reset, all ports will be input because contents of all DDR registers are cleared. The CPU will start executing the program from

Table 8-1: RESET Values for Some AVR Registers

| Register | Reset Value (hex) |
|----------|-------------------|
| PC | 000000 |
| R0-R31 | 00 |
| DDRx | 00 |
| PORTx | 00 |

run location 0x00000 after a brief delay when the RESET pin is forced low and then released.

Figures 8-3a, 8-3b, and 8-3c show three ways of connecting the RESET pin. Figure 8-3b uses a momentary switch for reset circuitry. The most difficult time for any system is during the power-up. The CPU needs both a stable clock source and a stable voltage level to function properly. Some designers put a 10 nF capacitor between the RESET pin and GND to filter the noise during reset and working time. See Figure 3-8c. The diode protects the RESET pin from being powered by the capacitor when the power is off. The AVR chips come with some features that help the reset process. We can choose these features by setting the bits in the fuse bytes. The fuse bits for the reset are discussed in the next section. In addition to the RESET pin there are other sources of reset in the AVR family that will be discussed in future chapters.

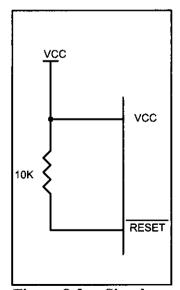


Figure 8-3a. Simple Power-On Reset Circuit

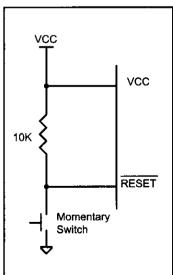


Figure 8-3b. Power-On Reset Circuit with Momentary Switch

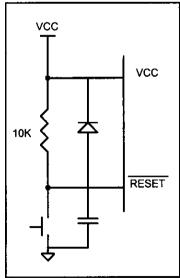


Figure 8-3c. Power-On Reset Circuit with Capacitor and Diode

The number of I/O ports varies among the AVR family members, as we saw in Chapter 4. The following is another look at them for the ATmega32.

Ports A, B, C, D, and E

As shown in Figure 8-1 (and discussed in Chapter 4), the Ports A, B, C, and D use a total of 32 pins. Tables 8-2 through 8-5 provide summaries of features of Ports A-D and their alternative functions. We will study the alternative functions of these pins in future chapters, as we discuss the AVR features.

Table 8-2: Port A Alternate Functions

| Bit | Function | |
|-----|----------|--|
| PA0 | ADC0 | |
| PA1 | ADC1 | |
| PA2 | ADC2 | |
| PA3 | ADC3 | |
| PA4 | ADC4 | |
| PA5 | ADC5 | |
| PA6 | ADC6 | |
| PA7 | ADC7 | |
| | | |

Table 8-3: Port B Alternate Functions

| Bit | Function | |
|-----|-----------|--|
| PB0 | XCK/T0 | |
| PB1 | T1 | |
| PB2 | INT2/AIN0 | |
| PB3 | OC0/AIN1 | |
| PB4 | SS | |
| PB5 | MOSI | |
| PB6 | MISO | |
| PB7 | SCK | |

Table 8-4: Port C Alternate Functions

| Bit | Function | |
|-----|----------|--|
| PC0 | SCL | |
| PC1 | SDA | |
| PC2 | TCK | |
| PC3 | TMS | |
| PC4 | TDO | |
| PC5 | TDI | |
| PC6 | TOSC1 | |
| PC7 | TOSC2 | |

Table 8-5: Port D Alternate Functions

| Bit | Function |
|-----|----------|
| PD0 | RXD |
| PD1 | TXD |
| PD2 | INT0 |
| PD3 | INT1 |
| PD4 | OC1B |
| PD5 | OC1A |
| PD6 | ICP |
| PD7 | OC2 |

Review Questions

- 1. Which pin is used to reset the ATmega32 chip?
- 2. Upon power-up, the R0-R31 registers have a value of _____.
- 3. True or false. Upon power-up, the CPU continues running the code from the line it was running before reset.
- 4. Reset is an active- (LOW, HIGH) pin.
- 5. What is the operating voltage of ATmega32L?

SECTION 8.2: AVR FUSE BITS

There are some features of the AVR that we can choose by programming the bits of fuse bytes. These features will reduce system cost by eliminating any need for external components.

ATmega32 has two fuse bytes. Tables 8-6 and 8-7 give a short description of the fuse bytes. Notice that the default values can be different from production to production and time to time. In this section we examine some of the basic fuse bits. The Atmel website (http://www.atmel.com) provides the complete description of fuse bits for the AVR microcontrollers. It must be noted that if a fuse bit is incorrectly programmed, it can cause the system to fail. An example of this is changing the SPIEN bit to 0, which disables SPI programming mode. In this case you will not be able to program the chip any more! Also notice that the fuse bits are '0' if they are programmed and '1' when they are not programmed.

In addition to the fuse bytes in the AVR, there are 4 lock bits to restrict access to the Flash memory. These allow you to protect your code from being copied by others. In the development process it is not recommended to program lock bits because you may decide to read or verify the contents of Flash memory. Lock bits are set when the final product is ready to be delivered to market. In this book we do not discuss lock bits. To study more about lock bits you can read the data sheets for your chip at http://www.atmel.com.

Table 8-6: Fuse Byte (High)

| Table 8-6: Fuse Byte (High) | | | |
|-----------------------------|-----|-------------------------------|------------------|
| Fuse High | Bit | Description | Default Value |
| Byte | No. | | |
| OCDEN | 7 | Enable OCD | 1 (unprogrammed) |
| JTAGEN | 6 | Enable JTAG | 0 (programmed) |
| SPIEN | 5 | Enable SPI serial program and | 0 (programmed) |
| | | data downloading | |
| CKOPT | 4 | Oscillator options | 1 (unprogrammed) |
| EESAVE | 3 | EEPROM memory is preserved | 1 (unprogrammed) |
| | | through the chip erase | |
| BOOTSZ1 | 2 | Select boot size | 0 (programmed) |
| BOOTSZ0 | 1 | Select boot size | 0 (programmed) |
| BOOTRST | 0 | Select reset vector | 1 (unprogrammed) |

Table 8-7: Fuse Byte (Low)

| Fuse High | Bit | Description | Default Value |
|-----------|-----|----------------------------------|------------------|
| Byte | No. | | |
| BODLEVEL | 7 | Brown-out detector trigger level | l (unprogrammed) |
| BODEN | 6 | Brown-out detector enable | 1 (unprogrammed) |
| SUT1 | 5 | Select start-up time | 1 (unprogrammed) |
| SUT0 | 4 | Select start-up time | 0 (programmed) |
| CKSEL3 | 3 | Select clock source | 0 (programmed) |
| CKSEL2 | 2 | Select clock source | 0 (programmed) |
| CKSEL1 | 1 | Select clock source | 0 (programmed) |
| CKSEL0 | 0 | Select clock source | 1 (unprogrammed) |

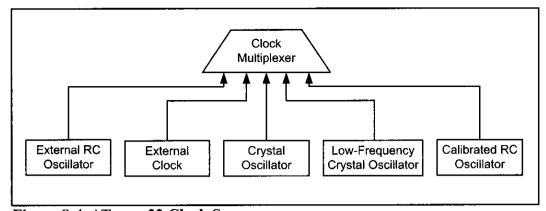


Figure 8-4. ATmega32 Clock Sources
Fuse bits and oscillator clock
source

As you see in Figure 8-4, there are different clock sources in AVR. You can choose one by setting or clearing any of the bits CKSEL0 to CKSEL3.

CKSEL0-CKSEL3

The four bits of CKSEL3, CKSEL2, CKSEL1, and CKSEL0 are used to select the clock source to the CPU. The default choice is internal RC (0001), which uses the on-chip RC oscillator. In this option there is no need to connect an external crystal and capacitors to the chip. As you see in Table 8-8, by changing the values of CKSEL0–CKSEL3 we can choose among 1, 2, 4, or 8 MHz internal RC frequencies; but it must be noted that using an internal RC oscillator can cause about 3% inaccuracy and is not recommended in applications that need precise timing.

The external RC oscillator is another source to the CPU. As you see in Figure 8-5, to use the external RC oscillator, you have to connect an external resistor and capacitors to the XTAL1 pin. The values of R and C determine the clock speed. The frequency of the RC oscillator circuit is estimated by the equation f = 1/(3RC). When you need a variable clock

Table 8-8: Internal RC Oscillator Operation Modes

| CKSEL30 | Frequency |
|---------|-----------|
| 0001 | 1 MHz |
| 0010 | 2 MHz |
| 0011 | 4 MHz |
| 0100 | 8 MHz |

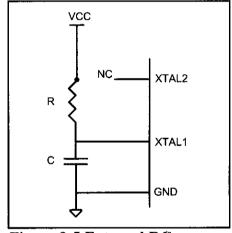



Figure 8-5 External RC

Table 8-9: External RC Oscillator Operation Modes

| CKSEL30 | Frequency (MHz) |
|---------|-----------------|
| 0101 | <0.9 |
| 0110 | 0.9-3.0 |
| 0111 | 3.0-8.0 |
| 1000 | 8.0-12.0 |

source you can use the external RC and replace the resistor with a potentiometer. By turning the potentiometer you will be able to change the frequency. Notice that the capacitor value should be at least 22 pF. Also, notice that by programming the CKOPT fuse, you can enable an internal 36 pF capacitor between XTAL1 and GND, and remove the external capacitor. As you see in Table 8-9, by changing the values of CKSEL0–CKSEL3, we can choose different frequency ranges.

By setting CKSEL0...3 bits to 0000, we can use an external clock source for the CPU. In Figure 8-6a you see the connection to an external clock source.

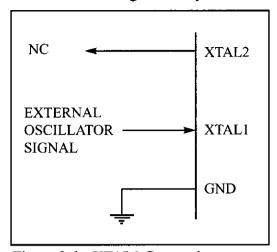

C2
22 pF
C1
XTAL2

XTAL1

22 pF
GND

Figure 8-6a. XTAL1 Connection to an External Clock Source

Figure 8-6b. XTAL1-XTAL2
Connection to Crystal Oscillator

The most widely used option is to connect the XTAL1 and XTAL2 pins to a crystal (or ceramic) oscillator, as shown in Figure 8-6b. In this mode, when CKOPT is programmed, the oscillator output will oscillate with a full rail-to-rail swing on the output, causing a more powerful clock signal. This is suitable when the chip drives a second clock buffer or operates in a very noisy environment. As you see in Table 8-10, this mode has a wide frequency range. When CKOPT is not programmed, the oscillator has a smaller output swing and a limited frequency range. This mode cannot be used to drive other clock buffers, but it does reduce power consumption considerably. There are four choices for the crystal oscillator option. Table 8-10 shows all of these choices. Notice that mode 101 cannot be used with crystals, and only ceramic resonators can be used. Example 8-1 shows the relation between crystal frequency and instruction cycle time.

Table 8-10: ATmega32 Crystal Oscillator Frequency Choices and Capacitor Range

| CKOPT | CKSEL31 | Frequency (MHz) | C1 and C2 (pF) |
|-------|---------------|-----------------|------------------|
| 1 | 101 | 0.4-0.9 | Not for crystals |
| 1 | 110 | 0.9–3.0 | 12–22 |
| 1 | 111 | 3.0-8.0 | 12–22 |
| 0 | 101, 110, 111 | More than 1.0 | 12–22 |

Example 8-1

Find the instruction cycle time for the ATmega32 chip with the following crystal oscillators connected to the XTAL1 and XTAL2 pins.

(a) 4 MHz

(b) 8 MHz

(c) 10 MHz

Solution:

- (a) Instruction cycle time is 1/(4 MHz) = 250 ns
- (b) Instruction cycle time is 1/(8 MHz) = 125 ns
- (c) Instruction cycle time is 1/(10 MHz) = 100 ns

Fuse bits and reset delay

The most difficult time for a system is during power-up. The CPU needs both a stable clock source and a stable voltage level to function properly. In AVRs, after all reset sources have gone inactive, a delay counter is activated to make the reset longer. This short delay allows the power to become stable before normal operation starts. You can choose the delay time through the SUT1, SUT0, and CKSEL0 fuses. Table 8-11 shows start-up times for the different values of SUT1, SUT0, and CKSEL fuse bits and also the recommended usage of each combination. Notice that the third column of Table 8-11 shows start-up time from power-down mode. Power-down mode is not discussed in this book.

Brown-out detector

Occasionally, the power source provided to the V_{CC} pin fluctuates, causing the CPU to malfunction. The ATmega family has a provision for this, called brown-out detection. The BOD circuit compares VCC with BOD-Level and resets the chip if VCC falls below the BOD-Level. The BOD-Level can be either 2.7 V when the BODLEVEL fuse bit is one (not programmed) or 4.0 V when the BODLEVEL fuse is zero (programmed). You can enable the BOD circuit by programming the BODEN fuse bit. When VCC increases above the trigger level, the BOD circuit releases the reset, and the MCU starts working after the time-out period has expired.

A good rule of thumb

There is a good rule of thumb for selecting the values of fuse bits. If you are using an external crystal with a frequency of more than 1 MHz you can set the CKSEL3, CKSEL2, CKSEL1, SUT1, and SUT0 bits to 1 (not programmed) and clear CKOPT to 0 (programmed).

Table 8-11: Startup Time for Crystal Oscillator and Recommended Usage

| CKSEL0 | SUT10 | Start-Up Time | Delay from | Recommended |
|--------|-------|-----------------|------------|---------------------|
| | | from Power-Down | Reset (VCC | = 5) Usage |
| 0 | 00 | 258 CK | 4.1 | Ceramic resonator, |
| | | | | fast rising power |
| 0 | 01 | 258 CK | 65 | Ceramic resonator, |
| | | | | slowly rising power |
| 0 | 10 | 1K CK | - | Ceramic resonator, |
| | | | | BOD enabled |
| 0 | 11 | 1K CK | 4.1 | Ceramic resonator, |
| | | | | fast rising power |
| 1 | 00 | 1K CK | 65 | Ceramic resonator, |
| | | | | slowly rising power |
| 1 | 01 | 16K CK | - | Crystal oscillator, |
| | | | | BOD enabled |
| 1 | 10 | 16K CK | 4.1 | Crystal oscillator, |
| | | | | fast rising power |
| 1 | 11 | 16K CK | 65 | Crystal oscillator, |
| | | | | slowly rising power |
| | | | | |

Putting it all together

Many of the programs we showed in the first seven chapters were intended to be simulated. Now that we know what we should write in the fuse bits and how we should connect the ATmega32 pins, we can download the hex output file provided by the AVR Studio assembler into the Flash memory of the AVR chip using an AVR programmer.

We can use the following skeleton source code for the programs that we intend to download into a chip. Notice that you have to modify the first line if you use a chip other than ATmega32. As you can see in the comments, if you want to enable interrupts you have to modify ".ORG 0", and if you do not use call the instruction in your code, you can omit the codes that set the stack pointer.

```
.INCLUDE "M32DEF.INC" ; change it according to your chip
.ORG 0 ; change it if you use interrupt
LDI R16,HIGH(RAMEND) ; set the high byte of stack pointer to
OUT SPH,R16 ; the high address of RAMEND
LDI R16,LOW(RAMEND) ; set the low byte of stack pointer to
OUT SPL,R16 ; low address of RAMEND
... ;place your code here
```

As an example, examine Program 8-1. It will toggle all the bits of Port B with some delay between the "on" and "off" states.

```
;Test Program 8-1: Toggling PORTB for the Atmega32
.INCLUDE "M32DEF.INC"
                            :using Atmega32
.ORG 0
          R16.HIGH(RAMEND) ; set up stack
     LDI
     OUT SPH.R16
     LDI R16, LOW OUT SPL, R16
           R16, LOW (RAMEND)
                           ;load R16 with 0xFF
     LDI R16,0xFF
                            ;Port B is output
     OUT
           DDRB,R16
BACK:
                             ;complement R16
      COM
           R16
           PORTB, R16
                             ; send it to Port B
      OUT
                             ;time delay
      CALL DELAY
                             ; keep doing this indefinitely
     RJMP BACK
DELAY:
           R20,16
     LDI
L1:
     LDI R21,200
L2:
     LDI
           R22,250
L3:
      NOP
      NOP
      DEC
            R22
      BRNE L3
           R21
      DEC
      BRNE L2
            R20
      DEC
      BRNE L1
      RET
```

Program 8-1: Toggling Port B in Assembly

Toggle program in C

In Chapter 7 we covered C programming of the AVR using the AVR GCC compiler. Program 8-2 shows the toggle program written in C. It will toggle all the bits of Port B with some delay between the "on" and "off" states.

```
#include <avr/io.h>
                                    //standard AVR header
#include <util/delay.h>
void delay ms(int d);
int main(void)
     DDRB = 0 \times FF;
                                   //Port B is output
     while (1)
                                   //do forever
           PORTB = 0x55;
                               //delay 1 second
           delay ms(1000);
           PORTB = 0xAA;
           delay ms(1000);
                                  //delay 1 second
     return 0;
void delay ms(int d)
                                //delav 1000 us
     delay ms(d);
```

Program 8-2: Toggling Port B in C

Review Questions

- 1. A given ATmega32-based system has a crystal frequency of 16 MHz. What is the instruction cycle time for the CPU?
- 2. How many fuse bytes are available in ATmega32?
- 3. True or false. Upon power-up, both voltage and frequency are stable instantly.
- 4. The internal RC oscilator works for the frequency range of _____ to ____ MHz.
- 5. Which fuse bit is used to disable the BOD?
- 6. True or false. Upon power-up, the CPU starts working immediately.
- 7. What is the rule of thumb for ATmega32 fuse bits?
- 8. The brown-out detection voltage can be set at _____ or ___ by_____
- 9. True or false. The higher the clock frequency for the system, the lower the power dissipation.

SECTION 8.3: EXPLAINING THE HEX FILE FOR AVR

Intel Hex is a widely used file format designed to standardize the loading (transferring) of executable machine code into a chip. Therefore, the loaders that come with every ROM burner (programmer) support the Intel Hex file format. In many Windows-based assemblers such as AVR Studio, the Intel Hex file is produced according to the settings you set. In the AVR Studio environment, the object file is fed into the linker program to produce the Intel hex file. The hex file is used by a programmer such as the AVRISP to transfer (load) the file into the Flash memory. The AVR Studio assembler can produce three types of hex files. They are (a) Intel Intellec 8/MDS (Intel Hex), (b) Motorola S-record, and (c) Generic. See Table 8-12. In this section we will explain Intel Hex with some examples. We recommend that you do not use AVR GCC if you want to test the programs in this section on your computer. It is better to use a simple .asm file like toggle.asm to understand this concept better.

Table 8-12: Intel Hex File Formats Produced by AVR Studio

| Format Name | File Extension | Max. ROM Address |
|-------------------------|----------------|------------------|
| Extended Intel Hex file | .hex | 20-bit address |
| Motorola S-record | .mot | 32-bit address |
| Generic | .gen | 24-bit address |

Analyzing the Intel Hex file

We choose the hex type of Intel Hex, Motorola S-record, or Generic by using the command-line invocation options or setting the options in the AVR Studio assembler itself. If we do not choose one, the AVR Studio assembler selects Intel Hex by default. Intel Hex supports up to 16-bit addressing and is not applicable for programs more than 64K bytes in size. To overcome this limitation AVR Studio uses extended Intel Hex files, which support type 02 records to extend address space to 1M. We will explain extended Intel Hex file format in this section. Figure 8-10 shows the Intel Hex file of the test program whose list file is given in Figure 8-8. Since the programmer (loader) uses the Hex file to download the opcode into Flash, the hex file must provide the following: (1) the number of bytes of information to be loaded, (2) the information itself, and (3) the starting address where the information must be placed. Each record (line) of the Hex file consists of six parts as follows:

:BBAAAATTHHHHH......HHHHCC

The following describes each part:

- 1. ":" Each line starts with a colon.
- 2. BB, the count byte. This tells the loader how many bytes are in the line.
- 3. AAAA is for the record address. This is a 16-bit address. The loader places the first byte of record data into this Flash location. This is the case in files that are less than 64 KB. For files that are more than 64 KB the address field shows the record address in the current segment.

- 4. TT is for type. This field is 00, 01, or 02. If it is 00, it means that there are more lines to come after this line. If it is 01, it means that this is the last line and the loading should stop after this line. If it is 02, it indicates the current segment address. To calculate the absolute address of each record (line), we have to shift the current segment address 4 bits to left and then add it to the record address. Examples 8-2 and 8-3 show how to calculate the absolute address of a record in extended Intel hex file.
- 5. HH......H is the real information (data or code). The loader places this information into successive memory locations of Flash. The information in this field is presented as low byte followed by the high byte.
- 6. CC is a single byte. This last byte is the checksum byte for everything in that line. The checksum byte is used for error checking. Checksum bytes are discussed in detail in Chapters 6 and 7. Notice that the checksum byte at the end of each line represents the checksum byte for everything in that line, and not just for the data portion.

Example 8-2

What is the absolute address of the first byte of a record that has 0025 in the address field if the last type 02 record before it has the segment address 0030?

Solution:

To calculate the absolute address of each record (line), we have to shift the segment address (0030) four bits to the left and then add it to the record address (0025):

| 0030 (2 bytes segment address) shifted 4 bits to the left> | | | | | | |
|--|-------|--|--|--|--|--|
| 0025 (record address) | + 25 | | | | | |
| | | | | | | |
| => (absolute address) | 00325 | | | | | |

Example 8-3

What is the absolute address of the first byte of the second record below?

:02**0000**020000FC

:1000000008E00EBF0FE50DBF0FEF07BB05E500953C

Solution:

To calculate the absolute address of the first byte of the second record, we have to shift left the segment address (0000, as you see in the first record) four bits and then add it to the second record address (0000, as you see in the second record).

Analyzing the bytes in the Flash memory vs. list file

The data in the Flash memory of the AVR is recorded in a way that is called *Little-endian*. This means that the high byte of the code is located in the higher address location of Flash memory, and the low byte of the code is located in the lower address location of Flash memory. Compare the first word of code (e008) in Figure 8-8 with the first two bytes of Flash memory (08e0) in Figure 8-7. As you see, 08, which is the low byte of the first instruction (LDI R16, HIGH (RAMEND)) in the code, is placed in the lower location of Flash memory, and e0, which is the high byte of the instruction in the code, is placed in the next location of program space just after 08.

| Memory | • | | | | | | | | | | | | | × |
|---------|----|----|----|----|------|----|----|-----|-------|---------|-------|----|-------------------------|------|
| Program | | | | 8 | 3/16 | ab | C. | Add | dress | s: 0x00 | Cols: | 10 | $\overline{\mathbf{v}}$ | |
| 000000 | 08 | ΕO | 0E | BF | OF | E5 | OD | BF | OF | EF | | | | |
| 000005 | 07 | BB | 05 | E5 | 00 | 95 | 08 | BB | OE | 94 | | | | - |
| A00000 | OC | 00 | FB | CF | 40 | El | 58 | EC | 6A | EF | | | | |
| 00000F | 00 | 00 | 00 | 00 | 6A | 95 | El | F7 | 5A | 95 | | | | |
| 000014 | C9 | F7 | 44 | 95 | Bl | F7 | 08 | 95 | FF | FF | | | | anda |
| | | | | | | | | | | | | | | Y |

Figure 8-7. AVR Flash Memory Contents

| OBJ | | LINE | ecn | va va 24-bit addres : :nc |
|------|---|--|--|---|
| | | .ORG | 0x000 | |
| e008 | | | LDI | R16, HIGH (RAMEND) |
| bf0e | | | OUT | SPH, R16 |
| e50f | | | LDI | R16, LOW (RAMEND) |
| bf0d | | | OUT | SPL,R16 |
| ef0f | | | LDI | R16,0xFF |
| bb07 | | | OUT D | DRB,R16 |
| e505 | | | LDI | R16,0x55 |
| | | BACK: | | |
| 9500 | | | COM | R16 |
| bb08 | | | OUT | PORTB, R16 |
| 940e | 000c | | CALL | DELAY_1S |
| cffb | | | RJMP | BACK |
| | | DELAY | _1S: | |
| e140 | | | LDI | R20,16 |
| ec58 | | L1: | LDI | R21,200 |
| ef6a | | L2: | LDI | R22,250 |
| | | L3: | | |
| 0000 | | | NOP | 440 |
| 0000 | | | NOP | |
| 956a | | | DEC | R22 |
| f7el | | | BRNE | L3 segment address (0000), as your sea in the |
| 955a | | | DEC | R21 |
| f7c9 | | | BRNE | L2 |
| 954a | | | DEC | R20 |
| f7b1 | | | BRNE | L1 Hal odrozena Filina (seamba inanga |
| 9508 | | | RET | |
| | e008 bf0e e50f bf0d ef0f bb07 e505 9500 bb08 940e cffb e140 ec58 ef6a 0000 0000 956a f7e1 955a f7c9 954a f7b1 | e008 bf0e e50f bf0d ef0f bb07 e505 9500 bb08 940e 000c cffb e140 ec58 ef6a 0000 0000 956a f7e1 955a f7c9 954a f7b1 | .ORG e008 bf0e e50f bf0d ef0f bb07 e505 BACK: 9500 bb08 940e 000c cffb DELAY e140 ec58 ef6a L2: L3: 0000 0000 956a f7e1 955a f7c9 954a f7b1 | .ORG 0x0000 e008 |

Figure 8-8. List File for Test Program (Comments and other lines are deleted, and some spaces are added for simplicity.)

As we mentioned in Chapter 2, each Flash location in the AVR is 2 bytes long. So, for example, the first byte of Flash location #2 is Byte #4 of the code. See Figure 8-9.

| | Flash N | /lemory |
|-------------|---------|---------|
| Location #0 | Byte #0 | Byte #1 |
| Location #1 | Byte #2 | Byte #3 |
| Location #2 | Byte #4 | Byte #5 |
| Location #3 | Byte #6 | Byte #7 |

Figure 8-9. AVR Flash Memory Locations

In Figure 8-10 you see the hex file of the toggle code. The first record (line) is a type 02 record and indicates the current segment address, which is 0000. The next record (line) is a type 00 record and contains the data (the code to be loaded into the chip). After ':' the record starts with 10, which means that the data field contains 10 (16 decimal) bytes of data. The next field is the address field (0000), and it indicates that the first byte of the data field will be placed in address location 0 in the current segment. So the first byte of code will be loaded into location 0 of Flash memory. (Reexamine Example 8-3 if needed.) Also, notice the use of .ORG 0x000 in the code. The next field is the data field, which contains the code to be loaded into the chip. The first byte of the data field is 08, which is the low byte of the first instruction (LDI R16, HIGH (RAMEND)). See Figure 8-8. The last field of the record is the checksum byte of the record. Notice that the checksum byte at the end of each line represents the checksum byte for everything in that line, and not just for the data portion.

Pay attention to the address field of the next record (0010) in Figure 8-10 and compare it with the address of the bb08 instruction in the list file in Figure 8-8. As you can see, the address in the list file is 000008, which is exactly half of the address of the bb08 instruction in the hex file, which is 0010. That is because each Flash location (word) contains 2 bytes.

| :020000020000FC | |
|--|----|
| :1000000008E00EBF0FE50DBF0FEF07BB05E500953C | |
| :1000100008BB0E940C00FBCF40E158EC6AEF0000E7 | |
| :1000200000006A95E1F75A95C9F74A95B1F7089526 | |
| :00000001FF | |
| | |
| Separating the fields, we get the following: | |
| | |
| :ВВ АААА ТТ НИНИНИНИНИНИНИНИНИНИНИНИНИНИН | CC |
| :02 0000 02 0000 | FC |
| :10 0000 00 08E00EBF0FE50DBF0FEF07BB05E50095 | 3C |
| :10 0010 00 08BB0E940C00FBCF40E158EC6AEF0000 | E7 |
| :10 0020 00 00006A95E1F75A95C9F74A95B1F70895 | 26 |
| :00 0000 01 | FF |

Figure 8-10. Intel Hex File Test Program with the Intel Hex Option

Examine Examples 8-4 through 8-6 to gain insight into the Intel Hex file format.

Example 8-4

From Figure 8-10, analyze the six parts of line 3.

Solution:

After the colon (:), we have 10, which means that 16 bytes of data are in this line. 0010H is the record address, and means that 08, which is the first byte of the record, is placed in address location 10H (16 decimal). Next, 00 means that this is not the last line of the record. Then the data, which is 16 bytes, is as follows:

08BB0E940C00FBCF40E158EC6AEF0000. Finally, the last byte, E7, is the checksum byte.

Example 8-5

Compare the data portion of the Intel Hex file of Figure 8-10 with the opcodes in the list file of the test program given in Figure 8-8. Do they match?

Solution:

In the second line of Figure 8-10, the data portion starts with 08E0H, where the low byte is followed by the high byte. That means it is E008, the opcode for the instruction "LDI R16, HIGH (RAMEND)", as shown in the list file of Figure 8-8. The last byte of the data in line 5 is 0895, which is the opcode for the "RET" instruction in the list file.

Example 8-6

(a) Verify the checksum byte for line 3 of Figure 8-10. (b) Verify also that the information is not corrupted.

Solution:

- (a) 10 + 00 + 00 + 00 + 08 + E0 + 0E + BF + 0F + E5 + 0D + BF + 0F + EF + 07 + BB + 05 + E5 + 00 + 95 = 6c4 in hex. Dropping the carries (6) gives C4H, and its 2's complement is 3CH, which is the last byte of line 3.
- (b) If we add all the information in line 2, including the checksum byte, and drop the carries we should get 10 + 00 + 00 + 00 + 08 + E0 + 0E + BF + 0F + E5 + 0D + BF + 0F + EF + 07 + BB + 05 + E5 + 00 + 95 + 3C = 700. Dropping the carries (7) gives 00H, which means OK.

Review Questions

- 1. True or false. The Intel Hex file format does not use the checksum byte method to ensure data integrity.
- 2. The first byte of a line in an Intel Hex file represents _____.
- 3. The last byte of a line in an Intel Hex file represents _____.
- 4. In the TT field of an Intel Hex file, we have 00. What does it indicate?
- 5. Find the checksum byte for the following values: 22H, 76H, 5FH, 8CH, 99H.
- 6. In Question 5, add all the values and the checksum byte. What do you get?

SECTION 8.4: AVR PROGRAMMING AND TRAINER BOARD

In this section, we show various ways of loading a hex file into the AVR microcontroller. We also discuss the connection for a simple AVR trainer.

Atmel has skillfully designed AVR microcontrollers for maximum flexibility of loading programs. The three primary ways to load a program are:

- 1. Parallel programming. In this way a device burner loads the program into the microcontroller separate from the system. This is useful on a manufacturing floor where a gang programmer is used to program many chips at one time. Most mainstream device burners support the AVR families: EETools is a popular one. The device programming method is straightforward: The chip is programmed before it is inserted into the circuit. Or, the chip can be removed and reprogrammed if it is in a socket. A ZIF (zero insertion force) socket is even quicker and less damaging than a standard socket. When removing and reinserting, we must observe ESD (electrostatic discharge) procedures. Although AVR devices are rugged, there is always a risk when handling them. Using this method allows all of the device's resources to be utilized in the design. No pins are shared, nor are internal resources of the chip used as is the case in the other two methods. This allows the embedded designer to use the minimum board space for the design.
- 2. An in-circuit serial programmer (ISP) allows the developer to program and debug their microcontroller while it is in the system. This is done by a few wires with a system setup to accept this configuration. In-circuit serial programming is excellent for designs that change or require periodic updating. AVR has two methods of ISP. They are SPI and JTAG. Most of the ATmega family supports both methods. The SPI uses 3 pins, one for send, one for receive, and one for clock. These pins can be used as I/O after the device is programmed. The designer must make sure that these pins do not conflict with the programmer. Notice that SPI stands for "serial peripheral interface" and is a protocol. But ISP stands for "in-circuit serial programming" and is a method of code loading. AVRISP and many other devices support ISP. To connect AVRISP to your device you also need to connect VCC, GND, and RESET pins. You must bring the pins to a header on the board so that the programmer can connect to it. Figure 8-11 shows the pin connections.

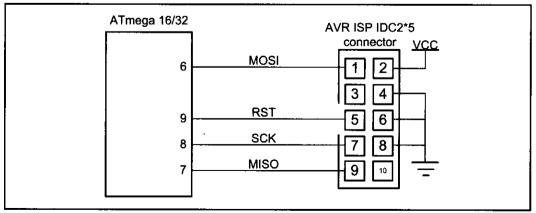


Figure 8-11. ISP 10-pin Connections (See www.Atmel.com for 6-pin version)

Another method of ISP is JTAG. JTAG is another protocol that supports in-circuit programming and debugging. It means that in addition to programming you can trace your program on the chip line by line and watch or change the values of memory locations, ports, or registers while your program is running on the chip.

3. A boot loader is a piece of code burned into the microcontroller's program Flash. Its purpose is to communicate with the user's board to load the program. A boot loader can be written to communicate via a serial port, a CAN port, a USB port, or even a network connection. A boot loader can also be designed to debug a system, similar to the JTAG. This method of programming is excellent for the developer who does not always have a device programmer or a JTAG available. There are several application notes on writing boot loaders on the Web. The main drawback of the boot loader is that it does require a communication port and program code space on the microcontroller. Also, the boot loader has to be programmed into the device before it can be used, usually by one of the two previous ways.

The boot loader method is ideal for the developer who needs to quickly program and test code. This method also allows the update of devices in the field without the need of a programmer. All one needs is a computer with a port that is compatible with the board. (The serial port is one of the most commonly used and discussed, but a CAN or USB boot loader can also be written.) This method also consumes the largest amount of resources. Code space must be reserved and protected, and external devices are needed to connect and communicate with the PC. Developing projects using this method really helps programmers test their code. For mature designs that do not change, the other two methods are better suited.

AVR trainers

There are many popular trainers for the AVR chip. The vast majority of them have a built-in ISP programmer. See the following website for more information and support about the AVR trainers. For more information about how to use an AVR trainer you can visit the www.MicroDigitalEd.com website.

Review Questions

- 1. Which method(s) to program the AVR microcontroller is/are the best for the manufacturing of large-scale boards?
- 2. Which method(s) allow(s) for debugging a system?
- 3. Which method(s) would allow a small company to develop a prototype and test an embedded system for a variety of customers?
- 4. True or false. The ATmega32 has Flash program ROM.
- 5. Which pin is used for reset in the ATmega32?
- 6. What is the status of the RESET pin when it is not activated?

The information about the trainer board can be found at: www.MicroDigitalEd.com

SUMMARY

This chapter began by describing the function of each pin of the ATmega32. A simple connection for ATmega32 was shown. Then, the fuse bytes were discussed. We use fuse bytes to enable features such as BOD and clock source and frequency. We also explained the Intel Hex file format and discussed each part of a record in a hex file using an example. Then, we explained list files in detail. The various ways of loading a hex file into a chip were discussed in the last section. The connections to a ISP device were shown.

PROBLEMS

SECTION 8.1: ATMEGA32 PIN CONNECTION

- 1. The ATmega32 DIP package is a(n) ____-pin package.
- 2. Which pins are assigned to VCC and GND?
- 3. In the ATmega32, how many pins are designated as I/O port pins?
- 4. The crystal oscillator is connected to pins ____ and ____.
- 5. True or false. AVR chips comes only in DIP packages.
- 6. Indicate the pin number assigned to RESET in the DIP package.
- 7. The RESET pin is normally _____ (LOW, HIGH) and needs a _____ (LOW, HIGH) signal to be activated.
- 8. In the ATmega32, how many pins are set aside for the VCC?
- 9. In the ATmega32, how many pins are set aside for the GND?
- 10. True or false. In connecting VCC pins to power both must be connected.
- 11. RESET is an _____ (input, output) pin.
- 12. How many pins are designated as Port A and what are those in the 40-pin DIP package?
- 13. How many pins are designated as Port B and what are those in the 40-pin DIP package?
- 14. How many pins are designated as Port C and what are those in the 40-pin DIP package?
- 15. How many pins are designated as Port D and what are those in the 40-pin DIP package?
- 16. Upon reset, all the bits of ports are configured as _____ (input, output).

SECTION 8.2: AVR FUSE BITS

- 17. How many clock sources does the AVR have?
- 18. What fuse bits are used to select clock source?
- 19. Which clock source do you suggest if you need a variable clock source?
- 20. Which clock source do you suggest if you need to build a system with minimum external hardware?
- 21. Which clock source do you suggest if you need a precise clock source?
- 22. How many fuse bytes are there in the AVR?

- 23. Which fuse bit is used to set the brown-out detection voltage for the ATmega32?
- 24. Which fuse bit is used to enable and disable the brown-out detection voltage for the ATmega32?
- 25. If the brown-out detection voltage is set to 4.0 V, what does it mean to the system?

SECTION 8.3: EXPLAINING THE INTEL HEX FILE FOR AVR

- 26. True or false. The Hex option can be set in AVR Studio.
- 27. True or false. The extended Intel Hex file can be used for ROM sizes of less than 64 kilobytes.
- 28. True or false. The extended Intel Hex file can be used for ROM sizes of more than 64 kilobytes.
- 29. Analyze the six parts of line 3 of Figure 8-10.
- 30. Verify the checksum byte for line 3 of Figure 8-10. Verify also that the information is not corrupted.
- 31. What is the difference between Intel Hex files and extended Intel Hex files?

SECTION 8.4: AVR PROGRAMMING AND TRAINER BOARD

- 32. True or false. To use a parallel programmer, we must remove the AVR chip from the system and place it into the programmer.
- 33. True or false. ISP can work only with Flash chips.
- 34. What are the different ways of loading a code into an AVR chip?
- 35. True or false. A boot loader is a kind of parallel programmer.

ANSWERS TO REVIEW QUESTIONS

SECTION 8.1: ATMEGA32 PIN CONNECTION

- 1. 9
- 2. 0
- 3. False
- 4. LOW
- 5. 2.7 V-5.5 V

SECTION 8.2: AVR FUSE BITS

- 1. 1/16 MHz = 62.5 ns
- 2. 16 bits = 2 bytes
- 3. False
- 4. 1, 8
- BODEN
- 6. False
- 7. If you are using an external crystal with a frequency of more than 1 MHz you can set the CKSEL3, CKSEL2, CKSEL1, SUT1, and SUT0 bits to 1 (not programmed) and clear CKOPT to 0 (programmed).
- 8. 2.7 V, 4 V, BODLEVEL
- 9. False

SECTION 8.3: EXPLAINING THE INTEL HEX FILE FOR AVR

- 1. False
- 2. The number of bytes of data in the line
- 3. The checksum byte of all the bytes in that line
- 4. 00 means this is not the last line and that more lines of data follow.
- 5. 22H + 76H + 5FH + 8CH + 99H = 21CH. Dropping the carries we have 1CH and its 2's complement, which is E4H.
- 6. 22H + 76H + 5FH + 8CH + 99H + E4H = 300H. Dropping the carries, we have 00, which means that the data is not corrupted.

SECTION 8.4: AVR PROGRAMMING AND TRAINER BOARD

- 1 Device burner
- 2. JTAG and boot loader
- 3. ISP
- 4. True
- 5. Pin 9
- 6. HIGH