

# EMBSYS 105 Programming with Embedded & Real-Time Operating Systems

Instructor: Nick Strathy, nstrathy@uw.edu

TA: Gideon Lee, gideonhlee@yahoo.com

© N. Strathy 2020


1/6/2020

PROFESSIONAL &
CONTINUING EDUCATION
UNIVERSITY of WASHINGTON

Introductions #hello my name is...

when u first start talking to someone and u act all proper bc u ain't sure when u can start being weird

Wearers Name Job Title Here

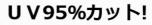








### Course requirements


- Participation must attend at least 6 of the 10 lectures
  - Attendance is verified using a weekly class quiz which does NOT count for your grade
- 60% for 5 assignments (individual effort)
- 40% for course project (individual effort)
- Don't post solutions in the discussion forum
- Using code that you find on the web is fine just mention your source.


#### Textbooks


#### Required

- MicroC/OS-II The Real-Time Kernel, Second Edition, 2002, Jean J. Labrosse. The PDF is available online: <a href="https://doc.micrium.com/download/attachments/10753158/100-uC-OS-II-002.pdf">https://doc.micrium.com/download/attachments/10753158/100-uC-OS-II-002.pdf</a>
- The Definitive Guide to ARM Cortex-M3 and Cortex-M4 Processors 3rd ed., Joseph Yiu, Elsevier, 2014.
- Useful for reference
  - An Embedded Software Primer, David E. Simon, Addison-Wesley 1999
  - Modern Operating Systems Fourth Edition, Andrew
     S. Tanenbaum, Herbert Bos, Prentice Hall, 2014

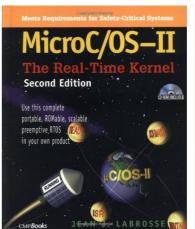

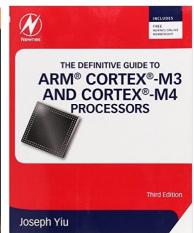

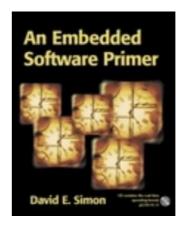

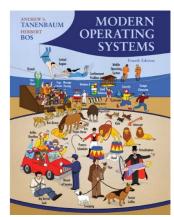

### Looking ahead

- Assignments are due Sundays
- 1/12/2020 11:59 PM Assignment 1 due
- We have two holidays:
  - January 20 no class
  - February 17 no class
- Please make sure your Canvas settings are configured to receive email announcements and discussions for this course

### Handy page of reference links on Canvas

https://canvas.uw.edu/courses/1347174/pages/embsys-105-resources

- Contains
  - Links to the reference documents for this course
  - Link to the version of IAR EWARM for this course:
    - https://1drv.ms/u/s!Ahm13wmWGad-jCcuCl4eTXwHQ5iQ?e=6eFvZy

### EMBSYS 105 Goals

- Embedded Operating Systems
  - Port MicroC/OS-II to the NUCLEO-F401RE development board
  - Program a multitasking system
  - Develop event-driven systems
  - Develop hardware/software APIs
- Device Drivers
  - Use a device driver framework
  - Understand and use a standard device driver API
- Course Project
  - Put it all together to document, design, develop, test and debug an MP3 player.

### Week 1 Overview

- Embedded Operating System Concepts Part 1 (Labrosse Chapter 2)
  - Foreground/Background Systems
  - Shared resources
  - Critical sections
  - Multitasking
  - Tasks
  - Context switching
- ARM Review (Yiu Chapters 4, 8)
  - States and Modes
  - Registers
  - Assembly language instructions
  - Interrupt semantics
- Assignment 1 uDebugger tool (due in 1 week)

### Embedded operating system conceptsWhat is an operating system (OS)?

- - Fundamentally it provides a layer of software abstraction above the hardware
  - i.e. provides a set of software interfaces between applications and the hardware

Application programs **Operating System** Hardware

- Before we get to Embedded OSes, what is a "Platform OS"?
  - Examples: Linux, Mac OS X, Windows, etc.
  - General purpose platform for application programs to run on
  - File system
  - Multitasking
  - Memory management
  - Security user mode vs kernel mode
  - etc.
  - Cost of generality/flexibility: no hard timing guarantees

- An Embedded OS is some subset of a Platform OS
  - Features of the OS are restricted by
    - Limited hardware small memory, small processor, limited I/O capabilities, etc.
    - Only a narrow range of functionality is required for such devices as thermostat, microwave oven, wrist watch, etc.
  - Hard real time commitments may be required
    - Requires a real-time OS
      - Guaranteed interrupt latency
      - Examples: medical devices, flight controls, antilock brakes, etc.


### Embedded operating system • Example: Foreground/Background OS

- - A simple embedded OS
  - The OS is modeled by two components, a "foreground" and "background" component
  - The background component consists of a "super loop" that runs the ongoing monitoring and functionality of the system in an infinite loop
  - The foreground component consists of interrupt service routines (ISRs) that provide timely responses to external inputs
  - In the simplest case where nested interrupts are not supported we have at most 2 "threads of execution" - the background thread and the foreground (ISR) thread.

### Embedded operating system CONCEPTS Foreground/Background OS example: Thermostat

• Super loop runs in background, interrupt service routines run in foreground

```
uint32_t currentTemperature;
uint32_t temperatureSetting;
while (1) { /* super loop - runs in background */
    /* update currentTemperature from sensor */
    /* update display from currentTemperature */
    /* update display from temperatureSetting */
    /* update heater on/off signal */
}
ISR ButtonUpArrow { /* runs in foreground */
    temperatureSetting++;
ISR ButtonDownArrow { /* runs in foreground */
    temperatureSetting--;
}
```

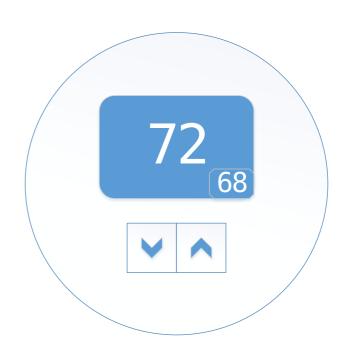

### Embedded operating system CONCEPTS Shared resource problems in multithreaded systems

- Any system that allows interrupts can have multiple threads of execution
- Problems can easily arise when multiple threads access the same resource e.g. global variable race conditions
- The integrity of the shared resource can be corrupted if interrupts occur while multiple threads are operating on the shared resource
- Thermostat example
  - Shared resource: temperatureSetting (global variable)
  - Say we want to enforce a saturation value of 90 degrees on temperatureSetting to prevent it from being set any higher
  - Need to correctly handle updates on the temperatureSetting global variable
  - Let's look at a wrong way of handling the updates ...

### Embedded operating system ConceptsExample of buggy update of a shared resource

- The intention was to stop temperatureSetting from exceeding 90

```
uint32 t temperatureSetting;
uint32 t i;
while (1) {
    if (temperatureSetting == 91) {
       for (i=10000;i;i--); /* artificial delay */
       temperatureSetting = temperatureSetting - 1;
ISR ButtonUpArrow { /* runs in foreground */
   temperatureSetting++;
```

If the setting happens to be 90 and we click the up-arrow button rapidly we can in principle interrupt the if block three times in quick succession and increment the setting up to 92. We've even added an artificial delay to make sure it happens!

A fix for this instance of buggy resource sharing

```
uint32_t i;
while (1) { /* super loop */
    if (temperatureSetting == 91 > 90) {
        for (i=10000;i;i--); /* artificial delay */
        temperatureSetting = temperatureSetting - 1;
        temperatureSetting = 90;
    }
}
ISR_ButtonUpArrow { /* runs in foreground */
    temperatureSetting++;
}
```

Now, even though the if block gets interrupted it will always ensure that the setting is 90 or less.

however this problem and its solution are ad hoc, so ...

### Embedded operating system CONCEPTS Let's get more formal about handling shared resources.

#### **Critical section:**

- Definition: a critical section is a section of code that accesses a shared resource and may be executed by only one thread at a time.
- Critical sections are said to be atomic, meaning a CS cannot be executed by more than one thread at a time.
- A CS enforces mutual exclusion meaning any thread executing in a CS excludes all other threads from entering the CS.
- Even if a thread is interrupted during a critical section, no other thread may enter the CS until the first thread has resumed and exited it.

Example of code that requires a critical section

 Code that may be executed by multiple threads and accesses a shared resource needs to be thread safe

```
int gCount = 0; // global var
...
   // should be in a critical section:
   gCount++;
```

Some ways of enforcing mutual exclusion in critical sections

• Disable interrupts: this is the easiest way and is fine if critical sections are short and don't interfere with real time constraints.

```
int gCount = 0; // global var
...
    disableInterrupts(); // call a function that disables
interrupts
    gCount++;
enableInterrupts(); // call a function that enables interrupts
```

#### Some ways of enforcing mutual exclusion in critical sections

#### Test-and-set

- To enter the CS, a thread polls a shared variable x whose default value is 0
- Any thread desiring to enter the CS should only do so if x==0
- If x==0, the thread sets x=1 and enters the CS otherwise tries again later
- On exit from the CS the thread sets x=0
- Problem: the thread can't get interrupted between testing and setting
- Typically implemented at the assembly language level using an atomic SWAP instruction (ARM7 provides SWP swap a word from memory with a register without interruption)

#### Some ways of enforcing mutual exclusion in critical sections

```
Sample critical section code using test-and-set "spin lock"
int gCount = 0; // global var to be protected
int gTSLock = 0; // global test-and-set lock var
...
  while (testAndSet(&gTSLock) != 0) { /* spin */ };
    // if we arrive here we are in critical section
    gCount++;
    gTSLock = 0;
```

Some ways of enforcing mutual exclusion in critical sections

test-and-set implementation using swap instruction (not on Cortex-M)

Some ways of enforcing mutual exclusion in critical sections

Test-and-set implementation for Cortex M4

- Roughly the same sequence but more complicated to allow for a multi-processor environment
- Instead the atomic swap is achieved with an instruction pair
  - LDREX load exclusive gets current lock value
  - STREX store exclusive stores value to lock and returns status

#### Some ways of enforcing mutual exclusion in critical sections

Cortex-M4 does not have swap instruction. Instead: LDREX/STREX

```
get_lock
                                                   try_lock
  LDR RO, =Lock Variable; Get address of
                                                      MOVS R1, #1
                          : lock variable
                                                      STREX R2, R1, [R0]; Try lock by writing 1, if
  LDREX R1, [R0]; Read current lock value
                                                       ; exclusive access failed, return status is 1 and
  DMB; Data Memory Barrier, Make sure
                                                       ; the write is not carried out
       ; memory transfer completes before
                                                      DMB; Data Memory Barrier
       ; next one starts
                                                      CBZ R2, lock done; Return status is 0, indicates
  CBZ R1, try lock
                                                                          that lock process succeeded
  B get lock; Lock was set by another task,
                                                      B get lock; locking process failed, retry
             ; try again
                                                    lock_done
                                                      BX LR; return
```

## Embedded operating system concepts some ways of enforcing mutual exclusion in critical sections

- Semaphore (more later, but for now):
  - A more comprehensive thread synchronization mechanism invented by Edsger Dijkstra in the mid-1960s.
  - An operating system service consisting of a counter variable, a thread queue, and methods for operating on them.
  - The counter is initialized to 1 for a mutually exclusive critical section
  - If the counter is greater than 0, a thread may atomically decrement it and enter the CS
  - If the counter is 0, any thread wishing to enter the CS is suspended and added to the semaphore's queue
  - When a thread exits the CS, it attempts to atomically increment the counter
  - If there are any threads in the queue, the first is resumed and enters the CS, otherwise the counter is incremented

#### Some ways of enforcing mutual exclusion in critical sections

```
Sample critical section code using a mutual exclusion semaphore
int gCount = 0; // global var
Semaphore mySem;
...
    semInitialize(mySem, 1); // initialize mySem's counter to 1
...
    semWait(mySem); // decrement mySem's counter
        gCount++; // safely update the shared resource
    semSignal(mySem); // increment mySem's counter
```

### Embedded operating system CONCEPTS Thread, Process, Task

- Thread
  - A light weight unit of data and code that typically shares data and code with other threads
- Process
  - a heavy weight unit of data and code found typically in a platform OS rather than an embedded OS
  - May spawn multiple threads of its own which execute within the process
  - Memory and other resources are not shared between processes
  - Example: a web browser application
- Task
  - Depending on the context, either a process or a thread. In the context of this course it is a thread. MicroC/OS-II uses "task", so we will usually use that term.

## Embedded operating system concepts Multitasking

- A disciplined way of <u>scheduling</u> and <u>switching</u> the CPU between multiple <u>tasks</u>.
- Same as multithreading
- Simplifies the design, implementation and management of complex interconnected threads of execution

#### **Task**

- Same as thread in this course
- A unit of data and code that can be scheduled to execute on the CPU
- Typically, an infinite loop that handles one of the subdivisions of work in the overall embedded system. Each cycle through the loop handles one instance of the work unit after which the thread is suspended till it is needed again
- Task Control Block (TCB)
  - The data structure used by a multitasking system to manage each task
  - At a minimum it contains
    - Stack pointer for the task's own stack
    - Status of the task

Task status (using MicroC/OS-II terminology)

- dormant in memory but not available for scheduling
- ready available for scheduling
- running has control of the CPU only one task at a time is ever in this state on a single processor system
- waiting known to the scheduler but waiting for an event
- ISR (interrupted) was running but currently waiting for ISR to complete

#### **Context switching**


Term for the sequence of steps for transferring control of the CPU from one task to another

- 1. Store all the registers (context) of the current task in the task's private memory area
- 2. Restore the registers of the new task from its private memory area and resume execution of the new task.

### Quiz and break

- Do this evening's online quiz in Canvas
- Then take a brief break

### ARM Cortex-M4 review

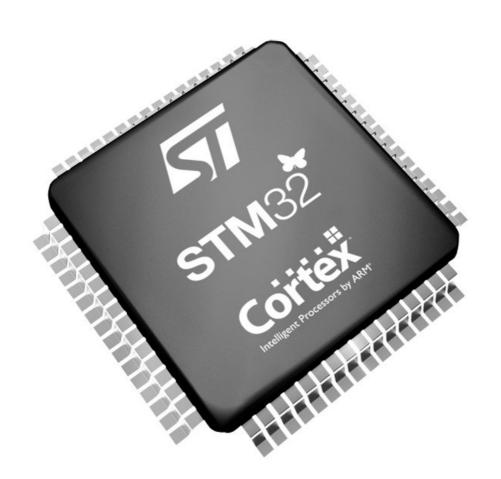

### ST NUCLEO-F401 development board

#### ST Nucleo-F401RE

- LEDs
- Buttons
- USB
- + much more by adding other shields.

#### STM32F401RE SoC

- 96 kB SRAM
- 512 kB flash
- Timers
- GPIO
- Interfaces
- etc.

#### Cortex-M4 processor

- ARMv7E-M arch.
- NVIC
- FPU
- MPU

### ARM Cortex-M4 processor

- 2010 original release
- Three-stage instruction pipeline: fetch, decode, execute
- Harvard bus architecture: instruction-fetch, data-read/write in parallel
- 32-bit addressing, 4GB memory space
- Nested Vectored Interrupt Controller (NVIC): automatically saves a large subset of the context when handling interrupts
- Thumb (16-32-bit) instruction set: denser code than ARM (32-bit-only) instruction set
- Many more features

### Cortex-M4 States and Modes

The processor is always in one of two possible operation states, and one of two possible operation modes. Additionally, it can be in one of two access levels which controls which registers and instructions are accessible.

#### **Operation States**


- Debug state: the processor is halted by the debugger after hitting a breakpoint.
- Thumb state: the processor is executing instructions. It only executes Thumb (16-32-bit) instructions. Other ARM processors can execute ARM (32-bit) instructions.

#### **Operation Modes**

- Handler mode: This mode is entered when an interrupt is triggered.
- Thread mode: this mode is entered on reset and upon returning from an interrupt handler.

#### **Access Levels**

- Privileged level: This level is always entered on reset and whenever Handler mode is entered.
- Unprivileged level: this level may be entered when in privileged level however the only way to enter privileged level from unprivileged is by triggering an interrupt.

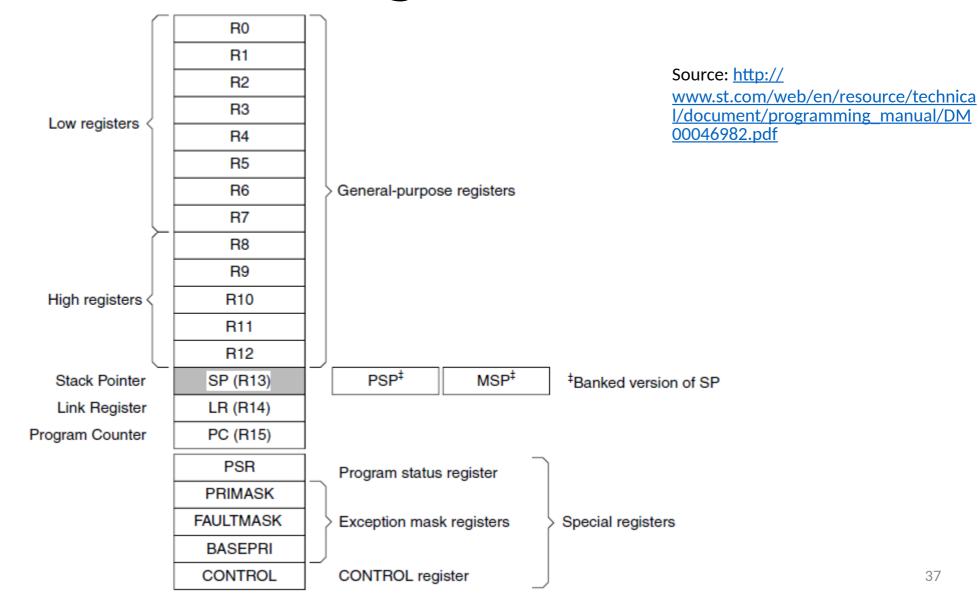


### General Purpose registers (RO-R12)

Accessible in Thread and Handler mode and privileged and unprivileged level

### Stack Pointer (SP)

- MSP, SP\_main: accessible only in privileged level, so always accessible in Handler mode, only accessible in privileged Thread mode
- PSP, SP\_process: accessible in either privileged or unprivileged level. This is the stack pointer used when in unprivileged Thread mode.
- Unless your application is a multi-user system you probably don't need to run in unprivileged thread mode and thus don't need to use SP\_process.
- For our applications we will only run at privileged level using the main stack pointer. This means handlers and application threads will all use the main stack pointer.

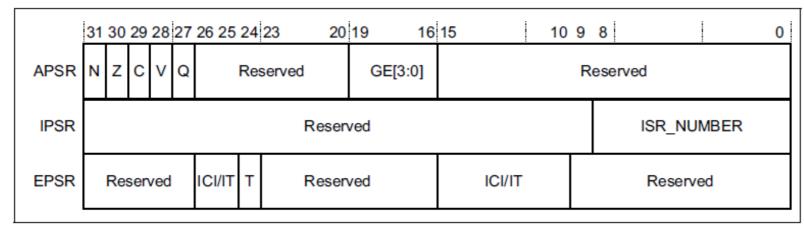


Source: http://

www.st.com/web/en/resource/technica l/document/programming\_manual/DM

00046982.pdf

### Figure 4. PSR bit assignments

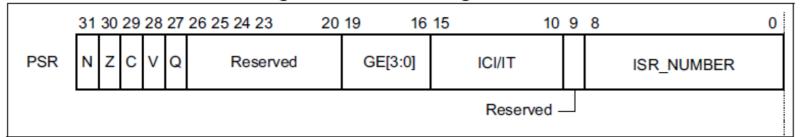

PSR reset value: 0x01000000 which means thumb state, no interrupts active, no flags set

### Exception Mask Registers (PRIMASK, FAULTMASK, BASEPRI)

Privileged level required to access

### Priority Mask (PRIMASK)

• 1-bit: 0 means no effect, 1 means all exceptions with configurable priority are prevented. Processor faults are still enabled, eg bad memory address.

### Fault Mask (FAULTMASK)

• 1-bit: 0 means no effect, 1 means all exceptions except for non-maskable interrupt (NMI) are prevented.

### Base Priority Mask (BASEPRI)

 8-bits. 0x00 means no effect, otherwise the processor does not process any exception with a priority value greater than or equal to BASEPRI.

### Control Register (CONTROL)

Privileged level required to access

| Bits      | Function   |
|-----------|--|
| Bits 31:3 | Reserved   |
| Bit 2     | FPCA: Indicates whether floating-point context currently active:  0: No floating-point context active  1: Floating-point context active.  The Cortex-M4 uses this bit to determine whether to preserve floating-point state when processing an exception.                  |
| Bit 1     | SPSEL: Active stack pointer selection. Selects the current stack:  0: MSP is the current stack pointer  1: PSP is the current stack pointer.  In Handler mode this bit reads as zero and ignores writes. The Cortex-M4 updates this bit automatically on exception return. |
| Bit 0     | nPRIV: Thread mode privilege level. Defines the Thread mode privilege level.  0: Privileged  1: Unprivileged.  |

### Review of a subset of instructions

- Moving data within the processor
- Moving data to/from memory
- Stack operations
- Arithmetic operations
- Branch instructions
- Conditional execution suffixes

### Moving data within the processor

```
MOV destination, source ; copy source to destination

MOV R0, R1 ; copy R1 to R0

MOVS R0, R1 ; copy R1 to R0, update APSR flags

MOV R7, #1 ; copy the value 1 to R7
```

### Moving data to/from memory

```
LDR register, memory ; load register contents from memory

STR register, memory ; store register contents to memory

LDR RO, [R1] ; copy memory contents to RO, address is given by R1

STR RO, [R1] ; copy RO to memory, address is given by R1

LDR RO, [R1, #4] ; address is R1+4 (pre-index), R1 is not updated

LDR RO, [R1, #4]! ; address is R1+4 (pre-index), R1 is updated to R1+4 (write back)

LDR RO, [R1], #4 ; address is R1, then R1 is updated to R1+4 after memory access (post-index)
```

### Stack operations

```
PUSH {register list} ; push the list of registers to memory using SP, SP is updated ; pop the list of registers from memory using SP, SP is updated PUSH {RO-R4,R12} ; push the given registers to memory using SP, SP is updated ; pop the given registers from memory using SP, SP is updated ; pop the given registers from memory using SP, SP is updated ; pop the given registers from memory using SP, SP is updated ; equivalent to the above PUSH ; equivalent to the above POP
```

- Full Descending stack convention is the ARM default.
- Registers are stored such that higher register numbers are placed in higher memory addresses

# STM and LDM instructions for stack operations

- FD = Full Descending
  - STMFD/LDMFD = STMDB/LDMIA (DB = decrement before, IA = increment after)
- ED = Empty Descending
  - STMED/LDMED = STMDA/LDMIB
- FA = Full Ascending
  - STMFA/LDMFA = STMIB/LDMDA
- EA = Empty Ascending
  - STMEA/LDMEA = STMIA/LDMDB
- In practice anything other than full descending convention is rare!

# Cortex-M4 Assembly Language

Arithmetic operations (add, subtract, multiply, divide)

```
ADD destination, operand1, operand2
```

```
ADD R0, R0, R1 ; R0 = R0 + R1
ADD R0, R1, #25 ; R0 = R1 + 25
ADDS R0, R1, #25 ; R0 = R1 + 25, then update APSR flags
```

# Cortex-M4 Assembly Language

### **Branch instructions**

B: simple branch

B MyLabel

BL: branch and link for procedure calls, return address is stored in LR

BL MyProcedure

BX: branch and exchange updates PSR, used for return from procedure/ISR

• BX LR

# Conditional Mnemonics

| Mnemonic extension | Meaning  | Condition flag state  Z set   |  |
|--------------------|--|---|--|
| EQ                 | Equal  |   |  |
| NE                 | Not equal  | Z clear   |  |
| CS/HS              | Carry set/unsigned higher or same  | d higher or same C set  |  |
| CC/LO              | Carry clear/unsigned lower C clear   |   |  |
| MI                 | Minus/negative   | N set   |  |
| PL                 | Plus/positive or zero N clear  |   |  |
| vs                 | Overflow V set   |   |  |
| VC                 | No overflow V clear  |   |  |
| ні                 | Unsigned higher  | C set and Z clear   |  |
| LS                 | Unsigned lower or same   | Unsigned lower or same C clear or Z set                                 |  |
| GE                 | Signed greater than or equal   | N set and V set, or<br>N clear and V clear (N == V)                     |  |
| LT                 | Signed less than   | N set and V clear, or<br>N clear and V set (N != V)                     |  |
| GT                 | Signed greater than $Z$ clear, and either N set and V set $N$ clear and $V$ clear ( $Z == 0, N == 0$ ) |   |  |
| LE                 | Signed less than or equal  | Z set, or N set and V clear, or<br>N clear and V set (Z == 1 or N != V) |  |
| AL                 | Always (unconditional)   | -   |  |

### Exception semantics

- On entry to an exception the hardware is in Thumb state, Handler Mode, privileged level.
- The following 8 registers are stacked using SP:
- R0-R3, R12, LR, PC, PSR
- Lazy stacking: if FPU is active, the FPU registers are also stacked
- Return from exception is done by
  - BX EXC\_RETURN
  - EXC\_RETURN is the value loaded into LR on entry to the exception

# Exception semantics

| EXC_RETURN[31:0] | Description  |  |  |
|------------------|--|--|--|
| 0xFFFFFFF1       | Return to Handler mode, exception return uses non-floating-point state from the MSP and execution uses MSP after return. |  |  |
| 0xFFFFFF9        | Return to Thread mode, exception return uses non-floating-point state from MSP and execution uses MSP after return.      |  |  |
| 0xFFFFFFD        | Return to Thread mode, exception return uses non-floating-point state from the PSP and execution uses PSP after return.  |  |  |
| 0xFFFFFE1        | Return to Handler mode, exception return uses floating-point-state from MSP and execution uses MSP after return.         |  |  |
| 0xFFFFFE9        | Return to Thread mode, exception return uses floating-point state from MSP and execution uses MSP after return.          |  |  |
| 0xFFFFFED        | Return to Thread mode, exception return uses floating-point state from PSP and execution uses PSP after return.          |  |  |


# ARM procedure call standard

| Register | Synonym | Special        | Role in the procedure call standard  |
|----------|---------|----------------|--|
| r15      |         | PC             | The Program Counter.   |
| r14      |         | LR             | The Link Register.   |
| r13      |         | SP             | The Stack Pointer.   |
| r12      |         | IP             | The Intra-Procedure-call scratch register.   |
| r11      | v8      |                | Variable-register 8.   |
| r10      | v7      |                | Variable-register 7.   |
| r9       |         | v6<br>SB<br>TR | Platform register. The meaning of this register is defined by the platform standard. |
| r8       | v5      |                | Variable-register 5.   |
| r7       | v4      |                | Variable register 4.   |
| r6       | v3      |                | Variable register 3.   |
| r5       | v2      |                | Variable register 2.   |
| r4       | v1      |                | Variable register 1.   |
| r3       | a4      |                | Argument / scratch register 4.   |
| r2       | a3      |                | Argument / scratch register 3.   |
| r1       | a2      |                | Argument / result / scratch register 2.  |
| r0       | a1      |                | Argument / result / scratch register 1.  |

# Review Cortex-M4 exception handling in uDebugger homework

- Download uDebugger.zip
- Unzip
- Load the workspace into EWARM
- Start up Tera Term with baud rate 38400
- Run the project notice the "Fail" message in serial terminal
- Refer to the following memory map to find an invalid address to substitute in GenerateFault() in main.c
- Explore the exception handler HardFaultIrqHandler in startup.s
- Your assignment for next week is to fill in missing code as specified in the assignment instructions.

# Memory Map (detail)

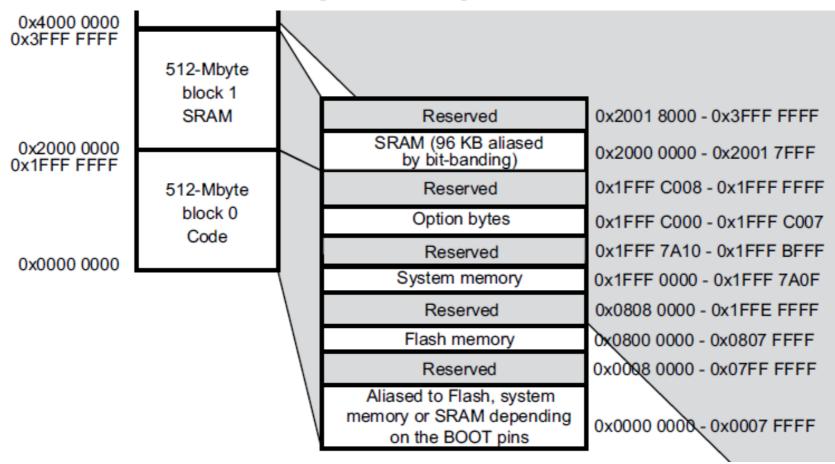

Source: http://www.st.com/st-web-ui/static/active/en/resource/technical/document/datasheet/DM00102166.pdf