

VIENNA UNIVERSITY OF TECHNOLOGY

Institute of Applied Physics

SURFACE SCIENCE

Bachelors Thesis

Title

Author: Martin Kronberger

Supervisor:

January 1, 2025

Declaration of Authorship

Martin Kronberger

I hereby declare that I have written this thesis independently and that I have fully acknowledged all the sources and aids used. Furthermore, I confirm that I have marked as borrowed any parts of this work (including tables, maps, and figures) that are taken from other works or from the internet, either verbatim or in spirit, giving explicit reference to the source.

I further declare that large language models were used solely to assist with formatting, providing code snippets, and helping to resolve minor technical issues. These models did not contribute to the research content, analyses, interpretations, conclusions, or any intellectual substance of this thesis.

Martin Kronberger Vienna, 1 January 2025

${\bf Acknowledgements}$

Danksagung

Abstract

Kurzfassung

Contents

3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 23 3.6 Under-expanded nozzle plume at outlet 25 Discussion Conclusion 36 Symbols and Notation 36 Primary Symbols and Definitions 33 Subscripts 35 Notations 35 Formulary 36 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 36 A Code 47 A.1 Calculations - SMath 46 A.2.1 Sutherland minimum mean square error - Python 44	1	Scop	pe and objectives	•
1.3 Behavior of the gas around the sample 4 1.4 Velocity distribution at the outlet 4 2 Foundational Principles 5 2.1 Characteristic Length 5 2.2 Turbulence and the Reynolds number 6 2.3 Rarefaction and the Knudsen number 6 2.4 Dimension of the flow 8 2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 11 3.2 Expected flow regimes 13 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 2 3.5 Impact of the leak 2 3.6 Under-expanded nozzle plume at outlet 2 Discussion 26 Conclusion 3 Symbols and Notation 3 Primary Symbols and Definitions 3 Subscripts 3 Notations 3 Formulary 3 Thermodynamics 3		1.1	Type of Flow	•
1.4 Velocity distribution at the outlet 2 2 Foundational Principles 5 2.1 Characteristic Length 5 2.2 Turbulence and the Reynolds number 6 2.3 Rarefaction and the Knudsen number 6 2.4 Dimension of the flow 8 2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 11 3.2 Expected flow regimes 13 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 2 3.5 Impact of the leak 2 3.6 Under-expanded nozzle plume at outlet 2 Discussion 28 Conclusion 30 Symbols and Notation 3 Primary Symbols and Definitions 3 Subscripts 3 Notations 3 Formulary 3 Thermodynamics 3 Control Volume Analysis 3 Control Volume Analysis 3 Continuous one-dimensional flow 3 List of Tables 3 <tr< td=""><td></td><td>1.2</td><td>Impact of the leak</td><td>•</td></tr<>		1.2	Impact of the leak	•
2 Foundational Principles 3 2.1 Characteristic Length 5 2.2 Turbulence and the Reynolds number 6 2.3 Rarefaction and the Knudsen number 6 2.4 Dimension of the flow 8 2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 11 3.2 Expected flow regimes 15 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 22 3.6 Under-expanded nozzle plume at outlet 22 Discussion Conclusion Symbols and Notation Primary Symbols and Definitions 3 Subscripts 3 Notations 3 Formulary Thermodynamics 3 Control Volume Analysis 3 Cotto Tables		1.3		4
2.1 Characteristic Length 3 2.2 Turbulence and the Reynolds number 6 2.3 Rarefaction and the Knudsen number 6 2.4 Dimension of the flow 8 2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 12 3.2 Expected flow regimes 14 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 2 3.5 Impact of the leak 2 3.6 Under-expanded nozzle plume at outlet 2 Discussion 26 Conclusion 3 Symbols and Notation 3 Primary Symbols and Definitions 3 Subscripts 3 Notations 3 Formulary 3 Thermodynamics 3 Control Volume Analysis 3 Continuous one-dimensional flow 3 List of Tables 3 References 3 A Code 4 A.1 Calculations - SMath 4 A.2.1 Sutherland minimum mean square		1.4	Velocity distribution at the outlet	4
2.2 Turbulence and the Reynolds number 6 2.3 Rarefaction and the Knudsen number 6 2.4 Dimension of the flow 8 2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 11 3.2 Expected flow regimes 12 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 2 3.5 Impact of the leak 2 3.6 Under-expanded nozzle plume at outlet 2 Discussion Conclusion 30 Symbols and Notation 3 Primary Symbols and Definitions 3 Subscripts 3 Notations 3 Formulary 3 Thermodynamics 3 Control Volume Analysis 3 Continuous one-dimensional flow 3 List of Tables 3 References 3 A Code 4	2	Fou	ndational Principles	
2.3 Rarefaction and the Knudsen number 6 2.4 Dimension of the flow 8 2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 11 3.2 Expected flow regimes 12 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 22 3.6 Under-expanded nozzle plume at outlet 22 Discussion Conclusion 36 Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 35 Notations 33 Formulary Thermodynamics 33 Control Volume Analysis 35 Continuous one-dimensional flow 33 List of Figures 36 List of Tables 37 References 36 A Code 41 A.1 Calculations -		2.1	Characteristic Length	,
2.4 Dimension of the flow 2.5 Isentropic one-dimensional flow 3 Analytical work 13 3.1 Geometry and characteristics of the components 15 3.2 Expected flow regimes 16 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 22 3.6 Under-expanded nozzle plume at outlet 25 Discussion 26 Conclusion 30 Symbols and Notation 32 Primary Symbols and Definitions 33 Notations 33 Notations 33 Formulary 35 Thermodynamics 33 Control Volume Analysis 33 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 36 References 36 A Code 41 A.1 Calculations - SMath 42 A.2.1 Sutherland minimum mean square error - Python 44		2.2	Turbulence and the Reynolds number	(
2.5 Isentropic one-dimensional flow 8 3 Analytical work 11 3.1 Geometry and characteristics of the components 12 3.2 Expected flow regimes 13 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 22 3.6 Under-expanded nozzle plume at outlet 22 Discussion 26 Conclusion 30 Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 33 Notations 33 Formulary 35 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 36 A Code 41 A.1 Calculations - SMath 42 A.2.1 Sutherland minimum mean square error - Python 44		2.3		(
3 Analytical work 13 3.1 Geometry and characteristics of the components 15 3.2 Expected flow regimes 16 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 22 3.6 Under-expanded nozzle plume at outlet 25 Conclusion Symbols and Notation Primary Symbols and Definitions 32 Subscripts 33 Notations 33 Formulary Thermodynamics 33 Control Volume Analysis 33 Continuous one-dimensional flow 33 List of Figures 36 List of Tables 35 References 36 A Code 41 A.1 Calculations - SMath 44 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		2.4		
3.1 Geometry and characteristics of the components 11 3.2 Expected flow regimes 12 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 2 3.5 Impact of the leak 2 3.6 Under-expanded nozzle plume at outlet 2 Discussion Conclusion Symbols and Notation Primary Symbols and Definitions 3 Subscripts 3 Notations 3 Formulary Thermodynamics 3 Control Volume Analysis 3 Continuous one-dimensional flow 3 List of Figures 3 List of Tables 3 References 3 A Code 4 A.1 Calculations - SMath 4 A.2 Python 4 A.2.1 Sutherland minimum mean square error - Python 4 3.3 Subscripts 4 4.2 Sutherland minimum mean square error - Python 4		2.5	Isentropic one-dimensional flow	8
3.2 Expected flow regimes 13 3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 25 3.6 Under-expanded nozzle plume at outlet 26 Conclusion Symbols and Notation 36 Primary Symbols and Definitions 35 Subscripts 35 Notations 35 Formulary Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 39 A Code 41 A.1 Calculations - SMath 4 A.2 Python 4 A.2.1 Sutherland minimum mean square error - Python 4	3	Ana	lytical work	.1
3.3 One-dimensional isentropic variable area flow 18 3.4 Flow behaviors in micro channels 21 3.5 Impact of the leak 22 3.6 Under-expanded nozzle plume at outlet 22 Discussion 26 Conclusion 36 Symbols and Notation 36 Primary Symbols and Definitions 35 Subscripts 35 Notations 35 Formulary 36 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 39 A Code 41 A.1 Calculations - SMath 44 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		3.1	Geometry and characteristics of the components	1
3.4 Flow behaviors in micro channels 22 3.5 Impact of the leak 23 3.6 Under-expanded nozzle plume at outlet 25 Discussion Conclusion 36 Symbols and Notation 36 Primary Symbols and Definitions 35 Subscripts 35 Notations 35 Formulary 36 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 36 A Code 47 A.1 Calculations - SMath 44 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		3.2	Expected flow regimes	13
3.5 Impact of the leak 2: 3.6 Under-expanded nozzle plume at outlet 2: Discussion Conclusion 36 Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 35 Notations 35 Formulary 35 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 36 A Code 47 A.1 Calculations - SMath 44 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		3.3	One-dimensional isentropic variable area flow	18
3.6 Under-expanded nozzle plume at outlet 27 Discussion 28 Conclusion 36 Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 35 Notations 35 Formulary 36 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 35 A Code 47 A.1 Calculations - SMath 47 A.2.1 Sutherland minimum mean square error - Python 44		3.4	Flow behaviors in micro channels	2
Discussion 25 Conclusion 36 Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 35 Notations 35 Formulary 36 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 35 A Code 47 A.1 Calculations - SMath 47 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		3.5	Impact of the leak	2;
Conclusion 36 Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 35 Notations 35 Formulary 35 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 36 References 39 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		3.6	Under-expanded nozzle plume at outlet	27
Symbols and Notation 32 Primary Symbols and Definitions 33 Subscripts 35 Notations 36 Formulary 36 Thermodynamics 36 Control Volume Analysis 36 Continuous one-dimensional flow 36 List of Figures 36 List of Tables 37 References 39 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44	Di	scus	sion 2){
Primary Symbols and Definitions 35 Subscripts 35 Notations 35 Formulary 35 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 36 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44	Co	onclu	sion 3	30
Subscripts 35 Notations 36 Formulary 35 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 36 A Code 47 A.1 Calculations - SMath 47 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44	$\mathbf{S}\mathbf{y}$	mbo	ls and Notation 3	32
Notations 32 Formulary 33 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 39 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		Prim	nary Symbols and Definitions	32
Formulary 33 Thermodynamics 35 Control Volume Analysis 35 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 36 A Code 47 A.1 Calculations - SMath 47 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		Subs	m scripts	32
Thermodynamics 33 Control Volume Analysis 35 Continuous one-dimensional flow 36 List of Figures 36 List of Tables 37 References 38 A Code 47 A.1 Calculations - SMath 47 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44		Nota	ations	32
Thermodynamics 33 Control Volume Analysis 35 Continuous one-dimensional flow 36 List of Figures 36 List of Tables 37 References 38 A Code 47 A.1 Calculations - SMath 47 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44	Fo	rmul	lary 3	33
Control Volume Analysis 33 Continuous one-dimensional flow 35 List of Figures 36 List of Tables 37 References 38 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44				
Continuous one-dimensional flow 33 List of Figures 36 List of Tables 37 References 39 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44				3:
List of Tables 37 References 38 A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44				
References A Code 41 A.1 Calculations - SMath 42 A.2 Python 44 A.2.1 Sutherland minimum mean square error - Python 44	Li	st of	Figures 3	36
A Code 41 A.1 Calculations - SMath 42 A.2 Python 42 A.2.1 Sutherland minimum mean square error - Python 42	Li	st of	Tables 3	37
A Code 41 A.1 Calculations - SMath 42 A.2 Python 42 A.2.1 Sutherland minimum mean square error - Python 42	Re	efere	nces 3	3.5
A.1 Calculations - SMath				
A.2 Python	A			
A.2.1 Sutherland minimum mean square error - Python				
		A.2	v	

Introduction

Catalysis is an inseparable part of modern society, relying on the chemical industry, solutions in ecology, or effective energy storage. Therefore, the development of superior catalysts has been in the scope of surface science for many years.

One of the approaches is the preparation and investigation of model catalysts in the form of single crystal support with well-defined active sites. The use of inexpensive support materials and the reduction of deposited noble metals significantly increase the effectiveness and selectivity of model catalysts. Such a catalyst configuration also enables a better understanding of physical processes happening on its surface.

However, their preparation and investigation require ultra-high vacuum (UHV) to preserve adequate inertness of the surrounding environment. Therefore, the laboratory pressure conditions usually do not reflect the real industrial setup. To bridge this pressure gap, the microreactor (high-pressure cell) located in the UHV chamber, enabling sample exposure to elevated gas pressure and temperature, is under development.

There are several similar devices in use, however, their microscopic flow description is often trivialized. And particularly flow conditions at the reactive surface have a significant influence on the reactant and product transportation. Omitting these factors can then result in a misleading read of the catalytic activity.

The main scientific task is to get an uncomplicated and reliable overview of the macroscopic gas flow properties inside the high-pressure cell located in the UHV chamber. The appropriate gas flow theory is presented initially and later applied to certain geometry and required conditions. The main attention was paid to selected, most-critical locations in the micro reactor. The obtained results, respectively the formulated approach to calculate gas properties, are essential for ongoing microscopic flow investigation, and can be easily applied on adjusted geometry of high-pressure cells.

1 Scope and objectives

The general goal of this thesis is to create a relatively simple analytical framework to be able to make predictions about the behavior of the flow through the system and approximate values at different positions in the flow to later be used as initial values for more complex numerical simulations. The following section will state specific questions we will then try to answer in the following sections.

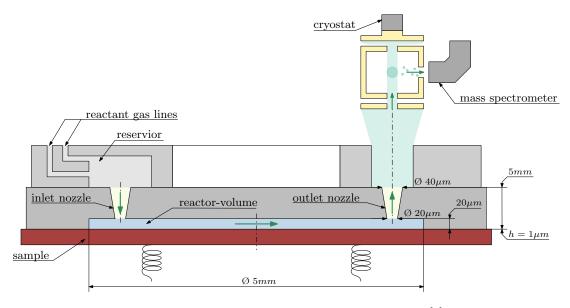


Figure 1: Dimensions of the micro-reactor assembly [1].

1.1 Type of Flow

The type of flow has major implications on which mathematical formulations and simulations are applicable, as well as the way the gas particles interact with each other and the walls of the assembly. The main focus here is the Knudsen number and the idealized flow regimes connected to it. With the main goal being to assess the most likely flow regime governing the inside of the assembly and therefore determine the equations applicable to calculate the state variables at different points in the system and the throughput of the system as a whole.

In preparation for numerical simulations it is also important to find a way to calculate Knudsen numbers and other flow parameters using given datasets of state variables without having to rely on flow regime specific methods. This will help to analyze transient regimes, encountered when the gas expands into the vacuum, using one generally applicable method.

1.2 Impact of the leak

As described in the leading section there will be some leakage expected at the boundary between the reactor casing and the sample holder. This leak will inevitably lead to some mass-flow and therefore some pressure drop ΔP_L inside the reactor. This can lead to major changes to the steady state of the system, therefore influencing the velocity distribution at the outlet. In summary the goal is finding the pressure drop ΔP_L caused by the leak and the effective mass flow \dot{m}_L through it and use them to predict probable behaviors.

1.3 Behavior of the gas around the sample

Knowing more about the state the gas is in close to the sample is very helpful. These can be used to estimate values for diffusion rates to and from the surface, boundary layer thickness, and mean velocities and momentum of particles reaching the reactive surface. Important metrics are the velocity, pressure and temperature of the gas and the type of flow.

1.4 Velocity distribution at the outlet

After the gas leaves the outlet nozzle, it expands into a vacuum chamber where the gas atoms are ionized by an electron beam and picked up by the mass-spec, to measure the ratio of different products. This won't be the case for all atoms, since for an atom to be ionized it has to cross the electron beam, which is localized in space. The remaining gas has to be pumped out and doesn't contribute to the ratio measured by the mass-spec. Therefore, it is important to approximate, how much of the gas leaving the outlet actually is able to reach the region of influence of the electron beam and will contribute to the measurement of the mass-spec. To answer this the velocity distribution of the expansion after the gas is fully rarefied is needed. This distribution can then essentially be treated as a source like surface, with no interaction between gas particles, and can therefore be directly correlated to the amount of atoms reaching the sphere of influence of the electron beam.

Knowing what determines the distribution of the outlet can also help identify changes to be made to the geometry or the reservoir conditions to increase the amount of atoms reaching the mass-spec.

2 Foundational Principles

When dealing with advanced fluid dynamical systems, before being able to formulate models to solve them, they have to be categorized. This is usually done by determining dimensionless numbers which values ought to describe more the behavior of the gas and its interaction with its surrounding. Essentially the values of these dimensionless numbers give a clue on which formulations are applicable and if additional boundary conditions or considerations have to be taken into account. This first chapter will go into the details of how to calculate some of the most important dimensionless numbers and give insight on what the values of them imply.

2.1 Characteristic Length

The characteristic length essentially serves the purpose of scaling physical systems. In dimensional analysis the goal is to find dimensionless quantities which describe the behavior of the system. These quantities are usually dependent on some characteristic scale, in our case the length scale, which describes the geometry of the model abstractly. For internal flows the characteristic length is defined as:


$$L_c = \frac{4A}{P_w}$$
 with $P_w = \sum_{i=0}^{\infty} l_i$

Where A is the cross-sectional area and P_w is the wetted perimeter, which is defined as the sum over the lengths of all surfaces in direct contact with the fluid. For gaseous fluids the whole perimeter of the cross-section must be considered, therefore the wetted perimeter reduces to the perimeter of the cross-section. The following section provides the characteristic length formulas for common duct shapes.

Circular duct or Nozzle



Rectangular duct

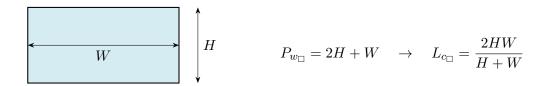

Two parallel plates

If the height H of a rectangular duct is very small compared to its width W, it is more convenient to view it as an asymptotic case where the width approaches infinity $(W \to \infty)$.

$$\int_{W \to \infty} H \qquad \lim_{W \to \infty} L_{c_{\square}} = \lim_{W \to \infty} \frac{2HW}{H + W} = 2H$$

2.2 Turbulence and the Reynolds number

To distinguish between different kinds of flow behaviors in fluid mechanics a dimensionless quantity is introduced, which describes the ratio between inertial forces and viscous forces inside a fluid. This quantity is called the Reynolds number and is defined as:

$$Re = \frac{\rho u L_c}{\mu} = \frac{u L}{\nu}$$

Where ρ is the fluid density, u is the flow speed, L is a characteristic length (such as pipe diameter), μ is the dynamic viscosity, and ν is the kinematic viscosity. These flow behaviors can be sorted into three categories depending on the value of the Reynolds number:

- Laminar flow Re < 2000: where fluid moves in smooth layers, with minimal mixing between those layers.
- Transitional flow $2000 \ge Re \ge 4000$: marks the transition between the main regimes.
- Turbulent flow Re > 4000: where the fluid moves chaotic and mixes irregularly due to formation of eddies.

2.3 Rarefaction and the Knudsen number

In fluid dynamics a flow can be categorized by its particle interaction using the Knudsen number, which represents the ratio between the mean-free-path λ of the gas and the characteristic length L_c of the flow geometry.

$$Kn = \frac{\lambda}{L_c}$$

Molecular regime $(Kn \ge 10)$

In this regime, the mean free path is much larger than the dimensions of boundaries. This leads to particle interactions themselves becoming negligible in comparison to the interaction of particles with the boundary.

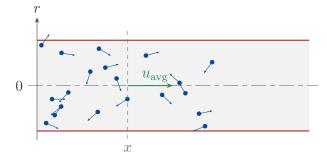


Figure 2: Mean velocity parallel to the flow at a point x inside a constant area duct in molecular flow.

Transition regime $(0.1 \le Kn \le 10)$

This regime is a middle ground between continuum and fully molecular flow. Neither the continuum assumptions of fluid dynamics nor the free molecular flow assumptions hold completely. The interactions between the gas molecules and the boundaries are significant, and the flow characteristics may vary widely.

Slip regime $(0.001 \le Kn \le 0.1)$

For increasing Knudsen numbers the mean free path becomes comparable to the characteristic length scale of the system. In this regime, the assumptions for continuum flow still hold, but there are deviations, especially near the boundaries. While continuum mechanics assumes no-slip conditions on the boundary, in this regime, slip on the boundary must be factored in.

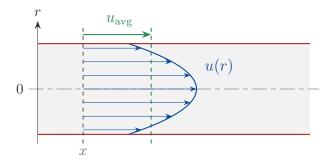


Figure 3: Velocity distribution at a point x inside a constant area duct with slip boundary conditions. [2]

Continuum regime $(Kn \le 0.001)$

In this regime, the interactions of particles in the medium are much more frequent than the interactions of particles with the boundaries of the duct. This makes it possible to describe the fluid itself as a continuous medium with the assumption of non-slip boundary conditions. The Navier-Stokes equations govern the calculations in this regime.

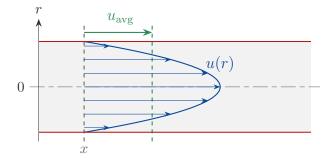


Figure 4: Velocity distribution at a point x inside a constant area duct with non-slip boundary conditions. (Continuum flow) [2]

In this work the continuum formulations will be used exclusively, with the reasons more clearly described in chapter 3.2. [3][4]

2.4 Dimension of the flow

The dimension describes the number of positional parameters needed to yield an exact solution for a given vector field $V(\vec{x})$, so equals essentially $n = \dim(\vec{x})$. The flow through a constant area duct is usually described as a one-dimensional flow field only depending on the position x along the length of the duct. In the case of variable area ducts the flow will be three-dimensional and has to be calculated using all spatial coordinates. But assuming only a slight change in area along the length of the duct the flow can be approximated using a one-dimensional flow field with enough precision. This is called quasi one dimensional flow. [5]

2.5 Isentropic one-dimensional flow

Isentropic varying-area flow is one of the most idealized models to describe the behavior of gases flowing through a confined space. The following assumptions are made:

steady, one-dimensional flow

• adiabatic: $\delta q = 0, ds_e = 0$

• no shaft work: $\delta w_s = 0$

• negligible change in potential energy: dz = 0

• reversible: $ds_i = 0$

Being reversible as well as adiabatic, the flow is therefore is entropic. The gas is still considered perfect and follows the perfect gas law, as it is crucial in the derivation for the following relations which are the foundation for solving is entropic one-dimensional gas flows. Flow velocity for continuum flows is usually encoded into the Mach number, which is defined as the ratio between the local velocity u and the local speed of sound a.

$$Ma = \frac{u}{a} \qquad (??)$$

It is a very important metric when analyzing isentropic flow, since state variables are uniquely defined through the mach number at the corresponding location, as long as either the stagnation, or critical conditions of the flow are known. For isentropic flow one-dimensional flow it can be directly linked to the geometry of the duct and can be calculated by defining a state in the system where Mach number is equal to 1, the so-called throat. Then its area is related to the Mach number by following non-linear equation:

$$\frac{A}{A^*} = \frac{1}{Ma} \left[\frac{2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{\frac{\gamma + 1}{2(\gamma - 1)}} \tag{12}$$

Where A represents the area of the duct at some location, A^* the area of the throat, Ma the Mach number at the given location and γ the ratio of heats. One of the most important ideas in isentropic flow are the stagnation/total conditions, which represent the state of a moving gas when fully decelerating it isentropically (Ma = 0). They exist for the fundamental state variables of the gas notated as (P_0 , P_0) and represent conserved quantities when dealing with isentropic flow. This stagnation state does not have to exist in the system, but can also be derived if velocity and state variables at some point in the system are known. Total conditions represent the highest values of any state variable reachable in the system, while still being insentropic. Therefore, changes of state variables are usually represented in relation to the total conditions of

the corresponding state variables, and depend only on the ratio of heats of the gas γ and the Mach number Ma.

$$\frac{T}{T_0} = \left(1 + \frac{\gamma - 1}{2}Ma^2\right)^{-1} \tag{16}$$

$$\frac{p}{p_0} = \left(1 + \frac{\gamma - 1}{2}Ma^2\right)^{-\frac{\gamma}{\gamma - 1}} \tag{17}$$

$$\frac{p}{p_0} = \left(1 + \frac{\gamma - 1}{2}Ma^2\right)^{-\frac{\gamma}{\gamma - 1}}$$
 (17)
$$\frac{\rho}{\rho_0} = \left(1 + \frac{\gamma - 1}{2}Ma^2\right)^{-\frac{1}{\gamma - 1}}$$
 (18)

Low subsonic regime (Ma < 0.3) For low Mach numbers, compressibility effects of a gas can be neglected, and the gas can be treated as an incompressible fluid.

Subsonic regime (0.3 < Ma < 1.0) Inside system of variable area ducts the gas flow generally stays subsonic. Once sonic speed is reached in a converging duct, the behavior reverses, and the velocity decreases, limiting the flow to subsonic or sonic speeds within converging ducts.

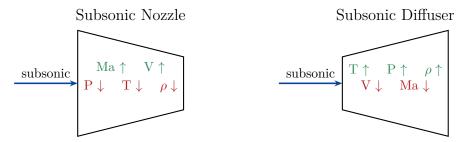


Figure 5: Change in flow properties in subsonic nozzles and diffusers [2]

Sonic regime (Ma = 1) Sonic flow occurs at the exit of a converging duct, if the pressure ratio between two reservoirs becomes smaller than the following critical ratio. Which is called chocked flow and constitutes the maximum mass-flow for given stagnation conditions. This ratio is defined as:

$$\frac{P^*}{P_0} = \left(\frac{2}{\gamma + 1}\right)^{-\frac{\gamma}{\gamma - 1}} \tag{??}$$

Where P_t is the stagnation condition, P^* the critical back-pressure and γ the specific heat ratio. The ratio is derived from the isentropic flow relation (16) and can be expressed for any state variable.

Supersonic regime (Ma > 1) If there are critical conditions at the end of a converging duct and a diverging duct follows. The flow continues to accelerate and reaches supersonic speeds. The location where the flow reaches critical condition is called throat and represents the minimal diameter of the duct.

In supersonic flows, state variables change rapidly causing phenomenons like shock waves and expansion fans.

Figure 6: Change in flow properties in supersonic nozzles and diffusers [2]

Relation of dimensionless numbers in continuum flow

It is actually possible to relate the three dimensionless numbers mentioned in the preceding chapters. Leading to following relation:

$$Kn = \frac{Ma}{Re} \sqrt{\frac{\gamma \pi}{2}} \qquad (\ref{eq:master})$$

 $\label{lem:maybe} \textit{Maybe add a notice that essentially everything calculated will use is entropic one-dimensional flow!}$

3 Analytical work

Now that the fundamental principles used are set, this chapter focuses on answering as many questions from chapter ??. First the geometry is defined in a more rigorous way, to be able to define the characteristic lengths for every important point inside the assembly. While also defining the conditions inside the reservoir and the vacuum and how they influence the flow. Afterward, the expected flow regimes will be assumed, to confirm that the isentropic continuum flow regime is applicable. These assumptions will be confirmed by the following analytical calculations. Where first the assembly will be approximated by a variable area duct, without any leakage in the system, where onedimensional isentropic flow formulations can be applied, and the assumptions made in the preceding chapter can be tested. Since this approximation come with a cost, mainly by ignoring the geometry and possible non-isentropic behavior in the reactor. Therefore, a short section going into behaviors in micro-channels and the problem of slip on the boundaries follows, which paves the way for a more elegant formulation, where the reactor is seen as its own reservoir with given stagnation conditions. Since a change in stagnation conditions corresponds to non-isentropic flow behavior, is trying to include those while still treating the parts is entropically in isolation. This makes it possible to include mass-flow of the leak in the reactor, whose influence on the Mach number of the inlet throat will be explored. Ending with a short argument on why using the given formulations are not applicable to solve the velocity distribution at the outlet and therefore possible numerical solutions are presented.

3.1 Geometry and characteristics of the components

The geometry can be explained in three simple sections: gas from a reservoir flows over the inlet into the micro-reactor where it leaves through the outlet into a vacuum. This is a stark simplification, but for a great part of this thesis, this is how we will imagine our flow path. This is because the only thing we left out is any kind of leak in the system. Those leaks will be the most influential around the reactor, since this is the only part that is not held at a constant pressure by any external part of the system.

Reservoir

It is kept at constant pressure P_0 and constant temperature T_0 , out of which the density ρ can be calculated. These values will represent the stagnation or total conditions of the system. For simplicity, it contains only one gas which is defined by its specific heat ratio γ and by its molar mass M_m . The Formulations used yield the changes in pressure, temperature and density as ratios between the local conditions and the stagnation conditions Therefore, there is no need to define stagnation conditions explicitly beforehand, since local conditions can be calculated for by multiplying chosen stagnation conditions with the calculated ratios. Therefore, only the parameters of the gas have to be defined up front, which will be defined as:

$$\gamma = 1.47 \; , \qquad M_m = 28.013 \; \frac{\text{g}}{\text{mol}}$$

representing nitrogen gas (N_2) , since it is comparable to the gases planned to use in experiments.

Inlet/Outlet Nozzles

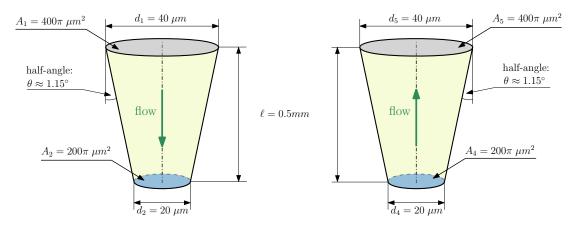


Figure 7: Non-technical drawing of the inlet nozzle geometry (not in proportion)

Inlet The duct connecting the inlet reservoir with the reactor will be a slightly converging duct, due to production constraints. Therefore, it will act like a Nozzle, accelerating the gas until it expands into the reactor.

Outlet With the same geometry as the inlet, but the gas flowing in opposite directions, one would suspect the outlet to act as a subsonic nozzle, which could logically be the case, since without a converging section in front it would be impossible to reach sonic velocities and therefore will choke the flow and keep them at subsonic velocities. However, it is actually possible for the flow to create a converging section by itself, which will force the flow to be sonic at the beginning of the outlet and will further accelerate into the supersonic regimes, creating a supersonic nozzle. Which of these two possibilities is most likely will be discussed at a later point.

Micro-Reactor Volume

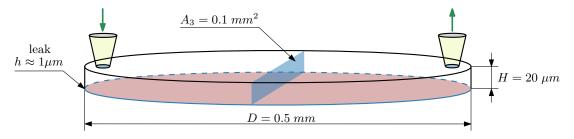


Figure 8: Non-technical drawing of the reactor geometry (not in proportion)

The reactor resembles a very small but broad cylinder shape which is opened at the bottom. The sample will be pressed into the opening, which will lead to some leakage out of the system.

Vacuum

After leaving the outlet, the gas will first expand into a small cylindrical section after which it will expand freely into the vacuum. The exact pressure left in the vacuum chamber does not influence the gas flow inside the assembly since the large pressure ratio between reactor and vacuum will force the flow to be chocked, and thus the back pressure looses its influence. Due to the sharp change in pressure and the high velocity of the gas particles the gas will transition to the molecular regime after leaving the outlet nozzle.

3.2 Expected flow regimes

Continuum Regime

The whole Theory relies heavily on the continuum model. For every location of the flow, but the vacuum, it will be assumed that it suffices to approximate the state variables (T, p, ρ) at certain locations using a simple continuum model presented in chapter 3.3 and use these state variables to calculate the Knudsen number.

A sensible question to ask at this point is, where in the flow is it most probable to encounter the highest Knudsen number. Because this will reduce the locations to check for high Knudsen numbers when other formulations to calculate the state variables are used and therefore will simplify the process. To find such most probable Location, starting from the Definition of the Knudsen number.

$$Kn(p,T) = \frac{\lambda}{L_c} = \frac{\mu(T)}{pL_c} \sqrt{\frac{\pi RT}{2}}$$

Where λ is the mean free path, L_c is the characteristic length, k_B is the Boltzmann constant, R is the specific gas constant, T is the temperature of the fluid, p is the pressure of the fluid, M_m is the molar mass and μ is the dynamic viscosity. The dynamic viscosity can be calculated using Sutherland's formula.

$$\mu(T) = \mu_0 \left(\frac{T}{T_0}\right)^{3/2} \frac{T_0 + S_\mu}{T + S_\mu}$$

Where mu_0 is the reference viscosity at the reference temperature T_0 and S_{μ} representing the Sutherland constant, whose values are dependent on the chosen gas. For nitrogen these have the following values [6]

$$S_{\mu} = 111 \; K \; , \quad T_0 = 300.55 \; K \; , \quad \mu_0 = 17,81 \; \mathrm{Pa \; s}$$

Following plot shows the exact values using the Sutherland formula, plus two mean linear approximations in the range of 200-600 K, for the given values. One of them forcing the intercept to be zero. This will shift the values where Knudsen number reaches the continuum limit but won't have much influence on the behavior of the Knudsen number, thus version of the best-fit will be used for the following argument.

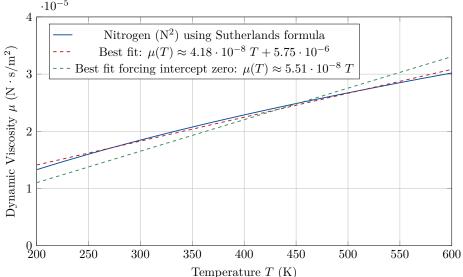


Figure 9: Values for the dynamic viscosity of nitrogen using the Sutherland formula, with addition of two square-error, best-fits of the Sutherland formula in the range of 200 < T < 600, one with intercept being forced to zero.

Assuming L_c to be the throat diameter $A_{2, 4} = 2 \cdot 10^{-6}$ m since this will cause the highest Knudsen number therefore a part of the system with a lower value of L_c will just reach transient flow sooner. Also by using the best-fit line with intercept forced zero with a slope of $k = 5.51 \cdot 10^{-8} \frac{\text{sPa}}{\text{K}}$ from the plot in figure 9 the Knudsen number can be reduced to a simple proportionality relation:

$$Kn(p,T) \approx \frac{k \cdot T}{L_c} \sqrt{\frac{\pi R}{2}} \cdot \frac{\sqrt{T}}{p} := \alpha \cdot \frac{T^{3/2}}{p} \quad \rightarrow \quad Kn \propto \frac{T^{3/2}}{p}$$

Using the simplification of $Kn(p,\ T)$ finding an approximate value of α for our case is possible:

$$\alpha = \frac{k}{L_c} \sqrt{\frac{\pi R}{2}} \rightarrow \alpha = \frac{5.55 \cdot 10^{-8} \frac{\text{sPa}}{K}}{20 \cdot 10^{-6} \text{m}} \sqrt{\frac{\pi 2.96 \cdot 10^2 \frac{\text{J}}{\text{kgK}}}{2}} \approx 0.06 \frac{\text{Pa}}{\text{T}^{3/2}}$$

Since α is now approximated, the pressures and temperatures can be determined where continuum flow in our system will most likely break down:

$$p = \alpha \frac{T^{3/2}}{Kn} \quad \text{where} \quad Kn = 0.1$$

Assuming temperature to be held constant at either 300 or 500 K, the corresponding pressure leading to a transition to molecular flow can be found.

$$\begin{split} T &= 300 \; \mathrm{K} \quad \rightarrow \quad p = 0.06 \frac{\mathrm{Pa}}{\mathrm{T}^{3/2}} \frac{(300 \; \mathrm{K}^{3/2})}{0.1} = 0.03 \; \mathrm{bar} \\ T &= 500 \; \mathrm{K} \quad \rightarrow \quad p = 0.06 \frac{\mathrm{Pa}}{\mathrm{T}^{3/2}} \frac{(500 \; \mathrm{K}^{3/2})}{0.1} = 0.07 \; \mathrm{bar} \end{split}$$

Therefore, very low pressures are needed to bring the flow through our assembly to transition into molecular flow, but since the purpose of the reactor is to experiment at "high" pressures close to ambient, we can assume the flow to be continuum throughout the whole assembly.

But this still doesn't yet give a clear picture where in the assembly to expect the highest Knudsen number. But it already gives a clue that at a given temperature T, the only way the flow may reach low Knudsen numbers and transition to molecular flow is in regions with low pressure. To now pin down the most probable location for this to happen, the relation between pressure and temperature must be examined, since now continuum flow can be assumed, the changes in Temperature and pressure can be plotted over the Mach number. Since it is the main driving force for change in state variables in isentropic continuum flow.

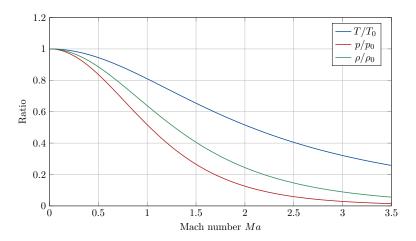


Figure 10: Isentropic temperature, pressure, and density ratios (equations (16) - (18)) as a function of Mach number for $\gamma = 1.47$.

From figure 10 it becomes clear that temperature changes less rapidly in relation to the Mach number. Thus, as long as the stagnation conditions of the system yield a Knudsen number which places the gas in the continuum regime, moving more towards molecular regime, always means accelerating the flow. Since flow in closed geometries usually are assumed to be subsonic inside and only surpass sonic velocities when exiting the geometry into an ambient pressure which is low enough to accelerate it over Mach one, now the location where a transition occurs becomes clear. It most likely starts at the exit plane of the outlet nozzle, moving further into the assembly as stagnation pressures are lowered. Maybe a little end note with a segway to Knudsen number in low pressure zones.

Knudsen Number in low pressure Zones As the gas is leaving the outlet geometry and expands into the vacuum the characteristic length looses its significance. This is because the walls of the vacuum chamber are very far away in comparison to the length-scales of the flow geometry, while the gas expands it will lose pressure to conform to the vacuum and in that process will transition into free molecular flow. This leads to formulations using the mach number also loosing its significance. Therefore, it makes sense to identify a much more elegant way of calculating the local Knudsen number Kn_L which will be much more applicable in this situation.

$$Kn_L = \frac{\lambda}{\phi} \left| \frac{d\phi}{dx} \right| \qquad (??)$$

Where λ is the mean free path, ϕ is some state variable of the flow. This way the Knudsen number can be calculated throughout the expansion of the gas and can be used to find the contour lines where the transition between continuum and molecular flow will happen. [7, 8, 9]

Laminar Flow

The Reynolds number itself does not bare any real significance for the applicability of the formulations used. Nonetheless, deviations in Reynolds number can in reality shape great parts of how the flow behaves and therefore effects important state variables.

Reynolds numbers per unit length for isentropic expansion range $10^{-2} < Re/l < 1$, whereas the characteristic length is constant at $L_c = 20 \cdot 10^{-6}$ and will therefore dominate the equation forcing low Reynolds numbers. [10]

Therefore the flow will stay laminar as long as it is contained inside the assembly and therefore mixing will be most likely diffusion mediated. [11]

Dimension of the Flow

Nozzle flow - pseudo 1D In this section of the flow a further simplification of the two-dimensional flow through a duct will be used called "quasi one-dimensional" flow. This is possible by reducing the velocity distribution present at any point in a duct to its mean velocity. Therefore, reducing the velocity from a distribution V(r) at every point in the duct to a scalar value V at every point of the duct. This is a general simplification which can be made when using continuum flow analysis inside of ducts and is only bound by the applicability of continuum flow. This makes sense, because approximations of state variables and mass flow is the main goal here. Taking mean values still yield sensible solutions and won't leave us with less information.

Flow through the reactor - 3D After the gas flow leaves the inlet nozzle and streams into the reactor chamber, the geometry of the assembly has no symmetry to reduce the dimension of the velocity field. Additionally, there is rapid expansion of the gas since the constraints given by the walls of the nozzle are now gone and the gas flows over a sharp corner. Therefore, the flow field has to be dependent on all spacial dimensions and essentially means the only way to get an accurate representation of the flow field the navier-stokes equations have to be solved. This won't be possible using only analytical tools, therefore in the following sections two simplifications of the flow through the reactor will be used. At first, assuming pseudo one-dimensional flow throughout the reactor, which is definitely wrong, since the flux area is neither expanding very slowly, nor the flow will be isentropic, due to the expansion into free space. To address this issue and still be able to use analytical tools to solve the system, in chapter 3.5 the reactor will be assumed to be a reservoir.

Free jet into vacuum - 2D Similar to the flow into the reactor, the flow out of the system into the vacuum chamber won't be reducible to pseudo one-dimensional flow anymore. But this time the fact that the outlet nozzle is radially symmetric and there is no further geometry constraining the flow after it leaves the outlet. The flow can be at least assumed to inherit the radial symmetry from the outlet nozzle, thus reducing the spacial parameters of the flow field to the distance from the nozzle and the distance from the axis of symmetry of the outlet nozzle r. Furthermore, due to the gas expanding into vacuum and therefore the pressure dropping rapidly the gas will go through the process of rarefication, thus after some distance from the nozzle even continuum formulations break down. This will be discussed in more detail in chapter 3.6 where possible ways to formulate solutions using numerical techniques. [5]

Steady Flow

Steadiness of the flow is essentially given by the fact that the temperature T_0 and the pressure p_0 of the reservoir will be held constant during measurements. Thus, the flow

will be driven by the pressure differential between the vacuum and the reservoir alone. So there is no reason for the flow to establish any dynamic behaviors after reaching some equilibrium state, after gas is first released into the system. This is true for regions inside as well as outside the assembly.

3.3 One-dimensional isentropic variable area flow

By assuming the flow through the assembly will be fully isentropic and pseudo onedimensional it is possible to calculate the state variables at every point knowing the stagnation conditions and the ratio between the cross-sectional area at the point of interest A_i and the at throat of the assembly A^* .

It must be noted that this is a very radical approximation since for the flow to be considered pseudo one-dimensional the problem must be reduced to consist purely of variable area ducts. This clearly overlooks the fact that when entering and leaving the reactor the gas has to perform a right angle turn to follow the flow path. Another constraint on the duct geometry to achieve reasonable solutions assuming pseudo one-dimensional flow is that the duct must change its cross-sectional area gradually. [5] This won't be the case inside the reactor, since there is no way of slicing the reactor chamber to achieve a gradual change in cross-section, especially around the inlet and outlet.

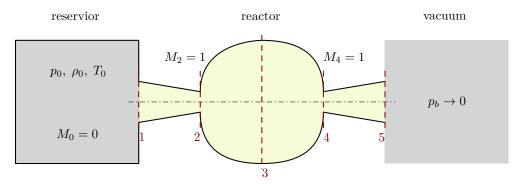


Figure 11: A descriptive caption for the figure.

This geometry can now be characterized as a double throat, and therefore onedimensional isentropic flow will yield one of in two fundamental solutions. Depending on how the steady state in the system is reached, flow velocity of the stream will either stay subsonic and therefore decrease when entering the reactor or become sonic at the throat (2) and continue to accelerate. Other non-trivial solutions won't be discussed. [12, 13]

Calculations

The first step is to define the critical locations, where the flow fill be chocked. Since the outlet is expanding into vacuum, resulting in a pressure ratio tending towards zero, therefore the flow therefore must be chocked and can be recognized as a critical point. Maximum mass-flow occurs if the flow is chocked. Therefore, to keep up with the mass-flow of the outlet, the inlet must also be chocked:

$$A_{2,4},\ p_{2,4},\ \rho_{2,4},\ T_{2,4} \quad \xrightarrow{M=1} \quad A^*,\ p^*,\ \rho^*,\ T^*$$

The second reference location corresponding to the stagnation or total conditions is at the entry of the inlet nozzle (1), which can be defined afterward to get quantitative solutions.

$$A_1, p_1, \rho_1, T_1 \xrightarrow{M=0} A_0, p_0, \rho_0, T_t$$

Next step is to take the cross-sectional areas at every point defined in chapter 3.1, and calculate their ratios to the throat areas. To use them for solving the following equation relating them to M, numerically yielding one subsonic and one supersonic

solution depending on their initial conditions.

$$\frac{A_i}{A^*} = \frac{1}{M_i} \left[\frac{2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{\frac{\gamma + 1}{2(\gamma - 1)}} \tag{12}$$

Afterward the ratio of the local state variables to the total conditions can be determined using equations (16) - (18), which can be used after, defining the total conditions of the system, to calculate the local variables for every point. [14]

$$\frac{T}{T_0} = \left(1 + \frac{\gamma - 1}{2} M a_i^2\right)^{-1} \tag{16}$$

$$\frac{p}{p_0} = \left(1 + \frac{\gamma - 1}{2} M a_i^2\right)^{-\frac{\gamma}{\gamma - 1}}$$
 (16)

$$\frac{\rho}{\rho_0} = \left(1 + \frac{\gamma - 1}{2} M a_i^2\right)^{-\frac{1}{\gamma - 1}} \tag{16}$$

Where p, ρ , T are the local gas conditions, p_0 , ρ_0 , T_0 the total gas conditions, γ the specific heat ratio and M_i the local mach number. This leads to the following solutions:

i	$\frac{A_i}{A^*}$	M	$rac{p_i}{p_t}$	$rac{ ho_i}{ ho_t}$	$rac{T_i}{T_t}$
1	4	0	1	1	1
2	1	1	0.52	0.64	0.81
3	318.31	~0	~1	~1	~1
3	3 310.31	10.55	$3.28 \cdot 10^{-5}$	$8.90 \cdot 10^{-4}$	$3.68 \cdot 10^{-2}$
4	1	1	0.52	0.64	0.81
5	1	0.15	0.983	0.988	0.994
	$\begin{bmatrix} 5 & 4 & \end{bmatrix}$	3.06	0.02629	0.08415	0.31245

Table 1: Isentropic flow properties for different conditions.

Mass flow is conserved along the flow and can be calculated using following equation, which derives from the equation for mass-flow in a steady one-dimensional flow (3.6), the isentropic relations [(16) - (17)] and the ideal gas law (3.6). [15]

$$\dot{m} = A \cdot P_0 \cdot \sqrt{\frac{\gamma}{RT_0}} \cdot M \cdot \left(1 + \frac{\gamma - 1}{2} M^2\right)^{-\frac{\gamma + 1}{2(\gamma - 1)}} \tag{??}$$

Where A is the local cross-sectional area, P_0 the total pressure, T_0 the total temperature, γ the specific heat ratio, R the specific gas constant and M the mach number. [16]

Now knowing the approximate way state variables change inside the system, the assumption taken in chapter 3.2 regarding the Reynolds and Knudsen number can be tested for the following values:

$$p_{0, 1} = 1.5 \text{ bar}$$
 $T_{0, 1} = 300 \text{ K}$
 $p_{0, 2} = 1.5 \text{ bar}$ $T_{0, 2} = 500 \text{ K}$

Additionally, the lower limit for the reservoir pressure $p_{0, min}$ where some part of the system transitions to the molecular regime, will be determined. Again for temperatures $T_{0, 1}$, $T_{0, 2}$

Dimensionless	T_t	1	2	3 (sub)	3 (sup)	4	5 (sub)	5 (sup)
Re	300 K	-	0.0001	0.4	~ 0	0.0001	0.005	0.0002
100	500 K	-	0.001	0.8	0.0001	0.001	0.01	0.0005
Kn	300 K	0.001	0.002	0.001	0.2	0.002	0.001	0.009
IXII	500 K	0.002	0.003	0.002	0.02	0.003	0.002	0.02

Table 2: Knudsen and Reynolds numbers for $p_0 = 1.5\,\mathrm{bar}$ and $T_0 = 300,500\,\mathrm{K}$ using values from table 1. The highlighted cell indicates a transitional regime.

It now becomes clear that the assumptions made in chapter 3.2 are accurate:

- Slip on the boundaries is to expect.
- The Mach number has major influence on the value of the Knudsen number, thus high Mach numbers point to possible transition to molecular regime.
- The outlet always corresponds to the highest Knudsen number with exception to the hypersonic solution found in the middle of the reactor. Which will be discussed more in the following paragraph.
- Reynolds numbers are very low, therefore no turbulences are expected.

Interpretation

The equation relating area ratio and Mach number has in general two solutions. This leads to the two solutions for every point which is not defined as a (total or critical) reference point will have mathematically true solutions. One corresponding to subsonic flow and the other one to supersonic flow, which of those are applicable in the situation is to decide.

For the outlet it is easier to discern since when exausting into a vacuum the flow will be forced supersonic. This is expected even the there is actually no specific converging section when leaving the reactor, especially if the reactor is seen as a reservoir by itself, like it will in chapter 3.5. In short, the flow itself when flowing over the edge of a sudden contraction in the flow geometry, can itself form a kind of converging section and still accelerate to sonic conditions. This will be discussed in the next chapter in more detail.

Mention non-isentropic behavior non viability of the hypersonic solution!

3.4 Flow behaviors in micro channels

Going from macro scale channels to microscales has some major implications for the behavior of the gas. The primary factor for these differences is slipping at the boundary of the surfaces. This is due to the fact that at small characteristic length scales the Knudsen number (Kn), whose value describes the interaction of the molecules in the gas and its boundaries, becomes relatively high (Kn > 0.001). Which usually puts the gas flow in the category of compressible flow with slip at the boundaries.

Most of these behaviors have to be studied using complex simulations or experimental results and are sometimes not fully explained. Therefore, this section is not intended to give concrete definitions or formulations, but to provide as many relevant references regarding behaviors in microfluidics as possible. It will be mainly based on the review study conducted by Amit Agrawal in 2011.

Phenomenon of Slip

Slip, in comparison to non-slip, refers to the fact that the tangential velocity close to a surface is non-zero. Maxwell suggested that on a control surface s, at distance half the mean free path away from the surface, one half of the molecules come in from one mean free path away with the tangential velocity u_{λ} , the other half is reflected from the surface. Assuming a fraction σ of the molecules are reflected diffusively (average velocity corresponds to velocity at the wall u_w) at the walls, with the remainder $(1-\sigma)$ being reflected specularly (no change in their impinging velocity u_{λ}). When expanding u_{λ} in a second order Taylor series this yields the second order slip boundary condition used in continuum analysis:

$$u_g - u_w = \left[\frac{2 - \sigma}{\sigma} Kn \left(\frac{\partial u}{\partial n} \right)_s + \frac{Kn^2}{2} \left(\frac{\partial^2 u}{\partial n^2} \right)_s \right]$$
 (??)

Where u stands for the streamwise velocities, where the subscripts g, w and s refer to gas, wall and control surface, with n being the normal to the control surface. And most importantly σ is the tangential momentum accommodation coefficient, or short TMAC.

Determining the TMAC for a specific application is one of the most critical aspects when dealing with slip conditions, as it directly influences the velocity slip at the gas-wall interface and, consequently, the overall behavior of rarefied gas flows. This is usually achieved through empirical studies or simulations like direct simulation Monte Carlo which will be discussed in more detail in the next section.

Go over the following paragraphs, and write them more in my style.

Sudden expansion or contraction

When the flow exits a confined duct into the reactor, the geometry no longer resembles a uniform channel but rather a sudden expansion or contraction. Agrawal shows that in such cases the assumption of strict isentropic behavior breaks down as the abrupt change in cross-section induces local flow separation, vena contracta effects, and additional losses. These non-isentropic phenomena lead to variations in the stagnation conditions downstream; the static pressure and temperature no longer remain uniquely determined by the inlet conditions but adjust in response to the complex expansion dynamics. By considering the reactor as a reservoir with its own stagnation state, the analytical formulation accommodates the changes introduced by the sudden geometric transitions. In this formulation, the mass flow entering and exiting the reactor is governed not only by the duct geometry but also by the additional pressure losses and momentum deficits associated with the rapid expansion or contraction.

Surface Roughness

Similarly, surface roughness plays a critical role in modifying the effective slip conditions at the channel walls, as detailed by Agrawal (2011). At the microscale, even minor deviations from a smooth surface can lead to enhanced momentum exchange between the gas and the wall, effectively reducing the local slip length compared to that predicted by the ideal Maxwell model. This increased friction at the wall alters the pressure distribution and thus the stagnation conditions within the flow. In the context of the reactor-reservoir model, the presence of surface roughness must be accounted for by modifying the boundary conditions to reflect the non-ideal accommodation of tangential momentum. Incorporating roughness effects—either through empirical corrections or higher-order slip models—allows for a more realistic prediction of the flow behavior, particularly in regions where the geometric changes force deviations from the classical isentropic relations.[17, 18]

3.5 Impact of the leak

In section 3.3 the flow is assumed to be fully isentropic and one-dimensional. This led to the simplification of the reactor being a variable area duct, which leads to a change in state-variables along the path of the gas flowing from the inlet to the outlet. Since this change is based on the variable area duct formulation, it won't represent an accurate solution for the given geometry. The leak is located at the perimeter of the reactor, which is not an actual location in this formulation. To be able to include the influence of the leak analytically, without using numerical tools, further simplification is needed.

In section 3.4 some phenomenons occuring in micro channels are mentioned, which are hard to account for in analytical calculations. Thus, this section will explore a formulation of the system, where both the inlet reservoir and the reactor are assumed to be reservoirs, with stagnation conditions associated with them. In turn disconnecting the two reservoirs and resulting in two independent problems, describing gas from a reservoir flowing into a discharge region with a given back pressure. Representing a change in stagnation conditions which can be attributed to non-isentropic processes happening while the gas enters or leaves the reactor.

Now proper assumptions have to be taken to connect both reservoirs again. At first without including the leak. Stagnation conditions for the reactor are chosen, resulting in a mass-flow at the outlet. Which in turn have to be compensated by the inlet, now without forcing sonic conditions at the throat of the inlet. Through choosing the back-pressure of the reservoir to be the total pressure of the reactor a connection is established. But to be able to solve the system, at least one other value of a state variable in the system of the reservoir has to be assumed. Two possible assumptions for Temperature are presented in the following paragraphs.

Afterward, the influence on the inlet mach number M_2 of additional mass flow \dot{m}_L leaving the reactor is inspected. Trying to find an upper limit for mass flow through the leak, after which the inlet is again forced to reach sonic flow speeds, without having to derive an explicit way to calculate \dot{m}_L .

Formulations without including the leak

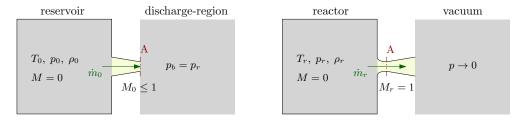


Figure 12: A descriptive caption for the figure.

General assumptions

Since this still constitutes a closed system, mass flow must be conserved, thus:

$$\dot{m}_0 = \dot{m}_r = const.$$

The reactor still discharges into vacuum, this therefore must lead to chocked flow:

$$M_r = 1$$

From the geometry in section 3.1 it is given that:

$$A_0 = A_r = A$$

Calculation

The mass flow rates from the reactor into vacuum, can be calculated using the isentropic mass flow equation (??)

 $Reservoir \rightarrow Reactor$

$$\dot{m}_0 = A p_0 \sqrt{\frac{\gamma}{RT}} M_0 \left(1 + \frac{\gamma - 1}{2} M_0^2 \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}}$$

 $Reactor \rightarrow Vacuum$

$$\dot{m}_r = A p_r \sqrt{\frac{\gamma}{RT}} \left(1 + \frac{\gamma - 1}{2} \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}}$$

Thus from $(\dot{m}_r = \dot{m}_0 = const.)$

$$A p_r \sqrt{\frac{\gamma}{RT}} \left(1 + \frac{\gamma - 1}{2} \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}} = A p_0 \sqrt{\frac{\gamma}{RT}} M_0 \left(1 + \frac{\gamma - 1}{2} M_0^2 \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}}$$

Which constitutes the general conservation of mass equation for the system without connecting the state variables of the reservoirs in any way. This will be the starting point for both of the following approaches.

Isentropic approach

$$T_b = T_r \quad \rightarrow \quad T_0 = T_r \left(1 + \frac{\gamma - 1}{2} M_0^2 \right)$$

and

$$p_b = p_r \quad \rightarrow \quad p_0 = p_r \left(1 + \frac{\gamma - 1}{2} M_0^2 \right)^{\frac{\gamma}{\gamma - 1}}$$

Assuming the conditions of the discharge region to match the values in the reactor and using the isentropic relations to express T_0 and p_0 in terms of T_b and P_b the previously defined conservation of mass equation yields:

$$\begin{split} A \, p_r \, \sqrt{\frac{\gamma}{R \, T_r}} \, \left(1 + \frac{\gamma - 1}{2} \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}} \\ &= A \, p_r \left(1 + \frac{\gamma - 1}{2} M_0^2 \right)^{\frac{\gamma}{\gamma - 1}} \, \sqrt{\frac{\gamma}{R \, T_r}} \left(1 + \frac{\gamma - 1}{2} M_0 \right)^{-\frac{1}{2}} \, M_0 \, \left(1 + \frac{\gamma - 1}{2} \, M_0^2 \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}} \end{split}$$

Canceling out variables present on both sides and combining the potential expressions on the right side it results a function of M_0 only dependent on γ , since the summing the exponents equals zero.

$$M_0 = (1 + \frac{\gamma - 1}{2})^{-\frac{\gamma + 1}{2(\gamma - 1)}} = 0.57$$
 for $\gamma = 1.47$

Thus resulting in following ratios between the conditions in the reactor and the reservoir.

$$\frac{T_r}{T_0} = 0.93$$
, $\frac{p_r}{p_0} = 0.79$, $\frac{\rho_r}{\rho_0} = 0.85$

Constant temperature approach

Add good intro! Thus, as the second approach Temperature will be held constant between both reservoirs.

$$T_r = T_0 = T$$

This approach is going contrary to isentropic formulation, but still seems somehow plausible due to the fact that the gas in the reservoir just like the whole assembly will be preheated to a certain temperature. Since for small cavities the surface area of its walls is much larger in proportion to its internal volume, heat transfer from the walls will be significant even without high mixing due to low Reynolds numbers present in microfluidics.

$$p_r \left(\frac{2}{\gamma+1}\right)^{\frac{\gamma+1}{2(\gamma-1)}} = p_0 M_0 \left(1 + \frac{\gamma-1}{2} M_0^2\right)^{-\frac{\gamma+1}{2(\gamma-1)}}$$

Again using the isentropic relation (17) for p_0

$$p_r \left(\frac{2}{\gamma+1}\right)^{\frac{\gamma+1}{2(\gamma-1)}} = p_r \left(1 + \frac{\gamma-1}{2}M_0^2\right)^{\frac{\gamma}{\gamma-1}} M_0 \left(1 + \frac{\gamma-1}{2}M_0^2\right)^{-\frac{\gamma+1}{2(\gamma-1)}}$$

Rearranging leads to an equation only dependent on γ and the mach number M_0 at the inlet.

$$\left(\frac{2}{\gamma+1}\right)^{\frac{\gamma+1}{2(\gamma-1)}} = M_0 \left(1 + \frac{\gamma-1}{2} M_0^2\right)^{\frac{1}{2}}$$

Which can be solved analytically, since by squaring both sides and rearranging it resembles a simple quadratic equation:

$$M_0^4 + \frac{2}{\gamma - 1}M_0^2 - \frac{2}{\gamma - 1}\left(\frac{2}{\gamma + 1}\right)^{\frac{\gamma + 1}{\gamma - 1}} = 0$$

Now substituting $M_0^2 = f \rightarrow M_0 = \sqrt{f}$

$$f = -\frac{1}{\gamma - 1} \pm \sqrt{\frac{1}{(\gamma - 1)^2} + \frac{2}{\gamma - 1} \left(\frac{2}{\gamma + 1}\right)^{\frac{\gamma + 1}{\gamma - 1}}}$$

There is only one real solution for this equation using the positive square root. For $\gamma = 1.47$ we get the solution:

$$f \approx 0.31 \rightarrow M_0 \approx 0.55$$

Formulations including the leak

Including the leak can now be achieved by assuming additional mass flow out of the reactor, the inlet now has to compensate.

$$\dot{m}_0 = \dot{m}_r + \dot{m}_L \quad \rightarrow \quad \dot{m}_L = \dot{m}_0 + \dot{m}_r$$

This forces the total conditions of the reservoir to increase in order to keep the conditions in the reactor the same. Therefore, increasing the Mach number until a critical ratio (??) is reached, and the flow becomes sonic at the throat of the inlet. Using isentropic mass flow equations this is described by assuming both mach numbers to be one in equation (??) and (??).

$$\dot{m}_L = A \, p_0 \, \sqrt{\frac{\gamma}{R \, T}} \, \left(1 + \frac{\gamma - 1}{2} \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}} \, - A \, p_r \, \sqrt{\frac{\gamma}{R \, T}} \, \left(1 + \frac{\gamma - 1}{2} \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}}$$

Figure 13: A descriptive caption for the figure.

To express the temperature T_0 and pressure p_0 of the reservoir in terms of the conditions in the reactor, it will again be assumed the conditions in the discharge-region and the reactor match. This formulation is chosen due to the fact that it yielded a higher Mach number for the inlet, thus will probably reach sonic conditions first. Therefore, representing the "worst case" in the sense that it yields the lowest amount of mass flow needed to force the inlet sonic. After inserting the isentropic ratios and rearranging the equation yields:

$$m_L = Ap_r \sqrt{\frac{\gamma}{RT_r}} \cdot \left[\left(1 + \frac{\gamma - 1}{2} \right)^{-\frac{\gamma + 1}{2(\gamma - 1)}} \right]$$

Assuming $p_r = 1bar$ in the reactor at a temperature $T_r = 500$ K this yields:

$$m_L = 8.1507 \cdot 10^{-8} \frac{\text{kg}}{\text{s}}.$$

Compare with Mass flow of full isentropic case and for disconnected reservoirs without leak. Maybe not even here but in the chapters themselves.

3.6 Under-expanded nozzle plume at outlet

Once the gas emerges from the reactor and enters the outlet nozzle, it undergoes a rapid expansion into a low-pressure or near-vacuum environment. This regime differs significantly from the upstream flow: velocity increases dramatically, density drops, and shock formations or rarefaction waves can appear. Traditional one-dimensional isentropic models cannot fully capture these effects, especially if there is phase change (e.g., condensation) or a transition to free-molecular flow. Hence, more advanced modeling approaches are required.

Method of characteristics

Ideal nozzle design The method of characteristics is a mathematical technique used to design supersonic nozzles so that gas flows expand smoothly from sonic to supersonic speeds without generating internal shocks. It works by tracing characteristic lines—paths along which flow properties remain constant—through the nozzle region. By aligning the walls with these lines it ensures that each incremental flow turn occurs through a series of controlled expansion waves, rather than abrupt angle changes that could cause shocks. If fully expanded this leads to a straight column of gas leaving the nozzle, where all of its energy is converted into kinetic energy without significant losses due to shocks.

Determining flow field for free expansion In an under-expanded jet, the method of characteristics can also be applied immediately downstream of the nozzle exit to predict the initial spread of the flow. It does this by mapping local Mach numbers and density profiles along characteristic lines, thus giving a first approximation for velocity and pressure distributions. In supersonic expansions, Prandtl–Meyer expansion fans define the maximum turning angle the gas can undergo around a sharp corner. By incorporating these fans, the method of characteristics predicts the outer boundary of the flow—effectively identifying the angle outside which the density and mass flux become negligible. This angle is critical for determining the lateral extent of the underexpanded plume and for estimating where essentially all of mass flow is confined.

Notably, findings from Cassanova and Stephenson (1965)—even though their nozzle half-angle does not match ours—still offer valuable reference points regarding expansion ratios and associated flow features. However, a key limitation arises if condensation or other non-ideal processes occur. Experiments show that for working fluids like nitrogen, condensation in the expansion region can alter the thermodynamic state and produce deviations from these idealized solutions. Consequently, while the method of characteristics remains valuable for nozzle design and near-exit expansions, it cannot fully capture condensation effects or strong rarefaction phenomena further downstream. [19, 20]

Navier-Stokes Equations

A second option is to solve the Navier–Stokes equations numerically, using no-slip or first/second-order slip boundary conditions as appropriate. Near the nozzle exit—where the flow is still predominantly continuum—Navier–Stokes simulations can provide detailed velocity and pressure fields, including shock structures and boundary-layer effects. As the gas expands and its density decreases, however, continuum assumptions start to break down. While slip or transitional models can extend the validity range, ultimately they cannot fully describe the molecular-level interactions that dominate in highly rarefied regions. Consequently, beyond a certain distance from the nozzle exit

or under conditions favorable to partial condensation, Navier–Stokes solutions must be supplemented by more advanced kinetic-based methods.

Direct simulation Monte Carlo (DSMC)

To address the shortcomings of both the method of characteristics (under non-ideal conditions) and Navier-Stokes (when rarefaction becomes significant), the Direct Simulation Monte Carlo (DSMC) method is indispensable. DSMC performs a stochastic simulation of molecular motion and collisions, making it particularly well suited for:

- Transitional Regimes: Where the mean free path is comparable to or larger than the nozzle scale, DSMC accurately captures Knudsen-layer effects and velocityslip phenomena.
- Condensation Phenomena: By including collision physics and intermolecular potentials, DSMC can handle the onset of condensation or two-phase flow more reliably than continuum or purely isentropic approaches.
- Free Expansion: As the jet spreads into the vacuum and transitions toward freemolecular flow, DSMC seamlessly handles extremely high Mach numbers and very low densities, maintaining physical fidelity across a wide range of Knudsen numbers.

Although more computationally expensive than continuum-based methods, DSMC provides the most robust depiction of outlet flows—particularly for condensable gases like nitrogen—and ensures high accuracy from near-nozzle regions all the way to the fully rarefied state. [4, 21]

Summary

Overall, while the method of characteristics remains a cornerstone of ideal nozzle design and near-exit expansions (including the prediction of Prandtl-Meyer fans and maximum turning angles), condensation and severe rarefaction invalidate its purely isentropic assumption further downstream. Navier-Stokes simulations can capture intermediate regimes near the exit, but eventually fail in the highly rarefied or partially condensed flow domain. For a comprehensive treatment of under-expanded plumes—particularly with nitrogen or other condensable working fluids—the DSMC technique offers the necessary level of detail, bridging the gap from continuum flow at the nozzle exit to free-molecular flow far downstream.

Discussion

Intro Go through the analytical part in words. Mention things not done. Create red line.

Conclusion

Symbols and Notation

Primary Symbols and Definitions

internal energy per unit mass

speed of sound specific volume, $\frac{1}{\rho}$ avelocity components parallel to flow \boldsymbol{A} cross-sectional area of a duct uvelocity components perpendicular to mass density vρ specific heat at constant pressure flow c_p Vspecific heat at constant volume speed of flow c_v V_{∞} maximum speed at absolute zero enthalpy per unit mass, u + pvh $\sqrt{M^2 - 1}$ characteristic length β L_c Mach number, $\frac{V}{a}$ $\frac{c_p}{c}$ (ratio of specific heats) M γ pressure shock-wave angle from upstream dipdynamic pressure, $\frac{\rho V^2}{2}$ rection qMach angle, $\sin^{-1} \frac{1}{M}$ Rgas constant μ absolute viscosity μ entropy per unit mass sPrandtl-Meyer angle Tabsolute temperature

Subscripts

free-stream conditions
 total/stagnation conditions
 critical conditions (local speed equals local speed of sound)
 thermally and calorically perfect gas
 thermally perfect, calorically imperfect gas

Notations

[perf] thermally and calorically perfect gas.
[therm perf] thermally perfect but calorically imperfect gas.
[isen] isentropic flow process (not valid for shock waves).
[adiab] adiabatic process (no heat transfer, may or may not be isentropic).

Formulary

Thermodynamics

Thermal Equations of State

Is in general an equation of the form

$$p = p(v, T) \tag{1}$$

Commonly used equations of state for thermally perfect gases Ideal gas law add different formulations, and check if R

$$p = \rho RT$$
 [therm perf] (2)

1D Euler equation

$$\frac{1}{\rho}dp + VdV = 0 \quad \text{[therm perf]} \tag{3}$$

Control Volume Analysis

Continuity Equation:

$$\frac{d}{dt} \int_{V} \rho \, dV + \int_{S} \rho V \cdot dA = 0 \tag{4}$$

In case of one-dimensional flow $\frac{\partial}{\partial t} = 0$ for a given inlet/outlet:

$$\int \rho(\vec{V} \cdot \hat{n}) dA = \rho \vec{V} \cdot \hat{n} \int dA = \rho V A \tag{5}$$

Thus for steady one-dimensional flow:

$$0 = \sum \rho V A \tag{6}$$

Momentum Equation:

$$\frac{d}{dt} \int_{V} \rho V \, dV + \int_{S} \rho V (V \cdot dA) = -\int_{S} p \, dA + \int_{V} \rho g \, dV \tag{7}$$

Energy Equation:

$$\frac{d}{dt} \int_{V} \rho e \, dV + \int_{S} \rho h V \cdot dA = \dot{Q} - \int_{S} p V \cdot dA \tag{8}$$

Continuous one-dimensional flow

Speed of Sound:

$$a = \sqrt{\left(\frac{\partial p}{\partial \rho}\right)_s} = \sqrt{\gamma \left(\frac{\partial p}{\partial \rho}\right)_T} \tag{9}$$

$$a = \sqrt{\gamma \frac{p}{\rho}} = \sqrt{\gamma RT} \quad [\text{therm perf}] \tag{10}$$

Mach Number:

$$M = \frac{V}{a} \tag{11}$$

Area-ratio in terms of mach number:

$$\frac{A}{A^*} = \frac{1}{M} \left[\frac{2}{\gamma + 1} \left(1 + \frac{\gamma - 1}{2} M^2 \right) \right]^{\frac{\gamma + 1}{2(\gamma - 1)}} \quad \text{[isen, perf]} \tag{12}$$

Isentropic Relations:

$$\frac{p}{\rho^{\gamma}} = \text{constant} = \frac{p_t}{\rho_t^{\gamma}}$$
 [isen, perf] (13)

From this:

$$\frac{p}{p_0} = \left(\frac{\rho}{\rho_0}\right)^{\gamma} = \left(\frac{T}{T_0}\right)^{\frac{\gamma}{\gamma - 1}} = \left(\frac{a}{a_0}\right)^{\frac{2\gamma}{\gamma - 1}} \quad [isen, perf] \tag{14}$$

Bernoulli's Equation for Compressible Flow

$$\frac{\gamma}{\gamma - 1} \left(\frac{p_0}{\rho_0}\right)^{\frac{\gamma - 1}{\gamma}} \left(\frac{p}{p_0}\right)^{\frac{1}{\gamma}} + \frac{V^2}{2} = \frac{\gamma}{\gamma - 1} \frac{p_0}{\rho_0} \quad [\text{isen, perf}] \tag{15}$$

Stagnation Relations

$$\frac{T}{T_0} = \left(1 + \frac{\gamma - 1}{2}M^2\right)^{-1} \quad [adiab, perf] \tag{16}$$

$$\frac{p}{p_0} = \left(1 + \frac{\gamma - 1}{2}M^2\right)^{-\frac{\gamma}{\gamma - 1}} \quad [isen, perf] \tag{17}$$

$$\frac{\rho}{\rho_0} = \left(1 + \frac{\gamma - 1}{2}M^2\right)^{-\frac{1}{\gamma - 1}} \quad \text{[isen, perf]} \tag{18}$$

$$\frac{a}{a_0} = \left(1 + \frac{\gamma - 1}{2}M^2\right)^{-\frac{1}{2}} \quad [adiab, perf] \tag{19}$$

List of Figures

1	Dimensions of the micro-reactor assembly [1]	3
2	Mean velocity parallel to the flow at a point x inside a constant area	
	duct in molecular flow	6
3	Velocity distribution at a point x inside a constant area duct with slip	
	boundary conditions. [2]	7
4	Velocity distribution at a point x inside a constant area duct with non-	
	slip boundary conditions. (Continuum flow) [2]	7
5	Change in flow properties in subsonic nozzles and diffusers $[2]$	9
6	Change in flow properties in supersonic nozzles and diffusers [2]	10
7	Non-technical drawing of the inlet nozzle geometry (not in proportion) .	12
8	Non-technical drawing of the reactor geometry (not in proportion)	12
9	Values for the dynamic viscosity of nitrogen using the Sutherland for-	
	mula, with addition of two square-error, best-fits of the Sutherland for-	
	mula in the range of $200 < T < 600$, one with intercept being forced to	
	zero	14
10	Isentropic temperature, pressure, and density ratios (equations (16) -	
	(18)) as a function of Mach number for $\gamma = 1.47$	15
11	A descriptive caption for the figure	18
12	A descriptive caption for the figure	23
13	A descriptive caption for the figure	26

List of Tables

1	Isentropic flow properties for different conditions	19
2	Knudsen and Reynolds numbers for $p_0 = 1.5 \mathrm{bar}$ and $T_0 = 300,500 \mathrm{K}$	
	using values from table 1. The highlighted cell indicates a transitional	
	regime	20

References

- 1. LAGIN, A. Advancing Single-Atom Catalysis: Development of an Apparatus for Reactions at Near Ambient Pressure [Poster presented at the Institute of Applied Physics, Vienna University of Technology (TU Wien), Surface Physics Group]. 2025. Project presentation.
- 2. ÇENGEL, Yunus A.; CIMBALA, John M. Fluid Mechanics: Fundamentals and Applications. 4th. New York, NY: McGraw Hill, LLC, 2017. Mechanical Engineering.
- 3. RAPP, Bastian E. *Microfluidics: Modeling, Mechanics and Mathematics.* Oxford, UK: Elsevier, 2017. ISBN 978-1-4557-3141-1. Available from DOI: 10.1016/C2012-0-02230-2.
- 4. PUTIGNANO, Massimiliano. Supersonic Gas-Jet Based Beam Profile Monitor. Liverpool, UK, 2012. PhilosophiæDoctor (PhD). University of Liverpool.
- 5. ANDERSON, John D. Modern Compressible Flow: With Historical Perspective. 4th. New York: McGraw-Hill Education, 2021. ISBN 9781260570556.
- 6. KIM, Youn J.; KIM, You-Jae; HAN, J.-G. Numerical analysis of flow characteristics of an atmospheric plasma torch. 2004. Available from arXiv: physics/0410237 [physics.class-ph].
- 7. BIRD, G. A. *DSMC The DSMC method*. Version 1.2. S.l.: G. A. Bird, 2013. ISBN 978-1-4921-1290-7.
- 8. GRABE, Martin. Numerical Simulation of Nitrogen Nozzle Expansion Using Kinetic and Continuum Approaches. In: *Proceedings of the 59th International Astronautical Conference 2008*. Glasgow, 2008. Open Access. Available at https://elib.dlr.de/55152/.
- 9. LI, Wen-Hsiung; LAM, Sau-Hai. *Principles of Fluid Mechanics*. Reading, Massachusetts: Addison-Wesley, 1964. Addison-Wesley Series in Engineering Science: Mechanics and Thermodynamics. Consulting editors: Bernard Budiansky and Howard W. Emmons.
- 10. AMES RESEARCH STAFF. Equations, Tables, and Charts for Compressible Flow. Moffett Field, CA, 1953. Tech. rep., Report 1135. National Advisory Committee for Aeronautics. Available also from: https://ntrs.nasa.gov/api/citations/19930091059/downloads/19930091059.pdf.
- 11. COMSOL. Microfluidics Module User's Guide. Stockholm, Sweden: COMSOL AB, 2022. Version: COMSOL 6.1, Part number: CM021901. Available at: www.comsol.
- SALAS, M.D.; ABARBANEL, S.; GOTTLIEB, D. Multiple steady states for characteristic initial value problems. Applied Numerical Mathematics. 1986, vol. 2, no. 3, pp. 193–210. ISSN 0168-9274. Available from DOI: https://doi.org/10.1016/0168-9274(86)90028-0. Special Issue in Honor of Milt Rose's Sixtieth Birthday.
- 13. Fundamentals of Gas Dynamics [online]. Princeton University Press, 1958 [visited on 2025-01-21]. ISBN 9780691626499. Available from: http://www.jstor.org/stable/j.ctt183pg9x.
- 14. HALL, Nancy. *Isentropic Flow Equations* [online]. [N.d.]. [visited on 2024-07-18]. Available from: https://www.grc.nasa.gov/www/k-12/airplane/isentrop.html.

- 15. BENSON, Ben. Mass Flow Rate Equations [online]. [N.d.]. [visited on 2025-01-27]. Available from: https://www.grc.nasa.gov/www/k-12/VirtualAero/BottleRocket/airplane/mchkdrv.html.
- 16. CANTWELL, Brian. AA210A: Fundamentals of Compressible Flow Course Introduction. 2020. Presentation slide with a rocket test image on cover.
- 17. AGRAWAL, Amit. A Comprehensive Review on Gas Flow in Microchannels. *International Journal of Micro-Nano Scale Transport* [online]. 2011, vol. 2, no. 1, pp. 1–40 [visited on 2024-07-09]. ISSN 1759-3093. Available from: http://doi.org/10.1260/1759-3093.2.1.1. Number: 1 Publisher: Multi-Science Publishing.
- 18. WANG, Moran; LAN, Xudong; LI, Zhixin. Analyses of gas flows in micro- and nanochannels. *International Journal of Heat and Mass Transfer* [online]. 2008, vol. 51, no. 13-14, pp. 3630-3641 [visited on 2024-11-18]. ISSN 00179310. Available from DOI: 10.1016/j.ijheatmasstransfer.2007.10.011.
- 19. ROBERTSON, S. J. Investigation of the steady expansion of a gaseous axisymmetric jet into a vacuum Final report [online]. 1970-01. [visited on 2024-08-22]. Tech. rep., HREC-1490-2. Available from: https://ntrs.nasa.gov/citations/19700021503. NTRS Author Affiliations: Lockheed Missiles and Space Co. NTRS Document ID: 19700021503 NTRS Research Center: Legacy CDMS (CDMS).
- 20. CASSANOVA, R. A.; STEPHENSON, W. B. Expansion of a Jet into Near Vacuum. 1965-08. Tech. rep., AEDC-TR-65-151. Aerospace Environmental Facility, Arnold Engineering Development Center, Air Force Systems Command, Arnold Air Force Station, Tennessee. Available also from: https://apps.dtic.mil/sti/ tr/pdf/AD0469041.pdf. Approved for public release; distribution is unlimited.
- 21. LIU, Minghou; ZHANG, Xianfeng; ZHANG, Genxuan; CHEN, Yiliang. Study on micronozzle flow and propulsion performance using DSMC and continuum methods. *Acta Mechanica Sinica* [online]. 2006, vol. 22, no. 5, pp. 409–416 [visited on 2025-02-24]. ISSN 1614-3116. Available from DOI: 10.1007/s10409-006-0020-y.

A Code

A.1 Calculations - SMath

See: https://smath.com/

3/12/25, 3:37 PM

calculations_thesis - SMath Studio in the Cloud

$$y := 1.47$$
 $M_m := 28.01 \frac{\text{gram}}{\text{mol}}$ $R_s := \frac{R_m}{M_m} = 296.8394 \cdot \frac{1}{\text{K}} \frac{\text{J}}{\text{Kg}}$ $A_3 := 100000 \, \text{micron}^2 = 0.1 \, \text{mm}^2$ $A_4 := 100 \cdot \pi \, \text{micron}^2$ $A_5 := 400 \cdot \pi \, \text{micron}^2$ $T_t := 500 \, \text{K}$ $p_t := 1.5 \, \text{bar}$

 $r_t := 500 \text{ K} \quad p_t :=$ Isentropic Massflow:

$$\textit{massflow}\left(\textit{V} \text{ ,M ,A ,} \textit{T}_{t} \text{ ,} \textit{p}_{t}\right) \coloneqq \textit{A} \cdot \textit{p}_{t} \cdot \sqrt{\frac{\textit{Y}}{\textit{R}_{s} \cdot \textit{T}_{t}}} \cdot \textit{M} \cdot \left(1 + \frac{\textit{Y} - 1}{2} \cdot \textit{M}^{2}\right) = \frac{\textit{Y} + 1}{2 \cdot (\textit{Y} - 1)}$$

Dynamic Viscosity using sutherlands formular:

Knudsen number:

$$knudsen\; \left(p\;, T\;, L_{c}\;\right) \coloneqq \frac{sutherland\; \left(T\;\right) \cdot R_{s}}{p \cdot L_{c}} \cdot \sqrt{\frac{\pi \cdot M_{m} \cdot T^{*}}{2\;k\;N_{A}}}$$

Reynolds number:

reynolds
$$(p, T, L_c) := \frac{p \cdot L_c}{R_s \cdot T \cdot sutherland(T)}$$

Isentropic Relations

$$solve_machnumber_sub\; \left(A_{ratio}\;, Y\;\right) := solve \left[\frac{1}{M} \cdot \left[\left(\frac{2}{\gamma+1}\right) \cdot \left(1 + \frac{\gamma-1}{2} \cdot M^2\right)\right] \xrightarrow{\frac{\gamma+1}{2 \cdot (\gamma-1)}} - A_{ratio} = 0\;, M\;, 0\;, 1\right]$$

$$solve_machnumber_super \left(A_{ratio} \text{ ,} \gamma\right) := solve \left[\frac{1}{M} \cdot \left(\left[\frac{2}{\gamma+1}\right] \cdot \left(1 + \frac{\gamma-1}{2} \cdot M^2\right)\right)^{\frac{\gamma+1}{2 \cdot (\gamma-1)}} - A_{ratio} = 0 \text{ ,} M \text{ ,} 1 \text{ ,} 12\right] \right] = A_{ratio} = 0 \text{ ,} M \text{ ,} 1 \text{ ,} 12$$

Position 3 (middle of Reactor): Table isentropic 1D flow:

M_{3.1} :=
$$solve_machnumber_sub$$
 (318, y) = $M_{3.1} := 0.0018$

$$\textit{m}_{3.1} \coloneqq \textit{massflow} \left(\textit{y} \text{ ,} \textit{M}_{3.1} \text{ ,} \textit{A}_{3} \text{ ,} \textit{T}_{t} \text{ ,} \textit{p}_{t} \right) = 8.4972 \cdot 10^{-8} \frac{\textit{kg}}{\textit{s}}$$

$$p_{3.1.to.total} := pressure_to_total(y, M_{3.1}) = 1$$

$$T_{3.1.to.total} := temp_to_total(y, M_{3.1}) = 1$$

$$M_{3.2} := solve_machnumber_super$$
 (318 ,y) = 10.543

$$m_{3.2} := massflow (y, M_{3.2}, A_3, T_t, p_t) = 8.5253 \cdot 10^{-8} \frac{kg}{s}$$

$$p_{3.2.to.total} := pressure_to_total(y, M_{3.2}) = 3.2891 \cdot 10^{-5}$$

$$T_{3.2.to.total} := temp_to_total(\gamma, M_{3.2}) = 0.0369$$

Position 2 & 4 (nozzle throats):

$$m_{2.4} := massflow (y, 1, A_4, T_t, p_t) = 8.517 \cdot 10^{-8} \frac{kg}{s}$$

https://smath.com/en-US/cloud/sheet/nwmCPFvWGx

1/3

3/12/25, 3:37 PM

calculations_thesis - SMath Studio in the Cloud

 $p_{2.4.\,to.\,total} \coloneqq pressure_to_total~(y~,1) = 0.5168$

 $\rho_{2.4.to.total} = density_to_total(y, 1) = 0.6382$

 $\textit{T}_{\textit{2.4.to.total}} \coloneqq \textit{temp_to_total} \; (\textit{y ,1}) = \textit{0.8097}$

Position 5 (outlet nozzle exit plane):

 $M_{5.1} := solve_machnumber_sub (4 , y) = 0.1455$

 $m_{5.1} := massflow (\gamma, M_{5.1}, A_5, T_t, p_t) = 8.5169 \cdot 10^{-8} \frac{kg}{s}$

 $p_{5.2.to.total} := pressure_to_total (y , M_{5.2}) = 0.0262$ $p_{5.1.to.total} := pressure_to_total (\gamma, M_{5.1}) = 0.9846$

 $\rho_{5.1.\,to.\,total} \coloneqq \textit{density_to_total}\left(\textit{y}~,\textit{M}_{5.1}\right) = \texttt{0.9895}$

 $\rho_{5.2.\,to.\,total} \coloneqq \textit{density_to_total}\left(\textit{y}~,\textit{M}_{5.2}\right) = \texttt{0.0839}$

 $m_{5.2} := massflow (\gamma, M_{5.2}, A_5, T_t, p_t) = 8.517 \cdot 10^{-8} \frac{kg}{s}$

 $M_{5.2} := solve_machnumber_super (4, y) = 3.063$

 $T_{5.1.to.total} := temp_to_total(y, M_{5.1}) = 0.9951$

 $T_{5.2.to.total} \coloneqq temp_to_total\left(\text{y ,M}_{5.2}\right) = 0.312$

 $L_{c.\,1} \coloneqq \text{40 micron} \qquad \qquad L_{c.\,2} \coloneqq \text{40 micron}$

 $L_{c.3} := 40 \; \mathrm{micron}$

 $L_{c,4} := 20 \text{ micron}$ $L_{c,5} := 40 \text{ micron}$

 $\textit{Kn}_{1} \coloneqq \textit{knudsen} \left(p_{t} \; , \textit{T}_{t} \; , \textit{L}_{\textit{C.1}} \right) = 0.0021 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{T}_{t} \; \cdot \textit{T}_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{T}_{t} \; \cdot \textit{T}_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{T}_{t} \; \cdot \textit{T}_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{T}_{t} \; \cdot \textit{T}_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{Knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{T}_{t} \; \cdot \textit{T}_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{Knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{Knudsen} \left(p_{t} \; \cdot p_{2.4.\, \text{to.total}} \; , \textit{L}_{\textit{C.2}} \right) = 0.0032 \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{L}_{\textit{C.2}} \; , \textit{L}_{\textit{C.2}} \; ; \textit{L$

 $\mathit{Kn_3} \coloneqq \mathit{knudsen} \; \left(p_t \cdot p_{3.1.to.total} \;, \mathit{T}_t \cdot \mathit{T}_{3.1.to.total} \;, \mathit{L}_{c.3} \right) = 0.0021$

 $\mathit{Kn}_5 \coloneqq \mathit{knudsen} \; \left(\mathit{p}_t \cdot \mathit{p}_{5.2.to.total} \;, \mathit{T}_t \cdot \mathit{T}_{5.2.to.total} \;, \mathit{L}_{c.5} \right) = \texttt{0.0181}$

 $\textit{Re}_{\underline{1}} \coloneqq \textit{reynolds} \left(p_{\underline{t}} \text{ , } \mathsf{T}_{\underline{t}} \text{ , } \mathsf{L}_{c,1} \right) = 1.5254 \frac{\underline{s}}{\underline{m}} \\ \qquad \textit{Kn}_{2.4} \coloneqq \textit{knudsen} \left(p_{\underline{t}} \cdot p_{2.4.to.total} \text{ , } \mathsf{T}_{\underline{t}} \cdot \mathsf{T}_{2.4.to.total} \text{ , } \mathsf{L}_{c,2} \right) = 0.0032 \\ \qquad \qquad \mathsf{Re}_{\underline{t}} \coloneqq \mathsf{reynolds} \left(p_{\underline{t}} \cdot p_{2.4.to.total} \text{ , } \mathsf{T}_{\underline{t}} \cdot \mathsf{T}_{2.4.to.total} \text{ , } \mathsf{L}_{c,2} \right) = 0.0032 \\ \qquad \qquad \mathsf{Re}_{\underline{t}} \coloneqq \mathsf{reynolds} \left(p_{\underline{t}} \cdot p_{2.4.to.total} \text{ , } \mathsf{T}_{\underline{t}} \cdot \mathsf{T}_{2.4.to.total} \text{ , } \mathsf{L}_{c,2} \right) = 0.0032 \\ \qquad \mathsf{Re}_{\underline{t}} \coloneqq \mathsf{reynolds} \left(p_{\underline{t}} \cdot p_{2.4.to.total} \text{ , } \mathsf{T}_{\underline{t}} \cdot \mathsf{T}_{2.4.to.total} \text{ , } \mathsf{L}_{c,2} \right) = 0.0032 \\ \qquad \mathsf{Re}_{\underline{t}} \coloneqq \mathsf{Re}_{\underline{t}} = \mathsf{Re}_{\underline{$

 $\mathit{Kn}_3 \coloneqq \mathit{knudsen} \; \left(\rho_t \cdot \rho_{3.1.to.total} \;, \mathit{T}_t \cdot \mathit{T}_{3.1.to.total} \;, \mathit{L}_{c.3} \right) = \texttt{0.0021}$

 $\mathit{Kn}_5 \coloneqq \mathit{knudsen} \ \left(p_t \cdot p_{5.2.to.total} \ , \mathsf{T}_t \cdot \mathsf{T}_{5.2.to.total} \ , \mathsf{L}_{c.5} \right) = \texttt{0.0181}$

Disconneted Reservoirs (Isentropic):

$$\mathbf{M}_{\theta} \coloneqq \left(1 + \frac{\gamma - 1}{2}\right) - \frac{\gamma + 1}{2 \cdot (\gamma - 1)} = 0.5743$$

 $p_{ratio} := pressure_to_total(y, M_{\theta}) = 0.7918$

 $T_{ratio} := temp_to_total(y, M_{\theta}) = 0.9281$ $\rho_{ratio} := density_to_total(y, M_{\theta}) = 0.85$

Disconneted Reservoirs (Isothermal):

$$f := \left[-\frac{1}{\gamma - 1} + \sqrt{\frac{1}{\left(\gamma - 1\right)^2} + \frac{2}{\gamma - 1} \cdot \left(\frac{2}{\gamma + 1}\right)^{\frac{\gamma + 1}{\gamma - 1}}} \right] = 0.3076 \qquad M_{\theta} := \sqrt{f'} = 0.5546$$

 $\boldsymbol{p}_{ratio} \coloneqq pressure_to_total\left(\mathbf{y}~, \mathbf{M}_{\theta}~\right) = \mathbf{0.8039}$

Formulation with leak (isentopic connection):

https://smath.com/en-US/cloud/sheet/nwmCPFvWGx

3/12/25, 3:37 PM

calculations_thesis - SMath Studio in the Cloud

$$\begin{aligned} & \text{$m_{L.isen}\left(A_{\text{A}}, \text{Y}, \text{T_r}, p_r\right)$} &:= A \cdot p_r \cdot \sqrt{\frac{Y}{R_{\text{S}} \cdot T_r}} \cdot \left\{1 - \left(1 + \frac{Y - 1}{2}\right)^{-\frac{Y + 1}{2 \cdot (Y - 1)}}\right\} \\ & \text{$m_{L.isen}\left(A_{\text{A}}, \text{Y}, \text{T_t}, p_t\right)$} &= 6 \cdot 3135 \cdot 10^{-8} \cdot \frac{kg}{s} \end{aligned}$$

Formulation with leak (isothermal connection):

$$\begin{split} & \textit{m}_{\textit{L.iso}} \left[\textit{A} \text{ , } \textit{Y} \text{ , } \textit{T}_{r} \text{ , } \rho_{r} \right] := \textit{A} \cdot \rho_{r} \cdot \sqrt{\frac{\textit{Y}}{\textit{R}_{s} \cdot \textit{T}_{r}}} \cdot \left[1 + \frac{\textit{Y} - 1}{2} \right]^{-\frac{\textit{Y} + 1}{2 \cdot \left\{\textit{Y} - 1\right\}}} \cdot \left[\left[1 + \frac{\textit{Y} - 1}{2} \right]^{\frac{\textit{Y}}{\textit{Y} - 1}} - 1 \right] \\ & \textit{m}_{\textit{L.iso}} \left[\textit{A}_{\textit{A}} \text{ , } \textit{Y} \text{ , } \textit{T}_{t} \text{ , } \rho_{t} \right] = 7.9642 \cdot 10^{-8} \frac{\text{kg}}{\text{s}} \end{split}$$

https://smath.com/en-US/cloud/sheet/nwmCPFvWGx

A.2 Python

Packages:

- NumPy: https://numpy.org/
- SciPy: https://scipy.org/

A.2.1 Sutherland minimum mean square error - Python

Listing 1: Minimum mean square error best fit linearization for Sutherland formula

```
import numpy as np
2
   \tt def \ sutherland(T, \ mu\_ref=1.716e-5, \ T\_ref=273.15, \ S=110.4):
3
       return mu_ref * (T / T_ref) ** (3/2) * (T_ref + S) / (T + S)
4
  # Generate temperatures and compute dynamic viscosities
  T_values = np.linspace(200, 1000, 100)
   mu_values = sutherland(T_values)
_{\rm 10} \, # Filter data for the range between 200 and 600 K
  mask = (T_values >= 200) & (T_values <= 600)
11
12 T_fit = T_values[mask]
13 mu_fit = mu_values[mask]
14
  # Compute the best-fit linear regression over the selected range
15
  slope, intercept = np.polyfit(T_fit, mu_fit, 1)
16
   print(f"Slope: {slope}, Intercept: {intercept}")
17
18
   slope_i0 = np.sum(T_fit * mu_fit) / np.sum(T_fit**2)
19
   print(f"Slope: {slope_i0} with intercept = 0")
```

A.2.2 Solve Mach number from area ratio - Python

Listing 2: Solve Mach number from area ratio using scipy fsolve from: code/solve-mach-number.py)

```
1 import numpy as np
2 from scipy.optimize import fsolve
   def mach_area_relation(M, A_Astar, gamma):
4
       """Equation to solve for Mach number M."""
5
       return (1 / M) * ((2 / (gamma + 1)) * (1 + ((gamma - 1) / 2) * M**2))
6
           **((gamma + 1) / (2 * (gamma - 1))) - A_Astar
7
   def solve_mach(A_Astar, gamma, M_guess=1.0):
8
9
       """Solves for Mach number M given A/A* and gamma."""
       M_solution = fsolve(mach_area_relation, M_guess, args=(A_Astar, gamma
10
       return M_solution[0]
11
   A_Astar = 318
13
   gamma = 1.47
14
15 M_solution = solve_mach(A_Astar, gamma, 0.1)
16 print(f"Solved Mach number: {M_solution:.5f}")
```