

Document Title	Specification of CRC Routines
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	16

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R21-11

Document Change History			
Date	Release	Changed by Description	
2021-11-25	R21-11	AUTOSAR Release Management	 Minor corrections / clarifications / editorial changes Changed Document Status from Final to published
2020-11-30	R20-11	AUTOSAR Release Management	Improved the structure of the 'error sections'
2019-11-28	R19-11	AUTOSAR Release Management	No content changesChanged Document Status from Final to published
2018-10-31	4.4.0	AUTOSAR Release Management	 Introduction of a new CRC-16 with the polynomial 0x8005 Editorial changes
2017-12-08	4.3.1	AUTOSAR Release Management	Editorial changes
2016-11-30	4.3.0	AUTOSAR Release Management	 Introduction of a new CRC-64 for E2E Profile 7 Editorial changes
2015-07-31	4.2.2	AUTOSAR Release Management	Corrected the magic check for the CRC32 and CRC32P4
2014-10-31	4.2.1	AUTOSAR Release Management	 Introduction of a new CRC-32 with the polynomial 0xF4ACFB13 Editorial changes



2014-03-31	4.1.3	AUTOSAR Release Management	 CRC32 IEEE 802.3 check values corrected Editorial changes
2013-10-31	4.1.2	AUTOSAR Release Management	Editorial changesRemoved chapter(s) on change documentation
2013-03-15	4.1.1	AUTOSAR Administration	 New examples on how to use CRC routines and clarifications concerning CCITT standard Removal of debugging concept
2011-12-22	4.0.3	AUTOSAR Administration	The GetVersionInfo API is always available
2010-09-30	3.1.5	AUTOSAR Administration	 New parameter added to APIs in or-der to chain CRC computations CRC check values corrected and checked values better explained CRC magic check added
2010-02-02	3.1.4	AUTOSAR Administration	 Introduction of a new CRC-8 with the polynomial 2Fh CRC-8 is now compliant to SAE J1850 Legal disclaimer revised
2008-08-13	3.1.1	AUTOSAR Administration	 Separated CRC requirements from Memory Services Requirements CRC8 management added
2008-02-01	3.0.2	AUTOSAR Administration	 Separated CRC requirements from Memory Services Requirements CRC8 management added
2007-12-21	3.0.1	AUTOSAR Administration	Document meta information extendedSmall layout adaptations made
2007-01-24	2.1.15	AUTOSAR Administration	 "Advice for users" revised "Revision Information" added
2006-11-28	2.1.1	AUTOSAR Administration	 Crc_CalculateCRC16 and Crc_CalculateCRC32 APIs, Crc_DataPtr parameter: void pointer changed to uint8 pointer Legal disclaimer revised



2006-05-16	2.0	AUTOSAR Administration	 Document structure adapted to common Release 2.0 SWS Template UML model introduction Requirements traceability update Reentrancy at calculating CRC with hardware support
2005-05-31	1.0	AUTOSAR Administration	Initial Release



Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



Table of Contents

1	Introduction and functional overview	7		
2	Acronyms and Abbreviations	8		
3	Related documentation			
	3.1 Input documents & related standards and norms	9		
4	Constraints and assumptions	10		
	4.1 Limitations	10 10		
5	Dependencies to other modules	11		
6	Requirements Tracing	12		
7	Functional specification	19		
	7.1.3 CRC calculation, Variations and Parameter 7.2 Standard parameters 7.2.1 8-bit CRC calculation 7.2.1.1 8-bit SAE J1850 CRC Calculation 7.2.1.2 8-bit 0x2F polynomial CRC Calculation 7.2.2 16-bit CRC calculation 7.2.2.1 16-bit CCITT-FALSE CRC16 7.2.2.2 16-bit 0x8005 polynomial CRC calculation 7.2.3 32-bit CRC calculation 7.2.3.1 32-bit Ethernet CRC Calculation	19 21 22 23 24 25 25 25 27 27		
	7.2.4 64-bit CRC calculation 7.2.4.1 64-bit ECMA polynomial CRC calculation 7.3 General behavior 7.4 Version check 7.5 Debugging concept 7.6 Error Classification 7.6.1 Development Errors 7.6.2 Runtime Errors 7.6.3 Transient Faults 7.6.4 Production Errors	28 29 29 30 30 30 31 31 31 31		
8	API specification	32		
	8.1 Imported types	32		

Specification of CRC Routines AUTOSAR CP R21-11



	8.2	Type defi	initions			32
	8.3		definitions			32
		8.3.1	8-bit CRC Calculation			35
		8.3.1.	.1 8-bit SAE J1850 CRC Calculation			35
		8.3.1.	.2 8-bit 0x2F polynomial CRC Calculation			37
		8.3.2	16-bit CRC Calculation			38
		8.3.2.				38
		8.3.2.				39
		8.3.3	32-bit CRC Calculation			40
		8.3.3.				40
		8.3.3.				41
		8.3.4	64-bit CRC Calculation			42
		8.3.4.	1 2			
			culation			42
		8.3.5	Crc_GetVersionInfo			43
	8.4		notifications			43
	8.5		ed functions			43
	8.6	•	d interfaces			44
		8.6.1	Mandatory interfaces			44
		8.6.2	Optional interfaces			44
	0.7	8.6.3	Configurable interfaces			44
	8.7	Service II	Interfaces	•	 •	44
9	Sequ	ience diagr	rams			45
	9.1	Crc Calc	culateCRC8()			45
	9.2		culateCRC8H2F()			45
	9.3		culateCRC16()			46
	9.4		culateCRC16ARC()			46
	9.5		culateCRC32()			47
	9.6	Crc Calc	culateCRC32P4()			47
	9.7		culateCRC64()			48
10	Conf		pecification			49
10			•			
	10.1		ead this chapter			49
		10.1.1	Configuration and configuration parameters			49
	400	10.1.2	Containers			49
	10.2		ers and configuration parameters			51
	100	10.2.1	Crc			52
	10.3	Published	d Information	•	 ٠	56
Α	Not a	applicable r	requirements			57



1 Introduction and functional overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module CRC.

The CRC library contains the following routines for CRC calculation:

• CRC8: SAEJ1850

• CRC8H2F: CRC8 0x2F polynomial

• CRC16

• CRC32

• CRC32P4: CRC32 0xF4ACFB13 polynomial

• CRC64: CRC-64-ECMA

For all routines (CRC8, CRC8H2F, CRC16, CRC32, CRC32P4 and CRC64), the following calculation methods are possible:

- Table based calculation: Fast execution, but larger code size (ROM table)
- Runtime calculation: Slower execution, but small code size (no ROM table)
- Hardware supported CRC calculation (device specific): Fast execution, less CPU time

All routines are re-entrant and can be used by multiple applications at the same time. Hardware supported CRC calculation may be supported by some devices in the future.



2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the CRC module that are not included in the [1, AUTOSAR glossary].

Abbreviation / Acronym:	Description:
CRC	Cyclic Redundancy Check
ALU	Arithmetic Logic Unit



3 Related documentation

3.1 Input documents & related standards and norms

- [1] Glossary AUTOSAR_TR_Glossary
- [2] General Specification of Basic Software Modules AUTOSAR SWS BSWGeneral
- [3] General Requirements on Basic Software Modules AUTOSAR SRS BSWGeneral
- [4] Requirements on Libraries AUTOSAR_SRS_Libraries
- [5] ITU-T Recommendation X.25: Interface between Data Terminal Equipment (DTE) and Data Circuit-terminating Equipment (DCE) for terminals operating in the packet mode and connected to public data networks by dedicated circuit http://www.itu.int/rec/dologin_pub.asp?lang=e&id=T-REC-X.25-199610-I!!PDF-E&type=items
- [6] 32-bit cyclic redundancy codes for Internet applications
- [7] Listing of CRCs, including CRC-64-ECMA https://en.wikipedia.org/wiki/Cyclic redundancy check
- [8] Layered Software Architecture AUTOSAR_EXP_LayeredSoftwareArchitecture
- [9] Specification of ECU Configuration AUTOSAR_TPS_ECUConfiguration
- [10] List of Basic Software Modules AUTOSAR TR BSWModuleList

3.2 Related specification

AUTOSAR provides a General Specification on Basic Software modules [2, SWS BSW General], which is also valid for CRC.

Thus, the specification SWS BSW General shall be considered as additional and required specification for AUTOSAR CRC Library.



4 Constraints and assumptions

4.1 Limitations

No known limitations.

4.2 Applicability to car domains

No restrictions.



5 Dependencies to other modules

There are no dependencies to other modules.



6 Requirements Tracing

The following tables reference the requirements specified in [3] and [4] and links to the fulfillment of these. Please note that if column "Satisfied by" is empty for a specific requirement this means that this requirement is not fulfilled by this document.

Requirement	Description	Satisfied by
[SRS_BSW_00005]	Modules of the μ C Abstraction	[SWS_Crc_00051]
	Layer (MCAL) may not have	
	hard coded horizontal interfaces	
[SRS_BSW_00006]	The source code of software	[SWS_Crc_00051]
	modules above the μ C	
	Abstraction Layer (MCAL) shall	
	not be processor and compiler	
	dependent.	
[SRS_BSW_00007]	All Basic SW Modules written in	[SWS_Crc_00051]
	C language shall conform to the	
	MISRA C 2012 Standard.	
[SRS_BSW_00009]	All Basic SW Modules shall be	[SWS_Crc_00051]
	documented according to a	
1000 DOW 000401	common standard.	10140
[SRS_BSW_00010]	The memory consumption of all	[SWS_Crc_00051]
	Basic SW Modules shall be	
	documented for a defined	
	configuration for all supported	
[SRS BSW 00101]	platforms. The Basic Software Module shall	[SWS Crc 00051]
[JUIOD_MSG_CAC]	be able to initialize variables and	[3W3_CIC_00051]
	hardware in a separate	
	initialization function	
[SRS_BSW_00160]	Configuration files of AUTOSAR	[SWS_Crc_00051]
[3113_B3W_00100]	Basic SW module shall be	[5445_616_66651]
	readable for human beings	
[SRS BSW 00161]	The AUTOSAR Basic Software	[SWS_Crc_00051]
[0.10_2011_00101]	shall provide a microcontroller	[6.1.6_6.6_6000.]
	abstraction layer which provides	
	a standardized interface to	
	higher software layers	
[SRS_BSW_00162]	The AUTOSAR Basic Software	[SWS_Crc_00051]
	shall provide a hardware	
	abstraction layer	
[SRS_BSW_00164]	The Implementation of interrupt	[SWS_Crc_00051]
	service routines shall be done	
	by the Operating System,	
	complex drivers or modules	
[SRS_BSW_00168]	SW components shall be tested	[SWS_Crc_00051]
	by a function defined in a	
	common API in the Basis-SW	
[SRS_BSW_00170]	The AUTOSAR SW Components	[SWS_Crc_00051]
	shall provide information about	
	their dependency from faults,	
	signal qualities, driver demands	



Requirement	Description	Satisfied by
[SRS_BSW_00172]	The scheduling strategy that is	[SWS_Crc_00051]
	built inside the Basic Software	
	Modules shall be compatible	
	with the strategy used in the	
	system	
[SRS_BSW_00302]	All AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules shall only export	
	information needed by other modules	
[SRS BSW 00304]	All AUTOSAR Basic Software	[SWS_Crc_00051]
[505_554/_00504]	Modules shall use only	[3W3_010_00031]
	AUTOSAR data types instead of	
	native C data types	
[SRS_BSW_00305]	Data types naming convention	[SWS_Crc_00051]
[SRS_BSW_00306]	AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules shall be compiler and	
	platform independent	
[SRS_BSW_00307]	Global variables naming	[SWS_Crc_00051]
	convention	
[SRS_BSW_00308]	AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules shall not define global	
	data in their header files, but in	
ICDC DCW 000001	the C file	[CMC Cro 00054]
[SRS_BSW_00309]	All AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules shall indicate all global data with read-only purposes by	
	explicitly assigning the const	
	keyword	
[SRS_BSW_00312]	Shared code shall be reentrant	[SWS_Crc_00051]
[SRS BSW 00314]	All internal driver modules shall	[SWS Crc 00051]
	separate the interrupt frame	
	definition from the service	
	routine	
[SRS_BSW_00321]	The version numbers of	[SWS_Crc_00051]
	AUTOSAR Basic Software	
	Modules shall be enumerated	
ICDC DCW 000001	according specific rules	[SWC Cro 00051]
[SRS_BSW_00323]	All AUTOSAR Basic Software Modules shall check passed API	[SWS_Crc_00051]
	parameters for validity	
[SRS BSW 00325]	The runtime of interrupt service	[SWS_Crc_00051]
[5115_5511_00025]	routines and functions that are	[5115_515_50551]
	running in interrupt context shall	
	be kept short	
[SRS_BSW_00327]	Error values naming convention	[SWS_Crc_00051]
[SRS_BSW_00328]	All AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules shall avoid the	
	duplication of code	
[SRS_BSW_00330]	It shall be allowed to use macros	[SWS_Crc_00051]
	instead of functions where	
	source code is used and runtime	
	is critical	



Requirement	Description	Satisfied by
[SRS_BSW_00331]	All Basic Software Modules shall	[SWS_Crc_00051]
	strictly separate error and status	
	information	
[SRS_BSW_00333]	For each callback function it	[SWS_Crc_00051]
	shall be specified if it is called	
ICDC DCW 002241	from interrupt context or not All Basic Software Modules shall	ICMC Cro 000E11
[SRS_BSW_00334]	provide an XML file that contains	[SWS_Crc_00051]
	the meta data	
[SRS_BSW_00335]	Status values naming	[SWS_Crc_00051]
[ene_sen_coses]	convention	[6.1.6_6.16_6.1]
[SRS_BSW_00336]	Basic SW module shall be able	[SWS_Crc_00051]
	to shutdown	
[SRS_BSW_00337]	Classification of development	[SWS_Crc_00051]
	errors	
[SRS_BSW_00339]	Reporting of production relevant	[SWS_Crc_00051]
	error status	
[SRS_BSW_00341]	Module documentation shall	[SWS_Crc_00051]
ICDC DCW 000401	contains all needed informations	[CMC Crc 00054]
[SRS_BSW_00342]	It shall be possible to create an AUTOSAR ECU out of modules	[SWS_Crc_00051]
	provided as source code and	
	modules provided as object	
	code, even mixed	
[SRS_BSW_00343]	The unit of time for specification	[SWS_Crc_00051]
	and configuration of Basic SW	
	modules shall be preferably in	
	physical time unit	
[SRS_BSW_00344]	BSW Modules shall support	[SWS_Crc_00051]
1000 DOW 000471	link-time configuration	FOWO 0 000541
[SRS_BSW_00347]	A Naming seperation of different instances of BSW drivers shall	[SWS_Crc_00051]
	be in place	
[SRS_BSW_00348]	All AUTOSAR standard types	[SWS_Crc_00051]
[0110_D011_00040]	and constants shall be placed	[6446_616_66661]
	and organized in a standard type	
	header file	
[SRS_BSW_00350]	All AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules shall allow the	
	enabling/disabling of detection	
	and reporting of development	
IODO DOW COOFOL	errors.	FOWO 0 000541
[SRS_BSW_00353]	All integer type definitions of	[SWS_Crc_00051]
	target and compiler specific scope shall be placed and	
	organized in a single type	
	header	
[SRS_BSW_00358]	The return type of init() functions	[SWS_Crc_00051]
	implemented by AUTOSAR	
	Basic Software Modules shall be	
	void	



Requirement	Description	Satisfied by
[SRS BSW 00359]	All AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules callback functions shall	
	avoid return types other than	
	void if possible	
[SRS_BSW_00360]	AUTOSAR Basic Software	[SWS_Crc_00051]
	Modules callback functions are	
	allowed to have parameters	
[SRS_BSW_00361]	All mappings of not standardized	[SWS_Crc_00051]
	keywords of compiler specific	
	scope shall be placed and	
	organized in a compiler specific	
ICDC DCW 002601	type and keyword header All AUTOSAR Basic Software	[CWC Cro 000E1]
[SRS_BSW_00369]		[SWS_Crc_00051]
	Modules shall not return specific development error codes via the	
	API	
[SRS_BSW_00373]	The main processing function of	[SWS_Crc_00051]
[0110_2011_00010]	each AUTOSAR Basic Software	[5115_515_55551]
	Module shall be named	
	according the defined	
	convention	
[SRS_BSW_00375]	Basic Software Modules shall	[SWS_Crc_00051]
	report wake-up reasons	
[SRS_BSW_00378]	AUTOSAR shall provide a	[SWS_Crc_00051]
	boolean type	
[SRS_BSW_00383]	The Basic Software Module	[SWS_Crc_00051]
	specifications shall specify	
	which other configuration files	
	from other modules they use at	
[CDC DCW 00204]	least in the description	ISMS Cro 000E11
[SRS_BSW_00384]	The Basic Software Module specifications shall specify at	[SWS_Crc_00051]
	least in the description which	
	other modules they require	
[SRS BSW 00385]	List possible error notifications	[SWS Crc 00051]
[SRS_BSW_00386]	The BSW shall specify the	[SWS_Crc_00051]
	configuration for detecting an	[
	error	
[SRS_BSW_00388]	Containers shall be used to	[SWS_Crc_00051]
	group configuration parameters	
	that are defined for the same	
	object	
[SRS_BSW_00389]	Containers shall have names	[SWS_Crc_00051]
[SRS_BSW_00395]	The Basic Software Module	[SWS_Crc_00051]
	specifications shall list all	
	configuration parameter	
[SRS_BSW_00398]	dependencies The link-time configuration is	[SWS_Crc_00051]
[36600_886]	achieved on object code basis in	[0440_010_00001]
	the stage after compiling and	
	before linking	
[SRS_BSW_00399]	Parameter-sets shall be located	[SWS_Crc_00051]
[in a separate segment and shall	[
	be loaded after the code	



Requirement	Description	Satisfied by
[SRS_BSW_00400]	Parameter shall be selected	[SWS_Crc_00051]
	from multiple sets of parameters	
	after code has been loaded and	
	started	
[SRS_BSW_00401]	Documentation of multiple	[SWS_Crc_00051]
	instances of configuration	
	parameters shall be available	
[SRS_BSW_00402]	Each module shall provide	[SWS_Crc_00050]
1000 DOW 004041	version information	10140 0 000541
[SRS_BSW_00404]	BSW Modules shall support	[SWS_Crc_00051]
ICDC DCW 004051	post-build configuration	[CWC Cre 00051]
[SRS_BSW_00405]	BSW Modules shall support	[SWS_Crc_00051]
[SRS_BSW_00406]	multiple configuration sets A static status variable denoting	[SWS_Crc_00051]
[3N3_B3W_00400]	if a BSW module is initialized	[3W3_010_00031]
	shall be initialized with value 0	
	before any APIs of the BSW	
	module is called	
[SRS_BSW_00407]	Each BSW module shall provide	[SWS_Crc_00011] [SWS_Crc_00017]
[0.10_2011_00101]	a function to read out the version	
	information of a dedicated	
	module implementation	
[SRS_BSW_00409]	All production code error ID	[SWS_Crc_00051]
	symbols are defined by the Dem	
	module and shall be retrieved by	
	the other BSW modules from	
	Dem configuration	
[SRS_BSW_00410]	Compiler switches shall have	[SWS_Crc_00051]
	defined values	
[SRS_BSW_00411]	All AUTOSAR Basic Software	[SWS_Crc_00011] [SWS_Crc_00017]
	Modules shall apply a naming	
	rule for enabling/disabling the	
[ODO DOW 00444]	existence of the API	101410 0 000541
[SRS_BSW_00414]	Init functions shall have a pointer to a configuration structure as	[SWS_Crc_00051]
	· ·	
[SRS BSW 00415]	single parameter Interfaces which are provided	[SWS_Crc_00051]
[313_531/_00413]	exclusively for one module shall	[3W3_010_00031]
	be separated into a dedicated	
	header file	
[SRS_BSW_00416]	The sequence of modules to be	[SWS_Crc_00051]
[0.10_2011_00110]	initialized shall be configurable	[6.1.6_6.16_6000.]
[SRS_BSW_00417]	Software which is not part of the	[SWS_Crc_00051]
. – – .	SW-C shall report error events	
	only after the DEM is fully	
	operational.	
[SRS_BSW_00422]	Pre-de-bouncing of error status	[SWS_Crc_00051]
	information is done within the	
	DEM	
[SRS_BSW_00423]	BSW modules with AUTOSAR	[SWS_Crc_00051]
	interfaces shall be describable	
	with the means of the SW-C	
	Template	



Requirement	Description	Satisfied by
[SRS_BSW_00424]	BSW module main processing	[SWS_Crc_00051]
[55_266]	functions shall not be allowed to	[2.1.2_0.0_000.]
	enter a wait state	
[SRS BSW 00425]	The BSW module description	[SWS_Crc_00051]
· ·	template shall provide means to	
	model the defined trigger	
	conditions of schedulable	
	objects	
[SRS_BSW_00427]	ISR functions shall be defined	[SWS_Crc_00051]
	and documented in the BSW	
	module description template	
[SRS_BSW_00428]	A BSW module shall state if its	[SWS_Crc_00051]
	main processing function(s) has	
	to be executed in a specific	
	order or sequence	
[SRS_BSW_00429]	Access to OS is restricted	[SWS_Crc_00051]
[SRS_BSW_00432]	Modules should have separate	[SWS_Crc_00051]
	main processing functions for	
	read/receive and write/transmit	
ICDC DOW 004001	data path	[SWC Cro 00054]
[SRS_BSW_00433]	Main processing functions are	[SWS_Crc_00051]
	only allowed to be called from	
	task bodies provided by the BSW Scheduler	
[SRS_LIBS_00001]	The functional behavior of each	[SWS_Crc_00051]
[3113_5103_00001]	library functions shall not be	[0440_010_00031]
	configurable	
[SRS_LIBS_00002]	A library shall be operational	[SWS_Crc_00051]
[before all BSW modules and	[2.1.2_0.0_000.]
	application SW-Cs	
[SRS_LIBS_00003]	A library shall be operational	[SWS_Crc_00051]
	until the shutdown	-
[SRS_LIBS_00004]	Using libraries shall not pass	[SWS_Crc_00051]
	through a port interface	
[SRS_LIBS_00005]	Each library shall provide one	[SWS_Crc_00019] [SWS_Crc_00020]
	header file with its public	[SWS_Crc_00021] [SWS_Crc_00031]
	interface	[SWS_Crc_00043] [SWS_Crc_00058]
		[SWS_Crc_00061] [SWS_Crc_00071]
[SRS_LIBS_00007]	Using a library should be	[SWS_Crc_00051]
TODO LIBO COCCO	documented	10110
[SRS_LIBS_00008]	For a given function prototype	[SWS_Crc_00051]
	name, the behavior and the	
	parameters shall not evolve	
	once it is a part of an AUTOSAR	
[SRS LIBS 00009]	final release All library functions shall be	[SWS_Crc_00019] [SWS_Crc_00020]
[SUS_LIBS_00008]	re-entrant	[SWS_Crc_00019][SWS_Crc_00020]
	10 Citiant	[SWS_Crc_00021] [SWS_Crc_00051]
		[SWS_Crc_00043] [SWS_Crc_00071]
[SRS LIBS 00010]	A library shall define its own	[SWS_Crc_00051]
[5:10_2:20_00010]	specific types in the library	[5.1.5_5.5_5.55]
	header file if and only if they are	
	not yet defined by AUTOSAR	



Requirement	Description	Satisfied by
[SRS_LIBS_00011]	All function names and type	[SWS_Crc_00019] [SWS_Crc_00020]
	names shall start with "Library	[SWS_Crc_00021] [SWS_Crc_00031]
	short name_"	[SWS_Crc_00043] [SWS_Crc_00058]
		[SWS_Crc_00061] [SWS_Crc_00071]
[SRS_LIBS_00012]	Passing parameters with	[SWS_Crc_00051]
	structure shall be allowed	
[SRS_LIBS_00013]	The error cases, resulting in the	[SWS_Crc_00051]
	check at runtime of the value of	
	input parameters, shall be listed	
	in SWS	
[SRS_LIBS_00015]	It shall be possible to configure	[SWS_Crc_00051]
	the microcontroller so that the	
	library code is shared between	
TODO LIBO ASSAS	all callers	10140 0 000541
[SRS_LIBS_00016]	A SW-C may use a	[SWS_Crc_00051]
	non-AUTOSAR library available	
TODO LIDO 000473	on the market	[CWC Cro 00054]
[SRS_LIBS_00017]	Usage of macros should be	[SWS_Crc_00051]
[CDC_LIDC_00040]	avoided	[CMC Cre 00070]
[SRS_LIBS_00018]	A library function may only call	[SWS_Crc_00072]
ICDC LIDC 005101	library functions	[CMC Cre 00000] [CMC Cre 00010]
[SRS_LIBS_08518]	The CRC Library shall provide different calculation methods,	[SWS_Crc_00009] [SWS_Crc_00010] [SWS_Crc_00033] [SWS_Crc_00045]
	optimizing either performance or	[SWS_Crc_00065] [SWS_Crc_00065]
	memory usage	[SWS_Crc_00070]
[SRS_LIBS_08521]	All CRC routines shall allow	[SWS_Crc_00019] [SWS_Crc_00020]
[0110_2120_00021]	step-by-step-wise calculation of	[SWS_Crc_00031] [SWS_Crc_00043]
	a large data block	[SWS_Crc_00058] [SWS_Crc_00061]
	a large data brook	[SWS_Crc_00071]
[SRS_LIBS_08525]	The CRC library shall support	[SWS_Crc_00002] [SWS_Crc_00003]
	the standard generator	[SWS_Crc_00015] [SWS_Crc_00016]
	polynomials	[SWS_Crc_00030] [SWS_Crc_00032]
		[SWS_Crc_00042] [SWS_Crc_00044]
		[SWS_Crc_00052] [SWS_Crc_00053]
		[SWS_Crc_00054] [SWS_Crc_00055]
		[SWS_Crc_00056] [SWS_Crc_00057]
		[SWS_Crc_00059] [SWS_Crc_00062]
		[SWS_Crc_00063] [SWS_Crc_00064]
		[SWS_Crc_00067] [SWS_Crc_00068]
		[SWS_Crc_00069]
[SRS_LIBS_08526]	The CRC Library shall support	[SWS_Crc_00009] [SWS_Crc_00010]
	current standards of CRC	[SWS_Crc_00033] [SWS_Crc_00045]
	calculation	[SWS_Crc_00060] [SWS_Crc_00065]
		[SWS_Crc_00070]



7 Functional specification

7.1 Basic Concepts of CRC Codes

7.1.1 Mathematical Description

Let D be a bitwise representation of data with a total number of n bit, i.e.

$$D = (d_{n-1}, d_{n-2}, d_{n-3}, \dots, d_1, d_0),$$

with $d_0, d_1, \ldots = 0b, 1b$. The corresponding Redundant Code C is represented by n + k bit as

$$C = (D, R) = (d_{n-1}, d_{n-2}, d_{n-3}, \dots, d_2, d_1, d_0, r_{k-1}, \dots, r_2, r_1, r_0)$$

with $r_0, r_1, \ldots = 0b, 1b$ and $R = (r_{k-1}, \ldots, r_2, r_1, r_0)$. The code is simply a concatenation of the data and the redundant part. (For our application, we will chose k = 16, 32 and n as a multiple of 16 respectively 32).

CRC-Algorithms are related to *polynomials* with coefficients in the finite *field of two element*, using arithmetic operations \oplus and * according to the following tables.

The \oplus operation is identified as the binary operation *exclusive-or*, that is usually available in the ALU of any CPU.

\oplus	0b	1b
0b	0b	1b
1b	1b	0 <i>b</i>

*	0b	1b
0b	0b	0 <i>b</i>
1b	0b	1b

For simplicity, we will write ab instead of a * b

We introduce some examples for *polynomials* with coefficients in the *field of two elements* and give the simplified notation of it.

(ex. 1)
$$p_1(X) = 1bX^3 + 0bX^2 + 1bX^1 + 0bX^0 = X^3 + X$$

(ex. 2)
$$p_2(X) = 1bX^2 + 1bX^1 + 1bX^0 = X^2 + X^1 + 1b$$

Any code word, represented by n + k bit can be mapped to a polynomial of order

n+k-1 with coefficients in the field of two elements. We use the intuitive mapping of the bits i.e.

$$C(X) = d_{n-1}X^{k+n-1} + d_{n-2}X^{k+n-2} + \dots + d_2X^{k+2} + d_1X^{k+1} + d_0X^k + r_{k-1}X^{k-1} + r_{k-2}X^{k-2} + \dots + r_1X + r_0$$

$$C(X) = X^{k}(d_{n-1}X^{n-1} + d_{n-2}X^{n-2} + \dots + d_{2}X^{2} + d_{1}X^{1} + d_{0}) + r_{k-1}X^{k-1} + r_{k-2}X^{k-2} + \dots + r_{1}X + r_{0}$$

$$C(X) = X^k D(X) \oplus R(X)$$

This mapping is one-to-one.



A certain space CRC_G of *Cyclic Redundant Code Polynomials* is defined to be a multiple of a given *Generator Polynomial* $G(X) = X^k + g_{k-1}X^{k-1} + g_{k-2}X^{k-2} + \ldots + g_2X^2 + g_1X + g_0$. By definition, for any code polynomial C(X) in CRC_G there is a polynomial M(X) with

$$C(X) = G(X)M(X)$$

For a fixed irreducible (i.e. prime-) polynomial G(X), the mapping $M(X) \to C(X)$ is one-to-one. Now, how are data of a given codeword verified? This is basically a division of polynomials, using the *Euclidian Algorithm*. In practice, we are not interested in M(X), but in the *remainder* of the division, $C(X) \mod G(X)$. For a correct code word C, this remainder has to be zero , $C(X) \mod G(X) = 0$. If this is not the case - there is an error in the codeword. Given G(X) has some additional algebraic properties, one can determine the error-location and correct the codeword.

Calculating the code word from the data can also be done with the *Euclidian Algorithm*. For a given data polynomial $D(x) = d_{n-1}X^{n-1} + d_{n-2}X^{n-2} + \ldots + d_1X^1 + d_0$ and the corresponding code polynomial C(X) we have

$$C(X) = X^k D(X) \oplus R(X) = M(X)G(X)$$

Performing the operation mod G(X) on both sides, one obtains

$$0 = C(X) \bmod G(X) = [X^k D(X)] \bmod G(X) \oplus R(X) \bmod G(X)$$

$$(7.1)$$

We denote that the order of the Polynomial R(X) is less than the order of G(X), so the modulo division gives zero with remainder R(X):

$$R(X) \mod G(X) = R(X)$$

For polynomial R(X) with coefficients in the finite field with two elements we have the remarkable property R(X)+R(X)=0. If we add R(X) on both sides of equation 7.1 we obtain

$$R(X) = X^k D(X) \bmod G(X)$$

The important implication is that the redundant part of the requested code can be determined by using the Euclidian Algorithm for polynomials. At present, any CRC calculation method is a more or less sophisticated variation of this basic algorithm.

Up to this point, the propositions on CRC Codes are summarized as follows:

1. The construction principle of CRC Codes is based on polynomials with coefficients in the finite field of two elements. The \oplus operation of this field is identical to the binary operation "XOR" (exclusive or)



- 2. There is a natural mapping of bit-sequences into this space of polynomials.
- 3. Both calculation and verification of the CRC code polynomial is based on division modulo a given generator polynomial.
- 4. This generator polynomial has to have certain algebraic properties in order to achieve error-detection and eventually error-correction.

7.1.2 Euclidian Algorithm for Binary Polynomials and Bit-Sequences

Given a Polynomial $P_n(X)=p_nX^n+p_{n-1}X^{n-1}+\ldots+p_2X^2+p_1X+p_0$ with coefficients in the finite field of two elements. Let $Q(X)=X^k+q_{k-1}X^{k-1}+q_{k-2}X^{k-2}+\ldots+q_2X^2+q_1X+q_0$ be another polynomial of exact order k>0. Let $R_n(X)$ be the remainder of the polynomial division of maximum order k-1 and $M_n(X)$ corresponding so that

$$R_n(X) \oplus M_n(X)Q(X) = P_n(X)$$

Euclidian Algorithm - Recursive

(Termination of recursion)

If n < k, then choose $R_n(X) = P_n(X)$ and $M_n = 0$.

(Recursion $n+1 \rightarrow n$)

Let $P_{n+1}(X)$ be of maximum order n+1.

If n+1>=k calculate $P_n(X)=P_{n+1}(X)-p_{n+1}Q(X)X^{n-k+1}$. This polynomial is of maximum order n. Then

$$P_{n+1}(X) \bmod Q(X) = P_n(X) \bmod Q(X)$$

Proof of recursion

Choose $R_{n+1}(X) = P_{n+1}(X) \mod Q(X)$ and $M_{n+1}(X)$ so that

$$R_{n+1}(X) \oplus M_{n+1}(X)Q(X) = P_{n+1}(X)$$

Then $R_{n+1}(X) - R_n(X) = P_{n+1}(X) - M_{n+1}(X)Q(X) - P_n(X) \oplus M_n(X)Q(X)$.

With $P_{n+1}(X) - P_n(X) = p_{n+1}Q(X)X^{n-k+1}$ we obtain:

$$R_{n+1}(X) - R_n(X) = p_{n+1}Q(X)X^{n-k+1} + M_n(X)Q(X) - M_{n+1}(X)Q(X)$$

$$R_{n+1}(X) - R_n(X) = Q(X)[p_{n+1}X^{n-k+1} + M_n(X) - M_{n+1}(X)]$$



On the left side, there is a polynomial of maximum order k-1. On the right side Q(X) is of exact order k. This implies that both sides are trivial and equal to zero. One obtains

$$R_{n+1}(X) = R_n(X) \tag{7.2}$$

$$M_{n+1}(X) = M_n(X) + p_{n+1}X^{n-k+1}$$
(7.3)

(end of proof)

Example 7.1

$$P(X) = P^{4}(X) = X^{4} + X^{2} + X + 1b; Q(X) = X^{2} + X + 1b; n = 4; k = 2$$

$$P_{3}(X) = X^{4} + X^{2} + X + 1b - 1b(X^{2} + X + 1b)X^{2} = X^{3} + X + 1b$$

$$P_{2}(X) = X^{3} + X + 1b - 1bX(X^{2} + X + 1b) = X^{2} + 1b$$

$$P_{1}(X) = X^{2} + 1 - 1b(X^{2} + X + 1) = X$$

$$R(X) = P(X) \mod Q(X) = R_{1}(X) = P_{1}(X) = X$$

7.1.3 CRC calculation, Variations and Parameter

Based on the Euclidian Algorithm, some variations have been developed in order to improve the calculation performance. All these variations do not improve the capability to detect or correct errors - the so-called Hamming Distance of the resulting code is determined only by the generator polynomial. Variations simply optimize for different implementing ALUs.

CRC-Calculation methods are characterized as follows:

- 1. Rule for Mapping of Data to a bit sequence $(d_{n-1}, d_{n-2}, d_{n-3}, \dots, d_1, d_0)$ and the corresponding data polynomial D(X) (standard or reflected data).
- 2. Generator polynomial G(X)
- 3. Start value and corresponding Polynomial S(X)
- 4. Appendix A(X), also called XOR-value for modifying the final result.
- 5. Rule for mapping the resulting CRC-remainder ${\cal R}(X)$ to codeword. (Standard or reflected data)

The calculation itself is organized in the following steps

- Map Data to D(X)
- \bullet Perform Euclidian Algorithm on X^k $D(X)+X^{n-k-1}S(X)+A(X)$ and determine $R(X)=[X^kD(X)+X^{n-k-1}S(X)+A(X)] \bmod G(X)$
- Map D(X), R(X) to codeword



7.2 Standard parameters

This section gives a rough overview on the standard parameters that are commonly used for 8-bit, 16-bit and 32-bit CRC calculation.

- CRC result width: Defines the result data width of the CRC calculation.
- Polynomial: Defines the generator polynomial which is used for the CRC algorithm.
- Initial value: Defines the start condition for the CRC algorithm.
- Input data reflected: Defines whether the bits of each input byte are reflected before being processed (see definition below).
- Result data reflected: Similar to "Input data reflected" this parameter defines whether the bits of the CRC result are reflected (see definition below). The result is reflected over 8-bit for a CRC8, over 16-bit for a CRC16 and over 32-bit for a CRC32.
- XOR value: This Value is XORed to the final register value before the value is returned as the official checksum.
- Check: This field is a check value that can be used as a weak validator of implementations of the algorithm. The field contains the checksum obtained when the ASCII values '1' '2' '3' '4' '5' '6' '7' '8' '9' corresponding to values 31h 32h 33h 34h 35h 36h 37h 38h 39h is fed through the specified algorithm.
- Magic check: The CRC checking process calculates the CRC over the entire data block, including the CRC result. An error-free data block will always result in the unique constant polynomial (magic check) - representing the CRC-result XORed with 'XOR value'- regardless of the data block content.

Example 7.2

Magic check calculation of SAE-J1850 CRC8 (see detailed parameters in [SWS_Crc_00030]) over data bytes 00h 00h 00h:

- CRC generation: CRC over 00h 00h 00h, start value FFh:
 - CRC-result = 59h
- CRC check: CRC over 00h 00h 00h 00h 59h, start value FFh:
 - CRC-result = 3Bh
 - Magic check = CRC-result XORed with 'XOR value': C4h = 3Bh xor FFh

Data reflection: It is a reflection on a bit basis where data bits are written in the reverse order. The formula is:

$$\operatorname{reflect}_n(x) = \sum_{i=0}^{n-1} x_i \times 2^{n-i-1}$$



where x is the data and n the number of data bits.

E.g. The reflection₁₆ of $2D_{16}$ (n = 8) (00101101₂) is $B4_{16}$ (10110100₂)

The reflection₁₆ of 12345678_{16} (n = 16) (0001 0010 0011 0100 0101 0110 0111 1000₂) is $1E6A2C48_{16}$ (0001 1110 0110 1010 0010 1100 0100 1000₂).

The reflection₃₂ of 123456789ABCDEF0 (n = 32) (0001 0010 0011 0100 0101 0110 0111 1000 1001 1010 1011 1100 1101 1110 1111 0000₂) is $0F7B3D591E6A2C48_{16}$ (0000 1111 0111 1011 0011 1101 0101 1001 0001 1110 0110 1010 0100 1000₂).

The reflection₈ of 123456789ABCDEF0 (n = 8) (0001 0010 0011 0100 0101 0110 0111 1000 1001 1010 1011 1100 1101 1110 1111 0000₂) is $84C2A6E195D3B7F0_{16}$ (1000 0100 1100 0010 1010 0110 1110 0001 1001 0101 1101 0011 1011 0111 1111 0000₂).

7.2.1 8-bit CRC calculation

7.2.1.1 8-bit SAE J1850 CRC Calculation

[SWS_Crc_00030] [The Crc_CalculateCRC8 function of the CRC module shall implement the CRC8 routine based on the SAE-J1850 CRC8 Standard:

CRC result width:	8 bits
Polynomial:	1Dh
Initial value:	FFh
Input data reflected:	No
Result data reflected:	No
XOR value:	FFh
Check:	4Bh
Magic check:	C4h

(SRS LIBS 08525)

[SWS_Crc_00052] [The Crc_CalculateCRC8 function of the CRC module shall provide the following CRC results:

Data bytes (hexadecimal)							CRC		
00	00	00	00						59
F2	01	83							37
0F	AA	00	55						79
00	FF	55	11						B8
33	22	55	AA	BB	CC	DD	EE	FF	СВ
92	6B	55							8C
FF	FF	FF	FF						74

(SRS LIBS 08525)



7.2.1.2 8-bit 0x2F polynomial CRC Calculation

[SWS_Crc_00042] [The Crc_CalculateCRC8H2F function of the CRC module shall implement the CRC8 routine based on the generator polynomial 0x2F:

CRC result width:	8 bits
Polynomial:	2Fh
Initial value:	FFh
Input data reflected:	No
Result data reflected:	No
XOR value:	FFh
Check:	DFh
Magic check:	42h

(SRS LIBS 08525)

[SWS_Crc_00053] [The Crc_CalculateCRC8H2F function of the CRC module shall provide the following CRC results:

Data bytes (hexadecimal)							CRC		
00	00	00	00						12
F2	01	83							C2
0F	AA	00	55						C6
00	FF	55	11						77
33	22	55	AA	BB	CC	DD	EE	FF	11
92	6B	55							33
FF	FF	FF	FF						6C

(SRS LIBS 08525)

7.2.2 16-bit CRC calculation

7.2.2.1 16-bit CCITT-FALSE CRC16

[SWS_Crc_00002] [The CRC module shall implement the CRC16 routine based on the CCITT-FALSE CRC16 Standard:

Note concerning the standard document [5]:

The computed FCS is equal to CRC16 XOR FFFFh when the frame is built (first complement of the CCITT-FALSE CRC16).

For the verification, the CRC16 (CCITT-FALSE) is computed on the same data + FCS, and the resulting value is always 1D0Fh.

Note that, if during the verification, the check would have been done on data + CRC16 (i.e. FCS XOR FFFFh) the resulting value would have been 0000h that is the CCITT-FALSE magic check.



CRC result width:	16 bits
Polynomial:	1021h
Initial value:	FFFFh
Input data reflected:	No
Result data reflected:	No
XOR value:	0000h
Check:	29B1h
Magic check:	0000h

](SRS_LIBS_08525)

[SWS_Crc_00054] [The Crc_CalculateCRC16 function of the CRC module shall provide the following CRC results:

Data bytes (hexadecimal)							CRC		
00	00	00	00						84C0
F2	01	83							D374
0F	AA	00	55						2023
00	FF	55	11						B8F9
33	22	55	AA	BB	CC	DD	EE	FF	F53F
92	6B	55							0745
FF	FF	FF	FF						1D0F

(SRS_LIBS_08525)

7.2.2.2 16-bit 0x8005 polynomial CRC calculation

[SWS_Crc_00067] The CRC module shall implement the CRC16 based on the CRC16/ARC Standard:

CRC result width:	16 bits
Polynomial:	8005h
Initial value:	0000h
Input data reflected:	Yes
Result data reflected:	Yes
XOR value:	0000h
Check:	BB3Dh
Magic check:	0000h

(SRS_LIBS_08525)

[SWS_Crc_00068] [The Crc_CalculateCRC16ARC function of the CRC module shall provide the following CRC results:



Data bytes (hexadecimal)							CRC		
00	00	00	00						0000
F2	01	83							C2E1
0F	AA	00	55						0BE3
00	FF	55	11						6CCF
33	22	55	AA	BB	CC	DD	EE	FF	AE98
92	6B	55							E24E
FF	FF	FF	FF						9401

(SRS_LIBS_08525)

7.2.3 32-bit CRC calculation

7.2.3.1 32-bit Ethernet CRC Calculation

[SWS_Crc_00003] [The CRC module shall implement the CRC32 routine based on the IEEE-802.3 CRC32 Ethernet Standard:

CRC result width:	32 bits
Polynomial:	04C11DB7h
Initial value:	FFFFFFFh
Input data reflected:	Yes
Result data reflected:	Yes
XOR value:	FFFFFFFh
Check:	CBF43926h
Magic check*:	DEBB20E3h

(SRS LIBS 08525)

*Important note: To match the magic check value, the CRC must be appended in little endian format, i.e. low significant byte first. This is due to the reflections of the input and the result.

[SWS_Crc_00055] [The $Crc_CalculateCRC32$ function of the CRC module shall provide the following CRC results:

Data bytes (hexadecimal)							CRC		
00	00	00	00						2144DF1C
F2	01	83							24AB9D77
0F	AA	00	55						B6C9B287
00	FF	55	11						32A06212
33	22	55	AA	BB	CC	DD	EE	FF	B0AE863D
92	6B	55	·						9CDEA29B
FF	FF	FF	FF						FFFFFFF

](SRS_LIBS_08525)



7.2.3.2 32-bit 0xF4ACFB13 polynomial CRC calculation

This 32-bit CRC function is described in [6]. It has an advantage with respect to the Ethernet CRC - it has a Hamming Distance of 6 up to 4kB.

[SWS_Crc_00056] [The CRC module shall implement the CRC32 routine using the 0xF4'AC'FB'13 polynomial:

CRC result width:	32 bits			
Polynomial:	F4'AC'FB'13h			
Initial value:	FFFFFFFh			
Input data reflected:	Yes			
Result data reflected:	Yes			
XOR value:	FFFFFFFh			
Check:	16'97'D0'6Ah			
Magic check*:	90'4C'DD'BFh			
Hamming distance:	6, up to 4096 bytes (including CRC)			

(SRS_LIBS_08525)

*Important note: To match the magic check value, the CRC must be appended in little endian format, i.e. low significant byte first. This is due to the reflections of the input and the result.

There are three notations for encoding the polynomial, so to clarify, all three notations are shown:

1	Polynomial as binary	0001'1111'0100'1010'1100'1111'1011'0001'0011
2	Normal representation with high bit	01'F4'AC'FB'13h
3	Normal representation	F4'AC'FB'13h
4	Reversed reciprocal representation (=Koopman representation)	FA'56'7D'89h

Notes:

- 1. Normal representation with high bit = hex representation of polynomial as binary
- 2. Normal representation with high bit = Koopman representation * 2 + 1

[SWS_Crc_00057] [The Crc_CalculateCRC32P4 function of the CRC module shall provide the following CRC results:

Data bytes (hexadecimal)							CRC		
00	00	00	00						6FB32240h
F2	01	83							4F721A25h
0F	AA	00	55						20662DF8h
00	FF	55	11						9BD7996Eh
33	22	55	AA	BB	CC	DD	EE	FF	A65A343Dh
92	6B	55							EE688A78h
FF	FF	FF	FF						FFFFFFFh



(SRS LIBS 08525)

7.2.4 64-bit CRC calculation

7.2.4.1 64-bit ECMA polynomial CRC calculation

This 64-bit CRC function is described in [7]. It has a good hamming distance of 4, for long data (see below).

[SWS_Crc_00062] [The CRC module shall implement the CRC64 routine using the 0x42'F0'E1'EB'A9'EA'36'93 polynomial:

CRC result width:	64 bits		
Polynomial:	42'F0'E1'EB'A9'EA'36'93h		
Initial value:	FFFFFFFFFFFFF		
Input data reflected:	Yes		
Result data reflected:	Yes		
XOR value:	FFFFFFFFFFFF		
Check:	99'5D'C9'BB'DF'19'39'FAh		
Magic check*:	49'95'8C'9A'BD'7D'35'3Fh		
Hamming distance:	4, up to almost 8 GB		

(SRS_LIBS_08525)

*Important note: To match the magic check value, the CRC must be appended in little endian format, i.e. low significant byte first. This is due to the reflections of the input and the result.

There are three notations for encoding the polynomial, so to clarify, all three notations are shown:

1	Polynomial as binary	0001'0100'0010'1111'0000'1110'0001'1110'1011'1010'1001' 1110'1010'0011'0110'1001'0011
2	Normal representation with high bit	01'42'F0'E1'EB'A9'EA'36'93h
3	Normal representation	42'F0'E1'EB'A9'EA'36'93h
4	Reversed reciprocal representation (=Koopman representation)	A1'78'70'F5'D4'F5'1B'49h

Notes:

- 1. Normal representation with high bit = hex representation of polynomial as binary
- 2. Normal representation with high bit = Koopman representation * 2 + 1

[SWS_Crc_00063] [The Crc_CalculateCRC64 function of the CRC module shall provide the following CRC results:



	Data bytes (hexadecimal)							CRC	
00	00	00	00						F4A586351E1B9F4Bh
F2	01	83							319C27668164F1C6h
0F	AA	00	55						54C5D0F7667C1575h
00	FF	55	11						A63822BE7E0704E6h
33	22	55	AA	BB	CC	DD	EE	FF	701ECEB219A8E5D5h
92	6B	55							5FAA96A9B59F3E4Eh
FF	FF	FF	FF						FFFFFFF00000000h

(SRS LIBS 08525)

7.3 General behavior

Data blocks are passed to the CRC routines using the parameters "start address", "size" and "start value". The return value is the CRC result.

7.4 Version check

For details, refer to the chapter 5.1.8 "Version Check" in SWS BSWGeneral.

7.5 Debugging concept

None

7.6 Error Classification

Section 7.2 "Error Handling" of the document "General Specification of Basic Software Modules" describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.6.1 Development Errors

There are no development errors.



7.6.2 Runtime Errors

There are no runtime errors.

7.6.3 Transient Faults

There are no transient faults.

7.6.4 Production Errors

There are no production errors.

7.6.5 Extended Production Errors

There are no extended production errors.



8 API specification

8.1 Imported types

In this chapter, all types included from the following modules are listed:

[SWS Crc 00018] [

Module	Header File	Imported Type
Std	Std_Types.h	Std_VersionInfoType

10

8.2 Type definitions

None.

8.3 Function definitions

[SWS_Crc_00013] [If CRC routines are to be used as a library, the CRC modules' implementer shall develop the CRC module in a way that only those parts of the CRC code that are used by other modules are linked into the final binary.] ()

[SWS_Crc_00072] [The CRC library functions shall not call any BSW modules functions (e.g. the DET).|(SRS_LIBS_00018)

[SWS_Crc_00014] [The CRC function (with parameter *Crc_IsFirstCall* = TRUE) shall do the following operations:

1. As 'Initial value' of the CRC computation, uses the attribute 'Initial value' of the polynomial:

$$Crc = PolynomialInitVal$$

2. If the attribute 'Input data reflected' of the polynomial is TRUE, then reflects input data (byte per byte) obtained via parameters *Crc_DataPtr* and *Crc_Length*:

$$Data = \text{reflect}_8(Data)$$
 (in the case 'Input data reflected' is TRUE)

3. Compute the CRC over the data, the last CRC and the CRC polynomial:

$$Crc = f(Data, Crc, Polynomial)$$

4. Execute the XOR operation between crc and 'XOR value' of the polynomial:

$$Crc = Crc \oplus PolynomialXORVal$$



5. If the attribute 'Result data reflected' of the polynomial is TRUE, then reflect the CRC (over 8, 16 or 32 bits, depending on the CRC size):

 $Crc = reflect_{Crcsize}(Crc)$ (in the case 'Result data reflected' is TRUE)

6. The CRC is returned:

return Crc

Steps 2 and 3 are performed as long as data are available ()

[SWS_Crc_00041] The CRC function (with parameter *Crc_IsFirstCall* = FALSE) shall do the following operations:

1. As 'Initial value' of the CRC computation, uses the parameter Crc_StartValueX (where X is 8, 8H2F, 16, 32, P4 or 64) that should be the CRC result of the last call. The result is then XORed with 'XOR value' and reflected if 'Result data reflected' of the polynomial is TRUE:

 $Crc = Crc \ StartValueX \oplus PolynomialXORVal$

 $Crc = reflect_{Crcsize}(Crc)$ (in the case 'Result data reflected' is TRUE)

Steps 2 to 6 are identical to [SWS_Crc_00014]. | ()

Usage of CRC functions:

For the first or the unique call the user of a CRC function shall:

- 1. give a pointer to the data (*Crc DataPtr*)
- 2. give the number of bytes of data (*Crc Length*)
- 3. give the *Crc_StartValueX* parameter a don't care value (the initialization value is known by the chosen algorithm)
- 4. give the *Crc_IsFirstCall* parameter the value TRUE to inform the library that it is the first or unique call
- 5. call the CRC function
- 6. get the CRC

For the subsequent calls the user has to:

- 1. give a pointer to the data (*Crc_DataPtr*)
- 2. give the number of bytes of data (*Crc Length*)
- 3. give the *Crc_StartValueX* parameter (X is 8, 8H2F, 16, 32, P4 or 64) the *CRC result of the previous call*
- 4. give the *Crc_IsFirstCall* parameter the value *FALSE* to inform the library that it is not the first call



- 5. call the CRC function
- 6. get the CRC

Example 8.1

Calculation of CRC8: calculation of CRC8 SAEJ1850, over one of test patterns defined by SAE J1850 specification (00h, FFh, 55h, 11h results with CRC B8h)

If done in one step:

```
1 uint8 Array[4] = {0x00, 0xFF, 0x55, 0x11};
2 uint8 ignored_val = 0x001; /* any value, it is ignored */
3
4 uint8 resultSAE = Crc_CalculateCRC8(&Array[0], 4, ignored_val, TRUE);
```

resultSAE shall be equal to B8h

If done in several steps:

```
uint8 Array[4] = {0x00, 0xFF, 0x55, 0x11};
uint8 ignored_val = 0x001; /* any value, it is ignored */

uint8 resultSAE = Crc_CalculateCRC8(&Array[0], 2, ignored_val, TRUE);
resultSAE = Crc_CalculateCRC8(&Array[2], 1, resultSAE, FALSE);
resultSAE = Crc_CalculateCRC8(&Array[3], 1, resultSAE, FALSE);
```

resultSAE shall be also equal to B8h

Example 8.2

Calculation of CRC8: calculation of that is not compatible with SAE J1850, but it is compatible with AUTOSAR releases before R4.0:

If done in one step:

resultRel3 contains the same value as computed by AUTOSAR R3.2 CRC8.

• If done in several steps:

```
1 uint8 Array[4] = \{0x00, 0xFF, 0x55, 0x11\};
```



```
3 /* The first call also gets IsFirstCall set to FALSE, and 0xFF as start
    value, which is immediately XORed with 0xFF by CalculateCRC8,
    resulting with start value equal to 0x00. */

4
5 uint8 resultRel3 = Crc_CalculateCRC8(&Array[0], 2, 0xFF, FALSE);
6 resultRel3 = Crc_CalculateCRC8(&Array[2], 1, resultRel3,FALSE);
7 resultRel3 = Crc_CalculateCRC8(&Array[3], 1, resultRel3, FALSE);
8
9 /* The last XORing must be negated by the caller, to come to 0x00 XOR
    value. */

10
11 resultRel3 = resultR3 ^ 0xFF; }
```

resultRel3 contains also the same value as computed by AUTOSAR R3.2 CRC8.

Example 8.3

Calculation of CRC32 Ethernet Standard (see detailed parameters in [SWS_Crc_00003]) over data bytes 01h 02h 03h 04h 05h 06h 07h 08h:

- In one function call, CRC over 01h 02h 03h 04h 05h 06h 07h 08h, start value FFFFFFFh:
 - CRC-result = 3FCA88C5h (final value)
- In two function calls:
 - CRC over 01h 02h 03h 04h, start value FFFFFFFh:
 - * CRC-result of first call = B63CFBCDh (intermediate value)
 - CRC over 05h 06h 07h 08h, start value: B63CFBCDh xor XOR value (FFFFFFFh) = 49C30432h and after reflection: 4C20C392h
 - * CRC-result of final call = **3FCA88C5h** (final value)

The following C-code example shows that the caller modifies the start value by using the previous result (without any rework) and indicates that it is no more the first call:

```
1 InterResult = Crc_CalculateCRC32(&Array12345678[0], 4, 0xFFFFFFFF, TRUE
    );
2 result = Crc_CalculateCRC32(&Array12345678[4], 4, InterResult, FALSE);
```

8.3.1 8-bit CRC Calculation

8.3.1.1 8-bit SAE J1850 CRC Calculation

[SWS_Crc_00031] [



Service Name	Crc_CalculateCRC8				
Syntax	uint8 Crc_CalculateCRC8 (const uint8* Crc_DataPtr, uint32 Crc_Length, uint8 Crc_StartValue8, boolean Crc_IsFirstCall)				
Service ID [hex]	0x01				
Sync/Async	Synchronous				
Reentrancy	Reentrant				
Parameters (in)	Crc_DataPtr	Pointer to start address of data block to be calculated.			
	Crc_Length	Length of data block to be calculated in bytes.			
	Crc_StartValue8	Start value when the algorithm starts.			
	Crc_lsFirstCall TRUE: First call in a sequence or individual CRC calculation; from initial value, ignore Crc_StartValue8. FALSE: Subseque call in a call sequence; Crc_StartValue8 is interpreted to be to return value of the previous function call.				
Parameters (inout)	None				
Parameters (out)	None				
Return value	uint8 8 bit result of CRC calculation.				
Description	This service makes a CRC8	B calculation on Crc_Length data bytes, with SAE J1850 parameters			
Available via	Crc.h				

\(SRS LIBS 00005, SRS LIBS 00009, SRS LIBS 00011, SRS LIBS 08521)

[SWS_Crc_00032] [The function Crc_CalculateCRC8 shall perform a CRC8 calculation using polynomial 0x1D on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue8.] (SRS_LIBS_08525)

[SWS_Crc_00033] [If the CRC calculation within the function Crc_CalculateCRC8 is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism.](SRS_LIBS_-08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>32 bytes, depending on performance of processor platform), the table based calculation method should be configured for the function Crc_CalculateCRC8 in order to decrease the calculation time.

The function Crc_CalculateCRC8 requires specification of configuration parameters defined in Crc8Mode.



8.3.1.2 8-bit 0x2F polynomial CRC Calculation

[SWS_Crc_00043] [

Service Name	Crc_CalculateCRC8H2F			
Syntax	uint8 Crc_CalculateCRC8H2F (const uint8* Crc_DataPtr, uint32 Crc_Length, uint8 Crc_StartValue8H2F, boolean Crc_IsFirstCall)			
Service ID [hex]	0x05			
Sync/Async	Synchronous			
Reentrancy	Reentrant			
Parameters (in)	Crc_DataPtr Pointer to start address of data block to be calculated.			
	Crc_Length Length of data block to be calculated in bytes.			
	Crc_StartValue8H2F Start value when the algorithm starts.			
	Crc_IsFirstCall TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue8H2F. FALSE: Subsequent call in a call sequence; Crc_StartValue8H2F is interpreted to be the return value of the previous function call.			
Parameters (inout)	None			
Parameters (out)	None			
Return value	uint8 8 bit result of CRC calculation.			
Description	This service makes a CRC8 calculation with the Polynomial 0x2F on Crc_Length			
Available via	Crc.h			

\(SRS_LIBS_00005, SRS_LIBS_00009, SRS_LIBS_00011, SRS_LIBS_08521)

[SWS_Crc_00044] [The function Crc_CalculateCRC8H2F shall perform a CRC8 calculation with the polynomial 0x2F on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue8H2F.] (SRS_LIBS_08525)

[SWS_Crc_00045] [If the CRC calculation within the function Crc_Calculate-CRC8H2F is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism.] (SRS_LIBS_08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>32 bytes, depending on performance of processor platform), the table based calculation method should be configured for the function Crc_CalculateCRC8H2F in order to decrease the calculation time.

The function Crc_CalculateCRC8H2F requires specification of configuration parameters defined Crc8H2FMode.



8.3.2 16-bit CRC Calculation

8.3.2.1 16-bit CCITT-FALSE CRC16

[SWS_Crc_00019]

Service Name	Crc_CalculateCRC16			
Syntax	uint16 Crc_CalculateCRC16 (const uint8* Crc_DataPtr, uint32 Crc_Length, uint16 Crc_StartValue16, boolean Crc_IsFirstCall)			
Service ID [hex]	0x02			
Sync/Async	Synchronous			
Reentrancy	Reentrant			
Parameters (in)	Crc_DataPtr Pointer to start address of data block to be calculated.			
	Crc_Length Length of data block to be calculated in bytes.			
	Crc_StartValue16 Start value when the algorithm starts.			
	Crc_lsFirstCall TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue16. FALSE: Subsequent call in a call sequence; Crc_StartValue16 is interpreted to be the return value of the previous function call.			
Parameters (inout)	None			
Parameters (out)	None			
Return value	uint16 16 bit result of CRC calculation.			
Description	This service makes a CRC16 calculation on Crc_Length data bytes.			
Available via	Crc.h			

(SRS LIBS 00005, SRS LIBS 00009, SRS LIBS 00011, SRS LIBS 08521)

[SWS_Crc_00015] [The function Crc_CalculateCRC16 shall perform a CRC16 calculation using polynomial 0x1021 on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue16.|(SRS_LIBS_08525)

[SWS_Crc_00009] [If the CRC calculation within the function Crc_CalculateCRC16 is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism.](SRS_LIBS_-08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>32 bytes, depending on performance of processor platform), the table based calculation method should be configured for the function Crc_CalculateCRC16 in order to decrease the calculation time.

The function Crc_CalculateCRC16 requires specification of configuration parameters defined in Crc16Mode.



8.3.2.2 16-bit 0x8005 polynomial CRC calculation

[SWS_Crc_00071] [

Service Name	Crc_CalculateCRC16ARC			
Syntax	uint16 Crc_CalculateCRC16ARC (const uint8* Crc_DataPtr, uint32 Crc_Length, uint16 Crc_StartValue16, boolean Crc_IsFirstCall)			
Service ID [hex]	0x08			
Sync/Async	Synchronous			
Reentrancy	Reentrant			
Parameters (in)	Crc_DataPtr Pointer to start address of data block to be calculated. Crc_Length Length of data block to be calculated in bytes.			
	Crc_StartValue16 Start value when the algorithm starts.			
	Crc_lsFirstCall TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue16. FALSE: Subsequent call in a call sequence; Crc_StartValue16 is interpreted to be the return value of the previous function call.			
Parameters (inout)	None			
Parameters (out)	None			
Return value	uint16 16 bit result of CRC calculation.			
Description	This service makes a CRC16 calculation on Crc_Length data bytes, using the polynomial 0x8005.			
Available via	Crc.h			

(SRS LIBS 00005, SRS LIBS 00009, SRS LIBS 00011, SRS LIBS 08521)

[SWS_Crc_00069] [The function Crc_CalculateCRC16ARC shall perform a CRC16 calculation using polynomial 0x8005 on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue16.|(SRS_LIBS_08525)

[SWS_Crc_00070] [If the CRC calculation within the function Crc_Calculate-CRC16ARC is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism. | (SRS_LIBS_08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>32 bytes, depending on performance of processor platform), the table based calculation method should be configured for the function Crc_CalculateCRC16ARC in order to decrease the calculation time.

The function Crc_CalculateCRC16ARC requires specification of configuration parameters defined in Crc16ARCMode.



8.3.3 32-bit CRC Calculation

8.3.3.1 32-bit Ethernet CRC Calculation

[SWS_Crc_00020]

Service Name	Crc_CalculateCRC32			
Syntax	uint32 Crc_CalculateCRC32 (const uint8* Crc_DataPtr, uint32 Crc_Length, uint32 Crc_StartValue32, boolean Crc_IsFirstCall)			
Service ID [hex]	0x03			
Sync/Async	Synchronous			
Reentrancy	Reentrant			
Parameters (in)	Crc_DataPtr Pointer to start address of data block to be calculated.			
	Crc_Length Length of data block to be calculated in bytes.			
	Crc_StartValue32 Start value when the algorithm starts.			
	Crc_IsFirstCall TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue32. FALSE: Subsequent call in a call sequence; Crc_StartValue32 is interpreted to be the return value of the previous function call.			
Parameters (inout)	None			
Parameters (out)	None			
Return value	uint32 32 bit result of CRC calculation.			
Description	This service makes a CRC32 calculation on Crc_Length data bytes.			
Available via	Crc.h			

(SRS LIBS 00005, SRS LIBS 00009, SRS LIBS 00011, SRS LIBS 08521)

[SWS_Crc_00016] [The function Crc_CalculateCRC32 shall perform a CRC32 calculation using polynomial 0x04C11DB7 on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue32.|(SRS_LIBS_08525)

[SWS_Crc_00010] [If the CRC calculation within the function Crc_CalculateCRC32 is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism.](SRS_LIBS_-08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>32 bytes, depending on performance of processor platform), the table based calculation method should be configured for the function Crc_CalculateCRC32 in order to decrease the calculation time.

The function Crc_CalculateCRC32 requires specification of configuration parameters defined in Crc32Mode.



8.3.3.2 32-bit 0xF4ACFB13 polynomial CRC calculation

[SWS_Crc_00058] [

Service Name	Crc_CalculateCRC32P4				
Syntax	<pre>uint32 Crc_CalculateCRC32P4 (const uint8* Crc_DataPtr, uint32 Crc_Length, uint32 Crc_StartValue32, boolean Crc_IsFirstCall)</pre>				
Service ID [hex]	0x06				
Sync/Async	Synchronous				
Reentrancy	Reentrant				
Parameters (in)	Crc_DataPtr Pointer to start address of data block to be calculated.				
	Crc_Length Length of data block to be calculated in bytes. Crc_StartValue32 Start value when the algorithm starts.				
	Crc_lsFirstCall TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue32. FALSE: Subsequent call in a call sequence; Crc_StartValue32 is interpreted to be the return value of the previous function call.				
Parameters (inout)	None				
Parameters (out)	None				
Return value	uint32 32 bit result of CRC calculation.				
Description	This service makes a CRC32 calculation on Crc_Length data bytes, using the polynomial 0x F4ACFB13. This CRC routine is used by E2E Profile 4.				
Available via	Crc.h				

(SRS_LIBS_00005, SRS_LIBS_00009, SRS_LIBS_00011, SRS_LIBS_08521)

[SWS_Crc_00059] [The function Crc_CalculateCRC32P4 shall perform a CRC32 calculation using polynomial 0xF4ACFB13 on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue32.|(SRS_LIBS_08525)

[SWS_Crc_00060] [If the CRC calculation within the function Crc_Calculate-CRC32P4 is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism.] (SRS_LIBS_08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>32 bytes, depending on performance of processor platform), the (1) hardware supported CRC calculation or (2) table based calculation method, should be configured for the function Crc_CalculateCRC32P4 in order to decrease the calculation time.

The function Crc_CalculateCRC32P4 requires specification of configuration parameters defined in Crc32P4Mode.



8.3.4 64-bit CRC Calculation

8.3.4.1 64-bit 0x42F0E1EBA9EA3693 polynomial CRC calculation

[SWS_Crc_00061] [

Service Name	Crc_CalculateCRC64				
Syntax	uint64 Crc_CalculateCRC64 (const uint8* Crc_DataPtr, uint32 Crc_Length, uint64 Crc_StartValue64, boolean Crc_IsFirstCall)				
Service ID [hex]	0x07				
Sync/Async	Synchronous	Synchronous			
Reentrancy	Reentrant	Reentrant			
Parameters (in)	Crc_DataPtr Pointer to start address of data block to be calculated. Crc_Length Length of data block to be calculated in bytes. Crc_StartValue64 Start value when the algorithm starts.				
	Crc_IsFirstCall TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue64. FALSE: Subsequent call in a call sequence; Crc_StartValue64 is interpreted to be the return value of the previous function call.				
Parameters (inout)	None				
Parameters (out)	None	None			
Return value	uint64 64 bit result of CRC calculation.				
Description	This service makes a CRC64 calculation on Crc_Length data bytes, using the polynomial 0x42F0E1EBA9EA3693.				
Accellate and a	This CRC routine is used by E2E Profile 7.				
Available via	Urc.n	Crc.h			

\(SRS LIBS 00005, SRS LIBS 00009, SRS LIBS 00011, SRS LIBS 08521)

[SWS_Crc_00064] [The function Crc_CalculateCRC64 shall perform a CRC64 calculation using polynomial 0x42F0E1EBA9EA3693 on Crc_Length data bytes, pointed to by Crc_DataPtr, with the starting value of Crc_StartValue64.] (SRS_-LIBS_08525)

[SWS_Crc_00065] [If the CRC calculation within the function Crc_CalculateCRC64 is performed by hardware, then the CRC module's implementer shall ensure reentrancy of this function by implementing a (software based) locking mechanism.] (SRS_LIBS_08518, SRS_LIBS_08526)

Note: If large data blocks have to be calculated (>64 bytes, depending on performance of processor platform), the (1) hardware supported CRC calculation or (2) table based calculation method, should be configured for the function Crc_CalculateCRC64 in order to decrease the calculation time.

The function Crc_CalculateCRC64 requires specification of configuration parameters defined in Crc64Mode.



8.3.5 Crc_GetVersionInfo

[SWS_Crc_00021] [

Service Name	Crc_GetVersionInfo			
Syntax	<pre>void Crc_GetVersionInfo (Std_VersionInfoType* Versioninfo)</pre>			
Service ID [hex]	0x04	0x04		
Sync/Async	Synchronous			
Reentrancy	Reentrant			
Parameters (in)	None			
Parameters (inout)	None			
Parameters (out)	Versioninfo	Pointer to where to store the version information of this module.		
Return value	None			
Description	This service returns the version information of this module.			
Available via	Crc.h			

(SRS LIBS 00005, SRS LIBS 00009, SRS LIBS 00011)

[SWS_Crc_00011] [The function Crc_GetVersionInfo shall return the version information of the CRC module. The version information includes:

- Module Id
- Vendor Id
- Vendor specific version numbers (SRS BSW 00407).

(SRS_BSW_00407, SRS_BSW_00411)

[SWS_Crc_00017] [If source code for caller and callee of the function Crc_GetVer-sionInfo is available, the CRC module should realize this function as a macro, defined in the modules header file.|(SRS_BSW_00407, SRS_BSW_00411)

8.4 Callback notifications

None.

8.5 Scheduled functions

The Crc module does not have scheduled functions.



8.6 Expected interfaces

In this chapter, all interfaces required from other modules are listed.

8.6.1 Mandatory interfaces

None

8.6.2 Optional interfaces

None.

8.6.3 Configurable interfaces

None.

8.7 Service Interfaces

None.



9 Sequence diagrams

9.1 Crc_CalculateCRC8()

The following diagram shows the synchronous function call Crc_CalculateCRC8.

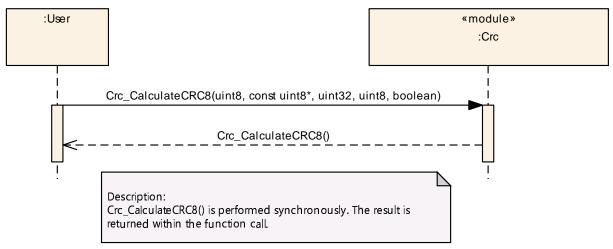


Figure 9.1: Crc_CalculateCRC8

9.2 Crc_CalculateCRC8H2F()

The following diagram shows the synchronous function call Crc_Calculate-CRC8H2F.

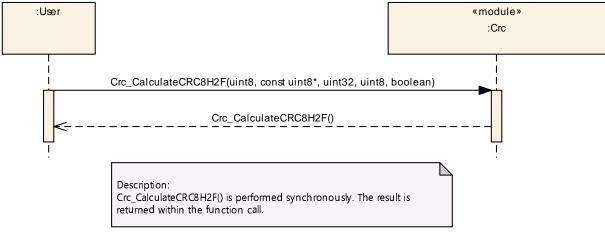


Figure 9.2: Crc_CalculateCRC8H2F



9.3 Crc_CalculateCRC16()

The following diagram shows the synchronous function call Crc_CalculateCRC16.

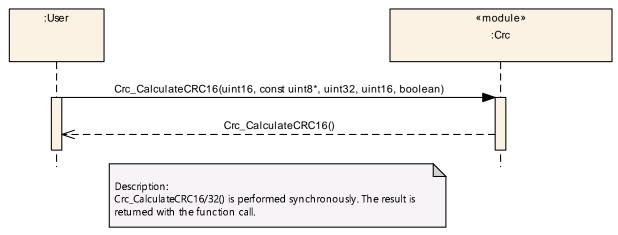


Figure 9.3: Crc_CalculateCRC16

9.4 Crc_CalculateCRC16ARC()

The following diagram shows the synchronous function call Crc_Calculate-CRC16ARC.

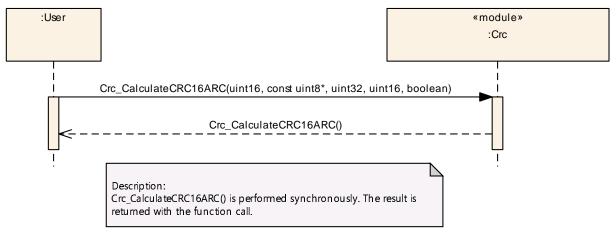


Figure 9.4: Crc_CalculateCRC16ARC



9.5 Crc_CalculateCRC32()

The following diagram shows the synchronous function call Crc_CalculateCRC32.

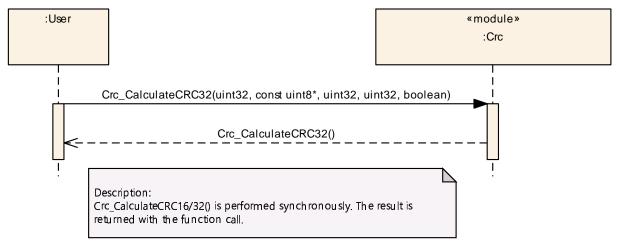


Figure 9.5: Crc_CalculateCRC32

9.6 Crc_CalculateCRC32P4()

The following diagram shows the synchronous function call Crc_Calculate-CRC32P4.

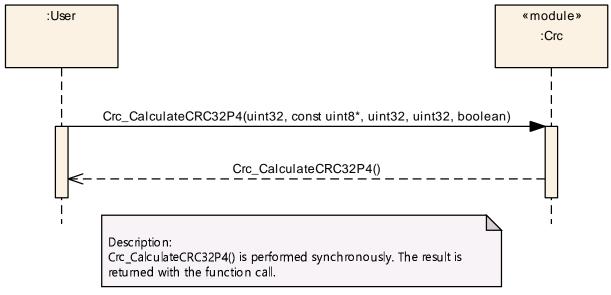


Figure 9.6: Crc CalculateCRC32P4



9.7 Crc_CalculateCRC64()

The following diagram shows the synchronous function call Crc_CalculateCRC64.

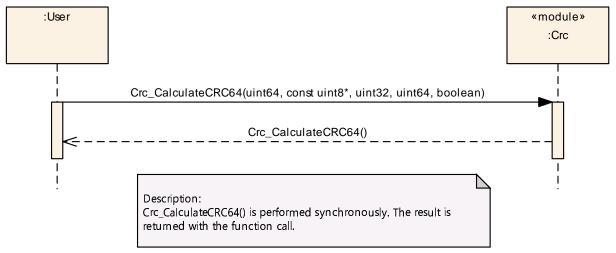


Figure 9.7: Crc_CalculateCRC64



10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module CRC.

Chapter 10.3 specifies published information of the module CRC.

10.1 How to read this chapter

For details refer to the chapter 10.1 "Introduction to configuration specification" in SWS BSWGeneral.

In addition to this section, it is highly recommended to read the documents:

- AUTOSAR Layered Architecture [8]
- AUTOSAR ECU Configuration Specification [9]:
 This document describes the AUTOSAR configuration methodology and the AUTOSAR configuration metamodel in detail.

The following is only a short survey of the topic and it will not replace the ECU Configuration Specification document.

10.1.1 Configuration and configuration parameters

Configuration parameters define the variability of the generic part(s) of an implementation of a module. This means that only generic or configurable module implementation can be adapted to the environment (software/hardware) in use during system and/or ECU configuration.

The configuration of parameters can be achieved at different times during the software process: before compile time, before link time or after build time. In the following, the term "configuration class" (of a parameter) shall be used in order to refer to a specific configuration point in time.

10.1.2 Containers

Containers structure the set of configuration parameters. This means:

• all configuration parameters are kept in containers.



• (sub-) containers can reference (sub-) containers. It is possible to assign a multiplicity to these references. The multiplicity then defines the possible number of instances of the contained parameters.



10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in chapters 7 and 8.

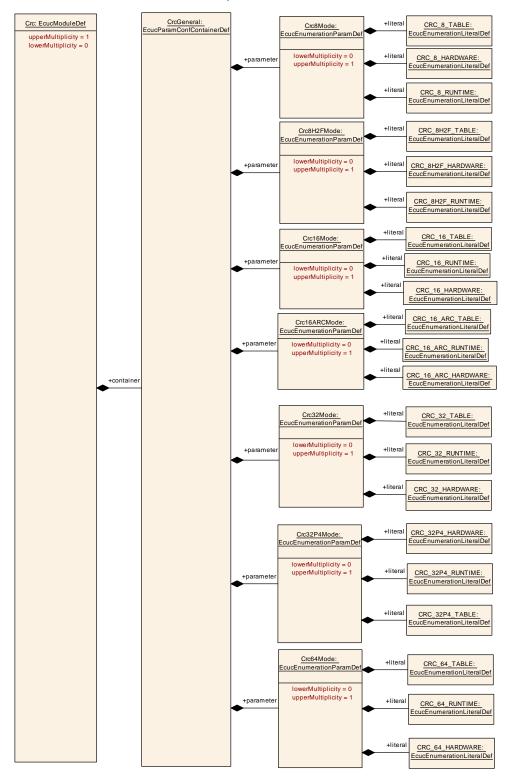


Figure 10.1: CRC



10.2.1 Crc

Module SWS Item	ECUC_Crc_00033		
Module Name	Crc		
Module Description	Configuration	n of the Crc (Crc routines) module.	
Post-Build Variant	false		
Support			
Supported Config	VARIANT-PRE-COMPILE		
Variants			
Included Containers			
Container Name	Multiplicity Scope / Dependency		
CrcGeneral	1	General configuration of CRC module	

SWS Item	[ECUC_Crc_00006]	
Container Name	CrcGeneral	
Parent Container	Crc	
Description	General configuration of CRC module	
Configuration Parameters		

Name	Crc16ARCMode [ECUC Crc 00035]				
114					
Parent Container	CrcGeneral				
Description	Switch to select one of the a calculation methods	Switch to select one of the available CRC-16/ARC (polynomial 8005) calculation methods			
Multiplicity	01				
Туре	EcucEnumerationParamDef	ef			
Range	CRC_16_ARC_HARDWA hardware based CRC16 calculation RE				
	CRC_16_ARC_RUNTIME	runtime based CRC16 calculation			
	CRC_16_ARC_TABLE table based CRC16 calculation (default selection)				
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time X All Variants				
	Link time	_			
	Post-build time –				
Value Configuration Class	Pre-compile time X All Variants				
	Link time –				
	Post-build time –				
Scope / Dependency	scope: local				



Name	Crc16Mode [ECUC_Crc_00025]				
Parent Container	CrcGeneral				
Description	Switch to select one of the available CRC 16-bit (CCITT) calculation methods				
Multiplicity	01				
Туре	EcucEnumerationParamDef				
Range	CRC_16_HARDWARE	har	dware based CRC16 calculation		
	CRC_16_RUNTIME	run	time based CRC16 calculation		
	CRC_16_TABLE table based CRC16 calculation (default selection)				
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time X All Variants				
	Link time	-			
	Post-build time –				
Value Configuration Class	Pre-compile time X All Variants				
	Link time –				
	Post-build time –				
Scope / Dependency	scope: local				

Name	Crc32Mode [ECUC_Crc_00026]				
Parent Container	CrcGeneral				
Description	Switch to select one of the available CRC 32-bit (IEEE-802.3 CRC32 Ethernet Standard) calculation methods				
Multiplicity	01				
Туре	EcucEnumerationParamDef				
Range	CRC_32_HARDWARE hardware based CRC32 calculation				
	CRC_32_RUNTIME	run	time based CRC32 calculation		
	CRC_32_TABLE table based CRC32 calculation (default selection)				
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time	Х	All Variants		
	Link time	_			
	Post-build time –				
Value Configuration Class	Pre-compile time X All Variants				
	Link time –				
	Post-build time –				
Scope / Dependency	scope: local				



Name	Crc32P4Mode [ECUC_Crc_00032]			
Parent Container	CrcGeneral			
Description	Switch to select one of the available CRC 32-bit E2E Profile 4 calculation methods.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	CRC_32P4_HARDWARE	hardware based CRC32P4 calculation		
	CRC_32P4_RUNTIME	runtime based CRC32P4 calculation		
	CRC_32P4_TABLE	table based CRC32P4 calculation (default selection)		
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			

Name	Crc64Mode [ECUC Crc 00034]			
Parent Container	CrcGeneral			
Description	Switch to select one of the available CRC 64-bit calculation methods.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	CRC_64_HARDWARE	hardware based CRC64 calculation		
	CRC_64_RUNTIME	runtime based CRC64 calculation table based CRC64 calculation (default		
	CRC_64_TABLE			
		selection)		
Post-Build Variant	false			
Multiplicity				
Post-Build Variant Value	false			
Multiplicity	Pre-compile time X All Variants			
Configuration Class	The complication	^	7 iii Varianto	
J	Link time	_		
	Post-build time	_		
Value Configuration	Pre-compile time	Х	All Variants	
Class				
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			



Name	Crc8H2FMode [ECUC_Crc_00031]			
Parent Container	CrcGeneral			
Description	Switch to select one of the available CRC 8-bit (2Fh polynomial) calculation methods			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	CRC_8H2F_HARDWARE	hardware based CRC8H2F calculation		
	CRC_8H2F_RUNTIME	run	time based CRC8H2F calculation	
	CRC_8H2F_TABLE	table based CRC8H2F calculation (default selection)		
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time			
Value Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			

Name	Crc8Mode [ECUC_Crc_00030]			
Parent Container	CrcGeneral			
Description	Switch to select one of the available CRC 8-bit (SAE J1850) calculation methods			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	CRC_8_HARDWARE	hardware based CRC8 calculation		
	CRC_8_RUNTIME	runtime based CRC8 calculation		
	CRC_8_TABLE	table based CRC8 calculation (default selection)		
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			

No Included Containers



10.3 Published Information

For details refer to the chapter 10.3 "Published Information" in SWS BSWGeneral [2].

[SWS_Crc_00050] [The standardized common published parameters as required by

SRS_BSW_00402 in the SRS General on Basic Software Modules [3] shall be published within the header file of this module and need to be provided in the BSW ModuleDescription. The according module abbreviation can be found in the List of Basic Software Modules [10].|(SRS_BSW_00402)

Additional module-specific published parameters are listed below if applicable.

[SWS_Crc_00048] [

Information elements					
Information element name	Type / Range	Information element description			
CRC_VENDOR_ID	#define/ uint16	Vendor ID of the dedicated implementation of this module according to the AUTOSAR vendor list			
CRC_MODULE_ID	#define/ uint16	Module ID of this module from Module List			
CRC_AR_RELEASE_MAJOR_VERSION	#define/ uint8	Major version number of AUTOSAR release on which the appropriate implementation is based on.			
CRC_AR_RELEASE_MINOR_VERSION	#define/ uint8	Minor version number of AUTOSAR release on which the appropriate implementation is based on.			
CRC_AR_RELEASE_REVISION_VERSION	#define/ uint8	Patch level version number of AUTOSAR release on which the appropriate implementation is based on.			
CRC_SW_MAJOR_VERSION	#define/ uint8	Major version number of the vendor specific implementation of the module. The numbering is vendor specific.			
CRC_SW_MINOR_VERSION	#define/ uint8	Minor version number of the vendor specific implementation of the module. The numbering is vendor specific.			
CRC_SW_PATCH_VERSION	#define/ uint8	Patch level version number of the vendor specific implementation of the module. The numbering is vendor specific.			



A Not applicable requirements

[SWS Crc 00051] [These requirements are not applicable to this specification.] SRS BSW 00344, SRS BSW 00404, SRS BSW 00405, SRS BSW 00170, SRS -SRS -BSW 00383, SRS BSW 00384, SRS BSW 00388, SRS BSW 00389, BSW 00395. SRS BSW 00398, SRS BSW 00399, SRS BSW 00400. SRS -BSW 00401. SRS BSW 00375, SRS BSW 00101. SRS BSW 00416, SRS -SRS BSW 00423, BSW 00406. SRS BSW 00168, SRS BSW 00424, SRS -BSW 00425. SRS BSW 00427. SRS BSW 00428. SRS BSW 00429. SRS -BSW 00432, SRS BSW 00433, SRS BSW 00336, SRS BSW 00337. SRS -BSW 00369, SRS BSW 00339, SRS BSW 00422. SRS BSW 00417, SRS -BSW 00323, SRS BSW 00409, SRS BSW 00385, SRS BSW 00386, SRS -BSW 00161, SRS BSW 00162, SRS BSW 00005, SRS BSW 00415, SRS -BSW 00164. SRS BSW 00325, SRS BSW 00342. SRS BSW 00343, SRS -BSW 00160. SRS BSW 00007. SRS BSW 00347. SRS BSW 00305, SRS -BSW 00307. SRS BSW 00373. SRS BSW 00327. SRS BSW 00335. SRS -BSW_00350, SRS BSW 00410, SRS BSW 00314, SRS BSW 00348, SRS -BSW 00353. SRS BSW 00361. SRS BSW 00302. SRS BSW 00328. SRS -BSW 00312, SRS BSW 00006, SRS BSW 00304, SRS BSW 00378, SRS -BSW 00306, SRS BSW 00308, SRS BSW 00309, SRS BSW 00358, SRS -BSW 00414. SRS BSW 00359. SRS BSW 00360. SRS BSW 00330. SRS -BSW 00331. SRS BSW 00009. SRS BSW 00172. SRS BSW 00010. SRS -SRS BSW 00321, SRS BSW 00341. BSW 00333. SRS BSW 00334, SRS -LIBS 00001, SRS LIBS 00002, SRS LIBS 00003, SRS LIBS 00004, SRS LIBS -00007, SRS LIBS 00008, SRS LIBS 00010, SRS LIBS 00012, SRS LIBS 00013, SRS LIBS 00015, SRS LIBS 00016, SRS LIBS 00017)