

CODE BANKING USING THE KEIL 8051 TOOLS

Relevant Devices

This application note applies to the following devices: C8051F120, C8051F121, C8051F122, C8051F123, C8051F124, C8051F125, C8051F126, and C8051F127.

Introduction

The 8051 architecture supports a 64KB linear program memory space. Devices that have more than 64KB of program memory implement a code banking scheme to surmount this 64KB limit. This application note discusses software project management techniques and provides example applications that use code banking.

Key Points


- Projects requiring less than 64KB of FLASH can leave the PSBANK register at its default setting which provides a 64KB linear address space.
- Code banked projects with more than 64KB of program code typically contain multiple source files, one or more for each code bank.

Code Banking Overview

The C8051F12x family of devices has 128KB of on-chip FLASH, divided into 4 physical 32KB banks. This program memory space can be used to

hold executable code or constant data. Figure 1 shows the code banking model implemented by these devices. Instruction fetch operations (normal code execution) are handled independently of constant data operations (MOVC instructions, and MOVX instructions when used for writing to FLASH). Each type of operation has its own bank select bits that may select any of the 4 banks as shown in Figure 1. All code bank switching is handled at the device level by writing to the PSBANK register. The COBANK and IFBANK bits in this register control switching for constant code accesses and instruction fetches, respectively. For more information on code bank switching, please refer to the C8051F12x datasheet.

Figure 1. C8051F12x Code Banking Model

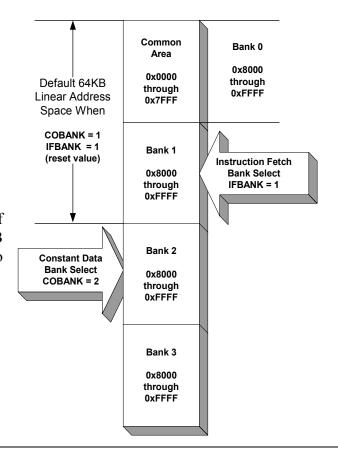

For projects that require more than 64KB of code space or non-volatile data space, the user has the option of manually handling the bank switching in software or setting up a code-banked project. Both methods are discussed in this note.

User-Managed Bank Switching for Data Intensive Projects

User-managed bank switching is useful for projects that have less than 64KB of executable code but need to store large amounts of data in FLASH. In this situation, the Common area and Bank 1 are used for program memory while Bank 2 and Bank 3 are used for data storage. The project does not need to be set up for code banking.

The following data logging example shows how bank switching can be managed in application software.

Example 1: Data Logging Application

This application uses a 22.1184 MHz crystal oscillator to implement a software real-time clock (RTC). PCA0, configured to count Timer 0 overflows, generates an interrupt once every second. The interrupt handler records the current time and device temperature in a non-volatile log in FLASH.

The 112,640 byte log cycles through all 4 code banks recording time and temperature. Each data record has 6 fields as shown in Figure 2. The log is capable of storing 14080 records over a time period of 3.9 hours. Once the log is full, it continues log-

ging at the beginning of log, erasing the FLASH page with the oldest data as it progresses.

Managing the Instruction Fetch Bank Select

Since this application uses less than 32KB of FLASH for program code, there will be no instruction fetches from the 0x8000 to 0xFFFF memory space. This makes the value of IFBANK a "don't care". However, if an application uses between 32KB and 64KB of FLASH for program code, IFBANK should be left at its reset value, targeting Bank 1.

Advancing Through the Code Banks

This application reserves the first 16KB of FLASH in the Common area for program code. The log starts at address 0x4000 in the Common area and

Figure 2. Log Record Structure





ends at location 0xF7FF in Bank 3 as shown in FLASH write pointer. These cases are outlined in Figure 3.

After storing a record in the log, the FLASH write pointer is advanced to the next record and checked for code bank boundaries. There are three possible boundary conditions to consider when adjusting the

Figure 3. FLASH Memory Map for Example 1

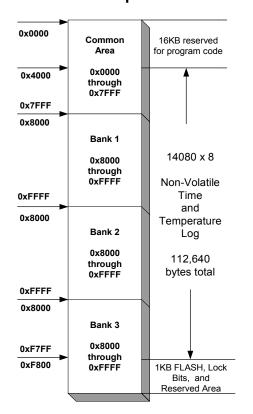


Table 1.

Preserving the PSBANK Register in **Functions and Interrupt Service Routines**

A program must preserve and restore the value of the PSBANK register in every function and interrupt service routine that switches code banks.

Choosing Log Record Size

Example 1 only writes entire records to FLASH. If the record size is a power of 2 and the log starts at the beginning of a FLASH page, then all records will be contained within one of the code banks. If a record can cross a bank boundary, then bounds checking must be performed after every byte write.

Keeping Accurate Time

This application keeps track of time by implementing an interrupt driven real-time clock. With SYSCLK at 49.7664 MHZ, Timer 0 in mode 2 overflows exactly 4050 times every second when clocked by SYSCLK/48. PCA Module 0 is configured in "Software Timer Mode" to count Timer 0 overflows and generate an interrupt every second.

Table 1. FLASH Write Pointer Boundary Conditions

Condition	How to Detect	Typical Action
FLASH write pointer reaches the end of the Common area.	FLASH write pointer will point to location 0x8000.	No action is necessary if COBANK is always set to Bank 1 whenever the pointer is moved to the beginning of the log.
FLASH write pointer reaches the end of Bank 1 or Bank 2.	FLASH write pointer will point to location 0x0000.	FLASH write pointer should be set to 0x8000 and COBANK should be incremented.
FLASH write pointer reaches the end of the log.	FLASH write pointer will point to location 0xF800 and Bank 3 will be selected by COBANK.	FLASH write pointer should be reset to the first location in the log (0x4000) and COBANK should select Bank 1.



Project-Managed Bank Switching for Code-Intensive Applications

The Keil 8051 development tools support code banking by generating code that can automatically switch and preserve the PSBANK register. This allows the user to expand 64KB projects to 128KB without modifying existing modules. Using the code banking capability of the Silicon Labs IDE or the Keil μ Vision2 for projects containing more than 64KB of program code is recommended to take advantage of this feature.

To use the Keil 8051 tools for code banking, the project needs to be configured. The configuration required for code banking is supported in Version 1.7 and later of the Silicon Labs IDE and Version 2.00 and later of μ Vision2. Step-by-step instructions on how to configure a Silicon Labs IDE project and a μ Vision2 project for code banking are included in example 2.

Code banked projects typically contain multiple source files, one or more for each code bank. This greatly simplifies project configuration, as will be shown in example 2. In addition to source files, all projects configured for code banking must include a code banked version of STARTUP.A51 and L51_BANK.A51. These files can be found in the Silicon Labs IDE installation directory, 'Cygnal\Examples\C8051F12x\Asm'

Example 2: Project-Managed Code Banking

This example shows how to set up a code banked project using the Keil development tools. It uses Timer 3 and Timer 4 interrupts to blink the LED and output a 1 kHz sine wave on DAC1, respectively. The code that blinks the LED is located in Bank 3 and the code that outputs a sine wave is located in Bank 2. Since interrupts must be located in the Common area, both interrupts call a function in one of the banks to perform the desired task.

This example contains three source files, one for each bank and the Common area, and two required project files, as listed in Table 2.

Table 2. Files needed by Example 2

common.c		
bank2.c		
bank3.c		
STARTUP.A51		
L51_BANK.A51		

Step by Step Instructions on Configuring a Code Banked Project Using the Silicon Labs IDE

The following steps show how to configure the code banked example project using the Silicon Labs IDE.

- 1. Start the Silicon Labs IDE and add the files listed in Table 2 to a new project. Additionally, an example project is included named 'example2.wsp'.
- 2. Open the *Tool Chain Integration* window from the *Project* menu and select the *Linker* tab as shown in Figure 4. Click on the *Customize* button. A window similar to the one shown in Figure 5 should appear on the screen. Select the processor you are using from the pull down menu. This enables code banking by adding the *BANKAREA* directive to the linker command line parameters. For more information on the *BANKAREA* directive, please refer to Chapter 9 of the Keil Assembler/Linker manual,



accessible in PDF format from the *Help* menu of the Silicon Labs IDE.

Figure 4. Tool Chain Integration Window


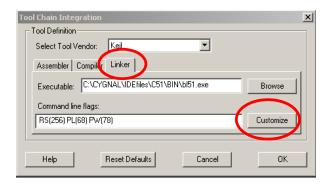


Figure 5. Linker Customization Window

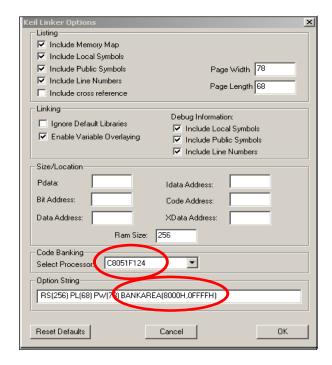

3. Open the *Target Build Configuration* window from the *Project* menu and click the *Customize* button, as shown in Figure 6. The window

shown in Figure 7 should appear on the screen. Select the *Files to Link* tab.

Figure 6. Target Build Configuration
Window


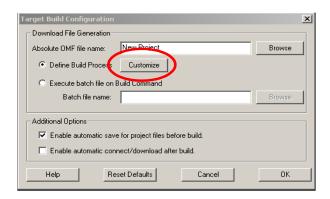


Figure 7. Project Build Definition Window

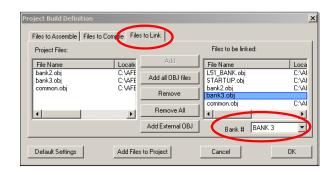

4. For each file in the *Files To Be Linked* list box, select the desired bank from the *Bank* # pull down menu. The 'L51_BANK.obj' and 'STARTUP.obj' files should be located in the Common area in all projects. The remaining project files should be located in their respective code banks, as shown in Table 3.

Table 3. Code Bank Selection for Example 2

Filename	Code Bank
common.obj	Common area
bank2.obj	Bank 2



Table 3. Code Bank Selection for Example 2

Filename	Code Bank
bank3.obj	Bank 3
STARTUP.obj	Common area
L51_BANK.obj	Common area

- 5. Save the project by selecting *Save Project* from the *Project* menu.
- 6. Build the project by selecting *Build/Make Project* from the *Project* menu.
- 7. If the project has been configured correctly, an 'example2.M51' map file will be generated in the project folder. Inspect this file to verify that functions have been located in the proper bank. You should also notice that the sine table in 'bank2.c' has been located in the Common area because it is a constant code variable. Refer to the Keil linker manual for a description of the M51 file.


Step by Step Instructions on Configuring a Code Banked Project Using µVision2.

The following steps show how to configure the code banked example project using the Keil IDE, μ Vision2.

1. Start $\mu Vision2$, create a new project and add the files listed in Table 2 to the project. Additionally, an example project is included named 'example2.Uv2'.

2. Open the *Options for Target* window from the *Project* menu and select the *Target* tab, as shown in Figure 8. Click on the *Code Banking* check box at the bottom on the window. Next, select the number 4 from the *Banks*: pull down menu. Finally, edit the *Bank Area*: text boxes with a value of *0x8000* for the *Start*: value and *0xFFFF* for the *End*: value. When the selections match those shown in Figure 8, press the *OK* button to close the window.

Figure 8. Options for Target Window

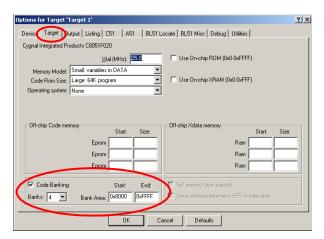

- 3. Each file now needs to be assigned to a code bank or to the common area. Additionally, groups of files can be created and banking assignments made for the entire group. For each file/group in the Project Workspace window, right-click on the file-name/group-name and select Options for File/Options for Group, as shown in Figure 9. The window shown in Figure 10 should appear on the screen. Select the desired bank from the Code Bank: pull The 'L51 BANK.obi' down menu. 'STARTUP.obj' files should be located in the Common area in all projects. The remaining project files should be located in their respective code banks, as shown in Table 4.
- 4. Build the project by selecting *Build target* or *Rebuild all target files* from the *Project* menu.

SILICON LABORATORIES

5. If the project has been configured correctly, an 'example2.M51' map file will be generated in the project folder. Inspect this file to verify that functions have been located in the proper bank. You should also notice that the sine table in 'bank2.c' has been located in the Common area because it is a constant code variable. Refer to the Keil linker manual for a description of the M51 file.

Figure 9. Select "Options for File"

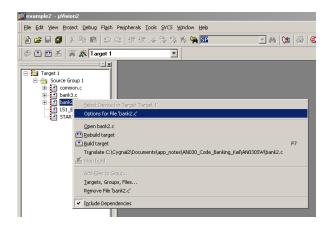


Figure 10. Options for File Window

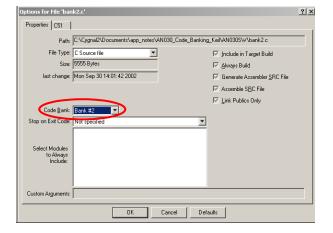


Table 4. Code Bank Selection for Example 2

Filename	Code Bank
common.obj	Common area
bank2.obj	Bank 2
bank3.obj	Bank 3
STARTUP.obj	Common area
L51_BANK.obj	Common area

Code Bank Assignment Considerations

Assigning files to code banks is a straightforward procedure. However, determining the best placement of functions in code banks is largely dependant on the nature of the project. This section outlines some guidelines to follow when assigning code banks.

The Common area is accessible by all code banks at all times. It is important to keep all code that must always be accessible in the Common area. For example, reset and interrupt vectors, interrupt service routines, code constants, bank switch code, and library functions should always be located in the Common area.

Assigning Code Banks for Maximum Performance

Code bank switching does not significantly affect the performance of most systems. However, to achieve maximum performance in time critical applications, programs should be structured so that frequent bank switching is not necessary. Bank switch code is not generated when the function being called resides in the Common area or in the same bank as its calling function. Placing frequently accessed functions or functions called from different banks in the Common area is essential to achieve maximum performance in time critical applications.



Code Constants

Code constants (strings, tables, etc.) are located in the Common area by default. This is the best location for code constants in most applications because they can be accessed using the MOVC instruction from any bank. If the Common area is not large enough to accommodate all code constants, they may be placed in one of the code banks but may only be accessed from code executing from the same bank in which they reside or the common area. They may not be accessed from code executing in another bank because the linker sets the constant code bank to the same bank as the instruction fetch bank. Constant data in a code bank may be accessed from the common area only if the bank in which they reside is the currently selected bank. Figure 11 shows how to invoke a linker-managed bank switch from C.

The *BANKx* linker control allows code constants to be located outside the Common area. For details on locating constant code variables in a code bank, please see the Keil Knowledge Base article at http://www.keil.com/support/docs/1615.htm.

Bank Switch Macros

The Keil 8051 tools support 3 modes of bank switching defined in 'L51_BANK.A51'. Bank switching on the C8051F12x uses Mode 4 (bank switching via user-provided code). This mode allows the user to specify a macro for each code bank that selects it in the PSBANK register.

The PSBANK register contains two bank selects, COBANK for constant data and IFBANK for instruction fetches. Using the 'L51_BANK.A51' supplied by Silicon Labs, the COBANK and

IFBANK always target the same code bank. This is why constant code tables must be located in the Common area or in the bank that accesses them.

The bank switch macros in 'L51_BANK.A51' may be changed to keep COBANK fixed regardless of the value of IFBANK. This would allow the user to dedicate one bank for constant data operations while using the other two banks for instruction fetches only. This dedicated bank would be available to code executing in any bank or the Common area.

The Common area may always be used for both instruction fetches and data storage regardless of the PSBANK register settings. For more information on bank switch macros, please see Chapter 9 of the Keil Assembler/Linker manual accessible in PDF format from the help menu of the Silicon Labs IDE.

Figure 11. Invoking a Linker-Managed Bank Switch From C



Software Examples

Example 1: User-Managed Code Banking (Data Logger with Real-Time Clock)

```
// Data Logger RTC.c
//-----
// Copyright 2002 Cygnal Integrated Products, Inc.
// AUTH: FB
// DATE: 30 SEP 02
//
//
// This application uses a 22.1184 MHz crystal oscillator to implement a
// software real-time clock (RTC). PCA Module 0, configured to count Timer 0
// overflows in software timer mode, generates an interrupt every second.
// The interrupt handler records the current time and device temperature
// in a non-volatile log in FLASH.
// With SYSCLK at 49.7664 MHZ, Timer 0 in mode 2 overflows exactly 4050 times
// every second when clocked by SYSCLK/48. PCAO, clocked by Timer 0 overflows,
// is programmed to generate an interrupt every 4050 Timer 0 overflows,
// or once every second.
// The 112,640 byte log cycles through all 4 code banks recording time and
// temperature. Each data record is 8 bytes long. The log is capable of storing
// 14080 records over a time period of 3.9 hours. Once the log is full, it
// continues logging at the beginning of log, erasing the FLASH page with
// the oldest data as it progresses.
//
// When this code is built, the linker generates two multiple call to segments
// warnings. These warnings are generated because the FLASH support routines
// are called from the main routine and from interrupts. These warnings have
// been accounted for in the code by disabling interrupts before calling any
// FLASH support routines.
//
// Target: C8051F12x
// Tool chain: KEIL C51 6.03 / KEIL EVAL C51
//-----
// Includes
#include <c8051f120.h>
                                // SFR declarations
#include <stdio.h>
                                 // printf() and getchar()
//-----
// 16-bit SFR Definitions for 'F12x
//-----
sfr16 DP
           = 0x82;
                                // data pointer
sfr16 ADC0 = 0xbe;
                                // ADC0 data
sfr16 ADC0GT = 0xc4;
                                 // ADC0 greater than window
sfr16 ADCOLT = 0xc6;
                                 // ADC0 less than window
sfr16 RCAP2 = 0xca;
                                 // Timer2 capture/reload
```



```
sfr16 RCAP3 = 0xca;
                                // Timer3 capture/reload
sfr16 RCAP4 = 0xca;
                                // Timer4 capture/reload
sfr16 TMR2 = 0xcc;

sfr16 TMR3 = 0xcc;
                                // Timer2
                                // Timer3
         = 0xcc;
sfr16 TMR4
                                // Timer4
sfr16 DAC0 = 0xd2;
sfr16 DAC1 = 0xd2;
                                // DACO data
                                // DAC1 data
sfr16 PCAOCP5 = 0xe1;
                                // PCA0 Module 5 capture
sfr16 PCA0CP2 = 0xe9;
                                // PCA0 Module 2 capture
sfr16 PCA0CP3 = 0xeb;
                                // PCA0 Module 3 capture
sfr16 PCA0CP4 = 0xed;
                                // PCA0 Module 4 capture
sfr16 PCA0 = 0xf9;
                                // PCA0 counter
sfr16 PCA0CP0 = 0xfb;
                                // PCA0 Module 0 capture
sfr16 PCAOCP1 = 0xfd;
                                // PCA0 Module 1 capture
//-----
// Type Definitions
//-----
typedef union UInt {
                                // Byte addressable unsigned int
  unsigned int Int;
  unsigned char Char[2];
} UInt;
typedef union Long {
                               // Byte addressable long
  long Long;
  unsigned int Int[2];
  unsigned char Char[4];
} Long;
typedef union ULong {
                                // Byte addressable unsigned long
  unsigned long ULong;
  unsigned int Int[2];
  unsigned char Char[4];
} ULong;
                               // LOG record structure
typedef struct Record {
  char start;
  unsigned int hours;
  unsigned char minutes;
  unsigned char seconds;
  unsigned int ADC result;
  char end;
} Record;
//-----
// Global CONSTANTS
//-----
            1
#define TRUE
#define FALSE
                 Ω
#define EXTCLK
                22118400
                                // External oscillator frequency in Hz
#define SYSCLK
                49766400
                                // Output of PLL derived from
                                // (EXTCLK*9/4)
                                // Baud rate of UART in bps
#define BAUDRATE 115200
                                // Note: The minimum standard baud rate
                                // supported by the UARTO_Init routine
                                // in this file is 19,200 bps when
```



```
// SYSCLK = 49.76MHz.
#define SAMPLERATE
                2000
                                 // The ADC sampling rate in Hz
sbit LED = P1^6;
                                // LED='1' means ON
sbit SW2 = P3^7;
                                 // SW2='0' means switch pressed
#define LOG START 0x04000L
                                // Starting address of LOG
#define LOG END 0x1F800L
                                // Last address in LOG + 1
#define RECORD LEN 8
                                 // Record length in bytes
                                // Start of Record symbol
#define START OF RECORD ':'
#define FLASH PAGESIZE 1024
                                // Number of bytes in each FLASH page
#define COBANK 0xF0
                                 // Bit mask for the high nibble of PSBANK
#define COBANKO
              0x00
                                 // These macros define the bit mask values
#define COBANK1
                                 // for the PSBANK register used for
              0 \times 10
#define COBANK2
              0x20
                                 // selecting COBANK. COBANK should always
#define COBANK3
              0x30
                                 // be cleared then OR-Equaled (|=) with
                                 // the proper bit mask to avoid changing
                                 // the other bits in the PSBANK register
//-----
// Global VARIABLES
//-----
unsigned char SECONDS = 0;
                                // global RTC seconds counter
unsigned char MINUTES = 0;
                                // global RTC minutes counter
unsigned int HOURS = 0;
                                // global RTC hours counter
unsigned int ADC RESULT = 0;
                                 // holds the oversampled and averaged
                                 // result from ADC0
bit LOG FLAG = 0;
                                 // this flag is used to enable
                                 // and disable logging but does
                                 // not affect the real-time clock
bit LOG ERASED = 0;
                                 // this flag indicates that the
                                // LOG has been erased.
//-----
// Function PROTOTYPES
//-----
void main(void);
void RTC update(void);
void print_menu(void);
// initialization routines
void SYSCLK Init(void);
void PORT Init(void);
void UARTO Init (void);
void ADC0 Init (void);
void Timer3 Init(int counts);
void RTC Init (void);
void PCA0_ISR (void);
```



```
// FLASH support routines
void FLASH PageErase (unsigned long addr);
void FLASH Write (unsigned long dest, char* src, unsigned int numbytes);
void FLASH ByteWrite (unsigned long dest, char dat);
void FLASH Read ( char* dest, unsigned long src, unsigned int numbytes);
unsigned char FLASH ByteRead (unsigned long addr);
// LOG support routines
void print_time(void);
void LOG_erase(void);
unsigned long find_current_record(void);
void LOG_print(char all_at_once);
void LOG update(void);
// MAIN Routine
//-----
void main (void)
                                     // buffer to hold characters entered
  #define input str len 4
  char input_str[input_str_len];
                                     // at the command prompt
  WDTCN = 0xde;
                                     // disable watchdog timer
  WDTCN = 0xad;
  PORT Init ();
                                     // initialize crossbar and GPIO
  SYSCLK_Init ();
                                     // initialize oscillator
  UARTO Init ();
                                     // initialize UARTO
  ADC0 Init();
                                     // initialize ADC0
  RTC_Init ();
                                     // initializes TimerO and the PCA
  Timer3 Init(SYSCLK/SAMPLERATE);
                                     // initialize Timer3 to overflow
                                     // and generate interrupts at
                                     // <SAMPLERATE> Hz
                                     // to implement a real-time clock
  EA = 1;
                                     // enable global interrupts
                                     // print the command menu
  print_menu();
  while (1) {
     SFRPAGE = UARTO PAGE;
     printf("\nEnter a command > ");
     gets(input str, input str len);
     switch ( input_str[0] ){
        case '1': LOG FLAG = 1;
                  SFRPAGE = UARTO PAGE;
                  printf("\nLogging has now started.\n");
                  break;
        case '2': LOG_FLAG = 0;
```



```
SFRPAGE = UARTO_PAGE;
                 printf("\nLogging has now stopped.\n");
        case '3': LOG FLAG = 0;
                 LOG erase();
                 SFRPAGE = UARTO_PAGE;
                 printf("\nThe log has been erased and logging is stopped.\n");
                 break;
        case '4': LOG_print(FALSE);
                 print_menu();
                 break;
        case '5': LOG print(TRUE);
                 print menu();
                 break;
        case '6': print_time();
                 break;
        case '?': print_menu();
                 break;
        default: printf("n*** Unknown Command.n");
                 break;
  } // end while
}
// RTC_update
//-----
//
//
void RTC_update(void)
  SECONDS++;
  if (SECONDS == 60) {
     SECONDS = 0;
     MINUTES++;
     if (MINUTES == 60) {
       MINUTES = 0;
       HOURS++;
     }
  }
// FLASH Support Routines
// FLASH_PageErase
```



```
//
// This function erases the FLASH page containing <addr>.
void FLASH PageErase (unsigned long addr)
                               // Preserve current SFR page
// Preserve current code bank
  char SFRPAGE SAVE = SFRPAGE;
  char PSBANK SAVE = PSBANK;
                                   // Preserve interrupt state
  bit EA SAVE = EA;
  ULong temp_addr;
                                   // Temporary ULong
  char xdata * idata pwrite;
                                   // FLASH write/erase pointer
  temp addr.ULong = addr;
                                   // copy <addr> to a byte addressable
                                   // unsigned long
  // Extract address information from <addr>
  pwrite = (char xdata *) temp addr.Int[1];
  // Extract code bank information from <addr>
  PSBANK &= ~COBANK;
                       // Clear the COBANK bits
  // 0x10000, the Common area and
    PSBANK |= COBANK1;
                                   // Bank1 provide a 64KB linear
                                   // address space
  } else {
                                   // Else, Bank2 and Bank3 provide
                                   // a 64KB linear address space
     if (temp addr.Char[2] & 0x80){ // If bit 15 of the address is
                                   // a '1', then the operation should
        PSBANK |= COBANK3;
                                   // target Bank3, else target Bank2
     } else {
        PSBANK |= COBANK2;
        temp_addr.Char[2] \mid = 0x80;
        pwrite = (char xdata *) temp addr.Int[1];
  SFRPAGE = LEGACY PAGE;
  EA = 0;
                                   // Disable interrupts
  FLSCL \mid = 0 \times 01;
                                   // Enable FLASH writes/erases
  PSCTL = 0x03;
                                   // MOVX erases FLASH page
  *pwrite = 0;
                                   // Initiate FLASH page erase
  FLSCL &= \sim 0 \times 01;
                                   // Disable FLASH writes/erases
  PSCTL = 0x00;
                                   // MOVX targets XRAM
  EA = EA SAVE;
                                   // Restore interrupt state
  PSBANK = PSBANK SAVE;
                                   // Restore current code bank
  SFRPAGE = SFRPAGE SAVE;
                                   // Restore SFR page
//-----
// FLASH Write
```



```
//-----
//
// This routine copies <numbytes> from <src> to the FLASH addressed by <dest>.
void FLASH Write (unsigned long dest, char* src, unsigned int numbytes)
{
                                  // Software Counter
  unsigned int i;
  for (i = 0; i < numbytes; i++) {
     FLASH ByteWrite ( dest++, *src++);
  }
}
//-----
// FLASH ByteWrite
//-----
//
// This routine writes <dat> to the FLASH byte addressed by <dest>.
void FLASH ByteWrite (unsigned long dest, char dat)
  char SFRPAGE SAVE = SFRPAGE;
                                 // Preserve current SFR page
  char PSBANK SAVE = PSBANK;
                                 // Preserve current code bank
  bit EA SAVE = EA;
                                 // Preserve interrupt state
  ULong temp dest;
                                 // Temporary ULong
  char xdata * idata pwrite;
                                 // FLASH write/erase pointer
                                 // copy <dest> to a byte
  temp dest.ULong = dest;
                                  // addressable unsigned long
  // Check if data byte being written is 0xFF
  // There is no need to write OxFF to FLASH since erased
  // FLASH defaults to 0xFF.
  if (dat != 0xFF) {
     // Extract address information from <dest>
     pwrite = (char xdata *) temp_dest.Int[1];
     // Extract code bank information from <addr>
     PSBANK &= ~COBANK;
                                 // Clear the COBANK bits
     if( temp dest.Char[1] == 0x00){ // If the address is less than
                                  // 0x10000, the Common area and
       PSBANK |= COBANK1;
                                  // Bank1 provide a 64KB linear
                                  // address space
     } else {
                                  // Else, Bank2 and Bank3 provide
                                  // a 64KB linear address space
        if (temp dest.Char[2] & 0x80){// If bit 15 of the address is
                                  // a '1', then the operation should
          PSBANK |= COBANK3;
                                  // target Bank3, else target Bank2
        } else {
```



```
PSBANK |= COBANK2;
          temp dest.Char[2] \mid= 0x80;
         pwrite = (char xdata *) temp dest.Int[1];
       }
     }
     SFRPAGE = LEGACY PAGE;
     EA = 0;
                               // Disable interrupts
     FLSCL \mid = 0 \times 01;
                                // Enable FLASH writes/erases
    PSCTL = 0x01;
                                // MOVX writes FLASH byte
    *pwrite = dat;
                                // Write FLASH byte
    FLSCL &= \sim 0 \times 01;
                                // Disable FLASH writes/erases
     PSCTL = 0x00;
                                // MOVX targets XRAM
  }
  EA = EA SAVE;
                               // Restore interrupt state
  PSBANK = PSBANK SAVE;
                                // Restore current code bank
                                // Restore SFR page
  SFRPAGE = SFRPAGE SAVE;
}
//----
// FLASH Read
//-----
// This routine copies <numbytes> from FLASH addressed by <src> to <dest>.
//
void FLASH_Read ( char* dest, unsigned long src, unsigned int numbytes)
  unsigned int i;
                                // Software Counter
  for (i = 0; i < numbytes; i++) {
     *dest++ = FLASH ByteRead(src++);
  }
}
//-----
// FLASH ByteRead
//-----
// This routine returns to the value of the FLASH byte addressed by <addr>.
unsigned char FLASH ByteRead (unsigned long addr)
  char SFRPAGE SAVE = SFRPAGE;
                               // Preserve current SFR page
  char PSBANK SAVE = PSBANK;
                               // Preserve current code bank
  ULong temp_addr;
                               // Temporary ULong
                                // Temporary char
  char temp_char;
  char code * idata pread;
                               // FLASH read pointer
  temp addr.ULong = addr;
                                // copy <addr> to a byte addressable
                                // unsigned long
```



```
// Extract address information from <addr>
  pread = (char code *) temp addr.Int[1];
  // Extract code bank information from <addr>
                               // Clear the COBANK bits
  PSBANK &= ~COBANK;
  if( temp addr.Char[1] == 0x00){
                                // If the address is less than
                                // 0x10000, the Common area and
    PSBANK |= COBANK1;
                                // Bank1 provide a 64KB linear
                                // address space
  } else {
                                // Else, Bank2 and Bank3 provide
                                // a 64KB linear address space
    if (temp addr.Char[2] & 0x80) {
                               // If bit 15 of the address is
                                // a '1', then the operation should
       PSBANK |= COBANK3;
                                // target Bank3, else target Bank2
    } else {
       PSBANK |= COBANK2;
       temp addr.Char[2] \mid = 0x80;
       pread = (char code *) temp addr.Int[1];
    }
  }
  temp char = *pread;
                               // Read FLASH byte
  PSBANK = PSBANK SAVE;
                               // Restore current code bank
                               // Restore SFR page
  SFRPAGE = SFRPAGE SAVE;
  return temp char;
}
//-----
// Support Routines
//-----
//----
// print menu
//-----
//
// This routine uses prints the command menu to the UART.
//
void print menu(void)
  char SFRPAGE SAVE = SFRPAGE;
                            // Save Current SFR page
  SFRPAGE = UARTO PAGE;
  printf("\n\nC8051F12x Data Logging Example\n");
  printf("----\n");
  printf("1. Start Logging\n");
  printf("2. Stop Logging\n");
  printf("3. Erase Log\n");
  printf("4. Print Log (one page at a time - Press CTRL+C to stop)\n");
  printf("5. Print Log (all at once - Press CTRL+C to stop)\n");
  printf("6. Print Elapsed Time Since Last Reset\n");
  printf("?. Print Command List\n");
```



```
SFRPAGE = SFRPAGE SAVE;
                            // Restore SFR page
}
//-----
// print_time
//-----
//
// This routine uses prints the elapsed time since the last reset to the UART.
//
void print_time(void)
{
  bit EA_SAVE = EA;
                            // Preserve interrupt state
  SFRPAGE = UARTO PAGE;
  EA = 0;
  printf ("%05u:%02bu:%02bu\n", HOURS, MINUTES, SECONDS);
  EA = EA SAVE;
  SFRPAGE = SFRPAGE SAVE;
                           // Restore SFR page
//-----
// find_current_record
//-----
//
//
unsigned long find current record(void)
{
  char SFRPAGE SAVE = SFRPAGE;
                                 // Save Current SFR page
  bit EA SAVE = EA;
                                 // Preserve interrupt state
  unsigned long pRead = LOG START;
                                 // Pointer used to read from FLASH
  unsigned int i;
                                 // Software counter
  bit record erased;
                                 // Temporary flag
  // Keep skipping records until an uninitialized record is found or
  // until the end of the log is reached
  while( pRead < LOG END ) {</pre>
    EA = 0;
    // Skip all records that have been initialized
    if(FLASH ByteRead(pRead) == START OF RECORD ) {
       // increment pRead to the next record
       pRead += RECORD LEN;
       EA = EA SAVE;
       continue;
    // Verify that the Record is uninitialized, otherwise keep
    // searching for an uninitialized record
    record erased = 1;
    for(i = 0; i < RECORD LEN; i++) {</pre>
       if( FLASH ByteRead(pRead+i) != 0xFF ){
         record_erased = 0;
       }
```



```
}
     if(!record erased){
       // increment pRead to the next record
       pRead += RECORD LEN;
       EA = EA SAVE;
       continue;
    EA = EA SAVE;
    // When this code is reached, pRead> should point to the beginning
    // of an uninitialized (erased) record;
    SFRPAGE = SFRPAGE SAVE;
                           // Restore SFR page
    return pRead;
  }
  // This code is reached only when there are no uninitialized records
  // in the LOG. Erase the first FLASH page in the log and return
  // a pointer to the first record in the log.
  EA = 0;
  FLASH PageErase (LOG START);
                                  // Erase the first page of the LOG
  EA = EA SAVE;
  SFRPAGE = SFRPAGE SAVE;
                                   // Restore SFR page
  return LOG_START;
}
//----
// LOG erase
//
//
void LOG erase(void)
  unsigned long pWrite = LOG START; // pointer used to write to FLASH
  bit EA SAVE = EA;
                                 // save interrupt status
  // Keep erasing pages until <pWrite> reaches the end of the LOG.
  while( pWrite < LOG END ) {</pre>
    EA = 0;
    FLASH PageErase (pWrite);
    EA = EA SAVE;
    pWrite += FLASH PAGESIZE;
  LOG ERASED = 1;
                                   // flag that LOG has been erased
}
//-----
// LOG print
//-----
//
//
void LOG print(char all at once)
  char SFRPAGE_SAVE = SFRPAGE;
                                  // Save Current SFR page
```



```
bit EA SAVE = EA;
                                       // save interrupt status
unsigned long pRead = LOG START;
                                       // Pointer used to read from FLASH
Record temp rec;
                                       // Temporary record
// Keep printing records until the end of the log is reached
while( pRead < LOG END ) {</pre>
   // Copy a record from at pRead> from the LOG into the local
   // Record structure <temp rec>
  EA = 0;
   FLASH Read( (char*) &temp_rec, pRead, RECORD_LEN);
  EA = EA SAVE;
   // Validate Record
   if(temp rec.start != ':'){
     SFRPAGE = SFRPAGE SAVE;
                                      // Restore SFR page
     return;
   // Print the Record
   SFRPAGE = UARTO PAGE;
  RIO = 0;
                                       // Clear UART Receive flag
                                       // to later check for the
                                       // user pressing CTRL+C
  EA = 0;
                                       // disable interrupts
   // print the time and ADC reading
   printf ("%05u:\%02bu:\%02bu ADC = 0x\%04X\n'', temp rec.hours,
                                                temp_rec.minutes,
                                                temp_rec.seconds,
                                                temp rec.ADC result);
  EA = EA SAVE;
                                        // restore interrupts
                                        // any pending interrupts will
                                        // be handled immediatly
  // check if we need to continue
  // if printing all data at once do not stop printing unless
  // the user presses CTRL+C, otherwise print 16 records and
  // then prompt user to press any key
  if(all at once){
     // Check if user has pressed CTRL+C
     if(RI0 \&\& SBUF0 == 0x03){
        RIO = 0;
        SFRPAGE = SFRPAGE SAVE; // Restore SFR page
        return;
     }
  // pause every 16 lines
  } else if( (pRead & ((RECORD LEN*16)-1)) == 0 &&
             pRead > (LOG_START + RECORD_LEN)) {
```



```
// wait for a key to be pressed then check if user has
       // pressed CTRL+C (0x03)
       printf("\npress any key to continue\n");
       if(getkey() == 0x03) {
          SFRPAGE = SFRPAGE SAVE;  // Restore SFR page
          return;
       }
    }
    // increment pRead to the next record
    pRead += RECORD LEN;
    SFRPAGE = SFRPAGE SAVE;
                                      // Restore SFR page
 }
}
//-----
// LOG_update
//
//
void LOG update(void)
  bit EA SAVE = EA;
                                 // Preserve interrupt state
  Record temp_record;
                                 // local LOG record structure
  static unsigned long pWrite = LOG START;
                                  // pointer used to write to the LOG
  bit record erased;
                                  // temporary flag
  unsigned int i;
                                  // temporary integer
  // record the time and ADC reading in the LOG if logging is enabled
  if(LOG FLAG){
     if(LOG ERASED) {
        pWrite = LOG START;
        LOG ERASED = 0;
     } else {
        // find the current record if the record at pWrite is not erased
        record erased = 1;
        for(i = 0; i < RECORD LEN; i++){
           EA = 0;
           if( FLASH ByteRead(pWrite+i) != 0xFF ) {
             record erased = 0;
           EA = EA SAVE;
        if(!record erased){
           pWrite = find_current_record();
        // build the temporary record
```



```
temp_record.start = START_OF_RECORD;
        temp record.hours = HOURS;
        temp record.minutes = MINUTES;
        temp_record.seconds = SECONDS;
        temp_record.ADC_result = ADC_RESULT;
        // write the temporary record to FLASH
        EA = 0;
        FLASH Write (pWrite, (char*) &temp record, RECORD LEN);
        EA = EA SAVE;
        // increment record pointer
        pWrite += RECORD LEN;
        // if <pWrite> is past the end of the LOG, reset to the top
        if(pWrite >= LOG END) {
          pWrite = LOG START;
     } // end else
  } // end if(LOG FLAG)
}
//-----
// Initialization Routines
// SYSCLK Init
//-----
// This routine initializes the system clock to use an external 22.1184 MHz
// crystal oscillator multiplied by a factor of 9/4 using the PLL as its
// clock source. The resulting frequency is 22.1184 MHz \star 9/4 = 49.7664 MHz
void SYSCLK Init (void)
  int i;
                                 // delay counter
  char SFRPAGE SAVE = SFRPAGE;
                                 // Save Current SFR page
  SFRPAGE = CONFIG PAGE;
                                 // set SFR page
  OSCXCN = 0x67;
                                 // start external oscillator with
                                 // 22.1184MHz crystal
  for (i=0; i < 256; i++);
                                // Wait for osc. to start up
  while (!(OSCXCN & 0x80));
                                // Wait for crystal osc. to settle
  CLKSEL = 0x01;
                                 // Select the external osc. as
                                 // the SYSCLK source
  OSCICN = 0 \times 00;
                                 // Disable the internal osc.
  //Turn on the PLL and increase the system clock by a factor of M/N = 9/4
```



```
SFRPAGE = CONFIG PAGE;
  PLLOCN = 0 \times 04;
                                // Set PLL source as external osc.
  SFRPAGE = LEGACY PAGE;
  FLSCL = 0 \times 10;
                                // Set FLASH read time for 50MHz clk
                                // or less
  SFRPAGE = CONFIG PAGE;
                                // Enable Power to PLL
  PLLOCN \mid = 0 \times 01;
  PLLODIV = 0 \times 04;
                                // Set Pre-divide value to N (N = 4)
  PLLOFLT = 0x01;
                                // Set the PLL filter register for
                                // a reference clock from 19 - 30 MHz
                                // and an output clock from 45 - 80 MHz
  PLLOMUL = 0x09;
                                // Multiply SYSCLK by M (M = 9)
  for (i=0; i < 256; i++);
                                // Wait at least 5us
  PLLOCN |= 0 \times 02;
                                // Enable the PLL
                                // Wait until PLL frequency is locked
  while(!(PLLOCN & 0x10));
  CLKSEL = 0 \times 02;
                                // Select PLL as SYSCLK source
  SFRPAGE = SFRPAGE SAVE;
                                // Restore SFR page
}
//-----
// PORT Init
//-----
// This routine configures the Crossbar and GPIO ports.
//
void PORT Init (void)
{
  char SFRPAGE SAVE = SFRPAGE;
                               // Save Current SFR page
  SFRPAGE = CONFIG PAGE;
                                // set SFR page
  XBR0
         = 0 \times 04;
                                // Enable UARTO
  XBR1
         = 0x00;
                                // Enable crossbar and weak pull-up
  XBR2
         = 0x40;
  POMDOUT |= 0 \times 01;
                                // Set TXO pin to push-pull
  P1MDOUT \mid = 0 \times 40;
                                // Set P1.6(LED) to push-pull
                                // Restore SFR page
  SFRPAGE = SFRPAGE SAVE;
}
// UARTO_Init
//
// Configure the UARTO using Timer1, for <baudrate> and 8-N-1. In order to
// increase the clocking flexibility of TimerO, TimerI is configured to count
// SYSCLKs.
//
// To use this routine SYSCLK/BAUDRATE/16 must be less than 256. For example,
// if SYSCLK = 50 MHz, the lowest standard baud rate supported by this
// routine is 19,200 bps.
//
void UARTO Init (void)
```



```
// Save Current SFR page
  char SFRPAGE SAVE = SFRPAGE;
  SFRPAGE = UARTO PAGE;
  SCON0 = 0x50;
                               // SCONO: mode 0, 8-bit UART, enable RX
                               // Timer 1 generates UARTO baud rate and
  SSTA0 = 0x10;
                               // UARTO baud rate divide by two disabled
  SFRPAGE = TIMER01 PAGE;
  TMOD &= \sim 0 \times F0;
  TMOD |= 0x20;
                               // TMOD: timer 1, mode 2, 8-bit reload
  TH1 = -(SYSCLK/BAUDRATE/16);
                               // Set the Timer1 reload value
                               // When using a low baud rate, this equation
                                // should be checked to ensure that the
                                // reload value will fit in 8-bits.
  CKCON \mid = 0 \times 10;
                               // T1M = 1; SCA1:0 = xx
  TL1 = TH1;
                               // initialize Timer1
  TR1 = 1;
                                // start Timer1
  SFRPAGE = UARTO PAGE;
  TIO = 1;
                               // Indicate TX0 ready
  SFRPAGE = SFRPAGE SAVE;
                               // Restore SFR page
}
//-----
// ADC0 Init
//----
//
// Configure ADC0 to start conversions on Timer3 Overflows and to
// use left-justified output mode.
//
void ADC0_Init (void)
  SFRPAGE = ADC0 PAGE;
  ADCOCN = 0x85;
                                // ADCO enabled; normal tracking
                                // mode; ADCO conversions are initiated
                                // on Timer3 overflows; ADC0 data is
                                // left-justified
  REFOCN = 0x07;
                                // enable temp sensor, on-chip VREF,
                                // and VREF output buffer
  AMXOSL = 0x0F;
                                // Select TEMP sens as ADC mux output
  ADCOCF = ((SYSCLK/2500000) << 3);// ADC conversion clock = 2.5MHz
  ADCOCF \mid = 0 \times 01;
                               // PGA gain = 2
                               // Enable ADCO End-of-conversion
  EIE2 \mid = 0x02;
                               // interrupts
                               // Restore SFR page
  SFRPAGE = SFRPAGE SAVE;
```



```
}
//-----
// Timer3 Init
//-----
// This routine initializes Timer3 in auto-reload mode to overflow
// at intervals specified in <counts>.
//
void Timer3 Init (int counts)
{
  SFRPAGE = TMR3 PAGE;
  TMR3CN = 0;
                              // STOP timer; set to auto-reload mode
  TMR3CF = 0x08;
                              // Timer3 counts SYSCLKs
  RCAP3 = -counts;
                              // set reload value
  TMR3 = RCAP3;
                              // start Timer3
  TR3 = 1;
}
//-----
// RTC Init
//-----
//
// This Routine initializes Timer0 and PCAO to implement a real-time clock.
// Assuming <SYSCLK> is generated from a 22.1184 crystal oscillator, Timer0
// overflows exactly 1800 times per second when configured as an 8-bit timer
// that uses <SYSCLK>/48 as its timebase. PCAO is configured to count
// TimerO overflows and interrupt every 1800 TimerO overflows, or every second.
// The PCAO ISR updates a set of global RTC counters for seconds, minutes, hours,
// and days.
//
void RTC Init(void)
  SFRPAGE = TIMER01 PAGE;
  // configure Timer0 in Mode2: 8-bit Timer with Auto-Reload
  TMOD &= \sim 0 \times 0 F;
                             // Clear Timer0 bits
  TMOD \mid = 0 \times 02;
                              // Mode2 Auto-Reload
  // configure Timer0 timebase to <SYSCLK>/48
  CKCON &= \sim 0 \times 0 F;
                             // Clear bits
                              // Set Timer0 timebase
  CKCON \mid = 0 \times 02;
  // configure PCA0 to count TimerO overflows
  PCAOMD = 0x04;
  // configure capture/compare module 0 to generate an interrupt when
  // the value of PCA0 reaches 4050 (0x0FD2)
  PCAOCPO = 4050;
                              // Set the value to match
                             // Clear bits
  PCA0CPM0 &= \sim 0 \times FF;
  PCA0CPM0 \mid = 0x49;
                              // Generate an interrupt when the
                              // PCA0 value matches PCA0CP0
  EIE1 \mid = 0x08;
                              // Enable PCA0 interrupts
```



```
// Start Timer0
  TR0 = 1;
  PCAOCN \mid = 0x40;
                           // Enable PCA0
                          // Restore SFR page
  SFRPAGE = SFRPAGE SAVE;
}
//-----
// PCAO ISR
//-----
//
//
void PCA0_ISR (void) interrupt 9
 if (CCF0) {
                              // clear ModuleO capture/compare flag
    CCF0 = 0;
    PCA0 = 0x00;
                              // clear the PCA counter
    RTC update();
                              // update RTC variables
    LOG update();
                              // update LOG if logging is enabled
 } else
 if (CCF1) {
   CCF1 = 0;
                              // clear Module1 capture/compare flag
 } else
 if (CCF2) {
    CCF2 = 0;
                              // clear Module2 capture/compare flag
 } else
 if (CCF3) {
    CCF3 = 0;
                              // clear Module3 capture/compare flag
 } else
 if (CCF4) {
    CCF4 = 0;
                              // clear Module4 capture/compare flag
 } else
 if (CCF5) {
    CCF5 = 0;
                              // clear Module5 capture/compare flag
 } else
 if (CF) {
    CF = 0;
                              // clear PCA counter overflow flag
}
//-----
// ADC0 ISR
//-----
//
// This ISR is called on the end of an ADCO conversion.
//
void ADC0_ISR (void) interrupt 15
```



```
static Long result = {0};
                                       // byte addressable long variable
int i;
bit EA_SAVE = EA;
//accumulate 256 temperature samples
result.Long += ADC0;
i++;
if(i == 256) {
  i = 0;
// take the average (Divide by 256 = shift right by 8)
// Do this operation "result.Long >>= 8;" (170 SYSCLK cycles) using
  // three MOV instructions (9 SYSCLK cycles)
  // Assume Most Significant Byte only contains sign information
  result.Char[3] = result.Char[2];
  result.Char[2] = result.Char[1];
  result.Char[1] = result.Char[0];
  // update global <ADC RESULT>
  ADC RESULT = result.Int[1];
```



}

Example 2: Project-Managed Code Banking

```
// common.c
//-----
// Copyright 2002 Cygnal Integrated Products, Inc.
// AUTH: FB
// DATE: 18 SEP 02
// This example shows how to set up a code banking project using the Cygnal
// IDE and the KEIL development tools. It uses Timer3 and Timer4 interrupts
// to blink the LED and output a 1 kHz sine wave on DAC1, respectively. The
// code that blinks the LED is located in Bank 3 and the code that outputs a
// sine wave based on a 256 entry sine table is located in Bank 2. Since
// interrupts must be located in the Common area, both interrupts call
// a function in one of the banks to perform the desired task.
//
// The project should be configured for code banking as shown in ANO30 before
// this project is built.
// This program uses the the 24.5 MHz internal oscillator multiplied by two
// for an effective SYSCLK of 49 MHz. This program also initializes UART1
// at <BAUDRATE> bits per second.
//
//
// Target: C8051F12x
// Tool chain: KEIL C51 6.03 / KEIL EVAL C51
//
//-----
//-----
#include <c8051f120.h>
                                // SFR declarations
#include <stdio.h>
                                // printf() and getchar()
//-----
// 16-bit SFR Definitions for 'F12x
//-----
sfr16 DP
           = 0x82;
                                // data pointer
sfr16 ADC0
           = 0xbe;
                                // ADC0 data
sfr16 ADCOGT = 0xc4;
                                // ADC0 greater than window
sfr16 ADCOLT = 0xc6;
                                // ADC0 less than window
sfr16 RCAP2
            = 0xca;
                                // Timer2 capture/reload
          = 0xca;
= 0xca;
sfr16 RCAP3
                                // Timer3 capture/reload
sfr16 RCAP4 = 0xca;
                                // Timer4 capture/reload
         = 0xcc;
sfr16 TMR2
                                // Timer2
                                // Timer3
sfr16 TMR3 = 0xcc;
sfr16 TMR4
           = 0xcc;
                                // Timer4
sfr16 DAC0 = 0xd2;
sfr16 DAC1 = 0xd2;
                                // DAC0 data
                                // DAC1 data
sfr16 PCA0CP5 = 0xe1;
                                // PCA0 Module 5 capture
sfr16 PCAOCP2 = 0xe9;
                                // PCA0 Module 2 capture
sfr16 PCAOCP3 = 0xeb;
                                // PCA0 Module 3 capture
                                // PCA0 Module 4 capture
sfr16 PCA0CP4 = 0xed;
sfr16 PCA0
                                // PCA0 counter
sfr16 PCAOCPO = 0xfb;
                                // PCA0 Module 0 capture
sfr16 PCAOCP1 = 0xfd;
                                // PCA0 Module 1 capture
```



```
//-----
// Global CONSTANTS
//-----
#define TRUE
           1
#define FALSE
               Ω
             24500000
#define INTCLK
                             // Internal oscillator frequency in Hz
#define SYSCLK
               49000000
                             // Output of PLL derived from (INTCLK*2)
#define BAUDRATE
              115200
                             // Baud rate of UART in bps
#define SAMPLE RATE DAC 100000L
                             // DAC sampling rate in Hz
#define PHASE PRECISION 65536
                             // range of phase accumulator
sbit LED = P1^6;
                             // LED='1' means ON
                             // SW2='0' means switch pressed
sbit SW2 = P3^7;
#define FREQUENCY 1000
                             // frequency of output waveform in Hz
                              // <phase add> is the change in phase
                              // between DAC1 samples; It is used in
                              // the set DAC1 routine in bank2
unsigned int phase_add = FREQUENCY * PHASE_PRECISION / SAMPLE_RATE_DAC;
//-----
// Function PROTOTYPES
//-----
\ensuremath{//} Common area functions
void main(void);
void SYSCLK Init(void);
void PORT_Init(void);
void UART1_Init (void);
void DAC1_Init (void);
void Timer3_Init(int counts);
void Timer4_Init(int counts);
// code bank 2 functions
extern void set_DAC1(void);
// code bank 3 functions
extern void toggle LED(void);
//-----
// MAIN Routine
//-----
void main (void)
  WDTCN = 0xde;
                             // disable watchdog timer
  WDTCN = 0xad;
  PORT Init ();
                             // initialize crossbar and GPIO
                             // initialize oscillator
  SYSCLK Init ();
  UART1 Init ();
                             // initialize UART1
  DAC1 Init ();
                             // initialize DAC1
  Timer3 Init(SYSCLK/12/1000);
                             // initialize Timer3 to overflow
```



```
// every millisecond
 Timer4 Init(SYSCLK/SAMPLE RATE DAC);// initialize Timer4 to overflow
                          // <SAMPLE RATE DAC> times per
                          // second
 EA = 1;
                          // enable global interrupts
 while (1);
}
//-----
// Interrupt Service Routines
//-----
//-----
// Timer3 ISR
//-----
// This routine changes the state of the LED whenever Timer3 overflows 250 times.
// NOTE: The SFRPAGE register will automatically be switched to the Timer 3 Page
// When an interrupt occurs. SFRPAGE will return to its previous setting on exit
// from this routine.
void Timer3 ISR (void) interrupt 14
 static int i;
                         // software interrupt counter
 TF3 = 0;
                          // clear Timer3 overflow flag
 i++;
                          // increment software counter
 // toggle the LED every 250ms
 if (i == 250) {
   toggle_LED();
                          // toggle the green LED
   i = 0;
                          // clear software counter
  }
//----
// Timer4 ISR -- Wave Generator
//-----
//
// This ISR is called on Timer4 overflows. Timer4 is set to auto-reload mode
// and is used to schedule the DAC output sample rate in this example.
// Note that the value that is written to DAC1 during this ISR call is
// actually transferred to DAC1 at the next Timer4 overflow.
void Timer4 ISR (void) interrupt 16
 TF4 = 0;
                          // clear Timer4 overflow flag
 set DAC1();
//-----
// Initialization Routines
//-----
//-----
// SYSCLK Init
```



```
//----
//
// This routine initializes the system clock to use the internal oscillator
// at 24.5 MHz multiplied by two using the PLL.
//
void SYSCLK Init (void)
{
                               // software timer
  int i;
  char SFRPAGE SAVE = SFRPAGE;
                               // Save Current SFR page
  SFRPAGE = CONFIG PAGE;
                               // set SFR page
  OSCICN = 0x83;
                               // set internal oscillator to run
                               // at its maximum frequency
                               // Select the internal osc. as
  CLKSEL = 0x00;
                               // the SYSCLK source
  //Turn on the PLL and increase the system clock by a factor of M/N = 2
  SFRPAGE = CONFIG PAGE;
                               // Set internal osc. as PLL source
  PLLOCN = 0 \times 00;
  SFRPAGE = LEGACY PAGE;
                               // Set FLASH read time for 50MHz clk
  FLSCL = 0x10;
                               // or less
  SFRPAGE = CONFIG PAGE;
  PLLOCN \mid = 0 \times 01;
                               // Enable Power to PLL
                               // Set Pre-divide value to N (N = 1)
  PLLODIV = 0x01;
  PLLOFLT = 0x01;
                               // Set the PLL filter register for
                               // a reference clock from 19 - 30 MHz
                               // and an output clock from 45 - 80 MHz
  PLLOMUL = 0x02;
                               // Multiply SYSCLK by M (M = 2)
  for (i=0; i < 256; i++); // Wait at least 5us
  PLLOCN \mid = 0 \times 02;
                               // Enable the PLL
  while(!(PLLOCN & 0x10));
                               // Wait until PLL frequency is locked
  CLKSEL = 0 \times 02;
                               // Select PLL as SYSCLK source
  SFRPAGE = SFRPAGE SAVE;
                               // Restore SFR page
}
//----
// PORT Init
//-----
// This routine configures the crossbar and GPIO ports.
//
void PORT Init (void)
  char SFRPAGE SAVE = SFRPAGE;  // Save Current SFR page
  SFRPAGE = CONFIG PAGE;
                               // set SFR page
  XBR0
         = 0x00;
  XBR1
          = 0 \times 00;
  XBR2
          = 0x44;
                               // Enable crossbar and weak pull-up
                               // Enable UART1
```



```
// Set TX1 pin to push-pull
  POMDOUT \mid = 0 \times 01;
  P1MDOUT \mid = 0 \times 40;
                               // Set P1.6(LED) to push-pull
  SFRPAGE = SFRPAGE SAVE;
                               // Restore SFR page
}
//-----
// UART1 Init
//-----
//
// Configure the UART1 using Timer1, for <baudrate> and 8-N-1.
//
void UART1 Init (void)
  char SFRPAGE SAVE = SFRPAGE;  // Save Current SFR page
  SFRPAGE = UART1 PAGE;
  SCON1 = 0x10;
                                // SCON1: mode 0, 8-bit UART, enable RX
  SFRPAGE = TIMER01 PAGE;
  TMOD &= \sim 0 \times F0;
  TMOD |= 0x20;
                                // TMOD: timer 1, mode 2, 8-bit reload
  if (SYSCLK/BAUDRATE/2/256 < 1) {
    TH1 = -(SYSCLK/BAUDRATE/2);
    CKCON \mid = 0 \times 10;
                                // T1M = 1; SCA1:0 = xx
  } else if (SYSCLK/BAUDRATE/2/256 < 4) {</pre>
     TH1 = -(SYSCLK/BAUDRATE/2/4);
     CKCON &= \sim 0 \times 13;
                                // Clear all T1 related bits
     CKCON \mid = 0 \times 01;
                                // T1M = 0; SCA1:0 = 01
  } else if (SYSCLK/BAUDRATE/2/256 < 12) {</pre>
     TH1 = -(SYSCLK/BAUDRATE/2/12);
     CKCON &= \sim 0 \times 13;
                                // T1M = 0; SCA1:0 = 00
  } else {
    TH1 = -(SYSCLK/BAUDRATE/2/48);
     CKCON &= \sim 0 \times 13;
                               // Clear all T1 related bits
     CKCON \mid = 0 \times 02;
                                // T1M = 0; SCA1:0 = 10
  }
                                // initialize Timer1
  TL1 = TH1;
                                // start Timer1
  TR1 = 1;
  SFRPAGE = UART1 PAGE;
  TI1 = 1;
                                // Indicate TX1 ready
  SFRPAGE = SFRPAGE SAVE;
                               // Restore SFR page
}
// DAC1 Init
//-----
//
// Configure DAC1 to update on Timer4 overflows and enable the the VREF buffer.
//
//
```



```
void DAC1_Init(void){
  char SFRPAGE SAVE = SFRPAGE;  // Save Current SFR page
  SFRPAGE = DAC1 PAGE;
  DAC1CN = 0x94;
                            // Enable DAC1 in left-justified mode
                            // managed by Timer4 overflows
  SFRPAGE = LEGACY PAGE;
  REFOCN |= 0x03;
                            // Enable the internal VREF (2.4v) and
                            // the Bias Generator
                           // Restore SFR page
  SFRPAGE = SFRPAGE SAVE;
}
//-----
// Timer3 Init
//-----
// Configure Timer3 to auto-reload mode and to generate interrupts
// at intervals specified by <counts> using SYSCLK/12 as its time base.
//
void Timer3 Init (int counts)
  char SFRPAGE SAVE = SFRPAGE;  // Save Current SFR page
  SFRPAGE = TMR3 PAGE;
  TMR3CN = 0 \times 00;
                            // Stop Timer; Clear overflow flag;
                            // Set to Auto-Reload Mode
  TMR3CF = 0x00;
                           // Configure Timer to increment;
                            // Timer counts SYSCLKs/12
  RCAP3 = -counts;
                           // Set reload value
  TMR3 = RCAP3;
                           // Initialize Timer to reload value
  EIE2 \mid = 0x01;
                           // enable Timer3 interrupts
  TR3 = 1;
                            // start Timer
  SFRPAGE = SFRPAGE SAVE;
                           // Restore SFR page
}
//-----
// Timer4 Init
//-----
// Configure Timer4 to auto-reload mode and to generate interrupts
// at intervals specified in <counts> using SYSCLK as its time base.
//
void Timer4 Init (int counts)
  SFRPAGE = TMR4 PAGE;
```



AN130

```
TMR4CN = 0x00;
                                    // Stop Timer4; Clear overflow flag (TF4);
                                    // Set to Auto-Reload Mode
  TMR4CF = 0x08;
                                    // Configure Timer4 to increment;
                                    // Timer4 counts SYSCLKs
                                    // Set reload value
  RCAP4 = -counts;
                                    // Initialzie Timer4 to reload value
  TMR4 = RCAP4;
  EIE2 \mid = 0x04;
                                    // enable Timer4 interrupts
  TR4 = 1;
                                    // start Timer4
  SFRPAGE = SFRPAGE_SAVE;
                                   // Restore SFR page
}
```



```
//-----
// bank2.c
//-----
//
// AUTH: FB
// DATE: 18 SEP 02
//
// Target: C8051F12x
// Tool chain: KEIL C51
// This file contains routines used by the code banking example in AN030.
// All routines in this file are located in Code Bank 2.
//-----
// Includes
//-----
#include <c8051f120.h>
                          // SFR declarations
//-----
// 16-bit SFR Definitions for `F12x
//-----
sfr16 DP
          = 0x82;
                          // data pointer
sfr16 ADC0
         = 0xbe;
                          // ADC0 data
sfr16 ADCOGT = 0xc4;
                          // ADC0 greater than window
sfr16 ADCOLT = 0xc6;
                          // ADC0 less than window
sfr16 RCAP2 = 0xca;
                          // Timer2 capture/reload
                          // Timer3 capture/reload
sfr16 RCAP3 = 0xca;
                          // Timer4 capture/reload
sfr16 RCAP4
        = 0xca;
         = 0xcc;
                          // Timer2
sfr16 TMR2
                          // Timer3
sfr16 TMR3
         = 0xcc;
sfr16 TMR4
         = 0xcc;
                          // Timer4
sfr16 DAC0
          = 0xd2;
                          // DAC0 data
sfr16 DAC1
          = 0xd2;
                          // DAC1 data
sfr16 PCA0CP5 = 0xe1;
                          // PCA0 Module 5 capture
sfr16 PCAOCP2 = 0xe9;
                          // PCA0 Module 2 capture
                          // PCA0 Module 3 capture
sfr16 PCAOCP3 = 0xeb;
sfr16 PCA0CP4 = 0xed;
                          // PCA0 Module 4 capture
sfr16 PCA0
         = 0xf9;
                          // PCA0 counter
                          // PCA0 Module 0 capture
sfr16 PCAOCPO = 0xfb;
                          // PCA0 Module 1 capture
sfr16 PCA0CP1 = 0xfd;
//----
// Global VARIABLES
extern int phase add;
//-----
// Global CONSTANTS
//-----
int code SINE TABLE[256] = {
  0x0000, 0x0324, 0x0647, 0x096a, 0x0c8b, 0x0fab, 0x12c8, 0x15e2,
  0x18f8, 0x1c0b, 0x1f19, 0x2223, 0x2528, 0x2826, 0x2b1f, 0x2e11,
  0x30fb, 0x33de, 0x36ba, 0x398c, 0x3c56, 0x3f17, 0x41ce, 0x447a,
  0x471c, 0x49b4, 0x4c3f, 0x4ebf, 0x5133, 0x539b, 0x55f5, 0x5842,
```



```
0x5a82, 0x5cb4, 0x5ed7, 0x60ec, 0x62f2, 0x64e8, 0x66cf, 0x68a6,
  0x6a6d, 0x6c24, 0x6dca, 0x6f5f, 0x70e2, 0x7255, 0x73b5, 0x7504,
  0x7641, 0x776c, 0x7884, 0x798a, 0x7a7d, 0x7b5d, 0x7c29, 0x7ce3,
  0x7d8a, 0x7e1d, 0x7e9d, 0x7f09, 0x7f62, 0x7fa7, 0x7fd8, 0x7ff6,
  0x7fff, 0x7ff6, 0x7fd8, 0x7fa7, 0x7f62, 0x7f09, 0x7e9d, 0x7e1d,
  0x7d8a, 0x7ce3, 0x7c29, 0x7b5d, 0x7a7d, 0x798a, 0x7884, 0x776c,
  0x7641, 0x7504, 0x73b5, 0x7255, 0x70e2, 0x6f5f, 0x6dca, 0x6c24,
  0x6a6d, 0x68a6, 0x66cf, 0x64e8, 0x62f2, 0x60ec, 0x5ed7, 0x5cb4,
  0x5a82, 0x5842, 0x55f5, 0x539b, 0x5133, 0x4ebf, 0x4c3f, 0x49b4,
  0x471c, 0x447a, 0x41ce, 0x3f17, 0x3c56, 0x398c, 0x36ba, 0x33de,
  0x30fb, 0x2e11, 0x2b1f, 0x2826, 0x2528, 0x2223, 0x1f19, 0x1c0b,
  0x18f8, 0x15e2, 0x12c8, 0x0fab, 0x0c8b, 0x096a, 0x0647, 0x0324,
  0x0000, 0xfcdc, 0xf9b9, 0xf696, 0xf375, 0xf055, 0xed38, 0xeale,
  0xe708, 0xe3f5, 0xe0e7, 0xdddd, 0xdad8, 0xd7da, 0xd4e1, 0xd1ef,
  0xcf05, 0xcc22, 0xc946, 0xc674, 0xc3aa, 0xc0e9, 0xbe32, 0xbb86,
  0xb8e4, 0xb64c, 0xb3c1, 0xb141, 0xaecd, 0xac65, 0xaa0b, 0xa7be,
  0xa57e, 0xa34c, 0xa129, 0x9f14, 0x9d0e, 0x9b18, 0x9931, 0x975a,
  0x9593, 0x93dc, 0x9236, 0x90a1, 0x8f1e, 0x8dab, 0x8c4b, 0x8afc,
  0x89bf, 0x8894, 0x877c, 0x8676, 0x8583, 0x84a3, 0x83d7, 0x831d,
  0x8276, 0x81e3, 0x8163, 0x80f7, 0x809e, 0x8059, 0x8028, 0x800a,
  0x8000, 0x800a, 0x8028, 0x8059, 0x809e, 0x80f7, 0x8163, 0x81e3,
  0x8276, 0x831d, 0x83d7, 0x84a3, 0x8583, 0x8676, 0x877c, 0x8894,
  0x89bf, 0x8afc, 0x8c4b, 0x8dab, 0x8f1e, 0x90a1, 0x9236, 0x93dc,
  0x9593, 0x975a, 0x9931, 0x9b18, 0x9d0e, 0x9f14, 0xa129, 0xa34c,
  0xa57e, 0xa7be, 0xaa0b, 0xac65, 0xaecd, 0xb141, 0xb3c1, 0xb64c,
  0xb8e4, 0xbb86, 0xbe32, 0xc0e9, 0xc3aa, 0xc674, 0xc946, 0xcc22,
  0xcf05, 0xd1ef, 0xd4e1, 0xd7da, 0xdad8, 0xdddd, 0xe0e7, 0xe3f5,
  0xe708, 0xeale, 0xed38, 0xf055, 0xf375, 0xf696, 0xf9b9, 0xfcdc,
};
//-----
//-----
void set DAC1(void)
  char SFRPAGE SAVE = SFRPAGE;
                                    // Save Current SFR page
  static unsigned phase acc = 0;
                                     // holds phase accumulator
  int temp1;
                                     // temporary 16-bit variable
  // increment phase accumulator
  phase acc += phase add;
  // read the table value
  temp1 = SINE TABLE[phase acc >> 8];
  // Add a DC bias to change the the rails from a bipolar (-32768 to 32767)
  // to unipolar (0 to 65535)
  // Note: the XOR with 0x8000 translates the bipolar quantity into
  // a unipolar quantity.
  SFRPAGE = DAC1 PAGE;
                                    // write to DAC1
  DAC1 = 0x8000 ^ temp1;
  SFRPAGE = SFRPAGE SAVE;
                                    // restore SFR page
```



}



AN130

```
//----
// bank3.c
//-----
//
// AUTH: FB
// DATE: 18 SEP 02
//
// Target: C8051F12x
// Tool chain: KEIL C51
// This file contains routines used by the code banking example in ANO30.
// All routines in this file are located in Code Bank 3.
//-----
// Includes
//-----
#include <c8051f120.h>
                // SFR declarations
//-----
// Global CONSTANTS
sbit LED = P1^6;
//-----
// toggle_led
//-----
void toggle led(void)
{
 LED = \sim LED;
}
```

Notes:



AN130

Contact Information

Silicon Laboratories Inc. 4635 Boston Lane Austin, TX 78735 Tel: 1+(512) 416-8500

Fax: 1+(512) 416-9669 Toll Free: 1+(877) 444-3032 Email: productinfo@silabs.com Internet: www.silabs.com

The information in this document is believed to be accurate in all respects at the time of publication but is subject to change without notice. Silicon Laboratories assumes no responsibility for errors and omissions, and disclaims responsibility for any consequences resulting from the use of information included herein. Additionally, Silicon Laboratories assumes no responsibility for the functioning of undescribed features or parameters. Silicon Laboratories reserves the right to make changes without further notice. Silicon Laboratories makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Silicon Laboratories assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. Silicon Laboratories products are not designed, intended, or authorized for use in applications intended to support or sustain life, or for any other application in which the failure of the Silicon Laboratories product could create a situation where personal injury or death may occur. Should Buyer purchase or use Silicon Laboratories products for any such unintended or unauthorized application, Buyer shall indemnify and hold Silicon Laboratories harmless against all claims and damages.

Silicon Laboratories and Silicon Labs are trademarks of Silicon Laboratories Inc.

Other products or brandnames mentioned herein are trademarks or registered trademarks of their respective holders.

