

# University of California College of Engineering Department of Electrical Engineering and Computer Sciences

# **EE143: LAB REPORT 1 – FABRICATION**

STUDENT A:				
NAME	Last	Cheng	First	Evonne
	_			
SID				
	•		_	
STUDEN	Г В:			
NAME	Last	Dovlatyan	First	Levon
SID				

# **EECS 143 Lab Report 1**

Fall 2014

In signing below, I attest to the fact that I have read and have adhered to the policies and guidelines discussed in the EECS Departmental Policy on Academic Dishonesty, as found at: http://www.eecs.berkeley.edu/Policies/acad.dis.shtml.

Signature: _	LD	_
Date <u>:</u>	1 Dec 2014	
Name:	Evonne Cheng	
Signature: _	EC	=
Date <u>:</u>	1 Dec 2014	
Name:		
Signature: _		
Date:		

Name: <u>Levon Dovlatyan</u>

# 1 Profiles & Layout

# 1.1 Thin oxide MOSFET Cross Section

Draw cross-sectional profiles of a MOSFET (test structure 8) after each of the steps



Figure 1: W1: Starting Wafer

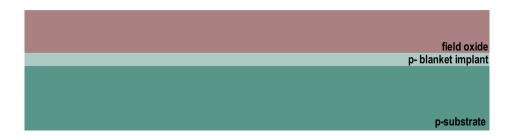


Figure 2: W2: Field Oxidation. Field oxide thickness is 500 nm.



Figure 3: W3: ACTV Photolithography and Etch

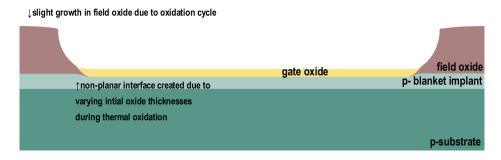


Figure 4: W4: Gate Oxidation. Gate oxide thickness is about 80 nm.

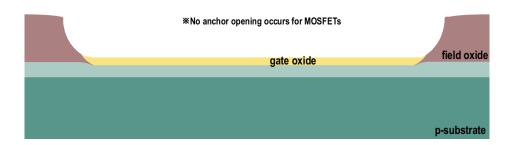


Figure 5: W5a: Anchor Opening Photolithography for MEMS

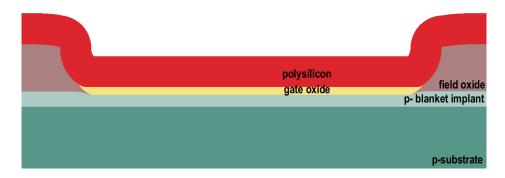


Figure 6: W5b: Polysilicon CVD. The poly thickness is about  $350~\mathrm{nm}$ .

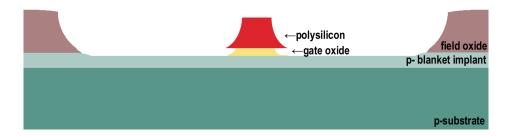


Figure 7: W6: POLY Lithography and Etch, Source/Drain Clear

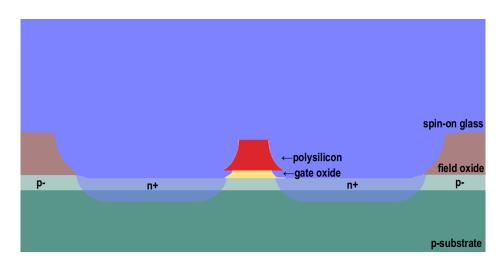


Figure 8: W7a: Spin-On Glass + Sourace/Drain Pre-diffusion

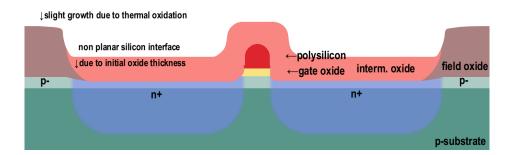


Figure 9: W7b: Source/Drain Drive-in + Intermediate Oxidation. The intermediate oxide thickness is 385 nm.

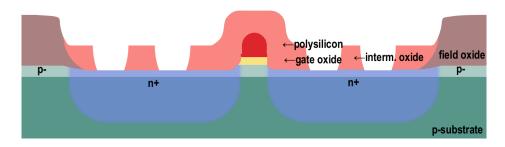


Figure 10: W8: CONT Photolithograph and Etch

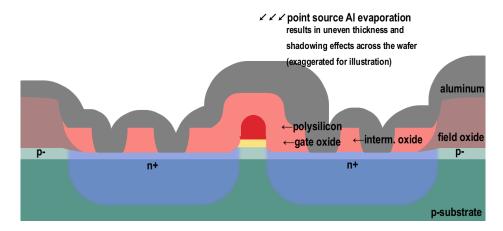


Figure 11: W9: Aluminum Evaporation. The aluminum thickness is suppose to be about 800 nm

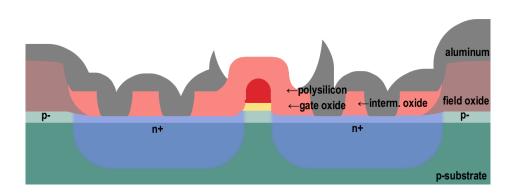


Figure 12: W10: METL Photolithography + Etch

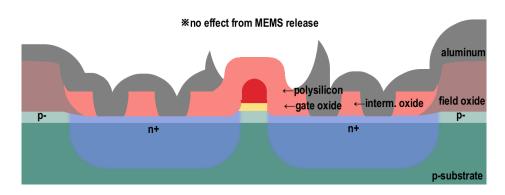


Figure 13: W11: MEMS Comb-drive Structure Release Photolithography + Etch

# 1.2 Top Views

Draw top views of the same thin-oxide MOSFET (test structure 8) after each of the four photolithography steps. [ACTV, POLY, CONT, METL] (4 Points)

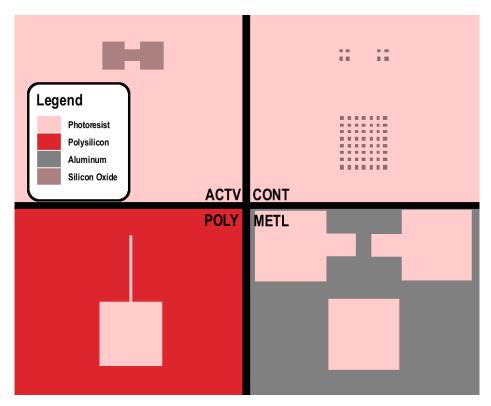


Figure 14: Top-down view of the MOSFET (test structure 8)

# 1.3 Comb-drive MEMS Structure Cross Section

Draw cross-sectional profiles of the comb-drive (MEMS - test structure 22) after each of the 12 major processing steps, in the same fashion that you did for the MOSFET. See the diagram below for the exact cross-sections in question. The line runs through the anchor hole of the polystructure. (5 Points)



Figure 15: W1: Starting Wafer



Figure 16: W2: Field Oxidation

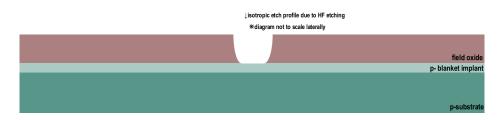


Figure 17: W3: ACTV Photolithography and Etch

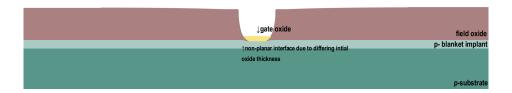


Figure 18: W4: Gate Oxidation



Figure 19: W5a: Anchor Opening Photolithography for MEMS

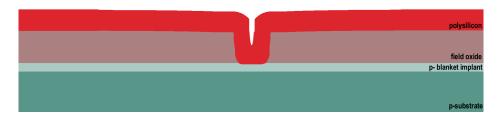


Figure 20: W5b: Polysilicon CVD

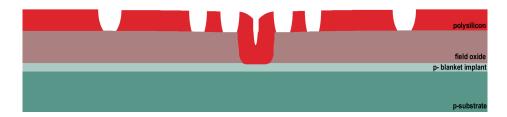


Figure 21: W6: POLY Lithography and Etch, Source/Drain Clear

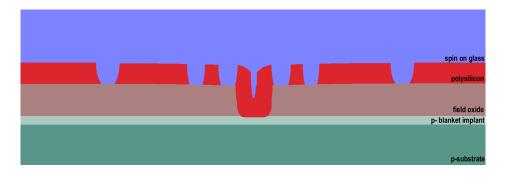


Figure 22: W7a: Spin-on Glass + Source/Drain Pre-diffusion

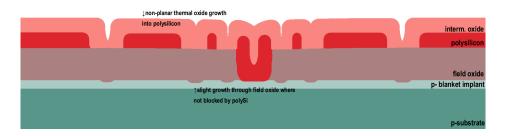


Figure 23: W7b: Source/Drain Drive-in + Intermediate Oxidation

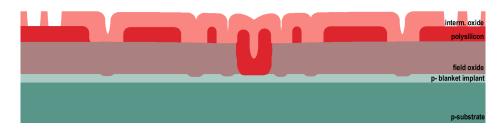


Figure 24: W8: CONT Photolithography and Etch

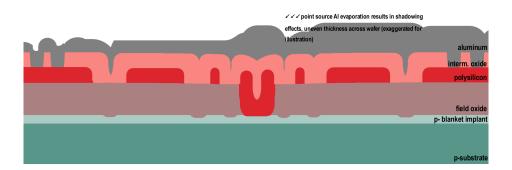


Figure 25: W9: Aluminum Evaporation

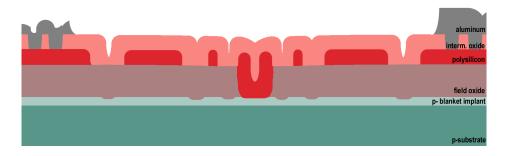


Figure 26: W10: METL Photolithography + Etch



Figure 27: W11: MEMS Comb-drive Structure Release Photolithography + Etch

# 2 Process Procedures

# 2.1 Process Monitoring Measurements

• Measurement Type and Description

Describe monitoring measurements that were done during processing:

**Film color** - Film color was used during etching processes. In order to determine wheather a layer had finished etching, we used visual queues by paying attention to the color change on the films. e.g. we know aluminum etch will have finished once the silver metalish color disappeared on the wafer.

**Line Width** - The width of 2 um lines were measured after photolithography and after etching and PR removal to determine the amount of overetch that occured for a given layer.

**Thickness** - The nanospec machine in the lab is used to measure film thicknesses. This can be done directly on our wafers or can be done on control wafers. We use control wafers in the process to measure certain film thicknesses as well as resistivities.

**Resistivity** - A four-point probe was used to measure the sheet resistance of the control wafer to monitor diffusion effects on doping concentration.

**Vernier** - Interlocking bars with slightly different spacing were produced by aligning the alignment keys of different mask layers. The offset of the bars allows the offset of the alignment between different layers to be determined very precisely.

#### • Over-Etch/Under-Etch

Determine whether each layer was overetched or underetched? Did you purposely over/underetch? Why?

Field Oxide - Overetched. This was purposely overetched to ensure process latitude.

**Polysilicon** - Overetched. This was overetched in order to ensure process latitude.

Gate Oxide - Overetched. This was overetched in order to keep the source/drain clear.

**Intermed Oxide** - Overetched. This is because we want to make sure our contact holes are open before metalization. If the contact holes are blocked by oxide, our device will not function.

Aluminum - Overetched. This is done so contacts above the source/drain do not touch.

## • Misalignment Tolerance

Describe how the verniers are used to measure misalignment. Using diagrams may help. Were any layers misaligned intentionally? For each pair of verniers (ACTVPOLY, ACTV-CONT, POLY-CONT, CONT-METL), describe how far the marks may be misaligned in terms of device function. (6 Points)

A vernier system usually looks like the figure below.

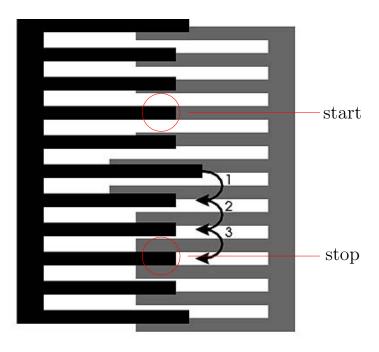


Figure 28: Typical vernier system.

The way vernier systems work is by aligning the square spacings in the middle. For our case, a spacing distance corresponds to 0.2  $\mu$ m. Now more than likely the vernier spacing is not going to be perfect (like above), and as a result, you will have to calculate the misalignment by counting the spacings. To calculate the spacing, we start where the alignment between the verniers is perfect, this is circled in the above picture where it says 'start'. Now we count the number of spacings from the starting position until we hit alignment again, this is marked by 'stop' in the figure above. For the figure above, we count 5 spacings between alignment and since each spacing corresponds to 0.2  $\mu$ m, this means we have a total misalignment of  $0.2 * 5 = 1 \mu$ m. Now if you know exactly how much misalignment there was for a certain mask, you can repeat this same misalignment intentionally for the next mask in order to have the two masks aligned.

The amount of misalignment allowed is different for all four masks. For the first ACTV mask misalignment does not matter because it is the very first mask - assuming of course that all other masks are misaligned purposely to match this first mask. For the second POLY mask, misalignment does matter here. If the mask is misaligned to the point where the gate POLY is no longer on the gate oxide, but rather near/on the field oxide, then this is going to cause the device to not function. The CONT mask is the most important mask and very little misalignment should occur here. You want the mask to be over the source/drain regions and not the poly gate or field oxide regions. Having a misaligned mask here will mean that there is no contact to the source/drain region and will result in a dead device. The final METAL mask can have misalignment. As long as the metal contacts from the source/drain are not touching this should not cause any problems. However if the misalignment is say more than the horizontal length of the gate, then you will have the same metal contact in source/drain which means a dead device.

#### 2.2 Batch & Individual Processing Steps

List and concisely describe the possible problems that could have occurred during the batch fabrication steps.

What were the sources of the problems, and how could you avoid them? How do you expect these deviations to affect the performance/function and cross-section of the device? List the types of monitoring measurements from Part A taken during each step (7 Points)

#### W2: Field Oxidation

Batch Processing Problems

- Thermal shock can occur when placing the wafer into the furnace. This can result in broken wafers.
  - To solve the thermal shock problem we slowly place the wafer into the furnace at a rate of 1 inch / 10 seconds.
- Resulting oxide thickness can vary between batches and between wafer to wafer due to subtle environmental differences.

• Measured the oxide film thickness to make sure the right amount was grown.

#### Measurements Taken

• Measured oxide thickness with Nanospec.

#### W3: Field Oxide Cut

Individual Processing Problems

- Failure to fully etch through to silicon will leave poor quality oxide in the active area, which can interfere with the growth of gate oxide. Poor gate oxide will allow current to leak and have a lower dielectric strength.
  - o Overetch performed for process latitude, to ensure etch reaches silicon for the entire wafer.
  - Agitate wafer during etch to avoid trapped air bubbles.
- Keeping the wafer inside a dark/clean box will help shield it from particles in the air.

#### Measurements Taken

- 2  $\mu$ m line widths were recorded before and after etching.
- Observed de-wetting of silicon from the back of the wafer indicating etch reached hydrophobic silicon surface.

#### W4: Gate Oxidation

Batch Processing Problems

- Same possibility of thermal shock as with Field Oxidation
  - Push slowly into furnace at 1 in/ 10 sec.
- Particles, dust, and native oxide on the wafer can lower quality of gate oxide due to impurities.
  - o Clean throroughly with Piranha and HF before oxidation.

#### Measurements Taken

- Oxide thickness measured on control wafer.
- Resistivity measured on control wafer.

#### W5: Poly Deposition Batch Processing Problems

- Haze and other surface anomalies in the polysilicon can be introduced due to contaminants entering during the LCVD process. This can result in electrical failures and interference with the etching of succeeding layers.
  - Tight control of deposition process to prevent introduction of contaminants. (Step performed by NanoLab)

#### Measurements Taken

• No measurements taken (Step performed by NanoLab)

#### W6: Gate Definition

Individual Processing Problems

- Misalignment with the ACTV key could result in misaligned gate. As the first mask to need alignment, this could
  result in further misalignments when CONT and METL are aligned. Severe misalignments could result in a contact
  short with the gate.
  - Aligned to ACTV key as closely as possible and accounted for slight misalignment using Vernier scales.
- Failure to etch completely through the polysilicon could interfere with further etching through the gate oxide and with S/D diffusion.
  - Waited for the color of wafer surface to cease changing before ceasing to etch.
  - Agitated wafer during etch to avoid trapped air bubbles.
- Failure to etch through the gate oxide in the active area could interfere with later S/D diffusion.
  - Overetched by 20% to ensure process latitude.
  - Agitated wafer during etch to avoid trapped air bubbles.

#### Measurements Taken

- 2  $\mu$ m line widths were recorded before and after etching.
- Vernier bars were recorded after etching.
- Observed color change of surface as polysilicon layer was etched.
- Observed de-wetting of backside as gate oxide was etched.

#### W7a & b: S/D Diffusion and Intermediate Oxidation

Batch Processing Problems

- Using SOG as a diffusion source means that the dose rate is not well controlled and uniformity is poor.
  - Used control wafers to monitor resistivity as an estimate of dosage.
- Thermal shock can occur when wafers are placed into the furnace, causing fractures.
  - Slowly pushed wafers into furnace at 1 in/10 sec.
- Same problems that occur with prediffusion and oxide growth can occur here. The thickness of the intermediate oxide grown can vary between different batches, which may cause problems later on when etching holes for the contacts.
  - Used the nanoscope to monitor oxide growth on the control wafer.

## Individual Processing Problems

- Uneven coverage of the wafer due to the viscosity of SOG and the topography of the wafer could result in uneven doping throughout the layer.
  - Visually confirmed even film color post-spinning.
- Failure to strip the SOG completely could result in a higher dosage in some areas during drive-in, resulting in varying performance of the devices on the wafer
  - Watched for wafer to dewet after SOG removal.

#### Measurements Taken

- Observed de-wetting of wafer as SOG was removed.
- Measure oxide thickness with NanoSpec.
- Measured resistivity after predeposition and drive-in.

#### Week 8: Contact Hole Cut

Individual Processing Problems

- Misalignment of CONT mask could result either in a short to the gate (if misaligned right) or a failure to contact silicon (if misaligned left).
  - Prioritised alignment to ACTV key as to avoid dual misalignment with the POLY mask that would increase the likelihood of a short to the gate.
  - Accounted for misalignments with ACTV and POLY using Vernier scales.
- Failure to etch completely through to silicon surface will result in non-functional devices.
  - Overetched to ensure contact occurs.
  - Agitated wafer during etch to avoid trapped air bubbles.

#### Measurements Taken

- 2  $\mu$ m line widths were recorded before and after etching.
- Vernier bars were recorded after etching.

#### Week 9: Metallization

Batch Processing Problems

- Point source deposition creates shadowing and step coverage problems
  - Have the wafers rotate in the aluminum pump which would allow for better step coverage.
  - Have the intermediate oxide sidewalls etched more gradually or have the oxide thickness be thinner; this would minimize the shadowing and step coverage problems associated with point source deposition.

#### Measurements

• Observed metallic silver film color on wafer after evaporation.

#### Week 10: Metal Definition

Batch Processing Problems

- Having too high of a temperature can cause the silicon to diffuse into the aluminum contacts. As a result, spikes can form inside the source and drain. If these spikes go all the way through the heavily doped source/drain into the silicon substrate, the device is dead.
  - One way to avoid this is to have 1% silicon already diffused in the aluminum before evaporation. This causes the aluminum to reach its solid solubility limit and won't allow more silicon to diffuse in creating spikes.

#### Individual Processing Problems

- Severe misalignment of the METL mask could result in the failure of the metal layer to fully fill the contact holes.
  - Aligned to the CONT key and accounted for any misalignment with Vernier scales.
- Failure to completely etch through the metal could result in shorted devices.
  - o Did not terminate etch until color change across the wafer completed.
  - Agitated wafer during etch to avoid trapped air bubbles.
- Jammed wafer in photolithography machine during alignment, resulting in slight fractures along the edges of the wafer. This could result in more severe fractures due to elevated mechanical stress during future steps.
  - Took care to avoid placing further stress on the wafer while handling it during etching and sintering.

#### Measurements

- 3  $\mu$ m line widths were recorded before and after etching. (2  $\mu$ m lines were not visible due to poor resolution).
- Vernier bars were recorded after etching.
- Observed shift in color as aluminum layer was etched.

#### Week 11: MEMS Structure Release

Individual Processing Problems

- Failure to fully clear away sacrificial oxide will result in non-viable MEMS devices.
  - Overetched for process latitude to account for thickness variation
- Due to relative thinness of the polysilicon layer used in this lab, MEMS devices are liable to collapse upon release, particularly due to surface tension if a wet etchant is used.
  - Use of a dry etchant to remove sacrificial oxide. (Not done in lab).

#### Measurements

• No measurements taken. (MEMS release presumed to be unsuccessful in lab).

# 3 Calculations

#### a) Film Thickness

Layer	Theoretical calculation (nm)	Experimental (nm)	% Error	Linewidths (photoresist) (nm)	Linewidths (after PR Strip) (nm)	% Overetch
Field Oxide	505.8	477.2	5.65	2000	3000	50
Polysilicon	350	400	14	3628	4000	10
Gate Oxide	80.1	86.5	7.40	3628	4000	10
Intermed Oxide	386.3	320	17.2	2749	1869	47
Aluminum	800	N/A	N/A	2088	2520	21

Figure 29: Film thicknesses and line widths for various thin films. N/A represents data that was not available.

#### b) Sheet Resistance

Layer	Sheet Resistance $\Omega/sqr$	Surface Concentration $(cm^{-3})$
ACTV after Field Oxidation	530	6×10 <sup>19</sup>
Polysilicon	730	$4 \times 10^{19}$
ACTV after Pre-Dep	5	5×10 <sup>22</sup>
ACTV after Drive-In	8	$10^{21}$
Metal	N/A	N/A

Figure 30: Surface concentrations calculated from sheet resistance using the irvin curves in jaeger (figure 4.16). The surface concentration used here is  $N_B = 8 \times 10^{14}$  according to the silicon wafer resistivity. Junction depths for pre-diffusion and drive-in were calculated in Appendix 6.2. For field oxide, the junction depth used was the amount of silicon consumed when growing the field oxide ((0.46)(477 nm) = 219 nm). For poly and gate oxide, we calculated ((0.46)(86.5) = 39.8 nm) of silicon that got consumed during gate oxide growth. Therefore a junction depth of 219 + 39.8 = 258.8 nm. Refer to Appendix 6.1 for how to calculate oxide thickness.

## c) Overetch

Layer	Measured Linewidth (nm)	% Overetch	Theoretical etch time (min)	Actual etch time (min)	% Overetch
Field Oxide	3000	50	4.8	6	25
Polysilicon	4000	10	1.6	$\sim 2.25$	41
Gate Oxide	4000	10	0.87	0.83	4.6
Intermed Oxide	1869	47	3.2	4.5	41
Aluminum	2520	21	1.4	$\sim 5$	360

Figure 31: Linewidth measurements and etch times used during lab. The theoretical etch times were calculated with etch rates and film thicknesses.

#### d) Junction depths

	Vertical	Lateral
Step	junction Depth	junction Depth
	(nm)	(nm)
Pre-diffusion	365	321
Drive-in	1000	880

Figure 32: Junction depth measurements. Both vertically and laterally for pre-deposition and drive-in. Refer to Appendix 6.2 for the calculations.

1) Theoretical and experimental thicknesses of field oxide, gate and intermediate oxides (Include orientation dependence of oxidation rate but not impurity dependence) (9 points)

For details on the theoretical oxide thickness calculations see Appendix 6.1.

Layer	Theoretical (nm)	Experimental (nm)	% Error
Field Oxide	505.8	477.2	5.65
Gate Oxide	80.1	86.5	7.40
Intermed Oxide	386.3	320	17.2

Figure 33: Theoretical values refers to the values found in the lab processing flow while experimental values are what was actually calculated based on etch rate and actual film thickness. See Appendix 6.1 for how to calculate oxide growth rates.

2) Junction depths after pre-diffusion and drive-in (theoretical, assume only phosphorous doping with surface concentration limited by solid solubility). You must consider the effect of the initial ion implantation. For pre-deposition you may use the box approximation, but for drive-in you must use the half-gaussian calculation. Why is this? (10 points)

Refer to Figure 32 for vertical and lateral junction depths. For details on the junction depth calculations see Appendix 6.2. Also the reason we use a box approximation for the pre-diffusion is because we have a constant source profile. However, for drive-in we now have source-limited diffusion.

3) Final surface concentrations of dopants, as determined from Irvin's curves using sheet resistance measurements made in lab. (2 points)

Refer to Figure 30

4) Plot or sketch the change of dopant profile from the silicon surface through the source-drain after each thermal step. Quantitatively label significant points such as Peak concentration, Peak Width, Junction Depth. Show movement of the Silicon-Silicon Dioxide interface and qualitatively show non-ideal effects such as dopant redistribution during oxidation. (11 points)

The profiles were all created in Tsuprem-4 using the EE143 process flow and verified by hand calculations. The oxide growth and dopand concentrations were compared with the values calculated for other questions and are reasonably close enough to be accurate. Note that tsuprem4 takes into account a lot of other things that don't make it into the hand calculations. See Appendix 6.3 for the script file used to generate these plots.

• After initial silicon implant

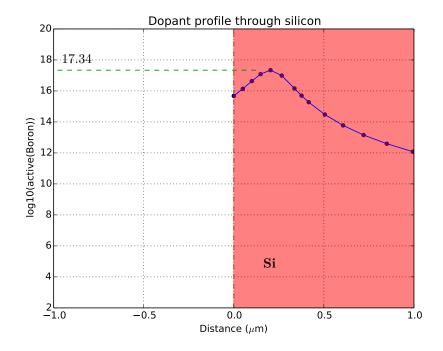


Figure 34: Doping profile of the bare silicon before any oxidation occurs, but after the original implant that occurs.

## • After field Oxidation

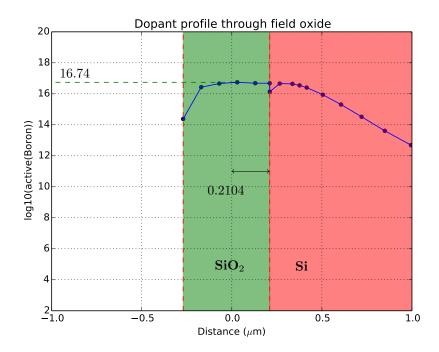


Figure 35: Dopant profile with only field oxide. The Si-SiO<sub>2</sub> interface occurs at  $0.2104\mu m$ . There was about 500 nm of field oxide deposited here. The peak concentration is roughly  $10^{16.74}$ . Note the dopant redistribution effects evident from the original distribution in Figure 32.

# • Gate Oxidation

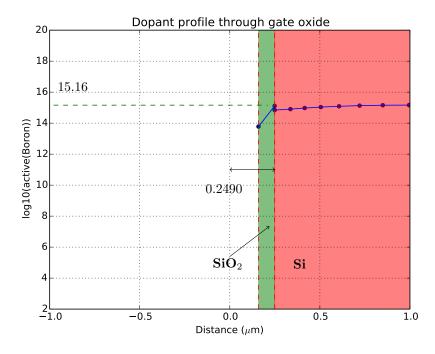


Figure 36: Dopant profile with after gate oxide. The Si-SiO<sub>2</sub> interface occurs at  $0.2490\mu m$ . There was about 86 nm of gate oxide deposited here. The peak concentration is roughly  $10^{15.16}$ . Note the drastic dopant redistribution effects.

## • Poly-Deposition

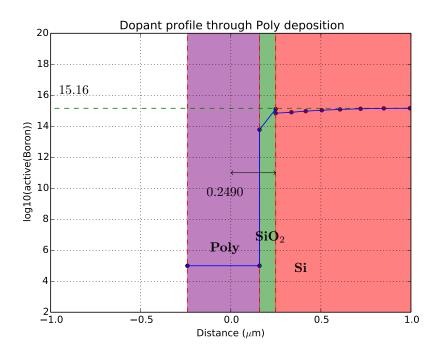


Figure 37: Dopant profile after Poly deposition. The Si-SiO<sub>2</sub> interface occurs at  $0.2490\mu m$ . 400 nm of Poly was depositied. The peak concentration is roughly  $10^{15.16}$ . Note the drastic dopant redistribution effects.

# • Pre-Deposition

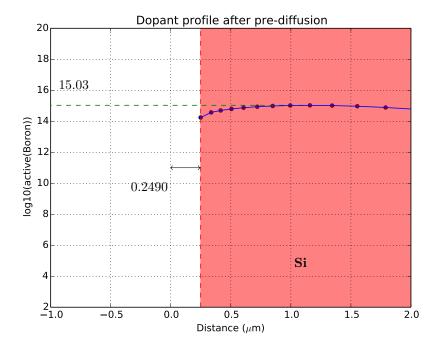


Figure 38: Dopant profile after Poly deposition. The Si-SiO<sub>2</sub> interface occurs at  $0.2490\mu m$ . 400 nm of Poly was depositied. The peak concentration is roughly  $10^{15.16}$ . Note the drastic dopant redistribution effects.

## • Drive-in & Intermediate oxide

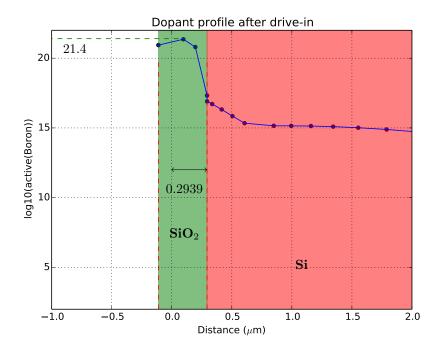


Figure 39: Dopant profile after drive-in. The Si-SiO<sub>2</sub> interface occurs at  $0.2939\mu m$ . The peak concentration is roughly  $10^{21.4}$ ...

# 5) Lateral diffusion under the MOSFET gates. You may estimate. Justify estimation. (Theoretical). (2 points)

Using the data calculated in Appendix 6.2, we see that for pre diffusion  $N_0 = 10^{21}/{\rm cm}^3$  and  $N_B = 8 \times 10^{14}/{\rm cm}^3$ . Now we will use figure 4.10a [1] in the textbook and note that  $N_B/N_0 \approx 10^{-7}$ . Since our data goes off the graph in the figure, we will make an approximation that every multiple of 10 decrease in  $N_B/N_0$  results in a vertical and lateral junction depth increase of 0.5. Using this approximation we get a vertical junction depth of 4.3 and a lateral depth of 3.8. This gives us 3.8/4.3 = 0.88. Now from our earlier junction depth calculations we see that pre diffusion resulted in a depth of 365 nm. Thus (365)0.88 = 321 nm lateral junction depth for pre diffusion. For drive-in we have the same values of  $N_B$  and  $N_0$ , but our junction depth here increased by 1000 nm. Thus (1000)0.88 = 880 nm. See Figure 32 for a tabular form of the data.

6) List an estimate of the Young's modulus, Poisson ratio, and coefficient of thermalexpansion for SiO<sub>2</sub>, poly-Si, and Al films as deposited. (You can find these in a table in many physics/ME textbooks, or in a web-based search.) (2 points)

See table below

Material	Young's modulus (GPa)	coeff. of thermal expansion $(K^{-1})$	Poisson's ratio (a.u.)
$SiO_2$ [3]	57(dry)-70(wet)	$5.6 \cdot 10^{-7}$	0.17
poly-Si [2]	$169 \pm 6.15$	$4.6 \cdot 10^{-6}$	$0.22 \pm .011$
Aluminum [4]	70	$22.2 \cdot 10^{-6}$	0.33

Figure 40: Values were found from various journals/articles found online ([2],[3], and[4]) and many of these values are calculated for thin films of the material.

# 4 Questions

1) What type of photoresist (positive or negative? I-line or G-line?) do we use in the lab? What do I-line and G-line refer to? Briefly describe how the resist responds to the process steps like spinning, UV light exposure and development.

The lab uses positive photoresist. The lithography machine uses a light that has g line wavelength. The I and G lines refer to the wavelength of the light coming off the light bulb that reacts with the photoresist. G line is roughly 436nm wavelength and I line is 365nm wavelength. Photoresist is spun onto the wafer to spread it evenly over the wafer, but

extreme topology and surface debris can cause excess PR in some areas and deficient PR in others. When exposed to UV light, the photo-sensitive part of the polymer activates changing it into an organic acid, whereas unexposed PR remains unchanged. When dipped into the PR developer, the organic acid form of the PR dissolves whereas the polymer form remains on the wafer, leaving a layer PR that masks certain areas of the wafer.

2) What is the purpose of baking the wafers at 120  $^{\circ}$ C before depositing HMDS? What is the purpose of the 90  $^{\circ}$ C bake after spinning on photoresist? What happens if the soft bake is too hot and too long (say 120  $^{\circ}$ C, 5 minutes)?

The purpose of baking the wafers at 120°C before depositing HMDS is to remove excess environmental moisture that has accumulated on the wafer. The purpose of the 90°C bake after spinning on photoresist is to evaporate the solvent and make it less sticky. If the soft bake is too long, the photoactive component of the PR may start to decompose and the PR may become less soluable in the developer.

3) What is the purpose of hard bake? What happens if we skip this step? What may happen if the bake is done at a temperature above 120 °C (say 200 °C)?

The purpose of the hard bake is to cross-polymerize the PR, making it less permeable to chemicals, more adhesive, and physically harder. If this step is skipped, subsequent etching and similar steps have a chance of penetrating the PR, making the mask meaningless. If the bake is done at a temperature above 120°C, the PR will start to become brittle, resulting in cracks that would also make the masking step meaningless.

4) We do lithography steps under yellow light only. What is the consequence if we expose the wafers to fluorescent light before development? What if we expose them to fluorescent light after development? Would red light damage your process?

If the fluorescent light happens to be near the wavelength of the g-line, it will react with the photoresist and make it soluble. Since there is no mask over the wafer at that time, it will make all the photoresist souble which will cause the developer to remove all the photoresist. If it were exposed after developement, it will still make the remaining photoresist soluble, but since we have already done developement, there is no risk of the remaining photoresist coming off (unless we were to dip it in the developer again).

- 5) What are the differences between wet and dry oxidation that lead us to use one for the gate oxide and one for the field/intermediate oxide? What is the purpose of annealing in nitrogen after oxidation? Wet oxidation has a higher growth rate but a tendency to create dangling bonds and a lower density oxide, making it more suitable for the thick field/intermediate oxide. Dry oxidation is much slower but creates a higher density oxide with fewer dangling bonds, making it more suitable for creating the thin gate oxide that is critical in device performance. The purpose of annealing in nitrogen is to allow the silicon atoms to diffuse and repair damage done by oxidization.
- 6) How do you determine etching time using theoretical etch rate in literature? List two ways to determine etch time empirically from lab measurements, when you etch the layers. (Hint: these methods include visual cues.). How close are the experimental and the theoretically calculated values?

  Given a theoretical etch rate for a material, we would figure out the depth we want to etch and wheather the etch is

Given a theoretical etch rate for a material, we would figure out the depth we want to etch and wheather the etch is anisotropic or isotropic. Knowing the depth we want to etch and a etch rate, we can calculate how long we would need to etch. A good way to determine etch time empirically is to look at the physical change on the wafer surface; this will most likely be a distinct color change across the wafer. A second way would be to measure line widths on the masks. You can measure a 2  $\mu$ m before and after etching in order to determine how much you actually etched. In order to see how etch rates compare see Figure 31.

7) Before n+ deposition (prior to SOG spinning), we clean in Piranha but not in HF. Before gate oxidation, we clean in both. Why the difference?

For n+ deposition, we are depositing PSG (a phosphorate-doped oxide) on top of the wafer for diffusion. The presence of a native oxide on the surface serves as a barrier material between the PSG and the silicon, preventing unwanted inter-diffusion effects. However, for growing a high-quality gate oxide, the poor-quality native oxide will adversely affect results, thus it must be removed with an HF dip.

8) Why is 5:1 BHF (5:1 NH<sub>4</sub>F:HF) used for etching features in the oxide while 10:1 BHF is used for cleaning and spin-on-glass stripping? Why buffered HF?

We use buffered HF because normal HF etches way too quickly and tends to peel off photoresist as well. Using buffered HF allows for more controllable and constant etching which allows for good process control. According to the process flow, spin on glass etches at 470 nm/sec in 10:1 BHF while thermally grown oxide etches at 100nm/sec in 5:1 BHF. If we had used 5:1 BHF for the spin on glass, it would etch way to quickly and be difficult to control.

9) What would happen if we skipped the HF dip before metallization?

Skipping the HF dip before metallization would result in a thin layer of native oxide at the Al-Si interface, causing poor contact with the devices on the wafer.

#### 10) What is etch selectivity?

Etch selectivity is the relative difference in etch rates for given materials on the wafer. Ideally, the etch should be highly selective towards the material to be etched and thus etch it the fastest whereas other material, like the PR, should etch much more slowly.

- 11) Why do we first use the roughing pump and then the diffusion pump when pumping down the aluminum deposition system? Why must the foreline pressure be kept below 100 mTorr?
  - Since the diffusion pump cannot exhaust against atmospheric pressure, we must first turn on the roughing mechanical pump to sweep the majority of the air out of the system before turning on the diffusion pump. The diffusion pump and roughing pump have pressure limits of  $10^{-7}$  Torr and 10 mTorr. The foreline valve connects the diffusion pump and the roughing pump. If the foreline pressure is not kept below 100 mTorr, the diffusion pump will not be able to compress incoming gas to its rated efficiency.
- 12) What is the Al etchant composed of? What happens if you use it at room temperature? What is the purpose of sintering? What will result if sintering step is skipped? What happens if sintering temperature is too hot or too low?

Al etchant has a composition of 80% Phosphoric acid, 10% H2, 5% acetic acid, and 5% nitric acid. It etches much more slowly at room temperature then at 50 degC. Sintering allows the aluminum and silicon to interdiffuse, resulting in a good contact, as well as allowing hydrogen to diffuse into the oxide and tie up dangling bonds. If the sintering step is skipped, the contact may be poor. If the sintering temperature is too hot, the eutectic Al-Si system will melt. If the sintering temperature is too low, the contact resistance between the aluminum and silicon will be too high.

- 13) Briefly explain the mechanism of  $XeF_2$  etching. Is the etch isotropic or anisotropic? In an integrated CMOS/MEMS process, is there any consequence to using KOH instead of  $XeF_2$  for etch?
  - XeF2 gas is absorbed by the silicon surface, where it breaks down into xenon and fluoride gas. The fluoride gas reacts with the silicon to form SiF2 gas, and both the xenon and SiF2 gas are released back into the air. XeF2 etching is isotropic. Using KOH as an etchant instead of XeF2 has two consequences. First, it is anisotropic and therefore less efficient at undercutting the beam. Secondly, it is a wet etch and liquid etchants can cause the freed structure to stick to the substrate due to surface tension of the liquid while drying.
- 14) . What would happen if a thick oxide film was left on the wafers as it went into the XeF<sub>2</sub> etching step? Since XeF2 is highly selective against SiO2, the structure would not be freed as the etchant would not be able to etch through the oxide film to the silicon below.
- 15) Identify two of the 11 major processing steps that are unnecessary to fabricate a functional oxide cantilever beam. Why are they unnecessary?

Gate oxidation and S/D deposition are unnecessary to fabricating a functional oxide cantilever beam. The cantilever requires no gate so any gate oxide grown during this step must later be removed, and doping plays no part in the functioning of a cantilever device, so S/D deposition can also be skipped if fabricating a cantilever beam.

# 5 Bonus Questions (up to 10 Points)

1) Simulate the 143 process flow in Tsuprem4 (8 points) (updated on 11/20/14, you only need to simulate the NMOS LDD example available online (i.e., s4ex4a, -b, - c.inp))

I ran the files provided to us by Wei-chang on one of the eecs linux servers that had tusprem-4 installed. I only changed input/output directories in the script files to get them to work properly. Here is the resulting figure that is plotted after compiling and running the example NMOS.

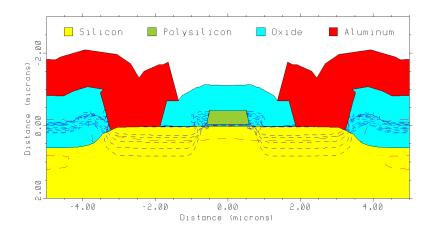


Figure 41: tsuprem4 generated NMOS example process

# 2) Describe an alternate method for doing one of the process steps (i.e. LOCOS instead of Field Oxide, Sputtering instead of Evaporation, etc) and the tradeoffs.

When performing photolithography, projection printing can be used instead of contact printing as was used in the lab. Unlike contact printing, where the mask is directly in contact with the wafer for exposure, projection printing positions the mask at a distance from the wafer and utilizes multiple lens to focus light on a single die. Projection printing would have poorer resolution than that of the contact printing performed in lab. It would also be less desirable for creating MEMS devices due to the inability to expose large topographies. However, there would be less risk of contamination from direct contact with the mask for multiple exposures, and the single-die exposure does not require as small of a minimum mask feature size. As a result, projection printing would reduce mask costs and therefore be preferred in industrial settings.

# 6 Appendix

#### 6.1 Oxide Thickness calculations

Film thickness calculation for oxides:

$$X_{ox} = \frac{0.5B}{B/A} \left[ \sqrt{1 + \frac{4}{B} (\frac{B}{A})^2 (t+\tau)} - 1 \right]$$
 (1)

$$\tau = \frac{X_i^2}{B} + \frac{X_i}{B/A} \tag{2}$$

where

$$B/A = D_o e^{\frac{-E_a}{kT}}$$
 (Use table 3.1 [1] to find  $E_a$  and  $D_o$ )
$$B = D_o e^{\frac{-E_a}{kT}}$$
 (Use table 3.1 [1] to find  $E_a$  and  $D_o$ )
$$t = \text{Time of oxide growth}$$

$$\tau = \text{Time of initial oxide growth already present}$$

$$X_i = \text{length of initial oxide growth}$$

Example: Calculated oxide thickness of Intermed Oxide:

Given: 5 min dry oxidation at 1050°C and 12 + 25 min wet oxidation annealing at 1050°C, calculate oxide growth.

First we consider the 5 min dry oxidation. Using table 3.1 [1] for a < 100 > Silicon, and using dry oxidation, we see that for the linear rate constant (B/A),  $E_A = 2.00$  eV and  $D_o = 3.71 \times 10^6 \,\mu\text{m/hr}$ . For the parabolic rate constant (B),  $E_A = 1.23$  eV and  $D_o = 772 \,\mu\text{m/hr}$ .

Using an arrhenius equation where k = Boltzmann's constant, and T = temperature.

$$\begin{split} B/A &= D_o \mathrm{e}^{\frac{-E_A}{kT}} = 3.71 \times 10^6 \mathrm{e}^{\frac{-2.00*1.602 \times 10^{-19}}{1.38 \times 10^{-23} (1050^{\circ} \mathrm{C} + 273)}} = 0.0887 \mu \mathrm{m/hr} \\ B &= D_o \mathrm{e}^{\frac{-E_A}{kT}} = 772 \mathrm{e}^{\frac{-1.23*1.602 \times 10^{-19}}{1.38 \times 10^{-23} (1050^{\circ} \mathrm{C} + 273)}} = 0.0159 \,\mu \mathrm{m}^2/\mathrm{hr} \end{split}$$

Since there is no initial oxide here,  $\tau = 0$ ,

$$X_{ox} = \frac{0.5B}{B/A} \left[ \sqrt{1 + \frac{4}{B} (\frac{B}{A})^2 (t + \tau)} - 1 \right] = \frac{0.5(0.0159)}{0.0887} \left[ \sqrt{1 + \frac{4}{0.0159} (0.0887)^2 (\frac{5 \text{min}}{60 \text{min/hr}} + 0)} - 1 \right] \approx 7.11 \, \text{nm}$$

Now after this dry oxidation, we have a 37 minute wet oxidation at 1050°C. Using table 3.1 [1] again, but this time using the constants that apply for wet oxidation,

$$B/A_{\rm wet} = D_o {\rm e}^{\frac{-E_A}{kT}} = 9.70 \times 10^7 {\rm e}^{\frac{-2.05*1.602\times 10^{-19}}{1.38\times 10^{-23}(1050^{\circ}{\rm C}+273)}} = 1.50 \mu{\rm m/hr}$$
 
$$B_{\rm wet} = D_o {\rm e}^{\frac{-E_A}{kT}} = 386 {\rm e}^{\frac{-0.78*1.602\times 10^{-19}}{1.38\times 10^{-23}(1050^{\circ}{\rm C}+273)}} = 0.411 \, \mu{\rm m}^2/{\rm hr}$$

This time we do have an initial oxidation time  $\tau$  because of the dry oxidation we did in the previous step. Here  $X_i$  is the oxide length we calculated for the dry oxidation growth,

$$\tau = \frac{{X_i}^2}{{B_{\text{wet}}}} + \frac{{X_i}}{{B/A_{\text{wet}}}} = \frac{0.00711^2}{0.411} + \frac{0.00711}{1.50} \approx 0.00488 \text{hrs}$$

And finally our oxide growth is,

$$X_{ox} = \frac{0.5B}{B/A} \left[ \sqrt{1 + \frac{4}{B} (\frac{B}{A})^2 (t+\tau)} - 1 \right] = \frac{0.5(0.411)}{1.50} \left[ \sqrt{1 + \frac{4}{0.411} (1.50)^2 (\frac{(12+25)\text{min}}{60\text{min/hr}} + 0.00488 \text{hrs})} - 1 \right] \approx 386.3 \, \text{nm}$$

# 6.2 Junction Depth Calculations

Junction depth calculation for box approximation (limited-source diffusion):

$$x_j = 2\sqrt{Dt\ln\left(N_o/N_B\right)}\tag{3}$$

and for a half gaussian (constant-source diffusion):

$$x_i = 2\sqrt{Dt}\operatorname{erfc}^{-1}(N_B/N_o) \tag{4}$$

where,

$$D = D_o e \frac{-E_A}{kT}$$
 (Diffusion coefficient)

t = time of diffusion

 $N_B = \text{Background impurity concentration}$ 

 $N_o = \text{Surface concentration limited by solid solubility}$ 

Example: Calculate the junction depth after pre-diffusion and drive in.

According to the process flow [5], our silicon wafer has a resistivity of about 14-16 ohm-cm. From the same process flow we know that we had a phosphorus doped, solid solubility limited constant diffusion at 1050°C. Using figure 4.6 [1] we see that at a temperature of 1050°C our phosphorus surface concentration  $N_o \approx 10^{21}/\mathrm{cm}^3$ . Now using the Resistivity of our wafer and figure 4.8 [1], we see that we have an impurity concentration  $N_B \approx 8 \times 10^{14}/\mathrm{cm}^3$ .

Using table 4.1 [1], we can calculate our diffusion coefficient. Note that pre-diffusion was done at 1050°C for 5 minutes.

$$D = D_o e^{\frac{-E_A}{kT}} = 10.5 \,\text{cm}^2/\text{sec } \exp\left(\frac{-3.69 * 1.602 \times 10^{-19}}{1.38 \times 10^{-23} (1050 + 273)}\right) = 9.11 \times 10^{-14} \,\text{cm}^2/\text{sec}$$

Now we can plug everything into our solid solubility limited box approximation equation:

$$x_j = 2\sqrt{Dt}\,\mathrm{erfc}^{-1}\,(N_B/N_o) = 2\sqrt{(9.11\times 10^{-14})(300\mathrm{sec})}\,\mathrm{erfc}^{-1}\,(8\times 10^{14}/10^{21}) \approx 365\,\mathrm{nm}$$

Now for drive-in we kept the temperature the same, 1050°C, but kept the wafer inside the furnace for 37 minutes (2220 seconds). Also we can no longer assume a simple box approximation, we must use a half gaussian; this means that our surface concentration is going to change with drive-in.

We will use the following equation,

$$N_B = (Q/\sqrt{\pi D_2 t_2}) \exp\left(-\left(\frac{x_j}{2\sqrt{D_2 t_2}}\right)^2\right)$$
 (5)

where Q is the does rate,

$$Q = 2N_o \sqrt{D_1 t_1/\pi} \tag{6}$$

Combining the two equations and noting that  $D_1 = D_2$  because we are using the same temperature, 1050°C, for both pre-diffusion and drive-in ( $t_1$  is the pre-diffusion time and  $t_2$  is the drive in time),

$$N_B = (2N_o/\pi)\sqrt{\frac{t_1}{t_2}}\exp\left(-(\frac{x_j}{2\sqrt{D_2t_2}})^2\right)$$

Solving this for  $x_i$  yields,

$$x_j = 2\sqrt{D_2 t_2 \ln \left( (2N_o/\pi N_B)(\sqrt{t_1/t_2}) \right)} = 2\sqrt{(9.11 \times 10^{-14})(2220) \ln \left( (2(10^{21})/\pi (8 \times 10^{14}))(\sqrt{300/2220}) \right)} \approx 1000 \, nm$$

# 6.3 Dopant Profiles.

According to the EE143 process flow, There was an initial blanket implant of B11  $3E12cm^{-3}$  on our < 100 > wafer. Also our wafer had a resistivity of 14-16cm which corresponds to a background concentration of about  $8E14cm^{-3}$ . Now for the field oxide, we used 5-80-5 minute dry,wet,dry oxidation to create about 500 nm of oxide. Putting all this information into Tsuprem-4 generates the plot in Figure 35.

Script file:

\$ field oxide

\$ Initialization

Initialize <100> material=silicon Phosphorus=8e14 width=1.5 dX=0.005

\$ Blanket implant here
Implant B11 Energy=60 Dose=3e12

\$ Plot here for initial dopant profile before any oxidation

\$ 5-80-5 oxidation

Diffusion Time=5 Temperature=1000 Dry02
Diffusion Time=80 CONTINUE Temperature=1000 Wet02
Diffusion Time=5 CONTINUE Temperature=1000 Dry02

\$ Plot here for dopant profile after field oxide

ETCH OXIDE TRAP

Diffusion Time= 35 Temperature= 1100 T.Rate=+5.714 Nitrogen Diffusion Time=45 CONTINUE Temperature=1100 Dry02

\$ Plot here for dopant profile after gate oxide

DEPOSIT POLYSILICON THICK=0.4

\$ Plot here for dopant profile after poly deposition

ETCH POLY TRAP ETCH OXIDE TRAP

\$PSG

Deposit Oxide Thickness = .320

Diffusion Time=5 CONTINUE Temperature=1050 Boron=5e22 Nitrogen

\$ Plot here for dopant profile after pre deposition

Diffusion Time= 35 Temperature= 800 T.Rate=+5.714 Nitrogen Diffusion Time=12 CONTINUE Temperature=1050 Wet02 Diffusion Time=25 CONTINUE Temperature=1050 Boron=5.9e15

\$ Plot here for dopant profile after drive-in

\$ plotting
Select z=log10(active(boron))
\$ plot concentration vs depth
Plot.1d
Print.1d

• Gate Oxide

# 7 References

- 1. Jaeger, Richard. Introduction to microelectronic fabrication. New Jersey: Prentice Hall, 2002. Print.
- 2. Sharpe, William N., Bin Yuan, and Ranji Vaidyanathan. Measurements of Young's Modulus, Poisson's ratio, and Tensile Strength of Polysilicon. Publication no. 1. Nagoya: IEEE, 1997. Web.
- 3. Kim, Min. "Influence of Substrates on the Elastic Reaction of Films for the Microindentation Tests." Thin Solid Films 283 (1996): 15. Web.
- 4. Chinmulgund, M. "Effect of Ar Gas Pressure on Growth, Structure, and Mechanical Properties of Sputtered Ti, Al, TiAl, and Ti3Al Films." Thin Solid Films 270.1-2 (1995): 260-63. Web.