Basler Cameras

```
// Create an instant camera object with the fir
Camera_t camera(CTlFactory::GetInstance().Creat
// Register an image event handler that accesse
camera.RegisterImageEventHandler( new CSampleIn
Ownership_TakeOwnership);

// Open the camera.
camera.Open();
```

PYLON DEPLOYMENT GUIDE

Document Number: AW001362

Version: 06 Language: 000 (English) Release Date: 12 February 2019

Software Version: 5.x



Contacting Basler Support Worldwide

Europe, Middle East, Africa

Basler AG An der Strusbek 60–62 22926 Ahrensburg Germany

Tel. +49 4102 463 515 Fax +49 4102 463 599

support.europe@baslerweb.com

The Americas

Basler, Inc. 855 Springdale Drive, Suite 203 Exton, PA 19341 USA

Tel. +1 610 280 0171 Fax +1 610 280 7608

support.usa@baslerweb.com

Asia-Pacific

Basler Asia Pte. Ltd. 35 Marsiling Industrial Estate Road 3 #05–06 Singapore 739257

Tel. +65 6367 1355 Fax +65 6367 1255

support.asia@baslerweb.com

www.baslerweb.com

All material in this publication is subject to change without notice and is copyright Basler AG.

AW00136206000 Table of Contents

Table of Contents

1	Introduction										
2	Run	Runtime Redistributable Package									
3	Сор	y Deplo	yment		3						
	3.1 Using Copy Deployment										
	3.2			Copy Deployment							
		3.2.1		98							
		3.2.2		++ Runtime Files							
		3.2.3	pylon Ca	mera Driver Packages	. 10						
	3.3	Locatin	g the pylon	DLLs	. 11						
		3.3.1	Method 1	: Placing the pylon DLLs in the Application's Working Directory	. 13						
		3.3.2	Method 2	2: Registering the Application Path in the Windows Registry	. 14						
		3.3.3	Method 3	B: Running the Application Using a Batch File	. 15						
		3.3.4	Method 4	I: Using SetDIIDirectory in the Source Code	. 17						
		3.3.5	Method 5	i: Creating and Embedding Assembly Manifests	. 20						
			3.3.5.1	Creating the Assembly Manifests (.manifest Files)	. 21						
			3.3.5.2	Creating the Application Configuration Files (.config Files)							
			3.3.5.3	Embedding the Manifest	. 23						
Re	evisio	on Histo	orv		. 24						

Introduction AW00136206000

1 Introduction

To deploy pylon software and camera drivers, two options are available:

Copy deployment: Deploy the necessary files simply by copying them. This is the recommended option if you want to deploy pylon as part of your own application. Camera drivers must be installed separately using .msi installers. For more information, see Chapter 3 on page 3.

pylon runtime redistributable package (also known as "runtime installer"): Deploy the necessary files and drivers using an installation program. This is the recommended option if you want to perform an unattended or silent installation of the pylon software.
For more information, see Chapter 2 on page 2.

For the advantages and disadvantages of each option, see Table 1.

Deployment Option	Advantages	Disadvantages
Copy Deployment	 Side-by-side installation: Files installed via copy deployment can run side by side with other pylon installations. Newer pylon versions do not conflict with the deployed version. If desired, pylon can be deployed without shortcuts in the Windows start menu or on the desktop. Full control over which files should be installed and which should not. 	 You must choose each installation file manually and individually. No automatic installation routine. You must provide and maintain your own installer.
pylon Runtime Redistributable Package	Installation files are bundled in feature sets, e.g., "USB_Runtime". You don't have to deal with individual installation files.	No side-by-side installation. If a newer pylon version is installed, it replaces the existing runtime version. If the newer version is not binary compatible, this can render your application unusable.

Table 1: Advantages and Disadvantages of pylon Deployment Options

2 Runtime Redistributable Package

The pylon runtime redistributable package allows you to deploy the pylon files and drivers by running an installation program.

This is the recommended option if you want to perform an unattended or silent installation of the pylon software.

You can choose whether to install support for all camera interfaces (GigE, USB 3,0, IEEE 1394, Camera Link) or whether to pick individual interfaces as required. If you want to install support only for selected camera interfaces, see "Configuring and Customizing the Installation".



The redistributable package includes 32-bit and 64-bit files.

When the included installer detects a 64-bit operating system on the target machine, the installer automatically installs the 64-bit **and** the 32-bit files. Otherwise, it installs only the 32-bit files.

Configuring and Customizing the Installation

The runtime redistributable package (**.exe** file) accepts command line switches to customize and configure the installation.

The options include, e.g.,

- running a "silent installation" without displaying any messages or windows during installation
- installing only specific components (e.g., only the C++ runtime files, the USB runtime files, the USB camera driver, and the pylon Viewer)
- uninstalling specific components.

To access information about the available switches, launch the runtime redistributable package (.exe file) from the command prompt with the /help or /? switch.

Example:

"Basler pylon 5 Runtime 5.x.x.xxxx.exe" /help

A help window will appear, giving information about the available command line switches.

3 Copy Deployment

3.1 Using Copy Deployment

Copy deployment, also known as XCopy deployment, allows you to deploy the necessary files simply by copying them to the target computer. Because there is no automatic installation routine, you must provide and maintain your own installation routine to automate the process.

This is the recommended option if you want to deploy pylon as part of your own application.



When using copy deployment, do not deploy the files to a target directory that is included in the Windows PATH environment variable and do not extend the PATH variable to include the target directory.

Otherwise, the deployed version may conflict with future pylon versions installed on the target computer.

To deploy pylon via copy deployment:

- Set up your installation routine to
 - copy the required pylon files to the target computer.
 For a list of the pylon files, see Section 3.2.1 on page 4.
 - execute the Visual C++ Redistributable Package installer. For more information, see Section 3.2.2 on page 8.
 - execute the appropriate camera driver installer (.msi file).
 For a list of pylon camera driver installers, see Section 3.2.3 on page 10.
- Make sure your application's executable file(s) can find the pylon DLLs on the target computer. For more information, see Section 3.3 on page 11.

These steps and sub-steps can be carried out in any order.

3.2 Choosing Files for Copy Deployment

3.2.1 pylon Files

To deploy pylon using copy deployment, a set of .dll and .zip files must be copied to the target computer. The file names and the number of files vary depending on which camera interface(s) your application should support (GigE Vision, USB 3.0 Vision, Camera Link, IEEE 1394, or multiple interfaces).

The files required for each interface are shown in Table 2. All files are available in 32-bit and 64-bit versions, with identical file names. If your application is available in both 32-bit and 64-bit versions, you must provide each file twice.

To obtain the files, install the pylon Camera Software Suite on your computer. During installation, select the "Developer" profile and choose the desired interface(s).

After the installation, you can find the files in the **\Runtime\x64** and **\Runtime\Win32** subdirectories of the pylon installation directory, unless otherwise noted. For details, see the "Notes" column in Table 2.



To determine whether your application requires additional files that are not listed in Table 2, you can run the Microsoft Dependency Walker tool (**depends.exe**), as described in the "Understanding the Dependencies of a Visual C++ Application" topic (http://msdn.microsoft.com/en-us/library/ms235265.aspx).

File Name	GigE	USB 3.0	IEEE 1394	Camera Link	Notes
PylonBase_v5_2.dll	х	х	х	x	
GCBase_MD_VC141_v3_1_Basler_pylon.dll	х	х	х	х	
GenApi_MD_VC141_v3_1_Basler_pylon.dll	х	х	х	x	
log4cpp_MD_VC141_v3_1_Basler_pylon.dll	х	х	х	х	
Log_MD_VC141_v3_1_Basler_pylon.dll	х	х	х	x	
NodeMapData_MD_VC141_v3_1_Basler_pylon.dll	х	х	х	х	
XmlParser_MD_VC141_v3_1_Basler_ Rpylon.dll	х	х	х	х	
MathParser_MD_VC141_v3_1_Basler_ pylon.dll	х	х	х	х	
PylonGigE_v5_2_TL.dll	х				
gxapi_v11.dll	х				

Table 2: Files Required for Copy Deployment

File Name	GigE	USB 3.0	IEEE 1394	Camera Link	Notes
ProducerGEV.cti	x				Only required in combination with a GenTL consumer. To use it, the environment variable GENICAM_GENTL32_PATH or GENICAM_GENTL64_PATH resp. needs to be extended. This works similarly to extending the Windows PATH variable. For example, change GENICAM_GENTL32_PATH= C:\Program Files\OtherVendor\GENTL32_PATH to GENICAM_GENTL32_PATH= C:\Program Files\OtherVendor\GENTL32_PATH; C:\Program Files\OtherVendor\GENTL32_PATH; C:\Program Files\OtherVendor\GENTL32_PATH; C:\Program Files\OtherVendor\GENTL32_PATH; C:\Program Files\OtherVendor\GENTL32_PATH; C:\Program Files\OtherVendor\GENTL32_PATH; C:\Program Files\OtherVendor\GENTL32_PATH
PylonUsb_v5_2_TL.dll		х			
uxapi_v11.dll		х			
ProducerU3V.cti		x			Only required in combination with a GenTL consumer. To use it, the environment variable GENICAM_GENTL32_PATH or GENICAM_GENTL64_PATH resp. needs to be extended. This works similarly to extending the Windows PATH variable. For example, change GENICAM_GENTL32_PATH= C:\Program Files\OtherVendor\GENTL32_PATH to GENICAM_GENTL32_PATH= C:\Program Files\OtherVendor\GENTL32_PATH= C:\Program Files\OtherVendor\GENTL32_PATH;C:\Program Files\OtherVendor\GENTL32_PATH;C:\Program Files\OtherVendor\GENTL32_PATH
uxapi_v11.dll		х			
Pylon1394_v5_2_TL.dll			х		
BcamError.dll			х		
Basler_A1_A3_A6_1394.zip			х		Include this file if you are using A1, A3, or A6 camera devices.
Basler_scout_1394.zip			х		Include this file if you are using scout camera devices.
PylonCLSer_v5_2_TL.dll				х	
CLAllSerial_MD_VC141_v3_1_Basler_ pylon.dll				х	

Table 2: Files Required for Copy Deployment

File Name	GigE	USB 3.0	IEEE 1394	Camera Link	Notes
CLProtocol_MD_VC141_v3_1_Basler_pylon.dll				х	
CLSerCOM.dll				х	Usually, you should include the CLSerXYZ.dll provided by the manufacturer of your Camera Link frame grabber. The CLSerCOM.dll file can only be used to establish a Camera Link connection via standard COM ports.
Basler_CameraLink.zip				х	Include this file if the camera description file cannot be downloaded from the camera device you are using.
BaslerCLProtocol.dll				X	Place this file in a separate directory. The 32-bit file must be placed in a subdirectory named Win32_i86. The 64-bit file must be placed in a subdirectory named Win64_x64. Example: If you have set up your installation routine to copy the 32-bit pylon DLLs to C:\Program Files\Grab\dII\ pylon32 the file must be copied to C:\Program Files\Grab\dII\ pylon32\Win32_i86\. Also, the GenlCam path variable GENICAM_CLPROTOCOL needs to be extended. This works similarly to extending the Windows PATH variable. For example, change GENICAM_CLPROTOCOL=C:\Program Files\OtherVendor\CLProtocol to GENICAM_CLPROTOCOL=C:\Program Files\OtherVendor\CLProtocol; C:\Program Files\MyApp\ CLProtocol
PylonC_v5_2.dll	0	0	0	0	Optional: Include this DLL if your application uses the pylon C API or the pylon C .NET API.
Basler.Pylon.dll	0	0	0	0	Optional: Include this DLL if your application uses the pylon .NET API. This file must be copied from the Development\Assemblies subdirectory of the pylon installation directory.

Table 2: Files Required for Copy Deployment

File Name	GigE	USB 3.0	IEEE 1394	Camera Link	Notes	
PylonC.NET.dll	O	0	0	0	Optional: Include this DLL if your application uses the pylon C .NET API. This file must be copied from the Development\Assemblies subdirectory of the pylon installation directory.	
PylonGUI_v5_2.dll	0	0	0	0	Optional: Include this file if your application uses the pylon ImageWindow feature.	
PylonUtility_v5_2.dll	0	0	0	O	Optional: Include this file if your application uses the pylon Image Handling Support features, e.g., the Image Format Converter.	
x = Required file, o = Optional file	x = Required file, o = Optional file					

Table 2: Files Required for Copy Deployment

3.2.2 Visual C++ Runtime Files

The pylon DLLs depend on the following Visual C++ runtime files:

File Name	GigE	USB 3.0	IEEE 1394	Camera Link	Notes
vcruntime140.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
msvcp140.dll	х	х	х	х	C run-time library, standard C++ library support (version: Visual Studio 2015 or 2017)
ucrtbase.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-core-file-l1-2-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-core-file-l2-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-core-localization-l1-2-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-core-processthreads-l1-1-1.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-core-synch-l1-2-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-core-timezone-I1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-convert-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-environment-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-filesystem-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-heap-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-locale-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-math-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-multibyte-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-runtime-I1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-stdio-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)

Table 3: Visual C++ Runtime Files

File Name	GigE	USB 3.0	IEEE 1394	Camera Link	Notes
api-ms-win-crt-string-I1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-time-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)
api-ms-win-crt-utility-l1-1-0.dll	х	х	х	х	C runtime (CRT) library (version: Visual Studio 2015 or 2017)

Table 3: Visual C++ Runtime Files

These files **must always** be deployed together with the pylon DLLs. The files are available in 32-bit and 64-bit versions, with identical file names. If your application is available in both 32-bit and 64-bit versions, you must provide each file twice.

To do so, two options are available:

- Run the Visual C++ Redistributable Package for Visual Studio 2015 or 2017, provided by Microsoft. This is the recommended method. The installer will automatically copy the required files to the respective Windows system directory (%windir%\System32 or %windir%\SysWOW64). You can download the package from the Microsoft website:
 - 2015 version: https://www.microsoft.com/en-us/download/details.aspx?id=48145 2017 version: https://www.visualstudio.com/downloads/
- Manually copy the files listed in Table 3 to the same target directory as the pylon DLLs. You can use this deployment method to enable installation by users who don't have administrator rights, or for applications that can be run from a network share.

For more information, see the "Choosing a Deployment Method" topic on the MSDN website: https://docs.microsoft.com/en-gb/cpp/ide/choosing-a-deployment-method

3.2.3 pylon Camera Driver Packages

Camera drivers must be installed separately using .msi packages.

To install the camera drivers on the target computer, set up your installation routine to execute the corresponding **.msi** file.

The included installer will automatically install the driver without displaying any messages or windows during its progress ("silent installation").

The .msi packages for each interface are shown in Table 4. If your application should support multiple camera interfaces, execute each .msi file successively.

To obtain the files, install the pylon Camera Software Suite on your computer. During installation, select the "Developer" profile and choose the desired interface(s).

After the installation, you can find the files in the **\Development\Redist\Drivers** subdirectory of the pylon installation directory.



- All camera driver packages include 32-bit and 64-bit files. When the included installer detects a 64-bit operating system on the target machine, the installer automatically installs the 64-bit drivers. Otherwise, it installs the 32-bit drivers.
- We recommend executing the .msi file(s) via the Windows Installer Tool, Msiexec.exe.

For more information, see http://support.microsoft.com/en-us/kb/314881.

File Name (*)	GigE	USB 3.0	IEEE 1394	Camera Link	Notes
GigE_Performance_Driver.msi	х				Install this driver if you are using the GigE Performance Driver with a supported Intel Network Adapter.
GigE_Filter_Driver.msi	х				Install this driver if you are not using the GigE Performance Driver.
USB_Camera_Driver.msi		х			
Firewire_Bus_Driver.msi			х		
Firewire_Camera_Driver.msi			х		

Table 4: pylon Camera Driver Packages

3.3 Locating the pylon DLLs

To deploy pylon via copy deployment, you must make sure your application's executable file(s) can find the required pylon DLLs on the target computer. Otherwise, your application won't start or issue an error message.

Enabling your application to find the pylon DLLs can be done in several ways:

- Place the pylon DLLs in the application's working directory. For more information, see Section 3.3.1 on page 13.
- Register the application path in the Windows Registry. For more information, see Section 3.3.2 on page 14.
- Run the application using a batch file.
 For more information, see Section 3.3.3 on page 15.
- Use the SetDIIDirectory function in the source code of your application.
 For more information, see Section 3.3.4 on page 17.
- Create assembly manifests and embed them in your application project.
 For more information, see Section 3.3.5 on page 20.

See Fig. 1 for a flowchart that helps you to choose the right method.

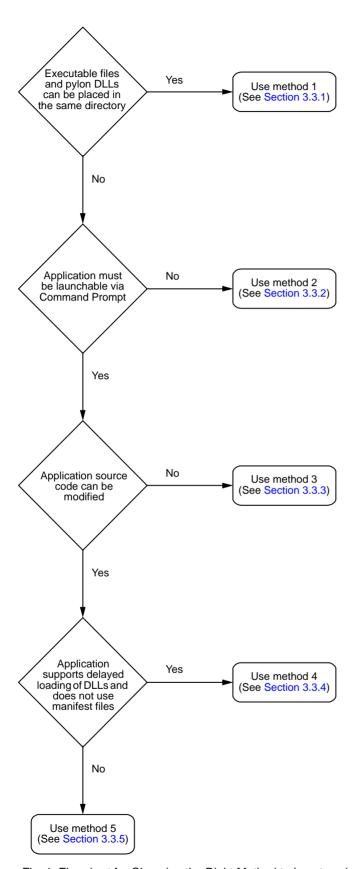


Fig. 1: Flowchart for Choosing the Right Method to Locate pylon DLLs

3.3.1 Method 1: Placing the pylon DLLs in the Application's Working Directory

The easiest copy deployment method is to set up your installation routine to copy the required pylon DLLs to the same target directory as your application's executable files. This enables your application to find the pylon DLLs automatically.

Because this is also the most reliable method, you should always consider this option first.



This method will not work

- if you copy the pylon DLLs and your application's DLLs to a common DLL directory and copy your application's executable files to a different directory. The pylon DLLs and your application's executable files must reside in the same directory.
- if your application is available in 32-bit and 64-bit versions and if the 32-bit and 64-bit executable files are copied to the same target directory. You can't copy all files to the same directory, as the depending 32-bit and 64-bit pylon DLLs share the same file names.

3.3.2 Method 2: Registering the Application Path in the Windows Registry

To point your application to the pylon DLLs, you can register the application path ("AppPath") in the Windows registry.

This is the recommended method if your application's executable file(s) and the dependent pylon DLLs can't be placed in the same directory.



If you use this method, your application will not be launchable via Windows Command Prompt. For methods that allow launching the application via Command Prompt, see Section 3.3.3 on page 15, Section 3.3.4 on page 17, and Section 3.3.5 on page 20.

To deploy the pylon DLLs by registering the application path:


- 1. Set up your installation routine to copy the required pylon DLLs. If your application is available in 32-bit and 64-bit versions, the 32-bit pylon DLLs must be copied to one target directory and the 64-bit pylon DLLs to another.
- 2. Set up your installation routine to add or change the following registry entries:
 - a. Add the subkey

 HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\App Paths\file.exe

 where file.exe must be replaced by the name of your application's executable file, e.g.,

 Grab exe
 - b. Set the value of the subkey's **(Default)** entry to the path of the application's executable file, e.g., C:\Program Files\Grab\Grab.exe.
 - c. Add a **Path** entry and set its value to the path of the directory containing the pylon DLLs, e.g., C:\Program Files\Grab\dl\pylon32\.

In the Windows Registry Editor, the result should look like this (sample values):

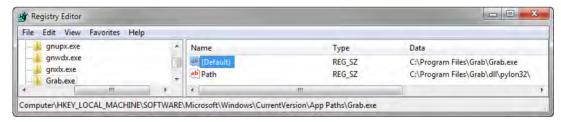

3. If your application is available in 32-bit and 64-bit versions, repeat step 2 for the application's 64-bit executable file and the directory containing the 64-bit pylon DLLs. For example, add a second subkey Grab64.exe with the entries C:\Program Files\Grab\Grab64.exe and C:\Program Files\Grab\d1\pylon64\.

3.3.3 Method 3: Running the Application Using a Batch File

To point your application to the pylon DLLs, you can write a batch file that will temporarily add the pylon DLLs directories to the Windows PATH environment variable and then launch the application.

This is the recommended method if

- your application's executable file(s) and the dependent pylon DLLs can't be placed in the same directory (see Section 3.3.1 on page 13) and
- your application must be launchable via Command Prompt and
- you can't modify the source code of your application.

To deploy the pylon DLLs using a batch file:

- Set up your installation routine to copy the required pylon DLLs. If your application is available
 in 32-bit and 64-bit versions, the 32-bit pylon DLLs must be copied to one target directory and
 the 64-bit pylon DLLs to another.
- 2. Open a text editor, e.g., Notepad.
- 3. If your application is available
 - only in a 32-bit version or only in a 64-bit version, add the following lines:

```
@ECHO OFF
SET relPath=DLLDir
SET PATH=%~dp0%relPath%;%PATH%
SET app=%~dp0%~n0.exe
"%app%"
```

• in **both** 32-bit and 64-bit versions, add the following lines:

```
@ECHO OFF
SET relPathWin32=DllDir32
SET relPathX64=DllDir64
SET PATH=%~dp0%relPathWin32%;%~dp0%relPathX64%;%PATH%
SET app=%~dp0%~n0.exe
"%app%"
```

4. Replace the <code>DLLDir</code>, <code>DLLDir32</code>, and/or <code>DLLDir64</code> entries by the paths to the pylon DLL directories. The paths must be relative to the directory containing the application's executable files.

Example: Assuming the following target directories are set (sample values):

- Executable files: C:\Program Files\Grab\
- 32-bit pylon DLLs: C:\Program Files\Grab\dll\pylon32\
- 64-bit pylon DLLs: C:\Program Files\Grab\dll\pylon64\

In this case, you must set up the batch file like this:

```
@ECHO OFF
SET relPathWin32=dll\pylon32
SET relPathX64=dll\pylon64
SET PATH=%~dp0%relPathWin32%;%~dp0%relPathX64%;%PATH%
SET app=%~dp0%~n0.exe
"%app%"
```

- 5. If your application is available
 - **only** in a 32-bit version or **only** in a 64-bit version, save the batch file with the same file name as your application's executable file and with a **.cmd** file extension.

Example: If your application's executable file is named Grab.exe, save the batch file as Grab.cmd.

- in **both** 32-bit and 64-bit versions, save the batch file twice: A first time with the file name of your 32-bit executable file, and a second time with the file name of your 64-bit executable file. The contents of the batch file can remain exactly the same.
 - **Example:** If your application's executable files are Grab32.exe and Grab64.exe, save the batch file as Grab32.cmd and Grab64.cmd.
- 6. Set up your installation routine to copy the batch file(s) to the same directory as your application's executable file(s).
- 7. Make sure the user of your application launches the application via the batch file and not via the executable file (e.g., by creating desktop shortcuts to Grab32.cmd and Grab64.cmd).

3.3.4 Method 4: Using SetDIIDirectory in the Source Code

To point your application to the pylon DLLs, you can use the SetDllDirectory function (C++ only) in the source code of your application.

This is the recommended method if

- your application's executable file(s) and the dependent pylon DLLs can't be placed in the same directory (see Section 3.3.1 on page 13) and
- your application must be launchable via Command Prompt and
- you can modify the source code of your application.



To use SetDllDirectory, the pylon DLLs must be "delay loaded". Otherwise, the application may search for the pylon DLLs too soon, i.e. before reaching the SetDllDirectory function call, and exit with an error message.

If delay loading is known to cause problems in your application, you should use assembly manifests instead of calling SetDIIDirectory. Also, if your application already uses assembly manifests, editing the existing manifest files is generally an easier method. For more information, see Section 3.3.5 on page 20.

To deploy the pylon DLLs using the SetDIIDirectory function:

- Set up your installation routine to copy the required pylon DLLs. If your application is available
 in 32-bit and 64-bit versions, the 32-bit pylon DLLs must be copied to one target directory and
 the 64-bit pylon DLLs to another.
- 2. Open your application project in an IDE, e.g., Visual Studio.
- 3. At the beginning of your application's source code, add the following preprocessor directives:

```
// Preprocessor directives for SetDllDirectory
#include <pylon/Platform.h>
// Path helper functions
#include "Shlwapi.h"
#pragma comment(lib, "Shlwapi.lib")
#include "TCHAR.h"
// Link delay load implementation needed when using SetDllDirectory
#pragma comment(lib, "delayimp")
```

4. In the application's main() function, add the following lines:

```
// Set dll relative path
#if defined PYLON_32_BUILD
const TCHAR* relPath = TEXT("dllDirectory32");
#elif defined PYLON_64_BUILD
const TCHAR* relPath = TEXT("dllDirectory64");
#endif
```

```
// Path length of dll directory must be smaller than MAX PATH
TCHAR dirPath[MAX PATH];
// The following code is supported by Windows 7.
// For Windows 8 or higher, other Windows Path Functions are recommended esp.
// to avoid buffer overrun.
const int cErrorGetModuleFileName = 1; // replace with your special exit code
const int cErrorPathAppend = 1; // replace with your special exit code
const int cErrorSetDllDirectory = 1; // replace with your special exit code
// Assume this is the main function of a .exe, not of a dll. Otherwise use GetModuleHandle).
if ((0 == GetModuleFileName(NULL, dirPath, MAX PATH)) || (ERROR INSUFFICIENT BUFFER ==
GetLastError()))
{
    return cErrorGetModuleFileName;
}
// For Windows 8 or higher the use of PathCchRemoveFileSpec is recommended.
PathRemoveFileSpec(dirPath);
// Avoid buffer overrun when using PathAppend (i.e. here we don't care about the
// (also restricted) length of the dll's full path).
// For Windows 8 or higher the use of PathCchAppend is recommended.
if ((_tcslen(dirPath) + 1 + _tcslen(relPath) + 1 > MAX_PATH) || !PathAppend(dirPath,
relPath))
{
    return cErrorPathAppend;
}
if (!SetDllDirectory(dirPath))
{
    return cErrorSetDllDirectory;
```

5. Replace dllDirectory32 and dllDirectory64 by relative paths to the pylon DLL target directories (see step 1). The paths must be relative to the directory containing the application's executable files. You can use the double-dots specifier to denote the parent directory of the current directory.

Example: Assuming the following target directories are set (sample values):

- Executable files: C:\Program Files\Grab\bin\
- 32-bit pylon DLLs: C:\Program Files\Grab\dll\pylon32\
- 64-bit pylon DLLs: C:\Program Files\Grab\dll\pylon64\

In this case, you must replace dllDirectory32 by ..\\dll\\pylon32 and dllDirectory64 by ..\\dll\\pylon64.

6. Use the /DELAYLOAD linker switch to specify which DLLs to delay load:

- a. In the Solution Explorer pane, select a project.
- b. On the View menu, select Properties Pages.
- c. Navigate to Configuration Properties > Linker > Input.
- d. Modify the **Delay Loaded Dlls** entry. **Example:** /DELAYLOAD:PylonBase_v5_2.dll;PylonGUI_v5_2.dll
- 7. Build all versions of your project and deploy the newly created builds.

3.3.5 Method 5: Creating and Embedding Assembly Manifests

To point your application to the pylon DLLs, you can create assembly manifests and embed them in your application project.

This is the recommended method if

- your application's executable file(s) and the dependent pylon DLLs can't be placed in the same directory (see Section 3.3.1 on page 13) and
- your application must be launchable via Command Prompt and
- you can modify the source code of your application and
- your application does not support delayed loading of DLLs or your application already uses assembly manifests.



If your application already uses assembly manifests, simply add the required pylon DLLs to the existing **.manifest** files.

To deploy the pylon DLLs using assembly manifests:

- 1. Create and deploy the assembly manifest files (.manifest files). For more information, see Section 3.3.5.1 on page 21.
- 2. Create and deploy the application configuration files (.config files). For more information, see Section 3.3.5.2 on page 22.
- 3. Embed the assembly manifest in your application project. For more information, see Section 3.3.5.3 on page 23.

3.3.5.1 Creating the Assembly Manifests (.manifest Files)

The .manifest files contain references to the pylon DLLs. For each version of your application (32 bit or 64 bit), you must create a separate .manifest file. Each file must be copied to the corresponding directory containing the pylon DLLs.

To create and deploy the .manifest file(s):

- 1. Open a text editor, e.g., Notepad.
- 2. If your application is available in a 32-bit version:
 - a. Create a new text file and add the following lines:

- b. Replace assemblyName32 by a unique identifier for the 32-bit assembly, e.g., Grab. Assembly.
- c. Use the <file> tags to refer to each required 32-bit pylon DLL. Replace each dll32FileName entry by the file name of a required DLL. Add more lines if required.

Example:

```
<file name="GCBase_MD_VC141_v3_1_Basler_pylon.dll" hashalg="SHA1"/>
<file name="GenApi_MD_VC141_v3_1_Basler_pylon.dll" hashalg="SHA1"/>
<file name="Log MD VC141 v3 1 Basler pylon.dll" hashalg="SHA1"/>
```

- d. Save the file with the same file name as assembLyName32 and with a .manifest file extension, e.g., save it as Grab.Assembly.manifest.
- e. Set up your installation routine to copy the .manifest file to the directory containing the 32-bit pylon DLLs, e.g., C:\Program Files\Grab\dll\pylon32.
- 3. If your application is available in a **64-bit** version:
 - a. Create a new text file and add the following lines:

Note: type must always be win32, also for 64-bit applications.

b. Replace assemblyName64 by a unique identifier for the assembly, e.g., Grab64.Assembly. If your application is available in both 32-bit and 64-versions, the identifier must be different from the identifier set in step 2.

c. Use the <file> tags to refer to each required 64-bit pylon DLL. Replace each dll64FileName entry by the file name of a required DLL. Add more lines if required.

Example:

```
<file name="GCBase_MD_VC141_v3_1_Basler_pylon.dll" hashalg="SHA1"/>
<file name="GenApi_MD_VC141_v3_1_Basler_pylon.dll" hashalg="SHA1"/>
<file name="Log_MD_VC141_v3_1_Basler_pylon.dll" hashalg="SHA1"/>
```

- d. Save the manifest file with the same file name as *assembLyName64* and with a **.manifest** file extension, e.g., save it as Grab64.Assembly.manifest.
- e. Set up your installation routine to copy the .manifest file to the directory containing the 64-bit pylon DLLs, e.g., C:\Program Files\Grab\dll\pylon64.

3.3.5.2 Creating the Application Configuration Files (.config Files)

The .config files point each application's executable file to its corresponding .manifest file. For each executable file (32 bit or 64 bit), you must create a separate .config file.

Each .config file must be copied to the same directory as the corresponding executable file.

To create and deploy the .config file:

- 1. Open a text editor, e.g., Notepad.
- 2. Add the following lines:

3. Replace <code>dllPath</code> by the relative paths to the directories containing the 32-bit and 64-bit pylon DLLs. Delimit each directory path with a semicolon. Each path must be relative to the directory containing the application's executable files. You can use the double-dots specifier to denote the parent directory of the current directory.

Example: Assuming the following target directories are set (sample values):

- Executable files: C:\Program Files\Grab\bin\
- 32-bit pylon DLLs: C:\Program Files\Grab\dll\pylon32\
- 64-bit pylon DLLs: C:\Program Files\Grab\dll\pylon64\

In this case, you must replace dllPath by ..\dll\pylon32;..\dll\pylon64.

- 4. Save the file with the same file name as your application's executable and with a **.config** file extension, e.g., save it as Grab.config.
- 5. If your application is available in 32-bit and 64-bit versions, save the file again with the file name of your 64-bit executable file, e.g., Grab64.config.
- 6. Set up your installation routine to copy the **.config** file(s) to the directory containing your application's executable file(s).

3.3.5.3 Embedding the Manifest

After you have created the **.manifest** and **.config** files, you must embed the manifest in the source code of your application.

To embed the assembly manifest in your application project:

- 1. Open your application project in an IDE, e.g., Visual Studio.
- 2. If your application is available **only** in a 32-bit version or **only** in a 64-bit version:
 - a. Add the following lines at the beginning of your application's source code:

```
#pragma comment(linker,"/manifestdependency:\"type='win32' name='assembLyName' \
version='1.0.0.0' processorArchitecture='procArch' \"")
```

b. Replace assemblyName by the name of your assembly, e.g., Grab. Assembly.

Replace procArch by x86 for a 32-bit application or by amd64 for a 64-bit application.

Note: type must always be win32, also for 64-bit applications.

- 3. If your application is available in **both** 32-bit and 64-bit versions:
 - a. Add the following lines at the beginning of your application's source code:

```
#if defined _M_IX86
#pragma comment(linker,"/manifestdependency:\"type='win32' name='assemblyName32' \
version='1.0.0.0' processorArchitecture='x86' \"")
#elif defined _M_X64
#pragma comment(linker,"/manifestdependency:\"type='win32' name='assemblyName64' \
version='1.0.0.0' processorArchitecture='amd64' \"")
#endif
```

- b. Replace assemblyName32 by the 32-bit assembly name (e.g., Grab.Assembly)
- c. Replace assemblyName64 by the 64-bit assembly name (e.g., Grab64.Assembly).
- 4. Build all versions of your project and deploy the newly created builds.

AW00136206000 Revision History

Revision History

Document Number	Date	Changes
AW00136201000	06 Nov 2015	Initial release of the document.
AW00136202000	02 May 2017	Added Basler.Pylon.dll in Table 2 on page 4.
AW00136203000	10 May 2017	Removed information about camera interface-specific runtime redistributable packages in Chapter 1 on page 1 and Chapter 2 on page 2.
AW00136204000	06 Nov 2017	Added required files in Table 2 on page 4.
AW00136205000	12 Jun 2018	Updated file names throughout the document.
AW00136206000	12 Feb 2019	Updated file names throughout the document.