Stack Based Architecture Design Document

Team 2v: Luke McNeil, Jinhao Sheng, Austin Swatek

Processor Overview: Stack-based


Two stacks of 64 registers:

- 1. Generic computations
- 2. Keeping track of function return values

LIFO function calling

- 1. Caller pushes the arguments that the callee expects to Stack 1
- 2. Callee pops arguments off the Stack 1
- 3. Callee operates, then pushes return values back to Stack 1
- 4. Callee pops return address off Stack 2
- 5. Callee jumps to return address

Design of the Datapath

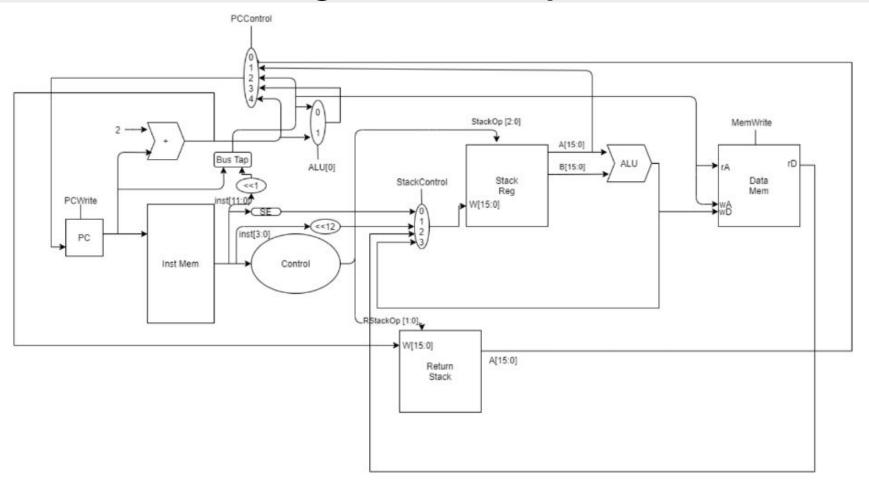

Instruction Types

- O-Type
 - Add
 - o Sub
 - o Dup
 - Swap
- A-Type
 - Push
 - o Pop
 - o JAL
 - o BEZ

| Format Type | Size | Structure | Description |
|----------------|---------|------------------|--|
| 0 | 2 bytes | OP 4 FUNCT 12 | OP - basic operation of the instruction FUNCT - sets the variant of the operation This format type is used for instructions that take no arguments. |
| А | 2 bytes | OP 4 IMM/ADDR 12 | OP - basic operation of the instruction IMM/ADDR - a 12 bit constant or address This format type is for any instruction that takes one argument which is either an immediate or address. |

| Instructions | Format Type | Addressing Modes | |
|------------------|-------------|------------------|--|
| js, return | 0 | Direct | |
| j, jal, beq, bez | A | Pseudo-Direct | |

Direct:

• Given a 16-bit value from a register, the address to be jumped to is simply that 16-bit address.

Pseudo-Direct, from 12-bit instruction to 16-bit address:

- Left-shift the 12 bits, [11:0] by one, for 13 bits total: [12:0]
- Take the 3 MSB from \$PC and assign them to bits [15:13]
- This 16-bit number, [15:0], is now the address that will be jumped/branched to.

Memory

- Using Xilinx's block memory: blockmemory16kx1
- Instruction Memory
 - O Block for the instructions used in program, reads in a 16-bit address and outputs the 16-bit data at that address.
 - Stores the instructions that are going to be executed.
- Data memory
 - Takes in a 16-bit read address, 16-bit write address, and 16-bit data to write. Outputs 16-bit data from read address, writes only if MemWrite control bit is set.
 - Stores the data that is pushed by the programmer.

Control bits

PCControl, 3-bit: how PC will change

StackControl, 3-bit: determines input to stack


StackOP, 3-bit: determines stack operation

RStackOP, 2-bit: nothing changes, value is pushed, or value is popped

ALUOP, 4-bit: determines ALU operation

PCWrite, 1-bit: whether or not to write to PC


MemWrite, 1-bit: whether or not to write to data memory

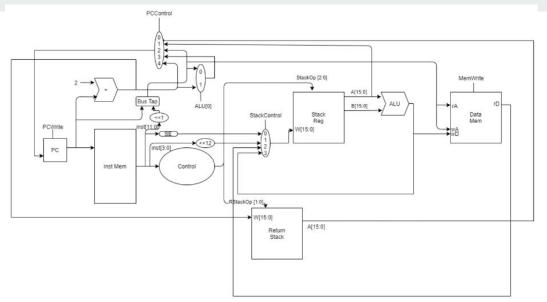

Assembler and Simulator

- Written in Chez Scheme
- Rel-prime example:
- Instructions are loaded in memory_small.coe

```
MAIN:
        getin
        ial RELPRIME
        halt
RELPRIME:
        pushi 2
RPLOOP:
        over
        over
        ial GCD
        pushi 1
        beg RETURNM
        pushi 1
        add
        i RPLOOP
RETURNM:
        swap
        drop
        return
GCD:
        over
        bez RETURNB
LOOP:
        dup
        bez RETURNA
        over
        over
        swap
        slt
        bez ELSE
        swap
        over
        sub
        swap
        1 LOOP
ELSE:
        over
        sub
        j LOOP
RETURNB:
        swap
        dгор
        return
RETURNA:
        drop
        return
```

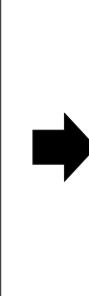

Performance of Relative-Prime

- Number of instructions in relprime 37
- Total number of bytes to store relprime 54

Input: 0x13B0

• Instructions: 122,357

• Cycles: 122,357

• Cycle Time: 17.44ns or 57.3Mhz

• Execution Time: 2.134 ms

| Device Utilization Summary (estimated values) | | | | | |
|---|------|-----------|-------------|--|--|
| Logic Utilization | Used | Available | Utilization | | |
| Number of Slices | 2028 | 4656 | 43% | | |
| Number of Slice Flip Flops | 2120 | 9312 | 22% | | |
| Number of 4 input LUTs | 3569 | 9312 | 38% | | |
| Number of bonded IOBs | 98 | 232 | 42% | | |
| Number of BRAMs | 8 | 20 | 40% | | |
| Number of GCLKs | 2 | 24 | 8% | | |

Changes We Would Like To Make

- Make it multi-cycle
- Add more instructions such as:
 - Non-destructive versions of add, sub, slt, and or
 - Immediate instructions like addi
 - More stack manipulation instructions

Fun Parts In Our Design

- Creating the register stack in verilog
- Being able to create such a simple datapath
- Writing programs in our instruction set