


Signal Computing: Digital Signals in the Software Domain

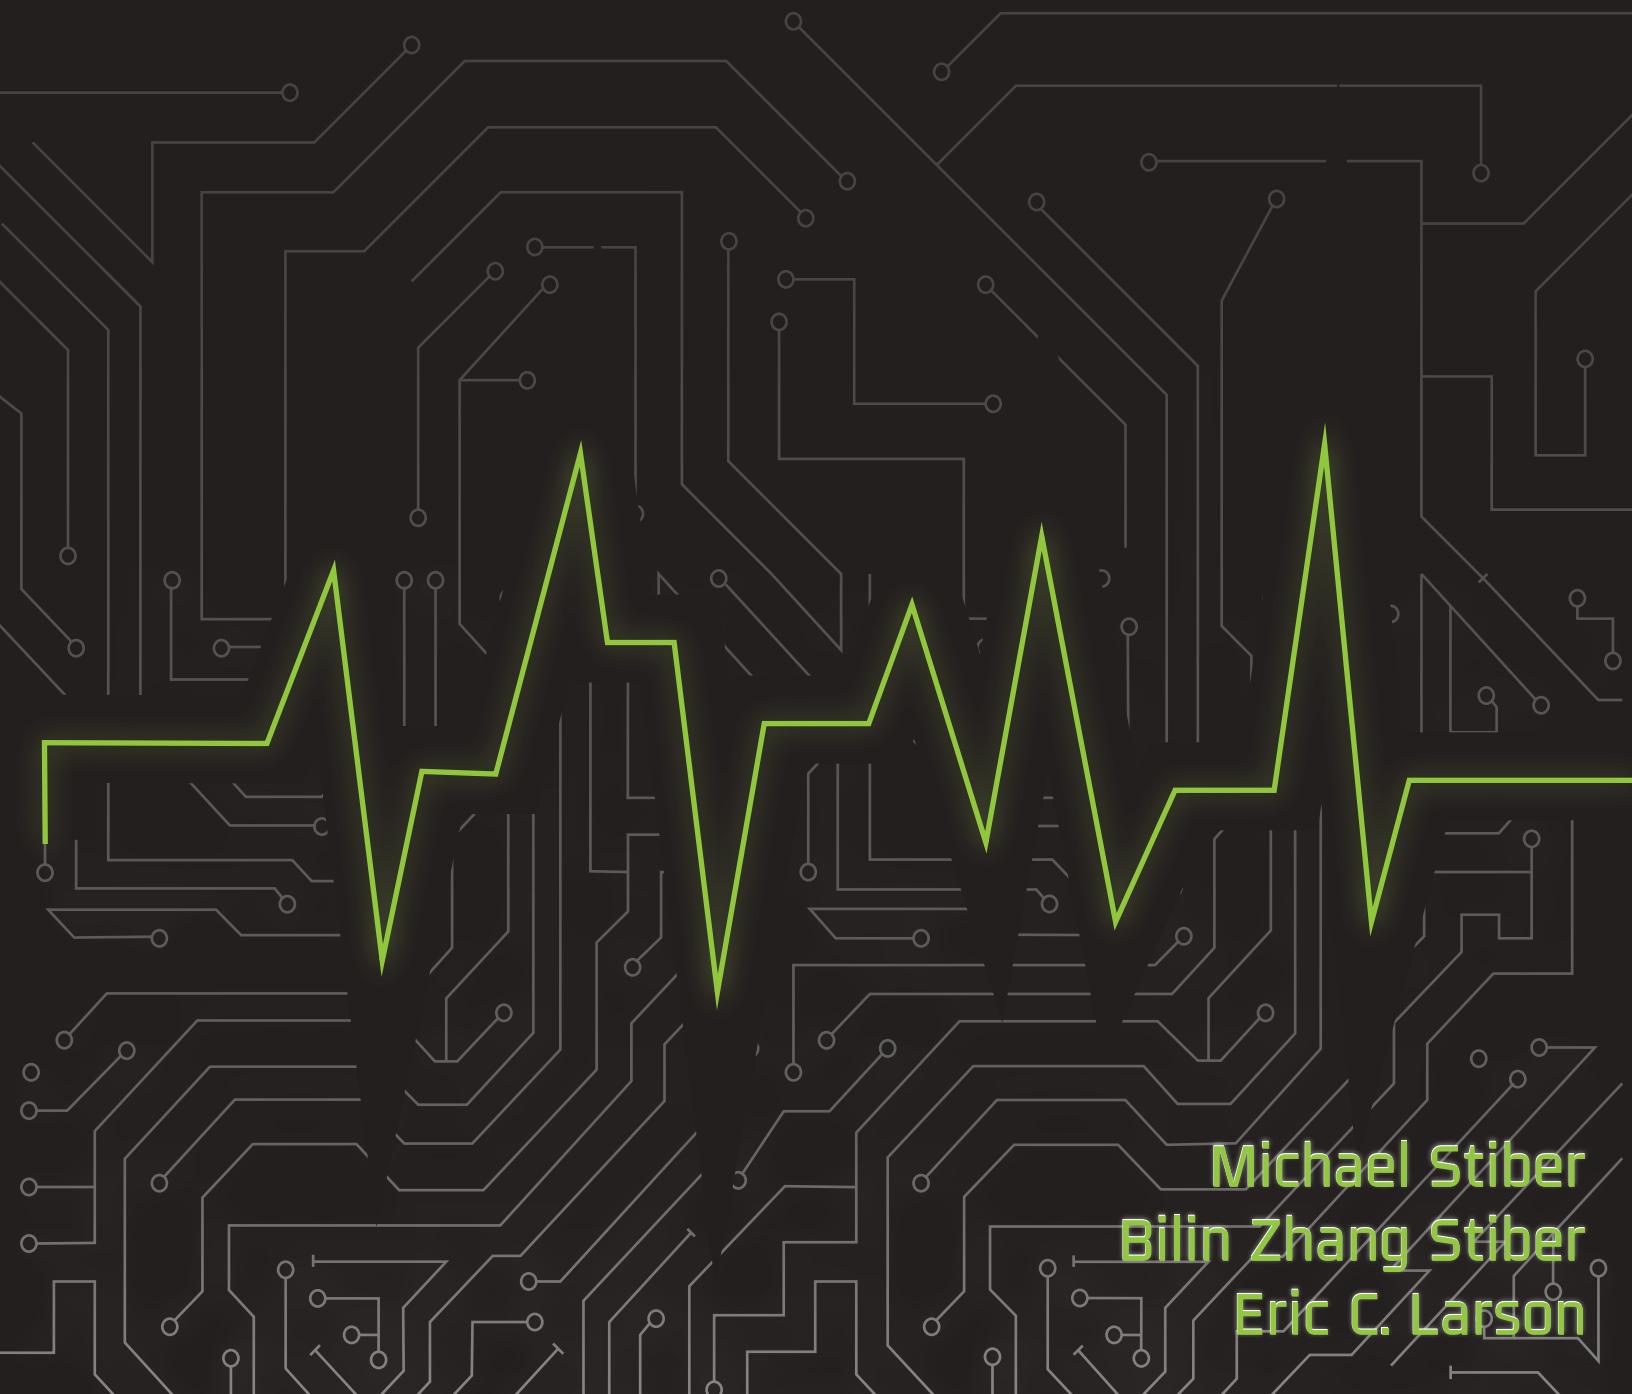

Michael Stiber
Bilin Zhang Stiber
Eric C. Larson

Signal Computing:

Digital Signals in the Software Domain

Spring 2020

Michael Stiber
Bilin Zhang Stiber
University of Washington Bothell
18115 Campus Way NE
Bothell, Washington 98011

Eric C. Larson
Southern Methodist University
Lyle School of Engineering
3145 Dyer Street
Dallas, TX 75205

Copyright © 2002–2020 by Michael and Bilin Stiber and Eric C. Larson

This material is based upon work supported by the National Science Foundation under
Grant No. 0443118.

Cover art by Eduardo Sainos.

This work is licensed under the Creative Commons Attribution-ShareAlike 4.0
International License. To view a copy of this license, visit
<http://creativecommons.org/licenses/by-sa/4.0/>.



Contents

Preface	xiii
Objectives	xiv
Prerequisites	xiv
About This Book	xvi
Typographical Conventions	xvi
Further Reading	xvii
1 Signals in the Physical World	1
1.1 Multimedia and Sensation	1
1.2 Sensation and Perception	2
1.3 Computer Video Displays	4
1.4 Multimedia System Operation	5
1.5 Vibrations and Sound	6
1.6 Phasors	9
1.7 Spectra	14
1.7.1 Interlude: Vectors	15
1.7.2 Derivation of the Fourier Series	17
1.8 Problems	25
1.9 Further Reading	29
2 Signals in the Computer	31
2.1 From the physical to the digital	31
2.2 Measuring Noise	32
2.3 Sampling	33
2.3.1 Aliasing	35
2.4 Quantization	38
2.5 Dynamic Range	41
2.6 Periodic and Aperiodic Signals	41
2.7 Problems	42

2.8	Further Reading	43
3	Filtering and Feedforward Filters	45
3.1	Introduction	45
3.2	Feedforward Filters	46
3.2.1	Delaying a phasor	46
3.2.2	A simple feedforward filter	47
3.2.3	Digital Filters	50
3.2.4	Delay as an Operator	52
3.2.5	The z-plane	55
3.2.6	Phase Response	59
3.2.7	Implementing Digital Filters	62
3.3	Problems	64
3.4	Further Reading	65
4	The Z-Transform and Convolution	67
4.1	Domains	67
4.2	The z-transform	68
4.2.1	Example: z-transform of an impulse	69
4.2.2	Example: z-transform of exponential signal	70
4.3	Convolution	75
4.3.1	Example of Convolution	75
4.3.2	Implementing Convolution	76
4.4	Properties of the Z-Transform	79
4.4.1	Example: Time Shifting	80
4.4.2	Example: Convolution	80
4.5	Impulse Response and the Transfer Function	82
4.6	Problems	83
4.7	Further Reading	83
5	Feedback Filters	85
5.1	Introduction	85
5.1.1	Poles	85
5.1.2	Example: Computing Transfer Function and Impulse Response	88
5.1.3	Stability	88
5.1.4	Resonance and Bandwidth	91
5.2	Mixing Feedback and Feedforward Filters	95
5.3	Implementation	95
5.3.1	Avoiding Complex Numbers	96
5.3.2	Limitations of Numerical Accuracy	97
5.4	Problems	99
5.5	Further Reading	99

6 Spectral Analysis	101
6.1 The Fourier Transform	101
6.1.1 Example: Fourier transform of a rectangular pulse	102
6.2 The Discrete Fourier Transform	104
6.2.1 Derivation of the IDFT [OPTIONAL]	106
6.2.2 Finite vs. Infinite Signals	107
6.2.3 Properties of the DFT	107
6.2.4 Computing the DFT Directly	111
6.2.5 The Fast Fourier Transform Algorithm	112
6.3 The inverse DFT	118
6.3.1 Example: Sum of Two Sinusoids	119
6.4 Power Leakage [OPTIONAL]	120
6.5 Tradeoff Between Time and Frequency Resolution [OPTIONAL]	124
6.6 Windowing [OPTIONAL]	128
6.7 Problems	134
6.8 Further Reading	135
7 Compression	137
7.1 Signals and Information	137
7.2 Entropy (Lossless) Compression	141
7.2.1 Repetitive Sequence Compression	141
7.2.2 Statistical Compression	142
7.3 Source (Lossy) Compression	144
7.3.1 Differential Compression	145
7.3.2 Transform Compression	146
7.4 Problems	147
7.5 Further Reading	148
8 Audio & Video Compression and Coding	149
8.0.1 Issues in Coding Method Selection	149
8.1 Audio Coding Standards	150
8.1.1 Speech Coding for Telephony	150
8.1.2 High-Quality Audio Coding	151
8.2 Still Image Coding Standards	153
8.2.1 JPEG	153
8.3 Video Coding Standards	159
8.3.1 MPEG Coding	159
8.4 Problems	161
8.5 Further Reading	162

9	Review and Conclusions	163
9.1	A Generic Digital Multimedia System	163
9.2	Compact Discs	163
9.2.1	Data Encoding	165
9.2.2	CD System Signal Processing	168
9.3	Conclusion	170
9.4	Further Reading	170
A	Answers to Self-Test Exercises	171
A.1	Chapter 1: Signals in the Physical World	171
A.2	Chapter 2: Signals in the Computer	173
A.3	Chapter 3: Filtering and Feedforward Filters	174
A.4	Chapter 4: The Z-Transform and Convolution	176
A.5	Chapter 5: Feedback Filters	178
A.6	Chapter 6: Spectral Analysis	178
A.7	Chapter 7: Compression	181
A.8	Chapter 8: Audio & Video Compression and Coding	182
A.9	Chapter 9: Review and Conclusions	182
Index		183

List of Figures

0.1 Course conceptual road map	xv
1.1 Schematic diagram of a CRT.	4
1.2 Interlaced and non-interlaced raster scanning	5
1.3 Real periodic signals	7
1.4 Components of a phasor are sinusoids.	9
1.5 Graphical summation of vectors.	10
1.6 Phasor representation of beating.	13
1.7 Amplitude vs. time representation of beating.	13
1.8 A train of periodic rectangular pulses	21
1.9 The sinc function.	22
1.10 First 12 terms in the Fourier series for a periodic sequence of rectangular pulses	24
1.11 First 100 terms in the Fourier series for a periodic sequence of rectangular pulses	25
1.12 Spectrum of a periodic sequence of rectangular pulses	26
1.13 Spectrum of a periodic sequence of rectangular pulses; varying pulse width . .	27
1.14 Spectrum of a periodic sequence of rectangular pulses; varying period . . .	28
2.1 Block diagram of the data acquisition process.	31
2.2 Sample and hold output	34
2.3 Sampling and apparent frequency	35
2.4 Error in output for 8-bit ADC	39
3.1 Four frequency components	46
3.2 Filter frequency response	47
3.3 A filtered signal	47
3.4 Unfiltered vs. filtered signal	48
3.5 A basic feedforward filter block diagram.	48
3.6 Treat transfer function as a black box.	55
3.7 Two zero filter $r = 0.9, \hat{\omega}_0 = \pm\pi/2$	58
3.8 Two zero filter $r = 0.9, \hat{\omega}_0 = \pm 5\pi/6$	58
3.9 Frequency response of two time delay feedforward filter	60

LIST OF FIGURES

3.10 Two sinusoid spectrum	64
4.1 The exponential signal $x[n] = (1/2)^n, n = 0, 1, 2, \dots$	71
4.2 Frequency content of the signal shown in figure 4.1.	72
4.3 Frequency content of the unit step signal.	73
4.4 Example of convolution function execution for $n_x = 5$ and $n_h = 2$	77
4.5 Convolution of $e^n * e^n$	78
5.1 Block diagram of a simple filter with both feedforward and feedback terms. .	85
5.2 One pole in the z -plane, located at $r = 0.9$ and $\hat{\omega}_0 = \pi/2$	87
5.3 Magnitude response of two filters	87
5.4 Block diagram of a filter with M feedforward and N feedback terms. . . .	90
5.5 One pole $a_1 = re^{j\hat{\omega}_0}$ in z -plane. $r = R$, $\hat{\omega}_0 = 0$ and $z = e^{j\hat{\omega}}$	92
5.6 Feedback filter design	94
5.7 Example filter frequency responses	96
6.1 A rectangular pulse with width τ	102
6.2 Fourier transform of the pulse in figure 6.1.	103
6.3 Fourier transform of a rectangular pulse for various width values	104
6.4 Plot of the sequence $x[n] = 0.8^n$ and the magnitude of its DFT	110
6.5 First half of DFT of $x[n] = 0.8^n$	111
6.6 Schematic outline of an iterative 8-point FFT	116
6.7 Sum of two sinusoids with 512 samples and its FFT	119
6.8 Sum of two sinusoids with 512 samples and its FFT; different frequencies .	120
6.9 Magnitude spectrum of windowed signal $x[n] = \cos \hat{\omega}_0 n$	122
6.10 Magnitude spectrum of a one-sided signal $x[n] = \cos \hat{\omega}_0 n$ with $\hat{\omega}_0 = 0.2\pi$. .	123
6.11 Magnitude spectrum of the signal (6-55) made up of three sinusoids	125
6.12 The same figure as 6.11, but with rectangular window length $N = 128$	125
6.13 Bird call waveform and spectrogram; window size 512 samples, overlap 511 .	127
6.14 Bird call waveform and spectrogram; window size 128 samples, overlap 127 .	127
6.15 Different bird call waveform and spectrogram; 512 sample window, overlap 511	129
6.16 Bird call waveform; 128 sample window, overlap 127	129
6.17 A 512-point Hamming window in the time domain.	130
6.18 The 512-point Bartlett window in the time domain.	130
6.19 Hann windowed cosine waveform and its spectrum	131
6.20 Bartlett windowed cosine waveform and its spectrum	132
6.21 Comparison between Hann and Bartlett windows for a cosine wave	133
6.22 Similar spectrogram as figure 6.14, but here a rectangular window is used. .	133
6.23 Similar spectrogram as figure 6.16, but here a rectangular window is used. .	134
7.1 Shannon's model for coding information for transmission.	138
7.2 A taxonomy of coding/compression schemes.	140
7.3 Generalized scheme for encoding.	140
7.4 Binary tree with prefix property code.	144

LIST OF FIGURES

8.1	Block diagram of JPEG encoder and decoder	154
8.2	Illustration of transform of 8x8 pixel block into 8x8 spectrum by DCT	155
8.3	Example 2D spectra	156
8.4	Example spectrum (right) of an 8x8 block taken from a natural image.	157
8.5	Entropy coding of JPEG DCT blocks	158
8.6	Simplified block diagram of an MPEG video source encoder	159
9.1	Block diagram of a generic multimedia system.	164
9.2	Simplified block diagram of a CD player.	168
9.3	Simplified oversampling filter.	169

LIST OF FIGURES

List of Tables

4.1	Summary of frequency transforms.	68
4.2	Some properties of the z-transform.	79
6.1	Some examples of how $\Delta\hat{\omega}$, $\Delta\omega = \Delta\hat{\omega}f_s$, and $\Delta f = \Delta\omega/2\pi = f_s/N$ change for signals of different duration and sampling rate.	106
6.2	Example of the effect of bit reversal on an eight-element input vector.	114
7.1	Two binary codes.	143
9.1	Part of the eight-to-fourteen modulation lookup table.	167

LIST OF TABLES

List of Algorithms

3.1	Generate two sinusoids.	63
3.2	Filtering.	63
4.1	Discrete convolution.	76
6.1	Recursive FFT.	114
6.2	Iterative FFT.	115

LIST OF ALGORITHMS

Preface

As computers have become ubiquitous, they have also become more and more embedded not only in the devices we own and use but in our lives. As a result, computers become embedded in the physical world, with their primary purpose being to detect and analyze happenings in our world and to produce responses that affect that world. As computing professionals, we need to understand how computers can process information from the physical world as *digital signals*: multimedia (sound, images, video) and other measurements (in medical instruments, cars, cell phones, eyeglasses, etc). This is why we have chosen to coin the phrase “Signal Computing”.

Digital signals place great demands on processing power, network bandwidth, storage capacity, I/O speed, and software design. As a result, signal computing is a great laboratory for exercising the full range of knowledge of computer science.

In this book, you will learn how digital signals are captured, represented, processed, communicated, and stored in computers. The specific topics we will cover include: physical properties of the source information (such as sound or images), devices for information capture (microphones, cameras), digitization, compression, digital signal representation (JPEG, MPEG), digital signal processing (DSP), signal analysis and feature extraction via re-representation as functions of frequency, and network communication. By the end of this book, you should understand the problems and solutions facing signal computing systems development in the areas of data structures and algorithms, data analytics, feature extraction, information retrieval, user interfaces, and communications.

While there certainly may be many opportunities for you to work in signal computing, the value of this study extends far beyond. Studying signal computing and its underlying mathematics directly exercises key computer science abilities in areas like abstraction and algorithmics. You will see that this book interleaves mathematical topics with applications and algorithms. At each step of the way, we take a representation of digital signals or operations on them that you are familiar with, reach a concept in which it is awkward or difficult to use, and then develop an alternative representation that simplifies matters. This is exactly what computing professionals do in their careers — identify that a problem at hand can be represented by some abstraction with known properties that can be manipulated by well-understood algorithms. We hope that the journey you take through the mathematical

PREFACE

abstractions here will not only give you an important set of tools to use later on, but will also help exercise your fundamental ability to move from one representation to another.

Beyond your own personal professional capabilities, we hope that this book will also give you a better understanding of the design process that electrical engineers go through when they design the details of signal processing systems, such as filters. Even if you do not go on to build software components that perform signal processing, there is a good chance that you will work on large systems that have DSP components. We believe that it will be invaluable for you to understand the basics of how such DSP components work and what your electrical engineering colleagues are working on.

Objectives

By the end of this book, you should know:

- What physical signals are like in the “real” world and how their properties affect how we perceive them.
- How these signals are *digitized* and the tradeoffs among sampling speed, levels of quantization, file size, etc.
- How to perform simple signal filtering to remove noise, emphasize important features, etc. You should be well-prepared to work with electrical engineers in the design of more advanced signal processing systems.
- How to carry out simple time-series analysis techniques to analyze frequency and characterize unknown signals.
- How multimedia file sizes can be reduced by compression, and the tradeoffs among compression, processing overhead, and media quality.

Prerequisites

This book covers much of the mathematical foundations for understanding signals and signal processing; however, it is assumed that you are familiar with topics such as complex numbers, trigonometry, derivatives, vectors, the basic idea of integrals, infinite series, and basic physics (mass, acceleration, force, etc). Figure 0.1 shows these prerequisites in the context of this book’s chapters.

Figure 0.1 also outlines how each chapter’s concepts are used by subsequent ones and what the major themes are. You’ll notice that there’s not much in the way of programming indicated. While there *is* an expectation that you understand the basics of computational complexity and can understand, appreciate, and analyze algorithms, this is *not* a programming book. Instead, this is a book that makes concrete many of the previously abstract mathematical concepts that you are familiar with. It shows how these concepts relate to *real*

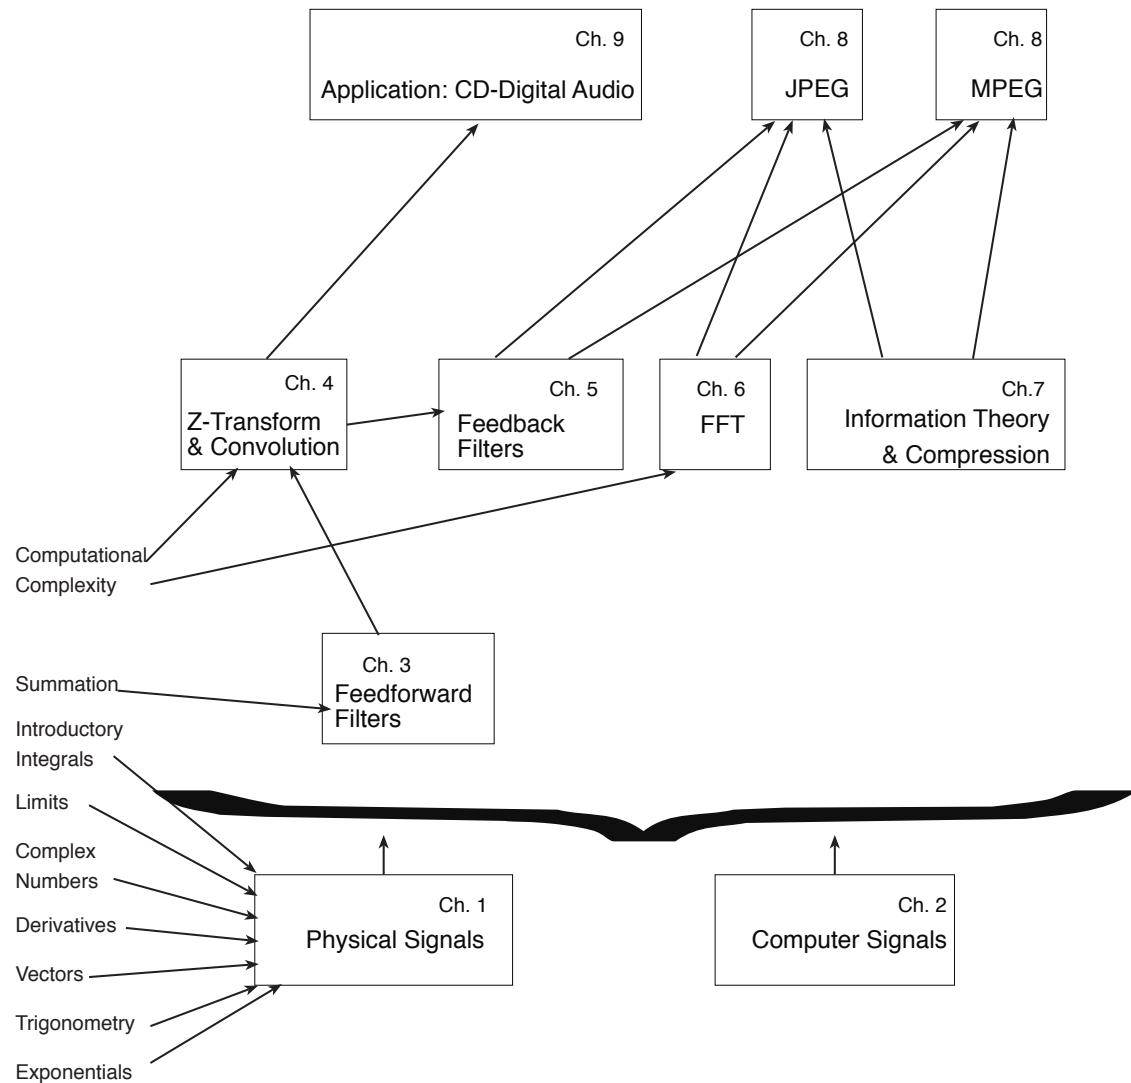


Figure 0.1: Course conceptual road map and background knowledge.

PREFACE

applications that produce tangible changes on digital signals — it connects *mathematics* to *bits*.

In the past, this book has been used in a wide range of signal computing courses, from those that place little emphasis on programming, to some that required an online, free tool known as Java Digital Signal Processing (J-DSP), and in others that used C++ or the Java Media Framework.

So, this book and the concepts within can be learned without any explicit knowledge of low level programming in languages like C, C++, or Java. However, we also provide problems for students that have varying levels of programming expertise (for example, you may have already taken an algorithms or data structures class). If you have some programming expertise, we provide problems that use Matlab, and we include some Matlab code on the textbook website to help get you started. If you have more experience in programming, we provide problems asking you to write small programs in your choice of a “lower level” language (such as C, C++, or Java).

About This Book

This book is divided into nine chapters. Chapters include self-test questions and review exercises scattered throughout, so we suggest that you go through all the material sequentially (or, at least, do the self-test exercises in each section). Answers are provided at the back of the book. Each chapter concludes with written or programming assignments and pointers to additional readings.

If you read the PDF version of this book, you will find that it is extensively hyper-linked. This includes links from exercises to their answers, links to resources on the web, and links from the table of contents, list of figures, index, etc. to their respective locations.

Rather than distribute this book via a traditional publishing model, costing you money and likely netting us very little, we have decided to make this book freely available for both students and faculty. Moreover, we have opened the source material for re-use, updating, and expansion via a Creative Commons Attribution-ShareAlike 4.0 International License. This not only benefits you, it also benefits us by getting our work into more people’s hands. You can find the book’s website at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/>, including a pointer to its source material on GitHub. If you find any errors, make any changes, or find this book useful in your course or your life, please email us at stiber@uw.edu, or send us a pull request.

Typographical Conventions

There are no real “standards” for much of the notation that is used in digital signal processing; depending on which textbook you read, you will encounter different typographical conventions. In this textbook, we have chosen the following:

j	$\sqrt{-1}$
t	continuous time; units typically seconds
$x(t)$	a real-valued function of continuous time (physical signal)
f	continuous frequency; units cycles/second or Hertz (Hz)
T	an interval of time; often $T = 1/f$, meaning the period of a signal
f_0	a particular frequency; subscript may vary depending on use
ω	continuous angular frequency; units radians/second
ω_0	a particular angular frequency; subscript may vary depending on use
ω'	apparent (continuous angular) frequency, as a result of aliasing
n	discrete time or sample number; dimensionless, but you can think of the units as being “samples”
$x[n]$	a function of discrete time; may be real-valued (sampled signal) or discrete valued (quantized/digital signal)
\hat{f}	discrete frequency; units cycles/sample
\hat{f}_0	a particular discrete frequency; subscript may vary depending on use
$\hat{\omega}$	discrete angular frequency; units radians/sample
$\hat{\omega}_0$	a particular discrete angular frequency; subscript may vary depending on use

Further Reading

An excellent introduction to digital signal processing that is targeted at beginning electrical engineering students is *DSP First: A Multimedia Approach*, by James H McClellan, Ronald W. Schafer, and Mark A. Yoder (Prentice Hall, 1998). It is important to note that that book’s target is the design of low-level signal processing components (i.e., filters) and more generally linear, time-invariant systems, rather than the role such components play in overall software systems.

PREFACE

1

Signals in the Physical World

This chapter introduces the fundamental concepts of multimedia from an “outside the computer” perspective. We define the term “multimedia,” discuss why it is an important issue, how multimedia signals (sound, images) are generated in the “real world” (by both natural and artificial means) and how we perceive them. We also introduce a set of convenient mathematical tools for describing signals. When you are done with this chapter, we hope you will appreciate the complexity and importance of multimedia communications and will be eager to see how signals can be processed by computer.

1.1 Multimedia and Sensation

“What can give us surer knowledge than our senses? With what else can we better distinguish the true from the false?” *Lucretius*

Humans, like any other organisms, depend on their senses to provide information critical to their development and survival. Over time, life has evolved sophisticated systems for capturing information about the physical world. The first senses were almost certainly chemical — what we would call taste or smell. These senses have a number of drawbacks: they typically require close physical presence or even direct contact, they have poor temporal resolution (you can tell that someone was cooking onions, but not *when*), and they have poor spatial resolution (from where is that bad smell coming?). Other senses — hearing, seeing, electrical senses that fish have, magnetic senses that birds have — allow us to gather information remotely from the information source.

Given all this, it is perhaps not surprising that people find computer systems difficult to use, uninspiring, or even objects of distaste. Computers by and large produce a very impoverished set of stimuli, composed almost entirely of patterns of light that we must interpret as text (when people use devices that provide a richer experience, such as tablets or smartphones, they often mentally categorize them just that way: as *devices*, not *computers*). It is only fairly recently that computers have done much more than this, as processing power and hardware speed has enabled *multimedia* capabilities (though these are almost always used to imitate other appliances, like televisions, telephones, photo albums, etc., rather than to produce new things). The goal of making computers more “human friendly,” then, depends on our ability to process multimedia information digitally, and to do so in a *useful*

1. SIGNALS IN THE PHYSICAL WORLD

fashion. But what is useful? The answer to this question depends on the user, and central to the user is how his or her sensory system works.

1.2 Sensation and Perception

Regardless of the sensory *modality*, all senses have one thing in common: they are composed of cells which are responsive to some property of the physical world and whose responses are *interpreted* by a nervous system to *construct a model* of the world. In other words, the world does not “look” like our perception. Our perception is a *construct*; an interpretation.

For example, consider sight. Our environment is constantly bathed in a sea of radiation, which we can think of as sinusoidal waves of varying wavelength, ranging from very long (radio waves) to very short (X-rays, gamma rays), and amplitude. Some of this radiation is absorbed by objects and some is reflected, depending on the objects’ properties. The “goal” of our visual system is *not* to provide us with information about reflected energy. Our visual system has evolved in tandem with the rest of our nervous system for the purpose of extracting useful information about objects’ properties based on reflected radiation. In this respect, it is much like a remote-sensing satellite and ground data analysis system: we want to know about crop conditions, we gather reflected light data at a number of wavelengths, and then we analyze the data to produce a report on crop conditions. We don’t really care about the reflected light; it is merely a means to an end.

Likewise, when we “see” a chair, what we perceive is no more a chair than the word “chair” is a chair. It is an *internal representation* of a chair — a useful representation, which can allow us to recognize the object’s purpose, location, size, composition, etc., but a representation nonetheless. What we perceive about the world is at least as much a psychological issue as a data acquisition one. For brevity’s sake, however, we will confine ourselves in this section to discuss the basics of “low-level” sensory organs, rather than high-level perceptual issues.

Our eyes are made up of an optical system and a sensory system. The sensory system — the *retina* — is composed of a number of different kind of nerve cells arranged in well-structured layers. We won’t go into the details of the eye’s structure, but instead concentrate on one class of cells: the *photoreceptors*.

Photoreceptors are specialized cells that contain pigments that absorb light and respond electrically (to make a complex matter simple). Each pigment is responsive to a fairly narrow range of light wavelengths, and in total, we can see a range of *visible light* with

Important Terms:

color constancy our ability to perceive object color independent of light source qualities.

cone a *photoreceptor* that supports color vision.

luminance measure of visible light strength.

photoreceptors sensory cells in the *retina*.

retina Layer of sensory and other neurons at the back of the eye.

rod a *photoreceptor* that supports low-light-level vision.

trichromatic vision construction of color sensation from measurement of three primary colors.

1. SIGNALS IN THE PHYSICAL WORLD

wavelengths between roughly 400 nanometers (400×10^{-9} meters) and 700nm — this from an electromagnetic spectrum that covers 1×10^{-6} nm to thousands of kilometers.

Our eyes have photoreceptors specialized for color vision at high (daytime) light levels (called *cones*) and photoreceptors specialized for low (nighttime) light levels (called *rods*). There are three cone types, each with a pigment sensitive to a different range of light wavelengths. These are usually termed red, green, and blue, though the correspondences to these colors is not exact. The fact that our visual system combines measurements of three “colors” of light to form our perception of color is known as *trichromatic vision*.

We do *not* experience light as a set of intensity (*luminance*) measurements at a variety of light wavelengths, however. We experience light as having *color*. Color is a complex psychological issue, and it is still not understood exactly how this is achieved. A simple proof-by-contradiction of the idea that the color we see is the “color” of the light hitting our eyes is the observation that we see objects as having the same color under a wide range of lighting conditions (morning sunlight, afternoon sunlight, incandescent lighting). In each of these circumstances, the light reflected from the objects around us is very different because the illuminating light is different. The fact that our perception of color is more characteristic of the objects’ surface properties than the illuminating light is called *color constancy*. Again, our perceptual system acts to give us information about *things*, not measurements of incoming data.

Similar observations can be made of our sense of hearing. Sound is made of moving waves of varying air pressure, in a manner analogous to ripples on a pond. These waves are eventually transduced by auditory neurons, each sensitive to a relatively small range of frequencies (low pitched sounds, high pitched sounds — the full range of audible sounds). Yet, we do not perceive a set of signal strengths, just as we don’t for light.

Even more extraordinarily, though our sensors for sound and light are distinct and very different, we don’t have separate sensations of hearing and vision. Instead, we perceive the world as a unified whole, with sound and appearance being properties of the objects around us. Our brains *fuse* the incoming sensory stimuli and *construct* a *synthetic* experience.

All of the foregoing is of course a great simplification of how these systems actually work. However, these issues have great impact on the design of computer multimedia systems, because the main point of such systems is delivering a particular user experience. In the following sections, we will outline first how computer systems can generate images, then delve deeper into how we can develop a more precise, mathematical view of sound. This mathematical view will be essential to our understanding of computer representation and manipulation of multimedia information.

When we eventually want to represent physical signals in the computer, perception of the signals will play an even more vital design role. For instance the sensors we use to capture light and sound are not nearly as advanced as the human eye or human ear. They contain various forms of noise that corrupt the *integrity* of the signal. The difference between how we perceive *physical signals* and how we perceive signals that have been *captured by different sensors* will be of great importance to us. We will return to this concept later on.

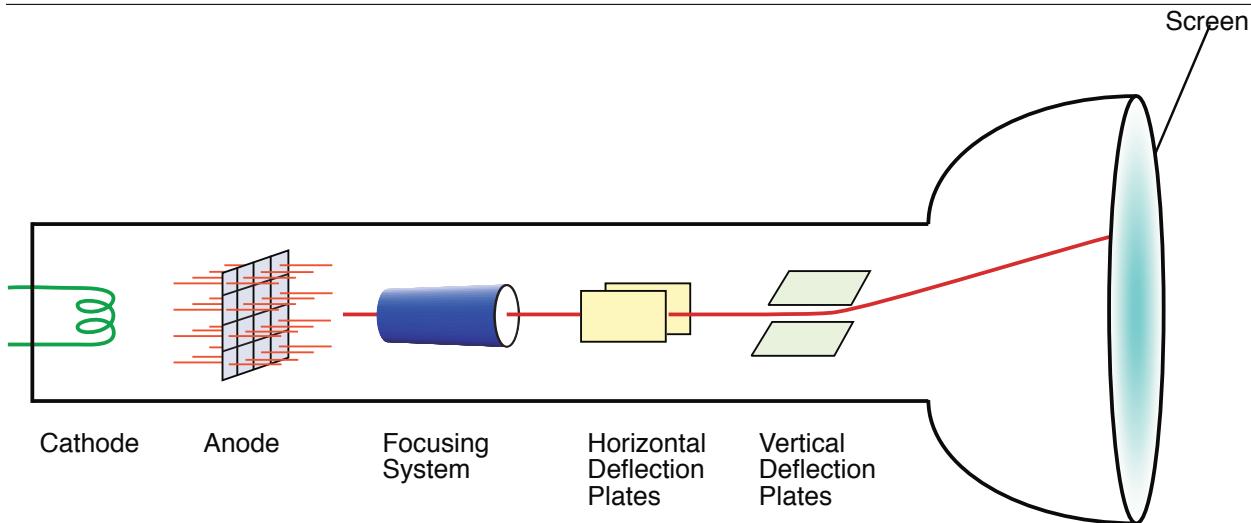


Figure 1.1: Schematic diagram of a CRT.

1.3 Computer Video Displays

The two most prevalent computer displays are *cathode ray tubes* (CRTs) and *liquid crystal displays* (LCDs); we'll just discuss CRTs here (while they are becoming rarities, their operation is more accessible for our purposes here). A simplified CRT is sketched in figure 1.1. It is composed of an *electron gun*, which generates *cathode rays* (aka, “electrons”). In this gun, a metal cathode is heated to cause electrons to “boil off;” they are accelerated toward the screen by a positively-charged anode (or possibly by charging the screen itself), which attracts the negatively-charged electrons. In between the anode and the cathode is a negatively-charged control grid. By varying the charge on the control grid, the intensity of the beam can be varied in a manner analogous to the way that a faucet valve controls the flow of water.

After leaving the electron gun, the flow of electrons is focused into a narrow beam by an electrostatic or magnetic focusing system. The focused beam then passes by deflection plates, which can “steer” the beam magnetically to hit any part of the screen.

The screen itself is coated with one (for B&W) or more (for color) *phosphors*: chemicals which glow (emit visible light) when struck by electrons. Different phosphors emit different light wavelengths, and so multiple phosphors can be used to produce the perception of color images (typically by combining red, green, and blue phosphors). Another property of phosphors is *persistence*: how long it will glow after an impinging electron beam is removed. Low persistence phosphors will require that the screen image be *refreshed* more often (by repainting the screen with the electron beam); otherwise, the display will flicker. On the other hand, a high persistence phosphor will glow longer, and so will produce blurry moving images.

So, how can we “paint” a two-dimensional image with an electron beam that only creates a single spot on the screen? We do this by *raster scanning* the beam, as shown in figure 1.2.

1. SIGNALS IN THE PHYSICAL WORLD

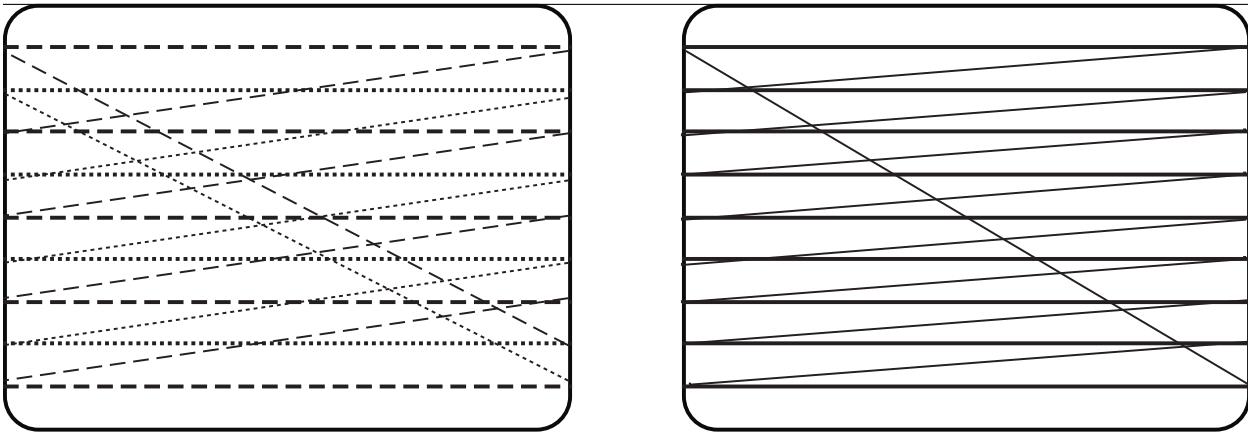


Figure 1.2: Interlaced (left) and non-interlaced (right) raster scanning.

The horizontal and vertical deflection systems work in concert with the control grid to move the beam across the screen while varying its intensity. When the beam moves across the screen horizontally, its intensity is varied in proportion to the desired light intensity. While the deflection system resets to the beginning of the next horizontal line, the beam is turned off. This is called *horizontal retrace*.

Subsequent lines are painted on the display in a similar manner until the bottom of the screen is reached — this is one *frame*. At that point, the beam is turned off and the deflection system resets itself to the beginning of the top screen line; a process called *vertical retrace*.

For computer displays, a frame is usually displayed in between 1/60 and 1/80 of a second (though some displays have higher refresh rates). Typically, such displays are non-interlaced (figure 1.2, right). Analog televisions, on the other hand, have interlaced displays (left). Interlaced raster scanning involves painting all of the odd scan lines in about 1/60 of a second, then a vertical retrace, and a painting of the even lines. This allows the TV 1/30 of a second to display an entire frame and yet still presents a flicker-free image (because every other line is refreshed every 1/60 of a second).

This explains how a greyscale display works. But, what about color? A color display requires three different phosphors, usually considered to be red, green, and blue (RGB). In color monitors, three electron guns are used — one dedicated to each color. The guns are aligned so that their beams strike slightly different spots on the screen. The three phosphors are laid down in a pattern so that each color gun's beam will hit the appropriate phosphor for each pixel. By varying the intensity of each beam appropriately, control of the relative mix of the three primary colors (and thus the perceived color) and the overall brightness is possible.

1.4 Multimedia System Operation

Multimedia systems need to support four basic functions:

1. SIGNALS IN THE PHYSICAL WORLD

1. They must support appropriate user *perception* of the media — provide output media and represent (code) media in such a way that the output seems natural.
2. They must be able to *retain* media — store it and provide efficient access (perhaps in a database).
3. They should allow users to *reason* about media information. If the goal is greater than a digital television or radio, then users must be able to manipulate the media.
4. They must be capable of *transmitting* media between machines. This can have significant impact on networking, resource allocation, and synchronization of activity across geographically distributed computer systems.

All of these place a high demand on computer power. For example, let's assume that we encode audio information as 8 bits per sample at 8000 samples per second (this would be considered very low quality). How many bits per second is that (answer in [A.1 #1](#))? Perhaps that doesn't sound too bad, so let's consider video. Let's say we encode each frame in a video stream as 1000x1000 pixels, 24 bits/pixel, and 30 frames/second. How many bits per second is that (answer in [A.1 #2](#))? Even if we were to achieve an extremely high compression ratio of 1/500, this would still mean more than 1 million bits/second.

On the one hand, we can attack this problem through faster hardware. But you should be well aware by this time that the difference between a good algorithm and a bad one can be the difference between an application which places very little load on a modest CPU and one which takes all the power of a supercomputer. That is what we will be focusing on here: developing the mathematical underpinning for developing efficient multimedia signal processing algorithms.

1.5 Vibrations and Sound

For much of this book, we will focus on sound when talking about signals. The reason we do this is that sound is simpler than video. Sound is a one-dimensional function of time (amplitude versus time), while video is at least a three-dimensional function of time (intensity at each x and y pixel location as a function of time for greyscale; R, G, B values at each x and y pixel location as a function of time for color).

Sound is carried by pressure waves in the air. These pressure waves can be generated by a variety of different sources. Ideally, the human ear responds to anything that vibrates between about 20 Hz and 20 kHz. A stereo speaker in a home theater system generates sound by vibrating a flexible cone. The human vocal tract generates sound by rapidly opening and closing a muscle called the glottis as air passes through it from the lungs. Musical instruments resonate at specific frequencies depending on the width and length of strings or pipes.

In nature, sound is the result of a chaotic mix of events. It may at first seem surprising, then, that most sounds occurring in nature *repeat* (usually hundreds or thousands of times per second). Figure 1.3 shows graphs of sounds generated from a tuning fork and the vocal

1. SIGNALS IN THE PHYSICAL WORLD

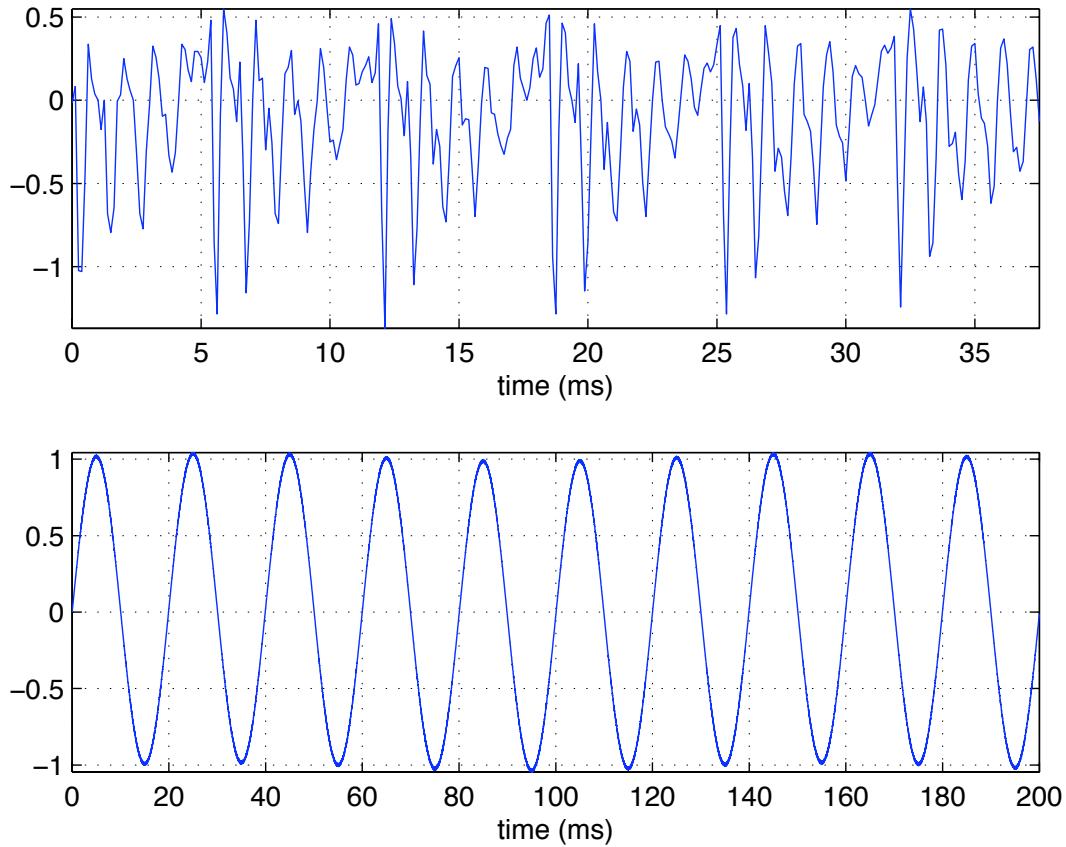


Figure 1.3: Real periodic signals. Top: human speech of the vowel ‘a’ as in ‘bat.’ Bottom: ringing of a tuning fork.

tract (the sound ‘a’, as in bat). In each case, notice that some portion of the wave repeats; repeating signals are commonly called *periodic*. This phenomenon has spurred scientists and mathematicians to develop standard means of representing periodic signals.

As we will see, it turns out that any periodic signal can be represented as a weighted sum of *harmonically* related sines and cosines (sinusoids at frequencies that are integer multiples of each other). If a periodic signal has a period of T_0 (where period is merely the reciprocal of frequency, so $T_0 = 1/f_0$), it can be represented by a weighted sum of sinusoids at harmonics of T_0 , namely sinusoids with periods of $T_0, \frac{1}{2}T_0, \frac{1}{3}T_0, \frac{1}{4}T_0, \dots$. This is potentially very powerful! It means that if we know the period of any repeating function, we can represent it by a discrete set of weights (one weight for each harmonic).

Each weight tells us exactly how much to multiply by each harmonic, and thus, how much of a certain frequency is present in a given signal. By graphing the weights of each harmonic versus the frequency, we can analyze the frequency content of the signal. This is commonly known as the Fourier Series (we will discuss this later).

1. SIGNALS IN THE PHYSICAL WORLD

The reason sines and cosines occur so often in nature is due to the physics of the way objects vibrate. When an object is acted on by a force, the way the object moves (its displacement) is a function of its velocity and acceleration. When solving for the exact displacement equation, $x(t)$, we often end up with an equation of the form,

$$\frac{d^2x(t)}{dt^2} = -Cx(t) \quad (1-1)$$

where C is some constant and $\frac{d^2x(t)}{dt^2}$ is the acceleration of the object. This kind of equation — which relates a derivative of something to itself — is called a *differential equation*. We bet you didn't know they were that simple! To *solve* a differential equation, we look for a function, $x(t)$, that will satisfy the equation. This is analogous to solving an algebraic equation, where we look for a number that can be substituted for a given variable. The only difference is that numbers fall along a one-dimensional number line (unless we're talking about complex numbers), while there is no such neat number line for all possible functions. So, we need to find a function, $x(t)$, whose second derivative is proportional to itself. Can you think of one or two (answer in A.1 #3)?

Luckily, people have been working with functions and differential equations for a while, and so finding such functions is not difficult. For example, consider sinusoids. The first and second derivatives of $\sin \omega t$ are:

$$\frac{d}{dt} \sin \omega t = \omega \cos \omega t \quad (1-2)$$

$$\frac{d^2}{dt^2} \sin \omega t = \frac{d}{dt} \omega \cos \omega t = -\omega^2 \sin \omega t \quad (1-3)$$

Therefore, differential equation (1-1) describes *simple harmonic motion*: sinusoidal vibration of a simple object. Sinusoids occur naturally in the real world when an object is acted on by a force! More complicated forces and objects result in more complicated differential equations, but they almost always involve sines and cosines.

Sinusoid Phase

Because sines and cosines are so powerful it is necessary to represent them as neatly and compactly as possible. Above we saw why $\sin \omega t$ occurs naturally. The same argument can be used for $\cos \omega t$. In fact, cosine is just a delayed version of sine, as $\cos \omega t = \sin(\omega t + \pi/2)$. So, a more general solution to (1-1) would be:

$$x(t) = \sin(\omega t + \phi) \quad (1-4)$$

In (1-4), ϕ is called the sinusoid's *phase*: the time closest to $t = 0$ when $x(t) = 0$ (for the case of a sine; it would be when $x(t) = 1$ for a cosine). Depending on *when* an object starts vibrating (and our time reference; the time that we call $t = 0$), we will get sinusoids of differing phase.

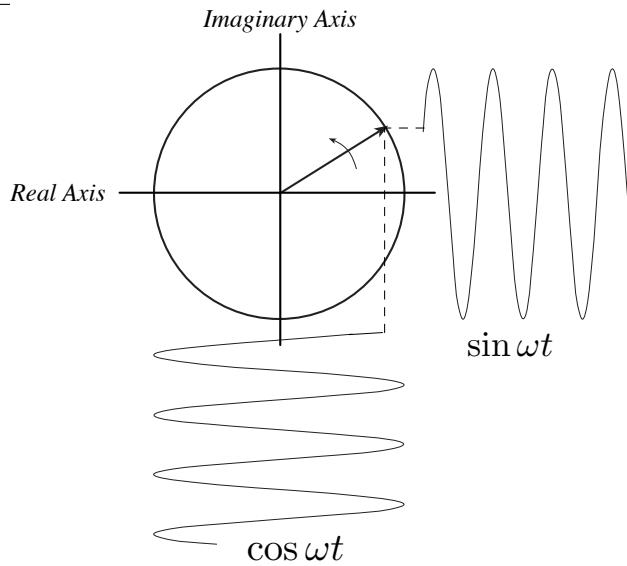


Figure 1.4: Components of a phasor are sinusoids.

Let's use tuning forks as an example. What would happen if we hit two identical tuning forks but at different times? They would vibrate at the same frequency, but would have differing phases and amplitudes (loudnesses). If the two forks were close together, we would hear the sum of their tones. What would that sum be (answer in A.1 #6)? Simplifying this sum would be involved; we would have to remember all sorts of trigonometric identities and then crank out the algebra. Luckily, we can come up with another representation of a sinusoid which simplifies this problem considerably. In fact, much of the new math we will cover in this course is primarily focused on making the paper-and-pencil work easier.

1.6 Phasors

Instead of thinking of a sinusoid as a function which oscillates up and down, let's think of it as something that goes round and round: a rotating vector of length a (where a is the sinusoid's amplitude). Think of this vector rotating around the origin of the x - y plane. At any point in time, the vector makes an angle $\theta(t)$ with the positive x axis. The phase, ϕ , is defined as $\phi = \theta(0)$ (i.e., the angle that the vector makes with the x -axis at $t = 0$). As figure 1.4 shows, the x and y components of the vector as it moves counterclockwise are cosine and sine functions.

If we have two vectors \mathbf{u} and \mathbf{v} , we can add them by adding their components. This is done graphically in figure 1.5 by placing the “tail” of one vector on the “head” of the other. The sum $\mathbf{u} + \mathbf{v}$ is the vector from the origin to the “head” of the second vector. Of course, that's just the sum at one point in time. What does $\mathbf{u} + \mathbf{v}$ look like if \mathbf{u} and \mathbf{v} are rotating at the same rate (answer in A.1 #7)?

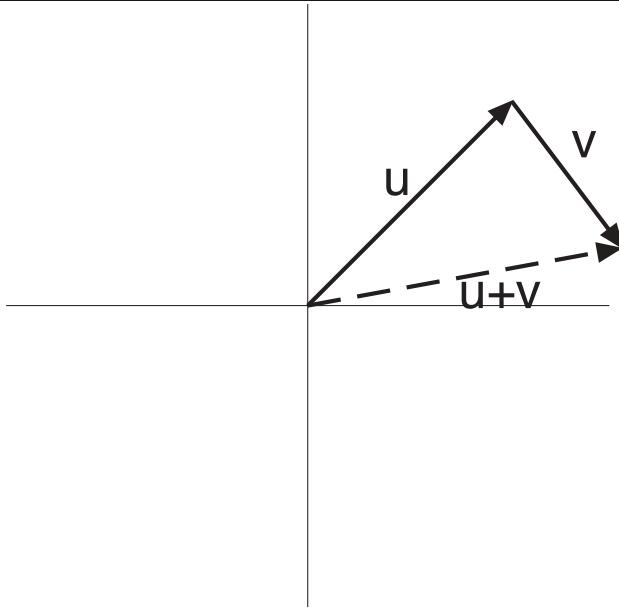


Figure 1.5: Graphical summation of vectors.

Complex Exponential Representation

While we used the x and y axes above as frames of reference (for considering components — sine and cosine — of the vector), we didn't actually define what the plane was. Let's imagine that our rotating vectors are in the *complex* plane, where x is the real axis and y is the imaginary axis. At any point in time, the location of a vector is therefore a complex number:

$$\mathbf{v} = x + jy \quad (1-5)$$

We use j here for $\sqrt{-1}$, rather than i as you've probably seen before, to adhere to the convention used by electrical engineers (who use i for current). This notation allows us to represent vectors in the complex plane as complex numbers.

Note that equation 1-5 is the *rectangular* representation of complex numbers; we can also represent them in polar form (magnitude and angle), written as $R\angle\theta$.

Review Exercises: Complex Numbers

1. What is the sum of the two complex numbers $x + jy$ and $v + jw$ (answer in A.1 #8)?
2. What is the product of the two complex numbers $x + jy$ and $v + jw$ (answer in A.1 #9)?
3. Convert the complex number $z = x + jy$ to polar form, $R\angle\theta$ (answer in A.1 #10).
4. Multiply the two polar-form complex numbers $R_1\angle\theta_1$ and $R_2\angle\theta_2$ (answer in A.1 #11).

So, we have an easier-to-manipulate representation of a vector *at one point in time*. But, we want to represent a *rotating* vector. Let's talk about a “standard” sinusoid — one with

1. SIGNALS IN THE PHYSICAL WORLD

unit amplitude — and let's call this $E(\theta)$. We know from our first discussion of the rotating vector representation that cosine and sine are the x and y axis projections of the vector, so let's rewrite our rectangular form in the complex plane as:

$$E(\theta) = \cos \theta + j \sin \theta \quad (1-6)$$

Can we rewrite the polar form in a similar way? We need a function of θ that satisfies the same requirements as the rectangular form of equation (1-6). The derivative of (1-6) is:

$$\frac{d}{d\theta} E(\theta) = -\sin \theta + j \cos \theta \quad (1-7)$$

We note that (1-7) is also just $jE(\theta)$, which is the original function times a constant. What function satisfies the condition that its derivative is proportional to itself?

$$E(\theta) = e^{j\theta} \quad (1-8)$$

$$\frac{d}{d\theta} E(\theta) = j e^{j\theta} \quad (1-9)$$

This is the *complex exponential* representation. It has the property that $e^{j\theta} = \cos \theta + j \sin \theta$; also called *Euler's formula* ("Euler" is pronounced "oiler"). It will make our work much simpler. For example, *raising the complex exponential to a power is equivalent to rotating the vector*:

$$E(\theta)^k = (e^{j\theta})^k = e^{j\theta} e^{j\theta} \cdots e^{j\theta} = e^{jk\theta} \quad (1-10)$$

As you can see in (1-10), raising $E(\theta)$ to the k^{th} power is equivalent to multiplying the angle θ by k in the complex exponential.

The complex exponential $e^{j\theta}$ has unit magnitude. The representation for a general complex vector $R\angle\theta$ is therefore $Re^{j\theta}$. So, we see that the sine and cosine representation is the rectangular form, and the complex exponential is the polar form.

$$E(\theta) = Re^{j\theta} \quad (\text{polar form}) \quad (1-11)$$

$$E(\theta) = R \cos \theta + j R \sin \theta \quad (\text{rectangular form}) \quad (1-12)$$

Self-Test Exercises

1. Multiply the two complex sinusoids z_1 and z_2 (answer in A.1 #12).
2. The complex conjugate is indicated by z^* . If $z = x + jy$, $z^* = x - jy$. What is the complex conjugate of the complex sinusoid, $z = Re^{j\theta}$ (answer in A.1 #13)?
3. Answer the following for $z = x + jy$ (answers in A.1 #14):
 - (a) What is $z + z^*$?
 - (b) What is $z - z^*$?
 - (c) What is zz^* ?

1. SIGNALS IN THE PHYSICAL WORLD

Going back to (1-10), we can now write an expression for a *complex sinusoid* as a function of time (a rotating complex exponential). The angle of the sinusoid is a function of time, $\theta(t) = \omega t$, where ω is its frequency (just as for our original sinusoids):

$$e^{j\theta(t)} = e^{j\omega t} \quad (1-13)$$

This rotating complex sinusoid is called a *phasor* (with apologies to Captain Kirk). The phasor representation is extremely powerful. Just as with sines and cosines, it turns out that *any periodic function can be written as a unique sum of phasors*. Notice that phasors are complex functions but that we can add them in special ways to represent completely real functions. For example,

$$\begin{aligned} f(t) &= e^{j\omega t} + e^{-j\omega t} \\ &= \cos \omega t + j \sin \omega t + \cos -\omega t + j \sin -\omega t && \text{Use Euler's formula} \\ &= \cos \omega t + j \sin \omega t + \cos \omega t - j \sin \omega t && \text{simplify } -\omega \\ &= 2 \cos \omega t \end{aligned}$$

where we have used odd and even symmetry properties of sinusoids, ($\sin -x = -\sin x$) and ($\cos -x = \cos x$). The function $f(t)$ was represented as a sum of complex exponentials but had no imaginary component! In fact, sinusoids are often represented using complex exponentials.

$$\cos x = \frac{e^{jx} + e^{-jx}}{2} \quad (1-14)$$

$$\sin x = \frac{e^{jx} - e^{-jx}}{2j} \quad (1-15)$$

Practical Example: Tuning a Guitar

When a person tunes a guitar, they usually tune just the lowest string to a reference (a pitch pipe, for example). Then, they finger that string to produce the same note that the next higher string should. If the second string does produce the same tone, they can hear that. If the second string is out of tune, it will produce a slightly different tone, and they can hear *beating*. Beating is what results when two sinusoids at different frequencies are added.

Previously, we added two sinusoids at the same frequency, and saw that the result is another sinusoid at that same frequency. That is the case when the second string is in tune. Let's now add two complex sinusoids with slightly different frequencies, ω and $\omega + \delta$, where the difference between the two frequencies is $\delta \ll \omega$:

$$\begin{aligned} a_1 e^{j\omega t} + a_2 e^{j(\omega+\delta)t} &= a_1 e^{j\omega t} + a_2 e^{j\omega t} e^{j\delta t} \\ &= \underbrace{(a_1 + a_2 e^{j\delta t})}_{\text{low frequency}} \underbrace{e^{j\omega t}}_{\text{high frequency}} \end{aligned} \quad (1-16)$$

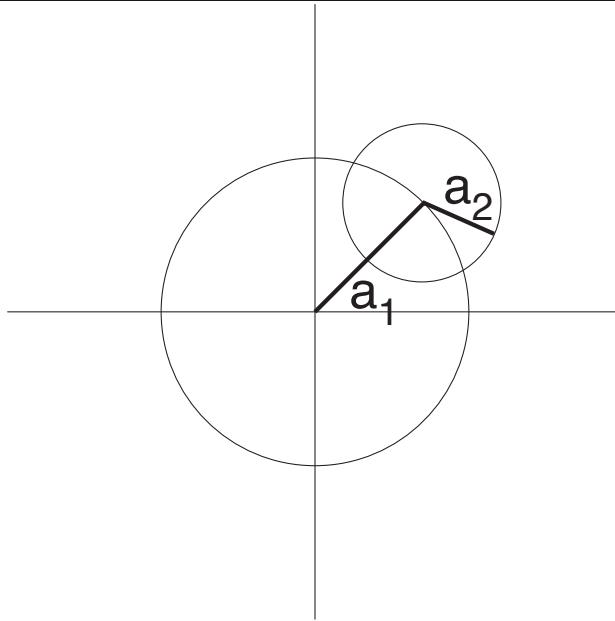


Figure 1.6: Phasor representation of beating.

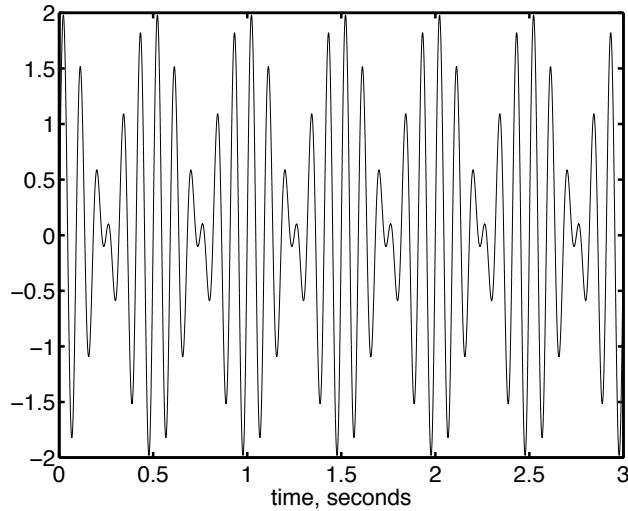


Figure 1.7: Amplitude vs. time representation of beating.

This has the form of a complex sinusoid of frequency ω and amplitude that is a function of time, $a_1 + a_2 e^{j\delta t}$, that varies with a frequency of δ . Figure 1.6 presents the graphical version of this, which looks like a top view of the amusement park “octopus” ride. There are times when the $e^{j\delta t}$ adds a factor of up to a_2 to the first sinusoid and times when it subtracts a factor of up to a_2 . The result is the beating waveform seen in figure 1.7 (in this case, the result of adding 10Hz and a 12Hz sinusoids, which can be seen to produce a 2Hz “beat frequency”).

MATLAB and Sound Files

- A MATLAB .m file for demonstrating beating is available at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/beating.m>.
- Audio files to demonstrate beating: a 1000Hz sine wave at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/1000Hz.au>, a 1005Hz sine wave at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/1005Hz.au>, and their sum, at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/beating.au>.

Frequency and Period

Until now, we've been using ω as the symbol for the speed of rotation of a phasor. If t is in seconds (which we will assume is always the case), then the phasor rotates $\omega/2\pi$ times in one second, or once in $2\pi/\omega$ seconds. Remembering that our exponential representation corresponds $\cos \omega t + j \sin \omega t$, we see that each of these rotations corresponds to 2π radians in the oscillation of a sinusoid, and so its units must be *radians/second*. We will call this *angular frequency*, as it is the rate of change of the phasor's angle per second. However, when we speak of periodic physical signals, it is more convenient to speak of the number of times that the signal repeats per second: *cycles/second* or *Hertz*. We will use f to refer to frequencies expressed as Hertz. Since one cycle is 2π radians, we can convert between these two units as $\omega = 2\pi f$. In this book, we will use whichever units are most convenient for each topic; you'll need to note which is in use.

If ω and f are the number of radians or cycles of a sinusoid per second, then their reciprocals are the number of seconds per radian or cycle of rotation. Seconds per radian is only infrequently used, so we only define a symbol for seconds per cycle, $T = 1/f = 2\pi/\omega$. This is the *period* of a signal in seconds.

1.7 Spectra

Let's return to our discussion of *harmonics*, but now using complex exponentials. We stated earlier that any periodic function could be represented by a sum of weighted harmonics. Let's start with a sum of two sinusoids. Let's call the first sinusoid's frequency ω_0 and the second's $\omega_1 = m\omega_0$, $m = 2, 3, \dots$. Their sum is $a_0 e^{j\omega_0 t} + a_1 e^{jm\omega_0 t}$, and there's nothing we can do to simplify this equation. This "failure to simplify" is not a result of our lack of mathematical sophistication — there truly is no simpler representation. Another way of saying this is that sinusoids at different frequencies are independent or *orthogonal* to each other. In general, if we add a large number of harmonics together, their sum is:

$$\sum_{k=0}^N a_k e^{jk\omega_0 t} \quad (1-17)$$

You'll note that the $k = 0$ term of this summation has the value a_0 for all time; this is often called the *DC component* of the signal. All other components have frequencies that are

1. SIGNALS IN THE PHYSICAL WORLD

integer multiples (harmonics) of ω_0 , the *fundamental frequency*. Note that a sinusoid with frequency $k\omega_0$ has a period of $2\pi/(k\omega_0) = T_0/k$ — it repeats k times in T_0 seconds. This means it *also repeats* every T_0 seconds, and since each term in the summation repeats every T_0 seconds, the whole summation repeats that often, and therefore the period of the signal represented by the summation is T_0 . As we said before, such a summation can in fact be used to represent *any* periodic function of time. The series of weights, a_k , is known as the *Fourier Series*. This *Fourier series* is one of the most important and fundamental principles of signal processing. It allows us to look at the *spectrum* of a signal.

You should be familiar already with the term “spectrum” as used to describe the continuous band of colors that white light (sunlight) can be broken into — a rainbow. From physics, you know that each color corresponds to a specific frequency of the visible spectrum. Hence, the decomposition of white light into colors is actually a form of frequency analysis. *Frequency analysis* involves the decomposition of a signal into its frequency (sinusoidal) components; this is also called *spectral analysis*. The multimedia signal waveforms we are concerned with here are basically functions of time.

At this point, you should recognize that the Fourier series represents the spectrum of a periodic signal. It (and other tools) decomposes signals into spectra defined in terms of sinusoidal (or complex exponential) components. With such a decomposition, a signal is said to be represented in the *frequency domain*; otherwise, usually it is in the *time domain*. For periodic signals, such a decomposition is the Fourier Series. For infinite signals (with finite energy), the decomposition is called a *Fourier Transform*. For finite, discrete signals, the decomposition is the *Discrete Fourier Transform*. Recombining the sinusoidal components to reconstruct the original signal is basically a Fourier synthesis problem or *inverse Fourier analysis*.

The weights, a_k , of the Fourier Series are usually complex valued. To explain the derivation of the Fourier Series, we therefore need to look at *vectors* in the complex plane.

1.7.1 Interlude: Vectors

Here is a list of vector operations, most of which you are likely already familiar with. Let \mathbf{v} and \mathbf{w} be arbitrary vectors and $\vec{\mathbf{x}}, \vec{\mathbf{y}}$ and $\vec{\mathbf{z}}$ be an orthogonal *basis* (the component vectors that define the coordinate system, which for 3D Cartesian coordinates would be unit vectors parallel to the X , Y , and Z axes). We can then define the following:

1. Projection of a vector onto the basis vectors (you may know these as the *components* of the vector)

$$\begin{aligned} v_x &= \langle \mathbf{v}, \vec{\mathbf{x}} \rangle \\ v_y &= \langle \mathbf{v}, \vec{\mathbf{y}} \rangle \\ v_z &= \langle \mathbf{v}, \vec{\mathbf{z}} \rangle \end{aligned} \tag{1-18}$$

(1-19)

1. SIGNALS IN THE PHYSICAL WORLD

and

$$\begin{aligned} w_x &= \langle \mathbf{w}, \vec{\mathbf{x}} \rangle \\ w_y &= \langle \mathbf{w}, \vec{\mathbf{y}} \rangle \\ w_z &= \langle \mathbf{w}, \vec{\mathbf{z}} \rangle \end{aligned} \quad (1-20)$$

$$(1-21)$$

2. Expressing a vector using the basis (i.e., as the sum of its components)

$$\mathbf{v} = v_x \vec{\mathbf{x}} + v_y \vec{\mathbf{y}} + v_z \vec{\mathbf{z}} \quad (1-22)$$

$$\mathbf{w} = w_x \vec{\mathbf{x}} + w_y \vec{\mathbf{y}} + w_z \vec{\mathbf{z}} \quad (1-23)$$

3. Inner product of two vectors

$$\langle \mathbf{v}, \mathbf{w} \rangle = v_x w_x + v_y w_y + v_z w_z \quad (1-24)$$

$$\langle \mathbf{v}, \mathbf{v} \rangle = v_x^2 + v_y^2 + v_z^2 \quad (1-25)$$

You may be familiar with the inner product of a vector with itself as being its length squared, $|\mathbf{v}|^2$. When the vector is complex the inner product is defined as:

$$\langle \mathbf{v}, \mathbf{w}^* \rangle = v_x w_x^* + v_y w_y^* + v_z w_z^* \quad (1-26)$$

$$\langle \mathbf{v}, \mathbf{v}^* \rangle = |v_x|^2 + |v_y|^2 + |v_z|^2 \quad (1-27)$$

where $*$ denotes complex conjugate.

We can also consider arbitrary functions to be more generalized forms of vectors. If $f(t)$ and $g(t)$ are periodic functions of a continuous time variable t with period T , their inner product is defined as

$$\langle f, g \rangle = \frac{1}{T} \int_0^T f(t) g^*(t) dt \quad (1-28)$$

which is normalized to one by T . Intuitively, you can think of this as a “projection” of one function onto another, or “how much” of f is in the same “direction” as g .

4. Vector sum

$$\mathbf{v} + \mathbf{w} = (v_x + w_x) \vec{\mathbf{x}} + (v_y + w_y) \vec{\mathbf{y}} + (v_z + w_z) \vec{\mathbf{z}} \quad (1-29)$$

5. Distributive and commutative properties of inner products

$$\langle \mathbf{v} + \mathbf{u}, \mathbf{w} \rangle = \langle \mathbf{v}, \mathbf{w} \rangle + \langle \mathbf{u}, \mathbf{w} \rangle \quad (1-30)$$

$$\langle \mathbf{u}, \mathbf{v} \rangle = \langle \mathbf{v}, \mathbf{u} \rangle \quad (1-31)$$

6. \mathbf{v} is *orthogonal* to \mathbf{w}

$$\langle \mathbf{v}, \mathbf{w} \rangle = 0 \quad (1-32)$$

7. Unit vector

$$\langle \mathbf{v}, \mathbf{v} \rangle = v_x^2 + v_y^2 + v_z^2 = 1 \quad (1-33)$$

1. SIGNALS IN THE PHYSICAL WORLD

1.7.2 Derivation of the Fourier Series

Here we present frequency analysis tools for continuous time periodic signals. A periodic signal is defined as:

$$f(t) = f(t + T) \quad (1-34)$$

where t is a continuous time variable and T is the signal's period.

The basic mathematical representation of periodic signals is the Fourier Series, which as we have seen is a weighted sum of *harmonically related* sinusoids (sinusoids whose frequencies are all multiples of a single, *fundamental* one) or complex exponentials. This was first developed in the nineteenth century by the French mathematician Jean Baptiste Joseph Fourier to describe heat conduction. Now it has extensive applications in a variety of problems encompassing many different fields.

The *Fourier Series* description of a periodic function $f(t)$, with period $T = 2\pi/\omega_0$, is defined as a weighted sum of complex exponentials:

$$f(t) = \sum_{k=-\infty}^{\infty} c_k e^{jk\omega_0 t} \quad (1-35)$$

We may think of the exponential signals (or phasors)

$$e^{jk\omega_0 t}, \quad k = \dots, -2, -1, 0, 1, 2, \dots \quad (1-36)$$

as a set of basis vectors, where $\omega_0 = 2\pi/T$ is the frequency of the phasor in radians/second. By our earlier definition, ω_0 is the *fundamental frequency*. In a Fourier series, the periodic function $f(t)$ is expressed in terms of the basis and c_k is the projection of $f(t)$ onto the basis $e^{jk\omega_0 t}$, just like the projection v_x of a vector \mathbf{v} onto the basis \vec{x} . The weight, c_k , tells us exactly "how much" of the signal, $f(t)$, is a result of the frequency $k\omega_0$. From equation 1-28, the inner product of $f(t)$ and $e^{jk\omega_0 t}$ is

$$c_k = \langle f(t), e^{jk\omega_0 t} \rangle = \frac{1}{T} \int_0^T f(t) e^{-jk\omega_0 t} dt. \quad (1-37)$$

where the *Fourier coefficients* c_k are called the *frequency content* or *spectrum* of $f(t)$, $k = 0, \pm 1, \pm 2, \dots, \pm \infty$. This spectrum is just like the familiar shorthand of writing a vector as a column or row of numbers, with the understanding that each is the coefficient of one of the basis vectors (i.e., when we write $\mathbf{v} = [123]$, what we actually mean is $\mathbf{v} = 1\vec{x} + 2\vec{y} + 3\vec{z}$). This is the signal's representation in the *frequency domain*, where frequency is the coordinate (in other words, the signal expressed as a function of frequency). Similarly, $f(t)$ is the signal's *time domain* representation, where time is the coordinate. Notice that the Fourier series transforms a finite (periodic), continuous signal in the time domain into an infinite (because the values of k range from $-\infty$ to $+\infty$), discrete (because k only takes on integer values) spectrum in the frequency domain.

1. SIGNALS IN THE PHYSICAL WORLD

Alternative Derivation of the Fourier Series [Optional]

Another way to derive the formula for the c_k is as follows. The aim of this derivation is to plug in the Fourier Series definition of $f(t)$ into the equation for c_k and see if we can get exactly c_k back by manipulating the equation. We first multiply both sides of (1-35) by the phasor $e^{-jl\omega_0 t}$ ($l = \dots, -2, -1, 0, 1, 2, \dots$) and then integrate both sides of the resulting equation over a single period $[0, T]$,

$$\begin{aligned} c_k &= \frac{1}{T} \int_0^T f(t) e^{-jl\omega_0 t} dt = \frac{1}{T} \int_0^T \sum_{k=-\infty}^{\infty} c_k e^{jk\omega_0 t} e^{-jl\omega_0 t} dt \\ &= \sum_{k=-\infty}^{\infty} c_k \frac{1}{T} \int_0^T e^{j(k-l)\omega_0 t} dt \end{aligned} \quad (1-38)$$

Note that

$$\begin{aligned} \frac{1}{T} \int_0^T e^{j(k-l)\omega_0 t} dt &= \frac{1}{T} \left. \frac{e^{j(k-l)\omega_0 t}}{j(k-l)\omega_0} \right|_0^T \\ &= \frac{e^{j(k-l)\omega_0 T} - 1}{j(k-l)\omega_0 T} \end{aligned} \quad (1-39)$$

Equation (1-39) has two different solutions, depending on whether $k = l$ or not. Let's make the substitution $u = k - l$. So, when $k = l$, $u = 0$, and the numerator and denominator of (1-39) are both zero. We therefore use L'Hôpital's rule to find the limit:

$$\begin{aligned} \lim_{u \rightarrow 0} \frac{e^{ju\omega_0 T} - 1}{ju\omega_0 T} &= \left. \frac{\frac{d}{du}(e^{ju\omega_0 T} - 1)}{\frac{d}{du}ju\omega_0 T} \right|_{u=0} \\ &= \left. \frac{j\omega_0 T e^{ju\omega_0 T}}{j\omega_0 T} \right|_{u=0} \\ &= \frac{j\omega_0 T}{j\omega_0 T} \\ &= 1 \end{aligned} \quad (1-40)$$

For the case of $k \neq l$, let's rewrite the numerator of (1-39) as $\cos(k - l)\omega_0 T + j \sin(k - l)\omega_0 T - 1$. Remember that $\omega_0 = 2\pi/T$, and so $\omega_0 T = 2\pi$. Since both k and l are integers and $k \neq l$, their difference is an integer; let's call that integer m . The numerator then becomes $\cos 2\pi m + j \sin 2\pi m - 1$. We know that $\cos 2\pi m = 1$ and $\sin 2\pi m = 0$, and so the numerator is zero. On the other hand, the denominator of (1-39) is $j2\pi m \neq 0$, and so (1-39) is zero.

In summary,

$$\frac{1}{T} \int_0^T e^{j(k-l)\omega_0 t} dt = \begin{cases} 1 & k = l \\ 0 & k \neq l \end{cases} \quad (1-41)$$

From the review at the beginning of this chapter (more specifically, the definition of the inner product of two periodic function in (1-28)), this yields the interesting revelation that

1. SIGNALS IN THE PHYSICAL WORLD

complex sinusoids at different frequencies are orthogonal (and so, by extension, can serve as an orthogonal basis).

Using (1-41), equation (1-38) becomes

$$\frac{1}{T} \int_0^T f(t) e^{-jl\omega_0 t} dt = c_l, \quad l = \dots, -2, -1, 0, 1, 2, \dots \quad (1-42)$$

We got the same result as (1-37).

Real-Valued Signals

In general, the Fourier coefficients c_k are complex valued. If the periodic signal $f(t)$ is real valued (the kind of signals we're concerned with here), the c_k satisfy the condition,

$$c_k = c_{-k}^* \quad (1-43)$$

Consequently,

$$|c_k|^2 = |c_{-k}^*|^2 \quad (1-44)$$

Since c_k is the (amplitude) spectrum of $f(t)$, $|c_k|^2$ is the *power spectrum*. Equation (1-44) tell us that the power spectrum is a symmetric (or “even”) function of frequency. Also, when $f(t)$ is real, we can further decompose the Fourier Series. Equation (1-35) becomes

$$\begin{aligned} f(t) &= \sum_{k=-\infty}^{\infty} c_k e^{jk\omega_0 t} \\ &= c_0 + \sum_{k=1}^{\infty} c_k e^{jk\omega_0 t} + \sum_{k=-1}^{-\infty} c_k e^{jk\omega_0 t} && \text{(split sum into 0/+/ parts)} \\ &= c_0 + \sum_{k=1}^{\infty} c_k e^{jk\omega_0 t} + \sum_{k=1}^{\infty} c_{-k} e^{-jk\omega_0 t} && \text{(distribute -1 into second sum)} \\ &= c_0 + \sum_{k=1}^{\infty} [c_k e^{jk\omega_0 t} + c_{-k} e^{-jk\omega_0 t}] && \text{(combine common sum)} \\ &= c_0 + \sum_{k=1}^{\infty} [c_k e^{jk\omega_0 t} + (c_{-k}^* e^{jk\omega_0 t})^*] && \text{(double conjugate)} \\ &= c_0 + \sum_{k=1}^{\infty} [c_k e^{jk\omega_0 t} + (c_k e^{jk\omega_0 t})^*] && \text{(real signal: } c_k = c_{-k}^*) \\ &= c_0 + 2 \sum_{k=1}^{\infty} \operatorname{Re}[c_k e^{jk\omega_0 t}] && (a + a^* = 2 \operatorname{Re}(a)) \end{aligned} \quad (1-45)$$

With your help in the next self-test exercise, we get

$$f(t) = c_0 + 2 \sum_{k=1}^{\infty} \operatorname{Re}(c_k) \cos k\omega_0 t - 2 \sum_{k=1}^{\infty} \operatorname{Im}(c_k) \sin k\omega_0 t \quad (1-46)$$

1. SIGNALS IN THE PHYSICAL WORLD

where

$$\text{Re}(c_k) = \frac{1}{T} \int_0^T f(t) \cos(k\omega_0 t) dt \quad (1-47)$$

$$\text{Im}(c_k) = -\frac{1}{T} \int_0^T f(t) \sin(k\omega_0 t) dt \quad (1-48)$$

from (1-37) and Euler's formula. You can view equations 1-47 and 1-48 as the projection of $f(t)$ onto cosine and sine functions in the same way that the previous definition of c_k was the projection of $f(t)$ onto complex exponentials. This representation of c_k does not require any complex number arithmetic, but it is often more cumbersome to carry out the integration using cosines and sines, rather than phasors.

Examples of periodic signals that are frequently encountered in practice are square waves, rectangular waves (both being used as timing signals in electronics), triangle waves, and of course sinusoids and complex exponentials. In the next example, we will use the Fourier series to analyze some of these.

Self-Test Exercises

See A.1 #15–16 for answers.

1. Prove the relationship in (1-43).
2. From equation (1-45), derive (1-46). *Hint:* Use the fact that equation (1-45) is a real signal to simplify the complex multiplication.

Example: Fourier series of a general square wave

The simplest type of square wave has a 50% duty cycle: that is, 50% of the time $f(t)$ takes on the value of 1 and 50% of the time it has the value -1. Let's do a bit more general of a case. We will consider a train of rectangular pulses (a kind of square wave, but shifted upward and scaled so that it has a minimum of zero and a maximum of V_0) with pulse duration τ and period T seconds. This waveform can be expressed as

$$f(t) = \begin{cases} 0 & \text{region a } (nT \leq t < nT + t_0) \\ V_0 & \text{region b } (nT + t_0 \leq t < nT + t_0 + \tau) \\ 0 & \text{region c } (nT + t_0 + \tau \leq t < (n+1)T) \end{cases} \quad n = 0, 1, 2, \dots \quad (1-49)$$

The waveform is plotted in figure 1.8 with example regions shown.

There are a few general observations we can make of this signal: the first, that the pulse duration τ is a variable, so it can be wide or narrow, thus changing the duty cycle. When it is really narrow, the signal becomes a train of impulses; when it is on the order of $\tau = T/2$, it is called “50% duty cycle”. The second observation is that t_0 changes the pulse's phase.

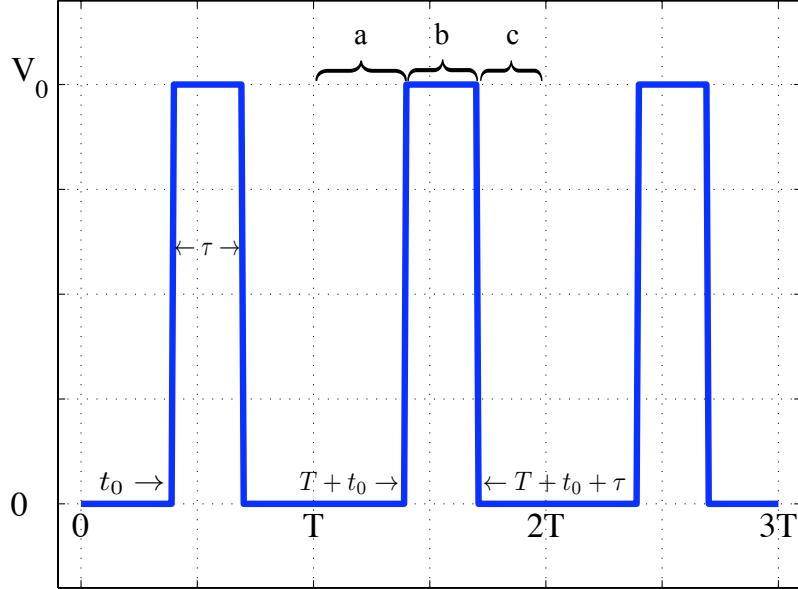


Figure 1.8: A train of periodic rectangular pulses with period T , pulse width τ , and initial pulse start at t_0 .

According to (1-37), the Fourier coefficients c_k are

$$c_k = \frac{1}{T} \int_0^{t_0} 0e^{-jk\omega_0 t} dt + \frac{1}{T} \int_{t_0}^{t_0+\tau} V_0 e^{-jk\omega_0 t} dt + \frac{1}{T} \int_{t_0+\tau}^T 0e^{-jk\omega_0 t} dt \quad (1-50)$$

$$= \frac{1}{T} \int_{t_0}^{t_0+\tau} V_0 e^{-jk\omega_0 t} dt \quad (1-51)$$

$$= \frac{V_0}{T} \left[\frac{e^{-jk\omega_0 t}}{-jk\omega_0} \right]_{t_0}^{t_0+\tau} \quad (1-52)$$

$$= \frac{V_0}{-jk\omega_0 T} [e^{-jk\omega_0(t_0+\tau)} - e^{-jk\omega_0(t_0)}] \quad (1-53)$$

In equation (1-50), the integral defining the Fourier coefficients in (1-37) has been broken into three parts for the three “segments” of the square wave: $f(t) = 0$ (region a, when $nT \leq t < nT + t_0$), $f(t) = V_0$ (region b, when $nT + t_0 \leq t < nT + t_0 + \tau$), and $f(t) = 0$ (region c, when $nT + t_0 + \tau \leq t < (n+1)T$). The first and third terms are equal to zero, leaving only the middle term, which is just the integral of an exponential. If we remember that the derivative of an exponential $\frac{de^{at}}{dt}$ is ae^{at} , then the anti-derivative from (1-51) to (1-52) should make sense. Finally, we just need to evaluate the expression in (1-52) between the two limits t_0 and $t_0 + \tau$ to yield (1-53).

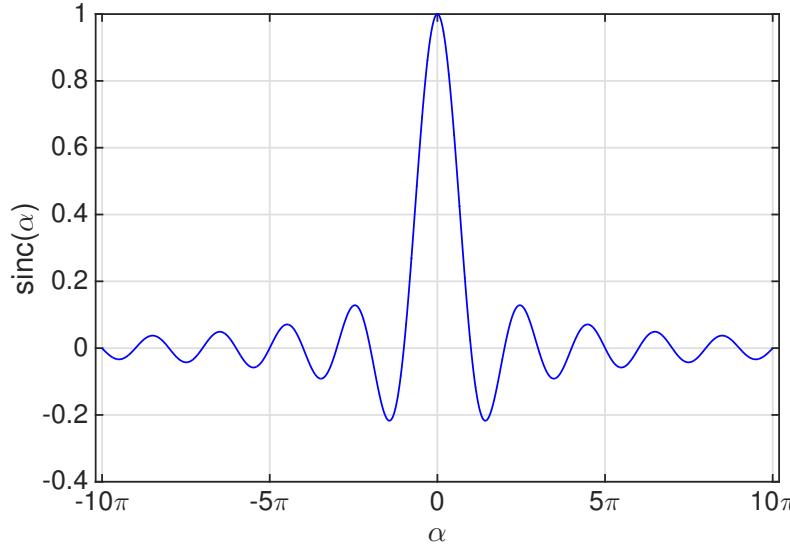


Figure 1.9: The sinc function.

The middle steps are left for your homework; let's skip to the result:

$$c_k = \underbrace{\frac{V_0\tau}{T} \frac{\sin(k\omega_0\tau/2)}{k\omega_0\tau/2}}_{\text{magnitude}} \underbrace{e^{-jk\omega_0(t_0+\tau/2)}}_{\text{phase}} \quad (1-54)$$

This is just the polar representation of a complex valued $c_k = Re^{j\theta}$. The phase θ or angle of c_k is

$$\theta = -k\omega_0 \left(t_0 + \frac{\tau}{2} \right) \quad (1-55)$$

Let's define $\alpha = k\omega_0\tau/2$, and take a look at the magnitude in (1-54). This function occurs frequently enough in modern communication theory to be given a name: the sampling function, or *sinc*. We define

$$\text{sinc } \alpha = \frac{\sin \alpha}{\alpha} \quad (1-56)$$

We note that $\text{sinc } \alpha$ is zero whenever α is an integral multiple of π ; that is,

$$\text{sinc } n\pi = 0, \quad n = 1, 2, 3, \dots \quad (1-57)$$

When α is zero, the function is indeterminate, but it is easy to show that its value is unity:

$$\text{sinc } 0 = 1 \quad (1-58)$$

The magnitude of $\text{sinc } \alpha$ therefore decreases from unity at $\alpha = 0$ to zero at $\alpha = \pi$. As α increases from π to 2π , $\text{sinc } \alpha$ increases from zero to a maximum less than unity. As α

1. SIGNALS IN THE PHYSICAL WORLD

continues to increase, the successive maxima become smaller because the numerator of $\text{sinc } \alpha$ can not exceed unity while the denominator increases. Also, $\text{sinc } \alpha$ shows even symmetry. Figure 1.9 shows the sinc function.

From (1-58), we know that c_0 is

$$c_0 = \frac{V_0\tau}{T} \quad (1-59)$$

Substituting c_0 and $c_k, k = 1, 2, 3, \dots$ into (1-45), the Fourier series of $f(t)$ is

$$f(t) = \frac{V_0\tau}{T} + 2 \operatorname{Re} \left\{ \sum_{k=1}^{\infty} \frac{V_0\tau}{T} \frac{\sin(k\omega_0\tau/2)}{k\omega_0\tau/2} e^{-jk\omega_0(t_0+\tau/2)} e^{jk\omega_0 t} \right\} \quad (1-60)$$

$$= \frac{V_0\tau}{T} + 2 \operatorname{Re} \left\{ \sum_{k=1}^{\infty} \frac{V_0\tau}{T} \frac{\sin(k\omega_0\tau/2)}{k\omega_0\tau/2} e^{jk\omega_0(t-t_0-\tau/2)} \right\} \quad (\text{collect exponents}) \quad (1-61)$$

$$= \underbrace{\frac{V_0\tau}{T}}_{c_0} + \underbrace{\frac{2V_0\tau}{T} \sum_{k=1}^{\infty} \text{sinc}(k\omega_0\tau/2) \cos[k\omega_0(t-t_0-\tau/2)]}_{c_k \text{ harmonically related sinusoids}} \quad (\text{apply Euler's}) \quad (1-62)$$

In (1-60), we have used the knowledge of this being a real-valued signal. We collected the exponents to get (1-61), then factored out the $V_0\tau/T$, applied Euler's formula to the exponential, and finally retained only the real part of each term of the summation to yield (1-62).

Now, a train of pulses is represented by an infinite number of sinusoidal waves. How well can it be approximated by a finite number? Look at figure 1.10. The solid curve shows the sum of the first 12 terms of the signal's Fourier series; it looks like a pulse train modulated by a sinusoid. The ideal pulses are shown as dashed lines. The approximation gets better when more terms are used, as in figure 1.11.

Let's construct the signal's *spectrum*: a plot of its Fourier coefficients. We first consider $|c_k|$ expressed in terms of the fundamental frequency f_0 , remembering that $\omega_0 = 2\pi f_0$:

$$|c_k| = \frac{V_0\tau}{T} |\text{sinc}(k\pi f_0 \tau)| \quad (1-63)$$

The magnitude of any c_k is obtained from (1-63) by using the known values of pulse width τ and signal period $T = 1/f_0$, and selecting the desired value of k ($k = 0, 1, 2, \dots$). Instead of evaluating (1-63) at these discrete frequencies, let us sketch the envelope of $|c_k|$ by considering the frequency $k f_0$ to be a continuous variable. That is, though $f = k f_0$ can really only take on the discrete values (the harmonic frequencies - 0, $f_0, 2f_0, 3f_0, \dots$) we may think of k for the moment as a continuous variable. When f is zero, $|c_k|$ is $V_0\tau/T$, and when f has increased to $1/\tau$, $|c_k|$ is zero. In fact from (1-57) when $f\pi\tau = m\pi$ ($m = 1, 2, 3, \dots$), $\text{sinc}(f\pi\tau) = 0$, which yields zeros at frequencies $f = m/\tau$.

The resultant line spectrum and envelope are plotted in figure 1.12. The figure is the plot of the envelope of the Fourier coefficients $\{c_k\}$ (the spectrum of the periodic sequence

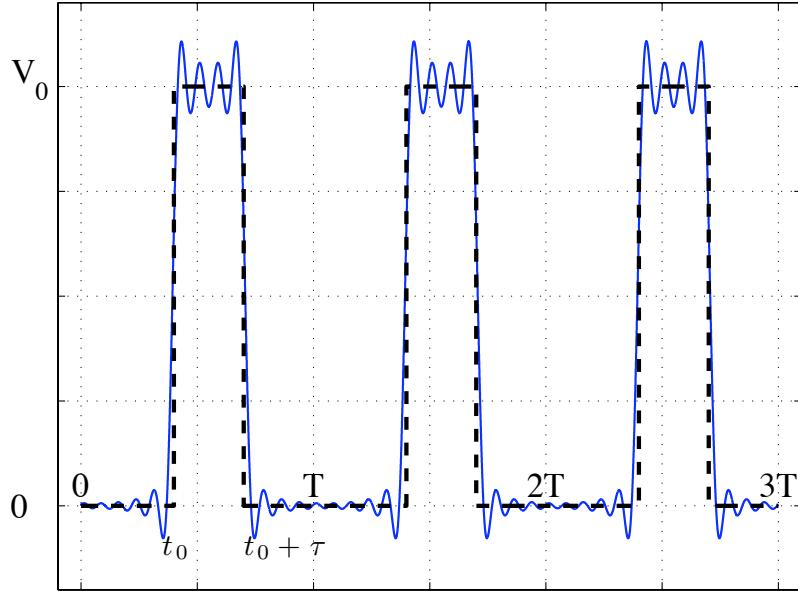


Figure 1.10: The Fourier series for a periodic sequence of rectangular pulses. The first 12 harmonic terms in summation (1-62) are included. The ideal pulse train is shown as dashed lines. The period is $T = 1$, the initial point $t_0 = 0.5$ and the pulse width $\tau = 0.3333$.

of rectangular pulses), versus frequency $f = kf_0$. The magnitude of its peaks decays at the rate of $1/k$.

There are several observations which we may make that relate changes in the line spectrum to changes in the graph of rectangular pulses given in figure 1.12. Firstly, note that the width of the envelope depends upon changes in τ , the pulse width. In fact, the *shape* of the envelope does not vary with changes in T ; instead, changes in T correspond to changes in the frequency interval between spectral lines. If the pulse period T is increased (f_0 is decreased), the number of spectral lines between zero frequency and $1/\tau$ increases and the amplitude of each line decreases. Figures 1.13 and 1.14 illustrate this.

A shift in the phase t_0 does not change the line spectrum, that is, $|c_k|$ is not a function of t_0 . The *phase* of the frequency components *do* change with the choice of t_0 (we just haven't plotted those).

When talking about the generalized square wave, with fixed period T and pulse width τ increasing or decreasing, the result is a family of different waveforms. When $\tau = T/2$, we have a 50% duty cycle square wave. When τ takes on different percentages of T , we get different duty cycles. Also, when τ becomes really small, the waveform become a train of impulses.

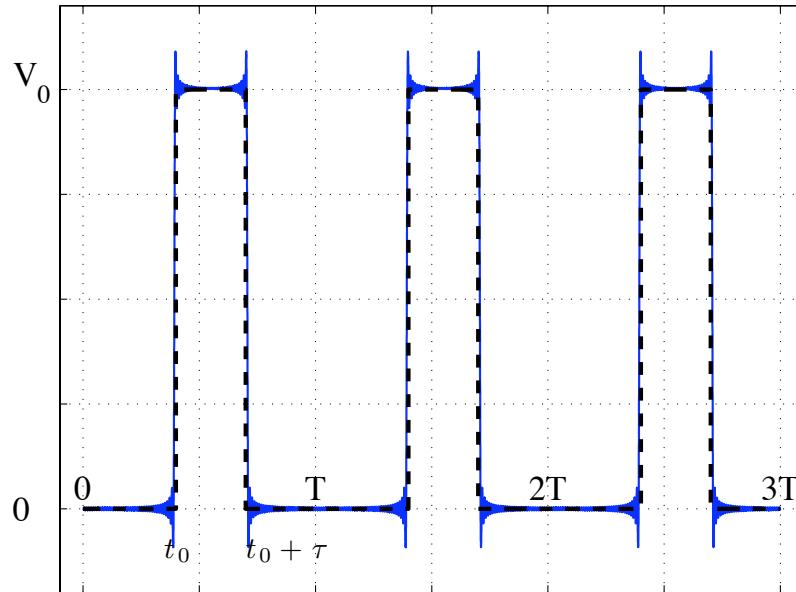


Figure 1.11: The Fourier series for a periodic sequence of rectangular pulses. The sum of the first 100 terms is shown, as in figure 1.10.

Self-Test Exercise

See A.1 #17 for the answer.

1. Prove (1-58).

1.8 Problems

1. The differential equation for a tuning fork can be written as $\frac{d^2x(t)}{dt^2} = -\frac{k}{M}x(t)$ where M is the mass of the tuning fork, k is a constant, and $x(t)$ is the displacement of the tuning fork endpoints. Discuss how the mass of the tuning fork affects the frequency at which it vibrates. Hint: relate the given equation to equation 1-1.
2. What musical instruments might be governed by properties analogous to that of a tuning fork?
3. When you add two sinusoids with frequencies that differ by δ , the result is beating. Imagine you're tuning a guitar. As the two strings get closer together in tone, what happens to the beat frequency? Show how this result is predicted by the sum of the complex sinusoids.

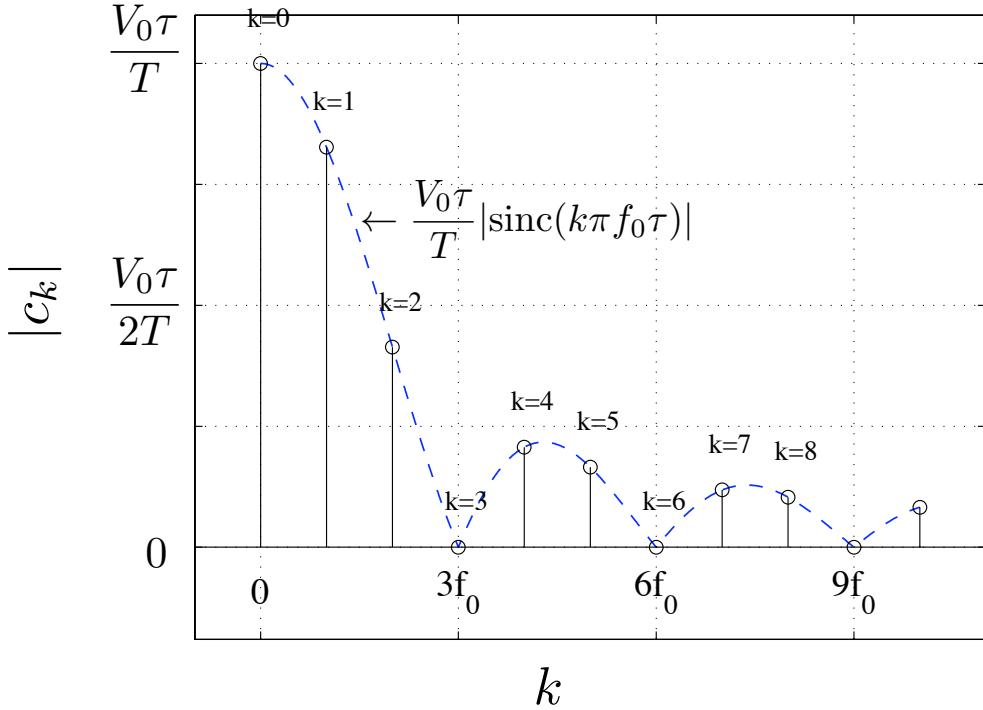


Figure 1.12: The spectrum of a periodic sequence of rectangular pulses: the magnitude of c_k vs. frequency $f = kf_0$, where $f_0 = 1/T$ (light gray vertical lines). The envelope for continuous k is plotted as the black curve. Zero points in the spectrum $|c_k|$ are at $kf_0 = n/T = m/\tau$, $m = 1, 2, 3, \dots$

4. A complex number can be written in rectangular coordinates as $z = x + jy$. Write the relations to calculate the polar form, $z = (r, \theta)$ or $z = re^{j\theta}$.
5. Using Euler's formula, express $\cos x$ and $\sin x$ as a combination of complex exponentials. Recall that Euler's Formula is given by: $e^{\pm j\omega t} = \cos(\omega t) \pm j \sin(\omega t)$.
6. Find expressions for the following as complex exponentials:
 - (a) 1
 - (b) j
 - (c) $1 + j$, $(1 + j\sqrt{3})/2$
7. Compute $[(1 + j\sqrt{3})/2]^2$ and $(1 + j)^4$ directly using:
 - (a) Rectangular representations.
 - (b) Complex exponentials.
8. Show that $(z_x z_y)^* = z_x^* z_y^*$.

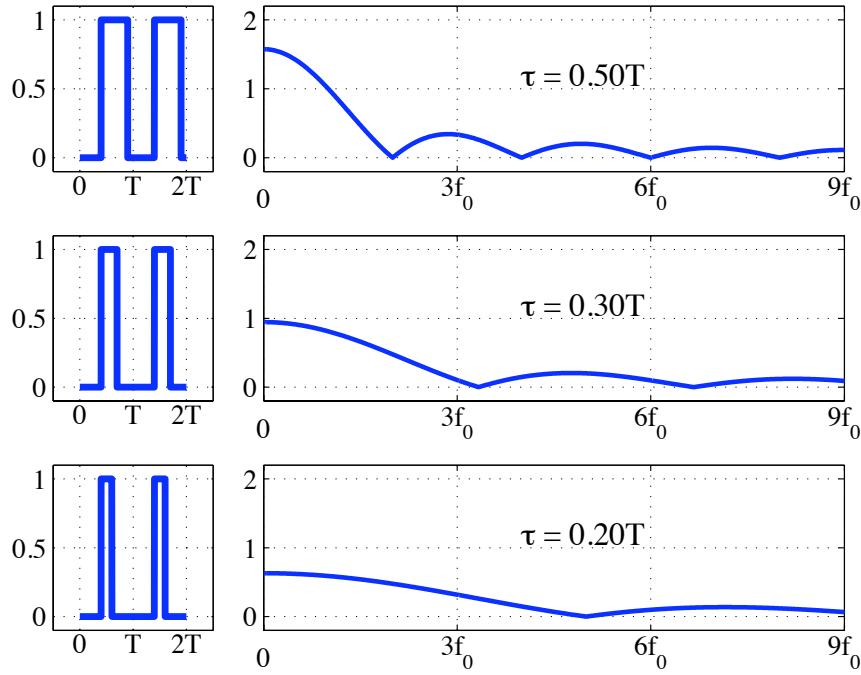


Figure 1.13: The spectrum of a periodic sequence of rectangular pulses, when T is fixed and the pulse width τ varies.

9. Express $|z|^2$ as a function of z and z^* .

10. Given the following equations:

$$\begin{aligned}x_1(t) &= 5 \sin(2\pi(200)t + 0.5\pi) \\x_2(t) &= 5 \sin(2\pi(200)t - 0.25\pi) \\x_3(t) &= 5 \sin(2\pi(200)t + 0.4\pi) \\x_4(t) &= 5 \sin(2\pi(200)t - 0.9\pi)\end{aligned}$$

- (a) Using pencil and paper: Express $x_1(t)$ through $x_4(t)$ as complex exponentials.
 - (b) Create the sum sinusoid, $x_5(t) = x_1(t) + x_2(t) + x_3(t) + x_4(t)$. Express $x_5(t)$ as a sum of complex exponentials.
 - (c) Using complex exponentials, express the amplitude and phase of $x_5(t)$ (use pencil and paper with the aide of a graphing calculator, spreadsheet, or MATLAB).
11. What is the period of $e^{-j\frac{\pi}{4}t} + e^{-j\frac{\pi}{2}t}$?
12. What is the period of $e^{-j\omega_0 t} + e^{-j5\omega_0 t}$?

1. SIGNALS IN THE PHYSICAL WORLD

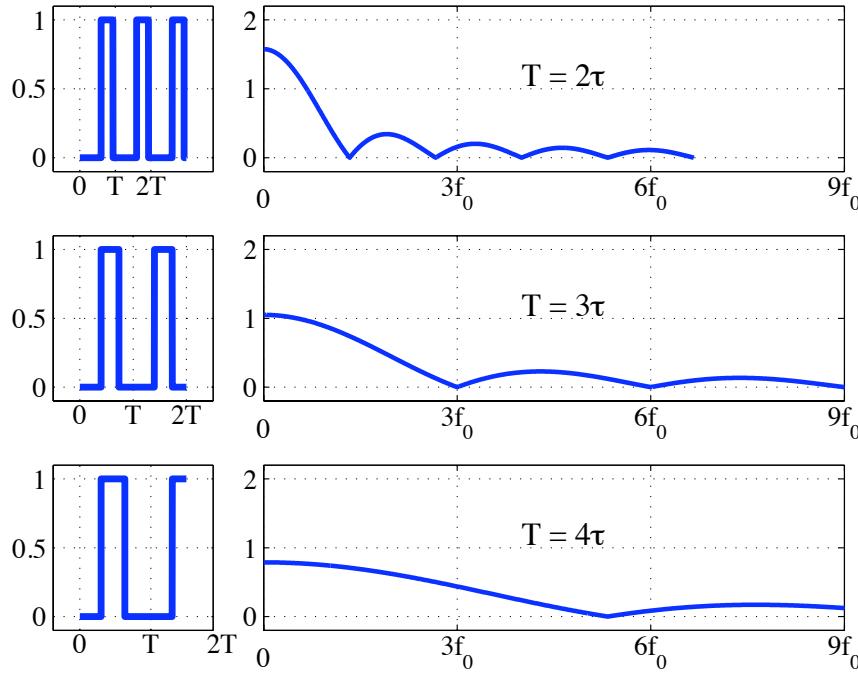


Figure 1.14: The spectrum of a periodic sequence of rectangular pulses with fixed pulse width τ and varying period T .

13. Implement a **Complex** class for representing complex numbers in an object oriented programming language (C++, C#, Java, python, etc.). Your class should include at least the following methods:

- `add()`
- `multiply()`
- `real()`
- `imag()`
- `magnitude()`
- `angle()`

Document your code so that this class could be used by someone else. Write a test program that exercises all of this class' methods.

14. Derive equation (1-54) from equation (1-53).

15. Determine the coefficients of the Fourier series for the following signals:

1. SIGNALS IN THE PHYSICAL WORLD

(a) The sinusoid

$$x(t) = \cos \frac{\pi}{3} t$$

(b) The sawtooth waveform

$$x(t) = t - \lfloor t \rfloor$$

(c) The rectified wave

$$x(t) = |\cos(\frac{\pi}{3}t)|$$

1.9 Further Reading

- James H McClellan, Ronald W. Schafer, and Mark A. Yoder, *DSP First: A Multimedia Approach*, Prentice Hall, 1998, chapters 1–3 (§3.1–3.4), appendix A.
- Martin D. Levine, *Vision in Man and Machine*, McGraw-Hill, 1985, chapter 1, sections 2.1, 2.2.
- Robert S. Tannenbaum, *Theoretical Foundations of Multimedia*, Computer Science Press, 1998, chapters 1 & 2.
- Donald Hearn & M. Pauline Baker, *Computer Graphics*, Second Edition, Prentice Hall, 1997, sections 2.1–2.4.
- A. Murat Tekalp, *Digital Video Processing*, Prentice Hall, 1995, chapters 1 & 2.

2

Signals in the Computer

In chapter 1, you were introduced to the nature of physical signals and how they can be described mathematically. In this chapter, we move onward to discuss how these “real world,” analog signals end up inside computers: analog to digital conversion (A/D conversion, or ADC). We then develop the first little bit of a fundamental mathematical representation of such *discrete* signals. In the process, we visit the problems that digitization creates. At the end of this chapter, you should have a basic grasp of how ADC works and the tradeoffs involved in A/D parameters versus the characteristics of the analog signal.

2.1 From the physical to the digital

Physical signals fundamentally involve application of energy to cause some physical quantity to change. For instance, sound is carried by waves of changing air pressure; images are patterns of emitted and/or reflected light. On the other hand, computer signals are collections of binary numbers — vectors for sound, 2D arrays for images, or sequences of 2D arrays for video. The process of bridging this gap is the process of connecting the analog world to the digital computer, or *data acquisition*. There are three parts to this process:

1. transduction,
2. sampling, and
3. quantization.

Figure 2.1 shows these three steps and the intervening representations of the signal. This is an important point: the “real” signal is the physical one; what we seek to do is to produce

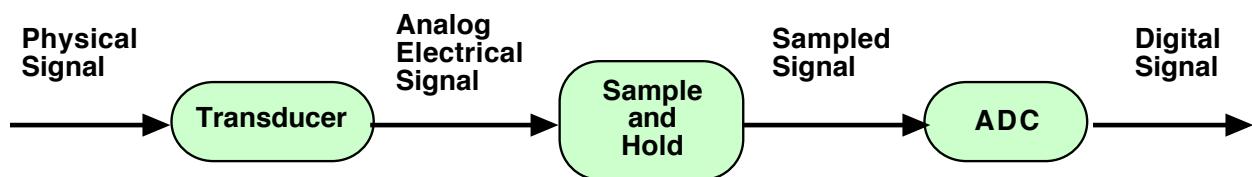


Figure 2.1: Block diagram of the data acquisition process.

2. SIGNALS IN THE COMPUTER

a *representation* of this signal within the computer. Our goal is that this representation will carry all the information of interest that the original had. In this chapter, we will concern ourselves primarily with two ways that information (fidelity) is destroyed: sampling and quantization.

But, before either can be performed, the physical signal must be converted into an analog, electrical signal. This process, known as *transduction*, involves a sensor that responds to the physical signal and produces an electrical output. A microphone is such a sensor: it might include a membrane that vibrates in response to air pressure changes which in turn moves a coil of wire around a magnet to produce an electric current in the coil. Image sensors are typically composed of 2D arrays of charge-coupled devices (CCDs), in which photons affect the leakage of electrical charge. A sensor is typically connected to signal conditioning hardware (not shown), which amplifies its output to match the subsequent stages' inputs and may perform filtering operations (we'll discuss this filtering later in the chapter). The result of transduction is truly an analog signal: it is an electrical waveform whose value is proportional to the physical signal. Herein lies our first source of *noise*.

Transduction always results in noise. Temperature variations, humidity conditions, and a variety of other sources cause the sensor representation of a signal to be imperfect. In a microphone, the relationship between the sensor output and the actual sound may be non-linear, or there may static noise from other devices (i.e., a hum in the background). For cameras, low light conditions can cause graininess, a random fluctuation of the actual signal. However, noise can be introduced in many parts of the digitization process.

Figure 2.1 also presents the basic process of digitization — converting an analog electrical signal into a sequence of binary numbers. Digitization involves two processes: *sampling* and *quantization*. In the former process, the value of the analog signal is measured at regular intervals of time (the *sampling interval*). The output of a sample and hold (S/H) device will maintain a fixed level in between sampling times. This makes the quantization process easier: the analog-to-digital converter (ADC) takes an analog signal at some fixed voltage (the sampled signal) and produces a binary output that approximates the voltage — quantization. Each of these processes, together with transduction, will add noise to the signal in one form or another. It is important to know how to measure this noise and how to avoid it at each step.

2.2 Measuring Noise

The fidelity of a signal is defined as the correspondence between an input signal and an output signal. A signal with high distortion has low fidelity. We will need to define three terms in order to measure the amount to which a signal is distorted:

1. Root mean square (RMS) magnitude: this defines the “power” that a signal has. For a signal $f(t)$ with a period of T we define the RMS magnitude as $f_{\text{RMS}} = \sqrt{\frac{1}{T} \int_T f(t)^2 dt}$. Where \int_T denotes that the integral is taken over one period of $f(t)$. Intuitively, a signal with large values will also have a large RMS magnitude.

2. SIGNALS IN THE COMPUTER

2. Signal-to-noise ratio (SNR): this compares the RMS magnitude of the signal, x_{RMS} , to the RMS magnitude of the noise, n_{RMS} . SNR is defined as $x_{\text{RMS}}/n_{\text{RMS}}$. The noise signal, $n(t)$, can be measured directly (taking the difference between the noisy signal and the reference signal, if available) or indirectly (such as using the expected noise magnitude for a given application or device).
3. The decibel (dB): we normally convert SNR into a dB scale using $\text{SNR}_{\text{dB}} = 20 \log_{10}(\text{SNR})$. There are historical and perceptual reasons for using the decibel scale, but, practically, it helps to compare large and small SNR values on the same graph. The log operation makes very small SNR values large negative numbers and simultaneously makes very large SNR values lesser in magnitude.

Mathematically, SNR becomes:

$$\text{SNR} = 20 \log_{10} \left(\frac{x_{\text{RMS}}}{n_{\text{RMS}}} \right) \quad (2-1)$$

We can quantify the amount of noise in a signal by using the SNR. The idea is that noise becomes more of a problem when it reaches the same magnitude as the signal. For example, a slight hissing noise on a loudspeaker is not as troublesome as the same hissing noise in a telephone conversation because the signal from the loudspeaker “overpowers” the noise signal. At each stage of transduction and digitization, we can use SNR to tell us exactly how much distortion we have introduced into the signal. There are other measures of fidelity of a signal (actually it is an open research problem in many fields), however, we will concentrate on SNR because it is the most widely used measure and is not specific to any application.

2.3 Sampling

A sample and hold (S/H) device acts like a switch and an analog memory device. While we may talk of sampling a signal at a *point* in time, a real device requires a *period* of time to perform its function, and this includes sampling. Over some short period of time, the S/H closes its “switch” and the analog signal is presented to the memory device (which can be considered to be a capacitor, for example). The memory device’s internal voltage takes a short time to reach equilibrium with the applied voltage — called the *aperture time*. After this aperture time, the “switch” is opened and the sampled signal stays stable while the ADC converts the signal to a digital value. However, the sampled signal doesn’t stay perfectly constant — some of the stored electrical charge leaks away, and thus the sampled signal “sags” towards zero volts. While these limitations of the physical device are important for sensor design and de-noising, we will focus on the basic idea of sampling at points in time and assume the S/H performs like an ideal device. Figure 2.2 shows the input/output behavior of such an idealized device.

We’ve already stated that we’d like the digitization process to retain all the information in the original physical signal (or, at least, that not being possible, to retain all information as

2. SIGNALS IN THE COMPUTER

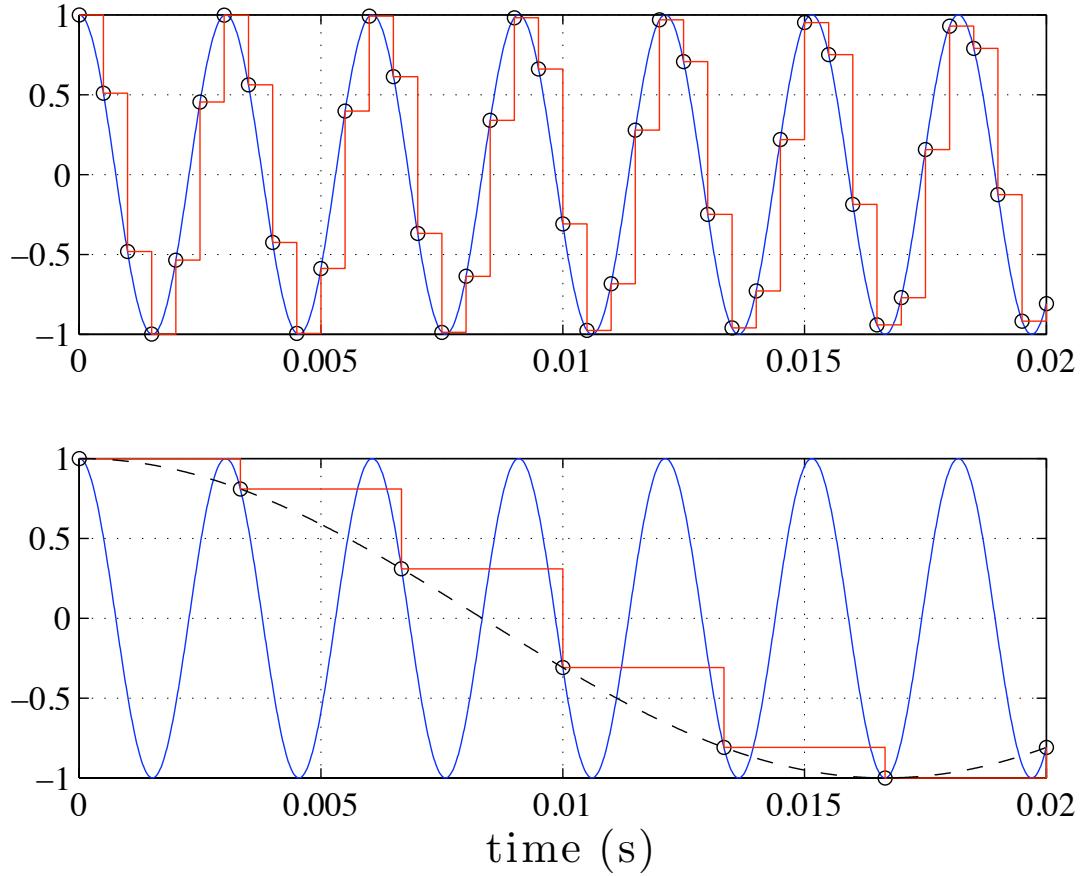


Figure 2.2: Sample and hold output. Analog input signal (sinusoidal curve) is a 330Hz sine wave; sampling rate is 2000Hz (top) and 300 Hz (bottom). Output of S/H is red lines. Discrete value are shown as dark circles.

far as is practical). However, sampling alone can destroy information. In the case of figure 2.2 (top), no information is lost (the original waveform could in principle be reconstructed) because the sampling rate, at 2000Hz, is much higher than the sinusoid's frequency, 330Hz. Of course, the higher the sampling rate the more expensive the S/H and ADC, and the more data produced at the output (i.e., a higher data rate). How slowly can we sample a sinusoid? Figure 2.2 (bottom) shows the same sinusoid, but this time sampled at 300Hz. In the 20ms plotted, the original signal goes through approximately six cycles. If we look at the sampled signal, it looks like a sampled version of a sinusoid that goes through only a half cycle. If we reconstruct from the sampled signal and compared it to the original it would have an extremely low SNR! It appears that the relatively low sampling rate has caused the 330Hz frequency component of the original signal to appear as an *alias* at a lower frequency (perhaps 25 or 30 Hz).

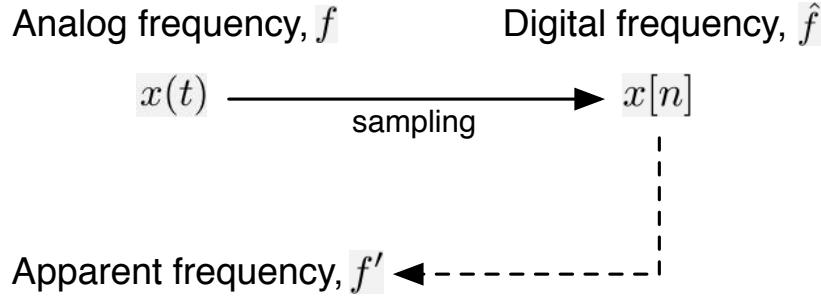


Figure 2.3: Sampling an analog signal, $x(t)$, with an analog (actual) frequency f produces a digital signal, $x[n]$, at a digital frequency \hat{f} . If one examines that digital signal and converts \hat{f} back to an analog frequency, the apparent frequency is f' , which may not be the same as f , due to aliasing.

2.3.1 Aliasing

We see aliasing all the time in our everyday lives. For example, if you have ever seen video of a car wheel on the highway, it appears as though the wheel is spinning much slower than its actual rate. This is because the video camera is not sampling the wheel image fast enough and the high frequency spinning rate aliases back to a low frequency.

Aliasing will occur for a sinusoid whenever the sampling rate is less than twice the sinusoid's frequency. Or, alternatively, given a particular sampling rate, only sinusoids with frequencies up to one-half that rate will be accurately represented. This cutoff frequency is called the *Nyquist frequency*. Let's suppose we sample a phasor $x(t)$ every T_s seconds. The original, analog phasor is $x(t) = e^{j\omega_0 t}$. The sampled version of the phasor is:

$$\begin{aligned} x[n] &= x(\underbrace{nT_s}_{\text{sample times}}) \\ &= e^{j\omega_0 nT_s} \end{aligned} \tag{2-2}$$

In equation (2-2), $x[n]$ gives the value of the signal at the sample times: the phasor represented as a sequence of measurements, each taken at a time that is a multiple of the sampling interval T_s . This was done by replacing t by nT_s , the sampling times $\{0, T_s, 2T_s, 3T_s, \dots\}$. $x[n]$ is a *discrete* signal (a function of discrete time). For example, $x[n]$ could be the black circles in figure 2.2. The value of $x[n]$ is undefined when n is not an integer.

The fundamental reason for aliasing is that we do not know what happens between samples. Take for example a continuous periodic signal. Every cycle of the signal repeats, so we can't tell if two samples were taken from two successive cycles, or if a single cycle was skipped in between them, or if a hundred cycles were skipped. If we sample a signal and then reconstruct it from the samples we must assume that in between samples the signal is smooth (i.e., it has no other frequencies above the Nyquist frequency).

2. SIGNALS IN THE COMPUTER

To reconstruct a signal from its samples we need to talk about the notion of *actual frequency* versus *digital frequency* and *apparent frequency*, as shown in figure 2.3. We can use these quantities to calculate precisely if a frequency will alias, and at what frequency it will appear. The actual frequency of a signal is the continuous time frequency that we are accustomed to talking about. For $e^{j\omega_0 t}$, the actual frequency is ω_0 . The digital frequency is the frequency at which the signal appears to be based on the indices, n , of the sampled signal. Once sampled, $e^{j\omega_0 t}$ becomes $e^{j\omega_0 n T_s}$ which has a digital frequency of $\hat{\omega}_0 = \omega_0 T_s = \omega_0 \frac{2\pi}{\omega_s}$.

$$\begin{aligned} x(t) &= \exp(j \underbrace{\omega_0}_{\text{actual}} t) \\ x[n] &= \exp(j \underbrace{\omega_0 T_s}_{\text{digital, } \hat{\omega}} n) \end{aligned} \quad (2-3)$$

Digital frequency, $\hat{\omega}$, *must be* between $-\pi$ and π . This is because of Nyquist. For example, if the sampling rate, ω_s , is equal to $4\omega_0$, then the digital frequency is

$$\hat{\omega}_0 = \omega_0 \times \frac{2\pi}{\omega_s} = \omega_0 \times \frac{2\pi}{4\omega_0} = \frac{\pi}{2}$$

which is less than π , so Nyquist is satisfied.

Apparent frequency, ω' , is the frequency which we get by converting from digital frequency back to continuous time frequency. To convert from digital frequency to apparent we use the following formula,

$$\omega' = \hat{\omega} \times \frac{\omega_s}{2\pi} \quad (2-4)$$

which of course is just the inverse of the previously-used conversion from continuous to digital frequency.

For our continuing example, when ω_s is equal to $4\omega_0$, this means the apparent frequency is $\omega'_0 = \pi/2 \times \frac{\omega_s}{2\pi} = \pi/2 \times \frac{4\omega_0}{2\pi} = \omega_0$. Since the sinusoid was sampled at greater than the Nyquist rate, the apparent frequency equals the actual frequency.

If we sample at a frequency less than Nyquist the apparent and actual frequencies are different. For example, if we instead sample at $\omega_s = 4/3\omega_0$, then the digital frequency will be $\hat{\omega}_0 = \omega_0 \frac{2\pi}{4/3\omega_0} = 3\pi/2$, which is not on the interval $-\pi$ to π . We convert the frequency down by using a clever identity, $e^{-j2\pi n}$, which is equal to 1 for all values of n ,

$$\begin{aligned} x[n] &= e^{j\frac{3\pi}{2}n} \\ &= e^{j\frac{3\pi}{2}n} e^{-j2\pi n} && (e^{-j2\pi n} = 1) \\ &= e^{j(\frac{3\pi}{2}-2\pi)n} && (\text{combine exponents}) \\ &= e^{-j\frac{\pi}{2}n} && (\text{equivalent digital frequency}) \end{aligned}$$

Essentially, this identity allows us to subtract 2π from the digital frequency until it is on the correct interval. Geometrically, we see that $\frac{3\pi}{2}$ is the same as $-\frac{\pi}{2}$. When we convert

2. SIGNALS IN THE COMPUTER

to apparent frequency we get $\omega'_0 = -\pi/2 \times \frac{\omega_s}{2\pi} = -\pi/2 \times \frac{4\omega_0}{6\pi} = -\omega_0/3$, which is lesser in magnitude than the actual frequency and negative (the phasor is spinning in the opposite direction).

Furthermore, from equation 2-4 we can see that the sampling frequency, ω_s , corresponds to the digital frequency $\hat{\omega} = 2\pi$. In digital frequency, we have seen that all frequencies at multiples of 2π from each other have the same apparent frequency. This gives the following relationship between apparent and actual frequency:

$$\omega'_0 = \omega_0 + k\omega_s \quad (k = \dots, -2, -1, 0, 1, 2, \dots) \quad (2-5)$$

The apparent frequency could be the result of any frequency that is at a multiple of the sampling frequency.

Now, remember that we are dealing with a real-valued signal, not a complex-valued one; we use the complex exponential as a representation that makes the math easier. For a real-valued signal, the imaginary component of the complex exponential must be canceled out. We can do this easily by adding another complex exponential at a negative frequency, since $\cos \omega_0 t = 1/2e^{j\omega_0 t} + 1/2e^{-j\omega_0 t}$. So, for a completely real sinusoid we should really write,

$$\{\omega'_0\} = \pm\omega_0 + k\omega_s \quad (2-6)$$

Let's consider the case where $\omega_s/2 < |\omega_0| < \omega_s$, that is, the sinusoid's frequency is just a bit greater than the Nyquist frequency (or, equivalently, you could think of it as the sampling rate being just a bit too slow: $\omega_s < 2|\omega_0|$). Call the amount that $|\omega_0|$ exceeds $\omega_s/2$ $\omega_a = |\omega_0| - \omega_s/2$. Let's figure out what happens to the negative frequency component, $-\omega_0$. Using ω_a , we can rewrite $-\omega_0$ as

$$-\omega_0 = -\omega_a - \omega_s/2 \quad (2-7)$$

(this is simply solving the ω_a equation for $-\omega_0$).

But we know that, according to equation (2-6), the sinusoid's frequency really corresponds to a set of ambiguous frequencies, and so we can write equation (2-7) as $-\omega_0 + k\omega_s = -\omega_a - \omega_s/2 + k\omega_s$ to show *all* of the ambiguous frequencies. To simplify matters, let's just look at the “first” ambiguous frequency at $k = 1$:

$$\begin{aligned} \omega'_0 &= -\omega_0 + \omega_s = -\omega_a - \omega_s/2 + \omega_s && \text{(substitute } k = 1\text{)} \\ \underbrace{\omega'_0}_{\substack{\text{apparent} \\ \text{frequency}}} &= -\omega_a + \underbrace{\omega_s/2}_{\substack{\text{Nyquist} \\ \text{frequency}}} \end{aligned}$$

So, the apparent frequency is one that is just a bit below the Nyquist frequency. In fact, if we substitute back in the definition of ω_a , we get that the apparent frequency is located at $\omega_s - \omega_0$. So, the first ambiguous frequency for the negative frequency component of a real sinusoid is located at a positive frequency.

What if the sampling frequency is not just a bit too slow? In that case, $\omega_0 > \omega_s$. To find the location of the $k = 1$ ambiguous frequency, we can follow the above procedure and find

2. SIGNALS IN THE COMPUTER

that we can just subtract multiples of ω_s from ω_0 until its absolute value is less than $\omega_s/2$. Now we can see that the sampled signal in figure 2.2 (bottom) must have a frequency of $330-300=30\text{Hz}$ (subtracting the sampling frequency of 300Hz from the sinusoid's frequency of 330Hz one time).

At the end of chapter 1, we saw how *any* function can be represented as a sum of sinusoids — its Fourier series. If you look at the above discussion, you will see that, if we replace the phasor in, say, equation (2-3) by a sum of phasors at frequencies $\omega_1, \omega_2, \omega_3, \dots$, we will reach the same conclusions, but they will now apply to *each frequency component*: each will produce aliases. In the case of the square wave of Figure 1.8, the frequencies of the sinusoids have no upper limit — the signal's *spectrum* is infinite. Certainly, then, there will be frequencies greater than $\omega_s/2$, regardless of how fast we sample.

How can we avoid this aliasing? We've been discussing the Nyquist frequency in terms of the sampling frequency; that the signal must have frequency components less than one-half the sampling frequency. Another way of looking at sampling is to require that the input signal be *band limited*: that it have a maximum frequency component, rather than an infinite spectrum. Given that the signal is band limited with maximum frequency ω_m (which we can achieve using analog *filters*, similar to those described in chapters 3 and 5), then we can set our sampling rate so that it is at least $2\omega_m$.

Self-Test Exercises

See A.2 #1–3 for answers.

1. Aliasing can happen in the world around you. Identify the source of the original signal and the sampling mechanism in the following situations:
 - (a) The hubcap of a car coming to a stop in a motion picture;
 - (b) A TV news anchor squirming while wearing a tweed jacket;
 - (c) A helicopter blade while the helicopter is starting up on a sunny day.

2.4 Quantization

Understanding aliasing helps us deal with the problems raised by *discretizing time* using a sample and hold device. There is another discretization that occurs, however: a discretization of the *analog level* output from the S/H to the finite number of binary values output by the ADC. This process is formally known as *quantization*. Since an ideal analog signal has an infinite number of possible values, while the computer representation (be it integer or floating point) has a finite number of values, there will be some error.

This error is illustrated in figure 2.4. To produce this figure, the output of the S/H from figure 2.2 (top) was quantized to 256 levels, each corresponding to $1/256$ of the distance between -1 and +1. This result was then subtracted from the ideal S/H output and plotted as the error shown in the bottom plot in the figure. How much can this error be? The error can be as much as one part in $\pm 1/2$ of the least significant bit (LSB). This follows from

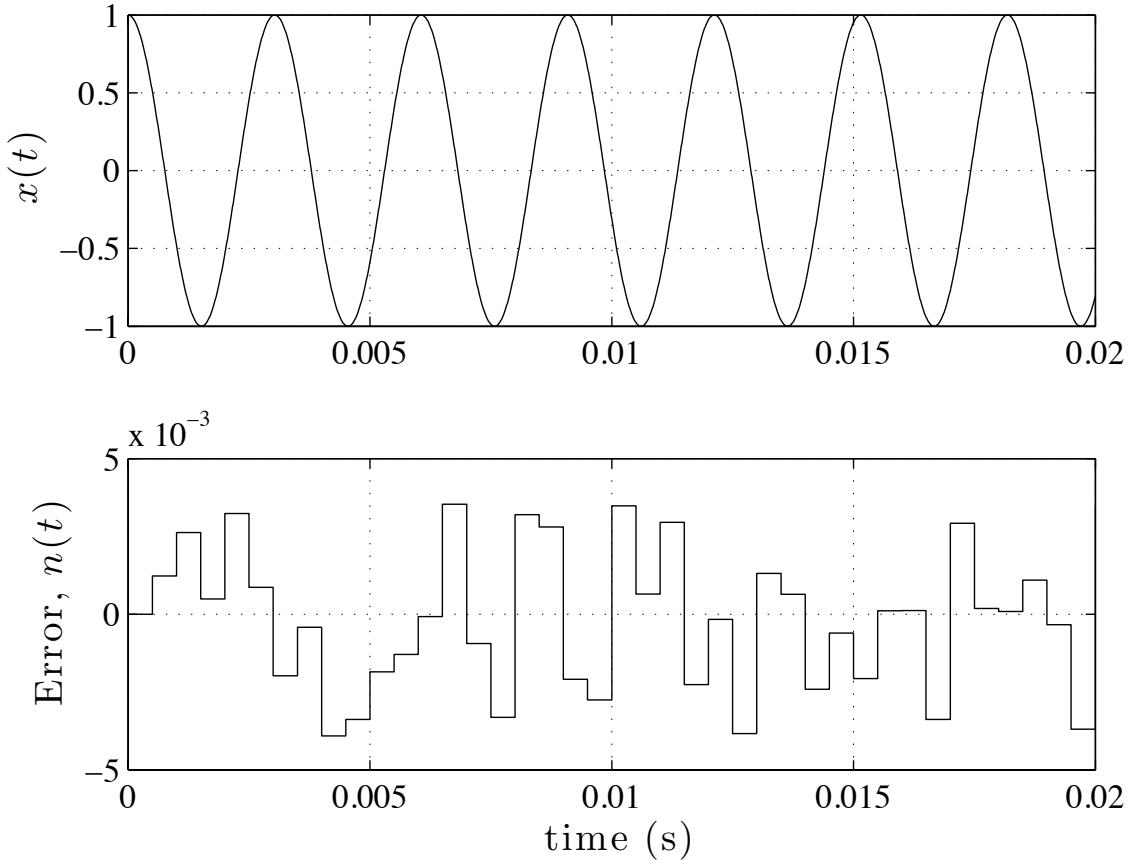


Figure 2.4: Error in output (bottom) of an ADC that uses 8 bits to represent values in the range $[-1, +1]$ for the S/H output in figure 2.2 (top). Original analog signal is shown in top plot.

the fact that, when we convert the analog value to digital, we round to the nearest digital number. In other words, the ADC number is within $\text{LSB}/2$ of the actual signal. What are the statistics of this noise? Assuming that Nature hasn't conspired against us, we would expect the mean of this error to be zero. If all ADC input values have equal probability, then the errors should also, which means that it is uniformly distributed between minus and plus one-half. Remembering our statistics, the standard deviation of a continuous random variable is the square root of its variance,

$$\sigma^2 = \int_{-\infty}^{+\infty} (x - \mu)^2 dx \quad (2-8)$$

In this case, $\mu = 0$, the variable's range is $[-1/2, +1/2]$, and the variable's value is constant within that range. The result is a standard deviation of $\sigma = 1/\sqrt{12} \text{ LSB} \approx 0.29 \text{ LSB}$ (how [answer in A.2 #4]?). In the case of an 8-bit ADC, this comes to $0.29/256 = 1/883$ of the

2. SIGNALS IN THE COMPUTER

ADC's full range.

Noise is ubiquitous in the physical world — and this includes analog electronics (digital electronics have noise, too, but its effect on digital signals is different). Sometimes, this noise is truly random, or *stochastic*, perhaps produced by thermal effects within the circuitry. Other times, the noise is merely unwanted signal, such as “background noise” in an audio recording. To quantify this noise we will use SNR (equation 2-1). The standard deviation, σ , is an estimate of the noise power ($n_{\text{RMS}} = \sigma$). For simplicity we will assume that the signal uses the entire ADC range (256 levels, $x_{\text{RMS}} = 256$). So, for example, if there was no other noise present than that from quantization by an 8-bit ADC, the SNR would be $20 \log_{10} 256/0.29 \approx 59\text{dB}$. For a 12-bit ADC, the SNR is 83dB; for 16-bit, the SNR is 107dB.

Another way we might consider the noise that results from quantization is to consider that amount of noise that it adds given a realistic signal that already includes other noise. For example, let's suppose that the ADC input signal has a range of 5 volts (V), and that it includes noise (from whatever source) with a standard deviation of 1 millivolt (mV). If we use an 8-bit ADC, 5V corresponds to 255 and 1mV is then 0.051 LSB. (What is the SNR for the original signal (answer in A.2 #5) ?

When we add random variables, we add their variances, and so the standard deviation of their sum is the square root of the sum of their variances, $\sigma' = \sqrt{\sigma_1^2 + \sigma_2^2}$. For an 8-bit ADC, then, we have the total noise (inherent plus quantization) of $\sqrt{0.051^2 + 0.29^2} = 0.294\text{ LSB}$. So, almost all of the noise in the digitized signal is caused by quantization (the noise on the output represents a 476% increase from the input noise)! If we go to 12 bits, the total noise is $\sqrt{0.82^2 + 0.29^2} = 0.87\text{ LSB}$ — quantization increases the noise by 6%. From a design point of view, we *select* the ADC based in part on the expected noise in the analog signal and the maximum noise we can tolerate in the digital one.

MATLAB and Sound Files

- A MATLAB .m file for demonstrating quantization using tones is available at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/quantdemo1.m>.
- A MATLAB .m file for demonstrating quantization using a more interesting sound is available at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/quantdemo2.m>, along with a data file at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/amoriole2.mat>.

Self-Test Exercises

See A.2 #6 for the answer.

1. What ratio of amplitudes is represented by one bel?

2.5 Dynamic Range

So, one reason we might choose an ADC with more bits is to reduce the effects of quantization noise. There is another reason: our desire to represent both low and high amplitude signals with reasonable fidelity. The need for this *dynamic range* can result in us needing more bits. Let's use as an example the digitization of an orchestra where the ratio of the low amplitude passages to the high amplitude ones is 1/1000 (60dB). If we use an 8-bit ADC, then 255 corresponds to the highest amplitude and the lowest amplitude is 0.255 LSB. In other words, we have used just about all the bits for the loudest passages, leaving nothing for the quiet parts! For a 12-bit ADC, the lowest amplitudes are allocated about 2 bits; for a 16-bit ADC, only about 6 bits. The reason for this is that we've coded the signal *linearly*, with the step between ADC outputs being the same for low and high amplitude signals. Logically, however, it would seem unlikely that our ears would be as sensitive to slight changes in loud passages as they would be to the same changes to quiet ones — that at least some part of our perception would be based on relative comparisons, not just absolute differences.

This intuition is correct, and so consideration of the *psychophysics* of hearing (the intersection of the physics of sound and the psychology of perception) leads us to a solution for audio digitization: *companding*. We first pass the analog signal through a “squashing function” before digitization. This nonlinear function doesn’t modify the quiet passages (the region of the function near zero is basically linear, with a slope of one). However, it causes changes in loud passages to result in smaller changes in the signal to be digitized. This is equivalent to allocating more bits to the quiet passages and fewer to the loud ones. Assuming we use the exact inverse function on any audio output provided by our system, there should be little noticeable effect of this companding.

Of course, this is all based on the assumption that we are digitizing a signal that will be listened to. If, on the other hand, the signal is some other kind of data not for “human consumption,” then small steps at high amplitude may be just as important as those at low ones, and so companding won’t be usable — it would destroy valuable information.

2.6 Periodic and Aperiodic Signals

In this chapter, we talked about a signal as being a sum of sinusoids, as in chapter 1. In general, a periodic signal can be expressed as a sum of *both* sines and cosines, which we can express as the sum of complex sinusoids:

$$f(t) = \sum_{k=-\infty}^{+\infty} c_k e^{jk2\pi t/T} \quad (2-9)$$

Equation (2-9) is the general Fourier series, which can be used to represent any periodic signal with period T . In this series, all of the complex sinusoids have periods that are multiples of T (frequencies that are multiples of $2\pi/T$). So, the frequency content, or *spectrum*, of a periodic signal (the c_k s) is *discrete*: it only has values at particular frequencies.

2. SIGNALS IN THE COMPUTER

As we shall see in chapter 6, for an aperiodic signal, the Fourier series becomes the *Fourier integral*, and the signal's spectrum is *continuous*:

$$f(t) = \frac{1}{2\pi} \int_{-\infty}^{+\infty} F(j\omega) e^{j\omega t} d\omega \quad (2-10)$$

In equation (2-10), the function $F(j\omega)$ describes the magnitude of the complex sinusoid at frequency ω . This is the continuous (because ω can take on all values, not just a discrete set) spectrum of an aperiodic signal. Intuitively, we take the limit as the period of the signal goes to infinity in equation 2-9, which pushes the spacing between the c_k spectral lines closer and closer until the spectrum becomes continuous. I'll revisit this topic later, in more detail.

2.7 Problems

1. What is the RMS magnitude of the sine wave $A \sin(\omega t)$?
2. What is the RMS magnitude of the sawtooth waveform

$$x(t) = \frac{A}{T}t, \quad 0 < t \leq T$$

where $x(t)$ repeats every T seconds

3. The sin wave from problem 1 is sampled in noise, if the desired SNR is 20 dB, how large can the RMS magnitude of the noise be?
4. If the sawtooth waveform from problem 2 is considered noise and the sine wave from problem 1 is the signal, what is the SNR in dB?
5. The signal $e^{j2\pi \times 200t}$ is sampled at $\omega_s = 2\pi \times 300$. What are the actual, digital, and apparent frequencies?
6. The signal $\cos(2\pi \times 200t)$ is sampled at $\omega_s = 2\pi \times 250$. What are the actual, digital and apparent frequencies of the resulting cosines?
7. Consider the 50% duty cycle square wave with amplitude from -1 to 1 and period T .
 - (a) What is the RMS magnitude?
 - (b) The fourier series of the 50% duty cycle square wave is given by,

$$\frac{4}{\pi} \sum_{k=1,3,5,\dots}^{\infty} \frac{\sin(k\omega_0 t)}{k}$$

If we consider the “band limit” of the square wave to be when it has no other frequencies with magnitudes larger than 1% of the RMS magnitude, then what is the minimum sampling rate to capture all frequencies below the “band limit” without aliasing?

2. SIGNALS IN THE COMPUTER

8. Suppose we wish to sample from an audio signal that ranges from 0 to 2.5V (Assume that the range of our ADC is 0-2.5V also). If the analog noise on the line is 3mV and our ADC is 8bits, what percentage of the total SNR is from the analog noise and what percentage is from the 8 bit quantization?
9. If we have the same signal from question 8 (audio signal from 0-2.5V with 3mV analog noise),
 - (a) how many bits should our ADC have so that the noise added by quantization is less than the analog noise?
 - (b) how many bits should our ADC have so that the quantization noise does not decrease our SNR by more than 1%?

2.8 Further Reading

James H McClellan, Ronald W. Schafer, and Mark A. Yoder, *DSP First: A Multimedia Approach*, Prentice Hall, 1998, chapter 4 (§4.1–4.3).

3

Filtering and Feedforward Filters

3.1 Introduction

In this chapter, we will introduce you to the most basic type of algorithm for processing digital signals: feedforward filters. We start with the concept of *filtering* and the operation of basic feedforward filters. By the end, you should understand some important terms related to filters, for example, *frequency response*, *phase response*, *transfer function* and *zeros* of a *transfer function*. You should be able to implement simple digital filters on a computer and use them to solve some simple signal processing problems.

The concept of filtering should not be new to you. For example, if you were interested in filtering and opened this book, you would see that this chapter deals with filtering and so you would pay attention to this chapter and ignore the others. Your mind performed a *bandpass* filter with the pass band being chapter 3. Some other kinds of filters are *low pass*, *high pass*, and *band stop*. Using the same example, a low pass filter allows you to attend to all the chapters in the book, from the beginning to the end of the pass band, say chapter 3; the high pass on the other hand will pass only the chapters beyond a certain one, say beyond chapter 4; the band stop is the one that allows you to pay attention to all the chapters *except* the stop band, say chapter 3.

In the signal processing domain, filters exclude and/or include signal *frequencies*. For example, consider a signal $x(t)$ (where t is time) with four sinusoidal components. It has frequencies at $f_1 = 50$, $f_2 = 100$, $f_3 = 250$, and $f_4 = 350$:

$$x = \sin(2\pi f_1 t) + \sin(2\pi f_2 t) + \sin(2\pi f_3 t) + \sin(2\pi f_4 t) \quad (3-1)$$

Self-Test Exercise

See A.3 #1 for the answer.

1. Is the signal of equation 3-1 periodic? If so, what is its period?

Figure 3.1 shows a plot of about 0.1 second of this signal. Its four frequencies are shown as green peaks in figure 3.4. Let's say that we would like to have a filter to keep the $f_3 = 250\text{Hz}$ sinusoid and get rid of the f_1 , f_2 , and f_4 sinusoids. This filter can be visualized as in figure 3.2. Here, the horizontal axis is frequency and the vertical axis is

3. FILTERING AND FEEDFORWARD FILTERS

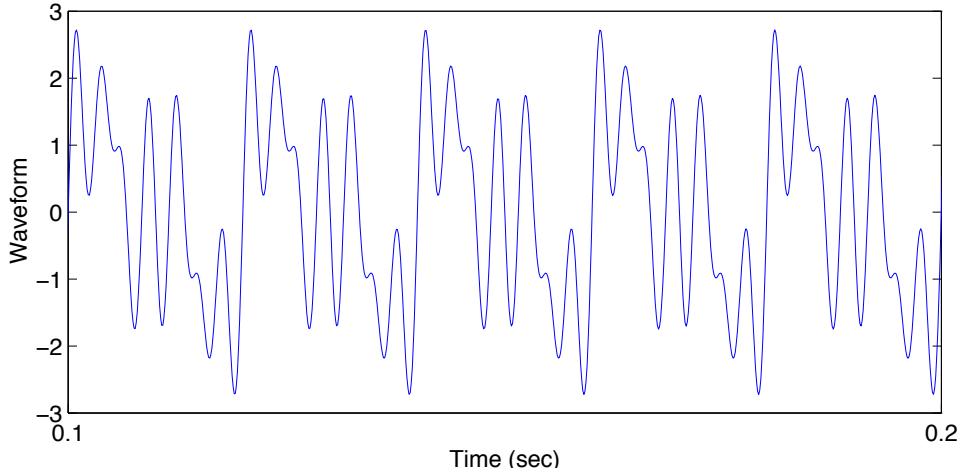


Figure 3.1: A sinusoidal signal with four frequency components: $f_1 = 50$, $f_2 = 100$, $f_3 = 250$, $f_4 = 350$ Hz.

magnitude of the filter's response. The filter is designed to have a frequency passband between 200 and 300 Hz, which means that only the signal's frequency components within this band are allowed to pass. Figure 3.3 shows this filter's output — in other words, the filtered signal — plotted along time. Another way to look at the filtered signal is its frequency components, which are shown in figure 3.4 (magenta). This latter graph clearly shows that, after filtering, the signal is very close to a 250 Hz sinusoid, exactly as expected. You can hear these two signals as sounds: <http://faculty.washington.edu/stiber/pubs/Signal-Computing/sine4.au> is the sum of four sinusoids and http://faculty.washington.edu/stiber/pubs/Signal-Computing/filtered_sine4.au is the filtered version.

At this point, you should have an idea of what filters do. Next, I will explain *how* filters work.

3.2 Feedforward Filters

3.2.1 Delaying a phasor

In chapter 1, we learned the term *phasor*, a complex sinusoid expressed as $e^{j\omega t}$. We also saw that this representation makes the math simpler for adding sinusoids, at least. A phasor's magnitude is one, its frequency is ω , and its angle is ωt , where t is time. It moves around the unit circle counter-clockwise along time. If we delay it by τ sec, then the delayed time is $t - \tau$, and we can write this as:

$$e^{j\omega(t-\tau)} = e^{-j\omega\tau} e^{j\omega t} \quad (3-2)$$

This is the product of two phasors at the same frequency. This doesn't do anything

3. FILTERING AND FEEDFORWARD FILTERS

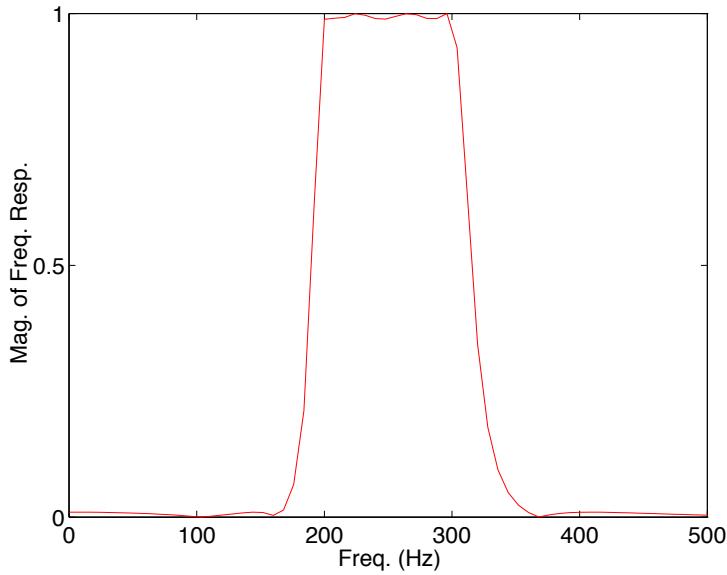


Figure 3.2: Filter's frequency response. The pass band is [200 300] Hz.

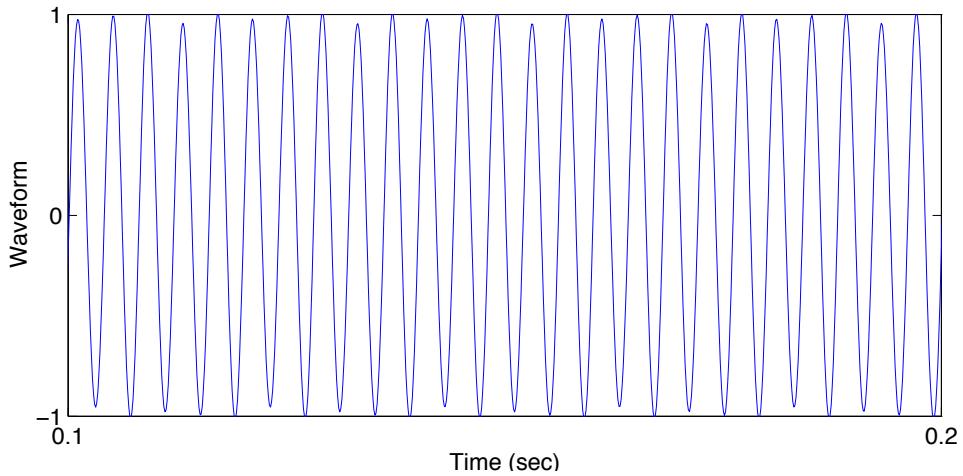


Figure 3.3: The signal (3-1) after filtering out frequencies 50, 100 and 350Hz.

except rotate the phasor by $-\omega\tau$ (i.e., it doesn't change its magnitude).

3.2.2 A simple feedforward filter

Filters combine delayed versions of signals. We have already seen that signals are made up of phasors. A simple feedforward filter's *block diagram* is shown in figure 3.5. A block diagram is a type of data flow diagram: it shows flow of *signal data* within the filter (in contrast to a *flow chart*, which shows flow of *control* within a program). In figure 3.5, the input signal data $x(t)$ branches, with one copy sent to an adder (" $+$ ") and another sent to a delay block.

3. FILTERING AND FEEDFORWARD FILTERS

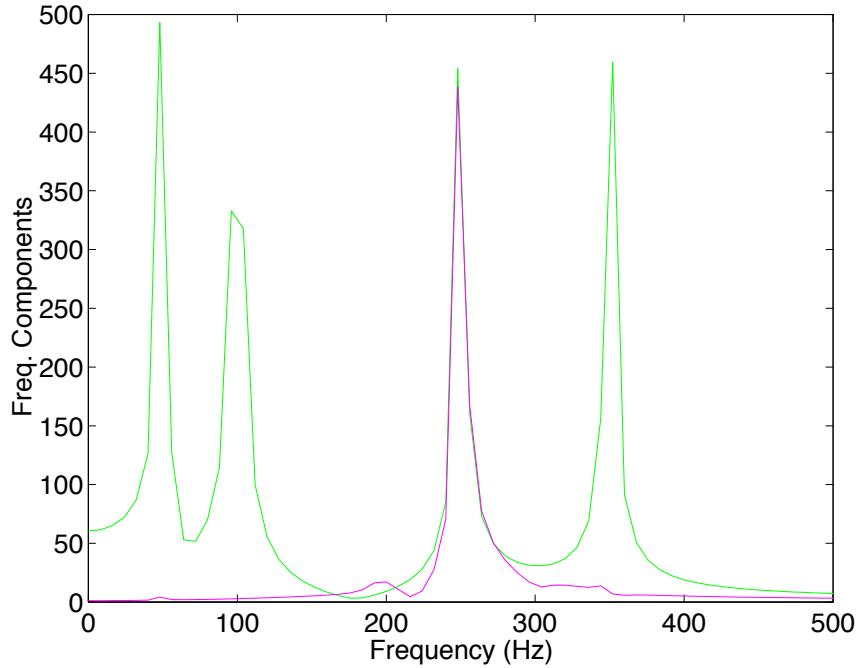


Figure 3.4: Spectrum of four-sinusoid signal (green) and its filtered version (magenta).

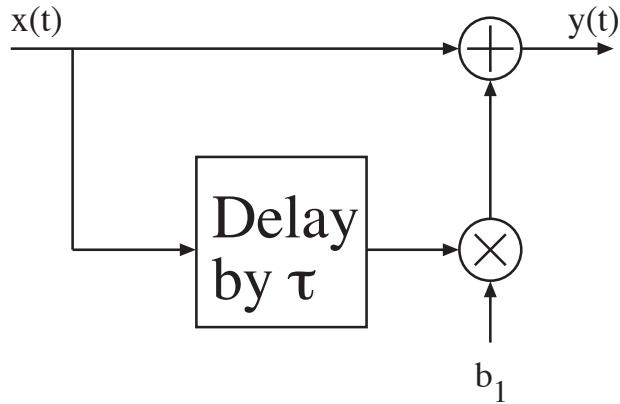


Figure 3.5: A basic feedforward filter block diagram.

The output of the delay block is sent to a multiplier, which multiplies it by the constant b_1 (sometimes, multiplication by a constant is just indicated by writing the constant next to a link). Its output, $y(t)$, is the summation of its input and a scaled (or *weighted*) version of its input delayed by τ . Given an input signal $x(t)$, its delayed version $x(t - \tau)$, and coefficient b_1 , the output $y(t)$ can be written by inspection of the block diagram as:

$$y(t) = x(t) + b_1 x(t - \tau) \quad (3-3)$$

3. FILTERING AND FEEDFORWARD FILTERS

When the input is a phasor, $x(t) = e^{j\omega t}$, equation (3-3) becomes:

$$y(t) = e^{j\omega t} + b_1 e^{j\omega(t-\tau)} \quad (3-4)$$

Notice that the input and the output have the same frequency, ω . We can factor out the $e^{j\omega t}$ in equation (3-4) to obtain:

$$y(t) = [1 + b_1 e^{-j\omega\tau}] e^{j\omega t} \quad (3-5)$$

$$= [1 + b_1 e^{-j\omega\tau}] x(t) \quad (3-6)$$

We now define a filter's *frequency response* (how its output varies as a function of the input frequency) to be the ratio of output to input,

$$\mathcal{H}(\omega) = \frac{y(t)}{x(t)} \quad (3-7)$$

which in this case is

$$\mathcal{H}(\omega) = 1 + b_1 e^{-j\omega\tau} \quad (3-8)$$

So, in general, the output of a filter can be expressed as the product of its input and its frequency response,

$$y(t) = \mathcal{H}(\omega)x(t) \quad (3-9)$$

Remember that τ is a constant delay; what can vary here (besides t , which is the same for both $x(t)$ and $y(t)$) is the frequency of the input, ω . So, $\mathcal{H}(\omega)$ is a complex function of frequency. Frequency response is generally written in a polar form with its magnitude response $|\mathcal{H}(\omega)|$ and phase response $\theta(\omega)$:

$$\mathcal{H}(\omega) = |\mathcal{H}(\omega)|e^{-j\theta(\omega)} \quad (3-10)$$

According to equations (3-9) and (3-10), for a given input sinusoid at frequency ω , the filter scales the amplitude by its magnitude response $|\mathcal{H}(\omega)|$ and shifts its phase by the phase response $\theta(\omega)$. These two functions completely define the filter's behavior. For this particular example, considering only the magnitude,

$$|\mathcal{H}(\omega)| = |1 + b_1 e^{-j\omega\tau}| \quad (3-11)$$

$$= |1 + b_1^2 + 2b_1 \cos(\omega\tau)|^{\frac{1}{2}} \quad (3-12)$$

(leaving the derivation to an upcoming self-test exercise).

Since $|\cos(\omega\tau)| \leq 1$, the maximum value $|\mathcal{H}(\omega)|$ can reach is $(1 + b_1)$, which occurs when the angle $\omega\tau = n\pi, n = 0, 2, 4, \dots$ (zero or even multiples of π). Why is this (answer in A.3 #2)? Similarly, the minimum of $|\mathcal{H}(\omega)|$ is $1 - b_1$, which happens when $\omega\tau = n\pi, n = 1, 3, 5, \dots$ (odd multiples of π). For example, let's say $\tau = 167\mu\text{s}$. Remembering that ω (radians/second) is converted to Hz by $\omega = 2\pi f$, this delay corresponds to a filter with passbands centered at $2\pi f\tau = n\pi$, or $f = n/(2\tau)$ for even n , producing maxima at 0, $1/\tau$

3. FILTERING AND FEEDFORWARD FILTERS

(6 kHz), and $2/\tau$ (12 kHz) and notches at $f = n/(2\tau)$ for odd n , or $1/(2\tau)$ (3 kHz), $3/(2\tau)$ (9 kHz), and $5/(2\tau)$ (15 kHz).

You can easily see how the input signal's frequency components (remember that all periodic functions can be expressed as sums of complex sinusoids) will be altered by the filter: when they are within the filter's passbands, they will be passed through; they will be reduced in magnitude or filtered out when their frequency matches the low magnitude response. Figure 3.2 is another example of a bandpass filter with passband [200 300] Hz. The input signal's frequencies out of this range are filtered out. This is shown in figure 3.4: in the output signal, only the frequency component at $f = 250$ Hz is left.

Self-Test Exercise

See A.3 #3 for the answer.

1. Use Euler's formula and the definition of the magnitude of a complex vector to derive (3-12) from (3-11).

3.2.3 Digital Filters

Electrical engineers have spent a lot of time developing different kinds of filter transfer functions for different classes of filters. You may run across names like Butterworth or Chebyshev. The motivation behind this has been to produce filters with good properties (flatness of the passband, steepness of the rolloff from the passband, minimal phase distortion) that is still implementable in analog hardware (operational amplifiers, resistors, and capacitors). However, once we digitize a signal, we can filter it in a computer because filtering is a mathematical operation and that's what computers do. By directly implementing a filter's frequency response, we can implement digital filters that may be difficult or impossible to implement in analog hardware.

To be implemented on a computer, an analog filter must be discretized in its variables, to yield a *digital filter*. There are two important points here related to digital filters compared to analog filters:

1. Time is expressed as an integer times a *sampling period*, T_s .
2. Only frequencies below the *Nyquist frequency* can be represented.

For the first point, recall that digitized time t or τ is in form of:

$$t = nT_s \quad (\text{digital time}) \quad (3-13)$$

or,

$$\tau = mT_s \quad (\text{digital delay}) \quad (3-14)$$

where n and m are integers, and T_s is the time interval between samples or the sampling period, whose units are sec/sample. Note in equation (3-14) that we can only delay a

3. FILTERING AND FEEDFORWARD FILTERS

digital signal by an integer number of sampling intervals. When the *sampling rate* is f_s (samples/second), $T_s = 1/f_s$. So the phasor becomes $e^{j\omega t} = e^{j\omega nT_s}$, with its exponent having units of radians/sec \times samples \times sec/samples = radians.

It's rather cumbersome to have to carry around T_s or f_s in all our equations. Additionally, if we keep these variables we will always need to note and remember the signal in question's Nyquist frequency. To simplify our notation, let's again use our notion of digital frequency, $\hat{\omega}$. Recall that $\hat{\omega} = \omega T_s$ and is a *normalized frequency* on the interval $-\pi$ to π (with units of radians/sample). Using this notation we only need to use the sample index n , rather than the analog time t . Similarly, our normalized frequency will be $\hat{f} = fT_s = f/f_s$, with units of cycles/sample. Our phasor then becomes $e^{j\omega nT_s} = e^{j\hat{\omega}n}$, and has the same form as the analog version, except that we are now using the sample index instead of continuous time.

For the second point, recall that the Nyquist frequency is:

$$f_{Nyquist} = \frac{f_s}{2} \quad (3-15)$$

Only frequencies below $f_{Nyquist}$ will be accurately represented after sampling, beyond it they are aliased to frequencies below $f_{Nyquist}$. It is important to restrict the frequency range to $f_{Nyquist}$ so you can get correct results.

Again, for convenience, the digital frequency can be normalized by f_s ,

$$\hat{f} = \frac{f}{f_s} \quad (3-16)$$

and

$$\hat{f}_{Nyquist} = \frac{f_{Nyquist}}{f_s} = \frac{f_s/2}{f_s} = \frac{1}{2} \quad (3-17)$$

Since the analog $f \leq f_s/2$, \hat{f} is a fraction that ranges between zero and $1/2$ — a fraction of the digital sampling rate. In other words, for a sinusoid, we can only have up to $1/2$ of a cycle per sample. We can multiply it by f_s to convert it back to the analog units of Hz, if necessary.

If $\hat{f}_{Nyquist}$ is $1/2$, the normalized $\hat{\omega}_{Nyquist}$ is

$$\hat{\omega}_{Nyquist} = 2\pi \hat{f}_{Nyquist} = 2\pi \times 1/2 = \pi \quad (3-18)$$

This explains why $\hat{\omega}$ is always between $-\pi$ and π and why \hat{f} is always between $-1/2$ and $1/2$ (its Nyquist!). Going back to our simple feedforward filter, the discrete representation of equation (3-12) with a one time step delay ($\tau = T_s$) is:

$$|\mathcal{H}(\hat{\omega})| = |1 + b_1^2 + 2b_1 \cos(\hat{\omega})|^{\frac{1}{2}} \quad (3-19)$$

3. FILTERING AND FEEDFORWARD FILTERS

When $\hat{\omega}$ is zero, $|\mathcal{H}(0)| = (1 + b_1)$. When $\hat{\omega} = \hat{\omega}_{Nyquist} = \pi$, $|\mathcal{H}(\hat{\omega}_{Nyquist})| = (1 - b_1)$. The response begins with a large magnitude and reaches a minimum at $\hat{f} = 1/2$ (the maximum digital frequency). The filter has a broad band from 0 until the minimum, so it can pass all the frequencies from 0 to below $1/2$ — this filter is a lowpass filter!

Self-Test Exercises

See [A.3 #4–5](#) for answers.

1. Suppose that we sample a signal at 1000Hz. For each of the following analog frequencies f , determine ω , \hat{f} , and $\hat{\omega}$. Indicate if that frequency will be aliased.
 - (a) $f = 100\text{Hz}$.
 - (b) $f = 200\text{Hz}$.
 - (c) $f = 500\text{Hz}$.
 - (d) $f = 1000\text{Hz}$.
2. Suppose that we sample a signal at 44.1kHz (the sampling rate used in audio CDs). For each of the following analog frequencies f , determine ω , \hat{f} , and $\hat{\omega}$. Indicate if that frequency will be aliased.
 - (a) $f = 100\text{Hz}$.
 - (b) $f = 1000\text{Hz}$.
 - (c) $f = 10000\text{Hz}$.
 - (d) $f = 20000\text{Hz}$.
 - (e) $f = 25000\text{Hz}$.

3.2.4 Delay as an Operator

We're still on our quest to make the mathematics of filter design and analysis as simple as possible. Generally, a feedforward filter can have many delays, not just one, and the input $x[n]$ to output $y[n]$ relation can be written as:

$$\begin{aligned}y[n] &= b_0x[n] + b_1x[n - 1] + \cdots + b_Mx[n - M] \\&= \sum_{k=0}^M b_kx[n - k]\end{aligned}\tag{3-20}$$

where M is the number of delays. We shall refer to this as the filter's *defining equation*. Each term in the summation corresponds to a parallel pathway in the block diagram with a particular delay and constant multiplier.

3. FILTERING AND FEEDFORWARD FILTERS

When $x[n]$ is the phasor $e^{jn\hat{\omega}}$ this becomes

$$y[n] = \sum_{k=0}^M b_k e^{jn\hat{\omega} - jk\hat{\omega}} \quad (3-21)$$

$$= e^{jn\hat{\omega}} \sum_{k=0}^M b_k e^{-jk\hat{\omega}} \quad (3-22)$$

$$= \underbrace{x[n]}_{\text{original signal}} \underbrace{\sum_{k=0}^M b_k e^{-jk\hat{\omega}}}_{\text{delaying terms}} \quad (3-23)$$

Now that you're comfortable with the concept of multiplication by the phasor $e^{-jk\hat{\omega}}$ being a delay, let's get rid of it. Seriously, though, it's a lot of writing; this phasor is acting as an *operator* which, when applied to another phasor, delays it. It is customary to use another symbol for convenience's sake. In this case, we define an *operator* z as follows:

$$z = e^{j\hat{\omega}} \quad (3-24)$$

This is a symbol that represents the application of an action on an object (an operation, so z is an operator). So a k time delay $e^{-jk\hat{\omega}}$ can be written as

$$z^{-k} = e^{-jk\hat{\omega}} \quad (3-25)$$

Here z^{-k} is a k time *delay operator*, where $k = 0, 1, 2, \dots$ denotes the $0, 1, 2, \dots k, \dots$ time step delay. Operators are a general concept in mathematics, which can be used in many other circumstances to simplify notation.

Example 1: Consider a “square” operator S , which squares the thing on which it operates. When it operates on a variable x , we get:

$$Sx = x^2$$

Example 2: The transpose operator T is commonly used in linear algebra. It *transposes* the matrix to which it is applied, exchanging its rows and columns. For example, when applied to the matrix \mathbf{A} ,

$$\mathbf{A} = \begin{bmatrix} 1 & 2 & 3 \\ 4 & 5 & 6 \\ 7 & 8 & 9 \end{bmatrix}$$

the result is

$$\mathsf{T}\mathbf{A} = \mathbf{A}^\mathsf{T} = \begin{bmatrix} 1 & 4 & 7 \\ 2 & 5 & 8 \\ 3 & 6 & 9 \end{bmatrix}$$

3. FILTERING AND FEEDFORWARD FILTERS

An operator can be thought of as purely notation (though this can be a subtle point): it stands for a mathematical operation. We could use a functional notation, for example $\text{delay}(x[n])$ just as well. However, if the mathematical operation has certain properties, then the operator notation is much more useful, as its syntax gives us “direct access” to these properties because of our familiarity with them from other mathematical operations. In the case of delay, the z^{-k} operator notation “works” because of the properties of multiplication and division on exponents (exponents add during multiplication; exponents are negated when dividing). We are not “really” multiplying or dividing, in the true sense of mathematical multiplication and division operations. Instead, we are applying the delay operator or its inverse because it “looks like” multiplication or division.

Now we’re ready to analyze how a digital filter responds to an input. Let the vector $X = \{x[0], x[1], \dots, x[n], \dots\}$ be the entire digital input signal: the ordered set of all samples. We use the same notation to produce the vector Y for the ordered set of output samples. Instead of using just one sample ($x[n]$ and $y[n]$) as in equation (3-23), let’s substitute X and Y and the delay operator z^{-k} to obtain an equation that describes the action of a filter on an entire digital signal (in other words, how to compute *all* of the elements of Y “simultaneously” using a single parallel operation):

$$Y = \sum_{k=0}^M b_k z^{-k} X \quad (3-26)$$

$$= [b_0 + b_1 z^{-1} + \dots + b_k z^{-k} + \dots] X \quad (3-27)$$

The benefit of using the delay operator is that it makes the task of factoring out the entire signal X simple. If we call the expression in the square brackets $H(z)$,

$$H(z) = \sum_{k=0}^M b_k z^{-k} \quad (3-28)$$

$$= b_0 + b_1 z^{-1} + \dots + b_k z^{-k} + \dots \quad (3-29)$$

we get

$$Y = H(z)X \quad (3-30)$$

$H(z)$ is also an operator, which transfers the input signal X to the output signal Y , so it is called the filter’s *transfer function*. The relation between the analog frequency response and digital transfer function is

$$\mathcal{H}(\hat{\omega}) = H(z)|_{z=e^{j\hat{\omega}}} \quad (3-31)$$

So, we evaluate the transfer function $H(z)$ at the frequency $\hat{\omega}$ by substituting $z = e^{j\hat{\omega}}$ to get the frequency response. For $M = 1$ (a filter with a single delay), this yields

$$Y = H(z)X = [b_0 + b_1 z^{-1}]X \quad (3-32)$$

Equation (3-32) says that the output equals the weighted sum of the input signal and the input signal delayed by one time step (one sampling interval).

3. FILTERING AND FEEDFORWARD FILTERS

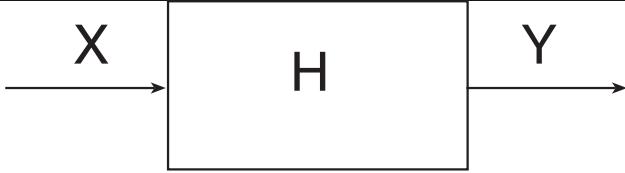


Figure 3.6: Treat transfer function as a black box.

We can treat the transfer function as a black box that does everything that the filter needs to do. We only need to pay attention to the input and output, as in figure 3.6. This give us a way to combine different filters, simply by composing block diagrams. Consider two simple filters $H_1(z)$ and $H_2(z)$ connected in series. $H_1(z)$ has input X and output W , and $H_2(z)$ takes $H_1(z)$'s output as its input and outputs Y . Starting from the output of this system, this can be written

$$Y = H_2(z)W = H_2(z)[H_1(z)X] = \underbrace{[H_2(z)H_1(z)]}_{\text{combined transfer function}} X \quad (3-33)$$

This suggests that the combined transfer function is $H_2(z)H_1(z)$. In fact, we can interchange the order

$$H_2(z)H_1(z) = H_1(z)H_2(z) \quad (3-34)$$

Because the transfer function is a polynomial, this gives us a way to represent digital filtering as just multiplication by a polynomial (and the product of two polynomials is just another polynomial).

Self-Test Exercises

See A.3 #6–8 for answers.

1. Write equation (3-23) for $M = 0, 1, 2, 3$, then write the transfer function for each.
2. Given the signal $x(t) = \sin t$ and the derivative operator $D = d/dt$, what is $Dx(t)$?
3. When

$$H_1(z) = b_0 + b_1 z^{-1}$$

$$H_2(z) = b'_0 + b'_1 z^{-1}$$

and b_0 , b_1 , b'_0 , and b'_1 are constants, show that $H_2(z)H_1(z) = H_1(z)H_2(z)$.

3.2.5 The z-plane

We just used z as a delay operator without much comment as to why we picked it. In mathematics, the same symbol is used for the complex plane (also called the z-plane). The operator $z = e^{j\hat{\omega}}$ is a complex variable in the z-plane. For any value of $\hat{\omega}$, it lies on a circle of radius one, at an angle of $\hat{\omega}$ relative to the positive real axis — it is the polar representation

3. FILTERING AND FEEDFORWARD FILTERS

of a complex number with a magnitude of one. As $\hat{\omega}$ varies from zero to 2π (or $-\pi$ to $+\pi$, if you prefer not to consider $\hat{\omega} > \hat{\omega}_{Nyquist}$), its path is the unit circle in the z-plane. Since the Nyquist frequency $\hat{\omega}_{Nyquist} = \pi$, we are only interested in the top of half of the circle running from $\hat{\omega} = 0$ to $\hat{\omega} = \pi$.

Using the complex plane makes filters easier to analyze (just like phasors!). To understand why, we will need to develop the relationship between the frequency response of a filter and the complex plane. Let's examine the defining equation of a simple digital filter with one time delay:

$$y[n] = x[n] - b_1 x[n - 1] \quad (3-35)$$

Just for convenience, we have used subtraction instead of summation (or, equivalently you can think of using a negative weight on the delayed signal). Using the delay operator z and the transfer function $H(z)$, this becomes:

$$Y = [1 - b_1 z^{-1}]X = H(z)X \quad (3-36)$$

We can express the transfer function as

$$H(z) = 1 - b_1 z^{-1} = (1 - b_1 z^{-1}) \frac{z}{z} = \frac{z - b_1}{z} \quad (3-37)$$

For our purposes, we shall restrict ourselves to considering z to be on the unit circle ($z = e^{j\hat{\omega}}$). The magnitude of $H(z)$ is the same as the magnitude of $\mathcal{H}(\hat{\omega})$, so the magnitude of the frequency response is

$$|\mathcal{H}(\hat{\omega})| = |H(z)|_{z=e^{j\hat{\omega}}} = \frac{|z - b_1|_{z=e^{j\hat{\omega}}}}{|z|_{z=e^{j\hat{\omega}}}} = |z - b_1|_{z=e^{j\hat{\omega}}} \quad (3-38)$$

You can see that although $z = 0$ makes the denominator of $H(z)$ zero, we're not considering that case — we've already said that we're on the unit circle: that $|z| = 1$. The value that makes the denominator of $H(z)$ zero is called a *pole*, which we will talk about in a subsequent chapter.

Equation (3-38) tells us that the magnitude of the transfer function is the distance between z and b_1 in the complex plane. Since z is a vector from the origin to the unit circle and b_1 is a constant, which can be any number here, $|\mathcal{H}(\hat{\omega})|$ is equal to the length of the vector from b_1 to the unit circle where z points. As this length becomes shorter, $|\mathcal{H}(\hat{\omega})|$ becomes smaller. We can see that is the case when z nears b_1 .

The other thing that equation (3-38) tells us is that when $z = b_1$, $\mathcal{H}(\hat{\omega}) = 0$, so b_1 is a *root* of $\mathcal{H}(\hat{\omega})$ — also called a *zero* — which makes the magnitude of the frequency response reach its minimum. When the zero (b_1) is near $\hat{\omega} = 0$ ($z = 1$), this results in a high pass filter because it doesn't pass frequencies near zero (low frequencies). Similarly, when the zero (b_1) is near $\hat{\omega} = \pi$ ($z = -1$) we obtain a low pass filter: high frequency components are filtered out. In this way, we can graph the zeros of a filter in the z-plane to better understand its behavior.

3. FILTERING AND FEEDFORWARD FILTERS

Example 3: Consider the general two-time-step delay feedforward filter,

$$y[n] = x[n] + b_1x[n-1] + b_2x[n-2]$$

where b_1 and b_2 are real constants. Let's analyze its behavior. The transfer function is

$$\begin{aligned} H(z) &= 1 + b_1z^{-1} + b_2z^{-2} \\ &= (1 + b_1z^{-1} + b_2z^{-2}) \frac{z^2}{z^2} \\ &= \frac{z^2 + b_1z + b_2}{z^2} \end{aligned}$$

The magnitude response is

$$|H(z)| = \frac{|z^2 + b_1z + b_2|}{|z^2|} \quad (3-39)$$

It has two poles at zero; however, as we already know, $|z^2| = 1$, so they don't affect the magnitude response. So $|H(z)|$ becomes:

$$|H(z)| = |z^2 + b_1z + b_2| \quad (3-40)$$

The zeros of this magnitude response are merely the roots of a polynomial of order two,

$$z_{1,2} = \frac{-b_1 \pm \sqrt{b_1^2 - 4b_2}}{2} \quad (3-41)$$

For real b_k , the possible types of zeros are:

- When $b_1^2 > 4b_2$, there are two real zeros.
- When $b_1^2 = 4b_2$, there are repeated zeros at $-b_1$.
- When $b_1^2 < 4b_2$, there are two complex conjugate zeros

Let's call the two solutions of equation (3-41) z_1 and z_2 . Since these are the roots of the magnitude response, we can factor the polynomial in (3-40) that describes the magnitude response as:

$$|H(z)| = |(z - z_1)(z - z_2)| \quad (3-42)$$

We can write the zeros in polar form, for convenience of visualization, as

$$z_i = r_i e^{j\hat{\omega}_{0i}}, \quad i = 1, 2 \quad (3-43)$$

where $r_i > 0$ are the radii where the zeros are located, and $\hat{\omega}_{0i}$ their angles. Depending on the angles $\hat{\omega}_{0i}$, the zeros can be either real or complex. For example, when $\hat{\omega}_{0i} = 0$, the zero lies on the z-plane's real axis, and when $\hat{\omega}_{0i} = \pi/2$, it is on the imaginary axis. Actually, when a filter's coefficients are real, if one of the zeros is a complex number, the other one

3. FILTERING AND FEEDFORWARD FILTERS

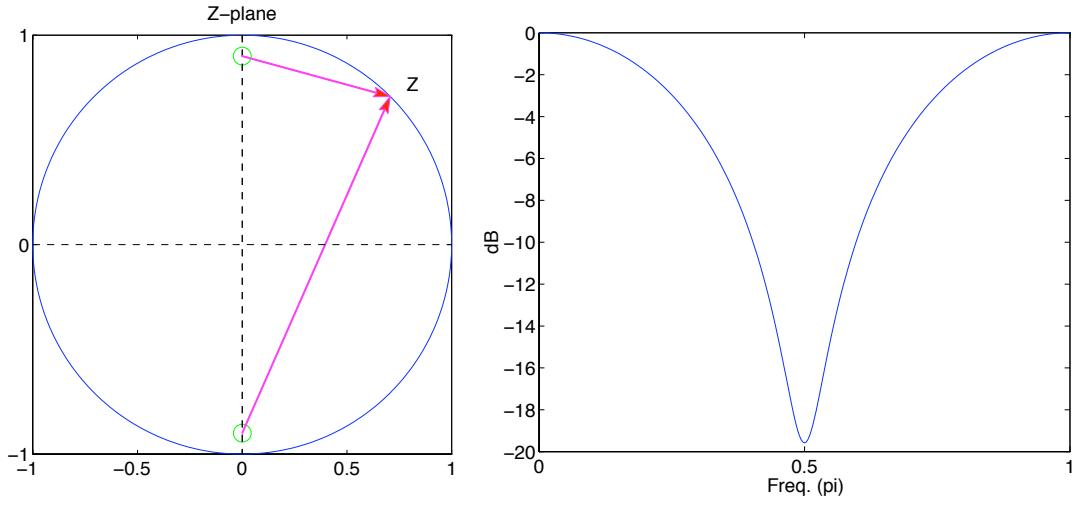


Figure 3.7: Two zero feedforward filter with $r = 0.9$, $\hat{\omega}_0 = \pm\pi/2$ and magnitude of frequency response.

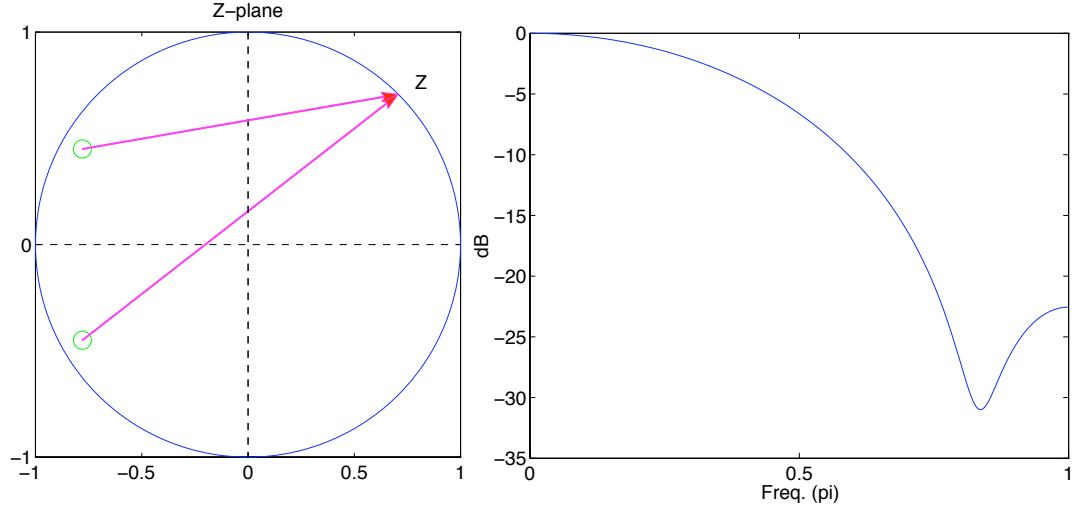


Figure 3.8: Two zero feedforward filter. $r = 0.9$, $\hat{\omega}_0 = \pm 5\pi/6$ and magnitude of frequency response.

will be its conjugate mate (if one of them is real, the other will be real, too). So, in the case where one zero is imaginary at $\hat{\omega}_{0i} = \pi/2$, the other zero's angle would be $\hat{\omega}_0 = -\pi/2$. So, for this filter and real coefficients, the pair of complex zeros can be written as

$$z_{1,2} = re^{\pm j\hat{\omega}_0} \quad (3-44)$$

Figures 3.7 and 3.8 show two different sets of zero locations. The magnitude responses for those two sets of zeros are also presented.

3. FILTERING AND FEEDFORWARD FILTERS

3.2.6 Phase Response

So far we have been talking about the magnitude response of $\mathcal{H}(\hat{\omega})$. In the last topic of this chapter, let's talk about its phase response. We already know that $\mathcal{H}(\hat{\omega})$ can be expressed in polar form, with its magnitude and angle

$$\mathcal{H}(\hat{\omega}) = |\mathcal{H}(\hat{\omega})| e^{j\theta(\hat{\omega})} \quad (3-45)$$

$|\mathcal{H}(\hat{\omega})|$ is the magnitude response and $\theta(\hat{\omega})$ is the phase response. The phase response can be computed as

$$\theta(\hat{\omega}) = \angle \mathcal{H}(\hat{\omega}) = \arctan \left(\frac{\text{Im}[\mathcal{H}(\hat{\omega})]}{\text{Re}[\mathcal{H}(\hat{\omega})]} \right) \quad (3-46)$$

When the input signal is a phasor, $x[n] = e^{jn\hat{\omega}}$, the filter's output is

$$y[n] = \underbrace{|\mathcal{H}(\hat{\omega})| e^{j\theta(\hat{\omega})}}_{\mathcal{H}(\hat{\omega})} e^{jn\hat{\omega}} = \underbrace{|\mathcal{H}(\hat{\omega})|}_{\text{change in magnitude}} \underbrace{e^{j(n\hat{\omega} + \theta(\hat{\omega}))}}_{\text{phase shift}} \quad (3-47)$$

So, what a filter does to a phasor (one frequency of the input) is to change the input's magnitude at that frequency by multiplying by $|\mathcal{H}(\hat{\omega})|$ and shift its phase (which is the same thing as delaying it) by the phase response $\theta(\hat{\omega})$.

Example 4: Let's examine the previous example (from the discussion of the z-plane):

$$y[n] = x[n] + b_1 x[n - 1] + b_2 x[n - 2]$$

Its transfer function is

$$H(z) = 1 + b_1 z^{-1} + b_2 z^{-2}$$

with the values $b_1 = 0$ and $b_2 = 1$. The frequency response can be separated into the magnitude and phase response according to,

$$\mathcal{H}(\hat{\omega}) = 1 + b_1 e^{-j\hat{\omega}} + b_2 e^{-2j\hat{\omega}} \quad (3-48)$$

$$= 1 + e^{-2j\hat{\omega}} \quad (\text{substitute for } b_1, b_2)$$

$$= e^{-j\hat{\omega}} (e^{j\hat{\omega}} + e^{-j\hat{\omega}}) \quad (\text{factor out } e^{-j\hat{\omega}})$$

$$= \underbrace{e^{-j\hat{\omega}}}_{\text{phase response}} \underbrace{2 \cos(\hat{\omega})}_{\text{magnitude response}} \quad (\text{use Euler's formula}) \quad (3-49)$$

The magnitude of equation (3-49) is:

$$|\mathcal{H}(\hat{\omega})| = 2 |\cos(\hat{\omega})| \quad (3-50)$$

and the phase is

$$\theta(\hat{\omega}) = \begin{cases} -\hat{\omega} & 0 \leq \hat{\omega} < \pi/2 \\ \pi - \hat{\omega} & \pi/2 < \hat{\omega} \leq \pi \end{cases} \quad (3-51)$$

3. FILTERING AND FEEDFORWARD FILTERS

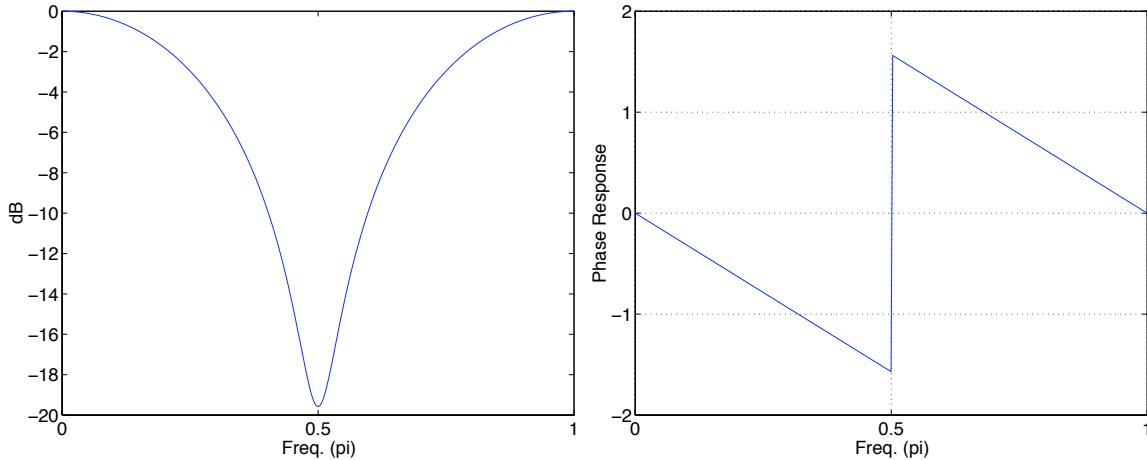


Figure 3.9: Magnitude and phase response of two time delay feedforward filter, with $b_1 = 0, b_2 = 1$ in (3-53). Its zeros are at $e^{\pm j\pi/2}$.

Notice there is a jump of $\pi = 180^\circ$ when the $\cos \hat{\omega}$ goes from positive to negative at $\hat{\omega} = \pi/2$.

In other words *both* the magnitude and phase responses are functions of $\hat{\omega}$ — they change the input in a frequency-dependent way. According to equation (3-50), the two zeros of the transfer function are at:

$$\hat{\omega} = \pm \frac{\pi}{2}$$

which, in the z-plane, are a pair of complex zeros on the imaginary axis. Using polar coordinates they are

$$z_{1,2} = e^{\pm j\pi/2} \quad (3-52)$$

with $r = 1$.

We can illustrate the effect of this filter in a simple manner by examining the response when the input is a phasor (a single frequency, $x[n] = e^{jn\hat{\omega}}$):

$$y[n] = \mathcal{H}(\hat{\omega})x[n] = 2 \cos \hat{\omega} e^{j(n-1)\hat{\omega}} \quad (3-53)$$

We can see that the effect of the filter on the input signal is to delay it by one sampling interval (from the $(n-1)$ term in the exponential) and to multiply it by $2 \cos \hat{\omega}$. Notice that the delay is independent of its frequency. When all the frequency components of a signal are delayed by an equal amount, we say the filter has *no phase distortion* or *linear phase*. The magnitude response and phase response are shown in figure 3.9.

Example 4: generic method [optional] There is also a more generic method to get the filter's phase response that will work for any value of b_1 and b_2 , for which we need to access

3. FILTERING AND FEEDFORWARD FILTERS

the frequency response's real and imaginary parts. The frequency response is

$$\begin{aligned}\mathcal{H}(\hat{\omega}) &= 1 + b_1 e^{-j\hat{\omega}} + b_2 e^{-2j\hat{\omega}} \\ &= 1 + b_1(\cos \hat{\omega} - j \sin \hat{\omega}) + b_2(\cos 2\hat{\omega} - j \sin 2\hat{\omega}) \\ &= \underbrace{(1 + b_1 \cos \hat{\omega} + b_2 \cos 2\hat{\omega})}_{\text{Re}[\mathcal{H}(\hat{\omega})]} - j \underbrace{(b_1 \sin \hat{\omega} + b_2 \sin 2\hat{\omega})}_{j \text{Im}[\mathcal{H}(\hat{\omega})]}\end{aligned}\quad (3-54)$$

where we have used Euler's formula to rewrite it so that we can separate its real and imaginary components. We can obtain the magnitude response from the square root of the sum of the squares of these components and the phase response using equation (3-46).

When the magnitude response of a filter is plotted, the y axis scale is usually expressed in decibels (dB), a logarithmic scale. We can take advantage of this to slightly simplify its computation. To do this, we note that the *square* of the magnitude response is the sum of the squares of the real and imaginary components:

$$|\mathcal{H}(\hat{\omega})|^2 = [1 + b_1 \cos \hat{\omega} + b_2 \cos 2\hat{\omega}]^2 + [b_1 \sin \hat{\omega} + b_2 \sin 2\hat{\omega}]^2 \quad (3-55)$$

A quantity is converted to dB by taking twenty times the logarithm (base ten). $|\mathcal{H}(\hat{\omega})|$ can be converted to dB as

$$\begin{aligned}|\mathcal{H}(\hat{\omega})|_{dB} &= 20 \log_{10} |\mathcal{H}(\hat{\omega})| = 10 \log_{10} |\mathcal{H}(\hat{\omega})|^2 \\ &= 10 \log_{10} \{[1 + b_1 \cos \hat{\omega} + b_2 \cos 2\hat{\omega}]^2 + [b_1 \sin \hat{\omega} + b_2 \sin 2\hat{\omega}]^2\}\end{aligned}$$

Which is a trivial matter to compute for any value of $\hat{\omega}$ (on a computer) for plotting purposes. The phase response is

$$\theta(\hat{\omega}) = \arctan \left[\frac{-(b_1 \sin \hat{\omega} + b_2 \sin 2\hat{\omega})}{1 + b_1 \cos \hat{\omega} + b_2 \cos 2\hat{\omega}} \right] \quad (3-56)$$

Consider the special case used in the previous example: $b_1 = 0$ and $b_2 = 1$ (a filter with a two-step delay). Substituting these values into equations (3-55) and (3-56), the squared magnitude becomes

$$\begin{aligned}|\mathcal{H}(\hat{\omega})|^2 &= (1 + \cos 2\hat{\omega})^2 + \sin^2 2\hat{\omega} \\ &= 1 + 2 \cos 2\hat{\omega} + \cos^2 2\hat{\omega} + \sin^2 2\hat{\omega} \\ &= 1 + 2 \cos 2\hat{\omega} + 1 \\ &= 2(1 + \cos 2\hat{\omega}) \\ &= 2(1 + 2 \cos^2 \hat{\omega} - 1) \\ &= 4 \cos^2 \hat{\omega}\end{aligned}$$

Where the next to last step made use of the double-angle identity, $\cos 2\theta = 2 \cos^2 \theta - 1$. The square root of this is

$$|\mathcal{H}(\hat{\omega})| = 2 |\cos \hat{\omega}|$$

3. FILTERING AND FEEDFORWARD FILTERS

Which is exactly what we calculated in equation (3-50)!

With the substitution, the phase response becomes

$$\theta(\hat{\omega}) = \arctan\left(\frac{-\sin 2\hat{\omega}}{1 + \cos 2\hat{\omega}}\right) \quad (3-57)$$

If we remember the double-angle formulae,

$$\begin{aligned}\sin 2\hat{\omega} &= \frac{2 \tan \hat{\omega}}{1 + \tan^2 \hat{\omega}} \\ \cos 2\hat{\omega} &= \frac{1 - \tan^2 \hat{\omega}}{1 + \tan^2 \hat{\omega}}\end{aligned}$$

and substitute them into equation (3-57), we get

$$\begin{aligned}\theta(\hat{\omega}) &= \arctan\left(\frac{-2 \tan \hat{\omega}}{2}\right) \\ &= \arctan(-\tan \hat{\omega}) \\ &= \begin{cases} -\hat{\omega} & 0 \leq \hat{\omega} < \pi/2 \\ \pi - \hat{\omega} & \pi/2 < \hat{\omega} \leq \pi \end{cases}\end{aligned}$$

Which is what we calculated in equation (3-51).

The final result for the transfer function, written in polar form, is:

$$\mathcal{H}(\hat{\omega}) = |\mathcal{H}(\hat{\omega})| e^{j\theta(\hat{\omega})} = e^{-j\hat{\omega}} 2 \cos \hat{\omega} \quad (3-58)$$

Self-Test Exercises

See A.3 #9–10 for answers.

1. Prove $|z^2| = 1$ in equation (3-39).
2. Starting with the factored magnitude response in equation (3-42), derive expressions for b_1 and b_2 in terms of z_1 and z_2 .

3.2.7 Implementing Digital Filters

Implementing feedforward digital filters is really quite straightforward. Let's first look at how we would implement the two time delay feedforward filter $y[n] = x[n] + b_1x[n-1] + b_2x[n-2]$, when $b_1 = 0$, $b_2 = 1$, using pseudocode. I'll present segments of a script to do the computation and plot some results with my comments on it interspersed.

In algorithm 3.1, we've generated a discrete signal x containing sine wave values at all the time points at which the sampling should occur (100 samples at 100Hz = 1 second). The signal has two frequency components: one at 5Hz and one at 25Hz (both well below the Nyquist frequency).

3. FILTERING AND FEEDFORWARD FILTERS

Algorithm 3.1 Generate two sinusoids.

```
 $F_s = 100, N = 100, T_s = 1/F_s$ 
 $f_1 = 5$  and  $f_2 = 25$ 
for  $n = 0, 1, 2, \dots, N - 1$  do
     $x[n] = \sin(2\pi f_1 n T_s) + \sin(2\pi f_2 n T_s)$ 
end for
```

Algorithm 3.2 Filtering.

```
 $b_1 = 0$  and  $b_2 = 1$ 
 $y[0] = 0$  and  $y[1] = 0$ 
for  $n = 2, 3, 4, \dots, N - 1$  do
     $y[n] = x[n] + b_1 x[n - 1] + b_2 x[n - 2]$ 
end for
```

In algorithm 3.2, we have the luxury of being able to hold the entire input and output signal in arrays. Because there is a two time step delay, we can't compute a value for $y[0]$ or $y[1]$, so those are set to zero.

After we filter the sum of sinusoids, we want to see what happened to the signal's frequency components. We will use the fast Fourier Transform to analyze the components. We'll talk about the Fourier transform and FFT in section 6.1. Figure 3.10 shows the magnitude of each frequency in the generated and filtered sine waves. From the plot we can see that the high frequency wave is completely filtered out. And finally, we'll plot the input and output. They're shown in figure 3.10 (right).

How would one implement this in a language like C, C++, Java, etc? Let's not worry about the plotting issue: that would certainly have to be dealt with, but it would involve either getting a graphics library, writing one's own, or using an external plotting package (ideally, one targeted at scientific and engineering applications, rather than one written for business). For example, a fine alternative would be to vectorize all the array operations and use MATLAB. We will discuss the `fft()` function in section 6.2.5. The only remaining issue is that of keeping the entire input and output signal in memory.

In general, it is not possible to keep the entire input and output signal in memory. In fact, many (if not most) digital signal processing applications involve real-time processing, so the computer system really needs to be viewed as just a stage in a processing pipeline, with the input flowing in and the output flowing out (just like the block diagrams used to illustrate filters). We can therefore only devote a relatively small amount of memory to hold the part of the input and output needed for the current computation. If n delayed samples of the input are needed to compute each output value, we will need storage for $n + 1$ input samples (the current one plus the delayed samples). For a feedforward filter, there is no need to save output values; they can be sent out as soon as they are computed.

What abstract data type (ADT) should hold the delayed inputs (answer in A.3 #11)? As each input sample comes in, it displaces the oldest input sample from our buffer of $n + 1$ values. For computer scientists, this is clearly a first-in-first-out (FIFO) ADT — a *queue*.

3. FILTERING AND FEEDFORWARD FILTERS

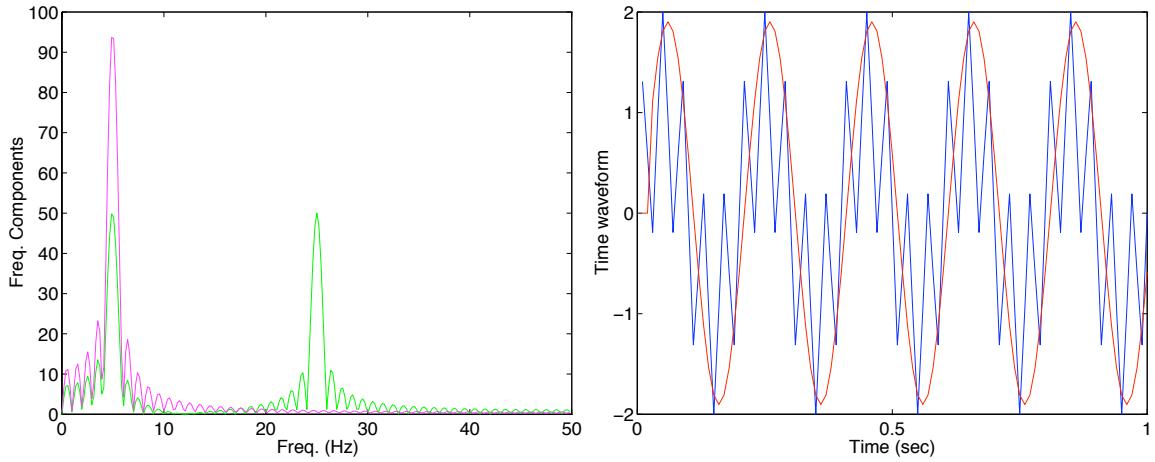


Figure 3.10: The spectrum of a two frequency component sine wave and its filtered version, using the feedforward filter $y[n] = x[n] + x[n - 2]$, $f_1 = 5\text{Hz}$ and $f_2 = 25\text{Hz}$. Zeros are at $z_0 = 0.99e^{\pm j\pi/2}$. The time waveforms are also shown.

A queue is very efficiently and simply implemented in an array, especially when the queue size is fixed. Furthermore, you can treat the array as though it were circular using indexing modulo the queue size.

3.3 Problems

1. In Example 4, we used a large number of trigonometric identities to go from the filter's frequency response in (3-54) to the results in (3-58) and (3-53) for the special case of $b_1 = 0$ and $b_2 = 1$. There is an easier way. First, substitute the values of $b_{1,2}$ into (3-54), and then use the fact that we can always factor a real number into a product of complex conjugate numbers, i.e., $1 = e^{j\hat{\omega}}e^{-j\hat{\omega}}$. A little bit of algebra and Euler's formula should allow you to derive the results (3-58) and (3-53) of Example 4 much easier.
2. For the filter whose magnitude response is described in (3-42), plot the location of a pair of complex conjugate zeros at $r = 0.8$ and $\hat{\omega}_0 = \pm\pi/4$. Using MATLAB, compute and plot the filter's magnitude response. Submit your code with your figures.
3. In the self-test exercise on page 55, two filters with transfer functions $H_1(z) = b_0 + b_1 z^{-1}$ and $H_2(z) = b'_0 + b'_1 z^{-1}$ were connected in series, and it was shown that they could be connected in either order to produce the same composite effect (the same overall transfer function). Redo this exercise using the defining equations for the two filters, i.e., $y_1[n] = F_1(x[n])$ for the filter with transfer function $H_1(z)$ and $y_2[n] = F_2(x[n])$ for the filter with transfer function $H_2(z)$. In other words, show that $F_2(F_1(x[n])) = F_1(F_2(x[n]))$.

3. FILTERING AND FEEDFORWARD FILTERS

4. Use MATLAB to plot the results of filtering the following signals with the filter: $y[n] = x[n] + x[n - 1]$. Submit your code with your results.
 - (a) $x[n] = n$
 - (b) $x[n] = \sin(n\pi/100)$
 - (c) $x[n] = \begin{cases} +1 & n \bmod 5 \text{ even} \\ -1 & n \bmod 5 \text{ odd} \end{cases}$
5. Check the following factorization: $z^2 - z + 1 = (z - e^{j\pi/3})(z - e^{-j\pi/3})$

3.4 Further Reading

- James H McClellan, Ronald W. Schafer, and Mark A. Yoder, *DSP First: A Multimedia Approach*, Prentice Hall, 1998, ch. 5 (§5.1–5.3), 6 (§6.1, 6.4–6.7).

3. FILTERING AND FEEDFORWARD FILTERS

4

The Z-Transform and Convolution

Two signal processing tools — the *z transform* and *convolution* — are introduced in this chapter. These operations play important roles in the analysis of discrete-time signals (which is what we do in the computer). We shall see that they are related — the convolution of two time-domain signals (which is what we do when we filter a signal) is equivalent to multiplication of their corresponding z-transforms. This is one example of how these representations can greatly simplify computation.

After studying this chapter, you should be able to understand what the z-transform and convolution are, and how to implement them. You should understand the differences between them and the other transforms: Fourier series, Fourier transform, and discrete Fourier transform. You will enrich your knowledge of filter transfer functions with its time domain representation: its *impulse response*.

4.1 Domains

Up to this point, we have covered the Fourier series representation of a signal as a weighted sum of sinusoids. In effect, the Fourier series *transforms* a finite and periodic, continuous signal in the time *domain* into an infinite, discrete spectrum in the frequency *domain*. When we use the term *domain*, we merely mean a particular way of looking at a signal. In this case, we have two different ways of thinking about our signals: as functions of time or as functions of frequency. These are equivalent, in the sense that we can convert the signal's representation back and forth between the two domains without loss of information (neglecting matters such as roundoff error).

In future chapters, we will cover two other transforms:

Fourier transform transforms an infinite, continuous signal in the time domain into an infinite, continuous spectrum in the frequency domain.

Discrete Fourier transform transforms a finite, discrete signal in the time domain into a finite, discrete spectrum in the frequency domain.

Here, however, we will learn about the *z-transform*, which converts an infinite, discrete signal in the time domain into a finite, continuous spectrum in the frequency domain. The z-transform fills the last combination among “finite vs. infinite; continuous vs. discrete”.

4. THE Z-TRANSFORM AND CONVOLUTION

Table 4.1: Summary of frequency transforms.

Transform	Time Domain	Frequency Domain
Fourier Series	Finite, Continuous	Infinite, Discrete
Fourier Transform	Infinite, Continuous	Infinite, Continuous
Discrete Fourier Transform	Finite, Discrete	Finite, Discrete
Z-Transform	Infinite, Discrete	Finite, Continuous

Table 4.1 summarizes all four transforms. As you can see, continuous versus discrete in the time domain transforms to infinite versus finite in the frequency domain, while finite versus infinite in the time domain transforms to discrete versus continuous in the frequency domain.

4.2 The z-transform

The *z-transform* of a discrete time signal $x[n]$, $n = 0, \pm 1, \pm 2, \dots, \pm \infty$ is defined as the power series

$$X(z) \equiv \sum_{k=-\infty}^{\infty} x[k]z^{-k} \quad (4-1)$$

where z is a continuous complex variable. It transforms the time domain, infinite, discrete sequence into its complex plane representation $X(z)$. Since the z-transform is an infinite power series, it exists only for those values of z for which this series converges. The *region of convergence* (ROC) of $X(z)$ is the set of all values of z for which $X(z)$ has a finite value. We consider the z-transform to be a transform between the time domain and the frequency domain because we can substitute $z = e^{j\hat{\omega}}$ into equation (4-1) to get the signal's (finite and continuous) frequency content $\mathcal{X}(\hat{\omega})$ — just as we previously made the same substitution to derive a feedforward filter's frequency response from its transfer function.

The relationship between $x[n]$ and $X(z)$ can be indicated by the *transform pair*

$$\underbrace{x[n]}_{\text{function of sample \#}} \xleftrightarrow{\mathbf{z}} \underbrace{X(z)}_{\text{function of complex } z} \quad (4-2)$$

Self-Test Exercises

See A.4 #1–2 for answers.

1. Determine the z-transform for the sequence $x[n] = \{1, 2, 5, 7, 0, 1\}$, $n = 0, 1, 2, 3, 4, 5$
2. Determine the z-transform of the sequence $x[n] = \{1, 2, 5, 7, 0, 1\}$, $n = -2, -1, 0, 1, 2, 3$

4. THE Z-TRANSFORM AND CONVOLUTION

4.2.1 Example: z-transform of an impulse

The *unit impulse* or *unit sample* signal is the δ function,

$$\delta[n] = \begin{cases} 1 & n = 0 \\ 0 & n \neq 0 \end{cases} \quad (4-3)$$

It has value of zero for every sample except $n = 0$, for which it has a value of one. Substituting this signal into (4-1) to get its z-transform, we have

$$\begin{aligned} \Delta(z) &= \sum_{k=-\infty}^{\infty} \delta[k]z^{-k} \\ &= 1z^{-0} = 1 \end{aligned} \quad (4-4)$$

that is

$$\delta[n] \xrightarrow{\text{Z}} 1 \quad (4-5)$$

Since the frequency content of the signal is the magnitude of its z-transform on the unit circle in the z-plane,

$$|\mathcal{D}(\hat{\omega})| = |\Delta(e^{j\hat{\omega}})| = 1 \quad (4-6)$$

This tells us that the frequency content is the same for all frequencies: an impulse has a *flat spectrum*.

What about time shifted impulses,

$$\delta[n - n_0] = \begin{cases} 1 & n = n_0 \\ 0 & n \neq n_0 \end{cases}, \quad n_0 > 0 \quad (4-7)$$

$$\delta[n + n_0] = \begin{cases} 1 & n = -n_0 \\ 0 & n \neq -n_0 \end{cases}, \quad n_0 > 0 \quad (4-8)$$

In these cases the nonzero value is not at sample zero, but at samples n_0 or $-n_0$. We can compute the z-transform as before,

$$\begin{aligned} \Delta(z) &= \sum_{k=-\infty}^{\infty} \delta[k - n_0]z^{-k} \\ &= 1z^{-n_0} = z^{-n_0} = \frac{1}{z^{n_0}} \end{aligned} \quad (4-9)$$

for $\delta[n - n_0]$. The z-transform for this shifted unit impulse has one value, z^{-n_0} , for any $z \neq 0$.

$$\delta[n - n_0] \xrightarrow{\text{Z}} \frac{1}{z^{n_0}}, \quad n_0 > 0 \quad (4-10)$$

Its frequency content is also one, just like $\delta[n]$ (remember that we compute the spectrum for values of z on the unit circle),

$$|\mathcal{D}(\hat{\omega})| = |\Delta(e^{j\hat{\omega}})| = |e^{-jn_0\hat{\omega}}| = 1 \quad (4-11)$$

4. THE Z-TRANSFORM AND CONVOLUTION

This is not surprising at all, because it is, after all, just a time-shifted version of $\delta[n]$. The signal $\delta[n + n_0]$ is left as a self-test exercise.

Self-Test Exercises

See A.4 #3–4 for answers.

1. Sketch equation (4-6).
2. Compute the z-transform and frequency content for the signal $\delta[n + n_0]$.

4.2.2 Example: z-transform of exponential signal

An exponential signal is defined as

$$x[n] = \begin{cases} \alpha^n & n \geq 0 \\ 0 & n < 0 \end{cases} \quad (4-12)$$

where α can be any real or complex value less than one. The signal consists of an infinite number of samples. The z-transform of this signal is

$$\begin{aligned} X(z) &= \sum_{k=-\infty}^{\infty} x[k]z^{-k} \\ &= \sum_{k=0}^{\infty} \alpha^k z^{-k} \\ &= \sum_{k=0}^{\infty} (\alpha z^{-1})^k \end{aligned} \quad (4-13)$$

This is an infinite *geometric series*: a sum in which each successive term is the previous term times some (unchanging) expression (i.e., the ratio of successive terms is constant). The ratio of two successive terms in a geometric series like equation (4-13) is called its *common ratio*, which in this case is αz^{-1} . We can show this by rewriting equation (4-13) as $X(z) = 1 + \alpha z^{-1} + \alpha^2 z^{-2} + \dots$. Rewriting the $i + 1^{\text{st}}$ element of this series as a recurrence relation (in terms of the i^{th}), we get $X(z)_{i+1} = X(z)_i \alpha z^{-1}$, which shows the common ratio.

If we have a geometric series in which successive terms b_i and b_{i+1} have the common ratio r (i.e., $b_{i+1}/b_i = r$), then any term in the series can be expressed in terms of the first term as

$$b_i = b_0 r^i$$

So, a geometric series can be expressed as a sum of these, $b_0 + b_0 r + b_0 r^2 + \dots$. We can factor out the zeroth term, leaving us with the task of simplifying $1 + r + r^2 + \dots$. Multiplying

4. THE Z-TRANSFORM AND CONVOLUTION

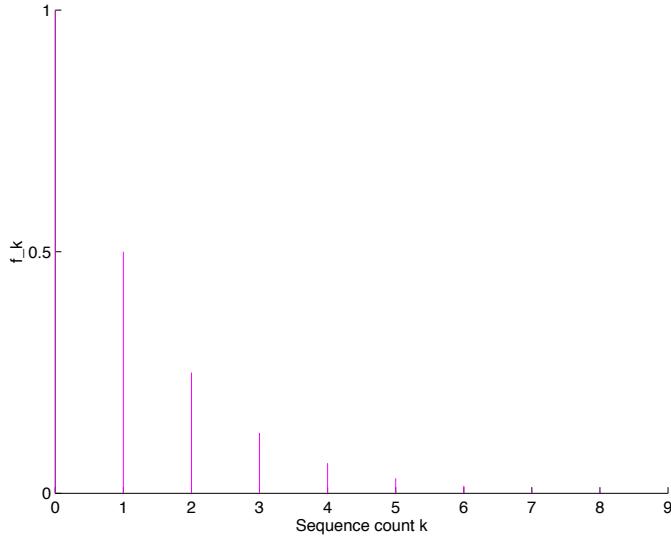


Figure 4.1: The exponential signal $x[n] = (1/2)^n, n = 0, 1, 2, \dots$

this sum by $(1 - r)/(1 - r)$, we obtain

$$\begin{aligned} (1 + r + r^2 + \dots) \frac{1 - r}{1 - r} &= \frac{1 + r + \dots - r - r^2 - \dots}{1 - r} \\ &= \frac{1 - r^N}{1 - r} \end{aligned} \quad (4-14)$$

In this case, $|r| < 1$ so $r^N \rightarrow 0$ as $N \rightarrow \infty$:

$$1 + r + r^2 + r^3 + \dots = \frac{1}{1 - r}, \quad \text{if } |r| < 1 \quad (4-15)$$

Consequently, for $|r| = |\alpha z^{-1}| < 1$ or $|z| > |\alpha|$, $X(z)$ converges to

$$X(z) = \frac{1}{1 - \alpha z^{-1}}, \quad |z| > |\alpha| \quad (4-16)$$

In the z-plane, $|z| > |\alpha|$ refers to any z that is outside of the radius $|\alpha|$ circle. We see that in this case, the z-transform provides a compact alternative representation of the signal $x[n]$.

Let's check out some special cases:

When α is a real number, say $\alpha = 1/2$: The discrete signal in this case is

$$x[n] = \begin{cases} \left(\frac{1}{2}\right)^n & n \geq 0 \\ 0 & n < 0 \end{cases} \quad (4-17)$$

or

$$x[n] = \left\{ 1, \frac{1}{2}, \left(\frac{1}{2}\right)^2, \left(\frac{1}{2}\right)^3, \dots \right\} \quad (4-18)$$

4. THE Z-TRANSFORM AND CONVOLUTION

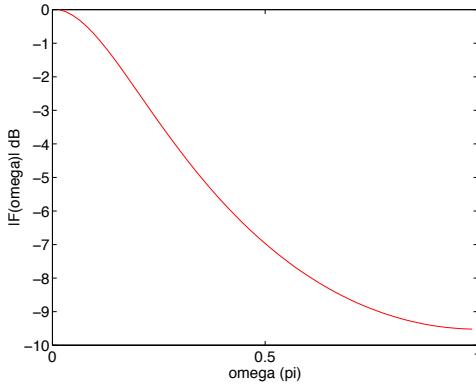


Figure 4.2: Frequency content of the signal shown in figure 4.1.

Figure 4.1 shows the graph of the signal $x[n]$.

Replacing α with $1/2$ in (4-16), its z-transform is expressed as

$$X(z) = \frac{1}{1 - \frac{1}{2}z^{-1}}, \quad |z| > \frac{1}{2} \quad (4-19)$$

As you should be familiar with now, the frequency content of this signal is the magnitude of its z-transform on the unit circle $z = e^{j\hat{\omega}}$ in the z-plane, which is

$$|\mathcal{X}(\hat{\omega})| = |X(e^{j\hat{\omega}})| = \left| \frac{1}{1 - \frac{1}{2}e^{-j\hat{\omega}}} \right| \quad (4-20)$$

Figure 4.2 is the plot of $|\mathcal{X}(\hat{\omega})|$ versus frequency ω . The amplitude decreases along increasing frequency. Its peak is at zero frequency, which is called *DC* (which literally means “direct current,” implying the constant — actually mean — component of the signal).

When $\alpha = 1$: For $\alpha = 1$, the sequence becomes

$$x[n] = u[n] = \begin{cases} 1 & n \geq 0 \\ 0 & n < 0 \end{cases} \quad (4-21)$$

or

$$u[n] = \{1, 1, 1, \dots\}, \quad n \geq 0 \quad (4-22)$$

This is a discrete time, infinite duration *unit step* signal. Notice the difference between the unit step signal and the unit impulse signal. The latter only has one nonzero value at one particular time, the former has value one for all time after some particular time. By analogy with $\delta[n]$, a unit step occurring at sample k is called $u[n - k]$. Substituting $\alpha = 1$ into (4-16) we have

$$U(z) = \frac{1}{1 - z^{-1}}, \quad |z| > 1 \quad (4-23)$$

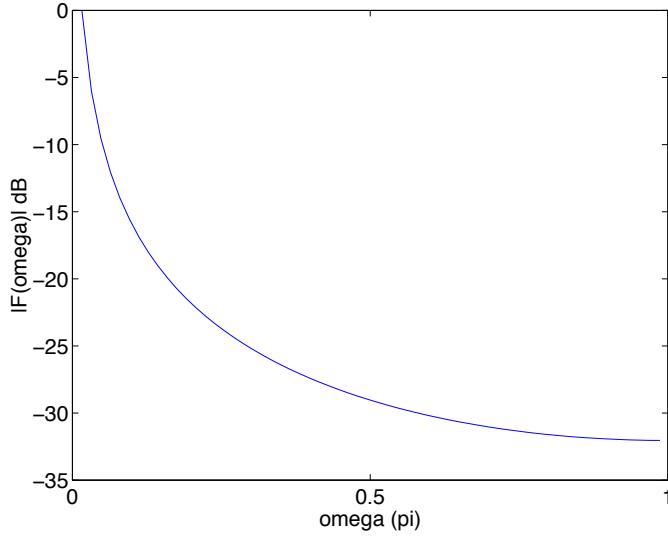


Figure 4.3: Frequency content of the unit step signal.

We can see that the pole (a zero in the denominator; you'll learn more about this in Chapter 5) is at $z = 1$, where the z-transform has an infinite value.

Let's evaluate the frequency content of the unit step signal. If we evaluate $\mathcal{U}(\hat{\omega})$ on the unit circle (except at $z = 1$), we obtain

$$\begin{aligned}
 \mathcal{U}(\hat{\omega}) &= U(e^{j\hat{\omega}}) = \frac{1}{1 - e^{-j\hat{\omega}}} \frac{e^{j\hat{\omega}/2}}{e^{j\hat{\omega}/2}} \\
 &= \frac{e^{j\hat{\omega}/2}}{e^{j\hat{\omega}/2} - e^{-j\hat{\omega}/2}} \\
 &= \frac{e^{j\hat{\omega}/2}}{2j \sin \hat{\omega}/2} \\
 &= \frac{e^{j(\hat{\omega}/2 - \pi/2)}}{2 \sin \hat{\omega}/2}, \quad \hat{\omega} \neq 2\pi k, k = 0, 1, \dots
 \end{aligned} \tag{4-24}$$

because $-j = e^{-j\pi/2}$ (see the self-test exercises). Hence, the presence of a pole (a zero in the denominator) at $z = 1$ (that is, at $\hat{\omega} = 0$) creates a problem only when we want to compute $|\mathcal{U}(\hat{\omega})|$ at $\hat{\omega} = 0$, because $|\mathcal{U}(\hat{\omega})| \rightarrow \infty$ as $\hat{\omega} \rightarrow 0$. For any other value of $\hat{\omega}$, $|\mathcal{U}(\hat{\omega})|$ is finite.

Figure 4.3 shows a plot of $|\mathcal{U}(\hat{\omega})|$ vs. $\hat{\omega}$. Since the signal is a unit step, and so has a constant value from zero onwards, we might expect the signal to have zero frequency components at all frequencies except at $\hat{\omega} = 0$, but that is not the case. The reason is that the signal is not a constant for all $-\infty < n < \infty$. Instead, it is turned on at $n = 0$. This *abrupt jump* creates all the frequency components existing in the range $0 < \hat{\omega} \leq \pi$. Generally, *all* signals which start at a finite time will have nonzero frequency components everywhere in the frequency axis from zero up to the Nyquist frequency. All such signals can be considered to be the product of some infinite signal with a unit step; we will see the effect of this on their spectrum when we explore convolution in section 4.3.

4. THE Z-TRANSFORM AND CONVOLUTION

Optional: When α is a complex number, $\alpha = Re^{j\theta}$: When $\alpha = Re^{j\theta}$, equations (4-12) and (4-16) become

$$x[n] = \begin{cases} R^k e^{jn\theta} & n \geq 0 \\ 0 & n < 0 \end{cases} \quad (4-25)$$

$$X(z) = \frac{1}{1 - Re^{j\theta}z^{-1}}, \quad |z| > |R| \quad (4-26)$$

When $z = Re^{j\theta}$ we have what we call a *pole* (a zero in the denominator; you'll learn more about this in Chapter 5). Equation (4-26) can be broken into real and imaginary parts using Euler's formula:

$$\begin{aligned} X(z) &= \frac{1}{1 - Re^{j\theta}z^{-1}} \\ &= \frac{1}{1 - R(\cos \theta + j \sin \theta)z^{-1}} \\ &= \frac{1}{1 - R \cos \theta z^{-1} - j R \sin \theta z^{-1}} \\ &= \frac{1 - R \cos \theta z^{-1} + j R \sin \theta z^{-1}}{[1 - R \cos \theta z^{-1}]^2 - [j R \sin \theta z^{-1}]^2} \\ &= \frac{1 - R \cos \theta z^{-1} + j R \sin \theta z^{-1}}{1 - 2R \cos \theta z^{-1} + R^2 z^{-2}} \\ &= \frac{1 - R \cos \theta z^{-1}}{1 - 2R \cos \theta z^{-1} + R^2 z^{-2}} + j \frac{R \sin \theta z^{-1}}{1 - 2R \cos \theta z^{-1} + R^2 z^{-2}} \end{aligned} \quad (4-27)$$

We break the signal into two parts, too:

$$\operatorname{Re}\{x[n]\} = R^n \cos(k\theta), \quad n \geq 0 \quad (4-28)$$

$$\operatorname{Im}\{x[n]\} = R^n \sin(k\theta), \quad n \geq 0 \quad (4-29)$$

From real part we get

$$R^n \cos(n\theta) \xleftrightarrow{\mathbf{Z}} \frac{1 - R \cos \theta z^{-1}}{1 - 2R \cos \theta z^{-1} + R^2 z^{-2}} \quad (4-30)$$

and from imaginary parts we have

$$R^n \sin(n\theta) \xleftrightarrow{\mathbf{Z}} \frac{R \sin \theta z^{-1}}{1 - 2R \cos \theta z^{-1} + R^2 z^{-2}} \quad (4-31)$$

When $R < 1$, $R^n \cos(n\theta)$ and $R^n \sin(n\theta)$ are damped cosine and sine waves.

Self-Test Exercises

See A.4 #5–7 for answers.

1. What is the derivative of $u[n - k]$ (the unit step at time step k)?
2. Show that $e^{j\hat{\omega}/2} - e^{-j\hat{\omega}/2} = 2j \sin \hat{\omega}/2$.
3. Prove that $e^{-j\pi/2} = -j$.

4. THE Z-TRANSFORM AND CONVOLUTION

4.3 Convolution

Convolution is an important operation for implementing digital filters. Let's first define what convolution is. For two infinite, discrete signals $x[n]$ and $h[n]$, the *convolution* $y[n]$ of them at sample n is defined as

$$y[n] = \sum_{k=-\infty}^{\infty} h[k]x[n-k] \quad (4-32)$$

The notation for convolution is “ $*$ ”, so this can be written as

$$Y = X * H \quad (4-33)$$

where Y , X , and H are the signals with samples at n being $y[n]$, $x[n]$, and $h[n]$.

Let's consider the case when both x and h both start at zero. This is equivalent to saying that both have values of zero before that sample. So, $h[k] = 0$ when $k < 0$ and $x[n-k] = 0$ when $n - k < 0$. Equation (4-32) becomes

$$y[n] = \sum_{k=0}^n h[k]x[n-k] \quad (4-34)$$

Actually, this is a more realistic situation than k 's summation from $-\infty$ to ∞ .

We expand the summation in (4-34) as

$$\begin{aligned} y[n] = h[0]x[n] + h[1]x[n-1] + h[2]x[n-2] + \dots + h[k]x[n-k] + \dots \\ + h[n-2]x[2] + h[n-1]x[1] + h[n]x[0] \end{aligned} \quad (4-35)$$

Using this formulation, you may show that the convolution $X * H$ has the following properties:

1. Commutative: $X * H = H * X$
2. Distributive : $X * (H_1 + H_2) = X * H_1 + X * H_2$
3. Associative : $(X * H) * G = X * (H * G)$

You should be able to convince yourself that $x * \vec{0} = \vec{0} * x = 0$ (where $\vec{0}$ is a vector of all zeros). How about $\vec{1} * \vec{1}$ (where $\vec{1}$ is a vector of all ones, in this case $\vec{1} = u[n]$; see the self-test exercise)?

4.3.1 Example of Convolution

Determine the convolution $e^n * e^n$, $n = 0, 1, 2, \dots$. Using (4-34),

$$\begin{aligned} e^n * e^n &= \sum_{k=0}^n e^k e^{n-k} \\ &= \sum_{k=0}^n e^n = e^n \sum_{k=0}^n 1 = n e^n \end{aligned} \quad (4-36)$$

Self-Test Exercises

See [A.4 #8–9](#) for answers.

1. Determine if $u[n] * H \neq H$ is true, where $h[n] = n$, $n = 0, 1, 2, \dots$ (a *ramp*).
2. Compute $u[n] * u[n]$.

4.3.2 Implementing Convolution

From observation of equation ([4-35](#)), we know that for a fixed sample n , $y[n]$ can be computed by the term-by-term multiplication of the sequence

$$\{h[0], h[1], h[2], \dots, h[k], \dots, h[n-2], h[n-1], h[n]\} \quad (4-37)$$

and the time-reversed sequence

$$\{x[n], x[n-1], x[n-2], \dots, x[n-k], \dots, x[2], x[1], x[0]\} \quad (4-38)$$

We just multiply the corresponding terms (for example, $h[k]x[n-k]$), then add these products. This produces the convolution for one sample n . Remember, however, that the output $y[n]$ is also a sequence, $n = 0, 1, 2, \dots$. We need to repeat this process for all $\{n\}$ to get the full sequence, as shown in algorithm [4.1](#).

Algorithm 4.1 Discrete convolution.

Require: $h[n]$ is a finite, discrete signal, $n = 0, 1, 2, \dots$

Require: $x[n]$ is a finite, discrete signal, $n = 0, 1, 2, \dots$

Ensure: $y[n]$ is the convolution $X * H$, $n = 0, 1, 2, \dots$

for $n = 0, 1, 2, \dots$ **do**

 Reverse $x[k]$ to produce $x'[k] = x[n-k]$, $k = 0, 1, 2, \dots, n$

$s[k] = h[k]x'[k]$

$y[n] = \sum_{k=0}^n s[k]$

end for

A more-or-less direct implementation of this algorithm in C is:

```
/* Convolution of two vectors

Input: vectors x and h of lengths nx and nh (nh < nx)
Output: vector y of length nx + nh - 1 (storage already allocated)
*/
void convolve(int x[], unsigned nx, int h[], unsigned nh, int y[])
{
    for (unsigned n=0; n<nx+nh-1; n++) {
        y[n] = 0;
```

4. THE Z-TRANSFORM AND CONVOLUTION

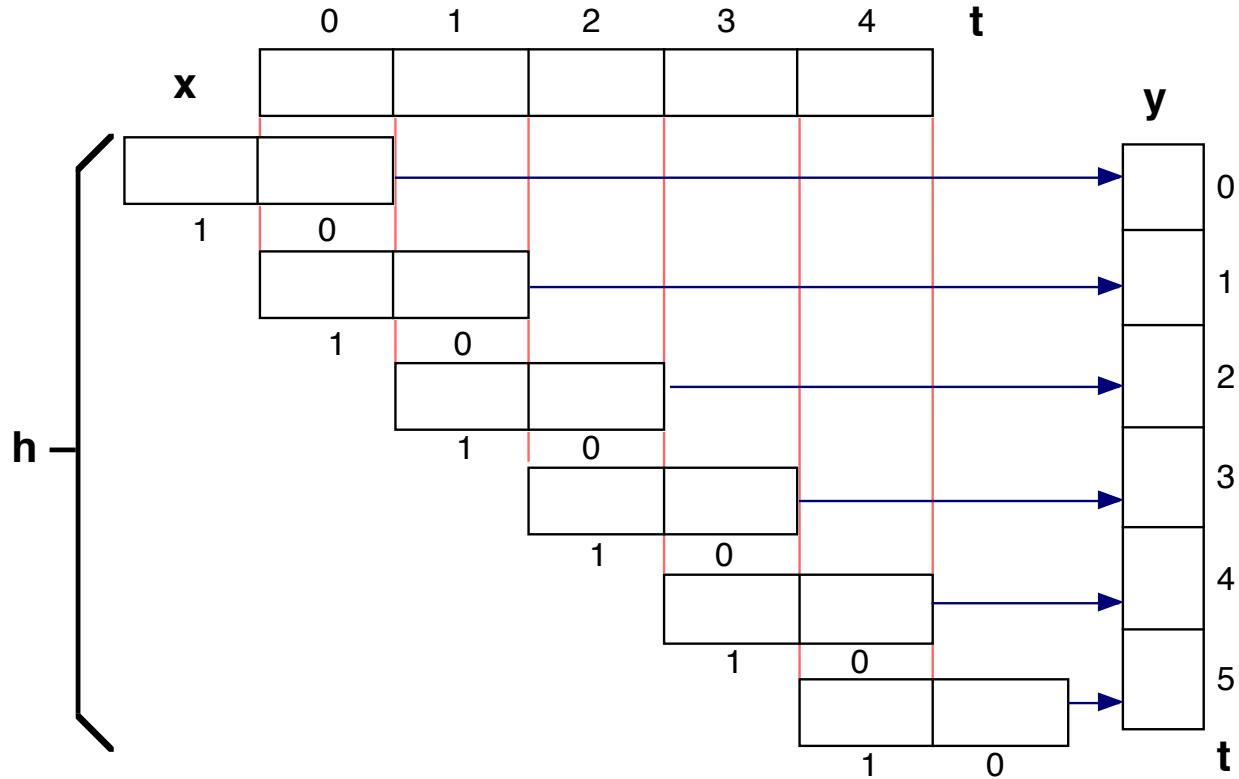


Figure 4.4: Example of convolution function execution for $n_x = 5$ and $n_h = 2$.

```

for (unsigned k=max(0,n-nh+1); k<=min(nx-1,n); k++)
    y[n] += x[k] * h[n-k];
}
}

```

You'll notice something nasty was done here: the identities of x and h were reversed! Of course, this is perfectly OK, given the commutative property of convolution. This was done because we generally assume that h (the shorter vector) is a property of the filter (we will see about this later) and it is easier to think about reversing it than reversing the signal x . If for no other reason, this makes sense because h has a shorter length.

The implementation is for finite-length signals, rather than the infinite ones we've been discussing. It assumes that h is shorter than x ($n_h < n_x$). This h input is often called the convolution *kernel* because, as we shall see, h represents the action of our signal processing system while x is the actual input signal. Notice that, for small $n < n_h - 1$, not all of h is used. This is equivalent to multiplying the unused elements of h against the zero values of $x[k]$, $k < 0$. Similarly, for large $n > nx - 1$, part of h is also unused — multiplied against the zero values of $x[k]$, $k > n_x - 1$. Figure 4.4 illustrates function execution for a signal X of length 5 and a kernel H of length 2. This is one way to deal with the *boundary conditions* associated with the convolution: what to do at the ends of the signal X . In general, there are three ways of dealing with these boundary conditions:

4. THE Z-TRANSFORM AND CONVOLUTION

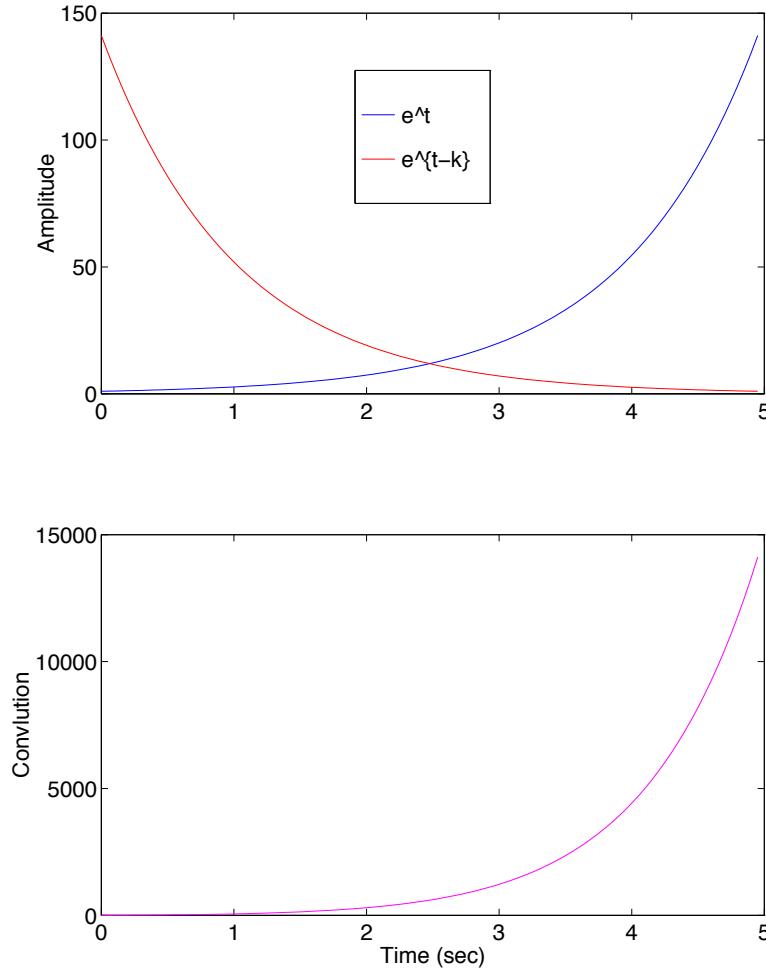


Figure 4.5: Convolution of $e^n * e^n$. Top blue line is e^n , top red line is time reversed version of e^n , the bottom plot is the result of convolution.

1. “Pad” X with zeros past its ends. In effect, this is what was done in the code above.
2. “Reflect” X by copying element k to index $-k$. This is sometimes done in image processing operations.
3. “Truncate” the convolution at the ends of X . This means that n would cover the range $n_h - 1 \leq n \leq n_x$ and Y would be shorter than X .

MATLAB has the built-in convolution function `conv`, which takes two vectors as inputs and outputs the convolution result with length equal to one less than the sum of the two input vector lengths. You can use “`help conv`” to get more information (how does `conv` deal with boundary conditions [answer in [A.4 #10](#)]?)

Let’s look at the convolution of $X * H = e^n * e^n$ again. In this case, X and H are the same function. In figure 4.5 (top), X is shown as a blue curve and the time-reversed H is shown as a red curve. The convolution result is in the bottom graph.

4. THE Z-TRANSFORM AND CONVOLUTION

Table 4.2: Some properties of the z-transform.

Property	Time Domain, $Z^{-1}\{\cdot\}$	z-Domain, $Z\{\cdot\}$
Linearity	$a_1x[n] + a_2y[n]$	$a_1X(z) + a_2Y(z)$
Time shift	$x[n - k]$	$z^{-k}X(z)$
Scaling in the z-domain	$a^n x[n]$	$X(a^{-1}z)$
Time reversal	$x[-n]$	$X(z^{-1})$
Differentiation in the z-domain	$nx[n]$	$-z \frac{dX(z)}{dz}$
Convolution	$x[n] * y[n]$	$X(z)Y(z)$

Self-Test Exercises

See A.4 #11 for the answer.

1. Use MATLAB to compute the convolution $e^{-n} * e^{-n}$ and plot the result.

4.4 Properties of the Z-Transform

The z-transform is a very powerful signal processing tool because it has some very important properties. Some of these properties are listed in table 4.2, where the time-domain signals $x[k]$ and $y[k]$ have z-transforms of $X(z)$ and $Y(z)$.

Knowing these properties can be very convenient. For example, the z-transform of a signal shifted (delayed) by k samples, $x[n - k]$, is $z^{-k}X(z)$; this is our familiar z (delay) operator. You can also see that the convolution property of the z-transform means that convolution in the time domain is multiplication in the z-domain. So, if we have the z-transform of two signals, it is much easier to perform convolution. Later on, you will find out that this is very important in filtering. Let's prove this property:

From (4-34) a convolution of $x[n]$ and $h[n]$ is defined as:

$$y[n] = x[n] * h[n] = \sum_{k=-\infty}^{\infty} h[k]x[n - k] \quad (4-39)$$

The z-transform of $y[n]$ is

$$\begin{aligned} Y(z) &= \sum_{n=-\infty}^{\infty} y[n]z^{-n} \\ &= \sum_{n=-\infty}^{\infty} \left(\sum_{k=-\infty}^{\infty} h[k]x[n - k] \right) z^{-n} \end{aligned} \quad (4-40)$$

4. THE Z-TRANSFORM AND CONVOLUTION

Interchanging the order of the summations (which is equivalent to factoring out the $h[k]$ and distributing the z^{-n} over the inner summation),

$$Y(z) = \sum_{k=-\infty}^{\infty} h[k] \left(\sum_{n=-\infty}^{\infty} x[n-k] z^{-n} \right) \quad (4-41)$$

The inner summation is merely the z-transform of $x[n]$ shifted by k samples. Applying the time shift property of the z-transform, we obtain

$$\begin{aligned} Y(z) &= \sum_{k=-\infty}^{\infty} h[k] X(z) z^{-k} \\ &= X(z) \sum_{k=-\infty}^{\infty} h[k] z^{-k} = X(z) H(z) \end{aligned} \quad (4-42)$$

Which is the product of the two z-transforms. I'll present a couple examples of using these properties.

4.4.1 Example: Time Shifting

Remember that the z-transform of the unit impulse $\delta[n]$ was discussed in section 4.2.1

$$\delta[n] = \begin{cases} 1 & n = 0 \\ 0 & n \neq 0 \end{cases} \quad (4-43)$$

as being 1 and that the z-transform of the shifted unit impulse $\delta[n-k]$ is z^{-k} ? Using the time-shifting property of the z-transform, this is easy to determine:

$$\delta[n] \xleftrightarrow{\text{Z}} 1 \quad (4-44)$$

then

$$\delta[n-k] \xleftrightarrow{\text{Z}} 1 \times z^{-k} = z^{-k} \quad (4-45)$$

4.4.2 Example: Convolution

Given the signals

$$x[n] = \{1, -3, 2, 1\}, \quad n = 0, 1, 2, 3 \quad (4-46)$$

and

$$h[n] = \begin{cases} 1 & n = 0, 1 \\ 0 & n = 2, 3 \end{cases} \quad (4-47)$$

use the z-transform to compute their convolution $Y = X * H$.

According to (4-1),

$$X(z) = 1 - 3z^{-1} + 2z^{-2} + z^{-3} \quad (4-48)$$

$$H(z) = 1 + z^{-1} \quad (4-49)$$

4. THE Z-TRANSFORM AND CONVOLUTION

Then using the convolution property of the z-transform, we have

$$\begin{aligned} Y(z) &= X(z)H(z) = (1 - 3z^{-1} + 2z^{-2} + z^{-3})(1 + z^{-1}) \\ &= 1 - 2z^{-1} - z^{-2} + 3z^{-3} + z^{-4} \end{aligned} \quad (4-50)$$

Now we can easily get the inverse z-transform $y[n] = x[n] * h[n]$ from the result $Y(z)$. Again from the z-transform definition (4-1),

$$y[n] = x[n] * h[n] = \{1, -2, -1, 3, 1\} \quad (4-51)$$

We can also compute the convolution directly, according to the convolution definition (4-34). There are only 4 nonzero terms in $x[n]$ and 2 in $h[n]$. For a fixed sample n , the convolution is given by

$$\begin{aligned} y[n] &= \sum_{k=0}^n x[k]h[n-k] \\ &= x[0]h[n] + x[1]h[n-1] + x[2]h[n-2] + x[3]h[n-3] \end{aligned} \quad (4-52)$$

Changing n gives the sequence of the convolution output as a function of time. In the following computation, $h[n-k] = 0$ is used, if $n-k < 0$ and $x[k] = 0$ and $h[k] = 0$ if $k > 3$:

$$\begin{aligned} y[0] &= x[0]h[0] = 1 \\ y[1] &= x[0]h[1] + x[1]h[0] = 1 - 3 = -2 \\ y[2] &= x[0]h[2] + x[1]h[1] + x[2]h[0] = 0 - 3 + 2 = -1 \\ y[3] &= x[0]h[3] + x[1]h[2] + x[2]h[1] + x[3]h[0] = 0 + 0 + 2 + 1 = 3 \\ y[4] &= x[1]h[3] + x[2]h[2] + x[3]h[1] = 0 + 0 + 1 = 1 \\ y[n] &= 0, \quad n > 4 \end{aligned}$$

Therefore, this also gives the result

$$y[n] = x[n] * h[n] = \{1, -2, -1, 3, 1\} \quad (4-53)$$

Self-Test Exercises

See A.4 #12 for the answer.

1. Prove the scaling property of the z-transform; that is, if

$$x[n] \xrightarrow{\text{Z}} X(z)$$

then

$$a^n x[n] \xrightarrow{\text{Z}} X(a^{-1}z)$$

4.5 Impulse Response and the Transfer Function

Recall the a filter's input/output relationship is summarized by the transfer function discussed in chapter 3 (and which you'll see again in chapter 5). Let's denote the input signal as $x[n]$ and output as $y[n]$ in the time domain. You learned that the the transfer function in the z domain is $H(z)$. What is its time domain representation? We will answer this shortly; first let's give a name to the time domain transfer function, $h[n]$: the filter's *impulse response*. The filter's input/output relationship can be written using $h[n]$ as:

$$y[n] = x[n] * h[n] \quad (4-54)$$

This says that the output of filter results from the convolution between input signal $x[n]$ and filter's impulse response $h[n]$. From earlier in this chapter, you now know that convolution of two signals in the time domain is equivalent to multiplying their z -transforms in the z domain. So, we obtain the input/output relationship via the transfer function in the z domain as

$$Y(z) = X(z)H(z) \quad (4-55)$$

where $X(z)$ and $Y(z)$ are the z -transforms of $x[n]$ and $y[n]$ and $H(z)$ is the z -transform of $h[n]$. Actually, this $H(z)$ is just the transfer function we talked about in chapter 3. In other words, a filter's transfer function is the z -transform of its impulse response!

As a simple example of how to use the z -transform to determine a filter's transfer function from its defining equation, consider the feedforward filter:

$$y[n] = b_0x[n] + b_1x[n - k] \quad (4-56)$$

Applying the z -transform to both sides,

$$Y(z) = b_0X(z) + b_1z^{-k}X(z) \quad (4-57)$$

because of the time shift property of the z -transform. This can be rearranged to be

$$Y(z) = (b_0 + b_1z^{-k})X(z) \quad (4-58)$$

So the transfer function is

$$H(z) = b_0 + b_1z^{-k} \quad (4-59)$$

and therefore, we have

$$Y(z) = H(z)X(z) \quad (4-60)$$

Applying the inverse z -transform, we can get the time domain representation of $H(z)$, or the impulse response $h[n]$. In a similar manner, we can get the output $y[n]$ from $Y(z)$. In fact, using (4-55), we found an easy way to compute a filter's response to a signal if we have already know the signal's z -transform and the filter's transfer function.

Let's see why $h[n]$ is called the impulse response. Remember the unit impulse, which is a signal that has the value one at $n = 0$ and zero otherwise, and which can be expressed as

$$\delta[n] = \begin{cases} 1 & n = 0 \\ 0 & n \neq 0 \end{cases} \quad (4-61)$$

4. THE Z-TRANSFORM AND CONVOLUTION

The impulse response of a filter is its output when a unit impulse is applied. Now we compute these two functions' convolution,

$$y[n] = \sum_{k=0}^n \delta[k]h[n-k] = h[n] \quad (4-62)$$

because all of the terms except $k = 0$ drop out (since $\delta[k] = 0$ for all $k \neq 0$). This tell us that the filter response $y[n]$ to a unit impulse is $h[n]$. This is why $h[n]$ is called the impulse response.

Applying the z-transform to both side of the above equation, we get

$$Y(z) = H(z) \quad (4-63)$$

Therefore, the *transfer function* can be viewed as the z-transform of the filter's *impulse response*, or its impulse response in the z domain.

If we restrict z to lie on the unit circle, $z = e^{j\hat{\omega}}$, from (4-55) we obtain

$$\mathcal{Y}(\hat{\omega}) = \mathcal{H}(\hat{\omega})\mathcal{X}(\hat{\omega}) \quad (4-64)$$

where $\mathcal{X}(\hat{\omega})$ is the signal's frequency content, $\mathcal{Y}(\hat{\omega})$ is the frequency content of the filter output and $\mathcal{H}(\hat{\omega})$ is the filter's frequency response.

4.6 Problems

1. Compute the z-transform of

$$x[n] = \begin{cases} (-1)^n & n \geq 0 \\ 0 & n < 0 \end{cases} \quad (4-65)$$

and determine its frequency content.

2. Determine the z-transform of the signal

$$x[n] = \begin{cases} \cos \hat{\omega}_0 n & n \geq 0 \\ 0 & n < 0 \end{cases} \quad (4-66)$$

3. Find the z-transform of the signal

$$x[n] = \begin{cases} 1/n! & n \geq 0 \\ 0 & n < 0 \end{cases}$$

Recall that $0! = 1$.

4. The impulse response of a system is $h[n] = \{1, 2, 1, -1\}$, $n = -1, 0, 1, 2$. Determine the response of the system to the input signal $x[n] = \{1, 2, 3, 1\}$, $n = 0, 1, 2, 3$.

4.7 Further Reading

- James H McClellan, Ronald W Schafer, and Mark A. Yoder, *DSP First: A Multimedia Approach*, Prentice Hall, 1998, chapter 7 (§7.1–7.6.3).

5

Feedback Filters

5.1 Introduction

In this chapter, we will continue to introduce filters, this chapter focusing on *feedback filters*, in which previous outputs are combined with new inputs to produce new outputs. We will learn about their structure, function, and the differences between feedforward and feedback filters. We will see that sometimes it is better to combine these two kinds of filters. We will also briefly examine digital filter design. After this chapter, you should understand important concepts like the *poles* (as compared to *zeros*) of a transfer function, *impulse response*, and *bandwidth*. You should know about features of feedback filters and special types of such filters, such as *reson*s. You should be able to design simple digital filters, implement them on a computer and use them to solve some simple signal processing problems.

5.1.1 Poles

Figure 5.1 presents the block diagram of a filter with one feedforward and one feedback term; the feedback filter's signal flowgraph is shown on the right. Compared to the feedforward one on the left in the figure, we notice that instead of combining the input signal with a delayed version, here the output signal is delayed and “fed back” to be combined with the input. The feedback processing alone is expressed by

$$y[n] = x[n] + a_1 y[n - 1] \quad (5-1)$$

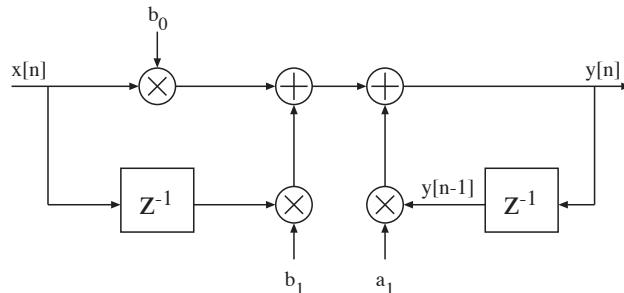


Figure 5.1: Block diagram of a simple filter with both feedforward and feedback terms.

5. FEEDBACK FILTERS

(ignoring the factor of b_0) which is the equation for a simple feedback filter with one delayed component. $a_1y[n-1]$ is the feedback term. You can see that the output at $n-1$ is used to compute the output at time n . The combined filter's full defining equation is

$$y[n] = b_0x[n] + b_1x[n-1] + a_1y[n-1] \quad (5-2)$$

but for the moment we will concentrate on just the feedback part of the filter, from equation (5-1).

From equation (5-1), the z-transforms of the input and output signals, and the delay operator z^{-1} , we can get the filter's transfer function as follows:

$$\begin{aligned} Y(z) &= X(z) + a_1z^{-1}Y(z) \\ Y(z)[1 - a_1z^{-1}] &= X(z) \\ Y(z) &= \frac{1}{1 - a_1z^{-1}}X(z) \end{aligned} \quad (5-3)$$

Finally we have the transfer function:

$$\begin{aligned} H(z) &= \frac{Y(z)}{X(z)} = \frac{1}{1 - a_1z^{-1}} \\ &= \frac{z}{z - a_1} \end{aligned} \quad (5-4)$$

The magnitude response is:

$$|\mathcal{H}(\hat{\omega})| = |H(z)| = \left| \frac{z}{z - a_1} \right| = \left| \frac{1}{z - a_1} \right| \quad (5-5)$$

($|z| = 1$ because we are only concerned with the magnitude when z is on the unit circle, and so its magnitude is always one).

The values of z that make the denominator of the transfer function zero (the roots of the denominator polynomial, where the transfer function becomes infinite) are called its *poles*. In (5-5), there is one pole at $z = a_1$. In general, a_1 is not on the unit circle, and so the phasor z approaches it but is never equal to it. Just as we did for zeros, we can draw a line from the pole to the unit circle to indicate the distance between z and the pole. However, now this distance is in the denominator. Therefore, instead of $H(z)$ having a notch or dip when z nears a zero, it has a *peak* when z nears a pole.

Example 1 For the one pole filter (5-1), $a_1 = re^{j\hat{\omega}_0}$. Figure 5.2 shows this pole when $r = 0.9$ and $\hat{\omega}_0 = \pi/2$. Figure 5.3 shows its magnitude response. As expected, $|\mathcal{H}(\hat{\omega})|$ has a “hill” near $\hat{\omega}_0 = \pi/2$. As r moves closer to one, the hill becomes steeper.

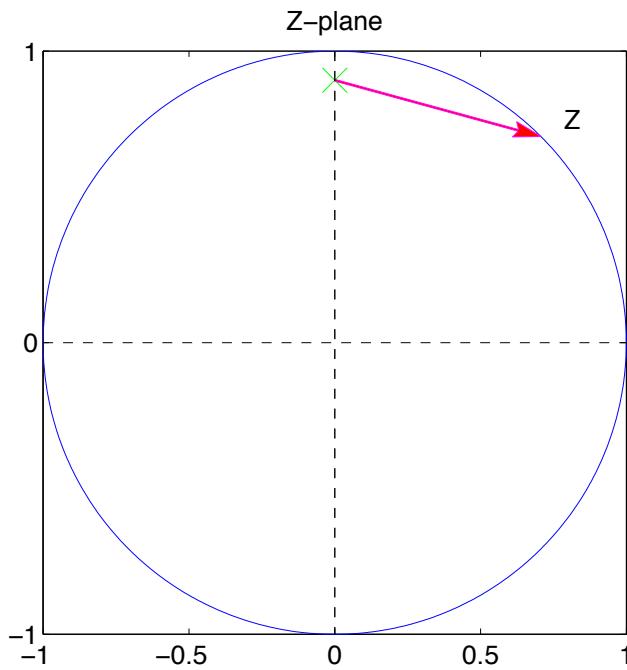


Figure 5.2: One pole in the z -plane, located at $r = 0.9$ and $\hat{\omega}_0 = \pi/2$.

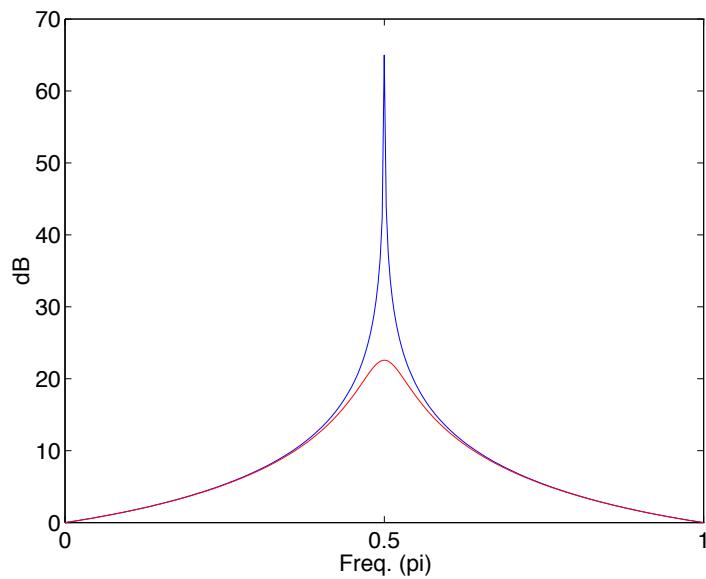


Figure 5.3: Magnitude response of two filters with poles located at $\hat{\omega}_0 = \pi/2$ and $r = 0.9$ (bottom) or $r = 1$ (top).

5. FEEDBACK FILTERS

5.1.2 Example: Computing Transfer Function and Impulse Response

Compute the transfer function and impulse response of the system described by the feedback filter,

$$y[n] = 2x[n] + \frac{1}{2}y[n-1] \quad (5-6)$$

By computing the z-transform of the both side of above equation and using the fact that

$$y[n-1] \xrightarrow{\text{Z}} z^{-1}Y(z) \quad (5-7)$$

we obtain,

$$Y(z) = 2X(z) + \frac{1}{2}z^{-1}Y(z). \quad (5-8)$$

Hence the transfer function is

$$H(z) = \frac{Y(z)}{X(z)} = \frac{2}{1 - \frac{1}{2}z^{-1}} = \frac{2z}{z - \frac{1}{2}} \quad (5-9)$$

$H(z)$ has a pole at $z = 1/2$ and zero at $z = 0$. Now we compute its impulse response. Previously we had an example of an exponential signal (4-12) and its z-transform (4-16), so we have

$$a^n \xleftarrow{\text{Z}} \frac{1}{1 - az^{-1}}, \quad n \geq 0, |z| > a \quad (5-10)$$

This is of the same form as (5-9), with $a = 1/2$. Using this result, we obtain the inverse transform

$$h[n] = 2 \left(\frac{1}{2} \right)^n, \quad n \geq 0 \quad (5-11)$$

where the left and right sides of equation (5-11) are the inverse z-transforms of $H(z)$ and $2/(1 - \frac{1}{2}z^{-1})$ from equation (5-9), respectively (the latter making use of our example from section 4.2.2). This is the corresponding impulse response.

5.1.3 Stability

Let's examine equation (5-1) again. Note that $y[n]$ doesn't only depend on $x[n]$. This means that, even if the input signal is zero after some initial value, this feedback term can continue to have a nonzero value and so the filter can still produce some output. This is a major difference from feedforward filters, where the output depends only on the input. As an extreme example, consider the case where the input signal is a *unit impulse*,

$$x[n] = \delta[n] = \begin{cases} 1 & n = 0 \\ 0 & n > 0 \end{cases} \quad (5-12)$$

5. FEEDBACK FILTERS

which means it only has a value of one at the beginning, and then turns off. The output of any filter for a unit impulse is called, logically enough, its *impulse response*. For the filter in (5-1) with coefficient $a_1 = 0.5$, the impulse response is:

$$\begin{aligned}
 y[0] &= x[0] = 1 \\
 y[1] &= x[1] + 0.5y[0] = 0 + 0.5 \times 1 = 0.5 \\
 y[2] &= x[2] + 0.5y[1] = 0 + 0.5 \times 0.5 = 0.25 = 0.5^2 \\
 y[3] &= x[3] + 0.5y[2] = 0 + 0.5 \times 0.25 = 0.125 = 0.5^3 \\
 &\vdots \\
 y[n] &= 0.5^n \\
 &\vdots
 \end{aligned} \tag{5-13}$$

You can see that the output $y[n]$ continues after $n = 0$, but the value becomes smaller each time, and will decay towards zero. On the other hand, if $a_1 > 1$, the output becomes bigger and bigger, and goes to infinity. This second behavior is called *unstable*. From equation (5-5), we know that a_1 is a pole of the filter. In fact, a feedback filter with multiple poles p_i is stable if and only if

$$|p_i| < 1, \text{ for all } i \tag{5-14}$$

In other words, *all* the poles must be inside the unit circle. Here is the basic idea for a four-step (well, three-step-and-a-note) proof of this:

1. **A feedback filter with N feedback terms can be decomposed into N one-pole feedback filters.**

The equation for a feedback filter with N feedback terms (the right hand side of the general feedforward/feedback filter block diagram in figure 5.4) can be written as

$$y[n] = x[n] - \sum_{k=1}^N a_k y[n-k] \tag{5-15}$$

Its transfer function is

$$\begin{aligned}
 H(z) &= \frac{1}{1 + \sum_{k=1}^N a_k z^{-k}} \\
 &= \frac{z^N}{z^N + \sum_{k=1}^N a_k z^{N-k}}
 \end{aligned} \tag{5-16}$$

where we've multiplied by z^N/z^N , as is our usual practice, to produce a ratio of polynomials with positive exponents.

Let $p_i, i = 1, 2, \dots, N$ be its poles (the roots of the denominator polynomial). Let's not worry about how we can get them (we know how if we can factor the denominator

5. FEEDBACK FILTERS

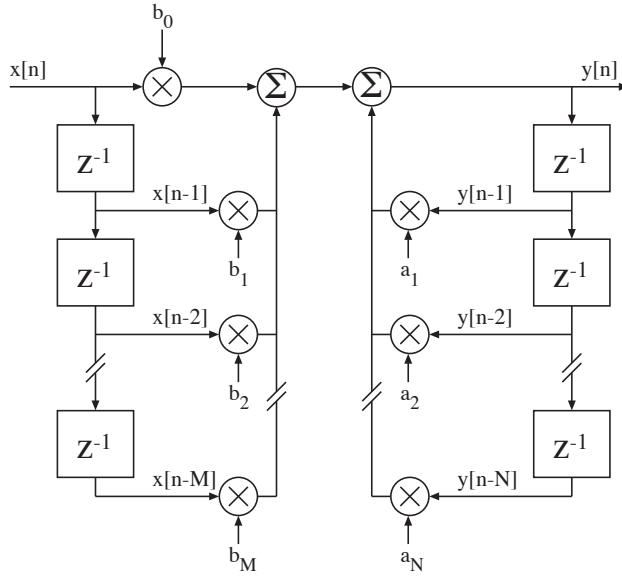


Figure 5.4: Block diagram of a filter with M feedforward and N feedback terms.

polynomial, so let's assume we have already done that). So, (5-16) can be rewritten in the form

$$H(z) = \frac{z^N}{(z - p_1)(z - p_2) \dots (z - p_N)} \quad (5-17)$$

$$= \frac{z^N}{\prod_{k=1}^N (z - p_k)} \quad (5-18)$$

Recalling our pre-calculus, a fraction with a product of terms as in (5-18) can be rewritten using a partial fraction expansion as

$$H(z) = \frac{A_1}{(1 - p_1 z^{-1})} + \frac{A_2}{(1 - p_2 z^{-2})} + \dots + \frac{A_N}{(1 - p_N z^{-N})} \quad (5-19)$$

$$= \sum_{k=1}^N \frac{A_k}{(1 - p_k z^{-k})} \quad (5-20)$$

Each of the terms

$$\frac{A_k}{(1 - p_k z^{-k})} \quad (5-21)$$

is a one-pole feedback filter. So, the complete N -pole filter's output is the sum of N one-pole filters' outputs. This is called a parallel one-pole filter.

2. A one-pole feedback filter is stable if and only if its impulse response is stable.

5. FEEDBACK FILTERS

Consider the unit impulse $\delta[n]$,

$$\delta[n] = \begin{cases} 1 & n = 0 \\ 0 & n > 0 \end{cases} \quad (5-22)$$

Any discrete input signal can be thought of as a weighted sum of delayed unit impulses. This is a straightforward application of the knowledge that $\delta[n] = 1$ when $n = 0$, $\delta[n - 1] = 1$ when $n = 1$, $\delta[n - 2] = 1$ when $n = 2$, etc. Each of these is zero for all other time indices, so we can use a sum of impulses, each multiplied by the corresponding element of $x[n]$, to express a discrete signal:

$$\begin{aligned} x[n] &= \{x[0], x[1], x[2], \dots\} \\ &= x[0]\delta[n] + x[1]\delta[n - 1] + x[2]\delta[n - 2] + \dots \end{aligned} \quad (5-23)$$

We can see that the filter's response to any signal will be stable if and only if its response to each of these impulses is stable.

3. An impulse response is stable if and only if its pole's $|p| < 1$.

Equation (5-13) tell us that the i^{th} one-pole feedback filter's impulse response is the signal with samples

$$1, p_i, p_i^2, p_i^3, \dots \quad (5-24)$$

This impulse response is stable only when the pole's $|p_i| < 1$, so that the sequence is decreasing in magnitude.

4. An impulse response is neither stable nor unstable if $|p| = 1$.

5.1.4 Resonance and Bandwidth

Resonance is the increase in a filter's magnitude response in the region near a pole. An example is shown in figure 5.3. The pole is at frequency $\hat{\omega} = \pi/2$, which is the peak of the magnitude response. The magnitude is small when away from the pole.

One other thing mentioned before is that the peak becomes steep when r nears one. The steepness is measured by the filter's *bandwidth*. Bandwidth, B , is defined as the width of the filter's response (i.e., the range of frequencies) at half its maximum power output. Bandwidth is an important measure of a filter's performance; it indicates which frequencies are passed and which are filtered out.

The filter's power is the square of its amplitude, so the bandwidth can also be measured at $1/\sqrt{2}$ of its peak amplitude value. These half power levels are denoted by $|\mathcal{H}(\hat{\omega})|_B^2$ (the $1/\sqrt{2}$ amplitude points written as $|\mathcal{H}(\hat{\omega})|_B$). If the peak value of power is $|\mathcal{H}(\hat{\omega})|_p^2$ and the peak amplitude is $|\mathcal{H}(\hat{\omega})|_p$, the bandwidth points are located at the (two) values of $\hat{\omega}$ that satisfy the following relationship:

$$\underbrace{|\mathcal{H}(\hat{\omega})|_B}_{\text{cutoff amplitude}} = \frac{1}{2} \underbrace{|\mathcal{H}(\hat{\omega})|_p^2}_{\text{peak power}} = \frac{1}{\sqrt{2}} \underbrace{|\mathcal{H}(\hat{\omega})|_p}_{\text{peak amplitude}} \quad (5-25)$$

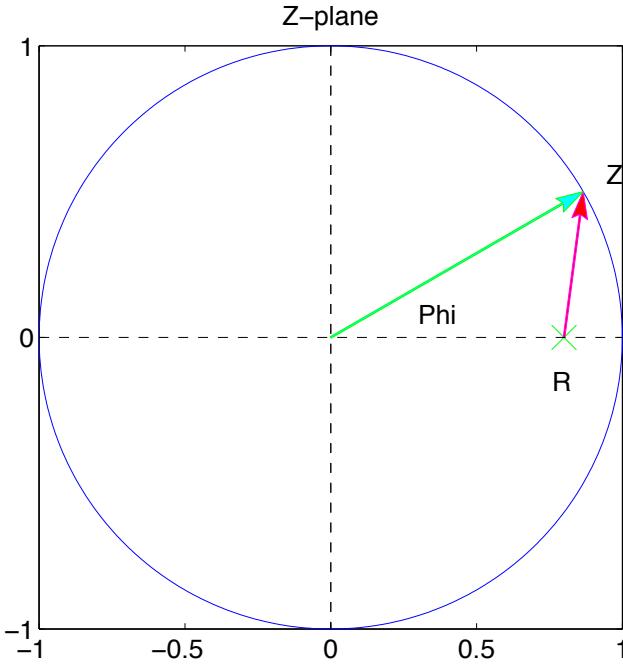


Figure 5.5: One pole $a_1 = re^{j\hat{\omega}_0}$ in z-plane. $r = R$, $\hat{\omega}_0 = 0$ and $z = e^{j\hat{\omega}}$

Since $20 \log_{10}(1/\sqrt{2}) = -3\text{dB}$

$$\frac{|\mathcal{H}(\hat{\omega})|_B}{|\mathcal{H}(\hat{\omega})|_p} = -3\text{dB} \quad (5-26)$$

and so the *cutoff amplitude* for a filter are those for which its output is reduced 3dB from its peak. The values of $\hat{\omega}$ at which the filter's output is reduced by this much define the edges of its *passband* and are called its *cutoff frequencies*; they are sometimes called its “minus three deebbe points”. We will call these frequencies $\hat{\omega}_B$ in the simple case where the passband is symmetrical and the two cutoff frequencies are the same amount above and below the frequency at peak filter output, $\hat{\omega}_p$.

Let's make matters simple and take a look at the case in which a pole is on the real axis and no other poles are nearby; the pole is $a_1 = re^{j\hat{\omega}_0}$, $r = R$ and $\hat{\omega}_0 = 0$ (so $a_1 = R$). A point on the unit circle is $z = e^{j\hat{\omega}}$. This situation is illustrated in figure 5.5. We know that the one pole transfer function is

$$H(z) = \frac{1}{1 - a_1 z^{-1}} \quad (5-27)$$

with magnitude

$$|H(z)| = \left| \frac{1}{1 - a_1 z^{-1}} \right| \quad (5-28)$$

Consider the inverse square of the magnitude, substituting in our expressions for a_1 and

 z,

$$\begin{aligned}
 \frac{1}{|\mathcal{H}(\hat{\omega})|^2} &= |1 - Re^{j\hat{\omega}}|^2 \\
 &= |1 - R \cos \hat{\omega} - jR \sin \hat{\omega}|^2 && \text{(using Euler's formula)} \\
 &= (1 - R \cos \hat{\omega})^2 + R^2 \sin^2 \hat{\omega} && (|H|^2 = \operatorname{Re}[H]^2 + \operatorname{Im}[H]^2) \\
 &= 1 - 2R \cos \hat{\omega} + R^2 \cos^2 \hat{\omega} + R^2 \sin^2 \hat{\omega} \\
 &= 1 - 2R \cos \hat{\omega} + R^2 && (\cos^2 \theta + \sin^2 \theta = 1)
 \end{aligned} \tag{5-29}$$

The peak of $|\mathcal{H}(\hat{\omega})|^2$ should be the value of angle $\hat{\omega}_p = \hat{\omega}$ that makes $1/|\mathcal{H}(\hat{\omega})|^2 = 1 - 2R \cos \hat{\omega} + R^2$ minimum (and so $|\mathcal{H}(\hat{\omega})|^2$ maximum), that is when $\hat{\omega} = 0$. The power at this peak is determined by substituting $\hat{\omega} = 0$ into equation (5-29) and taking its reciprocal:

$$|\mathcal{H}(\hat{\omega})|_p^2 = \frac{1}{(1 - R)^2} \tag{5-30}$$

According to equation (5-25),

$$|\mathcal{H}(\hat{\omega})|_B = \frac{1}{2} |\mathcal{H}(\hat{\omega})|_p^2 = \frac{1}{2(1 - R)^2} \tag{5-31}$$

The corresponding $\hat{\omega}_B$ can be obtained by substituting $|\mathcal{H}(\hat{\omega})|_B$ for $|\mathcal{H}(\hat{\omega})|$ in equation (5-29) and solving for frequency:

$$2(1 - R)^2 = 1 - 2R \cos \hat{\omega}_B + R^2 \tag{5-32}$$

$$\cos \hat{\omega}_B = 2 - \frac{1}{2} \left(R + \frac{1}{R} \right) \tag{5-33}$$

The filter's bandwidth is the span $[-\hat{\omega}_B, \hat{\omega}_B]$ — a distance of $2\hat{\omega}_B$. When R is close to one, we can express R as a small amount ϵ less than one: $R = 1 - \epsilon$. We can then take advantage of the expansions:

$$\frac{1}{R} = \frac{1}{1 - \epsilon} = 1 + \epsilon + \epsilon^2 + \epsilon^3 + \dots \tag{5-34}$$

and

$$\cos \epsilon = 1 - \frac{\epsilon^2}{2!} + \frac{\epsilon^4}{4!} + \dots \tag{5-35}$$

So, from (5-33),

$$\begin{aligned}
 \cos \hat{\omega}_B &= 2 - \frac{1}{2} \left[\underbrace{(1 - \epsilon)}_R + \underbrace{\left(1 + \epsilon + \epsilon^2 + \epsilon^3 + \dots \right)}_{\frac{1}{R}} \right] \\
 &= 1 - \frac{\epsilon^2}{2} - O(\epsilon^3) \\
 &\approx \cos \epsilon
 \end{aligned} \tag{5-36}$$

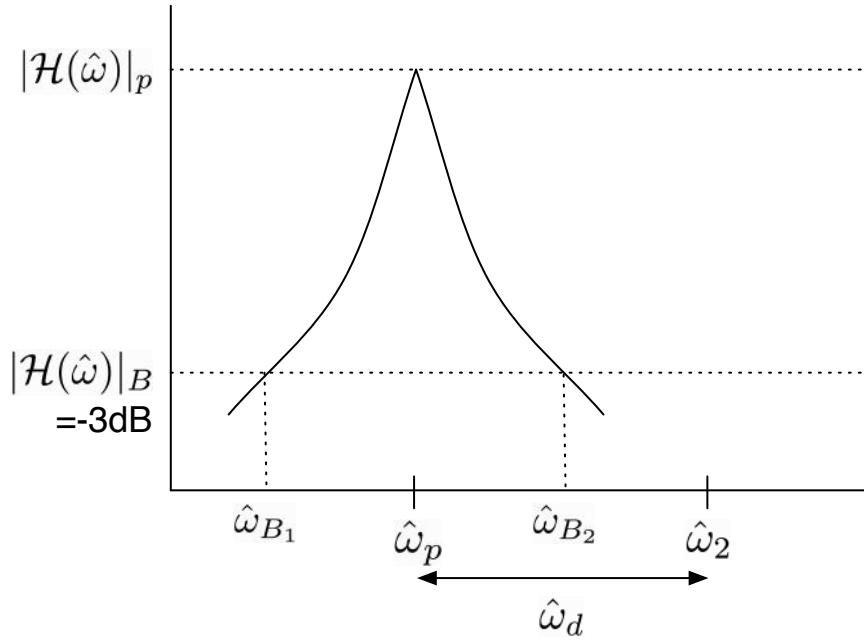


Figure 5.6: Designing a simple one-pole feedback filter. A filter's frequency response is sketched for the situation where we want the center of its passband at $\hat{\omega}_p$ and we wish to ensure that another frequency, $\hat{\omega}_2 = \hat{\omega}_p + \hat{\omega}_d$, is well outside the passband. We choose the filter's cutoff frequencies, $\hat{\omega}_{B_1} = \hat{\omega}_p - \hat{\omega}_B$ and $\hat{\omega}_{B_2} = \hat{\omega}_p + \hat{\omega}_B$, to achieve this.

(where $O(\epsilon^3)$ is shorthand for terms in the expansion of order ϵ^3 or higher). Therefore, $\hat{\omega}_B \approx \epsilon$. So, when R is close to the unit circle,

$$B = 2\hat{\omega}_B \approx 2\epsilon = 2(1 - R) \quad (5-37)$$

or

$$R \approx 1 - B/2 \quad (5-38)$$

If we want a low-pass filter with a particular bandwidth, equation (5-38) gives us a way to determine its pole location.

Let's consider how we might use these observations to design a filter, as sketched in figure 5.6. We want the peak of the filter's frequency response (the center of its passband) to be at the frequency $\hat{\omega}_p$ and we want to ensure that it filters out some other frequency, $\hat{\omega}_2$. We choose the -3dB points to be at a distance $\pm\hat{\omega}_B$ from $\hat{\omega}_p$, labelled $\hat{\omega}_{B_1}$ and $\hat{\omega}_{B_2}$ in the figure. These cutoff frequencies are chosen to ensure that $\hat{\omega}_2$ is well outside the passband.

Our design problem is to choose the pole location. The peak frequency for the passband, $\hat{\omega}_p$, gives us the pole angle, so all we need to do is determine the pole radius, R , to give us $a_1 = Re^{j\hat{\omega}_p}$. Looking at equation (5-28), we can substitute this value of a_1 and $z = e^{j\hat{\omega}}$ and

5. FEEDBACK FILTERS

collect terms:

$$\begin{aligned} |\mathcal{H}(\hat{\omega})| &= \left| \frac{1}{1 - Re^{j\hat{\omega}_p} e^{-j\hat{\omega}}} \right| \\ &= \left| \frac{1}{1 - Re^{j(\hat{\omega}_p - \hat{\omega})}} \right| \end{aligned} \quad (5-39)$$

We just need to make sure that when the frequency $\hat{\omega} = \hat{\omega}_2$, $|\mathcal{H}(\hat{\omega})|$ is below -3dB. Clearly, we can achieve this by ensuring that the half bandwidth, B , is less than $\hat{\omega}_d$. We can then use equation (5-38) to determine the value of R that ensures this, and we have the correct pole location.

Self-Test Exercises

See A.5 #1–2 for answers.

1. Derive equation (5-33) from (5-32).
2. In the situation where the sampling rate is 44,100Hz and the desired bandwidth is 20Hz, R in (5-38) is 0.998575. Solve for R the situation where the desired bandwidth is 200Hz. Is it true that when R is far away from one, B grows large?

5.2 Mixing Feedback and Feedforward Filters

We have now seen feedforward filters with zeros in the transfer function and feedback filters with poles. Zeros suppress frequency components and poles enhance them. Quite often, we want to combine poles and zeros to improve the filter's features, such as the flatness of the passband and the abruptness with which its response transitions between the passband and the stop band. Generally, the transfer function of a filter with block diagram in figure 5.4 can written as

$$H(z) = \frac{b_0 + b_1 z^{-1} + \cdots + b_M z^{-M}}{1 + a_1 z^{-1} + \cdots + a_N z^{-N}} \quad (5-40)$$

and the filter is

$$y[n] = \underbrace{b_0 x[n] + b_1 x[n-1] + \cdots + b_M x[n-M]}_{\text{feedforward terms}} - \underbrace{a_1 y[n-1] - \cdots - a_N y[n-N]}_{\text{feedback terms}} \quad (5-41)$$

Depending on the coefficients $\{b_k\}$ and $\{a_\ell\}$, the filter will show different features. Some of these features have proven so useful that these forms of (5-40) have acquired special names, such as elliptic, Butterworth, etc. (usually, based on the form of the numerator and/or denominator polynomial). Figure 5.7 presents some example frequency responses.

5.3 Implementation

Just as in chapter 3, feedback filters have their delays implemented with queues which are “circular arrays”. However, there are two additional complications that we must deal with:

5. FEEDBACK FILTERS

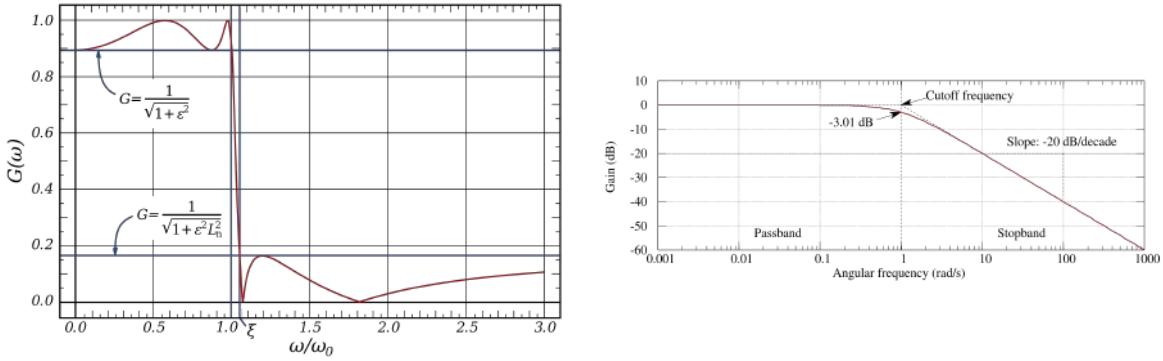


Figure 5.7: Example filter frequency responses: elliptic (left)¹ and Butterworth (right)².

complex poles and accuracy of numerical computation.

5.3.1 Avoiding Complex Numbers

In principle, there is no reason that we couldn't perform all our computations using complex numbers and just output the real part of the result as the filtered signal. However, we often want to perform filtering in real time, and so would like to avoid any unnecessary computation. A cute trick allows us to eliminate the need for complex numbers.

Remember that all complex poles will appear in conjugate pairs. Since each pole is a root of a polynomial, that means that the denominator of the filter's transfer function will have even degree (excepting the real-valued poles, of course), and when it is factored the conjugate pairs (z_i, z_i^*) will appear as $(z - z_i)(z - z_i^*)$. If we multiply this out, we get $z^2 - 2 \operatorname{Re}[z_i]z + |z_i|^2$. In other words, the imaginary parts of poles cancel each other out. Since we're already using b_k for the feedforward coefficients and a_ℓ for the feedback ones in the filter equation, let's set $c_i = -2 \operatorname{Re}[z_i]$ and $d_i = |z_i|^2$. If the transfer function's denominator is of order N (N even), then we can multiply out the polynomials for each complex conjugate pair and rewrite the denominator as the product of $N/2$ second-order polynomials

$$(z^2 + c_0z + d_0)(z^2 + c_1z + d_1) \cdots (z^2 + c_{N/2-1}z + d_{N/2-1}) \quad (5-42)$$

with no need for complex arithmetic. We've done this before symbolically, using Euler's formula to eliminate the imaginary part of a complex conjugate pair. The point here is that, since complex poles always appear in conjugate pairs, we can do this with even quite complicated filters to eliminate the need for performing complex arithmetic or processing complex numbers — a significant optimization.

¹By Inductiveload (Own work) [Public domain], via Wikimedia Commons.

²By Alejo2083 (Own work) [GFDL (<http://www.gnu.org/copyleft/fdl.html>), CC-BY-SA-3.0 (<http://creativecommons.org/licenses/by-sa/3.0/>) or CC BY-SA 2.5-2.0-1.0 (<http://creativecommons.org/licenses/by-sa/2.5-2.0-1.0>)], via Wikimedia Commons.

5. FEEDBACK FILTERS

5.3.2 Limitations of Numerical Accuracy

When we talk of the mathematics of filters, we assume that numbers have infinite precision. Unfortunately, this is not the case for computer implementation. These days, computers (including digital signal processors) typically use either 32 or 64 bits to represent numbers (be they fixed or floating point). That may seem like a great deal of precision, but it is unfortunately not uncommon for intermediate results in numerical computation to require many more bits to retain needed precision. There are a number of ways this can happen, but one is where a computation is performed iteratively, so that a long chain of operations is applied to inputs before they become outputs. At each step of this chain, the result has limited precision. In other words, the number we get is not exactly correct — in general, it can't be, since we don't have infinite precision.

This loss of precision can mount rapidly, eventually destroying the result. We can think of this limited precision as an *error*. If the input is from a 16-bit A/D, for example, and we assume it does its conversion absolutely accurately to the smallest bit (which, as you have seen in chapter 2 and will revisit in chapter 7, is probably not realistic), then that's around $\log_{10} 2^{16} \approx 5$ decimal digits from the A/D, to be generous. Each arithmetic operation we perform, regardless of the number of bits we use, can have the undesirable effect of decreasing the number of digits of precision we have. Sums of approximate values have errors which are the sums of their addends' errors. Multiplication tends to magnify errors. Let's see this with a simple example.

Example 4 Consider the following two recurrence relations for computing the series $\{x[n]\} = \{1/3^n\}$ ($n = 0, 1, 2, \dots$):

$$x'[n] = \frac{1}{3}x'[n - 1] \quad (5-43)$$

$$x''[n] = \frac{10}{3}x''[n - 1] - x''[n - 2] \quad (5-44)$$

Both of these equations are mathematically “correct”. *They also look like the expressions we use for our filters.* Yet, they yield very different results because of loss of significance. Let's use an initial value of $x'[0] = 0.99996$ for (5-43) and initial values of $x''[0] = 1$ and $x''[1] = 0.33332$ for (5-44). This is an initial error of 0.00004 for $x'[0]$ and 0.000013 for $x''[1]$. I'll use MATLAB to compute the first ten terms in each sequence with double-precision accuracy for each calculation. The MATLAB code is

```
% significance.m
% 2/22/02 MDS
% Examine how error grows in an iterative computation
stdout = 1;

% This isn't efficient, but it is straightforward

% Values of n for computation
```

5. FEEDBACK FILTERS

```

n = [0:10];

% Series 1: the real McCoy
x = 1./3.^n;

% Series 2: x'[n] = 1/3 x'[n-1]
xp = 0.99996;

for n = [1:10],
    xp(n+1) = 1/3 * xp(n); % Remember, MATLAB indices start at 1, not 0
end;

% Series 3: x''[n] = 10/3 x''[n-1] - x''[n-2]
xpp = [1 0.33332];

for n = [2:10],
    xpp(n+1) = 10/3 * xpp(n) - xpp(n-1);
end;

% Print out the results
fprintf(stdout, 'n           x[n]           x''[n]           x'''[n]\n');
for n = [0:10],
    fprintf(stdout, '%2.1d\t%12.10f\t%12.10f\t%12.10f\n', ...
        n, x(n+1), xp(n+1), xpp(n+1));
end;

```

The output this script produces is:

n	x[n]	x'[n]	x''[n]
0	1.0000000000	0.9999600000	1.0000000000
1	0.3333333333	0.3333200000	0.3333200000
2	0.1111111111	0.1111066667	0.1110666667
3	0.0370370370	0.0370355556	0.0369022222
4	0.0123456790	0.0123451852	0.0119407407
5	0.0041152263	0.0041150617	0.0029002469
6	0.0013717421	0.0013716872	-0.0022732510
7	0.0004572474	0.0004572291	-0.0104777503
8	0.0001524158	0.0001524097	-0.0326525834
9	0.0000508053	0.0000508032	-0.0983641945
10	0.0000169351	0.0000169344	-0.2952280648

The first column is accurate to the full precision of IEEE floating point (that is, the computation is that accurate; the output was limited to ten decimal places). The second column's error is *stable*: it decreases in an exponential manner, and the value for $x'[10]$ is within 7×10^{-10} of the actual value. The third column's error is *unstable*: it increases exponentially.

5. FEEDBACK FILTERS

Couple this with the need for precise pole placement, and you can see that we need to be careful about our implementations. We saw in this chapter's section on combining feedforward and feedback filters the general transfer function for a filter (5-40) and its direct implementation (5-41), which involved M delayed values of x and N delayed values of y .

However, it is better to implement such a digital filter as a cascade of second-order ones, by factoring the numerator and denominator (which should be “easy,” since we know the locations of the poles and zeros) and multiplying out terms with complex conjugate pairs as described in the previous section. The resultant fraction will have numerator and denominator which are each a product of second-order polynomials. Each ratio of second-order polynomials is a subfilter, which can be implemented by a simple update equation. If we take the output of one subfilter and present it as the input of the next, the output of the last subfilter will be equivalent to the output of the entire original filter (we saw this cascade of filters in chapter 3). Note that, though each filter has a very short (two step) queue, the series combination produces what amounts to a longer overall queue. In practical applications, this shouldn’t be much of a computational penalty.

5.4 Problems

5.5 Further Reading

- James H McClellan, Ronald W Schafer, and Mark A. Yoder, *DSP First: A Multimedia Approach*, Prentice Hall, 1998, chapter 8 (§8.1–8.6, 8.8).

5. FEEDBACK FILTERS

6 Spectral Analysis

We begin our study of signal frequency analysis with the representation of continuous-time periodic and aperiodic signals by means of the *Fourier Transform*. This is followed by a treatment of discrete-time signals, that is the *Discrete Fourier Transform* and an efficient algorithm for computing it: the *Fast Fourier Transform* (FFT). After this chapter, you should understand what they are and how the FFT works. You should also understand related terms, for example, *fundamental frequency*, *harmonics*, *spectrum*, *time domain*, and *frequency domain*. You should be able to use them to do some frequency analysis of a signal. We will also go over some problems that you need to keep in mind when using them: *power leakage* caused by sudden changes in the signal, the *tradeoff between time and frequency resolution*, and the function of *windows*. You should be able to use this knowledge to guide what you do to obtain accurate results in estimating spectral information.

6.1 The Fourier Transform

We developed the Fourier series to represent a *periodic* signal as a linear combination of harmonically related complex exponentials:

$$x(t) = \sum_{k=-\infty}^{+\infty} c_k e^{j2\pi k f_0 t} \quad (6-1)$$

Here, the c_k are the Fourier coefficients and the sequence $\dots, c_{-1}, c_0, c_1, \dots$ can be thought of as the frequency domain representation (the amplitudes of the complex sinusoids) of the time domain signal $x(t)$. For continuous time *aperiodic* signals $x(t)$, the Fourier Transform is defined. It can be derived from the Fourier series allowing the signal period T to go to infinity. Here I'll just give its definition:

$$x(t) = \int_{-\infty}^{\infty} X(f) e^{j2\pi f t} df \quad (6-2)$$

$$X(f) = \int_{-\infty}^{\infty} x(t) e^{-j2\pi f t} dt \quad (6-3)$$

Equation (6-3) is the *Fourier transform* of $x(t)$: a function of the continuous frequency variable f . Equation (6-2) is called the *inverse Fourier transform*, which yields $x(t)$ when

6. SPECTRAL ANALYSIS

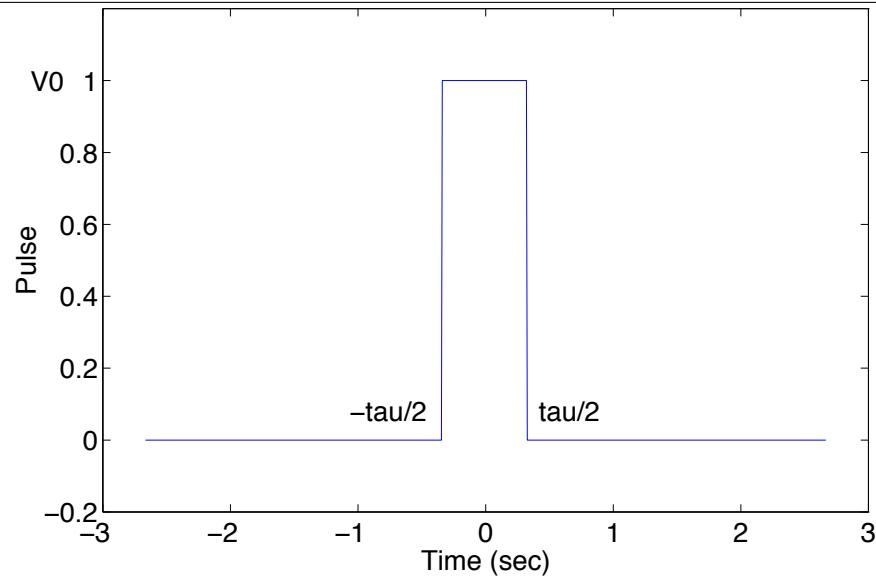


Figure 6.1: A rectangular pulse with width τ .

$X(f)$ is known. The Fourier transform converts an infinite-duration (aperiodic), continuous signal in the time domain into an infinite, continuous spectrum in the frequency domain. It is apparent that the essential difference between the Fourier series and the Fourier transform is that the spectrum in the latter is continuous (the Fourier series yields a discrete line spectrum; it has non-zero values only at specific frequencies) and hence the synthesis of an aperiodic signal from its spectrum is accomplished by means of integration instead of summation. The Fourier transform pair in (6-3) and (6-2) can also be expressed in terms of the radian frequency variable $\omega = 2\pi f$. Since $f = \omega/(2\pi)$, the pair becomes

$$x(t) = \int_{-\infty}^{\infty} X(\omega) e^{j\omega t} d\omega \quad (6-4)$$

$$X(\omega) = \int_{-\infty}^{\infty} x(t) e^{-j\omega t} dt \quad (6-5)$$

6.1.1 Example: Fourier transform of a rectangular pulse

Let's look at the rectangular pulse written about before; but here the pulse is aperiodic — there is just a single pulse instead of a train of them. The signal is defined as

$$x(t) = \begin{cases} 1 & |t| \leq \tau/2 \\ 0 & |t| > \tau/2 \end{cases} \quad (6-6)$$

and illustrated in Figure 6.1.

6. SPECTRAL ANALYSIS

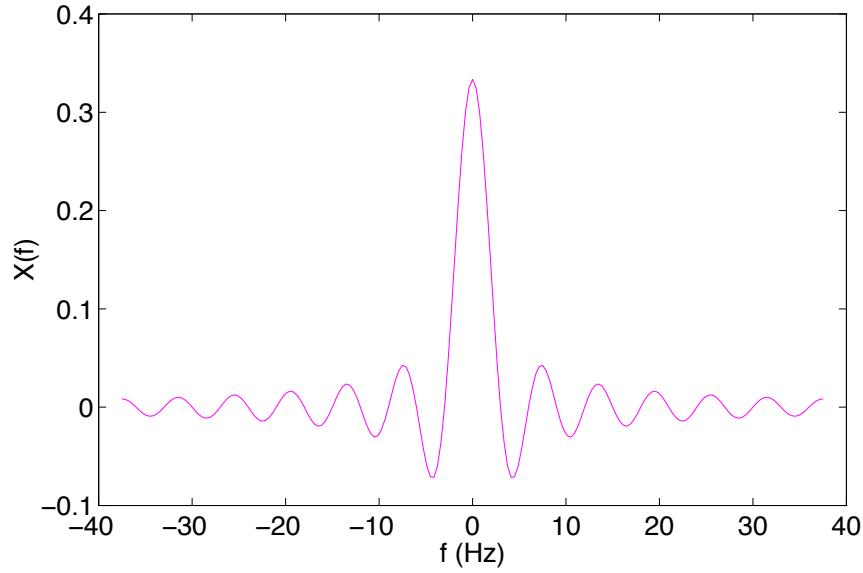


Figure 6.2: Fourier transform of the pulse in figure 6.1.

By applying (6-3), we find that

$$\begin{aligned}
 X(f) &= \int_{-\tau/2}^{+\tau/2} e^{-j2\pi ft} dt \\
 &= \frac{e^{-j2\pi ft}}{-j2\pi f} \Big|_{-\tau/2}^{+\tau/2} \\
 &= \frac{1}{-j2\pi f} [e^{-j\pi f\tau} - e^{j\pi f\tau}] \\
 &= \tau \operatorname{sinc}(\pi f\tau)
 \end{aligned} \tag{6-7}$$

The final step in deriving (6-7) made use of the observation that the difference of a complex number and its conjugate is just twice its imaginary part, $(a - jb) - (a + jb) = -2jb$. In polar notation, then, $e^{-j\pi f\tau} - e^{j\pi f\tau} = -2j \sin \pi f\tau$, using Euler's formula. We observe that $X(f)$ is real and has the shape of the sinc function we mentioned previously. The important difference here is that it is a *continuous* spectrum instead of line spectrum. It is shown in figure 6.2.

As with the periodic rectangular pulses, from (6-7) we note that the zero crossings of $X(f)$ occur at multiples of $1/\tau$. Furthermore, the width of the main lobe, which contains most of the signal energy, is equal to $1/\tau$. As the pulse duration τ decreases or increases, the main lobe becomes broader or narrower, and more energy is moved to the higher or lower frequencies, respectively, as is illustrated in figure 6.3. Thus, as the single pulse is expanded (compressed) in time, its transform is compressed (expanded) in frequency.

6. SPECTRAL ANALYSIS

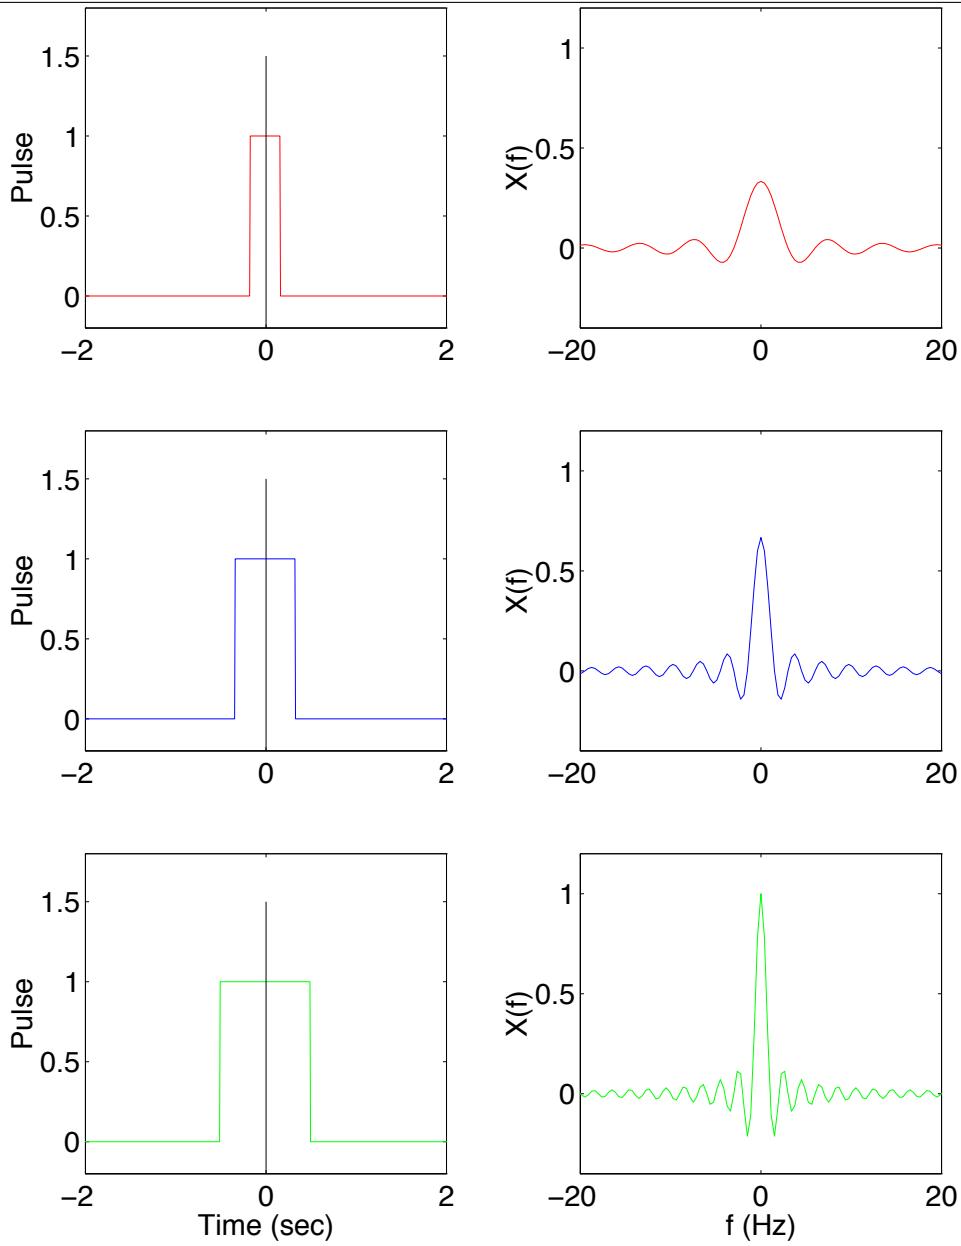


Figure 6.3: Fourier transform of a rectangular pulse for various width values τ .

6.2 The Discrete Fourier Transform

So far, we have examined the Fourier series (which is for a periodic, continuous signal) and its discrete spectrum and the Fourier transform (which is for an aperiodic, continuous signal) and its continuous spectrum. Now, we will investigate periodic, *discrete* signals and their spectra, which are discrete.

Let's consider a finite digital signal $\{x[n]\}$ ($n = 0, 1, 2, \dots, N - 1$). The discrete Fourier

6. SPECTRAL ANALYSIS

transform (*DFT*) is defined as

$$X[k] = \sum_{n=0}^{N-1} x[n] e^{-jnk2\pi/N}, \quad k = 0, 1, 2, \dots, N-1 \quad (6-8)$$

where X is the spectrum of x , and its synthesis equation or inverse DFT (*IDFT*) is

$$x[n] = \frac{1}{N} \sum_{k=0}^{N-1} X[k] e^{jnk2\pi/N}, \quad n = 0, 1, 2, \dots, N-1 \quad (6-9)$$

The DFT converts a finite (periodic), discrete signal in the time domain ($x[n]$) into a finite, discrete spectrum in the frequency domain ($X[k]$).

We can derive the DFT informally from the Fourier series of a periodic signal. Let's compare equation (6-8) and that for the coefficients of the Fourier series, equation (1-37), which I repeat here:

$$c_k = \langle f(t), e^{jk\omega_0 t} \rangle = \frac{1}{T} \int_0^T f(t) e^{-jk\omega_0 t} dt \quad (6-10)$$

First, notice that the DFT uses a summation within $[0, N-1]$ and the series uses an integral within one period T . This difference arises because here the signal is discrete and finite (and so we write $x[n]$ instead of $f(t)$). The factor of $1/T$ in (6-10) is equivalent to that of $1/N$ in (6-9), where that factor has been arbitrarily included in the IDFT instead of the DFT.

Now let's compare the basis (the complex exponential). The frequency here is also discretized. Remember that a sampled signal has a Nyquist frequency of $\omega_s/2$, or π radians/sample, where ω_s is the sampling rate, equivalent to 2π radians/sample. Let's discretize this signal's frequencies using N equally-spaced points. The step $\Delta\hat{\omega}$ between neighboring frequencies (in radians/sample) is

$$\Delta\hat{\omega} = \frac{2\pi}{N} \quad (6-11)$$

This is what equation (6-8) indicates within the sum: that whatever nk is, it will be a multiple of $2\pi/N$. The k^{th} frequency in radians can be written as

$$k\Delta\hat{\omega} = k\frac{2\pi}{N}, \quad k = 0, 1, 2, \dots, N-1 \quad (6-12)$$

Substituting $k\Delta\hat{\omega}$ in (6-12) for $k\omega_0$ in the Fourier series basis should convince you that the DFT is the discrete version of the Fourier series. The coefficient $X[k]$ is the magnitude of the spectrum of x at frequency $k2\pi/N$.

Table 6.1 illustrates how the step between frequencies changes as the signal duration and sampling rate (and thus number of samples) change. Increasing the signal duration, and therefore the number of samples, without changing the sampling rate (which keeps the Nyquist cutoff constant) decreases the step between frequencies (or, if you prefer to think of this another way, increases the frequency resolution). On the other hand, decreasing the sampling rate decreases the number of samples (assuming the signal duration stays constant) and the Nyquist cutoff, so the step between frequencies stays constant.

6. SPECTRAL ANALYSIS

T (s)	f_s (Hz)	N	$\Delta\hat{\omega}$ (rad/sample)	$\Delta\omega$ (rad/s)	Δf (Hz)
1	10	10	$\pi/5$	2π	1
10	10	100	$\pi/50$	$\pi/5$	1/10
100	10	1000	$\pi/500$	$\pi/50$	1/100
100	5	500	$\pi/250$	$\pi/50$	1/100
100	1	100	$\pi/50$	$\pi/50$	1/100

Table 6.1: Some examples of how $\Delta\hat{\omega}$, $\Delta\omega = \Delta\hat{\omega}f_s$, and $\Delta f = \Delta\omega/2\pi = f_s/N$ change for signals of different duration and sampling rate.

6.2.1 Derivation of the IDFT [Optional]

Next, let's see how we can get the synthesis equation IDFT from the DFT. Multiplying both sides of (6-8) by $e^{jn'k2\pi/N}$ and then summing over all k ,

$$\sum_{k=0}^{N-1} X[k] e^{jn'k2\pi/N} = \sum_{k=0}^{N-1} \sum_{n=0}^{N-1} x[n] e^{-jnk2\pi/N} e^{jn'k2\pi/N} \quad (6-13)$$

Switching the order of summation of n and k on the right side, plus some algebraic rearrangement yields

$$\sum_{k=0}^{N-1} X[k] e^{jn'k2\pi/N} = \sum_{n=0}^{N-1} x[n] \sum_{k=0}^{N-1} e^{jk(n'-n)2\pi/N} \quad (6-14)$$

It can be shown that

$$\sum_{k=0}^{N-1} e^{jk(n'-n)2\pi/N} = \begin{cases} N & n = n' \\ 0 & n \neq n' \end{cases} \quad (6-15)$$

$$= N\delta[n - n'] \quad (6-16)$$

where $\delta[n - n']$ is defined as

$$\delta[n - n'] = \begin{cases} 1 & n = n' \\ 0 & n \neq n' \end{cases} \quad (6-17)$$

Substituting the above result into (6-14), we get the IDFT (but for that pesky factor of $1/N$):

$$\begin{aligned} \sum_{k=0}^{N-1} X[k] e^{jn'k2\pi/N} &= \sum_{n=0}^{N-1} x[n] N\delta[n - n'] \\ &= Nx[n'] \end{aligned} \quad (6-18)$$

To simplify the notation, let's use a vector notation for the discrete signal $\mathbf{x} = \{x[n]\}$ and its spectrum $\mathbf{X} = \{X[k]\}$. The DFT and IDFT operations become $N \times N$ matrices \mathbf{F} and \mathbf{F}^{-1} , respectively. An element in row k and column n of \mathbf{F} is

$$[\mathbf{F}]_{kn} = e^{-jnk2\pi/N}, \quad k, n = 0, 1, 2, \dots, N-1 \quad (6-19)$$

6. SPECTRAL ANALYSIS

Then the DFT and IDFT can be written as

$$\mathbf{X} = \mathbf{F}\mathbf{x} \quad (6-20)$$

$$\mathbf{x} = \mathbf{F}^{-1}\mathbf{X} \quad (6-21)$$

or

$$\mathbf{x} \xrightarrow{\mathbf{F}} \mathbf{X} \quad (6-22)$$

$$\mathbf{X} \xrightarrow{\mathbf{F}^{-1}} \mathbf{x} \quad (6-23)$$

6.2.2 Finite vs. Infinite Signals

In this book, we have used (and will continue to use) the terms “periodic” and “finite” interchangeably (and, similarly, “aperiodic” and “infinite”). When we compute the Fourier series or the DFT of a finite signal of duration T , we do so only within that interval of time. In effect, what we are doing for finite signals is “pretending” that the signal is actually periodic with period T and that we are only looking at one of its periods.

On the other hand, if a signal is actually of infinite duration, we would use the Fourier transform. However, this is not a process that we can perform on a computer, where infinite duration signals cannot exist (the duration of any signal is limited by the available storage). We have to chop the signal off at a length that the computer can handle, ignoring the error it may produce (or testing to make sure that the error is tolerable for our application). This brings us back to the DFT for processing the resulting finite signal as an *approximation* of the infinite signal’s Fourier transform. Note that, even outside the computer, our time is finite (even the lifespan of the universe is finite) and so no physically realizable signal is actually infinite.

6.2.3 Properties of the DFT

Let’s consider some of the properties of the DFT of physically realizable signals. These signals are real, so $x[n] = x[n]^*$. What is the spectrum of such a signal like? We can think of the signal’s frequency content or spectrum, $X[k]$ ($k = 0, 1, \dots, N - 1$), as a sequence of N complex numbers. This is known as a N point FFT. If we compute $X[N - k]$ using (6-8),

6. SPECTRAL ANALYSIS

we get

$$\begin{aligned}
 X[N-k] &= \sum_{n=0}^{N-1} x[n] e^{-jn(N-k)2\pi/N} \\
 &= \sum_{n=0}^{N-1} x[n] e^{-jn2\pi} e^{jnk2\pi/N} \\
 &= \sum_{n=0}^{N-1} x[n] e^{jnk2\pi/N} \quad (\text{since } e^{-jn2\pi} = 1) \\
 &= \left[\sum_{n=0}^{N-1} x[n]^* e^{-jnk2\pi/N} \right]^* \quad (\text{since } ab = ((ab)^*)^* = (a^* b^*)^*)
 \end{aligned}$$

Because $x[n] = x[n]^*$,

$$\begin{aligned}
 X[N-k] &= \left[\sum_{n=0}^{N-1} x[n] e^{-jnk2\pi/N} \right]^* \\
 &= X[k]^*
 \end{aligned} \tag{6-24}$$

So for example, when $N = 8$, $k = 0, 1, 2, 3, 4, 5, 6, 7$, and

$$X[7] = X[1]^* \quad X[6] = X[2]^* \quad X[5] = X[3]^* \tag{6-25}$$

(When $k = 0$, $X[8] = X[0]^*$ but $X[8]$ is out of spectrum, which ranges from 0 to 7 only. This is the “DC”, or zero-frequency, component of the signal.)

This can be represented diagrammatically as



This is clearly symmetric about $k = 4$. When N is an even number, the spectrum has $N/2$ at the center; when N is an odd number, the center is between $\lfloor N/2 \rfloor$ and $\lceil N/2 \rceil$. So, for $N = 7$,



What this means is that the spectrum over frequencies $\lceil N/2 \rceil$ to $N-1$ has the same magnitude as over 1 to $\lfloor N/2 \rfloor$, but with negative phase angle (which means negative frequencies on the unit circle). In fact, $N/2$ corresponds to the Nyquist frequency in radians/sample. We can see this from (6-12), when $k = N/2$

$$\hat{\omega}_{N/2} = \frac{N}{2} \frac{2\pi}{N} = \pi \tag{6-28}$$

6. SPECTRAL ANALYSIS

Converting this to Hz, we get

$$\hat{f}_{N/2} = \hat{\omega}_{N/2} \frac{f_s}{2\pi} = \pi \frac{f_s}{2\pi} = \frac{f_s}{2} \quad (6-29)$$

where f_s is the sampling rate. The above equation shows that $\hat{f}_{N/2}$ is the Nyquist frequency in Hz. The conclusion is that the magnitude of the transform of a real valued signal is an *even* function of frequency and so we only need to plot its spectrum in range $[0, N/2]$, corresponding to the range of frequencies from 0 to the Nyquist frequency. This also means that the DFT of a real signal has (slightly more than) half the information of the DFT of a complex-valued signal with the same number of samples (which makes sense, since each sample has an imaginary component of zero).

Self-Test Exercises

See [A.6 #1](#) for the answer.

1. Show which frequencies will be equal for a spectrum with:
 - (a) 16 points.
 - (b) 15 points.

Example: Spectrum of an exponential

Consider the exponential signal

$$x[n] = a^n, \quad 0 < a < 1, \quad n = 0, 1, 2, \dots, N - 1 \quad (6-30)$$

The signal is plotted in the top of figure [6.4](#)

The DFT of the sequence $x[n]$ is

$$\begin{aligned} X[k] &= \sum_{n=0}^{N-1} x[n] e^{-jnk2\pi/N} \\ &= \sum_{n=0}^{N-1} a^n e^{-jnk2\pi/N} \end{aligned} \quad (6-31)$$

The common ratio for this geometric series (the ratio of two successive terms) is $ae^{-jk2\pi/N}$. Accordingly, the summation in [\(6-31\)](#) becomes

$$\begin{aligned} X[k] &= \frac{1 - a^N e^{-jkN2\pi/N}}{1 - ae^{-jk2\pi/N}} \\ &= \frac{1 - a^N}{1 - ae^{-jk2\pi/N}} \end{aligned} \quad (6-32)$$

The magnitude of $X[k]$ for $N = 50$ and $a = 0.8$ is plotted in the bottom of figure [6.4](#). Since this is a real signal, $|X[k]|$ is an even function of frequency, and so we can just plot the first half of the range of 0 to $N/2$. That is shown in figure [6.5](#)

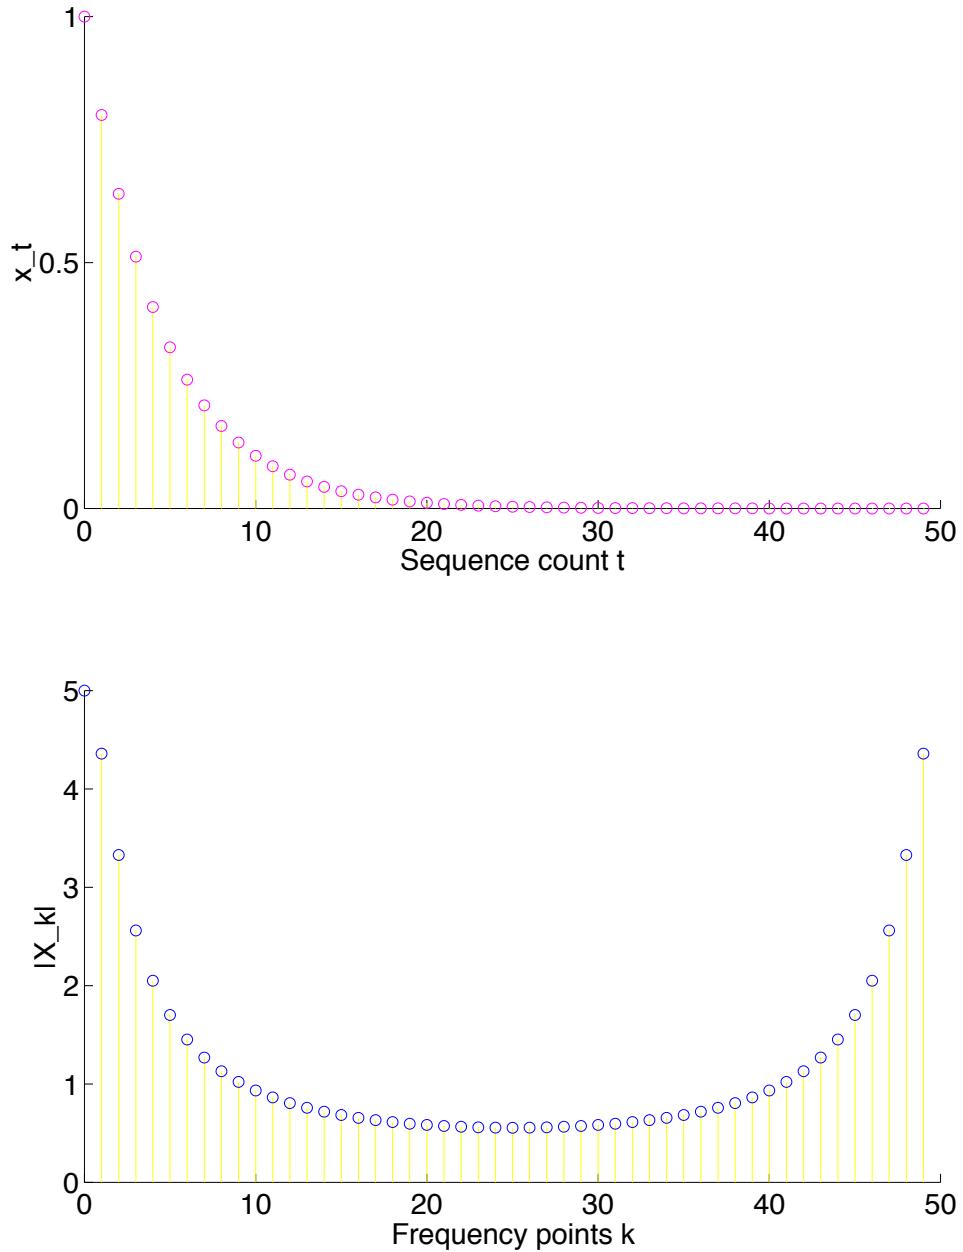


Figure 6.4: Plot of the sequence $x[n] = a^n$, $0 < a < 1$ (top) and the magnitude of its DFT (bottom), where $a = 0.8$ and $N = 50$.

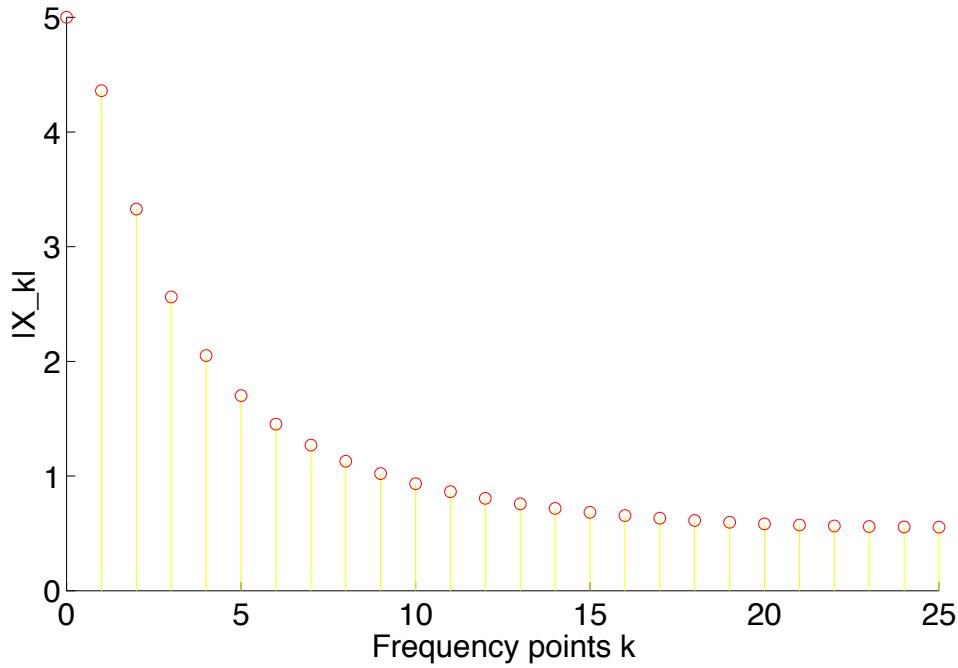


Figure 6.5: Magnitude of DFT for the signal 6.4 top is plotted for the first half of its range.

6.2.4 Computing the DFT Directly

Later on, a method for computing the DFT efficiently will be introduced. In view of the importance of the DFT in various digital signal processing applications, such as linear filtering, correlation analysis, and spectrum analysis, its efficient computation is a topic that has received considerable attention by many mathematicians, engineers, and applied scientists. But, let's first consider the direct, brute-force approach.

To compute the DFT, we need to compute the sequence $\{X[k]\}$ of N complex-valued numbers given another sequence of data $\{x[n]\}$ of length N , according to the formula (6-8):

$$X[k] = \sum_{n=0}^{N-1} x[n]e^{-jnk2\pi/N}, \quad k = 0, 1, 2, \dots, N-1$$

In general, the data sequence $x[n]$ is also assumed to be complex valued. We observe that for each value of k , direct computation of $X[k]$ involves N complex multiplications ($4N$ real multiplications and $2N$ real additions) and $N - 1$ complex additions ($2N - 2$ real additions). Consequently, to compute all N values of the DFT requires $4N^2$ complex multiplications and $4N^2 - 2N$ complex additions. So, the direct approach is an $O(N^2)$ algorithm, and you should recognize that this is not terribly efficient to say the least.

6. SPECTRAL ANALYSIS

6.2.5 The Fast Fourier Transform Algorithm

The development of computationally efficient algorithms for the DFT is made possible if we adopt a divide-and-conquer approach, called Fast Fourier Transform (*FFT*). This approach is based on the decomposition of an N point DFT into successively smaller DFTs, in a manner similar to how mergesort or quicksort divide large sorting problems into smaller sorting problems.

A DFT of length N can be rewritten as the sum of two DFTs, each of length $N/2$. One of the two is formed from the even-numbered points of the original N , while the other uses the odd-numbered points. This division can be arrived at straightforwardly:

$$\begin{aligned}
 X[k] &= \sum_{n=0}^{N-1} x[n] e^{-jnk2\pi/N} \\
 &= \sum_{n=0}^{N/2-1} x[2n] e^{-jk(2n)2\pi/N} + \sum_{n=0}^{N/2-1} x[2n+1] e^{-jk(2n+1)2\pi/N} \\
 &= \sum_{n=0}^{N/2-1} x[2n] e^{-jkn2\pi/(N/2)} + e^{-jk2\pi/N} \sum_{n=0}^{N/2-1} x[2n+1] e^{-jkn2\pi/(N/2)} \\
 &= X[k]^{even} + e^{-jk2\pi/N} X[k]^{odd}, \quad k = 0, 1, 2, \dots, N-1
 \end{aligned} \tag{6-33}$$

where

$$X[k]^{even} = \sum_{n=0}^{N/2-1} x[2n] e^{-jkn2\pi/(N/2)} \tag{6-34}$$

$$X[k]^{odd} = \sum_{n=0}^{N/2-1} x[2n+1] e^{-jkn2\pi/(N/2)} \tag{6-35}$$

where $k = 0, 1, 2, \dots, N/2 - 1$.

$X[k]^{even}$ denotes the k^{th} component of the DFT of length $N/2$ formed from the even components of the original $x[n]$, while $X[k]^{odd}$ is the corresponding transform of length $N/2$ formed from the odd components. The transforms $X[k]^{even}$ and $X[k]^{odd}$ are periodic in k

6. SPECTRAL ANALYSIS

with length $N/2$. So each is repeated through two cycles to obtain $X[k]$:

$$\begin{aligned} X[k + N/2]^{even} &= \sum_{n=0}^{N/2-1} x[2n]e^{-j(k+N/2)n2\pi/(N/2)} \\ &= \sum_{n=0}^{N/2-1} x[2n]e^{-jkn2\pi/(N/2)} = X[k]^{even} \end{aligned} \quad (6-36)$$

$$\begin{aligned} X[k + N/2]^{odd} &= \sum_{n=0}^{N/2-1} x[2n+1]e^{-j(k+N/2)n2\pi/(N/2)} \\ &= \sum_{n=0}^{N/2-1} x[2n+1]e^{-jkn2\pi/(N/2)} = X[k]^{odd} \end{aligned} \quad (6-37)$$

because $e^{-jkn2\pi} = 1$.

The good thing is that this process can be continued recursively, just as in the divide-and-conquer sorting algorithms. Having reduced the problem of computing $X[k]$ to that of computing $X[k]^{even}$ and $X[k]^{odd}$, we can do the same reduction of $X[k]^{even}$ to the problem of computing the transform of its $N/4$ even-numbered elements and $N/4$ odd-numbered elements. In other words, we can define $X[k]^{even-even}$ and $X[k]^{even-odd}$ to be DFT of the points which are respectively even-even and even-odd on the successive subdivisions of the data. The same process can be applied to recursively divide $X[k]^{odd}$.

It is easy to imagine continuing this process until the DFT size is one, if N is a power of two. Though there are special algorithms if N is not a power of two, we can assume that the data is just padded with zeros up to the next power of two. Having done that, we will continue developing the FFT algorithm for N a power of two as a general-purpose DFT algorithm. With this condition on N , we can continue applying the dividing method until we have subdivided the data all the way down to transforms of length 1. The DFT of $x[n]$ for some n , and $N = 1$ is $x[n]!$ Therefore,

$$X[k]^{even-even-odd-\dots} = x[n], \quad \text{for some } n \quad (6-38)$$

The results of adjacent pairs of these one-point DFTs can be merged using (6-33): $X[k]^{even} + e^{-jk2\pi/N}X[k]^{odd}$. In this case $k = \{0, 1\}$, $N = 2$, and the one-point DFTs are the even and odd signal values themselves, so this reduces to,

$$\begin{aligned} X_2[0] &= x[even] + e^{-j(0)2\pi/2}x[odd] \\ &= x[even] + x[odd] \end{aligned} \quad (6-39)$$

$$\begin{aligned} X_2[1] &= x[even] + e^{-j(1)2\pi/2}x[odd] \\ &= x[even] - x[odd] \end{aligned} \quad (6-40)$$

where the subscript “2” has been used to indicate that this is a 2-point DFT.

6. SPECTRAL ANALYSIS

Algorithm 6.1 Recursive FFT.

Require: x is a discrete function of time of length $N = 2^m$

Ensure: X is the DFT of x (also of length N)

if $N = 1$ **then**

 Return x

else

 Divide x into x^{even} and x^{odd} {the even and odd numbered points}

$X^{even} = \text{FFT}(x^{even})$

$X^{odd} = \text{FFT}(x^{odd})$

for $k = 0, 1, 2, \dots, N - 1$ **do**

$X_N[k] = X_{N/2}[k]^{even} + e^{-jk2\pi/N} X_{N/2}[k]^{odd}$

end for

 Return X

end if

Table 6.2: Example of the effect of bit reversal on an eight-element input vector.

Input		Bit-Reversed Result	
Decimal	Binary	Binary	Decimal
0	000	000	0
1	001	100	4
2	010	010	2
3	011	110	6
4	100	001	1
5	101	101	5
6	110	011	3
7	111	111	7

This is the basic FFT. High-level pseudocode for a recursive implementation is given in algorithm 6.1, where I have used subscripts to distinguish between the values of the $N/2$ -point FFT and the N -point FFT. The base case for the recursion is that the length of the signal is one. As I'm sure you're familiar, recursive algorithms are short, simple, and elegant, but not always as efficient as non-recursive ones. There is a non-recursive approach to the even and odd dividing, and it is really neat, so I'll go over it.

We start with the problem of how to sort even and odd numbers and how to know which n goes to which pattern of $X[k]^{even-\cdots}$ and $X[k]^{odd-\cdots}$. The successive subdivisions of the data into even and odd parts are tests of successive low-order (least significant) bits of the binary representation of n . This is true because the least significant bit of an binary number is what determines if it is even or odd, and the act of dividing a binary number by two is equivalent to shifting it to the right one bit, which makes the next bit the new least significant bit. We take the original vector of data $x[n]$ and rearrange it into bit-reversed order (see table 6.2

6. SPECTRAL ANALYSIS

for an example for $N = 8$), so that the individual numbers are not in order of n , but of the number obtained by bit-reversing n . The function of bit-reversing is to take care of all those even and odd divisions to the final list for N one-point transforms!

How do we recombine these non-recursively to produce the result? Starting with the one-point transforms, we combine adjacent pairs to get two-point transforms according to (6-33), then combine adjacent pairs of pairs of 4-point transforms, and so on, until we combine $N/2$ point transforms into the final transform of N total data points.

Algorithm 6.2 Iterative FFT.

Require: x is a discrete function of time of length N

Ensure: X is the DFT of x (also of length N)

if N is not a power of two **then**

Pad x with zeros until its length is the next power of two

end if

Shuffle the $x[n]$ in bit-reversed order

$Size = 2 \{Size = 1 \text{ DFTs already done}\}$

while $Size \leq N$ **do**

Compute $N/Size$ DFTs from the existing ones as $X_{Size/2}[k]^{even} + e^{-jk2\pi/Size} X_{Size/2}[k]^{odd}$

$Size = Size \times 2$

end while

In summary, the bit-reverse-based nonrecursive FFT algorithm is given in algorithm 6.2. This is illustrated in figure 6.6.

As far as the computational complexity of this algorithm is concerned, each iteration of the loop is $O(N)$ (we're computing $N/Size$ DFTs, each with $Size$ elements), and the loop executes $\log_2 N$ times, so the whole algorithm is $O(N \log_2 N)$. Directly computing the DFT (i.e., not using the FFT algorithm) takes $O(N^2)$.

Example: 8-Point FFT

Let's compute the FFT of the signal, $x[n] = \{0, 1, 0, 1, 0, 1, 0, 1\}$, $n = \{0, 1, 2, 3, 4, 5, 6, 7\}$. The first thing we'll do is write the signal out as a 1D array, with indices in binary:

$x[n]$	0	1	0	1	0	1	0	1
n	000	001	010	011	100	101	110	111

Next, we sort the elements according to their bit-reversed indices:

$x[n]$	0	0	0	0	1	1	1	1
n	000	100	010	110	001	101	011	111

Each of these elements is already a 1-point FFT; we now begin merging them into 2-point ones ($X_2[0] = x[even] + x[odd]$ and $X_2[1] = x[even] - x[odd]$), as in equations (6-39) and (6-40):

6. SPECTRAL ANALYSIS

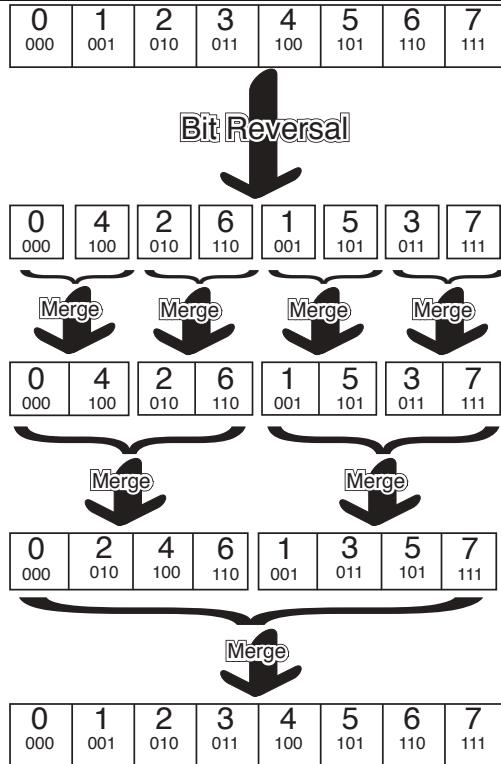


Figure 6.6: Schematic outline of an iterative 8-point FFT

$X_2[k]$	0	0	0	0	2	0	2	0
k	0	1	0	1	0	1	0	1

Now we have four 2-point FFTs; we now merge adjacent pairs of points. So, we will be computing $X_4[k]$ for $k = \{0, 1, 2, 3\}$. To compute elements $k = 2$ and $k = 3$, we need to remember equations (6-36) and (6-37) — that, since the transform X is periodic, we simply repeat the 2-point FFTs to get the “extra” two points. So, $X_2[2] = X_2[0]$ and $X_2[3] = X_2[1]$. The resulting equations are:

$$\begin{aligned} X_4[0] &= X_2[0]^{\text{even}} + e^{-j(0)2\pi/4}X_2[0]^{\text{odd}} \\ X_4[1] &= X_2[1]^{\text{even}} + e^{-j(1)2\pi/4}X_2[1]^{\text{odd}} \\ X_4[2] &= X_2[0]^{\text{even}} + e^{-j(2)2\pi/4}X_2[0]^{\text{odd}} \\ X_4[3] &= X_2[1]^{\text{even}} + e^{-j(3)2\pi/4}X_2[1]^{\text{odd}} \end{aligned}$$

We can do the arithmetic in the exponents,

$$\begin{aligned} X_4[0] &= X_2[0]^{\text{even}} + e^0X_2[0]^{\text{odd}} \\ X_4[1] &= X_2[1]^{\text{even}} + e^{-j\pi/2}X_2[1]^{\text{odd}} \\ X_4[2] &= X_2[0]^{\text{even}} + e^{-j\pi}X_2[0]^{\text{odd}} \\ X_4[3] &= X_2[1]^{\text{even}} + e^{-j3\pi/2}X_2[1]^{\text{odd}} \end{aligned}$$

6. SPECTRAL ANALYSIS

and then simplify,

$$\begin{aligned} X_4[0] &= X_2[0]^{\text{even}} + X_2[0]^{\text{odd}} \\ X_4[1] &= X_2[1]^{\text{even}} - jX_2[1]^{\text{odd}} \\ X_4[2] &= X_2[0]^{\text{even}} - X_2[0]^{\text{odd}} \\ X_4[3] &= X_2[1]^{\text{even}} + jX_2[1]^{\text{odd}} \end{aligned}$$

yielding:

$X_4[k]$	0	0	0	0	4	0	0	0
k	0	1	2	3	0	1	2	3

We repeat this process one more time to get the 8-point final result,

$$\begin{aligned} X_8[0] &= X_4[0]^{\text{even}} + e^{-j(0)2\pi/8}X_4[0]^{\text{odd}} \\ X_8[1] &= X_4[1]^{\text{even}} + e^{-j(1)2\pi/8}X_4[1]^{\text{odd}} \\ X_8[2] &= X_4[2]^{\text{even}} + e^{-j(2)2\pi/8}X_4[2]^{\text{odd}} \\ X_8[3] &= X_4[3]^{\text{even}} + e^{-j(3)2\pi/8}X_4[3]^{\text{odd}} \\ X_8[4] &= X_4[0]^{\text{even}} + e^{-j(4)2\pi/8}X_4[0]^{\text{odd}} \\ X_8[5] &= X_4[1]^{\text{even}} + e^{-j(5)2\pi/8}X_4[1]^{\text{odd}} \\ X_8[6] &= X_4[2]^{\text{even}} + e^{-j(6)2\pi/8}X_4[2]^{\text{odd}} \\ X_8[7] &= X_4[3]^{\text{even}} + e^{-j(7)2\pi/8}X_4[3]^{\text{odd}} \end{aligned}$$

producing:

$$\begin{aligned} X_8[0] &= X_4[0]^{\text{even}} + X_4[0]^{\text{odd}} \\ X_8[1] &= X_4[1]^{\text{even}} + e^{-j\pi/4}X_4[1]^{\text{odd}} \\ X_8[2] &= X_4[2]^{\text{even}} - jX_4[2]^{\text{odd}} \\ X_8[3] &= X_4[3]^{\text{even}} + e^{-j3\pi/4}X_4[3]^{\text{odd}} \\ X_8[4] &= X_4[0]^{\text{even}} - X_4[0]^{\text{odd}} \\ X_8[5] &= X_4[1]^{\text{even}} + e^{-j5\pi/4}X_4[1]^{\text{odd}} \\ X_8[6] &= X_4[2]^{\text{even}} + jX_4[2]^{\text{odd}} \\ X_8[7] &= X_4[3]^{\text{even}} + e^{-j7\pi/4}X_4[3]^{\text{odd}} \end{aligned}$$

The final result is:

$X_8[k]$	4	0	0	0	-4	0	0	0
k	0	1	2	3	4	5	6	7

6. SPECTRAL ANALYSIS

To interpret this, since we're dealing with a real-valued signal, we refer back to (6-26). $X_8[0]$ is the DC value, proportional to the mean value of the signal (in fact, it would be equal to the mean if we divide by N). We need only examine elements 1 through 4, since the spectrum is periodic. Only element 4 is nonzero. This makes sense, since the original signal repeated every other sample, which is right at the Nyquist frequency (π), corresponding to element 4.

Self-Test Exercises

See A.6 #2–4 for answers.

1. Prove that the DFT of $x[n]$ for any $n = m$ and $N = 1$ is $x[m]$.
2. Perform step-by-step division for the example given in table 6.2 to prove the final result is equal to the bit-reversed input.
3. Perform the 4-point FFT of the signal $x[n] = \{1, 2, 3, 4\}$, $n = \{0, 1, 2, 3\}$ by hand.

6.3 The inverse DFT

The inverse DFT (*IDFT*) can be computed using method similar to that used to compute the DFT, that is the FFT. Let's take look at (6-9) again:

$$x[n] = \frac{1}{N} \sum_{k=0}^{N-1} X[k] e^{jnk2\pi/N}, \quad n = 0, 1, 2, \dots, N-1$$

Take the complex conjugate of both sides of this equation and multiply by N ,

$$Nx[n]^* = \sum_{k=0}^{N-1} X[k]^* e^{-jnk2\pi/N} = \text{DFT}(X[k]^*) \quad (6-41)$$

Compare this to (6-8); the right side is just the forward DFT of $X[k]^*$. So, $x[n]$ can be computed from $X[k]$ as

$$x[n] = \frac{1}{N} [\text{DFT}(X[k]^*)]^* \quad (6-42)$$

Given the DFT of a signal $\{X[k]\}$ ($k = 0, 1, 2, \dots, N-1$), the algorithm for computing its IDFT $\{x[n]\}$ using the FFT is:

1. take $\{X[k]\}$'s conjugate: $\{X[k]^*\}$
2. take $\{X[k]^*\}$'s forward transform using the FFT: $\text{FFT}(\{X[k]^*\})$
3. take the conjugate of the result and divide by N to get $\{x[n]\}$

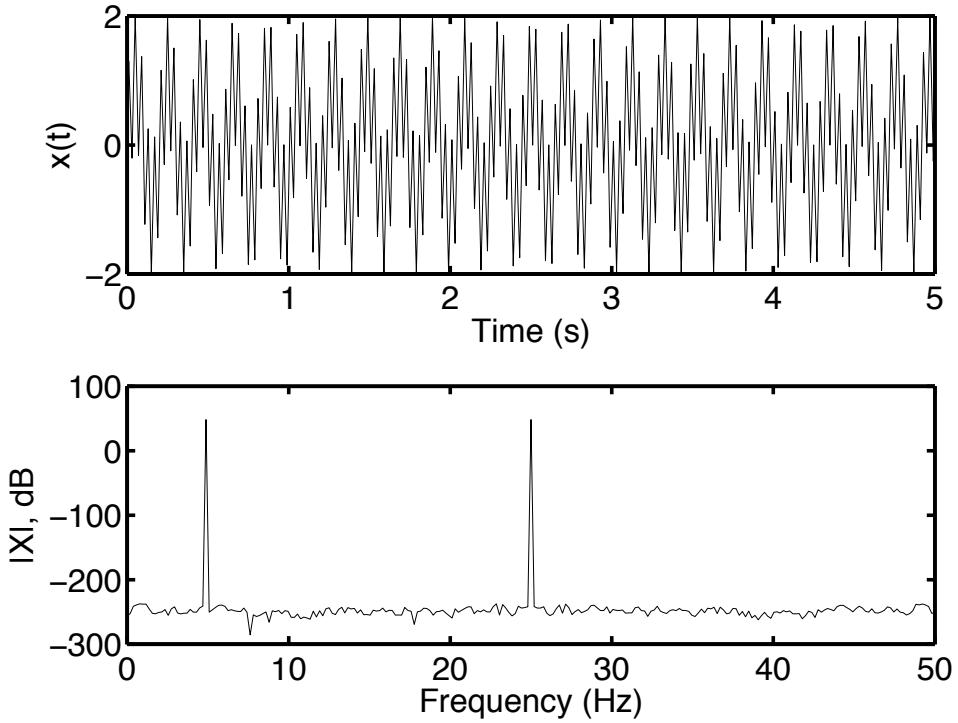


Figure 6.7: Sum of two sinusoids x with $N = 512$ samples (top) and its FFT $|X|$ (bottom). The sampling frequency is $f_s = 100\text{Hz}$, $f_1 = 25\Delta f = 4.8828\text{Hz}$ and $f_2 = 128\Delta f = 25.0\text{Hz}$, where frequency step $\Delta f = f_s/N = 0.1953\text{Hz}/\text{sample}$.

6.3.1 Example: Sum of Two Sinusoids

Let's investigate the FFT using the example of two sinusoids,

$$x(t) = \sin 2\pi f_1 t + \sin 2\pi f_2 t \quad (6-43)$$

I'll set the sampling rate to $f_s = 100\text{Hz}$, so the sampling interval is $T_s = 1/f_s = 0.01\text{s}$. A finite-length (N point) segment of the digital version of above signal becomes,

$$x[n] = \sin(2\pi f_1 n T_s) + \sin(2\pi f_2 n T_s), \quad n = 0, 1, \dots, N - 1 \quad (6-44)$$

The corresponding frequency step in Hz is $\Delta f = f_s/N$, so $\hat{f} = k\Delta f$, $k = 0, 1, 2, \dots, N/2$. First, let's use $N = 512$ and set the frequency components of the signal to be $f_1 = 25\Delta f = 4.8828\text{Hz}$ and $f_2 = 128\Delta f = 25.0\text{Hz}$. The signal and its FFT result are shown on the top and bottom of figure 6.7.

As we expected, the two components appear in locations 4.8828Hz and 25.0Hz . Their magnitudes are around 300dB . Theoretically, all other value should be zero except these two. The nonzero values away from these two frequencies represent unavoidable computational errors introduced.

Now, let's choose another a pair of frequency values, $f_1 = 5\text{Hz}$ and $f_2 = 25\text{Hz}$ and check the result in figure 6.8 (top).

6. SPECTRAL ANALYSIS

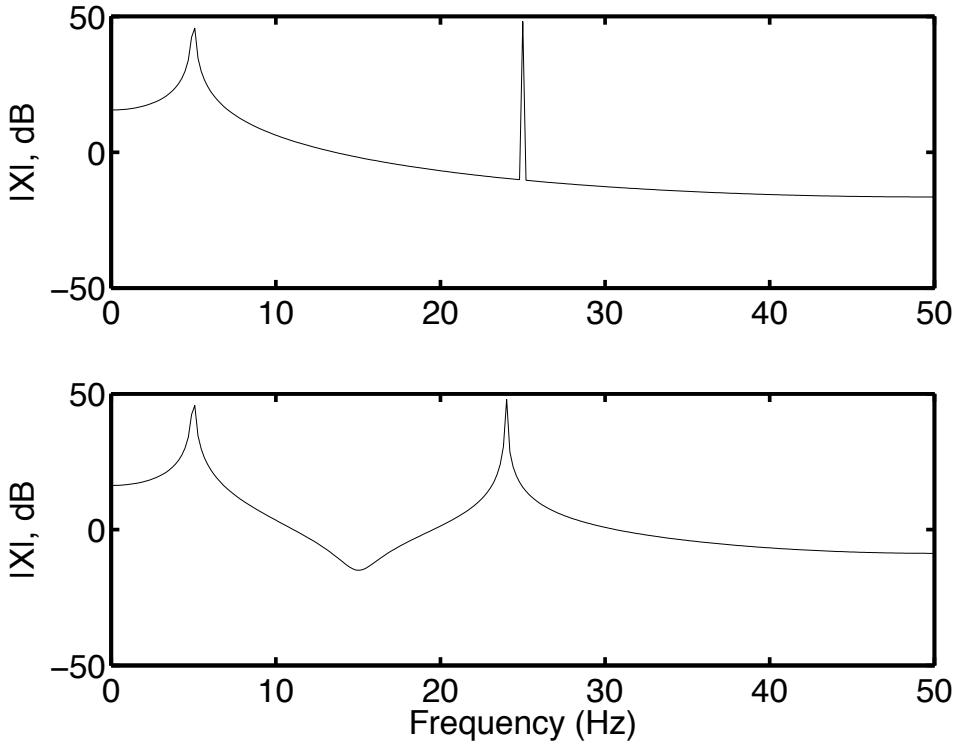


Figure 6.8: Similar input signals as in figure 6.7, but here the two frequencies are $f_1 = 5\text{Hz}$ and $f_2 = 25\text{Hz}$ for the top plot and $f_1 = 5\text{Hz}$ and $f_2 = 24\text{Hz}$ for the bottom.

How about $f_1 = 5\text{Hz}$ and $f_2 = 24\text{Hz}$? See figure 6.8 (bottom). In both cases in this figure, the peaks are below 40dB, down from 300dB. Why? This is caused by the discrete nature of the frequency representation and the fact that one or two of the signal's frequency components are not lined up with the set of discrete frequencies $\{\hat{f}\}$ — they fall in between two DFT points. For the pair $f_1 = 5\text{Hz}$ and $f_2 = 25\text{Hz}$, $f_1 = 5\text{Hz}$ falls between the points $k = 25$ and 26 and $f_2 = 25\text{Hz}$ is lined up with $k = 128$. So, the first peak is broad and its energy shows up in significant amounts at all of the DFT frequencies. The second one is narrow and sharp, but because of the first peak's energy distribution, its amplitude is low too (actually, the amplitudes of all the “in between” points have been raised). For the second pair of $f_1 = 5\text{Hz}$ and $f_2 = 24\text{Hz}$, neither are lined up so both of them are broad and low.

6.4 Power Leakage [Optional]

Power leakage is the phenomenon where power at a particular frequency (called the *center frequency* or *central lobe*) “leaks” into neighboring frequencies, which results in the center frequency peak being reduced, the peak width becoming broader, and nearby frequencies’ (or side lobes’) amplitudes increasing. This happens when the signal abruptly changes, for

6. SPECTRAL ANALYSIS

instance suddenly turning on or off. Let's see the case of a truncated signal.

When we compute a signal's spectrum, values of the signal for all time are required. However, in practice, we observe signals for only finite durations. Therefore, the spectrum of a signal can only be approximated from a finite data record. Let's say we have an analog signal, we sample it at a rate f_s , and we limit the duration of the signal to the time interval $T_0 = NT_s$, where N is the number of samples and $T_s = 1/f_s$ is the sample interval. We denote the original, infinite-duration discrete signal as $\{x[n]\}$ and duration limited signal as $\{y[n]\}$. This is equivalent to multiplying $\{x[n]\}$ by a rectangular window $w[n]$ of length N . That is,

$$y[n] = x[n]w[n] \quad (6-45)$$

where

$$w[n] = \begin{cases} 1 & 0 \leq n \leq N - 1 \\ 0 & \text{otherwise} \end{cases} \quad (6-46)$$

The rectangular window $w[n]$ sharply chopped the original signal to get the finite signal $y[n]$.

I'll use a sinusoid as an example for the signal $x[n]$,

$$x[n] = \cos \hat{\omega}_0 n \quad (6-47)$$

Using Euler's formula, the signal also can be written as

$$x[n] = \frac{1}{2} (e^{j\hat{\omega}_0 n} + e^{-j\hat{\omega}_0 n}) \quad (6-48)$$

The windowed version of this signal is

$$y[n] = \frac{1}{2} (e^{j\hat{\omega}_0 n} + e^{-j\hat{\omega}_0 n}) w[n] \quad (6-49)$$

Setting $\hat{\omega}_k = k2\pi/N$ (the N radian/sample frequency points in the FFT) in the DFT formula and applying it,

$$\begin{aligned} Y[k] \equiv Y(\hat{\omega}_k) &= \sum_{n=0}^{N-1} w[n] \frac{1}{2} (e^{j\hat{\omega}_0 n} + e^{-j\hat{\omega}_0 n}) e^{-j\hat{\omega}_k n} \\ &= \frac{1}{2} \sum_{n=0}^{N-1} w[n] (e^{-j(\hat{\omega}_k - \hat{\omega}_0)n} + e^{-j(\hat{\omega}_k + \hat{\omega}_0)n}) \\ &= \frac{1}{2} (W(\hat{\omega}_k - \hat{\omega}_0) + W(\hat{\omega}_k + \hat{\omega}_0)) \end{aligned} \quad (6-50)$$

where $W(\hat{\omega})$ is the DFT of the window $w[n]$. Actually, $w[n]$ can be viewed as the long pulse

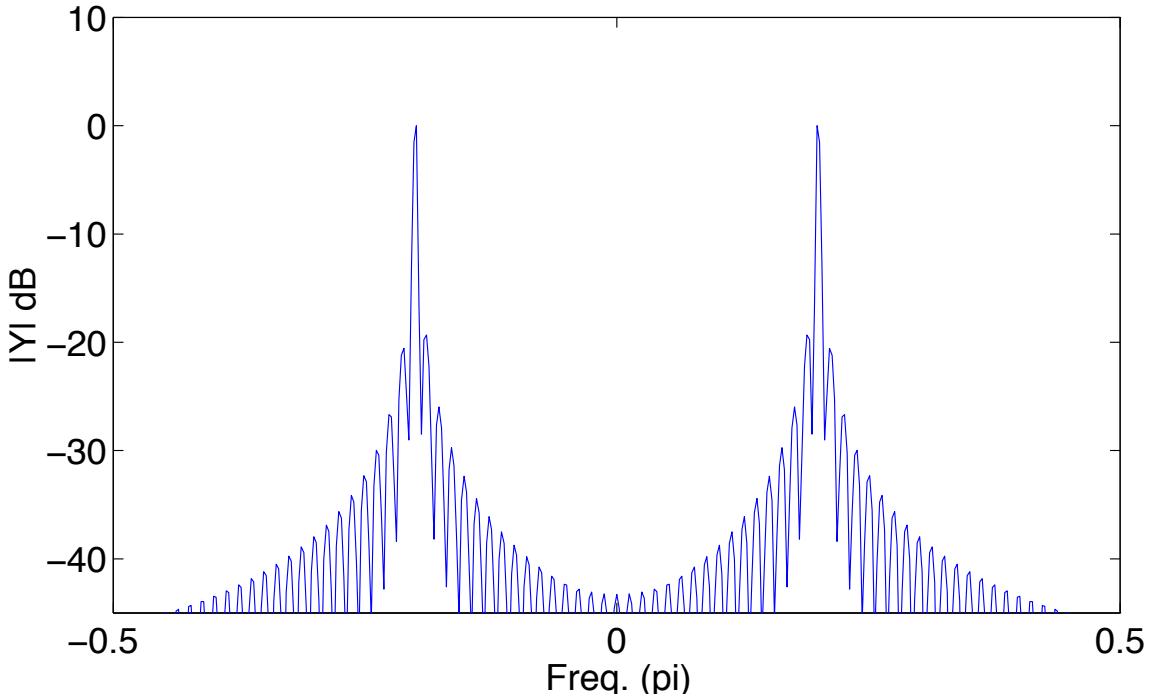


Figure 6.9: Magnitude spectrum of windowed signal $x[n] = \cos \hat{\omega}_0 n$, $\hat{\omega}_0 = 0.2\pi$ and the rectangular window length is $N = 128$. This illustrates the occurrence of power leakage.

we talked about in chapter 1. Its DFT is

$$\begin{aligned} W[k] \equiv W(\hat{\omega}_k) &= \sum_{n=0}^{N-1} w[n] e^{-j\hat{\omega}_k n} \\ &= \sum_{n=0}^{N-1} e^{-j\hat{\omega}_k n} \end{aligned} \quad (6-51)$$

$$= \frac{\sin(\hat{\omega}_k N/2)}{\sin \hat{\omega}_k / 2} e^{-j\hat{\omega}_k (N-1)/2} \quad (6-52)$$

Figure 6.9 is a plot of $Y(\hat{\omega}_k)$ with a window length of $N = 128$, and $\hat{\omega}_0 = 0.2\pi$. The power of the original signal sequence $x[n]$ — concentrated at a single frequency $\hat{\omega}_0 = 0.2\pi$ — has been spread by the rectangular window into the entire frequency range. That is called *power leakage*. The rectangular window's effect is to cut out a piece of the original “long” digital signal; this action is equivalent to turning the signal suddenly on at $n = 0$ and off at $n = N$. This causes the power leakage.

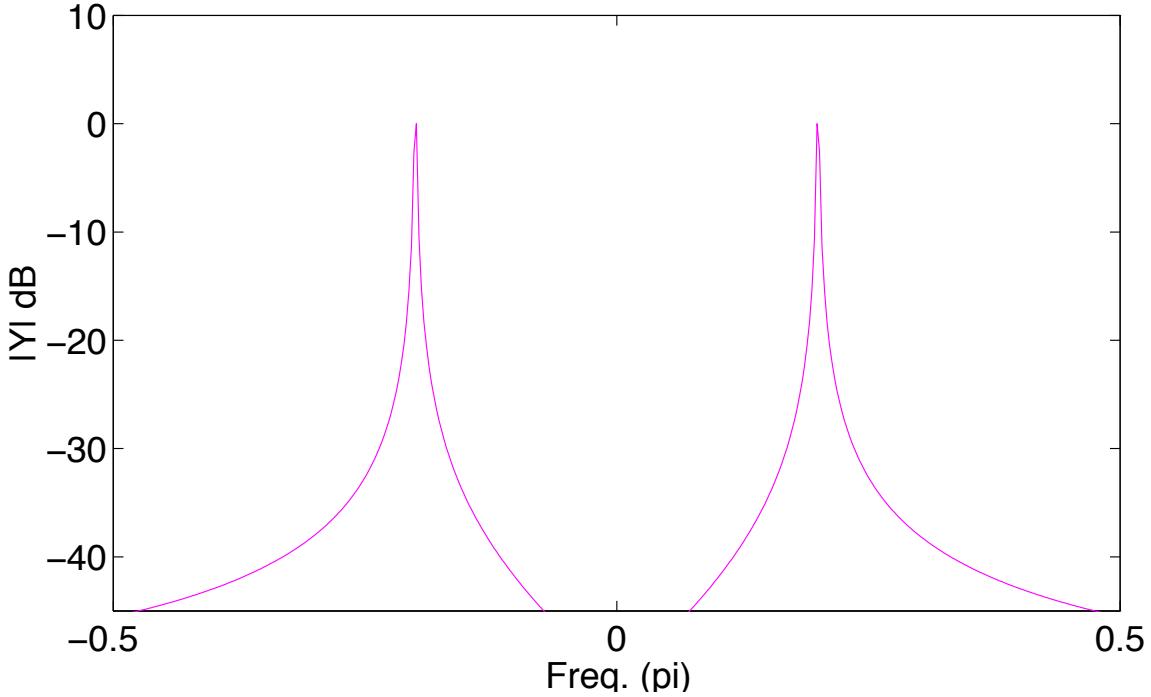


Figure 6.10: Magnitude spectrum of a one-sided signal $x[n] = \cos \hat{\omega}_0 n$ with $\hat{\omega}_0 = 0.2\pi$.

Let's see what happens if we let the window grow infinity long (or $N \rightarrow \infty$), that is

$$\begin{aligned} W[n] \equiv W(\hat{\omega}_k) &= \sum_{n=0}^{\infty} w[n] e^{-j\hat{\omega}_k n} \\ &= \sum_{n=0}^{\infty} e^{-j\hat{\omega}_k n} \end{aligned} \quad (6-53)$$

This is an infinite geometric series. Its common ratio is $e^{-j\hat{\omega}_k}$, so

$$\begin{aligned} W[k] &= \frac{1}{1 - e^{-j\hat{\omega}_k}} \\ &= \frac{1}{2je^{-j\hat{\omega}_k/2} \sin(\hat{\omega}_k/2)} \\ &= \frac{-je^{j\hat{\omega}_k/2}}{2 \sin(\hat{\omega}_k/2)} \end{aligned} \quad (6-54)$$

Substituting this result back into (6-50), we obtain the spectrum of a one-sided signal x_t . This is plotted in figure 6.10.

Comparing (6-52) and (6-54), the magnitude of the former has N zeros equally spaced on the frequency axis, except at the peak frequency $\hat{\omega}_0$, where there is a 0/0 situation, which becomes 1. All these zeros contribute to the spectrum's oscillation. The magnitude of the latter one does not have a zero.

Self-Test Exercise

See [A.6 #5](#) for the answer.

- Fill in the steps leading from (6-51) to (6-52).

6.5 Tradeoff Between Time and Frequency Resolution [Optional]

Windowing not only distorts the spectral estimate due to leakage effects, it also reduces spectral resolution. There exists a tradeoff between time and frequency resolution. Wider windows produce finer frequency resolutions, which means you have the ability to distinguish between nearby spectral peaks. However, it yields worse time resolution, meaning that, if you deal with a time-varying signal (a signal with spectrum varying along time), the longer the time window is, the more information is combined within it and the more it misrepresents *when* the spectral components occurred.

To illustrate the concept of frequency resolution, let's use a digital signal consisting of three frequency components,

$$x[n] = \cos \hat{\omega}_0 n + \cos \hat{\omega}_1 n + \cos \hat{\omega}_2 n \quad (6-55)$$

When $x[n]$ is truncated to N samples in the range $0 \leq n \leq N - 1$, the windowed spectrum is

$$Y(\hat{\omega}_k) = \frac{1}{2} [W(\hat{\omega} - \hat{\omega}_0) + W(\hat{\omega} - \hat{\omega}_1) + W(\hat{\omega} - \hat{\omega}_2) + W(\hat{\omega} + \hat{\omega}_0) + W(\hat{\omega} + \hat{\omega}_1) + W(\hat{\omega} + \hat{\omega}_2)] \quad (6-56)$$

Examining (6-52) again, the first zero crossing on either side of the center frequency is the $\hat{\omega}_k$ that satisfies

$$\frac{\hat{\omega}_k N}{2} = \pi \quad (6-57)$$

which is the first frequency at which $\sin(\hat{\omega}_k N/2) = 0$, or $\hat{\omega}_k = 2\pi/N$. The width of the center lobe is twice this, because there is no zero at $\hat{\omega}_k = 0$. The center lobes of the two window functions $W(\hat{\omega} - \hat{\omega}_i)$ and $W(\hat{\omega} - \hat{\omega}_j)$ — corresponding to two frequency components $\hat{\omega}_i$ and $\hat{\omega}_j$ ($i \neq j$) — will overlap if $|\hat{\omega}_i - \hat{\omega}_j| < 4\pi/N$. As a result, the two spectral lines (peaks) of x_t will be indistinguishable. Only if $|\hat{\omega}_i - \hat{\omega}_j| \geq 4\pi/N$ can we see two separate lobes in the spectrum $Y(\hat{\omega}_k)$. Therefore, our ability to resolve spectral lines of different frequencies is limited by the window main lobe width, that is $4\pi/N$. As window length N increases, the spacing between two resolvable frequencies decreases as $1/N$, and so we get better frequency resolution. Figures 6.11 and 6.12 illustrate this conclusion. In these two figures, the signal has the three components $\hat{\omega}_0 = 0.1\pi$, $\hat{\omega}_1 = 0.12\pi$ and $\hat{\omega}_2 = 0.3\pi$. The length of the window for 6.11 is $N = 16$, where the two close components $\hat{\omega}_0$ and $\hat{\omega}_1$ are indistinguishable. The window length for 6.12 is $N = 128$, and now we can see two peaks around the 0.1π area

6. SPECTRAL ANALYSIS

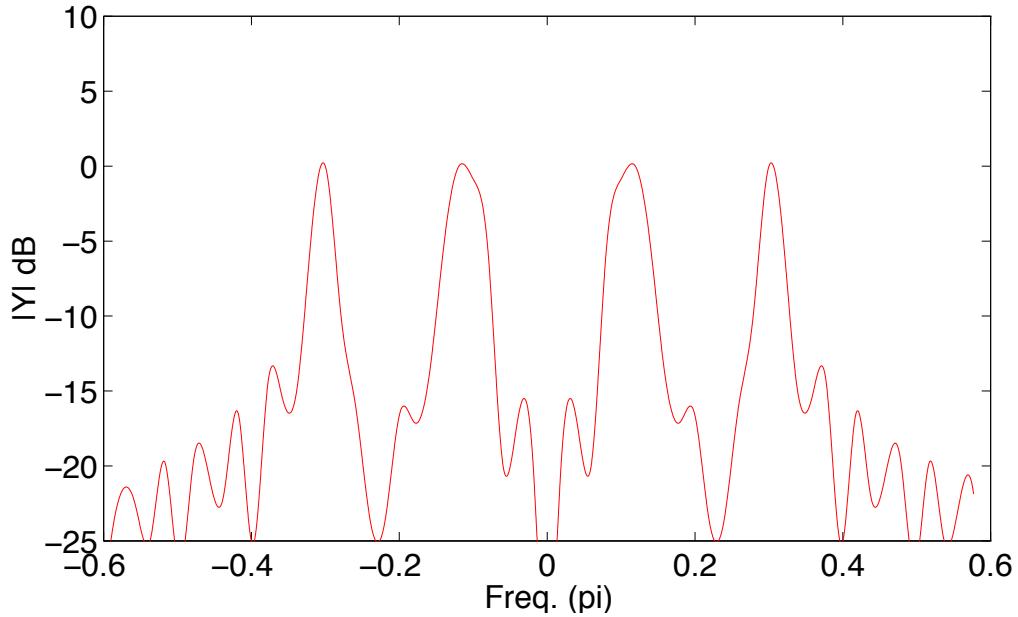


Figure 6.11: Magnitude spectrum of the signal (6-55) made up of three sinusoids. $\hat{\omega}_0 = 0.1\pi$, $\hat{\omega}_1 = 0.12\pi$, $\hat{\omega}_2 = 0.3\pi$, and the rectangular window length was $N = 16$. Because of the small window size, $\hat{\omega}_0$ and $\hat{\omega}_1$ are indistinguishable.

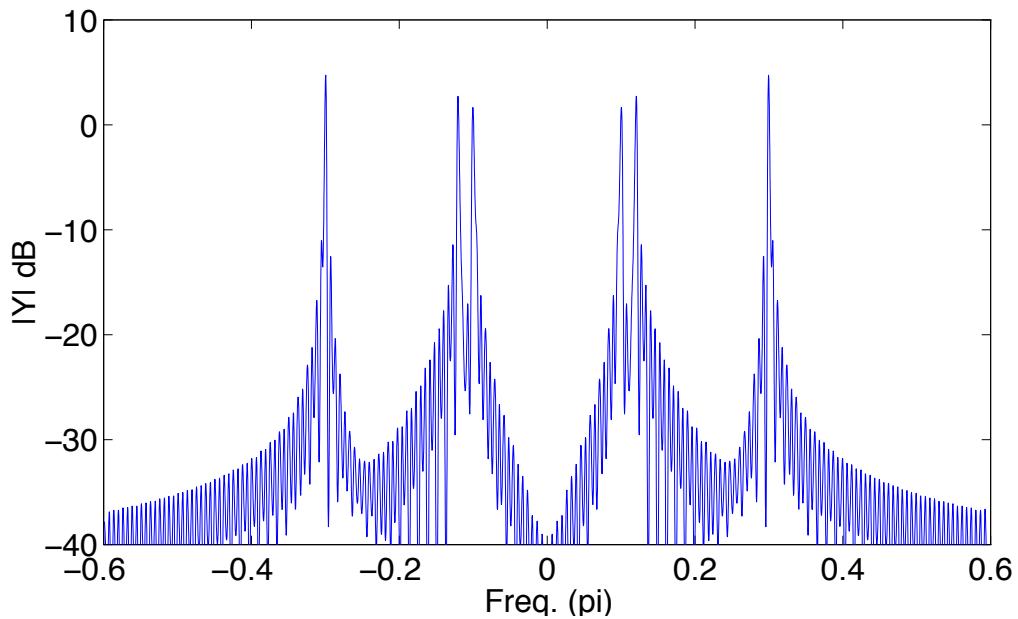


Figure 6.12: The same figure as 6.11, but the rectangular window length $N = 128$ allows separation of the $\hat{\omega}_0$ and $\hat{\omega}_1$ frequency components.

6. SPECTRAL ANALYSIS

because the main lobes have become narrow. At the same time, the side lobes becomes lower, which means that less central frequency power leaks into neighboring frequencies. This is why the center frequency peak also becomes higher.

You might then ask if it is always good to extend the window length to get better frequency resolution. The answer is no. Depending on the signal, a longer segment might provide worse spectral information. This is the case when the signal is time-varying, that is the signal's spectrum changes along time (in every instant, the signal has different spectrum or frequency components). When we estimate the spectrum of a windowed signal using the DFT, we treat the segment as though it were a periodic signal (even though it is not), which repeats with period equal to the segment length. You can see that, for a signal that changes with time, this approach mixes together time domain information from the entire segment. The actual spectrum we get from a windowed signal is the *average* spectrum in that window. This means that, for a time-varying signal, a long window will misrepresent what the actual frequencies are (or, rather it will smear the frequencies together). The frequency information is all there, but we don't know *when* they occurred — we only know that it was sometime during the window. This suggests that the best approach would be to decrease the window size to get better time resolution and to get a more accurate time estimate. Unfortunately, as we just learned, short windows result in bad frequency resolution. This is the so-called time/frequency tradeoff. You must do your best to choose a window size that meets both your time and frequency resolution criteria.

A good way to understand this tradeoff is using a *spectrogram*, or short-time Fourier transform. This is a method to deal with time-varying signals to get a compromise result for both the time and frequency domains. A spectrogram is a sequence of FFT results produced by a sliding window. Sliding window processing starts at some time with a fixed window length, computes an FFT, slides the window by a fixed increment, recomputes the FFT, and repeats this sliding and FFT computation for the duration of interest. The result is usually plotted as a surface in a plot with the *X* axis being time, the *Y* axis frequency, and surface height being power. The resulting spectrogram is a two-dimensional function with independent variables time and frequency. The magnitude of the spectrogram gives the spectrum within windows at particular times.

An example of a bird call and its spectrogram is shown in figures 6.13 and 6.14. For each, the top plot is a section of the bird call waveform and the bottom is a spectrogram with two variables, time and frequency. Spectrogram color shows the magnitude of the spectrogram with red high and blue low, as shown by the color bar on the right.

In figure 6.13, the window length is 512 samples with an overlap of 511. Let's check the details of the spectral components with large magnitudes. Starting at the beginning, there is a component at around 1.5kHz which ends a little before 200 milliseconds. A second component is at around 3.3kHz starting at approximately 50ms continuing until 300ms, but becoming broader at around 100ms. Just before this component's end, it has a broad band frequency range of 1.7kHz to 3.5kHz (time ranging from 150 to 250ms). A similar pattern can be seen in the span of 400–700ms.

Compare this to figure 6.14, where the window length is 128 samples. From the point of

6. SPECTRAL ANALYSIS

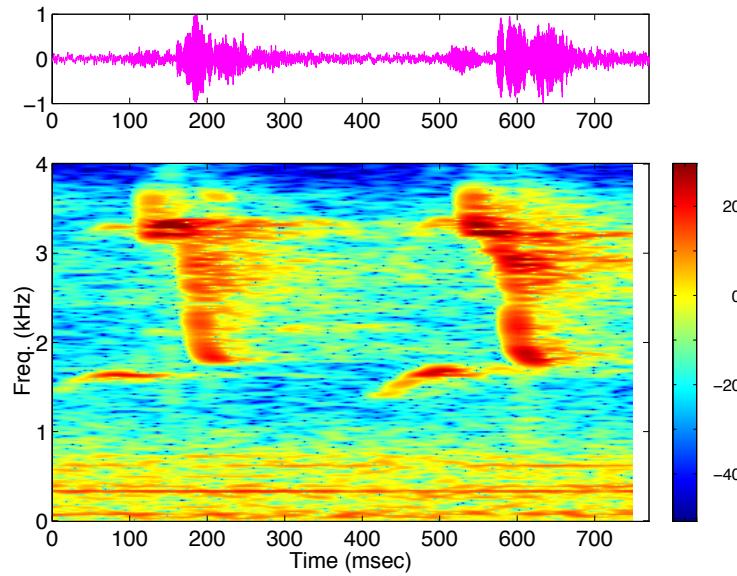


Figure 6.13: A bird call waveform (top) and its spectrogram (bottom). The window size is 512 samples and the overlap is 511 samples (increment is 1). Color indicates magnitude, with color key on the right of the figure.

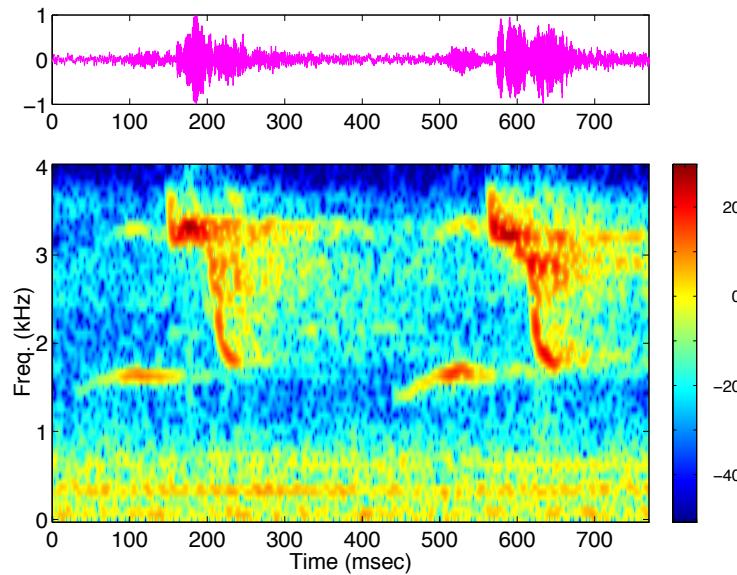


Figure 6.14: The same data as figure 6.13, but the window size is 128 samples and overlap is 127 (increment is 1).

6. SPECTRAL ANALYSIS

view of time, the patterns look narrower, which means they have better temporal resolution (because of the shorter window). We can now see, for example, that there is a complex structure in the temporal evolution of the 1.7–3.5kHz frequency band. However, the patterns are broader and “blockier” along the frequency axis — the frequency resolution got worse (notice the 1.5kHz component in the area of 50–150ms) because of the short window.

Figures 6.15 and 6.16 are another pair of examples. They show similar effects from the tradeoff between time and frequency resolution.

6.6 Windowing [Optional]

The discussion of power leakage has mentioned that turning a signal on and off suddenly, abruptly truncating it (which is what a rectangular window does) will cause power leakage from the central lobe to side lobes. To reduce leakage when we select a segment of a signal, instead of using an abrupt truncation — like a rectangular window produces — we could select a data window function $w[n]$ that has lower side lobes in the frequency domain. Examples of some popular window functions include Hamming, Hann, Bartlett, Blackman, Gaussian, etc. Each of these has its own characteristics. Some examples of what these windows look like and what their effects are presented next.

Hamming Window

The coefficients of an L -point Hamming window are computed from the equation,

$$\text{Hamming}[n] = 0.54 - 0.46 \cos(2\pi n/(L-1)) \quad n = 0, 1, \dots, L-1 \quad (6-58)$$

It consists of a cycle of a cosine, dropping to 0.08 at the end-points and with a peak value of one. A plot of a Hamming window is shown in figure 6.17

Bartlett Window

The L -point Bartlett window is defined as:

- For L odd

$$\text{Bartlett}[n] = \begin{cases} \frac{2n}{L-1} & 0 \leq n \leq \frac{L-1}{2} \\ 2 - \frac{2n}{L-1} & \frac{L-1}{2} \leq n \leq L-1 \end{cases} \quad (6-59)$$

- For L even

$$\text{Bartlett}[n] = \begin{cases} \frac{2n}{L-1} & 0 \leq n \leq \frac{L-1}{2} \\ \frac{2(L-n-1)}{L-1} & \frac{L-1}{2} \leq n \leq L-1 \end{cases} \quad (6-60)$$

This is a triangular window with maximum height of one and zeros at samples 0 and $L-1$. It is plotted in figure 6.18.

6. SPECTRAL ANALYSIS

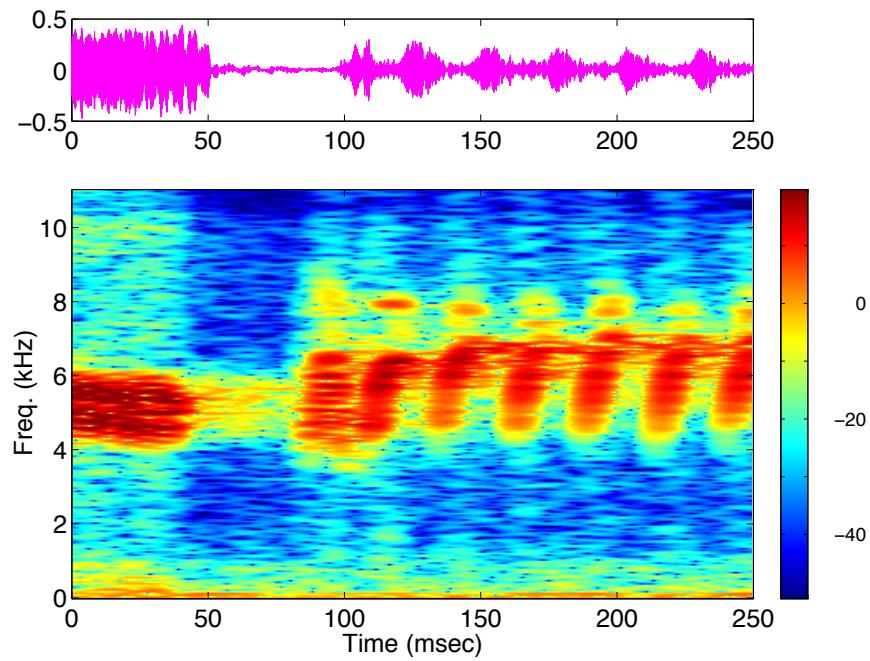


Figure 6.15: Another bird call waveform (top) and its spectrogram (bottom), with window size of 512 samples and overlap of 511 samples.

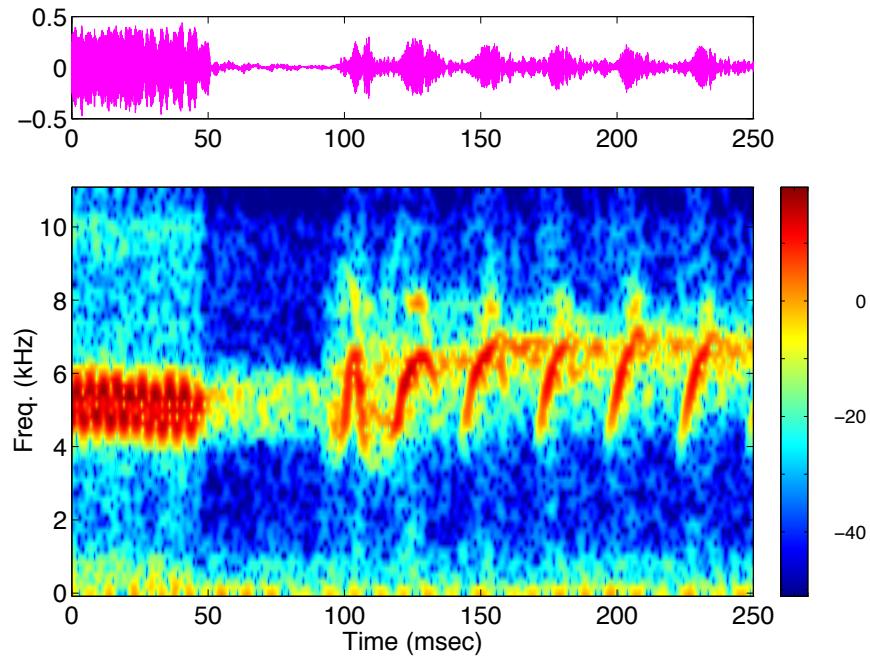


Figure 6.16: Same data as figure 6.15, but with window size of 128 samples and overlap of 127.

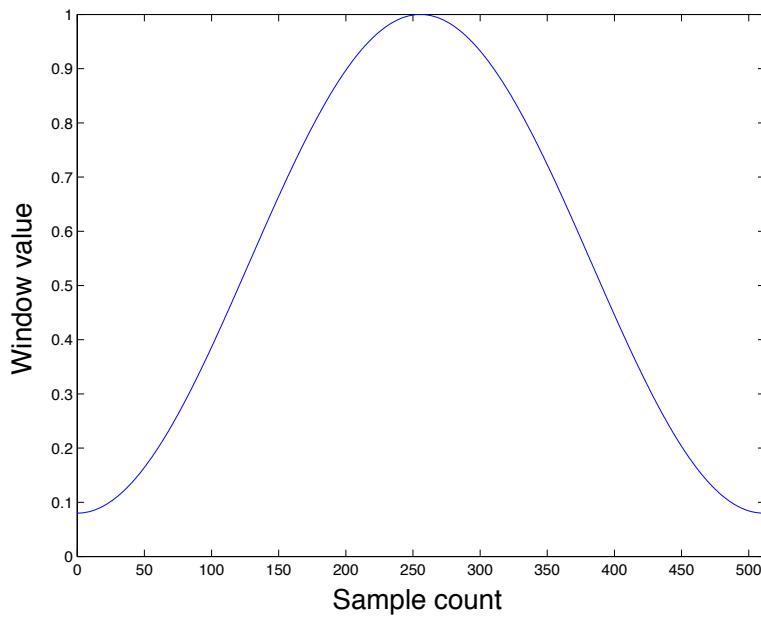


Figure 6.17: A 512-point Hamming window in the time domain.

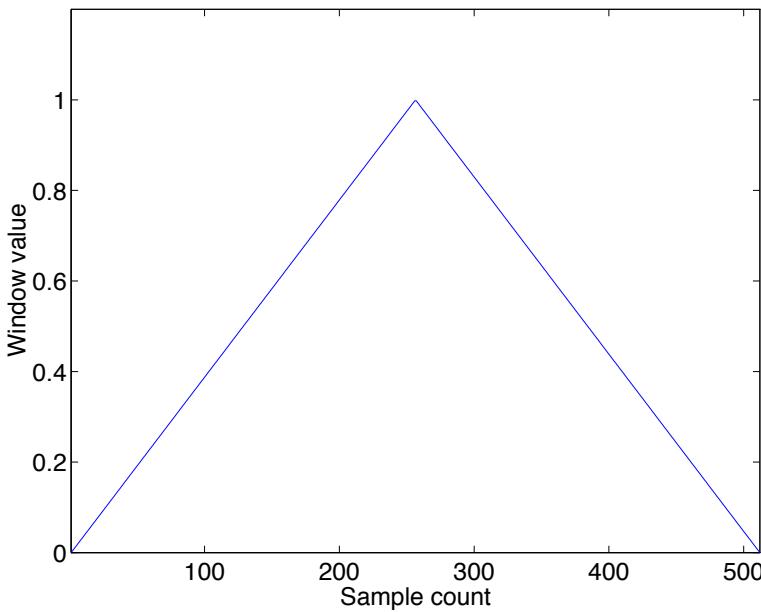


Figure 6.18: The 512-point Bartlett window in the time domain.

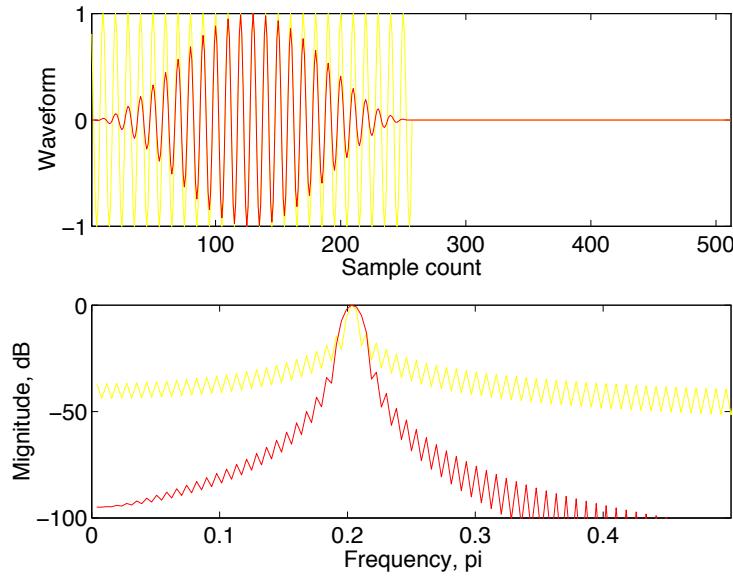


Figure 6.19: Hann windowed cosine waveform ($\hat{\omega}_0 = 0.2\pi$) and its spectrum, compared to rectangular window. The top is the cosine waveform windowed by rectangular (yellow) and Hann (red) windows, the bottom is their corresponding spectra.

Using Window Functions

How do we use window functions? For a general signal sequence $x[n]$, the time domain relationship between the windowed sequence $y[n]$ and original sequence is

$$y[n] = x[n]w[n] \quad (6-61)$$

where $w[n]$ is a window function in time domain. The special case of a rectangular window was previously discussed; now we will consider $w[n]$ as a general function.

Example: Windowed Sinusoid

Consider again a sinusoid signal $x[n]$,

$$x[n] = \cos(\hat{\omega}_0 n); \quad (6-62)$$

Instead of using a rectangular window, let's first use a Hann window and see the results. The windowed signal $y[n]$ is

$$y[n] = x[n] \text{Hann}[n] = \cos(\hat{\omega}_0 n) \text{Hann}[n] \quad (6-63)$$

where the Hann window is as described in (6-58). $y[n]$ is shown in figure 6.19 (top, red curve); its spectrum is the red curve in the bottom plot. Since $x[n]$ only has one component $\hat{\omega}_0 = 0.2\pi$, ideally there should be only one δ function peak at frequency 0.2π . However, as you now know, that is not likely to be the case because of power leakage. The magnitude

6. SPECTRAL ANALYSIS

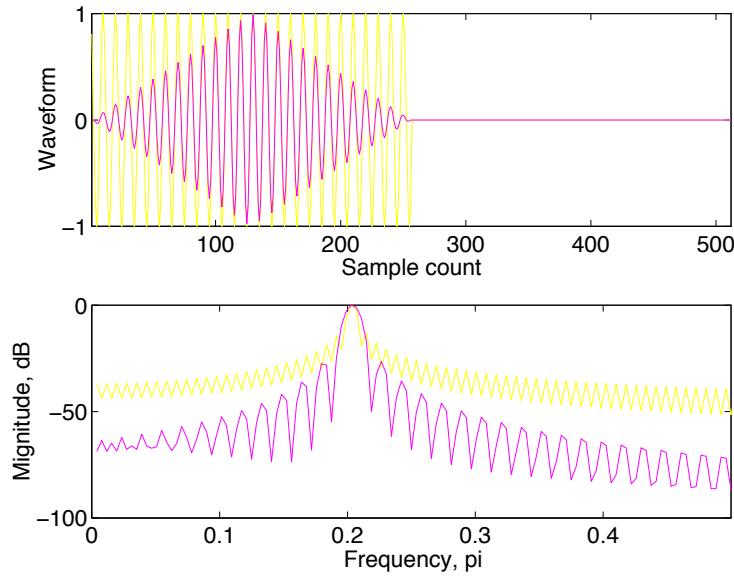


Figure 6.20: Bartlett windowed cosine waveform and its spectrum, compared to rectangular window. The top is the cosine waveform windowed by rectangular (yellow) and Bartlett (magenta), the bottom is their corresponding spectra.

value is gradually damped down away from the center lobe around $\hat{\omega}_0$. The leakage is smaller with the Hann window than a rectangular one (yellow curves). On the other hand, the rectangular windowed signal has a narrower peak than the Hann windowed one. So, we can see that the Hann window decreases power leakage by sacrificing peak resolution.

Let's see the result of using a Bartlett window. For the same cosine waveform, the results are shown in figure 6.20. We can reach similar conclusions about the Bartlett window. But, there is a difference between the two windows, as you can see in figure 6.21, which is a comparison between the Hann and Bartlett windows for the cosine wave. Though it appears that the Hann window is superior, there are a number of issues (beyond the scope of this book) that we won't discuss; the choice of window function involves a number of tradeoffs and depends on the signals being processed and the goal of the processing.

Example: Windowed Bird Call

Here, let's once again examine the bird call spectrogram I introduced earlier. When that spectrogram was presented, a cheat was used: a Hann window, instead of a rectangular one. Now, instead of using a Hann window in figure 6.14, if a rectangular one is used, we get figure 6.22. The increased power leakage into the side lobes of the two main frequency components is readily apparent. This leakage messes up the spectral appearance and affects how accurately we can estimate the shape of the frequency components. That illustrates how important it is to choose the right window.

Figure 6.23 presents a similar result for the bird call originally Hann windowed in figure 6.16.

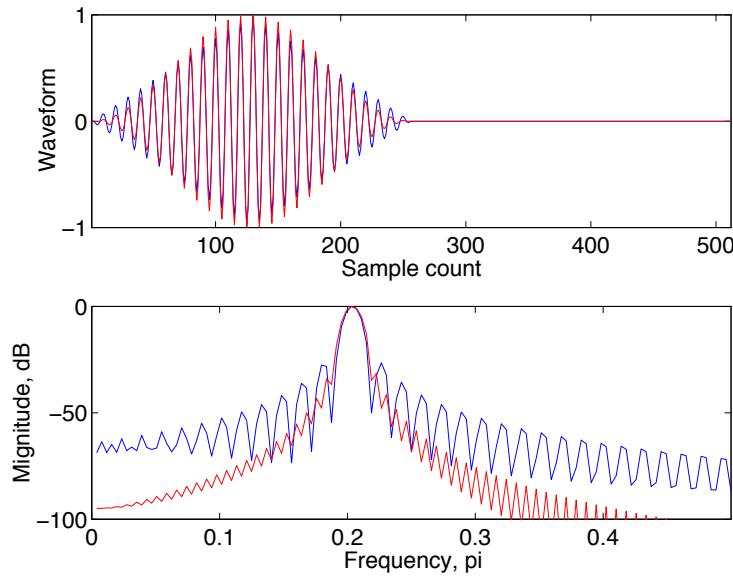


Figure 6.21: Comparison between Hann (red, lower curve) and Bartlett (blue, upper curve) windows for a cosine wave.

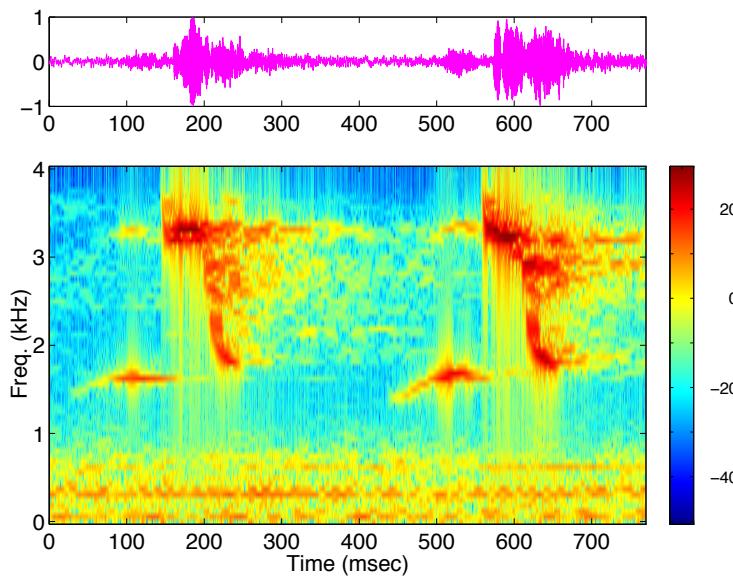


Figure 6.22: Similar spectrogram as figure 6.14, but here a rectangular window is used.

6. SPECTRAL ANALYSIS

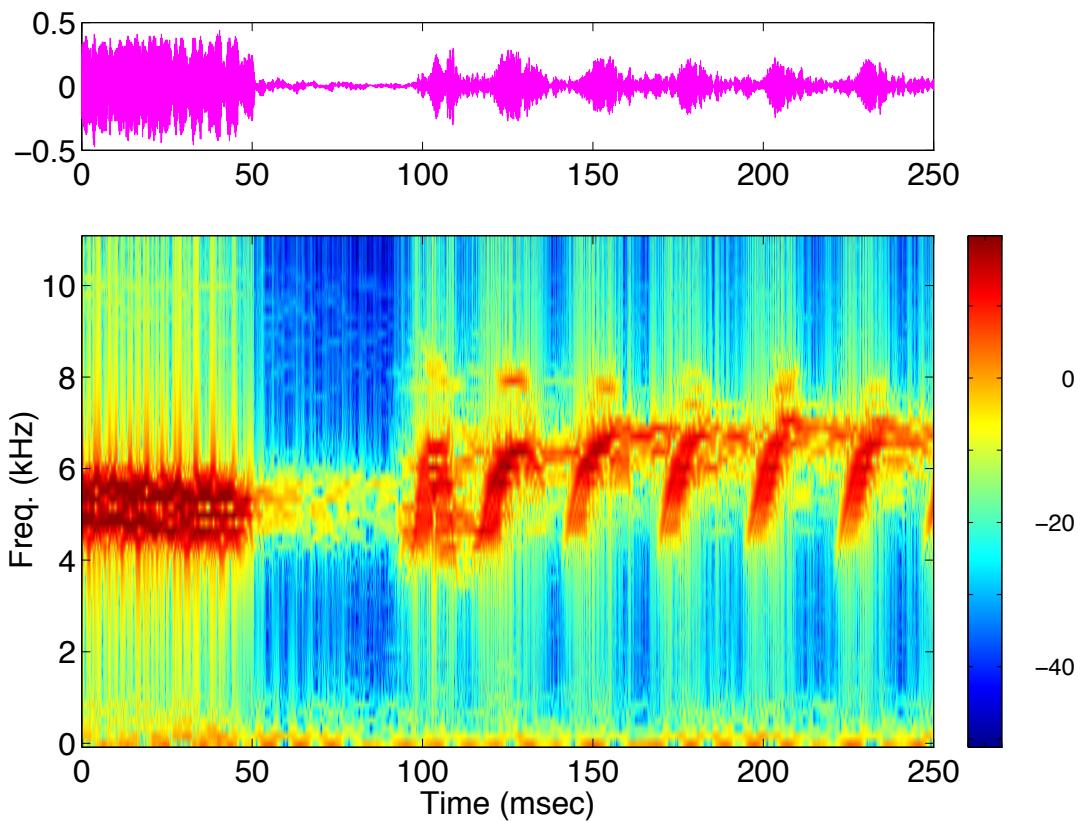


Figure 6.23: Similar spectrogram as figure 6.16, but here a rectangular window is used.

Self-Test Exercise

See [A.6 #6](#) for the answer.

1. Plot the Hann and Hamming windows in the time domain and compare their shapes.

6.7 Problems

1. If $x(t) = 100 \sin 20\pi t$ for $-0.05 < t < 0.05$ and $x(t) = 0$ for $t < -0.05$ and $t > 0.05$, evaluate its Fourier transform at $\omega =$ (a) 0, (b) 10π , (c) -10π , (d) 20π .
2. Trace by hand the 8-point FFT algorithm for the following signals, showing the intermediate steps. Plot their magnitude spectra.
 - (a) $x[n] = \{-1, 1, -1, 1, -1, 1, -1, 1\}$
 - (b) $x[n] = \{0, 1, 1, 0, 1, 1, 0, 1\}$
 - (c) $x[n] = \{0, 1, 2, 0, 1, 2, 0, 1\}$

6. SPECTRAL ANALYSIS

- (d) $x[n] = \{0, 1, 2, 3, 0, 1, 2, 3\}$
3. Use your favorite programming language to implement the iterative FFT defined in algorithm 6.2.
 4. Use Matlab's built-in FFT subroutine to compute the following DFTs and plot the magnitudes $|X_k|$ of those DFTs using Matlab.
 - (a) The 64-point DFT of the sequence

$$x[n] = \begin{cases} 1 & n = 0, 1, \dots, 15 \\ 0 & \text{otherwise} \end{cases}$$

- (b) The 64-point DFT of the sequence

$$x[n] = \begin{cases} 1 & n = 0, 1, \dots, 7 \\ 0 & \text{otherwise} \end{cases}$$

- (c) The 128-point DFT of the sequence in 4b.

- (d) The 64-point DFT of the sequence

$$x[n] = \begin{cases} 10e^{n\pi/8} & n = 0, 1, \dots, 64 \\ 0 & \text{otherwise} \end{cases}$$

Answer the following questions:

- (e) What is the frequency interval between successive samples for the plots in (a–d)?
- (f) What is the value of the spectrum at zero frequency (DC value) in the plots in (a–d)?
5. It is common practice to *normalize* windows by assuring that the sum of their values is equal to one, i.e.,

$$\sum_{n=0}^{L-1} w[n] = 1$$

- . Show that the Hamming window is normalized by dividing its values by $0.54L - 0.46$.
6. Given the bird call data at <http://courses.washington.edu/css457/ebook/amorile2-1.txt> (4000 samples), and its sampling frequency $f_s = 8\text{kHz}$, use MATLAB to compute its spectrogram, plot the waveform and its spectrogram (use window sizes of 128 and 512 with Hann [hanning] windows and an increment of 1). Use only the base MATLAB toolbox (*not* the Signal Processing Toolbox). Submit the resulting figures and code.

6.8 Further Reading

- James H McClellan, Ronald W. Schafer, and Mark A. Yoder, *DSP First: A Multimedia Approach*, Prentice Hall, 1998, chapter 9.

7

Compression

This chapter investigates how we might reduce the data processing, transmission, and storage requirements for a multimedia system by reducing the number of bits needed for signal representation. The concept of *information* is introduced to quantify the *content* of multimedia data, and show how this is distinct from the *representation* of multimedia data. We see how the choice of representation affects the number of bits required to represent multimedia information — that multimedia data can be *compressed* without *loss*. We also examine how additional compression can be achieved by sacrificing information content: *lossy* compression.

By the end of this chapter, you should understand the main kinds of compression algorithms, their chief features, and their tradeoffs. You will know when it is appropriate to sacrifice information for data size and when it is not. You will also have an idea of how knowledge of human perceptual capabilities is essential for designing lossy compression schemes. Finally, you will be able to implement some basic compression algorithms yourself.

7.1 Signals and Information

Up to this point, we've been implicitly assuming that a signal is sampled, quantized, and then processed. However, there is more to multimedia computing than just running a stream of samples through a filter. Among other functions, multimedia systems also need to store and transmit data (either among components within a single computer, or across networks to other machines). A critical issue for system performance is the *volume* of data that must be stored or moved around. For example, suppose that we are digitizing audio at CD quality. If a rate of 44,100 samples/second at 16bits/sample, what is the digital data rate in bits/second (answer in [A.7 #1](#))? If we are digitizing high-quality video — 1k x 1k pixels/frame, 30 frames/sec, 24 bits/pixel — what is the bit rate (answer in [A.7 #2](#))? Clearly, multimedia systems require not only high processing power (for real-time operation), but also high I/O bandwidth, large memory and storage capacity and speed, and fast networks. However, you should be familiar by now with the idea that a bit of thought can often lead to significant savings in algorithm run time or memory requirements. This chapter focuses on the latter: how we can *encode* digital multimedia information to reduce its volume.

The fundamental ideas related to signal coding were developed by Shannon at Bell Labs in the late 1940s. He was concerned with transmitting a signal (either via radio or along a wire) so that it could be reconstructed reliably at the receiver despite any noise corruption

7. COMPRESSION

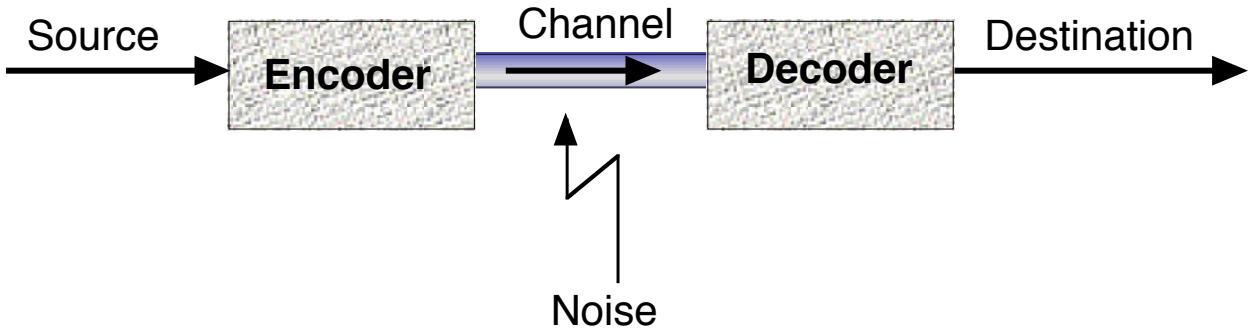


Figure 7.1: Shannon's model for coding information for transmission.

that might occur along the way. The basic model for this problem is presented in figure 7.1. Information (which we can think of as a bit stream) at the source is passed through some sort of encoder (which transforms the source bitstream into another one) and then transmitted along a *channel*. While in transmission, the bitstream may become corrupted by noise, which we can think of as randomly flipping bits with some probability. The goal of the decoder is to convert the received bitstream back into a replica of the original signal.

While the above problem is phrased in terms of coping with noise in a channel, it is intimately tied to the number of bits transmitted. The conceptual key to this is the separation of the *information content* in a signal from its *representation*. One goal of encoding is

7. COMPRESSION

to choose a representation that allows the underlying information to be preserved in the presence of noise (*channel coding*). The other goal — which is relevant to this chapter — is that the representation use the fewest possible bits to do the job (*source coding*). To accomplish this, we need first to quantify the *information content* of a signal: its *entropy*. The basis for a mathematical description of information is a common-sense one: information is something you don't already know. If you are told something you don't already know, you've been given information; if you are told something you already know, then you've received none.

In multimedia terms, we are talking about the information content in a digital signal. You might say that, unless you already know the signal being sent, the entire signal is new information to you. However, this is not true. For example, if the signal is a sampled sine wave, after you've received a few samples, you should be able to *predict* the next ones. If each sample is 16 bits, and you can predict the next sample's value to an accuracy of 14 bits (in other words, the 16-bit number that you predict is off by, on average, 2 bits), then the transmitted signal really only contains 2 bits of information per sample. One way to achieve compression, then, would be to choose an alternative representation for the signal in which each sample only took 2 bits — the number of bits sent would equal the signal's information content.

So, one scheme for compression is to remove *redundancies* in the data: that part of the data which conveys no additional information, given previous data. This is termed *lossless compression*, because no information is lost. Another approach is one which considers the use to which the data will be put, and selectively eliminates unneeded or unimportant information — *lossy compression*. These two coding schemes and their subcategories are presented in figure 7.2. The rest of this chapter will discuss many of these. In each case, we are concerned with the following algorithm characteristics:

- the degree of information loss,
- the encoding complexity,
- and the decoding complexity.

Why do we separate out encoding and decoding complexity? Isn't decoding just the opposite of encoding? While that may be true conceptually, there is no guarantee that, for any particular coding scheme, encoding and decoding algorithms will have the same run time. Schemes for which they do are called *symmetric*; those for which they are not are

Web Links:

Introduction to data compression
<http://www.faqs.org/faqs/compression-faq/part2/section-1.html>

Entropy in Information & Coding Theory
<http://www.math.psu.edu/gunesch/Entropy/infcode.html>

Primer on Information Theory
<ftp://ftp.ncifcrf.gov/pub/delila/primer.ps>

LZW Data Compression <http://www.dogma.net/markn/articles/lzw/lzw.htm>

Practical Huffman coding <http://www.compressconsult.com/huffman/>

Interactive Data Compression Tutor
<http://www.eee.bham.ac.uk/WoolleySI/A117/body0.htm>

The Data Compression Library
<http://dogma.net/DataCompression/>

7. COMPRESSION

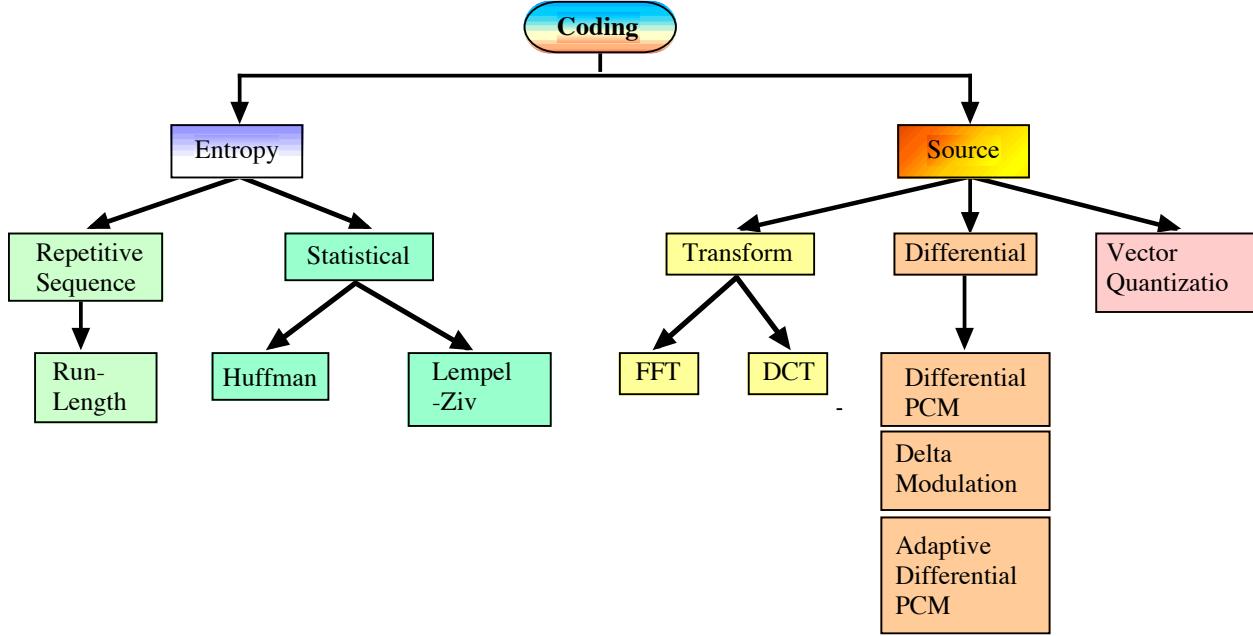


Figure 7.2: A taxonomy of coding/compression schemes.

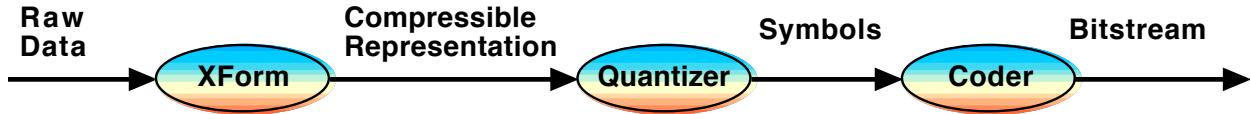


Figure 7.3: Generalized scheme for encoding.

asymmetric. For some applications, symmetric coding is necessary, while for others one end (typically the encoder) can be allowed to take significantly more time (presumably to produce greater compression or better signal “quality” given some level of compression). In symmetric applications, the hardware and the available processing time is usually also symmetric, while for asymmetric applications one end may have much faster hardware and/or more time.

So, we arrive at the general scheme for encoding in figure 7.3. The data to be encoded can first be transformed (the “xform” block) to make it more amenable to compression (to produce a more compressible representation). The goal of such a transform is essentially to *expose* the signal’s underlying redundancy. For example, if the signal were a sine wave, its Fourier transform representation would be more easily compressible: it would have a single value at one frequency, as opposed to the original time domain function’s sequence of samples. This representation may also make it easier to separate out components based on their “importance” (allowing more information to be eliminated from less important components). I’ll discuss this last point in the sections on lossy compression.

7. COMPRESSION

Once the data has been transformed, it is then converted into a sequence of symbols for transmission. This *quantization* step limits the number of different symbols to be used. So, though the original signal might have 8 bits per sample, it may not be necessary to retain all 256 symbols. In general, we may map each input symbol to an output symbol, or we may take N input symbols and produce one output symbol (this might be the case when “runs” of increasing inputs are common — we might substitute a single symbol or a shorter sequence for a stereotypical increasing sequence). Companding is one example of this kind of quantization: more symbols are allocated to quiet sections of an audio stream, where small amplitude differences are noticeable, and fewer to loud sections, where much larger differences are needed for changes in volume to be noticeable. This stream of symbols are then coded to produce a bit stream, which might represent each symbol with a varying number of bits, for example. So, first a quick self-test, and then we’ll look at each of these blocks and compression schemes in more detail.

Self-Test Exercises

See [A.7 #3–6](#) for answers.

1. If a signal is sent in which all samples have the same value, what is the information content in bits (ignoring the first sample)?
2. What kind of signal would have maximum information content?
3. Can you give an example of an application which would demand symmetric coding?
4. Can you give an example of an application which could allow asymmetric coding?

7.2 Entropy (Lossless) Compression

Lossless, or entropy, compression ignores the *semantics* (meaning) of the data. It is based instead purely on the statistics of the symbols in the data. These statistics can be the frequencies of different symbols (how often each occurs) or the existence of certain *sequences* of symbols. In the former case, we have statistical compression; in the latter, a category for which repetitive sequence compression is the simplest case.

7.2.1 Repetitive Sequence Compression

When two people are having a telephone conversation, it is common for there to be pauses when nobody is speaking. In still images, it is not unusual for large areas to have the same (usually, background) color. In video, areas that correspond to moving objects change from one frame to another while other, larger areas don’t change. All of these situations have the same feature in their raw stream of samples: long sequences (1D, 2D, or 3D) which are identical. Many bits are used to send a relatively small amount of information.

The idea of *run-length encoding* (RLE) is simple: replace long sequences (*runs*) of identical samples with a special code that indicates the value to be repeated and the number

7. COMPRESSION

of times to repeat it. For 8 bits/sample data, we might reserve one symbol (say, zero) as a “flag” to indicate the start of a run length code. A run would then be replaced with a zero, a byte containing the symbol to repeat (1–255), and one or more bytes as the repetition count (how many bytes to use we would have to decide ahead of time, based on what we know about typical run lengths for the particular kind of signals being processed). So, for example, a run of 112 ‘A’s in a text file could be encoded as: *flag*, ‘A’, 112.

We can also extend RLE to work for cases where sequences of symbols, rather than just one, are repeated.

7.2.2 Statistical Compression

Statistical compression schemes work by assigning *variable-length codes* to symbols based on their frequency of occurrence. By assigning shorter codes to more frequently occurring symbols, the average number of bits per symbol can be reduced.

Huffman Coding

When we sample data, we almost always do so with a fixed number of bits per sample — a fixed number of bits per symbol. So, we can consider 8-bit sampling as quantization of a signal into 256 levels, or equivalently as representing it as a sequence of symbols, where there are 256 symbols available.

This is usually *not* the most space-efficient coding scheme, for the simple reason that some symbols are more common than others. If instead we use a variable-length representation, and let more common symbols be encoded in fewer bits, then we can save a considerable amount of memory. While it may be the case that, for a particular type of signal, the statistics of symbol usage are fairly stable across multiple data sources, let’s not make this assumption. Thus, we would expect to use the sampled signal itself as the source of statistical information for code construction.

A *Huffman code* is a variable-length symbol representation scheme which is optimal in the case where all symbol probabilities are integral powers of 1/2. Since the number of bits per symbol is variable, in general the boundary between codes will *not* fall on byte boundaries. So, there is no “built in” demarcation between symbols. We could add a special “marker,” but this would waste space. Rather than waste space, a set of codes with a *prefix property* is generated: each symbol is encoded into a sequence of bits so that no code for a symbol is the prefix of the code for any other. This property allows us to decode a bit string by repeatedly deleting prefixes of the string that are codes for symbols. This prefix property can be assured using binary trees.

Two example codes with the prefix property are given in Table 7.1. Decoding code 1 is easy, as we can just read three bits at a time (for example, decode “001010011” [answer in [A.7 #7](#)]). For code 2, we must read a bit at a time so that, for instance, “1101001” would be read as “11”=‘2’, “01”=‘3’, and “001”=‘4’. (What would the symbol sequence be for “01000001000” [answer in [A.7 #8](#)]?) Clearly, the average number of bits per symbol is less for code 2 (2.2 versus 3, for a saving of 27%).

7. COMPRESSION

Table 7.1: Two binary codes.

Symbol	Probability	Code 1	Code 2
a	0.12	000	000
b	0.35	001	10
c	0.20	010	01
d	0.08	011	001
e	0.25	100	11

So, assuming we have a set of symbols and their probabilities, how do we find a code with the prefix property such that the average length of a code for a character is a minimum? The answer is the *Huffman algorithm*. The basic idea is that we select the two symbols with the lowest probabilities (in Table 7.1, ‘1’ and ‘4’), and replace them with a “made up” symbol (let’s call it s_1) with probability equal to the sum of the original two (in this example, 0.20). The optimal prefix code for this set is the code for s_1 (to be determined later) with a zero appended for ‘1’ and a one appended for ‘4’. This process is repeated, until all symbols (real or “made up”) have been merged into one “super-symbol” with probability 1.0.

If you think about this merging of pairs of characters, what we are doing is constructing a binary tree from the bottom up. To find the code for a symbol, we follow the path from the root to the leaf that corresponds to it. Along the way, we output a zero every time we follow a left child link, and a one for each right link (or we could use ones for right children and zeros for left, as long as we are consistent). If only the leaves of the tree are labeled with symbols, then we are guaranteed that the code will have the prefix property (since we only encounter one leaf on the path from the root to a symbol). An example code tree (for code 2 in table 7.1) is in Figure 7.4.

To compress a signal, then, we build the Huffman tree (there are more efficient algorithms which don’t actually build the tree) and then produce a *look up table* (like table 7.1) that allows us to generate a code for each symbol (or decode the symbol at decompression time). We need to send this table with the compressed signal (or store it in the compressed file).

As indicated at the beginning of this section, Huffman coding is only optimal if the symbol probabilities are integral multiples of $1/2$. For the more general case, *arithmetic coding* can be used.

Lempel-Ziv Compression

In the 1970s, Lempel and Ziv developed two (patented) families of compression algorithms based on a *dictionary* approach. In a nutshell, in one family the algorithm builds a data structure (dictionary) with entries being sequences of symbols found in the input data. As the input is scanned, it tries to find the longest sequence of symbols that already exists in the dictionary. If this is successful, the entry number for that dictionary entry is transmitted. If unsuccessful, a sequence is added to the dictionary and also transmitted. This approach

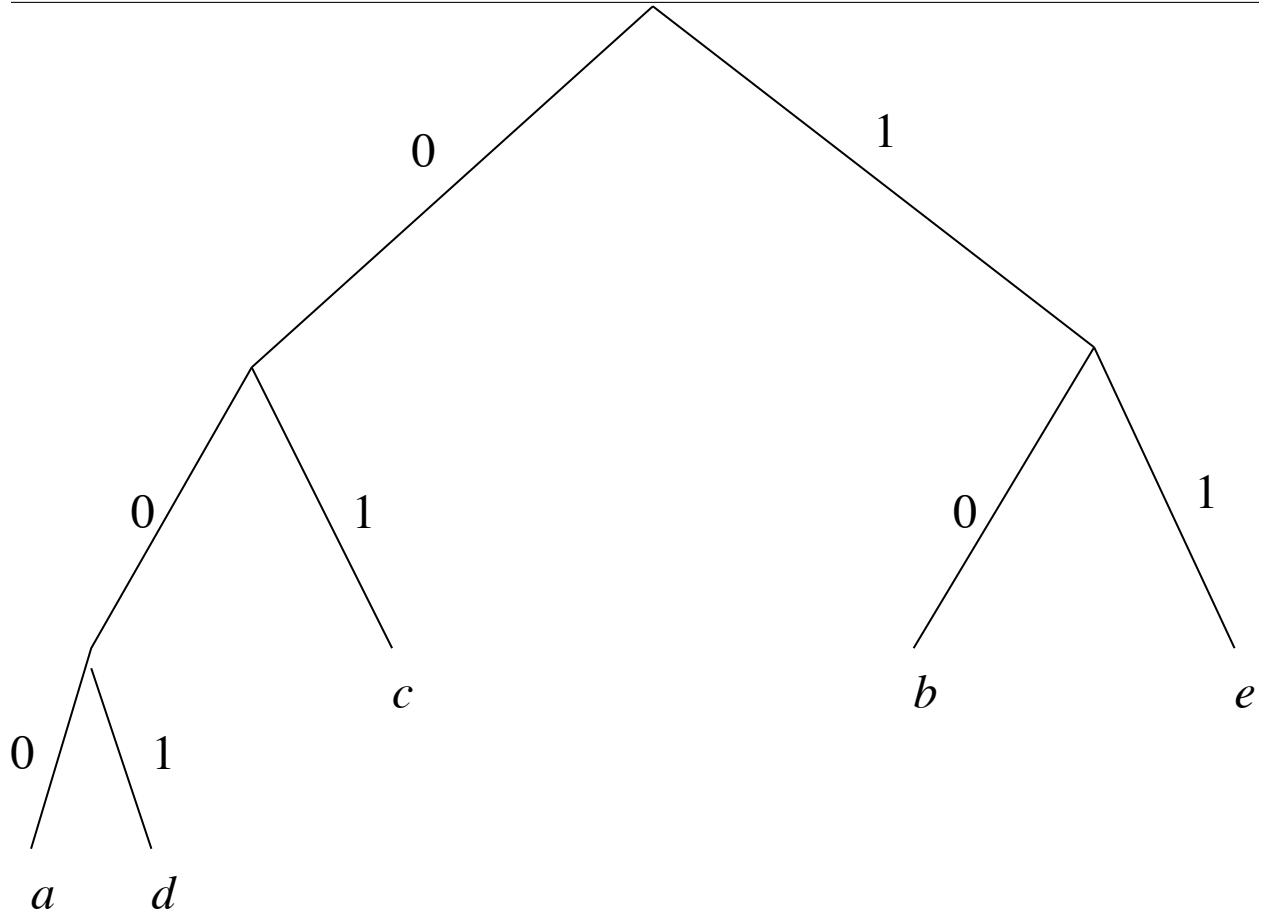


Figure 7.4: Binary tree with prefix property code.

starts with sequences of pairs of symbols and, as the encoding process continues, adds longer and longer sequences to the dictionary. As a result, long duration signals can be significantly compressed, as long stretches are found to be repeats of previously-seen data.

7.3 Source (Lossy) Compression

In certain situations, it may be appropriate to sacrifice some of the information in the original signal to obtain increased compression. This may be the case, for instance, when a human observer cannot perceive the additional information (and therefore won't notice its lack). This inability to perceive the difference may be innate to human perception or it may be a product of the delivery technology (audio system, video monitor, etc.) or a more subtle interaction of sampling, the original signal, and human perception (as is the case for differential compression).

7. COMPRESSION

7.3.1 Differential Compression

Recall that when we sample a signal, the discrete representation is limited to frequencies below the Nyquist cutoff. It is not uncommon, however, for a signal to be significantly *oversampled*: the Nyquist cutoff is much higher than the signal's bandwidth. Even if this is not always the case, there may be long stretches of signal for which it is. For example, an orchestral recording may have stretches when no high-pitched instruments are playing.

When a signal lacks high-frequency components, this is equivalent to saying that it changes slowly along time (high frequencies have high derivatives, low frequencies have small derivatives). If a signal changes slowly then, in its sampled version, successive samples are very similar. Let's go back to the idea of information content being the part of a message which you don't know. If we use each sample as a *prediction* of the next, then the *difference* between them is the information contained in the second. Ideally, then we should just transmit this difference.

This is the idea behind *differential pulse code modulation* (DPCM): we use the n^{th} sample of a signal $x[n]$ as the prediction for the next, $x[n + 1]$, and just transmit the difference, $\Delta x[n + 1] = x[n + 1] - x[n]$. Of course, we start our encoding by sending a complete sample, $x[0]$, and then continue with just the differences.

In what way is this lossy? It quite possibly isn't, depending on the number of bits in the original samples, the number of bits in the differences we send, the possible difference values in the signal, and how we treat them. For instance, if our original samples are 8 bits and we allow 4 bits for differences, we can accommodate differences of up to ± 7 between samples (using a two's complement representation for the differences). If all actual differences are less than or equal to ± 7 , then no loss results. What if actual differences are greater? We have three basic options:

1. Output the full sample, rather than just a difference.
2. Assume this is an infrequent anomaly, outputting the maximum difference possible and retaining the actual difference internally. When subsequent differences are less than the maximum, modify them so that the output differences allows the coded signal to "catch up" to the value of the input.
3. Use the limited number of bits to cover larger differences by assuming they are multiplied by a constant factor, in effect "re-quantizing" them. If the factor was a constant value of '2', then 4 bits would cover ± 14 .

The first case is very straightforward, and clearly results in no losses. For the second approach, the reconstructed signal is not the same as the original — information has been lost. However, the information is a rare, sudden change in the signal, and if the reconstructed signal caught up with the original fairly quickly, it is likely to be unnoticeable. The third approach is also lossy, as it is incapable of representing differences that fall in between the quantized levels.

At the extreme, we can allocate only one bit per difference: this is called *delta modulation* (DM). In this case, we need to interpret a '0' as a -1 difference and a '1' as a +1 difference (we

7. COMPRESSION

could multiply these by a constant factor), so a constant input produces a “0101010101...” sequence, rather than a “0000000000...” one. Assuming the sampling rate is high enough, differences more than ± 1 will be rare, and loss will be minimal.

A more general approach to DPCM would be to use something other than just the value of one sample to predict the next. Thus, the differences to be sent (if m values were used) would be $\Delta[n+1] = \mathcal{F}(x[n-m+1], \dots, x[n])$. This is the approach that *adaptive differential pulse code modulation* (ADPCM) uses. It *adapts* to the signal, using past experience to select the quantization levels that will be used to encode differences. This means that loud sections and quiet sections can have different steps between quantization levels. The international videoconferencing standards ITU G.726 use ADPCM to encode audio.

7.3.2 Transform Compression

Going back to figure 7.3, one thing that an encoding scheme can do is to transform the original signal into a domain that allows for better compression. To allow for better compression, a representation needs to isolate redundancy. For one-dimensional signals like audio, redundancy is apparent in the *sequence of samples*. All of the previous compression schemes are based on this sequential redundancy. For a signal sampled along time like sound, *temporal redundancy* is apparent. For a signal that is spatially sampled, like an image, there is a (2D) *spatial redundancy* (pixels near each other tend to have similar values). The question is: is the above noted temporal or spatial domain the domain in which the signal has its greatest redundancy, or is there some other domain in which more redundancy would be apparent? As you might guess, there are situations in which this is the case (for the approach to be practical, we just need to make sure that an *inverse transform*, which brings us back to the original signal domain, exists).

One such domain is the frequency domain. Especially in images, a spectral representation tends to have great apparent redundancy. In such a representation, an image is considered to be composed of the sum of sinusoids (just as for sound) that are functions of space (instead of time, as for sound). The “only” conceptual jump here then is the one from 1D signals to 2D signals, which we’ll defer to chapter 8. For the time being, let’s think of images as being one-dimensional, like sound, so we can talk about 1D Fourier transforms.

Previously, it was indicated that pixels tend to be similar to those nearby. This is another way of saying that the change in intensity as a function of space is low — that low-frequency processes are involved. Repetition coding assumes that there is no change, while DPCM either places a limit on change or quantizes the changes. Rather than doing these, let’s take the Fourier transform of our signal. We have now decomposed it according to frequency. If mostly low-frequency processes have produced our signal, then the coefficients for low frequencies will have higher values than those for high frequencies: the low frequency components carry most of the information.

We can now take the obvious approach: match the number of bits in a representation to the amount of information contained. In this case, rather than use the same number of bits for each frequency coefficient, we assign more bits to the low frequencies and fewer to the high. This approach, which in effect codes different frequency bands separately, is also

7. COMPRESSION

called *sub-band coding*.

You probably remember that the Fourier transform (and FFT) have both magnitude and phase. We can simplify matters if we use a transform that uses only real arithmetic. This is one of the motivations behind using the discrete cosine transform (DCT) instead. The DCT coefficients can be expressed as:

$$X[k] = \sum_{n=0}^{N-1} x[n] \cos 2\pi nk/N \quad (7-1)$$

We throw away absolute phase information and assume that the signal has even symmetry, but since we don't care what happens beyond the bounds of the signal, this is fine. Loss of relative phase information is another matter, but after all, this *is* a lossy compression technique. In chapter 8, we will place these losses in the context of human perception.

7.4 Problems

For each of the following MATLAB programming assignments, please email me your .mat file and your “best” result (the result that best shows the operation of your program). For your result, send both the original and “reconstituted” compressed version.

1. Write a program that performs run-length coding on images (you may treat the image as a one-dimensional vector for processing purposes, and in fact MATLAB will allow you to treat 2D matrices in this fashion). What percent compression do you get for black and white images (like those that might be produced for sending a fax)? What percent for color images generated from drawing programs? What percent for images from a digital camera? What percent for vectors filled with random numbers?
2. Write a program that performs simple, lossy DPCM coding and decoding on sampled audio. Test it using audio samples. For samples of people speaking, how many bits do you need for the differences for the result to be still intelligible? For it to be of quality comparable to the original?
3. For the DCPM examples, can you gain any additional compression by applying run-length coding to the output of the DPCM coder? Why or why not?
4. One way to apply transform coding of a signal is to divide it into *non-overlapping windows* and transform and code each window separately. Using the same audio samples as before, apply DCT coding (MATLAB has DCT and IDCT functions, part of the Signal Processing Toolkit. If this toolkit isn't available, use the magnitude of the FFT). (Hint: keep the window size short; maybe 8 or 16 samples.) Do not try to quantize the DC (zero frequency) component, but *do* experiment with quantizing the high frequency ones. What is the effect with no quantization? See how much compression you can get by heavily quantizing and/or eliminating high frequency components.

7.5 Further Reading

- J. Crowcroft, M. Handley, & I. Wakeman, *Internetworking Multimedia*, Morgan Kaufmann, 1999, chapter 4 (§ 4.1–4.5).
- A. Murat Tekalp, *Digital Video Processing*, Prentice Hall, 1995, chapters 18, 19, 21.
- K.R. Rao & J.J. Hwang, *Techniques & Standards for Image, Video & Audio Coding*, Prentice Hall, 1996, chapters 4, 5.

8

Audio & Video Compression and Coding]

This chapter continues our coverage of compression begun in chapter 7 with descriptions of current standard compression schemes for audio and video information. By the end of this chapter, you will have a basic understanding of how the most common compression and coding algorithms use the fundamentals of lossless and lossy compression. You will also understand how the nature of the multimedia application influences compression algorithm design.

Each coding algorithm or standard discussed in this chapter shows clearly the tradeoffs inherent in lossy versus lossless compression, the need for symmetric coding and decoding versus the ability to asymmetrically place more processing power in the encoder, storage versus transmission, and human perception versus machine processing. We begin with audio coding schemes, move on to those for still images, and conclude with video.

More specifically, each coding scheme makes implicit or explicit decisions about each of the following issues; you should consider what those decisions are when you read about each standard.

8.0.1 Issues in Coding Method Selection

- What are the application constraints? Are there signal quality requirements? Limits on system complexity? Upper bounds on end-to-end transmission delay?
- Will the codec (CODer/DECoder) be implemented in software, hardware, or a hybrid combination of both?
- Should the encoding be reversible, or can it be lossy?
- Besides overall constraints on algorithm efficiency, are there constraints on efficiency *consistency*? In other words, can the amount of computation required vary (based on the time-varying nature of the signal), or must it be independent of the signal's content?
- Does the algorithm need to be tolerant of transmission errors? Does it need to be able to correct them? How should it deal with data lost in transmission?
- If a lossy algorithm is desired, what kind of information can be lost? How do we decide what information to throw away?

8. AUDIO & VIDEO COMPRESSION AND CODING

- Does the data representation need to accommodate future scalability? For example, are we building a codec for images up to some maximum size, or will we want it to work with larger images in the future?
- How many times will the media be encoded? Decoded?
- Will we need to synchronize the encoded signal with other media, or are we encoding it “in isolation”?
- Will our system need to be compatible with other methods? Will we need to “transcode” our representation to other formats, or transcode other formats to our representation, efficiently?

8.1 Audio Coding Standards

8.1.1 Speech Coding for Telephony

Pulse code modulation (PCM), as discussed in chapter 7, is the foundation for most of the major audio coding standards. The ITU (International Telecommunications Union) has defined the following audio coding standards (among others) for “low quality” (i.e., telephone quality) audio:

G.711 This is audio pulse-code modulation (PCM) in support of video conferencing, with a bandwidth of 64K bits/second. It recommends a sampling rate of 8000 samples/second. The audio data is logarithmically encoded (which has the effect of companding) to 8 bits, quantized to 212 levels. The encoding itself can be either A-law (this is mostly used in Europe) or μ -law (which is mostly used in the US and by most computer hardware and software).

G.721 This is an ADPCM-based standard for 32K bit/second audio.

G.726 This replaces G.721, allowing conversion between 64Kbps and 40, 32, 24, or 16kbps.

G.727 This standard extends G.726 for embedded applications, including transmission over packet-switching networks (packetized voice protocol, or PVP, which is G.764).

G.722 and G.725 These standards are targeted at higher-quality speech transmission, with a signal bandwidth of 50Hz to 7kHz. They are targeted at a transmission rate of 64kbps.

There are other approaches that aim to produce high-quality speech with low bandwidth requirements (below 16kbps). These include LPC (linear predictive coding) and CELP (code excited linear predictor). In both cases, a model of the speaker’s vocal tract is generated and the parameters of this model are transmitted to the receiver. After that, only enough data is sent to allow for the receiver to *synthesize* speech using the model. So, instead of hearing

8. AUDIO & VIDEO COMPRESSION AND CODING

a processed version of the speaker's voice, the listener hears a synthesized approximation to their voice. To improve speech quality, CELP sends error information (the difference between the actual signal and the model's output) in addition to the model information.

8.1.2 High-Quality Audio Coding

There are a number of standards used to encode audio at quality levels usable for music, television, movies, etc. — up to audiophile levels (except perhaps for those folks who insist that tube amplifiers and vinyl are necessary to capture the warmth of the original music).

MPEG

While MPEG (Moving Picture Experts Group) is a standard for video encoding, it obviously also must include audio information and is often used in isolation for just encoding audio. MPEG is actually a family of standards, with successive members providing increased quality at higher levels of compression (at the price of increasing computational complexity). For almost all versions, the input signal is assumed to be 20kHz. (What is the minimum sampling rate for such a signal [answer in A.8 #1]?) The desire is to have quality comparable to compact disc audio, and to support multiple channels of such audio. For CD quality, at a sampling rate of 44.1kHz, 16 bits/channel and two stereo channels, the uncompressed audio stream is 1.4Mbps.

MPEG-I This standard allows for encoding of two channels (stereo) at sampling rates of 32 (FM broadcasting), 44.1 (CD), or 48 (DAT) kHz. It achieves high-quality lossy compression by incorporating a simple psychoacoustical model of human auditory perception. The algorithm uses this model to determine what information can be lost without significantly affecting the listener's perception of sound quality.

More specifically, the algorithm is based on the phenomenon called *masking*. It is perhaps not surprising that our auditory systems are not equally sensitive to all sound frequencies. We are most sensitive to sounds in the range of 2–4kHz, and increasingly less sensitive to much higher and lower frequencies. What might be surprising is that our sensitivity at one frequency can be influenced by the presence of sounds at other frequencies.

The general idea of masking is that signals can interfere with each other within the processing stages that are a part of sensory systems. For example, a signal at one frequency (a *masker*) presented around the same time as another one at a second frequency might result in the second being undetected by the sensory system. This can occur even though the sensory system is perfectly capable of perceiving the second signal in isolation (or, in combination with signals other than the masker). Masking can also occur in time (hence, my previous statement, “around the same time”), with our sensitivity to sound at some frequency recovering from its masked level over the course of around 100ms.

In other words, how important a particular frequency is for our perception of sound is a function of both the frequency itself *and* the history of signal intensities at other frequencies.

8. AUDIO & VIDEO COMPRESSION AND CODING

MPEG-I takes advantage of masking for compression by dynamically altering a threshold for each of a number of frequency bands, based on the signal strength in neighboring bands. It does this by passing the input signal through a *filter bank* composed of 32 bandpass filters, thereby breaking the signal into 32 bands. It then computes the amount of masking for each band based on the signal in the other bands. The information in a band is only encoded if it is above the masking threshold. If it is encoded, the number of bits to be used is computed so that the quantization noise introduced is below the masking threshold (remember the discussion of quantization noise in chapter 2?). The resulting sub-band codes are then formatted into a bitstream, perhaps with video and synchronization information.

MPEG-I actually includes three audio “layers,” each successive one being an enhancement of the previous. Layer 1 uses bands of equal width and only frequency masking (no temporal masking). Since it uses only frequency masking, the codec only needs to keep one “frame” of audio information (12 samples) in memory: masking occurs only between bands at the current time. Layer 1 typically achieves compression ratios of 4:1, or 384kbps high-quality stereo.

Layer 2 uses three frames of audio information in memory: previous, current, and next. This allows it to compute temporal masking, in addition to frequency masking. This allows layer 2 to reach compression ratios of 8:1, for a 192kbps audio stream. Layer 3 uses frequency bands which are not of equal width, to better match human auditory perception. It also seeks to eliminate redundancy between the two stereo channels (because much of the information in one channel is also present in the other). It does this by separately coding the sum (M , for “middle”) of the left (L) and right (R) channels and their difference (S , for “side”). At the decoder, the two channels are reconstructed as $L = (M + S)/\sqrt{2}$ and $R = (M - S)/\sqrt{2}$. When you listen to an MP3 audio file, you are actually listening to MPEG-I, layer 3 encoded audio. Finally, layer 3 incorporates Huffman coding for additional data stream compression. Layer 3 can produce high-quality audio at a compression rate of 12:1, which corresponds to a 112kbps data stream.

Web Links:

Compression FAQ <http://www.faqs.org/faqs/compression-faq/>

JPEG image compression FAQ <http://www.faqs.org/faqs/jpeg-faq/>

Planet JPEG <http://www.geocities.com/tapsemi/>

MPEG section of compression FAQ
<http://www.faqs.org/faqs/compression-faq/part2/section-2.html>

MPEG FAQ <http://www.faqs.org/faqs/mpeg-faq/>

MPEG.org <http://www.mpeg.org/MPEG/index.html>

MPEG for MATLAB <http://www.cl.cam.ac.uk/~fapp2/software/mpeg/>

comp.compression newsgroup
<news:comp.compression>

comp.multimedia newsgroup
<news:comp.multimedia>

International Telecommunications Union (ITU)
<http://www.itu.int/>

MPEG-II This extends MPEG-I audio to five channels plus one additional, low-frequency enhancement (LFE) channel. This should be familiar to you as the basic configuration for surround-sound (the five channels are center front, front left and right, and rear left and right; the low-frequency channel is for a subwoofer). These channels could also be used to

8. AUDIO & VIDEO COMPRESSION AND CODING

encode multilingual stereo. The additional channels are encoded by being mixed in such a way that an MPEG-I decoder can still decode the primary left and right stereo channels from an MPEG-II stream. So, an MPEG-II audio bit stream is an MPEG-I bit stream with the additional data formatted into data blocks reserved in MPEG-I for ancillary data. Correspondingly, an MPEG-II encoder consists of an MPEG-I encoder and an MPEG-II extension encoder.

There are other implementations within the MPEG-II standard which are not backward compatible with MPEG-I. These include AAC (advanced audio encoding).

MPEG-III Because of the progress of MPEG-II in support of high-definition television, development of an MPEG-III standard was terminated.

MPEG-IV MPEG-IV is targeted at a much broader range of applications than the preceding standards. This includes not only compression and coding of audio and video, but support for structuring content for WWW and hypermedia applications, intellectual property right management, computer network quality of service signaling, interactivity by the user, and low bit rate applications. It encodes data as a composition of multimedia objects, which can include audio, video, and 3D graphical objects. This builds on the earlier work of VRML (virtual reality modeling language). Little of this has anything directly to do with high-quality audio, but it seemed to make sense to discuss this standard right after the other ones.

8.2 Still Image Coding Standards

There are a number of formats for single images. These include TIFF (tag image file format) and GIF (graphics interchange format), which are lossless formats that use Lempel-Ziv compression. Because it also serves as the basis for spatial redundancy reduction in video, I'll confine myself to discussing JPEG (Joint Photographic Experts Group).

8.2.1 JPEG

Actually, dismissing formats such as TIFF and GIF was a bit misleading. Those are *file formats*, while JPEG is an *encoding scheme*. In fact, JPEG-encoded images can be stored in their “own” format (JFIF, for JPEG file interchange format) or stored within a TIFF format file (which, counterintuitively, provides greater flexibility and more advanced features).

JPEG is targeted at compression of continuous-tone color and grayscale images (as opposed to line drawings). It includes a parameterized encoder which can support four lossy or lossless modes. These modes include:

Sequential The image is encoded in a single top-to-bottom, left-to-right scan.

Progressive The image is scanned multiple times, with successive scans providing information for successively better approximations to the original image.

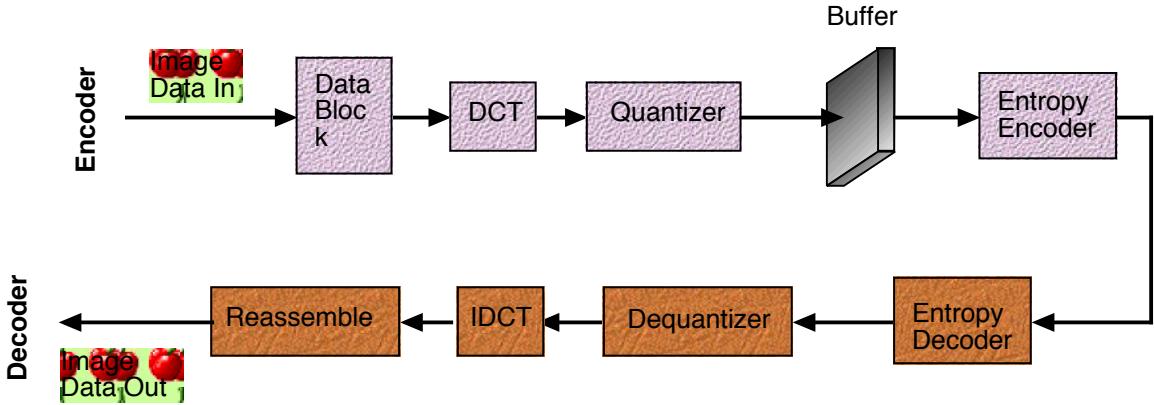


Figure 8.1: Block diagram of JPEG encoder and decoder. The DCT, quantizer, and buffer are not used for lossless mode. The buffer is only used for progressive mode.

Lossless Only entropy encoding is used.

Hierarchical Multiple versions of the image are encoded, at successively finer resolution. This allows a receiver to select the appropriate resolution; the encoder needn't know the limitations of the decoder or the constraints of its application.

Figure 8.1 presents simplified block diagrams for a JPEG encoder and decoder. There are four basic steps in the encoding process:

1. Prepare the image data by breaking it into 8-pixel by 8-pixel *blocks*. If the image is in color, each color component (i.e., red, green, blue) is separately broken into blocks (in other words, treated as though it were a separate image).
2. Decompose each block into its frequency components using the discrete cosine transform (DCT). This is a *two-dimensional* DCT, with the dimensions being the two spatial dimensions (horizontal and vertical). Let's say we use the variable x as the horizontal pixel index and y as the vertical. The location of a pixel in a block is then (x, y) , where $0 \leq x \leq 7$ and $0 \leq y \leq 7$. If we use p_{xy} to refer to the pixel *value* at (x, y) , then the 2D DCT of a block is

$$y_{kl} = \frac{c(k)c(l)}{4} \sum_{x=0}^7 \sum_{y=0}^7 p_{xy} \cos \left[\frac{(2x+1)k\pi}{16} \right] \cos \left[\frac{(2y+1)l\pi}{16} \right] \quad (8-1)$$

where $c(k)$ and $c(l)$ are equal to $1/\sqrt{2}$ when k or l is equal to zero, and 1 otherwise.

This produces an 8x8 spectrum for the block, where frequency is in cycles per (horizontal and vertical) pixel. The value at y_{00} is the DC value, and corresponds to the

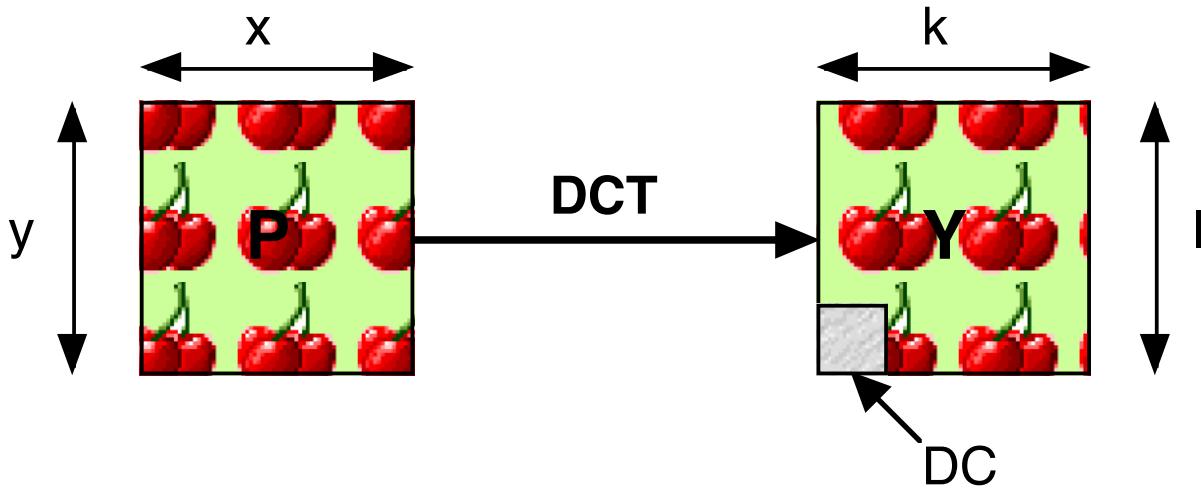


Figure 8.2: Illustration of transform of 8×8 pixel block into 8×8 spectrum by DCT. The spectrum's DC component is at y_{00} , corresponding to the average intensity within the block.

average pixel value for the block. Increasing k and l correspond to increasing spatial frequency (more abrupt changes in image intensity). The correspondence between the original block and its spectrum is illustrated in figure 8.2.

Figure 8.3 demonstrates the 2D spectra of two simple images. In this case, the MATLAB function `fft2()` was used, as the basic MATLAB distribution has no 2D DCT built in. The resulting complex output was converted to reals using the `abs()` function (the MATLAB code for all this is located at <http://faculty.washington.edu/stiber/pubs/Signal-Computing/>). The top left image is a pixel block in which the pixel values vary in intensity as the sine of the x coordinate only. We would expect then that it would have nonzero spectral components for $k > 0$, because there is horizontal intensity variation. Since there is no vertical intensity variation, the spectral components in the vertical direction should all be zero for $l > 0$. This is exactly what we see in the spectrum plotted in the top right.

The bottom left block has sinusoidal intensity variation along 45-degree diagonals. In this case, the rate of intensity variation is the same in both the x and y directions, so it seems logical that the nonzero frequency components would occur at the same horizontal and vertical frequencies — for $k = l$. This is shown in the plot of the spectrum on the bottom right.

Figure 8.4 presents an example of the spectrum of a natural image. In this case, the original block (left) is someone's eye, at fairly low resolution. On the right in the figure, the spectrum of the block is presented. To show the non-DC components more clearly, the log of the spectrum is plotted (in MATLAB, `ykl = log10(abs(fft2(pxy)))`).

3. Reduce the number of bits used to quantize each frequency component. An 8×8 quantization matrix, \mathbf{Q} , is used to “threshold” each element of y_{kl} , with the result being

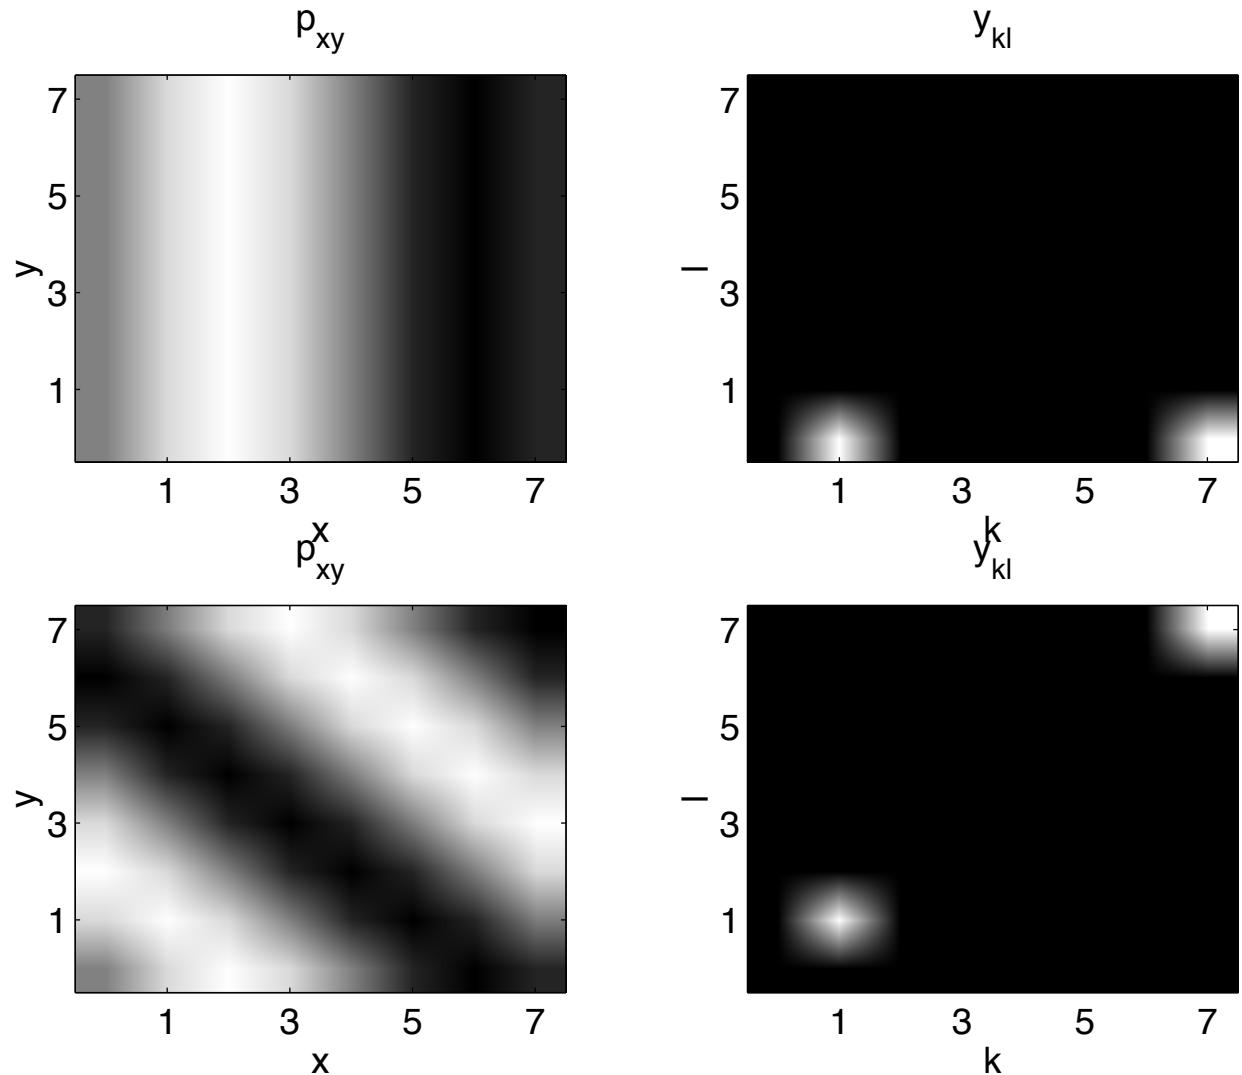


Figure 8.3: Example 2D spectra. The magnitude spectra for the 8x8 pixel blocks on the left are presented on the right. A block with horizontal sinusoidal intensity variation at a frequency of one cycle per 8 pixels and vertical frequency of zero (top left) has nonzero frequency components only for $l = 0$ (top right). A block with diagonal sinusoidal intensity variation at one cycle per 8 pixels (bottom left) has nonzero frequency components only at some $k = l$.

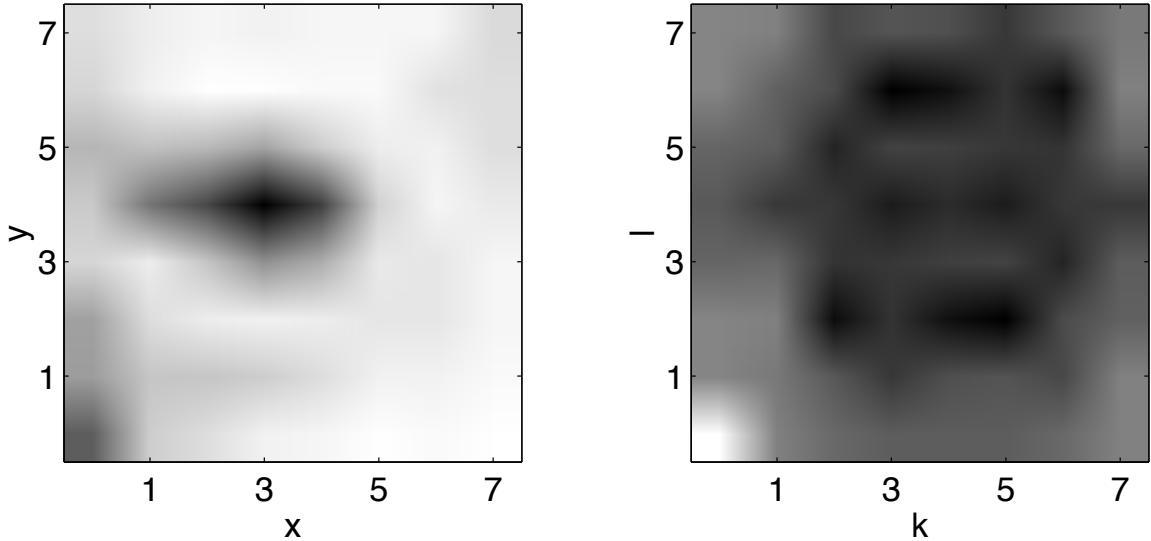


Figure 8.4: Example spectrum (right) of an 8x8 block taken from a natural image.

$z_{kl} = \text{round}(y_{kl}/q_{kl})$. Larger values for q_{kl} mean that larger values for the corresponding spectral component y_{kl} will be ignored (treated as zero) and the effect is that fewer bits will be used to quantize y_{kl} . The values for \mathbf{Q} are determined by the amount of compression desired.

4. Perform entropy encoding. The local average brightness (the DC component of the blocks) of images tends to vary slowly across the image; in other words, there is a great deal of spatial redundancy in the DC components. JPEG encodes the DC components of each block separately (all of the DC components are encoded together). As far as the other components are concerned, frequencies close to each other in a block tend to have the similar value. This is especially true for higher compression levels, where many of the high-frequency components will have been zeroed out. So, the 2D DCT block is converted to a 1D data stream by being scanned in a “zig-zag” pattern, as shown in figure 8.5. This puts the components in increasing order of frequency.

At this point, we have two data streams: the DC components and the non-DC (AC) components. The DC stream is encoded using a predictive (difference) scheme. The AC stream is run-length coded to shrink the runs of zero values. Then, both streams are Huffman or arithmetic encoded.

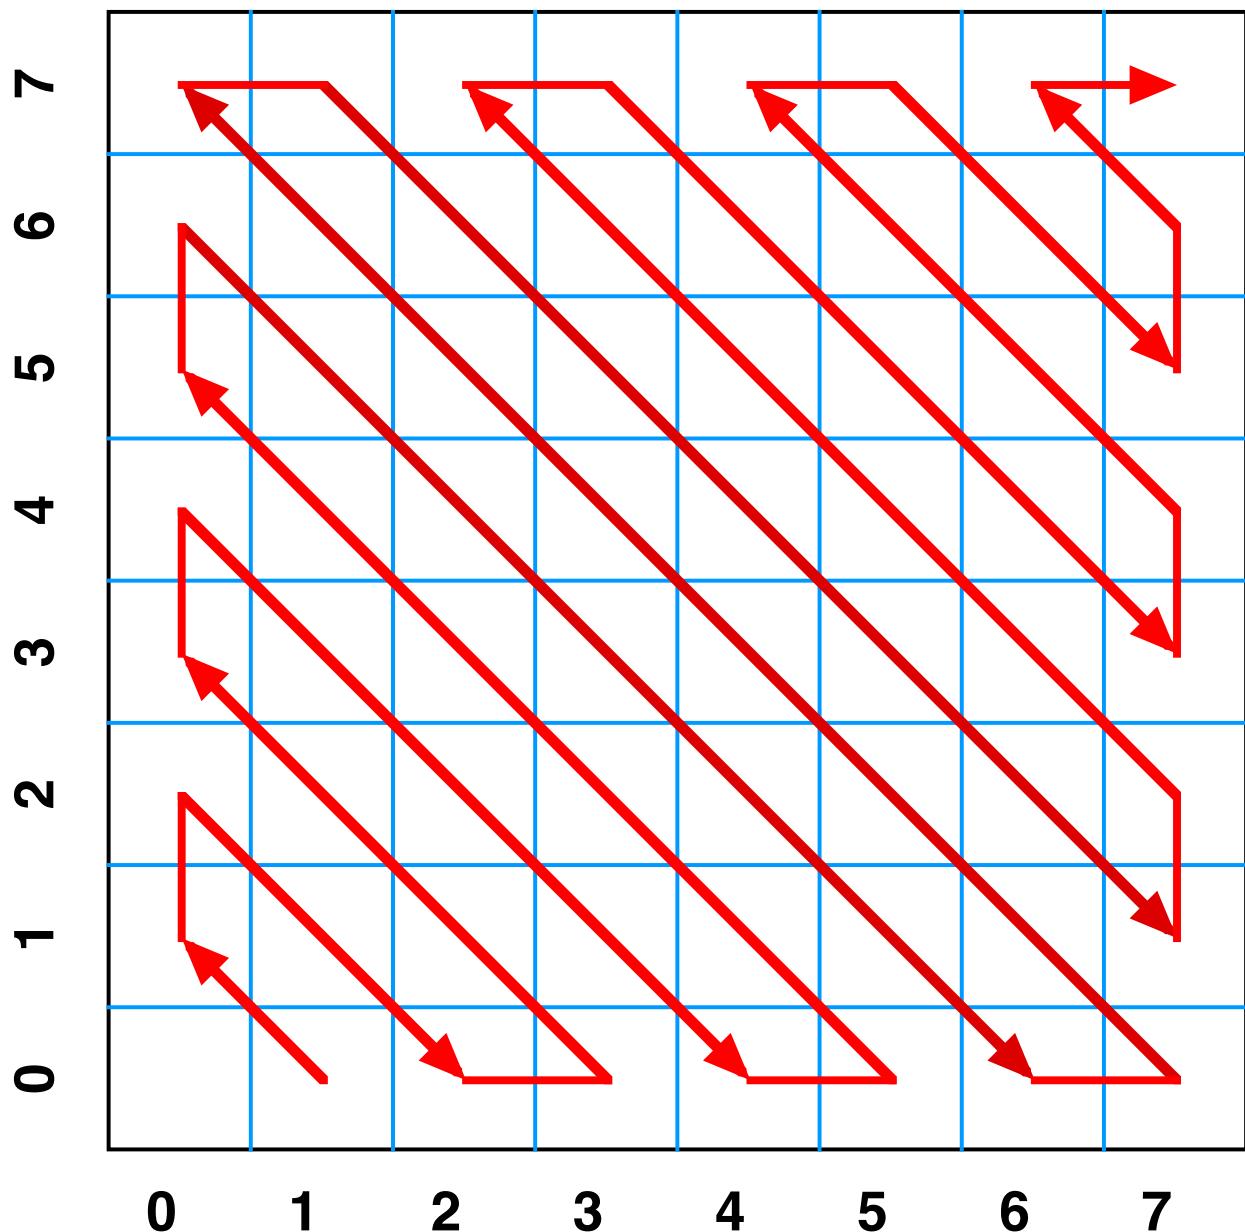


Figure 8.5: Entropy coding of JPEG DCT blocks. Non-DC frequency components are scanned in a zig-zag pattern.

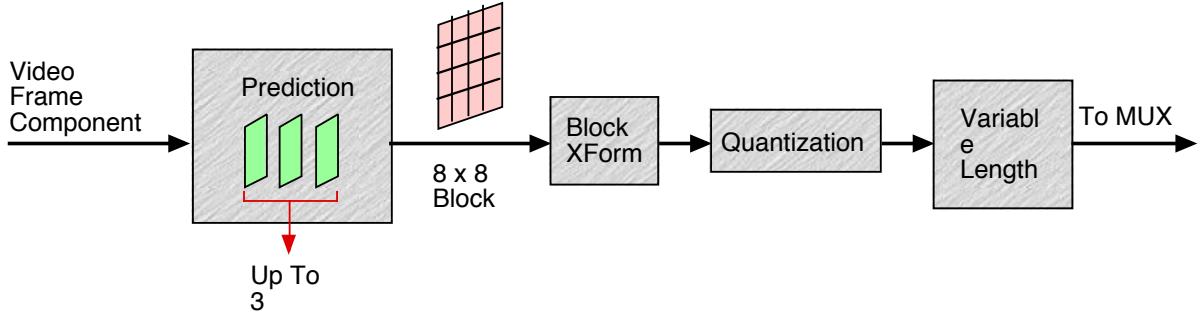


Figure 8.6: Simplified block diagram of an MPEG video source encoder. Input frames pass through a motion compensation process, 8x8 pixel blocks are converted to a spectral representation by DCT, the components are quantized according to the desired level of compression, and then the result is Huffman coded.

8.3 Video Coding Standards

Everything you've learned so far in this chapter can now be put together, because video coding involves combining audio and multiple still images. The audio and image information is combined for transmission and/or storage by *multiplexing* (MUX): interleaving segments of each. On the image side of things, there's still a great deal of redundancy in the sequence of images, because the change from one frame of video to another is usually quite small. So, moving image compression involves both spatial *and* temporal redundancy reduction. There are a number of ITU standards for videoconferencing, including H.261 and H.263. However, let's concentrate on the MPEG standards, as they follow most directly from JPEG.

8.3.1 MPEG Coding

As MPEG-II is an extension of MPEG-I (to multiple bit rates and resolutions), the following is applicable to both. As previously mentioned, MPEG is a standard for video transmission and storage. It has a higher computational complexity (on the coder side) and bandwidth requirement (2–8Mbps) than the videoconferencing standards. (Question: under what conditions is it acceptable to have greater coder complexity [answer in A.8 #2]?). On the other hand, decoding has a low enough complexity that it can be done in software.

A block diagram of the MPEG coding process is presented in figure 8.6. Except for the “prediction” block and the destination being a multiplexor, this is essentially the same as JPEG coding. Though it was probably implied in the discussion of JPEG that the input could have RGB color planes, in reality MPEG color input has the three components (Y, C_b, C_r),

8. AUDIO & VIDEO COMPRESSION AND CODING

with the first being *luminance* (brightness) and the second and third *chrominance* (color). Because the luminance channel is more important to our perception of visual detail, MPEG supports two formats in which the chrominance channels have their resolutions reduced, to either half that of luminance in both the horizontal and vertical dimensions, or half of Y horizontally only. It is also possible to keep all three matrices the same size. Each channel is then processed identically, then multiplexed in the output stream.

While each input frame is structurally identical, there are three different types of output frames:

I Frames “I,” or *intra*, frames are encoded like JPEG images; in other words, coding only takes advantage of intra-frame information (information within the frame). Because I frames can be decoded in isolation, they can serve as references for random access. A video stream in which all frames are I frames is sometimes called *MJPEG*. I frames don’t use the “prediction” block in figure 8.6.

P Frames “P,” or *predictive*, frames use the preceding I or P frame to reduce temporal redundancy. If we ignore cuts between scenes (where the entire image changes), changes from frame to frame involve motion, either of the camera or of objects (or both). If we already know what something looked like, then a simple (x, y) vector can tell where it moved to in the current frame, greatly reducing the amount of data to send. A motion-compensation algorithm is used to determine these motion vectors. To do this, the frame is broken into 16x16 *macroblocks*. For each macroblock in the P frame, an exhaustive search is performed in the preceding I or P frame for the 16x16 pixel region which best matches it. That area in that preceding frame is used as a prediction for the macroblock in the current frame, and prediction errors and a motion vector ((x, y) offset found in the search) are computed for each 8x8 block. This corresponds to the “prediction” part of the block diagram, with two frames of memory used. These errors (and motion vectors) are then sent to the block transformation for the rest of the encoding process.

B Frames “B,” or *bidirectional*, frames use both past and future I and P frames for motion-compensated prediction. Two motion vectors are computed, prediction errors are computed by interpolating between the pixel values in the past and future frames, and 8x8 blocks are passed to the DCT transformation process with pairs of motion vectors.

An MPEG coder breaks the stream of input frames into a sequence of GOPs, or *group of pictures*. It reorders the encoded I, P, and B frames so that each GOP starts with an I frame and each B frame in the GOP comes *after* the two I or P frames on which it is based. This is the best order for decoding; the decoder then converts the frames back into display order.

The MPEG standard is not just a video or audio compression standard. It encompasses a family of standards that include the entire multimedia system, including multiplexing, timing and synchronization, and a layered definition of the transmitted bitstream.

8.4 Problems

1. Discuss the decisions made with respect to the multimedia issues described at the beginning of this chapter for MPEG-I layer 3 audio and JPEG encoding.
2. Locate an interesting image to perform a simple test of the effects of frequency-dependent quantization. The MATLAB image processing or signal processing toolboxes are needed to have access to DCT functions, so we'll use the `fft2()` and `ifft2()` functions instead (if you prefer C++ or Java, then fine, but you'll have to get hold of decent DCT implementations). The only complication will be the need to deal with complex numbers, mostly using the `abs()` function. Load the image and compute its 2D FFT using `fft2()` (If your image loads as true color, with 3 color planes — which you'll know because its dimensions will be $N \times M \times 3$ — then you'll need to convert it to greyscale by adding the three components together and dividing by 3, before computing the FFT. This can be done by first converting it from `uint8` to `double` with `double`, then doing something like `a = (a(:,:,1)+a(:,:,2)+a(:,:,3))/3;`). The resulting matrix has complex values, which we will need to preserve. Use `ifft2()` to convert the FFT back and plot the result versus the original greyscale image (use `imagesc()`) to check that everything is working fine.

Let's quantize the image's spectral content. First, find the number of zero elements in the FFT, using something like `length(find(a==0))`, where `a` is the FFT. Next, zero out all components with magnitudes below some threshold. You'll want to set the threshold somewhere between the min and max magnitudes of `a`, which you can get as `mn=min(min(abs(a)))`; and `mx=max(max(abs(a)))`. Let's make four tests, with thresholds 5%, 10%, 20%, and 50% of the way between the min and max, i.e., `th=0.05*(mx-mn)+mn` (you may get better results with thresholds related to `log(abs(a))`, rather than just `abs(a)`). Zero out all FFT values below the threshold using something like:

```
b = a;
b(find(abs(a)<th)) = 0;
```

(substituting `log(abs(a))` if that's how you're thresholding). You can count the number of elements thresholded by finding the number of zero elements in `b` and subtracting the number that were originally zero. This is an estimate of the amount the image could be compressed with an entropy coder.

Convert the thresholded FFT back to an image using something like `c = abs(ifft2(b))`. For each threshold value, plot the original image and the processed image. You might also want to print the difference between the two. Compute the mean squared error (MSE) between the original and reconstructed image (mean squared error for matrices can be computed as `mean(mean((a-c).^2))`). What can you say about the effects on the image and MSE? Write a script to automate the thresholding and reconstruction, so you can easily compute MSE for a number of thresholds. Plot MSE vs. the number

8. AUDIO & VIDEO COMPRESSION AND CODING

of matrix values that got thresholded? Please submit the plots and your code as hard copy.

3. Go through the same procedure as above, but this time, instead of comparing the magnitude `abs(a)` to a constant, compare it to a threshold proportional to the distance from the zero frequency (if x and y are subscripts to a , then the distance is the square root of $x^2 + y^2$). How much more can you compress the image using this method for the same level of MSE?

8.5 Further Reading

- J. Crowcroft, M. Handley, & I. Wakeman, *Internetworking Multimedia*, Morgan Kaufmann, 1999, chapter 4 (§ 4.6–4.8, 4.10–4.13).
- A. Murat Tekalp, *Digital Video Processing*, Prentice Hall, 1995, chapters 20, 23, 25.
- K.R. Rao & J.J. Hwang, *Techniques & Standards for Image, Video & Audio Coding*, Prentice Hall, 1996, chapters 8–12.

9

Review and Conclusions

This chapter brings our journey to a close. In an in-person course, we would spend some time in lecture reviewing the material covered; this of course is redundant here, as you have access to all that material verbatim on-line. You also have access to the instructor for any questions you might have. Instead, what we will do is examine a generic multimedia system that includes all the course material, then describe an example media system and relate its design to what we've learned in this course. The system in question is the compact disc player, which should be familiar to everyone and which is simple enough conceptually that we can actually describe it in this limited space (at least, in simplified form).

9.1 A Generic Digital Multimedia System

Figure 9.1 presents a simplified generic multimedia system which highlights the concepts covered in this course. All multimedia begins with physical signals — light, sound, etc. (Actually, that last statement isn't 100% true, as there *is* such a thing as computer-generated multimedia: computer music, computer graphics, etc.) These signals must be converted into analog electrical signals so they can be captured by computer (or, for that matter, so they could be recorded on analog media). Digitization involves converting the continuous-time analog signal to a discrete-time signal via sampling. The sampled signal is then quantized to a fixed number of bits of resolution per sample. The result is a *digital signal*. This raw signal is typically encoded for compression purposes and/or to add information to the data stream (for example, error correction codes).

At this point, the encoded signal can be treated like any other digital information manipulated by computer. It can be stored in files, transmitted over networks, processed to improve or alter it, and/or presented to human beings on a desktop computer (or, these days, a consumer device like an HDTV set).

9.2 Compact Discs

One example digital multimedia system is the compact disc, or more precisely, since I'm referring to music CDs, compact disc digital audio (CD-DA). The standards associated with CDs (the *Red Book*, defined by Philips and Sony in 1980 so that discs would be

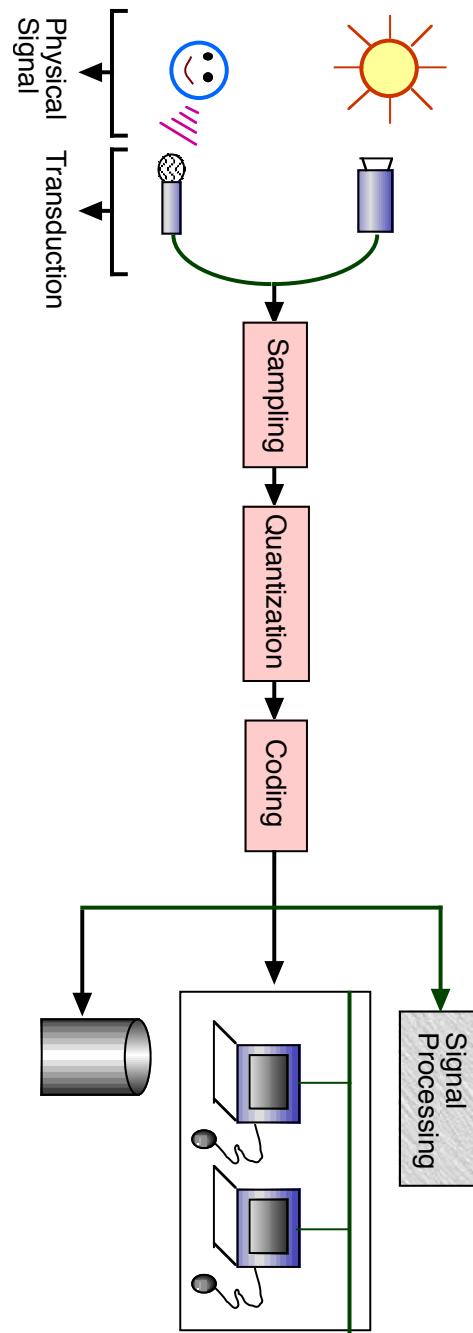


Figure 9.1: Block diagram of a generic multimedia system.

9. REVIEW AND CONCLUSIONS

interchangeable among different manufacturers' hardware, and IEC Publication 60908) cover the disc itself and the optomechanical drives that spin it and read from it.

Information is recorded onto a CD in the pattern of pits and bumps (or *lands*) of a metal layer sandwiched between two covering plastic layers. These pits and lands are arranged in a spiral pattern, like a vinyl LP. There are two differences between the CD layout and the LP: data is recorded from the innermost part of the surface outward and the disc's rotation speed changes as the read laser moves. The change in rotation speed is necessary because a CD is a constant linear velocity (CLV) device: rotation speed is set so that the data moves past the read laser at the same rate everywhere on the disc. Near the center, the disc rotates at 500 rpm; this slows to 200 rpm at the outer edge. The rotation rate is automatically regulated by the drive mechanism to maintain a constant data rate of 4.3218 Mbps.

Data is read from the disc by a laser/detector pair. The laser illuminates a spot on the underside of the disc and the metal layer reflects this back to the detector. About 90% of the laser light is reflected by a land; pits, on the other hand, reflect only about 25% of incident light. This difference is easily detectable, and thus the *encoded* data can be read.

9.2.1 Data Encoding

Data is encoded on a CD so as to both minimize the effect of and correct for errors. This is especially important for a device that has an exposed surface and is intended to be used by ordinary consumers. Even without these considerations, error correction would be important in a device where a speck of dust could wipe out 50 bits on each of ten spirals. The CD standard uses a number of techniques to encode data so that commonly-expected errors can be detected and corrected.

The first thing we note about error detection and correction is that it will require extra information to be sent. In effect, redundancy is introduced into the data stream in a manner such that errors are unlikely to destroy both the "original" and the "copy". (In reality, of course, the scheme is more sophisticated than just recording copies of the data.) From this, you should conclude that the data stream is not maximally compressed; in fact, CD audio is recorded uncompressed as 16 bits/sample, linearly encoded (i.e., no companding). Error detection and correction schemes involve adding bits (an *error correction code*) to each byte (or larger group) of data.

Error "Clumps"

If you consider the error generated by a scratch, dust, etc., it seems that this will obliterate a large number of consecutive data bits: a "clump" of data bits. This would seem guaranteed to eliminate not only the original data, but also the associated error correction codes.

To reduce the probability of errors in long, contiguous stretches of data, a simple scheme is to not record long, contiguous stretches of data. After all, if you don't record them, then you can't get those kinds of errors, right? This is accomplished by *interleaving*: data is shuffled before being recorded, so that errors in contiguous sections on the disc will correspond to isolated errors in the data. To demonstrate this effect, let's say that we record the numbers

9. REVIEW AND CONCLUSIONS

one through ten in shuffled order: 1, 10, 5, 2, 9, 6, 3, 8, 4, 7. Suppose a clump of errors occurs in the second, third, and fourth numbers, rendering them unreadable. The result is:

1				9	6	3	8	4	7	⇒	1		3	4		6	7	8	9	
---	--	--	--	---	---	---	---	---	---	---	---	--	---	---	--	---	---	---	---	--

Errors in three consecutive words on disc are widely separated in the de-interleaved data stream. An appropriate interleaving stream, shuffling data over a wide area, can cause clumps of errors to become widely distributed, and thus more likely to be correctable using the surrounding intact information. In the CD standard, the interleaving and error correction scheme is called *Cross Interleave Reed-Solomon Code*, or CIRC.

“Faking It”

Sometimes, an error will occur which is too massive for the error correction scheme. To prevent unpleasant listener experiences, CD players use varying two schemes to mask such errors: interpolation and muting.

In *interpolation*, the “good” waveform before and after the error is used to fill in the bad section with an approximation of what it might have been. A simple approach would be to just repeat the last good data value to fill in the gap; a better method would be to linearly interpolate between the two data values on either side of the gap. Interpolation schemes also can be used which “blend” the interpolated values into the gap ends more smoothly than a straight line does.

At some point, the gap becomes too big for interpolation. The workaround employed is *muting*: the volume of the music is smoothly reduced before the gap and increased back up afterwards. This avoids unpleasant effects like loud pops and clicks. Additionally, by fading out and back in smoothly, the problem is less noticeable (sometimes even unnoticeable).

Error Performance

CDs are not error-free devices. In fact, the typical number of errors in the raw data from a CD is one in 100,000 to 1,000,000 bits. I’ve already mentioned that the data rate from the CD is over 4 million bits per second, so we should expect many errors per second. CIRC error correction can repair most of these errors. Depending on the particular player’s implementation (and this is never listed in the specs for an audio CD player), CIRC can deal with error clumps of up to 4000 bad bits. After CIRC, the error rate can be as low as one in 10–100 billion bits (if the player uses a good implementation; there is no requirement that all of the error correction capability in CIRC be used by the player to correct errors). In practice, a CD in reasonably good shape might have one uncorrected error, which would have to be dealt with by interpolation or muting.

The Data Encoding Process

CD-DA data is considered to be in two stereo channels sampled at 44.1kHz at 16 bits/sample. The samples from each channel are arranged in alternating order (left 16 bits, right 16 bits,

9. REVIEW AND CONCLUSIONS

Table 9.1: Part of the eight-to-fourteen modulation lookup table.

Data Symbol (8 bits)	CD Word (14 bits)
00000000	01001000100000
00000001	100001000000000
00000010	10010000100000
00000011	10001000100000
00000100	010001000000000
00000101	00000100010000
00000110	00010000100000
00000111	001001000000000

etc.) to yield 32-bit sampling periods. Six of these sampling periods will be encoded as one *frame* of data.

The next step towards assembling the frame is computing error correction coding using CIRC. The data is treated as a sequence of 8-bit symbols for this process (so each sample corresponds to two symbols). Four bytes of CIRC parity are added after the first 12 bytes of data and four are added after the second 12 bytes. So, the original 24 bytes of data has now become 32 bytes.

Each frame then has a *subcode* byte prepended to it. The subcodes in each frame contain information about the number of tracks on the disc, their start and end times, etc. Each bit of a subcode byte has a separate meaning, and a player collects these bits from 98 consecutive frames to produce eight 98-bit words with this information. This might not seem like much information, but on a full CD it would correspond to 32MB!

At this point, the data is ready to be converted to the form which will be recorded on the disc. Because of fabrication imprecision and other manufacturing considerations, CDs do *not* use pits to encode zeros and lands to encode ones (or vice versa). Instead, ones are encoded as a pit-land or land-pit transitions, while zeros produce no transitions. So, the rate of transitions (the length of pits or lands) depends on how often ones are encountered in the data stream (or, equivalently, the length of runs of zeros in the data). It is desirable to control this so that all pits fall within some range of minimum to maximum length. To accomplish this, each 8-bit symbol is converted to a 14-bit pattern using *eight-to-fourteen modulation* (EFM). This is done via a look-up table, a portion of which is presented in table 9.1. The bit patterns in each 14-bit word are selected to generate a particular rate of occurrence of ones (and, as a result, set the typical land and pit lengths). In particular, only those words with more than two but less than ten zeros in a row are chosen. Additionally, since only 256 of the possible 16K 14-bit words are used, those words are less similar than the original symbols, which yields some additional error correction capability. For example, with 256 8-bit symbols, if we flip a bit in one symbol, we get another one. With only 256 out of 16K 14-bit words used, flipping one bit is unlikely to produce another valid word (about a 1.5% chance).

9. REVIEW AND CONCLUSIONS

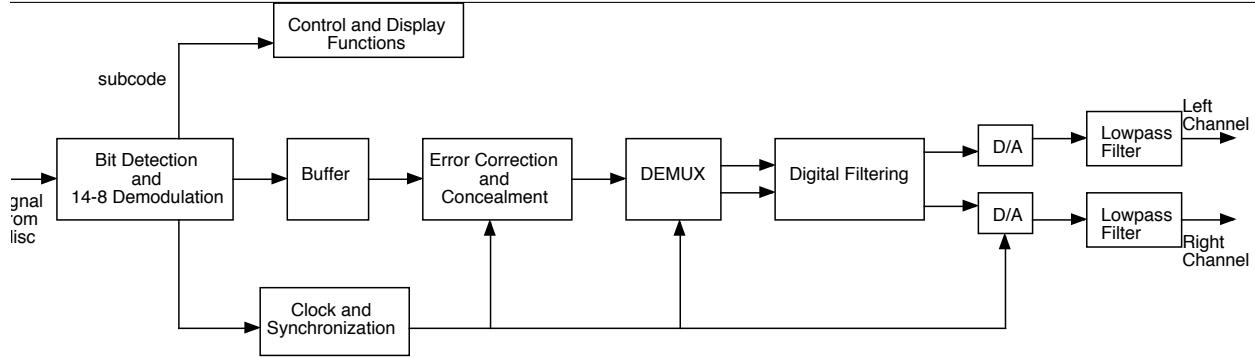


Figure 9.2: Simplified block diagram of a CD player.

There is still a need to control the transition between these 14-bit words and to fix the ratio of high to low bits. So, between each pair of words, three *merging bits* are inserted. Two of these are used to ensure that, even if the first 14-bit word ends with a one and the next starts with a one, there won't be two ones in a row. The third bit is chosen to be either a zero or a one to keep the overall ratio at 8:17.

Frames of data are now indicated by adding a 24-bit synchronization pattern before each: 10000000000100000000010 plus three merging bits. This is a set of three ones separated by tens zeros between each pair, and won't appear anywhere else in the data. Besides marking the start of a frame, this is used by the player as a clock to regulate rotation speed. The resultant frame contains 588 bits: 24 synchronization pattern bits, 336 data bits (in 24 14-bit words), 112 error correction bits (in 8 14-bit words), 14 subcode bits, and 102 merging bits (in 34 groups of three bits each).

The data is ready for recording at this point. Pit edges encode ones; while the extent of pits or lands correspond to zeros. The data stream has been encoded so that all pits and lands are between 3 and 11 bits long (in other words, there are between 3 and 11 zeros in a row anywhere in the data).

The result of all this is that only about 32% of the data on a disk is the actual audio information; the rest is overhead of EFM, merging bits, CIRC, synchronization, and subcodes.

9.2.2 CD System Signal Processing

A CD player converts the information encoded on the disc into analog audio. Figure 9.2 is a simplified block diagram of a CD player. Processing begins with detection of the pit/land transitions from the disc (which includes a control system that maintains the appropriate spindle rotation speed, moves the laser along the track of the pits, and keeps the laser focused on the metalized layer within the disc). This raw data then has the merging bits removed, and is converted from 14-bit words to 8-bit symbols. The subcode symbols are sent to a parallel pathway to support the player's user interface.

The data symbols are stored in a queue that leads to further processing. The first step

9. REVIEW AND CONCLUSIONS

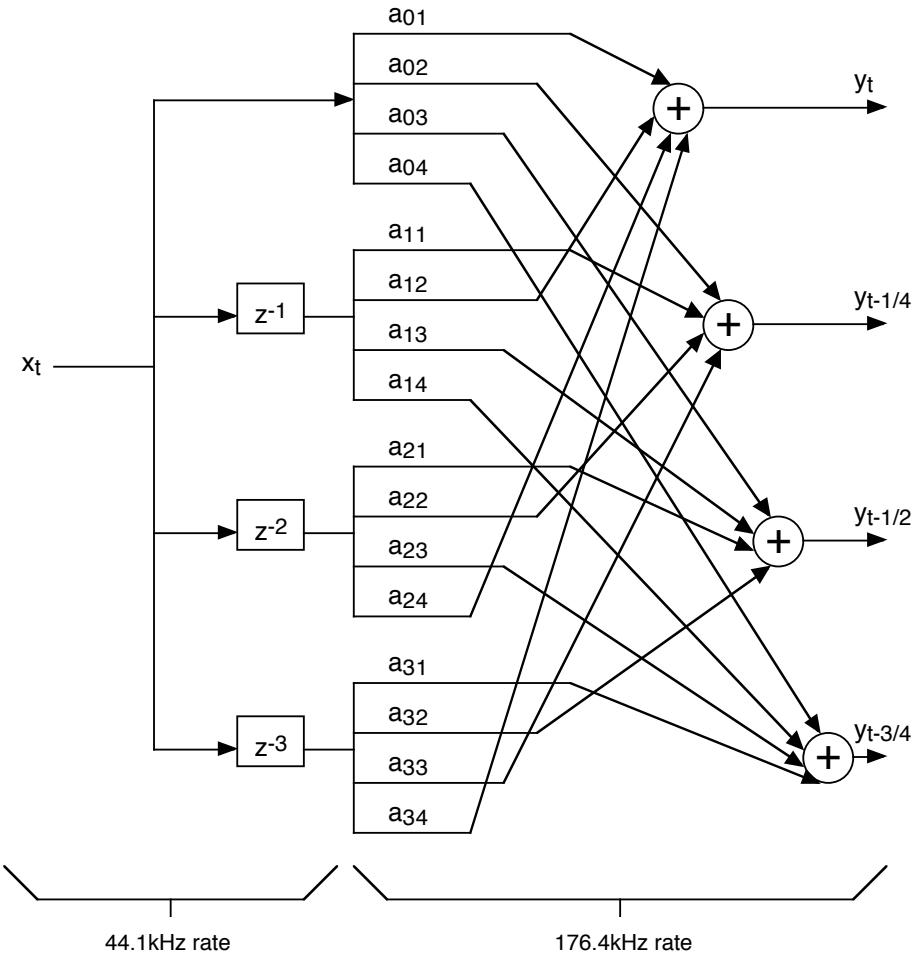


Figure 9.3: Simplified oversampling filter.

of this is error detection, correction (if possible), and concealment (if uncorrectable). The two channels (left and right) are then separated (*demultiplexed*; “DEMUX” in the figure).

Next, digital filtering involves an *oversampling* transformation, in which additional samples are interpolated between the original ones, and a low-pass filter. Oversampling results in one, three, seven, or more interpolated values being inserted between each pair of input samples. The result is a data stream which “simulates” one sampled at twice, four times, eight times, etc. the original rate of 44.1kHz. “Simulates” is used here because any aliasing has already occurred when the music was originally digitized (before it was recorded to disc). The purpose of oversampling here is to produce a digital signal with no information beyond 22.05kHz (the original Nyquist limit imposed by sampling) but with a Nyquist limit of 44.1, 88.2, 176.4kHz or more. This allows the use of analog lowpass filters on the output with frequency responses which drop off relatively gently beyond 22.05kHz that still do not pass any undesirable high-frequency artifacts. Question: what’s wrong with low-pass filters with abrupt cutoffs (sometimes called *brick wall* filters) (answer in A.9 #1)?

9. REVIEW AND CONCLUSIONS

Figure 9.3 presents a simplified four-times oversampling filter. In this simplified version, an input sample plus three delayed versions are summed together to produce four output samples. The coefficients are chosen so that a low pass filter with cutoff at the input's Nyquist limit (22.05kHz) is implemented for each output. The input samples enter at 44.1kHz (and thus the delays are multiples of the sample period, $T_s = 1/44,100 = 22.7\mu s$). During each input sample period, each of the xt values is multiplied by four different coefficients and those products summed to produce four y_t , at a rate of 176.4kHz. This is then converted to analog by digital to analog converters (D/A or DAC), and then low pass filtered before being sent to the preamplifier, power amplifier, speakers, and your ears.

9.3 Conclusion

While it may have at times seemed a long and arduous journey, hopefully, looking back, you have a sense of satisfaction in the scope of understanding you've gained in this important subject. Digital multimedia is a big subject, and no single course can cover everything. However, please consider the CD overview that you've just gone through, the background required to understand it, and how incomprehensible even the basics would likely have been to you before you took this course. I'd like you to use this experience to make you confident that you could work in a team building multimedia devices, be they digital audio, video, or telecommunications (wired or wireless). The authors hope that this has served to whet your appetite for more, and that you'll look for the implications for multimedia when learning about databases, or hardware, or networking, or almost any area of computing.

9.4 Further Reading

- Pohlman, Ken, *The Compact Disc Handbook*, A-R Editions, 1992.

A

Answers to Self-Test Exercises

A.1 Chapter 1: Signals in the Physical World

1. Let's assume that we encode audio information as 8 bits per sample at 8000 samples per second (this would be considered very low quality). How many bits per second is that?

Answer: 64,000 bits/second.

2. Let's say we encode each frame in a video stream as 1000x1000 pixels, 24 bits/pixel, and 30 frames/second. How many bits per second is that?

Answer: 720 million bits/second.

3. We need to find a function of x whose second derivative is proportional to itself. Can you think of one or two?

Answer: $\sin \omega t$ and $\cos \omega t$ both work.

4. Solve for ω in terms of k and m .

Answer: $\omega = \sqrt{k/m}$.

5. Fork stiffness (k) clearly affects vibration frequency. As the fork get stiffer (k increases), does the vibration frequency go up or down?

Answer: as k increases, ω (which is vibration frequency) increases.

6. If the two forks were close together, we would heard the sum of their tones. What would that sum be?

Answer: $a_1 \cos(\omega t + \phi_1) + a_2 \cos(\omega t + \phi_2)$, where a_1 and a_2 are the vibrational amplitudes and ϕ_1 and ϕ_2 are the two phases.

7. What does $\mathbf{u} + \mathbf{v}$ look like if \mathbf{u} and \mathbf{v} are rotating?

Answer: If the ω s of \mathbf{u} and \mathbf{v} are equal, then $\mathbf{u} + \mathbf{v}$ rotates with them, the magnitudes staying constant. Therefore, $\mathbf{u} + \mathbf{v}$ is a sinusoid of the same frequency, ω .

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

8. What is the sum of the two complex numbers $x + jy$ and $v + jw$?

Answer: You add the reals and imaginaries separately, yielding $(x + v) + j(y + w)$.

9. What is the product of the two complex numbers $x + jy$ and $v + jw$?

Answer: It works just like multiplying polynomials, $(x + jy)(v + jw) = xv + jyv + jwx + j^2yw = (xv - yw) + j(xw + yv)$ (remember that $j^2 = -1$).

10. Convert the complex number $z = x + jy$ to polar form, $R\angle\theta$.

Answer: $R = |z| = \sqrt{x^2 + y^2}$; $\theta = \arctan(y/x)$.

11. Multiply the two polar-form complex numbers $R_1\angle\theta_1$ and $R_2\angle\theta_2$.

Answer: $R_1 R_2 \angle(\theta_1 + \theta_2)$.

12. Multiply the two complex sinusoids z_1 and z_2 .

Answer: Just like multiplying the polar representation of two vectors, $z_1 z_2 = R_1 R_2 e^{j(\theta_1 + \theta_2)}$.

13. The complex conjugate is indicated by z^* . If $z = x + jy$, $z^* = x - jy$. What is the complex conjugate of the complex sinusoid, $z = Re^{j\theta}$?

Answer: Like the polar representation, it has the same magnitude but a negative angle, $z^* = Re^{-j\theta}$.

14. Answer the following for $z = x + jy$:

- (a) What is $z + z^*$?

Answer: $2 \operatorname{Re}(z)$.

- (b) What is $z - z^*$?

Answer: $2j \operatorname{Im}(z)$.

- (c) What is zz^* ?

Answer: $|z|^2$.

15. Prove the relationship in (1-43).

Answer:

$$c_{-k}^* = \left[\frac{1}{T} \int_0^T f(t) e^{jk\omega_0 t} dt \right]^* = \frac{1}{T} \int_0^T f^*(t) e^{-jk\omega_0 t} dt = \frac{1}{T} \int_0^T f(t) e^{-jk\omega_0 t} dt = c_k$$

because $f(t) = f(t)^*$ ($f(t)$ is real).

16. From equation (1-45), derive (1-46).

Answer:

$$\begin{aligned} \operatorname{Re}[c_k e^{jk\omega_0 t}] &= \operatorname{Re}[c_k \cos k\omega_0 t + j c_k \sin k\omega_0 t] \\ &= \operatorname{Re}(c_k) \cos k\omega_0 t + \operatorname{Re}(j c_k) \sin k\omega_0 t \\ &= \operatorname{Re}(c_k) \cos k\omega_0 t - \operatorname{Im}(c_k) \sin k\omega_0 t \end{aligned}$$

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

17. Prove (1-58).

Answer: Since the denominator of $\sin \alpha/\alpha$ is zero at $\alpha = 0$, we instead evaluate this as

$$\text{sinc}(0) = \lim_{\alpha \rightarrow 0} \sin \alpha/\alpha$$

and use L'Hôpital's rule. The limit becomes

$$\begin{aligned}\text{sinc}(0) &= \left. \frac{\frac{d}{d\alpha} \sin \alpha}{\frac{d\alpha}{d\alpha}} \right|_{\alpha=0} \\ &= \left. \frac{\cos \alpha}{1} \right|_{\alpha=0} \\ &= 1\end{aligned}$$

A.2 Chapter 2: Signals in the Computer

1. The hubcap of a car coming to a stop in a motion picture.

Answer: Signal: the spokes; sampling: the discrete images in the movie.

2. A TV news anchor squirming while wearing a tweed jacket.

Answer: Signal: the tweed texture; sampling: the discrete frames of the video.

3. A helicopter blade while the helicopter is starting up on a sunny day.

Answer: Signal: the blade motion; sampling: the strobing effect as each blade blocks, then reveal, the sun.

4. In this case, $\mu = 0$ and the variable's range is $[-1/2, +1/2]$ LSB. The result is a standard deviation (equivalent to the RMS error computed in the textbook) of $\sigma = 1/\sqrt{12}$ LSB ≈ 0.29 LSB (how?).

Answer: Given the value for μ and the range of the (now definite) integral, we have:

$$\begin{aligned}\sigma^2 &= \int_{-1/2}^{+1/2} x^2 dx \\ &= \left. \frac{x^3}{3} \right|_{-1/2}^{+1/2} \\ &= \frac{1}{24} + \frac{1}{24} \\ &= \frac{1}{12}\end{aligned}$$

And so $\sigma = 1/\sqrt{12}$.

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

5. If we use an 8-bit ADC, 5V corresponds to 255 and 1mV is then 0.051 LSB. (What is the SNR for the original signal?)

Answer: It is $20 \log 5/0.001 = 74\text{dB}$, which is quite good.

6. What ratio of amplitudes is represented by one bel?

Answer: A bel is ten dB; and 10dB is an amplitude ratio of $\sqrt{10} \approx 3.2$.

A.3 Chapter 3: Filtering and Feedforward Filters

1. Is the signal of equation 3-1 periodic? If so, what is its period?

Answer: Since this signal is a sum of sinusoids with frequencies that have a common divisor, then, yes, the signal is periodic. The greatest common divisor is 50Hz, and so the smallest period for the signal is $T = 0.02$ seconds.

2. Since $|\cos(\omega\tau)| \leq 1$, the maximum value $|H(\omega)|$ can reach is $(1 + a_1)$, which occurs when the angle $\omega\tau = n\pi, n = 0, 2, 4, \dots$ (zero or even multiples of π). Why is this?

Answer: These are the values of $\omega\tau$ for which $\cos \omega\tau = +1$.

3. Use Euler's formula and the definition of the magnitude of a complex vector to derive (3-12) from (3-11).

Answer: Substituting $e^{-j\omega\tau} = \cos \omega\tau - j \sin \omega\tau$, we obtain $|H(\omega)| = |1 + b_1(\cos \omega\tau + j \sin \omega\tau)| = |1 + b_1 \cos \omega\tau + jb_1 \sin \omega\tau|$. The magnitude of a complex number is the square root of the sum of the squares of its real and imaginary parts, so $|H(\omega)| = \sqrt{(1+b_1 \cos \omega\tau)^2 + b_1^2 \sin^2 \omega\tau}$. Computing the squared values, $|H(\omega)| = \sqrt{1+2b_1 \cos \omega\tau + b_1^2 \cos^2 \omega\tau + b_1^2 \sin^2 \omega\tau}$. Factor out the b_1^2 from the last two terms and remember that $\cos^2 \theta + \sin^2 \theta = 1$, and you're home free.

4. Suppose that we sample a signal at 1000Hz. For each of the following analog frequencies f , determine ω , \hat{f} , and $\hat{\omega}$. Indicate if that frequency will be aliased.

(a) $f = 100\text{Hz}$: $\omega = 2\pi f = 200\pi$ radians/sec. $\hat{f} = f/f_s = 100/1000 = 0.1$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} = 0.2\pi$ radians/sample. Not aliased.

(b) $f = 200\text{Hz}$: $\omega = 2\pi f = 400\pi$ radians/sec. $\hat{f} = f/f_s = 200/1000 = 0.2$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} = 0.4\pi$ radians/sample. Not aliased.

(c) $f = 500\text{Hz}$: $\omega = 2\pi f = 1000\pi$ radians/sec. $\hat{f} = f/f_s = 500/1000 = 0.5$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} = \pi$ radians/sample. Not aliased.

(d) $f = 1000\text{Hz}$: $\omega = 2\pi f = 2000\pi$ radians/sec. $\hat{f} = f/f_s = 1000/1000 = 1$ cycle/sample. $\hat{\omega} = 2\pi\hat{f} = 2\pi$ radians/sample. This is aliased, because it is greater than the Nyquist limit, $f_s/2 = 500\text{Hz}$ ($\hat{\omega}_{Nyquist} = \pi$).

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

5. Suppose that we sample a signal at 44.1kHz (the sampling rate used in audio CDs). For each of the following analog frequencies f , determine ω , \hat{f} , and $\hat{\omega}$. Indicate if that frequency will be aliased.
- $f = 100\text{Hz}$: $\omega = 2\pi f = 200\pi$ radians/sec. $\hat{f} = f/f_s = 100/44100 \approx 0.0023$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} \approx 0.014$ radians/sample. Not aliased.
 - $f = 1000\text{Hz}$: $\omega = 2\pi f = 2000\pi$ radians/sec. $\hat{f} = f/f_s = 1000/44100 \approx 0.023$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} \approx 0.14$ radians/sample. Not aliased.
 - $f = 10000\text{Hz}$: $\omega = 2\pi f = 20000\pi$ radians/sample. $\hat{f} = f/f_s = 10000/44100 \approx 0.23$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} \approx 1.4$ radians/sample. Not aliased.
 - $f = 20000\text{Hz}$: $\omega = 2\pi f = 40000\pi$ radians/sec. $\hat{f} = f/f_s = 20000/44100 \approx 0.45$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} \approx 2.8$ radians/sample. Not aliased.
 - $f = 25000\text{Hz}$: $\omega = 2\pi f = 50000\pi$ radians/sec. $\hat{f} = f/f_s = 25000/44100 \approx 0.57$ cycles/sample. $\hat{\omega} = 2\pi\hat{f} \approx 3.6$ radians/sample. This is aliased, because it is greater than the Nyquist limit, $f_s/2 = 22.05\text{kHz}$ ($\hat{\omega}_{Nyquist} = \pi$).

6. Write equation (3-23) for $k = 0, 1, 2, 3$, then write the transfer function for each.

Answer: For $k = 0$, $y[n] = b_0x[n]$ and $H(z) = b_0$; $k = 1$, $y[n] = x[n](b_0 + b_1e^{-j\hat{\omega}})$ and $H(z) = b_0 + b_1z^{-1}$; $k = 2$, $y[n] = x[n](b_0 + b_1e^{-j\hat{\omega}} + b_2e^{-2j\hat{\omega}})$ and $H(z) = b_0 + b_1z^{-1} + b_2z^{-2}$; $k = 3$, $y[n] = x[n](b_0 + b_1e^{-j\hat{\omega}} + b_2e^{-2j\hat{\omega}} + b_3e^{-3j\hat{\omega}})$ and $H(z) = b_0 + b_1z^{-1} + b_2z^{-2} + b_3z^{-3}$.

7. Given the signal $x(t) = \sin t$ and the derivative operator $D = d/dt$, what is $Dx(t)$?

Answer: $Dx(t) = \cos t$.

8. When

$$H_1(z) = b_0 + b_1z^{-1}$$

$$H_2(z) = b'_0 + b'_1z^{-1}$$

with b_0 , b_1 , b'_0 , and b'_1 are constants, show that $H_2(z)H_1(z) = H_1(z)H_2(z)$.

Answer: Multiplying $H_1(z)H_2(z)$, we obtain $(b_0 + b_1z^{-1})(b'_0 + b'_1z^{-1}) = b_0b'_0 + (b_0b'_1 + b_1b'_0)z^{-1} + b_1b'_1z^{-2}$. Multiplying $H_2(z)H_1(z)$, we get $(b'_0 + b'_1z^{-1})(b_0 + b_1z^{-1}) = b'_0b_0 + (b'_0b_1 + b'_1b_0)z^{-1} + b'_1b_1z^{-2}$. Because multiplication is commutative, these two expressions are equal. In other words, series combination of filters is commutative because multiplication of polynomials is commutative.

9. Prove $|z^2| = 1$ in equation (3-39).

Answer: $|z^2| = |e^{2j\omega}|$. From Euler's formula, this is $|\cos 2\omega + j \sin 2\omega|$. Since the magnitude of a complex number in rectangular form is the square root of the sum of the squares of its real and imaginary components, and $\cos^2 2\omega + \sin^2 2\omega = 1$, $|z^2| = 1$.

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

10. Starting with the factored magnitude response in equation (3-42), derive expressions for b_1 and b_2 in terms of z_1 and z_2 .

Answer: The factored magnitude response is $|H(z)| = |(z - z_1)(z - z_2)|$. Multiplying the two terms out yields $|H(z)| = |z^2 - zz_1 - zz_2 + z_1z_2| = |z^2 - (z_1 + z_2)z + z_1z_2|$. Because $|H(z)| = |z^2 + b_1z + b_2|$, $b_1 = -(z_1 + z_2)$ and $b_2 = z_1z_2$.

11. What abstract data type (ADT) should hold the delayed inputs?

Answer: a queue.

A.4 Chapter 4: The Z-Transform and Convolution

1. Determine the z-transform for the sequence $x[n] = \{1, 2, 5, 7, 0, 1\}$, $n = 0, 1, 2, 3, 4, 5$

Answer:

$$X(z) = 1 + 2z^{-1} + 5z^{-2} + 7z^{-3} + z^{-5} \quad (\text{A-1})$$

2. Determine the z-transform of the sequence $x[n] = \{1, 2, 5, 7, 0, 1\}$, $n = -2, -1, 0, 1, 2, 3$

Answer:

$$X(z) = 1z^2 + 2z + 5 + 7z^{-1} + z^{-3} \quad (\text{A-2})$$

3. Sketch equation (4-6).

Answer: In a magnitude ($|\mathcal{X}(\omega)|$) vs. frequency plot, it is a horizontal line of value one.

4. Compute the z-transform and frequency content for the signal $\delta[n + n_0]$.

Answer:

$$\begin{aligned} \Delta(z) &= \sum_{k=-\infty}^{\infty} \delta[k + n_0] z^{-k} \\ &= 1z^{n_0} = z^{n_0} \end{aligned}$$

The convergence region is entire z plane, except $z = \infty$. The frequency content is $|\mathcal{D}(\hat{\omega})| = |\Delta(e^{j\hat{\omega}})| = |e^{jn_0\hat{\omega}}| = 1$.

5. What is the derivative of $u[n - k]$ (the unit step at time step k)?

Answer: $\delta[n - k]$.

6. Show that $e^{j\hat{\omega}/2} - e^{-j\hat{\omega}/2} = 2j \sin \omega/2$.

Answer: Euler's formula states that $e^{j\theta} = \cos \theta + j \sin \theta$. For negative angles, $e^{-j\theta} = \cos(-\theta) + j \sin(-\theta) = \cos \theta - j \sin \theta$ (because cosine is an even function and sine is an odd function). The difference of these two is $e^{j\theta} - e^{-j\theta} = 2j \sin \theta$; substitute $\theta = \hat{\omega}/2$ to finish up.

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

7. Prove that $e^{-j\pi/2} = -j$.

Answer: Using Euler's formula, $e^{-j\pi/2} = \cos \pi/2 - j \sin \pi/2 = 0 - j \times 1 = -j$.

8. Determine if $u[n] * H \neq H$ is true, where $h[n] = n$, $n = 0, 1, 2, \dots$ (a *ramp*).

Answer: Yes, it is true:

$$\begin{aligned} u[n] * H &= \sum_{k=0}^n 1(n-k) \\ &= \sum_{k=0}^n n - \sum_{k=0}^n k \\ &= n^2 - \frac{n(n+1)}{2} \\ &= \frac{n(n-1)}{2} \\ &\neq n \end{aligned}$$

9. Compute $u[n] * u[n]$.

Answer:

$$u[n] * u[n] = \sum_{k=0}^n 1 = n \quad (\text{A-3})$$

So $u[n] * u[n] \neq u[n]$.

10. How does the MATLAB function `conv` deal with boundary conditions?

Answer: It zero pads.

11. Use MATLAB to compute the convolution $e^{-n} * e^{-n}$ and plot the result.

Hint: use `conv` and `plot`.

12. Prove the scaling property of the z-transform; that is, if

$$x[n] \xleftrightarrow{\mathbf{Z}} X(z)$$

then

$$a^n x[n] \xleftrightarrow{\mathbf{Z}} X(a^{-1}z)$$

Answer: From (4-1),

$$\begin{aligned} Z\{a^n x[n]\} &= \sum_{n=-\infty}^{\infty} a^n x[n] z^{-n} &= \sum_{n=-\infty}^{\infty} x[n] (a^{-1}z)^{-n} \\ &= X(a^{-1}z) \end{aligned}$$

A.5 Chapter 5: Feedback Filters

- Derive equation (5-33) from (5-32).

Answer: Start from (5-32):

$$2(1 - 2R + R^2) = 1 - 2R \cos \hat{\omega}_B + R^2$$

$$1 - 4R + r^2 = -2R \cos \hat{\omega}_B$$

so

$$\cos \hat{\omega}_B = -\frac{1}{2R}(1 - 4R + R^2)$$

$$= 2 - \frac{1}{2}(R + \frac{1}{R})$$

- In the situation where the sampling rate is 44,100Hz and the desired bandwidth is 20Hz, R in (5-38) is 0.998575. Solve for R the situation where the desired bandwidth is 200Hz. Is it true that when R is far away from one, B grows large?


Answer: $R = 1 - \pi(200/44100) = 0.9858$. Yes.

A.6 Chapter 6: Spectral Analysis

- Show which frequencies will be equal for a spectrum with:


- 16 points.

Answer:

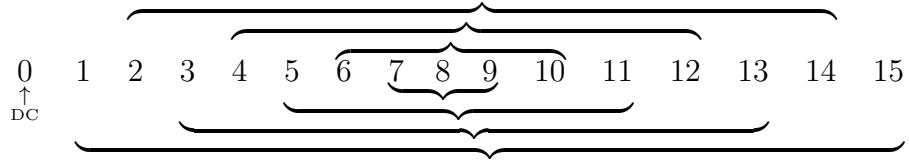

- 15 points.

Answer:

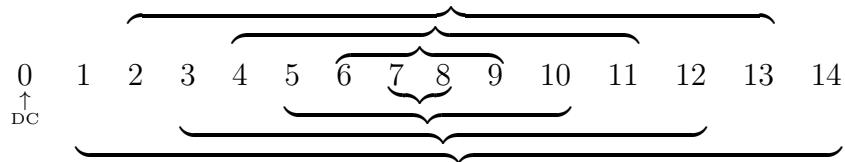

- Prove that the DFT of $x[n]$ for any $n = m$ and $N = 1$ is $x[m]$.

Answer:

$$X[k] = \sum_{n=m}^m x[n]e^{-jnk2\pi/1} = x[m]e^{jmk2\pi} = x[m]$$

because k, m are integers and so $e^{jmk2\pi} = 1$.

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

3. Perform step-by-step division for the example given in table 6.2 to prove the final result is equal to the bit-reversed input.

Answer: The answer given in decimal is in the following table:

Input	N/2	N/4	N/8
0	0	0	0
1	2	4	4
2	4	2	2
3	6	6	6
4	1	1	1
5	3	5	5
6	5	3	3
7	7	7	7

4. Perform the 4-point FFT of the signal $x[n] = \{1, 2, 3, 4\}$ by hand.

Answer: We first do the bit reversal to get:

Input		Bit-Reversed Result		
Decimal	Binary	Binary	Decimal	Value
0	00	00	0	1
1	01	10	2	3
2	10	01	1	2
3	11	11	3	4

Each row of this table corresponds to a 1-point FFT. Starting with $N = 2$, we combine neighbors to form the two-point FFTs according to equations (6-39) and (6-40):

	k	$X[k]$
even	0	4
	1	-2
odd	0	6
	1	-2

We now have a 2-point “even” FFT and a 2-point “odd” FFT. We can combine corre-

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

sponding elements of this using $k = \{0, 1, 2, 3\}$ and $N = 4$; the four equations are:

$$\begin{aligned}
 X[0] &= X[0]^{\text{even}} + e^{-j(0)2\pi/4} X[0]^{\text{odd}} \\
 &= X[0]^{\text{even}} + X[0]^{\text{odd}} \\
 X[1] &= X[1]^{\text{even}} + e^{-j(1)2\pi/4} X[1]^{\text{odd}} \\
 &= X[1]^{\text{even}} + e^{-j\pi/2} X[1]^{\text{odd}} \\
 &= X[1]^{\text{even}} - jX[1]^{\text{odd}} \\
 X[2] &= X[0]^{\text{even}} + e^{-j(2)2\pi/4} X[0]^{\text{odd}} \\
 &= X[0]^{\text{even}} + e^{-j\pi} X[0]^{\text{odd}} \\
 &= X[0]^{\text{even}} - X[0]^{\text{odd}} \\
 X[3] &= X[1]^{\text{even}} + e^{-j(3)2\pi/4} X[1]^{\text{odd}} \\
 &= X[1]^{\text{even}} + e^{-j3\pi/2} X[1]^{\text{odd}} \\
 &= X[1]^{\text{even}} + jX[1]^{\text{odd}}
 \end{aligned}$$

And so the FFT values (and the *power spectrum*, $|X[k]|^2$) are:

k	$X[k]$	$ X[k] ^2$
0	10	100
1	$-2 + j2$	8
2	-2	4
3	$-2 - j2$	8

5. Fill in the steps leading from (6-51) to (6-52).

Answer: Equation (6-51) is a geometric series with common ratio $e^{-j\hat{\omega}_k}$, so

$$W(\hat{\omega}_k) = \frac{1 - e^{-j\hat{\omega}_k N}}{1 - e^{-j\hat{\omega}_k}}$$

Using Euler's formula, the numerator becomes

$$1 - e^{-j\hat{\omega}_k N} = e^{-j\hat{\omega}_k N/2} (e^{j\hat{\omega}_k N/2} - e^{-j\hat{\omega}_k N/2}) = 2j e^{-j\hat{\omega}_k N/2} \sin(\hat{\omega}_k N/2)$$

Similarly, the denominator is $2j e^{-j\hat{\omega}_k/2} \sin(\hat{\omega}_k/2)$, so

$$W(\hat{\omega}_k) = \frac{\sin(\hat{\omega}_k N/2)}{\sin \hat{\omega}_k/2} e^{-j\hat{\omega}_k(N-1)/2}$$

which is (6-52).

6. Plot the Hann and Hamming windows in the time domain and compare their shapes.

Hint: Use the MATLAB built-in commands `hamming()` and `hanning()`.

A.7 Chapter 7: Compression

1. If a rate of 44,100 samples/second at 16bits/sample, what is the digital data rate in bits/second?

Answer: 705.6kb/s.

2. If we are digitizing high-quality video — 1k x 1k pixels/frame, 30 frames/sec, 24 bits/pixel — what is the bit rate?

Answer: 755Mb/s.

3. If a signal is sent in which all samples have the same value, what is the information content in bits (ignoring the first sample)?

Answer: Since you can predict all subsequent signals with 100% accuracy, no additional information is sent after the first sample (this assumes infinite signal length; otherwise, there is additional information — the number of samples).

4. What kind of signal would have maximum information content?

Answer: It would have to be a signal in which the next sample could never be predicted at better than chance, regardless of the number of previous samples used as “clues” to the next sample’s value. So, for example, if there were 8 bits/sample, the chance of predicting the next signal would have to be 1/256. Such an unpredictable signal is called *stochastic*, or *random*. In multimedia terms, *noise*.

5. Can you give an example of an application which would demand symmetric coding?

Answer: Video conferencing. Both ends typically have the same hardware, both ends must perform both encoding and decoding, and both operations must be done in real time.

6. Can you give an example of an application which could allow asymmetric coding?

Answer: Video broadcasting. If the broadcast is not live, then large computers can be allowed long times to optimize a recording. Even in a live broadcast, the studio can invest more money in encoding equipment than the viewer in decoding equipment (TVs or computers).

7. Two example codes with the prefix property are given in Table 7.1. Decoding code 1 is easy, as we can just read three bits at a time (for example, decode “001010011”).

Answer: “2, 3, 4”.

8. What would the symbol sequence be for “01000001000”?

Answer: “3141”.

APPENDIX A. ANSWERS TO SELF-TEST EXERCISES

A.8 Chapter 8: Audio & Video Compression and Coding

1. For almost all versions, the input signal is assumed to be 20kHz. What is the minimum sampling rate for such a signal?

Answer: 40kHz.

2. Question: under what conditions is it acceptable to have greater coder complexity?

Answer: When coding is done once and not in real time, or is done by someone with a lot of money, like a TV station.

A.9 Chapter 9: Review and Conclusions

1. Question: what's wrong with low-pass filters with abrupt cutoffs (sometimes called *brick wall* filters)?

Answer: Phase distortion; filters with steep cutoffs introduce large, frequency dependent delays, or phase shifts.

Index

- ω , 14
- ADPCM, 146
- analog-to-digital conversion
 - quantization
 - noise, 40
 - aliasing, 33–38
 - dynamic range, 41
 - quantization, 38–40
 - noise, 40
 - sampling, 33–38
- arithmetic coding, 143
- audio files
 - filtering, 46
- audio files
 - beating, 14
 - bird calls, 40
 - sinusoids, 46
- bandwidth, 91
- block diagram, 47
- C code
 - convolution, 76–77
- CD-DA, 163
- companding, 41
- complex numbers, 10
 - angle, *see* complex numbers, polar form
 - magnitude, *see* complex numbers, polar form
- complex sinusoids
 - as an orthogonal basis, 19
- compression
 - arithmetic, 143
 - delta modulation, 145
 - dictionary based, 143
 - Huffman, 142–143
 - human perception and, 144
 - information theory and, 138
 - lossless, 139, 141–144
 - lossy, 139, 144–147
 - pulse code modulation (PCM), 145
 - quantization and, 141
 - run-length, 141
 - spatial redundancy and, 146
 - speech synthesis and, 150
 - temporal redundancy and, 146
- convolution
 - associative property, 75
 - boundary conditions, 77
 - commutative property, 75
 - discrete
 - definition, 75
 - implementation, 76
 - distributive property, 75
 - kernel, 77
- CRT, 4–5
 - anode, 4
 - cathode, 4

INDEX

- cathode rays, 4
- color, 5
- electron gun, 4
- phosphor, 4
- raster scanning, 4–5
 - interlaced, 5
 - non-interlaced, 5
- data acquisition, 31
- data flow diagram, 47
- DC component, 14
- decibel, 33, 61
 - defining equation, 52
 - delta modulation, 145
 - demultiplex (DEMUX), 169
- diagram
 - block, 47
 - data flow, 47
 - flow chart, 47
- differential equations, 8
- differential pulse code modulation, 145
- digital filtering
 - pseudocode, 62
- digitization, *see* analog-to-digital conversion
- discrete cosine transform (DCT), 147, 154
- Discrete Fourier Transform (DFT), 105
 - direct computation, 111
 - complexity, 111
 - FFT, 112
 - of an exponential, 109
 - of sum of two sinusoids, 119
 - properties of, 107
- domain
 - frequency, 67
 - time, 67
- domains, 67
- eight-to-fourteen modulation (EFM), 167
- entropy, 139
- equation
 - defining, 52
- error correction
 - in compact discs, 165–166
- Euler's formula, 11
- FFT
 - Bartlett window and, 128
 - frequency resolution, 124
 - Hamming window and, 128
 - of finite-duration signals, 121–122
 - of time-varying signals, 124
 - points, 108
 - rectangular window and, 121
 - time/frequency tradeoff, 126
- filter
 - band stop, 45
 - bandpass, 45
 - cascade, 99
 - cutoff amplitude, 92
 - cutoff frequency, 92
 - digital, 50
 - frequency response, 49
 - high pass, 45
 - impulse response, 82
 - low pass, 45
 - parallel one-pole, 90
 - passband, 92
 - phase response, 59
 - poles, 86
 - resonance, 91
 - transfer function, 54
 - determining with z-transform, 82
 - relationship to its z-transform, 82
- flow chart, 47
- Fourier coefficients, 17
- Fourier Series, 17
 - of a square wave, 20
- Fourier series, 15
- Fourier Transform, 101
 - of a pulse, 102
- Fourier transform
 - short-time, 126
- frequency
 - angular, 14
 - fundamental, 15, 17
 - Hertz (Hz), 14

INDEX

- frequency analysis, 15
frequency domain, 67
frequency response, 49
 zero, 56
- geometric series, 70
 as function of first term, 70
 common ratio, 70, 109
- harmonics, 7, 14
- Huffman coding, 142–143
- i, *see j*
- independence, 14
- information theory, 138
- interpolation, 166
- j ($\sqrt{-1}$), 10
- l'Hôpital's rule, 18
- lands, 165, 167
- LCD, 4
- magnitude response, 49
- MATLAB code
 beating, 14
 convolution, 78
 numerical error, 97–98
 quantization, 40
- multimedia systems
 basic functions, 5–6
 computing requirements, 6
- multiplex (MUX), 159
- muting, 166
- Nyquist limit, *see* analog-to-digital conversion, aliasing, 51
- operator
 delay, 53
 mathematical, 53–54
 transfer function, 54
- orthogonality, 14
- partial fraction expansion, 90
- PDF, xvi
- perception
 as a construct, 2
 auditory, 3, 151
 psychophysics, 41
 multimodal fusion, 3
 visual, 2–3
 color, 3
 color constancy, 2
 cone, 2, 3
 luminance, 2
 photoreceptor, 2, 3
 retina, 2
 rod, 2, 3
 trichromatic, 2, 3
 visible light, 2
- period
 of a sinusoid, 14
- phase
 of a sinusoid, 8
- phase response, 49
- polynomial
 order two
 roots of, 57
- power spectrum, 19
- psychoacoustics, 151
- pulse code modulation (PCM), 145
- quadratic equation
 roots of, 57
- recurrence relation, 70, 97
- red book, 163
- Reed-Solomon code (CIRC), 166
- sampling period, 50
- sampling rate, 51
- Shannon, 137
- signal-to-noise ratio (SNR), 33
- sinc function, 22
- sinusoids
 independent, 14
 orthogonal, 14
- sound files, *see* audio files
- spectral analysis, 15

INDEX

- spectrogram, 126
 - of a bird call, 126, 132
 - spectrum, 15, 23
 - electromagnetic, 3
 - visible, 2
 - time domain, 67
 - transduction, 32
 - trigonometry
 - double-angle formulae, 62
 - unit impulse, 69
 - unit step, 72
 - unit vector, 16
 - vectors, 15–16
 - as sum of components, 16
 - basis, 15
 - components, 15
 - inner product, 16
 - commutative property, 16
 - distributive property, 16
 - orthogonal, 16
 - projection, 15
 - sum, 16
 - unit, 16
 - visible light, 2
- z*
- complex plane, 55
 - delay operator, 53
- z*-transform
- and delay, 79
 - computing convolution with, 80
 - of a time-shifted impulse, 80
 - of a unit step, 72
 - of an exponential, 70
 - of an impulse, 69
 - properties of, 79
 - relation to *z* operator, 79
 - relationship to filter transfer function, 82
- zero, 56