



Introduction

Lecture 1



Welcome

to the *Microprocessor Architecture* engineering class

You will learn

- how hardware works
- how to actually build your own hardware device
- the Rust programming Language

We expect

- to come to class
- ask a lot of questions



Team



Our team

Lectures

- Alexandru Radovici

Labs

- Irina Niță
- Irina Bradu
- Teodor Dicu
- Andrei Zamfir
- Dănuț Aldea
- Teodora Miu



Outline

Lectures

- 12 lectures
- 1 Q&A lecture for the project

Labs

- 12 labs

Project

- Build a hardware device running software written in Rust
- The cost for the hardware is around 150 RON
- Presented at PM Fair during the last week of the semester





Grading

Part	Description	Points
Lecture tests	You will have a test at every class with subjects from the previous class.	2p
Lab	Your work at every lab will be graded.	2p
Project	You will have to design and implement a hardware device. Grading will be done for the documentation, hardware design and software development.	5p
Exam	You will have to take an exam during the session.	2p
Total	<i>You will need at least 4.5 points to pass the subject.</i>	11p



Subjects



Theory

- How a microprocessor works
- How the ARM Cortex-M processor works
- Using digital signals to control devices
- Using analog signals to read data from sensors
- How interrupts work
- How asynchronous programming works (async/await)
- How embedded operating systems work



Practical

- How to use the Raspberry Pi Pico
 - Affordable
 - Powerful processor
 - Good documentation
- How to program in Rust
 - Memory Safe
 - *Java-like features, without Java's penalties*
 - Defines an embedded standard interface *embedded-hal*



Apollo Guidance Computer



We choose to go to the moon

John F. Kennedy, Rice University, 1961

*in this decade and do the other things, **not because they are easy, but because they are hard**, because that goal will serve to organize and measure the best of our energies and skills, because that challenge is one that we are willing to accept, one we are unwilling to postpone, and one which we intend to win, and the others, too.*



AGC

August 1966


Frequency 2.048 MHz

Word Length 15 + 1 bit

RAM 4096 B

Storage 72 KB

Software API AGC Assembly Language

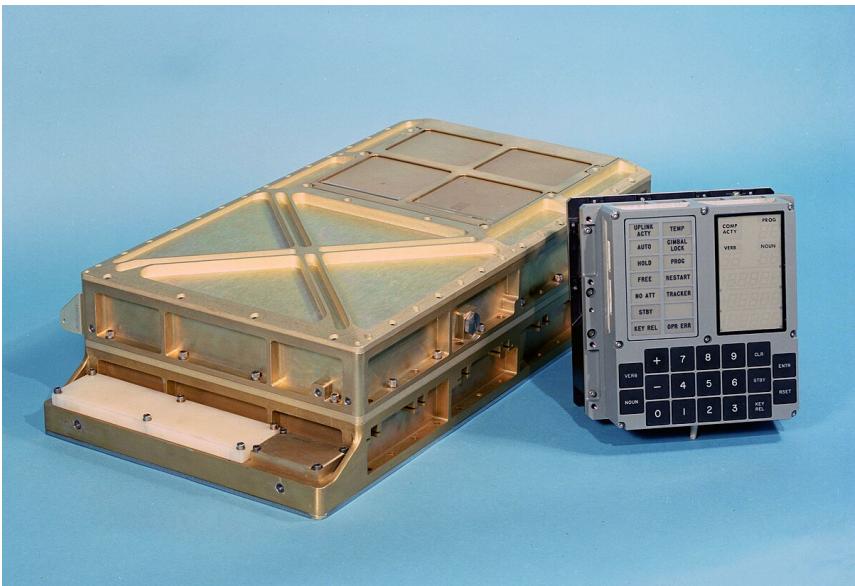


This landed the *moon eagle*.



DSKY

Display and keyboard

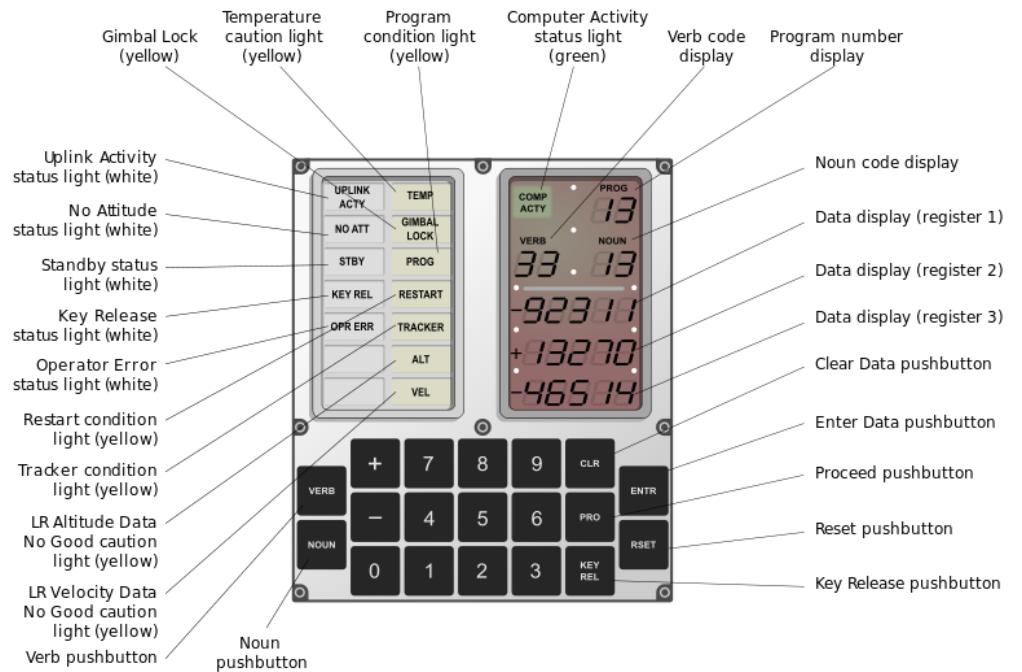



What is a microprocessor?



Microcontroller (MCU)

Integrated in embedded systems for certain tasks

- low operating frequency (MHz)
- a lot of I/O ports
- controls hardware
- does not require an Operating System
- costs \$0.1 - \$25
- annual demand is billions



Microprocessor (CPU)

General purpose, for PC & workstations


- high operating frequency (GHz)
- limited number of I/O ports
- usually requires an Operating System
- costs \$75 - \$500
- annual demand is tens of millions





How a microprocessor (MCU) works

This is a simple processor

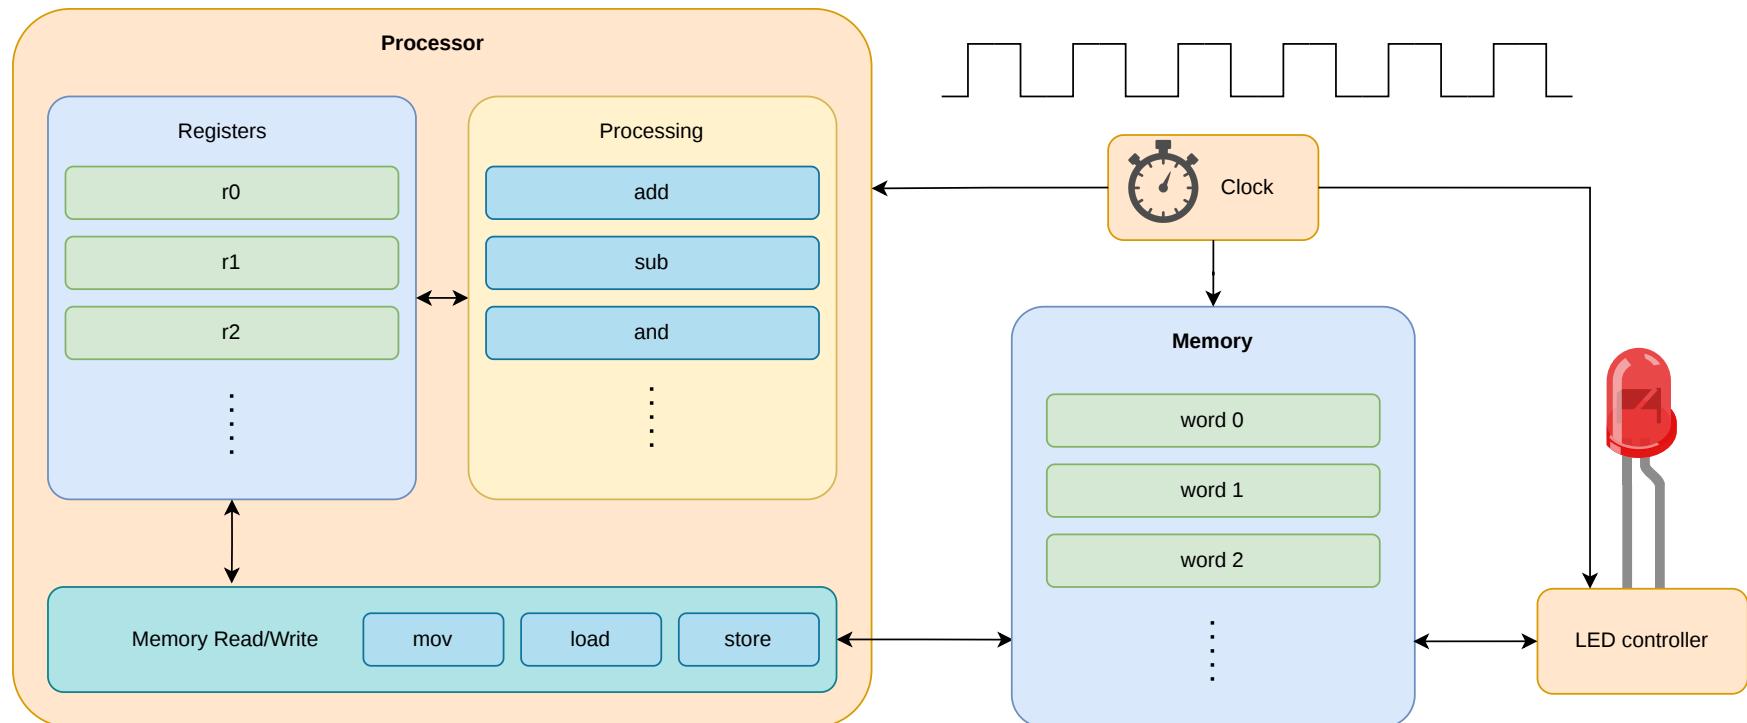



8 bit processor

a simple 8 bit processor with a text display





Programming

in Rust



```
1 use eight_bit_processor::print;  
2  
3 static hello: &str = "Hello World!";  
4  
5 #[start]  
6 fn start() {  
7     print(hello);  
8 }
```

Assembly

```
1     JMP start  
2     hello: DB "Hello World!" ; Variable  
3             DB 0 ; String terminator  
4 start:  
5     MOV C, hello    ; Point to var  
6     MOV D, 232    ; Point to output  
7     CALL print  
8         HLT          ; Stop execution  
9 print:      ; print(C:*from, D:*to)  
10    PUSH A  
11    PUSH B  
12    MOV B, 0  
13 .loop:  
14    MOV A, [C]    ; Get char from var  
15    MOV [D], A    ; Write to output  
16    INC C  
17    INC D  
18    CMP B, [C]    ; Check if end  
19    JNZ .loop ; jump if not  
20  
21    POP B  
22    POP A  
23    RET
```



Demo

a working example for the previous code

Start



Real Word Microcontrollers

Intel / AVR / PIC / TriCore / ARM Cortex-M / RISC-V rv32i(a)mc



Bibliography

for this section

Joseph Yiu, *The Definitive Guide to ARM® Cortex®-M0 and Cortex-M0+ Processors, 2nd Edition*

- Chapter 1 - *Introduction*
- Chapter 2 - *Technical Overview*



Intel

Vendor	Intel
ISA	8051, 8051
Word	8 bit
Frequency	a few MHz
Storage	?
Variants	<i>8048, 8051</i>





AVR

probably *Alf and Vegard's RISC processor*

Authors Alf-Egil Bogen and Vegard Wollan

Vendor Microchip (*Atmel*)


ISA AVR

Word 8 bit

Frequency 1 - 20 MHz

Storage 4 - 256 KB

Variants *ATmega, ATTiny*

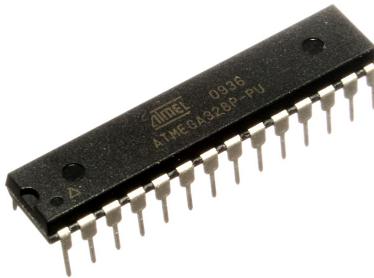

Board





PIC

Peripheral Interface Controller / Programmable Intelligent Computer

Vendor Microchip

ISA PIC

Word 8 - 32

Frequency 1 - 20 MHz

Storage 256 B - 64 KB

Variants *PIC10, PIC12, PIC16, PIC18, PIC24,
PIC32*





TriCore

Vendor	Infineon
ISA	AURIX32
Word	32 bit
Frequency	hundreds of MHz
Storage	a few MB
Variants	<i>TC2xx, TC3xx, TC4xx</i>





ARM Cortex-M

Advanced RISC Machine

arm

Vendor Qualcomm, NXP, Nordic
 Semiconductor, Broadcom, Raspberry
 Pi

ISA ARMv6-M (Thumb and some Thumb-
 2) ARMv7-M (Thumb and Thumb-2)

Word 32

Frequency 1 - 900 MHz

Storage up to a few MB

Variants *M0, M0+, M3, M4, M7, M33*



RISC-V rv32i(a)mc

Fifth generation of RISC ISA

Authors University of California, Berkeley

Vendor Espressif System

ISA rv32i(a)mc

Word 32 bit

Frequency 1 - 200 MHz

Storage 4 - 256 KB

Variants *rv32imc, rv32iamc*





RP2040

ARM Cortex-M0+, built by Raspberry Pi



Bibliography

for this section

Raspberry Pi Ltd, RP2040 Datasheet

- Chapter 1 - *Introduction*
- Chapter 2 - *System Description*
 - Section 2.1 - *Bus Fabric*



RP2040

the MCU

Vendor Raspberry PI

Variant ARM Cortex-M0+

ISA ARMv6-M (Thumb and some Thumb-2)

Cores 2

Word 32 bit

Frequency up to 133 MHz

RAM 264 KB

Storage N/A (external only)


Boards

that use RP2040

Raspberry Pi Pico (W)



Arduino Nano RP2040 Connect

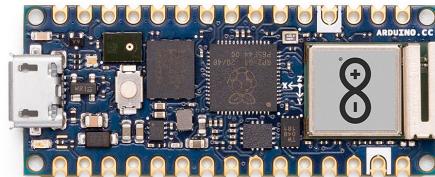



The Chip



Peripherals

SIO	Single Cycle Input/Output
PWM	Pulse With Modulation
ADC	Analog to Digital Converter
(Q)SPI	(Quad) Serial Peripheral Interface
UART	Universal Async. Receiver/Transmitter
RTC	Real Time Clock
I2C	Inter-Integrated Circuit
PIO	Programmable Input/Output

GPIO: General Purpose Input/Output

SWD: Debug Protocol


DMA: Direct Memory Access



Pins

have multiple functions


	Function								
GPIO	F1	F2	F3	F4	F5	F6	F7	F8	F9
0	SPI0 RX	UART0 TX	I2C0 SDA	PWM0 A	SIO	PIO0	PIO1		USB OVCUR DET
1	SPI0 CSn	UART0 RX	I2C0 SCL	PWM0 B	SIO	PIO0	PIO1		USB VBUS DET
2	SPI0 SCK	UART0 CTS	I2C1 SDA	PWM1 A	SIO	PIO0	PIO1		USB VBUS EN
3	SPI0 TX	UART0 RTS	I2C1 SCL	PWM1 B	SIO	PIO0	PIO1		USB OVCUR DET
4	SPI0 RX	UART1 TX	I2C0 SDA	PWM2 A	SIO	PIO0	PIO1		USB VBUS DET
5	SPI0 CSn	UART1 RX	I2C0 SCL	PWM2 B	SIO	PIO0	PIO1		USB VBUS EN
6	SPI0 SCK	UART1 CTS	I2C1 SDA	PWM3 A	SIO	PIO0	PIO1		USB OVCUR DET
7	SPI0 TX	UART1 RTS	I2C1 SCL	PWM3 B	SIO	PIO0	PIO1		USB VBUS DET
8	SPI1 RX	UART1 TX	I2C0 SDA	PWM4 A	SIO	PIO0	PIO1		USB VBUS EN
9	SPI1 CSn	UART1 RX	I2C0 SCL	PWM4 B	SIO	PIO0	PIO1		USB OVCUR DET
10	SPI1 SCK	UART1 CTS	I2C1 SDA	PWM5 A	SIO	PIO0	PIO1		USB VBUS DET
11	SPI1 TX	UART1 RTS	I2C1 SCL	PWM5 B	SIO	PIO0	PIO1		USB VBUS EN
12	SPI1 RX	UART0 TX	I2C0 SDA	PWM6 A	SIO	PIO0	PIO1		USB OVCUR DET
13	SPI1 CSn	UART0 RX	I2C0 SCL	PWM6 B	SIO	PIO0	PIO1		USB VBUS DET
14	SPI1 SCK	UART0 CTS	I2C1 SDA	PWM7 A	SIO	PIO0	PIO1		USB VBUS EN
15	SPI1 TX	UART0 RTS	I2C1 SCL	PWM7 B	SIO	PIO0	PIO1		USB OVCUR DET
16	SPI0 RX	UART0 TX	I2C0 SDA	PWM0 A	SIO	PIO0	PIO1		USB VBUS DET
17	SPI0 CSn	UART0 RX	I2C0 SCL	PWM0 B	SIO	PIO0	PIO1		USB VBUS EN
18	SPI0 SCK	UART0 CTS	I2C1 SDA	PWM1 A	SIO	PIO0	PIO1		USB OVCUR DET
19	SPI0 TX	UART0 RTS	I2C1 SCL	PWM1 B	SIO	PIO0	PIO1		USB VBUS DET
20	SPI0 RX	UART1 TX	I2C0 SDA	PWM3 A	SIO	PIO0	PIO1	CLOCK SPINN	USB VBUS EN

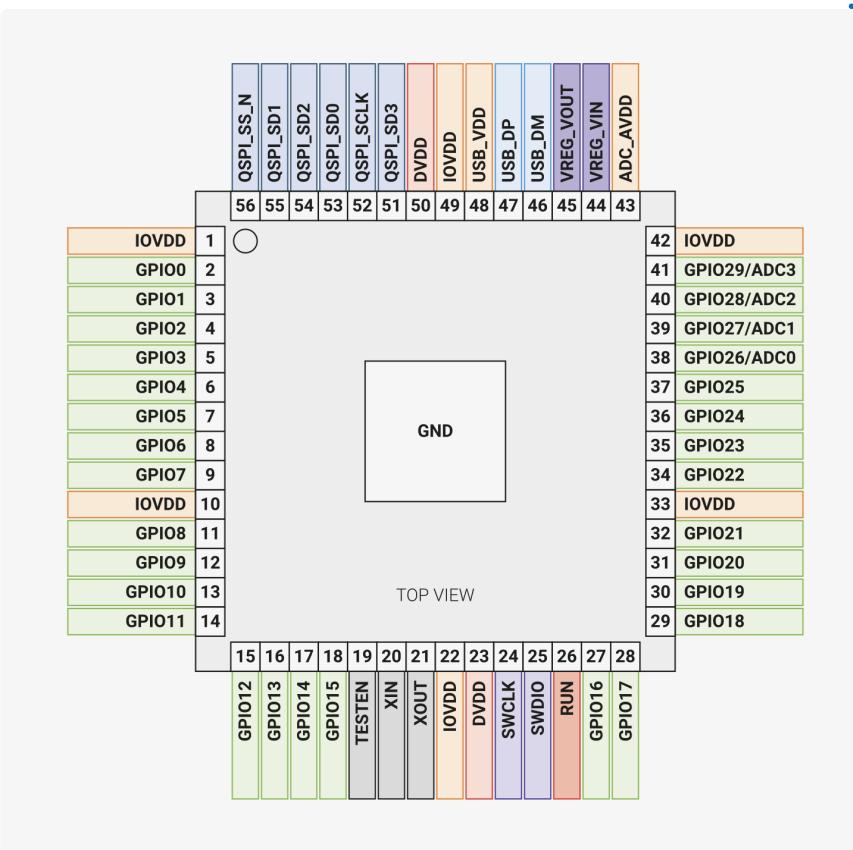



The Bus

that interconnects the cores with the peripherals

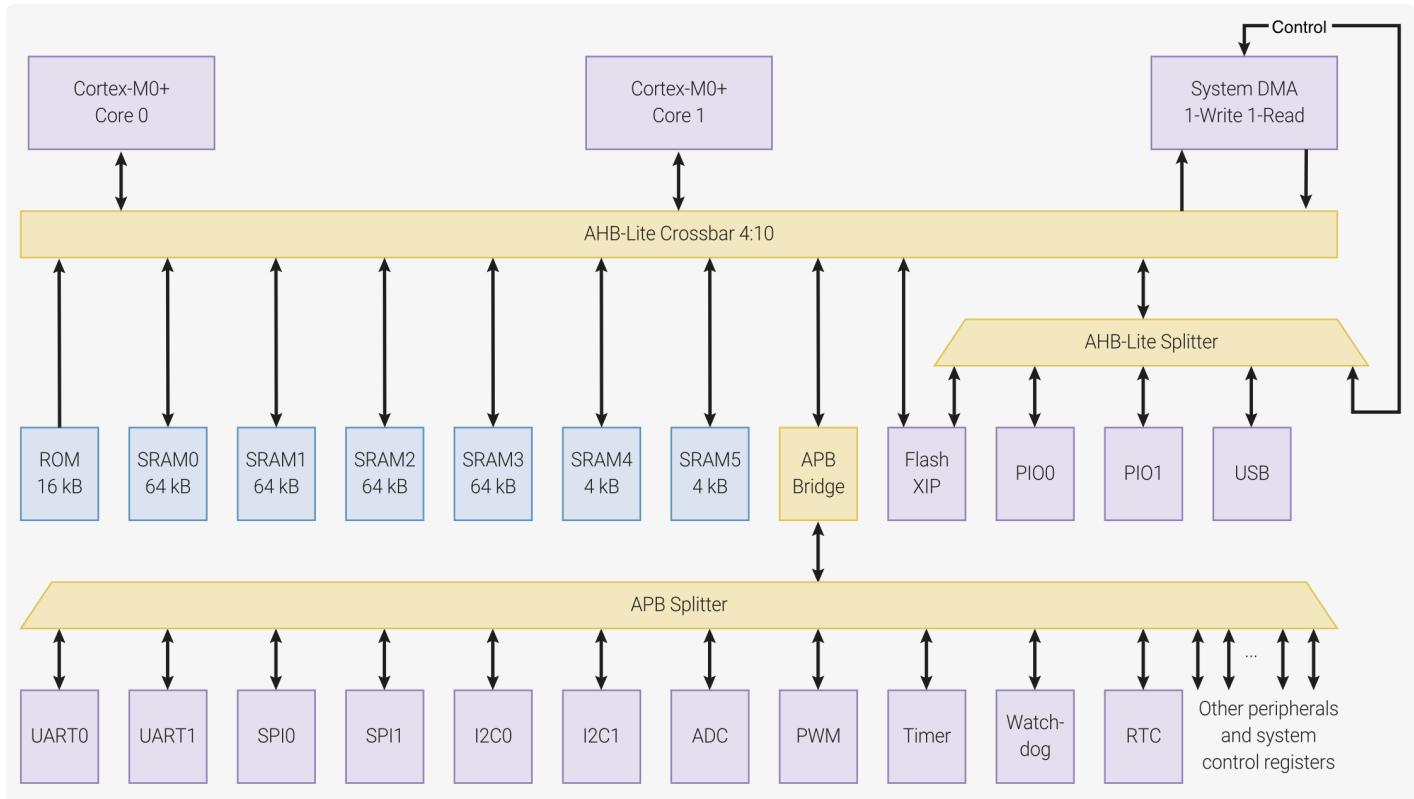



Conclusion

we discussed about

- How a processor functions
- Microcontrollers (MCU) / Microprocessors (CPU)
- Microcontroller architectures
- ARM Cortex-M
- RP2040