ES120 Spring 2018 – Midterm 2 Review

Bolei Deng, Matheus Fernandes

April 5, 2018

Document Disclaimer

The list provided below is by no means comprehensive and if you find anything missing that you would like to add please let me know. This review session has been created without prior knowledge of the problems in the exam and should not be treated in any way as hints to problems that will be asked in the exam. We will do our best to go over the topics of the course in detail however please do your own reading of chapters 1,2 and 3 as well as other topics not included in the book. If you find any typos please let me know and I will update and push a new version to Github.

You may also find my notes from a previous year helpful: http://fer.me/es120notes

This document was edited last on Thursday 5th April, 2018 at 12:49 Noon

Topics Covered Summary

4. Pure bending

- Geometry any cross section perpendicular to the axis of the member remains plane and remains perpendicular to the centroid line.
- Normal strain and normal stress normal strain $\epsilon_{xx}=-\frac{y}{\rho}$ and normal stress $\sigma_{xx}=-\frac{Ey}{\rho}$, where ρ is the radius of the beam. We also have $\epsilon_{xx}=-\frac{y}{c}\epsilon_m$ and $\sigma_{xx}=-\frac{y}{c}\sigma_m$, where ϵ_m and σ_m are maximum strain and stress in the beam.
- Force & Position centroid line the force in the beam can be calculated by integrating normal stress over the cross section: $F = \int \sigma_{xx} \, \mathrm{d}A$, if the material is within elastic range, $= -\frac{E}{\rho} \int y \, \mathrm{d}A$, where $Q = \int y \, \mathrm{d}A$ is called first moment (see Appendix A.2 in text book). Force in beam should be zero, that means Q = 0. Solving Q = 0 gives the position of centroid line.
- Moment moment in the beam is calculated by $M=-\int y\sigma_{xx}\,\mathrm{d}A=\frac{E}{\rho}\int y^2\,\mathrm{d}A$, where $I=\int y^2\,\mathrm{d}A$ is called the second moment (see Appendix A.3 for details). Now we have $M=\frac{EI}{\rho}$, and $\frac{1}{\rho}=\frac{M}{EI}$ (curvature moment relation).
- Connect stress with moment $\sigma_{xx}=-\frac{My}{I}$ and $\sigma_{m}=\frac{Mc}{I}$. Introducing elastic section modulus S=I/c, so that we have $\sigma_{m}=\frac{M}{S}$.
 Composite beams two materials with young's modulus E_{1} and E_{2} , let $n=E_{2}/E_{1}$, the resistance to
- Composite beams two materials with young's modulus E_1 and E_2 , let $n = E_2/E_1$, the resistance to bending of the bar would remain the same if both portions were made of the first material E_1 , provided that the width of each element of the lower portion were multiplied by the factor n. To obtain the stress σ_2 for material 2, we must multiply by n (see more on textbook page 230).
- Reinforced concrete beams (1) replace the total cross-sectional area of the steel bars A_s by an equivalent area nA_s ; (2) only the portion of the cross section in compression should be used in the transformed section (see textbook 233).
- Eccentric axial loading $\sigma_{xx}=(\sigma_{xx})_{centric}+(\sigma_{xx})_{bending}=rac{P}{A}-rac{My}{I}$

5. Analysis and Design of Beams for Bending

Shear and Bending moments diagrams – Drawing shear forces through a uniform beam. Remember
which direction is positive and which direction is negative. Note that the bending moment is the integral of the shear diagram, see Figure 5.7 of textbook.

• Relations among load shear and bending moment – The overall relationship of all of these are integrals. Specifically they are related through these equations: $-w = \frac{dV}{dx}$, $V = \frac{dM}{dx}$. In other words, they are the area under the curve of each other.

- Design of Prismatic Beams for Bending How to design beam cross-sections such that you achieve the most economical design possible to efficiently withstand specific load conditions. This is a procedure detailed on page 333 of textbook. The main idea of the procedure is to use bending moment diagrams in conjunction with the fact that the maximum stress occurs at the edge of the section to come up with a cross-section height that is appropriate for the loading conditions.
- Using Singularity Functions for Shear and Bending Moments Singularity functions are defined as $< x - a >^n = egin{cases} (x - a)^n & ext{for } n \geq a \\ 0 & ext{for } n < a \end{cases}$ They are useful to organize the discontinuities in the distribution of the formula of the formula of the distribution of the formula of the formula

tion of shear forces, bending moments and weights through the beam. It simplifies by not having to account for each part of the beam in separate equations, but instead condenses all information into one equation. This is also useful when performing the integrals from weight to shear forces to bending moments

Nonprismatic beams – Unlike primsmatic beams, we now relax the assumption that the beam crosssection is constant. Now the goal of this is to have a beam of constant strength for a particular loading condition and allow the cross section of the beam to be controlled via the loading conditions. This is very similar to prismatic beam design only now $S=rac{|M|}{\sigma_{\rm all}}$. This is covered in more detail in an example problem below.

9. Deflection of Beams


- Equation of the elastic curve $-\frac{d^2y}{dx^2}=\frac{M(x)}{EI}$.
 Integration $-y=\int_0^x dx \int_0^x \frac{M(x)}{EI} dx + C_1x + C_2$, where C_1 and C_2 are determined by boundary condi-
- Statically indeterminate beams superposition of deflection (see more in textbook on page 560).

Review Problems

Try to work these out on your own and solutions will be pushed to Github later.


Problem 1: Chapter 4 Review

A steel bar ($E_s=210$ GPa) and an aluminum bar ($E_a=70$ GPa) are bonded together to form the composite bar shown. Determine the maximum stress in (a) the aluminum, (b) the steel, when the bar is bent about a horizontal axis, with M=200 Nm.

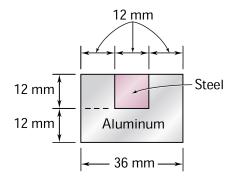

Problem 2: Chapter 5 Review

The beam AB, consisting of a cast-iron plate of uniform thickness b and length L, is to support the distributed load w(x) shown. (a) Knowing that the beam is to be of constant strength, express h in terms of x, L, and h_0 . (b) Determine the smallest value of h_0 if L=750 mm, b=30 mm, $w_0=300$ kN/m, and $\sigma_{all}=200$ MPa.

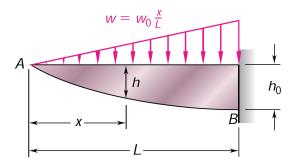

Problem 3: Chapter 9 Review

For the loading shown, determine (a) the equation of the elastic curve for the cantilever beam AB, (b) the deflection at the free end, (c) the slope at the free end.





Fig. P9.2

Problem 4: Chapter 9 Review

Knowing that beam AB is a W130 imes 23.8 rolled shape and that P=50 kN, L=1.25 m, and E=200 GPa, determine (a) the slope at A, (b) the deflection at C.



Problem 5: Chapter 9 Review

For the uniform beam shown, determine the reaction at each of the three supports.

