ES120 Spring 2018 – Final Exam Review

Bolei Deng, Matheus Fernandes, Kevin Tian

May 1, 2018

Document Disclaimer

The list provided below is by no means comprehensive and if you find anything missing that you would like to add please let me know. This review session has been created without prior knowledge of the problems in the exam and should not be treated in any way as hints to problems that will be asked in the exam. We will do our best to go over the topics of the course in detail however please do your own reading of chapters 1 through 11 (with the exception of chapter 8) as well as other topics not included in the book. If you find any typos please let me know and I will update and push a new version to Github.

Topics Covered Summary

Ch. 1 Introduction - Concepts of Stress

- Normal Stress $\sigma = \frac{P}{A}$, where A is perpendicular to direction of force
- Shearing Stress $\tau_{ave} = \frac{P}{A}$, where A is parallel to the direction of force Stresses under general loading conditions Determining the different components of stress from FBD such as σ_{xx}, σ_{yy} and au_{xy}

- Ultimate stress $\sigma_U = \frac{P_u}{A}$ Factor of Safety F.S.= $\frac{\text{ultimate load}}{\text{allowable load}} = \frac{\text{ultimate stress}}{\text{allowable stress}}$ Truss Systems How to efficiently solve a truss system using method of sections

Ch. 2 Stress and Strain - Axial Loading

- Strain $\epsilon = \frac{\delta}{L}$
- Elastic Stress-Strain Diagram Linear Relationship
- Plastic Stress-Strain Diagram Ideal plasticity with yield stress σ_Y
- True Stress and True Strain Difference between True and Engineering is the cross-sectional area. True stress uses A of deformed specimen.
- Hooke's Law $\sigma = E\epsilon$
- General Stress State Symmetric positive definite matrix of σ_{ij}
- Modulus of Elasticity E
- Elastic vs. Plastic Behavior of Material Necking, yield stress, rupture etc.
- Fatique In cases of cyclic loading, rupture will occur at a stress much lower than the static breaking strength; this phenomenon is called fatigue.
- Deformations of Members Under Axial Loading $\delta = \frac{PL}{AE}$
- Statically Indeterminate Problems Problems that cannot be determined using statics, but where we need to formulate a compatibility constraint. This occurs when we have more reaction forces to solve for than we have equations.
- **Problems involving temperature changes** Thermal strain $\epsilon_T = \alpha \Delta T$. This does not create a stress until it is statically constrained and as per superposition the thermal strain becomes mechanical strain.
- Superposition Method In statically indeterminate problems we remove redundant loads and apply superposition to solve for the different unknown loads.
- Thermal Stress in a Film on a Substrate This is the problem he worked out in class. My notes can be found here http://fer.me/l/pbFeFA
- Poisson's Ratio Relates lateral and axial strains through $u = -rac{\text{lateral strain}}{\text{axial strain}}$

- Multiaxial loading Loading through multiple axis and the relationship to strain
- Generalized Hooke's Law Generalized relationship between all stresses, strains and material parameters through equations of form $\epsilon_x=rac{1}{E}\left(\sigma_xu\sigma_yu\sigma_z
 ight)$, $\epsilon_y=rac{1}{E}\left(\sigma_yu\sigma_xu\sigma_z
 ight)$,

 $\epsilon_z = \frac{1}{E} \left(\sigma_z - \nu \sigma_y - \nu \sigma_x \right)$

- Plane Strain $\epsilon_z=0$
- Plane Stress $\sigma_z=0$
- Bulk Modulus Change of volume per unit volume described by $k = \frac{E}{3(1-2\nu)}$
- Shearing Strain Nondimensional deformation due to shearing stress γ_{xy}
- · Hooke's law for shearing stress and strain $au_{xy} = G \gamma_{xy}$
- Modulus of Rigidity Empirical value to relates shear stress to shear strain G. Analogous to modulus of elasticity E.
- Relation among $E, \nu, G \frac{E}{2G} = 1 + \nu$ Stress Concentrations $K = \frac{\sigma_{max}}{\sigma_{avg}}$
- Plastic Deformation Elastoplastic material stress strain curve. Gain intuition from this curve.
- Residual Stresses Stresses left in a part post plastic deformation

Ch. 3 Torsion

- Deformation in a Circular shaft $\gamma=rac{
 ho\phi}{L}$ Average shearing strain $\gamma=rac{
 ho}{c}\gamma_{max}$
- Torsion Stresses Shear stresses due to torsion $\tau = \frac{T\rho}{I}$ where J is the polar moment of inertia: http: //fer.me/git/es120notes/blob/master/Section4/J-list.pdf
- Torsion Stresses in the Elastic Range As long as the yield strength is not exceeded in any part of circualr shaft, the shearing stress in that shaft varies linearly with distance ρ from the axis of the shaft such that $au = \frac{\rho}{c} au_{max}$
- Angle of Twist in the Elastic Range $\phi=\frac{TL}{JG}$ Statically Indeterminate Shafts This is analogous to non-torsional statically indeterminate problems, where we need to find a compatibility equation to constrain the different reaction forces we cannot solve for using statics.
- · Design of Transmission Shafts This simply builds the relationship of what we have learned to power, frequency and torque, namely, $T = \frac{P}{2\pi f}$
- Stress concentration in circular shafts $-\tau_{max}=K\frac{Tc}{J}$, where $\frac{Tc}{J}$ is the stress computed for the smaller-diameter shaft and K is a tabulated stress-concentration factor obtained from an empirical curve.
- Plastic Deformation in Circular Shafts $R_t = \frac{T_u c}{I}$, where R_t is the modulus of rupture, and T_u is the ultimate torque of the shaft
- Circular shafts made of Elastoplastic Material $T=rac{4}{3}T_Y\left(1-rac{1}{4}rac{\phi_Y^3}{\phi^3}
 ight)$ is the relationship between the torque and the angle of twist of a elastoplastic shaft. There are also relationships derived in section 3.10 that discuss it in the form of the radius ρ . It is worth reviewing the derivation of this section in detail.
- Torsion of non-circular members Using tabulated values we can find an expression for maximum shear $au_{max}=rac{T}{c_1ab^2}$ and angle of twist $\phi=rac{TL}{c_2ab^3G}$ where a and b are the lengths of the sides and c_1 and c_2 are coefficients determined empirically. Note that for large values of a/b the coefficients become $c_1 = c_2 \approx \frac{1}{2}$
- Thin-walled hollow shafts Integrate through an idea of shear flow to obtain a relationship between an equivalent area and the torque such that we can concentrate the shear only on the thin amount of material to obtain $\tau=\frac{T}{2ta}$, where a is the area of the region from the centerline of the thin-wall to the center of the shaft
- Dynamics Torsion Problems What is the frequency of a rods vibration if twisted and allowed to freely vibrate torsionally. This can be solved to be a wave equation of form $\frac{\partial^2 \rho}{\partial t^2} = c^2 \frac{\partial^2 \rho}{\partial x^2}$. My notes on this matter can be found here: http://fer.me/l/Nh1grt

Ch. 4 Pure bending

- Geometry any cross section perpendicular to the axis of the member remains plane and remains perpendicular to the centroid line.
- Normal strain and normal stress normal strain $\epsilon_{xx}=-rac{y}{
 ho}$ and normal stress $\sigma_{xx}=-rac{Ey}{
 ho}$, where ho is the radius of the beam. We also have $\epsilon_{xx}=-rac{y}{c}\epsilon_m$ and $\sigma_{xx}=-rac{y}{c}\sigma_m$, where ϵ_m and σ_m are maximum strain and stress in the beam.

• Force & Position centroid line - the force in the beam can be calculated by integrating normal stress over the cross section: $F = \int \sigma_{xx} dA$, if the material is within elastic range, $= -\frac{E}{a} \int y dA$, where $Q = \int y \, dA$ is called first moment (see Appendix A.2 in text book). Force in beam should be zero, that means Q = 0. Solving Q = 0 gives the position of centroid line.

- Moment moment in the beam is calculated by $M=-\int y\sigma_{xx}\,\mathrm{d}A=rac{E}{
 ho}\int y^2\,\mathrm{d}A$, where $I=\int y^2\,\mathrm{d}A$ is called the second moment (see Appendix A.3 for details). Now we have $M = \frac{EI}{a}$, and $\frac{1}{a} = \frac{M}{EI}$ (curvature - moment relation).
- Connect stress with moment $\sigma_{xx} = -\frac{My}{I}$ and $\sigma_m = \frac{Mc}{I}$. Introducing elastic section modulus S=I/c, so that we have $\sigma_m=rac{M}{S}$.
- Composite beams two materials with young's modulus E_1 and E_2 , let $n=E_2/E_1$, the resistance to bending of the bar would remain the same if both portions were made of the first material E_1 , provided that the width of each element of the lower portion were multiplied by the factor n. To obtain the stress σ_2 for material 2, we must multiply by n (see more on textbook page 230).
- Reinforced concrete beams (1) replace the total cross-sectional area of the steel bars A_s by an equivalent area nA_s ; (2) only the portion of the cross section in compression should be used in the transformed section (see textbook 233).
- Eccentric axial loading $\sigma_{xx}=(\sigma_{xx})_{centric}+(\sigma_{xx})_{bending}=rac{P}{A}-rac{My}{I}$

Ch. 5 Analysis and Design of Beams for Bending

- · Shear and Bending moments diagrams Drawing shear forces through a uniform beam. Remember which direction is positive and which direction is negative. Note that the bending moment is the integral of the shear diagram, see Figure 5.7 of textbook.
- Relations among load shear and bending moment The overall relationship of all of these are integrals. Specifically they are related through these equations: $-w = \frac{dV}{dx}$, $V = \frac{dM}{dx}$. In other words, they are the area under the curve of each other.
- Design of Prismatic Beams for Bending How to design beam cross-sections such that you achieve the most economical design possible to efficiently withstand specific load conditions. This is a procedure detailed on page 333 of textbook. The main idea of the procedure is to use bending moment diagrams in conjunction with the fact that the maximum stress occurs at the edge of the section to come up with a cross-section height that is appropriate for the loading conditions.
- · Using Singularity Functions for Shear and Bending Moments Singularity functions are defined as $< x - a >^n =$ $\begin{cases} (x - a)^n & \text{for } n \ge a \\ 0 & \text{for } n < a \end{cases}$ They are useful to organize the discontinuities in the distribu-

tion of shear forces, bending moments and weights through the beam. It simplifies by not having to account for each part of the beam in separate equations, but instead condenses all information into one equation. This is also useful when performing the integrals from weight to shear forces to bending

Nonprismatic beams - Unlike primsmatic beams, we now relax the assumption that the beam crosssection is constant. Now the goal of this is to have a beam of constant strength for a particular loading condition and allow the cross section of the beam to be controlled via the loading conditions. This is very similar to prismatic beam design only now $S=rac{|M|}{\sigma_{
m all}}$. This is covered in more detail in an example problem below.

Ch. 6 Shearing Stresses in Beams and Thin-Walled Members

add here – add here

Ch. 7 Transformation of Stress and Strain

· add here - add here

Ch. 9 Deflection of Beams

- Equation of the elastic curve $-\frac{d^2y}{dx^2}=\frac{M(x)}{EI}$.
 Integration $-y=\int_0^x dx \int_0^x \frac{M(x)}{EI} dx + C_1x + C_2$, where C_1 and C_2 are determined by boundary condi-
- Statically indeterminate beams superposition of deflection (see more in textbook on page 560).
- Beam vibrations Know the governing PDE and the general solutions for varying boundary conditions. Read lecture notes on this and also notes posted to Canvas.

• add here – add here

Ch. 11 Energy Methods

• add here – add here

Review Problems

Try to work these out on your own and solutions will be pushed to Github on Sunday, April 4th, 2018.

Problem 1:

Knowing that the torsional spring at B is of constant K and that the bar AB is rigid, determine the critical load P_{cr} .

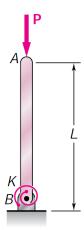


Figure 1

Problem 2:

Two rigid bars AC and BC are connected as shown to a spring of constant k. Knowing that the spring can act in either tension or compression, determine the critical load P_{cr} for the system.

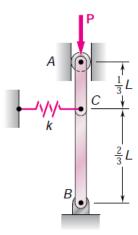


Figure 2

Problem 3:

A frame consists of four L-shaped members connected by four torsional springs, each of constant K. Knowing that equal loads P are applied at points A and D as shown, determine the critical value P_{cr} of the loads applied to the frame.

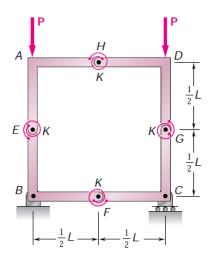


Figure 3

Problem 4:

Determine (a) the critical load for the steel strut, (b) the dimension d for which the aluminum strut will have the same critical load. (c) Express the weight of the aluminum strut as a percent of the weight of the steel strut.

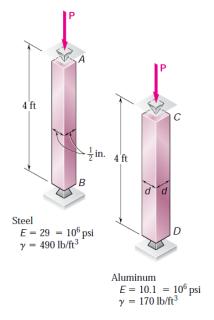


Figure 4

Problem 5:

Knowing that a factor of safety of 2.6 is required, determine the largest load P that can be applied to the structure shown. Use E=200 GPa and consider only buckling in the plane of the structure.

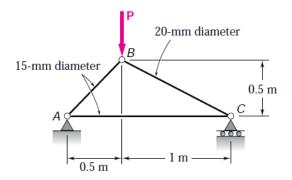


Figure 5

Problem 6:

A 30-in. length of aluminum pipe of cross-sectional area 1.85 in² is welded to a fixed support A and to a rigid cap B. The steel rod EF, of 0.75-in. diameter, is welded to cap B. Knowing that the modulus of elasticity is 29×10^6 psi for the steel and 10.6×10^6 psi for the aluminum, determine (a) the total strain energy of the system when P = 10 kips, (b) the corresponding strain-energy density of the pipe CD and in the rod EF.

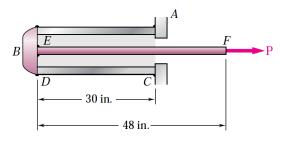


Figure 6

Problem 7:

In the truss shown, all members are made of the same material and have the uniform cross-sectional area indicated. Determine the strain energy of the truss when the load P is applied.

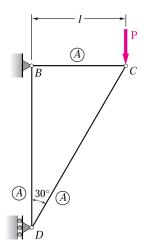


Figure 7

Problem 8:

The ship at A has just started to drill for oil on the ocean floor at a depth of 5000 ft. The steel drill pipe has an outer diameter of 8 in. and a uniform wall thickness of 0.5 in. Knowing that the top of the drill pipe rotates through two complete revolutions before the drill bit at B starts to operate and using $G = 11.2 \times 10^6$ psi, determine the maximum strain energy acquired by the drill pipe.

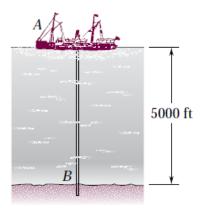


Figure 8

Problem 9:

The thin-walled hollow cylindrical member AB has a noncircular cross section of nonuniform thickness. Using the expression given in book Eq. (3.53) $au=\frac{T}{2ta}$, and the expression for the strain-energy density given in book Eq. (11.19) $u=\frac{\tau^2}{2G}$, show that the angle of twist of member AB is

$$\mathbf{f} = \frac{TL}{40^2 G} \oint \frac{ds}{t}$$

where ds is an element of the center line of the wall cross section and A is the area enclosed by that center line.

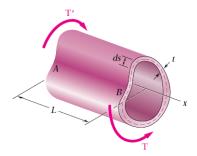


Figure 9

Problem 10:

For the prismatic beam shown, determine the slope at point \boldsymbol{B} .

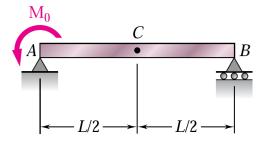


Figure 10

Problem 11:

Knowing that the eight members of the indeterminate truss shown have the same uniform cross-sectional area, determine the force in member AB.

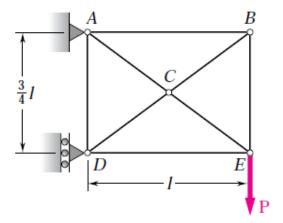


Figure 11