

# DSP Function Usage Guide for iCE40 Devices

June 2016 Technical Note TN1295

#### Introduction

This technical note discusses DSP function usage for the iCE40™ device family, specifically iCE40 Ultra™ and iCE40 UltraPlus™. It is intended to be used as a guide to various modes and how to configure them for these devices.

The DSP block, referred to as SB\_MAC16 primitive in this guide, is an embedded block available in the iCE40 Ultra and iCE40 UltraPlus devices. This block can be configured into combination of following functional units by selecting appropriate parameter values.

- Single 16x16 Multiplier (generating 32-bit product output).
- Two independent 8x8 Multiplier (generating two independent 16-bit product output).
- · Single 32-bit Accumulator.
- Two independent 16-bit Accumulator.
- Single 32-bit Adder/ Subtractor.
- Two independent 16-bit Adder/ Subtractor.
- Single 32-bit Multiply-Add/ Multiply-Sub.
- Two independent 16-bit Multiply-Add/ Multiply-Sub.


#### DSP Primitive – SB\_MAC16

The SB\_MAC16 primitive is the dedicated configurable DSP block for the iCE40 Ultra and iCE40 UltraPlus devices. This primitive can be configured into a multiplier, adder, subtractor, accumulator, multiply-add and multiply-sub by setting up various instance parameters.

#### **SB MAC16 Primitive**

Figure 1 provides an overview of the SB\_MAC16 primitive with various inputs and outputs.

Figure 1. SB\_MAC16 DSP Primitive Interface Diagram

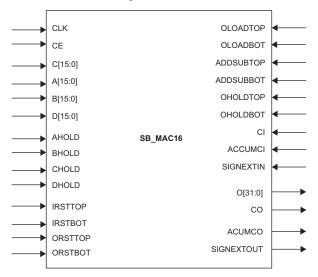

© 2016 Lattice Semiconductor Corp. All Lattice trademarks, registered trademarks, patents, and disclaimers are as listed at www.latticesemi.com/legal. All other brand or product names are trademarks or registered trademarks of their respective holders. The specifications and information herein are subject to change without notice.



The inputs and outputs of the functional units can be configured independently into,


- · Registered Inputs/ Outputs
  - The inputs to the functional units can be either registered or unregistered.
  - The outputs from the functional units can be either registered or unregistered.
  - The intermediate multiplier outputs can be pipelined for faster clock performance.
- Signed/ Unsigned Inputs
  - Inputs to the multiplier block can be either a signed or unsigned number.

These various options and their usage is discussed in more details in the sections that follow.?

#### SB\_MAC16 Functional Diagram

Figure 2 shows the functional model of the SB\_MAC16 primitive. The variety of functions can be implemented in this block by interfacing with portions required of the functional model that are needed for these functions.

Figure 2. SB\_MAC16 DSP Functional Model

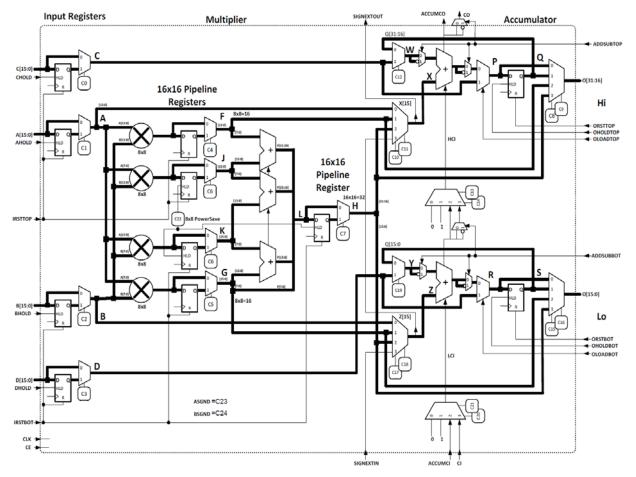



#### **SB\_MAC16 Interface Ports**

The following table, Table 1, provides a list of interface ports available in SB\_MAC16 and their functional description. Something of importance to note in this table is the "Default Values" of these ports; as it will be useful in determining how to connect the ports that are not used in a particular function during instantiation. This is discussed in detail in the sections that follow.

Table 1. SB\_MAC16 Ports and their Functional Descriptions

Port Name Direction Function		Functional Description	Default Values			
CLK	Input	Clock Input. Applies to all clocked elements				
CE	Input	Clock Enable Input. Applies to all clocked elements	1			
A[7:0]	Input	Lower 8-Bits data of Input A	8'b0			
A[15:8]	Input	Upper 8-Bits data of Input A	8'b0			
		Register A Hold Input.Control data flow input Register A				
AHOLD	Input	0: Load	0			
		1: Hold				
B[7:0]	Input	Lower 8-Bits data of Input B	8'b0			
B[15:8]	Input	Upper 8-Bits data of Input B	8'b0			
		Register B Hold Input. Control data flow input Register B				
BHOLD	Input	0: Load	0			
		1: Hold				
C[15:0]	Input	16-Bits data of Input C	16'b0			
		Register C Hold Input. Control data flow input Register C				
CHOLD	Input	0: Load	0			
		1: Hold				
D[15:0]	Input	16-Bits data of Input D	16'b0			
		Register D Hold Input. Control data flow input Register D				
DHOLD	Input	0: Load	0			
		1: Hold				
	Input	Reset Input to Registers A and C. Also resets upper 8x8 Multiplier Output Register (8x8 MAC Pipeline Register)				
IRSTTOP		0: Not reset	0			
		1: Reset				
	Input	Reset Input to top Accumulator Register (for Adder/Subtractor, Accumulator, and MAC functions)				
ORSTTOP		0: Not reset	0			
		1: Reset				
OLOADTOP	Input	Load Control Input to top Accumulator Register (initialize on MAC function)				
		0: Not load	0			
		1: Load data from Register/Input C				
ADDSUBTOP	Input	Add/Subtract Control Input to top Accumulator				
		0: Add	0			
		1: Subtract				
		Top Accumulator Output Register Hold Input. Control data flow into the register.	_			
OHOLDTOP	Input	0: Load	0			
	l	1: Hold	l			



# **DSP Function Usage Guide for iCE40 Devices**

Port Name	Direction	Functional Description	Default Values	
OUTPUT[31:16]	Output	Upper 16 bits of Output		
IRSTBOT	Input	Reset Input to Registers A and C. Also resets upper 8x8 Multiplier Output Register (8x8 MAC Pipeline Register) and the 16x16 Multiplier Output Register (16x16 MAC Pipeline Register)	0	
		0: Not reset	1	
		1: Reset		
		Reset Input to top Accumulator Register (for Adder/Subtractor, Accumulator, and MAC functions)	_	
ORSTBOT	Input	0: Not reset	0	
		1: Reset		
	Input	Load Control Input to bottom Accumulator Register (initialize on MAC function)	_	
OLOADBOT		0: Not load	0	
		1: Load data from Register/Input D		
	Input	Add/Subtract Control Input to bottom Accumulator		
ADDSUBBOT		0: Add	0	
Ī		1: Subtract		
	Input	Bottom Accumulator Output Register Hold Input. Control data flow into the register.		
OHOLDBOT		0: Load	0	
		1: Hold		
OUTPUT[15:0]	Output	Lower 16 bits of Output		
CI	Input	Cascaded Add/Sub Carry Input from previous DSP block	0	
CO	Output	Cascaded Add/Sub Carry Output to next DSP block		
ACCUMCI	Input	Cascaded Accumulator Carry Input from previous DSP block	0	
ACCUMCO	Output	Cascaded Accumulator Carry Output to previous DSP block		
SIGNEXTIN	Input	Sign Extension Input from previous DSP block	0	
SIGNEXTOUT	Output	Sign Extension Output to next DSP block		



#### **SB\_MAC16 Parameters**

The parameter table below, Table 2, shows a list of parameters to configure the SV\_MAC16 block. This table also maps the parameter to the configuration bits shows in the SB\_MAC16 Functional Diagram in Figure 2.

Table 2. SB\_MAC16 Parameter Description

Parameter Name	Configuration Bit(s)	Parameter Description & Allowed Values				
		Input Clock Polarity:				
NEG_TRIGGER	-	0 = rising edge	0			
		1 = falling edge				
		Input C Register Control:				
C_REG	C0	0: Not registered	0			
		1: Registered				
		Input A Register Control:				
A_REG	C1	0: Not registered	0			
		1: Registered				
		Input B Register Control:				
B_REG	C2	0: Not registered	0			
		1: Registered				
		Input D Register Control:				
D_REG	С3	0: Not registered	0			
		1: Registered				
		Top 8x8 Multiplier Output Register Control (Pipeline Register for MAC):				
TOP_8x8_MULT_REG	C4	0: Not registered	0			
		1: Registered				
		Bottom 8x8 Multiplier Output Register Control (Pipeline Register for MAC):				
BOT_8x8_MULT_REG	C5	0: Not registered	0			
		1: Registered				
	1 C6	16x16 Multiplier Pipeline Register Control:				
PIPELINE_16X16_MULT_REG1		0: Not registered	0			
		1: Registered				
		16x16 Multiplier Output Register Control (Pipeline Register for MAC):				
PIPELINE_16x16_MULT_REG2	C7	0: Not registered	0			
		1: Registered				
	C9, C8	Top Output Select:				
		00: Adder/Subtractor, not registered				
TOPOUTPUT_SELECT		01: Adder/Subtractor, registered	00			
_		10: 8x8 Multiplier				
		11: 16x16 Multiplier				
		Input X of upper Adder/Subtractor:				
		00: Input A				
TOPADDSUB_LOWERINPUT	C11, C10	01: 8x8 Multiplier Output at Top	00			
13.7.0000D_LOVVEITING OT	011,010	10: 16x16 Multiplier upper 16-bit outputs	50			
		11: Sign extension from Z15 (lower Adder/Subtractor input)				



# **DSP Function Usage Guide for iCE40 Devices**

Parameter Name	Configuration Parameter Name Bit(s) Parameter Description & Allowed Values		
		Input W of upper Adder/Subtractor:	
TOPADDSUB_UPPERINPUT	C12	0: Output of Adder/Subtractor Output Register (Accumulation Function)	0
		1: Input C	
		Carry Input Select, Top Adder/Subtractor:	
		00: Constant 0	
TOPADDSUB_CARRYSELECT	C14, C13	01: Constant 1	00
		10: Cascade ACCUMOUT from lower Adder/Subtractor	
		11: Cascade CO from lower Adder/Subtractor	
		Bottom Output Select:	
		00: Adder/Subtractor, not registered	
BOTOUTPUT_SELECT	C16, C15	01: Adder/Subtractor, registered	00
		10: 8x8 Multiplier	
		11: 16x16 Multiplier	
		Input Z of upper Adder/Subtractor:	
		00: Input B	
BOTADDSUB_LOWERINPUT	C18, C17	01: 8x8 Multiplier Output at Top	00
		10: 16x16 Multiplier upper 16-bit outputs	
		11: Sign extension from SIGNEXTIN	
		Input Y of upper Adder/Subtractor:	
BOTADDSUB_UPPERINPUT	C19	0: Output of Adder/Subtractor Output Register (Accumulation Function)	0
		1: Input D	
		Carry Input Select, Bottom Adder/Subtractor:	
		00: Constant 0	
BOTADDSUB_CARRYSELECT	C21, C20	01: Constant 1	00
		10: Cascade ACCUMOUT from lower DSP block	
		11: Cascade CO from lower DSP block	
		Select 8x8 Multiplier Mode (Power Saving):	
MODE_8x8	C22	0: Not Selected	
		1: Selected	0> 1
		Input A Sign:	
A_SIGNED	C23	0: Input A is un-signed	
		1: Input A is signed	0
		Input B Sign:	
B_SIGNED	C24	0: Input B is un-signed	
		1: Input B is signed	0



### Implementing DSP Function in iCE40 Ultra and iCE40 UltraPlus Devices

There are two ways to implement the DSP function in the iCE40 Ultra and iCE40 UltraPlus devices:

- Inferencing DSP functions
  - This method requires users to define the functional behavior of the DS function they wish to implement, and the tools map and place it to the DSP block SB\_MAC16.
- Instantiating DSP Primitive SB\_MAC16
  - This method involves the instantiating the SB\_MAC16 primitive in the user code. The ports discussed in the above sections need to be port-mapped for each function, or tied off to their default value. The detailed discussion of the methodology is discussed below.

Both these methods are discussed in details in following sections.

#### **Inferencing DSP Functions**

This method involves defining desired DSP function as a behavioral model in the standard HDL. The code does not requires you to know the details of the DSP primitive, and is inferred automatically based on the code.

Here is an example of inferencing a 32-bit Accumulator with asynchronous data input and synchronous (registered) data out.

# 32-bit Accumulator with Async Data In & Sync Data Out

Verilog

```
module accum32 syncdataout (clk, accumdata syncout, dataAB);
      input clk;
     input
              [31:0]
                        dataAB;
      output
               [31:0]
                        accumdata syncout;
               [31:0]
                        accumdata_syncout;
      reg
      always@(posedge clk)
     begin
        accumdata_syncout <= accumdata_syncout + dataAB ;</pre>
      is
      endmodule
VHDL
     LIBRARY ieee;
     USE ieee.std logic 1164.all;
      USE ieee.std_logic_unsigned.all;
     ENTITY accum32_syncdataout IS
      PORT (
      clk : IN STD LOGIC;
      accumdata syncout : OUT STD LOGIC VECTOR(31 DOWNTO 0);
      dataAB : IN STD LOGIC VECTOR (31 DOWNTO 0)
      );
      END accum32 syncdataout;
      ARCHITECTURE arch OF accum32 syncdataout IS
```



```
-- Declare intermediate signals for referenced outputs

SIGNAL accumdata_syncout_xhdl0 : STD_LOGIC_VECTOR(31 DOWNTO 0);

BEGIN

-- Drive referenced outputs

accumdata_syncout <= accumdata_syncout_xhdl0;

PROCESS (clk)

BEGIN

IF (clk'EVENT AND clk = '1') THEN

accumdata_syncout_xhdl0 <= accumdata_syncout_xhdl0 + dataAB;

END IF;

END PROCESS;
```

Another example is of an 8x8 multiplier, with both inputs and outputs registered.

# 8x8 Multiplier, Unsigned with Sync Data In & Data Out Verilog

```
module mult8x8_inoutreg_unsigned (clk,prod, a_in, b_in);
input [7:0]
                  a in;
input
        [7:0]
                  b_in;
input
                  clk;
output [15:0]
                  prod;
reg
         [15:0]
                  prod;
         [7:0]
req
                  a_reg, b_reg;
wire
         [15:0]
                  mult_out;
assign mult_out = a_reg * b_reg;
always@(posedge clk)
begin
  a_reg <= a_in;
  b_reg <= b_in;</pre>
  prod <= mult_out;</pre>
end
endmodule
```



VHDL

```
LIBRARY ieee;
USE ieee.std_logic_1164.all;
USE ieee.std logic unsigned.all;
ENTITY mult8x8_inoutreg_unsigned IS
PORT (
clk: IN STD_LOGIC;
prod : OUT STD LOGIC VECTOR(15 DOWNTO 0);
a_in : IN STD_LOGIC_VECTOR(7 DOWNTO 0);
b_in : IN STD_LOGIC_VECTOR(7 DOWNTO 0)
);
END mult8x8 inoutreg unsigned;
ARCHITECTURE arch OF mult8x8_inoutreg_unsigned IS
SIGNAL a_reg : STD_LOGIC_VECTOR(7 DOWNTO 0);
SIGNAL b_reg : STD_LOGIC_VECTOR(7 DOWNTO 0);
SIGNAL mult_out : STD_LOGIC_VECTOR(15 DOWNTO 0);
BEGIN
mult_out <= ("00000000" & a_reg * b_reg);
PROCESS (clk)
BEGIN
IF (clk'EVENT AND clk = '1') THEN
a_reg <= a_in;
b_reg <= b_in;</pre>
prod <= mult_out;</pre>
END IF;
END PROCESS;
END arch;
```

#### Instantiation DSP Primitive – SB\_MAC16

In order to implement various function in the DSP block, users are required to instantiate the SB\_MAC16 block in their top level HDL code. Different combination of ports are connected to the user logic for various functions.

Table 3 provides a summary of port connections in instantiation based on functions that are required to be implemented. The column on the left provides various signals that are needed to be port mapped during HDL instantiation. The top row provides various functions that can be implemented. The cross references cells indicate whether the port connection is Signal or Default.

The term "Signal" means that this is one of the signals that user will have to port map to, while implementing the function. The "Default" implies that this port has to be connected to its default value during port mapping.

The default value of a port can be referenced from Table 1.

In certain cases, the DSP block can have two independent functions, for example two 8x8 multipliers, generating two 16-bit outputs. Such cases are referenced as Top and Bottom Signals in the table below. In such cases, one of the 8x8 multipliers can be implemented using Top Signals, and other using Bottom Signals.



Table 3. Instantiation Guide

Port Name	Input/ Output	8x8 Multiplier	16x16 Multiplier	16x16 Accumulate	32x32 Accumulate	16x16 Adder / Subtractor	32x32 Adder / Subtractor	8x8 MAC	16x16 MAC
CLK	Input	Signal	Signal	Signal	Signal	Signal	Signal	Signal	Signal
CE	Input	Signal	Signal	Signal	Signal	Signal	Signal	Signal	Signal
A[7:0]	Input	Bottom	Signal	Тор	Signal	Тор	Signal	Bottom	Signal
A[15:8]	Input	Тор	Signal	Тор	Signal	Тор	Signal	Тор	Signal
AHOLD	Input	Signal	Signal	Top -> Signal	Signal	Top -> Signal	Signal	Signal	Signal
B[7:0]	Input	Bottom	Signal	Bottom	Signal	Bottom	Signal	Bottom	Signal
B[15:8]	Input	Тор	Signal	Bottom	Signal	Bottom	Signal	Тор	Signal
BHOLD	Input	Signal	Signal	Bottom - Signal	Signal	Bottom - Signal	Signal	Signal	Signal
C[15:0]	Input	Default	Default	Default -> Top	Default -> Signal	Тор	Default -> Signal	Тор	Signal
CHOLD	Input	Default	Default	Default -> Top	Default -> Signal	Тор	Default -> Signal	Тор	Signal
D[15:0]	Input	Default	Default	Default -> Bottom	Default -> Signal	Bottom	Default -> Signal	Bottom	Signal
DHOLD	Input	Default	Default	Default -> Bottom	Default -> Signal	Bottom	Default -> Signal	Bottom	Signal
IRSTTOP	Input	Top -> Signal	Signal	Top -> Signal	Signal	Top -> Signal	Signal	Top -> Signal	Signal
ORSTTOP	Input	Тор	Signal	Тор	Signal	Тор	Signal	Тор	Signal
OLOADTOP	Input	Default	Default	Signal	Signal	0	0	Signal	Signal
ADDSUBTOP	Input	Default	Default	0	0	0 = Add	0 = Add	0	0
						1 = Sub	1 = Sub		
OHOLDTOP	Input	Top -> default	Signal - default	Тор	Signal	Тор	Signal	Тор	Signal
OUTPUT[31:16]	Output	Тор	Signal	Тор	Signal	Тор	Signal	Тор	Signal
IRSTBOT	Input	Bottom -> Signal	Signal	Bottom -> Signal	Signal	Bottom -> Signal	Signal	Bottom -> Signal	Signal
ORSTBOT	Input	Bottom	Signal	Bottom	Signal	Bottom	Signal	Bottom	Signal
OLOADBOT	Input	Default	Default	Signal	Signal	0	0	Signal	Signal
ADDSUBBOT	0 = Add	0 = Add	0	0	0 = Add	0 = Add	0 = Add	0	0
	1 = Sub	1 = Sub			1 = Sub	1 = Sub	1 = Sub		
OHOLDBOT	Input	Bottom -> default	Signal -> default	Bottom	Signal	Bottom	Signal	Bottom	Signal
OUTPUT[15:0]	Output	Bottom	Signal	Bottom	Signal	Bottom	Signal	Bottom	Signal
CI	Input	Default	Default	Default	Default	Bottom	Signal	Default	Default
CO	Output	Default	Default	Default -> Top	Default -> Signal	Тор	Signal	Default -> Top	Default -> Signal
ACCUMCI	Input	Default	Default	Bottom	Signal	Default -> Bottom	Default -> Signal	Default -> Bottom	Default -> Signal
ACCUMCO	Output	Default	Default	Тор	Signal	Default -> Top	Default -> Signal	Default -> Top	Default -> Signal
SIGNEXTIN	Input	Default	Default	Bottom	Signal	Bottom	Signal	Default -> Bottom	Default -> Signal
SIGNEXTOUT	Output	Default	Default	Тор	Signal	Тор	Signal	Default -> Top	Default -> Signal



As an example, let us look at instantiation sections for 16-bit Accumulator with synchronous data out (registered outputs). The example below shows the port mapping and parameters that need to be set. Setting the ports and instantiations will be based on the tables discussed in the sections above.

# Accumulator 16x2 Sync Data Out Verilog

```
SB_MAC16 i_sbmac16
 ( // port interfaces
 .A(A),
 .B(B),
 .C(C),
 .D(D),
 .0(0)
 .CLK(CLK),
 .CE(CE),
 .IRSTTOP (IRSTTOP),
 .IRSTBOT (IRSTBOT),
 .ORSTTOP (ORSTTOP),
 .ORSTBOT (ORSTBOT) ,
 .AHOLD (AHOLD) ,
 .BHOLD (BHOLD) ,
 .CHOLD (CHOLD) ,
 .DHOLD (DHOLD) ,
 .OHOLDTOP (OHOLDTOP) ,
 .OHOLDBOT (OHOLDBOT) ,
 .OLOADTOP (OLOADTOP),
 .OLOADBOT (OLOADBOT) ,
 . ADDSUBTOP (ADDSUBTOP),
 .ADDSUBBOT (ADDSUBBOT),
 .CO(CO),
 .CI(CI),
 .ACCUMCI(),
 .ACCUMCO(),
 .SIGNEXTIN(),
 .SIGNEXTOUT()
 );
 defparam i sbmac16.NEG TRIGGER = 1'b0;
 defparam i_sbmac16.C_REG = 1'b0;
 defparam i_sbmac16.A_REG = 1'b0;
 defparam i_sbmac16.B_REG = 1'b0;
 defparam i_sbmac16.D_REG = 1'b0;
 defparam i_sbmac16.TOP_8x8_MULT_REG = 1'b0;
 defparam i sbmac16.BOT 8x8 MULT REG = 1'b0;
 defparam i_sbmac16.PIPELINE_16x16_MULT_REG1 = 1'b0;
 defparam i_sbmac16.PIPELINE_16x16_MULT_REG2 = 1'b0;
 defparam i sbmac16.TOPOUTPUT SELECT = 2'b01; // accum register output at 0[31:16]
 defparam i sbmac16.TOPADDSUB LOWERINPUT = 2'b00;
 defparam i sbmac16.TOPADDSUB UPPERINPUT = 1'b0;
 defparam i_sbmac16.TOPADDSUB_CARRYSELECT = 2'b00;
```



```
defparam i_sbmac16.BOTOUTPUT_SELECT = 2'b01; // accum regsiter output at 0[15:0]
       defparam i_sbmac16.BOTADDSUB_LOWERINPUT = 2'b00;
       defparam i_sbmac16.BOTADDSUB_UPPERINPUT = 1'b0;
       defparam i_sbmac16.BOTADDSUB_CARRYSELECT = 2'b00;
       defparam i_sbmac16.MODE_8x8 = 1'b0;
       defparam i_sbmac16.A_SIGNED = 1'b0;
       defparam i_sbmac16.B_SIGNED = 1'b0;
         //defparam i_sbmac16.BOTOUTPUT_SELECT = 2'b01 ;// accum regsiter output at O[15:0].
         //defparam i_sbmac16.TOPOUTPUT_SELECT = 2'b01 ;// accum register output at 0[31:16]
      endmodule
VHDL
      i sbmac16: SBMAC16
      GENERIC MAP (
       NEG TRIGGER => 1'b0,
       C_REG => 1'b0,
       A_REG => 1'b0,
       B_REG \Rightarrow 1'b0,
       D_REG => 1'b0,
       TOP_8x8_MULT_REG => 1'b0,
       BOT_8x8_MULT_REG => 1'b0,
       PIPELINE_16x16_MULT_REG1 => 1'b0,
       PIPELINE_16x16_MULT_REG2 => 1'b0,
       TOPOUTPUT_SELECT => 2'b01, -- accum register output at 0[31:16]
       TOPADDSUB_LOWERINPUT => 2'b00,
       TOPADDSUB_UPPERINPUT => 1'b0,
       TOPADDSUB_CARRYSELECT => 2'b00,
       BOTOUTPUT_SELECT => 2'b01, -- accum regsiter output at 0[15:0]
       BOTADDSUB_LOWERINPUT => 2'b00,
       BOTADDSUB_UPPERINPUT => 1'b0,
       BOTADDSUB_CARRYSELECT => 2'b00,
       MODE_8x8 \Rightarrow 1'b0,
       A_SIGNED => 1'b0,
       B_SIGNED => 1'b0
)
       PORT MAP ( -- port interfaces
       A \Rightarrow A
       B \Rightarrow B
       C => C,
       D \Rightarrow D,
       0 => 0,
       CLK => CLK,
       CE => CE,
       IRSTTOP => IRSTTOP,
```



```
IRSTBOT =>
            IRSTBOT,
ORSTTOP =>
            ORSTTOP,
ORSTBOT => ORSTBOT,
AHOLD => AHOLD,
BHOLD => BHOLD,
CHOLD => CHOLD,
DHOLD => DHOLD,
OHOLDTOP => OHOLDTOP,
OHOLDBOT => OHOLDBOT,
OLOADTOP => OLOADTOP,
OLOADBOT => OLOADBOT,
ADDSUBTOP => ADDSUBTOP,
ADDSUBBOT => ADDSUBBOT,
CO =>
      CO,
CI => CI,
ACCUMCI => Open,
ACCUMCO =>
            Open,
SIGNEXTIN => Open,
SIGNEXTOUT => Open
);
```

Another common modules used for DSP applications is a multiplier. The two examples below shows the instantiation of 16-bit multipliers both signed and unsigned.

#### Multiplier 16x16 Signed

Verilog

```
SB_MAC16 i_sbmac16
 ( // port interfaces
 .A(A),
 .B(B),
 .C(C),
 .D(D),
 .0(0),
 .CLK(CLK),
 .CE(CE),
 .IRSTTOP (IRSTTOP),
 .IRSTBOT (IRSTBOT),
 .ORSTTOP (ORSTTOP),
 .ORSTBOT (ORSTBOT),
 .AHOLD (AHOLD),
 .BHOLD (BHOLD) ,
 . CHOLD (CHOLD) ,
 .DHOLD (DHOLD) ,
 .OHOLDTOP (OHOLDTOP),
 .OHOLDBOT (OHOLDBOT),
 .OLOADTOP (OLOADTOP),
 .OLOADBOT (OLOADBOT) ,
 . ADDSUBTOP (ADDSUBTOP),
 .ADDSUBBOT (ADDSUBBOT),
 .CO(CO),
 .CI(CI),
 .ACCUMCI(),
```



```
.ACCUMCO(),
       .SIGNEXTIN(),
       .SIGNEXTOUT()
       );
        defparam i_sbmac16.TOPOUTPUT_SELECT
                                             = 2'b11; //Mult16x16 data output
        defparam i_sbmac16.BOTOUTPUT_SELECT
                                              = 2'b11;
        defparam i_sbmac16.PIPELINE 16x16_MULT_REG2 = 1'b1;//Mult16x16 output registered
        defparam i_sbmac16.A_SIGNED
                                            = 1'b1; //Signed Inputs
        defparam i_sbmac16.B_SIGNED
                                             = 1'b1;
      endmodule
VHDL
      i sbmac16: SB MAC16
      GENERIC MAP (
        TOPOUTPUT_SELECT
                                      => 2'b11,
        BOTOUTPUT_SELECT
                                      => 2'b11,
        PIPELINE_16x16_MULT_REG2
                                     => 1'b1,
                                       => 1'b1,
        A SIGNED
        B_SIGNED
                                       => 1'b1
)
      PORT MAP (
       A \Rightarrow A
       B \Rightarrow B
       C \Rightarrow C,
       D \Rightarrow D
       o => o,
       CLK => CLK,
       CE => CE,
       IRSTTOP => IRSTTOP,
       IRSTBOT => IRSTBOT,
       ORSTTOP => ORSTTOP,
       ORSTBOT => ORSTBOT,
       AHOLD => AHOLD,
       BHOLD => BHOLD,
       CHOLD => CHOLD,
       DHOLD => DHOLD,
       OHOLDTOP => OHOLDTOP,
       OHOLDBOT => OHOLDBOT,
       OLOADTOP => OLOADTOP,
       OLOADBOT => OLOADBOT,
       ADDSUBTOP => ADDSUBTOP,
       ADDSUBBOT => ADDSUBBOT,
       CO \Rightarrow CO,
       CI => CI,
       ACCUMCI => Open,
       ACCUMCO => Open,
       SIGNEXTIN => Open,
       SIGNEXTOUT => Open
       );
```



## Multiplier 16x16 Unsigned

Verilog

```
SB_MAC16 i_sbmac16
       ( // port interfaces
       .A(A),
       .B(B),
       .C(C),
       .D(D),
       .0(0),
       .CLK(CLK),
       .CE(CE),
       .IRSTTOP (IRSTTOP),
       .IRSTBOT (IRSTBOT),
       .ORSTTOP (ORSTTOP),
       .ORSTBOT (ORSTBOT),
       .AHOLD (AHOLD),
       .BHOLD (BHOLD) ,
       . CHOLD (CHOLD),
       .DHOLD (DHOLD),
       .OHOLDTOP (OHOLDTOP) ,
       .OHOLDBOT (OHOLDBOT),
       .OLOADTOP (OLOADTOP),
       .OLOADBOT (OLOADBOT),
       . ADDSUBTOP (ADDSUBTOP),
       .ADDSUBBOT (ADDSUBBOT),
       .CO(CO),
       .CI(CI),
       .ACCUMCI(),
       .ACCUMCO(),
       .SIGNEXTIN(),
       .SIGNEXTOUT()
       );
        defparam i sbmac16.TOPOUTPUT SELECT
                                                      = 2'b11;
        defparam i_sbmac16.BOTOUTPUT_SELECT
                                                      = 2'b11;
        defparam i_sbmac16.PIPELINE_16x16_MULT_REG2 = 1'b1;
        defparam i_sbmac16.A_SIGNED
                                                     = 1'b0;
        defparam i_sbmac16.B_SIGNED
                                                      = 1'b0;
      endmodule
VHDL
      i_sbmac16: SB_MAC16
      GENERIC MAP (
        TOPOUTPUT_SELECT
                                         => 2'b11,
        BOTOUTPUT_SELECT
                                         => 2'b11,
        PIPELINE_16x16_MULT_REG2
                                         => 1'b1,
        A SIGNED
                                         => 1'b0,
        B_SIGNED
                                         => 1'b0
```



```
PORT MAP (
A => A,
B \Rightarrow B
C => C,
D \Rightarrow D,
0 => 0,
CLK => CLK,
 CE => CE,
 IRSTTOP => IRSTTOP,
 IRSTBOT => IRSTBOT,
ORSTTOP => ORSTTOP,
 ORSTBOT => ORSTBOT,
AHOLD => AHOLD,
BHOLD => BHOLD,
CHOLD => CHOLD,
DHOLD => DHOLD,
OHOLDTOP => OHOLDTOP,
OHOLDBOT => OHOLDBOT,
OLOADTOP => OLOADTOP,
OLOADBOT => OLOADBOT,
ADDSUBTOP => ADDSUBTOP,
ADDSUBBOT => ADDSUBBOT,
CO \Rightarrow CO,
CI => CI,
ACCUMCI => Open,
ACCUMCO => Open,
SIGNEXTIN => Open,
SIGNEXTOUT => Open
);
```

## **Technical Support Assistance**

Submit a technical support case via www.latticesemi.com/techsupport.

# **Revision History**

Date	Version	Change Summary
June 2016	1.1	Updated Introduction section. Added iCE40 UltraPlus and removed "MX series" to introductory paragraph.
		Updated DSP Primitive – SB_MAC16 section. Added iCE40 UltraPlus and removed "MS series" to introductory paragraph.
		Updated Implementing DSP Function in iCE40 Ultra and iCE40 UltraPlus Devices section.  — Revised section heading to include iCE40 UltraPlus.  — Added iCE40 UltraPlus to introductory sentence.
		Updated Technical Support Assistance section.
June 2014	01.0	Initial release.