# Embedded Systems Design Lecture 7


Yongsoo Joo



#### **Branch Instructions**

Instruction	B, BL	Branch, Branch Link
Format	B{L}{cond} <expression> {L} is for branch with link =&gt; PC is stored in R14(LR) {cond} is the condition flag for conditional execution <expression> is the destination (offset)</expression></expression>	
Behavior	if {cond} is met, jumps to the destination calculated by <expression>, and PC value is stored into LR if {L} option is used.</expression>	
Flag	Not affected	
Example	B there BL sub+label CMP R1,#0 BEQ fred	<ul> <li>; unconditional jump</li> <li>; destination is calculated by sub+label</li> <li>; comparison between R1 and #0</li> <li>; if R1 is #0, jump to fred</li> </ul>

#### **Branch Instructions**

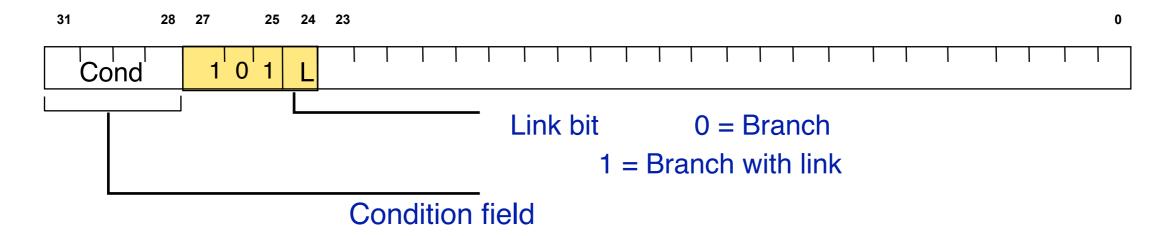

- Destination address calculation
  - Bits [23:0] are used as offset using PC as the basis
  - Offset calculation
    - MSB is the sign bit (+ or -)
    - The remaining 23 bits are used as offset with 2 bits left shift operation




#### Subroutines

- Branch and Link (BL) instruction is used
  - Stores the next address into LR
  - LR <= PC 4 (Why PC 4?)</li>
- Returning from subroutine
  - MOV pc, Ir ; pc = Ir



4

### **Data Processing Instructions**

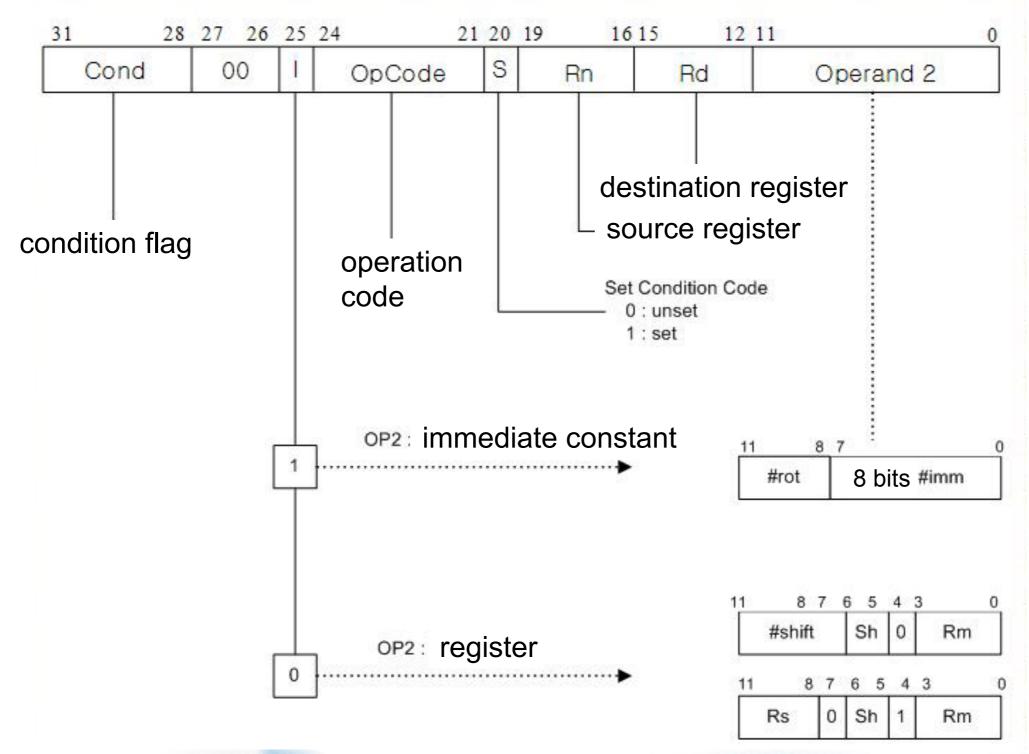

### **Arithmetic Operations**

#### Arithmetic operation lists

opcode	inst	behavios	explanation
0100	ADD	Rd := Rn + Op2	Add
0101	ADC	Rd := Rn + Op2 + Carry	Add with Carry
0010	SUB	Rd := Rn – Op2	Subtract
0110	SBC	Rd := Rn – Op2 – 1 + Carry	Subtract with Carry
0011	RSB	Rd := Op2 - Rn	Reverse subtract
0111	RSC	Rd := Op2 – Rn – 1 + Carry	Reverse Subtract with Carry

#### Examples

- ADD r0, r1, r2
- •SUBGT r3, r3, #1
- RSBLES r4, r5, #5



# **Logical Operations**

#### Logical operation lists

opcode	inst	behavior	explanation
0000	AND	Rd := Rn AND Op2	AND
1111	ORR	Rd := Rn OR Op2	OR
0001	EOR	Rd := Rn XOR Op2	Exclusive OR
1110	BIC	Rd := Rn AND (NOT Op2)	Bit Clear

#### Examples

- AND r0, r1, r2
- BICEQ r2, r3, #7
- EORS r1,r3,r0



7

#### **Comparison Operations**

- NO 'S' postfix to affect condition flags
- Comparison operation lists

opcode	inst	behavior	expanation
1010	CMN	CPSR flags := Rn + Op2	Compare Negative
1011	CMP	CPSR flags := Rn-Op2	Compare
1000	TEQ	CPSR flags := Rn EOR Op2	Test bitwise equality
1001	TST	CPSR flags := Rn AND Op2	Test bits

- Examples
  - CMP r0, r1
  - TSTEQ r2, #5

### **Data Move Operations**

#### Data move operation lists

opcode	inst	behavior	explanation
1101	MOV	Rd := Op2	Move register or constant
1111	MVN	Rd := 0xFFFFFFF EOR Op2	Move Negative register

#### Examples

- MOV r0, r1; r1 -> r0
- MOVS r2, #10; 10 -> r2
- MVNEQ r1,#0; if zero flag set then 0 -> r1



### **Arithmetic Operation with Shift**

- Benefit
  - Arithmetic operation on the operands where shift operation to 2nd operand is applied in a single instruction
  - Barrel shifter is used
- Arithmetic operation with shift format
  - Immediate value based

ADD r5, r5, r3 LSL #3

Register value is used for shift bits

ADD r5, r5, r3 LSL r2




# **Arithmetic Operation with Shift**

- ASR: the signed value of the contents of a register divided by a power of two. It copies the sign bit into vacated bit positions on the left.
- LSL(=ASL): the value of a register is multiplied by a power of two.
- LSR: the unsigned value of a register is divided by a variable power of two.
  - Both instructions insert zeros into the vacated bit positions.
- ROR: the value of the contents of a register rotated by a value.
  - The bits that are rotated off the right end are inserted into the vacated bit positions on the left.



### **Operand 2 and Immediate Value**

- How we can use big immediate values in the limited space inside 32 bits instruction format?
  - A tricky method to represent immediate values using just 12 bits

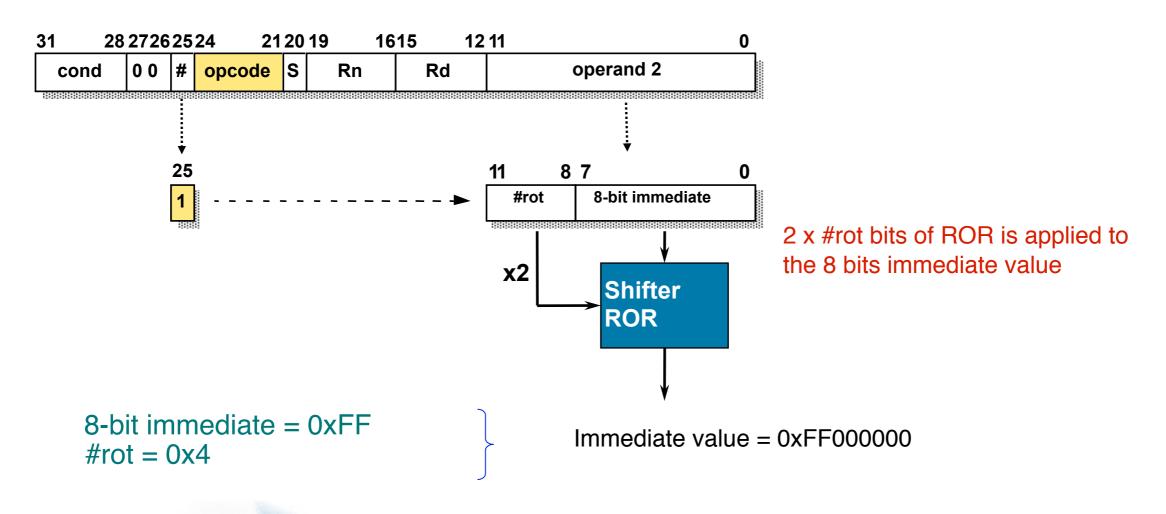



### **Operand 2 and Immediate Value**

Valid immediate values

0x000000FF 0x00000FF0 0xFF000000 0xF000000F

Invalid immediate values

0x000001FE 0xF000F000 0x55550000

#### **PSR Transfer Instruction**

- PSR (Program Status Register) needs special treatment
  - The only possible way to access is through moving register contents between general purpose registers and PSRs
  - MRS: Move PSR to Register
  - MSR: Move Register to PSR
- CPSR (Current Program Status Register)
  - CPSR can be accessed at all the operation modes
  - Only condition fields can be modified at USER mode
- SPSR (Saved Program Status Register)
  - Each operation mode has a dedicated SPSR
    - User mode does not have SPSR



# **PSR Transfer Instruction (MRS)**

Inst	MRS	Move PSR to Registers
Format		<psr> ndition for execution CPSR or SPSR</psr>
Behavior	Move PSR to R	d
Example	MRS r0, CPS	R ; r0 := CPSR



# **PSR Transfer Instruction (MSR)**

Inst	MSR	Move Register to PSR	
Format	MSR{cond} <psr[_fields]>, Rm {cond} is the condition for the execution <psr> is either CPSR or SPSR [_fields] is specific fields in PSR (condition flag(f), control bits(c),)</psr></psr[_fields]>		
Behavior	Move Rm to <psr[_fields]></psr[_fields]>		
Example	MSR CPSR, r0 ; CPSR := r0  MSR CPSR_f, r0 ; CPSR condition flags bits := r0  MSR CPSR_fc, r1 ; CPSR flags, control bits := r1  MSR CPSR_c, #0x80 ; CPSR control bits := 0x80		

