Chapter 4

The Processor



Instruction-Level Parallelism (ILP)

- Pipelining: executing multiple instructions in parallel
- To increase ILP
 - Deeper pipeline
 - Less work per stage ⇒ shorter clock cycle
 - Multiple issue
 - Replicate pipeline stages ⇒ multiple pipelines
 - Start multiple instructions per clock cycle
 - CPI < 1, so use Instructions Per Cycle (IPC)
 - E.g., 4GHz 4-way multiple-issue
 - 16 BIPS, peak CPI = 0.25, peak IPC = 4
 - But dependencies reduce this in practice



Multiple Issue

- Static multiple issue
 - Compiler groups instructions to be issued together
 - Packages them into "issue slots"
 - Compiler detects and avoids hazards
- Dynamic multiple issue
 - CPU examines instruction stream and chooses instructions to issue each cycle
 - Compiler can help by reordering instructions
 - CPU resolves hazards using advanced techniques at runtime



Speculation

- "Guess" what to do with an instruction
 - Start operation as soon as possible
 - Check whether guess was right
 - If so, complete the operation
 - If not, roll-back and do the right thing
- Common to static and dynamic multiple issue
- Examples
 - Speculate on branch outcome
 - Roll back if path taken is different
 - Speculate on load
 - Roll back if location is updated



Compiler/Hardware Speculation

- Compiler can reorder instructions
 - e.g., move load before branch
 - Can include "fix-up" instructions to recover from incorrect guess
- Hardware can look ahead for instructions to execute
 - Buffer results until it determines they are actually needed
 - Flush buffers on incorrect speculation



Speculation and Exceptions

- What if exception occurs on a speculatively executed instruction?
 - e.g., speculative load before null-pointer check
- Static speculation
 - Can add ISA support for deferring exceptions
- Dynamic speculation
 - Can buffer exceptions until instruction completion (which may not occur)



Static Multiple Issue

- Compiler groups instructions into "issue packets"
 - Group of instructions that can be issued on a single cycle
 - Determined by pipeline resources required
- Think of an issue packet as a very long instruction
 - Specifies multiple concurrent operations
 - ⇒ Very Long Instruction Word (VLIW)



Scheduling Static Multiple Issue

- Compiler must remove some/all hazards
 - Reorder instructions into issue packets
 - No dependencies with a packet
 - Possibly some dependencies between packets
 - Varies between ISAs; compiler must know!
 - Pad with nop if necessary




MIPS with Static Dual Issue

- Two-issue packets
 - One ALU/branch instruction
 - One load/store instruction
 - 64-bit aligned
 - ALU/branch, then load/store
 - Pad an unused instruction with nop

Address	Instruction type	Pipeline Stages						
n	ALU/branch	IF	ID	EX	MEM	WB		
n + 4	Load/store	IF	ID	EX	MEM	WB		
n + 8	ALU/branch		IF	ID	EX	MEM	WB	
n + 12	Load/store		IF	ID	EX	MEM	WB	
n + 16	ALU/branch			IF	ID	EX	MEM	WB
n + 20	Load/store			IF	ID	EX	MEM	WB



MIPS with Static Dual Issue

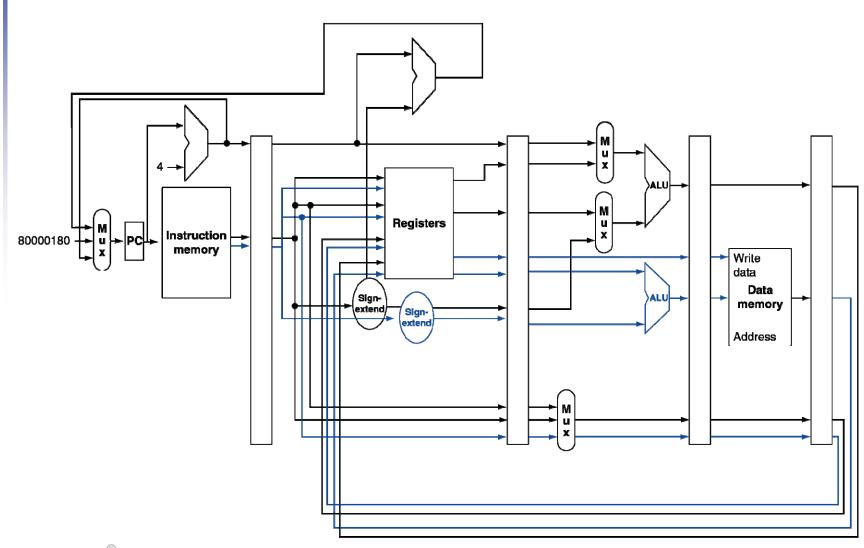



Hazards in the Dual-Issue MIPS

- More instructions executing in parallel
- EX data hazard
 - Forwarding avoided stalls with single-issue
 - Now can't use ALU result in load/store in same packet
 - add \$t0, \$s0, \$s1 Load \$s2, 0(\$t0)
 - Split into two packets, effectively a stall
- Load-use hazard
 - Still one cycle use latency, but now two instructions
- More aggressive scheduling required



Scheduling Example

Schedule this for dual-issue MIPS

```
Loop: Iw $t0, 0($s1) # $t0=array element addu $t0, $t0, $s2 # add scalar in $s2 sw $t0, 0($s1) # store result addi $s1, $s1, $-4 # decrement pointer bne $s1, $zero, Loop # branch $s1!=0
```

	ALU/branch	Load/store	cycle
Loop:	nop	Iw \$t0, 0(\$s1)	1
	addi \$s1, \$s1, -4	nop	2
	addu \$t0, \$t0, \$s2	nop	3
	bne \$s1, \$zero, Loop	sw \$t0, 4(\$s1)	4

■ IPC = 5/4 = 1.25 (c.f. peak IPC = 2)



Loop Unrolling

- Replicate loop body to expose more parallelism
 - Reduces loop-control overhead
- Use different registers per replication
 - Called "register renaming"
 - Avoid loop-carried "anti-dependencies"
 - Store followed by a load of the same register
 - Aka "name dependence"
 - Reuse of a register name



Loop Unrolling

Loop: Iw \$t0, 0(\$s1) addu \$t0, \$t0, \$s2 sw \$t0, 0(\$s1) addi \$s1, \$s1, -4 bne \$s1, \$zero, Loop

	ALU or branch	Data transfer	Clock cycle
Loop:	nop	lw \$t0, 0(\$s1)	1
	addi \$s1, \$s1, -4	nop	2
	addu \$t0, \$t0, \$s2	nop	3
	bne \$s1, \$zero, Loop	sw \$t0, 4(\$s1)	4

\$t0, 0(\$s1) lw \$t0, \$t0, \$s2 addu \$t0, 0(\$s1) SW \$s1, \$s1, -4 addi \$t0, 0(\$s1) lw \$t0, \$t0, \$s2 addu \$t0, 0(\$s1) SW \$s1, \$s1, -4 addi \$t0, 0(\$s1) W \$t0, \$t0, \$s2 addu \$t0, 0(\$s1) SW \$s1, \$s1, -4 addi \$t0, 0(\$s1) lw \$t0, \$t0, \$s2 addu \$t0, 0(\$s1) SW \$s1, \$s1, -4 addi \$s1, \$zero, Loop bne

Loop:

Loop Unrolling (2)

Loop:	lw	\$t0, 0(\$s1)
	addu	\$t0, \$t0, \$s2
	SW	\$t0, 0(\$s1)
	addi	\$s1, \$s1, -4
	lw	\$t0, 0(\$s1)
	addu	\$t0, \$t0, \$s2
	SW	\$t0, 0(\$s1)
	addi	\$s1, \$s1, -4
	lw	\$t0, 0(\$s1)
	addu	\$t0, \$t0, \$s2
	SW	\$t0, 0(\$s1)
	addi	\$s1, \$s1, -4
	lw	\$t0, 0(\$s1)
	addu	\$t0, \$t0, \$s2
	SW	\$t0, 0(\$s1)
	addi	\$s1, \$s1, -4
	bne	\$s1, \$zero, Loop

Loop:	lw addu sw lw addu sw lw addu sw lw addu	\$t0, 0(\$s1) \$t0, \$t0, \$s2 \$t0, 0(\$s1) \$t0, -4(\$s1) \$t0, \$t0, \$s2 \$t0, -4(\$s1) \$t0, -8(\$s1) \$t0, \$t0, \$s2 \$t0, -8(\$s1) \$t0, -12(\$s1) \$t0, \$t0, \$s2
	lw	\$t0, -12(\$s1)
	sw addi bne	\$t0, \$t0, \$52 \$t0, -12(\$s1) \$s1, \$s1, -16 \$s1, \$zero, Loop



Loop Unrolling (3)

Loo p:	lw addu sw lw addu sw lw addu sw lw addu sw addu	\$t0, 0(\$s1) \$t0, \$t0, \$s2 \$t0, 0(\$s1) \$t0, -4(\$s1) \$t0, \$t0, \$s2 \$t0, -4(\$s1) \$t0, -8(\$s1) \$t0, \$t0, \$s2 \$t0, -8(\$s1) \$t0, -12(\$s1) \$t0, \$t0, \$s2 \$t0, -12(\$s1) \$s1, \$s1, -16	Loop:	lw addu sw lw addu sw lw addu sw lw addu sw addu	\$t0, 0(\$s1) \$t0, \$t0, \$s2 \$t0, 0(\$s1) \$t1, -4(\$s1) \$t1, \$t1, \$s2 \$t1, -4(\$s1) \$t2, -8(\$s1) \$t2, \$t2, \$s2 \$t2, -8(\$s1) \$t3, -12(\$s1) \$t3, \$t3, \$s2 \$t3, -12(\$s1) \$s1, \$s1, -16
	bne	\$s1, \$zero, Loop		bne	\$s1, \$zero, Loop



Loop Unrolling (4)

Loop:

	ALU or branch	Data transfer	Clock cycle
Loop	addi \$s1, \$s1, -16	lw \$t0, 0(\$s1)	1
	nop	lw \$t1, 12(\$s1)	2
	addu \$t0, \$t0, \$s2	lw \$t2, 8(\$s1)	3
	addu \$t1, \$t1, \$s2	lw \$t3, 4(\$s1)	4
	addu \$t2, \$t2, \$s2	sw \$t0, 16(\$s1)	5
	addu \$t3, \$t3, \$s2	sw \$t1, 12(\$s1)	6
	nop	sw \$t2, 8(\$s1)	7
	bne \$s1, \$zero, Loop	sw \$t3, 4(\$s1)	8

lw	\$t0, 0(\$s1)
addu	\$t0, \$t0, \$s2
SW	\$t0, 0(\$s1)
lw	\$t1, -4(\$s1)
addu	\$t1, \$t1, \$s2
SW	\$t1, -4(\$s1)
lw	\$t2, -8(\$s1)
addu	\$t2, \$t2, \$s2
SW	\$t2, -8(\$s1)
lw	\$t3, -12(\$s1)
addu	\$t3, \$t3, \$s2
SW	\$t3, -12(\$s1)
addi	\$s1, \$s1, -16
bne	\$s1, \$zero, Loop



Loop Unrolling Example

	ALU/branch	Load/store	cycle
Loop:	addi \$s1, \$s1, -16	Iw \$t0, 0(\$s1)	1
	nop	Iw \$t1, 12(\$s1)	2
	addu \$t0, \$t0, \$s2	Iw \$t2, 8(\$s1)	3
	addu \$t1, \$t1, \$s2	Iw \$t3, 4(\$s1)	4
	addu \$t2, \$t2, \$s2	sw \$t0, 16(\$s1)	5
	addu \$t3, \$t4, \$s2	sw \$t1, 12(\$s1)	6
	nop	sw \$t2, 8(\$s1)	7
	bne \$s1, \$zero, Loop	sw \$t3, 4(\$s1)	8

- IPC = 14/8 = 1.75
 - Closer to 2, but at cost of registers and code size

