1 Introduction

We have spent the last few weeks implementing our 32-bit datapath. The simple 32-bit LC-21 is capable of performing advanced computational tasks and logical decision making. Now it is time for us to move on to something more advanced—the upgraded LC-21i enables the ability for programs to be interrupted. Your assignment is to fully implement and test interrupts using the provided datapath and CircuitSim. You will hook up the interrupt and data lines to the new timer device, modify the datapath and microcontroller to support interrupt operations, and write an interrupt handler to operate this new device. Then you will connect a second, more complex device: the signal receiver.

2 Requirements

Before you begin, please ensure you have done the following:

- Download the proper version of CircuitSim. A copy of CircuitSim is available under Files on Canvas. You may also download it from the CircuitSim website (https://ra4king.github.io/CircuitSim/). In order to run CircuitSim, Java must be installed. If you are a Mac user, you may need to right-click on the JAR file and select "Open" in the menu to bypass Gatekeeper restrictions.
- CircuitSim is still under development and may have unknown bugs. Please back up your work using some form of version control, such as a local/private git repository or Dropbox. **Do not use public git repositories**; it is against the Georgia Tech Honor Code.
- The LC-21i assembler is written in Python. If you do not have Python 2.6 or newer installed on your system, you will need to install it before you continue.

3 What We Have Provided

- A reference guide to the LC-21i is located in *Appendix A: LC-21i Instruction Set Architecture*. **Please read this first before you move on!** The reference introduces several new instructions that you will implement for this project.
- A CircuitSim circuit (int-devices.sim) containing a timer device and signal receiver subcircuit that you will use for this project. You should copy and paste the contents of the new devices into subcircuits in your main circuit file.
- A timer device that will generate an interupt signal at regular intervals. The pinout and functionality of this device are described in *Adding an External Timer Device*.
- A signal receiver device that will generate an interrupt signal at regular intervals, and provides telemetry
 data of the spacecraft. The pinout and functionality of this device are described in Adding a signal
 receiver.
- An incomplete assembly program prj2.s that you will complete and use to test your interrupt capabilities.
- An assembler with support for the new instructions to assemble the test program.
- An *incomplete* LC-21i datapath circuit (LC-21i.sim) that you may add the basic interrupt support onto will be provided **Monday**, **June 21**, after the one-time forgiveness period for Project 1 has passed. You are also free to build off of your own Project 1 datapath, **but you must rename the file to** LC-21i.sim. Most of the work can be easily carried over from one datapath to another.
- We will also release a microcode.xlsx microcode file that meets the requirements of Project 1, but feel free to supply your own.

4 Phase 1 - Implementing a Basic Interrupt

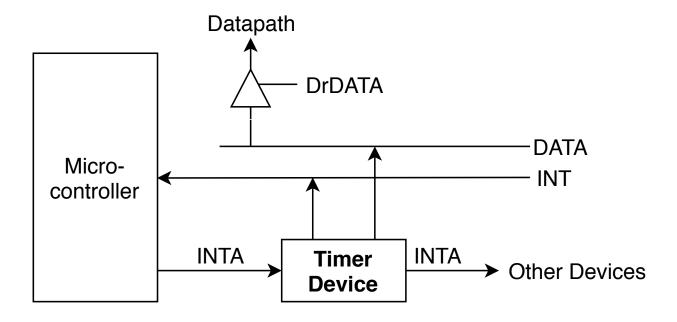


Figure 1: Basic Interrupt Hardware for the LC-21i Processor

For this assignment, you will add interrupt support to the LC-21i datapath. Then, you will test your new capabilities to handle interrupts using an external timer device.

Work in the LC-21i.sim file. If you wish to use your existing datapath, make a copy with this name, and add the devices we provided.

4.1 Interrupt Hardware Support

First, you will need to add the hardware support for interrupts.

You must do the following:

- 1. Our processor needs a way to turn interrupts on and off. Create a new one-bit "Interrupt Enable" (IE) register. You'll connect this register to your microcontroller in a later step.
- 2. Create the INT line. The external device you will create in 4.2 will pull this line high (assert a '1') when they wish to interrupt the processor. Because multiple devices can share a single INT line, only one device can write to it at once. When a device does not have an interrupt, it neither pulls the line high nor low. You must accommodate this in your hardware by making sure that the final value going to the microcontroller always has a value (i.e. not a blue wire in CircuitSim).
- 3. When a device receives an **IntAck** signal, it will drive a 32-bit device ID onto the I/O Data Bus. To prevent devices from interfering with the processor, the I/O Data Bus is attached to the Main Bus with a tri-state driver. Create this driver and the bus, and attach the microcontroller's **DrDATA** signal to the driver.
- 4. Modify the datapath so that the PC starts at 0x8 when the processor is reset. Normally the PC starts at 0x00, however we need to make space for the interrupt vector table (IVT). Therefore, when you actually load in the test code that you will write, it needs to start at 0x8. Please make sure that your solution ensures that datapath can never execute from below 0x8 or in other words, force the PC to drive the value 0x8 if the PC is pointing in the range of the vector table.

5. Create hardware to support selecting the register \$k0 within the microcode. This is needed by some interrupt related instructions. Because we need to access \$k0 outside of regular instructions, we cannot use the Rx / Ry / Rz bits. **HINT:** Use only the register selection bits that the main ROM already outputs to select \$k0.

4.2 Adding an External Timer Device

Hardware timers are an essential device in any CPU design. They allow the CPU to monitor the passing of various time intervals, without dedicating CPU instructions to the cause.

The ability of timers to raise interrupts also enables preemptive multitasking, where the operating system periodically interrupts a running process to let another process take a turn. Timers are also essential to ensuring a single misbehaving program cannot freeze up your entire computer.

You will connect an external timer device to the datapath. It is internally configured to have a **device ID** of 0x0 and a 2000-cycle tick timer interval.

The pinout of the timer device is described below. If you like, you may also examine the internals of the device in CircuitSim.

- CLK: The clock input to the device. Make sure you connect this to the same clock as the rest of your circuit.
- **INT**: The device will begin to assert this line when its time interval has elapsed. It will not be lowered until the cycle after it receives an INTA signal.
- **INTA_IN**: When the INTA_IN line is asserted while the device has asserted the INT line, it will drive its device ID to the DATA line and lower its INT line **on the next clock cycle**.
- INTA_OUT: When the INTA_IN line is asserted while the device does not have an interrupt pending, its value will be propagated to INTA_OUT. This allows for daisy chaining of devices.
- **DATA**: The device will drive its ID (0x0) to this line after receiving an INTA.

The INT and DATA lines from the timer should be connected to the appropriate buses that you added in the previous section.

4.3 Microcontroller Interrupt Support

Before beginning this part, be sure you have read through *Appendix A: LC-21i Instruction Set Architecture* and *Appendix B: Microcontrol Unit* and pay special attention to the new instructions. However, for this part of the project, you do not need to worry about the LdDAR signal or the IN instruction.

In this part of the assignment you will modify the microcontroller and the microcode of the LC-21i to support interrupts. You will need to do the following:

- 1. Be sure to read the appendix on the microcontroller before starting this section.
- 2. Modify the microcontroller to support asserting four new signals:
 - (a) **LdEnInt** & **EnInt** to control whether interrupts are enabled/disabled. You will use these 2 signals to control the value of your interrupts enabled register.
 - (b) **IntAck** to send an interrupt acknowledge to the device.
 - (c) **DrDATA** to drive the value on the I/O Data Bus to the Main Bus.
- 3. Extend the size of the ROM accordingly.
- 4. Add the fourth ROM described in Appendix B: Microcontrol Unit to handle on Int.

- 5. Modify the FETCH macrostate microcode so that we actively check for interrupts. Normally this is done within the INT macrostate (as described in Chapter 4 of the book and in the lectures) but we are rolling this functionality in the FETCH macrostate for the sake of simplicity. You can accomplish this by doing the following:
 - (a) First check to see if the CPU should be interrupted. To be interrupted, two conditions must be true: (1) interrupts are enabled (i.e., the IE register must hold a '1'), and (2), a device must be asserting an interrupt.
 - (b) If not, continue with FETCH normally.
 - (c) If the CPU should be interrupted, then perform the following:
 - i. Save the current PC to the register \$k0.
 - ii. Disable interrupts.
 - iii. Assert the interrupt acknowledge signal (IntAck). Next, drive the device ID from the I/O Data Bus and use it to index into the interrupt vector table to retrieve the new PC value. The device will drive its device ID onto the I/O Data Bus one clock cycle **after** it receives the IntAck signal.
 - iv. This new PC value should then be loaded into the PC.

Note: onInt works in the same manner that ChkCmp did in Project 1. The processor should branch to the appropriate microstate depending on the value of onInt. onInt should be true when interrupts are enabled AND when there is an interrupt to be acknowledged. Note: The mode bit mechanism discussed in the textbook has been omitted for simplicity.

- 6. Implement the microcode for three new instructions for supporting interrupts as described in Chapter 4. These are the EI, DI, and RETI instructions. You need to write the microcode in the main ROM controlling the datapath for these three new instructions. Keep in mind that:
 - (a) EI sets the IE register to 1.
 - (b) DI sets the IE register to 0.
 - (c) RETI loads \$k0 into the PC, and enables interrupts.

4.4 Implementing the Timer Interrupt Handler

Our datapath and microcontroller now fully support interrupts from devices, BUT we must now implement the interrupt handler timer_handler within the prj2.s file to support interrupts from the timer device while also not interfering with the correct operation of any user programs.

In prj2.s, we provide you with a program that runs in the background. For this part of the project, you need to write interrupt handler for the timer device (device ID 0x0). You should refer to Chapter 4 of the textbook to see how to write a correct interrupt handler. As detailed in that chapter, your handler will need to do the following:

- 1. First save the current value of \$k0 (the return address to where you came from to the current handler)
- 2. Enable interrupts (which should have been disabled implicitly by the processor within the INT macrostate).
- 3. Save the state of the interrupted program.
- 4. Implement the actual work to be done in the handler. In the case of this project, we want you to increment a counter variable in memory, which we have already provided at the label ticks.
- 5. Restore the state of the original program and return using RETI.

The handler you have written for the timer device should run every time the device's interrupt is triggered. Make sure to write the handler such that interrupts can be nested. With that in mind, interrupts should be enabled for as long as possible within the handlers.

You will need to do the following:

- 1. Write the interrupt handler (should follow the above instructions or simply refer to Chapter 4 in your book). In the case of this project, we want the interrupt handler to keep time in memory at the predetermined location: 0xFFFF
- 2. Load the starting address of the first handler you just implemented in prj2.s into the interrupt vector table at the appropriate addresses (the table is indexed using the device ID of the interrupting device).

Test your design before moving onto the next section. If it works correctly, you should see a location in memory increment as the program runs.

5 Phase 2 - Implementing Interrupts from Input Devices

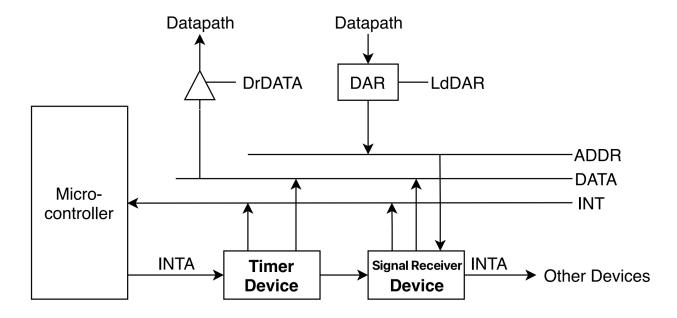


Figure 2: Interrupt Hardware for the LC-21i with Basic I/O Support

Your datapath can now detect when external devices are ready, but cannot get data from input devices. In this part of the project, you will add functionality for device-addressed input. You will then make use of this functionality by adding a device simulating a signal receiver and writing a simple handler for the device.

5.1 Basic I/O Support

Before adding the signal receiver, you will first need to add support for device addressed I/O. In order to get input from a device such as a signal receiver, you will write a value to an Address Bus, which instructs the device with that address (which in this case is the same as the device ID) to write its output data to the I/O Data Bus.

You must do the following:

- 1. Create the device address register (DAR) and connect its enable to the LdDAR signal from your microcontroller. This register gets its input from the Main Bus, and its output will be directly connected to the Address Bus. It will allow us to send assert a value on the Address Bus while using the Main Bus for other operations.
- 2. Modify the microcontroller to support a new control signal, LdDAR. This signal will be used in order to enable writing to the DAR.
- 3. Implement the IN instruction in your microcode. This instruction takes a device address from the immediate, loads it into the DAR, and writes the value on the data bus into a register. When it is done, it **must clear the DAR to zero** (since interrupts use the data bus to communicate device IDs). Examine the format of the IN instruction and consider what signals you might raise in order to write a constant zero into the DAR.

5.2 Adding a signal receiver

You will connect a signal receiver to your datapath that simulates a device the monitors the velocity of a space craft. Its internals are similar to a timer device, meaning it asserts interrupts and handles acknowledgements

the same way. Every 2500 cycles, it will assert an interrupt signaling that a new measurement has been collected. This measurement can be fetched as a 32-bit word by writing the device's address to the ADDR line.

The signal receiver is internally configured to have a device ID of 0x1

Place the signal receiver in your datapath circuit. This device will share the INT and DATA lines with the timer you added previously. However, it should receive its INTA signal from the INTA_OUT pin on the timer device. This ensures that if both the timer and the signal receiver raise an interrupt at the same time, the timer will be acknowledged first, and the signal receiver will be acknowledged after. **This is known as "daisy chaining" devices.**

5.3 Implementing the Signal Receiver Device Interrupt Handler

The handler for your signal receiver will work similarly to the one you wrote for the timer device. However, instead of incrementing a timer at a memory location, the signal receiving a measurement of the distance a space craft has traveled since the last signal was received. You will need to accumulate the readings the signal receiver gives you to a memory location pointed to by the label signal_received.

In addition to the usual overhead of an interrupt handler, your signal receiver handler must do the following:

- 1. Use the IN instruction to obtain the most recent distance measurement. Note that all measurements will be 2's complement numbers.
- 2. Add the value obtained by the signal receiver to the total distance collected so far.

Make sure that properly you install the location of the new handler into the IVT.

6 Deliverables

Please submit the following files to Gradescope:

- CircuitSim datapath file (LC-21i.sim)
- Microcode file (microcode.xlsx)
- Assembly code (prj2.s)

Always re-download your assignment from Gradescope after submitting to ensure that all necessary files were properly uploaded. If what we download does not work, you will get a 0 regardless of what is on your machine.

This project will be demoed. In order to receive full credit, you must sign up for a demo slot and complete the demo. We will announce when demo times are released.

Appendix A: LC-21i Instruction Set Architecture

The LC-21i is a simple, yet capable computer architecture. The LC-21i combines attributes of both ARM and the LC-2200 ISA defined in the Ramachandran & Leahy textbook for CS 2200.

The LC-21i is a word-addressable, 32-bit computer. All addresses refer to words, i.e. the first word (four bytes) in memory occupies address 0x0, the second word, 0x1, etc.

All memory addresses are truncated to 16 bits on access, discarding the 16 most significant bits if the address was stored in a 32-bit register. This provides roughly 64 KB of addressable memory.

7.1 Registers

The LC-21i has 16 general-purpose registers. While there are no hardware-enforced restraints on the uses of these registers, your code is expected to follow the conventions outlined below.

> Callee Save? Register Number Name Use 0 \$zero Always Zero NA 1 \$at Assembler/Target Address NA 2 \$v0 Return Value No 3 \$a0 Argument 1 No 4 \$a1 Argument 2 No 5 \$a2 Argument 3 No 6 \$t0 Temporary Variable No 7 \$t1 Temporary Variable No 8 \$t2 Temporary Variable No 9 \$s0Saved Register Yes 10 \$s1Saved Register Yes 11 s2Saved Register Yes \$k0 Reserved for OS and Traps 12 NA Stack Pointer No 13 \$sp 14 \$fp Frame Pointer Yes 15 \$ra Return Address No

Table 1: Registers and their Uses

- 1. Register 0 is always read as zero. Any values written to it are discarded. Note: for the purposes of this project, you must implement the zero register. Regardless of what is written to this register, it should always output zero.
- 2. Register 1 is used to hold the target address of a jump. It may also be used by pseudo-instructions generated by the assembler.
- 3. **Register 2** is where you should store any returned value from a subroutine call.
- 4. Registers 3 5 are used to store function/subroutine arguments. Note: registers 2 through 8 should be placed on the stack if the caller wants to retain those values. These registers are fair game for the callee (subroutine) to trash.
- 5. Registers 6 8 are designated for temporary variables. The caller must save these registers if they want these values to be retained.
- 6. Registers 9 11 are saved registers. The caller may assume that these registers are never tampered with by the subroutine. If the subroutine needs these registers, then it should place them on the stack and restore them before they jump back to the caller.
- 7. Register 12 is reserved for handling interrupts. While it should be implemented, it otherwise will not have any special use on this assignment.

- 8. **Register 13** is your anchor on the stack. It keeps track of the top of the activation record for a subroutine.
- 9. **Register 14** is used to point to the first address on the activation record for the currently executing process.
- 10. **Register 15** is used to store the address a subroutine should return to when it is finished executing.

7.2 Instruction Overview

The LC-21i supports a variety of instruction forms, only a few of which we will use for this project. The instructions we will implement in this project are summarized below.

31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0 ADD0000 DRSR1unused SR2NAND 0001 DRSR1SR2unused ADDI 0010 DRSR1immval20LW0011 DRBaseR offset 20SW0100 SRoffset20 BaseR BGE 0101 SR1 SR2offset20 **JALR** 0110 RAATunused HALT 0111 unused BLE SR1 SR21000 offset20 LEA 1001 DRPCoffset20 unused EI1010 unused DI1011 unused RETI 1100 unused IN 1101 DR0000 addr20

Table 2: LC-21i Instruction Set

7.2.1 Conditional Branching

Conditional branching in the LC-21i ISA is provided via two instructions: the BGE ("branch if greater than or equal to") and BLE ("branch if less than or equal to") instructions. Both BGE and BLE will branch to address "incrementedPC + offset20" if SR1 and SR2 are equal. However, BGE will also branch to address "incrementedPC + offset20" if SR1 is greater than SR2, and BLE will also branch if SR1 is less than SR2.

7.3 Detailed Instruction Reference

7.3.1 ADD

Assembler Syntax

ADD DR, SR1, SR2

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4	3	2 1	0
0000	DR	SR1	unused	Š	R2	

Operation

DR = SR1 + SR2;

Description

The ADD instruction obtains the first source operand from the SR1 register. The second source operand is obtained from the SR2 register. The second operand is added to the first source operand, and the result is stored in DR.

7.3.2 NAND

Assembler Syntax

NAND DR, SR1, SR2

Encoding

31 30 29 28	27 26 25 24	$23\ 22\ 21\ 20$	$19\ 18\ 17\ 16\ 15\ 14\ 13\ 12\ 11\ 10\ 9\ 8\ 7\ 6\ 5\ 4$	3	2	1 (C
0001	DR	SR1	unused		SF	R2	

Operation

DR = (SR1 & SR2);

Description

The NAND instruction performs a logical NAND (AND NOT) on the source operands obtained from SR1 and SR2. The result is stored in DR.

HINT: A logical NOT can be achieved by performing a NAND with both source operands the same. For instance,

NAND DR, SR1, SR1

...achieves the following logical operation: $DR \leftarrow \overline{SR1}$.

7.3.3 ADDI

Assembler Syntax

ADDI DR, SR1, immval20

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
0010	DR	SR1	immval20

Operation

```
DR = SR1 + SEXT(immval20);
```

Description

The ADDI instruction obtains the first source operand from the SR1 register. The second source operand is obtained by sign-extending the immval20 field to 32 bits. The resulting operand is added to the first source operand, and the result is stored in DR.

7.3.4 LW

Assembler Syntax

LW DR, offset20(BaseR)

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
0011	DR	BaseR	offset20

Operation

```
DR = MEM[BaseR + SEXT(offset20)];
```

Description

An address is computed by sign-extending bits [19:0] to 32 bits and then adding this result to the contents of the register specified by bits [23:20]. The 32-bit word at this address is loaded into DR.

7.3.5 SW

Assembler Syntax

```
SW SR, offset20(BaseR)
```

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
0100	SR	BaseR	offset20

Operation

```
MEM[BaseR + SEXT(offset20)] = SR;
```

Description

An address is computed by sign-extending bits [19:0] to 32 bits and then adding this result to the contents of the register specified by bits [23:20]. The 32-bit word obtained from register SR is then stored at this address.

7.3.6 BGE

Assembler Syntax

```
BGE SR1, SR2, offset20
```

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
0101	SR1	SR2	offset20

Operation

```
if (SR1 >= SR2) {
    PC = incrementedPC + offset20
}
```

Description

A branch is taken if SR1 is greater than or equal to SR2. If this is the case, the PC will be set to the sum of the incremented PC (since we have already undergone fetch) and the sign-extended offset[19:0].

7.3.7 JALR

Assembler Syntax

JALR RA, AT

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
0110	RA	AT	unused

Operation

```
RA = PC;
PC = AT;
```

Description

First, the incremented PC (address of the instruction + 1) is stored into register RA. Next, the PC is loaded with the value of register AT, and the computer resumes execution at the new PC.

7.3.8 HALT

Assembler Syntax

HALT

Encoding

Description

The machine is brought to a halt and executes no further instructions.

7.3.9 BLE

Assembler Syntax

```
BLE SR1, SR2, offset20
```

Encoding

```
31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0

1000 SR1 SR2 offset 20
```

Operation

```
if (SR1 <= SR2) {
    PC = incrementedPC + offset20
}</pre>
```

Description

A branch is taken if SR1 is less than or equal to SR2. If this is the case, the PC will be set to the sum of the incremented PC (since we have already undergone fetch) and the sign-extended offset [19:0].

7.3.10 LEA

Assembler Syntax

LEA DR, label

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0
1001	DR	unused	PCoffset20

Operation

DR = PC + SEXT(PCoffset20);

Description

An address is computed by sign-extending bits [19:0] to 32 bits and adding this result to the incremented PC (address of instruction + 1). It then stores the computed address into register DR.

7.3.11 EI

Assembler Syntax

ΕI

Encoding

31 30 29 28	27 26 25	24 23	22 21	20 19	18 17	16	15 1	4 13	12	11	10	9	8	7	6	5	4	3	2	1	0
1010							un	use	ed												

Operation

IE = 1;

Description

The Interrupts Enabled register is set to 1, enabling interrupts.

7.3.12 DI

Assembler Syntax

DI

Encoding

3	31 30 29 28	27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1 0)
	1011	unused	7

Operation

IE = 0;

Description

The Interrupts Enabled register is set to 0, disabling interrupts.

7.3.13 RETI

Assembler Syntax

RETI

Encoding

31 30 29 28	27 26 2	5 24 23	22 21	20 19	18 17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1100							u	nu	se	d												

Operation

```
PC = $k0;
IE = 1;
```

Description

The PC is restored to the return address stored in \$k0. The Interrupts Enabled register is set to 1, enabling interrupts.

7.3.14 IN

Assembler Syntax

IN DR, DeviceADDR

Encoding

31 30 29 28	27 26 25 24	23 22 21 20	$19\ 18\ 17\ 16\ 15\ 14\ 13\ 12\ 11\ 10\ 9\ 8\ 7\ 6\ 5\ 4\ 3\ 2\ 1\ 0$
1101	DR	0000	addr20

Operation

```
DAR = addr20;
DR = DeviceData;
DAR = 0;
```

Description

The value in addr20 is sign-extended to determine the 32-bit device address. This address is then loaded into the Device Address Register (DAR). The processor then reads a single word value off the device data bus, and writes this value to the DR register. The DAR is then reset to zero, ending the device bus cycle.

8 Appendix B: Microcontrol Unit

You will make a microcontrol unit which will drive all of the control signals to various items on the datapath. This Finite State Machine (FSM) can be constructed in a variety of ways. You could implement it with combinational logic and flip flops, or you could hard-wire signals using a single ROM. The single ROM solution will waste a tremendous amount of space since most of the microstates do not depend on the opcode or the conditional test to determine which signals to assert. For example, since the condition line is an input for the address, every microstate would have to have an address for condition = 0 as well as condition = 1, even though this only matters for one particular microstate.

To solve this problem, we will use a four ROM microcontroller. In this arrangement, we will have four ROMs:

- the main ROM, which outputs the control signals,
- the sequencer ROM, which helps to determine which microstate to go at the end of the FETCH state,
- the condition ROM, which helps determine whether or not to branch during the BEQ and BLT instructions.
- and the interrupt ROM, which helps determine whether or not to go to the INT macrostate if an interrupt is present.

Examine the following:

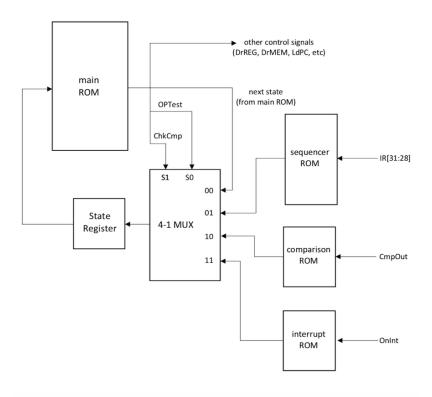


Figure 3: Four ROM Microcontrol Unit

As you can see, there are four different locations that the next state can come from: part of the output from the previous state (main ROM), the sequencer ROM, the condition ROM, or the interrupt ROM. The mux

controls which of these sources gets through to the state register. If the previous state's "next state" field determines where to go, neither the OPTest nor ChkCmp signals will be asserted. If the opcode from the IR determines the next state (such as at the end of the FETCH state), the OPTest signal will be asserted. If the comparison circuitry determines the next state (such as in the BEQ and BLT instructions), the ChkCmp signal will be asserted. If we need to check the interrupt ROM (at the end of execute or the beginning of fetch macrostates) then we assert ChkCmp and OPTest.

The sequencer ROM should have one address per instruction, the condition ROM should have one address for condition true and one for condition false, and the interrupt ROM should have one address for OnInt true and one for OnInt false.

The microcode.xlsx spreadsheet has been updated to include a new section that can be used to fill out the interrupt ROM.

Note that there are 5 new control signals that need to be outputted from the main ROM onto the datapath (LdEnInt, EnInt, IntAck, DrData, LdDar).

Bit	Purpose	Bit	Purpose	Bit	Purpose	Bit	Purpose	Bit	Purpose	Bit	Purpose
0	NextState[0]	6	DrREG	12	LdIR	18	WrMEM	24	ChkCmp	30	LdDAR
1	NextState[1]	7	DrMEM	13	LdMAR	19	RegSelLo	25	TypeCmp		
2	NextState[2]	8	DrALU	14	LdA	20	RegSelHi	26	LdEnInt		
3	NextState[3]	9	DrPC	15	LdB	21	ALULo	27	EnInt		
4	NextState[4]	10	DrOFF	16	LdCmp	22	ALUHi	28	IntAck		
5	NextState[5]	11	LdPC	17	WrREG	23	OPTest	29	DrData		

Table 3: ROM Output Signals

Table 4: Register Selection Map

RegSelHi	RegSelLo	Register
0	0	RX (IR[27:24])
0	1	RY (IR[23:20])
1	0	RZ (IR[3:0])
1	1	\$k0

Table 5: ALU Function Map

ALUHi	ALUlLo	Function
0	0	ADD
0	1	SUB
1	0	NAND
1	1	A + 1