

Deployment summary

NetApp Solutions

Dorian Henderson April 13, 2021

This PDF was generated from https://docs.netapp.com/us-en/netapp-solutions/containers/bmanthos_deployment_summary.html on May 19, 2021. Always check docs.netapp.com for the latest.

Table of Contents

Deployment summary	1	. 1
--------------------	---	-----

Deployment summary

For the initial validation of this solution, NetApp partnered with World Wide Technology (WWT) to establish an environment at WWT's Advanced Technology Center (ATC). Anthos was deployed on a bare metal infrastructure using the bmctl tool provided by Google Cloud. The following section details the deployment used for validation purposes.


The Anthos on bare metal with NetApp solution was built as a highly available hybrid cluster with three Anthos control-plane nodes and four Anthos worker nodes.

The control-plane nodes used were Cisco UCS B200M3 blade servers hosted in a chassis and configured with a single virtual network interface card (vNIC) on each, which allowed for A/B failover at the Cisco UCS platform level for fault tolerance. The Cisco UCS chassis connected upstream to a pair of Cisco UCS 6248 fabric interconnects providing disparate paths for the separation of traffic along fabric A and fabric B. Those fabric interconnects connected upstream to a pair of Cisco Nexus 5548 data center switches that tied back to the core network at WWT.


The worker nodes were HP Proliant DL360 nodes, each running one of the supported Linux distributions for Anthos on bare metal: Red Hat Enterprise Linux 8.2, CentOS 8.2, Ubuntu 20.04 LTS, or Ubuntu 18.04 LTS. The Red Hat Enterprise Linux 8 and CentOS 8 nodes were configured with NIC teams running in LACP mode and cabled to two Nexus 9k C93180YC-FX switches for fault tolerance. The Ubuntu servers were configured for network bonding in LACP mode and cabled to the same pair of Nexus 9k switches for fault tolerance.

The NetApp AFF A300 storage system running ONTAP 9.7 software was installed and connected physically to the same pair of Nexus 9k switches as the Anthos worker nodes. These network uplinks were aggregated into an interface group (a0a), and the appropriate data network VLAN was tagged to allow the worker nodes to interact with the storage system. A storage virtual machine (SVM) was created with data LIFs supporting the NFS protocol and dedicated to storage operations for Trident to provide persistent storage to the containers deployed in the Anthos on bare metal cluster. These persistent volumes were provided by NetApp Trident 20.10, the latest release of the fully supported NetApp open-source storage orchestrator for Kubernetes.

The following figure depicts a physical cabling diagram of the solution to the top of rack data center switches.

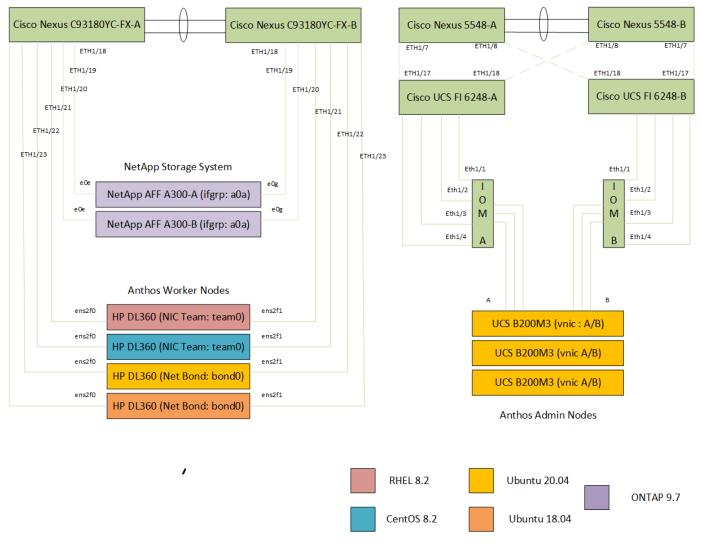

The next figure presents a logical view of the solution as deployed and validated on the hardware in the lab at the NetApp partner WWT.

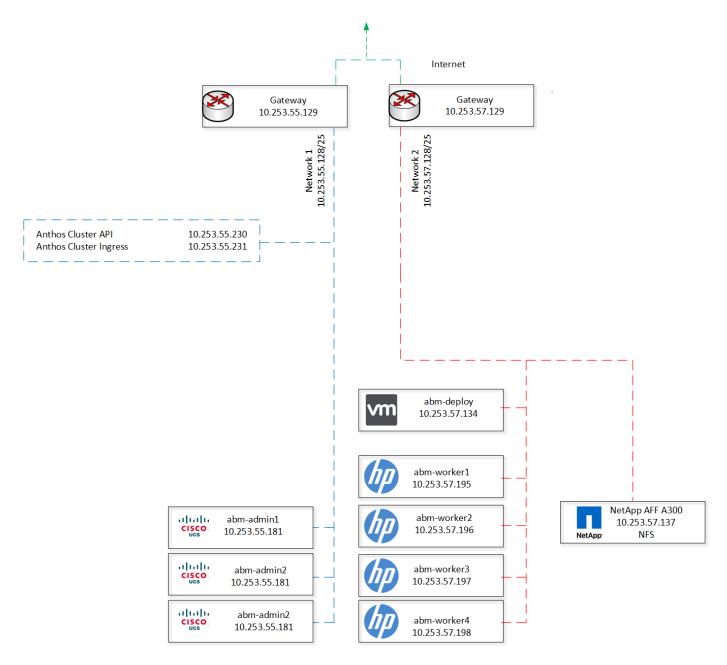

Next: Solution validation.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.