

UM10139

Volume 1: LPC214x User Manual

Rev. 01 — 15 August 2005

User manual





Document information

Info	Content
Keywords	LPC2141, LPC2142, LPC2144, LPC2146, LPC2148, LPC2000, LPC214x, ARM, ARM7, embedded, 32-bit, microcontroller, USB 2.0, USB device
Abstract	An initial LPC214x User Manual revision





LPC2141/2/4/6/8 UM

Revision history

Rev	Date	Description
01	20050815	Initial version

Contact information

For additional information, please visit: http://www.semiconductors.philips.com

For sales office addresses, please send an email to: sales.addresses@www.semiconductors.philips.com



UM10139

Chapter 1: General information

Rev. 01 — 15 August 2005

User manual

1.1 Introduction

The LPC2141/2/4/6/8 microcontrollers are based on a 32/16 bit ARM7TDMI-S CPU with real-time emulation and embedded trace support, that combines the microcontroller with embedded high speed flash memory ranging from 32 kB to 512 kB. A 128-bit wide memory interface and a unique accelerator architecture enable 32-bit code execution at the maximum clock rate. For critical code size applications, the alternative 16-bit Thumb mode reduces code by more than 30 % with minimal performance penalty.

Due to their tiny size and low power consumption, LPC2141/2/4/6/8 are ideal for applications where miniaturization is a key requirement, such as access control and point-of-sale. A blend of serial communications interfaces ranging from a USB 2.0 Full Speed device, multiple UARTS, SPI, SSP to I²Cs and on-chip SRAM of 8 kB up to 40 kB, make these devices very well suited for communication gateways and protocol converters, soft modems, voice recognition and low end imaging, providing both large buffer size and high processing power. Various 32-bit timers, single or dual 10-bit ADC(s), 10-bit DAC, PWM channels and 45 fast GPIO lines with up to nine edge or level sensitive external interrupt pins make these microcontrollers particularly suitable for industrial control and medical systems.

1.2 Features

- 16/32-bit ARM7TDMI-S microcontroller in a tiny LQFP64 package.
- 8 to 40 kB of on-chip static RAM and 32 to 512 kB of on-chip flash program memory.
 128 bit wide interface/accelerator enables high speed 60 MHz operation.
- In-System/In-Application Programming (ISP/IAP) via on-chip boot-loader software. Single flash sector or full chip erase in 400 ms and programming of 256 bytes in 1 ms.
- EmbeddedICE RT and Embedded Trace interfaces offer real-time debugging with the on-chip RealMonitor software and high speed tracing of instruction execution.
- USB 2.0 Full Speed compliant Device Controller with 2 kB of endpoint RAM.
 In addition, the LPC2146/8 provide 8 kB of on-chip RAM accessible to USB by DMA.
- One or two (LPC2141/2 vs. LPC2144/6/8) 10-bit A/D converters provide a total of 6/14 analog inputs, with conversion times as low as 2.44 μs per channel.
- Single 10-bit D/A converter provides variable analog output.
- Two 32-bit timers/external event counters (with four capture and four compare channels each), PWM unit (six outputs) and watchdog.
- Low power real-time clock with independent power and dedicated 32 kHz clock input.
- Multiple serial interfaces including two UARTs (16C550), two Fast I²C-bus (400 kbit/s), SPI and SSP with buffering and variable data length capabilities.
- Vectored interrupt controller with configurable priorities and vector addresses.
- Up to 45 of 5 V tolerant fast general purpose I/O pins in a tiny LQFP64 package.
- Up to nine edge or level sensitive external interrupt pins available.

3

- **Chapter 1: Introductory information**
- 60 MHz maximum CPU clock available from programmable on-chip PLL with settling time of 100 μs.
- On-chip integrated oscillator operates with an external crystal in range from 1 MHz to 30 MHz and with an external oscillator up to 50 MHz.
- · Power saving modes include Idle and Power-down.
- Individual enable/disable of peripheral functions as well as peripheral clock scaling for additional power optimization.
- Processor wake-up from Power-down mode via external interrupt, USB, Brown-Out Detect (BOD) or Real-Time Clock (RTC).
- Single power supply chip with Power-On Reset (POR) and BOD circuits:
 - CPU operating voltage range of 3.0 V to 3.6 V (3.3 V \pm 10 %) with 5 V tolerant I/O pads.

1.3 Applications

- Industrial control
- Medical systems
- Access control
- Point-of-sale
- Communication gateway
- Embedded soft modem
- General purpose applications

1.4 Device information

Table 1: LPC2141/2/4/6/8 device information

Device	Number of pins	On-chip SRAM	Endpoint USB RAM	On-chip FLASH	Number of 10-bit ADC channels	Number of 10-bit DAC channels	Note
LPC2141	64	8 kB	2 kB	32 kB	6	-	-
LPC2142	64	16 kB	2 kB	64 kB	6	1	-
LPC2144	64	16 kB	2 kB	128 kB	14	1	UART1 with full modem interface
LPC2146	64	32 kB + 8 kB[1]	2 kB	256 kB	14	1	UART1 with full modem interface
LPC2148	64	32 kB + 8 kB[1]	2 kB	512 kB	14	1	UART1 with full modem interface

^[1] While the USB DMA is the primary user of the additional 8 kB RAM, this RAM is also accessible at any time by the CPU as a general purpose RAM for data and code storage.

1.5 Architectural overview

The LPC2141/2/4/6/8 consists of an ARM7TDMI-S CPU with emulation support, the ARM7 Local Bus for interface to on-chip memory controllers, the AMBA Advanced High-performance Bus (AHB) for interface to the interrupt controller, and the VLSI

Chapter 1: Introductory information

Peripheral Bus (VPB, a compatible superset of ARM's AMBA Advanced Peripheral Bus) for connection to on-chip peripheral functions. The LPC2141/24/6/8 configures the ARM7TDMI-S processor in little-endian byte order.

AHB peripherals are allocated a 2 megabyte range of addresses at the very top of the 4 gigabyte ARM memory space. Each AHB peripheral is allocated a 16 kB address space within the AHB address space. LPC2141/2/4/6/8 peripheral functions (other than the interrupt controller) are connected to the VPB bus. The AHB to VPB bridge interfaces the VPB bus to the AHB bus. VPB peripherals are also allocated a 2 megabyte range of addresses, beginning at the 3.5 gigabyte address point. Each VPB peripheral is allocated a 16 kB address space within the VPB address space.

The connection of on-chip peripherals to device pins is controlled by a Pin Connect Block (see chapter "Pin Connect Block" on page 75). This must be configured by software to fit specific application requirements for the use of peripheral functions and pins.

1.6 ARM7TDMI-S processor

The ARM7TDMI-S is a general purpose 32-bit microprocessor, which offers high performance and very low power consumption. The ARM architecture is based on Reduced Instruction Set Computer (RISC) principles, and the instruction set and related decode mechanism are much simpler than those of microprogrammed Complex Instruction Set Computers. This simplicity results in a high instruction throughput and impressive real-time interrupt response from a small and cost-effective processor core.

Pipeline techniques are employed so that all parts of the processing and memory systems can operate continuously. Typically, while one instruction is being executed, its successor is being decoded, and a third instruction is being fetched from memory.

The ARM7TDMI-S processor also employs a unique architectural strategy known as THUMB, which makes it ideally suited to high-volume applications with memory restrictions, or applications where code density is an issue.

The key idea behind THUMB is that of a super-reduced instruction set. Essentially, the ARM7TDMI-S processor has two instruction sets:

- The standard 32-bit ARM instruction set.
- A 16-bit THUMB instruction set.

The THUMB set's 16-bit instruction length allows it to approach twice the density of standard ARM code while retaining most of the ARM's performance advantage over a traditional 16-bit processor using 16-bit registers. This is possible because THUMB code operates on the same 32-bit register set as ARM code.

THUMB code is able to provide up to 65% of the code size of ARM, and 160% of the performance of an equivalent ARM processor connected to a 16-bit memory system.

The ARM7TDMI-S processor is described in detail in the ARM7TDMI-S Datasheet that can be found on official ARM website.

Chapter 1: Introductory information

1.7 On-chip Flash memory system

The LPC2141/2/4/6/8 incorporate a 32 kB, 64 kB, 128 kB, 256 kB, and 512 kB Flash memory system respectively. This memory may be used for both code and data storage. Programming of the Flash memory may be accomplished in several ways: over the serial built-in JTAG interface, using In System Programming (ISP) and UARTO, or by means of In Application Programming (IAP) capabilities. The application program, using the IAP functions, may also erase and/or program the Flash while the application is running, allowing a great degree of flexibility for data storage field firmware upgrades, etc. When the LPC2141/2/4/6/8 on-chip bootloader is used, 32 kB, 64 kB, 128 kB, 256 kB, and 500 kB of Flash memory is available for user code.

The LPC2141/2/4/6/8 Flash memory provides minimum of 100,000 erase/write cycles and 20 years of data-retention.


1.8 On-chip Static RAM (SRAM)

On-chip Static RAM (SRAM) may be used for code and/or data storage. The on-chip SRAM may be accessed as 8-bits, 16-bits, and 32-bits. The LPC2141/2/4/6/8 provide 8/16/32 kB of static RAM respectively.

The LPC2141/2/4/6/8 SRAM is designed to be accessed as a byte-addressed memory. Word and halfword accesses to the memory ignore the alignment of the address and access the naturally-aligned value that is addressed (so a memory access ignores address bits 0 and 1 for word accesses, and ignores bit 0 for halfword accesses). Therefore valid reads and writes require data accessed as halfwords to originate from addresses with address line 0 being 0 (addresses ending with 0, 2, 4, 6, 8, A, C, and E in hexadecimal notation) and data accessed as words to originate from addresses with address lines 0 and 1 being 0 (addresses ending with 0, 4, 8, and C in hexadecimal notation). This rule applies to both off and on-chip memory usage.

The SRAM controller incorporates a write-back buffer in order to prevent CPU stalls during back-to-back writes. The write-back buffer always holds the last data sent by software to the SRAM. This data is only written to the SRAM when another write is requested by software (the data is only written to the SRAM when software does another write). If a chip reset occurs, actual SRAM contents will not reflect the most recent write request (i.e. after a "warm" chip reset, the SRAM does not reflect the last write operation). Any software that checks SRAM contents after reset must take this into account. Two identical writes to a location guarantee that the data will be present after a Reset. Alternatively, a dummy write operation before entering idle or power-down mode will similarly guarantee that the last data written will be present in SRAM after a subsequent Reset.

1.9 Block diagram

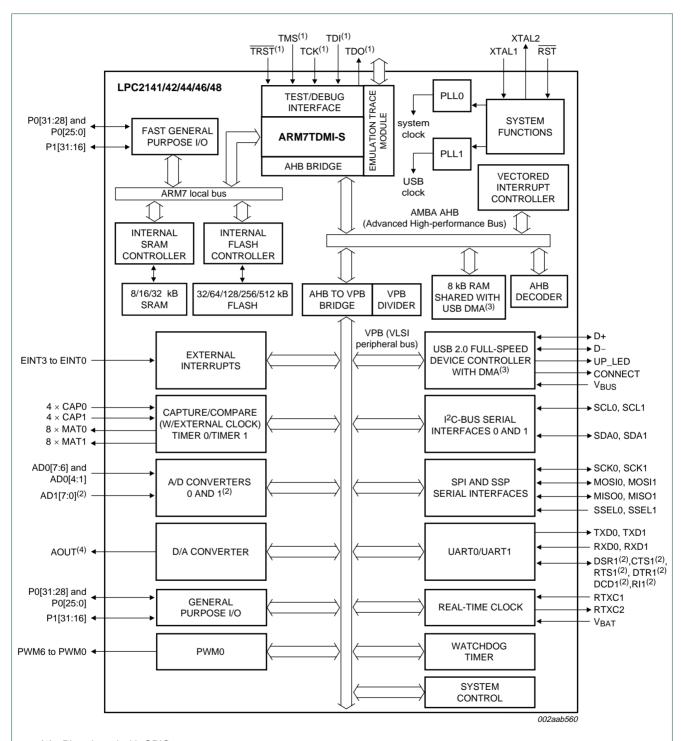

- (1) Pins shared with GPIO.
- (2) LPCC2144/6/8 only.
- (3) USB DMA controller with 8 kB of RAM accessible as general purpose RAM and/or DMA is available in LPC2146/8 only.
- (4) LPC2142/4/6/8 only.

Fig 1. LPC2141/2/4/6/8 block diagram



UM10139


Chapter 2: LPC2141/2/4/6/8 Memory Addressing

Rev. 01 — 15 August 2005

User manual


2.1 Memory maps

The LPC2141/2/4/6/8 incorporates several distinct memory regions, shown in the following figures. Figure 2 shows the overall map of the entire address space from the user program viewpoint following reset. The interrupt vector area supports address remapping, which is described later in this section.

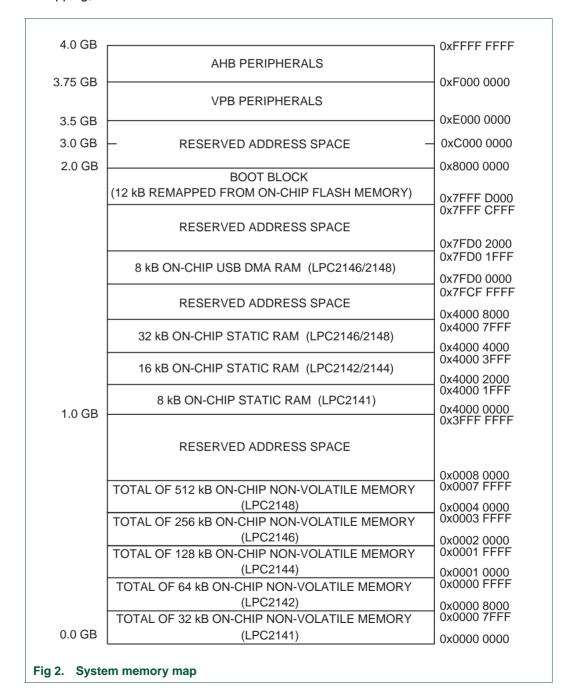

8

Chapter 2: Memory map

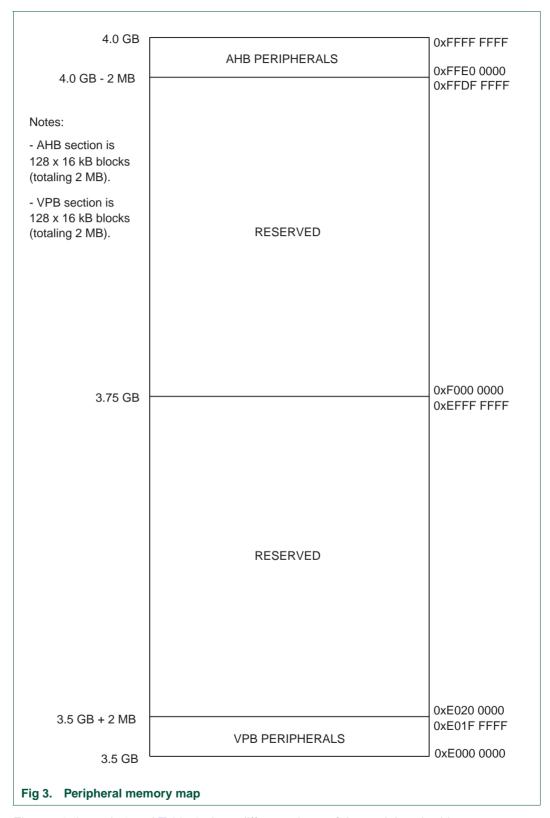

Figures 3 through 4 and Table 2 show different views of the peripheral address space. Both the AHB and VPB peripheral areas are 2 megabyte spaces which are divided up into 128 peripherals. Each peripheral space is 16 kilobytes in size. This allows simplifying the

Volume 1

address decoding for each peripheral. All peripheral register addresses are word aligned (to 32-bit boundaries) regardless of their size. This eliminates the need for byte lane mapping hardware that would be required to allow byte (8-bit) or half-word (16-bit) accesses to occur at smaller boundaries. An implication of this is that word and half-word registers must be accessed all at once. For example, it is not possible to read or write the upper byte of a word register separately.

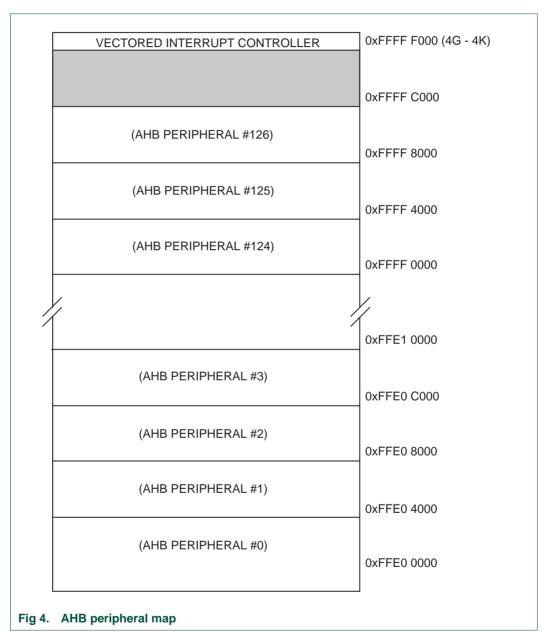


Table 2:

	•	
VPB peripheral	Base address	Peripheral name
0	0xE000 0000	Watchdog timer
1	0xE000 4000	Timer 0
2	0xE000 8000	Timer 1

VPB peripheries and base addresses

Chapter 2: Memory map

Table 2: VPB peripheries and base addresses

Table 2. VI B peripriorite and base addresses			
VPB peripheral	Base address	Peripheral name	
3	0xE000 C000	UART0	
4	0xE001 0000	UART1	
5	0xE001 4000	PWM	
6	0xE001 8000	Not used	
7	0xE001 C000	I ² C0	
8	0xE002 0000	SPI0	
9	0xE002 4000	RTC	
10	0xE002 8000	GPIO	
11	0xE002 C000	Pin connect block	
12	0xE003 0000	Not used	
13	0xE003 4000	ADC0	
14 - 22	0xE003 8000 0xE005 8000	Not used	
23	0xE005 C000	I ² C1	
24	0xE006 0000	ADC1	
25	0xE006 4000	Not used	
26	0xE006 8000	SSP	
27	0xE006 C000	DAC	
28 - 35	0xE007 0000 0xE008 C000	Not used	
36	0xE009 0000	USB	
37 - 126	0xE009 4000 0xE01F 8000	Not used	
127	0xE01F C000	System Control Block	

2.2 LPC2141/2142/2144/2146/2148 memory re-mapping and boot block

2.2.1 Memory map concepts and operating modes

The basic concept on the LPC2141/2/4/6/8 is that each memory area has a "natural" location in the memory map. This is the address range for which code residing in that area is written. The bulk of each memory space remains permanently fixed in the same location, eliminating the need to have portions of the code designed to run in different address ranges.

Because of the location of the interrupt vectors on the ARM7 processor (at addresses 0x0000 0000 through 0x0000 001C, as shown in <u>Table 3</u> below), a small portion of the Boot Block and SRAM spaces need to be re-mapped in order to allow alternative uses of interrupts in the different operating modes described in <u>Table 4</u>. Re-mapping of the interrupts is accomplished via the Memory Mapping Control feature (<u>Section 3.7 "Memory mapping control" on page 26</u>).

Chapter 2: Memory map

Table 3: ARM exception vector locations

Address	Exception
0x0000 0000	Reset
0x0000 0004	Undefined Instruction
0x0000 0008	Software Interrupt
0x0000 000C	Prefetch Abort (instruction fetch memory fault)
0x0000 0010	Data Abort (data access memory fault)
0x0000 0014	Reserved
	Note: Identified as reserved in ARM documentation, this location is used by the Boot Loader as the Valid User Program key. This is described in detail in "Flash Memory System and Programming" chapter on page 291.
0x0000 0018	IRQ
0x0000 001C	FIQ

Table 4: LPC2141/2/4/6/8 memory mapping modes

Mode	Activation	Usage
Boot Loader mode	Hardware activation by any Reset	The Boot Loader always executes after any reset. The Boot Block interrupt vectors are mapped to the bottom of memory to allow handling exceptions and using interrupts during the Boot Loading process.
User Flash mode	Software activation by Boot code	Activated by Boot Loader when a valid User Program Signature is recognized in memory and Boot Loader operation is not forced. Interrupt vectors are not re-mapped and are found in the bottom of the Flash memory.
User RAM mode	Software activation by User program	Activated by a User Program as desired. Interrupt vectors are re-mapped to the bottom of the Static RAM.

2.2.2 Memory re-mapping

In order to allow for compatibility with future derivatives, the entire Boot Block is mapped to the top of the on-chip memory space. In this manner, the use of larger or smaller flash modules will not require changing the location of the Boot Block (which would require changing the Boot Loader code itself) or changing the mapping of the Boot Block interrupt vectors. Memory spaces other than the interrupt vectors remain in fixed locations. Figure 5 shows the on-chip memory mapping in the modes defined above.

The portion of memory that is re-mapped to allow interrupt processing in different modes includes the interrupt vector area (32 bytes) and an additional 32 bytes, for a total of 64 bytes. The re-mapped code locations overlay addresses 0x0000 0000 through 0x0000 003F. A typical user program in the Flash memory can place the entire FIQ handler at address 0x0000 001C without any need to consider memory boundaries. The vector contained in the SRAM, external memory, and Boot Block must contain branches to the actual interrupt handlers, or to other instructions that accomplish the branch to the interrupt handlers.

There are three reasons this configuration was chosen:

1. To give the FIQ handler in the Flash memory the advantage of not having to take a memory boundary caused by the remapping into account.

Volume 1


- 2. Minimize the need to for the SRAM and Boot Block vectors to deal with arbitrary boundaries in the middle of code space.
- 3. To provide space to store constants for jumping beyond the range of single word branch instructions.

Re-mapped memory areas, including the Boot Block and interrupt vectors, continue to appear in their original location in addition to the re-mapped address.

Details on re-mapping and examples can be found in <u>Section 3.7 "Memory mapping</u> control" on page 26.

Chapter 2: Memory map

Chapter 2: Memory map

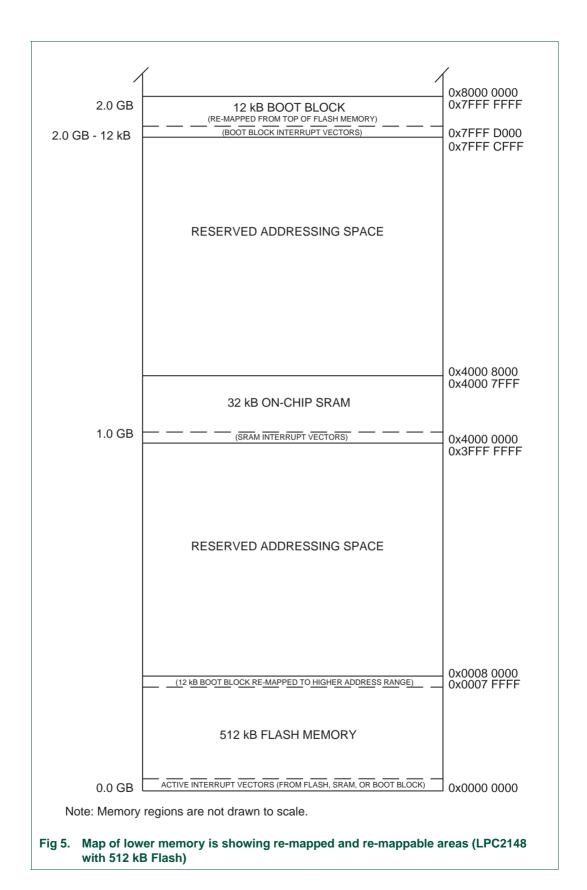



2.3 Prefetch abort and data abort exceptions

The LPC2141/2/4/6/8 generates the appropriate bus cycle abort exception if an access is attempted for an address that is in a reserved or unassigned address region. The regions are:

- Areas of the memory map that are not implemented for a specific ARM derivative. For the LPC2141/2/4/6/8, this is:
 - Address space between On-Chip Non-Volatile Memory and On-Chip SRAM, labelled "Reserved Address Space" in Figure 2. For 32 kB Flash device this is memory address range from 0x0000 8000 to 0x3FFF FFFF, for 64 kB Flash device this is memory address range from 0x0001 0000 to 0x3FFF FFFF, for 128 kB Flash device this is memory address range from 0x0002 0000 to 0x3FFF FFFF, for 256 kB Flash device this is memory address range from 0x0004 0000 to 0x3FFF FFFF while for 512 kB Flash device this range is from 0x0008 0000 to 0x3FFF FFFF.
 - Address space between On-Chip Static RAM and the Boot Block. Labelled "Reserved Address Space" in Figure 2. For 8 kB SRAM device this is memory address range from 0x4000 2000 to 0x7FFF CFFF, for 16 kB SRAM device this is memory address range from 0x4000 4000 to 0x7FFF CFFF. For 32 kB SRAM device this range is from 0x4000 8000 to 0x7FCF FFFF where the 8 kB USB DMA RAM starts, and from 0x7FD0 2000 to 0x7FFF CFFF.
 - Address space between 0x8000 0000 and 0xDFFF FFFF, labelled "Reserved Adress Space".
 - Reserved regions of the AHB and VPB spaces. See Figure 3.
- Unassigned AHB peripheral spaces. See Figure 4.
- Unassigned VPB peripheral spaces. See <u>Table 2</u>.

For these areas, both attempted data access and instruction fetch generate an exception. In addition, a Prefetch Abort exception is generated for any instruction fetch that maps to an AHB or VPB peripheral address.

Within the address space of an existing VPB peripheral, a data abort exception is not generated in response to an access to an undefined address. Address decoding within each peripheral is limited to that needed to distinguish defined registers within the peripheral itself. For example, an access to address 0xE000 D000 (an undefined address within the UART0 space) may result in an access to the register defined at address 0xE000 C000. Details of such address aliasing within a peripheral space are not defined in the LPC2141/2/4/6/8 documentation and are not a supported feature.

Note that the ARM core stores the Prefetch Abort flag along with the associated instruction (which will be meaningless) in the pipeline and processes the abort only if an attempt is made to execute the instruction fetched from the illegal address. This prevents accidental aborts that could be caused by prefetches that occur when code is executed very near a memory boundary.



UM10139

Chapter 3: System Control Block

Rev. 01 — 15 August 2005

User manual



The System Control Block includes several system features and control registers for a number of functions that are not related to specific peripheral devices. These include:

- Crystal Oscillator
- External Interrupt Inputs
- Miscellaneous System Controls and Status
- Memory Mapping Control
- PLL
- Power Control
- Reset
- VPB Divider
- Wakeup Timer

Each type of function has its own register(s) if any are required and unneeded bits are defined as reserved in order to allow future expansion. Unrelated functions never share the same register addresses

3.2 Pin description

Table 5 shows pins that are associated with System Control block functions.

Table 5: Pin summary

	-	
Pin name	Pin direction	Pin description
X1	Input	Crystal Oscillator Input - Input to the oscillator and internal clock generator circuits
X2	Output	Crystal Oscillator Output - Output from the oscillator amplifier
EINT0	Input	External Interrupt Input 0 - An active low/high level or falling/rising edge general purpose interrupt input. This pin may be used to wake up the processor from Idle or Power-down modes.
		Pins P0.1 and P0.16 can be selected to perform EINT0 function.
EINT1	Input	External Interrupt Input 1 - See the EINTO description above. Pins P0.3 and P0.14 can be selected to perform EINT1 function. Important: LOW level on pin P0.14 immediately after reset is considered as an external hardware request to start the ISP command handler. More details on ISP and Serial Boot Loader can be found in "Flash Memory System and Programming" chapter on page 291.

Chapter 3: System Control Block

Table 5: Pin summary

Pin name	Pin direction	Pin description
EINT2	Input	External Interrupt Input 2 - See the EINT0 description above. Pins P0.7 and P0.15 can be selected to perform EINT2 function.
EINT3	Input	External Interrupt Input 3 - See the EINT0 description above. Pins P0.9, P0.20 and P0.30 can be selected to perform EINT3 function.
RESET	Input	External Reset input - A LOW on this pin resets the chip, causing I/O ports and peripherals to take on their default states, and the processor to begin execution at address 0x0000 0000.

3.3 Register description

All registers, regardless of size, are on word address boundaries. Details of the registers appear in the description of each function.

Table 6: Summary of system control registers

Name	Description	Access	Reset value[1]	Address	
External Interrupts					
EXTINT	External Interrupt Flag Register	R/W	0	0xE01F C140	
INTWAKE	Interrupt Wakeup Register	R/W	0	0xE01F C144	
EXTMODE	External Interrupt Mode Register	R/W	0	0xE01F C148	
EXTPOLAR	External Interrupt Polarity Register	R/W	0	0xE01F C14C	
Memory Mappi	ng Control				
MEMMAP	Memory Mapping Control	R/W	0	0xE01F C040	
Phase Locked	Loop				
PLL0CON	PLL0 Control Register	R/W	0	0xE01F C080	
PLL0CFG	PLL0 Configuration Register	R/W	0	0xE01F C084	
PLL0STAT	PLL0 Status Register	RO	0	0xE01F C088	
PLL0FEED	PLL0 Feed Register	WO	NA	0xE01F C08C	
PLL1CON	PLL1 (USB) Control Register	R/W	0	0xE01F C0A0	
PLL1CFG	PLL1 (USB) Configuration Register	R/W	0	0xE01F C0A4	
PLL1STAT	PLL1 (USB) Status Register	RO	0	0xE01F C0A8	
PLL1FEED	PLL1 (USB) Feed Register	WO	NA	0xE01F C0AC	
Power Control					
PCON	Power Control Register	R/W	0	0xE01F C0C0	
PCONP	Power Control for Peripherals	R/W	0x03BE	0xE01F C0C4	
VPB Divider					
VPBDIV	VPB Divider Control	R/W	0	0xE01F C100	
Reset					
RSID	Reset Source Identification Register	R/W	0	0xE01F C180	
Code Security	Debugging				

Code Security/Debugging

Table 6: Summary of system control registers

Name	Description	Access	Reset value ^[1]	Address
CSPR	Code Security Protection Register	RO	0	0xE01F C184
Syscon Miscella	neous Registers			
SCS	System Controls and Status	R/W	0	0xE01F C1A0

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

3.4 Crystal oscillator

While an input signal of 50-50 duty cycle within a frequency range from 1 MHz to 50 MHz can be used by the LPC2141/2/4/6/8 if supplied to its input XTAL1 pin, this microcontroller's onboard oscillator circuit supports external crystals in the range of 1 MHz to 30 MHz only. If the on-chip PLL system or the boot-loader is used, the input clock frequency is limited to an exclusive range of 10 MHz to 25 MHz.

The oscillator output frequency is called F_{OSC} and the ARM processor clock frequency is referred to as CCLK for purposes of rate equations, etc. elsewhere in this document. F_{OSC} and CCLK are the same value unless the PLL is running and connected. Refer to the Section 3.8 "Phase Locked Loop (PLL)" on page 27 for details and frequency limitations.

The onboard oscillator in the LPC2141/2/4/6/8 can operate in one of two modes: slave mode and oscillation mode.

In slave mode the input clock signal should be coupled by means of a capacitor of 100 pF (C_C in Figure 6, drawing a), with an amplitude of at least 200 mVrms. The X2 pin in this configuration can be left not connected. If slave mode is selected, the F_{OSC} signal of 50-50 duty cycle can range from 1 MHz to 50 MHz.

External components and models used in oscillation mode are shown in <u>Figure 6</u>, drawings b and c, and in <u>Table 7</u>. Since the feedback resistance is integrated on chip, only a crystal and the capacitances C_{X1} and C_{X2} need to be connected externally in case of fundamental mode oscillation (the fundamental frequency is represented by L, C_L and R_S). Capacitance C_P in <u>Figure 6</u>, drawing c, represents the parallel package capacitance and should not be larger than 7 pF. Parameters F_C , C_L , R_S and C_P are supplied by the crystal manufacturer.

Choosing an oscillation mode as an on-board oscillator mode of operation limits F_{OSC} clock selection to 1 MHz to 30 MHz.


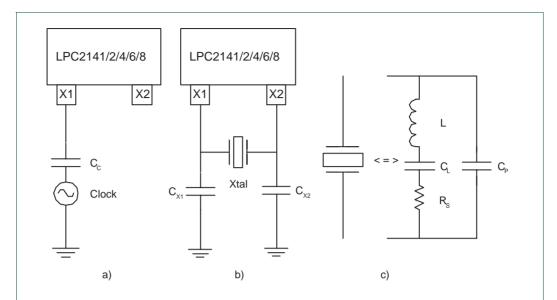


Fig 6. Oscillator modes and models: a) slave mode of operation, b) oscillation mode of operation, c) external crystal model used for C_{X1}/X_2 evaluation

Table 7: Recommended values for $C_{X1/X2}$ in oscillation mode (crystal and external components parameters)

Fundamental oscillation frequency Fosc	Crystal load capacitance C _L	Maximum crystal series resistance R _S	External load capacitors C _{X1} , _{CX2}
1 MHz - 5 MHz	10 pF	NA	NA
	20 pF	NA	NA
	30 pF	< 300 Ω	58 pF, 58 pF
5 MHz - 10 MHz	10 pF	< 300 Ω	18 pF, 18 pF
	20 pF	< 300 Ω	38 pF, 38 pF
	30 pF	< 300 Ω	58 pF, 58 pF
10 MHz - 15 MHz	10 pF	< 300 Ω	18 pF, 18 pF
	20 pF	< 220 Ω	38 pF, 38 pF
	30 pF	< 140 Ω	58 pF, 58 pF
15 MHz - 20 MHz	10 pF	< 220 Ω	18 pF, 18 pF
	20 pF	< 140 Ω	38 pF, 38 pF
	30 pF	< 80 Ω	58 pF, 58 pF
20 MHz - 25 MHz	10 pF	< 160 Ω	18 pF, 18 pF
	20 pF	< 90 Ω	38 pF, 38 pF
	30 pF	< 50 Ω	58 pF, 58 pF
25 MHz - 30 MHz	10 pF	< 130 Ω	18 pF, 18 pF
	20 pF	< 50 Ω	38 pF, 38 pF
	30 pF	NA	NA

Chapter 3: System Control Block

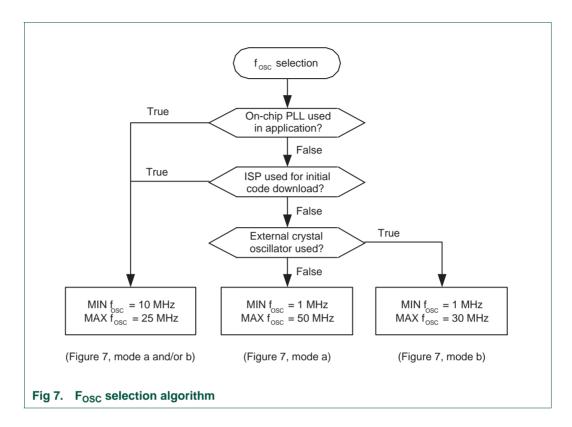

3.5 External interrupt inputs

The LPC2141/2/4/6/8 includes four External Interrupt Inputs as selectable pin functions. The External Interrupt Inputs can optionally be used to wake up the processor from Power-down mode.

3.5.1 Register description

The external interrupt function has four registers associated with it. The EXTINT register contains the interrupt flags, and the EXTWAKEUP register contains bits that enable individual external interrupts to wake up the microcontroller from Power-down mode. The EXTMODE and EXTPOLAR registers specify the level and edge sensitivity parameters.

Table 8: External interrupt registers

Name	Description	Access	Reset value[1]	Address
EXTINT	The External Interrupt Flag Register contains interrupt flags for EINT0, EINT1, EINT2 and EINT3. See Table 9.	R/W	0	0xE01F C140

Table 8: External interrupt registers

Name	Description	Access	Reset value[1]	Address
INTWAKE	The Interrupt Wakeup Register contains four enable bits that control whether each external interrupt will cause the processor to wake up from Power-down mode. See <u>Table 10</u> .	R/W	0	0xE01F C144
EXTMODE	The External Interrupt Mode Register controls whether each pin is edge- or level sensitive.	R/W	0	0xE01F C148
EXTPOLAR	The External Interrupt Polarity Register controls which level or edge on each pin will cause an interrupt.	R/W	0	0xE01F C14C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

3.5.2 External Interrupt Flag register (EXTINT - 0xE01F C140)

When a pin is selected for its external interrupt function, the level or edge on that pin (selected by its bits in the EXTPOLAR and EXTMODE registers) will set its interrupt flag in this register. This asserts the corresponding interrupt request to the VIC, which will cause an interrupt if interrupts from the pin are enabled.

Writing ones to bits EINT0 through EINT3 in EXTINT register clears the corresponding bits. In level-sensitive mode this action is efficacious only when the pin is in its inactive state.

Once a bit from EINT0 to EINT3 is set and an appropriate code starts to execute (handling wakeup and/or external interrupt), this bit in EXTINT register must be cleared. Otherwise the event that was just triggered by activity on the EINT pin will not be recognized in the future.

Important: whenever a change of external interrupt operating mode (i.e. active level/edge) is performed (including the initialization of an external interrupt), the corresponding bit in the EXTINT register must be cleared! For details see Section 3.5.4 "External Interrupt Mode register (EXTMODE - 0xE01F C148)" and Section 3.5.5 "External Interrupt Polarity register (EXTPOLAR - 0xE01F C14C)".

For example, if a system wakes up from power-down using a low level on external interrupt 0 pin, its post-wakeup code must reset the EINT0 bit in order to allow future entry into the power-down mode. If the EINT0 bit is left set to 1, subsequent attempt(s) to invoke power-down mode will fail. The same goes for external interrupt handling.

More details on power-down mode will be discussed in the following chapters.

Volume 1

Bit	Symbol	Description	Reset
			value
0	EINT0	In level-sensitive mode, this bit is set if the EINT0 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT0 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to two pins can be selected to perform the EINT0 function (see P0.1 and P0.16 description in "Pin Configuration" chapter page 66.)	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT0 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
1	EINT1	In level-sensitive mode, this bit is set if the EINT1 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT1 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to two pins can be selected to perform the EINT1 function (see P0.3 and P0.14 description in "Pin Configuration" chapter on page 66.)	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT1 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
2	EINT2	In level-sensitive mode, this bit is set if the EINT2 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT2 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to two pins can be selected to perform the EINT2 function (see P0.7 and P0.15 description in "Pin Configuration" chapter on page 66.)	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT2 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
3	EINT3	In level-sensitive mode, this bit is set if the EINT3 function is selected for its pin, and the pin is in its active state. In edge-sensitive mode, this bit is set if the EINT3 function is selected for its pin, and the selected edge occurs on the pin.	0
		Up to three pins can be selected to perform the EINT3 function (see P0.9, P0.20 and P0.30 description in "Pin Configuration" chapter on page 66.)	
		This bit is cleared by writing a one to it, except in level sensitive mode when the pin is in its active state (e.g. if EINT3 is selected to be low level sensitive and a low level is present on the corresponding pin, this bit can not be cleared; this bit can be cleared only when the signal on the pin becomes high).	
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.5.3 Interrupt Wakeup register (INTWAKE - 0xE01F C144)

Enable bits in the INTWAKE register allow the external interrupts and other sources to wake up the processor if it is in Power-down mode. The related EINTn function must be mapped to the pin in order for the wakeup process to take place. It is not necessary for the interrupt to be enabled in the Vectored Interrupt Controller for a wakeup to take place. This arrangement allows additional capabilities, such as having an external interrupt input wake up the processor from Power-down mode without causing an interrupt (simply resuming operation), or allowing an interrupt to be enabled during Power-down without waking the processor up if it is asserted (eliminating the need to disable the interrupt if the wakeup feature is not desirable in the application).

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Chapter 3: System Control Block

For an external interrupt pin to be a source that would wake up the microcontroller from Power-down mode, it is also necessary to clear the corresponding bit in the External Interrupt Flag register (Section 3.5.2 on page 21).

Table 10: Interrupt Wakeup register (INTWAKE - address 0xE01F C144) bit description

Bit	Symbol	Description	Reset value
0	EXTWAKE0	When one, assertion of EINT0 will wake up the processor from Power-down mode.	0
1	EXTWAKE1	When one, assertion of EINT1 will wake up the processor from Power-down mode.	0
2	EXTWAKE2	When one, assertion of EINT2 will wake up the processor from Power-down mode.	0
3	EXTWAKE3	When one, assertion of EINT3 will wake up the processor from Power-down mode.	0
4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
5	USBWAKE	When one, activity of the USB bus (USB_need_clock = 1) will wake up the processor from Power-down mode. Any change of state on the USB data pins will cause a wakeup when this bit is set. For details on the relationship of USB to Power-down mode and wakeup, see Section 3.8.8 (USBIntSt - 0xE01F C1C0)" on page 200 and Section 3.8.8 (PLL and Power-down mode" on page 32.	0
13:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
14	BODWAKE	When one, a BOD interrupt will wake up the processor from Power-down mode.	0
15	RTCWAKE	When one, assertion of an RTC interrupt will wake up the processor from Power-down mode.	0

3.5.4 External Interrupt Mode register (EXTMODE - 0xE01F C148)

The bits in this register select whether each EINT pin is level- or edge-sensitive. Only pins that are selected for the EINT function (see chapter Pin Connect Block on page 75) and enabled via the VICIntEnable register (Section 5.4.4 "Interrupt Enable register (VICIntEnable - 0xFFFF F010)" on page 54) can cause interrupts from the External Interrupt function (though of course pins selected for other functions may cause interrupts from those functions).

Note: Software should only change a bit in this register when its interrupt is disabled in the VICIntEnable register, and should write the corresponding 1 to the EXTINT register before enabling (initializing) or re-enabling the interrupt, to clear the EXTINT bit that could be set by changing the mode.

Table 11: External Interrupt Mode register (EXTMODE - address 0xE01F C148) bit description

Bit	Symbol	Value	Description	Reset value
0	EXTMODE0	0	Level-sensitivity is selected for EINT0.	0
		1	EINT0 is edge sensitive.	_
1	EXTMODE1	0	Level-sensitivity is selected for EINT1.	0

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Table 11: External Interrupt Mode register (EXTMODE - address 0xE01F C148) bit description

Bit	Symbol	Value	Description	Reset value
		1	EINT1 is edge sensitive.	
2	EXTMODE2	0	Level-sensitivity is selected for EINT2.	0
		1	EINT2 is edge sensitive.	
3	EXTMODE3	0	Level-sensitivity is selected for EINT3.	0
		1	EINT3 is edge sensitive.	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.5.5 External Interrupt Polarity register (EXTPOLAR - 0xE01F C14C)

In level-sensitive mode, the bits in this register select whether the corresponding pin is high- or low-active. In edge-sensitive mode, they select whether the pin is rising- or falling-edge sensitive. Only pins that are selected for the EINT function (see "Pin Connect Block" chapter on page 75) and enabled in the VICIntEnable register (Section 5.4.4 "Interrupt Enable register (VICIntEnable - 0xFFFF F010)" on page 54) can cause interrupts from the External Interrupt function (though of course pins selected for other functions may cause interrupts from those functions).

Note: Software should only change a bit in this register when its interrupt is disabled in the VICIntEnable register, and should write the corresponding 1 to the EXTINT register before enabling (initializing) or re-enabling the interrupt, to clear the EXTINT bit that could be set by changing the polarity.

Table 12: External Interrupt Polarity register (EXTPOLAR - address 0xE01F C14C) bit description

Bit	Symbol	Value	Description	Reset value
0	EXTPOLAR0	0	EINT0 is low-active or falling-edge sensitive (depending on EXTMODE0).	0
		1	EINT0 is high-active or rising-edge sensitive (depending on EXTMODE0).	_
1	EXTPOLAR1	0	EINT1 is low-active or falling-edge sensitive (depending on EXTMODE1).	0
		1	EINT1 is high-active or rising-edge sensitive (depending on EXTMODE1).	
2	EXTPOLAR2	0	EINT2 is low-active or falling-edge sensitive (depending on EXTMODE2).	0
		1	EINT2 is high-active or rising-edge sensitive (depending on EXTMODE2).	
3	EXTPOLAR3	0	EINT3 is low-active or falling-edge sensitive (depending on EXTMODE3).	0
		1	EINT3 is high-active or rising-edge sensitive (depending on EXTMODE3).	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA


3.5.6 Multiple external interrupt pins

Software can select multiple pins for each of EINT3:0 in the Pin Select registers, which are described in chapter Pin Connect Block on page 75. The external interrupt logic for each of EINT3:0 receives the state of all of its associated pins from the pins' receivers, along with signals that indicate whether each pin is selected for the EINT function. The external interrupt logic handles the case when more than one pin is so selected, differently according to the state of its Mode and Polarity bits:

- In Low-Active Level Sensitive mode, the states of all pins selected for the same EINTx functionality are digitally combined using a positive logic AND gate.
- In High-Active Level Sensitive mode, the states of all pins selected for the same EINTx functionality are digitally combined using a positive logic OR gate.
- In Edge Sensitive mode, regardless of polarity, the pin with the lowest GPIO port number is used. (Selecting multiple pins for an EINTx in edge-sensitive mode could be considered a programming error.)

The signal derived by this logic processing multiple external interrupt pins is the EINTi signal in the following logic schematic <u>Figure 8</u>.

For example, if the EINT3 function is selected in the PINSEL0 and PINSEL1 registers for pins P0.9, P0.20 and P0.30, and EINT3 is configured to be low level sensitive, the inputs from all three pins will be logically ANDed. When more than one EINT pin is logically ORed, the interrupt service routine can read the states of the pins from the GPIO port using the IO0PIN and IO1PIN registers, to determine which pin(s) caused the interrupt.

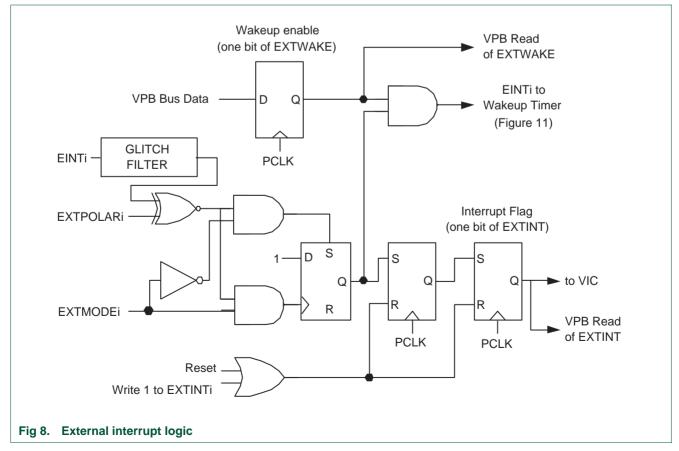



3.6 Other system controls

Some aspects of controlling LPC2141/2/4/6/8 operation that do not fit into peripheral or other registers are grouped here.

3.6.1 System Control and Status flags register (SCS - 0xE01F C1A0)

Table 13: System Control and Status flags register (SCS - address 0xE01F C1A0) bit description

Bit	Symbol	Value	Description	Reset value
0	GPIO0M		GPIO port 0 mode selection.	0
		0	GPIO port 0 is accessed via VPB addresses in a fashion compatible with previous LCP2000 devices.	_
		1	High speed GPIO is enabled on GPIO port 0, accessed via addresses in the on-chip memory range. This mode includes the port masking feature described in the GPIO chapter on page page 81.	
1	GPIO1M		GPIO port 1 mode selection.	0
		0	GPIO port 1 is accessed via VPB addresses in a fashion compatible with previous LCP2000 devices.	_
		1	High speed GPIO is enabled on GPIO port 1, accessed via addresses in the on-chip memory range. This mode includes the port masking feature described in the GPIO chapter on page page 81.	_
31:2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.7 Memory mapping control

The Memory Mapping Control alters the mapping of the interrupt vectors that appear beginning at address 0x0000 0000. This allows code running in different memory spaces to have control of the interrupts.

3.7.1 Memory Mapping control register (MEMMAP - 0xE01F C040)

Whenever an exception handling is necessary, the microcontroller will fetch an instruction residing on the exception corresponding address as described in Table 3 "ARM exception vector locations" on page 12. The MEMMAP register determines the source of data that will fill this table.

Table 14: Memory Mapping control register (MEMMAP - address 0xE01F C040) bit description

Bit	Symbol	Value	Description	Reset value
1:0	MAP	00	Boot Loader Mode. Interrupt vectors are re-mapped to Boot Block.	00
		01	User Flash Mode. Interrupt vectors are not re-mapped and reside in Flash.	
		10	User RAM Mode. Interrupt vectors are re-mapped to Static RAM.	
		11	Reserved. Do not use this option.	_
			g: Improper setting of this value may result in incorrect on of the device.	
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.7.2 Memory mapping control usage notes

The Memory Mapping Control simply selects one out of three available sources of data (sets of 64 bytes each) necessary for handling ARM exceptions (interrupts).

For example, whenever a Software Interrupt request is generated, the ARM core will always fetch 32-bit data "residing" on 0x0000 0008 see <u>Table 3 "ARM exception vector locations" on page 12</u>. This means that when MEMMAP[1:0]=10 (User RAM Mode), a read/fetch from 0x0000 0008 will provide data stored in 0x4000 0008. In case of MEMMAP[1:0]=00 (Boot Loader Mode), a read/fetch from 0x0000 0008 will provide data available also at 0x7FFF E008 (Boot Block remapped from on-chip Bootloader).

3.8 Phase Locked Loop (PLL)

There are two PLL modules in the LPC2141/2/4/6/8 microcontroller. The PLL0 is used to generate the CCLK clock (system clock) while the PLL1 has to supply the clock for the USB at the fixed rate of 48 MHz. Structurally these two PLLs are identical with exception of the PLL interrupt capabilities reserved only for the PLL0.

The PLL0 and PLL1 accept an input clock frequency in the range of 10 MHz to 25 MHz only. The input frequency is multiplied up the range of 10 MHz to 60 MHz for the CCLK and 48 MHz for the USB clock using a Current Controlled Oscillators (CCO). The multiplier can be an integer value from 1 to 32 (in practice, the multiplier value cannot be higher than 6 on the LPC2141/2/4/6/8 due to the upper frequency limit of the CPU). The CCO operates in the range of 156 MHz to 320 MHz, so there is an additional divider in the loop to keep the CCO within its frequency range while the PLL is providing the desired output frequency. The output divider may be set to divide by 2, 4, 8, or 16 to produce the output clock. Since the minimum output divider value is 2, it is insured that the PLL output has a 50% duty cycle. A block diagram of the PLL is shown in Figure 9.

PLL activation is controlled via the PLLCON register. The PLL multiplier and divider values are controlled by the PLLCFG register. These two registers are protected in order to prevent accidental alteration of PLL parameters or deactivation of the PLL. Since all chip operations, including the Watchdog Timer, are dependent on the PLL0 when it is providing the chip clock, accidental changes to the PLL setup could result in unexpected behavior of

Chapter 3: System Control Block

the microcontroller. The same concern is present with the PLL1 and the USB. The protection is accomplished by a feed sequence similar to that of the Watchdog Timer. Details are provided in the description of the PLLFEED register.

Both PLLs are turned off and bypassed following a chip Reset and when by entering Power-down mode. The PLL is enabled by software only. The program must configure and activate the PLL, wait for the PLL to Lock, then connect to the PLL as a clock source.

3.8.1 Register description


The PLL is controlled by the registers shown in <u>Table 15</u>. More detailed descriptions follow.

Warning: Improper setting of the PLL0 and PLL1 values may result in incorrect operation of the device and the USB module!

Table 15: PLL registers

Generic name	Description	Access	Reset value ^[1]	System clock (PLL0) Address & Name	USB 48 MHz clock (PLL1) Address & Name
PLLCON	PLL Control Register. Holding register for updating PLL control bits. Values written to this register do not take effect until a valid PLL feed sequence has taken place.	R/W	0	0xE01F C080 PLL0CON	0xE01F C0A0 PLL1CON
PLLCFG	PLL Configuration Register. Holding register for updating PLL configuration values. Values written to this register do not take effect until a valid PLL feed sequence has taken place.	R/W	0	0xE01F C084 PLL0CFG	0xE01F C0A4 PLL1CFG
PLLSTAT	PLL Status Register. Read-back register for PLL control and configuration information. If PLLCON or PLLCFG have been written to, but a PLL feed sequence has not yet occurred, they will not reflect the current PLL state. Reading this register provides the actual values controlling the PLL, as well as the status of the PLL.	RO	0	0xE01F C088 PLL0STAT	0xE01F C0A8 PLL1STAT
PLLFEED	PLL Feed Register. This register enables loading of the PLL control and configuration information from the PLLCON and PLLCFG registers into the shadow registers that actually affect PLL operation.	WO	NA	0xE01F C08C PLL0FEED	0xE01F C0AC PLL1FEED

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

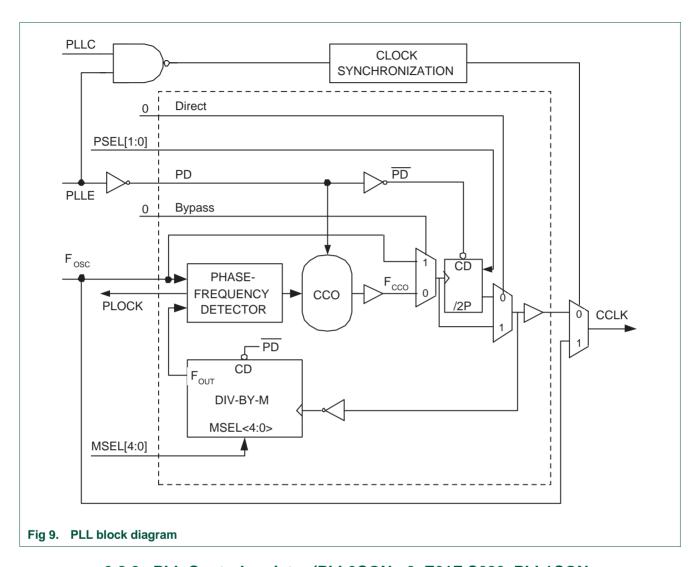

3.8.2 PLL Control register (PLL0CON - 0xE01F C080, PLL1CON - 0xE01F C0A0)

The PLLCON register contains the bits that enable and connect the PLL. Enabling the PLL allows it to attempt to lock to the current settings of the multiplier and divider values. Connecting the PLL causes the processor and all chip functions to run from the PLL output clock. Changes to the PLLCON register do not take effect until a correct PLL feed sequence has been given (see Section 3.8.7 "PLL Feed register (PLL0FEED - 0xE01F C08C, PLL1FEED - 0xE01F C0AC)" and Section 3.8.3 "PLL Configuration register (PLL0CFG - 0xE01F C084, PLL1CFG - 0xE01F C0A4)" on page 30).

Table 16: PLL Control register (PLL0CON - address 0xE01F C080, PLL1CON - address 0xE01F C0A0) bit description

Bit	Symbol	Description	Reset value
0	PLLE	PLL Enable. When one, and after a valid PLL feed, this bit will activate the PLL and allow it to lock to the requested frequency. See PLLSTAT register, Table 18.	0
1	PLLC	PLL Connect. When PLLC and PLLE are both set to one, and after a valid PLL feed, connects the PLL as the clock source for the microcontroller. Otherwise, the oscillator clock is used directly by the microcontroller. See PLLSTAT register, <u>Table 18</u> .	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

The PLL must be set up, enabled, and Lock established before it may be used as a clock source. When switching from the oscillator clock to the PLL output or vice versa, internal circuitry synchronizes the operation in order to ensure that glitches are not generated. Hardware does not insure that the PLL is locked before it is connected or automatically disconnect the PLL if lock is lost during operation. In the event of loss of PLL lock, it is likely that the oscillator clock has become unstable and disconnecting the PLL will not remedy the situation.

3.8.3 PLL Configuration register (PLL0CFG - 0xE01F C084, PLL1CFG - 0xE01F C0A4)

The PLLCFG register contains the PLL multiplier and divider values. Changes to the PLLCFG register do not take effect until a correct PLL feed sequence has been given (see Section 3.8.7 "PLL Feed register (PLL0FEED - 0xE01F C08C, PLL1FEED - 0xE01F C0AC)" on page 32). Calculations for the PLL frequency, and multiplier and divider values are found in the PLL Frequency Calculation section on page 33.

Table 17: PLL Configuration register (PLL0CFG - address 0xE01F C084, PLL1CFG - address 0xE01F C0A4) bit description

Bit	Symbol	Description	Reset value
4:0	MSEL	PLL Multiplier value. Supplies the value "M" in the PLL frequency calculations.	0
		Note: For details on selecting the right value for MSEL see <u>Section</u> 3.8.9 "PLL frequency calculation" on page 33.	
6:5	PSEL	PLL Divider value. Supplies the value "P" in the PLL frequency calculations.	0
		Note: For details on selecting the right value for PSEL see <u>Section</u> 3.8.9 "PLL frequency calculation" on page 33.	
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.8.4 PLL Status register (PLL0STAT - 0xE01F C088, PLL1STAT - 0xE01F C0A8)

The read-only PLLSTAT register provides the actual PLL parameters that are in effect at the time it is read, as well as the PLL status. PLLSTAT may disagree with values found in PLLCON and PLLCFG because changes to those registers do not take effect until a proper PLL feed has occurred (see Section 3.8.7 "PLL Feed register (PLL0FEED - OxE01F COAC)").

Table 18: PLL Status register (PLL0STAT - address 0xE01F C088, PLL1STAT - address 0xE01F C0A8) bit description

Bit	Symbol	Description	Reset value
4:0	MSEL	Read-back for the PLL Multiplier value. This is the value currently used by the PLL.	0
6:5	PSEL	Read-back for the PLL Divider value. This is the value currently used by the PLL.	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
8	PLLE	Read-back for the PLL Enable bit. When one, the PLL is currently activated. When zero, the PLL is turned off. This bit is automatically cleared when Power-down mode is activated.	0
9	PLLC	Read-back for the PLL Connect bit. When PLLC and PLLE are both one, the PLL is connected as the clock source for the microcontroller. When either PLLC or PLLE is zero, the PLL is bypassed and the oscillator clock is used directly by the microcontroller. This bit is automatically cleared when Power-down mode is activated.	0
10	PLOCK	Reflects the PLL Lock status. When zero, the PLL is not locked. When one, the PLL is locked onto the requested frequency.	0
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.8.5 PLL Interrupt

The PLOCK bit in the PLLSTAT register is connected to the interrupt controller. This allows for software to turn on the PLL and continue with other functions without having to wait for the PLL to achieve lock. When the interrupt occurs (PLOCK = 1), the PLL may be connected, and the interrupt disabled. For details on how to enable and disable the PLL interrupt, see Section 5.4.4 "Interrupt Enable register (VICIntEnable - 0xFFFF F010)" on page 54 and Section 5.4.5 "Interrupt Enable Clear register (VICIntEnClear - 0xFFFF F014)" on page 55.

PLL interrupt is available only in PLL0, i.e. the PLL that generates the CCLK. USB dedicated PLL1 does not have this capability.

3.8.6 PLL Modes

The combinations of PLLE and PLLC are shown in Table 19.

Table 19: PLL Control bit combinations

PLLC	PLLE	PLL Function
0	0	PLL is turned off and disconnected. The CCLK equals the unmodified clock input. This combination can not be used in case of the PLL1 since there will be no 48 MHz clock and the USB can not operate.
0	1	The PLL is active, but not yet connected. The PLL can be connected after PLOCK is asserted.
1	0	Same as 00 combination. This prevents the possibility of the PLL being connected without also being enabled.
1	1	The PLL is active and has been connected. CCLK/system clock is sourced from the PLL0 and the USB clock is sourced from the PLL1.

3.8.7 PLL Feed register (PLL0FEED - 0xE01F C08C, PLL1FEED - 0xE01F C0AC)

A correct feed sequence must be written to the PLLFEED register in order for changes to the PLLCON and PLLCFG registers to take effect. The feed sequence is:

- 1. Write the value 0xAA to PLLFEED.
- 2. Write the value 0x55 to PLLFEED.

The two writes must be in the correct sequence, and must be consecutive VPB bus cycles. The latter requirement implies that interrupts must be disabled for the duration of the PLL feed operation. If either of the feed values is incorrect, or one of the previously mentioned conditions is not met, any changes to the PLLCON or PLLCFG register will not become effective.

Table 20: PLL Feed register (PLL0FEED - address 0xE01F C08C, PLL1FEED - address 0xE01F C0AC) bit description

Bit	Symbol	Description	Reset value
7:0	PLLFEED	The PLL feed sequence must be written to this register in order for PLL configuration and control register changes to take effect.	0x00

3.8.8 PLL and Power-down mode

Power-down mode automatically turns off and disconnects activated PLL(s). Wakeup from Power-down mode does not automatically restore the PLL settings, this must be done in software. Typically, a routine to activate the PLL, wait for lock, and then connect the PLL can be called at the beginning of any interrupt service routine that might be called due to the wakeup. It is important not to attempt to restart the PLL by simply feeding it when execution resumes after a wakeup from Power-down mode. This would enable and connect the PLL at the same time, before PLL lock is established.

If activity on the USB data lines is not selected to wake up the microcontroller from Power-down mode (see Section 3.5.3 "Interrupt Wakeup register (INTWAKE - OxE01F C144)" on page 22), both the system and the USB PLL will be automatically be turned off and disconnected when Power-down mode is invoked, as described above. However, in case USBWAKE = 1 and USB_need_clock = 1 it is not possible to go into Power-down mode and any attempt to set the PD bit will fail, leaving the PLLs in the current state.

3.8.9 PLL frequency calculation

The PLL equations use the following parameters:

Table 21: Elements determining PLL's frequency

Element	Description
Fosc	the frequency from the crystal oscillator/external oscillator
F _{CCO}	the frequency of the PLL current controlled oscillator
CCLK	the PLL output frequency (also the processor clock frequency)
M	PLL Multiplier value from the MSEL bits in the PLLCFG register
P	PLL Divider value from the PSEL bits in the PLLCFG register

The PLL output frequency (when the PLL is both active and connected) is given by:

$$CCLK = M \times F_{OSC}$$
 or $CCLK = F_{CCO} / (2 \times P)$

The CCO frequency can be computed as:

$$F_{CCO} = CCLK \times 2 \times P$$
 or $F_{CCO} = F_{OSC} \times M \times 2 \times P$

The PLL inputs and settings must meet the following:

- F_{OSC} is in the range of 10 MHz to 25 MHz.
- CCLK is in the range of 10 MHz to F_{max} (the maximum allowed frequency for the microcontroller - determined by the system microcontroller is embedded in).
- F_{CCO} is in the range of 156 MHz to 320 MHz.

3.8.10 Procedure for determining PLL settings

If a particular application uses the PLL0, its configuration may be determined as follows:

- Choose the desired processor operating frequency (CCLK). This may be based on processor throughput requirements, need to support a specific set of UART baud rates, etc. Bear in mind that peripheral devices may be running from a lower clock than the processor (see Section 3.11 "VPB divider" on page 40).
- Choose an oscillator frequency (F_{OSC}). CCLK must be the whole (non-fractional) multiple of F_{OSC}.
- 3. Calculate the value of M to configure the MSEL bits. $M = CCLK / F_{OSC}$. M must be in the range of 1 to 32. The value written to the MSEL bits in PLLCFG is M-1 (see Table 23.
- 4. Find a value for P to configure the PSEL bits, such that F_{CCO} is within its defined frequency limits. F_{CCO} is calculated using the equation given above. P must have one of the values 1, 2, 4, or 8. The value written to the PSEL bits in PLLCFG is 00 for P = 1; 01 for P = 2; 10 for P = 4; 11 for P = 8 (see Table 22).

Important: if a particular application is using the USB peripheral, the PLL1 must be configured since this is the only available source of the 48 MHz clock required by the USB. This limits the selection of F_{OSC} to either 12 MHz, 16 MHz or 24 MHz.

Table 22: PLL Divider values

PSEL Bits (PLLCFG bits [6:5])	Value of P
00	1
01	2
10	4
11	8

Table 23: PLL Multiplier values

MSEL Bits (PLLCFG bits [4:0])	Value of M
00000	1
00001	2
00010	3
00011	4
11110	31
11111	32

3.8.11 PLL0 and PLL1 configuring examples

Example 1: an application not using the USB - configuring the PLL0

System design asks for F_{OSC}= 10 MHz and requires CCLK = 60 MHz.

Based on these specifications, M = CCLK / Fosc = 60 MHz / 10 MHz = 6. Consequently, M - 1 = 5 will be written as PLLCFG[4:0].

Value for P can be derived from P = F_{CCO} / (CCLK x 2), using condition that F_{CCO} must be in range of 156 MHz to 320 MHz. Assuming the lowest allowed frequency for F_{CCO} = 156 MHz, P = 156 MHz / (2 x 60 MHz) = 1.3. The highest F_{CCO} frequency criteria produces P = 2.67. The only solution for P that satisfies both of these requirements and is listed in Table 22 is P = 2. Therefore, PLLCFG[6:5] = 1 will be used.

Example 2: an application using the USB - configuring the PLL1

System design asks for F_{OSC}= 12 MHz and requires the USB clock of 48 MHz.

Based on these specifications, M = 48 MHz / Fosc = 48 MHz / 12 MHz = 4. Consequently, M - 1 = 3 will be written as PLLCFG[4:0].

Value for P can be derived from P = F_{CCO} / (48 MHz x 2), using condition that F_{CCO} must be in range of 156 MHz to 320 MHz. Assuming the lowest allowed frequency for F_{CCO} = 156 MHz, P = 156 MHz / (2 x 48 MHz) = 1.625. The highest F_{CCO} frequency criteria produces P = 3.33. Solution for P that satisfy both of these requirements and are listed in Table 22 are P = 2 and P = 3. Therefore, either of these two values can be used to program PLLCFG[6:5] in the PLL1.

Example 2 has illustrated the way PLL1 should be configured. Since PLL0 and PLL1 are independent, the PLL0 can be configured using the approach described in Example 1.

Chapter 3: System Control Block

3.9 Power control

The LPC2141/2/4/6/8 supports two reduced power modes: Idle mode and Power-down mode. In Idle mode, execution of instructions is suspended until either a Reset or interrupt occurs. Peripheral functions continue operation during Idle mode and may generate interrupts to cause the processor to resume execution. Idle mode eliminates power used by the processor itself, memory systems and related controllers, and internal buses.

In Power-down mode, the oscillator is shut down and the chip receives no internal clocks. The processor state and registers, peripheral registers, and internal SRAM values are preserved throughout Power-down mode and the logic levels of chip pins remain static. The Power-down mode can be terminated and normal operation resumed by either a Reset or certain specific interrupts that are able to function without clocks. Since all dynamic operation of the chip is suspended, Power-down mode reduces chip power consumption to nearly zero.

Entry to Power-down and Idle modes must be coordinated with program execution. Wakeup from Power-down or Idle modes via an interrupt resumes program execution in such a way that no instructions are lost, incomplete, or repeated. Wake up from Power-down mode is discussed further in Section 3.12 "Wakeup timer" on page 41.

A Power Control for Peripherals feature allows individual peripherals to be turned off if they are not needed in the application, resulting in additional power savings.

3.9.1 Register description

The Power Control function contains two registers, as shown in <u>Table 24</u>. More detailed descriptions follow.

Table 24: Power control registers

Name	Description	Access	Reset value[1]	Address
PCON	Power Control Register. This register contains control bits that enable the two reduced power operating modes of the microcontroller. See <u>Table 25</u> .	R/W	0x00	0xE01F C0C0
PCONP	Power Control for Peripherals Register. This register contains control bits that enable and disable individual peripheral functions, Allowing elimination of power consumption by peripherals that are not needed.	R/W	0x0018 17BE	0xE01F C0C4

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

3.9.2 Power Control register (PCON - 0xE01F COCO)

The PCON register contains two bits. Writing a one to the corresponding bit causes entry to either the Power-down or Idle mode. If both bits are set, Power-down mode is entered.

Table 25: Power Control register (PCON - address 0xE01F COCO) bit description

Bit	Symbol	Description	Reset value
0	IDL	Idle mode - when 1, this bit causes the processor clock to be stopped, while on-chip peripherals remain active. Any enabled interrupt from a peripheral or an external interrupt source will cause the processor to resume execution.	0
1	PD	Power-down mode - when 1, this bit causes the oscillator and all on-chip clocks to be stopped. A wakeup condition from an external interrupt can cause the oscillator to restart, the PD bit to be cleared, and the processor to resume execution. IMPORTANT: PD bit can be set to 1 at any time if USBWAKE = 0. In case of USBWAKE = 1, it is possible to set PD to 1 only if USB_need_clock = 0. Having both USBWAKE and USB_need_clock equal 1 prevents the microcontroller from entering Power-down mode. (For additional details see Section 3.5.3 "Interrupt Wakeup register (INTWAKE - 0xE01F C144)" on page 22 and Section 14.7.1 "USB Interrupt Status register (USBIntSt - 0xE01F C1C0)" on page 200)	0
2	PDBOD	When PD is 1 and this bit is 0, Brown Out Detection (BOD) remains operative during Power-down mode, such that its Reset can release the microcontroller from Power-down mode[1]. When PD and this bit are both 1, the BOD circuit is disabled during Power-down mode to conserve power. When PD is 0, the state of this bit has no effect.	0
3	BODPDM	When this bit is 1, the BOD circuitry will go into power down mode when chip power down is asserted, resulting in a further reduction in power. However, the possibility of using BOD as a wakeup source from Power Down mode will be lost. When this bit is 0, BOD stays active during Power Down mode.	0
4	BOGD	Brown Out Global Disable. When this bit is 1, the BOD circuitry is fully disabled at all times, and will not consume power. When 0, the BOD circuitry is enabled.	0
5	BORD	Brown Out Reset Disable. When this bit is 1, the second stage of low voltage detection (2.6 V) will not cause a chip reset. When BORD is 0, the reset is enabled. The first stage of low voltage detection (2.9 V) Brown Out interrupt is not affected.	0
7:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Since execution is delayed until after the Wakeup Timer has allowed the main oscillator to resume stable operation, there is no guarantee that execution will resume before V_{DD} has fallen below the lower BOD threshold, which prevents execution. If execution does resume, there is no guarantee of how long the microcontroller will continue execution before the lower BOD threshold terminates execution. These issues depend on the slope of the decline of V_{DD}. High decoupling capacitance (between V_{DD} and ground) in the vicinity of the microcontroller will improve the likelihood that software will be able to do what needs to be done when power is being lost.

3.9.3 Power Control for Peripherals register (PCONP - 0xE01F COC4)

The PCONP register allows turning off selected peripheral functions for the purpose of saving power. This is accomplished by gating off the clock source to the specified peripheral blocks. A few peripheral functions cannot be turned off (i.e. the Watchdog timer, GPIO, the Pin Connect block, and the System Control block). Some peripherals, particularly those that include analog functions, may consume power that is not clock dependent. These peripherals may contain a separate disable control that turns off

additional circuitry to reduce power. Each bit in PCONP controls one of the peripherals. The bit numbers correspond to the related peripheral number as shown in the VPB peripheral map <u>Table 2 "VPB peripheries and base addresses"</u> in the "LPC2141/2/4/6/8 Memory Addressing" chapter.

If a peripheral control bit is 1, that peripheral is enabled. If a peripheral bit is 0, that peripheral is disabled to conserve power. For example if bit 19 is 1, the I²C1 interface is enabled. If bit 19 is 0, the I²C1 interface is disabled.

Important: valid read from a peripheral register and valid write to a peripheral register is possible only if that peripheral is enabled in the PCONP register!

Table 26: Power Control for Peripherals register (PCONP - address 0xE01F C0C4) bit description

Bit	Symbol	Posserintian	Reset
ы	Symbol	Description	value
0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
1	PCTIM0	Timer/Counter 0 power/clock control bit.	1
2	PCTIM1	Timer/Counter 1 power/clock control bit.	1
3	PCUART0	UART0 power/clock control bit.	1
4	PCUART1	UART1 power/clock control bit.	1
5	PCPWM0	PWM0 power/clock control bit.	1
6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	PCI2C0	The I ² C0 interface power/clock control bit.	1
8	PCSPI0	The SPI0 interface power/clock control bit.	1
9	PCRTC	The RTC power/clock control bit.	1
10	PCSPI1	The SSP interface power/clock control bit.	1
11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
12	PCAD0	A/D converter 0 (ADC0) power/clock control bit.	1
		Note: Clear the PDN bit in the AD0CR before clearing this bit, and set this bit before setting PDN.	
18:13	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
19	PCI2C1	The I ² C1 interface power/clock control bit.	1
20	PCAD1	A/D converter 1 (ADC1) power/clock control bit.	1
		Note: Clear the PDN bit in the AD1CR before clearing this bit, and set this bit before setting PDN.	
30:21	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
31	PUSB	USB power/clock control bit.	0

Chapter 3: System Control Block

3.9.4 Power control usage notes

After every reset, the PCONP register contains the value that enables all interfaces and peripherals controlled by the PCONP to be enabled. Therefore, apart from proper configuring via peripheral dedicated registers, the user's application has no need to access the PCONP in order to start using any of the on-board peripherals.

Power saving oriented systems should have 1s in the PCONP register only in positions that match peripherals really used in the application. All other bits, declared to be "Reserved" or dedicated to the peripherals not used in the current application, must be cleared to 0.

3.10 Reset


Reset has two sources on the LPC2141/2/4/6/8: the RESET pin and Watchdog Reset. The RESET pin is a Schmitt trigger input pin with an additional glitch filter. Assertion of chip Reset by any source starts the Wakeup Timer (see description in Section 3.12 "Wakeup timer" in this chapter), causing reset to remain asserted until the external Reset is de-asserted, the oscillator is running, a fixed number of clocks have passed, and the on-chip circuitry has completed its initialization. The relationship between Reset, the oscillator, and the Wakeup Timer are shown in Figure 10.

The Reset glitch filter allows the processor to ignore external reset pulses that are very short, and also determines the minimum duration of \overline{RESET} that must be asserted in order to guarantee a chip reset. Once asserted, \overline{RESET} pin can be deasserted only when crystal oscillator is fully running and an adequate signal is present on the X1 pin of the microcontroller. Assuming that an external crystal is used in the crystal oscillator subsystem, after power on, the \overline{RESET} pin should be asserted for 10 ms. For all subsequent resets when crystal oscillator is already running and stable signal is on the X1 pin, the \overline{RESET} pin needs to be asserted for 300 ns only.

When the internal Reset is removed, the processor begins executing at address 0, which is initially the Reset vector mapped from the Boot Block. At that point, all of the processor and peripheral registers have been initialized to predetermined values.

External and internal Resets have some small differences. An external Reset causes the value of certain pins to be latched to configure the part. External circuitry cannot determine when an internal Reset occurs in order to allow setting up those special pins, so those latches are not reloaded during an internal Reset. Pins that are examined during an external Reset for various purposes are: P1.20/TRACESYNC, P1.26/RTCK (see chapters "Pin Configuration" on page 66 and "Pin Connect Block" on page 75). Pin P0.14 (see "Flash Memory System and Programming" chapter on page 291) is examined by on-chip bootloader when this code is executed after every Reset.

It is possible for a chip Reset to occur during a Flash programming or erase operation. The Flash memory will interrupt the ongoing operation and hold off the completion of Reset to the CPU until internal Flash high voltages have settled.

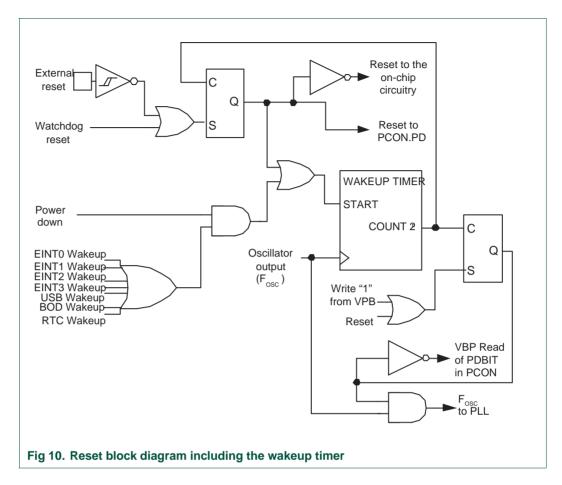

3.10.1 Reset Source Identification Register (RSIR - 0xE01F C180)

This register contains one bit for each source of Reset. Writing a 1 to any of these bits clears the corresponding read-side bit to 0. The interactions among the four sources are described below.

Table 27: Reset Source identification Register (RSIR - address 0xE01F C180) bit description

Bit	Symbol	Description	Reset value
0	POR	Power-On Reset (POR) event sets this bit, and clears all of the other bits in this register. But if another Reset signal (e.g., External Reset) remains asserted after the POR signal is negated, then its bit is set. This bit is not affected by any of the other sources of Reset.	see text
1	EXTR	Assertion of the RESET signal sets this bit. This bit is cleared by POR, but is not affected by WDT or BOD reset.	see text

Table 27: Reset Source identification Register (RSIR - address 0xE01F C180) bit description

Bit	Symbol	Description	Reset value
2	WDTR	This bit is set when the Watchdog Timer times out and the WDTRESET bit in the Watchdog Mode Register is 1. It is cleared by any of the other sources of Reset.	see text
3	BODR	This bit is set when the 3.3 V power reaches a level below 2.6 V. If the V_{DD} voltage dips from 3.3 V to 2.5 V and backs up, the BODR bit will be set to 1. Also, if the V_{DD} voltage rises continuously from below 1 V to a level above 2.6 V, the BODR will be set to 1, too. This bit is not affected by External Reset nor Watchdog Reset.	see text
		Note: only in case a reset occurs and the bit POR = 0, the BODR bit indicates if the V_{DD} voltage was below 2.6 V or not.	
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

3.11 VPB divider

The VPB Divider determines the relationship between the processor clock (CCLK) and the clock used by peripheral devices (PCLK). The VPB Divider serves two purposes.

The first is to provides peripherals with desired PCLK via VPB bus so that they can operate at the speed chosen for the ARM processor. In order to achieve this, the VPB bus may be slowed down to one half or one fourth of the processor clock rate. Because the VPB bus must work properly at power up (and its timing cannot be altered if it does not work since the VPB divider control registers reside on the VPB bus), the default condition at reset is for the VPB bus to run at one quarter speed.

The second purpose of the VPB Divider is to allow power savings when an application does not require any peripherals to run at the full processor rate.

The connection of the VPB Divider relative to the oscillator and the processor clock is shown in <u>Figure 11</u>. Because the VPB Divider is connected to the PLL output, the PLL remains active (if it was running) during Idle mode.

3.11.1 Register description

Only one register is used to control the VPB Divider.

Table 28: VPB divider register map

Name	Description	Access	Reset value[1]	Address
VPBDIV	Controls the rate of the VPB clock in relation to the processor clock.	R/W	0x00	0xE01F C100


^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

3.11.2 VPBDIV register (VPBDIV - 0xE01F C100)

The VPB Divider register contains two bits, allowing three divider values, as shown in Table 29.

Table 29: VPB Divider register (VPBDIV - address 0xE01F C100) bit description

Bit	Symbol	Value	Description	Reset value
1:0	VPBDIV	00	VPB bus clock is one fourth of the processor clock.	00
		01	VPB bus clock is the same as the processor clock.	_
		10	VPB bus clock is one half of the processor clock.	_
		11	Reserved. If this value is written to the VPBDIV register, it has no effect (the previous setting is retained).	_
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

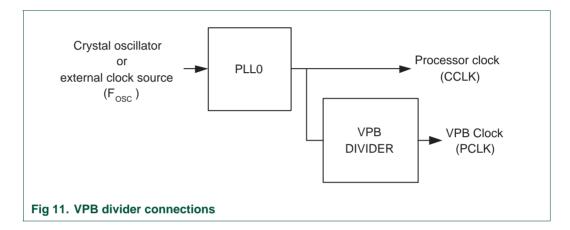

3.12 Wakeup timer

The purpose of the wakeup timer is to ensure that the oscillator and other analog functions required for chip operation are fully functional before the processor is allowed to execute instructions. This is important at power on, all types of Reset, and whenever any of the aforementioned functions are turned off for any reason. Since the oscillator and other functions are turned off during Power-down mode, any wakeup of the processor from Power-down mode makes use of the Wakeup Timer.

The Wakeup Timer monitors the crystal oscillator as the means of checking whether it is safe to begin code execution. When power is applied to the chip, or some event caused the chip to exit Power-down mode, some time is required for the oscillator to produce a signal of sufficient amplitude to drive the clock logic. The amount of time depends on many factors, including the rate of V_{DD} ramp (in the case of power on), the type of crystal and its electrical characteristics (if a quartz crystal is used), as well as any other external circuitry (e.g. capacitors), and the characteristics of the oscillator itself under the existing ambient conditions.

Once a clock is detected, the Wakeup Timer counts 4096 clocks, then enables the on-chip circuitry to initialize. When the onboard modules initialization is complete, the processor is released to execute instructions if the external Reset has been deasserted. In the case where an external clock source is used in the system (as opposed to a crystal connected to the oscillator pins), the possibility that there could be little or no delay for oscillator start-up must be considered. The Wakeup Timer design then ensures that any other required chip functions will be operational prior to the beginning of program execution.

Chapter 3: System Control Block

Any of the various Resets can bring the microcontroller out of power-down mode, as can the external interrupts EINT3:0, plus the RTC interrupt if the RTC is operating from its own oscillator on the RTCX1-2 pins. When one of these interrupts is enabled for wakeup and its selected event occurs, an oscillator wakeup cycle is started. The actual interrupt (if any) occurs after the wakeup timer expires, and is handled by the Vectored Interrupt Controller.

However, the pin multiplexing on the LPC2141/2/4/6/8 (see chapters "Pin Configuration" on page 66 and "Pin Connect Block" on page 75) was designed to allow other peripherals to, in effect, bring the device out of Power-down mode. The following pin-function pairings allow interrupts from events relating to UART0 or 1, SPI 0 or 1, or the I²C: RxD0 / EINT0, SDA / EINT1, SSEL0 / EINT2, RxD1 / EINT3, DCD1 / EINT1, RI1 / EINT2, SSEL1 / EINT3.

To put the device in Power-down mode and allow activity on one or more of these buses or lines to power it back up, software should reprogram the pin function to External Interrupt, select the appropriate mode and polarity for the Interrupt, and then select Power-down mode. Upon wakeup software should restore the pin multiplexing to the peripheral function.

All of the bus- or line-activity indications in the list above happen to be low-active. If software wants the device to come out of power -down mode in response to activity on more than one pin that share the same EINTi channel, it should program low-level sensitivity for that channel, because only in level mode will the channel logically OR the signals to wake the device.

The only flaw in this scheme is that the time to restart the oscillator prevents the LPC2141/2/4/6/8 from capturing the bus or line activity that wakes it up. Idle mode is more appropriate than power-down mode for devices that must capture and respond to external activity in a timely manner.

To summarize: on the LPC2141/2/4/6/8, the Wakeup Timer enforces a minimum reset duration based on the crystal oscillator, and is activated whenever there is a wakeup from Power-down mode or any type of Reset.

3.13 Brown-out detection

The LPC2141/2/4/6/8 includes 2-stage monitoring of the voltage on the V_{DD} pins. If this voltage falls below 2.9 V, the Brown-Out Detector (BOD) asserts an interrupt signal to the Vectored Interrupt Controller. This signal can be enabled for interrupt in the Interrupt Enable register (see Section 5.4.4 "Interrupt Enable register (VICIntEnable - 0xFFFF F010)" on page 54); if not, software can monitor the signal by reading the Raw Interrupt Status register (see Section 5.4.3 "Raw Interrupt status register (VICRawIntr - 0xFFFF F008)" on page 54).

The second stage of low-voltage detection asserts Reset to inactivate the LPC2141/2/4/6/8 when the voltage on the V_{DD} pins falls below 2.6 V. This Reset prevents alteration of the Flash as operation of the various elements of the chip would otherwise become unreliable due to low voltage. The BOD circuit maintains this reset down below 1 V, at which point the Power-On Reset circuitry maintains the overall Reset.

Both the 2.9 V and 2.6 V thresholds include some hysteresis. In normal operation, this hysteresis allows the 2.9 V detection to reliably interrupt, or a regularly-executed event loop to sense the condition.

Chapter 3: System Control Block

But when Brown-Out Detection is enabled to bring the LPC2141/2/4/6/8 out of Power-Down mode (which is itself not a guaranteed operation -- see Section 3.9.2 "Power Control register (PCON - 0xE01F COCO)"), the supply voltage may recover from a transient before the Wakeup Timer has completed its delay. In this case, the net result of the transient BOD is that the part wakes up and continues operation after the instructions that set Power-Down Mode, without any interrupt occurring and with the BOD bit in the RISR being 0. Since all other wakeup conditions have latching flags (see Section 3.5.2 "External Interrupt Flag register (EXTINT - 0xE01F C140)" and Section 19.4.3 "Interrupt Location Register (ILR - 0xE002 4000)" on page 277), a wakeup of this type, without any apparent cause, can be assumed to be a Brown-Out that has gone away.

3.14 Code security vs. debugging

Applications in development typically need the debugging and tracing facilities in the LPC2141/2/4/6/8. Later in the life cycle of an application, it may be more important to protect the application code from observation by hostile or competitive eyes. The following feature of the LPC2141/2/4/6/8 allows an application to control whether it can be debugged or protected from observation.

Details on the way Code Read Protection works can be found in the "Flash Memory System and Programming" chapter on page 291.



UM10139

Chapter 4: Memory Acceleration Module (MAM)

Rev. 01 — 15 August 2005

User manual

4.1 Introduction

The MAM block in the LPC2141/2/4/6/8 maximizes the performance of the ARM processor when it is running code in Flash memory, but does so using a single Flash bank.

4.2 Operation

Simply put, the Memory Accelerator Module (MAM) attempts to have the next ARM instruction that will be needed in its latches in time to prevent CPU fetch stalls. The LPC2141/2/4/6/8 uses one bank of Flash memory, compared to the two banks used on predecessor devices. It includes three 128-bit buffers called the Prefetch Buffer, the Branch Trail Buffer and the Data Buffer. When an Instruction Fetch is not satisfied by either the Prefetch or Branch Trail buffer, nor has a prefetch been initiated for that line, the ARM is stalled while a fetch is initiated for the 128-bit line. If a prefetch has been initiated but not yet completed, the ARM is stalled for a shorter time. Unless aborted by a data access, a prefetch is initiated as soon as the Flash has completed the previous access. The prefetched line is latched by the Flash module, but the MAM does not capture the line in its prefetch buffer until the ARM core presents the address from which the prefetch has been made. If the core presents a different address from the one from which the prefetch has been made, the prefetched line is discarded.

The Prefetch and Branch Trail Buffers each include four 32-bit ARM instructions or eight 16-bit Thumb instructions. During sequential code execution, typically the prefetch buffer contains the current instruction and the entire Flash line that contains it.

The MAM uses the LPROT[0] line to differentiate between instruction and data accesses. Code and data accesses use separate 128-bit buffers. 3 of every 4 sequential 32-bit code or data accesses "hit" in the buffer without requiring a Flash access (7 of 8 sequential 16-bit accesses, 15 of every 16 sequential byte accesses). The fourth (eighth, 16th) sequential data access must access Flash, aborting any prefetch in progress. When a Flash data access is concluded, any prefetch that had been in progress is re-initiated.

Timing of Flash read operations is programmable and is described later in this section.

In this manner, there is no code fetch penalty for sequential instruction execution when the CPU clock period is greater than or equal to one fourth of the Flash access time. The average amount of time spent doing program branches is relatively small (less than 25%) and may be minimized in ARM (rather than Thumb) code through the use of the conditional execution feature present in all ARM instructions. This conditional execution may often be used to avoid small forward branches that would otherwise be necessary.

Branches and other program flow changes cause a break in the sequential flow of instruction fetches described above. The Branch Trail Buffer captures the line to which such a non-sequential break occurs. If the same branch is taken again, the next instruction is taken from the Branch Trail Buffer. When a branch outside the contents of

Volume 1

Chapter 4: MAM Module

the Prefetch and Branch Trail Buffer is taken, a stall of several clocks is needed to load the Branch Trail Buffer. Subsequently, there will typically be no further instructionfetch delays until a new and different branch occurs.

4.3 MAM blocks

The Memory Accelerator Module is divided into several functional blocks:

- A Flash Address Latch and an incrementor function to form prefetch addresses
- A 128-bit Prefetch Buffer and an associated Address latch and comparator
- A 128-bit Branch Trail Buffer and an associated Address latch and comparator
- A 128-bit Data Buffer and an associated Address latch and comparator
- Control logic
- Wait logic


Figure 12 shows a simplified block diagram of the Memory Accelerator Module data paths.

In the following descriptions, the term "fetch" applies to an explicit Flash read request from the ARM. "Pre-fetch" is used to denote a Flash read of instructions beyond the current processor fetch address.

4.3.1 Flash memory bank

There is one bank of Flash memory with the LPC2141/2/4/6/8 MAM.

Flash programming operations are not controlled by the MAM, but are handled as a separate function. A "boot block" sector contains Flash programming algorithms that may be called as part of the application program, and a loader that may be run to allow serial programming of the Flash memory.

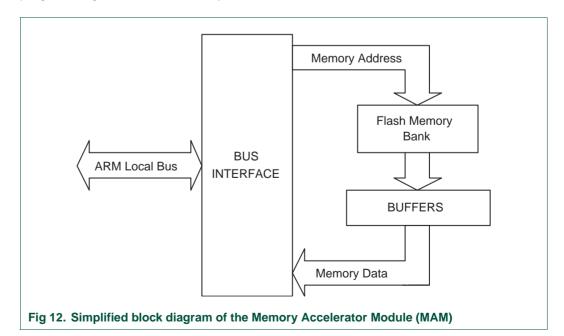

4.3.2 Instruction latches and data latches

Code and Data accesses are treated separately by the Memory Accelerator Module. There is a 128-bit Latch, a 15-bit Address

Latch, and a 15-bit comparator associated with each buffer (prefetch, branch trail, and data). Each 128-bit latch holds 4 words (4 ARM instructions, or 8 Thumb instructions). Also associated with each buffer are 32 4:1 Multiplexers that select the requested word from the 128-bit line.

Each Data access that is not in the Data latch causes a Flash fetch of 4 words of data, which are captured in the Data latch. This speeds up sequential Data operations, but has little or no effect on random accesses.

4.3.3 Flash programming Issues

Since the Flash memory does not allow accesses during programming and erase operations, it is necessary for the MAM to force the CPU to wait if a memory access to a Flash address is requested while the Flash module is busy. (This is accomplished by asserting the ARM7TDMI-S local bus signal CLKEN.) Under some conditions, this delay could result in a Watchdog time-out. The user will need to be aware of this possibility and take steps to insure that an unwanted Watchdog reset does not cause a system failure while programming or erasing the Flash memory.

In order to preclude the possibility of stale data being read from the Flash memory, the LPC2141/2/4/6/8 MAM holding latches are automatically invalidated at the beginning of any Flash programming or erase operation. Any subsequent read from a Flash address will cause a new fetch to be initiated after the Flash operation has completed.

4.4 MAM operating modes

Three modes of operation are defined for the MAM, trading off performance for ease of predictability:

Mode 0: MAM off. All memory requests result in a Flash read operation (see note 2 below). There are no instruction prefetches.

Mode 1: MAM partially enabled. Sequential instruction accesses are fulfilled from the holding latches if the data is present. Instruction prefetch is enabled. Non-sequential instruction accesses initiate Flash read operations (see note 2 below). This means that all branches cause memory fetches. All data operations cause a Flash read because buffered data access timing is hard to predict and is very situation dependent.

Mode 2: MAM fully enabled. Any memory request (code or data) for a value that is contained in one of the corresponding holding latches is fulfilled from the latch. Instruction prefetch is enabled. Flash read operations are initiated for instruction prefetch and code or data values not available in the corresponding holding latches.

Chapter 4: MAM Module

Volume 1

Chapter 4: MAM Module

Table 30: MAM Responses to program accesses of various types

Program Memory Request Type	MAM Mode		
	0	1	2
Sequential access, data in latches	Initiate Fetch ^[2]	Use Latched Data ^[1]	Use Latched Data ^[1]
Sequential access, data not in latches	Initiate Fetch	Initiate Fetch[1]	Initiate Fetch[1]
Non-sequential access, data in latches	Initiate Fetch[2]	Initiate Fetch[1][2]	Use Latched Data ^[1]
Non-sequential access, data not in latches	Initiate Fetch	Initiate Fetch[1]	Initiate Fetch[1]

^[1] Instruction prefetch is enabled in modes 1 and 2.

Table 31: MAM responses to data and DMA accesses of various types

Data Memory Request Type	MAM Mode		
	0	1	2
Sequential access, data in latches	Initiate Fetch[1]	Initiate Fetch[1]	Use Latched Data
Sequential access, data not in latches	Initiate Fetch	Initiate Fetch	Initiate Fetch
Non-sequential access, data in latches	Initiate Fetch[1]	Initiate Fetch[1]	Use Latched Data
Non-sequential access, data not in latches	Initiate Fetch	Initiate Fetch	Initiate Fetch

^[1] The MAM actually uses latched data if it is available, but mimics the timing of a Flash read operation. This saves power while resulting in the same execution timing. The MAM can truly be turned off by setting the fetch timing value in MAMTIM to one clock.

4.5 MAM configuration

After reset the MAM defaults to the disabled state. Software can turn memory access acceleration on or off at any time. This allows most of an application to be run at the highest possible performance, while certain functions can be run at a somewhat slower but more predictable rate if more precise timing is required.

4.6 Register description

All registers, regardless of size, are on word address boundaries. Details of the registers appear in the description of each function.

^[2] The MAM actually uses latched data if it is available, but mimics the timing of a Flash read operation. This saves power while resulting in the same execution timing. The MAM can truly be turned off by setting the fetch timing value in MAMTIM to one clock.

Table 32: Summary of MAM registers

Volume 1

Name	Description	Access	Reset value[1]	Address
MAMCR	Memory Accelerator Module Control Register. Determines the MAM functional mode, that is, to what extent the MAM performance enhancements are enabled. See <u>Table 33</u> .	R/W	0x0	0xE01F C000
MAMTIM	Memory Accelerator Module Timing control. Determines the number of clocks used for Flash memory fetches (1 to 7 processor clocks).	R/W	0x07	0xE01F C004

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

4.7 MAM Control Register (MAMCR - 0xE01F C000)

Two configuration bits select the three MAM operating modes, as shown in <u>Table 33</u>. Following Reset, MAM functions are disabled. Changing the MAM operating mode causes the MAM to invalidate all of the holding latches, resulting in new reads of Flash information as required.

Table 33: MAM Control Register (MAMCR - address 0xE01F C000) bit description

Bit	Symbol	Value	Description	Reset value	
1:0	MAM_mode	00	MAM functions disabled	0	
	_control	_control	01	MAM functions partially enabled	
		10	MAM functions fully enabled		
		11	Reserved. Not to be used in the application.		
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA	

4.8 MAM Timing register (MAMTIM - 0xE01F C004)

The MAM Timing register determines how many CCLK cycles are used to access the Flash memory. This allows tuning MAM timing to match the processor operating frequency. Flash access times from 1 clock to 7 clocks are possible. Single clock Flash accesses would essentially remove the MAM from timing calculations. In this case the MAM mode may be selected to optimize power usage.

Table 34: MAM Timing register (MAMTIM - address 0xE01F C004) bit description

Bit	Symbol	Value	Description	Reset value
2:0	MAM_fetch_ cycle_timing	000	0 - Reserved.	07
		001	1 - MAM fetch cycles are 1 processor clock (CCLK) in duration	
		010	2 - MAM fetch cycles are 2 CCLKs in duration	
		011	3 - MAM fetch cycles are 3 CCLKs in duration	
		100	4 - MAM fetch cycles are 4 CCLKs in duration	
		101	5 - MAM fetch cycles are 5 CCLKs in duration	

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Chapter 4: MAM Module

Table 34: MAM Timing register (MAMTIM - address 0xE01F C004) bit description

Bit	Symbol	Value	Description	Reset value
		110	6 - MAM fetch cycles are 6 CCLKs in duration	
		111	7 - MAM fetch cycles are 7 CCLKs in duration	
		as liste	ng: These bits set the duration of MAM Flash fetch operations d here. Improper setting of this value may result in incorrect on of the device.	
7:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

4.9 MAM usage notes

Volume 1

When changing MAM timing, the MAM must first be turned off by writing a zero to MAMCR. A new value may then be written to MAMTIM. Finally, the MAM may be turned on again by writing a value (1 or 2) corresponding to the desired operating mode to MAMCR.

For system clock slower than 20 MHz, MAMTIM can be 001. For system clock between 20 MHz and 40 MHz, Flash access time is suggested to be 2 CCLKs, while in systems with system clock faster than 40 MHz, 3 CCLKs are proposed.

Chapter 4: MAM Module



UM10139

Chapter 5: Vectored Interrupt Controller (VIC)

Rev. 01 — 15 August 2005

User manual

5.1 Features

- ARM PrimeCell™ Vectored Interrupt Controller
- 32 interrupt request inputs
- 16 vectored IRQ interrupts
- 16 priority levels dynamically assigned to interrupt requests
- Software interrupt generation

5.2 Description

The Vectored Interrupt Controller (VIC) takes 32 interrupt request inputs and programmably assigns them into 3 categories, FIQ, vectored IRQ, and non-vectored IRQ. The programmable assignment scheme means that priorities of interrupts from the various peripherals can be dynamically assigned and adjusted.

Fast Interrupt reQuest (FIQ) requests have the highest priority. If more than one request is assigned to FIQ, the VIC ORs the requests to produce the FIQ signal to the ARM processor. The fastest possible FIQ latency is achieved when only one request is classified as FIQ, because then the FIQ service routine can simply start dealing with that device. But if more than one request is assigned to the FIQ class, the FIQ service routine can read a word from the VIC that identifies which FIQ source(s) is (are) requesting an interrupt.

Vectored IRQs have the middle priority, but only 16 of the 32 requests can be assigned to this category. Any of the 32 requests can be assigned to any of the 16 vectored IRQ slots, among which slot 0 has the highest priority and slot 15 has the lowest.

Non-vectored IRQs have the lowest priority.

The VIC ORs the requests from all the vectored and non-vectored IRQs to produce the IRQ signal to the ARM processor. The IRQ service routine can start by reading a register from the VIC and jumping there. If any of the vectored IRQs are requesting, the VIC provides the address of the highest-priority requesting IRQs service routine, otherwise it provides the address of a default routine that is shared by all the non-vectored IRQs. The default routine can read another VIC register to see what IRQs are active.

All registers in the VIC are word registers. Byte and halfword reads and write are not supported.

Additional information on the Vectored Interrupt Controller is available in the ARM PrimeCell™ Vectored Interrupt Controller (PL190) documentation.

5.3 Register description

The VIC implements the registers shown in Table 35. More detailed descriptions follow.



Table 35: VIC register map

Table 35: VIC r	egister map			
Name	Description	Access	Reset value ^[1]	Address
VICIRQStatus	IRQ Status Register. This register reads out the state of those interrupt requests that are enabled and classified as IRQ.	RO	0	0xFFFF F000
VICFIQStatus	FIQ Status Requests. This register reads out the state of those interrupt requests that are enabled and classified as FIQ.	RO	0	0xFFFF F004
VICRawIntr	Raw Interrupt Status Register. This register reads out the state of the 32 interrupt requests / software interrupts, regardless of enabling or classification.	RO	0	0xFFFF F008
VICIntSelect	Interrupt Select Register. This register classifies each of the 32 interrupt requests as contributing to FIQ or IRQ.	R/W	0	0xFFFF F00C
VICIntEnable	Interrupt Enable Register. This register controls which of the 32 interrupt requests and software interrupts are enabled to contribute to FIQ or IRQ.	R/W	0	0xFFFF F010
VICIntEnCIr	Interrupt Enable Clear Register. This register allows software to clear one or more bits in the Interrupt Enable register.	WO	0	0xFFFF F014
VICSoftInt	Software Interrupt Register. The contents of this register are ORed with the 32 interrupt requests from various peripheral functions.	R/W	0	0xFFFF F018
VICSoftIntClear	Software Interrupt Clear Register. This register allows software to clear one or more bits in the Software Interrupt register.	WO	0	0xFFFF F01C
VICProtection	Protection enable register. This register allows limiting access to the VIC registers by software running in privileged mode.	R/W	0	0xFFFF F020
VICVectAddr	Vector Address Register. When an IRQ interrupt occurs, the IRQ service routine can read this register and jump to the value read.	R/W	0	0xFFFF F030
VICDefVectAddr	Default Vector Address Register. This register holds the address of the Interrupt Service routine (ISR) for non-vectored IRQs.	R/W	0	0xFFFF F034
VICVectAddr0	Vector address 0 register. Vector Address Registers 0-15 hold the addresses of the Interrupt Service routines (ISRs) for the 16 vectored IRQ slots.	R/W	0	0xFFFF F100
VICVectAddr1	Vector address 1 register.	R/W	0	0xFFFF F104
VICVectAddr2	Vector address 2 register.	R/W	0	0xFFFF F108
VICVectAddr3	Vector address 3 register.	R/W	0	0xFFFF F10C
VICVectAddr4	Vector address 4 register.	R/W	0	0xFFFF F110
VICVectAddr5	Vector address 5 register.	R/W	0	0xFFFF F114
VICVectAddr6	Vector address 6 register.	R/W	0	0xFFFF F118
VICVectAddr7	Vector address 7 register.	R/W	0	0xFFFF F11C
VICVectAddr8	Vector address 8 register.	R/W	0	0xFFFF F120
VICVectAddr9	Vector address 9 register.	R/W	0	0xFFFF F124
VICVectAddr10	Vector address 10 register.	R/W	0	0xFFFF F128
VICVectAddr11	Vector address 11 register.	R/W	0	0xFFFF F12C

Chapter 5: VIC



Table 35: VIC register map

Name	Description	Access	Reset value ^[1]	Address
VICVectAddr12	Vector address 12 register.	R/W	0	0xFFFF F130
VICVectAddr13	Vector address 13 register.	R/W	0	0xFFFF F134
VICVectAddr14	Vector address 14 register.	R/W	0	0xFFFF F138
VICVectAddr15	Vector address 15 register.	R/W	0	0xFFFF F13C
VICVectCntl0	Vector control 0 register. Vector Control Registers 0-15 each control one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest.	R/W	0	0xFFFF F200
VICVectCntl1	Vector control 1 register.	R/W	0	0xFFFF F204
VICVectCntl2	Vector control 2 register.	R/W	0	0xFFFF F208
VICVectCntl3	Vector control 3 register.	R/W	0	0xFFFF F20C
VICVectCntl4	Vector control 4 register.	R/W	0	0xFFFF F210
VICVectCntl5	Vector control 5 register.	R/W	0	0xFFFF F214
VICVectCntl6	Vector control 6 register.	R/W	0	0xFFFF F218
VICVectCntl7	Vector control 7 register.	R/W	0	0xFFFF F21C
VICVectCntl8	Vector control 8 register.	R/W	0	0xFFFF F220
VICVectCntl9	Vector control 9 register.	R/W	0	0xFFFF F224
VICVectCntl10	Vector control 10 register.	R/W	0	0xFFFF F228
VICVectCntl11	Vector control 11 register.	R/W	0	0xFFFF F22C
VICVectCntl12	Vector control 12 register.	R/W	0	0xFFFF F230
VICVectCntl13	Vector control 13 register.	R/W	0	0xFFFF F234
VICVectCntl14	Vector control 14 register.	R/W	0	0xFFFF F238
VICVectCntl15	Vector control 15 register.	R/W	0	0xFFFF F23C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

5.4 VIC registers

The following section describes the VIC registers in the order in which they are used in the VIC logic, from those closest to the interrupt request inputs to those most abstracted for use by software. For most people, this is also the best order to read about the registers when learning the VIC.

5.4.1 Software Interrupt register (VICSoftInt - 0xFFFF F018)

The contents of this register are ORed with the 32 interrupt requests from the various peripherals, before any other logic is applied.

Table 36: Software Interrupt register (VICSoftInt - address 0xFFFF F018) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	R/W							

Chapter 5: VIC



Chapter 5: VIC

Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 37: Software Interrupt register (VICSoftInt - address 0xFFFF F018) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See VICSoftInt bit allocation table.	0	Do not force the interrupt request with this bit number. Writing zeroes to bits in VICSoftInt has no effect, see VICSoftIntClear (Section 5.4.2).	0
		1	Force the interrupt request with this bit number.	

5.4.2 Software Interrupt Clear register (VICSoftIntClear - 0xFFFF F01C)

This register allows software to clear one or more bits in the Software Interrupt register, without having to first read it.

Table 38: Software Interrupt Clear register (VICSoftIntClear - address 0xFFFF F01C) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	WO	WO	WO	WO	WO	WO	WO	WO
Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	WO	WO	WO	WO	WO	WO	WO	WO
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	WO	WO	WO	WO	WO	WO	WO	WO
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	WO	WO	WO	WO	WO	WO	WO	WO

Table 39: Software Interrupt Clear register (VICSoftIntClear - address 0xFFFF F01C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	Writing a 0 leaves the corresponding bit in VICSoftInt unchanged.	0
	VICSoftIntClea r bit allocation table.	1	Writing a 1 clears the corresponding bit in the Software Interrupt register, thus releasing the forcing of this request.	_

UM10139 Philips Semiconductors



Chapter 5: VIC

5.4.3 Raw Interrupt status register (VICRawIntr - 0xFFFF F008)

This is a read only register. This register reads out the state of the 32 interrupt requests and software interrupts, regardless of enabling or classification.

Table 40: Raw Interrupt status register (VICRawIntr - address 0xFFFF F008) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	RO	RO	RO	RO	RO	RO	RO	RO

Table 41: Raw Interrupt status register (VICRawIntr - address 0xFFFF F008) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See VICRawIntr bit	0	The interrupt request or software interrupt with this bit number is negated.	0
	allocation table.	1	The interrupt request or software interrupt with this bit number is negated.	

5.4.4 Interrupt Enable register (VICIntEnable - 0xFFFF F010)

This is a read/write accessible register. This register controls which of the 32 interrupt requests and software interrupts contribute to FIQ or IRQ.

Table 42: Interrupt Enable register (VICIntEnable - address 0xFFFF F010) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	15	14	13	12	11	10	9	8
	. •	• •	. •					_
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
	-		1		SPI1/SSP R/W	SPI0 R/W	I2C0 R/W	1
Symbol	EINT1	EINT0	RTC	PLL				PWM0
Symbol Access	EINT1 R/W	EINT0 R/W	RTC R/W	PLL R/W	R/W	R/W	R/W	PWM0 R/W

Chapter 5: VIC



Table 43: Interrupt Enable register (VICIntEnable - address 0xFFFF F010) bit description

Bit	Symbol	Description	Reset value
31:0	See VICIntEnable	When this register is read, 1s indicate interrupt requests or software interrupts that are enabled to contribute to FIQ or IRQ.	0
	bit allocation table.	When this register is written, ones enable interrupt requests or software interrupts to contribute to FIQ or IRQ, zeroes have no effect. See Section 5.4.5 "Interrupt Enable Clear register (VICIntEnClear - 0xFFFF F014)" on page 55 and Table 45 below for how to disable interrupts.	

5.4.5 Interrupt Enable Clear register (VICIntEnClear - 0xFFFF F014)

This is a write only register. This register allows software to clear one or more bits in the Interrupt Enable register (see Section 5.4.4 "Interrupt Enable register (VICIntEnable - 0xFFFF F010)" on page 54), without having to first read it.

Table 44: Software Interrupt Clear register (VICIntEnClear - address 0xFFFF F014) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	WO	WO	WO	WO	WO	WO	WO	WO
Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	WO	WO	WO	WO	WO	WO	WO	WO
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	WO	WO	WO	WO	WO	WO	WO	WO
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	WO	WO	WO	WO	WO	WO	WO	WO

Table 45: Software Interrupt Clear register (VICIntEnClear - address 0xFFFF F014) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See VICIntEnClear	0	Writing a 0 leaves the corresponding bit in VICIntEnable unchanged.	0
	bit allocation table.	1	Writing a 1 clears the corresponding bit in the Interrupt Enable register, thus disabling interrupts for this request.	

5.4.6 Interrupt Select register (VICIntSelect - 0xFFFF F00C)

This is a read/write accessible register. This register classifies each of the 32 interrupt requests as contributing to FIQ or IRQ.

Table 46: Interrupt Select register (VICIntSelect - address 0xFFFF F00C) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	R/W							



Volume 1 Chapter 5: VIC

Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	R/W	R/W	R/W	R/W	R/W	R/W	R/W	R/W

Table 47: Interrupt Select register (VICIntSelect - address 0xFFFF F00C) bit description

		-			
Bit	Symbol	Value	Description	Reset value	
31:0	See VICIntSelect		0	The interrupt request with this bit number is assigned to the IRQ category.	0
	bit allocation table.	1	The interrupt request with this bit number is assigned to the FIQ category.		

5.4.7 IRQ Status register (VICIRQStatus - 0xFFFF F000)

This is a read only register. This register reads out the state of those interrupt requests that are enabled and classified as IRQ. It does not differentiate between vectored and non-vectored IRQs.

Table 48: IRQ Status register (VICIRQStatus - address 0xFFFF F000) bit allocation

Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	RO	RO	RO	RO	RO	RO	RO	RO

Table 49: IRQ Status register (VICIRQStatus - address 0xFFFF F000) bit description

Bit	Symbol	Description	Reset value
31:0	See VICIRQStatus bit allocation table.	A bit read as 1 indicates a corresponding interrupt request being enabled, classified as IRQ, and asserted	0



5.4.8 FIQ Status register (VICFIQStatus - 0xFFFF F004)

This is a read only register. This register reads out the state of those interrupt requests that are enabled and classified as FIQ. If more than one request is classified as FIQ, the FIQ service routine can read this register to see which request(s) is (are) active.

Table 50: FIQ Status register (VICFIQStatus - address 0xFFFF F004) bit allocation

Reset value: 0x00	JUU	0000
-------------------	-----	------

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	23	22	21	20	19	18	17	16
Symbol	-	USB	AD1	BOD	I2C1	AD0	EINT3	EINT2
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	15	14	13	12	11	10	9	8
Symbol	EINT1	EINT0	RTC	PLL	SPI1/SSP	SPI0	I2C0	PWM0
Access	RO	RO	RO	RO	RO	RO	RO	RO
Bit	7	6	5	4	3	2	1	0
Symbol	UART1	UART0	TIMER1	TIMER0	ARMCore1	ARMCore0	-	WDT
Access	RO	RO	RO	RO	RO	RO	RO	RO

Table 51: FIQ Status register (VICFIQStatus - address 0xFFFF F004) bit description

Bit	Symbol	Description	Reset value
31:0	See VICFIQStatus bit allocation table.	A bit read as 1 indicates a corresponding interrupt request being enabled, classified as FIQ, and asserted	0

5.4.9 Vector Control registers 0-15 (VICVectCntI0-15 - 0xFFFF F200-23C)

These are a read/write accessible registers. Each of these registers controls one of the 16 vectored IRQ slots. Slot 0 has the highest priority and slot 15 the lowest. Note that disabling a vectored IRQ slot in one of the VICVectCntl registers does not disable the interrupt itself, the interrupt is simply changed to the non-vectored form.

Table 52: Vector Control registers 0-15 (VICVectCntl0-15 - 0xFFFF F200-23C) bit description

Bit	Symbol	Description	Reset value
4:0	int_request/ sw_int_assig	The number of the interrupt request or software interrupt assigned to this vectored IRQ slot. As a matter of good programming practice, software should not assign the same interrupt number to more than one enabled vectored IRQ slot. But if this does occur, the lower numbered slot will be used when the interrupt request or software interrupt is enabled, classified as IRQ, and asserted.	0
5	IRQslot_en	When 1, this vectored IRQ slot is enabled, and can produce a unique ISR address when its assigned interrupt request or software interrupt is enabled, classified as IRQ, and asserted.	0
31:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 5: VIC

5.4.10 Vector Address registers 0-15 (VICVectAddr0-15 - 0xFFFF F100-13C)

These are a read/write accessible registers. These registers hold the addresses of the Interrupt Service routines (ISRs) for the 16 vectored IRQ slots.

Table 53: Vector Address registers (VICVectAddr0-15 - addresses 0xFFFF F100-13C) bit description

Volume 1

Bit	Symbol	Description	Reset value
31:0	IRQ_vector	When one or more interrupt request or software interrupt is (are) enabled, classified as IRQ, asserted, and assigned to an enabled vectored IRQ slot, the value from this register for the highest-priority such slot will be provided when the IRQ service routine reads the Vector Address register -VICVectAddr (Section 5.4.10).	0x0000 0000

5.4.11 Default Vector Address register (VICDefVectAddr - 0xFFFF F034)

This is a read/write accessible register. This register holds the address of the Interrupt Service routine (ISR) for non-vectored IRQs.

Table 54: Default Vector Address register (VICDefVectAddr - address 0xFFFF F034) bit description

Bit	Symbol	Description	Reset value
31:0	IRQ_vector	When an IRQ service routine reads the Vector Address register (VICVectAddr), and no IRQ slot responds as described above, this address is returned.	0x0000 0000

5.4.12 Vector Address register (VICVectAddr - 0xFFFF F030)

This is a read/write accessible register. When an IRQ interrupt occurs, the IRQ service routine can read this register and jump to the value read.

Table 55: Vector Address register (VICVectAddr - address 0xFFFF F030) bit description

Bit	Symbol	Description	Reset value
31:0	IRQ_vector	If any of the interrupt requests or software interrupts that are assigned to a vectored IRQ slot is (are) enabled, classified as IRQ, and asserted, reading from this register returns the address in the Vector Address Register for the highest-priority such slot (lowest-numbered) such slot. Otherwise it returns the address in the Default Vector Address Register.	0x0000 0000
		Writing to this register does not set the value for future reads from it. Rather, this register should be written near the end of an ISR, to update the priority hardware.	

5.4.13 Protection Enable register (VICProtection - 0xFFFF F020)

This is a read/write accessible register. It controls access to the VIC registers by software running in User mode.

Table 56: Protection Enable register (VICProtection - address 0xFFFF F020) bit description

Bit	Symbol	Value	Description	Reset value
0	VIC_access	0	VIC registers can be accessed in User or privileged mode.	0
		1	The VIC registers can only be accessed in privileged mode.	_
31:1	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 5: VIC

Chapter 5: VIC

5.5 Interrupt sources

<u>Table 57</u> lists the interrupt sources for each peripheral function. Each peripheral device has one interrupt line connected to the Vectored Interrupt Controller, but may have several interrupt flags. Individual interrupt flags may also represent more than one interrupt source.

Table 57: Connection of interrupt sources to the Vectored Interrupt Controller (VIC)

Block	Flag(s)		VIC Channel # and Hex Mask		
WDT	Watchdog Interrupt (WDINT)	0	0x0000 0001		
-	Reserved for Software Interrupts only	1	0x0000 0002		
ARM Core	Embedded ICE, DbgCommRx	2	0x0000 0004		
ARM Core	Embedded ICE, DbgCommTX	3	0x0000 00008		
TIMER0	Match 0 - 3 (MR0, MR1, MR2, MR3)	4	0x0000 0010		
	Capture 0 - 3 (CR0, CR1, CR2, CR3)				
TIMER1	Match 0 - 3 (MR0, MR1, MR2, MR3)	5	0x0000 0020		
	Capture 0 - 3 (CR0, CR1, CR2, CR3)				
UART0	Rx Line Status (RLS)	6	0x0000 0040		
	Transmit Holding Register Empty (THRE)				
	Rx Data Available (RDA)				
	Character Time-out Indicator (CTI)				
UART1	Rx Line Status (RLS)	7	0x0000 0080		
	Transmit Holding Register Empty (THRE)				
	Rx Data Available (RDA)				
	Character Time-out Indicator (CTI)				
	Modem Status Interrupt (MSI)[1]				
PWM0	Match 0 - 6 (MR0, MR1, MR2, MR3, MR4, MR5, MR6)	8	0x0000 0100		
I ² C0	SI (state change)	9	0x0000 0200		
SPI0	SPI Interrupt Flag (SPIF)	10	0x0000 0400		
	Mode Fault (MODF)				
SPI1 (SSP)	TX FIFO at least half empty (TXRIS)	11	0x0000 0800		
	Rx FIFO at least half full (RXRIS)				
	Receive Timeout condition (RTRIS)				
	Receive overrun (RORRIS)				
PLL	PLL Lock (PLOCK)	12	0x0000 1000		
RTC	Counter Increment (RTCCIF)	13	0x0000 2000		
	Alarm (RTCALF)				
System Control	External Interrupt 0 (EINT0)	14	0x0000 4000		
	External Interrupt 1 (EINT1)	15	0x0000 8000		
	External Interrupt 2 (EINT2)	16	0x0001 0000		
	External Interrupt 3 (EINT3)	17	0x0002 0000		
ADC0	A/D Converter 0 end of conversion	18	0x0004 0000		
I ² C1	SI (state change)	19	0x0008 0000		


Volume 1

Chapter 5: VIC

Table 57: Connection of interrupt sources to the Vectored Interrupt Controller (VIC)

Block	Flag(s)	VIC Mas	Channel # and Hex k
BOD	Brown Out detect	20	0x0010 0000
ADC1	A/D Converter 1 end of conversion[1]	21	0x0020 0000
USB	USB interrupts, DMA interrupt[1]	22	0x0040 0000

[1] LPC2144/6/8 Only.

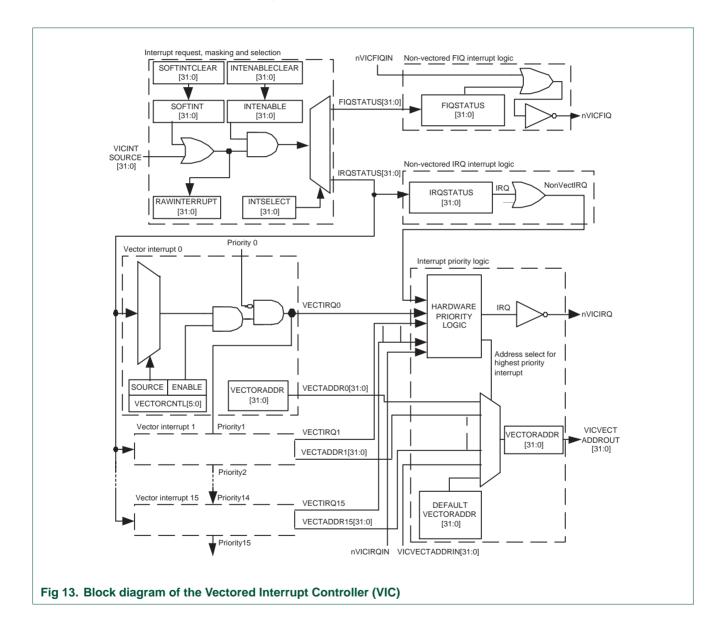



5.6 Spurious interrupts

Spurious interrupts are possible in the ARM7TDMI based microcontrollers such as the LPC2141/2/4/6/8 due to asynchronous interrupt handling. The asynchronous character of the interrupt processing has its roots in the interaction of the core and the VIC. If the VIC state is changed between the moments when the core detects an interrupt, and the core actually processes an interrupt, problems may be generated.

Real-life applications may experience the following scenarios:

- 1. VIC decides there is an IRQ interrupt and sends the IRQ signal to the core.
- 2. Core latches the IRQ state.
- 3. Processing continues for a few cycles due to pipelining.
- 4. Core loads IRQ address from VIC.

Furthermore, It is possible that the VIC state has changed during step 3. For example, VIC was modified so that the interrupt that triggered the sequence starting with step 1) is no longer pending -interrupt got disabled in the executed code. In this case, the VIC will not be able to clearly identify the interrupt that generated the interrupt request, and as a result the VIC will return the default interrupt VicDefVectAddr (0xFFFF F034).

This potentially disastrous chain of events can be prevented in two ways:

- 1. Application code should be set up in a way to prevent the spurious interrupts from occurring. Simple guarding of changes to the VIC may not be enough since, for example, glitches on level sensitive interrupts can also cause spurious interrupts.
- 2. VIC default handler should be set up and tested properly.

5.6.1 Details and case studies on spurious interrupts

This chapter contains details that can be obtained from the official ARM website (http://www.arm.com), FAQ section under the "Technical Support" link: http://www.arm.com/support/faqip/3677.html.

What happens if an interrupt occurs as it is being disabled?

Applies to: ARM7TDMI

If an interrupt is received by the core during execution of an instruction that disables interrupts, the ARM7 family will still take the interrupt. This occurs for both IRQ and FIQ interrupts.

For example, consider the following instruction sequence:

```
MRS r0, cpsr
ORR r0, r0, #I_Bit:OR:F_Bit ;disable IRQ and FIQ interrupts
MSR cpsr c, r0
```

If an IRQ interrupt is received during execution of the MSR instruction, then the behavior will be as follows:

• The IRQ interrupt is latched.

Volume 1 Chapter 5: VIC

- The MSR cpsr, r0 executes to completion setting both the I bit and the F bit in the CPSR.
- The IRQ interrupt is taken because the core was committed to taking the interrupt exception before the I bit was set in the CPSR.
- The CPSR (with the I bit and F bit set) is moved to the SPSR_IRQ.

This means that, on entry to the IRQ interrupt service routine, you can see the unusual effect that an IRQ interrupt has just been taken while the I bit in the SPSR is set. In the example above, the F bit will also be set in both the CPSR and SPSR. This means that FIQs are disabled upon entry to the IRQ service routine, and will remain so until explicitly re-enabled. FIQs will not be reenabled automatically by the IRQ return sequence.

Although the example shows both IRQ and FIQ interrupts being disabled, similar behavior occurs when only one of the two interrupt types is being disabled. The fact that the core processes the IRQ after completion of the MSR instruction which disables IRQs does not normally cause a problem, since an interrupt arriving just one cycle earlier would be expected to be taken. When the interrupt routine returns with an instruction like:

```
SUBS pc, lr, #4
```

the SPSR_IRQ is restored to the CPSR. The CPSR will now have the I bit and F bit set, and therefore execution will continue with all interrupts disabled. However, this can cause problems in the following cases:

Problem 1: A particular routine maybe called as an IRQ handler, or as a regular subroutine. In the latter case, the system guarantees that IRQs would have been disabled prior to the routine being called. The routine exploits this restriction to determine how it was called (by examining the I bit of the SPSR), and returns using the appropriate instruction. If the routine is entered due to an IRQ being received during execution of the MSR instruction which disables IRQs, then the I bit in the SPSR will be set. The routine would therefore assume that it could not have been entered via an IRQ.

Problem 2: FIQs and IRQs are both disabled by the same write to the CPSR. In this case, if an IRQ is received during the CPSR write, FIQs will be disabled for the execution time of the IRQ handler. This may not be acceptable in a system where FIQs must not be disabled for more than a few cycles.

5.6.2 Workaround

There are 3 suggested workarounds. Which of these is most applicable will depend upon the requirements of the particular system.

5.6.3 Solution 1: test for an IRQ received during a write to disable IRQs

Add code similar to the following at the start of the interrupt routine.

```
SUB lr, lr, #4 ; Adjust LR to point to return

STMFD sp!, {..., lr} ; Get some free regs

MRS lr, SPSR ; See if we got an interrupt while

TST lr, #I_Bit ; interrupts were disabled.

LDMNEFD sp!, {..., pc}^ ; If so, just return immediately.

; The interrupt will remain pending since we haven't

; acknowledged it and will be reissued when interrupts
```

Volume 1

Chapter 5: VIC

```
; are next enabled.
; Rest of interrupt routine
```

This code will test for the situation where the IRQ was received during a write to disable IRQs. If this is the case, the code returns immediately - resulting in the IRQ not being acknowledged (cleared), and further IRQs being disabled.

Similar code may also be applied to the FIQ handler, in order to resolve the first issue.

This is the recommended workaround, as it overcomes both problems mentioned above. However, in the case of problem two, it does add several cycles to the maximum length of time FIQs will be disabled.

5.6.4 Solution 2: disable IRQs and FIQs using separate writes to the CPSR

```
MRS r0, cpsr

ORR r0, r0, #I_Bit ; disable IRQs

MSR cpsr_c, r0

ORR r0, r0, #F_Bit ; disable FIQs

MSR cpsr c, r0
```

This is the best workaround where the maximum time for which FIQs are disabled is critical (it does not increase this time at all). However, it does not solve problem one, and requires extra instructions at every point where IRQs and FIQs are disabled together.

5.6.5 Solution 3: re-enable FIQs at the beginning of the IRQ handler

As the required state of all bits in the c field of the CPSR are known, this can be most efficiently be achieved by writing an immediate value to CPSR C, for example:

```
MSR cpsr_c, #I_Bit:OR:irq_MODE    ;IRQ should be disabled
;FIQ enabled
;ARM state, IRQ mode
```

This requires only the IRQ handler to be modified, and FIQs may be re-enabled more quickly than by using workaround 1. However, this should only be used if the system can guarantee that FIQs are never disabled while IRQs are enabled. It does not address problem one.

5.7 VIC usage notes

If user code is running from an on-chip RAM and an application uses interrupts, interrupt vectors must be re-mapped to on-chip address 0x0. This is necessary because all the exception vectors are located at addresses 0x0 and above. This is easily achieved by configuring the MEMMAP register (see Section 3.7.1 "Memory Mapping control register (MEMMAP - 0xE01F C040)" on page 26) to User RAM mode. Application code should be linked such that at 0x4000 0000 the Interrupt Vector Table (IVT) will reside.

Although multiple sources can be selected (VICIntSelect) to generate FIQ request, only one interrupt service routine should be dedicated to service all available/present FIQ request(s). Therefore, if more than one interrupt sources are classified as FIQ the FIQ interrupt service routine must read VICFIQStatus to decide based on this content what to

do and how to process the interrupt request. However, it is recommended that only one interrupt source should be classified as FIQ. Classifying more than one interrupt sources as FIQ will increase the interrupt latency.

Following the completion of the desired interrupt service routine, clearing of the interrupt flag on the peripheral level will propagate to corresponding bits in VIC registers (VICRawIntr, VICFIQStatus and VICIRQStatus). Also, before the next interrupt can be serviced, it is necessary that write is performed into the VICVectAddr register before the return from interrupt is executed. This write will clear the respective interrupt flag in the internal interrupt priority hardware.

In order to disable the interrupt at the VIC you need to clear corresponding bit in the VICIntEnCIr register, which in turn clears the related bit in the VICIntEnable register. This also applies to the VICSoftInt and VICSoftIntClear in which VICSoftIntClear will clear the respective bits in VICSoftInt. For example, if VICSoftInt = 0x0000 0005 and bit 0 has to be cleared, VICSoftIntClear = 0x0000 0001 will accomplish this. Before the new clear operation on the same bit in VICSoftInt using writing into VICSoftIntClear is performed in the future, VICSoftIntClear = 0x0000 0000 must be assigned. Therefore writing 1 to any bit in Clear register will have one-time-effect in the destination register.

If the watchdog is enabled for interrupt on underflow or invalid feed sequence only then there is no way of clearing the interrupt. The only way you could perform return from interrupt is by disabling the interrupt at the VIC (using VICIntEnClr).

Example:

Volume 1

Assuming that UART0 and SPI0 are generating interrupt requests that are classified as vectored IRQs (UART0 being on the higher level than SPI0), while UART1 and I²C are generating non-vectored IRQs, the following could be one possibility for VIC setup:

```
VICIntSelect = 0x0000 0000
                               ; SPIO, I2C, UART1 and UART0 are IRQ =>
                               ; bit10, bit9, bit7 and bit6=0
VICIntEnable = 0x0000 06C0
                                ; SPIO, I2C, UART1 and UART0 are enabled interrupts =>
                               ; bit10, bit9, bit 7 and bit6=1
VICDefVectAddr = 0x...
                               ; holds address at what routine for servicing
                               ; non-vectored IROs (i.e. UART1 and I2C) starts
VICVectAddr0 = 0x...
                               ; holds address where UARTO IRQ service routine starts
VICVectAddr1 = 0x...
                                ; holds address where SPIO IRQ service routine starts
VICVectCntl0 = 0x0000 0026
                               ; interrupt source with index 6 (UARTO) is enabled as
                               ; the one with priority 0 (the highest)
                               ; interrupt source with index 10 (SPIO) is enabled
VICVectCntl1 = 0x0000 002A
                               ; as the one with priority 1
```

After any of IRQ requests (SPI0, I²C, UART0 or UART1) is made, microcontroller will redirect code execution to the address specified at location 0x0000 0018. For vectored and non-vectored IRQ's the following instruction could be placed at 0x0000 0018:

```
LDR pc, [pc, \#-0xFF0]
```

This instruction loads PC with the address that is present in VICVectAddr register.

Chapter 5: VIC

UM10139 Philips Semiconductors Volume 1

> In case UART0 request has been made, VICVectAddr will be identical to VICVectAddr0, while in case SPI0 request has been made value from VICVectAddr1 will be found here. If neither UART0 nor SPI0 have generated IRQ request but UART1 and/or I²C were the reason, content of VICVectAddr will be identical to VICDefVectAddr.

Chapter 5: VIC




UM10139


Chapter 6: Pin configuration

Rev. 01 — 15 August 2005


User manual

6.1 LPC2141/2142/2144/2146/2148 pinout

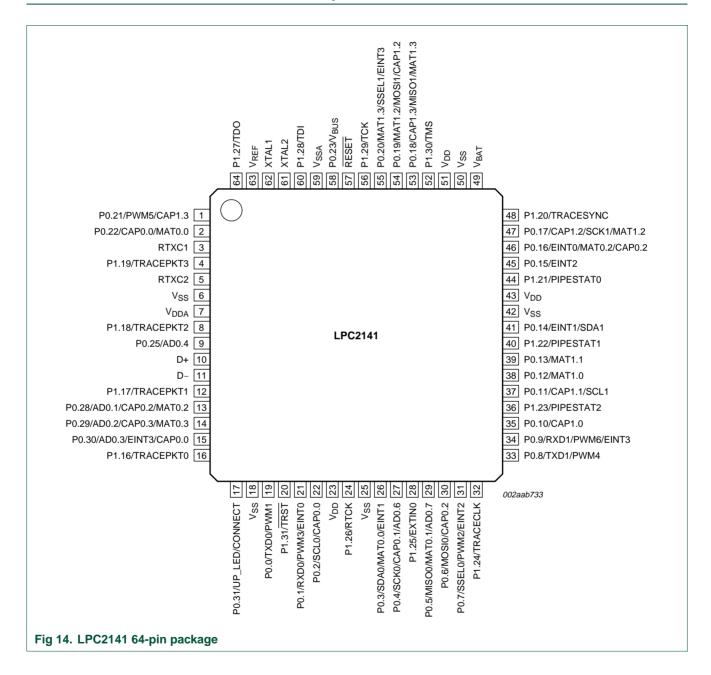

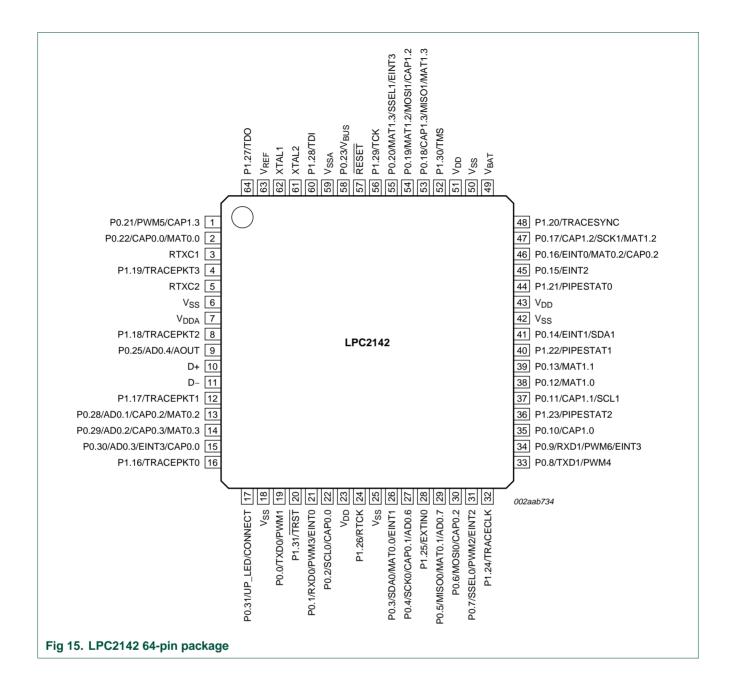



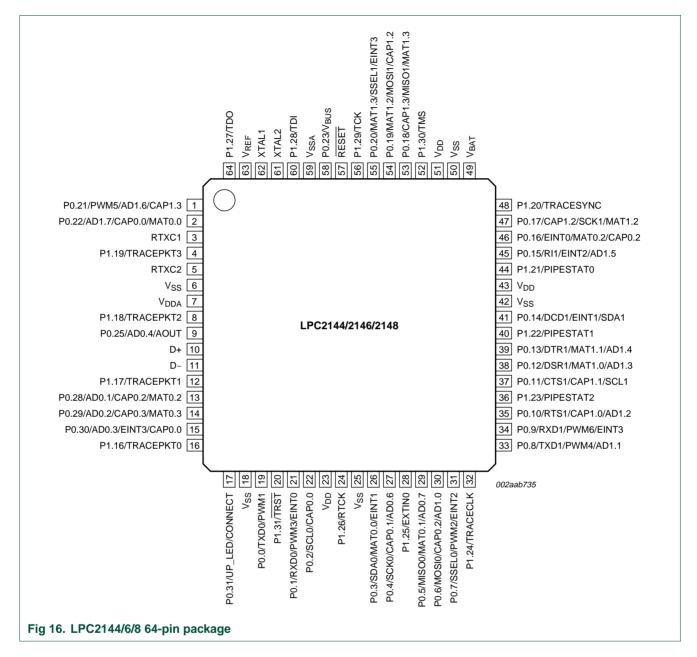

6.2 Pin description for LPC2141/2/4/6/8

Pin description for LPC2141/2/4/6/8 and a brief explanation of corresponding functions are shown in the following table.



Table 58: Pin description

Symbol	Pin	Type	Description
P0.0 to P0.31		I/O	Port 0: Port 0 is a 32-bit I/O port with individual direction controls for each bit. Total of 28 pins of the Port 0 can be used as a general purpose bi-directional digital I/Os while P0.31 provides digital output functions only. The operation of port 0 pins depends upon the pin function selected via the pin connect block.
			Pins P0.24, P0.26 and P0.27 are not available.
P0.0/TXD0/ PWM1	19 ^[1]	I/O	P0.0 — General purpose digital input/output pin
		0	TXD0 — Transmitter output for UART0
		0	PWM1 — Pulse Width Modulator output 1
P0.1/RxD0/	21[2]	I/O	P0.1 — General purpose digital input/output pin
PWM3/EINT0		1	RxD0 — Receiver input for UART0
		0	PWM3 — Pulse Width Modulator output 3
		I	EINTO — External interrupt 0 input
P0.2/SCL0/	22[3]	I/O	P0.2 — General purpose digital input/output pin
CAP0.0		I/O	SCL0 — I ² C0 clock input/output. Open drain output (for I ² C compliance)
		I	CAP0.0 — Capture input for Timer 0, channel 0
P0.3/SDA0/	26 ^[3]	I/O	P0.3 — General purpose digital input/output pin
MAT0.0/EINT1		I/O	SDA0 — I ² C0 data input/output. Open drain output (for I ² C compliance)
		0	MAT0.0 — Match output for Timer 0, channel 0
		I	EINT1 — External interrupt 1 input
P0.4/SCK0/	27[4]	I/O	P0.4 — General purpose digital input/output pin
CAP0.1/AD0.6		I/O	SCK0 — Serial clock for SPI0. SPI clock output from master or input to slave
		I	CAP0.1 — Capture input for Timer 0, channel 0
		I	AD0.6 — A/D converter 0, input 6. This analog input is always connected to its pin
P0.5/MISO0/	29[4]	I/O	P0.5 — General purpose digital input/output pin
MAT0.1/AD0.7		I/O	MISO0 — Master In Slave OUT for SPI0. Data input to SPI master or data output from SPI slave
		0	MAT0.1 — Match output for Timer 0, channel 1
		I	AD0.7 — A/D converter 0, input 7. This analog input is always connected to its pin
P0.6/MOSI0/	30[4]	I/O	P0.6 — General purpose digital input/output pin
CAP0.2/AD1.0		I/O	MOSI0 — Master Out Slave In for SPI0. Data output from SPI master or data input to SPI slave
		I	CAP0.2 — Capture input for Timer 0, channel 2
		I	AD1.0 — A/D converter 1, input 0. This analog input is always connected to its pin. Available in LPC2144/6/8 only.
P0.7/SSEL0/	31[2]	I/O	P0.7 — General purpose digital input/output pin
PWM2/EINT2		I	SSEL0 — Slave Select for SPI0. Selects the SPI interface as a slave
		0	PWM2 — Pulse Width Modulator output 2
		1	EINT2 — External interrupt 2 input

Table 58: Pin description ...continued

Symbol	Pin	Type	Description
P0.8/TXD1/ PWM4/AD1.1	33 ^[4]	I/O	P0.8 — General purpose digital input/output pin
		0	TXD1 — Transmitter output for UART1
		0	PWM4 — Pulse Width Modulator output 4
		I	AD1.1 — A/D converter 1, input 1. This analog input is always connected to its pin. Available in LPC2144/6/8 only
P0.9/RxD1/ PWM6/EINT3	34[2]	I/O	P0.9 — General purpose digital input/output pin
		I	RxD1 — Receiver input for UART1
		0	PWM6 — Pulse Width Modulator output 6
		I	EINT3 — External interrupt 3 input
P0.10/RTS1/	35 <u>[4]</u>	I/O	P0.10 — General purpose digital input/output pin
CAP1.0/AD1.2		0	RTS1 — Request to Send output for UART1. Available in LPC2144/6/8 only.
		I	CAP1.0 — Capture input for Timer 1, channel 0
		I	AD1.2 — A/D converter 1, input 2. This analog input is always connected to its pin. Available in LPC2144/6/8 only.
P0.11/CTS1/	37 <mark>[3]</mark>	I/O	P0.11 — General purpose digital input/output pin
CAP1.1/SCL1		I	CTS1 — Clear to Send input for UART1. Available in LPC2144/6/8 only.
		I	CAP1.1 — Capture input for Timer 1, channel 1.
		I/O	SCL1 — I ² C1 clock input/output. Open drain output (for I ² C compliance)
P0.12/DSR1/	38 <mark>[4]</mark>	I/O	P0.12 — General purpose digital input/output pin
MAT1.0/AD1.3		I	DSR1 — Data Set Ready input for UART1. Available in LPC2144/6/8 only.
		0	MAT1.0 — Match output for Timer 1, channel 0.
		I	AD1.3 — A/D converter input 3. This analog input is always connected to its pin. Available in LPC2144/6/8 only.
P0.13/DTR1/	39 <u>[4]</u>	I/O	P0.13 — General purpose digital input/output pin
MAT1.1/AD1.4		0	DTR1 — Data Terminal Ready output for UART1. Available in LPC2144/6/8 only.
		0	MAT1.1 — Match output for Timer 1, channel 1.
		I	AD1.4 — A/D converter input 4. This analog input is always connected to its pin. Available in LPC2144/6/8 only.
P0.14/DCD1/	41[3]	I/O	P0.14 — General purpose digital input/output pin
EINT1/SDA1		I	DCD1 — Data Carrier Detect input for UART1. Available in LPC2144/6/8 only
		I	EINT1 — External interrupt 1 input
		I/O	SDA1 — I ² C1 data input/output. Open drain output (for I ² C compliance)
			Note: LOW on this pin while RESET is LOW forces on-chip boot-loader to take over control of the part after reset.
P0.15/RI1/	45 <u>[4]</u>	I/O	P0.15 — General purpose digital input/output pin
EINT2/AD1.5		I	RI1 — Ring Indicator input for UART1. Available in LPC2144/6/8 only.
		I	EINT2 — External interrupt 2 input.
		I	AD1.5 — A/D converter 1, input 5. This analog input is always connected to its pin. Available in LPC2144/6/8 only.



Table 58: Pin description ...continued

Symbol	Pin	Type	Description
P0.16/EINT0/	46 ^[2]	I/O	P0.16 — General purpose digital input/output pin
MAT0.2/CAP0.2		I	EINT0 — External interrupt 0 input.
		0	MAT0.2 — Match output for Timer 0, channel 2.
		I	CAP0.2 — Capture input for Timer 0, channel 2.
P0.17/CAP1.2/ SCK1/MAT1.2	47 <mark>[1]</mark>	I/O	P0.17 — General purpose digital input/output pin
		I	CAP1.2 — Capture input for Timer 1, channel 2.
		I/O	SCK1 — Serial Clock for SSP. Clock output from master or input to slave.
		0	MAT1.2 — Match output for Timer 1, channel 2.
P0.18/CAP1.3/	53 <mark>[1]</mark>	I/O	P0.18 — General purpose digital input/output pin
MISO1/MAT1.3		I	CAP1.3 — Capture input for Timer 1, channel 3.
		I/O	MISO1 — Master In Slave Out for SSP. Data input to SPI master or data output from SSP slave.
		0	MAT1.3 — Match output for Timer 1, channel 3.
P0.19/MAT1.2/	54 <u>[1]</u>	I/O	P0.19 — General purpose digital input/output pin
MOSI1/CAP1.2		0	MAT1.2 — Match output for Timer 1, channel 2.
		I/O	MOSI1 — Master Out Slave In for SSP. Data output from SSP master or data input to SSP slave.
		I	CAP1.2 — Capture input for Timer 1, channel 2.
P0.20/MAT1.3/	55[2]	I/O	P0.20 — General purpose digital input/output pin
SSEL1/EINT3		0	MAT1.3 — Match output for Timer 1, channel 3.
		I	SSEL1 — Slave Select for SSP. Selects the SSP interface as a slave.
		I	EINT3 — External interrupt 3 input.
P0.21/PWM5/	1[4]	I/O	P0.21 — General purpose digital input/output pin
AD1.6/CAP1.3		0	PWM5 — Pulse Width Modulator output 5.
		I	AD1.6 — A/D converter 1, input 6. This analog input is always connected to its pin. Available in LPC2144/6/8 only.
		I	CAP1.3 — Capture input for Timer 1, channel 3.
P0.22/AD1.7/	2[4]	I/O	P0.22 — General purpose digital input/output pin.
CAP0.0/MAT0.0		I	AD1.7 — A/D converter 1, input 7. This analog input is always connected to its pin. Available in LPC2144/6/8 only.
		I	CAP0.0 — Capture input for Timer 0, channel 0.
		0	MAT0.0 — Match output for Timer 0, channel 0.
P0.23	58 <mark>[1]</mark>	I/O	P0.23 — General purpose digital input/output pin.
		I	V _{BUS} — Indicates the presence of USB bus power.
P0.25/AD0.4/ Aout	9[5]	I/O	P0.25 — General purpose digital input/output pin
		I	AD0.4 — A/D converter 0, input 4. This analog input is always connected to its pin.
		0	Aout — D/A converter output. Available in LPC2142/4/6/8 only.

Table 58: Pin description ...continued

Symbol	Pin	Туре	Description
P0.28/AD0.1/	13 <mark>[4]</mark>	I/O	P0.28 — General purpose digital input/output pin
CAP0.2/MAT0.2		I	AD0.1 — A/D converter 0, input 1. This analog input is always connected to its pin.
		1	CAP0.2 — Capture input for Timer 0, channel 2.
		0	MAT0.2 — Match output for Timer 0, channel 2.
P0.29/AD0.2/	14 <mark>[4]</mark>	14 <mark>[4]</mark> I/O	P0.29 — General purpose digital input/output pin
CAP0.3/MAT0.3		I	AD0.2 — A/D converter 0, input 2. This analog input is always connected to its pin.
		I	CAP0.3 — Capture input for Timer 0, Channel 3.
		0	MAT0.3 — Match output for Timer 0, channel 3.
P0.30/AD0.3/	15 [4]	I/O	P0.30 — General purpose digital input/output pin.
EINT3/CAP0.0		I	AD0.3 — A/D converter 0, input 3. This analog input is always connected to its pin.
		I	EINT3 — External interrupt 3 input.
		Ī	CAP0.0 — Capture input for Timer 0, channel 0.
P0.31	17 <mark>6</mark>	0	P0.31 — General purpose output only digital pin (GPO).
		0	UP_LED — USB Good Link LED indicator. It is LOW when device is configured (non-control endpoints enabled). It is HIGH when the device is no configured or during global suspend.
		0	CONNECT — Signal used to switch an external 1.5 $k\Omega$ resistor under the software control (active state for this signal is LOW). Used with the Soft Connect USB feature.
			Note: This pin MUST NOT be externally pulled LOW when RESET pin is LOW or the JTAG port will be disabled.
P1.0 to P1.31		I/O	Port 1: Port 1 is a 32-bit bi-directional I/O port with individual direction controls for each bit. The operation of port 1 pins depends upon the pin function selected via the pin connect block. Pins 0 through 15 of port 1 are neavailable.
P1.16/	16 <mark>6</mark>	I/O	P1.16 — General purpose digital input/output pin
RACEPKT0		0	TRACEPKT0 — Trace Packet, bit 0. Standard I/O port with internal pull-up.
P1.17/	12 <mark>6</mark>	I/O	P1.17 — General purpose digital input/output pin
RACEPKT1		0	TRACEPKT1 — Trace Packet, bit 1. Standard I/O port with internal pull-up.
P1.18/	8 <u>[6]</u>	I/O	P1.18 — General purpose digital input/output pin
TRACEPKT2		0	TRACEPKT2 — Trace Packet, bit 2. Standard I/O port with internal pull-up.
P1.19/	4 <u>[6]</u>	I/O	P1.19 — General purpose digital input/output pin
TRACEPKT3		0	TRACEPKT3 — Trace Packet, bit 3. Standard I/O port with internal pull-up.
21.20/	48 ^[6]	I/O	P1.20 — General purpose digital input/output pin
FRACESYNC		0	TRACESYNC — Trace Synchronization. Standard I/O port with internal pull-up.
			Note: LOW on this pin while RESET is LOW enables pins P1.25:16 to operate as Trace port after reset
21.21/	44 <mark>[6]</mark>	I/O	P1.21 — General purpose digital input/output pin
PIPESTAT0		0	PIPESTAT0 — Pipeline Status, bit 0. Standard I/O port with internal pull-up

Chapter 6: Pin Configuration



Table 58: Pin description ...continued

Symbol	Pin	Type	Description
P1.22/	40 <mark>[6]</mark>	I/O	P1.22 — General purpose digital input/output pin
PIPESTAT1		0	PIPESTAT1 — Pipeline Status, bit 1. Standard I/O port with internal pull-up.
P1.23/	36 <mark>6</mark>	I/O	P1.23 — General purpose digital input/output pin
PIPESTAT2 O		0	PIPESTAT2 — Pipeline Status, bit 2. Standard I/O port with internal pull-up.
TD A OF OLIV		I/O	P1.24 — General purpose digital input/output pin
		0	TRACECLK — Trace Clock. Standard I/O port with internal pull-up.
P1.25/EXTIN0	28 <mark>6</mark>	I/O	P1.25 — General purpose digital input/output pin
		1	EXTIN0 — External Trigger Input. Standard I/O with internal pull-up.
P1.26/RTCK	24 <mark>6</mark>	I/O	P1.26 — General purpose digital input/output pin
		I/O	RTCK — Returned Test Clock output. Extra signal added to the JTAG port. Assists debugger synchronization when processor frequency varies. Bi-directional pin with internal pull-up. Note: LOW on this pin while RESET is LOW enables pins P1.31:26 to
			operate as Debug port after reset
P1.27/TDO	64 <mark>[6]</mark>	I/O	P1.27 — General purpose digital input/output pin
		0	TDO — Test Data out for JTAG interface.
P1.28/TDI	60 ^[6]	I/O	P1.28 — General purpose digital input/output pin
		I	TDI — Test Data in for JTAG interface.
P1.29/TCK	56 ^[6]	I/O	P1.29 — General purpose digital input/output pin
		I	TCK — Test Clock for JTAG interface.
P1.30/TMS	52 <mark>[6]</mark>	I/O	P1.30 — General purpose digital input/output pin
		1	TMS — Test Mode Select for JTAG interface.
P1.31/TRST	20 <mark>6</mark>	I/O	P1.31 — General purpose digital input/output pin
		I	TRST — Test Reset for JTAG interface.
D+	10 <mark>[7]</mark>	I/O	USB bidirectional D+ line.
D-	10 <mark>[7]</mark>	I/O	USB bidirectional D- line.
RESET	57 ^[8]	I	External reset input: A LOW on this pin resets the device, causing I/O ports and peripherals to take on their default states, and processor execution to begin at address 0. TTL with hysteresis, 5 V tolerant.
XTAL1	62 ^[9]	I	Input to the oscillator circuit and internal clock generator circuits.
XTAL2	61 <u>^[9]</u>	0	Output from the oscillator amplifier.
RTXC1	3 <u>[9]</u>	1	Input to the RTC oscillator circuit.
RTXC2	5 <u>[9]</u>	0	Output from the RTC oscillator circuit.
V_{SS}	6, 18, 25, 42, 50	I	Ground: 0 V reference
V _{SSA}	59	I	Analog Ground: 0 V reference. This should nominally be the same voltage as V_{SS} , but should be isolated to minimize noise and error.
V_{DD}	23, 43, 51	I	3.3 V Power Supply: This is the power supply voltage for the core and I/O ports.

Table 58: Pin description ...continued

Symbol	Pin	Туре	Description
V_{DDA}	7	I	Analog 3.3 V Power Supply: This should be nominally the same voltage as V_{DD} but should be isolated to minimize noise and error. This voltage is used to power the ADC(s).
V _{REF}	63	I	A/D Converter Reference: This should be nominally the same voltage as V_{DD} but should be isolated to minimize noise and error. Level on this pin is used as a reference for A/D convertor.
V _{BAT}	49	I	RTC Power Supply: 3.3 V on this pin supplies the power to the RTC.

- [1] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control.
- [2] 5 V tolerant pad providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control. If configured for an input function, this pad utilizes built-in glitch filter that blocks pulses shorter than 3 ns.
- [3] Open-drain 5 V tolerant digital I/O I2C-bus 400 kHz specification compatible pad. It requires external pull-up to provide an output functionality.
- [4] 5 V tolerant pad providing digital I/O (with TTL levels and hysteresis and 10 ns slew rate control) and analog input function. If configured for an input function, this pad utilizes built-in glitch filter that blocks pulses shorter than 3 ns. When configured as an ADC input, digital section of the pad is disabled.
- [5] 5 V tolerant pad providing digital I/O (with TTL levels and hysteresis and 10 ns slew rate control) and analog output function. When configured as the DAC output, digital section of the pad is disabled.
- [6] 5 V tolerant pad with built-in pull-up resistor providing digital I/O functions with TTL levels and hysteresis and 10 ns slew rate control. The pull-up resistor's value typically ranges from 60 k Ω to 300 k Ω .
- [7] Pad is designed in accordance with the Universal Serial Bus (USB) specification, revision 2.0 (Full-speed and Low-speed mode only).
- [8] 5 V tolerant pad providing digital input (with TTL levels and hysteresis) function only.
- [9] Pad provides special analog functionality.

Chapter 6: Pin Configuration



UM10139

Chapter 7: Pin Connect Block

Rev. 01 — 15 August 2005

User manual

7.1 Features

Allows individual pin configuration.

7.2 Applications

The purpose of the Pin Connect Block is to configure the microcontroller pins to the desired functions.

7.3 Description

The pin connect block allows selected pins of the microcontroller to have more than one function. Configuration registers control the multiplexers to allow connection between the pin and the on chip peripherals.

Peripherals should be connected to the appropriate pins prior to being activated, and prior to any related interrupt(s) being enabled. Activity of any enabled peripheral function that is not mapped to a related pin should be considered undefined.

Selection of a single function on a port pin completely excludes all other functions otherwise available on the same pin.

The only partial exception from the above rule of exclusion is the case of inputs to the A/D converter. Regardless of the function that is selected for the port pin that also hosts the A/D input, this A/D input can be read at any time and variations of the voltage level on this pin will be reflected in the A/D readings. However, valid analog reading(s) can be obtained if and only if the function of an analog input is selected. Only in this case proper interface circuit is active in between the physical pin and the A/D module. In all other cases, a part of digital logic necessary for the digital function to be performed will be active, and will disrupt proper behavior of the A/D.

7.4 Register description

The Pin Control Module contains 2 registers as shown in Table 59 below.

Table 59: Pin connect block register map

Name	Description	Access	Reset value[1]	Address
PINSEL0	Pin function select register 0.	Read/Write	0x0000 0000	0xE002 C000
PINSEL1	Pin function select register 1.	Read/Write	0x0000 0000	0xE002 C004
PINSEL2	Pin function select register 2.	Read/Write	See <u>Table 62</u>	0xE002 C014

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

7.4.1 Pin Function Select Register 0 (PINSEL0 - 0xE002 C000)

The PINSEL0 register controls the functions of the pins as per the settings listed in <u>Table 63</u>. The direction control bit in the IO0DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically.

Table 60: Pin function Select register 0 (PINSEL0 - address 0xE002 C000) bit description

Table 60.			register o (Pinselo - address oxedoz codo)	
Bit	Symbol	Value	Function	Reset value
1:0	P0.0	00	GPIO Port 0.0	0
		01	TXD (UART0)	
		10	PWM1	
		11	Reserved	
3:2	P0.1	00	GPIO Port 0.1	0
		01	RxD (UART0)	
		10	PWM3	
		11	EINT0	
5:4	P0.2	00	GPIO Port 0.2	0
		01	SCL0 (I ² C0)	
		10	Capture 0.0 (Timer 0)	
		11	Reserved	
7:6	P0.3	00	GPIO Port 0.3	0
		01	SDA0 (I ² C0)	
		10	Match 0.0 (Timer 0)	
		11	EINT1	
9:8	P0.4	00	GPIO Port 0.4	0
		01	SCK0 (SPI0)	
		10	Capture 0.1 (Timer 0)	
		11	AD0.6	
11:10	P0.5	00	GPIO Port 0.5	0
		01	MISO0 (SPI0)	
		10	Match 0.1 (Timer 0)	
		11	AD0.7	
13:12	P0.6	00	GPIO Port 0.6	0
		01	MOSI0 (SPI0)	
		10	Capture 0.2 (Timer 0)	
		11	Reserved[1][2] or AD1.0[3]	
15:14	P0.7	00	GPIO Port 0.7	0
		01	SSEL0 (SPI0)	
		10	PWM2	
		11	EINT2	
17:16	P0.8	00	GPIO Port 0.8	0
		01	TXD UART1	
		10	PWM4	

Table 60: Pin function Select register 0 (PINSEL0 - address 0xE002 C000) bit description

Bit	Symbol	Value	Function	Reset value
19:18	P0.9	00	GPIO Port 0.9	0
		01	RxD (UART1)	
		10	PWM6	
		11	EINT3	
21:20	P0.10	00	GPIO Port 0.10	0
		01	Reserved[1][2] or RTS (UART1)[3]	
		10	Capture 1.0 (Timer 1)	
		11	Reserved ^{[1][2]} or AD1.2 ^[3]	
23:22	P0.11	00	GPIO Port 0.11	0
		01	Reserved[1][2] or CTS (UART1)[3]	
		10	Capture 1.1 (Timer 1)	
		11	SCL1 (I ² C1)	
25:24 P	P0.12	00	GPIO Port 0.12	0
		01	Reserved[1][2] or DSR (UART1)[3]	
		10	Match 1.0 (Timer 1)	
		11	Reserved[1][2] or AD1.3[3]	
27:26	P0.13	00	GPIO Port 0.13	0
		01	Reserved[1][2] or DTR (UART1)[3]	
		10	Match 1.1 (Timer 1)	
		11	Reserved[1][2] or AD1.4[3]	
29:28	P0.14	00	GPIO Port 0.14	0
		01	Reserved[1][2] or DCD (UART1)[3]	
		10	EINT1	
		11	SDA1 (I ² C1)	
31:30	P0.15	00	GPIO Port 0.15	0
		01	Reserved[1][2] or RI (UART1)[3]	
		10	EINT2	
		11	Reserved[1][2] or AD1.5[3]	

^[1] Available on LPC2141.

7.4.2 Pin function Select register 1 (PINSEL1 - 0xE002 C004)

The PINSEL1 register controls the functions of the pins as per the settings listed in following tables. The direction control bit in the IO0DIR register is effective only when the GPIO function is selected for a pin. For other functions direction is controlled automatically.

^[2] Available on LPC2142.

^[3] Available on LPC2144/6/8.

Table 61: Pin function Select register 1 (PINSEL1 - address 0xE002 C004) bit description

Table 61:	Pin function Select register 1 (PINSEL1 - address 0xE002 C004) bit description					
Bit	Symbol	Value	Function	Reset value		
1:0	P0.16	00	GPIO Port 0.16	0		
		01	EINT0			
		10	Match 0.2 (Timer 0)			
		11	Capture 0.2 (Timer 0)			
3:2	P0.17	00	GPIO Port 0.17	0		
		01	Capture 1.2 (Timer 1)			
		10	SCK1 (SSP)			
		11	Match 1.2 (Timer 1)			
5:4	P0.18	00	GPIO Port 0.18	0		
		01	Capture 1.3 (Timer 1)			
		10	MISO1 (SSP)			
		11	Match 1.3 (Timer 1)			
7:6	P0.19	00	GPIO Port 0.19	0		
		01	Match 1.2 (Timer 1)			
		10	MOSI1 (SSP)			
		11	Capture 1.2 (Timer 1)			
9:8 P0.20		00	GPIO Port 0.20	0		
		01	Match 1.3 (Timer 1)			
		10	SSEL1 (SSP)			
		11	EINT3			
11:10	P0.21	00	GPIO Port 0.21	0		
		01	PWM5			
		10	Reserved[1][2] or AD1.6[3]			
		11	Capture 1.3 (Timer 1)			
13:12	P0.22	00	GPIO Port 0.22	0		
		01	Reserved[1][2] or AD1.7[3]			
		10	Capture 0.0 (Timer 0)			
		11	Match 0.0 (Timer 0)			
15:14	P0.23	00	GPIO Port 0.23	0		
		01	V _{BUS}			
		10	Reserved			
		11	Reserved			
17:16	P0.24	00	Reserved	0		
		01	Reserved			
		10	Reserved			
		11	Reserved			
19:18	P0.25	00	GPIO Port 0.25	0		
		01	AD0.4			
		10	Reserved[1] or Aout(DAC)[2][3]			
		11	Reserved			
17:16	P0.24	11 00 01 10 11 00 01 10 11 00 01 11	Match 0.0 (Timer 0) GPIO Port 0.23 V _{BUS} Reserved Reserved	0		

Table 61: Pin function Select register 1 (PINSEL1 - address 0xE002 C004) bit description

Bit	Symbol	Value	Function	Reset value
21:20	P0.26	00	Reserved	0
		01	Reserved	
		10	Reserved	
		11	Reserved	
23:22	P0.27	00	Reserved	0
		01	Reserved	
		10	Reserved	
		11	Reserved	
25:24	P0.28	00	GPIO Port 0.28	0
		01	AD0.1	
		10	Capture 0.2 (Timer 0)	<u> </u>
		11	Match 0.2 (Timer 0)	
27:26	P0.29	00	GPIO Port 0.29	0
		01	AD0.2	
		10	Capture 0.3 (Timer 0)	
		11	Match 0.3 (Timer 0)	
29:28	P0.30	00	GPIO Port 0.30	0
		01	AD0.3	
		10	EINT3	
		11	Capture 0.0 (Timer 0)	
31:30	P0.31	00	GPO Port only	0
		01	UP_LED	
		10	CONNECT	_
		11	Reserved	

^[1] Available on LPC2141.

7.4.3 Pin function Select register 2 (PINSEL2 - 0xE002 C014)

The PINSEL2 register controls the functions of the pins as per the settings listed in Table 62. The direction control bit in the IO1DIR register is effective only when the GPIO function is selected for a pin. For other functions direction is controlled automatically.

Warning: use read-modify-write operation when accessing PINSEL2 register. Accidental write of 0 to bit 2 and/or bit 3 results in loss of debug and/or trace functionality! Changing of either bit 4 or bit 5 from 1 to 0 may cause an incorrect code execution!

Chapter 7: Pin Connect Block

^[2] Available on LPC2142.

^[3] Available on LPC2144/6/8.

Table 62: Pin function Select register 2 (PINSEL2 - 0xE002 C014) bit description

Bit	Symbol	Value	Function	Reset value
1:0	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	GPIO/DEBUG	0	Pins P1.36-26 are used as GPIO pins.	P1.26/RTCK
		1	Pins P1.36-26 are used as a Debug port.	
3	GPIO/TRACE	0	Pins P1.25-16 are used as GPIO pins.	P1.20/ TRACESYNC
		1	Pins P1.25-16 are used as a Trace port.	
31:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

7.4.4 Pin function select register values

The PINSEL registers control the functions of device pins as shown below. Pairs of bits in these registers correspond to specific device pins.

Table 63: Pin function select register bits

PINSEL0 and PINSEL1 Values	Function	Value after Reset
00	Primary (default) function, typically GPIO port	00
01	First alternate function	_
10	Second alternate function	_
11	Reserved	_

The direction control bit in the IO0DIR/IO1DIR register is effective only when the GPIO function is selected for a pin. For other functions, direction is controlled automatically. Each derivative typically has a different pinout and therefore a different set of functions possible for each pin. Details for a specific derivative may be found in the appropriate data sheet.



UM10139

Chapter 8: General Purpose Input/Output ports (GPIO)

Rev. 01 — 15 August 2005

User manual

8.1 Features

- Every physical GPIO port is accessible via either the group of registers providing an enhanced features and accelerated port access or the legacy group of registers
- Accelerated GPIO functions:
 - GPIO registers are relocated to the ARM local bus so that the fastest possible I/O timing can be achieved
 - Mask registers allow treating sets of port bits as a group, leaving other bits unchanged
 - All registers are byte and half-word addressable
 - Entire port value can be written in one instruction
- Bit-level set and clear registers allow a single instruction set or clear of any number of bits in one port
- Direction control of individual bits
- All I/O default to inputs after reset
- Backward compatibility with other earlier devices is maintained with legacy registers appearing at the original addresses on the VPB bus

8.2 Applications

- General purpose I/O
- Driving LEDs, or other indicators
- · Controlling off-chip devices
- Sensing digital inputs

8.3 Pin description

Table 64: GPIO pin description

Pin	Туре	Description
P0.0-P.31 P1.16-P1.31	Input/ Output	General purpose input/output. The number of GPIOs actually available depends on the use of alternate functions.

8.4 Register description

LPC2141/2/4/6/8 has two 32-bit General Purpose I/O ports. Total of 30 input/output and a single output only pin out of 32 pins are available on PORT0. PORT1 has up to 16 pins available for GPIO functions. PORT0 and PORT1 are controlled via two groups of 4 registers as shown in Table 65 and Table 66.

Legacy registers shown in <u>Table 65</u> allow backward compatibility with earlier family devices, using existing code. The functions and relative timing of older GPIO implementations is preserved.

The registers in <u>Table 66</u> represent the enhanced GPIO features available on the LPC2141/2/4/6/8. All of these registers are located directly on the local bus of the CPU for the fastest possible read and write timing. An additional feature has been added that provides byte addressability of all GPIO registers. A mask register allows treating groups of bits in a single GPIO port separately from other bits on the same port.

User must select whether a GPIO will be accessed via registers that provide enhanced features or a legacy set of registers (see Section 3.6.1 "System Control and Status flags register (SCS - 0xE01F C1A0)" on page 26). While both of a port's fast and legacy GPIO registers are controlling the same physical pins, these two port control branches are mutually exclusive and operate independently. For example, changing a pin's output via a fast register will not be observable via the corresponding legacy register.

The following text will refer to the legacy GPIO as "the slow" GPIO, while GPIO equipped with the enhanced features will be referred as "the fast" GPIO.

Table 65: GPIO register map (legacy VPB accessible registers)

Volume 1

Table 03.	Grio register map (legacy vr b accessible registers)							
Generic Name	Description	Access	Reset value[1]	PORT0 Address & Name	PORT1 Address & Name			
IOPIN	GPIO Port Pin value register. The current state of the GPIO configured port pins can always be read from this register, regardless of pin direction.	R/W	NA	0xE002 8000 IO0PIN	0xE002 8010 IO1PIN			
IOSET	GPIO Port Output Set register. This register controls the state of output pins in conjunction with the IOCLR register. Writing ones produces highs at the corresponding port pins. Writing zeroes has no effect.	R/W	0x0000 0000	0xE002 8004 IO0SET	0xE002 8014 IO1SET			
IODIR	GPIO Port Direction control register. This register individually controls the direction of each port pin.	R/W	0x0000 0000	0xE002 8008 IO0DIR	0xE002 8018 IO1DIR			
IOCLR	GPIO Port Output Clear register. This register controls the state of output pins. Writing ones produces lows at the corresponding port pins and clears the corresponding bits in the IOSET register. Writing zeroes has no effect.	WO	0x0000 0000	0xE002 800C IO0CLR	0xE002 801C IO1CLR			

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Table 66: GPIO register map (local bus accessible registers - enhanced GPIO features)

Volume 1

Generic Name	Description	Access	Reset value ^[1]	PORT0 Address & Name	PORT1 Address & Name
FIODIR	Fast GPIO Port Direction control register. This register individually controls the direction of each port pin.	R/W	0x0000 0000	0x3FFF C000 FIO0DIR	0x3FFF C020 FIO1DIR
FIOMASK	Fast Mask register for port. Writes, sets, clears, and reads to port (done via writes to FIOPIN, FIOSET, and FIOCLR, and reads of FIOPIN) alter or return only the bits enabled by zeros in this register.	R/W	0x0000 0000	0x3FFF C010 FIO0MASK	0x3FFF C030 FIO1MASK
FIOPIN	Fast Port Pin value register using FIOMASK. The current state of digital port pins can be read from this register, regardless of pin direction or alternate function selection (as long as pins is not configured as an input to ADC). The value read is masked by ANDing with FIOMASK. Writing to this register places corresponding values in all bits enabled by ones in FIOMASK.	R/W	0x0000 0000	0x3FFF C014 FIO0PIN	0x3FFF C034 FIO1PIN
FIOSET	Fast Port Output Set register using FIOMASK. This register controls the state of output pins. Writing 1s produces highs at the corresponding port pins. Writing 0s has no effect. Reading this register returns the current contents of the port output register. Only bits enabled by ones in FIOMASK can be altered.	R/W	0x0000 0000	0x3FFF C018 FIO0SET	0x3FFF C038 FIO1SET
FIOCLR	Fast Port Output Clear register using FIOMASK0. This register controls the state of output pins. Writing 1s produces lows at the corresponding port pins. Writing 0s has no effect. Only bits enabled by ones in FIOMASK0 can be altered.	WO	0x0000 0000	0x3FFF C01C FIO0CLR	0x3FFF C03C FIO1CLR

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

8.4.1 GPIO port Direction register (IODIR, Port 0: IO0DIR - 0xE002 8008 and Port 1: IO1DIR - 0xE002 8018; FIODIR, Port 0: FIO0DIR - 0x3FFF C000 and Port 1:FIO1DIR - 0x3FFF C020)

This word accessible register is used to control the direction of the pins when they are configured as GPIO port pins. Direction bit for any pin must be set according to the pin functionality.

Legacy registers are the IO0DIR and IO1DIR, while the enhanced GPIO functions are supported via the FIO0DIR and FIO1DIR registers.

Table 67: GPIO port 0 Direction register (IO0DIR - address 0xE002 8008) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P0xDIR		Slow GPIO Direction control bits. Bit 0 controls P0.0 bit 30 controls P0.30.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Table 68: GPIO port 1 Direction register (IO1DIR - address 0xE002 8018) bit description

Bit	Symbol	Value	Description	Reset value
31:0	P1xDIR		Slow GPIO Direction control bits. Bit 0 in IO1DIR controls P1.0 Bit 30 in IO1DIR controls P1.30.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Table 69: Fast GPIO port 0 Direction register (FIO0DIR - address 0x3FFF C000) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xDIR		Fast GPIO Direction control bits. Bit 0 in FIO0DIR controls P0.0 Bit 30 in FIO0DIR controls P0.30.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	_

Table 70: Fast GPIO port 1 Direction register (FIO1DIR - address 0x3FFF C020) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP1xDIR		Fast GPIO Direction control bits. Bit 0 in FIO1DIR controls P1.0 Bit 30 in FIO1DIR controls P1.30.	0x0000 0000
		0	Controlled pin is input.	
		1	Controlled pin is output.	

Aside from the 32-bit long and word only accessible FIODIR register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 71 and Table 72, too. Next to providing the same functions as the FIODIR register, these additional registers allow easier and faster access to the physical port pins.

Table 71: Fast GPIO port 0 Direction control byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0DIR0	8 (byte)	0x3FFF C000	Fast GPIO Port 0 Direction control register 0. Bit 0 in FIO0DIR0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0DIR1	8 (byte)	0x3FFF C001	Fast GPIO Port 0 Direction control register 1. Bit 0 in FIO0DIR1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0DIR2	8 (byte)	0x3FFF C002	Fast GPIO Port 0 Direction control register 2. Bit 0 in FIO0DIR2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0DIR3	8 (byte)	0x3FFF C003	Fast GPIO Port 0 Direction control register 3. Bit 0 in FIO0DIR3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0DIRL	16 (half-word)	0x3FFF C000	Fast GPIO Port 0 Direction control Lower half-word register. Bit 0 in FIO0DIRL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0DIRU	16 (half-word)	0x3FFF C002	Fast GPIO Port 0 Direction control Upper half-word register. Bit 0 in FIO0DIRU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 72: Fast GPIO port 1 Direction control byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1DIR0	8 (byte)	0x3FFF C020	Fast GPIO Port 1 Direction control register 0. Bit 0 in FIO1DIR0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1DIR1	8 (byte)	0x3FFF C021	Fast GPIO Port 1 Direction control register 1. Bit 0 in FIO1DIR1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1DIR2	8 (byte)	0x3FFF C022	Fast GPIO Port 1 Direction control register 2. Bit 0 in FIO1DIR2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1DIR3	8 (byte)	0x3FFF C023	Fast GPIO Port 1 Direction control register 3. Bit 0 in FIO1DIR3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1DIRL	16 (half-word)	0x3FFF C020	Fast GPIO Port 1 Direction control Lower half-word register. Bit 0 in FIO1DIRL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1DIRU	16 (half-word)	0x3FFF C022	Fast GPIO Port 1 Direction control Upper half-word register. Bit 0 in FIO1DIRU register corresponds to P1.16 bit 15 to P1.31.	0x0000

8.4.2 Fast GPIO port Mask register (FIOMASK, Port 0: FIO0MASK - 0x3FFF C010 and Port 1:FIO1MASK - 0x3FFF C030)

This register is available in the enhanced group of registers only. It is used to select port's pins that will and will not be affected by a write accesses to the FIOPIN, FIOSET or FIOSLR register. Mask register also filters out port's content when the FIOPIN register is read.

A zero in this register's bit enables an access to the corresponding physical pin via a read or write access. If a bit in this register is one, corresponding pin will not be changed with write access and if read, will not be reflected in the updated FIOPIN register. For software examples, see Section 8.5 "GPIO usage notes" on page 92

Table 73: Fast GPIO port 0 Mask register (FIO0MASK - address 0x3FFF C010) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP0xMASK		Fast GPIO physical pin access control.	0x0000 0000
		0	Pin is affected by writes to the FIOSET, FIOCLR, and FIOPIN registers. Current state of the pin will be observable in the FIOPIN register.	
		1	Physical pin is unaffected by writes into the FIOSET, FIOCLR and FIOPIN registers. When the FIOPIN register is read, this bit will not be updated with the state of the physical pin.	

Table 74: Fast GPIO port 1 Mask register (FIO1MASK - address 0x3FFF C030) bit description

Bit	Symbol	Value	Description	Reset value
31:0	FP1xMASK		Fast GPIO physical pin access control.	0x0000 0000
		0	Pin is affected by writes to the FIOSET, FIOCLR, and FIOPIN registers. Current state of the pin will be observable in the FIOPIN register.	
		1	Physical pin is unaffected by writes into the FIOSET, FIOCLR and FIOPIN registers. When the FIOPIN register is read, this bit will not be updated with the state of the physical pin.	_

Aside from the 32-bit long and word only accessible FIOMASK register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 75, too. Next to providing the same functions as the FIOMASK register, these additional registers allow easier and faster access to the physical port pins.

Chapter 8: GPIO

Table 75: Fast GPIO port 0 Mask byte and half-word accessible register description

Volume 1

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0MASK0	8 (byte)	0x3FFF C010	Fast GPIO Port 0 Mask register 0. Bit 0 in FIO0MASK0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0MASK1	8 (byte)	0x3FFF C011	Fast GPIO Port 0 Mask register 1. Bit 0 in FIO0MASK1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0MASK2	8 (byte)	0x3FFF C012	Fast GPIO Port 0 Mask register 2. Bit 0 in FIO0MASK2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0MASK3	8 (byte)	0x3FFF C013	Fast GPIO Port 0 Mask register 3. Bit 0 in FIO0MASK3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0MASKL	16 (half-word)	0x3FFF C001	Fast GPIO Port 0 Mask Lower half-word register. Bit 0 in FIO0MASKL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0MASKU	16 (half-word)	0x3FFF C012	Fast GPIO Port 0 Mask Upper half-word register. Bit 0 in FIO0MASKU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 76: Fast GPIO port 1 Mask byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1MASK0	8 (byte)	0x3FFF C010	Fast GPIO Port 1 Mask register 0. Bit 0 in FIO1MASK0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1MASK1	8 (byte)	0x3FFF C011	Fast GPIO Port 1 Mask register 1. Bit 0 in FIO1MASK1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1MASK2	8 (byte)	0x3FFF C012	Fast GPIO Port 1 Mask register 2. Bit 0 in FIO1MASK2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1MASK3	8 (byte)	0x3FFF C013	Fast GPIO Port 1 Mask register 3. Bit 0 in FIO1MASK3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1MASKL	16 (half-word)	0x3FFF C001	Fast GPIO Port 1 Mask Lower half-word register. Bit 0 in FIO1MASKL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1MASKU	16 (half-word)	0x3FFF C012	Fast GPIO Port 1 Mask Upper half-word register. Bit 0 in FIO1MASKU register corresponds to P1.16 bit 15 to P1.31.	0x0000

8.4.3 GPIO port Pin value register (IOPIN, Port 0: IO0PIN - 0xE002 8000 and Port 1: IO1PIN - 0xE002 8010; FIOPIN, Port 0: FIO0PIN - 0x3FFF C014 and Port 1: FIO1PIN - 0x3FFF C034)

This register provides the value of port pins that are configured to perform only digital functions. The register will give the logic value of the pin regardless of whether the pin is configured for input or output, or as GPIO or an alternate digital function. As an example, a particular port pin may have GPIO input, GPIO output, UART receive, and PWM output as selectable functions. Any configuration of that pin will allow its current logic state to be read from the IOPIN register.

If a pin has an analog function as one of its options, the pin state cannot be read if the analog configuration is selected. Selecting the pin as an A/D input disconnects the digital features of the pin. In that case, the pin value read in the IOPIN register is not valid.

Writing to the IOPIN register stores the value in the port output register, bypassing the need to use both the IOSET and IOCLR registers to obtain the entire written value. This feature should be used carefully in an application since it affects the entire port.

Legacy registers are the IO0PIN and IO1PIN, while the enhanced GPIOs are supported via the FIO0PIN and FIO1PIN registers. Access to a port pins via the FIOPIN register is conditioned by the corresponding FIOMASK register (see Section 8.4.2 "Fast GPIO port Mask register (FIOMASK, Port 0: FIO0MASK - 0x3FFF C010 and Port 1:FIO1MASK - 0x3FFF C030)").

Only pins masked with zeros in the Mask register (see <u>Section 8.4.2 "Fast GPIO port Mask register (FIOMASK, Port 0: FIO0MASK - 0x3FFF C010 and Port 1:FIO1MASK - 0x3FFF C030)"</u>) will be correlated to the current content of the Fast GPIO port pin value register.

Table 77: GPIO port 0 Pin value register (IO0PIN - address 0xE002 8000) bit description

Volume 1

Bit	Symbol	Description	Reset value
31:0	P0xVAL	Slow GPIO pin value bits. Bit 0 in IO0PIN corresponds to P0.0 Bit 31 in IO0PIN corresponds to P0.31.	NA

Table 78: GPIO port 1 Pin value register (IO1PIN - address 0xE002 8010) bit description

Bit	Symbol	Description	Reset value
31:0	P1xVAL	Slow GPIO pin value bits. Bit 0 in IO1PIN corresponds to P1.0 Bit 31 in IO1PIN corresponds to P1.31.	NA

Table 79: Fast GPIO port 0 Pin value register (FIO0PIN - address 0x3FFF C014) bit description

Bit	Symbol	Description	Reset value
31:0	FP0xVAL	Fast GPIO pin value bits. Bit 0 in FIO0PIN corresponds to P0.0 \dots Bit 31 in FIO0PIN corresponds to P0.31.	NA

Table 80: Fast GPIO port 1 Pin value register (FIO1PIN - address 0x3FFF C034) bit description

Bit	Symbol	Description	Reset value
31:0	FP1xVAL	Fast GPIO pin value bits. Bit 0 in FIO1PIN corresponds to P1.0 Bit 31 in FIO1PIN corresponds to P1.31.	NA

Aside from the 32-bit long and word only accessible FIOPIN register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 82, too. Next to providing the same functions as the FIOPIN register, these additional registers allow easier and faster access to the physical port pins.

Table 81: Fast GPIO port 0 Pin value byte and half-word accessible register description

Volume 1

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0PIN0	8 (byte)	0x3FFF C014	Fast GPIO Port 0 Pin value register 0. Bit 0 in FIO0PIN0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0PIN1	8 (byte)	0x3FFF C015	Fast GPIO Port 0 Pin value register 1. Bit 0 in FIO0PIN1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0PIN2	8 (byte)	0x3FFF C016	Fast GPIO Port 0 Pin value register 2. Bit 0 in FIO0PIN2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0PIN3	8 (byte)	0x3FFF C017	Fast GPIO Port 0 Pin value register 3. Bit 0 in FIO0PIN3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0PINL	16 (half-word)	0x3FFF C014	Fast GPIO Port 0 Pin value Lower half-word register. Bit 0 in FIO0PINL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0PINU	16 (half-word)	0x3FFF C016	Fast GPIO Port 0 Pin value Upper half-word register. Bit 0 in FIO0PINU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 82: Fast GPIO port 1 Pin value byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1PIN0	8 (byte)	0x3FFF C034	Fast GPIO Port 1 Pin value register 0. Bit 0 in FIO1PIN0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1PIN1	8 (byte)	0x3FFF C035	Fast GPIO Port 1 Pin value register 1. Bit 0 in FIO1PIN1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1PIN2	8 (byte)	0x3FFF C036	Fast GPIO Port 1 Pin value register 2. Bit 0 in FIO1PIN2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1PIN3	8 (byte)	0x3FFF C037	Fast GPIO Port 1 Pin value register 3. Bit 0 in FIO1PIN3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1PINL	16 (half-word)	0x3FFF C034	Fast GPIO Port 1 Pin value Lower half-word register. Bit 0 in FIO1PINL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1PINU	16 (half-word)	0x3FFF C036	Fast GPIO Port 1 Pin value Upper half-word register. Bit 0 in FIO1PINU register corresponds to P1.16 bit 15 to P1.31.	0x0000

8.4.4 GPIO port output Set register (IOSET, Port 0: IO0SET - 0xE002 8004 and Port 1: IO1SET - 0xE002 8014; FIOSET, Port 0: FIO0SET - 0x3FFF C018 and Port 1: FIO1SET - 0x3FFF C038)

This register is used to produce a HIGH level output at the port pins configured as GPIO in an OUTPUT mode. Writing 1 produces a HIGH level at the corresponding port pins. Writing 0 has no effect. If any pin is configured as an input or a secondary function, writing 1 to the corresponding bit in the IOSET has no effect.

Reading the IOSET register returns the value of this register, as determined by previous writes to IOSET and IOCLR (or IOPIN as noted above). This value does not reflect the effect of any outside world influence on the I/O pins.

Volume 1

Legacy registers are the IO0SET and IO1SET, while the enhanced GPIOs are supported via the FIO0SET and FIO1SET registers. Access to a port pins via the FIOSET register is conditioned by the corresponding FIOMASK register (see Section 8.4.2 "Fast GPIO port Mask register (FIOMASK, Port 0: FIO0MASK - 0x3FFF C010 and Port 1:FIO1MASK - 0x3FFF C030)").

Table 83: GPIO port 0 output Set register (IO0SET - address 0xE002 8004 bit description

Bit	Symbol	Description	Reset value
31:0	P0xSET	Slow GPIO output value Set bits. Bit 0 in IOOSET corresponds to P0.0 Bit 31 in IOOSET corresponds to P0.31.	0x0000 0000

Table 84: GPIO port 1 output Set register (IO1SET - address 0xE002 8014) bit description

Bit	Symbol	Description	Reset value
31:0	P1xSET	Slow GPIO output value Set bits. Bit 0 in IO1SET corresponds to P1.0 Bit 31 in IO1SET corresponds to P1.31.	0x0000 0000

Table 85: Fast GPIO port 0 output Set register (FIO0SET - address 0x3FFF C018) bit description

Bit	Symbol	Description	Reset value
31:0	FP0xSET	Fast GPIO output value Set bits. Bit 0 in FIO0SET corresponds to P0.0 Bit 31 in FIO0SET corresponds to P0.31.	0x0000 0000

Table 86: Fast GPIO port 1 output Set register (FIO1SET - address 0x3FFF C038) bit description

Bit	Symbol	Description	Reset value
31:0	FP1xSET	Fast GPIO output value Set bits. Bit 0 Fin IO1SET corresponds to P1.0 Bit 31 in FIO1SET corresponds to P1.31.	0x0000 0000

Aside from the 32-bit long and word only accessible FIOSET register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 88, too. Next to providing the same functions as the FIOSET register, these additional registers allow easier and faster access to the physical port pins.

Table 87: Fast GPIO port 0 output Set byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0SET0	8 (byte)	0x3FFF C018	Fast GPIO Port 0 output Set register 0. Bit 0 in FIO0SET0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0SET1	8 (byte)	0x3FFF C019	Fast GPIO Port 0 output Set register 1. Bit 0 in FIO0SET1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0SET2	8 (byte)	0x3FFF C01A	Fast GPIO Port 0 output Set register 2. Bit 0 in FIO0SET2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0SET3	8 (byte)	0x3FFF C01B	Fast GPIO Port 0 output Set register 3. Bit 0 in FIO0SET3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0SETL	16 (half-word)	0x3FFF C018	Fast GPIO Port 0 output Set Lower half-word register. Bit 0 in FIO0SETL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0SETU	16 (half-word)	0x3FFF C01A	Fast GPIO Port 0 output Set Upper half-word register. Bit 0 in FIO0SETU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 88: Fast GPIO port 1 output Set byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1SET0	8 (byte)	0x3FFF C038	Fast GPIO Port 1 output Set register 0. Bit 0 in FIO1SET0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1SET1	8 (byte)	0x3FFF C039	Fast GPIO Port 1 output Set register 1. Bit 0 in FIO1SET1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1SET2	8 (byte)	0x3FFF C03A	Fast GPIO Port 1 output Set register 2. Bit 0 in FIO1SET2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1SET3	8 (byte)	0x3FFF C03B	Fast GPIO Port 1 output Set register 3. Bit 0 in FIO1SET3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1SETL	16 (half-word)	0x3FFF C038	Fast GPIO Port 1 output Set Lower half-word register. Bit 0 in FIO1SETL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1SETU	16 (half-word)	0x3FFF C03A	Fast GPIO Port 1 output Set Upper half-word register. Bit 0 in FIO1SETU register corresponds to P1.16 bit 15 to P1.31.	0x0000

8.4.5 GPIO port output Clear register (IOCLR, Port 0: IO0CLR - 0xE002 800C and Port 1: IO1CLR - 0xE002 801C; FIOCLR, Port 0: FIO0CLR - 0x3FFF C01C and Port 1: FIO1CLR - 0x3FFF C03C)

This register is used to produce a LOW level output at port pins configured as GPIO in an OUTPUT mode. Writing 1 produces a LOW level at the corresponding port pin and clears the corresponding bit in the IOSET register. Writing 0 has no effect. If any pin is configured as an input or a secondary function, writing to IOCLR has no effect.

Legacy registers are the IOOCLR and IO1CLR, while the enhanced GPIOs are supported via the FIO0CLR and FIO1CLR registers. Access to a port pins via the FIOCLR register is conditioned by the corresponding FIOMASK register (see Section 8.4.2 "Fast GPIO port Mask register (FIOMASK, Port 0: FIO0MASK - 0x3FFF C010 and Port 1:FIO1MASK - 0x3FFF C030)").

Table 89: GPIO port 0 output Clear register 0 (IO0CLR - address 0xE002 800C) bit description

Bit	Symbol	Description	Reset value
31:0	P0xCLR	Slow GPIO output value Clear bits. Bit 0 in IO0CLR corresponds to P0.0 \dots Bit 31 in IO0CLR corresponds to P0.31.	0x0000 0000

Table 90: GPIO port 1 output Clear register 1 (IO1CLR - address 0xE002 801C) bit description

Bit	Symbol	Description	Reset value
31:0	P1xCLR	Slow GPIO output value Clear bits. Bit 0 in IO1CLR corresponds to P1.0 Bit 31 in IO1CLR corresponds to P1.31.	0x0000 0000

Table 91: Fast GPIO port 0 output Clear register 0 (FIO0CLR - address 0x3FFF C01C) bit description

Bit	Symbol	Description	Reset value
31:0	FP0xCLR	Fast GPIO output value Clear bits. Bit 0 in FIO0CLR corresponds to P0.0 Bit 31 in FIO0CLR corresponds to P0.31.	0x0000 0000

Table 92: Fast GPIO port 1 output Clear register 1 (FIO1CLR - address 0x3FFF C03C) bit description

Bit	Symbol	Description	Reset value
31:0	FP1xCLR	Fast GPIO output value Clear bits. Bit 0 in FIO1CLR corresponds to P1.0 Bit 31 in FIO1CLR corresponds to P1.31.	0x0000 0000

Aside from the 32-bit long and word only accessible FIOCLR register, every fast GPIO port can also be controlled via several byte and half-word accessible registers listed in Table 94, too. Next to providing the same functions as the FIOCLR register, these additional registers allow easier and faster access to the physical port pins.

Table 93: Fast GPIO port 0 output Clear byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO0CLR0	8 (byte)	0x3FFF C01C	Fast GPIO Port 0 output Clear register 0. Bit 0 in FIO0CLR0 register corresponds to P0.0 bit 7 to P0.7.	0x00
FIO0CLR1	8 (byte)	0x3FFF C01D	Fast GPIO Port 0 output Clear register 1. Bit 0 in FIO0CLR1 register corresponds to P0.8 bit 7 to P0.15.	0x00
FIO0CLR2	8 (byte)	0x3FFF C01E	Fast GPIO Port 0 output Clear register 2. Bit 0 in FIO0CLR2 register corresponds to P0.16 bit 7 to P0.23.	0x00
FIO0CLR3	8 (byte)	0x3FFF C01F	Fast GPIO Port 0 output Clear register 3. Bit 0 in FIO0CLR3 register corresponds to P0.24 bit 7 to P0.31.	0x00
FIO0CLRL	16 (half-word)	0x3FFF C01C	Fast GPIO Port 0 output Clear Lower half-word register. Bit 0 in FIO0CLRL register corresponds to P0.0 bit 15 to P0.15.	0x0000
FIO0CLRU	16 (half-word)	0x3FFF C01E	Fast GPIO Port 0 output Clear Upper half-word register. Bit 0 in FIO0SETU register corresponds to P0.16 bit 15 to P0.31.	0x0000

Table 94: Fast GPIO port 1 output Clear byte and half-word accessible register description

Register name	Register length (bits) & access	Address	Description	Reset value
FIO1CLR0	8 (byte)	0x3FFF C03C	Fast GPIO Port 1 output Clear register 0. Bit 0 in FIO1CLR0 register corresponds to P1.0 bit 7 to P1.7.	0x00
FIO1CLR1	8 (byte)	0x3FFF C03D	Fast GPIO Port 1 output Clear register 1. Bit 0 in FIO1CLR1 register corresponds to P1.8 bit 7 to P1.15.	0x00
FIO1CLR2	8 (byte)	0x3FFF C03E	Fast GPIO Port 1 output Clear register 2. Bit 0 in FIO1CLR2 register corresponds to P1.16 bit 7 to P1.23.	0x00
FIO1CLR3	8 (byte)	0x3FFF C03F	Fast GPIO Port 1 output Clear register 3. Bit 0 in FIO1CLR3 register corresponds to P1.24 bit 7 to P1.31.	0x00
FIO1CLRL	16 (half-word)	0x3FFF C03C	Fast GPIO Port 1 output Clear Lower half-word register. Bit 0 in FIO1CLRL register corresponds to P1.0 bit 15 to P1.15.	0x0000
FIO1CLRU	16 (half-word)	0x3FFF C03E	Fast GPIO Port 1 output Clear Upper half-word register. Bit 0 in FIO1CLRU register corresponds to P1.16 bit 15 to P1.31.	0x0000



Chapter 8: GPIO

8.5 GPIO usage notes

8.5.1 Example 1: sequential accesses to IOSET and IOCLR affecting the same GPIO pin/bit

State of the output configured GPIO pin is determined by writes into the pin's port IOSET and IOCLR registers. Last of these accesses to the IOSET/IOCLR register will determine the final output of a pin.

In case of a code:

```
IOODIR = 0x0000 0080 ;pin P0.7 configured as output
IOOCLR = 0x0000 0080 ;P0.7 goes LOW
IOOSET = 0x0000 0080 ;P0.7 goes HIGH
IOOCLR = 0x0000 0080 ;P0.7 goes LOW
```

pin P0.7 is configured as an output (write to IO0DIR register). After this, P0.7 output is set to low (first write to IO0CLR register). Short high pulse follows on P0.7 (write access to IO0SET), and the final write to IO0CLR register sets pin P0.7 back to low level.

8.5.2 Example 2: an immediate output of 0s and 1s on a GPIO port

Write access to port's IOSET followed by write to the IOCLR register results with pins outputting 0s being slightly later then pins outputting 1s. There are systems that can tolerate this delay of a valid output, but for some applications simultaneous output of a binary content (mixed 0s and 1s) within a group of pins on a single GPIO port is required. This can be accomplished by writing to the port's IOPIN register.

Following code will preserve existing output on PORT0 pins P0.[31:16] and P0.[7:0] and at the same time set P0.[15:8] to 0xA5, regardless of the previous value of pins P0.[15:8]:

```
IOOPIN = (IOOPIN && 0xFFFF00FF) | 0x0000A500
```

The same outcome can be obtained using the fast port access.

Solution 1: using 32-bit (word) accessible fast GPIO registers

```
FIOOMASK = 0xFFFF00FF;
FIOOPIN = 0x0000A500;
```

Solution 2: using 16-bit (half-word) accessible fast GPIO registers

```
FIOOMASKL = 0x00FF;
FIOOPINL = 0xA500;
```

Solution 3: using 8-bit (byte) accessible fast GPIO registers

```
FIOOPIN1 = 0xA5;
```

8.5.3 Writing to IOSET/IOCLR .vs. IOPIN

Volume 1

Write to the IOSET/IOCLR register allows easy change of the port's selected output pin(s) to high/low level at a time. Only pin/bit(s) in the IOSET/IOCLR written with 1 will be set to high/low level, while those written as 0 will remain unaffected. However, by just writing to either IOSET or IOCLR register it is not possible to instantaneously output arbitrary binary data containing mixture of 0s and 1s on a GPIO port.

Write to the IOPIN register enables instantaneous output of a desired content on the parallel GPIO. Binary data written into the IOPIN register will affect all output configured pins of that parallel port: 0s in the IOPIN will produce low level pin outputs and 1s in IOPIN will produce high level pin outputs. In order to change output of only a group of port's pins, application must logically AND readout from the IOPIN with mask containing 0s in bits corresponding to pins that will be changed, and 1s for all others. Finally, this result has to be logically ORred with the desired content and stored back into the IOPIN register. Example 2 from above illustrates output of 0xA5 on PORT0 pins 15 to 8 while preserving all other PORT0 output pins as they were before.

8.5.4 Output signal frequency considerations when using the legacy and enhanced GPIO registers

The enhanced features of the fast GPIO ports available on this microcontroller make GPIO pins more responsive to the code that has task of controlling them. In particular, software access to a GPIO pin is 3.5 times faster via the fast GPIO registers than it is when the legacy set of registers is used. As a result of the access speed increase, the maximum output frequency of the digital pin is increased 3.5 times, too. This tremendous increase of the output frequency is not always that visible when a plain C code is used, and a portion of an application handling the fast port output might have to be written in an assembly code and executed in the ARM mode.

Here is a code where the pin control section is written in assembly language for ARM. It illustrates the difference between the fast and slow GPIO port output capabilities. Once this code is compiled in the ARM mode, its execution from the on-chip Flash will yield the best results when the MAM module is configured as described in Section 4.9 "MAM usage notes" on page 49. Execution from the on-chip SRAM is independent from the MAM setup.

```
ldr r0,=0xe01fc1a0 /*register address--enable fast port*/
mov r1, #0x1
str r1,[r0]
                    /*enable fast port0*/
ldr r1,=0xffffffff
ldr r0,=0x3fffc000 /*direction of fast port0*/
str r1,[r0]
ldr r0,=0xe0028018 /*direction of slow port 1*/
str r1,[r0]
ldr r0,=0x3fffc018 /*FI00SET -- fast port0 register*/
ldr r1,=0x3fffc01c /*FIO0CLR0 -- fast port0 register*/
ldr r2,=0xC0010000 /*select fast port 0.16 for toggle*/
ldr r3,=0xE0028014 /*IO1SET -- slow port1 register*/
ldr r4,=0xE002801C /*IO1CLR -- slow port1 register*/
1dr r5,=0x00100000 /*select slow port 1.20 for toggle*/
/*Generate 2 pulses on the fast port*/
str r2,[r0]
```

Volume 1 Chapter 8: GPIO

```
str r2,[r1]
str r2,[r0]
str r2,[r1]
/*Generate 2 pulses on the slow port*/
str r5,[r3]
str r5,[r4]
str r5,[r4]
loop: b loop
```

<u>Figure 17</u> illustrates the code from above executed from the LPC2148 Flash memory. The PLL generated F_{CCLK} =60 MHz out of external F_{OSC} = 12 MHz. The MAM was fully enabled with MEMCR = 2 and MEMTIM = 3, and VPBDIV = 1 (PCLK = CCLK).

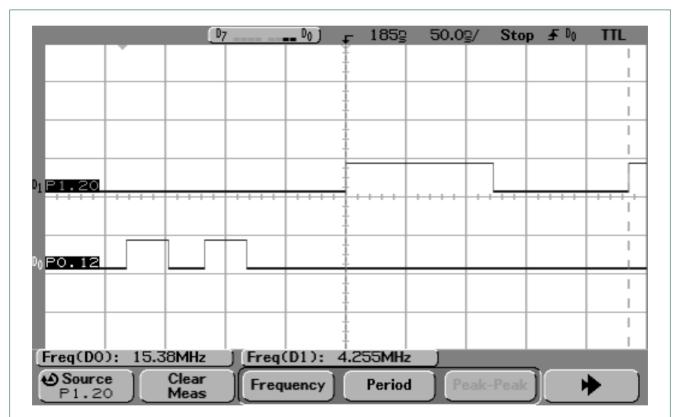


Fig 17. Illustration of the fast and slow GPIO access and output showing 3.5 x increase of the pin output frequency



UM10139

Chapter 9: Universal Asynchronous Receiver/Transmitter 0 (UART0)

Rev. 01 — 15 August 2005

User manual



9.1 Features

- 16 byte Receive and Transmit FIFOs
- Register locations conform to '550 industry standard.
- Receiver FIFO trigger points at 1, 4, 8, and 14 bytes.
- Built-in fractional baud rate generator with autobauding capabilities.
- Mechanism that enables software and hardware flow control implementation.

9.2 Pin description

Table 95: UART0 pin description

Pin	Туре	Description
RXD0	Input	Serial Input. Serial receive data.
TXD0	Output	Serial Output. Serial transmit data.

9.3 Register description

UART0 contains registers organized as shown in <u>Table 96</u>. The Divisor Latch Access Bit (DLAB) is contained in U0LCR[7] and enables access to the Divisor Latches.

Volume 1

Table 96: UART0 register map

Name	Description	Bit function	ns and ad	ldresses						Access		Address
		MSB							LSB		value[1]	
	'	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
U0RBR	Receiver Buffer Register				8-bit Re	ad Data				RO	NA	0xE000 C000 (DLAB=0)
J0THR	Transmit Holding Register				8-bit Wr	ite Data				WO	NA	0xE000 C000 (DLAB=0)
U0DLL	Divisor Latch LSB		8-bit Data						R/W	0x01	0xE000 C000 (DLAB=1)	
U0DLM	Divisor Latch MSB				8-bit	Data				R/W	0x00	0xE000 C004 (DLAB=1)
U0IER	Interrupt Enable	-	-	-	-	-	-	En.ABTO	En.ABEO	R/W	0x00	0xE000 C004
	Register	-	-	-	-	-	En.RX Lin.St.Int	Enable THRE Int	En.RX Dat.Av.Int			(DLAB=0)
U0IIR	Interrupt ID Reg.	-	-	-	-	-	-	ABTO Int	ABEO Int	RO	0x01	0xE000 C008
		FIFOs E	nabled	-	-	IIR3	IIR2	IIR1	IIR0			
U0FCR	FIFO Control Register	RX Tr	igger	-	-	-	TX FIFO Reset	RX FIFO Reset	FIFO Enable	WO	0x00	0xE000 C008
U0LCR	Line Control Register	DLAB	Set Break	Stick Parity	Even Par.Selct.	Parity Enable	No. of Stop Bits	Word Len	gth Select	R/W	0x00	0xE000 C00C
U0LSR	Line Status Register	RX FIFO Error	TEMT	THRE	BI	FE	PE	OE	DR	RO	0x60	0xE000 C014
J0SCR	Scratch Pad Reg.				8-bit	Data				R/W	0x00	0xE000 C01C
U0ACR	Auto-baud Control Register	-	-	-	-	-	-	ABTO Int.Clr	ABEO Int.Clr	R/W	0x00	0xE000 C020
		-	-	-	-	-	Aut.Rstrt.	Mode	Start			
J0FDR	Fractional Divider Register				Reserve	ed[31:8]					0x10	0xE000 C028
			Mu	IVal			DivA	ddVal				
U0TER	TX. Enable Reg.	TXEN	-	-	-	-	-	-	-	R/W	0x80	0xE000 C030

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Volume 1 Chapter 9: UART0

9.3.1 UARTO Receiver Buffer Register (U0RBR - 0xE000 C000, when DLAB = 0, Read Only)

The U0RBR is the top byte of the UART0 Rx FIFO. The top byte of the Rx FIFO contains the oldest character received and can be read via the bus interface. The LSB (bit 0) represents the "oldest" received data bit. If the character received is less than 8 bits, the unused MSBs are padded with zeroes.

The Divisor Latch Access Bit (DLAB) in U0LCR must be zero in order to access the U0RBR. The U0RBR is always Read Only.

Since PE, FE and BI bits correspond to the byte sitting on the top of the RBR FIFO (i.e. the one that will be read in the next read from the RBR), the right approach for fetching the valid pair of received byte and its status bits is first to read the content of the U0LSR register, and then to read a byte from the U0RBR.

Table 97: UART0 Receiver Buffer Register (U0RBR - address 0xE000 C000, when DLAB = 0, Read Only) bit description

Bit	Symbol	Description	Reset value
7:0	RBR	The UART0 Receiver Buffer Register contains the oldest received byte in the UART0 Rx FIFO.	undefined

9.3.2 UART0 Transmit Holding Register (U0THR - 0xE000 C000, when DLAB = 0, Write Only)

The U0THR is the top byte of the UART0 TX FIFO. The top byte is the newest character in the TX FIFO and can be written via the bus interface. The LSB represents the first bit to transmit.

The Divisor Latch Access Bit (DLAB) in U0LCR must be zero in order to access the U0THR. The U0THR is always Write Only.

Table 98: UART0 Transmit Holding Register (U0THR - address 0xE000 C000, when DLAB = 0, Write Only) bit description

Bit	Symbol	Description	Reset value
7:0	THR	Writing to the UART0 Transmit Holding Register causes the data to be stored in the UART0 transmit FIFO. The byte will be sent when it reaches the bottom of the FIFO and the transmitter is available.	NA

9.3.3 UARTO Divisor Latch Registers (U0DLL - 0xE000 C000 and U0DLM - 0xE000 C004, when DLAB = 1)

The UART0 Divisor Latch is part of the UART0 Fractional Baud Rate Generator and holds the value used to divide the clock supplied by the fractional prescaler in order to produce the baud rate clock, which must be 16x the desired baud rate (Equation 1). The U0DLL and U0DLM registers together form a 16 bit divisor where U0DLL contains the lower 8 bits of the divisor and U0DLM contains the higher 8 bits of the divisor. A 0x0000 value is treated like a 0x0001 value as division by zero is not allowed. The Divisor Latch Access Bit (DLAB) in U0LCR must be one in order to access the UART0 Divisor Latches.

Details on how to select the right value for U0DLL and U0DLM can be found later on in this chapter.

97

Volume 1

Chapter 9: UART0

Table 99: UART0 Divisor Latch LSB register (U0DLL - address 0xE000 C000, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLL	The UART0 Divisor Latch LSB Register, along with the U0DLM register, determines the baud rate of the UART0.	0x01

Table 100: UART0 Divisor Latch MSB register (U0DLM - address 0xE000 C004, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLM	The UART0 Divisor Latch MSB Register, along with the U0DLL register, determines the baud rate of the UART0.	0x00

9.3.4 UART0 Fractional Divider Register (U0FDR - 0xE000 C028)

The UART0 Fractional Divider Register (U0FDR) controls the clock pre-scaler for the baud rate generation and can be read and written at user's discretion. This pre-scaler takes the VPB clock and generates an output clock per specified fractional requirements.

Table 101: UART0 Fractional Divider Register (U0FDR - address 0xE000 C028) bit description

Bit	Function	Description	Reset value
3:0	DIVADDVAL	Baudrate generation pre-scaler divisor value. If this field is 0, fractional baudrate generator will not impact the UART0 baudrate.	0
7:4	MULVAL	Baudrate pre-scaler multiplier value. This field must be greater or equal 1 for UART0 to operate properly, regardless of whether the fractional baudrate generator is used or not.	1
31:8	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

This register controls the clock pre-scaler for the baud rate generation. The reset value of the register keeps the fractional capabilities of UART0 disabled making sure that UART0 is fully software and hardware compatible with UARTs not equipped with this feature.

UART0 baudrate can be calculated as:

(1)

$$UARTO_{baudrate} = \frac{PCLK}{16 \times (16 \times U0DLM + U0DLL) \times \left(1 + \frac{DivAddVal}{MulVal}\right)}$$

Where PCLK is the peripheral clock, U0DLM and U0DLL are the standard UART0 baud rate divider registers, and DIVADDVAL and MULVAL are UART0 fractional baudrate generator specific parameters.

The value of MULVAL and DIVADDVAL should comply to the following conditions:

- 1. 0 < MULVAL ≤ 15
- $2. \ 0 \leq DIVADDVAL \leq 15$

Chapter 9: UART0

If the U0FDR register value does not comply to these two requests then the fractional divider output is undefined. If DIVADDVAL is zero then the fractional divider is disabled and the clock will not be divided.

The value of the U0FDR should not be modified while transmitting/receiving data or data may be lost or corrupted.

Usage Note: For practical purposes, UART0 baudrate formula can be written in a way that identifies the part of a UART baudrate generated without the fractional baudrate generator, and the correction factor that this module adds:

(2)

$$UARTO_{baudrate} = \frac{PCLK}{16 \times (16 \times U0DLM + U0DLL)} \times \frac{MulVal}{(MulVal + DivAddVal)}$$

Based on this representation, fractional baudrate generator contribution can also be described as a prescaling with a factor of MULVAL / (MULVAL + DIVADDVAL).

9.3.5 UARTO baudrate calculation

Example 1: Using UART0baudrate formula from above, it can be determined that system with PCLK = 20 MHz, U0DL = 130 (U0DLM = 0x00 and U0DLL = 0x82), DIVADDVAL = 0 and MULVAL = 1 will enable UART0 with UART0baudrate = 9615 bauds.

Example 2: Using UART0baudrate formula from above, it can be determined that system with PCLK = 20 MHz, U0DL = 93 (U0DLM = 0x00 and U0DLL = 0x5D), DIVADDVAL = 2 and MULVAL = 5 will enable UART0 with UART0baudrate = 9600 bauds.

Table 102: Baudrates available when using 20 MHz peripheral clock (PCLK = 20 MHz)

Desired	MULVA	L = 0 DIVA	DDVAL = 0	Optimal MULVAL & DIVADDVAL			
baudrate		∕l:U0DLL dec[1]	% error[3]	U0DLM:U0DLL dec[1]	Fractional pre-scaler value MULDIV MULDIV + DIVADDVAL	% error ^[3]	
50	61A8	25000	0.0000	25000	1/(1+0)	0.0000	
75	411B	16667	0.0020	12500	3/(3+1)	0.0000	
110	2C64	11364	0.0032	6250	11/(11+9)	0.0000	
134.5	244E	9294	0.0034	3983	3/(3+4)	0.0001	
150	208D	8333	0.0040	6250	3/(3+1)	0.0000	
300	1047	4167	0.0080	3125	3/(3+1)	0.0000	
600	0823	2083	0.0160	1250	3/(3+2)	0.0000	
1200	0412	1042	0.0320	625	3/(3+2)	0.0000	
1800	02B6	694	0.0640	625	9/(9+1)	0.0000	
2000	0271	625	0.0000	625	1/(1+0)	0.0000	
2400	0209	521	0.0320	250	12/(12+13)	0.0000	
3600	015B	347	0.0640	248	5/(5+2)	0.0064	
4800	0104	260	0.1600	125	12/(12+13)	0.0000	

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Volume 1 Chapter 9: UART0

Table 102: Baudrates available when using 20 MHz peripheral clock (PCLK = 20 MHz)

Desired	MULVA	AL = 0 DIVA	DDVAL = 0	Optimal MULVAL & DIVADDVAL			
baudrate	U0DLM:U0DLL		% error[3]	U0DLM:U0DLL	Fractional	% error[3]	
	hex[2]	dec[1]		dec[1]	pre-scaler value MULDIV MULDIV + DIVADDVAL		
7200	00AE	174	0.2240	124	5/(5+2)	0.0064	
9600	0082	130	0.1600	93	5/(5+2)	0.0064	
19200	0041	65	0.1600	31	10/(10+11)	0.0064	
38400	0021	33	1.3760	12	7/(7+12)	0.0594	
56000	0021	22	1.4400	13	7/(7+5)	0.0160	
57600	0016	22	1.3760	19	7/(7+1)	0.0594	
112000	000B	11	1.4400	6	7/(7+6)	0.1600	
115200	000B	11	1.3760	4	7/(7+12)	0.0594	
224000	0006	6	7.5200	3	7/(7+6)	0.1600	
448000	0003	3	7.5200	2	5/(5+2)	0.3520	

^[1] Values in the row represent decimal equivalent of a 16 bit long content (DLM:DLL).

9.3.6 UART0 Interrupt Enable Register (U0IER - 0xE000 C004, when DLAB = 0)

The U0IER is used to enable UART0 interrupt sources.

Table 103: UART0 Interrupt Enable Register (U0IER - address 0xE000 C004, when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset value
0	RBR Interrupt Enable		U0IER[0] enables the Receive Data Available interrupt for UART0. It also controls the Character Receive Time-out interrupt.	0
		0	Disable the RDA interrupts.	-
		1	Enable the RDA interrupts.	-
1	THRE Interrupt Enable		U0IER[1] enables the THRE interrupt for UART0. The status of this can be read from U0LSR[5].	0
		0	Disable the THRE interrupts.	
		1	Enable the THRE interrupts.	-
2	RX Line Status		U0IER[2] enables the UART0 RX line status interrupts. The status of this interrupt can be read from U0LSR[4:1].	0
	Interrupt Enable	0	Disable the RX line status interrupts.	
	Enable	1	Enable the RX line status interrupts.	-
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[2] Values in the row represent hex equivalent of a 16 bit long content (DLM:DLL).

^[3] Refers to the percent error between desired and actual baudrate.

Volume 1

Chapter 9: UART0

Symbol	Value	Description	Reset value
ABTOIntEn		U1IER8 enables the auto-baud time-out interrupt.	0
	0	Disable Auto-baud Time-out Interrupt.	
	1	Enable Auto-baud Time-out Interrupt.	_
ABEOIntEn		U1IER9 enables the end of auto-baud interrupt.	0
	0	Disable End of Auto-baud Interrupt.	
	1	Enable End of Auto-baud Interrupt.	_
-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
	Symbol ABTOIntEn	ABTOIntEn 0 1 ABEOIntEn 0 1 1	ABTOIntEn U1IER8 enables the auto-baud time-out interrupt. Disable Auto-baud Time-out Interrupt. Enable Auto-baud Time-out Interrupt. U1IER9 enables the end of auto-baud interrupt. U1IER9 enables the end of auto-baud interrupt. Disable End of Auto-baud Interrupt. Enable End of Auto-baud Interrupt. Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not

9.3.7 UART0 Interrupt Identification Register (U0IIR - 0xE000 C008, Read Only)

The U0IIR provides a status code that denotes the priority and source of a pending interrupt. The interrupts are frozen during an U0IIR access. If an interrupt occurs during an U0IIR access, the interrupt is recorded for the next U0IIR access.

Table 104: UART0 Interrupt Identification Register (UOIIR - address 0xE000 C008, read only) bit description

Bit	Symbol	Value	Description	Reset value		
0	Interrupt Pending		Note that U0IIR[0] is active low. The pending interrupt can be determined by evaluating U0IIR[3:1].	1		
		0	At least one interrupt is pending.			
		1	No pending interrupts.			
3:1	Interrupt Identification		U0IER[3:1] identifies an interrupt corresponding to the UART0 Rx FIFO. All other combinations of U0IER[3:1] not listed above are reserved (000,100,101,111).	0		
		011	1 - Receive Line Status (RLS).	_		
				010	2a - Receive Data Available (RDA).	_
		110	2b - Character Time-out Indicator (CTI).	_		
		001	3 - THRE Interrupt	_		
5:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		
7:6	FIFO Enable		These bits are equivalent to U0FCR[0].	0		
8	ABEOInt		End of auto-baud interrupt. True if auto-baud has finished successfully and interrupt is enabled.	0		
9	ABTOInt		Auto-baud time-out interrupt. True if auto-baud has timed out and interrupt is enabled.	0		
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		

Interrupts are handled as described in <u>Table 105</u>. Given the status of U0IIR[3:0], an interrupt handler routine can determine the cause of the interrupt and how to clear the active interrupt. The U0IIR must be read in order to clear the interrupt prior to exiting the Interrupt Service Routine.

The UART0 RLS interrupt (U0IIR[3:1] = 011) is the highest priority interrupt and is set whenever any one of four error conditions occur on the UART0 Rx input: overrun error (OE), parity error (PE), framing error (FE) and break interrupt (BI). The UART0 Rx error condition that set the interrupt can be observed via U0LSR[4:1]. The interrupt is cleared upon an U0LSR read.

The UART0 RDA interrupt (U0IIR[3:1] = 010) shares the second level priority with the CTI interrupt (U0IIR[3:1] = 110). The RDA is activated when the UART0 Rx FIFO reaches the trigger level defined in U0FCR[7:6] and is reset when the UART0 Rx FIFO depth falls below the trigger level. When the RDA interrupt goes active, the CPU can read a block of data defined by the trigger level.

The CTI interrupt (U0IIR[3:1] = 110) is a second level interrupt and is set when the UARTO Rx FIFO contains at least one character and no UARTO Rx FIFO activity has occurred in 3.5 to 4.5 character times. Any UARTO Rx FIFO activity (read or write of UARTO RSR) will clear the interrupt. This interrupt is intended to flush the UARTO RBR after a message has been received that is not a multiple of the trigger level size. For example, if a peripheral wished to send a 105 character message and the trigger level was 10 characters, the CPU would receive 10 RDA interrupts resulting in the transfer of 100 characters and 1 to 5 CTI interrupts (depending on the service routine) resulting in the transfer of the remaining 5 characters.

Table 105: UART0 interrupt handling

U0IIR[3:0] value[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset
0001	-	None	None	-
0110	Highest	RX Line Status / Error	OE ^[2] or PE ^[2] or FE ^[2] or BI ^[2]	U0LSR Read[2]
0100	Second	RX Data Available	Rx data available or trigger level reached in FIFO (U0FCR0=1)	U0RBR Read ^[3] or UART0 FIFO drops below trigger level
1100	Second	Character Time-out indication	Minimum of one character in the Rx FIFO and no character input or removed during a time period depending on how many characters are in FIFO and what the trigger level is set at (3.5 to 4.5 character times).	U0RBR Read ^[3]
			The exact time will be:	
			[(word length) \times 7 $-$ 2] \times 8 + [(trigger level $-$ number of characters) \times 8 + 1] RCLKs	
0010	Third	THRE	THRE[2]	U0IIR Read (if source of interrupt) or THR write [4]

- [1] Values "0000", "0011", "0101", "0111", "1000", "1001", "1010", "1011","1101","1111" are reserved.
- [2] For details see Section 9.3.10 "UARTO Line Status Register (U0LSR 0xE000 C014, Read Only)"
- [3] For details see Section 9.3.1 "UARTO Receiver Buffer Register (U0RBR 0xE000 C000, when DLAB = 0, Read Only)"
- [4] For details see Section 9.3.7 "UARTO Interrupt Identification Register (U0IIR 0xE000 C008, Read Only)" and Section 9.3.2 "UARTO Transmit Holding Register (U0THR 0xE000 C000, when DLAB = 0, Write Only)"

The UART0 THRE interrupt (U0IIR[3:1] = 001) is a third level interrupt and is activated when the UART0 THR FIFO is empty provided certain initialization conditions have been met. These initialization conditions are intended to give the UART0 THR FIFO a chance to fill up with data to eliminate many THRE interrupts from occurring at system start-up. The

Chapter 9: UARTO

Chapter 9: UART0

initialization conditions implement a one character delay minus the stop bit whenever THRE=1 and there have not been at least two characters in the U0THR at one time since the last THRE = 1 event. This delay is provided to give the CPU time to write data to U0THR without a THRE interrupt to decode and service. A THRE interrupt is set immediately if the UARTO THR FIFO has held two or more characters at one time and currently, the U0THR is empty. The THRE interrupt is reset when a U0THR write occurs or a read of the U0IIR occurs and the THRE is the highest interrupt (U0IIR[3:1] = 001).

9.3.8 UARTO FIFO Control Register (U0FCR - 0xE000 C008)

The U0FCR controls the operation of the UART0 Rx and TX FIFOs.

Table 106: UART0 FIFO Control Register (U0FCR - address 0xE000 C008) bit description

Bit	Symbol	Value	Description	Reset value
0	FIFO Enable	0	UART0 FIFOs are disabled. Must not be used in the application.	0
		1	Active high enable for both UART0 Rx and TX FIFOs and U0FCR[7:1] access. This bit must be set for proper UART0 operation. Any transition on this bit will automatically clear the UART0 FIFOs.	_
1	RX FIFO	0	No impact on either of UART0 FIFOs.	0
	Reset	1	Writing a logic 1 to U0FCR[1] will clear all bytes in UART0 Rx FIFO and reset the pointer logic. This bit is self-clearing.	_
2	TX FIFO Reset	0	No impact on either of UART0 FIFOs.	0
		1	Writing a logic 1 to U0FCR[2] will clear all bytes in UART0 TX FIFO and reset the pointer logic. This bit is self-clearing.	_
5:3	-	0	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	RX Trigger Level	00	These two bits determine how many receiver UART0 FIFO characters must be written before an interrupt is activated.	0
			Trigger level 0 (1 character or 0x01)	-
		01	Trigger level 1 (4 characters or 0x04)	
		10 Trig	Trigger level 2 (8 characters or 0x08)	=
		11	Trigger level 3 (14 characters or 0x0E)	_

9.3.9 UARTO Line Control Register (U0LCR - 0xE000 C00C)

The U0LCR determines the format of the data character that is to be transmitted or received.

Table 107: UART0 Line Control Register (U0LCR - address 0xE000 C00C) bit description

Bit	Symbol	Value	Description	Reset value
1:0	Word Length	00	5 bit character length	0
	Select	Select 01 6 bit character length 10 7 bit character length	6 bit character length	
			7 bit character length	
		11	8 bit character length	

Chapter 9: UART0

Table 107: UART0 Line Control Register (U0LCR - address 0xE000 C00C) bit description

Bit	Symbol	Value	Description	Reset value	
2	Stop Bit Select	0	1 stop bit.	0	
		1	2 stop bits (1.5 if U0LCR[1:0]=00).	_	
3	Parity Enable	0	Disable parity generation and checking.	0	
		1	Enable parity generation and checking.	_	
5:4	Parity Select	00	Odd parity. Number of 1s in the transmitted character and the attached parity bit will be odd.	0	
			01	Even Parity. Number of 1s in the transmitted character and the attached parity bit will be even.	_
			10	Forced "1" stick parity.	_
		11	Forced "0" stick parity.	_	
6	Break Control	0	Disable break transmission.	0	
		1	Enable break transmission. Output pin UART0 TXD is forced to logic 0 when U0LCR[6] is active high.		
7	Divisor Latch	0	Disable access to Divisor Latches.	0	
	Access Bit (DLAB)	1	Enable access to Divisor Latches.	_	

9.3.10 UART0 Line Status Register (U0LSR - 0xE000 C014, Read Only)

The U0LSR is a read-only register that provides status information on the UART0 TX and RX blocks.

Table 108: UART0 Line Status Register (U0LSR - address 0xE000 C014, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Receiver Data Ready (RDR)		U0LSR0 is set when the U0RBR holds an unread character and is cleared when the UART0 RBR FIFO is empty.	0
		0	U0RBR is empty.	_
		1	U0RBR contains valid data.	_
1	Overrun Error (OE)		The overrun error condition is set as soon as it occurs. An U0LSR read clears U0LSR1. U0LSR1 is set when UART0 RSR has a new character assembled and the UART0 RBR FIFO is full. In this case, the UART0 RBR FIFO will not be overwritten and the character in the UART0 RSR will be lost.	0
		0	Overrun error status is inactive.	_
		1	Overrun error status is active.	_
2	Parity Error (PE)		When the parity bit of a received character is in the wrong state, a parity error occurs. An U0LSR read clears U0LSR[2]. Time of parity error detection is dependent on U0FCR[0].	0
			Note: A parity error is associated with the character at the top of the UART0 RBR FIFO.	
		0	Parity error status is inactive.	_
		1	Parity error status is active.	_

Table 108: UART0 Line Status Register (U0LSR - address 0xE000 C014, read only) bit description

Bit	Symbol	Value	Description	Reset value
3	Framing Error (FE)		When the stop bit of a received character is a logic 0, a framing error occurs. An U0LSR read clears U0LSR[3]. The time of the framing error detection is dependent on U0FCR0. Upon detection of a framing error, the Rx will attempt to resynchronize to the data and assume that the bad stop bit is actually an early start bit. However, it cannot be assumed that the next received byte will be correct even if there is no Framing Error.	0
			Note: A framing error is associated with the character at the top of the UARTO RBR FIFO.	
		0	Framing error status is inactive.	_
		1	Framing error status is active.	
4	Break Interrupt (BI)		When RXD0 is held in the spacing state (all 0's) for one full character transmission (start, data, parity, stop), a break interrupt occurs. Once the break condition has been detected, the receiver goes idle until RXD0 goes to marking state (all 1's). An U0LSR read clears this status bit. The time of break detection is dependent on U0FCR[0].	0
			Note: The break interrupt is associated with the character at the top of the UARTO RBR FIFO.	
		0	Break interrupt status is inactive.	
		1	Break interrupt status is active.	
5	Transmitter Holding		THRE is set immediately upon detection of an empty UART0 THR and is cleared on a U0THR write.	1
	Register Empty (THRE))	0	U0THR contains valid data.	_
	(IRE))	1	U0THR is empty.	
6	Transmitter Empty		TEMT is set when both U0THR and U0TSR are empty; TEMT is cleared when either the U0TSR or the U0THR contain valid data.	1
	(TEMT)	0	U0THR and/or the U0TSR contains valid data.	
		1	U0THR and the U0TSR are empty.	
7	Error in RX FIFO (RXFE)		U0LSR[7] is set when a character with a Rx error such as framing error, parity error or break interrupt, is loaded into the U0RBR. This bit is cleared when the U0LSR register is read and there are no subsequent errors in the UART0 FIFO.	0
		0	U0RBR contains no UART0 RX errors or U0FCR[0]=0.	_
			UARTO RBR contains at least one UARTO RX error.	_

9.3.11 UART0 Scratch pad register (U0SCR - 0xE000 C01C)

The UOSCR has no effect on the UARTO operation. This register can be written and/or read at user's discretion. There is no provision in the interrupt interface that would indicate to the host that a read or write of the UOSCR has occurred.

Table 109: UART0 Scratch pad register (U0SCR - address 0xE000 C01C) bit description

Bit	Symbol	Description	Reset value
7:0	Pad	A readable, writable byte.	0x00

Chapter 9: UART0

Volume 1

Chapter 9: UART0

9.3.12 UARTO Auto-baud Control Register (U0ACR - 0xE000 C020)

The UARTO Auto-baud Control Register (U0ACR) controls the process of measuring the incoming clock/data rate for the baud rate generation and can be read and written at user's discretion.

Table 110: Auto-baud Control Register (U0ACR - 0xE000 C020) bit description

Bit	Symbol	Value	Description	Reset value
0	Start		This bit is automatically cleared after auto-baud completion.	0
		0	Auto-baud stop (auto-baud is not running).	_
		1	Auto-baud start (auto-baud is running). Auto-baud run bit. This bit is automatically cleared after auto-baud completion.	_
1	Mode		Auto-baud mode select bit.	0
		0	Mode 0.	-
		1	Mode 1.	_
2	AutoRestart	0	No restart	0
		1	Restart in case of time-out (counter restarts at next UART0 Rx falling edge)	
7:3	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0
8	ABEOIntClr		End of auto-baud interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the UOIIR. Writing a 0 has no impact.	0
9	ABTOIntClr		Auto-baud time-out interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the U0IIR. Writing a 0 has no impact.	0
31:10	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

9.3.13 **Auto-baud**

The UART0 auto-baud function can be used to measure the incoming baud-rate based on the "AT" protocol (Hayes command). If enabled the auto-baud feature will measure the bit time of the receive data stream and set the divisor latch registers U0DLM and U0DLL accordingly.

Auto-baud is started by setting the U0ACR Start bit. Auto-baud can be stopped by clearing the U0ACR Start bit. The Start bit will clear once auto-baud has finished and reading the bit will return the status of auto-baud (pending/finished).

Two auto-baud measuring modes are available which can be selected by the U0ACR Mode bit. In mode 0 the baud-rate is measured on two subsequent falling edges of the UART0 Rx pin (the falling edge of the start bit and the falling edge of the least significant bit). In mode 1 the baud-rate is measured between the falling edge and the subsequent rising edge of the UART0 Rx pin (the length of the start bit).

Volume 1

The U0ACR AutoRestart bit can be used to automatically restart baud-rate measurement if a time-out occurs (the rate measurement counter overflows). If this bit is set the rate measurement will restart at the next falling edge of the UART0 Rx pin.

The auto-baud function can generate two interrupts.

- The U0IIR ABTOInt interrupt will get set if the interrupt is enabled (U0IER ABTOIntEn is set and the auto-baud rate measurement counter overflows).
- The U0IIR ABEOInt interrupt will get set if the interrupt is enabled (U0IER ABEOIntEn is set and the auto-baud has completed successfully).

The auto-baud interrupts have to be cleared by setting the corresponding U0ACR ABTOIntCIr and ABEOIntEn bits.

Typically the fractional baud-rate generator is disabled (DIVADDVAL = 0) during auto-baud. However, if the fractional baud-rate generator is enabled (DIVADDVAL > 0), it is going to impact the measuring of UARTO Rx pin baud-rate, but the value of the U0FDR register is not going to be modified after rate measurement. Also, when auto-baud is used, any write to U0DLM and U0DLL registers should be done before U0ACR register write. The minimum and the maximum baudrates supported by UART0 are function of PCLK. number of data bits, stop-bits and parity bits.

(3)

Chapter 9: UARTO

$$ratemin = \frac{2 \times PCLK}{16 \times 2^{15}} \le UARTO_{baudrate} \le \frac{PCLK}{16 \times (2 + databits + paritybits + stopbits)} = ratemax$$

9.3.14 UARTO Transmit Enable Register (U0TER - 0xE000 C030)

LPC2141/2/4/6/8's U0TER enables implementation of software flow control. When TXEn=1, UART0 transmitter will keep sending data as long as they are available. As soon as TXEn becomes 0, UART0 transmission will stop.

Table 111 describes how to use TXEn bit in order to achieve software flow control.

Table 111: UART0 Transmit Enable Register (U0TER - address 0xE000 C030) bit description

Bit	Symbol	Description	Reset value
6:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	TXEN	When this bit is 1, as it is after a Reset, data written to the THR is output on the TXD pin as soon as any preceding data has been sent. If this bit is cleared to 0 while a character is being sent, the transmission of that character is completed, but no further characters are sent until this bit is set again. In other words, a 0 in this bit blocks the transfer of characters from the THR or TX FIFO into the transmit shift register. Software implementing software-handshaking can clear this bit when it receives an XOFF character (DC3). Software can set this bit again when it receives an XON (DC1) character.	1

UM10139

Volume 1 Chapter 9: UART0


9.3.15 Auto-baud Modes

When the software is expecting an "AT" command, it configures the UART0 with the expected character format and sets the U0ACR Start bit. The initial values in the divisor latches U0DLM and U0DLM don't care. Because of the "A" or "a" ASCII coding ("A" = 0x41, "a" = 0x61), the UART0 Rx pin sensed start bit and the LSB of the expected character are delimited by two falling edges. When the U0ACR Start bit is set, the auto-baud protocol will execute the following phases:

- 1. On U0ACR Start bit setting, the baud-rate measurement counter is reset and the UART0 U0RSR is reset. The U0RSR baud rate is switch to the highest rate.
- A falling edge on UART0 Rx pin triggers the beginning of the start bit. The rate measuring counter will start counting PCLK cycles optionally pre-scaled by the fractional baud-rate generator.
- During the receipt of the start bit, 16 pulses are generated on the RSR baud input with the frequency of the (fractional baud-rate pre-scaled) UART0 input clock, guaranteeing the start bit is stored in the U0RSR.
- 4. During the receipt of the start bit (and the character LSB for mode = 0) the rate counter will continue incrementing with the pre-scaled UART0 input clock (PCLK).
- 5. If Mode = 0 then the rate counter will stop on next falling edge of the UART0 Rx pin. If Mode = 1 then the rate counter will stop on the next rising edge of the UART0 Rx pin.
- 6. The rate counter is loaded into U0DLM/U0DLL and the baud-rate will be switched to normal operation. After setting the U0DLM/U0DLL the end of auto-baud interrupt U0IIR ABEOInt will be set, if enabled. The U0RSR will now continue receiving the remaining bits of the "A/a" character.

Chapter 9: UART0



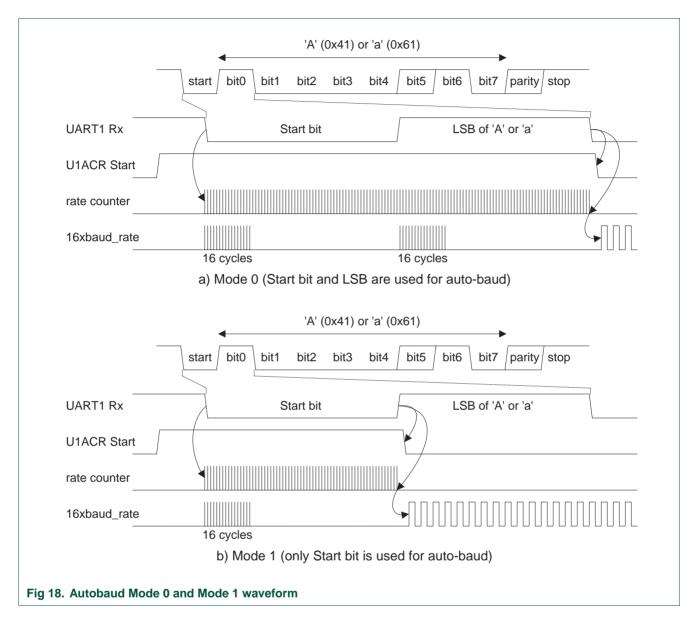

9.4 Architecture

The architecture of the UART0 is shown below in the block diagram.

The VPB interface provides a communications link between the CPU or host and the UART0.

The UART0 receiver block, U0RX, monitors the serial input line, RXD0, for valid input. The UART0 RX Shift Register (U0RSR) accepts valid characters via RXD0. After a valid character is assembled in the U0RSR, it is passed to the UART0 RX Buffer Register FIFO to await access by the CPU or host via the generic host interface.

109

UM10139

Volume 1

Chapter 9: UART0


The UART0 transmitter block, U0TX, accepts data written by the CPU or host and buffers the data in the UART0 TX Holding Register FIFO (U0THR). The UART0 TX Shift Register (U0TSR) reads the data stored in the U0THR and assembles the data to transmit via the serial output pin, TXD0.

The UARTO Baud Rate Generator block, U0BRG, generates the timing enables used by the UARTO TX block. The U0BRG clock input source is the VPB clock (PCLK). The main clock is divided down per the divisor specified in the U0DLL and U0DLM registers. This divided down clock is a 16x oversample clock, NBAUDOUT.

The interrupt interface contains registers U0IER and U0IIR. The interrupt interface receives several one clock wide enables from the U0TX and U0RX blocks.

Status information from the U0TX and U0RX is stored in the U0LSR. Control information for the U0TX and U0RX is stored in the U0LCR.

Volume 1 Chapter 9: UART0

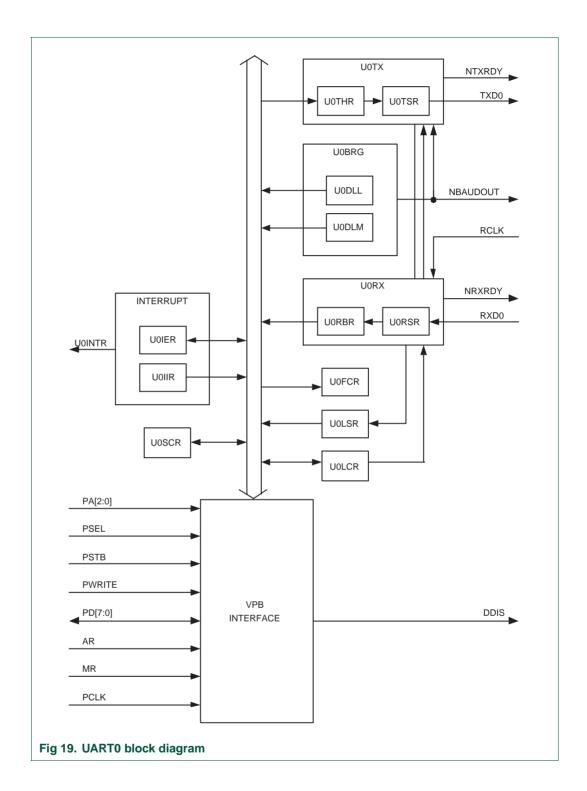



UM10139

Chapter 10: Universal Asynchronous Receiver/Transmitter 1 (UART1)

Rev. 01 — 15 August 2005

User manual

10.1 Features

- UART1 is identical to UART0, with the addition of a modem interface.
- 16 byte Receive and Transmit FIFOs.
- Register locations conform to '550 industry standard.
- Receiver FIFO trigger points at 1, 4, 8, and 14 bytes.
- Built-in fractional baud rate generator with autobauding capabilities.
- Mechanism that enables software and hardware flow control implementation.
- Standard modem interface signals included with flow control (auto-CTS/RTS) fully supported in hardware (LPC2144/6/8 only).

10.2 Pin description

Table 112: UART1 pin description

Pin	Туре	Description
RXD1	Input	Serial Input. Serial receive data.
TXD1	Output	Serial Output. Serial transmit data.
CTS1 ^[1]	Input	Clear To Send. Active low signal indicates if the external modem is ready to accept transmitted data via TXD1 from the UART1. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[4]. State change information is stored in U1MSR[0] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DCD1 ^[1]	Input	Data Carrier Detect. Active low signal indicates if the external modem has established a communication link with the UART1 and data may be exchanged. In normal operation of the modem interface (U1MCR[4]=0), the complement value of this signal is stored in U1MSR[7]. State change information is stored in U1MSR3 and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DSR1 ¹¹	Input	Data Set Ready. Active low signal indicates if the external modem is ready to establish a communications link with the UART1. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[5]. State change information is stored in U1MSR[1] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
DTR1 ^[1]	Output	Data Terminal Ready. Active low signal indicates that the UART1 is ready to establish connection with external modem. The complement value of this signal is stored in U1MCR[0].
RI1[1]	Input	Ring Indicator. Active low signal indicates that a telephone ringing signal has been detected by the modem. In normal operation of the modem interface (U1MCR[4] = 0), the complement value of this signal is stored in U1MSR[6]. State change information is stored in U1MSR[2] and is a source for a priority level 4 interrupt, if enabled (U1IER[3] = 1).
RTS1[1]	Output	Request To Send. Active low signal indicates that the UART1 would like to transmit data to the external modem. The complement value of this signal is stored in U1MCR[1].

[1] LPC2144/6/8 only.

UM10139

Volume 1 Chapter 10: UART1

10.3 Register description

UART1 contains registers organized as shown in Table 76. The Divisor Latch Access Bit (DLAB) is contained in U1LCR[7] and enables access to the Divisor Latches.

Table 113: UART1 register map

Name	Description	Bit function	ons and ad	dresses						Access	Reset	Address
		MSB							LSB		value[1]	
	'	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
U1RBR	Receiver Buffer Register				8-bit Re	ead Data				RO	NA	0xE001 0000 (DLAB=0)
U1THR	Transmit Holding Register		8-bit Write Data							WO	NA	0xE001 0000 (DLAB=0)
U1DLL	Divisor Latch LSB	8-bit Data								R/W	0x01	0xE001 0000 (DLAB=1)
U1DLM	Divisor Latch MSB		8-bit Data							R/W	0x00	0xE001 0004 (DLAB=1)
U1IER	Interrupt Enable	-	-	-	-	-	-	En.ABTO	En.ABEO	R/W	0x00	0xE001 0004
	Register	En.CTS Int ^[2]	-	-	-	E.Modem St.Int[2]	En. RX Lin.St. Int	Enable THRE Int	En. RX Dat.Av.Int			(DLAB=0)
U1IIR	Interrupt ID Reg.	-	-	-	-	-	-	ABTO Int	ABEO Int	RO	RO 0x01	0xE001 0008
		FIFOs E	FIFOs Enabled IIR3 IIR2 IIR1 IIR0				IIR0					
U1FCR	FIFO Control Register	RX Tr	igger	-	-	-	TX FIFO Reset	RX FIFO Reset	FIFO Enable	WO	0x00	0xE001 0008
U1LCR	Line Control Register	DLAB	Set Break	Stick Parity	Even Par.Selct.	Parity Enable	No. of Stop Bits	Word Len	gth Select	R/W	0x00	0xE001 000C
U1MCR[2]	Modem Ctrl. Reg.	CTSen	RTSen	-	LoopBck.	-	-	RTS	DTR	R/W	0x00	0xE001 0010
U1LSR	Line Status Register	RX FIFO Error	TEMT	THRE	BI	FE	PE	OE	DR	RO	0x60	0xE001 0014
U1MSR[2]	Modem Status Register	DCD	RI	DSR	CTS	Delta DCD	Trailing Edge RI	Delta DSR	Delta CTS	RO	0x00	0xE001 0018
U1SCR	Scratch Pad Reg.				8-bit	Data				R/W	0x00	0xE001 001C
U1ACR	Auto-baud Control Register	-	-	-	-	-	-	ABTO IntClr	ABEO IntClr	R/W	0x00 0	0xE001 0020
		-	-	-	-	-	Aut.Rstrt.	Mode	Start			
U1FDR	Fractional Divider				Reserv	/ed[31:8]				R/W	0x10	0xE001 0028
	Register		Mul	IVal			DivAd	ddVal				
U1TER	TX. Enable Reg.	TXEN	-	-	-	-	-	-	-	R/W	0x80	0xE001 0030

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

^[2] Modem specific features are available in LPC2144/6/8 only.

Volume 1 Chapter 10: UART1

10.3.1 UART1 Receiver Buffer Register (U1RBR - 0xE001 0000, when DLAB = 0 Read Only)

The U1RBR is the top byte of the UART1 RX FIFO. The top byte of the RX FIFO contains the oldest character received and can be read via the bus interface. The LSB (bit 0) represents the "oldest" received data bit. If the character received is less than 8 bits, the unused MSBs are padded with zeroes.

The Divisor Latch Access Bit (DLAB) in U1LCR must be zero in order to access the U1RBR. The U1RBR is always Read Only.

Since PE, FE and BI bits correspond to the byte sitting on the top of the RBR FIFO (i.e. the one that will be read in the next read from the RBR), the right approach for fetching the valid pair of received byte and its status bits is first to read the content of the U1LSR register, and then to read a byte from the U1RBR.

Table 114: UART1 Receiver Buffer Register (U1RBR - address 0xE001 0000, when DLAB = 0 Read Only) bit description

Bit	Symbol	Description	Reset value
7:0	RBR	The UART1 Receiver Buffer Register contains the oldest received byte in the UART1 RX FIFO.	undefined

10.3.2 UART1 Transmitter Holding Register (U1THR - 0xE001 0000, when DLAB = 0 Write Only)

The U1THR is the top byte of the UART1 TX FIFO. The top byte is the newest character in the TX FIFO and can be written via the bus interface. The LSB represents the first bit to transmit.

The Divisor Latch Access Bit (DLAB) in U1LCR must be zero in order to access the U1THR. The U1THR is always Write Only.

Table 115: UART1 Transmitter Holding Register (U1THR - address 0xE001 0000, when DLAB = 0 Write Only) bit description

Bit	Symbol	Description	Reset value
7:0	THR	Writing to the UART1 Transmit Holding Register causes the data to be stored in the UART1 transmit FIFO. The byte will be sent when it reaches the bottom of the FIFO and the transmitter is available.	NA

10.3.3 UART1 Divisor Latch Registers 0 and 1 (U1DLL - 0xE001 0000 and U1DLM - 0xE001 0004, when DLAB = 1)

The UART1 Divisor Latch is part of the UART1 Fractional Baud Rate Generator and holds the value used to divide the clock supplied by the fractional prescaler in order to produce the baud rate clock, which must be 16x the desired baud rate (Equation 4). The U1DLL and U1DLM registers together form a 16 bit divisor where U1DLL contains the lower 8 bits of the divisor and U1DLM contains the higher 8 bits of the divisor. A 0x0000 value is treated like a 0x0001 value as division by zero is not allowed. The Divisor Latch Access Bit (DLAB) in U1LCR must be one in order to access the UART1 Divisor Latches.

Details on how to select the right value for U1DLL and U1DLM can be found later on in this chapter.

Chapter 10: UART1

Table 116: UART1 Divisor Latch LSB register (U1DLL - address 0xE001 0000, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLLSB	The UART1 Divisor Latch LSB Register, along with the U1DLM register, determines the baud rate of the UART1.	0x01

Table 117: UART1 Divisor Latch MSB register (U1DLM - address 0xE001 0004, when DLAB = 1) bit description

Bit	Symbol	Description	Reset value
7:0	DLMSB	The UART1 Divisor Latch MSB Register, along with the U1DLL register, determines the baud rate of the UART1.	0x00

10.3.4 UART1 Fractional Divider Register (U1FDR - 0xE001 0028)

The UART1 Fractional Divider Register (U1FDR) controls the clock pre-scaler for the baud rate generation and can be read and written at user's discretion. This pre-scaler takes the VPB clock and generates an output clock per specified fractional requirements.

Table 118: UART1 Fractional Divider Register (U1FDR - address 0xE001 0028) bit description

Bit	Function	Description	Reset value
3:0	DIVADDVAL	Baudrate generation pre-scaler divisor value. If this field is 0, fractional baudrate generator will not impact the UART1 baudrate.	0
7:4	MULVAL	Baudrate pre-scaler multiplier value. This field must be greater or equal 1 for UART1 to operate properly, regardless of whether the fractional baudrate generator is used or not.	1
31:8	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

This register controls the clock pre-scaler for the baud rate generation. The reset value of the register keeps the fractional capabilities of UART1 disabled making sure that UART1 is fully software and hardware compatible with UARTs not equipped with this feature.

UART1 baudrate can be calculated as:

(4)

$$UART1_{baudrate} = \frac{PCLK}{16 \times (16 \times U1DLM + U1DLL) \times \left(1 + \frac{DivAddVal}{MulVal}\right)}$$

Where PCLK is the peripheral clock, U1DLM and U1DLL are the standard UART1 baud rate divider registers, and DIVADDVAL and MULVAL are UART1 fractional baudrate generator specific parameters.

The value of MULVAL and DIVADDVAL should comply to the following conditions:

- 1. 0 < MULVAL ≤ 15
- $2. \ 0 \leq DIVADDVAL \leq 15$

Chapter 10: UART1

If the U1FDR register value does not comply to these two requests then the fractional divider output is undefined. If DIVADDVAL is zero then the fractional divider is disabled and the clock will not be divided.

The value of the U1FDR should not be modified while transmitting/receiving data or data may be lost or corrupted.

Usage Note: For practical purposes, UART1 baudrate formula can be written in a way that identifies the part of a UART baudrate generated without the fractional baudrate generator, and the correction factor that this module adds:

(5)

$$UART1_{baudrate} = \frac{PCLK}{16 \times (16 \times U1DLM + U1DLL)} \times \frac{MulVal}{(MulVal + DivAddVal)}$$

Based on this representation, fractional baudrate generator contribution can also be described as a prescaling with a factor of MULVAL / (MULVAL + DIVADDVAL).

10.3.5 UART1 baudrate calculation

Example 1: Using UART1baudrate formula from above, it can be determined that system with PCLK = 20 MHz, U1DL = 130 (U1DLM = 0x00 and U1DLL = 0x82), DIVADDVAL = 0 and MULVAL = 1 will enable UART1 with UART1baudrate = 9615 bauds.

Example 2: Using UART1baudrate formula from above, it can be determined that system with PCLK = 20 MHz, U1DL = 93 (U1DLM = 0x00 and U1DLL = 0x5D), DIVADDVAL = 2 and MULVAL = 5 will enable UART1 with UART1baudrate = 9600 bauds.

Table 119: Baudrates available when using 20 MHz peripheral clock (PCLK = 20 MHz)

Desired	MULVA	L = 0 DIVA	DDVAL = 0	Optimal MULVAL & DIVADDVAL			
baudrate		/I:U1DLL dec <mark>⊡</mark>	% error ^[3]	U1DLM:U1DLL dec[1]	Fractional pre-scaler value MULDIV MULDIV + DIVADDVAL	% error ^[3]	
50	61A8	25000	0.0000	25000	1/(1+0)	0.0000	
75	411B	16667	0.0020	12500	3/(3+1)	0.0000	
110	2C64	11364	0.0032	6250	11/(11+9)	0.0000	
134.5	244E	9294	0.0034	3983	3/(3+4)	0.0001	
150	208D	8333	0.0040	6250	3/(3+1)	0.0000	
300	1047	4167	0.0080	3125	3/(3+1)	0.0000	
600	0823	2083	0.0160	1250	3/(3+2)	0.0000	
1200	0412	1042	0.0320	625	3/(3+2)	0.0000	
1800	02B6	694	0.0640	625	9/(9+1)	0.0000	
2000	0271	625	0.0000	625	1/(1+0)	0.0000	
2400	0209	521	0.0320	250	12/(12+13)	0.0000	
3600	015B	347	0.0640	248	5/(5+2)	0.0064	
4800	0104	260	0.1600	125	12/(12+13)	0.0000	

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Volume 1 Chapter 10: UART1

Table 119: Baudrates available when using 20 MHz peripheral clock (PCLK = 20 MHz)

Desired	MULVA	AL = 0 DIVA	DDVAL = 0	Optimal MULVAL & DIVADDVAL			
baudrate	U1DLM:U1DLL		% error[3]	U1DLM:U1DLL	Fractional	% error[3]	
	hex[2]	dec[1]		dec[1]	pre-scaler value MULDIV MULDIV + DIVADDVAL		
7200	00AE	174	0.2240	124	5/(5+2)	0.0064	
9600	0082	130	0.1600	93	5/(5+2)	0.0064	
19200	0041	65	0.1600	31	10/(10+11)	0.0064	
38400	0021	33	1.3760	12	7/(7+12)	0.0594	
56000	0021	22	1.4400	13	7/(7+5)	0.0160	
57600	0016	22	1.3760	19	7/(7+1)	0.0594	
112000	000B	11	1.4400	6	7/(7+6)	0.1600	
115200	000B	11	1.3760	4	7/(7+12)	0.0594	
224000	0006	6	7.5200	3	7/(7+6)	0.1600	
448000	0003	3	7.5200	2	5/(5+2)	0.3520	

^[1] Values in the row represent decimal equivalent of a 16 bit long content (DLM:DLL).

10.3.6 UART1 Interrupt Enable Register (U1IER - 0xE001 0004, when DLAB = 0)

The U1IER is used to enable UART1 interrupt sources.

Table 120: UART1 Interrupt Enable Register (U1IER - address 0xE001 0004, when DLAB = 0) bit description

Bit	Symbol	Value	Description	Reset value
0	RBR Interrupt Enable		U1IER[0] enables the Receive Data Available interrupt for UART1. It also controls the Character Receive Time-out interrupt.	0
		0	Disable the RDA interrupts.	
		1	Enable the RDA interrupts.	
1	THRE Interrupt Enable		U1IER[1] enables the THRE interrupt for UART1. The status of this interrupt can be read from U1LSR[5].	0
		0	Disable the THRE interrupts.	
		1	Enable the THRE interrupts.	
2	RX Line Interrupt Enable		U1IER[2] enables the UART1 RX line status interrupts. The status of this interrupt can be read from U1LSR[4:1].	0
		0	Disable the RX line status interrupts.	
		1	Enable the RX line status interrupts.	
3	Modem Status		U1IER[3] enables the modem interrupt. The status of this interrupt can be read from U1MSR[3:0].	0
	Interrupt Enable ^[1]	0	Disable the modem interrupt.	
	Ellable	1	Enable the modem interrupt.	_

118

^[2] Values in the row represent hex equivalent of a 16 bit long content (DLM:DLL).

^[3] Refers to the percent error between desired and actual baudrate.

Volume 1

Table 120: UART1 Interrupt Enable Register (U1IER - address 0xE001 0004, when DLAB = 0) bit description

	DIL GESCI	•		
Bit	Symbol	Value	Description	Reset value
6:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7 CTS Interrupt Enable[1]			If auto-CTS mode is enabled this bit enables/disables the modem status interrupt generation on a CTS1 signal transition. If auto-CTS mode is disabled a CTS1 transition will generate an interrupt if Modem Status Interrupt Enable (U1IER[3]) is set. In normal operation a CTS1 signal transition will generate a Modem Status Interrupt unless the interrupt has been disabled by clearing the U1IER[3] bit in the U1IER register. In auto-CTS mode a transition on the CTS1 bit will trigger an interrupt only if both the U1IER[3] and U1IER[7] bits are set.	
		0	Disable the CTS interrupt.	_
		1	Enable the CTS interrupt.	
8	ABTOIntEn		U1IER8 enables the auto-baud time-out interrupt.	0
		0	Disable Auto-baud Time-out Interrupt.	
		1	Enable Auto-baud Time-out Interrupt.	_
9	ABEOIntEn		U1IER9 enables the end of auto-baud interrupt.	0
		0	Disable End of Auto-baud Interrupt.	
		1	Enable End of Auto-baud Interrupt.	_
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] Available in LPC2144/6/8 only. In all other LPC214x parts this bit is Reserved.

10.3.7 UART1 Interrupt Identification Register (U1IIR - 0xE001 0008, Read Only)

The U1IIR provides a status code that denotes the priority and source of a pending interrupt. The interrupts are frozen during an U1IIR access. If an interrupt occurs during an U1IIR access, the interrupt is recorded for the next U1IIR access.

Table 121: UART1 Interrupt Identification Register (U1IIR - address 0xE001 0008, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Interrupt Pending		Note that U1IIR[0] is active low. The pending interrupt can be determined by evaluating U1IIR[3:1].	1
		0	At least one interrupt is pending.	
		1	No interrupt is pending.	

Bit	Symbol	Value	Description	Reset value
3:1	Interrupt Identification		U1IER[3:1] identifies an interrupt corresponding to the UART1 Rx FIFO. All other combinations of U1IER[3:1] not listed above are reserved (100,101,111).	0
		011	1 - Receive Line Status (RLS).	_
		010	2a - Receive Data Available (RDA).	_
		110	2b - Character Time-out Indicator (CTI).	_
		001	3 - THRE Interrupt.	
		000	4 - Modem Interrupt.[1]	_
5:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	FIFO Enable		These bits are equivalent to U1FCR[0].	0
8	ABEOInt		End of auto-baud interrupt. True if auto-baud has finished successfully and interrupt is enabled.	0
9	ABTOInt		Auto-baud time-out interrupt. True if auto-baud has timed out and interrupt is enabled.	0
31:10	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] LPC2144/6/8 only. For all other LPC214x devices '000' combination is Reserved.

Interrupts are handled as described in Table 83. Given the status of U1IIR[3:0], an interrupt handler routine can determine the cause of the interrupt and how to clear the active interrupt. The U1IIR must be read in order to clear the interrupt prior to exiting the Interrupt Service Routine.

The UART1 RLS interrupt (U1IIR[3:1] = 011) is the highest priority interrupt and is set whenever any one of four error conditions occur on the UART1RX input: overrun error (OE), parity error (PE), framing error (FE) and break interrupt (BI). The UART1 Rx error condition that set the interrupt can be observed via U1LSR[4:1]. The interrupt is cleared upon an U1LSR read.

The UART1 RDA interrupt (U1IIR[3:1] = 010) shares the second level priority with the CTI interrupt (U1IIR[3:1] = 110). The RDA is activated when the UART1 Rx FIFO reaches the trigger level defined in U1FCR7:6 and is reset when the UART1 Rx FIFO depth falls below the trigger level. When the RDA interrupt goes active, the CPU can read a block of data defined by the trigger level.

The CTI interrupt (U1IIR[3:1] = 110) is a second level interrupt and is set when the UART1 Rx FIFO contains at least one character and no UART1 Rx FIFO activity has occurred in 3.5 to 4.5 character times. Any UART1 Rx FIFO activity (read or write of UART1 RSR) will clear the interrupt. This interrupt is intended to flush the UART1 RBR after a message has been received that is not a multiple of the trigger level size. For example, if a peripheral wished to send a 105 character message and the trigger level was 10 characters, the CPU would receive 10 RDA interrupts resulting in the transfer of 100 characters and 1 to 5 CTI interrupts (depending on the service routine) resulting in the transfer of the remaining 5 characters.

Table 122: UART1 interrupt handling

U1IIR[3:0] value[1]	Priority	Interrupt Type	Interrupt Source	Interrupt Reset
0001	-	None	None	-
0110	Highest	RX Line Status / Error	OE[3] or PE[3] or BI[3]	U1LSR Read[3]
0100	Second	RX Data Available	Rx data available or trigger level reached in FIFO (U1FCR0=1)	U1RBR Read ^[4] or UART1 FIFO drops below trigger level
1100	Second	Character Time-out indication	Minimum of one character in the RX FIFO and no character input or removed during a time period depending on how many characters are in FIFO and what the trigger level is set at (3.5 to 4.5 character times).	U1RBR Read ^[4]
			The exact time will be:	
			[(word length) \times 7 $-$ 2] \times 8 + [(trigger level $-$ number of characters) \times 8 + 1] RCLKs	
0010	Third	THRE	THRE[3]	U1IIR Read ^[5] (if source of interrupt) or THR write
0000[2]	Fourth	Modem Status	CTS or DSR or RI or DCD	MSR Read

- [1] Values "0000" (see <u>Table note 2</u>), "0011", "0101", "0111", "1000", "1001", "1010", "1011", "1111" are reserved.
- [2] LPC2144/6/8 only.
- [3] For details see Section 10.3.11 "UART1 Line Status Register (U1LSR 0xE001 0014, Read Only)"
- [4] For details see Section 10.3.1 "UART1 Receiver Buffer Register (U1RBR 0xE001 0000, when DLAB = 0 Read Only)"
- [5] For details see Section 10.3.7 "UART1 Interrupt Identification Register (U1IIR 0xE001 0008, Read Only)" and Section 10.3.2 "UART1 Transmitter Holding Register (U1THR 0xE001 0000, when DLAB = 0 Write Only)"

The UART1 THRE interrupt (U1IIR[3:1] = 001) is a third level interrupt and is activated when the UART1 THR FIFO is empty provided certain initialization conditions have been met. These initialization conditions are intended to give the UART1 THR FIFO a chance to fill up with data to eliminate many THRE interrupts from occurring at system start-up. The initialization conditions implement a one character delay minus the stop bit whenever THRE = 1 and there have not been at least two characters in the U1THR at one time since the last THRE = 1 event. This delay is provided to give the CPU time to write data to U1THR without a THRE interrupt to decode and service. A THRE interrupt is set immediately if the UART1 THR FIFO has held two or more characters at one time and currently, the U1THR is empty. The THRE interrupt is reset when a U1THR write occurs or a read of the U1IIR occurs and the THRE is the highest interrupt (U1IIR[3:1] = 001).

The modem interrupt (U1IIR[3:1] = 000) is available in LPC2144/6/8 only. It is the lowest priority interrupt and is activated whenever there is any state change on modem inputs pins, DCD, DSR or CTS. In addition, a low to high transition on modem input RI will generate a modem interrupt. The source of the modem interrupt can be determined by examining U1MSR[3:0]. A U1MSR read will clear the modem interrupt.

10.3.8 UART1 FIFO Control Register (U1FCR - 0xE001 0008)

The U1FCR controls the operation of the UART1 RX and TX FIFOs.

Table 123: UART1 FIFO Control Register (U1FCR - address 0xE001 0008) bit description

Bit	Symbol	Value	Description	Reset value
0	FIFO Enable	0	UART1 FIFOs are disabled. Must not be used in the application.	0
		1	Active high enable for both UART1 Rx and TX FIFOs and U1FCR[7:1] access. This bit must be set for proper UART1 operation. Any transition on this bit will automatically clear the UART1 FIFOs.	_
1	1 RX FIFO Reset	0	No impact on either of UART1 FIFOs.	0
		1	Writing a logic 1 to U1FCR[1] will clear all bytes in UART1 Rx FIFO and reset the pointer logic. This bit is self-clearing.	_
2	TX FIFO Reset	0	No impact on either of UART1 FIFOs.	0
		1	Writing a logic 1 to U1FCR[2] will clear all bytes in UART1 TX FIFO and reset the pointer logic. This bit is self-clearing.	_
5:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7:6	RX Trigger Level		These two bits determine how many receiver UART1 FIFO characters must be written before an interrupt is activated.	0
		00	trigger level 0 (1 character or 0x01).	
		01	trigger level 1 (4 characters or 0x04).	
		10	trigger level 2 (8 characters or 0x08).	
		11	trigger level 3 (14 characters or 0x0E).	

10.3.9 UART1 Line Control Register (U1LCR - 0xE001 000C)

The U1LCR determines the format of the data character that is to be transmitted or received.

Table 124: UART1 Line Control Register (U1LCR - address 0xE001 000C) bit description

Bit	Symbol	Value	Description	Reset value
1:0	Word Length	Length 00 5 b	5 bit character length.	0
	Select	01	6 bit character length.	_
		10	7 bit character length.	0 0 0 0
		11	8 bit character length.	
2	Stop Bit Select	0	1 stop bit.	0
		1	2 stop bits (1.5 if U1LCR[1:0]=00).	_
3	Parity Enable	0	Disable parity generation and checking.	0
		1	Enable parity generation and checking.	_
5:4	Parity Select	00	Odd parity. Number of 1s in the transmitted character and the attached parity bit will be odd.	0
		01	Even Parity. Number of 1s in the transmitted character and the attached parity bit will be even.	_
		10	Forced "1" stick parity.	=
		11	Forced "0" stick parity.	_

Table 124: UART1 Line Control Register (U1LCR - address 0xE001 000C) bit description

Bit	Symbol	Value	Description	Reset value
6	Break Control	0	Disable break transmission.	0
		1	Enable break transmission. Output pin UART1 TXD is forced to logic 0 when U1LCR[6] is active high.	
7	Divisor Latch	0	Disable access to Divisor Latches.	0
	Access Bit (DLAB)	1	Enable access to Divisor Latches.	_

10.3.10 UART1 Modem Control Register (U1MCR - 0xE001 0010), LPC2144/6/8 only

The U1MCR enables the modem loopback mode and controls the modem output signals.

Table 125: UART1 Modem Control Register (U1MCR - address 0xE001 0010), LPC2144/6/8 only bit description

Bit	Symbol	Value	Description	Reset value
0	DTR Control		Source for modem output pin, DTR. This bit reads as 0 when modem loopback mode is active.	0
1	RTS Control		Source for modem output pin RTS. This bit reads as 0 when modem loopback mode is active.	0
3:2	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
4	Loopback Mode Select		The modem loopback mode provides a mechanism to perform diagnostic loopback testing. Serial data from the transmitter is connected internally to serial input of the receiver. Input pin, RXD1, has no effect on loopback and output pin, TXD1 is held in marking state. The four modem inputs (CTS, DSR, RI and DCD) are disconnected externally. Externally, the modem outputs (RTS, DTR) are set inactive. Internally, the four modem outputs are connected to the four modem inputs. As a result of these connections, the upper four bits of the U1MSR will be driven by the lower four bits of the U1MCR rather than the four modem inputs in normal mode. This permits modem status interrupts to be generated in loopback mode by writing the lower four bits of U1MCR.	0
		0	Disable modem loopback mode.	_
		1	Enable modem loopback mode.	
5:3	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
6	RTSen		Auto-RTS control bit.	0
		0	Disable auto-RTS flow control.	
		1	Enable auto-RTS flow control.	=
7	CTSen		Auto-CTS control bit.	0
		0	Disable auto-CTS flow control.	
		1	Enable auto-CTS flow control.	_

Auto-flow control (LPC2144/6/8 only)

If auto-RTS mode is enabled the UART1's receiver FIFO hardware controls the RTS1 output of the UART1. If the auto-CTS mode is enabled the UART1's U1TSR hardware will only start transmitting if the CTS1 input signal is asserted.


Chapter 10: UART1

Auto-RTS

The auto-RTS function is enabled by setting the CTSen bit. Auto-RTS data flow control originates in the U1RBR module and is linked to the programmed receiver FIFO trigger level. If auto-RTS is enabled, when the receiver FIFO level reaches the programmed trigger level RTS1 is deasserted (to a high value). The sending UART may send an additional byte after the trigger level is reached (assuming the sending UART has another byte to send) because it may not recognize the deassertion of RTS1 until after it has begun sending the additional byte. RTS1 is automatically reasserted (to a low value) once the receiver FIFO has reached the previous trigger level. The reassertion of RTS1 signals the sending UART to continue transmitting data.

If auto-RTS mode is disabled the RTSen bit controls the RTS1 output of the UART1. If auto-RTS mode is enabled hardware controls the RTS1 output and the actual value of RTS1 will be copied in the RTSen bit of the UART1. As long as auto-RTS is enabled the value if the RTSen bit is read-only for software.

Example: Suppose the UART1 operating in type 550 has trigger level in U1FCR set to 0x2 then if auto-RTS is enabled the UART1 will deassert the RTS1 output as soon as the receive FIFO contains 8 bytes (Table 123 on page 122). The RTS1 output will be reasserted as soon as the receive FIFO hits the previous trigger level: 4 bytes.

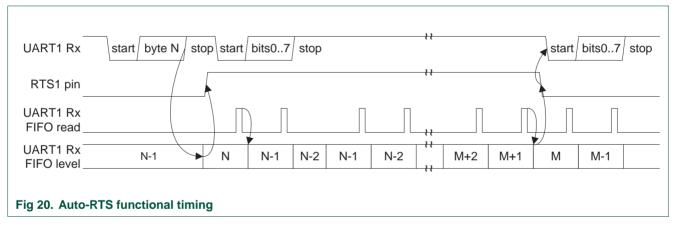

Auto-CTS

The auto-CTS function is enabled by setting the CTSen bit. If auto-CTS is enabled the transmitter circuitry in the U1TSR module checks CTS1 input before sending the next data byte. When CTS1 is active (low), the transmitter sends the next byte. To stop the transmitter from sending the following byte, CTS1 must be released before the middle of the last stop bit that is currently being sent. In auto-CTS mode a change of the CTS1 signal does not trigger a modem status interrupt unless the CTS Interrupt Enable bit is set, Delta CTS bit in the U1MSR will be set though. Table 126 lists the conditions for generating a Modem Status interrupt.




Chapter 10: UART1

Table 126: Modem status interrupt generation

Enable Modem Status Interrupt (U1IER[3])	CTSen (U1MCR[7])	CTS Interrupt Enable (U1IER[7])	Delta CTS (U1MSR[0])	Delta DCD or Trailing Edge RI or Delta DSR (U1MSR[3] or U1MSR[2] or (U1MSR[1]))	Modem Status Interrupt
0	x	x	X	х	no
1	0	x	0	0	no
1	0	x	1	х	yes
1	0	x	Х	1	yes
1	1	0	Х	0	no
1	1	0	Х	1	yes
1	1	1	0	0	no
1	1	1	1	х	yes
1	1	1	Х	1	yes

The auto-CTS function reduces interrupts to the host system. When flow control is enabled, a CTS1 state change does not trigger host interrupts because the device automatically controls its own transmitter. Without auto-CTS, the transmitter sends any data present in the transmit FIFO and a receiver overrun error can result. Figure 21 illustrates the auto-CTS functional timing.

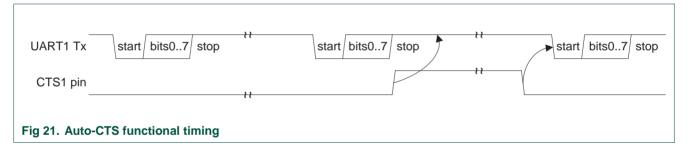

While starting transmission of the initial character the CTS1 signal is asserted. Transmission will stall as soon as the pending transmission has completed. The UART will continue transmitting a 1 bit as long as CTS1 is deasserted (high). As soon as CTS1 gets deasserted transmission resumes and a start bit is sent followed by the data bits of the next character.

10.3.11 UART1 Line Status Register (U1LSR - 0xE001 0014, Read Only)

The U1LSR is a read-only register that provides status information on the UART1 TX and RX blocks.

Table 127: UART1 Line Status Register (U1LSR - address 0xE001 0014, read only) bit description

Bit	Symbol	Value	Description	Reset value
0	Receiver Data Ready		U1LSR[0] is set when the U1RBR holds an unread character and is cleared when the UART1 RBR FIFO is empty.	0
	(RDR)	0	U1RBR is empty.	_
		1	U1RBR contains valid data.	_

Table 127: UART1 Line Status Register (U1LSR - address 0xE001 0014, read only) bit description

Bit	Symbol	Value	Description	Reset value
1	Overrun Error (OE)		The overrun error condition is set as soon as it occurs. An U1LSR read clears U1LSR[1]. U1LSR[1] is set when UART1 RSR has a new character assembled and the UART1 RBR FIFO is full. In this case, the UART1 RBR FIFO will not be overwritten and the character in the UART1 RSR will be lost.	0
		0	Overrun error status is inactive.	-
		1	Overrun error status is active.	_
2	Parity Error (PE)		When the parity bit of a received character is in the wrong state, a parity error occurs. An U1LSR read clears U1LSR[2]. Time of parity error detection is dependent on U1FCR[0].	0
			Note: A parity error is associated with the character at the top of the UART1 RBR FIFO.	
		0	Parity error status is inactive.	_
		1	Parity error status is active.	-
3	Framing Error (FE)		When the stop bit of a received character is a logic 0, a framing error occurs. An U1LSR read clears U1LSR[3]. The time of the framing error detection is dependent on U1FCR0. Upon detection of a framing error, the RX will attempt to resynchronize to the data and assume that the bad stop bit is actually an early start bit. However, it cannot be assumed that the next received byte will be correct even if there is no Framing Error.	0
	-		Note: A framing error is associated with the character at the top of the UART1 RBR FIFO.	
		0	Framing error status is inactive.	-
		1	Framing error status is active.	_
4	Break Interrupt (BI)		When RXD1 is held in the spacing state (all 0's) for one full character transmission (start, data, parity, stop), a break interrupt occurs. Once the break condition has been detected, the receiver goes idle until RXD1 goes to marking state (all 1's). An U1LSR read clears this status bit. The time of break detection is dependent on U1FCR[0].	0
			Note: The break interrupt is associated with the character at the top of the UART1 RBR FIFO.	
		0	Break interrupt status is inactive.	_
		1	Break interrupt status is active.	
5	Transmitter Holding		THRE is set immediately upon detection of an empty UART1 THR and is cleared on a U1THR write.	1
	Register Empty (THRE)	0	U1THR contains valid data.	_
	(· · · · · · · /	1	U1THR is empty.	
6	Transmitter Empty		TEMT is set when both U1THR and U1TSR are empty; TEMT is cleared when either the U1TSR or the U1THR contain valid data.	1
	(TEMT)	0	U1THR and/or the U1TSR contains valid data.	
		1	U1THR and the U1TSR are empty.	
7	Error in RX FIFO (RXFE)		U1LSR[7] is set when a character with a RX error such as framing error, parity error or break interrupt, is loaded into the U1RBR. This bit is cleared when the U1LSR register is read and there are no subsequent errors in the UART1 FIFO.	0
		0	U1RBR contains no UART1 RX errors or U1FCR[0]=0.	_
		1	UART1 RBR contains at least one UART1 RX error.	

10.3.12 UART1 Modem Status Register (U1MSR - 0xE001 0018), LPC2144/6/8 only

The U1MSR is a read-only register that provides status information on the modem input signals. U1MSR[3:0] is cleared on U1MSR read. Note that modem signals have no direct affect on UART1 operation, they facilitate software implementation of modem signal operations.

Table 128: UART1 Modem Status Register (U1MSR - address 0xE001 0018), LPC2144/6/8 only bit description

Volume 1

Bit	Symbol	Value	Description	Reset value
0	Delta CTS		Set upon state change of input CTS. Cleared on an U1MSR read.	0
		0	No change detected on modem input, CTS.	
		1	State change detected on modem input, CTS.	_
1	Delta DSR		Set upon state change of input DSR. Cleared on an U1MSR read.	0
		0	No change detected on modem input, DSR.	_
		1	State change detected on modem input, DSR.	_
2	Trailing Edge RI		Set upon low to high transition of input RI. Cleared on an U1MSR read.	0
		0	No change detected on modem input, RI.	_
		1	Low-to-high transition detected on RI.	_
3	Delta DCD		Set upon state change of input DCD. Cleared on an U1MSR read.	0
		0	No change detected on modem input, DCD.	_
		1	State change detected on modem input, DCD.	
4	CTS		Clear To Send State. Complement of input signal CTS. This bit is connected to U1MCR[1] in modem loopback mode.	0
5	DSR		Data Set Ready State. Complement of input signal DSR. This bit is connected to U1MCR[0] in modem loopback mode.	0
6	RI		Ring Indicator State. Complement of input RI. This bit is connected to U1MCR[2] in modem loopback mode.	0
7	DCD		Data Carrier Detect State. Complement of input DCD. This bit is connected to U1MCR[3] in modem loopback mode.	0

10.3.13 UART1 Scratch pad register (U1SCR - 0xE001 001C)

The U1SCR has no effect on the UART1 operation. This register can be written and/or read at user's discretion. There is no provision in the interrupt interface that would indicate to the host that a read or write of the U1SCR has occurred.

Table 129: UART1 Scratch pad register (U1SCR - address 0xE001 0014) bit description

Bit	Symbol	Description	Reset value
7:0	Pad	A readable, writable byte.	0x00

10.3.14 UART1 Auto-baud Control Register (U1ACR - 0xE001 0020)

The UART1 Auto-baud Control Register (U1ACR) controls the process of measuring the incoming clock/data rate for the baud rate generation and can be read and written at user's discretion.

Bit	Symbol	Value	Description	Reset value
0	Start		This bit is automatically cleared after auto-baud completion.	0
		0	Auto-baud stop (auto-baud is not running).	_
		1	Auto-baud start (auto-baud is running). Auto-baud run bit. This bit is automatically cleared after auto-baud completion.	_
1	Mode		Auto-baud mode select bit.	0
		0	Mode 0.	_
		1	Mode 1.	_
2	AutoRestart	0	No restart	0
			1	Restart in case of time-out (counter restarts at next UART1 Rx falling edge)
7:3	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0
8	ABEOIntClr		End of auto-baud interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the U1IIR. Writing a 0 has no impact.	0
9	ABTOIntClr		Auto-baud time-out interrupt clear bit (write only accessible). Writing a 1 will clear the corresponding interrupt in the U1IIR. Writing a 0 has no impact.	0
31:10	-	NA	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0

10.3.15 Auto-baud

Volume 1

The UART1 auto-baud function can be used to measure the incoming baud-rate based on the "AT" protocol (Hayes command). If enabled the auto-baud feature will measure the bit time of the receive data stream and set the divisor latch registers U1DLM and U1DLL accordingly.

Auto-baud is started by setting the U1ACR Start bit. Auto-baud can be stopped by clearing the U1ACR Start bit. The Start bit will clear once auto-baud has finished and reading the bit will return the status of auto-baud (pending/finished).

Two auto-baud measuring modes are available which can be selected by the U1ACR Mode bit. In mode 0 the baud-rate is measured on two subsequent falling edges of the UART1 Rx pin (the falling edge of the start bit and the falling edge of the least significant bit). In mode 1 the baud-rate is measured between the falling edge and the subsequent rising edge of the UART1 Rx pin (the length of the start bit).

The U1ACR AutoRestart bit can be used to automatically restart baud-rate measurement if a time-out occurs (the rate measurement counter overflows). If this bit is set the rate measurement will restart at the next falling edge of the UART1 Rx pin.

The auto-baud function can generate two interrupts.

• The U1IIR ABTOInt interrupt will get set if the interrupt is enabled (U1IER ABToIntEn is set and the auto-baud rate measurement counter overflows).

 The U1IIR ABEOInt interrupt will get set if the interrupt is enabled (U1IER ABEOIntEn is set and the auto-baud has completed successfully).

The auto-baud interrupts have to be cleared by setting the corresponding U1ACR ABTOIntCIr and ABEOIntEn bits.

Typically the fractional baud-rate generator is disabled (DIVADDVAL = 0) during auto-baud. However, if the fractional baud-rate generator is enabled (DIVADDVAL > 0), it is going to impact the measuring of UART1 Rx pin baud-rate, but the value of the U1FDR register is not going to be modified after rate measurement. Also, when auto-baud is used, any write to U1DLM and U1DLL registers should be done before U1ACR register write. The minimum and the maximum baudrates supported by UART1 are function of PCLK, number of data bits, stop-bits and parity bits.

(6)

Chapter 10: UART1


$$ratemin \ = \ \frac{2 \times PCLK}{16 \times 2^{15}} \leq UART1_{baudrate} \leq \frac{PCLK}{16 \times (2 + databits + paritybits + stopbits)} \ = \ ratemax$$

10.3.16 Auto-baud Modes

When the software is expecting an "AT" command, it configures the UART1 with the expected character format and sets the U1ACR Start bit. The initial values in the divisor latches U1DLM and U1DLM don't care. Because of the "A" or "a" ASCII coding ("A" = 0x41, "a" = 0x61), the UART1 Rx pin sensed start bit and the LSB of the expected character are delimited by two falling edges. When the U1ACR Start bit is set, the auto-baud protocol will execute the following phases:

- 1. On U1ACR Start bit setting, the baud-rate measurement counter is reset and the UART1 U1RSR is reset. The U1RSR baud rate is switch to the highest rate.
- 2. A falling edge on UART1 Rx pin triggers the beginning of the start bit. The rate measuring counter will start counting PCLK cycles optionally pre-scaled by the fractional baud-rate generator.
- 3. During the receipt of the start bit, 16 pulses are generated on the RSR baud input with the frequency of the (fractional baud-rate pre-scaled) UART1 input clock, guaranteeing the start bit is stored in the U1RSR.
- 4. During the receipt of the start bit (and the character LSB for mode = 0) the rate counter will continue incrementing with the pre-scaled UART1 input clock (PCLK).
- 5. If Mode = 0 then the rate counter will stop on next falling edge of the UART1 Rx pin. If Mode = 1 then the rate counter will stop on the next rising edge of the UART1 Rx pin.
- 6. The rate counter is loaded into U1DLM/U1DLL and the baud-rate will be switched to normal operation. After setting the U1DLM/U1DLL the end of auto-baud interrupt U1IIR ABEOInt will be set, if enabled. The U1RSR will now continue receiving the remaining bits of the "A/a" character.

Chapter 10: UART1

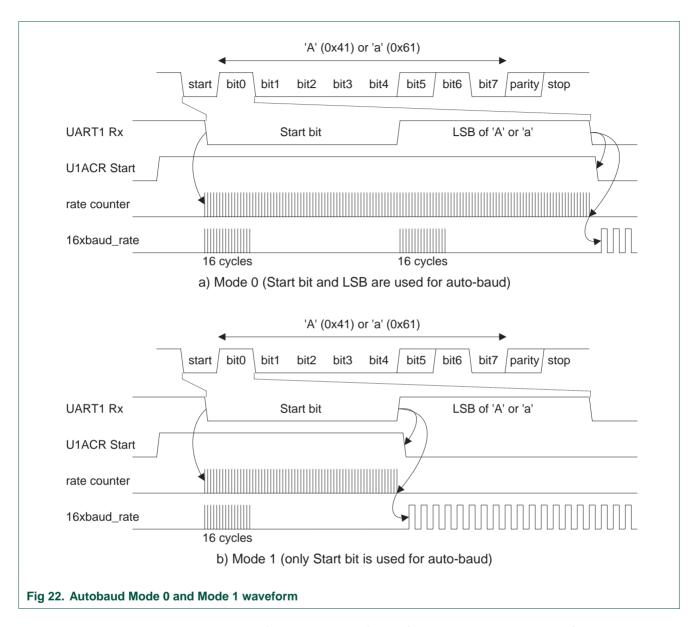

10.3.17 UART1 Transmit Enable Register (U1TER - 0xE001 0030)

LPC2141/2/4/6/8's U1TER enables implementation of software and hardware flow control. When TXEn=1, UART1 transmitter will keep sending data as long as they are available. As soon as TXEn becomes 0, UART1 transmission will stop.

Table 131 describes how to use TXEn bit in order to achieve software flow control.

Table 131: UART1 Transmit Enable Register (U1TER - address 0xE001 0030) bit description

Bit	Symbol	Description	Reset value
6:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
7	TXEN	When this bit is 1, as it is after a Reset, data written to the THR is output on the TXD pin as soon as any preceding data has been sent. If this bit cleared to 0 while a character is being sent, the transmission of that character is completed, but no further characters are sent until this bit is set again. In other words, a 0 in this bit blocks the transfer of characters from the THR or TX FIFO into the transmit shift register. Software can clear this bit when it detects that the a hardware-handshaking TX-permit signal (LPC2144/6/8: CTS - otherwise any GPIO/external interrupt line) has gone false, or with software handshaking, when it receives an XOFF character (DC3). Software can set this bit again when it detects that the TX-permit signal has gone true, or when it receives an XON (DC1) character.	1

10.4 Architecture

The architecture of the UART1 is shown below in the block diagram.

The VPB interface provides a communications link between the CPU or host and the UART1.

The UART1 receiver block, U1RX, monitors the serial input line, RXD1, for valid input. The UART1 RX Shift Register (U1RSR) accepts valid characters via RXD1. After a valid character is assembled in the U1RSR, it is passed to the UART1 RX Buffer Register FIFO to await access by the CPU or host via the generic host interface.


The UART1 transmitter block, U1TX, accepts data written by the CPU or host and buffers the data in the UART1 TX Holding Register FIFO (U1THR). The UART1 TX Shift Register (U1TSR) reads the data stored in the U1THR and assembles the data to transmit via the serial output pin, TXD1.

The UART1 Baud Rate Generator block, U1BRG, generates the timing enables used by the UART1 TX block. The U1BRG clock input source is the VPB clock (PCLK). The main clock is divided down per the divisor specified in the U1DLL and U1DLM registers. This divided down clock is a 16x oversample clock, NBAUDOUT.

The modem interface contains registers U1MCR and U1MSR. This interface is responsible for handshaking between a modem peripheral and the UART1.

The interrupt interface contains registers U1IER and U1IIR. The interrupt interface receives several one clock wide enables from the U1TX and U1RX blocks.

Status information from the U1TX and U1RX is stored in the U1LSR. Control information for the U1TX and U1RX is stored in the U1LCR.

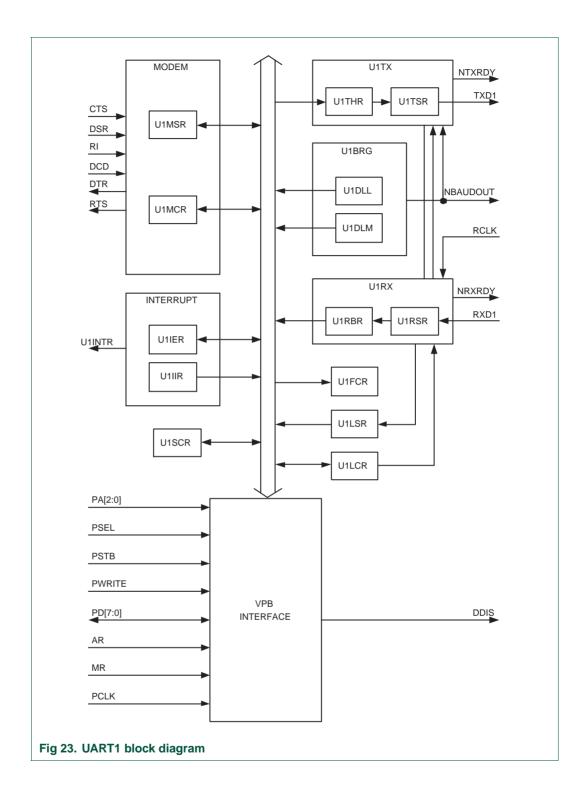



UM10139

Chapter 11: I²C interfaces I²C0 and I²C1

Rev. 01 — 15 August 2005

User manual

11.1 Features

- Standard I²C compliant bus interfaces that may be configured as Master, Slave, or Master/Slave.
- Arbitration between simultaneously transmitting masters without corruption of serial data on the bus.
- Programmable clock to allow adjustment of I²C transfer rates.
- Bidirectional data transfer between masters and slaves.
- Serial clock synchronization allows devices with different bit rates to communicate via one serial bus.
- Serial clock synchronization can be used as a handshake mechanism to suspend and resume serial transfer.
- The I²C-bus may be used for test and diagnostic purposes.

11.2 Applications

Interfaces to external I²C standard parts, such as serial RAMs, LCDs, tone generators, etc.

11.3 Description

A typical I²C-bus configuration is shown in <u>Figure 24</u>. Depending on the state of the direction bit (R/W), two types of data transfers are possible on the I²C-bus:


- Data transfer from a master transmitter to a slave receiver. The first byte transmitted by the master is the slave address. Next follows a number of data bytes. The slave returns an acknowledge bit after each received byte.
- Data transfer from a slave transmitter to a master receiver. The first byte (the slave address) is transmitted by the master. The slave then returns an acknowledge bit. Next follows the data bytes transmitted by the slave to the master. The master returns an acknowledge bit after all received bytes other than the last byte. At the end of the last received byte, a "not acknowledge" is returned. The master device generates all of the serial clock pulses and the START and STOP conditions. A transfer is ended with a STOP condition or with a repeated START condition. Since a repeated START condition is also the beginning of the next serial transfer, the I²C-bus will not be released.

The LPC2141/2/4/6/8 I²C interfaces are byte oriented, and have four operating modes: master transmitter mode, master receiver mode, slave transmitter mode and slave receiver mode.

The I²C interfaces compile with entire I²C specification, supporting the ability to turn power off to the LPC2141/2/4/6/8 without causing a problem with other devices on the same I²C-bus (see "The I²C-bus specification" description under the heading "Fast-Mode", and notes for the table titled "Characteristics of the SDA and SCL I/O stages

Chapter 11: I²C interfaces

for F/S-mode I²C-bus devices" in the microcontrollers datasheet). This is sometimes a useful capability, but intrinsically limits alternate uses for the same pins if the I²C interface is not used. Seldom is this capability needed on multiple I²C interfaces within the same microcontroller.

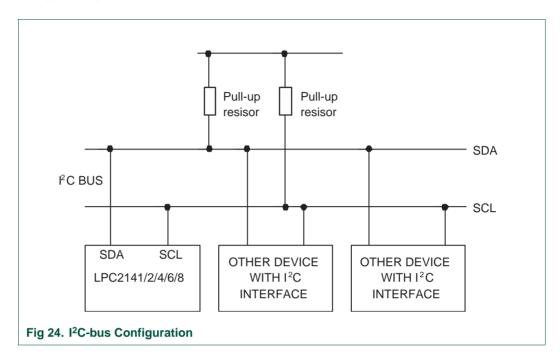

11.4 Pin description

Table 132: I²C Pin Description

Pin	Туре	Description
SDA0,1	Input/Output	I ² C Serial Data.
SCL0,1	Input/Output	I ² C Serial Clock.

11.5 I²C operating modes

In a given application, the I²C block may operate as a master, a slave, or both. In the slave mode, the I²C hardware looks for its own slave address and the general call address. If one of these addresses is detected, an interrupt is requested. If the processor wishes to become the bus master, the hardware waits until the bus is free before the master mode is entered so that a possible slave operation is not interrupted. If bus arbitration is lost in the master mode, the I²C block switches to the slave mode immediately and can detect its own slave address in the same serial transfer.

11.5.1 Master Transmitter mode

In this mode data is transmitted from master to slave. Before the master transmitter mode can be entered, the I2CONSET register must be initialized as shown in <u>Table 133</u>. I2EN must be set to 1 to enable the I²C function. If the AA bit is 0, the I²C interface will not

134

Chapter 11: I²C interfaces

acknowledge any address when another device is master of the bus, so it can not enter slave mode. The STA, STO and SI bits must be 0. The SI Bit is cleared by writing 1 to the SIC bit in the I2CONCLR register.


Table 133: I2C0CONSET and I2C1CONSET used to configure Master mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	0	-	-

The first byte transmitted contains the slave address of the receiving device (7 bits) and the data direction bit. In this mode the data direction bit (R/W) should be 0 which means Write. The first byte transmitted contains the slave address and Write bit. Data is transmitted 8 bits at a time. After each byte is transmitted, an acknowledge bit is received. START and STOP conditions are output to indicate the beginning and the end of a serial transfer.

The I²C interface will enter master transmitter mode when software sets the STA bit. The I²C logic will send the START condition as soon as the bus is free. After the START condition is transmitted, the SI bit is set, and the status code in the I2STAT register is 0x08. This status code is used to vector to a state service routine which will load the slave address and Write bit to the I2DAT register, and then clear the SI bit. SI is cleared by writing a 1 to the SIC bit in the I2CONCLR register.

When the slave address and R/W bit have been transmitted and an acknowledgment bit has been received, the SI bit is set again, and the possible status codes now are 0x18, 0x20, or 0x38 for the master mode, or 0x68, 0x78, or 0xB0 if the slave mode was enabled (by setting AA to 1). The appropriate actions to be taken for each of these status codes are shown in Table 148 to Table 151.

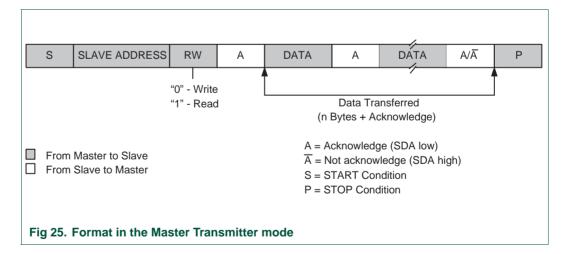


11.5.2 Master Receiver mode

In the master receiver mode, data is received from a slave transmitter. The transfer is initiated in the same way as in the master transmitter mode. When the START condition has been transmitted, the interrupt service routine must load the slave address and the data direction bit to the I²C Data register (I2DAT), and then clear the SI bit. In this case, the data direction bit (R/W) should be 1 to indicate a read.


UM10139 **Philips Semiconductors**

Chapter 11: I²C interfaces

When the slave address and data direction bit have been transmitted and an acknowledge bit has been received, the SI bit is set, and the Status Register will show the status code. For master mode, the possible status codes are 0x40, 0x48, or 0x38. For slave mode, the possible status codes are 0x68, 0x78, or 0xB0. For details, refer to Table 149.

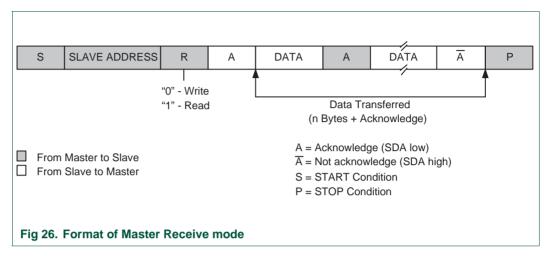

After a repeated START condition, I²C may switch to the master transmitter mode.

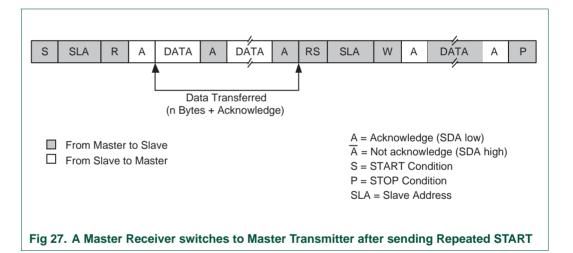

11.5.3 Slave Receiver mode

In the slave receiver mode, data bytes are received from a master transmitter. To initialize the slave receiver mode, user write the Slave Address register (I2ADR) and write the I2C Control Set register (I2CONSET) as shown in Table 134.


Table 134: I2C0CONSET and I2C1CONSET used to configure Slave mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	1	-	-

I2EN must be set to 1 to enable the I2C function. AA bit must be set to 1 to acknowledge its own slave address or the general call address. The STA, STO and SI bits are set to 0.


Chapter 11: I²C interfaces

After I2ADR and I2CONSET are initialized, the I²C interface waits until it is addressed by its own address or general address followed by the data direction bit. If the direction bit is 0 (W), it enters slave receiver mode. If the direction bit is 1 (R), it enters slave transmitter mode. After the address and direction bit have been received, the SI bit is set and a valid status code can be read from the Status register (I2STAT). Refer to Table 150 for the status codes and actions.

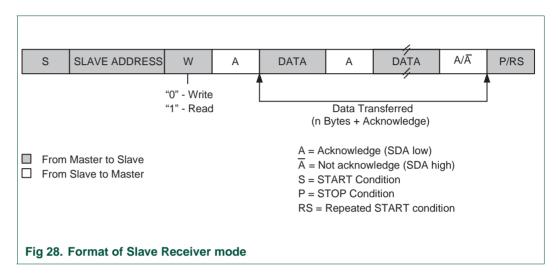

11.5.4 Slave Transmitter mode

The first byte is received and handled as in the slave receiver mode. However, in this mode, the direction bit will be 1, indicating a read operation. Serial data is transmitted via SDA while the serial clock is input through SCL. START and STOP conditions are recognized as the beginning and end of a serial transfer. In a given application, I²C may operate as a master and as a slave. In the slave mode, the I²C hardware looks for its own slave address and the general call address. If one of these addresses is detected, an interrupt is requested. When the microcontrollers wishes to become the bus master, the hardware waits until the bus is free before the master mode is entered so that a possible slave action is not interrupted. If bus arbitration is lost in the master mode, the I²C interface switches to the slave mode immediately and can detect its own slave address in the same serial transfer.

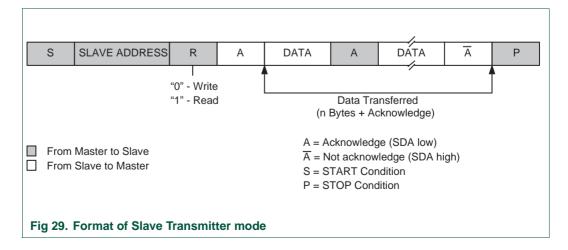

11.6 I²C Implementation and operation

Volume 1


<u>Figure 30</u> shows how the on-chip I2C-bus interface is implemented, and the following text describes the individual blocks.

11.6.1 Input filters and output stages

Input signals are synchronized with the internal clock, and spikes shorter than three clocks are filtered out.

The output for I^2C is a special pad designed to conform to the I^2C specification.

Chapter 11: I²C interfaces

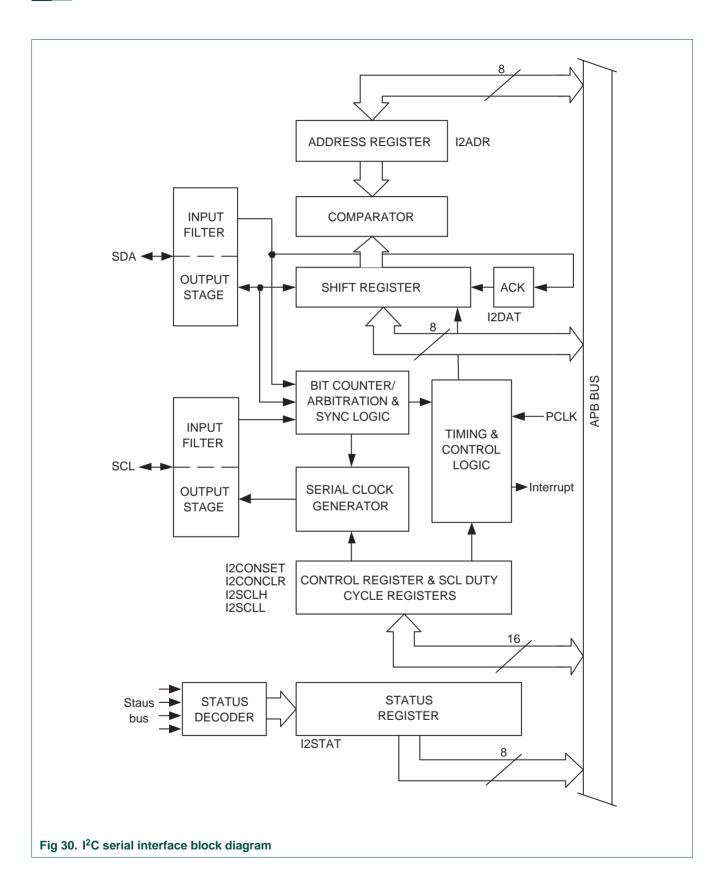

Chapter 11: I²C interfaces

11.6.2 Address Register, I2ADDR

This register may be loaded with the 7-bit slave address (7 most significant bits) to which the I²C block will respond when programmed as a slave transmitter or receiver. The LSB (GC) is used to enable general call address (0x00) recognition.

11.6.3 Comparator

The comparator compares the received 7-bit slave address with its own slave address (7 most significant bits in I2ADR). It also compares the first received 8-bit byte with the general call address (0x00). If an equality is found, the appropriate status bits are set and an interrupt is requested.


11.6.4 Shift register, I2DAT

This 8-bit register contains a byte of serial data to be transmitted or a byte which has just been received. Data in I2DAT is always shifted from right to left; the first bit to be transmitted is the MSB (bit 7) and, after a byte has been received, the first bit of received data is located at the MSB of I2DAT. While data is being shifted out, data on the bus is simultaneously being shifted in; I2DAT always contains the last byte present on the bus. Thus, in the event of lost arbitration, the transition from master transmitter to slave receiver is made with the correct data in I2DAT.

11.6.5 Arbitration and synchronization logic


In the master transmitter mode, the arbitration logic checks that every transmitted logic 1 actually appears as a logic 1 on the I²C-bus. If another device on the bus overrules a logic 1 and pulls the SDA line low, arbitration is lost, and the I²C block immediately changes from master transmitter to slave receiver. The I²C block will continue to output clock pulses (on SCL) until transmission of the current serial byte is complete.

Arbitration may also be lost in the master receiver mode. Loss of arbitration in this mode can only occur while the I²C block is returning a "not acknowledge: (logic 1) to the bus. Arbitration is lost when another device on the bus pulls this signal LOW. Since this can occur only at the end of a serial byte, the I²C block generates no further clock pulses. Figure 31 shows the arbitration procedure.

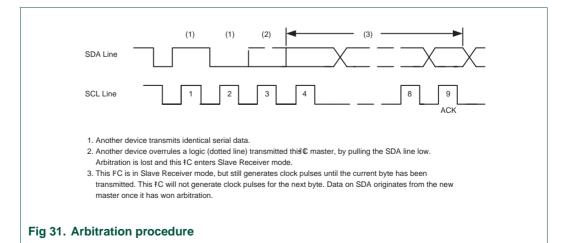

Chapter 11: I²C interfaces

The synchronization logic will synchronize the serial clock generator with the clock pulses on the SCL line from another device. If two or more master devices generate clock pulses, the "mark" duration is determined by the device that generates the shortest "marks," and the "space" duration is determined by the device that generates the longest "spaces". Figure 32 shows the synchronization procedure.

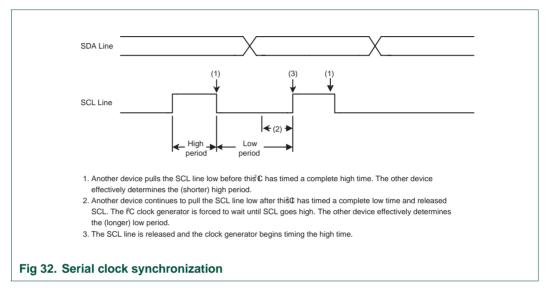

A slave may stretch the space duration to slow down the bus master. The space duration may also be stretched for handshaking purposes. This can be done after each bit or after a complete byte transfer. the I²C block will stretch the SCL space duration after a byte has been transmitted or received and the acknowledge bit has been transferred. The serial interrupt flag (SI) is set, and the stretching continues until the serial interrupt flag is cleared.

11.6.6 Serial clock generator

This programmable clock pulse generator provides the SCL clock pulses when the I²C block is in the master transmitter or master receiver mode. It is switched off when the I²C block is in a slave mode. The I²C output clock frequency and duty cycle is programmable via the I²C Clock Control Registers. See the description of the I2CSCLL and I2CSCLH registers for details. The output clock pulses have a duty cycle as programmed unless the bus is synchronizing with other SCL clock sources as described above.

11.6.7 Timing and control

The timing and control logic generates the timing and control signals for serial byte handling. This logic block provides the shift pulses for I2DAT, enables the comparator, generates and detects start and stop conditions, receives and transmits acknowledge bits, controls the master and slave modes, contains interrupt request logic, and monitors the I²C-bus status.

11.6.8 Control register, I2CONSET and I2CONCLR

The I²C control register contains bits used to control the following I²C block functions: start and restart of a serial transfer, termination of a serial transfer, bit rate, address recognition, and acknowledgment.

The contents of the I^2C control register may be read as I2CONSET. Writing to I2CONSET will set bits in the I^2C control register that correspond to ones in the value written. Conversely, writing to I2CONCLR will clear bits in the I^2C control register that correspond to ones in the value written.

11.6.9 Status decoder and Status register

The status decoder takes all of the internal status bits and compresses them into a 5-bit code. This code is unique for each I²C-bus status. The 5-bit code may be used to generate vector addresses for fast processing of the various service routines. Each service routine processes a particular bus status. There are 26 possible bus states if all four modes of the I²C block are used. The 5-bit status code is latched into the five most significant bits of the status register when the serial interrupt flag is set (by hardware) and remains stable until the interrupt flag is cleared by software. The three least significant bits of the status register are always zero. If the status code is used as a vector to service routines, then the routines are displaced by eight address locations. Eight bytes of code is sufficient for most of the service routines (see the software example in this section).

11.7 Register description

Each I²C interface contains 7 registers as shown in <u>Table 135</u> below.

Table 135: I²C register map

Name	Description	Access	Reset value[1]	I ² C0 Address and Name	I ² C1 Address and Name
I2CONSET	I ² C Control Set Register. When a one is written to a bit of this register, the corresponding bit in the I ² C control register is set. Writing a zero has no effect on the corresponding bit in the I ² C control register.	R/W	0x00	0xE001 C000 I2C0CONSET	0xE005 C000 I2C1CONSET
I2STAT	I ² C Status Register. During I ² C operation, this register provides detailed status codes that allow software to determine the next action needed.	RO	0xF8	0xE001 C004 I2C0STAT	0xE005 C004 I2C1STAT
I2DAT	I ² C Data Register. During master or slave transmit mode, data to be transmitted is written to this register. During master or slave receive mode, data that has been received may be read from this register.	R/W	0x00	0xE001 C008 I2C0DAT	0xE005 C008 I2C1DAT
I2ADR	I ² C Slave Address Register. Contains the 7-bit slave address for operation of the I ² C interface in slave mode, and is not used in master mode. The least significant bit determines whether a slave responds to the general call address.	R/W	0x00	0xE001 C00C I2C0ADR	0xE005 C00C I2C1ADR
I2SCLH	SCH Duty Cycle Register High Half Word. Determines the high time of the I ² C clock.	R/W	0x04	0xE001 C010 I2C0SCLH	0xE005 C010 I2C1SCLH
I2SCLL	SCL Duty Cycle Register Low Half Word. Determines the low time of the I ² C clock. I2nSCLL and I2nSCLH together determine the clock frequency generated by an I ² C master and certain times used in slave mode.	R/W	0x04	0xE001 C014 I2C0SCLL	0xE005 C014 I2C1SCLL
I2CONCLR	I ² C Control Clear Register. When a one is written to a bit of this register, the corresponding bit in the I ² C control register is cleared. Writing a zero has no effect on the corresponding bit in the I ² C control register.	WO	NA	0xE001 C018 I2C0CONCLR	0xE005 C018 I2C1CONCLR

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

Chapter 11: I²C interfaces

Chapter 11: I²C interfaces

11.7.1 I²C Control Set register (I2CONSET: I2C0, I2C0CONSET - 0xE001 C000 and I2C1, I2C1CONSET - 0xE005 C000)

The I2CONSET registers control setting of bits in the I2CON register that controls operation of the I²C interface. Writing a one to a bit of this register causes the corresponding bit in the I²C control register to be set. Writing a zero has no effect.

Table 136: I²C Control Set register (I2CONSET: I2C0, I2C0CONSET - address 0xE001 C000 and I2C1, I2C1CONSET - address 0xE005 C000) bit description

Bit	Symbol	Description	Reset value
1:0	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	AA	Assert acknowledge flag. See the text below.	
3	SI	I ² C interrupt flag.	0
4	STO	STOP flag. See the text below.	0
5	STA	START flag. See the text below.	0
6	I2EN	I ² C interface enable. See the text below.	0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

I2EN I²C Interface Enable. When I2EN is 1, the I²C interface is enabled. I2EN can be cleared by writing 1 to the I2ENC bit in the I2CONCLR register. When I2EN is 0, the I²C interface is disabled.

When I2EN is "0", the SDA and SCL input signals are ignored, the I²C block is in the "not addressed" slave state, and the STO bit is forced to "0".

I2EN should not be used to temporarily release the I^2C -bus since, when I2EN is reset, the I^2C -bus status is lost. The AA flag should be used instead.

STA is the START flag. Setting this bit causes the I²C interface to enter master mode and transmit a START condition or transmit a repeated START condition if it is already in master mode.

When STA is 1 and the I²C interface is not already in master mode, it enters master mode, checks the bus and generates a START condition if the bus is free. If the bus is not free, it waits for a STOP condition (which will free the bus) and generates a START condition after a delay of a half clock period of the internal clock generator. If the I²C interface is already in master mode and data has been transmitted or received, it transmits a repeated START condition. STA may be set at any time, including when the I²C interface is in an addressed slave mode.

STA can be cleared by writing 1 to the STAC bit in the I2CONCLR register. When STA is 0, no START condition or repeated START condition will be generated.

If STA and STO are both set, then a STOP condition is transmitted on the I^2C -bus if it the interface is in master mode, and transmits a START condition thereafter. If the I^2C interface is in slave mode, an internal STOP condition is generated, but is not transmitted on the bus.

Chapter 11: I²C interfaces

STO is the STOP flag. Setting this bit causes the I²C interface to transmit a STOP condition in master mode, or recover from an error condition in slave mode. When STO is 1 in master mode, a STOP condition is transmitted on the I²C-bus. When the bus detects the STOP condition, STO is cleared automatically.

In slave mode, setting this bit can recover from an error condition. In this case, no STOP condition is transmitted to the bus. The hardware behaves as if a STOP condition has been received and it switches to "not addressed" slave receiver mode. The STO flag is cleared by hardware automatically.

SI is the I²C Interrupt Flag. This bit is set when the I²C state changes. However, entering state F8 does not set SI since there is nothing for an interrupt service routine to do in that case.

While SI is set, the low period of the serial clock on the SCL line is stretched, and the serial transfer is suspended. When SCL is high, it is unaffected by the state of the SI flag. SI must be reset by software, by writing a 1 to the SIC bit in I2CONCLR register.

AA is the Assert Acknowledge Flag. When set to 1, an acknowledge (low level to SDA) will be returned during the acknowledge clock pulse on the SCL line on the following situations:

- 1. The address in the Slave Address Register has been received.
- 2. The general call address has been received while the general call bit (GC) in I2ADR is set.
- 3. A data byte has been received while the I²C is in the master receiver mode.
- 4. A data byte has been received while the I²C is in the addressed slave receiver mode

The AA bit can be cleared by writing 1 to the AAC bit in the I2CONCLR register. When AA is 0, a not acknowledge (high level to SDA) will be returned during the acknowledge clock pulse on the SCL line on the following situations:

- 1. A data byte has been received while the I²C is in the master receiver mode.
- 2. A data byte has been received while the I²C is in the addressed slave receiver mode.

11.7.2 I²C Control Clear register (I2CONCLR: I2C0, I2C0CONCLR - 0xE001 C018 and I2C1, I2C1CONCLR - 0xE005 C018)

The I2CONCLR registers control clearing of bits in the I2CON register that controls operation of the I²C interface. Writing a one to a bit of this register causes the corresponding bit in the I²C control register to be cleared. Writing a zero has no effect.

Table 137: I²C Control Set register (I2CONCLR: I2C0, I2C0CONCLR - address 0xE001 C018 and I2C1, I2C1CONCLR - address 0xE005 C018) bit description

Bit	Symbol	Description	Reset value
1:0	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	AAC	Assert acknowledge Clear bit.	
3	SIC	I ² C interrupt Clear bit.	0
4	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Chapter 11: I²C interfaces

Table 137: I²C Control Set register (I2CONCLR: I2C0, I2C0CONCLR - address 0xE001 C018 and I2C1, I2C1CONCLR - address 0xE005 C018) bit description

Bit	Symbol	Description	Reset value
5	STAC	START flag Clear bit.	0
6	I2ENC	I ² C interface Disable bit.	0
7	-	Reserved. User software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

AAC is the Assert Acknowledge Clear bit. Writing a 1 to this bit clears the AA bit in the I2CONSET register. Writing 0 has no effect.

SIC is the I²C Interrupt Clear bit. Writing a 1 to this bit clears the SI bit in the I2CONSET register. Writing 0 has no effect.

STAC is the Start flag Clear bit. Writing a 1 to this bit clears the STA bit in the I2CONSET register. Writing 0 has no effect.

IZENC is the I²C Interface Disable bit. Writing a 1 to this bit clears the I2EN bit in the I2CONSET register. Writing 0 has no effect.

11.7.3 I²C Status register (I2STAT: I2C0, I2C0STAT - 0xE001 C004 and I2C1, I2C1STAT - 0xE005 C004)

Each I²C Status register reflects the condition of the corresponding I²C interface. The I²C Status register is Read-Only.

Table 138: I²C Status register (I2STAT: I2C0, I2C0STAT - address 0xE001 C004 and I2C1, I2C1STAT - address 0xE005 C004) bit description

Bit	Symbol	Description	Reset value
2:0	-	These bits are unused and are always 0.	0
7:3	Status	These bits give the actual status information about the I ² C interface.	0x1F

The three least significant bits are always 0. Taken as a byte, the status register contents represent a status code. There are 26 possible status codes. When the status code is 0xF8, there is no relevant information available and the SI bit is not set. All other 25 status codes correspond to defined I²C states. When any of these states entered, the SI bit will be set. For a complete list of status codes, refer to tables from Table 148 to Table 151.

11.7.4 I²C Data register (I2DAT: I2C0, I2C0DAT - 0xE001 C008 and I2C1, I2C1DAT - 0xE005 C008)

This register contains the data to be transmitted or the data just received. The CPU can read and write to this register only while it is not in the process of shifting a byte, when the SI bit is set. Data in I2DAT remains stable as long as the SI bit is set. Data in I2DAT is always shifted from right to left: the first bit to be transmitted is the MSB (bit 7), and after a byte has been received, the first bit of received data is located at the MSB of I2DAT.

Table 139: I²C Data register (I2DAT: I2C0, I2C0DAT - address 0xE001 C008 and I2C1, I2C1DAT - address 0xE005 C008) bit description

Bit	Symbol	Description	Reset value
7:0	Data	This register holds data values that have been received, or are to be transmitted.	0

Chapter 11: I²C interfaces

11.7.5 I²C Slave Address register (I2ADR: I2C0, I2C0ADR - 0xE001 C00C and I2C1, I2C1ADR - address 0xE005 C00C)

These registers are readable and writable, and is only used when an I^2C interface is set to slave mode. In master mode, this register has no effect. The LSB of I2ADR is the general call bit. When this bit is set, the general call address (0x00) is recognized.

Table 140: I²C Slave Address register (I2ADR: I2C0, I2C0ADR - address 0xE001 C00C and I2C1, I2C1ADR - address 0xE005 C00C) bit description

Bit	Symbol	Description	Reset value
0	GC	General Call enable bit.	0
7:1	Address	The I ² C device address for slave mode.	0x00

11.7.6 I²C SCL High duty cycle register (I2SCLH: I2C0, I2C0SCLH - 0xE001 C010 and I2C1, I2C1SCLH - 0xE0015 C010)

Table 141: I²C SCL High Duty Cycle register (I2SCLH: I2C0, I2C0SCLH - address 0xE001 C010 and I2C1, I2C1SCLH - address 0xE005 C010) bit description

Bit	Symbol	Description	Reset value
15:0	SCLH	Count for SCL HIGH time period selection.	0x0004

11.7.7 I²C SCL Low duty cycle register (I2SCLL: I2C0 - I2C0SCLL: 0xE001 C014; I2C1 - I2C1SCLL: 0xE0015 C014)

Table 142: I²C SCL Low Duty Cycle register (I2SCLL: I2C0, I2C0SCLL - address 0xE001 C014 and I2C1, I2C1SCLL - address 0xE005 C014) bit description

Bit	Symbol	Description	Reset value
15:0	SCLL	Count for SCL LOW time period selection.	0x0004

11.7.8 Selecting the appropriate I²C data rate and duty cycle

Software must set values for the registers I2SCLH and I2SCLL to select the appropriate data rate and duty cycle. I2SCLH defines the number of PCLK cycles for the SCL high time, I2SCLL defines the number of PCLK cycles for the SCL low time. The frequency is determined by the following formula (PCLK is the frequency of the peripheral bus VPB):

(7)

$$I^2C_{bitfrequency} = \frac{PCLK}{I2CSCLH + I2CSCLL}$$

The values for I2SCLL and I2SCLH should not necessarily be the same. Software can set different duty cycles on SCL by setting these two registers. For example, the I²C-bus specification defines the SCL low time and high time at different values for a 400 kHz I²C rate. The value of the register must ensure that the data rate is in the I²C data rate range of 0 through 400 kHz. Each register value must be greater than or equal to 4. Table 143 gives some examples of I²C-bus rates based on PCLK frequency and I2SCLL and I2SCLH values.

Chapter 11: I²C interfaces

Table 143: Example I²C clock rates

I2SCLL +	I ² C Bit Frequency (kHz) at PCLK (MHz)									
I2SCLH	1	5	10	16	20	40	60			
8	125									
10	100									
25	40	200	400							
50	20	100	200	320	400					
100	10	50	100	160	200	400				
160	6.25	31.25	62.5	100	125	250	375			
200	5	25	50	80	100	200	300			
400	2.5	12.5	25	40	50	100	150			
800	1.25	6.25	12.5	20	25	50	75			

11.8 Details of I²C operating modes

The four operating modes are:

- Master Transmitter
- Master Receiver
- Slave Receiver
- Slave Transmitter

Data transfers in each mode of operation are shown in Figures 33 to 37. Table 144 lists abbreviations used in these figures when describing the I²C operating modes.

Table 144: Abbreviations used to describe an I²C operation

Abbreviation	Explanation
S	Start Condition
SLA	7-bit slave address
R	Read bit (high level at SDA)
W	Write bit (low level at SDA)
A	Acknowledge bit (low level at SDA)
Ā	Not acknowledge bit (high level at SDA)
Data	8-bit data byte
Р	Stop condition

In Figures 33 to 37, circles are used to indicate when the serial interrupt flag is set. The numbers in the circles show the status code held in the I2STAT register. At these points, a service routine must be executed to continue or complete the serial transfer. These service routines are not critical since the serial transfer is suspended until the serial interrupt flag is cleared by software.

When a serial interrupt routine is entered, the status code in I2STAT is used to branch to the appropriate service routine. For each status code, the required software action and details of the following serial transfer are given in tables from Table 148 to Table 152.

Chapter 11: I²C interfaces

11.8.1 Master Transmitter mode

In the master transmitter mode, a number of data bytes are transmitted to a slave receiver (see <u>Figure 33</u>). Before the master transmitter mode can be entered, I2CON must be initialized as follows:

Table 145: I2CONSET used to initialize Master Transmitter mode

Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	Х	-	-

The I²C rate must also be configured in the I2SCLL and I2SCLH registers. I2EN must be set to logic 1 to enable the I²C block. If the AA bit is reset, the I²C block will not acknowledge its own slave address or the general call address in the event of another device becoming master of the bus. In other words, if AA is reset, the I²C interface cannot enter a slave mode. STA, STO, and SI must be reset.

The master transmitter mode may now be entered by setting the STA bit. The I²C logic will now test the I²C-bus and generate a start condition as soon as the bus becomes free. When a START condition is transmitted, the serial interrupt flag (SI) is set, and the status code in the status register (I2STAT) will be 0x08. This status code is used by the interrupt service routine to enter the appropriate state service routine that loads I2DAT with the slave address and the data direction bit (SLA+W). The SI bit in I2CON must then be reset before the serial transfer can continue.

When the slave address and the direction bit have been transmitted and an acknowledgment bit has been received, the serial interrupt flag (SI) is set again, and a number of status codes in I2STAT are possible. There are 0x18, 0x20, or 0x38 for the master mode and also 0x68, 0x78, or 0xB0 if the slave mode was enabled (AA = logic 1). The appropriate action to be taken for each of these status codes is detailed in <u>Table 148</u>. After a repeated start condition (state 0x10). The I²C block may switch to the master receiver mode by loading I2DAT with SLA+R).

11.8.2 Master Receiver mode

In the master receiver mode, a number of data bytes are received from a slave transmitter (see <u>Figure 34</u>). The transfer is initialized as in the master transmitter mode. When the start condition has been transmitted, the interrupt service routine must load I2DAT with the 7-bit slave address and the data direction bit (SLA+R). The SI bit in I2CON must then be cleared before the serial transfer can continue.

When the slave address and the data direction bit have been transmitted and an acknowledgment bit has been received, the serial interrupt flag (SI) is set again, and a number of status codes in I2STAT are possible. These are 0x40, 0x48, or 0x38 for the master mode and also 0x68, 0x78, or 0xB0 if the slave mode was enabled (AA = 1). The appropriate action to be taken for each of these status codes is detailed in <u>Table 149</u>. After a repeated start condition (state 0x10), the I²C block may switch to the master transmitter mode by loading I2DAT with SLA+W.

Volume 1

Chapter 11: I²C interfaces

11.8.3 Slave Receiver mode

In the slave receiver mode, a number of data bytes are received from a master transmitter (see <u>Figure 35</u>). To initiate the slave receiver mode, I2ADR and I2CON must be loaded as follows:

Table 146: I2C0ADR and I2C1ADR usage in Slave Receiver mode

Bit	7	6	5	4	3	2	1	0	
Symbol			OV	vn slave 7-b	it address			GC	

The upper 7 bits are the address to which the I²C block will respond when addressed by a master. If the LSB (GC) is set, the I²C block will respond to the general call address (0x00); otherwise it ignores the general call address.


Table 147: I2C0CONSET and I2C1CONSET used to initialize Slave Receiver mode


Bit	7	6	5	4	3	2	1	0
Symbol	-	I2EN	STA	STO	SI	AA	-	-
Value	-	1	0	0	0	1	-	-


The I^2C -bus rate settings do not affect the I^2C block in the slave mode. I2EN must be set to logic 1 to enable the I^2C block. The AA bit must be set to enable the I^2C block to acknowledge its own slave address or the general call address. STA, STO, and SI must be reset.

When I2ADR and I2CON have been initialized, the I²C block waits until it is addressed by its own slave address followed by the data direction bit which must be "0" (W) for the I²C block to operate in the slave receiver mode. After its own slave address and the W bit have been received, the serial interrupt flag (SI) is set and a valid status code can be read from I2STAT. This status code is used to vector to a state service routine. The appropriate action to be taken for each of these status codes is detailed in Table 104. The slave receiver mode may also be entered if arbitration is lost while the I²C block is in the master mode (see status 0x68 and 0x78).


If the AA bit is reset during a transfer, the I²C block will return a not acknowledge (logic 1) to SDA after the next received data byte. While AA is reset, the I²C block does not respond to its own slave address or a general call address. However, the I²C-bus is still monitored and address recognition may be resumed at any time by setting AA. This means that the AA bit may be used to temporarily isolate the I²C block from the I²C-bus.

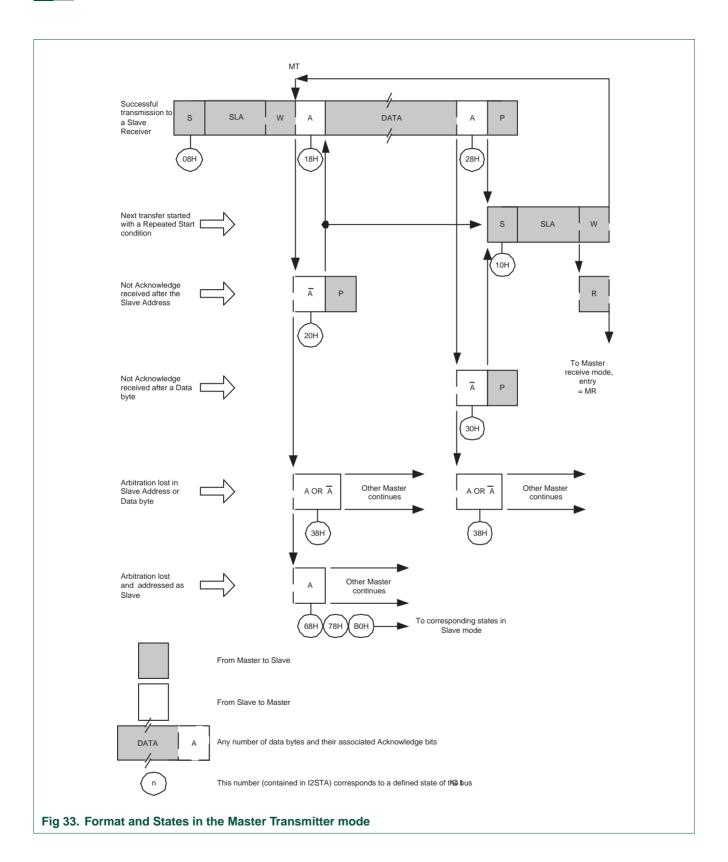

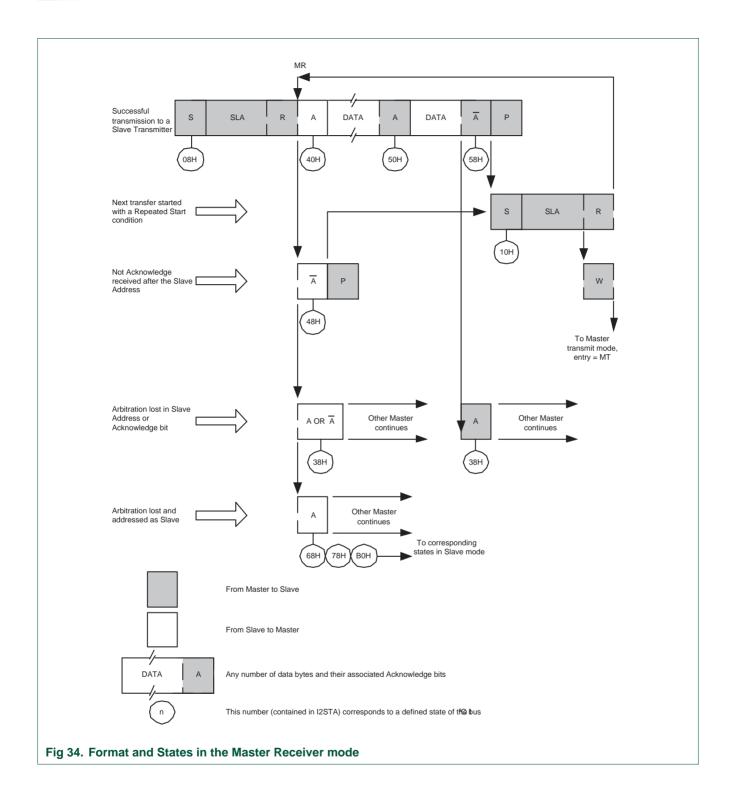

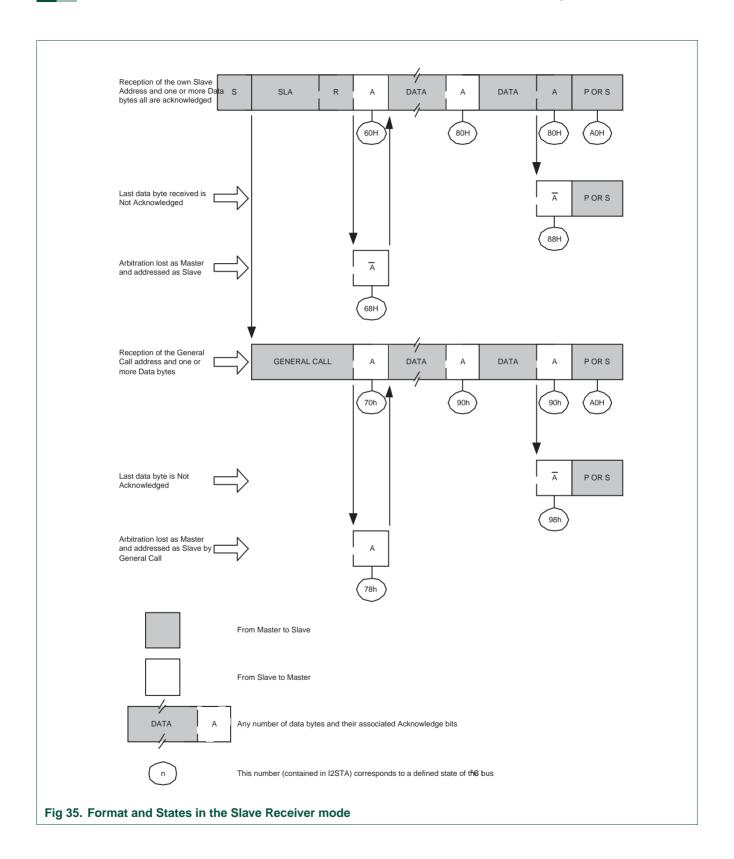

Chapter 11: I²C interfaces

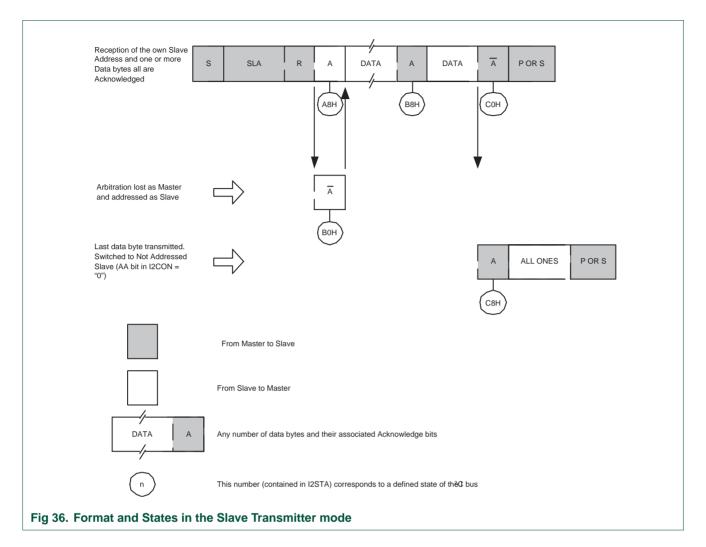

11.8.4 Slave Transmitter mode

In the slave transmitter mode, a number of data bytes are transmitted to a master receiver (see Figure 36). Data transfer is initialized as in the slave receiver mode. When I2ADR and I2CON have been initialized, the I²C block waits until it is addressed by its own slave address followed by the data direction bit which must be "1" (R) for the I²C block to operate in the slave transmitter mode. After its own slave address and the R bit have been received, the serial interrupt flag (SI) is set and a valid status code can be read from I2STAT. This status code is used to vector to a state service routine, and the appropriate action to be taken for each of these status codes is detailed in Table 151. The slave transmitter mode may also be entered if arbitration is lost while the I²C block is in the master mode (see state 0xB0).

If the AA bit is reset during a transfer, the I²C block will transmit the last byte of the transfer and enter state 0xC0 or 0xC8. The I²C block is switched to the not addressed slave mode and will ignore the master receiver if it continues the transfer. Thus the master receiver receives all 1s as serial data. While AA is reset, the I²C block does not respond to its own slave address or a general call address. However, the I²C-bus is still monitored, and address recognition may be resumed at any time by setting AA. This means that the AA bit may be used to temporarily isolate the I²C block from the I²C-bus.

153



Table 148: Master Transmitter mode

Status	Status of the I ² C-bus	Application softwa	are res	spons	е		Next action taken by I ² C hardware
Code	and hardware	To/From I2DAT	To I2	-	None doctors taken by 1 o hardware		
(I2CSTAT)		10/110111125/		STO	SI	AA	
0x08	A START condition has been transmitted.	Load SLA+W	X	0	0	Х	SLA+W will be transmitted; ACK bit will be received.
0x10	A repeated START	Load SLA+W or	Χ	0	0	Χ	As above.
	condition has been transmitted.	Load SLA+R	X	0	0	X	SLA+W will be transmitted; the I ² C block will be switched to MST/REC mode.
0x18	SLA+W has been transmitted; ACK has	Load data byte or	0	0	0	Χ	Data byte will be transmitted; ACK bit will be received.
	been received.	No I2DAT action or	1	0	0	Χ	Repeated START will be transmitted.
		No I2DAT action or	0	1	0	Х	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	Χ	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x20	SLA+W has been transmitted; NOT ACK	Load data byte or	0	0	0	Χ	Data byte will be transmitted; ACK bit wil be received.
	has been received.	No I2DAT action or	1	0	0	Χ	Repeated START will be transmitted.
		No I2DAT action or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	Х	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x28	Data byte in I2DAT has been transmitted;	Load data byte or	0	0	0	Χ	Data byte will be transmitted; ACK bit will be received.
	ACK has been	No I2DAT action or	1	0	0	Χ	Repeated START will be transmitted.
	received.	No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	Х	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x30	Data byte in I2DAT has been transmitted;	Load data byte or	0	0	0	Х	Data byte will be transmitted; ACK bit wil be received.
	NOT ACK has been received.	No I2DAT action or	1	0	0	Χ	Repeated START will be transmitted.
	ieoeiveu.	No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x38	Arbitration lost in SLA+R/W or Data	No I2DAT action or	0	0	0	Χ	I ² C-bus will be released; not addressed slave will be entered.
	bytes.	No I2DAT action	1	0	0	Х	A START condition will be transmitted when the bus becomes free.



Table 149: Master Receiver mode

Status	Status of the I ² C-bus	Application softwa	are re	spons	е		Next action taken by I ² C hardware
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(IZCSTAT)			STA	STO	SI	AA	
80x0	A START condition has been transmitted.	Load SLA+R	Χ	0	0	Χ	SLA+R will be transmitted; ACK bit will be received.
0x10	A repeated START	Load SLA+R or	Χ	0	0	Χ	As above.
	condition has been transmitted.	Load SLA+W	Χ	0	0	Χ	SLA+W will be transmitted; the I ² C block will be switched to MST/TRX mode.
0x38	Arbitration lost in NOT ACK bit.	No I2DAT action or	0	0	0	X	I ² C-bus will be released; the I ² C block wil enter a slave mode.
		No I2DAT action	1	0	0	Χ	A START condition will be transmitted when the bus becomes free.
0x40	SLA+R has been transmitted; ACK has	No I2DAT action or	0	0	0	0	Data byte will be received; NOT ACK bit will be returned.
	been received.	No I2DAT action	0	0	0	1	Data byte will be received; ACK bit will be returned.
0x48	SLA+R has been transmitted; NOT ACK	No I2DAT action or	1	0	0	X	Repeated START condition will be transmitted.
	has been received.	No I2DAT action or	0	1	0	Χ	STOP condition will be transmitted; STO flag will be reset.
		No I2DAT action	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.
0x50	Data byte has been received; ACK has	Read data byte or	0	0	0	0	Data byte will be received; NOT ACK bit will be returned.
	been returned.	Read data byte	0	0	0	1	Data byte will be received; ACK bit will be returned.
0x58	Data byte has been received; NOT ACK	Read data byte or	1	0	0	X	Repeated START condition will be transmitted.
	has been returned.	Read data byte or	0	1	0	X	STOP condition will be transmitted; STO flag will be reset.
		Read data byte	1	1	0	X	STOP condition followed by a START condition will be transmitted; STO flag will be reset.



Table 150:	Slave Receiver mode						
Status Code	Status of the I ² C-bus and hardware	Application softwa		-	е		Next action taken by I ² C hardware
(I2CSTAT)	and nardware	To/From I2DAT	To I2		01		
000	Own CL A : W has	No IODAT action or	_	STO	_	AA	Data huta will be received and NOT ACK
0x60	Own SLA+W has been received; ACK has been returned.	No I2DAT action or		0	0	0	Data byte will be received and NOT ACK will be returned.
	nas been returned.	No I2DAT action	Х	0	0	1	Data byte will be received and ACK will be returned.
0x68	Arbitration lost in SLA+R/W as master;	No I2DAT action or	Х	0	0	0	Data byte will be received and NOT ACK will be returned.
	Own SLA+W has been received, ACK returned.	No I2DAT action	Х	0	0	1	Data byte will be received and ACK will be returned.
0x70	General call address (0x00) has been	No I2DAT action or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	received; ACK has been returned.	No I2DAT action	X	0	0	1	Data byte will be received and ACK will be returned.
0x78	Arbitration lost in SLA+R/W as master;	No I2DAT action or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	General call address has been received, ACK has been returned.	No I2DAT action	X	0	0	1	Data byte will be received and ACK will be returned.
0x80	Previously addressed with own SLV	Read data byte or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	address; DATA has been received; ACK has been returned.	Read data byte	Х	0	0	1	Data byte will be received and ACK will be returned.
0x88	Previously addressed with own SLA; DATA byte has been received; NOT ACK has been returned.	Read data byte or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
		Read data byte or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		Read data byte or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		Read data byte	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.
0x90	Previously addressed with General Call;	Read data byte or	X	0	0	0	Data byte will be received and NOT ACK will be returned.
	DATA byte has been received; ACK has been returned.	Read data byte	X	0	0	1	Data byte will be received and ACK will be returned.



Table 150: Slave Receiver mode

	Slave Receiver mode						
Status Code	Status of the I ² C-bus and hardware	Application softw	are re	spons	е	Next action taken by I ² C hardware	
(I2CSTAT)	and nardware	To/From I2DAT	To I2CON				
,			STA	STO	SI	AA	
0x98	Previously addressed with General Call; DATA byte has been	Read data byte or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	received; NOT ACK has been returned.	Read data byte or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		Read data byte or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		Read data byte	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.
0xA0	A STOP condition or repeated START condition has been received while still addressed as SLV/REC or SLV/TRX.	No STDAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
		No STDAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1.
		No STDAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No STDAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General call address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus becomes free.



Table 151: Slave Transmitter mode

Status	Status of the I ² C-bus	Application softwa	are re	spons	е	Next action taken by I ² C hardware	
Code (I2CSTAT)	and hardware	To/From I2DAT	To I2	CON			
(12001A1)			STA	STO	SI	AA	
0xA8	Own SLA+R has been received; ACK has	Load data byte or	Χ	0	0	0	Last data byte will be transmitted and ACK bit will be received.
	been returned.	Load data byte	X	0	0	1	Data byte will be transmitted; ACK will b received.
0xB0	Arbitration lost in SLA+R/W as master;	Load data byte or	Х	0	0	0	Last data byte will be transmitted and ACK bit will be received.
	Own SLA+R has been received, ACK has been returned.	Load data byte	X	0	0	1	Data byte will be transmitted; ACK bit wi be received.
0xB8	Data byte in I2DAT has been transmitted;	Load data byte or	X	0	0	0	Last data byte will be transmitted and ACK bit will be received.
	ACK has been received.	Load data byte	X	0	0	1	Data byte will be transmitted; ACK bit wi be received.
0xC0	Data byte in I2DAT has been transmitted; NOT ACK has been	No I2DAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	received.	No I2DAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		No I2DAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No I2DAT action	1	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1. A START condition will be transmitted when the bus become free.
0xC8	Last data byte in I2DAT has been transmitted (AA = 0);	No I2DAT action or	0	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address.
	ACK has been received.	No I2DAT action or	0	0	0	1	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR[0] = logic 1.
		No I2DAT action or	1	0	0	0	Switched to not addressed SLV mode; no recognition of own SLA or General call address. A START condition will be transmitted when the bus becomes free.
		No I2DAT action	1	0	0	01	Switched to not addressed SLV mode; Own SLA will be recognized; General ca address will be recognized if I2ADR.0 = logic 1. A START condition wi be transmitted when the bus becomes free.

UM10139 **Philips Semiconductors**

11.8.5 Miscellaneous States

There are two I2STAT codes that do not correspond to a defined I2C hardware state (see Table 152). These are discussed below.

11.8.6 I2STAT = 0xF8

This status code indicates that no relevant information is available because the serial interrupt flag, SI, is not yet set. This occurs between other states and when the I²C block is not involved in a serial transfer.

11.8.7 I2STAT = 0x00

This status code indicates that a bus error has occurred during an I²C serial transfer. A bus error is caused when a START or STOP condition occurs at an illegal position in the format frame. Examples of such illegal positions are during the serial transfer of an address byte, a data byte, or an acknowledge bit. A bus error may also be caused when external interference disturbs the internal I²C block signals. When a bus error occurs, SI is set. To recover from a bus error, the STO flag must be set and SI must be cleared. This causes the I2C block to enter the "not addressed" slave mode (a defined state) and to clear the STO flag (no other bits in I2CON are affected). The SDA and SCL lines are released (a STOP condition is not transmitted).

Table 152: Miscellaneous States

Status	Status of the I ² C-bus	Application softw	are re	spons	е	Next action taken by I ² C hardware	
Code	and hardware	To/From I2DAT	To I2	CON			
(I2CSTAT)			STA	STO	SI	AA	
0xF8	No relevant state information available; SI = 0.	No I2DAT action	N	o 12CC	N act	ion	Wait or proceed current transfer.
0x00	Bus error during MST or selected slave modes, due to an illegal START or STOP condition. State 0x00 can also occur when interference causes the I ² C block to enter an undefined state.	No I2DAT action	0	1	0	X	Only the internal hardware is affected in the MST or addressed SLV modes. In all cases, the bus is released and the I ² C block is switched to the not addressed SLV mode. STO is reset.

11.8.8 Some special cases

The I²C hardware has facilities to handle the following special cases that may occur during a serial transfer:

11.8.9 Simultaneous repeated START conditions from two masters

A repeated START condition may be generated in the master transmitter or master receiver modes. A special case occurs if another master simultaneously generates a repeated START condition (see <u>Figure 37</u>). Until this occurs, arbitration is not lost by either master since they were both transmitting the same data.

If the I²C hardware detects a repeated START condition on the I²C-bus before generating a repeated START condition itself, it will release the bus, and no interrupt request is generated. If another master frees the bus by generating a STOP condition, the I²C block will transmit a normal START condition (state 0x08), and a retry of the total serial data transfer can commence.

11.8.10 Data transfer after loss of arbitration

Arbitration may be lost in the master transmitter and master receiver modes (see <u>Figure 31</u>). Loss of arbitration is indicated by the following states in I2STAT; 0x38, 0x68, 0x78, and 0xB0 (see <u>Figure 33</u> and <u>Figure 34</u>).

If the STA flag in I2CON is set by the routines which service these states, then, if the bus is free again, a START condition (state 0x08) is transmitted without intervention by the CPU, and a retry of the total serial transfer can commence.

11.8.11 Forced access to the I²C-bus

In some applications, it may be possible for an uncontrolled source to cause a bus hang-up. In such situations, the problem may be caused by interference, temporary interruption of the bus or a temporary short-circuit between SDA and SCL.

Chapter 11: I²C interfaces

If an uncontrolled source generates a superfluous START or masks a STOP condition, then the I²C-bus stays busy indefinitely. If the STA flag is set and bus access is not obtained within a reasonable amount of time, then a forced access to the I²C-bus is possible. This is achieved by setting the STO flag while the STA flag is still set. No STOP condition is transmitted. The I²C hardware behaves as if a STOP condition was received and is able to transmit a START condition. The STO flag is cleared by hardware (see Figure 34).

11.8.12 I²C-bus obstructed by a low level on SCL or SDA

An I²C-bus hang-up occurs if SDA or SCL is pulled LOW by an uncontrolled source. If the SCL line is obstructed (pulled LOW) by a device on the bus, no further serial transfer is possible, and the I²C hardware cannot resolve this type of problem. When this occurs, the problem must be resolved by the device that is pulling the SCL bus line LOW.

If the SDA line is obstructed by another device on the bus (e.g., a slave device out of bit synchronization), the problem can be solved by transmitting additional clock pulses on the SCL line (see <u>Figure 39</u>). The I²C hardware transmits additional clock pulses when the STA flag is set, but no START condition can be generated because the SDA line is pulled LOW while the I²C-bus is considered free. The I²C hardware attempts to generate a START condition after every two additional clock pulses on the SCL line. When the SDA line is eventually released, a normal START condition is transmitted, state 0x08 is entered, and the serial transfer continues.


If a forced bus access occurs or a repeated START condition is transmitted while SDA is obstructed (pulled LOW), the I²C hardware performs the same action as described above. In each case, state 0x08 is entered after a successful START condition is transmitted and normal serial transfer continues. Note that the CPU is not involved in solving these bus hang-up problems.


11.8.13 Bus error


A bus error occurs when a START or STOP condition is present at an illegal position in the format frame. Examples of illegal positions are during the serial transfer of an address byte, a data bit, or an acknowledge bit.

The I²C hardware only reacts to a bus error when it is involved in a serial transfer either as a master or an addressed slave. When a bus error is detected, the I²C block immediately switches to the not addressed slave mode, releases the SDA and SCL lines, sets the interrupt flag, and loads the status register with 0x00. This status code may be used to vector to a state service routine which either attempts the aborted serial transfer again or simply recovers from the error condition as shown in <u>Table 152</u>.

Chapter 11: I²C interfaces

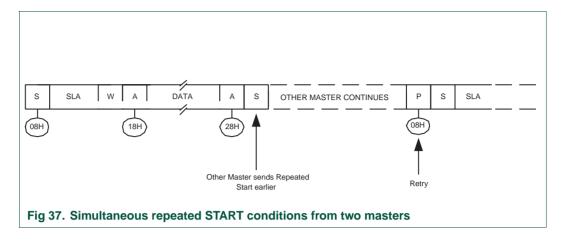

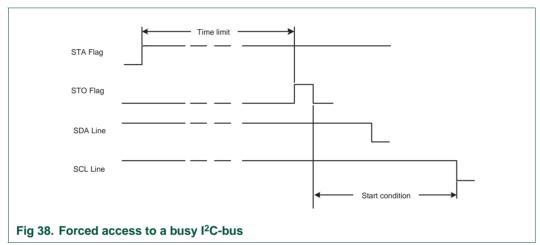

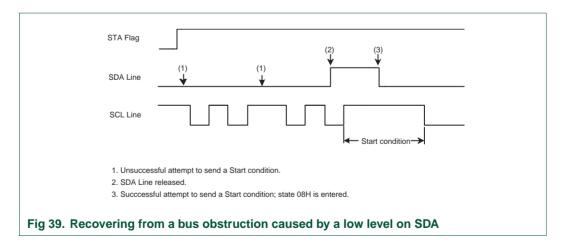

11.8.14 I²C State service routines

This section provides examples of operations that must be performed by various I²C state service routines. This includes:

- Initialization of the I2C block after a Reset.
- I²C Interrupt Service

Volume 1

• The 26 state service routines providing support for all four I²C operating modes.

11.8.15 Initialization

In the initialization example, the I²C block is enabled for both master and slave modes. For each mode, a buffer is used for transmission and reception. The initialization routine performs the following functions:

- I2ADR is loaded with the part's own slave address and the general call bit (GC)
- The I²C interrupt enable and interrupt priority bits are set
- The slave mode is enabled by simultaneously setting the I2EN and AA bits in I2CON and the serial clock frequency (for master modes) is defined by loading CR0 and CR1 in I2CON. The master routines must be started in the main program.

The I^2C hardware now begins checking the I^2C -bus for its own slave address and general call. If the general call or the own slave address is detected, an interrupt is requested and I2STAT is loaded with the appropriate state information.

11.8.16 I²C interrupt service

When the I²C interrupt is entered, I2STAT contains a status code which identifies one of the 26 state services to be executed.

11.8.17 The State service routines

Each state routine is part of the I²C interrupt routine and handles one of the 26 states.

11.8.18 Adapting State services to an application

The state service examples show the typical actions that must be performed in response to the 26 I²C state codes. If one or more of the four I²C operating modes are not used, the associated state services can be omitted, as long as care is taken that the those states can never occur.

In an application, it may be desirable to implement some kind of timeout during I²C operations, in order to trap an inoperative bus or a lost service routine.

11.9 Software example

11.9.1 Initialization routine

Example to initialize I²C Interface as a Slave and/or Master.

- 1. Load I2ADR with own Slave Address, enable general call recognition if needed.
- 2. Enable I²C interrupt.
- 3. Write 0x44 to I2CONSET to set the I2EN and AA bits, enabling Slave functions. For Master only functions, write 0x40 to I2CONSET.

11.9.2 Start Master Transmit function

Begin a Master Transmit operation by setting up the buffer, pointer, and data count, then initiating a Start.

163

Chapter 11: I²C interfaces

- 1. Initialize Master data counter.
- 2. Set up the Slave Address to which data will be transmitted, and add the Write bit.
- 3. Write 0x20 to I2CONSET to set the STA bit.
- 4. Set up data to be transmitted in Master Transmit buffer.
- 5. Initialize the Master data counter to match the length of the message being sent.
- 6. Exit

11.9.3 Start Master Receive function

Begin a Master Receive operation by setting up the buffer, pointer, and data count, then initiating a Start.

- 1. Initialize Master data counter.
- 2. Set up the Slave Address to which data will be transmitted, and add the Read bit.
- 3. Write 0x20 to I2CONSET to set the STA bit.
- 4. Set up the Master Receive buffer.
- 5. Initialize the Master data counter to match the length of the message to be received.
- 6. Exit

11.9.4 I²C interrupt routine

Determine the I²C state and which state routine will be used to handle it.

- 1. Read the I²C status from I2STA.
- 2. Use the status value to branch to one of 26 possible state routines.

11.9.5 Non mode specific States

11.9.6 State: 0x00

Bus Error. Enter not addressed Slave mode and release bus.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

11.9.7 Master States

State 08 and State 10 are for both Master Transmit and Master Receive modes. The R/W bit decides whether the next state is within Master Transmit mode or Master Receive mode.

11.9.8 State: 0x08

A Start condition has been transmitted. The Slave Address + R/W bit will be transmitted, an ACK bit will be received.

- 1. Write Slave Address with R/W bit to I2DAT.
- 2. Write 0x04 to I2CONSET to set the AA bit.

- Chapter 11: I²C interfaces
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Master Transmit mode data buffer.
- 5. Set up Master Receive mode data buffer.
- 6. Initialize Master data counter.
- 7. Exit

11.9.9 State: 0x10

A repeated Start condition has been transmitted. The Slave Address + R/W bit will be transmitted, an ACK bit will be received.

- 1. Write Slave Address with R/W bit to I2DAT.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Master Transmit mode data buffer.
- 5. Set up Master Receive mode data buffer.
- 6. Initialize Master data counter.
- 7. Exit

11.9.10 Master Transmitter States

11.9.11 State: 0x18

Previous state was State 8 or State 10, Slave Address + Write has been transmitted, ACK has been received. The first data byte will be transmitted, an ACK bit will be received.

- 1. Load I2DAT with first data byte from Master Transmit buffer.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Increment Master Transmit buffer pointer.
- 5. Exit

11.9.12 State: 0x20

Slave Address + Write has been transmitted, NOT ACK has been received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

11.9.13 State: 0x28

Data has been transmitted, ACK has been received. If the transmitted data was the last data byte then transmit a Stop condition, otherwise transmit the next data byte.

- 1. Decrement the Master data counter, skip to step 5 if not the last data byte.
- 2. Write 0x14 to I2CONSET to set the STO and AA bits.

- Chapter 11: I²C interfaces
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Exit
- 5. Load I2DAT with next data byte from Master Transmit buffer.
- 6. Write 0x04 to I2CONSET to set the AA bit.
- 7. Write 0x08 to I2CONCLR to clear the SI flag.
- 8. Increment Master Transmit buffer pointer
- 9. Exit

11.9.14 State: 0x30

Data has been transmitted, NOT ACK received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

11.9.15 State: 0x38

Arbitration has been lost during Slave Address + Write or data. The bus has been released and not addressed Slave mode is entered. A new Start condition will be transmitted when the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

11.9.16 Master Receive States

11.9.17 State: 0x40

Previous state was State 08 or State 10. Slave Address + Read has been transmitted, ACK has been received. Data will be

received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

11.9.18 State: 0x48

Slave Address + Read has been transmitted, NOT ACK has been received. A Stop condition will be transmitted.

- 1. Write 0x14 to I2CONSET to set the STO and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

Chapter 11: I²C interfaces

11.9.19 State: 0x50

Data has been received, ACK has been returned. Data will be read from I2DAT. Additional data will be received. If this is the last data byte then NOT ACK will be returned, otherwise ACK will be returned.

- 1. Read data byte from I2DAT into Master Receive buffer.
- 2. Decrement the Master data counter, skip to step 5 if not the last data byte.
- 3. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 4. Exit
- 5. Write 0x04 to I2CONSET to set the AA bit.
- 6. Write 0x08 to I2CONCLR to clear the SI flag.
- 7. Increment Master Receive buffer pointer
- 8. Exit

11.9.20 State: 0x58

Data has been received, NOT ACK has been returned. Data will be read from I2DAT. A Stop condition will be transmitted.

- 1. Read data byte from I2DAT into Master Receive buffer.
- 2. Write 0x14 to I2CONSET to set the STO and AA bits.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Exit

11.9.21 Slave Receiver States

11.9.22 State: 0x60

Own Slave Address + Write has been received, ACK has been returned. Data will be received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

11.9.23 State: 0x68

Arbitration has been lost in Slave Address and R/W bit as bus Master. Own Slave Address + Write has been received, ACK has been returned. Data will be received and ACK will be returned. STA is set to restart Master mode after the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.

5. Exit.

11.9.24 State: 0x70

General call has been received, ACK has been returned. Data will be received and ACK returned.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

11.9.25 State: 0x78

Arbitration has been lost in Slave Address + R/W bit as bus Master. General call has been received and ACK has been returned. Data will be received and ACK returned. STA is set to restart Master mode after the bus is free again.

- 1. Write 0x24 to I2CONSET to set the STA and AA bits.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Set up Slave Receive mode data buffer.
- 4. Initialize Slave data counter.
- 5. Exit

11.9.26 State: 0x80

Previously addressed with own Slave Address. Data has been received and ACK has been returned. Additional data will be read.

- 1. Read data byte from I2DAT into the Slave Receive buffer.
- 2. Decrement the Slave data counter, skip to step 5 if not the last data byte.
- 3. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 4. Exit.
- 5. Write 0x04 to I2CONSET to set the AA bit.
- 6. Write 0x08 to I2CONCLR to clear the SI flag.
- 7. Increment Slave Receive buffer pointer.
- 8. Exit

11.9.27 State: 0x88

Previously addressed with own Slave Address. Data has been received and NOT ACK has been returned. Received data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

Chapter 11: I²C interfaces

11.9.28 State: 0x90

Previously addressed with general call. Data has been received, ACK has been returned. Received data will be saved. Only the first data byte will be received with ACK. Additional data will be received with NOT ACK.

- 1. Read data byte from I2DAT into the Slave Receive buffer.
- 2. Write 0x0C to I2CONCLR to clear the SI flag and the AA bit.
- 3. Exit

11.9.29 State: 0x98

Previously addressed with general call. Data has been received, NOT ACK has been returned. Received data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3 Fxit

11.9.30 State: 0xA0

A Stop condition or repeated Start has been received, while still addressed as a Slave. Data will not be saved. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit

11.9.31 Slave Transmitter States

11.9.32 State: 0xA8

Own Slave Address + Read has been received, ACK has been returned. Data will be transmitted, ACK bit will be received.

- 1. Load I2DAT from Slave Transmit buffer with first data byte.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Slave Transmit mode data buffer.
- 5. Increment Slave Transmit buffer pointer.
- 6. Exit

11.9.33 State: 0xB0

Arbitration lost in Slave Address and R/W bit as bus Master. Own Slave Address + Read has been received, ACK has been returned. Data will be transmitted, ACK bit will be received. STA is set to restart Master mode after the bus is free again.

- 1. Load I2DAT from Slave Transmit buffer with first data byte.
- 2. Write 0x24 to I2CONSET to set the STA and AA bits.

Volume 1

- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Set up Slave Transmit mode data buffer.
- 5. Increment Slave Transmit buffer pointer.
- 6. Exit

11.9.34 State: 0xB8

Data has been transmitted, ACK has been received. Data will be transmitted, ACK bit will be received.

- 1. Load I2DAT from Slave Transmit buffer with data byte.
- 2. Write 0x04 to I2CONSET to set the AA bit.
- 3. Write 0x08 to I2CONCLR to clear the SI flag.
- 4. Increment Slave Transmit buffer pointer.
- 5. Exit

11.9.35 State: 0xC0

Data has been transmitted, NOT ACK has been received. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit.

11.9.36 State: 0xC8

The last data byte has been transmitted, ACK has been received. Not addressed Slave mode is entered.

- 1. Write 0x04 to I2CONSET to set the AA bit.
- 2. Write 0x08 to I2CONCLR to clear the SI flag.
- 3. Exit



UM10139

Chapter 12: SPI Interface (SPI0)

Rev. 01 — 15 August 2005

User manual

12.1 Features

- Single complete and independent SPI controller.
- Compliant with Serial Peripheral Interface (SPI) specification.
- Synchronous, Serial, Full Duplex Communication.
- · Combined SPI master and slave.
- Maximum data bit rate of one eighth of the input clock rate.
- 8 to 16 bits per transfer

12.2 Description

12.2.1 SPI overview


SPI is a full duplex serial interfaces. It can handle multiple masters and slaves being connected to a given bus. Only a single master and a single slave can communicate on the interface during a given data transfer. During a data transfer the master always sends 8 to 16 bits of data to the slave, and the slave always sends a byte of data to the master.

12.2.2 SPI data transfers

<u>Figure 40</u> is a timing diagram that illustrates the four different data transfer formats that are available with the SPI. This timing diagram illustrates a single 8 bit data transfer. The first thing you should notice in this timing diagram is that it is divided into three horizontal parts. The first part describes the SCK and SSEL signals. The second part describes the MOSI and MISO signals when the CPHA variable is 0. The third part describes the MOSI and MISO signals when the CPHA variable is 1.

In the first part of the timing diagram, note two points. First, the SPI is illustrated with CPOL set to both 0 and 1. The second point to note is the activation and de-activation of the SSEL signal. When CPHA = 1, the SSEL signal will always go inactive between data transfers. This is not guaranteed when CPHA = 0 (the signal can remain active).



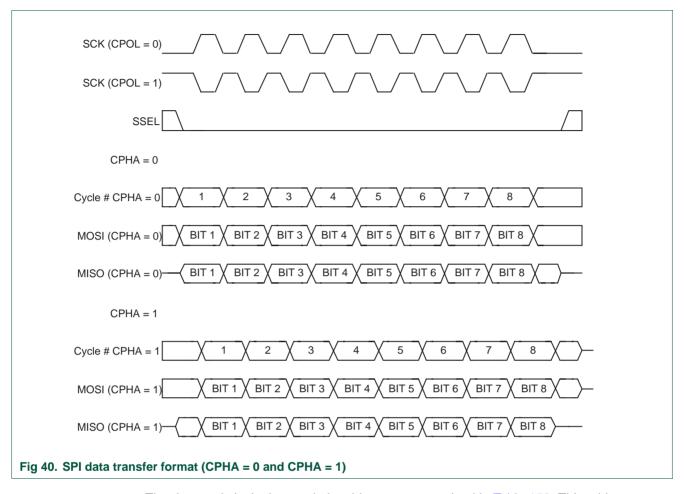

The data and clock phase relationships are summarized in <u>Table 153</u>. This table summarizes the following for each setting of CPOL and CPHA.

- · When the first data bit is driven
- · When all other data bits are driven
- · When data is sampled

Table 153: SPI data to clock phase relationship

CPOL and CPHA settings	First data driven	Other data driven	Data sampled
CPOL = 0, CPHA = 0	Prior to first SCK rising edge	SCK falling edge	SCK rising edge
CPOL = 0, CPHA = 1	First SCK rising edge	SCK rising edge	SCK falling edge
CPOL = 1, CPHA = 0	Prior to first SCK falling edge	SCK rising edge	SCK falling edge
CPOL = 1, CPHA = 1	First SCK falling edge	SCK falling edge	SCK rising edge

The definition of when an 8 bit transfer starts and stops is dependent on whether a device is a master or a slave, and the setting of the CPHA variable.

When a device is a master, the start of a transfer is indicated by the master having a byte of data that is ready to be transmitted. At this point, the master can activate the clock, and begin the transfer. The transfer ends when the last clock cycle of the transfer is complete.

When a device is a slave, and CPHA is set to 0, the transfer starts when the SSEL signal goes active, and ends when SSEL goes inactive. When a device is a slave, and CPHA is set to 1, the transfer starts on the first clock edge when the slave is selected, and ends on the last clock edge where data is sampled.

12.2.3 General information

Volume 1

There are four registers that control the SPI peripheral. They are described in detail in Section 12.4 "Register description" on page 175.

The SPI control register contains a number of programmable bits used to control the function of the SPI block. The settings for this register must be set up prior to a given data transfer taking place.

The SPI status register contains read only bits that are used to monitor the status of the SPI interface, including normal functions, and exception conditions. The primary purpose of this register is to detect completion of a data transfer. This is indicated by the SPIF bit. The remaining bits in the register are exception condition indicators. These exceptions will be described later in this section.

The SPI data register is used to provide the transmit and receive data bytes. An internal shift register in the SPI block logic is used for the actual transmission and reception of the serial data. Data is written to the SPI data register for the transmit case. There is no buffer between the data register and the internal shift register. A write to the data register goes directly into the internal shift register. Therefore, data should only be written to this register when a transmit is not currently in progress. Read data is buffered. When a transfer is complete, the receive data is transferred to a single byte data buffer, where it is later read. A read of the SPI data register returns the value of the read data buffer.

The SPI clock counter register controls the clock rate when the SPI block is in master mode. This needs to be set prior to a transfer taking place, when the SPI block is a master. This register has no function when the SPI block is a slave.

The I/Os for this implementation of SPI are standard CMOS I/Os. The open drain SPI option is not implemented in this design. When a device is set up to be a slave, its I/Os are only active when it is selected by the SSEL signal being active.

12.2.4 Master operation

The following sequence describes how one should process a data transfer with the SPI block when it is set up to be the master. This process assumes that any prior data transfer has already completed.

- 1. Set the SPI clock counter register to the desired clock rate.
- 2. Set the SPI control register to the desired settings.
- 3. Write the data to transmitted to the SPI data register. This write starts the SPI data transfer.
- 4. Wait for the SPIF bit in the SPI status register to be set to 1. The SPIF bit will be set after the last cycle of the SPI data transfer.
- 5. Read the SPI status register.
- 6. Read the received data from the SPI data register (optional).
- 7. Go to step 3 if more data is required to transmit.

Note that a read or write of the SPI data register is required in order to clear the SPIF status bit. Therefore, if the optional read of the SPI data register does not take place, a write to this register is required in order to clear the SPIF status bit.

12.2.5 Slave operation

Volume 1

The following sequence describes how one should process a data transfer with the SPI block when it is set up to be a slave. This process assumes that any prior data transfer has already completed. It is required that the system clock driving the SPI logic be at least 8X faster than the SPI.

- 1. Set the SPI control register to the desired settings.
- 2. Write the data to transmitted to the SPI data register (optional). Note that this can only be done when a slave SPI transfer is not in progress.
- 3. Wait for the SPIF bit in the SPI status register to be set to 1. The SPIF bit will be set after the last sampling clock edge of the SPI data transfer.
- 4. Read the SPI status register.
- 5. Read the received data from the SPI data register (optional).
- 6. Go to step 2 if more data is required to transmit.

Note that a read or write of the SPI data register is required in order to clear the SPIF status bit. Therefore, at least one of the optional reads or writes of the SPI data register must take place, in order to clear the SPIF status bit.

12.2.6 Exception conditions

12.2.7 Read Overrun

A read overrun occurs when the SPI block internal read buffer contains data that has not been read by the processor, and a new transfer has completed. The read buffer containing valid data is indicated by the SPIF bit in the status register being active. When a transfer completes, the SPI block needs to move the received data to the read buffer. If the SPIF bit is active (the read buffer is full), the new receive data will be lost, and the read overrun (ROVR) bit in the status register will be activated.

12.2.8 Write Collision

As stated previously, there is no write buffer between the SPI block bus interface, and the internal shift register. As a result, data must not be written to the SPI data register when a SPI data transfer is currently in progress. The time frame where data cannot be written to the SPI data register is from when the transfer starts, until after the status register has been read when the SPIF status is active. If the SPI data register is written in this time frame, the write data will be lost, and the write collision (WCOL) bit in the status register will be activated.

12.2.9 Mode Fault

The SSEL signal must always be inactive when the SPI block is a master. If the SSEL signal goes active, when the SPI block is a master, this indicates another master has selected the device to be a slave. This condition is known as a mode fault. When a mode fault is detected, the mode fault (MODF) bit in the status register will be activated, the SPI signal drivers will be de-activated, and the SPI mode will be changed to be a slave.

12.2.10 Slave Abort

A slave transfer is considered to be aborted, if the SSEL signal goes inactive before the transfer is complete. In the event of a slave abort, the transmit and receive data for the transfer that was in progress are lost, and the slave abort (ABRT) bit in the status register will be activated.

12.3 Pin description

Volume 1

Table 154: SPI pin description

Pin Name	Туре	Pin Description
SCK0	Input/Output	Serial Clock. The SPI is a clock signal used to synchronize the transfer of data across the SPI interface. The SPI is always driven by the master and received by the slave. The clock is programmable to be active high or active low. The SPI is only active during a data transfer. Any other time, it is either in its inactive state, or tri-stated.
SSEL0	Input	Slave Select. The SPI slave select signal is an active low signal that indicates which slave is currently selected to participate in a data transfer. Each slave has its own unique slave select signal input. The SSEL must be low before data transactions begin and normally stays low for the duration of the transaction. If the SSEL signal goes high any time during a data transfer, the transfer is considered to be aborted. In this event, the slave returns to idle, and any data that was received is thrown away. There are no other indications of this exception. This signal is not directly driven by the master. It could be driven by a simple general purpose I/O under software control.
		On the LPC2141/2/4/6/8 (unlike earlier Philips ARM devices) the SSEL0 pin can be used for a different function when the SPI0 interface is only used in Master mode. For example, pin hosting the SSEL0 function can be configured as an output digital GPIO pin and used to select one of the SPI0 slaves.
MISO0	Input/Output	Master In Slave Out. The MISO signal is a unidirectional signal used to transfer serial data from the slave to the master. When a device is a slave, serial data is output on this signal. When a device is a master, serial data is input on this signal. When a slave device is not selected, the slave drives the signal high impedance.
MOSI0	Input/Output	Master Out Slave In. The MOSI signal is a unidirectional signal used to transfer serial data from the master to the slave. When a device is a master, serial data is output on this signal. When a device is a slave, serial data is input on this signal.

12.4 Register description

The SPI contains 5 registers as shown in <u>Table 155</u>. All registers are byte, half word and word accessible.

Table 155: SPI register map

Volume 1

Name	Description	Access	Reset value[1]	Address
S0SPCR	SPI Control Register. This register controls the operation of the SPI.	R/W	0x00	0xE002 0000
S0SPSR	SPI Status Register. This register shows the status of the SPI.	RO	0x00	0xE002 0004
SOSPDR	SPI Data Register. This bi-directional register provides the transmit and receive data for the SPI. Transmit data is provided to the SPI0 by writing to this register. Data received by the SPI0 can be read from this register.	R/W	0x00	0xE002 0008
S0SPCCR	SPI Clock Counter Register. This register controls the frequency of a master's SCK0.	R/W	0x00	0xE002 000C
S0SPINT	SPI Interrupt Flag. This register contains the interrupt flag for the SPI interface.	R/W	0x00	0xE002 001C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

12.4.1 SPI Control Register (S0SPCR - 0xE002 0000)

The SOSPCR register controls the operation of the SPI0 as per the configuration bits setting.

Table 156: SPI Control Register (S0SPCR - address 0xE002 0000) bit description

Bit	Symbol	Value	Description	Reset value
1:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	BitEnable	0	The SPI controller sends and receives 8 bits of data per transfer.	0
		1	The SPI controller sends and receives the number of bits selected by bits 11:8.	
3	СРНА		Clock phase control determines the relationship between the data and the clock on SPI transfers, and controls when a slave transfer is defined as starting and ending.	0
		0	Data is sampled on the first clock edge of SCK. A transfer starts and ends with activation and deactivation of the SSEL signal.	
		1	Data is sampled on the second clock edge of the SCK. A transfer starts with the first clock edge, and ends with the last sampling edge when the SSEL signal is active.	
4	CPOL		Clock polarity control.	0
		0	SCK is active high.	_
		1	SCK is active low.	
5	MSTR		Master mode select.	0
		0	The SPI operates in Slave mode.	_
		1	The SPI operates in Master mode.	

Volume 1

Table 156: SPI Control Register (S0SPCR - address 0xE002 0000) bit description

Bit	Symbol	Value	Description	Reset value
6 LSBF			LSB First controls which direction each byte is shifted when transferred.	0
		0	SPI data is transferred MSB (bit 7) first.	
		1	SPI data is transferred LSB (bit 0) first.	_
7	SPIE		Serial peripheral interrupt enable.	0
		0	SPI interrupts are inhibited.	
		1	A hardware interrupt is generated each time the SPIF or MODF bits are activated.	_
11:8	BITS		When bit 2 of this register is 1, this field controls the number of bits per transfer:	0000
		1000	8 bits per transfer	_
		1001	9 bits per transfer	_
		1010	10 bits per transfer	_
		1011	11 bits per transfer	_
		1100	12 bits per transfer	_
		1101	13 bits per transfer	_
		1110	14 bits per transfer	_
		1111	15 bits per transfer	_
		0000	16 bits per transfer	_
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.4.2 SPI Status Register (S0SPSR - 0xE002 0004)

The S0SPSR register controls the operation of the SPI0 as per the configuration bits setting.

Table 157: SPI Status Register (S0SPSR - address 0xE002 0004) bit description

Bit	Symbol	Description	Reset value
2:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	ABRT	Slave abort. When 1, this bit indicates that a slave abort has occurred. This bit is cleared by reading this register.	0
4	MODF	Mode fault. when 1, this bit indicates that a Mode fault error has occurred. This bit is cleared by reading this register, then writing the SPI0 control register.	0

Table 157: SPI Status Register (S0SPSR - address 0xE002 0004) bit description

Bit	Symbol	Description	Reset value
5	ROVR	Read overrun. When 1, this bit indicates that a read overrun has occurred. This bit is cleared by reading this register.	0
6	WCOL	Write collision. When 1, this bit indicates that a write collision has occurred. This bit is cleared by reading this register, then accessing the SPI data register.	0
7	SPIF	SPI transfer complete flag. When 1, this bit indicates when a SPI data transfer is complete. When a master, this bit is set at the end of the last cycle of the transfer. When a slave, this bit is set on the last data sampling edge of the SCK. This bit is cleared by first reading this register, then accessing the SPI data register. Note: this is not the SPI interrupt flag. This flag is found in the SPINT register.	0

12.4.3 SPI Data Register (S0SPDR - 0xE002 0008)

Volume 1

This bi-directional data register provides the transmit and receive data for the SPI. Transmit data is provided to the SPI by writing to this register. Data received by the SPI can be read from this register. When a master, a write to this register will start a SPI data transfer. Writes to this register will be blocked from when a data transfer starts to when the SPIF status bit is set, and the status register has not been read.

Table 158: SPI Data Register (S0SPDR - address 0xE002 0008) bit description

Bit	Symbol	Description	Reset value
7:0	DataLow	SPI Bi-directional data port.	0x00
or all of these bits contain the additional transmit and re		If bit 2 of the SPCR is 1 and bits 11:8 are other than 1000, some or all of these bits contain the additional transmit and receive bits. When less than 16 bits are selected, the more significant among these bits read as zeroes.	0x00

12.4.4 SPI Clock Counter Register (S0SPCCR - 0xE002 000C)

This register controls the frequency of a master's SCK. The register indicates the number of PCLK cycles that make up an SPI clock. The value of this register must always be an even number. As a result, bit 0 must always be 0. The value of the register must also always be greater than or equal to 8. Violations of this can result in unpredictable behavior.

Table 159: SPI Clock Counter Register (S0SPCCR - address 0xE002 000C) bit description

Bit	Symbol	Description	Reset value
7:0	Counter	SPI0 Clock counter setting.	0x00

The SPI0 rate may be calculated as: PCLK / SPCCR0 value. The PCLK rate is CCLK /VPB divider rate as determined by the VPBDIV register contents.

12.4.5 SPI Interrupt register (S0SPINT - 0xE002 001C)


This register contains the interrupt flag for the SPI0 interface.

Table 160: SPI Interrupt register (S0SPINT - address 0xE002 001C) bit description

Bit	Symbol	Description	Reset value
0	SPI Interrupt Flag	SPI interrupt flag. Set by the SPI interface to generate an interrupt. Cleared by writing a 1 to this bit.	0
		Note: this bit will be set once when SPIE = 1 and at least one of SPIF and WCOL bits is 1. However, only when the SPI Interrupt bit is set and SPI0 Interrupt is enabled in the VIC, SPI based interrupt can be processed by interrupt handling software.	
7:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

12.5 Architecture

The block diagram of the SPI solution implemented in SPI0 interface is shown in the Figure 41.

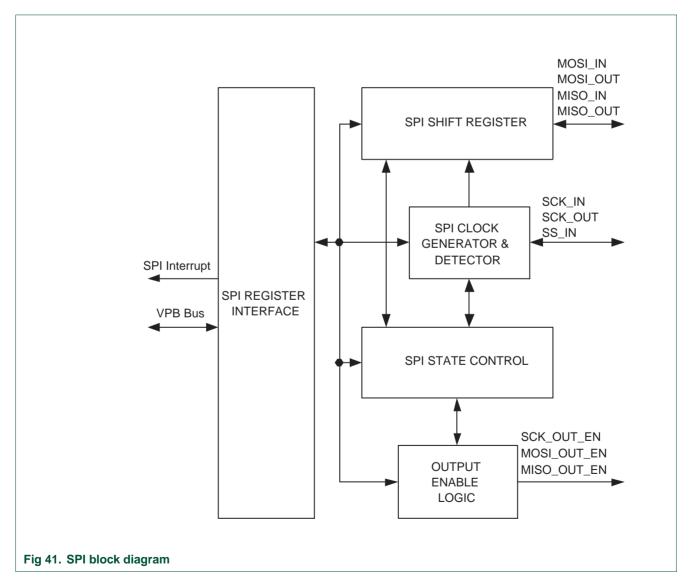



UM10139

Chapter 13: SSP Controller (SPI1)

Rev. 01 — 15 August 2005

User manual



- Compatible with Motorola SPI, 4-wire TI SSI, and National Semiconductor Microwire buses
- Synchronous Serial Communication
- Master or slave operation
- 8-frame FIFOs for both transmit and receive.
- 4 to 16 bits frame

13.2 Description

The SSP is a Synchronous Serial Port (SSP) controller capable of operation on a SPI, 4-wire SSI, or Microwire bus. It can interact with multiple masters and slaves on the bus. Only a single master and a single slave can communicate on the bus during a given data transfer. Data transfers are in principle full duplex, with frames of 4 to 16 bits of data flowing from the master to the slave and from the slave to the master. In practice it is often the case that only one of these data flows carries meaningful data.

Table 161: SSP pin descriptions

Pin Name	Туре	Interface pin name/function			Pin Description
riii Naiile		SPI	SSI	Microwire	riii bescription
SCK1	I/O	SCK	CLK	SK	Serial Clock. SCK/CLK/SK is a clock signal used to synchronize the transfer of data. It is driven by the master and received by the slave. When SPI interface is used the clock is programmable to be active high or active low, otherwise it is always active high. SCK1 only switches during a data transfer. Any other time, the SSP either holds it in its inactive state, or does not drive it (leaves it in high impedance state).



Table 161: SSP pin descriptions

Din Name	Tuno	Interface p	in name/fun	ction	Din Deceription
Pin Name	Туре	SPI	SSI	Microwire	Pin Description
SSEL1	I/O	SSEL	FS	CS	Slave Select/Frame Sync/Chip Select. When the SSP is a bus master, it drives this signal from shortly before the start of serial data, to shortly after the end of serial data, to signify a data transfer as appropriate for the selected bus and mode. When the SSP is a bus slave, this signal qualifies the presence of data from the Master, according to the protocol in use. When there is just one bus master and one bus slave, the Frame Sync or Slave Select signal from the Master can be connected directly to the slave's corresponding input. When there is more than one slave on the bus, further qualification of their Frame Select/Slave Select inputs will typically be necessary to prevent more than one slave from responding to a transfer.
MISO1	I/O	MISO	DR(M) DX(S)	SI(M) SO(S)	Master In Slave Out. The MISO signal transfers serial data from the slave to the master. When the SSP is a slave, serial data is output on this signal. When the SSP is a master, it clocks in serial data from this signal. When the SSP is a slave and is not selected by SSEL, it does not drive this signal (leaves it in high impedance state).
MOSI1	I/O	MOSI	DX(M) DR(S)	SO(M) SI(S)	Master Out Slave In. The MOSI signal transfers serial data from the master to the slave. When the SSP is a master, it outputs serial data on this signal. When the SSP is a slave, it clocks in serial data from this signal.

13.3 Bus description

13.3.1 Texas Instruments Synchronous Serial (SSI) frame format

<u>Figure 42</u> shows the 4-wire Texas Instruments synchronous serial frame format supported by the SSP module.

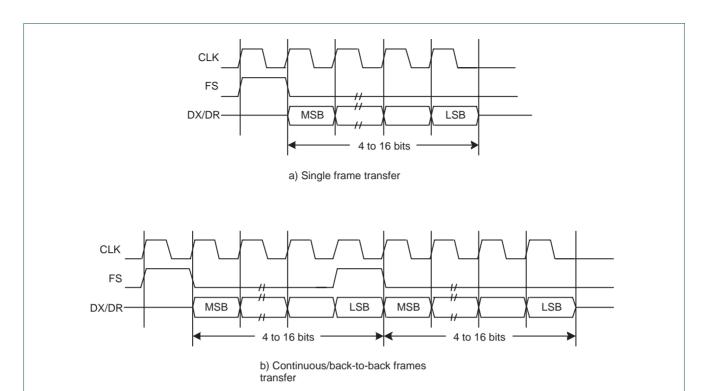


Fig 42. Texas Instruments synchronous serial frame format: a) single and b) continuous/back-to-back two frames transfer

For device configured as a master in this mode, CLK and FS are forced LOW, and the transmit data line DX is tristated whenever the SSP is idle. Once the bottom entry of the transmit FIFO contains data, FS is pulsed HIGH for one CLK period. The value to be transmitted is also transferred from the transmit FIFO to the serial shift register of the transmit logic. On the next rising edge of CLK, the MSB of the 4 to 16-bit data frame is shifted out on the DX pin. Likewise, the MSB of the received data is shifted onto the DR pin by the off-chip serial slave device.

Both the SSP and the off-chip serial slave device then clock each data bit into their serial shifter on the falling edge of each CLK. The received data is transferred from the serial shifter to the receive FIFO on the first rising edge of CLK after the LSB has been latched.

13.3.2 SPI frame format

The SPI interface is a four-wire interface where the SSEL signal behaves as a slave select. The main feature of the SPI format is that the inactive state and phase of the SCK signal are programmable through the CPOL and CPHA bits within the SSPCR0 control register.

13.3.3 Clock Polarity (CPOL) and Clock Phase (CPHA) control

When the CPOL clock polarity control bit is LOW, it produces a steady state low value on the SCK pin. If the CPOL clock polarity control bit is HIGH, a steady state high value is placed on the CLK pin when data is not being transferred.

Chapter 13: SSP


Volume 1

Chapter 13: SSP

The CPHA control bit selects the clock edge that captures data and allows it to change state. It has the most impact on the first bit transmitted by either allowing or not allowing a clock transition before the first data capture edge. When the CPHA phase control bit is LOW, data is captured on the first clock edge transition. If the CPHA clock phase control bit is HIGH, data is captured on the second clock edge transition.

13.3.4 SPI format with CPOL=0,CPHA=0

Single and continuous transmission signal sequences for SPI format with CPOL = 0, CPHA = 0 are shown in Figure 43.

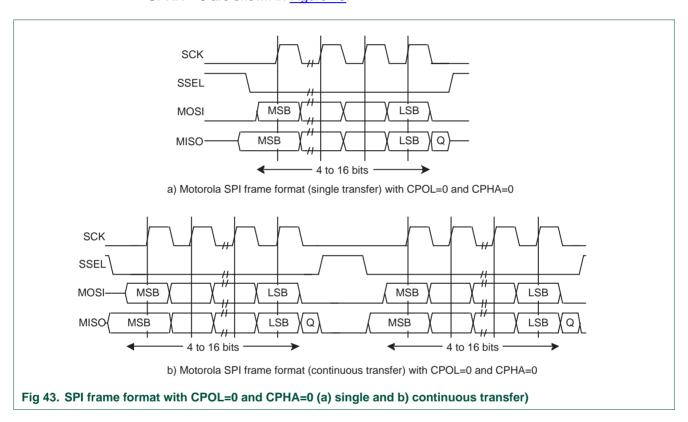

In this configuration, during idle periods:

- The CLK signal is forced LOW
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. This causes slave data to be enabled onto the MISO input line of the master. Master's MOSI is enabled.

One half SCK period later, valid master data is transferred to the MOSI pin. Now that both the master and slave data have been set, the SCK master clock pin goes HIGH after one further half SCK period.

The data is now captured on the rising and propagated on the falling edges of the SCK signal.


Volume 1 Chapter 13: SSP

In the case of a single word transmission, after all bits of the data word have been transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.

However, in the case of continuous back-to-back transmissions, the SSEL signal must be pulsed HIGH between each data word transfer. This is because the slave select pin freezes the data in its serial peripheral register and does not allow it to be altered if the CPHA bit is logic zero. Therefore the master device must raise the SSEL pin of the slave device between each data transfer to enable the serial peripheral data write. On completion of the continuous transfer, the SSEL pin is returned to its idle state one SCK period after the last bit has been captured.

13.3.5 SPI format with CPOL=0,CPHA=1

The transfer signal sequence for SPI format with CPOL = 0, CPHA = 1 is shown in Figure 44, which covers both single and continuous transfers.

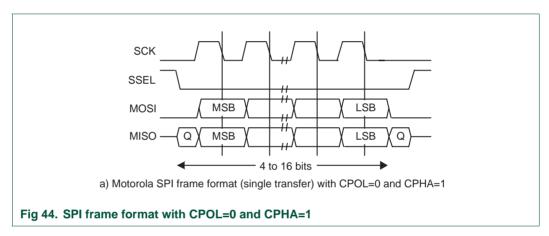

In this configuration, during idle periods:

- The CLK signal is forced LOW
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. Master's MOSI pin is enabled. After a further one half SCK period, both master and slave valid data is enabled onto their respective transmission lines. At the same time, the SCK is enabled with a rising edge transition.

Data is then captured on the falling edges and propagated on the rising edges of the SCK signal.

In the case of a single word transfer, after all bits have been transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.


For continuous back-to-back transfers, the SSEL pin is held LOW between successive data words and termination is the same as that of the single word transfer.

Volume 1

Chapter 13: SSP

13.3.6 SPI format with CPOL = 1,CPHA = 0

Single and continuous transmission signal sequences for SPI format with CPOL=1, CPHA=0 are shown in Figure 45.

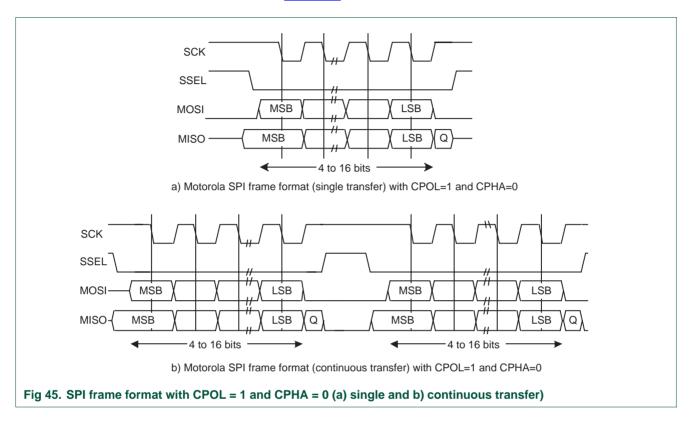

In this configuration, during idle periods:

- The CLK signal is forced HIGH
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance

If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW, which causes slave data to be immediately transferred onto the MISO line of the master. Master's MOSI pin is enabled.

One half period later, valid master data is transferred to the MOSI line. Now that both the master and slave data have been set, the SCK master clock pin becomes LOW after one further half SCK period. This means that data is captured on the falling edges and be propagated on the rising edges of the SCK signal.

In the case of a single word transmission, after all bits of the data word are transferred, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured.


However, in the case of continuous back-to-back transmissions, the SSEL signal must be pulsed HIGH between each data word transfer. This is because the slave select pin freezes the data in its serial peripheral register and does not allow it to be altered if the CPHA bit is logic zero. Therefore the master device must raise the SSEL pin of the slave

device between each data transfer to enable the serial peripheral data write. On completion of the continuous transfer, the SSEL pin is returned to its idle state one SCK period after the last bit has been captured.

13.3.7 SPI format with CPOL = 1,CPHA = 1

Volume 1

The transfer signal sequence for SPI format with CPOL = 1, CPHA = 1 is shown in Figure 46, which covers both single and continuous transfers.

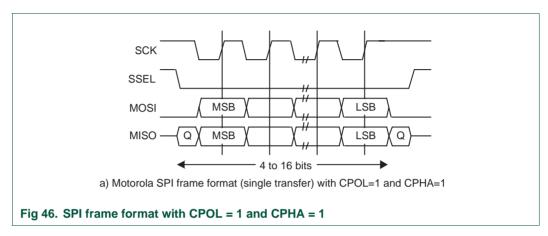

In this configuration, during idle periods:

- The CLK signal is forced HIGH
- SSEL is forced HIGH
- The transmit MOSI/MISO pad is in high impedance


If the SSP is enabled and there is valid data within the transmit FIFO, the start of transmission is signified by the SSEL master signal being driven LOW. Master's MOSI is enabled. After a further one half SCK period, both master and slave data are enabled onto their respective transmission lines. At the same time, the SCK is enabled with a falling edge transition. Data is then captured on the rising edges and propagated on the falling edges of the SCK signal.

After all bits have been transferred, in the case of a single word transmission, the SSEL line is returned to its idle HIGH state one SCK period after the last bit has been captured. For continuous back-to-back transmissions, the SSEL pins remains in its active LOW state, until the final bit of the last word has been captured, and then returns to its idle state as described above. In general, for continuous back-to-back transfers the SSEL pin is held LOW between successive data words and termination is the same as that of the single word transfer.

13.3.8 Semiconductor Microwire frame format

<u>Figure 47</u> shows the Microwire frame format for a single frame. Figure 44 shows the same format when back-to-back frames are transmitted.

Chapter 13: SSP

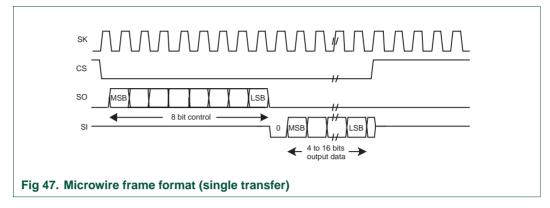

Microwire format is very similar to SPI format, except that transmission is half-duplex instead of full-duplex, using a master-slave message passing technique. Each serial transmission begins with an 8-bit control word that is transmitted from the SSP to the off-chip slave device. During this transmission, no incoming data is received by the SSP. After the message has been sent, the off-chip slave decodes it and, after waiting one serial clock after the last bit of the 8-bit control message has been sent, responds with the required data. The returned data is 4 to 16 bits in length, making the total frame length anywhere from 13 to 25 bits.

In this configuration, during idle periods:

- The SK signal is forced LOW
- CS is forced HIGH
- The transmit data line SO is arbitrarily forced LOW

A transmission is triggered by writing a control byte to the transmit FIFO. The falling edge of CS causes the value contained in the bottom entry of the transmit FIFO to be transferred to the serial shift register of the transmit logic, and the MSB of the 8-bit control frame to be shifted out onto the SO pin. CS remains LOW for the duration of the frame transmission. The SI pin remains tristated during this transmission.

The off-chip serial slave device latches each control bit into its serial shifter on the rising edge of each SK. After the last bit is latched by the slave device, the control byte is decoded during a one clock wait-state, and the slave responds by transmitting data back to the SSP. Each bit is driven onto SI line on the falling edge of SK. The SSP in turn latches each bit on the rising edge of SK. At the end of the frame, for single transfers, the CS signal is pulled HIGH one clock period after the last bit has been latched in the receive serial shifter, that causes the data to be transferred to the receive FIFO.


Note: The off-chip slave device can tristate the receive line either on the falling edge of SK after the LSB has been latched by the receive shiftier, or when the CS pin goes HIGH.

For continuous transfers, data transmission begins and ends in the same manner as a single transfer. However, the CS line is continuously asserted (held LOW) and transmission of data occurs back to back. The control byte of the next frame follows directly after the LSB of the received data from the current frame. Each of the received values is transferred from the receive shifter on the falling edge SK, after the LSB of the frame has been latched into the SSP.

13.3.9 Setup and hold time requirements on CS with respect to SK in Microwire mode

In the Microwire mode, the SSP slave samples the first bit of receive data on the rising edge of SK after CS has gone LOW. Masters that drive a free-running SK must ensure that the CS signal has sufficient setup and hold margins with respect to the rising edge of SK.

<u>Figure 49</u> illustrates these setup and hold time requirements. With respect to the SK rising edge on which the first bit of receive data is to be sampled by the SSP slave, CS must have a setup of at least two times the period of SK on which the SSP operates. With respect to the SK rising edge previous to this edge, CS must have a hold of at least one SK period.

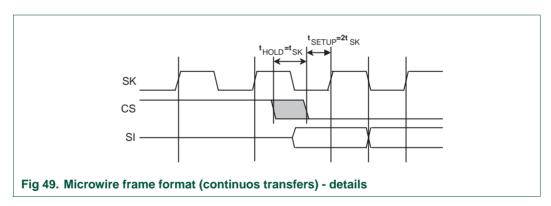

13.4 Register description

Volume 1

The SSP contains 9 registers as shown in <u>Table 162</u>. All registers are byte, half word and word accessible.

Chapter 13: SSP

Table 162: SSP register map

Name	Description	Access	Reset value[1]	Address
SSPCR0	Control Register 0. Selects the serial clock rate, bus type, and data size.	R/W	0x0000	0xE006 8000
SSPCR1	Control Register 1. Selects master/slave and other modes.	R/W	0x00	0xE006 8004
SSPDR	Data Register. Writes fill the transmit FIFO, and reads empty the receive FIFO.	R/W	0x0000	0xE006 8008
SSPSR	Status Register	RO	0x03	0xE006 800C
SSPCPSR	Clock Prescale Register	R/W	0x00	0xE006 8010
SSPIMSC	Interrupt Mask Set and Clear Register	R/W	0x00	0xE006 8014
SSPRIS	Raw Interrupt Status Register	R/W	0x04	0xE006 8018
SSPMIS	Masked Interrupt Status Register	RO	0x00	0xE006 801C
SSPICR	SSPICR Interrupt Clear Register	WO	NA	0xE006 8020

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

13.4.1 SSP Control Register 0 (SSPCR0 - 0xE006 8000)

This register controls the basic operation of the SSP controller.

Table 163: SSP Control Register 0 (SSPCR0 - address 0xE006 8000) bit description

Bit	Symbol	Value	Description	Reset value
3:0	DSS		Data Size Select. This field controls the number of bits transferred in each frame. Values 0000-0010 are not supported and should not be used.	0000
		0011	4 bit transfer	
		0100	5 bit transfer	
		0101	6 bit transfer	
		0110	7 bit transfer	
		0111	8 bit transfer	
		1000	9 bit transfer	
		1001	10 bit transfer	
		1010	11 bit transfer	
		1011	12 bit transfer	
		1100	13 bit transfer	
		1101	14 bit transfer	
		1110	15 bit transfer	
		1111	16 bit transfer	
5:4	FRF		Frame Format.	00
		00	SPI	
		01	SSI	
		10	Microwire	
		11	This combination is not supported and should not be used.	

Table 163: SSP Control Register 0 (SSPCR0 - address 0xE006 8000) bit description

Bit	Symbol	Value	Description	Reset value
6	CPOL		Clock Out Polarity. This bit is only used in SPI mode.	0
		0	SSP controller captures serial data on the first clock transition of the frame, that is, the transition away from the inter-frame state of the clock line.	
		1	SSP controller captures serial data on the second clock transition of the frame, that is, the transition back to the inter-frame state of the clock line.	_
7	СРНА		Clock Out Phase. This bit is only used in SPI mode.	0
		0	SSP controller maintains the bus clock low between frames.	
		1	SSP controller maintains the bus clock high between frames.	_
15:8	SCR		Serial Clock Rate. The number of prescaler-output clocks per bit on the bus, minus one. Given that CPSDVR is the prescale divider, and the VPB clock PCLK clocks the prescaler, the bit frequency is PCLK / (CPSDVSR * [SCR+1]).	0x00

13.4.2 SSP Control Register 1 (SSPCR1 - 0xE006 8004)

This register controls certain aspects of the operation of the SSP controller.

Table 164: SSP Control Register 1 (SSPCR1 - address 0xE006 8004) bit description

Bit	Symbol	Value	Description	Reset value
0	LBM		Loop Back Mode.	0
		0	During normal operation.	
		1	Serial input is taken from the serial output (MOSI or MISO) rather than the serial input pin (MISO or MOSI respectively).	_
1	SSE		SSP Enable.	0
		0	The SSP controller is disabled.	
		1	The SSP controller will interact with other devices on the serial bus. Software should write the appropriate control information to the other SSP registers and interrupt controller registers, before setting this bit.	_
2	MS		Master/Slave Mode.This bit can only be written when the SSE bit is 0.	0
		0	The SSP controller acts as a master on the bus, driving the SCLK, MOSI, and SSEL lines and receiving the MISO line.	
		1	The SSP controller acts as a slave on the bus, driving MISO line and receiving SCLK, MOSI, and SSEL lines.	_
3	SOD		Slave Output Disable. This bit is relevant only in slave mode (MS = 1). If it is 1, this blocks this SSP controller from driving the transmit data line (MISO).	0
7:4	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.4.3 SSP Data Register (SSPDR - 0xE006 8008)

Volume 1

Software can write data to be transmitted to this register, and read data that has been received.

Table 165: SSP Data Register (SSPDR - address 0xE006 8008) bit description

		, ,	
Bit	Symbol	Description	Reset value
15:0	DATA	Write: software can write data to be sent in a future frame to this register whenever the TNF bit in the Status register is 1, indicating that the Tx FIFO is not full. If the Tx FIFO was previously empty and the SSP controller is not busy on the bus, transmission of the data will begin immediately. Otherwise the data written to this register will be sent as soon as all previous data has been sent (and received). If the data length is less than 16 bits, software must right-justify the data written to this register.	0x0000
		Read: software can read data from this register whenever the RNE bit in the Status register is 1, indicating that the Rx FIFO is not empty. When software reads this register, the SSP controller returns data from the least recent frame in the Rx FIFO. If the data length is less than 16 bits, the data is right-justified in this field with higher order bits filled with 0s.	

13.4.4 SSP Status Register (SSPSR - 0xE006 800C)

This read-only register reflects the current status of the SSP controller.

Table 166: SSP Status Register (SSPDR - address 0xE006 800C) bit description

Bit	Symbol	Description	Reset value
0	TFE	Transmit FIFO Empty. This bit is 1 is the Transmit FIFO is empty, 0 if not.	1
1	TNF	Transmit FIFO Not Full. This bit is 0 if the Tx FIFO is full, 1 if not.	1
2	RNE	Receive FIFO Not Empty. This bit is 0 if the Receive FIFO is empty, 1 if not.	0
3	RFF	Receive FIFO Full. This bit is 1 if the Receive FIFO is full, 0 if not.	0
4	BSY	Busy. This bit is 0 if the SSP controller is idle, or 1 if it is currently sending/receiving a frame and/or the Tx FIFO is not empty.	0
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.4.5 SSP Clock Prescale Register (SSPCPSR - 0xE006 8010)

This register controls the factor by which the Prescaler divides the VPB clock PCLK to yield the prescaler clock that is, in turn, divided by the SCR factor in SSPCR0, to determine the bit clock.

Table 167: SSP Clock Prescale Register (SSPCPSR - address 0xE006 8010) bit description

Bit	Symbol	Description	Reset value
7:0	CPSDVSR	This even value between 2 and 254, by which PCLK is divided to yield the prescaler output clock. Bit 0 always reads as 0.	0

Volume 1

Important: the SSPCPSR value must be properly initialized or the SSP controller will not be able to transmit data correctly. In case of an SSP operating in the master mode, the $CPSDVSR_{min} = 2$, while in case of the slave mode $CPSDVSR_{min} = 12$.

13.4.6 SSP Interrupt Mask Set/Clear register (SSPIMSC - 0xE006 8014)

This register controls whether each of the four possible interrupt conditions in the SSP controller are enabled. Note that ARM uses the word "masked" in the opposite sense from classic computer terminology, in which "masked" meant "disabled". ARM uses the word "masked" to mean "enabled". To avoid confusion we will not use the word "masked".

Table 168: SSP Interrupt Mask Set/Clear register (SSPIMSC - address 0xE006 8014) bit description

	•				
Bit	Symbol	Description	Reset value		
0	RORIM	Software should set this bit to enable interrupt when a Receive Overrun occurs, that is, when the Rx FIFO is full and another frame is completely received. The ARM spec implies that the preceding frame data is overwritten by the new frame data when this occurs.	0		
1	RTIM	Software should set this bit to enable interrupt when a Receive Timeout condition occurs. A Receive Timeout occurs when the Rx FIFO is not empty, and no new data has been received, nor has data been read from the FIFO, for 32 bit times.	0		
2	RXIM	Software should set this bit to enable interrupt when the Rx FIFO is at least half full.	0		
3	TXIM	Software should set this bit to enable interrupt when the Tx FIFO is at least half empty.	0		
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		

13.4.7 SSP Raw Interrupt Status register (SSPRIS - 0xE006 8018)

This read-only register contains a 1 for each interrupt condition that is asserted, regardless of whether or not the interrupt is enabled in the SSPIMSC.

Table 169: SSP Raw Interrupt Status register (SSPRIS - address 0xE006 8018) bit description

Bit	Symbol	Description	Reset value
0	RORRIS	This bit is 1 if another frame was completely received while the RxFIFO was full. The ARM spec implies that the preceding frame data is overwritten by the new frame data when this occurs.	0
1	RTRIS	This bit is 1 if when there is a Receive Timeout condition. Note that a Receive Timeout can be negated if further data is received.	0
2	RXRIS	This bit is 1 if the Rx FIFO is at least half full.	0
3	TXRIS	This bit is 1 if the Tx FIFO is at least half empty.	1
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Volume 1

Chapter 13: SSP

13.4.8 SSP Masked Interrupt register (SSPMIS - 0xE006 801C)

This read-only register contains a 1 for each interrupt condition that is asserted and enabled in the SSPIMSC. When an SSP interrupt occurs, the interrupt service routine should read this register to determine the cause(s) of the interrupt.

Table 170: SSP Masked Interrupt Status register (SSPMIS -address 0xE006 801C) bit description

Bit	Symbol	Description	Reset value
0	RORMIS	This bit is 1 if another frame was completely received while the RxFIFO was full, and this interrupt is enabled.	0
1	RTMIS	This bit is 1 when there is a Receive Timeout condition and this interrupt is enabled. Note that a Receive Timeout can be negated if further data is received.	0
2	RXMIS	This bit is 1 if the Rx FIFO is at least half full, and this interrupt is enabled.	0
3	TXMIS	This bit is 1 if the Tx FIFO is at least half empty, and this interrupt is enabled.	0
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

13.4.9 SSP Interrupt Clear Register (SSPICR - 0xE006 8020)

Software can write one or more one(s) to this write-only register, to clear the corresponding interrupt condition(s) in the SSP controller. Note that the other two interrupt conditions can be cleared by writing or reading the appropriate FIFO, or disabled by clearing the corresponding bit in SSPIMSC.

Table 171: SSP interrupt Clear Register (SSPICR - address 0xE006 8020) bit description

Bit	Symbol	Description	Reset value
0	RORIC	Writing a 1 to this bit clears the "frame was received when RxFIFO was full" interrupt.	NA
1	RTIC	Writing a 1 to this bit clears the Receive Timeout interrupt.	NA
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA



UM10139

Chapter 14: USB Device Controller

Rev. 01 — 15 August 2005

User manual



The USB is a 4 wire bus that supports communication between a host and a number (127 max.) of peripherals. The host controller allocates the USB bandwidth to attached devices through a token based protocol. The bus supports hot plugging, un-plugging and dynamic configuration of the devices. All transactions are initiated by the host controller.

The host schedules transactions in 1 ms frames. Each frame contains SoF marker and transactions that transfer data to/from device endpoints. Each device can have a maximum of 16 logical or 32 physical endpoints. There are 4 types of transfers defined or the endpoints. The control transfers are used to configure the device. The interrupt transfers are used for periodic data transfer. The bulk transfers are used when rate of transfer is not critical. The isochronous transfers have guaranteed delivery time but no error correction.

The device controller enables 12 Mb/s data exchange with a USB host controller. It consists of register interface, serial interface engine, endpoint buffer memory and DMA controller. The serial interface engine decodes the USB data stream and writes data to the appropriate end point buffer memory. The status of a completed USB transfer or error condition is indicated via status registers. An interrupt is also generated if enabled. The DMA controller when enabled transfers data between the endpoint buffer and the USB RAM.

Table 172: USB related acronyms, abbreviations and definitions used in this chapter

Acronym/abbreviation	Description
AHB	Advanced High-performance bus
ATLE	Auto Transfer Length Extraction
ATX	Analog Transceiver
DD	DMA Descriptor
DC	Device Core
DDP	DD Pointer
DMA	Direct Memory Access
EoP	End of Package
EP	End Point
FS	Full Speed
HREADY	When HIGH the HREADY signal indicates that a transfer has finished on the AHB bus. This signal may be driven LOW to extend a transfer.
LED	Light Emitting Diode
LS	Low Speed
MPS	Maximum Packet Size
PLL	Phase Locked Loop
RAM	Random Access Memory
SoF	Start of Frame
SIE	Serial Interface Engine

Table 172: USB related acronyms, abbreviations and definitions used in this chapter

Acronym/abbreviation	Description
SRAM	Synchronous RAM
UDCA	USB Device Communication Area
USB	Universal Serial Bus

14.2 Features

- Fully compliant with USB 2.0 Full Speed specification
- Supports 32 physical (16 logical) endpoints
- · Supports Control, Bulk, Interrupt and Isochronous endpoints
- Scalable realization of endpoints at run time
- Endpoint Maximum packet size selection (up to USB maximum specification) by software at run time
- RAM message buffer size based on endpoint realization and maximum packet size
- Supports Soft Connect[™] feature and Good Link[™] LED indicator
- Supports bus-powered capability with low suspend current
- Support DMA transfer with the DMA RAM of 8 kB on all non-control endpoints (LPC2146/8 only)
- One Duplex DMA channel serves all endpoints (LPC2146/8 only)
- Allows dynamic switching between CPU controlled and DMA modes (available on LPC2146/8 only)
- Double buffer implementation for Bulk & Isochronous endpoints

14.3 Fixed Endpoint Configuration

Table 173: Pre-Fixed Endpoint Configuration

Logical endpoint	Physical endpoint	Endpoint type	Direction	Packet size (bytes)	Double buffer
0	0	Control	Out	8, 16, 32, 64	No
0	1	Control	In	8, 16, 32, 64	No
1	2	Interrupt	Out	1 to 64	No
1	3	Interrupt	In	1 to 64	No
2	4	Bulk	Out	8, 16, 32, 64	Yes
2	5	Bulk	In	8, 16, 32, 64	Yes
3	6	Isochronous	Out	1 to 1023	Yes
3	7	Isochronous	In	1 to 1023	Yes
4	8	Interrupt	Out	1 to 64	No
4	9	Interrupt	In	1 to 64	No
5	10	Bulk	Out	8, 16, 32, 64	Yes
5	11	Bulk	In	8, 16, 32, 64	Yes
6	12	Isochronous	Out	1 to 1023	Yes
6	13	Isochronous	In	1 to 1023	Yes

9397 750 XXXXX

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

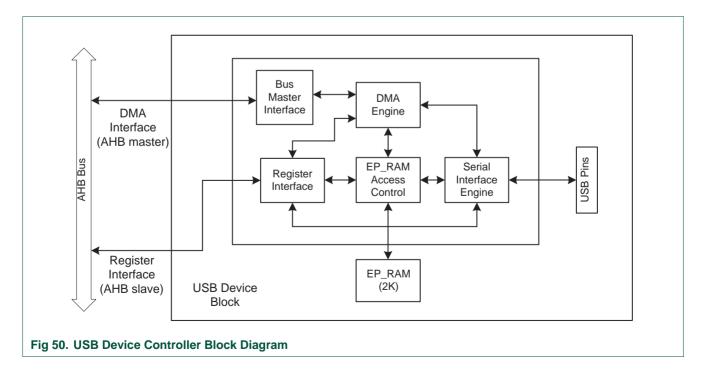


Table 173:	Pre-Fixed	Endpoint	Configuration
------------	------------------	-----------------	---------------

Logical endpoint	Physical endpoint	Endpoint type	Direction	Packet size (bytes)	Double buffer
7	14	Interrupt	Out	1 to 64	No
7	15	Interrupt	In	1 to 64	No
8	16	Bulk	Out	8, 16, 32, 64	Yes
8	17	Bulk	In	8, 16, 32, 64	Yes
9	18	Isochronous	Out	1 to 1023	Yes
9	19	Isochronous	In	1 to 1023	Yes
10	20	Interrupt	Out	1 to 64	No
10	21	Interrupt	In	1 to 64	No
11	22	Bulk	Out	8, 16, 32, 64	Yes
11	23	Bulk	ln	8, 16, 32, 64	Yes
12	24	Isochronous	Out	1 to 1023	Yes
12	25	Isochronous	In	1 to 1023	Yes
13	26	Interrupt	Out	1 to 64	No
13	27	Interrupt	In	1 to 64	No
14	28	Bulk	Out	8, 16, 32, 64	Yes
14	29	Bulk	In	8, 16, 32, 64	Yes
15	30	Bulk	Out	8, 16, 32, 64	Yes
15	31	Bulk	In	8, 16, 32, 64	Yes

14.4 Architecture

The architecture of the USB device controller is shown below in the block diagram.



Chapter 14: USB Device Controller

14.5 Data Flow

USB is a host controlled protocol, i.e., irrespective of whether the data transfer is from the host to the device or device to the host, transfer sequence is always initiated by the host. During data transfer from device to the host, the host sends an IN token to the device, following which the device responds with the data.

14.5.1 Data Flow from USB Host to the Device

The USB device protocol engine receives the serial data from the ATX and converts it into a parallel data stream. The parallel data is sent to the RAM interface which in turn transfers the data to the endpoint buffer. The endpoint buffer is implemented as an SRAM based FIFO. Each realized endpoint will have a reserved space in the RAM. So the total RAM space required depends on the number of realized endpoints, maximum packet size of the endpoint and whether the endpoint supports double buffering. Data is written to the buffers with the header showing how many bytes are valid in the buffer.

For non-isochronous endpoints, when a full data packet is received without any errors, the endpoint generates a request for data transfer from its FIFO by generating an interrupt to the system.

Isochronous endpoint will have one packet of data to be transferred in every frame. So the data transfer has to be synchronized to the USB frame rather than packet arrival. So, for every 1 ms there will be an interrupt to the system.

The data transfer follows the little endian format. The first byte received from the USB bus will be available in the least significant byte of the receive data register.

14.5.2 Data Flow from Device to the Host

For data transfer from an endpoint to the host, the host will send an IN token to that endpoint. If the FIFO corresponding to the endpoint is empty, the device will return a NAK and will raise an interrupt to the system. On this interrupt the CPU fills a packet of data in the endpoint FIFO. The next IN token that comes after filling this packet will transfer this packet to the host.

The data transfer follows the little endian format. The first byte sent on the USB bus will be the least significant byte of the transmit data register.

14.5.3 Slave Mode Transfer

Slave data transfer is done through the interrupt issued from the USB device to the CPU.

Reception of valid (error-free) data packet in any of the OUT non-isochronous endpoint buffer generates an interrupt. Upon receiving the interrupt, the software can read the data using receive length and data registers. When there is no empty buffer (for a given OUT non-isochronous endpoint), any data arrival generates an interrupt only if Interrupt on NAK feature for that endpoint type is enabled and the existing interrupt is cleared. For OUT isochronous endpoints, the data will always be written irrespective of the buffer status. There will be no interrupt generated specific to OUT isochronous endpoints other than the frame interrupt.

Chapter 14: USB Device Controller

Similarly, when a packet is successfully transferred to the host from any of IN non-isochronous endpoint buffer, an interrupt is generated. When there is no data available in any of the buffers (for a given IN non-isochronous endpoint), a data request generates an interrupt only if Interrupt on NAK feature for that endpoint type is enabled and existing interrupt is cleared. Upon receiving the interrupt, the software can load any data to be sent using transmit length and data registers. For IN isochronous endpoints, the data available in the buffer will be sent only if the buffer is validated; otherwise, an empty packet will be sent. Like OUT isochronous endpoints, there will be no interrupt generated specific to IN isochronous endpoints other than the frame interrupt.

14.5.4 DMA Mode Transfer (LPC2146/8 only)

Under DMA mode operation the USB device will act as a master on the AHB bus and transfers the data directly from the memory to the endpoint buffer and vice versa. A duplex channel DMA acts as a AHB master on the bus.

The endpoint 0 of USB (default control endpoint) will receive the setup packet. It will not be efficient to transfer this data to the USB RAM since the CPU has to decode this command and respond back to the host. So, this transfer will happen in the slave mode only.

For each Isochronous endpoint, one packet transfer happens every frame. Hence, the DMA transfer has to be synchronized to the frame interrupt.

The DMA engine also support Auto Transfer Length Extraction (ATLE) mode for bulk transfers. In this mode the DMA engine recovers the transfer size from the incoming packet stream.

14.6 Interfaces

14.6.1 Software Interface

The software interface of the USB device block consists of a register view and the format definitions for the endpoint descriptors. These two aspects are addressed in the following sections.

14.6.2 Register Map

The following registers are located in the AHB clock domain. The minimum AHB clock frequency should be 18 MHz. They can be accessed directly by the CPU. All registers are 32 bit wide and aligned in the word address boundaries.

USB slave mode registers are located in the address region 0xE009 0000 to 0xE009 004C. All unused address in this region reads "DEADABBA".

DMA related registers are located in the address region 0xE009 0050 to 0xE009 00FC. All unused address in this region reads invalid data.

Chapter 14: USB Device Controller



Table 174: USB device register map

Name	Description	Access	Reset value[1]	Address
Device interrupt reg		AUUUSS	NOSCE VALUE	Audicad
USBIntSt	USB Interrupt Status	R/W	0x8000 0000	0xE01F C1C0
USBDevIntSt	USB Device Interrupt Status	RO	0x0000 0010	0xE009 0000
USBDevIntEn	USB Device Interrupt Enable	R/W	0x0000 0010	0xE009 0004
USBDevIntClr	USB Device Interrupt Clear	WO	0x0000 0000	0xE009 0008
USBDevIntSet	USB Device Interrupt Set	WO	0x0000 0000	0xE009 000C
USBDevIntPri	USB Device Interrupt Priority	WO	0x00	0xE009 002C
Endpoint interrupt re			- OAGO	0.2000 0020
USBEpIntSt	USB Endpoint Interrupt Status	RO	0x0000 0000	0xE009 0030
USBEpIntEn	USB Endpoint Interrupt Enable	R/W	0x0000 0000	0xE009 0034
USBEpIntClr	USB Endpoint Interrupt Clear	WO	0x0000 0000	0xE009 0038
USBEpIntSet	USB Endpoint Interrupt Set	WO	0x0000 0000	0xE009 003C
USBEpIntPri	USB Endpoint Priority	WO	0x0000 0000	0xE009 0040
Endpoint realization				
USBReEp	USB Realize Endpoint	R/W	0x0000 0003	0xE009 0044
USBEpInd	USB Endpoint Index	WO	0x0000 0000	0xE009 0048
USBMaxPSize	USB MaxPacketSize	R/W	0x0000 00008	0xE009 004C
USB transfer registe	ers			
USBRxData	USB Receive Data	RO	0x0000 0000	0xE009 0018
USBRxPLen	USB Receive Packet Length	RO	0x0000 0000	0xE009 0020
USBTxData	USB Transmit Data	WO	0x0000 0000	0xE009 001C
USBTxPLen	USB Transmit Packet Length	WO	0x0000 0000	0xE009 0024
USBCtrl	USB Control	R/W	0x0000 0000	0xE009 0028
Command registers				
USBCmdCode	USB Command Code	WO	0x0000 0000	0xE009 0010
USBCmdData	USB Command Data	RO	0x0000 0000	0xE009 0014
DMA registers (LPC	2146/8 only)			
USBDMARSt	USB DMA Request Status	RO	0x0000 0000	0xE009 0050
USBDMARCIr	USB DMA Request Clear	WO	0x0000 0000	0xE009 0054
USBDMARSet	USB DMA Request Set	WO	0x0000 0000	0xE009 0058
USBUDCAH	USB UDCA Head	R/W	0x0000 0000	0xE009 0080
USBEpDMASt	USB Endpoint DMA Status	RO	0x0000 0000	0xE009 0084
USBEpDMAEn	USB Endpoint DMA Enable	WO	0x0000 0000	0xE009 0088
USBEpDMADis	USB Endpoint DMA Disable	WO	0x0000 0000	0xE009 008C
USBDMAIntSt	USB DMA Interrupt Status	RO	0x0000 0000	0xE009 0090
USBDMAIntEn	USB DMA Interrupt Enable	R/W	0x0000 0000	0xE009 0094
USBEoTIntSt	USB End of Transfer Interrupt Status	RO	0x0000 0000	0xE009 00A0
USBEoTIntClr	USB End of Transfer Interrupt Clear	WO	0x0000 0000	0xE009 00A4
USBEoTIntSet	USB End of Transfer Interrupt Set	WO	0x0000 0000	0xE009 00A8
USBNDDRIntSt	USB New DD Request Interrupt Status	RO	0x0000 0000	0xE009 00AC
USBNDDRIntClr	USB New DD Request Interrupt Clear	WO	0x0000 0000	0xE009 00B0
9397 750 XXXXX			© Koninklijke Philips Electroni	ics N.V. 2005. All rights reserve

Chapter 14: USB Device Controller

Table 174: USB device register map

Name	Description	Access	Reset value[1]	Address
USBNDDRIntSet	USB New DD Request Interrupt Set	WO	0x0000 0000	0xE009 00B4
USBSysErrIntSt	USB System Error Interrupt Status	RO	0x0000 0000	0xE009 00B8
USBSysErrIntClr	USB System Error Interrupt Clear	WO	0x0000 0000	0xE009 00BC
USBSysErrIntSet	USB System Error Interrupt Set	WO	0x0000 0000	0xE009 00C0

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

14.7 USB Device register definitions

14.7.1 USB Interrupt Status register (USBIntSt - 0xE01F C1C0)

The USB device has three interrupt output lines. The interrupts usb_int_req_lp and usb_int_req_hp facilitates transfer of data in slave mode. These two interrupt lines are provided to allow two different priority (high/low) levels in slave mode transfer. Each of the individual endpoint interrupts can be routed to either high priority or low priority levels using corresponding bits in the Endpoint Interrupt Priority register (Section 14.7.11). The interrupt level is triggered with active high polarity. The external interrupt generation takes place only if the necessary 'enable' bits are set in the Device Interrupt Enable register (Section 14.7.3). Otherwise, they will be registered only in the status registers. The usb_int_req_dma is raised when an end_of_transfer or a system error has occurred. DMA data transfer is not dependent on this interrupt.

The three interrupt output lines are ORed together to reduce the number of interrupt channels required for the USB device in the vectored interrupt controller. This register reflects the status of the each interrupt line. The USBIntSt is a read/write register.

Table 175: USB Interrupt Status register (USBIntSt - address 0xE01F C1C0) bit description

Bit	Symbol	Description	Reset value
0	USB_INT_REQ_LP	Low priority interrupt line status. This bit is read only.	0
1	USB_INT_REQ_HP	High priority interrupt line status. This bit is read only.	0
2	USB_INT_REQ_DMA	DMA interrupt line status. This bit is read only. (LPC2146/8 only)	0
7:3	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 14: USB Device Controller

Table 175: USB Interrupt Status register (USBIntSt - address 0xE01F C1C0) bit description

Bit	Symbol	Description	Reset value
8	USB_need_clock	USB need clock indicator. This bit is set to 1 when a USB activity/change of state on the USB data pins is detected, and it indicates that a USB PLL supplied clock of 48 MHz is needed. Once the USB_need_clock becomes one, it resets to zero 3 ms after the last frame has been received/sent. A change of this bit from 0 to 1 can wake up the microcontroller if an activity on the USB bus is selected to wake up the part from the Power-down mode (see Section 3.5.3 "Interrupt Wakeup register (INTWAKE - 0xE01F C144)" on page 22 for details). Also see Section 3.8.8 "PLL and Power-down mode" on page 32 and Section 3.9.2 "Power Control register (PCON - 0xE01F COCO)" on page 35 for considerations about the USB PLL and invoking the Power Down mode.	0
30:9	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
31	EN_USB_INTS	Enable all USB interrupts. When this bit is cleared the ORed output of the USB interrupt lines is not seen by the Vectored Interrupt Controller.	1

14.7.2 USB Device Interrupt Status register (USBDevIntSt - 0xE009 0000)

Interrupt status register holds the value of the interrupt. A 0 indicates no interrupt and 1 indicates the presence of the interrupt. The USBDevIntSt is a read only register.

Table 176: USB Device Interrupt Status register (USBDevIntSt - address 0xE009 0000) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	EPR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 177: USB Device Interrupt Status register (USBDevIntSt - address 0xE009 0000) bit description

Bit	Symbol	Description	Reset value
0	FRAME	The frame interrupt occurs every 1 ms. This is to be used in isochronous packet transfer.	0
1	EP_FAST	This is the fast interrupt transfer for the endpoint. If an Endpoint Interrupt Priority register bit is set, the endpoint interrupt will be routed to this bit.	0
2	EP_SLOW	This is the Slow interrupt transfer for the endpoint. If an Endpoint Interrupt Priority Register bit is not set, the endpoint interrupt will be routed to this bit.	0
3	DEV_STAT	Set when USB Bus reset, USB suspend change or Connect change event occurs. Refer to Section 14.9.6 "Set Device Status (Command: 0xFE, Data: write 1 byte)" on page 225.	0
4	CCEMTY	The command code register is empty (New command can be written).	1
5	CDFULL	Command data register is full (Data can be read now).	0

Chapter 14: USB Device Controller

Table 177: USB Device Interrupt Status register (USBDevIntSt - address 0xE009 0000) bit description

Bit	Symbol	Description	Reset value
6	RxENDPKT	The current packet in the FIFO is transferred to the CPU.	0
7	TxENDPKT	The number of data bytes transferred to the FIFO equals the number of bytes programmed in the TxPacket length register.	0
8	EP_RLZED	Endpoints realized. Set when Realize endpoint register or Maxpacket size register is updated.	0
9	ERR_INT	Error Interrupt. Any bus error interrupt from the USB device. Refer to Section 14.9.9 "Read Error Status (Command: 0xFB, Data: read 1 byte)" on page 227	0
31:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.7.3 USB Device Interrupt Enable register (USBDevIntEn - 0xE009 0004)

If the Interrupt Enable bit value is set, an interrupt is generated (on Fast or Slow Interrupt line) when the corresponding bit in the Device Interrupt Status register is set (Section 14.7.2). If it is not set, no external interrupt is generated but interrupt will still be held in the interrupt status register. All bits of this register are cleared after reset. The USBDevIntEn is a read/write register.

Table 178: USB Device Interrupt Enable register (USBDevIntEn - address 0xE009 0004) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-
Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	EPR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 179: USB Device Interrupt Enable register (USBDevIntEn - address 0xE009 0004) bit description

Bit	Symbol	Value	Description	Reset value
31:0 See		0	No external interrupt is generated.	0
	USBDevIntEn bit allocation table above	1	Enables an external interrupt to be generated (Fast or Slow) when the corresponding bit in the Device Interrupt Status register (Section 14.7.2) is set.	

14.7.4 USB Device Interrupt Clear register (USBDevIntClr - 0xE009 0008)

Setting a particular bit to 1 in this register causes the clearing of the interrupt by resetting the corresponding bit in the interrupt status register. Writing a 0 will not have any influence. The USBDevIntClr is a write only register.

Table 180: USB Device Interrupt Clear register (USBDevIntClr - address 0xE009 0008) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	-	-	-	-	-	-	-	-

9397 750 XXXXX

Chapter 14: USB Device Controller

Bit	23	22	21	20	19	18	17	16
Symbol	-	-	-	-	-	-	-	-
Bit	15	14	13	12	11	10	9	8
Symbol	-	-	-	-	-	-	EPR_INT	EP_RLZED
Bit	7	6	5	4	3	2	1	0
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME

Table 181: USB Device Interrupt Clear register (USBDevIntClr - address 0xE009 0008) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBDevIntCIr bit allocation table above	1	The corresponding bit in the Device Interrupt Status register (Section 14.7.2) is cleared.	

14.7.5 USB Device Interrupt Set register (USBDevIntSet - 0xE009 000C)

Setting a particular bit to 1 in this register will set the corresponding bit in the Interrupt Status register. Writing a 0 will not have any influence. The USBDevIntSet is a write only register.

Table 182: USB Device Interrupt Set register (USBDevIntSet - address 0xE009 000C) bit allocation Reset value: 0x0000 0000

Nesel value. 0x0000 0000										
Bit	31	30	29	28	27	26	25	24		
Symbol	-	-	-	-	-	-	-	-		
Bit	23	22	21	20	19	18	17	16		
Symbol	-	-	-	-	-	-	-	-		
Bit	15	14	13	12	11	10	9	8		
Symbol	-	-	-	-	-	-	EPR_INT	EP_RLZED		
Bit	7	6	5	4	3	2	1	0		
Symbol	TxENDPKT	Rx ENDPKT	CDFULL	CCEMTY	DEV_STAT	EP_SLOW	EP_FAST	FRAME		

Table 183: USB Device Interrupt Set register (USBDevIntSet - address 0xE009 000C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBDevIntSet bit allocation table above	1	The corresponding bit in the Device Interrupt Status register (Section 14.7.2) is set.	

14.7.6 USB Device Interrupt Priority register (USBDevIntPri - 0xE009 002C)

By setting a particular bit to 1, the corresponding interrupt will be routed to the high priority interrupt line. If the bit is 0 the interrupt will be routed to the low priority interrupt line. Only one of the EP_FAST or FRAME can be routed to the high priority interrupt line. Setting both bits at the same time is not allowed. If the software attempts to set both bits to 1, none of them will be routed to the high priority interrupt line. All enabled endpoint

Chapter 14: USB Device Controller

interrupts will be routed to the low priority interrupt line if the EP_FAST bit is set to 0, irrespective of the Endpoint Interrupt Priority register (<u>Section 14.7.11</u>) setting. The USBDevIntPri is a write only register.

Table 184: USB Device Interrupt Priority register (USBDevIntPri - address 0xE009 002C) bit description

Bit	Symbol	Value	Description	Reset value
0	FRAME	0	FRAME interrupt is routed to the low priority interrupt line.	0
		1	FRAME interrupt is routed to the high priority interrupt line.	_
1	EP_FAST	0	EP_FAST interrupt is routed to the low priority interrupt line.	0
		1	EP_FAST interrupt is routed to the high priority interrupt line.	_
7:2	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.7.7 USB Endpoint Interrupt Status register (USBEpIntSt - 0xE009 0030)

Each physical non-isochronous endpoint is represented by one bit in this register to indicate that it has generated the interrupt. All non-isochronous OUT endpoints give an interrupt when they receive a packet without any error. All non-isochronous IN endpoints will give an interrupt when a packet is successfully transmitted or a NAK handshake is sent on the bus provided that the interrupt on NAK feature is enabled. Isochronous endpoint transfer takes place with respect to frame interrupt. The USBEpIntSt is a read only register.

Table 185: USB Endpoint Interrupt Status register (USBEpIntSt - address 0xE009 0030) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 186: USB Endpoint Interrupt Status register (USBEpIntSt - address 0xE009 0030) bit description

Bit	Symbol	Description	Reset value
0	EP0RX	Endpoint 0, Data Received Interrupt bit.	0
1	EP0TX	Endpoint 0, Data Transmitted Interrupt bit or sent a NAK.	0
2	EP1RX	Endpoint 1, Data Received Interrupt bit.	0
3	EP1TX	Endpoint 1, Data Transmitted Interrupt bit or sent a NAK.	0
4	EP2RX	Endpoint 2, Data Received Interrupt bit.	0
5	EP2TX	Endpoint 2, Data Transmitted Interrupt bit or sent a NAK.	0
6	EP3RX	Endpoint 3, Isochronous endpoint.	NA
7	EP3TX	Endpoint 3, Isochronous endpoint.	NA
8	EP4RX	Endpoint 4, Data Received Interrupt bit.	0
9	EP4TX	Endpoint 4, Data Transmitted Interrupt bit or sent a NAK.	0
10	EP5RX	Endpoint 5, Data Received Interrupt bit.	0

9397 750 XXXXX

Table 186: USB Endpoint Interrupt Status register (USBEpIntSt - address 0xE009 0030) bit description

Bit	Symbol	Description	Reset value
11	EP5TX	Endpoint 5, Data Transmitted Interrupt bit or sent a NAK.	0
12	EP6RX	Endpoint 6, Isochronous endpoint.	NA
13	EP6TX	Endpoint 6, Isochronous endpoint.	NA
14	EP7RX	Endpoint 7, Data Received Interrupt bit.	0
15	EP7TX	Endpoint 7, Data Transmitted Interrupt bit or sent a NAK.	0
16	EP8RX	Endpoint 8, Data Received Interrupt bit.	0
17	EP8TX	Endpoint 8, Data Transmitted Interrupt bit or sent a NAK.	0
18	EP9RX	Endpoint 9, Isochronous endpoint.	NA
19	EP9TX	Endpoint 9, Isochronous endpoint.	NA
20	EP10RX	Endpoint 10, Data Received Interrupt bit.	0
21	EP10TX	Endpoint 10, Data Transmitted Interrupt bit or sent a NAK.	0
22	EP11RX	Endpoint 11, Data Received Interrupt bit.	0
23	EP11TX	Endpoint 11, Data Transmitted Interrupt bit or sent a NAK.	0
24	EP12RX	Endpoint 12, Isochronous endpoint.	NA
25	EP12TX	Endpoint 12, Isochronous endpoint.	NA
26	EP13RX	Endpoint 13, Data Received Interrupt bit.	0
27	EP13TX	Endpoint 13, Data Transmitted Interrupt bit or sent a NAK.	0
28	EP14RX	Endpoint 14, Data Received Interrupt bit.	0
29	EP14TX	Endpoint 14, Data Transmitted Interrupt bit or sent a NAK.	0
30	EP15RX	Endpoint 15, Data Received Interrupt bit.	0
31	EP15TX	Endpoint 15, Data Transmitted Interrupt bit or sent a NAK.	0

14.7.8 USB Endpoint Interrupt Enable register (USBEpIntEn - 0xE009 0034)

Setting bits in this register will cause the corresponding bit in the interrupt status register to transfer its status to the device interrupt status register. Either the EP_FAST or EP_SLOW bit will be set depending on the value in the endpoint interrupt priority register. Setting this bit to 1 implies operating in the slave mode. The USBEpIntEn is a read/write register.

Table 187: USB Endpoint Interrupt Enable register (USBEpIntEn - address 0xE009 0034) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 188: USB Endpoint Interrupt Enable register (USBEpIntEn - address 0xE009 0034) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBEpIntEn bit allocation table above	1	The corresponding bit in the Endpoint Interrupt Status register (Section 14.7.7) transfers its status to the Device Interrupt Status register (Section 14.7.2). Having a bit in the USBEpIntEn set to 1 implies operating in the slave mode.	_

14.7.9 USB Endpoint Interrupt Clear register (USBEpIntClr - 0xE009 0038)

Writing a 1 to this bit clears the bit in the endpoint interrupt status register. Writing 0 will not have any impact. When the endpoint interrupt is cleared from this register, the hardware will clear the CDFULL bit in the Device Interrupt Status register. On completion of this action, the CDFULL bit will be set and the Command Data register will have the status of the endpoint. Endpoint Interrupt register and CDFULL bit of Device Interrupt status register are related through clearing of interrupts in USB clock domain. Whenever software attempts to clear a bit of Endpoint Interrupt register, hardware will clear CDFULL bit before it starts issuing "Select Endpoint/Clear Interrupt" command (refer to Section 14.9.11 "Select Endpoint/Clear Interrupt (Command: 0x40 - 0x5F, Data: read 1 byte)" on page 229) and sets the same bit when command data is available for reading. Software will have to wait for CDFULL bit to be set to '1' (whenever it expects data from hardware) before it can read Command Data register. Each physical endpoint has its own reserved bit in this register. The bit field definition is the same as the Endpoint Interrupt Status Register as shown in Table 172. The USBEpIntClr is a write only register.

Table 189: USB Endpoint Interrupt Clear register (USBEpIntClr - address 0xE009 0038) bit allocation Reset value: 0x0000 0000

rtooot varao.								
Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 190: USB Endpoint Interrupt Clear register (USBEpIntClr - address 0xE009 0038) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBEpIntClr bit allocation table above	1	Clears the corresponding bit in the Endpoint Interrupt Status register.	

Software is allowed to issue clear operation on multiple endpoints as well. Let us take an example:

Assume bits 5 and 10 of Endpoint Interrupt Status register are to be cleared. The software can issue Clear operation by writing in Endpoint Interrupt Clear register (with corresponding bit positions set to '1'). Then hardware will do the following:

1. Clears CDFULL bit of Device Interrupt Status register.

Chapter 14: USB Device Controller

- 2. Issues 'Select Endpoint/Interrupt Clear' command for endpoint 10.
- 3. Waits for command to get processed and CDFULL bit to get set.
- 4. Now, endpoint status (for endpoint 10) is available in Command Data register (note that hardware does not wait for the software to finish reading endpoint status in Command Data register for endpoint 10).

Chapter 14: USB Device Controller

5. Clears CDFULL bit again.

Volume 1

- 6. Issues 'Select Endpoint/Interrupt Clear' command for endpoint 5.
- 7. Waits for command to get processed and CDFULL bit to get set.
- 8. Now, endpoint status (for endpoint 5) is available in Command Data register for the software to read.

14.7.10 USB Endpoint Interrupt Set register (USBEpIntSet - 0xE009 003C)

Writing a 1 to a bit in this register sets the corresponding bit in the endpoint interrupt status register. Writing 0 will not have any impact. Each endpoint has its own bit in this register. The USBEpIntSet is a write only register.

Table 191: USB Endpoint Interrupt Set register (USBEpIntSet - address 0xE009 003C) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	EP14RX	EP13TX	EP13RX	EP12TX	EP12RX
Bit	23	22	21	20	19	18	17	16
Symbol	EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
Bit	15	14	13	12	11	10	9	8
Symbol	EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX
Bit	7	6	5	4	3	2	1	0
Symbol	EP3TX	EP3RX	EP2TX	EP2RX	EP1TX	EP1RX	EP0TX	EP0RX

Table 192: USB Endpoint Interrupt Set register (USBEpIntSet - address 0xE009 003C) bit description

Bit	Symbol	Value	Description	Reset value
31:0	See	0	No effect.	0
	USBEpIntSet bit allocation table above	1	Sets the corresponding bit in the Endpoint Interrupt Status register.	

14.7.11 USB Endpoint Interrupt Priority register (USBEpIntPri - 0xE009 0040)

This register determines whether the interrupt has to be routed to the fast interrupt line (EP_FAST) or to the slow interrupt line (EP_SLOW). If set 1 the interrupt will be routed to the fast interrupt bit of the device status register. Otherwise it will be routed to the slow endpoint interrupt bit. Note that routing of multiple endpoints to EP_FAST or EP_SLOW is possible. The Device Interrupt Priority register may override this register setting. Refer to Section 14.7.6 "USB Device Interrupt Priority register (USBDevIntPri - 0xE009 002C)" on page 203 for more details. The USBEpIntPri is a write only register.

Table 193: USB Endpoint Interrupt Priority register (USBEpIntPri - address 0xE009 0040) bit allocation Reset value: 0x0000 0000

Bit	31	30	29	28	27	26	25	24
Symbol	EP15TX	EP15RX	EP14TX	E14RX	EP13TX	EP13RX	EP12TX	EP12RX

9397 750 XXXXX © Koninklijke Philips Electronics N.V. 2005. All rights reserved.

7

EP3TX

6

EP3RX

Bit Symbol Bit Symbol

Bit

Symbol

23	22	21	20	19	18	17	16
EP11TX	EP11RX	EP10TX	EP10RX	EP9TX	EP9RX	EP8TX	EP8RX
15	14	13	12	11	10	9	8
EP7TX	EP7RX	EP6TX	EP6RX	EP5TX	EP5RX	EP4TX	EP4RX

3

EP1TX

Table 194: USB Endpoint Interrupt Priority register (USBEpIntPri - address 0xE009 0040) bit description

5

EP2TX

Bit	Symbol	Value	Description	Reset value
31:0	See USBEpIntPri	0	The corresponding interrupt will be routed to the slow endpoint interrupt bit in the Device Status register.	0
	bit allocation table above	1	The corresponding interrupt will be routed to the fast endpoint interrupt bit in the Device Status register.	_

4

EP2RX

14.7.12 USB Realize Endpoint register (USBReEp - 0xE009 0044)

Though fixed-endpoint configuration implements 32 endpoints, it is not a must that all have to be used. If the endpoint has to be used, it should have buffer space in the EP_RAM. The EP_RAM space can be optimized by realizing a subset of endpoints. This is done through programming the Realize Endpoint register. Each physical endpoint has one bit as shown in Table 196. The USBReEp is a read/write register.

Table 195: USB Realize Endpoint register (USBReEp - address 0xE009 0044) bit allocation

Reset value: 0x0000 0003

Bit	31	30	29	28	27	26	25	24
Symbol	EP31	EP30	EP29	EP28	EP27	EP26	EP25	EP24
Bit	23	22	21	20	19	18	17	16
Symbol	EP23	EP22	EP21	EP20	EP19	EP18	EP17	EP16
Bit	15	14	13	12	11	10	9	8
Symbol	EP15	EP14	EP13	EP12	EP11	EP10	EP9	EP8
Bit	7	6	5	4	3	2	1	0
Symbol	EP7	EP6	EP5	EP4	EP3	EP2	EP1	EP0

Table 196: USB Realize Endpoint register (USBReEp - address 0xE009 0044) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint EP0 is not realized.	1
		1	Control endpoint EP0 is realized.	
1	EP1	0	Control endpoint EP1 is not realized.	1
		1	Control endpoint EP1 is realized.	
31:2	EPxx	0	Endpoint EPxx is not realized.	0
		1	Endpoint EPxx is realized.	

At power on only default control endpoint is realized. Other endpoints if required have to be realized by programming the corresponding bit in the Realize Endpoint register. Realization of endpoints is a multi-cycle operation. The pseudo code of endpoint realization is shown below.

for every endpoint to be realized,

Chapter 14: USB Device Controller

1

EP0TX

0

EP0RX

2

EP1RX

Device will not respond to any tokens to the un-realized endpoint. 'Configure Device' command can only enable all realized and enabled endpoints. For details see <u>Section 14.9.2</u> "Configure Device (Command: 0xD8, Data: write 1 byte)" on page 223.

14.8 EP_RAM requirements

The USB device controller uses dedicated RAM based FIFO (EP_RAM) as an endpoint buffer. Each endpoint has a reserved space in the EP_RAM. The EP_RAM size requirement for an endpoint depends on its Maxpacketsize and whether it is double buffered or not. 32 words of EP_RAM are used by the device for storing the buffer pointers. The EP_RAM is word aligned but the Maxpacketsize is defined in bytes hence the RAM depth has to be adjusted to the next word boundary. Also, each buffer has one word header showing the size of the packet length received.

EP_ RAM size (in words) required for the physical endpoint can be expressed as

EP_RAMsize = ((Maxpacketsize + 3) / 4 + 1) × db_status

where db_status = 1 for single buffered endpoint and 2 for double buffered endpoint.

Since all the realized endpoints occupy EP_RAM space, the total EP_RAM requirement is

$$TotalEPRAM size = 32 + \sum_{n=0}^{N} epram size(n)$$

where N is the number of realized endpoints. Total EP_RAM size should not exceed 2048 bytes (2 kB, 0.5 kwords).

EP_RAM can be accessed by 3 sources, which are SIE, DMA engine and CPU. Among them, CPU has the highest priority followed by the SIE and DMA engine. The DMA engine has got the lowest priority. Then again, under the above mentioned 3 request sources, write request has got higher priority than read request. Typically, CPU does single word

Chapter 14: USB Device Controller

read or write accesses, the DMA logic can do 32-byte burst access. The CPU and DMA engine operates at a higher clock frequency as compared to the SIE engine. The CPU cycles are valuable and so the CPU is given the highest priority. The CPU clock frequency is higher than the SIE operating frequency (12 MHz). The SIE will take 32 clock cycles for a word transfer. In general, this time translates to more than 32 clock cycles of the CPU in which it can do easily several accesses to the memory.

14.8.1 USB Endpoint Index register (USBEpIn - 0xE009 0048)

Each endpoint has a register carrying the Maxpacket size value for that endpoint. This is in fact a register array. Hence before writing, this register has to be 'addressed' through the Endpoint Index register. The USBEpIn is a write only register.

The Endpoint Index register will hold the physical endpoint number. Writing into the Maxpacket size register will set the array element pointed by the Endpoint Index register.

Table 197: USB Endpoint Index register (USBEpIn - address 0xE009 0048) bit description


Bit	Symbol	Description	Reset value
4:0	Phy_endpoint	Physical endpoint number (0-31)	0
31:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.8.2 USB MaxPacketSize register (USBMaxPSize - 0xE009 004C)

At power on control endpoint is assigned the Maxpacketsize of 8 bytes. Other endpoints are assigned 0. Modifying MaxPacketSize register content will cause the buffer address of the internal RAM to be recalculated. This is essentially a multi-cycle process. At the end of it, the EP_RLZED bit will be set in the Device Interrupt Status register (Section 14.7.2). The USB MaxPacket register array indexing is shown in Figure 51. The USBMaxPSize is a read/write register.

Table 198: USB MaxPacketSize register (USBMaxPSize - address 0xE009 004C) bit description

Bit	Symbol	Description	Reset value
9:0	MaxPacketSize	The maximum packet size value.	0x008
31:10	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

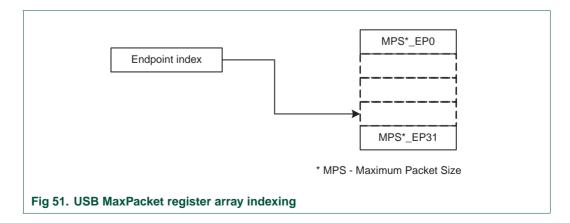

Chapter 14: USB Device Controller

14.8.3 USB Receive Data register (USBRxData - 0xE009 0018)

For an OUT transaction, CPU reads the endpoint data from this register. Data from the endpoint RAM is fetched and filled in this register. There is no interrupt when the register is full. The USBRxData is a read only register.

Table 199: USB Receive Data register (USBRxData - address 0xE009 0018) bit description

Bit	Symbol	Description	Reset value
31:0	ReceiveData	Data received.	0x0000 0000

14.8.4 USB Receive Packet Length register (USBRxPLen - 0xE009 0020)

This register gives the number of bytes remaining in the EP_RAM for the current packet being transferred and whether the packet is valid or not. This register will get updated at every word that gets transferred to the system. Software can use this register to get the number of bytes to be transferred. When the number of bytes reaches zero, an end of packet interrupt is generated. The USBRxPLen is a read only register.

Table 200: USB Receive Packet Length register (USBRxPlen - address 0xE009 0020) bit description

Bit	Symbol	Value	Description	Reset value
9:0	PKT_LNGTH	-	The remaining amount of data in bytes still to be read from the RAM.	0
10	DV		Non-isochronous end point will not raise an interrupt when an erroneous data packet is received. But invalid data packet can be produced with bus reset. For isochronous endpoint, data transfer will happen even if an erroneous packet is received. In this case DV bit will not be set for the packet.	0
		0	Data is invalid.	
		1	Data is valid.	_
11	PKT_RDY	-	Packet length field in the register is valid and packet is ready for reading.	0
31:12	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.8.5 USB Transmit Data register (USBTxData - 0xE009 001C)

For an IN transaction the CPU writes the data into this register. This data will be transferred into the EP_RAM before the next writing occurs. There is no interrupt when the register is empty. The USBTxData is a write only register.

Table 201: USB Transmit Data register (USBTxData - address 0xE009 001C) bit description

Bit	Symbol	Description	Reset value
31:0	TransmitData	Transmit Data.	0x0000 0000

14.8.6 USB Transmit Packet Length register (USBTxPLen - 0xE009 0024)

The software should first write the packet length (≤ Maximum Packet Size) in the Transmit Packet Length register followed by the data write(s) to the Transmit Data register. This register counts the number of bytes transferred from the CPU to the EP RAM. The

User manual

Chapter 14: USB Device Controller

software can read this register to determine the number of bytes it has transferred to the EP_RAM. After each write to the Transmit Data register the hardware will decrement the contents of the Transmit Packet Length register. For lengths larger than the Maximum Packet Size, the software should submit data in steps of Maximum Packet Size and the remaining extra bytes in the last packet. For example, if the Maximum Packet Size is 64 bytes and the data buffer to be transferred is of length 130 bytes, then the software submits 64 bytes packet twice followed by 2 bytes in the last packet. So, a total of 3 packets are sent on USB. The USBTxPLen is a write only register.

Table 202: USB Transmit Packet Length register (USBTxPLen - address 0xE009 0024) bit description

Bit	Symbol	Value	Description	Reset value
9:0	PKT_LNGTH	-	The remaining amount of data in bytes to be written to the EP_RAM.	0x000
31:10	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.8.7 USB Control register (USBCtrl - 0xE009 0028)

This register controls the data transfer operation of the USB device. The USBCtrl is a read/write register.

Table 203: USB Control register (USBCtrl - address 0xE009 0028) bit description

	_		
Symbol	Value	Description	Reset value
RD_EN		Read mode control.	0
	0	Read mode is disabled.	
	1	Read mode is enabled.	_
WR_EN		Write mode control.	0
	0	Write mode is disabled.	
	1	Write mode is enabled.	_
LOG_ENDPOINT	-	Logical Endpoint number.	0x0
-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
	RD_EN WR_EN LOG_ENDPOINT	RD_EN	RD_EN Read mode control. Read mode is disabled. Read mode is enabled. WR_EN Write mode control. Write mode is disabled. Write mode is disabled. Write mode is enabled. LOG_ENDPOINT - Logical Endpoint number. Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not

14.8.8 Slave Mode data transfer

When the software wants to read the data from an endpoint buffer it should make the Read Enable bit high and should program the LOG_ENDPOINT in the USB control register. The control logic will first fetch the packet length to the receive packet length register. The PKT_RDY bit (Table 200) in the Packet Length Register is set along with this. Also the hardware fills the receive data register with the first word of the packet.

The software can now start reading the Receive Data register (Section 14.8.3). When the end of packet is reached the Read Enable bit (RD_EN in Table 203) will be disabled by the control logic and RxENDPKT bit is set in the Device Interrupt Status register. The software should issue a Clear Buffer (refer to Section 14.9.13 "Clear Buffer (Command: 0xF2, Data: read 1 byte (optional))" on page 230) command. The endpoint is now ready to accept the next packet.

Chapter 14: USB Device Controller

If the software makes the Read Enable bit low midway, the reading will be terminated. In this case the data will remain in the EP_RAM. When the Read Enable signal is made high again for this endpoint, data will be read from the beginning.

For writing data to an endpoint buffer, Write Enable bit (WR_EN in <u>Table 203</u>) should be made high and software should write to the Transmit Packet Length register (<u>Section 14.8.6</u>) the number of bytes it is going to send in the packet. It can then write data continuously in the Transmit Data register.

When the control logic receives the number of bytes programmed in the Transmit Packet Length register, it will reset the Write Enable bit. The TxENDPKT bit is set in the Device Interrupt Status register. The software should issue a Validate Buffer (refer to Section 14.9.14 "Validate Buffer (Command: 0xFA, Data: none)" on page 230) command. The endpoint is now ready to send the packet. If the software resets this bit midway, writing will start again from the beginning.

A synchronization mechanism is used to transfer data between the two clock domains i.e. AHB slave clock and the USB bit clock at 12 MHz. This synchronization process takes up to 5 clock cycles of the slow clock (i.e. 12 MHz) for reading/writing from/to a register before the next read/write can happen. The AHB HREADY output from the USB device is driven appropriately to take care of the timing.

Both Read Enable and Write Enable bits can be high at the same time for the same logical endpoint. The interleaved read and write operation is possible.

14.8.9 USB Command Code register (USBCmdCode - 0xE009 0010)

This register is used for writing the commands. The commands written here will get propagated to the Protocol Engine and will be executed there. After executing the command, the register will be empty, and the "CCEMTY" bit of the Interrupt Status register is set high. See Section 14.9 "Protocol engine command description" on page 222 for details. The USBCmdCode is a write only register.

Table 204: USB Command Code register (USBCmdCode - address 0xE009 0010) bit description

Bit	Symbol	Description	Reset value
7:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:8	CMD_PHASE	The command phase.	0x00
23:16	CMD_CODE	The code for the command.	0x00
31:24	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.8.10 USB Command Data register (USBCmdData - 0xE009 0014)

This is a read-only register which will carry the data retrieved after executing a command. When this register is ready, the "CD_FULL" bit of the Device Interrupt Status register is set. The CPU can poll this bit or enable an interrupt corresponding to this to sense the arrival of the data. The data is always one-byte wide. See Section 14.9 "Protocol engine command description" on page 222 for details.

Bit	Symbol	Description	Reset value
7:0	CommandData	Command Data.	0x00
31:8	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Chapter 14: USB Device Controller

14.8.11 USB DMA Request Status register (USBDMARSt - 0xE009 0050)

This register is set by the hardware whenever a packet (OUT) or token (IN) is received on a realized endpoint. It serves as a flag for DMA engine to start the data transfer if the DMA is enabled for this particular endpoint. Each endpoint has one reserved bit in this register. Hardware sets this bit when a realized endpoint needs to be serviced through DMA. Software can read the register content. DMA cannot be enabled for control endpoints (EP0 and EP1). For easy readability the control endpoint is shown in the register contents. The USBDMARSt is a read only register.

Table 206: USB DMA Request Status register (USBDMARSt - address 0xE009 0050) bit allocation Reset value: 0x0000 0000

Nesel value. 0x0000 0000								
Bit	31	30	29	28	27	26	25	24
Symbol	EP31	EP30	EP29	EP28	EP27	EP26	EP25	EP24
Bit	23	22	21	20	19	18	17	16
Symbol	EP23	EP22	EP21	EP20	EP19	EP18	EP17	EP16
Bit	15	14	13	12	11	10	9	8
Symbol	EP15	EP14	EP13	EP12	EP11	EP10	EP9	EP8
Bit	7	6	5	4	3	2	1	0
Symbol	EP7	EP6	EP5	EP4	EP3	EP2	EP1	EP0

Table 207: USB DMA Request Status register (USBDMARSt - address 0xE009 0050) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and EP0 bit must be 0).	0
1	EP1	0	Control endpoint IN (DMA cannot be enabled for this endpoint and EP1 bit must be 0).	0
31:2	EPxx		Endpoint xx ($2 \le xx \le 31$) DMA request.	0
		0	DMA not requested by endpoint xx.	
		1	DMA requested by endpoint xx.	_

^[1] DMA can not be enabled for this endpoint and the corresponding bit in the USBDMARSt must be 0.

14.8.12 USB DMA Request Clear register (USBDMARCIr - 0xE009 0054)

Writing 1 into the register will clear the corresponding interrupt from the DMA Request Status register. Writing 0 will not have any effect. Also, after a packet transfer, the hardware clears the particular bit in DMA Request Status register. The USBDMARCIr is a write only register.

The USBDMARCIr bit allocation is identical to the USBDMARSt register (Table 206).

Volume 1

Volume 1

		-		
Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0 bit must be 0).	0
1	EP1	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1 bit must be 0).	0
31:2	EPxx		Clear the endpoint xx ($2 \le xx \le 31$) DMA request.	0
		0	No effect.	_
		1	Clear the corresponding interrupt from the DMA request register.	_

The software should not clear the DMA request clear bit while the DMA operation is in progress. But if at all the clearing happens, the behavior of DMA engine will depend on at what time the clearing is done. There can be more than one DMA requests pending at any given time. The DMA engine processes these requests serially (i.e starting from EP2 to EP31). If the DMA request for a particular endpoint is cleared before DMA operation has started for that request, then the DMA engine will never know about the request and no DMA operation on that endpoint will be done (till the next request appears). On the other hand, if the DMA request for a particular endpoint is cleared after the DMA operation corresponding to that request has begun, it does not matter even if the request is cleared, since the DMA engine has registered the endpoint number internally and will not sample the same request before finishing the current DMA operation.

14.8.13 USB DMA Request Set register (USBDMARSet - 0xE009 0058)

Writing 1 into the register will set the corresponding interrupt from the DMA request register. Writing 0 will not have any effect. The USBDMARSet is a write only register.

The USBDMARSet bit allocation is identical to the USBDMARSt register (Table 206).

Table 209: USB DMA Request Set register (USBDMARSet - address 0xE009 0058) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0 bit must be 0).	0
1	EP1	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1 bit must be 0).	0
31:2	EPxx		Set the endpoint xx ($2 \le xx \le 31$) DMA request interrupt.	0
		0	No effect.	_
		1	Set the corresponding interrupt from the DMA request register.	_

The DMA Request Set register is normally used for the test purpose. It is also useful in the normal operation mode to avoid a "lock" situation if the DMA is programmed after that the USB packets are already received. Normally the arrival of a packet generates an interrupt when it is completely received. This interrupt is used by the DMA to start working. This works fine as long as the DMA is programmed before the arrival of the packet (2 packets if double buffered). If the DMA is programmed "too late", the interrupts were already generated in slave mode (but not handled because the intention was to use the DMA) and when the DMA is programmed no interrupts are generated to "activate" it. In this case the usage of the DMA Request Set register is useful to manually start the DMA transfer.

Chapter 14: USB Device Controller


14.8.14 USB UDCA Head register (USBUDCAH - 0xE009 0080)

The UDCA (USB Device Communication Area) Head register maintains the address where UDCA is allocated in the USB RAM (Figure 52). The USB RAM is part of the system memory which is used for the USB purposes. It is located at address 0x7FD0 0000 and is 8 kB in size. Note, however, DMA on endpoint 0 is not feasible. The UDCA has to be aligned to 128 - byte boundary and should be of size 128 bytes (32 words that correspond to 32 physical endpoints). Each word can point to a DMA descriptor of a physical endpoint or can point to NULL (i.e. zero value) when the endpoint is not enabled for DMA operation. This implies that the DMA descriptors need to be created only for the DMA enabled endpoints. Gaps can be there while realizing the endpoints and there is no need to keep dummy DMA descriptors. The DMA engine will not process the descriptors of the DMA disabled endpoints. The reset value for this register is 0. Refer to Section 14.10 "DMA descriptor" on page 230 and Section 14.11 "DMA operation" on page 234 for more details on DMA descriptors. The USBUDCAH is a read/write register.

Table 210: USB UDCA Head register (USBUDCAH - address 0xE009 0080) bit description

Bit	Symbol	Description	Reset value
6:0	-	UDCA header is aligned in 128-byte boundaries.	0x00
31:7	UDCA_Header	Start address of the UDCA Header.	0

The DMA Request Set register is normally used for the test purpose. It is also useful in the normal operation mode to avoid a "lock" situation if the DMA is programmed after that the USB packets are already received. Normally the arrival of a packet generates an interrupt when it is completely received. This interrupt is used by the DMA to start working. This works fine as long as the DMA is programmed before the arrival of the packet (2 packets - if double buffered). If the DMA is programmed "too late", the interrupts were already generated in slave mode (but not handled because the intention was to use the DMA) and when the DMA is programmed no interrupts are generated to "activate" it. In this case the usage of the DMA Request Set register is useful to manually start the DMA transfer.

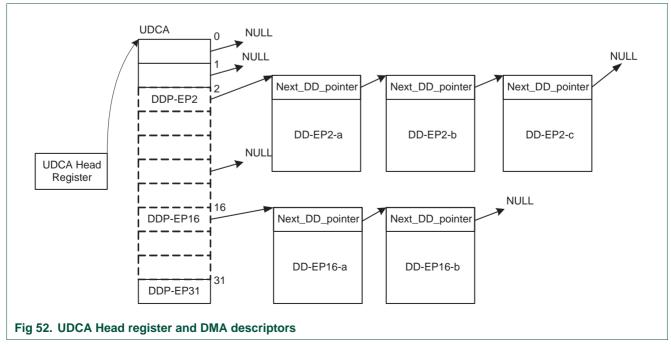

Chapter 14: USB Device Controller

14.8.15 USB EP DMA Status register (USBEpDMASt - 0xE009 0084)

This register indicates whether the DMA for a particular endpoint is enabled or disabled. Each endpoint has one bit assigned in the EP DMA Status register. Bit 0 corresponds to endpoint 0 and Bit 31 to endpoint 15 IN). DMA transfer for a specific endpoint can start only if its bit is set in the USBEpDMASt register. Hence, it is referred as DMA_ENABLE bit. If the bit in the EP DMA Status register is made 0 (by writing into EP DMA Disable register) in between a packet transfer, the current packet transfer will still be completed. After the current packet, DMA gets disabled. In other words, the packet transfer when started will end unless an error condition occurs. When error condition is detected the bit will be reset by the hardware. The USBEpDMASt is a read only register.

Table 211: USB EP DMA Status register (USBEpDMASt - address 0xE009 0084) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0_DMA_ENABLE	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0_DMA_ENABLE bit must be 0).	0
1	EP1_DMA_ENABLE	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1_DMA_ENABLE bit must be 0).	0
31:2	EPxx_DMA_ENABLE		endpoint xx ($2 \le xx \le 31$) DMA enabled bit.	0
		0	The DMA for endpoint EPxx is disabled.	_
		1	The DMA for endpoint EPxx is enabled.	_

Software does not have direct write permission to this register. It has to set the bit through EP DMA Enable register. Resetting of the bit is done through EP DMA Disable register.

14.8.16 USB EP DMA Enable register (USBEpDMAEn - 0xE009 0088)

Writing 1 to this register will enable the DMA operation for the corresponding endpoint. Writing 0 will not have any effect. The USBEpDMAEn is a write only register.

Table 212: USB EP DMA Enable register (USBEpDMAEn - address 0xE009 0088) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0_DMA_ENABLE	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0_DMA_ENABLE bit value must be 0).	0
1	EP1_DMA_ENABLE	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1_DMA_ENABLE bit must be 0).	0
31:2	EPxx_DMA_ENABLE		Endpoint xx ($2 \le xx \le 31$) DMA enable control bit.	0
		0	No effect.	_
		1	Enable the DMA operation for endpoint EPxx.	_

14.8.17 USB EP DMA Disable register (USBEpDMADis - 0xE009 008C)

Writing 1 to this register will disable the DMA operation for the corresponding endpoint. Writing 0 will have the effect of resetting the DMA_PROCEED flag. The USBEpDMADis is a write only register.

Table 213: USB EP DMA Disable register (USBEpDMADis - address 0xE009 008C) bit description

Bit	Symbol	Value	Description	Reset value
0	EP0_DMA_DISABLE	0	Control endpoint OUT (DMA cannot be enabled for this endpoint and the EP0_DMA_DISABLE bit value must be 0).	0
1	EP1_DMA_DISABLE	0	Control endpoint IN (DMA cannot be enabled for this endpoint and the EP1_DMA_DISABLE bit value must be 0).	0
31:2	EPxx_DMA_DISABLE		Endpoint xx ($2 \le xx \le 31$) DMA disable control bit.	0
		0	No effect.	
		1	Disable the DMA operation for endpoint EPxx.	

14.8.18 USB DMA Interrupt Status register (USBDMAIntSt - 0xE009 0090)

Bit 0, End_of_Transfer_Interrupt, will be set by hardware if any of the 32 bits in the End Of Transfer Interrupt Status register is 1. The same logic applies for Bit 1 and 2 of the DMA Interrupt Status register. The hardware checks the 32 bits of New DD Request Interrupt Status register to set/clear the bit 1 of DMA Interrupt Status register and similarly the 32 bits of System Error Interrupt Status register to set/clear the bit 2 of DMA Interrupt Status register. The USBDMAIntSt is a read only register.

Table 214: USB DMA Interrupt Status register (USBDMAIntSt - address 0xE009 0090) bit description

Bit	Symbol	Value	Description	Reset value
0	End_of_Transfer_Interrupt		End of Transfer Interrupt bit.	0
		0	All bits in the USBEoTIntSt register are 0.	
		1	At least one bit in the USBEoTIntSt is set.	
1	New_DD_Request_Interrupt		New DD Request Interrupt bit.	0
		0	All bits in the USBNDDRIntSt register are 0.	
		1	At least one bit in the USBNDDRIntSt is set.	_
2	System_Error_Interrupt		System Error Interrupt bit.	0
		0	All bits in the USBSysErrIntSt register are 0.	
		1	At least one bit in the USBSysErrIntSt is set.	_
31:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.8.19 USB DMA Interrupt Enable register (USBDMAIntEn - 0xE009 0094)

Setting the bit in this register will cause external interrupt to happen for the bits set in the interrupt status register. The USBDMAIntEn is a read/write register.

Table 215: USB DMA Interrupt Enable register (USBDMAIntEn - address 0xE009 0094) bit description

Bit	Symbol	Value	Description	Reset value
0	End_of_Transfer_Interrupt_En		End of Transfer Interrupt enable bit.	0
		0	The End of Transfer Interrupt is disabled.	
		1	The End of Transfer Interrupt is enabled.	
1	New_DD_Request_Interrupt_En		New DD Request Interrupt enable bit.	0
		0	The New DD Request Interrupt is disabled.	
		1	The New DD Request Interrupt is enabled.	_
2	System_Error_Interrupt_En		System Error Interrupt enable bit.	0
		0	The System Error Interrupt is disabled.	
		1	The System Error Interrupt is enabled.	_
31:3	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.8.20 USB End of Transfer Interrupt Status register (USBEoTIntSt - 0xE009 00A0)

When the transfer completes for the descriptor, either normally (descriptor is retired) or because of an error, this interrupt occurs. The cause of the interrupt generation will be recorded in the DD_Status field of the descriptor. The USBEoTIntSt is a read only register.

Table 216: USB End of Transfer Interrupt Status register (USBEoTIntSt - address 0xE009 00A0s) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Endpoint xx (0 \leq xx \leq 31) End of Transfer Interrupt request.	0
		0	There is no End of Transfer interrupt request for endpoint xx.	_
		1	There is an End of Transfer Interrupt request for endpoint xx.	_

14.8.21 USB End of Transfer Interrupt Clear register (USBEoTIntClr - 0xE009 00A4)

Writing 1 into the register will clear the corresponding interrupt from the End of Transfer Interrupt Status register. Writing 0 will not have any effect. The USBEoTIntClr is a write only register.

Table 217: USB End of Transfer Interrupt Clear register (USBEoTIntClr - address 0xE009 00A4) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Clear endpoint xx (0 \leq xx \leq 31) End of Transfer Interrupt request.	0
		0	Ne effect.	-
		1	Clear the EPxx End of Transfer Interrupt request in the USBEoTIntSt register.	

9397 750 XXXXX

Chapter 14: USB Device Controller

14.8.22 USB End of Transfer Interrupt Set register (USBEoTIntSet - 0xE009 00A8)

Writing 1 into the register will set the corresponding interrupt from the End of Transfer Interrupt Status register. Writing 0 will not have any effect. The USBEoTIntSet is a write only register.

Table 218: USB End of Transfer Interrupt Set register (USBEoTIntSet - address 0xE009 00A8) bit description

Bit	Symbol	Value	Description	Reset value					
31:0	EPxx	EPxx	EPxx	EPxx	EPxx	EPxx		Set endpoint xx (0 \leq xx \leq 31) End of Transfer Interrupt request.	0
		0	Ne effect.	_					
		1	Set the EPxx End of Transfer Interrupt request in the USBEoTIntSt register.	_					

14.8.23 USB New DD Request Interrupt Status register (USBNDDRIntSt - 0xE009 00AC)

A bit in this register is set when a transfer is requested from the USB device and no valid DD is detected for the corresponding endpoint. The USBNDDRIntSt is a read only register.

Table 219: USB New DD Request Interrupt Status register (USBNDDRIntSt - address 0xE009 00AC) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Endpoint xx (0 \leq xx \leq 31) new DD interrupt request.	0
		0	There is no new DD interrupt request for endpoint xx.	
		1	There is a new DD interrupt request for endpoint xx.	

14.8.24 USB New DD Request Interrupt Clear register (USBNDDRIntClr - 0xE009 00B0)

Writing 1 into the register will clear the corresponding interrupt from the New DD Request Interrupt Status register. Writing 0 will not have any effect. The USBNDDRIntClr is a write only register.

Table 220: USB New DD Request Interrupt Clear register (USBNDDRIntClr - address 0xE009 00B0) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Clear endpoint xx (0 \leq xx \leq 31) new DD interrupt request.	0
		0	Ne effect.	_
		1	Clear the EPxx new DD interrupt request in the USBNDDRIntSt register.	_

14.8.25 USB New DD Request Interrupt Set register (USBNDDRIntSet - 0xE009 00B4)

Writing 1 into the register will set the corresponding interrupt from the New DD Request Interrupt Status register. Writing 0 will not have any effect. The USBNDDRIntSet is a write only register.

Table 221: USB New DD Request Interrupt Set register (USBNDDRIntSet - address 0xE009 00B4) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Set endpoint xx (0 \leq xx \leq 31) new DD interrupt request.	0
		0	Ne effect.	_
		1	Set the EPxx new DD interrupt request in the USBNDDRIntSt register.	_

14.8.26 USB System Error Interrupt Status register (USBSysErrIntSt - 0xE009 00B8)

If a system error (AHB bus error) occurs when transferring the data or when fetching or updating the DD this interrupt bit is set. The USBSysErrIntSt is a read only register.

Table 222: USB System Error Interrupt Status register (USBSysErrIntSt - address 0xE009 00B8) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Endpoint xx (0 \leq xx \leq 31) System Error Interrupt request.	0
		0	There is no System Error Interrupt request for endpoint xx.	_
		1	There is a System Error Interrupt request for endpoint xx.	_

14.8.27 USB System Error Interrupt Clear register (USBSysErrIntClr - 0xE009 00BC)

Writing 1 into the register will clear the corresponding interrupt from the System Error Interrupt Status register. Writing 0 will not have any effect. The USBSysErrIntClr is a write only register.

Table 223: USB System Error Interrupt Clear register (USBSysErrIntClr - address 0xE009 00BC) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Clear endpoint xx (0 \leq xx \leq 31) System Error Interrupt request.	0
		0	Ne effect.	_
		1	Clear the EPxx System Error Interrupt request in the USBSysErrIntSt register.	_

14.8.28 USB System Error Interrupt Set register (USBSysErrIntSet - 0xE009 00C0)

Writing 1 into the register will set the corresponding interrupt from the System Error Interrupt Status register. Writing 0 will not have any effect. The USBSysErrIntSet is a write only register.

Chapter 14: USB Device Controller

Table 224: USB System Error Interrupt Set register (USBSysErrIntSet - address 0xE009 00C0) bit description

Bit	Symbol	Value	Description	Reset value
31:0	EPxx		Set endpoint xx (0 \leq xx \leq 31) System Error Interrupt request.	0
		0	Ne effect.	_
		1	Set the EPxx System Error Interrupt request in the USBSysErrIntSt register.	_

14.9 Protocol engine command description

The protocol engine operates based on the commands issued from the CPU.

These commands have to be written into the Command Code register (Section 14.8.9). The read data when present will be available in the Command Data register (Section 14.8.10) after the successful execution of the command. Table 225 lists all protocol engine commands.

Here is an example of the Read Current Frame Number command (reading 2 bytes):

```
USBDevIntClr = 0x30;
                                                                                                                                                                                                                      // Clear cmd_code_empty & cmd_data_full int. bits
USBCmdCode = 0x00F50500;
while (!(USBDevIntSt & 0x10)); // Wait cmd code empty
                                                                                                                                                                                                               // Clear cmd_code_empty interrupt bit
USBDevIntClr = 0x10;
USBCmdCode = 0x00F50200;
while (!(USBDevIntSt & 0x20)); // Wait for cmd data full
CurFrameNum = USBCmdData;  // Read Frame number LSB byte
                                                                                                                                                                                                                 // Clear cmd_code_empty interrupt bit
USBDevIntClr = 0x10;
USBCmdCode = 0 \times 0.0 = 0.00 \times 0.00 = 0.00 \times 0.00 
while (!(USBDevIntSt & 0x20)); // Wait for cmd_data_full
Temp = USBCmdData;
                                                                                                                                                                                                               // Read Frame number MSB byte
CurFrameNum = CurFrameNum | (Temp << 8);</pre>
```

Table 225: Protocol engine command code table

Command name	Recipient	Command	Data phase (coding)
Device commands			
Set Address	Device	00 D0 05 00	Write 1 byte - 00 <byte> 01 00</byte>
Configure Device	Device	00 D8 05 00	Write 1 byte - 00 <byte> 01 00</byte>
Set Mode	Device	00 F3 05 00	Write 1 byte - 00 <byte> 01 00</byte>
Read Current Frame Number	Device	00 F5 05 00	Read 1 or 2 bytes - 00 F5 02 00
Read Test Register	Device	00 FD 05 00	Read 2 bytes - 00 FD 02 00
Set Device Status	Device	00 FE 05 00	Write 1 byte - 00 <byte> 01 00</byte>
Get Device Status	Device	00 FE 05 00	Read 1 byte - 00 FE 02 00
Get Error Code	Device	00 FF 05 00	Read 1 byte - 00 FF 02 00
Read Error Status	Device	00 FB 05 00	Read 1 byte - 00 FB 02 00

Endpoint Commands

Table 225: Protocol engine command code table

Command name	Recipient	Command	Data phase (coding)
Select Endpoint	Endpoint 0	00 00 05 00	Read 1 byte (optional) - 00 00 02 00
	Endpoint 1	00 01 05 00	Read 1 byte (optional) - 00 01 02 00
	Endpoint 2	00 02 05 00	Read 1 byte (optional) - 00 02 02 00
	Endpoint xx	00 xx 05 00	Read 1 byte (optional) - 00 xx 02 00 xx - physical endpoint number
	Endpoint 31	00 1F 05 00	Read 1 byte (optional) - 00 1F 02 00
Select Endpoint/Clear Interrupt	Endpoint 0	00 40 05 00	Read 1 byte - 00 40 02 00
	Endpoint 1	00 41 05 00	Read 1 byte - 00 41 02 00
	Endpoint 2	00 42 05 00	Read 1 byte - 00 42 02 00
	Endpoint xx	00 xx 05 00	Read 1 byte - 00 xx 02 00 xx - (physical endpoint number + 0x40)
	Endpoint 31	00 5F 05 00	Read 1 byte - 00 5F 02 00
Set Endpoint Status	Endpoint 0	00 40 05 00	Write 1 byte - 00 <byte> 01 00</byte>
	Endpoint 1	00 41 05 00	Write 1 byte - 00 <byte> 01 00</byte>
	Endpoint 2	00 42 05 00	Write 1 byte - 00 <byte> 01 00</byte>
	Endpoint xx	00 xx 05 00	Write 1 byte - 00 <byte> 01 00 xx - (physical endpoint number + 0x40)</byte>
	Endpoint 31	00 5F 05 00	Write 1 byte - 00 <byte> 01 00</byte>
Clear Buffer	Selected Endpoint	00 F2 05 00	Read 1 byte (optional) - 00 F2 02 00
Validate Buffer	Selected Endpoint	00 FA 05 00	None

14.9.1 Set Address (Command: 0xD0, Data: write 1 byte)

The Set Address command is used to set the USB assigned address and enable the (embedded) function. The address set in the device will take effect after the status phase of the setup token. (Alternately, issuing the Set Address command twice will set the address in the device). At power on reset, the DEV_EN is set to 0. After bus reset, the address is reset to 0x00. The enable bit is set to 1. The device will respond on packets for function address 0x00, endpoint 0 (default endpoint).

Table 226: Device Set Address Register bit description

Bit	Symbol	Description	Reset value
6:0	DEV_ADDR	Device address set by the software.	0x00
7	DEV_EN	Device Enable.	0

14.9.2 Configure Device (Command: 0xD8, Data: write 1 byte)

A value of 1 written to the register indicates that the device is configured and all the enabled non-control endpoints will respond. Control endpoints are always enabled and respond even if the device is not configured, in the default state.

Chapter 14: USB Device Controller

Table 227: Configure Device Register bit description

Bit	Symbol	Description	Reset value
0	CONF_DEVICE	Device is configured. This bit is set after the set configuration command is executed. Good link LED signal is asserted when configuration is done.	0
7:1	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.9.3 Set Mode (Command: 0xF3, Data: write 1 byte)

Table 228: Set Mode Register bit description

Bit	Symbol	Value	Description	Reset value
0	AP_CLK		Always PLL Clock.	0
		0	usb_needclk is functional; 48 Mhz clock can be stopped when the device enters suspend state.	
		1	usb_needclk always have the value 1. 48 Mhz clock cannot be stopped in case when the device enters suspend state.	_
1	INAK_CI		Interrupt on NAK for Control IN endpoint.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed IN transactions generate interrupts.	_
2	INAK_CO		Interrupt on NAK for Control OUT endpoint.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed OUT transactions generate interrupts.	_
3	INAK_II		Interrupt on NAK for Interrupt IN endpoint.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed IN transactions generate interrupts.	_
4	INAK_IO[1]		Interrupt on NAK for Interrupt OUT endpoints.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed OUT transactions generate interrupts.	_
5	INAK_BI		Interrupt on NAK for Bulk IN endpoints.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed IN transactions generate interrupts.	-
6	INAK_BO[2]		Interrupt on NAK for Bulk OUT endpoints.	0
		0	Only successful transactions generate an interrupt.	
		1	Both successful and NAKed OUT transactions generate interrupts.	-
7	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

^[1] This bit should be reset to 0 if the DMA is enabled for any of the Interrupt OUT endpoints.

Chapter 14: USB Device Controller

^[2] This bit should be reset to 0 if the DMA is enabled for any of the Bulk OUT endpoints.

14.9.4 Read Current Frame Number (Command: 0xF5, Data: read 1 or 2 bytes)

Returns the frame number of the last successfully received SOF. The frame number is eleven bits wide. The frame number returns least significant byte first. In case the user is only interested in the lower 8 bits of the frame number, only the first byte needs to be read.

Chapter 14: USB Device Controller

- In case no SOF was received by the device at the beginning of a frame, the frame number returned is that of the last successfully received SOF.
- In case the SOF frame number contained a CRC error, the frame number returned will be the corrupted frame number as received by the device.

14.9.5 Read Test Register (Command: 0xFD, Data: read 2 bytes)

The test register is 16 bits wide. It returns the value of 0xA50F, if the USB clocks (48 Mhz and hclk) are fine.

14.9.6 Set Device Status (Command: 0xFE, Data: write 1 byte)

The Set Device Status command sets bits in the Device Status Register.

Table 229: Set Device Status Register bit description

Bit	Symbol	Value	Description	Reset value
0	CON		The Connect bit indicates the current connect status of the device. It controls the SoftConnect_N output pin, used for SoftConnect. Reading the connect bit returns the current connect status.	0
		0	Writing a 0 will make SoftConnect_N inactive.	
		1	Writing a 1 will make SoftConnect_N active.	_
1	CON_CH		Connect Change.	0
		0	This bit is reset when read.	
		1	This bit is set when the device's pull-up resistor is disconnected because VBus disappeared. DEV_STAT interrupt is generated when this bit is 1.	_
2	SUS		Suspend: The Suspend bit represents the current suspend state. When the device is suspended (SUS = 1) and the CPU writes a 0 into it, the device will generate a remote wakeup. This will only happen when the device is connected (CON = 1). When the device is not connected or not suspended, writing a 0 has no effect. Writing a 1 into this register has never an effect.	0
		0	This bit is reset to 0 on any activity.	
		1	This bit is set to 1 when the device hasn't seen any activity on its upstream port for more than 3 ms.	

Volume 1

Chapter 14: USB Device Controller

Table 229: Set Device Status Register bit description

Bit	Symbol	Value	Description	Reset value
3	SUS_CH		Suspend (SUS) bit change indicator. The SUS bit can toggle because:	0
			 The device goes into the suspended state. 	
			 The device is disconnected. 	
			 The device receives resume signalling on its upstream port. 	
			 The Suspend Change bit is reset after the register has been read. 	
		0	SUS bit not changed.	
		1	SUS bit changed. At the same time a DEV_STAT interrupt is generated.	_
4	RST		Bus Reset bit. On a bus reset, the device will automatically go to the default state. In the default state:	0
			 Device is unconfigured. 	
			 Will respond to address 0. 	
			 Control endpoint will be in the Stalled state. 	
			 All endpoints are enabled. 	
			 Data toggling is reset for all endpoints. 	
			 All buffers are cleared. 	
			 There is no change to the endpoint interrupt status. 	
			 DEV_STAT interrupt is generated. 	
		0	This bit is cleared when read.	
		1	This bit is set when the device receives a bus reset.	-
7:5	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.9.7 Get Device Status (Command: 0xFE, Data: read 1 byte)

The Get Device Status command returns the Device Status Register. Reading the device status returns 1 byte of data. The bit field definition is same as the Set Device Status Register as shown in Table 229.

14.9.8 Get Error Code (Command: 0xFF, Data: read 1 byte)

Different error conditions can arise inside the protocol engine. The Get Error Code command returns the error code which last occurred. The 4 least significant bits form the error code.

Table 230: Get Error Code Register bit description

Bit	Symbol	Value	Description	Reset value		
3:0	EC		Error Code.	0x0		
		0000	No Error.			
		0001	PID Encoding Error.			
		0010	Unknown PID.			
		0011	Unexpected Packet - any packet sequence violation from the specification.	_		
		0100	Error in Token CRC.	_		
		0101	Error in Data CRC.	_		
		0110	Time Out Error.	_		
		0111	Babble.	_		
		1000	Error in End of Packet.			
		1001	Sent/Received NAK.			
		1010	Sent Stall.			
		1011	Buffer Overrun Error.			
				1100	Sent Empty Packet (ISO Endpoints only).	
		1101	Bitstuff Error.			
		1110	Error in Sync.			
		1111	Wrong Toggle Bit in Data PID, ignored data.			
4	EA	-	The Error Active bit will be reset once this register is read.			
7:5	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		

14.9.9 Read Error Status (Command: 0xFB, Data: read 1 byte)

This command reads the 8 bit Error register from the USB device. If any of these bits is set, there will be an interrupt to the CPU. The error bits are reset after reading the register.

Table 231: Read Error Status Register bit description

Bit	Symbol	Description	Reset value
0	PID_ERR	PID encoding error or Unknown PID or Token CRC.	0
1	UEPKT	Unexpected Packet - any packet sequence violation from the specification.	0
2	DCRC	Data CRC error.	0
3	TIMEOUT	Time out error.	0
4	EOP	End of packet error.	0
5	B_OVRN	Buffer Overrun.	0
6	BTSTF	Bit stuff error.	0
7	TGL_ERR	Wrong toggle bit in data PID, ignored data.	0

14.9.10 Select Endpoint (Command: 0x00 - 0x1F, Data: read 1 byte (optional))

The Select Endpoint command initializes an internal pointer to the start of the selected buffer in EP_RAM. Optionally, this command can be followed by a data read, which returns some additional information on the packet in the buffer. The command code of 'select endpoint' is equal to the physical endpoint number. In the case of single buffer, B_2_FULL bit is not valid.

Chapter 14: USB Device Controller

Table 232: Select Endpoint Register bit description

Bit	Symbol	Value	Description	Reset value
0	F/E		The F/E bit gives the ORed result of B_1_FULL and B_2_FULL bits.	0
		0	For IN endpoint if the next write buffer is empty this bit is 0.	
		1	For OUT endpoint if the next read buffers is full this bit is 1.	
1	ST		Stalled endpoint indicator.	0
		0	The selected endpoint is not stalled.	
		1	The selected endpoint is stalled.	
2	STP		Setup bit: the value of this bit is updated after each successfully received packet (i.e. an ACKed package on that particular physical endpoint).	0
		0	The STP bit is cleared by doing a Select Endpoint/Clear Interrupt on this endpoint.	
		1	The last received packet for the selected endpoint was a setup packet.	_
3	РО		Packet over-written bit.	0
		0	The PO bit is cleared by the 'Select Endpoint/Clear Interrupt' command.	
		1	The previously received packet was over-written by a setup packet.	-
4	EPN		EP NAKed bit indicates sending of a NAK. If the host sends an OUT packet to a filled OUT buffer, the device returns NAK. If the host sends an IN token to an empty IN buffer, the device returns NAK.	0
		0	The EPN bit is reset after the device has sent an ACK after an OUT packet or when the device has seen an ACK after sending an IN packet.	
		1	The EPN bit is set when a NAK is sent and the interrupt on NAK feature is enabled.	_
5	B_1_FULL		The buffer 1 status.	0
		0	Buffer 1 is empty.	
		1	Buffer 1 is full.	-
6	B_2_FULL		The buffer 2 status.	0
		0	Buffer 2 is empty.	
		1	Buffer 2 is full.	_
7	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Volume 1

Chapter 14: USB Device Controller

14.9.11 Select Endpoint/Clear Interrupt (Command: 0x40 - 0x5F, Data: read 1 byte)

Commands 0x40 to 0x5F are identical to their Select Endpoint equivalents, with the following differences:

- They clear the associated interrupt in the USB clock domain only.
- In case of a control out endpoint, they clear the setup and over-written bits
- · Reading one byte is obligatory.

14.9.12 Set Endpoint Status (Command: 0x40 - 0x55, Data: write 1 byte (optional))

The Set Endpoint Status command sets status bits '7:5' and 0 of the endpoint. The Command Code of Set Endpoint Status is equal to the sum of 0x40 and the physical endpoint number in hex value. Not all bits can be set for all types of endpoints.

Table 233: Set Endpoint Status Register bit description

Bit	Symbol	Value	Description	Reset value
0	ST		Stalled endpoint bit. A Stalled control endpoint is automatically Unstalled when it receives a SETUP token, regardless of the content of the packet. If the endpoint should stay in its stalled state, the CPU can un-stall it.	0
			When a stalled endpoint is unstalled - either by the Set Endpoint Status command or by receiving a SETUP token - it is also re-initialized. This flushes the buffer: in case of an OUT buffer it waits for a DATA 0 PID; in case of an IN buffer it writes a DATA 0 PID. There is no change on the interrupt status of the endpoint. Even when unstalled, setting the stalled bit to 0 initializes the endpoint. When an endpoint is stalled by the Set Endpoint Status command it is also re-initialized.	
			The command to set the conditional stall bit will be ignored if the 'Setup Packet' bit is set (the EP will not be reset and no status bits will change).	
		0	The endpoint is unstalled.	
		1	The endpoint is stalled.	_
4:1	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
5	DA		Disabled endpoint bit.	0
		0	The endpoint is enabled.	
		1	The endpoint is disabled.	
6	RF_MO		Rate Feedback Mode.	0
		0	Interrupt endpoint is in the Toggle mode.	
		1	Interrupt endpoint is in the Rate Feedback mode. This means that transfer takes place without data toggle bit.	_
7	CND_ST		Conditional Stall bit.	0
		0	Unstalls both control endpoints.	
		1	Stall both control endpoints, unless the Setup Packet bit is set. It is defined only for control OUT endpoints.	_

Chapter 14: USB Device Controller

14.9.13 Clear Buffer (Command: 0xF2, Data: read 1 byte (optional))

When a packet sent by the host has been received successfully, an internal Endpoint Buffer Full flag is set. All subsequent packets will be refused by returning a NAK. When the CPU has read the data, it should free the buffer by the Clear Buffer command. When the buffer is cleared, new packets will be accepted.

When bit 0 of the optional data byte is 1, the previously received packet was over-written by a SETUP packet. The Packet overwritten bit is used only in control transfers. According to the USB specification, SETUP packet should be accepted irrespective of the buffer status. The software should always check the status of the PO bit after reading the SETUP data. If it is set then it should discard the previously read data, clear the PO bit by issuing a Select Endpoint/Clear Interrupt command, read the new SETUP data and again check the status of the PO bit.

Table 234: Clear Buffer Register bit description

Bit	Symbol	Value	Description	Reset value
0	РО		Packet over-written bit. This bit is only applicable to the control endpoint EP0.	0
		0	The previously received packet is intact.	
		1	The previously received packet was over-written by a later SETUP packet.	_
7:1	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

14.9.14 Validate Buffer (Command: 0xFA, Data: none)

When the CPU has written data into an IN buffer, it should set the buffer full flag by the Validate Buffer command. This indicates that the data in the buffer is valid and can be sent to the host when the next IN token is received.

A control IN buffer cannot be validated when the Packet Over-written bit of its corresponding OUT buffer is set or when the Set up packet is pending in the buffer. For the control endpoint the validated buffer will be invalidated when a Setup packet is received.

14.10 DMA descriptor

A DMA transfer can be characterized by a structure describing these parameters. This structure is called the DMA Descriptor (DD).

The DMA descriptors are placed in the USB RAM. These descriptors can be located anywhere in the USB RAM in the wordaligned boundaries. USB RAM is part of the system memory which is used for the USB purposes. It is located at address 0x7FD0 0000 and is 8192 bytes (8 kB) in size.

DD for non-isochronous endpoints are four-word long and isochronous endpoints are five-word long.

Total USB RAM required for DD is:

Total_USBDDRAM = $(No.of_non-ISOendpoints \times 4 + No.of_ISOendpoints \times 5)$

Chapter 14: USB Device Controller

There are certain parameters associated with a DMA transfer. These are:

- The start address of the DMA buffer in the USB RAM.
- The length of the DMA Buffer in the USB RAM.
- The start address of the next DMA buffer.
- Control information.
- DMA count information (Number of bytes transferred).
- DMA status information.

Table 235 lists the DMA descriptor fields.

Table 235: DMA descriptor

Word position	Access (H/W)	Access (S/W)	Bit position	Description
0	R	R/W	31:0	Next_DD_pointer (USB RAM address).
1	R	R/W	1:0	DMA_mode (00 -Normal; 01 - ATLE).
	R	R/W	2	Next_DD_valid (1 - valid; 0 - invalid).
	-	-	3	Reserved.
	R	R/W	4	Isochronous_endpoint (1 - isochronous; 0 - non-isochronous).
	R	R/W	15:5	Max_packet_size.
	R/W[1]	R/W	31:16	DMA_buffer_length in bytes.
2	R/W	R/W	31:0	DMA_buffer_start_addr.
3	R/W	R/I	0	DD_retired (To be initialized to 0).
	W	R/I	4:1	DD_status (To be initialized to 0):
				0000 - Not serviced.
				0001 - Being serviced.
				0010 - Normal completion.
				0011 - Data under run (short packet).
				1000 - Data over run.
				1001 - System error.
	W	R/I	5	Packet_valid (To be initialized to 0).
	W	R/I	6	LS_byte_extracted (ATLE mode) (To be initialized to 0).
	W	R/I	7	MS_byte_extracted (ATLE mode) (To be initialized to 0).
	R	W	13:8	Message_length_position (ATLE mode).
	-	-	15:14	Reserved.
	R/W	R/I	31:16	Present_DMA_count (To be initialized to 0).
4	R/W	R/W	31:0	Isochronous_packetsize_memory_address.

Legend: R - Read; W - Write; I - Initialize

14.10.1 Next_DD_pointer

Pointer to the memory location from where the next DMA descriptor has to be fetched.

^[1] Write only in ATLE mode

Chapter 14: USB Device Controller

14.10.2 DMA mode

Defines in which mode the DMA has to operate. Two modes have been defined, Normal and ATLE. In the normal mode the DMA engine will not split a packet into two different DMA buffers. In the ATLE mode splitting of the packet into two buffers can happen. This is because two transfers can be concatenated in the packet to improve the bandwidth. See Section 14.13 "Concatenated transfer (ATLE) mode operation" on page 236 for more details.

14.10.3 Next DD valid

This bit indicates whether the software has prepared the next DMA descriptor. If it is valid, the DMA engine once finished with the current descriptor will load the new descriptor.

14.10.4 Isochronous endpoint

The descriptor belongs to an isochronous endpoint. Hence, 5 words have to be read.

14.10.5 Max packet size

The maximum packet size of the endpoint. This parameter has to be used while transferring the data for IN endpoints from the memory. It is used for OUT endpoints to detect the short packet. This is applicable to non-isochronous endpoints only. The max_packet_size field should be the same as the value set in the MaxPacketSize register for the endpoint.

14.10.6 DMA buffer length

This indicates the depth of the DMA buffer allocated for transferring the data. The DMA engine will stop using this descriptor when this limit is reached and will look for the next descriptor. This will be set by the software in the normal mode operation for both IN and OUT endpoints. In the ATLE mode operation the buffer_length is set by software for IN endpoints. For OUT endpoints this is set by the hardware from the extracted length of the data stream. In case of the Isochronous endpoints the DMA_buffer_length is specified in terms of number of packets.

14.10.7 DMA buffer start addr

The address from where the data has to be picked up or to be stored. This field is updated packet-wise by DMA engine.

14.10.8 DD retired

This bit is set when the DMA engine finishes the current descriptor. This will happen when the end of the buffer is reached or a short packet is transferred (no isochronous endpoints) or an error condition is detected.

14.10.9 DD_status

The status of the DMA transfer is encoded in this field. The following status are defined:

- Not serviced No packet has been transferred yet. DD is in the initial position itself.
- Being serviced This status indicates that at least one packet is transferred.

- Normal completion The DD is retired because the end of the buffer is reached and there were no errors. DD retired bit also is set.
- **Data under run** Before reaching the end of the buffer, transfer is terminated because a short packet is received. DD retired bit also is set.
- Data over run End of the DMA buffer is reached in the middle of a packet transfer.
 This is an error situation. DD_retired bit will be set. The DMA count will show the value of DMA buffer length. The packet has to be re-transmitted from the FIFO.
 DMA ENABLE bit is reset.
- System error Transfer is terminated because of an error in the system bus.
 DD_retired bit is not set in this case. DMA_ENABLE bit is reset. Since system error can happen while updating the DD, the DD fields in the USB RAM may not be very reliable.

14.10.10 Packet valid

This bit indicates whether the last packet transferred to the memory is received with errors or not. This bit will be set if the packet is valid, i.e., it was received without errors. Since non-isochronous endpoint will not generate DMA request for packet with errors, this field will not make much sense to them as it will be set for all packets transferred. But for isochronous endpoints this information is useful. See Section 14.14 "Isochronous Endpoint Operation" on page 240 for isochronous endpoint operation.

14.10.11 LS byte extracted

Applicable only in the ATLE mode. This bit set indicates that the Least Significant Byte (LSB) of the transfer length has been already extracted. The extracted size will be reflected in the 'dma buffer length' field in the bits 23:16.

14.10.12 MS_byte_extracted

Applicable only in the ATLE mode. This bit set indicates that the Most Significant Byte (MSB) of the transfer size has been already extracted. The size extracted will be reflected in the 'dma_buffer_length' field at 31:24. Extraction stops when 'LS_Byte_extracted' and 'MS byte extracted' fields are set.

14.10.13 Present_DMA_count

The number of bytes transferred by the DMA engine at any point of time. This is updated packet-wise by the DMA engine when it updates the descriptor. In case of the Isochronous endpoints the Present DMA count is specified in terms of number of packets transferred.

14.10.14 Message_length_position

This applies only in the ATLE mode. This field gives the offset of the message length position embedded in the packet. This is applicable only for OUT endpoints. Offset 0 indicates that the message length starts from the first byte of the packet onwards.

14.10.15 Isochronous_packetsize_memory_address

The memory buffer address where the packet size information along with the frame number has to be transferred or fetched. See <u>Figure 55</u>. This is applicable to isochronous endpoints only.

Chapter 14: USB Device Controller

14.11 DMA operation

14.11.1 Triggering the DMA engine

An endpoint will raise a DMA request when the slave mode transfer is disabled by setting the corresponding bit in Endpoint Interrupt Enable register to 0 (Section 14.7.8).

The DMA transfer for an OUT endpoint is triggered when it receives a packet without any errors (i.e., the buffer is full) and the DMA_ENABLE (<u>Section 14.8.15 "USB EP DMA</u> Status register (USBEpDMASt - 0xE009 0084)") bit is set for this endpoint.

Transfer for an IN endpoint is triggered when the host requests for a packet of data and the DMA_ENABLE bit is set for this endpoint.

In DMA mode, the bits corresponding to Interrupt on NAK for Bulk OUT and Interrupt OUT endpoints (bit INAK_BO and INAK_IO) in Set Mode register (<u>Section 14.9.3 "Set Mode</u> (Command: 0xF3, Data: write 1 byte)") should be reset to 0.

14.11.2 Arbitration between endpoints

If more than one endpoint is requests for data transfer at the same time the endpoint with lower physical endpoint number value gets the priority.

14.12 Non Isochronous Endpoints - Normal Mode operation

14.12.1 Setting up DMA transfer

The software prepares the DDs for the physical endpoints that need DMA transfer. These DDs are present in the USB RAM. Also, the start address of the first DD is programmed into the DDP location for the corresponding endpoint. The software will then set the DMA_ENABLE bit for this endpoint in the EP DMA Status register (Section 14.8.15). The 'dma_mode' bits in the descriptor has to be set to '00' for normal mode operation. It should also initialize all the bits in the DD as given in the table.

14.12.2 Finding DMA Descriptor

When there is a trigger for a DMA transfer for an endpoint, DMA engine will first determine whether a new descriptor has to the fetched or not. A new descriptor need not have to be fetched if the last transfer was also made for the same endpoint and the DD is not yet in the 'retired' state. A flag called 'DMA_PROCEED' is used to identify this (see Section_14.12.4 "Optimizing Descriptor Fetch" on page 235).


If a new descriptor has to be read, the DMA engine will calculate the location of the DDP for this endpoint and will fetch the start address of DD from this location. A DD start address at location zero is considered invalid. In this case a 'new_dd_request' interrupt is raised. All other word boundaries are valid.

At any point of time if the DD is to be fetched, the status of DD (word 3) is read first and the status of the 'DD_retired' bit is checked. If this is not set, DDP points to a valid DD. If the 'DD_retired' bit is set, the DMA engine will read the 'control' field (word 1) of the DD.

If the bit 'next_DD_valid' bit' is set, the DMA engine will fetch the 'next_dd_pointer' field (word 0) of the DD and load it to the DDP. The new DDP is written to the UDCA area.

The full DMA descriptor (4 words) will in turn be fetched from this address pointed by DDP. The DD will give the details of the transfer to be done. The DMA engine will load its hardware resources with the information fetched from the DD (start address, DMA count etc.).

If the 'next_dd_valid' is not set and the DD_retired bit is set the DMA engine will raise the 'NEW DD REQUEST' interrupt for this endpoint. It also disables the DMA ENABLE bit.

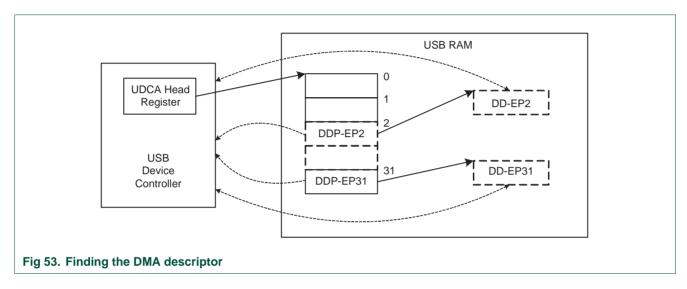

14.12.3 Transferring the Data

In case of OUT endpoints, the current packet will be read from the EP_RAM by the DMA Engine and will get transferred to the USB RAM memory locations starting from the address pointed by 'dma_buffer_start_addr'. In case of IN endpoints, the data will be fetched from the USB RAM and will be written to the EP_RAM. The 'dma_buffer_start_addr' and 'present_dma_count' will get updated while the transfer progresses.

14.12.4 Optimizing Descriptor Fetch

A DMA transfer normally involves multiple packet transfers. If a DD once fetched is equipped to do multiple transfers, the hardware will not fetch DD for all the succeeding packets. It will do the fetching only if the previous packet transferred on this channel does not belong to this endpoint. This is on the assumption that the current contents of the hardware resource and that of the descriptor to be fetched will be the same. In such a case DMA engine can proceed without fetching the new descriptor if it has not transferred enough data specified in the 'dma_buffer_length' field of the descriptor. To keep this information the hardware will have a flag set called 'DMA_PROCEED'.

This flag will be reset after the required number of bytes specified in the 'dma_buffer_length' field is transferred. It is also reset when the software writes into the EP DMA Disable register. This will give the software control over the reading of DD by the hardware. Hardware will be forced to read the DD for the next packet. Writing data 0x0 into the EP DMA Disable register will cause only resetting of the DMA_PROCEED flag without disabling DMA for any endpoint.

Chapter 14: USB Device Controller

14.12.5 Ending the packet transfer

The DMA engine will write back the DD with an updated status to the same memory location from where it was read. The 'dma_buffer_start_addr', 'present_dma_count' and the status bits field in the DD gets updated. Only words 2 and 3 are updated by hardware in this mode.

A DD can have the following types of completion:

Normal completion - If the current packet is fully transferred and the 'dma_count' field equals the 'dma_buffer_length' defined in the descriptor, the DD has a normal completion. The DD will be written back to memory with 'DD_retired' bit set. END_OF_TRANSFER interrupt is raised for this endpoint. DD_Status bits are updated for 'normal_completion' code.

Transfer end completion - If the current packet is fully transferred and its size is less than the 'max_packet_size' defined in the descriptor, and the end of the buffer is still not reached the transfer end completion occurs. The DD will be written back to the memory with 'DD_retired' bit set and DD_Status bits showing 'data under run' completion code. Also, the 'END_OF_TRANSFER' interrupt for this endpoint is raised.

Error completion - If the current packet is partially transferred i.e. end of the DMA buffer is reached in the middle of the packet transfer, an error situation occurs. The DD is written back with DD_status 'data over run' and 'DD_retired' bit is set. The DMA engine will raise the end of transfer interrupt and resets the corresponding bit for this endpoint in the 'DMA_ENABLE' register. This packet will be retransmitted to the memory fully when DMA_ENABLE bit is set again.


14.12.6 No Packet DD

For IN transfers, it can happen that for a request, the system does not have any data to send for a long time. The system can suppress this request by programming a no_packet DD. This is done by setting the 'Maxpacketsize' and 'dma_buffer_length' in the DD control field to 0. No packets will be sent to the host in response to the no_packet DD.

14.13 Concatenated transfer (ATLE) mode operation

Some host drivers like 'NDIS' (Network Driver Interface Standard) are capable of concatenating small transfers (delta transfers) to form a single large transfer. The device hardware should be able to break up this single transfer back into delta transfers and transfer them to different DMA buffers. This is achieved in the ATLE mode operation. This is applicable only for Bulk endpoints.

In ATLE mode, the Host driver can concatenate various transfer lengths, which correspond to different DMA descriptors on Device side. And these transfers have to be done on USB without breaking the packet. This is the primary difference between the Normal Mode of DMA operation and ATLE mode, wherein one DMA transfer length ends with either a full USB packet or a short packet and next DMA transfer length starts with a new USB packet in Normal mode, but these two transfers may be concatenated in the last USB packet of the first DMA transfer in ATLE mode.

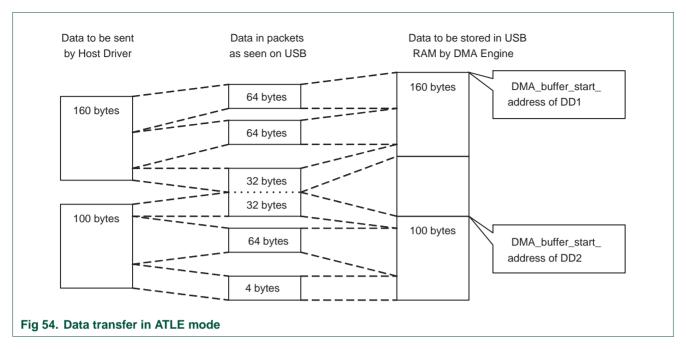

<u>Figure 54</u> shows a typical OUT transfer, where the host concatenates two DMA transfer lengths of 160 bytes and 100 bytes respectively. As seen on USB, there would be four packets of 64 bytes (MPS = 64) and a short packet of 4 bytes in ATLE mode unlike Normal mode with five packets of 64, 64, 32, 64, 36 bytes in the given order.

It is now responsibility of the DMA engine to separate these two transfers and put them in proper memory locations as pointed by the "DMA_buffer_start_address" field of DMA Descriptor 1 (DD1) and DMA Descriptor 2 (DD2).

There are two things in OUT transfer of ATLE mode, which differentiate it from the OUT transfer in Normal mode of DMA operation. The first one is that the Device software does not know the "DMA_buffer_length" of the incoming transfer and hence this field in DD is programmed to 0. But by the NDIS protocol, device driver does know at which location in the incoming data transfer, will the transfer length be stored. This value is programmed in the field "Message_length_position" of the DD.

It is responsibility of the hardware to read the two byte wide "DMA_buffer_length" at the offset (from start of transfer) specified by "Message_length_position", from incoming data and write it in "DMA_buffer_length" field of the DD. Once this information is extracted from the incoming data and updated in the DD, the transfer continues as in Normal mode of operation.

It may happen that the message length position points to the last byte in the USB packet, which means that out of two bytes of buffer length, first (LS) byte is available in the current packet, and the second (MS) byte would follow in the next packet. To deal with such situations, the flags "LS_byte_extracted" and "MS_byte_extracted" are used by hardware. When the hardware reads the LS byte (which is the last byte of USB packet), it writes the contents of LS byte in position (23:16) of "DMA_buffer_length" field, sets the flag "LS_byte_extracted" to 1 and updates the DD in System memory (since the packet transfer is over).

Chapter 14: USB Device Controller

On reception of the next packet, looking at "LS_byte_extracted" field 1 and "MS_byte_extracted" field 0, hardware knows that it has to read the first incoming byte as MS byte of buffer length, update the position (31:24) of "DMA_buffer_length" with the read contents and set the flag "MS_byte_extracted". After the extraction of MS byte of DMA buffer length, the transfer continues as in Normal mode of operation.

The second thing, which differentiates the ATLE mode OUT transfer from Normal mode OUT transfer, is the behavior in case when DD is retired in between a USB packet transfer.

As can be seen in the figure earlier, the first 32 bytes of the 3rd packet correspond to DD1 and the remaining 32 bytes correspond to DD2. In such a situation, on reception of first 32 bytes, the first DD (i.e. DD1) is retired and updated in the system memory, the new DD (pointed by "next_DD_pointer") is fetched and the remaining 32 bytes are transferred to the location in system memory pointed by "DMA_buffer_start_address" of new DD (i.e. DD2).

It should be noted that in ATLE mode, the software will always program the "LS_byte_extracted" and "MS_byte_extracted" fields to 0 while preparing a DD, and hence on fetching the DD2 in above situation, the Buffer Length Extraction process will start again as described earlier.

In case if the first DD is retired in between the packet transfer and the next DD is not programmed, i.e. "next_DD_valid" field in DD1 is 0, then the first DD is retired with the status "data over run" (DD_status = 1000), which has to be treated as an err or condition and the DMA channel for that particular endpoint is disabled by the hardware. Otherwise the first DD is retired with status "normal completion" (DD_status = 0010).

Please note that in this mode the last buffer length to be transferred would always end with a short packet or empty packet indicating that no more concatenated data is coming on the way. If the concatenated transfer lengths are such that the last transfer ends on a packet boundary, the (NDIS) host will send an empty packet to mark the End Of Transfer.

IN Transfer in ATLE mode

The operation in IN transfers is relatively simple than the OUT transfer in ATLE mode since device software knows the buffer length to be transferred and it is programmed in "DMA_buffer_length" field while preparing the DD, thus avoiding any transfer length extraction mechanism.

The only difference for IN transfers between ATLE mode and Normal mode of DMA operation is that the DDs can get retired in the middle of the USB packet transfer. In such a case, the hardware will update the first DD in system memory, fetch the new DD pointed by "next_DD_pointer" field of the first DD and fetch the remaining bytes from system memory pointed by "DMA_buffer_start_address" of second DD to complete the packet before sending it on USB.

In the above situation, if the next DD is not programmed, i.e. "next_DD_valid" field in DD is 0, and the buffer length for current DD has completed before the packet boundary, then the available bytes from current DD are sent as a short packet on USB, which marks the End Of Transfer for the Host.

Chapter 14: USB Device Controller

In cases, where the intended buffer lengths are already transferred and the last buffer length has completed on the USB packet boundary, it is responsibility of Device software to program the next DD with "DMA_buffer_length" field 0, after which an empty packet is sent on USB by the hardware to mark the End Of Transfer for the Host.

14.13.1 Setting up the DMA transfer

There is an additional field in the descriptor called 'message_length_position' which has to be set for the OUT endpoints. This indicates the start location of the message length in the incoming data packet. Also the software will set the 'dma_buffer_length' field to '0' for OUT endpoints as this field has to be updated by hardware.

For IN endpoints, descriptors are to be set in the same way as the normal mode operation.

Since a single packet can have two transfers which has to be transferred or collected from different DMA buffers, the software should keep two buffers ready always, except for the last delta transfer which ends with a short packet.

14.13.2 Finding the DMA Descriptor

DMA descriptors are found in the same way as the normal mode operation.

14.13.3 Transferring the Data

For OUT end points if the 'LS_byte_extracted' or 'MS_byte_extracted' bit in the status field is not set, the hardware will extract the transfer length from the data stream. 'dma_buffer_length' field is derived from this information which is 2 bytes long. Once the extraction is complete both the 'LS_byte_extracted' and 'MS_byte_extracted' bits will be set.

For IN endpoints transfer proceeds like the normal mode and continues till the number of bytes transferred equals the 'dma_buffer_length'.

14.13.4 Ending the packet transfer

DMA engine proceeds with the transfer till the number of bytes specified in the field 'dma_buffer_length' gets transferred to or from the USB RAM. END_OF_TRANSFER interrupt will be generated. If this happens in the middle of the packet, the linked DD will get loaded and the remaining part of the packet gets transferred to or from the address pointed by the new DD.

For an OUT endpoint if the linked DD is not valid and the packet is partially transferred to memory, the DD ends with data_over_run status set and DMA will be disabled for this endpoint. Otherwise DD_status will be updated with 'normal completion'.

For an IN endpoint if the linked DD is not valid and the packet is partially transferred to USB, DD ends with 'normal completion' and the packet will be sent as a short packet (since this situation is the end of transfer). Also, when the linked DD is valid and buffer length is 0, a short packet will be sent.

14.14 Isochronous Endpoint Operation

In case of isochronous endpoint operation the packet size can vary on each and every packet. There will be one packet per isochronous endpoint at every frame.

14.14.1 Setting up of DMA transfer

For Isochronous DMA descriptor the DMA length is set in terms of the number of frames the transfer is to be made rather than the number of bytes. The DMA count is also updated in terms of the number of frames.

14.14.2 Finding the DMA Descriptor

Finding the descriptor is done in the same way as that for a non isochronous endpoint.

DMA descriptor has a bit field in the word 1 (isochronous_endpoint) to indicate that the descriptor belongs to an isochronous endpoint. Also, isochronous DD has a fifth word showing where the packet length for the frame has to be put (for OUT endpoint) or from where it has to be read.

DMA request will be placed for DMA enabled isochronous endpoints on every frame interrupt. For a DMA request the DMA engine will fetch the descriptor and if it identifies that the descriptor belongs to an Isochronous endpoint, it will fetch the fifth word of the DD which will give the location from where the packet length has to be placed or fetched.

14.14.3 Transferring the Data

The data is transferred to or from the memory location pointed by the dma_buffer_start_addr. After the end of the packet transfer the dma_count value is incremented by 1.

For an OUT transfer a word is formed by combining the frame number and the packet length such that the packet length appears at the least significant 2 bytes (15 to 0). Bit 16 shows whether the packet is valid or not (set when packet is valid i.e. it was received without any errors). The frame number appears in the most significant 2 bytes (bit 31 to 17). The frame number is available from the USB device. This word is then transferred to the address location pointed by the variable lsochronous_packet_size_memory_address. The lsochronous_packet_size_memory_address is incremented by 4 after receiving or transmitting an Isochronous data packet. The Isochronous_packet_size memory buffer should be big enough to hold information of all packets sent by the host.

For an IN endpoint only the bits from 15 to 0 are applicable. An Isochronous data packet of size specified by this field is transferred from the USB device to the Host in each frame. If the size programmed in this location is zero an empty packet will be sent by the USB device.

The Isochronous endpoint works only in the normal mode DMA operation.


An Isochronous endpoint can have only 'normal completion' since there is no short packet on Isochronous endpoint and the transfer continues infinitely till a system error occurs. Also, there is no data_over_run detection.

14.14.4 Isochronous OUT Endpoint Operation Example

For example assume that an isochronous endpoint is programmed for the transfer of 10 frames. After transferring four frames with packet size 10,15, 8 and 20 bytes; the descriptors and memory map looks as shown in <u>Figure 55</u>. Assuming that the transfer starts when the internal frame number was 21.

The_total_number_of_bytes_transferred = 0x0A + 0x0F + 0x08 + 0x14 = 0x35.

The sixteenth bit for all the words in the packet length memory will be set to 1.

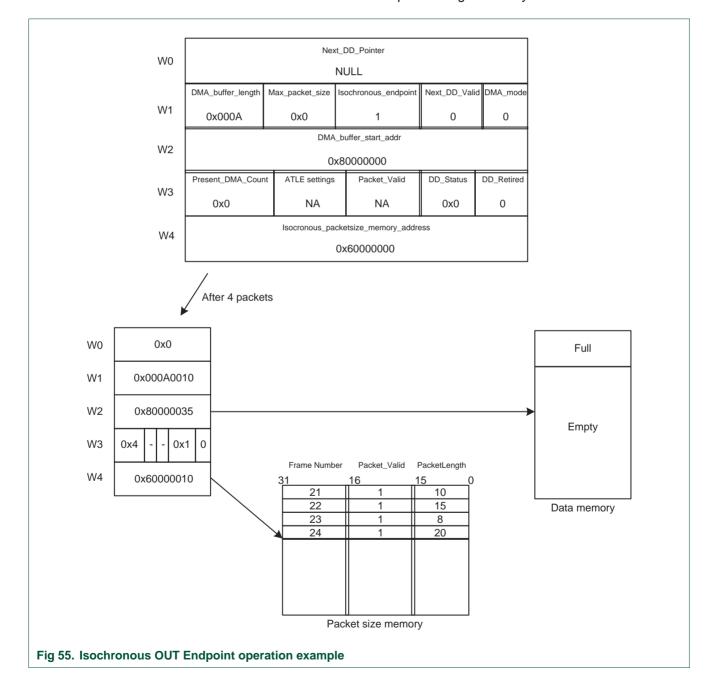

241



UM10139

Chapter 15: Timer/Counter TIMER0 and TIMER1

Rev. 01 — 15 August 2005

User manual



15.1 Features

- A 32-bit Timer/Counter with a programmable 32-bit Prescaler.
- Counter or Timer operation
- Up to four 32-bit capture channels per timer, that can take a snapshot of the timer
 value when an input signal transitions. A capture event may also optionally generate
 an interrupt.
- Four 32-bit match registers that allow:
 - Continuous operation with optional interrupt generation on match.
 - Stop timer on match with optional interrupt generation.
 - Reset timer on match with optional interrupt generation.
- Up to four external outputs corresponding to match registers, with the following capabilities:
 - Set low on match.
 - Set high on match.
 - Toggle on match.
 - Do nothing on match.

15.2 Applications

- Interval Timer for counting internal events.
- Pulse Width Demodulator via Capture inputs.
- Free running timer.

15.3 Description

The Timer/Counter is designed to count cycles of the peripheral clock (PCLK) or an externally-supplied clock, and can optionally generate interrupts or perform other actions at specified timer values, based on four match registers. It also includes four capture inputs to trap the timer value when an input signal transitions, optionally generating an interrupt.

15.4 Pin description

Table 236 gives a brief summary of each of the Timer/Counter related pins.

Chapter 15: TIMER0 and TIMER1

Table 236: Timer/Counter pin description

Table 236:	Timer/Counte	er pin description
Pin	Type	Description
CAP0.30 CAP1.30	Input	Capture Signals- A transition on a capture pin can be configured to load one of the Capture Registers with the value in the Timer Counter and optionally generate an interrupt. Capture functionality can be selected from a number of pins. When more than one pin is selected for a Capture input on a single TIMER0/1 channel, the pin with the lowest Port number is used. If for example pins 30 (P0.6) and 46 (P0.16) are selected for CAP0.2, only pin 30 will be used by TIMER0 to perform CAP0.2 function.
		Here is the list of all CAPTURE signals, together with pins on where they can be selected:
		 CAP0.0 (3 pins): P0.2, P0.22 and P0.30
		 CAP0.1 (2 pins): P0.4 and P0.27
		 CAP0.2 (3 pin): P0.6, P0.16 and P0.28
		• CAP0.3 (1 pin): P0.29
		• CAP1.0 (1 pin): P0.10
		• CAP1.1 (1 pin): P0.11
		 CAP1.2 (2 pins): P0.17 and P0.19
		 CAP1.3 (2 pins): P0.18 and P0.21
		Timer/Counter block can select a capture signal as a clock source instead of the PCLK derived clock. For more details see <u>Section 15.5.3</u> "Count Control Register (CTCR, TIMER0: TOCTCR - 0xE000 4070 and TIMER1: T1TCR - 0xE000 8070)" on page 246.
MAT0.30 MAT1.30	Output	External Match Output 0/1- When a match register 0/1 (MR3:0) equals the timer counter (TC) this output can either toggle, go low, go high, or do nothing. The External Match Register (EMR) controls the functionality of this output. Match Output functionality can be selected on a number of pins in parallel. It is also possible for example, to have 2 pins selected at the same time so that they provide MAT1.3 function in parallel.
		Here is the list of all MATCH signals, together with pins on where they can be selected:
		 MAT0.0 (2 pins): P0.3 and P0.22
		 MAT0.1 (2 pins): P0.5 and P0.27
		 MAT0.2 (2 pin): P0.16 and P0.28
		 MAT0.3 (1 pin): P0.29
		• MAT1.0 (1 pin): P0.12
		• MAT1.1 (1 pin): P0.13
		 MAT1.2 (2 pins): P0.17 and P0.19
		• MAT1.3 (2 pins): P0.18 and P0.20

15.5 Register description

Each Timer/Counter contains the registers shown in <u>Table 237</u>. More detailed descriptions follow.

Chapter 15: TIMER0 and TIMER1

Table 237: TIMER/COUNTER0 and TIMER/COUNTER1 register map

Generic Name	Description	Access	Reset value ^[1]	TIMER/ COUNTER0 Address & Name	TIMER/ COUNTER1 Address & Name
IR	Interrupt Register. The IR can be written to clear interrupts. The IR can be read to identify which of eight possible interrupt sources are pending.	R/W	0	0xE000 4000 T0IR	0xE000 8000 T1IR
TCR	Timer Control Register. The TCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the TCR.	R/W	0	0xE000 4004 T0TCR	0xE000 8004 T1TCR
TC	Timer Counter. The 32-bit TC is incremented every PR+1 cycles of PCLK. The TC is controlled through the TCR.	R/W	0	0xE000 4008 T0TC	0xE000 8008 T1TC
PR	Prescale Register. The Prescale Counter (below) is equal to this value, the next clock increments the TC and clears the PC.	R/W	0	0xE000 400C T0PR	0xE000 800C T1PR
PC	Prescale Counter. The 32-bit PC is a counter which is incremented to the value stored in PR. When the value in PR is reached, the TC is incremented and the PC is cleared. The PC is observable and controllable through the bus interface.	R/W	0	0xE000 4010 T0PC	0xE000 8010 T1PC
MCR	Match Control Register. The MCR is used to control if an interrupt is generated and if the TC is reset when a Match occurs.	R/W	0	0xE0004014 T0MCR	0xE000 8014 T1MCR
MR0	Match Register 0. MR0 can be enabled through the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt every time MR0 matches the TC.	R/W	0	0xE000 4018 T0MR0	0xE000 8018 T1MR0
MR1	Match Register 1. See MR0 description.	R/W	0	0xE000 401C T0MR1	0xE000 801C T1MR1
MR2	Match Register 2. See MR0 description.	R/W	0	0xE000 4020 T0MR2	0xE000 8020 T1MR2
MR3	Match Register 3. See MR0 description.	R/W	0	0xE000 4024 T0MR3	0xE000 8024 T1MR3
CCR	Capture Control Register. The CCR controls which edges of the capture inputs are used to load the Capture Registers and whether or not an interrupt is generated when a capture takes place.	R/W	0	0xE000 4028 T0CCR	0xE000 8028 T1CCR
CR0	Capture Register 0. CR0 is loaded with the value of TC when there is an event on the CAPn.0(CAP0.0 or CAP1.0 respectively) input.	RO	0	0xE000 402C T0CR0	0xE000 802C T1CR0
CR1	Capture Register 1. See CR0 description.	RO	0	0xE000 4030 T0CR1	0xE000 8030 T1CR1
CR2	Capture Register 2. See CR0 description.	RO	0	0xE000 4034 T0CR2	0xE000 8034 T1CR2

Chapter 15: TIMER0 and TIMER1

Table 237: TIMER/COUNTER0 and TIMER/COUNTER1 register map

Generic Name	Description	Access	Reset value ^[1]	TIMER/ COUNTER0 Address & Name	TIMER/ COUNTER1 Address & Name
CR3	Capture Register 3. See CR0 description.	RO	0	0xE000 4038 T0CR3	0xE000 8038 T1CR3
EMR	External Match Register. The EMR controls the external match pins MATn.0-3 (MAT0.0-3 and MAT1.0-3 respectively).	R/W	0	0xE000 403C T0EMR	0xE000 803C T1EMR
CTCR	Count Control Register. The CTCR selects between Timer and Counter mode, and in Counter mode selects the signal and edge(s) for counting.	R/W	0	0xE000 4070 T0CTCR	0xE000 8070 T1CTCR

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

15.5.1 Interrupt Register (IR, TIMER0: T0IR - 0xE000 4000 and TIMER1: T1IR - 0xE000 8000)

The Interrupt Register consists of four bits for the match interrupts and four bits for the capture interrupts. If an interrupt is generated then the corresponding bit in the IR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect.

Table 238: Interrupt Register (IR, TIMER0: T0IR - address 0xE000 4000 and TIMER1: T1IR - address 0xE000 8000) bit description

Bit	Symbol	Description	Reset value
0	MR0 Interrupt	Interrupt flag for match channel 0.	0
1	MR1 Interrupt	Interrupt flag for match channel 1.	0
2	MR2 Interrupt	Interrupt flag for match channel 2.	0
3	MR3 Interrupt	Interrupt flag for match channel 3.	0
4	CR0 Interrupt	Interrupt flag for capture channel 0 event.	0
5	CR1 Interrupt	Interrupt flag for capture channel 1 event.	0
6	CR2 Interrupt	Interrupt flag for capture channel 2 event.	0
7	CR3 Interrupt	Interrupt flag for capture channel 3 event.	0

15.5.2 Timer Control Register (TCR, TIMER0: T0TCR - 0xE000 4004 and TIMER1: T1TCR - 0xE000 8004)

The Timer Control Register (TCR) is used to control the operation of the Timer/Counter.

Table 239: Timer Control Register (TCR, TIMER0: T0TCR - address 0xE000 4004 and TIMER1: T1TCR - address 0xE000 8004) bit description

		· · · · · · · · · · · · · · · · · · ·	
Bit	Symbol	Description	Reset value
0	Counter Enable	When one, the Timer Counter and Prescale Counter are enabled for counting. When zero, the counters are disabled.	0
1	Counter Reset	When one, the Timer Counter and the Prescale Counter are synchronously reset on the next positive edge of PCLK. The counters remain reset until TCR[1] is returned to zero.	0
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.5.3 Count Control Register (CTCR, TIMER0: T0CTCR - 0xE000 4070 and TIMER1: T1TCR - 0xE000 8070)

The Count Control Register (CTCR) is used to select between Timer and Counter mode, and in Counter mode to select the pin and edge(s) for counting.

When Counter Mode is chosen as a mode of operation, the CAP input (selected by the CTCR bits 3:2) is sampled on every rising edge of the PCLK clock. After comparing two consecutive samples of this CAP input, one of the following four events is recognized: rising edge, falling edge, either of edges or no changes in the level of the selected CAP input. Only if the identified event corresponds to the one selected by bits 1:0 in the CTCR register, the Timer Counter register will be incremented.

Effective processing of the externally supplied clock to the counter has some limitations. Since two successive rising edges of the PCLK clock are used to identify only one edge on the CAP selected input, the frequency of the CAP input can not exceed one half of the PCLK clock. Consequently, duration of the high/low levels on the same CAP input in this case can not be shorter than 1/PCLK.

Table 240: Count Control Register (CTCR, TIMER0: T0CTCR - address 0xE000 4070 and TIMER1: T1TCR - address 0xE000 8070) bit description

Bit	Symbol	Value	Description	Reset value
1:0	Counter/ Timer Mode		This field selects which rising PCLK edges can increment Timer's Prescale Counter (PC), or clear PC and increment Timer Counter (TC).	00
		00	Timer Mode: every rising PCLK edge	
		01	Counter Mode: TC is incremented on rising edges on the CAP input selected by bits 3:2.	_
		10	Counter Mode: TC is incremented on falling edges on the CAP input selected by bits 3:2.	_
		11	Counter Mode: TC is incremented on both edges on the CAP input selected by bits 3:2.	_

246

Table 240: Count Control Register (CTCR, TIMER0: T0CTCR - address 0xE000 4070 and TIMER1: T1TCR - address 0xE000 8070) bit description

Bit	Symbol	Value	Description	Reset value
3:2	Count Input		When bits 1:0 in this register are not 00, these bits select which CAP pin is sampled for clocking:	00
	Select	00	CAPn.0 (CAP0.0 for TIMER0 and CAP1.0 for TIMER1)	
		01	CAPn.1 (CAP0.1 for TIMER0 and CAP1.1 for TIMER1)	_
		10	CAPn.2 (CAP0.2 for TIMER0 and CAP1.2 for TIMER1)	_
		11	CAPn.3 (CAP0.3 for TIMER0 and CAP1.3 for TIMER1)	_
			Note: If Counter mode is selected for a particular CAPn input in the TnCTCR, the 3 bits for that input in the Capture Control Register (TnCCR) must be programmed as 000. However, capture and/or interrupt can be selected for the other 3 CAPn inputs in the same timer.	
7:4	-	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.5.4 Timer Counter (TC, TIMER0: T0TC - 0xE000 4008 and TIMER1: T1TC - 0xE000 8008)

The 32-bit Timer Counter is incremented when the Prescale Counter reaches its terminal count. Unless it is reset before reaching its upper limit, the TC will count up through the value 0xFFFF FFFF and then wrap back to the value 0x0000 0000. This event does not cause an interrupt, but a Match register can be used to detect an overflow if needed.

15.5.5 Prescale Register (PR, TIMER0: T0PR - 0xE000 400C and TIMER1: T1PR - 0xE000 800C)

The 32-bit Prescale Register specifies the maximum value for the Prescale Counter.

15.5.6 Prescale Counter Register (PC, TIMER0: T0PC - 0xE000 4010 and TIMER1: T1PC - 0xE000 8010)

The 32-bit Prescale Counter controls division of PCLK by some constant value before it is applied to the Timer Counter. This allows control of the relationship of the resolution of the timer versus the maximum time before the timer overflows. The Prescale Counter is incremented on every PCLK. When it reaches the value stored in the Prescale Register, the Timer Counter is incremented and the Prescale Counter is reset on the next PCLK. This causes the TC to increment on every PCLK when PR = 0, every 2 PCLKs when PR = 1, etc.

15.5.7 Match Registers (MR0 - MR3)

The Match register values are continuously compared to the Timer Counter value. When the two values are equal, actions can be triggered automatically. The action possibilities are to generate an interrupt, reset the Timer Counter, or stop the timer. Actions are controlled by the settings in the MCR register.

Chapter 15: TIMER0 and TIMER1

15.5.8 Match Control Register (MCR, TIMER0: T0MCR - 0xE000 4014 and TIMER1: T1MCR - 0xE000 8014)

The Match Control Register is used to control what operations are performed when one of the Match Registers matches the Timer Counter. The function of each of the bits is shown in Table 241.

Table 241: Match Control Register (MCR, TIMER0: T0MCR - address 0xE000 4014 and TIMER1: T1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset value
0	MR0I	1	Interrupt on MR0: an interrupt is generated when MR0 matches the value in the TC.	0
		0	This interrupt is disabled	-
1	MR0R	1	Reset on MR0: the TC will be reset if MR0 matches it.	0
		0	Feature disabled.	_
2	MR0S	1	Stop on MR0: the TC and PC will be stopped and TCR[0] will be set to 0 if MR0 matches the TC.	0
		0	Feature disabled.	_
3	MR1I	1	Interrupt on MR1: an interrupt is generated when MR1 matches the value in the TC.	0
		0	This interrupt is disabled	_
4	MR1R	1	Reset on MR1: the TC will be reset if MR1 matches it.	0
		0	Feature disabled.	_
5 M	MR1S	1	Stop on MR1: the TC and PC will be stopped and TCR[0] will be set to 0 if MR1 matches the TC.	0
		0	Feature disabled.	_
6	MR2I	1	Interrupt on MR2: an interrupt is generated when MR2 matches the value in the TC.	0
		0	This interrupt is disabled	_
7	MR2R	1	Reset on MR2: the TC will be reset if MR2 matches it.	0
		0	Feature disabled.	_
8	MR2S	1	Stop on MR2: the TC and PC will be stopped and TCR[0] will be set to 0 if MR2 matches the TC.	0
		0	Feature disabled.	_
9	MR3I	1	Interrupt on MR3: an interrupt is generated when MR3 matches the value in the TC.	0
		0	This interrupt is disabled	_
10	MR3R	1	Reset on MR3: the TC will be reset if MR3 matches it.	0
		0	Feature disabled.	_
11	MR3S	1	Stop on MR3: the TC and PC will be stopped and TCR[0] will be set to 0 if MR3 matches the TC.	0
		0	Feature disabled.	_
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.5.9 Capture Registers (CR0 - CR3)

Each Capture register is associated with a device pin and may be loaded with the Timer Counter value when a specified event occurs on that pin. The settings in the Capture Control Register register determine whether the capture function is enabled, and whether a capture event happens on the rising edge of the associated pin, the falling edge, or on both edges.

15.5.10 Capture Control Register (CCR, TIMER0: T0CCR - 0xE000 4028 and TIMER1: T1CCR - 0xE000 8028)

The Capture Control Register is used to control whether one of the four Capture Registers is loaded with the value in the Timer Counter when the capture event occurs, and whether an interrupt is generated by the capture event. Setting both the rising and falling bits at the same time is a valid configuration, resulting in a capture event for both edges. In the description below, "n" represents the Timer number, 0 or 1.

Table 242: Capture Control Register (CCR, TIMER0: T0CCR - address 0xE000 4028 and TIMER1: T1CCR - address 0xE000 8028) bit description

Bit	Symbol	Value	Description	Reset value
0	CAP0RE	1	Capture on CAPn.0 rising edge: a sequence of 0 then 1 on CAPn.0 will cause CR0 to be loaded with the contents of TC.	0
		0	This feature is disabled.	_
1	CAP0FE	1	Capture on CAPn.0 falling edge: a sequence of 1 then 0 on CAPn.0 will cause CR0 to be loaded with the contents of TC.	0
		0	This feature is disabled.	-
2	2 CAP0I	1	Interrupt on CAPn.0 event: a CR0 load due to a CAPn.0 event will generate an interrupt.	0
		0	This feature is disabled.	_
3	CAP1RE	1	Capture on CAPn.1 rising edge: a sequence of 0 then 1 on CAPn.1 will cause CR1 to be loaded with the contents of TC.	0
		0	This feature is disabled.	_
4	CAP1FE	1	Capture on CAPn.1 falling edge: a sequence of 1 then 0 on CAPn.1 will cause CR1 to be loaded with the contents of TC.	0
		0	This feature is disabled.	-
5	CAP1I	1	Interrupt on CAPn.1 event: a CR1 load due to a CAPn.1 event will generate an interrupt.	0
		0	This feature is disabled.	_
6	CAP2RE	1	Capture on CAPn.2 rising edge: A sequence of 0 then 1 on CAPn.2 will cause CR2 to be loaded with the contents of TC.	0
		0	This feature is disabled.	_
7	CAP2FE	1	Capture on CAPn.2 falling edge: a sequence of 1 then 0 on CAPn.2 will cause CR2 to be loaded with the contents of TC.	0
		0	This feature is disabled.	_
8	CAP2I	1	Interrupt on CAPn.2 event: a CR2 load due to a CAPn.2 event will generate an interrupt.	0
		0	This feature is disabled.	-
9	CAP3RE	1	Capture on CAPn.3 rising edge: a sequence of 0 then 1 on CAPn.3 will cause CR3 to be loaded with the contents of TC.	0
		0	This feature is disabled.	-

Chapter 15: TIMER0 and TIMER1

Table 242: Capture Control Register (CCR, TIMER0: T0CCR - address 0xE000 4028 and TIMER1: T1CCR - address 0xE000 8028) bit description

Bit	Symbol	Value	Description	Reset value
10	CAP3FE	1	Capture on CAPn.3 falling edge: a sequence of 1 then 0 on CAPn.3 will cause CR3 to be loaded with the contents of TC	0
		0	This feature is disabled.	-
11	CAP3I	1	Interrupt on CAPn.3 event: a CR3 load due to a CAPn.3 event will generate an interrupt.	0
		0	This feature is disabled.	-
15:12	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

15.5.11 External Match Register (EMR, TIMER0: T0EMR - 0xE000 403C; and TIMER1: T1EMR - 0xE000 803C)

The External Match Register provides both control and status of the external match pins MAT(0-3).

Table 243: External Match Register (EMR, TIMER0: T0EMR - address 0xE000 403C and TIMER1: T1EMR - address0xE000 803C) bit description

Bit	Symbol	Description	Reset value
0	EM0	External Match 0. This bit reflects the state of output MAT0.0/MAT1.0, whether or not this output is connected to its pin. When a match occurs between the TC and MR0, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[5:4] control the functionality of this output.	0
1	EM1	External Match 1. This bit reflects the state of output MAT0.1/MAT1.1, whether or not this output is connected to its pin. When a match occurs between the TC and MR1, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[7:6] control the functionality of this output.	0
2	EM2	External Match 2. This bit reflects the state of output MAT0.2/MAT1.2, whether or not this output is connected to its pin. When a match occurs between the TC and MR2, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[9:8] control the functionality of this output.	0
3	EM3	External Match 3. This bit reflects the state of output MAT0.3/MAT1.3, whether or not this output is connected to its pin. When a match occurs between the TC and MR3, this output of the timer can either toggle, go low, go high, or do nothing. Bits EMR[11:10] control the functionality of this output.	0
5:4	EMC0	External Match Control 0. Determines the functionality of External Match 0. <u>Table 244</u> shows the encoding of these bits.	00
7:6	EMC1	External Match Control 1. Determines the functionality of External Match 1. <u>Table 244</u> shows the encoding of these bits.	00
9:8	EMC2	External Match Control 2. Determines the functionality of External Match 2. <u>Table 244</u> shows the encoding of these bits.	00
11:10	EMC3	External Match Control 3. Determines the functionality of External Match 3. <u>Table 244</u> shows the encoding of these bits.	00
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA


Table 244: External match control


EMR[11:10], EMR[9:8], EMR[7:6], or EMR[5:4]	Function
00	Do Nothing.
01	Clear the corresponding External Match bit/output to 0 (MATn.m pin is LOW if pinned out).
10	Set the corresponding External Match bit/output to 1 (MATn.m pin is HIGH if pinned out).
11	Toggle the corresponding External Match bit/output.

15.6 Example timer operation

<u>Figure 56</u> shows a timer configured to reset the count and generate an interrupt on match. The prescaler is set to 2 and the match register set to 6. At the end of the timer cycle where the match occurs, the timer count is reset. This gives a full length cycle to the match value. The interrupt indicating that a match occurred is generated in the next clock after the timer reached the match value.

<u>Figure 57</u> shows a timer configured to stop and generate an interrupt on match. The prescaler is again set to 2 and the match register set to 6. In the next clock after the timer reaches the match value, the timer enable bit in TCR is cleared, and the interrupt indicating that a match occurred is generated.

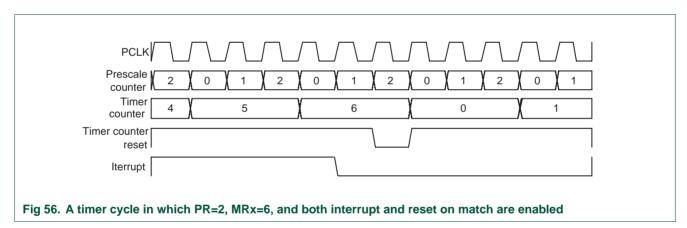


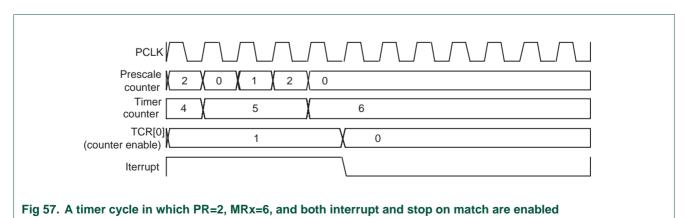



15.7 Architecture

The block diagram for TIMER/COUNTER0 and TIMER/COUNTER1 is shown in Figure 58.

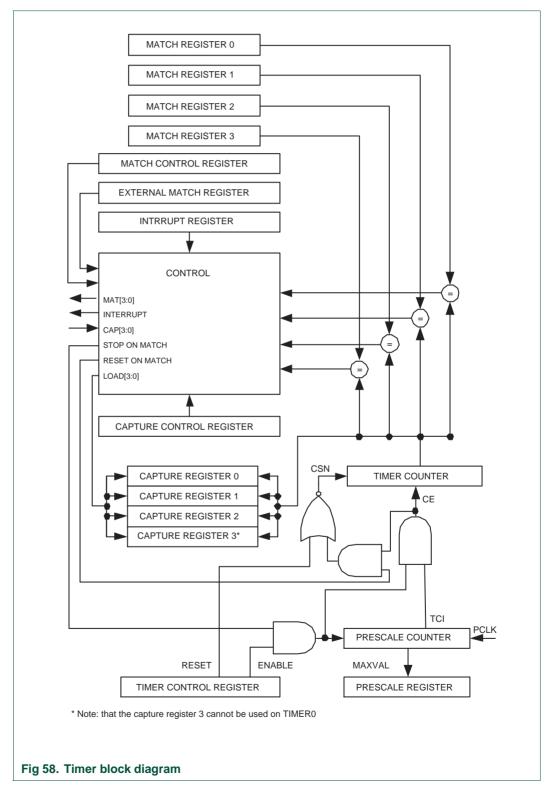



UM10139

Chapter 16: Pulse Width Modulator (PWM)

Rev. 01 — 15 August 2005

User manual

<u>LPC2141/2/4/6/8 Pulse Width Modulator is based on standard Timer/Counter 0/1</u> <u>described in the previous chapter. Application can choose among PWM and match functions available.</u>

16.1 Features

- Seven match registers allow up to 6 single edge controlled or 3 double edge controlled PWM outputs, or a mix of both types. The match registers also allow:
 - Continuous operation with optional interrupt generation on match.
 - Stop timer on match with optional interrupt generation.
 - Reset timer on match with optional interrupt generation.
- An external output for each match register with the following capabilities:
 - Set low on match.
 - Set high on match.
 - Toggle on match.
 - Do nothing on match.
- Supports single edge controlled and/or double edge controlled PWM outputs. Single
 edge controlled PWM outputs all go high at the beginning of each cycle unless the
 output is a constant low. Double edge controlled PWM outputs can have either edge
 occur at any position within a cycle. This allows for both positive going and negative
 going pulses.
- Pulse period and width can be any number of timer counts. This allows complete
 flexibility in the trade-off between resolution and repetition rate. All PWM outputs will
 occur at the same repetition rate.
- Double edge controlled PWM outputs can be programmed to be either positive going or negative going pulses.
- Match register updates are synchronized with pulse outputs to prevent generation of erroneous pulses. Software must "release" new match values before they can become effective.
- May be used as a standard timer if the PWM mode is not enabled.
- A 32-bit Timer/Counter with a programmable 32-bit Prescaler.
- Four 32-bit capture channels take a snapshot of the timer value when an input signal transitions. A capture event may also optionally generate an interrupt.

16.2 Description

The PWM is based on the standard Timer block and inherits all of its features, although only the PWM function is pinned out on the LPC2141/2/4/6/8. The Timer is designed to count cycles of the peripheral clock (PCLK) and optionally generate interrupts or perform other actions when specified timer values occur, based on seven match registers. It also

JM10139

Chapter 16: PWM

Volume 1

includes four capture inputs to save the timer value when an input signal transitions, and optionally generate an interrupt when those events occur. The PWM function is in addition to these features, and is based on match register events.


The ability to separately control rising and falling edge locations allows the PWM to be used for more applications. For instance, multi-phase motor control typically requires three non-overlapping PWM outputs with individual control of all three pulse widths and positions.

Two match registers can be used to provide a single edge controlled PWM output. One match register (PWMMR0) controls the PWM cycle rate, by resetting the count upon match. The other match register controls the PWM edge position. Additional single edge controlled PWM outputs require only one match register each, since the repetition rate is the same for all PWM outputs. Multiple single edge controlled PWM outputs will all have a rising edge at the beginning of each PWM cycle, when an PWMMR0 match occurs.

Three match registers can be used to provide a PWM output with both edges controlled. Again, the PWMMR0 match register controls the PWM cycle rate. The other match registers control the two PWM edge positions. Additional double edge controlled PWM outputs require only two match registers each, since the repetition rate is the same for all PWM outputs.

With double edge controlled PWM outputs, specific match registers control the rising and falling edge of the output. This allows both positive going PWM pulses (when the rising edge occurs prior to the falling edge), and negative going PWM pulses (when the falling edge occurs prior to the rising edge).

<u>Figure 59</u> shows the block diagram of the PWM. The portions that have been added to the standard timer block are on the right hand side and at the top of the diagram.

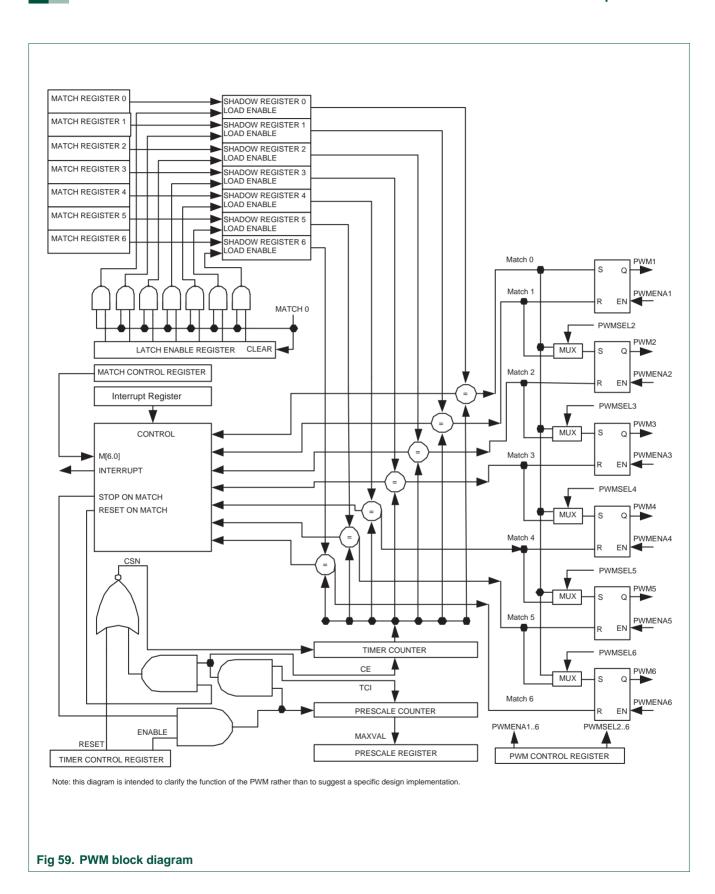

A sample of how PWM values relate to waveform outputs is shown in <u>Figure 60</u>. PWM output logic is shown in <u>Figure 59</u> that allows selection of either single or double edge controlled PWM outputs via the muxes controlled by the PWMSELn bits. The match register selections for various PWM outputs is shown in <u>Table 245</u>. This implementation supports up to N-1 single edge PWM outputs or (N-1)/2 double edge PWM outputs, where N is the number of match registers that are implemented. PWM types can be mixed if desired.

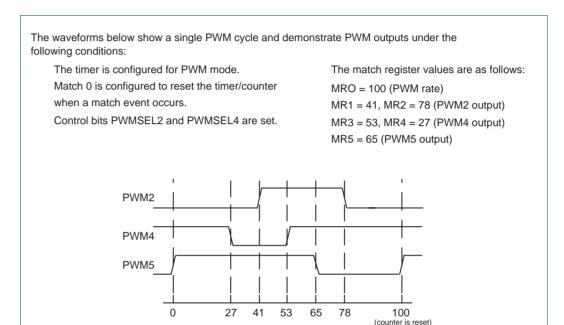


Table 245: Set and reset inputs for PWM Flip-Flops

Fig 60. Sample PWM waveforms

PWM Channel	Single Edge PWI	(PWMSELn = 0)	Double Edge PW	M (PWMSELn = 1)
	Set by	Reset by	Set by	Reset by
1	Match 0	Match 1	Match 0 ^[1]	Match 1 ¹¹
2	Match 0	Match 2	Match 1	Match 2
3	Match 0	Match 3	Match 2 ^[2]	Match 3[2]
4	Match 0	Match 4	Match 3	Match 4
5	Match 0	Match 5	Match 4[2]	Match 5[2]
6	Match 0	Match 6	Match 5	Match 6

^[1] Identical to single edge mode in this case since Match 0 is the neighboring match register. Essentially, PWM1 cannot be a double edged output.

16.2.1 Rules for single edge controlled PWM outputs

1. All single edge controlled PWM outputs go high at the beginning of a PWM cycle unless their match value is equal to 0.

^[2] It is generally not advantageous to use PWM channels 3 and 5 for double edge PWM outputs because it would reduce the number of double edge PWM outputs that are possible. Using PWM 2, PWM4, and PWM6 for double edge PWM outputs provides the most pairings.

Chapter 16: PWM

Each PWM output will go low when its match value is reached. If no match occurs (i.e. the match value is greater than the PWM rate), the PWM output remains continuously high.

16.2.2 Rules for double edge controlled PWM outputs

Five rules are used to determine the next value of a PWM output when a new cycle is about to begin:

- The match values for the next PWM cycle are used at the end of a PWM cycle (a time point which is coincident with the beginning of the next PWM cycle), except as noted in rule 3.
- 2. A match value equal to 0 or the current PWM rate (the same as the Match channel 0 value) have the same effect, except as noted in rule 3. For example, a request for a falling edge at the beginning of the PWM cycle has the same effect as a request for a falling edge at the end of a PWM cycle.
- 3. When match values are changing, if one of the "old" match values is equal to the PWM rate, it is used again once if the neither of the new match values are equal to 0 or the PWM rate, and there was no old match value equal to 0.
- 4. If both a set and a clear of a PWM output are requested at the same time, clear takes precedence. This can occur when the set and clear match values are the same as in, or when the set or clear value equals 0 and the other value equals the PWM rate.
- 5. If a match value is out of range (i.e. greater than the PWM rate value), no match event occurs and that match channel has no effect on the output. This means that the PWM output will remain always in one state, allowing always low, always high, or "no change" outputs.

16.3 Pin description

Table 246 gives a brief summary of each of PWM related pins.

Table 246: Pin summary

Pin	Туре	Description
PWM1	Output	Output from PWM channel 1.
PWM2	Output	Output from PWM channel 2.
PWM3	Output	Output from PWM channel 3.
PWM4	Output	Output from PWM channel 4.
PWM5	Output	Output from PWM channel 5.
PWM6	Output	Output from PWM channel 6.

16.4 Register description

The PWM function adds new registers and registers bits as shown in Table 247 below.



Table 247: Pulse Width Modulator (PWM) register map

Table 247:	Pulse Width Modulator (PWM) register map			
Name	Description	Access	Reset value[1]	Address
PWMIR	PWM Interrupt Register. The PWMIR can be written to clear interrupts. The PWMIR can be read to identify which of the possible interrupt sources are pending.	R/W	0	0xE001 4000
PWMTCR	PWM Timer Control Register. The PWMTCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the PWMTCR.	R/W	0	0xE001 4004
PWMTC	PWM Timer Counter. The 32-bit TC is incremented every PWMPR+1 cycles of PCLK. The PWMTC is controlled through the PWMTCR.	R/W	0	0xE001 4008
PWMPR	PWM Prescale Register. The PWMTC is incremented every PWMPR+1 cycles of PCLK.	R/W	0	0xE001 400C
PWMPC	PWM Prescale Counter. The 32-bit PC is a counter which is incremented to the value stored in PR. When the value in PWMPR is reached, the PWMTC is incremented. The PWMPC is observable and controllable through the bus interface.	R/W	0	0xE001 4010
PWMMCR	PWM Match Control Register. The PWMMCR is used to control if an interrupt is generated and if the PWMTC is reset when a Match occurs.	R/W	0	0xE001 4014
PWMMR0	PWM Match Register 0. PWMMR0 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR0 and the PWMTC sets all PWM outputs that are in single-edge mode, and sets PWM1 if it is in double-edge mode.	R/W	0	0xE001 4018
PWMMR1	PWM Match Register 1. PWMMR1 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR1 and the PWMTC clears PWM1 in either single-edge mode or double-edge mode, and sets PWM2 if it is in double-edge mode.	R/W	0	0xE001 401C
PWMMR2	PWM Match Register 2. PWMMR2 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR2 and the PWMTC clears PWM2 in either single-edge mode or double-edge mode, and sets PWM3 if it is in double-edge mode.	R/W	0	0xE001 4020
PWMMR3	PWM Match Register 3. PWMMR3 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR3 and the PWMTC clears PWM3 in either single-edge mode or double-edge mode, and sets PWM4 if it is in double-edge mode.	R/W	0	0xE001 4024
PWMMR4	PWM Match Register 4. PWMMR4 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR4 and the PWMTC clears PWM4 in either single-edge mode or double-edge mode, and sets PWM5 if it is in double-edge mode.	R/W	0	0xE001 4040
PWMMR5	PWM Match Register 5. PWMMR5 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR5 and the PWMTC clears PWM5 in either single-edge mode or double-edge mode, and sets PWM6 if it is in double-edge mode.	R/W	0	0xE001 4044

Table 247: Pulse Width Modulator (PWM) register map

Name	Description	Access	Reset value ^[1]	Address
PWMMR6	PWM Match Register 6. PWMMR6 can be enabled through PWMMCR to reset the PWMTC, stop both the PWMTC and PWMPC, and/or generate an interrupt when it matches the PWMTC. In addition, a match between PWMMR6 and the PWMTC clears PWM6 in either single-edge mode or double-edge mode.	R/W	0	0xE001 4048
PWMPCR	PWM Control Register. Enables PWM outputs and selects PWM channel types as either single edge or double edge controlled.	R/W	0	0xE001 404C
PWMLER	PWM Latch Enable Register. Enables use of new PWM match values.	R/W	0	0xE001 4050

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

16.4.1 PWM Interrupt Register (PWMIR - 0xE001 4000)

The PWM Interrupt Register consists of eleven bits (<u>Table 248</u>), seven for the match interrupts and four reserved for the future use. If an interrupt is generated then the corresponding bit in the PWMIR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect.

Table 248: PWM Interrupt Register (PWMIR - address 0xE001 4000) bit description

Bit	Symbol	Description	Reset value
0	PWMMR0 Interrupt	Interrupt flag for PWM match channel 0.	0
1	PWMMR1 Interrupt	Interrupt flag for PWM match channel 1.	0
2	PWMMR2 Interrupt	Interrupt flag for PWM match channel 2.	0
3	PWMMR3 Interrupt	Interrupt flag for PWM match channel 3.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	0000
8	PWMMR4 Interrupt	Interrupt flag for PWM match channel 4.	0
9	PWMMR5 Interrupt	Interrupt flag for PWM match channel 5.	0
10	PWMMR6 Interrupt	Interrupt flag for PWM match channel 6.	0
15:11	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

16.4.2 PWM Timer Control Register (PWMTCR - 0xE001 4004)

The PWM Timer Control Register (PWMTCR) is used to control the operation of the PWM Timer Counter. The function of each of the bits is shown in Table 249.

Volume 1

Table 249: PWM Timer Control Register (PWMTCR - address 0xE001 4004) bit description

Bit	Symbol	Description	Reset value
0	Counter Enable	When one, the PWM Timer Counter and PWM Prescale Counter are enabled for counting. When zero, the counters are disabled.	0
1	Counter Reset	When one, the PWM Timer Counter and the PWM Prescale Counter are synchronously reset on the next positive edge of PCLK. The counters remain reset until TCR[1] is returned to zero.	0
2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
3	PWM Enable	When one, PWM mode is enabled. PWM mode causes shadow registers to operate in connection with the Match registers. A program write to a Match register will not have an effect on the Match result until the corresponding bit in PWMLER has been set, followed by the occurrence of a PWM Match 0 event. Note that the PWM Match register that determines the PWM rate (PWM Match 0) must be set up prior to the PWM being enabled. Otherwise a Match event will not occur to cause shadow register contents to become effective.	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

16.4.3 PWM Timer Counter (PWMTC - 0xE001 4008)

The 32-bit PWM Timer Counter is incremented when the Prescale Counter reaches its terminal count. Unless it is reset before reaching its upper limit, the PWMTC will count up through the value 0xFFFF FFFF and then wrap back to the value 0x0000 0000. This event does not cause an interrupt, but a Match register can be used to detect an overflow if needed.

16.4.4 PWM Prescale Register (PWMPR - 0xE001 400C)

The 32-bit PWM Prescale Register specifies the maximum value for the PWM Prescale Counter.

16.4.5 PWM Prescale Counter register (PWMPC - 0xE001 4010)

The 32-bit PWM Prescale Counter controls division of PCLK by some constant value before it is applied to the PWM Timer Counter. This allows control of the relationship of the resolution of the timer versus the maximum time before the timer overflows. The PWM Prescale Counter is incremented on every PCLK. When it reaches the value stored in the PWM Prescale Register, the PWM Timer Counter is incremented and the PWM Prescale Counter is reset on the next PCLK. This causes the PWM TC to increment on every PCLK when PWMPR = 0, every 2 PCLKs when PWMPR = 1, etc.

Chapter 16: PWM

Volume 1

16.4.6 PWM Match Registers (PWMMR0 - PWMMR6)

The 32-bit PWM Match register values are continuously compared to the PWM Timer Counter value. When the two values are equal, actions can be triggered automatically. The action possibilities are to generate an interrupt, reset the PWM Timer Counter, or stop the timer. Actions are controlled by the settings in the PWMMCR register.

16.4.7 PWM Match Control Register (PWMMCR - 0xE001 4014)

The PWM Match Control Register is used to control what operations are performed when one of the PWM Match Registers matches the PWM Timer Counter. The function of each of the bits is shown in Table 250.

Table 250: Match Control Register (MCR, TIMER0: T0MCR - address 0xE000 4014 and TIMER1: T1MCR - address 0xE000 8014) bit description

Bit	Symbol	Value	Description	Reset value
0	PWMMR0I	1	Interrupt on PWMMR0: an interrupt is generated when PWMMR0 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	_
1	PWMMR0R	1	Reset on PWMMR0: the PWMTC will be reset if PWMMR0 matches it.	0
		0	This feature is disabled.	
2	PWMMR0S	1	Stop on PWMMR0: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR0 matches the PWMTC.	0
		0	This feature is disabled	_
3	PWMMR1I	1	Interrupt on PWMMR1: an interrupt is generated when PWMMR1 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	_
1	PWMMR1R	1	Reset on PWMMR1: the PWMTC will be reset if PWMMR1 matches it.	0
		0	This feature is disabled.	_
5	PWMMR1S	1	Stop on PWMMR1: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR1 matches the PWMTC.	0
		0	This feature is disabled.	_
6	PWMMR2I	1	Interrupt on PWMMR2: an interrupt is generated when PWMMR2 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	_
7	PWMMR2R	1	Reset on PWMMR2: the PWMTC will be reset if PWMMR2 matches it.	0
		0	This feature is disabled.	_
8	PWMMR2S	1	Stop on PWMMR2: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR2 matches the PWMTC.	0
		0	This feature is disabled	_
9	PWMMR3I	1	Interrupt on PWMMR3: an interrupt is generated when PWMMR3 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	_
10	PWMMR3R	1	Reset on PWMMR3: the PWMTC will be reset if PWMMR3 matches it.	0
		0	This feature is disabled	=

Bit	Symbol	Value	Description	Reset value
11	PWMMR3S	1	Stop on PWMMR3: The PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR3 matches the PWMTC.	0
		0	This feature is disabled	_
12	PWMMR4I	1	Interrupt on PWMMR4: An interrupt is generated when PWMMR4 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	-
13	PWMMR4R	1	Reset on PWMMR4: the PWMTC will be reset if PWMMR4 matches it.	0
		0	This feature is disabled.	-
14	PWMMR4S	1	Stop on PWMMR4: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR4 matches the PWMTC.	0
		0	This feature is disabled	_
15	PWMMR5I	1	Interrupt on PWMMR5: An interrupt is generated when PWMMR5 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	-
16	PWMMR5R	1	Reset on PWMMR5: the PWMTC will be reset if PWMMR5 matches it.	0
		0	This feature is disabled.	_
17	PWMMR5S	1	Stop on PWMMR5: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR5 matches the PWMTC.	0
		0	This feature is disabled	_
18	PWMMR6I	1	Interrupt on PWMMR6: an interrupt is generated when PWMMR6 matches the value in the PWMTC.	0
		0	This interrupt is disabled.	-
19	PWMMR6R	1	Reset on PWMMR6: the PWMTC will be reset if PWMMR6 matches it.	0
		0	This feature is disabled.	_
20	PWMMR6S	1	Stop on PWMMR6: the PWMTC and PWMPC will be stopped and PWMTCR[0] will be set to 0 if PWMMR6 matches the PWMTC.	0
		0	This feature is disabled	_
31:21	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

16.4.8 PWM Control Register (PWMPCR - 0xE001 404C)

The PWM Control Register is used to enable and select the type of each PWM channel. The function of each of the bits are shown in Table 251.

Table 251: PWM Control Register (PWMPCR - address 0xE001 404C) bit description

Bit	Symbol	Value	Description	Reset value
1:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
2	PWMSEL2	1	Selects double edge controlled mode for the PWM2 output.	0
		0	Selects single edge controlled mode for PWM2.	
3	PWMSEL3	1	Selects double edge controlled mode for the PWM3 output.	0
		0	Selects single edge controlled mode for PWM3.	_

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.

Table 251: PWM Control Register (PWMPCR - address 0xE001 404C) bit description

Bit	Symbol	Value	Description	Reset value
4	PWMSEL4	1	Selects double edge controlled mode for the PWM4 output.	0
		0	Selects single edge controlled mode for PWM4.	_
5	PWMSEL5	1	Selects double edge controlled mode for the PWM5 output.	0
		0	Selects single edge controlled mode for PWM5.	_
6	PWMSEL6	1	Selects double edge controlled mode for the PWM6 output.	0
		0	Selects single edge controlled mode for PWM6.	_
8:7	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
9	PWMENA1	1	The PWM1 output enabled.	0
		0	The PWM1 output disabled.	_
10	PWMENA2	1	The PWM2 output enabled.	0
		0	The PWM2 output disabled.	_
11	PWMENA3	1	The PWM3 output enabled.	0
		0	The PWM3 output disabled.	_
12	PWMENA4	1	The PWM4 output enabled.	0
		0	The PWM4 output disabled.	_
13	PWMENA5	1	The PWM5 output enabled.	0
		0	The PWM5 output disabled.	_
14	PWMENA6	1	The PWM6 output enabled.	0
		0	The PWM6 output disabled.	_
15	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

16.4.9 PWM Latch Enable Register (PWMLER - 0xE001 4050)

The PWM Latch Enable Register is used to control the update of the PWM Match registers when they are used for PWM generation. When software writes to the location of a PWM Match register while the Timer is in PWM mode, the value is held in a shadow register. When a PWM Match 0 event occurs (normally also resetting the timer in PWM mode), the contents of shadow registers will be transferred to the actual Match registers if the corresponding bit in the Latch Enable Register has been set. At that point, the new values will take effect and determine the course of the next PWM cycle. Once the transfer of new values has taken place, all bits of the LER are automatically cleared. Until the corresponding bit in the PWMLER is set and a PWM Match 0 event occurs, any value written to the PWM Match registers has no effect on PWM operation.

For example, if PWM2 is configured for double edge operation and is currently running, a typical sequence of events for changing the timing would be:

- Write a new value to the PWM Match1 register.
- Write a new value to the PWM Match2 register.
- Write to the PWMLER, setting bits 1 and 2 at the same time.
- The altered values will become effective at the next reset of the timer (when a PWM Match 0 event occurs).

The order of writing the two PWM Match registers is not important, since neither value will be used until after the write to PWMLER. This insures that both values go into effect at the same time, if that is required. A single value may be altered in the same way if needed.

The function of each of the bits in the PWMLER is shown in Table 252.

Table 252: PWM Latch Enable Register (PWMLER - address 0xE001 4050) bit description

Bit	Symbol	Description	Reset value
0	Enable PWM Match 0 Latch	Writing a one to this bit allows the last value written to the PWM Match 0 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
1	Enable PWM Match 1 Latch	Writing a one to this bit allows the last value written to the PWM Match 1 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
2	Enable PWM Match 2 Latch	Writing a one to this bit allows the last value written to the PWM Match 2 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
3	Enable PWM Match 3 Latch	Writing a one to this bit allows the last value written to the PWM Match 3 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
4	Enable PWM Match 4 Latch	Writing a one to this bit allows the last value written to the PWM Match 4 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
5	Enable PWM Match 5 Latch	Writing a one to this bit allows the last value written to the PWM Match 5 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
6	Enable PWM Match 6 Latch	Writing a one to this bit allows the last value written to the PWM Match 6 register to be become effective when the timer is next reset by a PWM Match event. See Section 16.4.7 "PWM Match Control Register (PWMMCR - 0xE001 4014)".	0
7	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA



UM10139

Chapter 17: Analog-to-Digital Converter (ADC)

Rev. 01 — 15 August 2005

User manual

17.1 Features

- 10 bit successive approximation analog to digital converter (one in LPC2141/2 and two in LPC2144/6/8).
- Input multiplexing among 6 or 8 pins (ADC0 and ADC1).
- Power-down mode.
- Measurement range 0 V to V_{REF} (typically 3 V; not to exceed V_{DDA} voltage level).
- 10 bit conversion time \geq 2.44 μ s.
- Burst conversion mode for single or multiple inputs.
- Optional conversion on transition on input pin or Timer Match signal.
- Global Start command for both converters (LPC2144/6/8 only).

17.2 Description

Basic clocking for the A/D converters is provided by the VPB clock. A programmable divider is included in each converter, to scale this clock to the 4.5 MHz (max) clock needed by the successive approximation process. A fully accurate conversion requires 11 of these clocks.

17.3 Pin description

Table 253 gives a brief summary of each of ADC related pins.

Table 253: ADC pin description

Pin	Туре	Description
AD0.7:6, AD0.4:1 & AD1.7:0 (LPC2144/6/8)	Input	Analog Inputs. The ADC cell can measure the voltage on any of these input signals. Note that these analog inputs are always connected to their pins, even if the Pin function Select register assigns them to port pins. A simple self-test of the ADC can be done by driving these pins as port outputs.
		Note: if the ADC is used, signal levels on analog input pins must not be above the level of V_{3A} at any time. Otherwise, A/D converter readings will be invalid. If the A/D converter is not used in an application then the pins associated with A/D inputs can be used as 5 V tolerant digital IO pins.
		Warning: while the ADC pins are specified as 5 V tolerant (see <u>Table 58 "Pindescription" on page 69</u>), the analog multiplexing in the ADC block is not. More than $3.3 \text{ V (V}_{DDA}) + 10 \text{ %}$ should not be applied to any pin that is selected as an ADC input, or the ADC reading will be incorrect. If for example AD0.0 and AD0.1 are used as the ADC0 inputs and voltage on AD0.0 = 4.5 V while AD0.1 = 2.5 V , an excessive voltage on the AD0.0 can cause an incorrect reading of the AD0.1, although the AD0.1 input voltage is within the right range.
V _{REF}	Reference	Voltage Reference. This pin is provides a voltage reference level for the A/D converter(s).
V _{DDA} , V _{SSA}	Power	Analog Power and Ground. These should be nominally the same voltages as V_{DD} and V_{SS} , but should be isolated to minimize noise and error.



17.4 Register description

The A/D Converter registers are shown in Table 254.

Table 254: ADC registers

Table 254.	ADC registers				
Generic Name	Description	Access	Reset value ^[1]	AD0 Address & Name	AD1 Address & Name
ADCR	A/D Control Register. The ADCR register must be written to select the operating mode before A/D conversion can occur.	R/W	0x0000 0001	0xE003 4000 AD0CR	0xE006 0000 AD1CR
ADGDR	A/D Global Data Register. This register contains the ADC's DONE bit and the result of the most recent A/D conversion.	R/W	NA	0xE003 4004 AD0GDR	0xE006 0004 AD1GDR
ADSTAT	A/D Status Register. This register contains DONE and OVERRUN flags for all of the A/D channels, as well as the A/D interrupt flag.	RO	0x0000 0000	0xE003 4030 AD0STAT	0xE006 0030 AD1STAT
ADGSR	A/D Global Start Register. This address can be written (in the AD0 address range) to start conversions in both A/D converters simultaneously.	WO	0x00		3 4008 GSR
ADINTEN	A/D Interrupt Enable Register. This register contains enable bits that allow the DONE flag of each A/D channel to be included or excluded from contributing to the generation of an A/D interrupt.	R/W	0x0000 0100	0xE003 400C AD0INTEN	0xE006 000C AD1INTEN
ADDR0	A/D Channel 0 Data Register. This register contains the result of the most recent conversion completed on channel 0.	RO	NA	0xE003 4010 AD0DR0	0xE006 0010 AD1DR0
ADDR1	A/D Channel 1 Data Register. This register contains the result of the most recent conversion completed on channel 1.	RO	NA	0xE003 4014 AD0DR1	0xE006 0014 AD1DR1
ADDR2	A/D Channel 2 Data Register. This register contains the result of the most recent conversion completed on channel 2.	RO	NA	0xE003 4018 AD0DR2	0xE006 0018 AD1DR2
ADDR3	A/D Channel 3 Data Register. This register contains the result of the most recent conversion completed on channel 3.	RO	NA	0xE003 401C AD0DR3	0xE006 001C AD1DR3
ADDR4	A/D Channel 4 Data Register. This register contains the result of the most recent conversion completed on channel 4.	RO	NA	0xE003 4020 AD0DR4	0xE006 0020 AD1DR4
ADDR5	A/D Channel 5 Data Register. This register contains the result of the most recent conversion completed on channel 5.	RO	NA	0xE003 4024 AD0DR5	0xE006 0024 AD1DR5
ADDR6	A/D Channel 6 Data Register. This register contains the result of the most recent conversion completed on channel 6.	RO	NA	0xE003 4028 AD0DR6	0xE006 0028 AD1DR6
ADDR7	A/D Channel 7 Data Register. This register contains the result of the most recent conversion completed on channel 7.	RO	NA	0xE003 402C AD0DR7	0xE006 002C AD1DR7

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

17.4.1 A/D Control Register (AD0CR - 0xE003 4000 and AD1CR - 0xE006 0000)

Volume 1

Table 255: A/D Control Register (AD0CR - address 0xE003 4000 and AD1CR - address 0xE006 0000) bit description

Bit	Symbol	Value	Description	Reset value
7:0	SEL		Selects which of the AD0.7:0/AD1.7:0 pins is (are) to be sampled and converted. For AD0, bit 0 selects Pin AD0.0, and bit 7 selects pin AD0.7. In software-controlled mode, only one of these bits should be 1. In hardware scan mode, any value containing 1 to 8 ones. All zeroes is equivalent to 0x01.	0x01
15:8	CLKDIV		The VPB clock (PCLK) is divided by (this value plus one) to produce the clock for the A/D converter, which should be less than or equal to 4.5 MHz. Typically, software should program the smallest value in this field that yields a clock of 4.5 MHz or slightly less, but in certain cases (such as a high-impedance analog source) a slower clock may be desirable.	0
scanning (if necessary) th conversion after the start of higher numbered 1-bits (pi			The AD converter does repeated conversions at the rate selected by the CLKS field, scanning (if necessary) through the pins selected by 1s in the SEL field. The first conversion after the start corresponds to the least-significant 1 in the SEL field, then higher numbered 1-bits (pins) if applicable. Repeated conversions can be terminated by clearing this bit, but the conversion that's in progress when this bit is cleared will be completed.	0
			Important: START bits must be 000 when BURST = 1 or conversions will not start.	_
		0	Conversions are software controlled and require 11 clocks.	
19:17	CLKS		This field selects the number of clocks used for each conversion in Burst mode, and the number of bits of accuracy of the result in the RESULT bits of ADDR, between 11 clocks (10 bits) and 4 clocks (3 bits).	000
		000	11 clocks / 10 bits	
		001	10 clocks / 9bits	_
		010	9 clocks / 8 bits	_
		011	8 clocks / 7 bits	_
		100	7 clocks / 6 bits	
		101	6 clocks / 5 bits	
		110	5 clocks / 4 bits	
		111	4 clocks / 3 bits	
20	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
21	PDN	1	The A/D converter is operational.	0
		0	The A/D converter is in power-down mode.	-
23:22	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

Table 255: A/D Control Register (AD0CR - address 0xE003 4000 and AD1CR - address 0xE006 0000) bit description

Bit	Symbol	Value	Description	Reset value
26:24	START		When the BURST bit is 0, these bits control whether and when an A/D conversion is started:	0
		000	No start (this value should be used when clearing PDN to 0).	
		001	Start conversion now.	_
		010	Start conversion when the edge selected by bit 27 occurs on P0.16/EINT0/MAT0.2/CAP0.2 pin.	_
		011	Start conversion when the edge selected by bit 27 occurs on P0.22/TD3/CAP0.0/MAT0.0 pin.	_
		100	Start conversion when the edge selected by bit 27 occurs on MAT0.1.	_
		101	Start conversion when the edge selected by bit 27 occurs on MAT0.3.	_
		110	Start conversion when the edge selected by bit 27 occurs on MAT1.0.	_
		111	Start conversion when the edge selected by bit 27 occurs on MAT1.1.	_
27	EDGE		This bit is significant only when the START field contains 010-111. In these cases:	0
		1	Start conversion on a falling edge on the selected CAP/MAT signal.	
		0	Start conversion on a rising edge on the selected CAP/MAT signal.	_
31:28	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

17.4.2 A/D Global Data Register (AD0GDR - 0xE003 4004 and AD1GDR - 0xE006 0004)

Table 256: A/D Global Data Register (AD0GDR - address 0xE003 4004 and AD1GDR - address 0xE006 0004) bit description

Bit	Symbol	Description	Reset value
5:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:6	RESULT	When DONE is 1, this field contains a binary fraction representing the voltage on the Ain pin selected by the SEL field, divided by the voltage on the V_{DDA} pin V_{NEF} . Zero in the field indicates that the voltage on the Ain pin was less than, equal to, or close to that on V_{SSA} , while 0x3FF indicates that the voltage on Ain was close to, equal to, or greater than that on V_{REF} .	
23:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	CHN	These bits contain the channel from which the RESULT bits were converted (e.g. 000 identifies channel 0, 001 channel 1).	NA
29:27	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
30	OVERUN	This bit is 1 in burst mode if the results of one or more conversions was (were) lost and overwritten before the conversion that produced the result in the RESULT bits. This bit is cleared by reading this register.	0
31	DONE	This bit is set to 1 when an A/D conversion completes. It is cleared when this register is read and when the ADCR is written. If the ADCR is written while a conversion is still in progress, this bit is set and a new conversion is started.	0

17.4.3 A/D Global Start Register (ADGSR - 0xE003 4008)

Software can write this register to simultaneously initiate conversions on both A/D controllers. This register is available in LPC2144/6/8 devices only.

Table 257: A/D Global Start Register (ADGSR - address 0xE003 4008) bit description

Volume 1

Bit	Symbol	Value	Description	Reset value
15:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
16	BURST	1	The AD converters do repeated conversions at the rate selected by their CLKS fields, scanning (if necessary) through the pins selected by 1s in their SEL field. The first conversion after the start corresponds to the least-significant 1 in the SEL field, then higher numbered 1-bits (pins) if applicable. Repeated conversions can be terminated by clearing this bit, but the conversion that's in progress when this bit is cleared will be completed.	0
			Important: START bits must be 000 when BURST = 1 or conversions will not start.	_
		0	Conversions are software controlled and require 11 clocks.	
23:17	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	START		When the BURST bit is 0, these bits control whether and when an A/D conversion is started:	0
		000	No start (this value should be used when clearing PDN to 0).	
		001	Start conversion now.	_
		010	Start conversion when the edge selected by bit 27 occurs on P0.16/EINT0/MAT0.2/CAP0.2 pin.	_
		011	Start conversion when the edge selected by bit 27 occurs on P0.22/TD3/CAP0.0/MAT0.0 pin.	_
		100	Start conversion when the edge selected by bit 27 occurs on MAT0.1.	_
		101	Start conversion when the edge selected by bit 27 occurs on MAT0.3.	_
		110	Start conversion when the edge selected by bit 27 occurs on MAT1.0.	_
		111	Start conversion when the edge selected by bit 27 occurs on MAT1.1.	_
27	EDGE		This bit is significant only when the START field contains 010-111. In these cases:	0
		1	Start conversion on a falling edge on the selected CAP/MAT signal.	
		0	Start conversion on a rising edge on the selected CAP/MAT signal.	_
31:28	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

17.4.4 A/D Status Register (ADSTAT, ADC0: AD0CR - 0xE003 4004 and ADC1: AD1CR - 0xE006 0004)

The A/D Status register allows checking the status of all A/D channels simultaneously. The DONE and OVERRUN flags appearing in the ADDRn register for each A/D channel are mirrored in ADSTAT. The interrupt flag (the logical OR of all DONE flags) is also found in ADSTAT.

Volume 1

Table 258: A/D Status Register (ADSTAT, ADC0: AD0STAT - address 0xE003 4004 and ADC1: AD1STAT - address 0xE006 0004) bit description

Bit	Symbol	Description	Reset value
0	DONE0	This bit mirrors the DONE status flag from the result register for A/D channel 0.	0
1	DONE1	This bit mirrors the DONE status flag from the result register for A/D channel 1.	0
2	DONE2	This bit mirrors the DONE status flag from the result register for A/D channel 2.	0
3	DONE3	This bit mirrors the DONE status flag from the result register for A/D channel 3.	0
4	DONE4	This bit mirrors the DONE status flag from the result register for A/D channel 4.	0
5	DONE5	This bit mirrors the DONE status flag from the result register for A/D channel 5.	0
6	DONE6	This bit mirrors the DONE status flag from the result register for A/D channel 6.	0
7	DONE7	This bit mirrors the DONE status flag from the result register for A/D channel 7.	0
8	OVERRUN0	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 0.	0
9	OVERRUN1	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 1.	0
10	OVERRUN2	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 2.	0
11	OVERRUN3	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 3.	0
12	OVERRUN4	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 4.	0
13	OVERRUN5	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 5.	0
14	OVERRUN6	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 6.	0
15	OVERRUN7	This bit mirrors the OVERRRUN status flag from the result register for A/D channel 7.	0
16	ADINT	This bit is the A/D interrupt flag. It is one when any of the individual A/D channel Done flags is asserted and enabled to contribute to the A/D interrupt via the ADINTEN register.	0
31:17	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

17.4.5 A/D Interrupt Enable Register (ADINTEN, ADC0: AD0INTEN - 0xE003 400C and ADC1: AD1INTEN - 0xE006 000C)

This register allows control over which A/D channels generate an interrupt when a conversion is complete. For example, it may be desirable to use some A/D channels to monitor sensors by continuously performing conversions on them. The most recent results are read by the application program whenever they are needed. In this case, an interrupt is not desirable at the end of each conversion for some A/D channels.

Table 259: A/D Status Register (ADSTAT, ADC0: AD0STAT - address 0xE003 4004 and ADC1: AD1STAT - address 0xE006 0004) bit description

Bit	Symbol	Value	Description	Reset value
0	ADINTEN0	0	Completion of a conversion on ADC channel 0 will not generate an interrupt.	0
			Completion of a conversion on ADC channel 0 will generate an interrupt.	_
1	ADINTEN1	0	Completion of a conversion on ADC channel 1 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 1 will generate an interrupt.	
2	ADINTEN2	0	Completion of a conversion on ADC channel 2 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 2 will generate an interrupt.	
3	ADINTEN3	0	Completion of a conversion on ADC channel 3 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 3 will generate an interrupt.	



Volume 1

		•	•	
Bit	Symbol	Value	Description	Reset value
4	ADINTEN4	0	Completion of a conversion on ADC channel 4 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 4 will generate an interrupt.	
5	ADINTEN5	0	Completion of a conversion on ADC channel 5 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 5 will generate an interrupt.	_
6 ADINTEN6		0	Completion of a conversion on ADC channel 6 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 6 will generate an interrupt.	_
7	ADINTEN1	0	Completion of a conversion on ADC channel 7 will not generate an interrupt.	0
		1	Completion of a conversion on ADC channel 7 will generate an interrupt.	_
8	8 ADGINTEN		Only the individual ADC channels enabled by ADINTEN7:0 will generate interrupts.	1
		1	Only the global DONE flag in ADDR is enabled to generate an interrupt.	_
31:17	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

17.4.6 A/D Data Registers (ADDR0 to ADDR7, ADC0: AD0DR0 to AD0DR7 - 0xE003 4010 to 0xE003 402C and ADC1: AD1DR0 to AD1DR7-0xE006 0010 to 0xE006 402C)

The A/D Data Register hold the result when an A/D conversion is complete, and also include the flags that indicate when a conversion has been completed and when a conversion overrun has occurred.

Table 260: A/D Data Registers (ADDR0 to ADDR7, ADC0: AD0DR0 to AD0DR7 - 0xE003 4010 to 0xE003 402C and ADC1: AD1DR0 to AD1DR7- 0xE006 0010 to 0xE006 402C) bit description

Bit	Symbol	Description	Reset value
5:0	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:6	RESULT	When DONE is 1, this field contains a binary fraction representing the voltage on the AIN pin, divided by the voltage on the V_{REF} pin (V/ V_{REF}). Zero in the field indicates that the voltage on the AIN pin was less than, equal to, or close to that on V_{SSA} , while 0x3FF indicates that the voltage on AIN was close to, equal to, or greater than that on V_{REF} .	NA
29:16	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
30	OVERRUN	This bit is 1 in burst mode if the results of one or more conversions was (were) lost and overwritten before the conversion that produced the result in the RESULT bits. This bit is cleared by reading this register.	
31	DONE	This bit is set to 1 when an A/D conversion completes. It is cleared when this register is read.	NA

17.5 Operation

17.5.1 Hardware-triggered conversion

If the BURST bit in the ADCR is 0 and the START field contains 010-111, the ADC will start a conversion when a transition occurs on a selected pin or Timer Match signal. The choices include conversion on a specified edge of any of 4 Match signals, or conversion on a specified edge of either of 2 Capture/Match pins. The pin state from the selected pad or the selected Match signal, XORed with ADCR bit 27, is used in the edge detection logic.

17.5.2 Interrupts

An interrupt request is asserted to the Vectored Interrupt Controller (VIC) when the DONE bit is 1. Software can use the Interrupt Enable bit for the A/D Converter in the VIC to control whether this assertion results in an interrupt. DONE is negated when the ADDR is read.

17.5.3 Accuracy vs. digital receiver

The AIN function must be selected in corresponding Pin Select register (see "Pin Connect Block" on page 75) in order to get accurate voltage readings on the monitored pin. For pin hosting an ADC input, it is not possible to have a have a digital function selected and yet get valid ADC readings. An inside circuit disconnects ADC hardware from the associated pin whenever a digital function is selected on that pin.



UM10139

Chapter 18: Digital-to-Analog Converter (DAC)

Rev. 01 — 15 August 2005

User manual

This peripheral is available in LPC2142/4/6/8 devices.

18.1 Features

- 10 bit digital to analog converter
- · Resistor string architecture
- Buffered output
- Power-down mode
- · Selectable speed vs. power

18.2 Pin description

Table 261 gives a brief summary of each of DAC related pins.

Table 261: DAC pin description

Pin	Туре	Description
AOUT	Output	Analog Output. After the selected settling time after the DACR is written with a new value, the voltage on this pin (with respect to V_{SSA}) is VALUE/1024 * V_{REF} .
V _{REF}	Reference	Voltage Reference. This pin provides a voltage reference level for the D/A converter.
V _{DDA} , V _{SSA}	Power	Analog Power and Ground. These should be nominally the same voltages as V_3 and V_{SSD} , but should be isolated to minimize noise and error.

18.3 DAC Register (DACR - 0xE006 C000)

This read/write register includes the digital value to be converted to analog, and a bit that trades off performance vs. power. Bits 5:0 are reserved for future, higher-resolution D/A converters.

Table 262: DAC Register (DACR - address 0xE006 C000) bit description

Bit	Symbol	Value	Description	Reset value
5:0	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
15:6	VALUE		After the selected settling time after this field is written with a new VALUE, the voltage on the A_{OUT} pin (with respect to V_{SSA}) is VALUE/1024 * V_{REF} .	0
16	BIAS	0	The settling time of the DAC is 1 μs max, and the maximum current is 700 $\upsilon A.$	0
		1	The settling time of the DAC is 2.5 μs and the maximum current is 350 μA .	_
31:17	-		Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

© Koninklijke Philips Electronics N.V. 2005. All rights reserved.



18.4 Operation

Bits 19:18 of the PINSEL1 register (Section 7.4.2 "Pin function Select register 1 (PINSEL1 - 0xE002 C004)" on page 77) control whether the DAC is enabled and controlling the state of pin P0.25/AD0.4/AOUT. When these bits are 10, the DAC is powered on and active.

The settling times noted in the description of the BIAS bit are valid for a capacitance load on the A_{OUT} pin not exceeding 100 pF. A load impedance value greater than that value will cause settling time longer than the specified time.

Chapter 18: D/A Converter



UM10139

Chapter 19: Real Time Clock

Rev. 01 — 15 August 2005

User manual


19.1 Features

- Measures the passage of time to maintain a calendar and clock.
- Ultra Low Power design to support battery powered systems.
- Provides Seconds, Minutes, Hours, Day of Month, Month, Year, Day of Week, and Day of Year.
- Dedicated 32 kHz oscillator or programmable prescaler from VPB clock.
- Dedicated power supply pin can be connected to a battery or to the main 3.3 V.

19.2 Description

The Real Time Clock (RTC) is a set of counters for measuring time when system power is on, and optionally when it is off. It uses little power in Power-down mode. On the LPC2141/2/4/6/8, the RTC can be clocked by a separate 32.768 KHz oscillator, or by a programmable prescale divider based on the VPB clock. Also, the RTC is powered by its own power supply pin, V_{BAT} , which can be connected to a battery or to the same 3.3 V supply used by the rest of the device.

19.3 Architecture

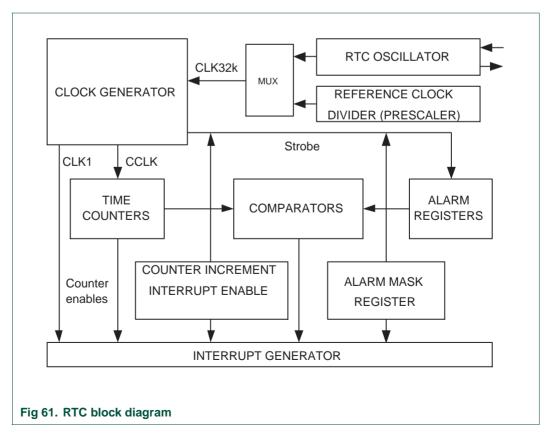

Chapter 19: RTC

19.4 Register description

The RTC includes a number of registers. The address space is split into four sections by functionality. The first eight addresses are the Miscellaneous Register Group (Section 19.4.2). The second set of eight locations are the Time Counter Group (Section 19.4.12). The third set of eight locations contain the Alarm Register Group (Section 19.4.14). The remaining registers control the Reference Clock Divider.

The Real Time Clock includes the register shown in <u>Table 263</u>. Detailed descriptions of the registers follow.

Table 263: Real Time Clock (RTC) register map

Name	Size	Description	Access	Reset value[1]	Address
ILR	2	Interrupt Location Register	R/W	*	0xE002 4000
CTC	15	Clock Tick Counter	RO	*	0xE002 4004
CCR	4	Clock Control Register	R/W	*	0xE002 4008
CIIR	8	Counter Increment Interrupt Register	R/W	*	0xE002 400C
AMR	8	Alarm Mask Register	R/W	*	0xE002 4010
CTIME0	32	Consolidated Time Register 0	RO	*	0xE002 4014
CTIME1	32	Consolidated Time Register 1	RO	*	0xE002 4018
CTIME2	32	Consolidated Time Register 2	RO	*	0xE002 401C
SEC	6	Seconds Counter	R/W	*	0xE002 4020
MIN	6	Minutes Register	R/W	*	0xE002 4024
HOUR	5	Hours Register	R/W	*	0xE002 4028
DOM	5	Day of Month Register	R/W	*	0xE002 402C
DOW	3	Day of Week Register	R/W	*	0xE002 4030
DOY	9	Day of Year Register	R/W	*	0xE002 4034
MONTH	4	Months Register	R/W	*	0xE002 4038
YEAR	12	Years Register	R/W	*	0xE002 403C
ALSEC	6	Alarm value for Seconds	R/W	*	0xE002 4060
ALMIN	6	Alarm value for Minutes	R/W	*	0xE002 4064
ALHOUR	5	Alarm value for Seconds	R/W	*	0xE002 4068
ALDOM	5	Alarm value for Day of Month	R/W	*	0xE002 406C
ALDOW	3	Alarm value for Day of Week	R/W	*	0xE002 4070
ALDOY	9	Alarm value for Day of Year	R/W	*	0xE002 4074
ALMON	4	Alarm value for Months	R/W	*	0xE002 4078
ALYEAR	12	Alarm value for Year	R/W	*	0xE002 407C
PREINT	13	Prescaler value, integer portion	R/W	0	0xE002 4080
PREFRAC	15	Prescaler value, integer portion	R/W	0	0xE002 4084

^[1] Registers in the RTC other than those that are part of the Prescaler are not affected by chip Reset. These registers must be initialized by software if the RTC is enabled. Reset value reflects the data stored in used bits only. It does not include reserved bits content.

19.4.1 RTC interrupts

Interrupt generation is controlled through the Interrupt Location Register (ILR), Counter Increment Interrupt Register (CIIR), the alarm registers, and the Alarm Mask Register (AMR). Interrupts are generated only by the transition into the interrupt state. The ILR separately enables CIIR and AMR interrupts. Each bit in CIIR corresponds to one of the time counters. If CIIR is enabled for a particular counter, then every time the counter is incremented an interrupt is generated. The alarm registers allow the user to specify a date and time for an interrupt to be generated. The AMR provides a mechanism to mask alarm compares. If all nonmasked alarm registers match the value in their corresponding time counter, then an interrupt is generated.

The RTC interrupt can bring the microcontroller out of power-down mode if the RTC is operating from its own oscillator on the RTCX1-2 pins. When the RTC interrupt is enabled for wakeup and its selected event occurs, XTAL1/2 pins associated oscillator wakeup cycle is started. For details on the RTC based wakeup process see Section 3.5.3
"Interrupt Wakeup register (INTWAKE - 0xE01F C144)" on page 22 and Section 3.12
"Wakeup timer" on page 41.

19.4.2 Miscellaneous register group

<u>Table 264</u> summarizes the registers located from 0 to 7 of A[6:2]. More detailed descriptions follow.

Table 264: Miscellaneous registers

Size	Description	Access	Address
2	Interrupt Location. Reading this location indicates the source of an interrupt. Writing a one to the appropriate bit at this location clears the associated interrupt.	R/W	0xE002 4000
15	Clock Tick Counter. Value from the clock divider.	RO	0xE002 4004
4	Clock Control Register. Controls the function of the clock divider.	R/W	0xE002 4008
8	Counter Increment Interrupt. Selects which counters will generate an interrupt when they are incremented.	R/W	0xE002 400C
8	Alarm Mask Register. Controls which of the alarm registers are masked.	R/W	0xE002 4010
32	Consolidated Time Register 0	RO	0xE002 4014
32	Consolidated Time Register 1	RO	0xE002 4018
32	Consolidated Time Register 2	RO	0xE002 401C
	15 4 8 8 32 32	indicates the source of an interrupt. Writing a one to the appropriate bit at this location clears the associated interrupt. Clock Tick Counter. Value from the clock divider. Clock Control Register. Controls the function of the clock divider. Counter Increment Interrupt. Selects which counters will generate an interrupt when they are incremented. Alarm Mask Register. Controls which of the alarm registers are masked. Consolidated Time Register 0 Consolidated Time Register 1	indicates the source of an interrupt. Writing a one to the appropriate bit at this location clears the associated interrupt. 15 Clock Tick Counter. Value from the clock divider. 4 Clock Control Register. Controls the function of the clock divider. 8 Counter Increment Interrupt. Selects which counters will generate an interrupt when they are incremented. 8 Alarm Mask Register. Controls which of the alarm registers are masked. 32 Consolidated Time Register 0 RO 32 Consolidated Time Register 1 RO

19.4.3 Interrupt Location Register (ILR - 0xE002 4000)

The Interrupt Location Register is a 2-bit register that specifies which blocks are generating an interrupt (see <u>Table 265</u>). Writing a one to the appropriate bit clears the corresponding interrupt. Writing a zero has no effect. This allows the programmer to read this register and write back the same value to clear only the interrupt that is detected by the read.

Chapter 19: RTC

Bit	Symbol	Description	Reset value		
0	RTCCIF	When one, the Counter Increment Interrupt block generated an interrupt. Writing a one to this bit location clears the counter increment interrupt.	NA		
1	RTCALF	When one, the alarm registers generated an interrupt. Writing a one to this bit location clears the alarm interrupt.	NA		
7:2	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA		

19.4.4 Clock Tick Counter Register (CTCR - 0xE002 4004)

Volume 1

The Clock Tick Counter is read only. It can be reset to zero through the Clock Control Register (CCR). The CTC consists of the bits of the clock divider counter.

Table 266: Clock Tick Counter Register (CTCR - address 0xE002 4004) bit description

Bit	Symbol	Description	Reset value
14:0	Clock Tick Counter	Prior to the Seconds counter, the CTC counts 32,768 clocks per second. Due to the RTC Prescaler, these 32,768 time increments may not all be of the same duration. Refer to the Section 19.6 "Reference clock divider (prescaler)" on page 282 for details.	NA
15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.4.5 Clock Control Register (CCR - 0xE002 4008)

The clock register is a 5-bit register that controls the operation of the clock divide circuit. Each bit of the clock register is described in <u>Table 267</u>.

Table 267: Clock Control Register (CCR - address 0xE002 4008) bit description

Bit	Symbol	Description	Reset value
0	CLKEN	Clock Enable. When this bit is a one the time counters are enabled. When it is a zero, they are disabled so that they may be initialized.	NA
1	CTCRST	CTC Reset. When one, the elements in the Clock Tick Counter are reset. The elements remain reset until CCR[1] is changed to zero.	NA
3:2	CTTEST	Test Enable. These bits should always be zero during normal operation.	NA
4	CLKSRC	If this bit is 0, the Clock Tick Counter takes its clock from the Prescaler, as on earlier devices in the Philips Embedded ARM family. If this bit is 1, the CTC takes its clock from the 32 kHz oscillator that's connected to the RTCX1 and RTCX2 pins (see Section 19.7 "RTC external 32 kHz oscillator component selection" for hardware details).	NA
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.4.6 Counter Increment Interrupt Register (CIIR - 0xE002 400C)

The Counter Increment Interrupt Register (CIIR) gives the ability to generate an interrupt every time a counter is incremented. This interrupt remains valid until cleared by writing a one to bit zero of the Interrupt Location Register (ILR[0]).

Chapter 19: RTC

Chapter 19: RTC

Bit	Symbol	Description	Reset value
0	IMSEC	When 1, an increment of the Second value generates an interrupt.	NA
1	IMMIN	When 1, an increment of the Minute value generates an interrupt.	NA
2	IMHOUR	When 1, an increment of the Hour value generates an interrupt.	NA
3	IMDOM	When 1, an increment of the Day of Month value generates an interrupt.	NA
4	IMDOW	When 1, an increment of the Day of Week value generates an interrupt.	NA
5	IMDOY	When 1, an increment of the Day of Year value generates an interrupt.	NA
6	IMMON	When 1, an increment of the Month value generates an interrupt.	NA
7	IMYEAR	When 1, an increment of the Year value generates an interrupt.	NA

19.4.7 Alarm Mask Register (AMR - 0xE002 4010)

Volume 1

The Alarm Mask Register (AMR) allows the user to mask any of the alarm registers. Table 269 shows the relationship between the bits in the AMR and the alarms. For the alarm function, every non-masked alarm register must match the corresponding time counter for an interrupt to be generated. The interrupt is generated only when the counter comparison first changes from no match to match. The interrupt is removed when a one is written to the appropriate bit of the Interrupt Location Register (ILR). If all mask bits are set, then the alarm is disabled.

Table 269: Alarm Mask Register (AMR - address 0xE002 4010) bit description

Bit	Symbol	Description	Reset value
0	AMRSEC	When 1, the Second value is not compared for the alarm.	NA
1	AMRMIN	When 1, the Minutes value is not compared for the alarm.	NA
2	AMRHOUR	When 1, the Hour value is not compared for the alarm.	NA
3	AMRDOM	When 1, the Day of Month value is not compared for the alarm.	NA
4	AMRDOW	When 1, the Day of Week value is not compared for the alarm.	NA
5	AMRDOY	When 1, the Day of Year value is not compared for the alarm.	NA
6	AMRMON	When 1, the Month value is not compared for the alarm.	NA
7	AMRYEAR	When 1, the Year value is not compared for the alarm.	NA

19.4.8 Consolidated time registers

The values of the Time Counters can optionally be read in a consolidated format which allows the programmer to read all time counters with only three read operations. The various registers are packed into 32-bit values as shown in <u>Table 270</u>, <u>Table 271</u>, and <u>Table 272</u>. The least significant bit of each register is read back at bit 0, 8, 16, or 24.

The Consolidated Time Registers are read only. To write new values to the Time Counters, the Time Counter addresses should be used.

19.4.9 Consolidated Time register 0 (CTIME0 - 0xE002 4014)

The Consolidated Time Register 0 contains the low order time values: Seconds, Minutes, Hours, and Day of Week.

Bit	Symbol	Description	Reset value
5:0	Seconds	Seconds value in the range of 0 to 59	NA
7:6	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	
13:8	Minutes	Minutes value in the range of 0 to 59	NA
15:14	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
20:16	Hours	Hours value in the range of 0 to 23	NA
23:21	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
26:24	Day Of Week	Day of week value in the range of 0 to 6	NA
31:27	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.4.10 Consolidated Time register 1 (CTIME1 - 0xE002 4018)

The Consolidate Time register 1 contains the Day of Month, Month, and Year values.

Table 271: Consolidated Time register 1 (CTIME1 - address 0xE002 4018) bit description

Bit	Symbol	Description	Reset value
4:0	Day of Month	Day of month value in the range of 1 to 28, 29, 30, or 31 (depending on the month and whether it is a leap year).	NA
7:5	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
11:8	Month	Month value in the range of 1 to 12.	NA
15:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA
27:16	Year	Year value in the range of 0 to 4095.	NA
31:28	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.4.11 Consolidated Time register 2 (CTIME2 - 0xE002 401C)

The Consolidate Time register 2 contains just the Day of Year value.

Table 272: Consolidated Time register 2 (CTIME2 - address 0xE002 401C) bit description

Bit	Symbol	Description	Reset value
11:0	Day of Year	Day of year value in the range of 1 to 365 (366 for leap years).	NA
31:12	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.4.12 Time counter group

Volume 1

The time value consists of the eight counters shown in <u>Table 273</u> and <u>Table 274</u>. These counters can be read or written at the locations shown in <u>Table 274</u>.

Chapter 19: RTC

Chapter 19: RTC

Table 273: Time counter relationships and values

Counter	Size	Enabled by	Minimum value	Maximum value
Second	6	Clk1 (see Figure 61)	0	59
Minute	6	Second	0	59
Hour	5	Minute	0	23
Day of Month	5	Hour	1	28, 29, 30 or 31
Day of Week	3	Hour	0	6
Day of Year	9	Hour	1	365 or 366 (for leap year)
Month	4	Day of Month	1	12
Year	12	Month or day of Year	0	4095

Table 274: Time counter registers

Name	Size	Description	Access	Address
SEC	6	Seconds value in the range of 0 to 59	R/W	0xE002 4020
MIN	6	Minutes value in the range of 0 to 59	R/W	0xE002 4024
HOUR	5	Hours value in the range of 0 to 23	R/W	0xE002 4028
DOM	5	Day of month value in the range of 1 to 28, 29, 30, or 31 (depending on the month and whether it is a leap year).[1]	R/W	0xE002 402C
DOW	3	Day of week value in the range of 0 to 6[1]	R/W	0xE002 4030
DOY	9	Day of year value in the range of 1 to 365 (366 for leap years)[1]	R/W	0xE002 4034
MONTH	4	Month value in the range of 1 to 12	R/W	0xE002 4038
YEAR	12	Year value in the range of 0 to 4095	R/W	0xE002 403C

^[1] These values are simply incremented at the appropriate intervals and reset at the defined overflow point. They are not calculated and must be correctly initialized in order to be meaningful.

19.4.13 Leap year calculation

The RTC does a simple bit comparison to see if the two lowest order bits of the year counter are zero. If true, then the RTC considers that year a leap year. The RTC considers all years evenly divisible by 4 as leap years. This algorithm is accurate from the year 1901 through the year 2099, but fails for the year 2100, which is not a leap year. The only effect of leap year on the RTC is to alter the length of the month of February for the month, day of month, and year counters.

19.4.14 Alarm register group

The alarm registers are shown in <u>Table 275</u>. The values in these registers are compared with the time counters. If all the unmasked (See <u>Section 19.4.7 "Alarm Mask Register (AMR - 0xE002 4010)" on page 279</u>) alarm registers match their corresponding time counters then an interrupt is generated. The interrupt is cleared when a one is written to bit one of the Interrupt Location Register (ILR[1]).

Chapter 19: RTC

Table 275: Alarm registers

Name	Size	Description	Access	Address
ALSEC	6	Alarm value for Seconds	R/W	0xE002 4060
ALMIN	6	Alarm value for Minutes	R/W	0xE002 4064
ALHOUR	5	Alarm value for Hours	R/W	0xE002 4068
ALDOM	5	Alarm value for Day of Month	R/W	0xE002 406C
ALDOW	3	Alarm value for Day of Week	R/W	0xE002 4070
ALDOY	9	Alarm value for Day of Year	R/W	0xE002 4074
ALMON	4	Alarm value for Months	R/W	0xE002 4078
ALYEAR	12	Alarm value for Years	R/W	0xE002 407C

19.5 RTC usage notes

If the RTC is used, V_{BAT} must be connected to either pin V_3 or an independent power supply (external battery). Otherwise, V_{BAT} should be tied to the ground (V_{SS}). No provision is made in the LPC2141/2/4/6/8 to retain RTC status upon the V_{BAT} power loss, or to maintain time incrementation if the clock source is lost, interrupted, or altered.

Since the RTC operates using one of two available clocks (the VPB clock (PCLK) or the 32 kHz signal coming from the RTCX1-2pins), any interruption of the selected clock will cause the time to drift away from the time value it would have provided otherwise. The variance could be to actual clock time if the RTC was initialized to that, or simply an error in elapsed time since the RTC was activated.

While the signal from RTCX1-2 pins can be used to supply the RTC clock at anytime, selecting the PCLK as the RTC clock and entering the Power-down mode will cause a lapse in the time update. Also, feeding the RTC with the PCLK and altering this timebase during system operation (by reconfiguring the PLL, the VPB divider, or the RTC prescaler) will result in some form of accumulated time error. Accumulated time errors may occur in case RTC clock source is switched between the PCLK to the RTCX pins, too.

Once the 32 kHz signal from RTCX1-2 pins is selected as a clock source, the RTC can operate completely without the presence of the VPB clock (PCLK). Therefore, power sensitive applications (i.e. battery powered application) utilizing the RTC will reduce the power consumption by using the signal from RTCX1-2 pins, and writing a 0 into the PCRTC bit in the PCONP power control register (see Section 3.9" (Power control" on page 35).

19.6 Reference clock divider (prescaler)

The reference clock divider (hereafter referred to as the prescaler) allows generation of a 32.768 kHz reference clock from any peripheral clock frequency greater than or equal to 65.536 kHz ($2 \times 32.768 \text{ kHz}$). This permits the RTC to always run at the proper rate regardless of the peripheral clock rate. Basically, the Prescaler divides the peripheral clock (PCLK) by a value which contains both an integer portion and a fractional portion. The result is not a continuous output at a constant frequency, some clock periods will be one PCLK longer than others. However, the overall result can always be 32,768 counts per second.

Volume 1 Chapter 19: RTC

The reference clock divider consists of a 13-bit integer counter and a 15-bit fractional counter. The reasons for these counter sizes are as follows:

- 1. For frequencies that are expected to be supported by the LPC2141/2/4/6/8, a 13-bit integer counter is required. This can be calculated as 160 MHz divided by 32,768 minus 1 = 4881 with a remainder of 26,624. Thirteen bits are needed to hold the value 4881, but actually supports frequencies up to 268.4 MHz (32,768 × 8192).
- 2. The remainder value could be as large as 32,767, which requires 15 bits.

Table 276: Reference clock divider registers

Name	Size	Description	Access	Address		
PREINT	13	Prescale Value, integer portion	R/W	0xE002 4080		
PREFRAC	15	Prescale Value, fractional portion	R/W	0xE002 4084		

19.6.1 Prescaler Integer register (PREINT - 0xE002 4080)

This is the integer portion of the prescale value, calculated as:

PREINT = int (PCLK / 32768) - 1. The value of PREINT must be greater than or equal to 1.

Table 277: Prescaler Integer register (PREINT - address 0xE002 4080) bit description

Bit	Symbol	Description	Reset value
12:0	Prescaler Integer	Contains the integer portion of the RTC prescaler value.	0
15:13	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.2 Prescaler Fraction register (PREFRAC - 0xE002 4084)

This is the fractional portion of the prescale value, and may be calculated as:

 $PREFRAC = PCLK - ((PREINT + 1) \times 32768).$

Table 278: Prescaler Integer register (PREFRAC - address 0xE002 4084) bit description

Bit	Symbol	Description	Reset value
14:0	Prescaler Fraction	Contains the integer portion of the RTC prescaler value.	0
15	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

19.6.3 Example of prescaler usage

In a simplistic case, the PCLK frequency is 65.537 kHz. So:

PREINT = int (PCLK
$$/ 32768$$
) – 1 = 1 and
PREFRAC = PCLK - ([PREINT + 1] × 32768) = 1


With this prescaler setting, exactly 32,768 clocks per second will be provided to the RTC by counting 2 PCLKs 32,767 times, and 3 PCLKs once.

In a more realistic case, the PCLK frequency is 10 MHz. Then,

283

In this case, 5,760 of the prescaler output clocks will be 306 (305 + 1) PCLKs long, the rest will be 305 PCLKs long.

In a similar manner, any PCLK rate greater than 65.536 kHz (as long as it is an even number of cycles per second) may be turned into a 32 kHz reference clock for the RTC. The only caveat is that if PREFRAC does not contain a zero, then not all of the 32,768 per second clocks are of the same length. Some of the clocks are one PCLK longer than others. While the longer pulses are distributed as evenly as possible among the remaining pulses, this "jitter" could possibly be of concern in an application that wishes to observe the contents of the Clock Tick Counter (CTC) directly(Section 19.4.4 "Clock Tick Counter Register (CTCR - 0xE002 4004)" on page 278).

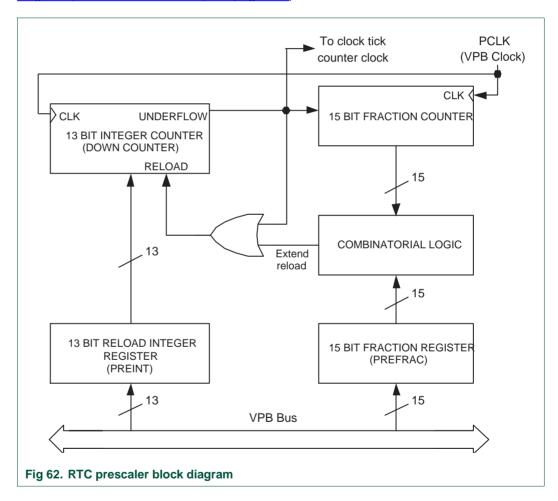

19.6.4 Prescaler operation

The Prescaler block labelled "Combination Logic" in <u>Figure 62</u> determines when the decrement of the 13-bit PREINT counter is extended by one PCLK. In order to both insert the correct number of longer cycles, and to distribute them evenly, the combinatorial Logic associates each bit in PREFRAC with a combination in the 15-bit Fraction Counter. These associations are shown in the following <u>Table 279</u>.

Chapter 19: RTC

Volume 1 Chapter 19: RTC

For example, if PREFRAC bit 14 is a one (representing the fraction 1/2), then half of the cycles counted by the 13-bit counter need to be longer. When there is a 1 in the LSB of the Fraction Counter, the logic causes every alternate count (whenever the LSB of the Fraction Counter=1) to be extended by one PCLK, evenly distributing the pulse widths. Similarly, a one in PREFRAC bit 13 (representing the fraction 1/4) will cause every fourth cycle (whenever the two LSBs of the Fraction Counter=10) counted by the 13-bit counter to be longer.


Table 279: Prescaler cases where the Integer Counter reload value is incremented

Fraction Counter	PR	PREFRAC Bit													
	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-
10	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-
100	-	-	1	-	-	-	-	-	-	-	-	-	-	-	-
1000	-	-	-	1	-	-	-	-	-	-	-	-	-	-	-
0000	-	-	-	-	1	-	-	-	-	-	-	-	-	-	-
10 0000	-	-	-	-	-	1	-	-	-	-	-	-	-	-	-
100 0000	-	-	-	-	-	-	1	-	-	-	-	-	-	-	-
1000 0000	-	-	-	-	-	-	-	1	-	-	-	-	-	-	-
1 0000 0000	-	-	-	-	-	-	-	-	1	-	-	-	-	-	-
10 0000 0000	-	-	-	-	-	-	-	-	-	1	-	-	-	-	-
100 0000 0000	-	-	-	-	-	-	-	-	-	-	1	-	-	-	-
1000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	1	-	-	-
1 0000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	-	1	-	-
-10 0000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	-	-	1	-
100 0000 0000 0000	-	-	-	-	-	-	-	-	-	-	-	-	-	-	1

19.7 RTC external 32 kHz oscillator component selection

The RTC external oscillator circuit is shown in <u>Figure 63</u>. Since the feedback resistance is integrated on chip, only a crystal, the capacitances C_{X1} and C_{X2} need to be connected externally to the microcontroller.

Chapter 19: RTC

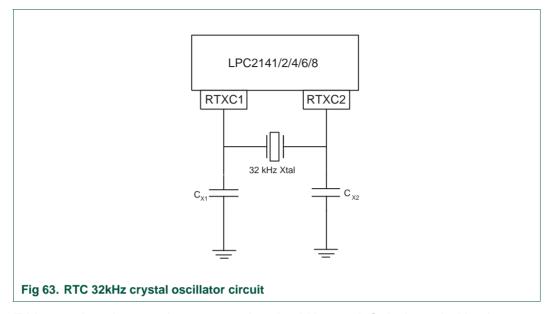

<u>Table 280</u> gives the crystal parameters that should be used. C_L is the typical load capacitance of the crystal and is usually specified by the crystal manufacturer. The actual C_L influences oscillation frequency. When using a crystal that is manufactured for a different load capacitance, the circuit will oscillate at a slightly different frequency (depending on the quality of the crystal) compared to the specified one. Therefore for an accurate time reference it is advised to use the load capacitors as specified in <u>Table 280</u> that belong to a specific C_L . The value of external capacitances C_{X1} and C_{X2} specified in this table are calculated from the internal parasitic capacitances and the C_L . Parasitics from PCB and package are not taken into account.

Table 280: Recommended values for the RTC external 32 kHz oscillator $C_{X1/X2}$ components

Crystal load capacitance C _L	Maximum crystal series resistance R _S	External load capacitors C _{X1} , _{CX2}
11 pF	< 100 kΩ	18 pF, 18 pF
13 pF	< 100 kΩ	22 pF, 22 pF
15 pF	< 100 kΩ	27 pF, 27 pF



UM10139

Chapter 20: Watchdog Timer

Rev. 01 — 15 August 2005

User manual



- · Internally resets chip if not periodically reloaded.
- · Debug mode.
- Enabled by software but requires a hardware reset or a watchdog reset/interrupt to be disabled.
- Incorrect/Incomplete feed sequence causes reset/interrupt if enabled.
- Flag to indicate Watchdog reset.
- Programmable 32-bit timer with internal pre-scaler.
- Selectable time period from (T_{PCLK} x 256 x 4) to (T_{PCLK} x 2³² x 4) in multiples of T_{PCLK} x 4.

20.2 Applications

The purpose of the watchdog is to reset the microcontroller within a reasonable amount of time if it enters an erroneous state. When enabled, the watchdog will generate a system reset if the user program fails to "feed" (or reload) the watchdog within a predetermined amount of time.

For interaction of the on-chip watchdog and other peripherals, especially the reset and boot-up procedures, please read Section 3.10 "Reset" on page 38 of this document.

20.3 Description

The watchdog consists of a divide by 4 fixed pre-scaler and a 32-bit counter. The clock is fed to the timer via a pre-scaler. The timer decrements when clocked. The minimum value from which the counter decrements is 0xFF. Setting a value lower than 0xFF causes 0xFF to be loaded in the counter. Hence the minimum watchdog interval is $(T_{PCLK} \times 256 \times 4)$ and the maximum watchdog interval is $(T_{PCLK} \times 2^{32} \times 4)$ in multiples of $(T_{PCLK} \times 4)$. The watchdog should be used in the following manner:

- Set the watchdog timer constant reload value in WDTC register.
- Setup mode in WDMOD register.
- Start the watchdog by writing 0xAA followed by 0x55 to the WDFEED register.
- Watchdog should be fed again before the watchdog counter underflows to prevent reset/interrupt.

When the Watchdog counter underflows, the program counter will start from 0x0000 0000 as in the case of external reset. The Watchdog Time-Out Flag (WDTOF) can be examined to determine if the watchdog has caused the reset condition. The WDTOF flag must be cleared by software.

287

Chapter 20: WDT

20.4 Register description

The watchdog contains 4 registers as shown in Table 281 below.

Table 281: Watchdog register map

Name	Description	Access	Reset value[1]	Address
WDMOD	Watchdog Mode register. This register contains the basic mode and status of the Watchdog Timer.	R/W	0	0xE000 0000
WDTC	Watchdog Timer Constant register. This register determines the time-out value.	R/W	0xFF	0xE000 0004
WDFEED	Watchdog Feed sequence register. Writing 0xAA followed by 0x55 to this register reloads the Watchdog timer to its preset value.	WO	NA	0xE000 0008
WDTV	Watchdog Timer Value register. This register reads out the current value of the Watchdog timer.	RO	0xFF	0xE000 000C

^[1] Reset value reflects the data stored in used bits only. It does not include reserved bits content.

20.4.1 Watchdog Mode register (WDMOD - 0xE000 0000)

The WDMOD register controls the operation of the watchdog as per the combination of WDEN and RESET bits.

Table 282: Watchdog operating modes selection

WDEN	WDRESET	Mode of Operation				
0	X (0 or 1)	Debug/Operate without the watchdog running.				
1	0	Watchdog Interrupt Mode: debug with the Watchdog interrupt but no WDRESET enabled.				
		When this mode is selected, a watchdog counter underflow will set the WDINT flag and the watchdog interrupt request will be generated.				
1	1	Watchdog Reset Mode: operate with the watchdog interrupt and WDRESET enabled.				
		When this mode is selected, a watchdog counter underflow will reset the microcontroller. While the watchdog interrupt is also enabled in this case (WDEN = 1) it will not be recognized since the watchdog reset will clear the WDINT flag.				

Once the **WDEN** and/or **WDRESET** bits are set they can not be cleared by software. Both flags are cleared by an external reset or a watchdog timer underflow.

WDTOF The Watchdog Time-Out Flag is set when the watchdog times out. This flag is cleared by software.

WDINT The Watchdog Interrupt Flag is set when the watchdog times out. This flag is cleared when any reset occurs. Once the watchdog interrupt is serviced, it can be disabled in the VIC or the watchdog interrupt request will be generated indefinitely.

288

Chapter 20: WDT

Table 283: Watchdog Mode register (WDMOD - address 0xE000 0000) bit description

Bit	Symbol	Description	Reset value
0	WDEN	WDEN Watchdog interrupt Enable bit (Set Only).	0
1	WDRESET	WDRESET Watchdog Reset Enable bit (Set Only).	0
2	WDTOF	WDTOF Watchdog Time-Out Flag.	0 (Only after external reset)
3	WDINT	WDINT Watchdog interrupt Flag (Read Only).	0
7:4	-	Reserved, user software should not write ones to reserved bits. The value read from a reserved bit is not defined.	NA

20.4.2 Watchdog Timer Constant register (WDTC - 0xE000 0004)

The WDTC register determines the time-out value. Every time a feed sequence occurs the WDTC content is reloaded in to the watchdog timer. It's a 32-bit register with 8 LSB set to 1 on reset. Writing values below 0xFF will cause 0xFF to be loaded to the WDTC. Thus the minimum time-out interval is $T_{PCLK} \times 256 \times 4$.

Table 284: Watchdog Timer Constant register (WDTC - address 0xE000 0004) bit description

Bit	Symbol	Description	Reset value
31:0	Count	Watchdog time-out interval.	0x0000 00FF

20.4.3 Watchdog Feed register (WDFEED - 0xE000 0008)

Writing 0xAA followed by 0x55 to this register will reload the watchdog timer to the WDTC value. This operation will also start the watchdog if it is enabled via the WDMOD register. Setting the WDEN bit in the WDMOD register is not sufficient to enable the watchdog. A valid feed sequence must first be completed before the Watchdog is capable of generating an interrupt/reset. Until then, the watchdog will ignore feed errors. Once 0xAA is written to the WDFEED register the next operation in the Watchdog register space should be a WRITE (0x55) to the WDFFED register otherwise the watchdog is triggered. The interrupt/reset will be generated during the second PCLK following an incorrect access to a watchdog timer register during a feed sequence.

Table 285: Watchdog Feed register (WDFEED - address 0xE000 0008) bit description

Bit	Symbol	Description	Reset value
7:0	Feed	Feed value should be 0xAA followed by 0x55.	NA

20.4.4 Watchdog Timer Value register (WDTV - 0xE000 000C)

The WDTV register is used to read the current value of watchdog timer.

Table 286: Watchdog Timer Value register (WDTV - address 0xE000 000C) bit description

Bit	Symbol	Description	Reset value
31:0	Count	Counter timer value.	0x0000 00FF

20.5 Block diagram

The block diagram of the Watchdog is shown below in the Figure 64.

Chapter 20: WDT

Fig 64. Watchdog block diagram

Rev. 01 — 15 August 2005

Volume 1



UM10139

Chapter 21: Flash Memory System and Programming

Rev. 01 — 15 August 2005

User manual



The Boot Loader controls initial operation after reset, and also provides the means to accomplish programming of the Flash memory. This could be initial programming of a blank device, erasure and re-programming of a previously programmed device, or programming of the Flash memory by the application program in a running system.

21.2 Features

- In-System Programming: In-System programming (ISP) is programming or reprogramming the on-chip flash memory, using the boot loader software and a serial port. This can be done when the part resides in the end-user board.
- In Application Programming: In-Application (IAP) programming is performing erase and write operation on the on-chip flash memory, as directed by the end-user application code.

21.3 Applications

The flash boot loader provides both In-System and In-Application programming interfaces for programming the on-chip flash memory.

21.4 Description


The flash boot loader code is executed every time the part is powered on or reset. The loader can execute the ISP command handler or the user application code. A a LOW level after reset at the P0.14 pin is considered as an external hardware request to start the ISP command handler. Assuming that proper signal is present on X1 pin when the rising edge on RESET pin is generated, it may take up to 3 ms before P0.14 is sampled and the decision on whether to continue with user code or ISP handler is made. If P0.14 is sampled low and the watchdog overflow flag is set, the external hardware request to start the ISP command handler is ignored. If there is no request for the ISP command handler execution (P0.14 is sampled HIGH after reset), a search is made for a valid user program. If a valid user program is found then the execution control is transferred to it. If a valid user program is not found, the auto-baud routine is invoked.

Pin P0.14 that is used as hardware request for ISP requires special attention. Since P0.14 is in high impedance mode after reset, it is important that the user provides external hardware (a pull-up resistor or other device) to put the pin in a defined state. Otherwise unintended entry into ISP mode may occur.

21.4.1 Memory map after any reset

The boot block is 12 kB in size and resides in the top portion (starting from 0x0007 D000) of the on-chip flash memory. After any reset the entire boot block is also mapped to the top of the on-chip memory space i.e. the boot block is also visible in the memory region starting from the address 0x7FFF D000. The flash boot loader is designed to run from this

memory area but both the ISP and IAP software use parts of the on-chip RAM. The RAM usage is described later in this chapter. The interrupt vectors residing in the boot block of the on-chip flash memory also become active after reset, i.e., the bottom 64 bytes of the boot block are also visible in the memory region starting from the address 0x0000 0000. The reset vector contains a jump instruction to the entry point of the flash boot loader software.

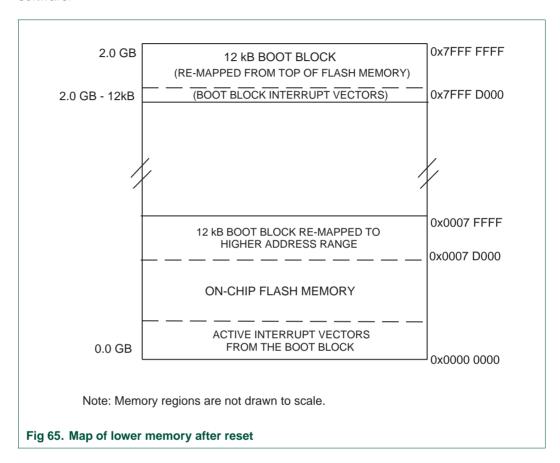

21.4.2 Criterion for valid user code

Volume 1

Criterion for valid user code: The reserved ARM interrupt vector location (0x0000 0014) should contain the 2's complement of the check-sum of the remaining interrupt vectors. This causes the checksum of all of the vectors together to be 0. The boot loader code disables the overlaying of the interrupt vectors from the boot block, then checksums the interrupt vectors in sector 0 of the flash. If the signatures match then the execution control is transferred to the user code by loading the program counter with 0x0000 0000. Hence the user flash reset vector should contain a jump instruction to the entry point of the user application code.

If the signature is not valid, the auto-baud routine synchronizes with the host via serial port 0. The host should send a '?' (0x3F) as a synchronization character and wait for a response. The host side serial port settings should be 8 data bits, 1 stop bit and no parity. The auto-baud routine measures the bit time of the received synchronization character in terms of its own frequency and programs the baud rate generator of the serial port. It also sends an ASCII string ("Synchronized<CR><LF>") to the Host. In response to this host should send the same string ("Synchronized<CR><LF>"). The auto-baud routine looks at

Chapter 21: Flash Memory

the received characters to verify synchronization. If synchronization is verified then "OK<CR><LF>" string is sent to the host. Host should respond by sending the crystal frequency (in kHz) at which the part is running. For example, if the part is running at 10 MHz, the response from the host should be "10000<CR><LF>". "OK<CR><LF>" string is sent to the host after receiving the crystal frequency. If synchronization is not verified then the auto-baud routine waits again for a synchronization character. For auto-baud to work correctly, the crystal frequency should be greater than or equal to 10 MHz. The on-chip PLL is not used by the boot code.

Once the crystal frequency is received the part is initialized and the ISP command handler is invoked. For safety reasons an "Unlock" command is required before executing the commands resulting in flash erase/write operations and the "Go" command. The rest of the commands can be executed without the unlock command. The Unlock command is required to be executed once per ISP session. The Unlock command is explained in Section 21.8 "ISP commands" on page 297.

21.4.3 Communication protocol

All ISP commands should be sent as single ASCII strings. Strings should be terminated with Carriage Return (CR) and/or Line Feed (LF) control characters. Extra <CR> and <LF> characters are ignored. All ISP responses are sent as <CR><LF> terminated ASCII strings. Data is sent and received in UU-encoded format.

21.4.4 ISP command format

"Command Parameter_0 Parameter_1 ... Parameter_n<CR><LF>" "Data" (Data only for Write commands)

21.4.5 ISP response format

"Return_Code<CR><LF>Response_0<CR><LF>Response_1<CR><LF>...
Response_n<CR><LF>"Data" (Data only for Read commands)

21.4.6 ISP data format

The data stream is in UU-encode format. The UU-encode algorithm converts 3 bytes of binary data in to 4 bytes of printable ASCII character set. It is more efficient than Hex format which converts 1 byte of binary data in to 2 bytes of ASCII hex. The sender should send the check-sum after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. The receiver should compare it with the check-sum of the received bytes. If the check-sum matches then the receiver should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match the receiver should respond with "RESEND<CR><LF>". In response the sender should retransmit the bytes.

A description of UU-encode is available at http://www.wotsit.org.

21.4.7 ISP flow control

A software XON/XOFF flow control scheme is used to prevent data loss due to buffer overrun. When the data arrives rapidly, the ASCII control character DC3 (stop) is sent to stop the flow of data. Data flow is resumed by sending the ASCII control character DC1 (start). The host should also support the same flow control scheme.

21.4.8 ISP command abort

Commands can be aborted by sending the ASCII control character "ESC". This feature is not documented as a command under "ISP Commands" section. Once the escape code is received the ISP command handler waits for a new command.

21.4.9 Interrupts during ISP

The boot block interrupt vectors located in the boot block of the flash are active after any reset.

21.4.10 Interrupts during IAP

The on-chip flash memory is not accessible during erase/write operations. When the user application code starts executing the interrupt vectors from the user flash area are active. The user should either disable interrupts, or ensure that user interrupt vectors are active in RAM and that the interrupt handlers reside in RAM, before making a flash erase/write IAP call. The IAP code does not use or disable interrupts.

21.4.11 RAM used by ISP command handler

ISP commands use on-chip RAM from $0x4000\ 0120$ to $0x4000\ 01FF$. The user could use this area, but the contents may be lost upon reset. Flash programming commands use the top 32 bytes of on-chip RAM. The stack is located at RAM top - 32. The maximum stack usage is 256 bytes and it grows downwards.

21.4.12 RAM used by IAP command handler


Flash programming commands use the top 32 bytes of on-chip RAM. The maximum stack usage in the user allocated stack space is 128 bytes and it grows downwards.

21.4.13 RAM used by RealMonitor

The RealMonitor uses on-chip RAM from 0x4000 0040 to 0x4000 011F. he user could use this area if RealMonitor based debug is not required. The Flash boot loader does not initialize the stack for RealMonitor.

Chapter 21: Flash Memory

21.4.14 Boot process flowchart

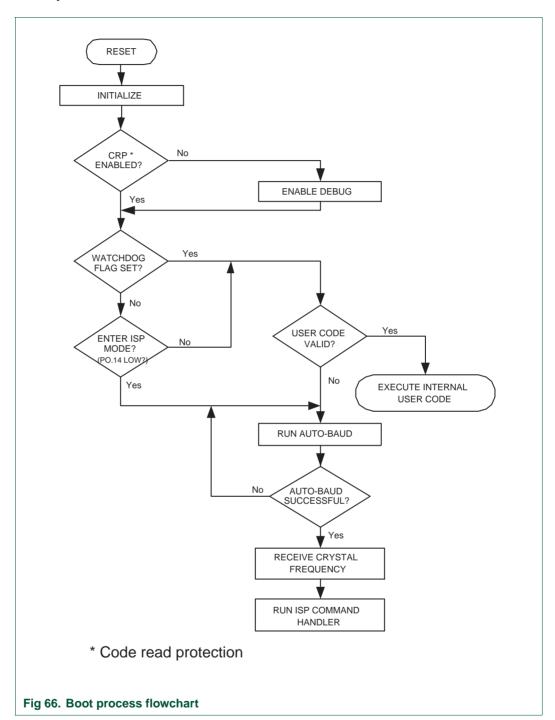

21.5 Sector numbers

Some IAP and ISP commands operate on "sectors" and specify sector numbers. The following table indicate the correspondence between sector numbers and memory addresses for LPC2141/2/4/6/8 devices containing 32, 64, 128, 256 and 512K bytes of Flash respectively. IAP, ISP, and RealMonitor routines are located in the boot block. The

boot block is present at addresses 0x0007 D000 to 0x0007 FFFF in all devices. ISP and IAP commands do not allow write/erase/go operation on the boot block. Because of the boot block, the amount of Flash available for user code and data is 500 K bytes in "512K" devices. On the other hand, in case of the LPC2141/2/4/6 microcontroller all 32/64/128/256 K of Flash are available for user's application.

Table 287: Flash sectors in LPC2141, LPC2142, LPC2144, LPC2146 and LPC2148

Sector Number	Sector Size [kB]	Address Range	LPC2141 (32kB)	LPC2142 (64kB)	LPC2144 (128kB)	LPC2146 (256kB)	LPC2148 (512kB)
0	4	0X0000 0000 - 0X0000 0FFF	+	+	+	+	+
1	4	0X0000 1000 - 0X0000 1FFF	+	+	+	+	+
2	4	0X0000 2000 - 0X0000 2FFF	+	+	+	+	+
3	4	0X0000 3000 - 0X0000 3FFF	+	+	+	+	+
4	4	0X0000 4000 - 0X0000 4FFF	+	+	+	+	+
5	4	0X0000 5000 - 0X0000 5FFF	+	+	+	+	+
6	4	0X0000 6000 - 0X0000 6FFF	+	+	+	+	+
7	4	0X0000 7000 - 0X0000 7FFF	+	+	+	+	+
8	32	0x0000 8000 - 0X0000 FFFF		+	+	+	+
9	32	0x0001 0000 - 0X0001 7FFF			+	+	+
10 (0x0A)	32	0x0001 8000 - 0X0001 FFFF			+	+	+
11 (0x0B)	32	0x0002 0000 - 0X0002 7FFF				+	+
12 (0x0C)	32	0x0002 8000 - 0X0002 FFFF				+	+
13 (0x0D)	32	0x0003 0000 - 0X0003 7FFF				+	+
14 (0X0E)	32	0x0003 8000 - 0X0003 FFFF				+	+
15 (0x0F)	32	0x0004 0000 - 0X0004 7FFF					+
16 (0x10)	32	0x0004 8000 - 0X0004 FFFF					+
17 (0x11)	32	0x0005 0000 - 0X0005 7FFF					+
18 (0x12)	32	0x0005 8000 - 0X0005 FFFF					+
19 (0x13)	32	0x0006 0000 - 0X0006 7FFF					+
20 (0x14)	32	0x0006 8000 - 0X0006 FFFF					+
21 (0x15)	32	0x0007 0000 - 0X0007 7FFF					+
22 (0x16)	4	0x0007 8000 - 0X0007 8FFF					+
23 (0x17)	4	0x0007 9000 - 0X0007 9FFF					+
24 (0x18)	4	0x0007 A000 - 0X0007 AFFF	_				+
25 (0x19)	4	0x0007 B000 - 0X0007 BFFF	_				+
26 (0x1A)	4	0x0007 C000 - 0X0007 CFFF	_				+

21.6 Flash content protection mechanism

Volume 1

The LPC2141/2/4/6/8 is equipped with the Error Correction Code (ECC) capable Flash memory. The purpose of an error correction module is twofold. Firstly, it decodes data words read from the memory into output data words. Secondly, it encodes data words to be written to the memory. The error correction capability consists of single bit error correction with Hamming code.

Chapter 21: Flash Memory

The operation of ECC is transparent to the running application. The ECC content itself is stored in a flash memory not accessible by user's code to either read from it or write into it on its own. A byte of ECC corresponds to every consecutive 128 bits of the user accessible Flash. Consequently, Flash bytes from 0x0000 0000 to 0x0000 0003 are protected by the first ECC byte, Flash bytes from 0x0000 0004 to 0x0000 0007 are protected by the second ECC byte, etc.

Whenever the CPU requests a read from user's Flash, both 128 bits of raw data containing the specified memory location and the matching ECC byte are evaluated. If the ECC mechanism detects a single error in the fetched data, a correction will be applied before data are provided to the CPU. When a write request into the user's Flash is made, write of user specified content is accompanied by a matching ECC value calculated and stored in the ECC memory.

When a sector of user's Flash memory is erased, corresponding ECC bytes are also erased. Once an ECC byte is written, it can not be updated unless it is erased first. Therefore, for the implemented ECC mechanism to perform properly, data must be written into the Flash memory in groups of 4 bytes (or multiples of 4), aligned as described above.

21.7 Code Read Protection (CRP)

Code read protection is enabled by programming the flash address location 0x1FC (User flash sector 0) with value 0x8765 4321 (2271560481 Decimal). Address 0x1FC is used to allow some room for the FIQ exception handler. When the code read protection is enabled the JTAG debug port, external memory boot and the following ISP commands are disabled:

- Read Memory
- Write to RAM
- Go
- Copy RAM to Flash

The ISP commands mentioned above terminate with return code CODE_READ_PROTECTION_ENABLED. The ISP erase command only allows erasure of all user sectors when the code read protection is enabled. This limitation does not exist if the code read protection is not enabled. IAP commands are not affected by the code read protection.

Important: CRP is active/inactive once the device has gone through a power cycle.

21.8 ISP commands

The following commands are accepted by the ISP command handler. Detailed status codes are supported for each command. The command handler sends the return code INVALID_COMMAND when an undefined command is received. Commands and return codes are in ASCII format.

CMD_SUCCESS is sent by ISP command handler only when received ISP command has been completely executed and the new ISP command can be given by the host. Exceptions from this rule are "Set Baud Rate", "Write to RAM", "Read Memory", and "Go" commands.

Chapter 21: Flash Memory

Table 288: ISP command summary

ISP Command	Usage	Described in
Unlock	U <unlock code=""></unlock>	Table 289
Set Baud Rate	B <baud rate=""> <stop bit=""></stop></baud>	Table 290
Echo	A <setting></setting>	Table 292
Write to RAM	W <start address=""> <number bytes="" of=""></number></start>	Table 293
Read Memory	R <address> <number bytes="" of=""></number></address>	Table 294
Prepare sector(s) for write operation	P <start number="" sector=""> <end number="" sector=""></end></start>	<u>Table 295</u>
Copy RAM to Flash	C <flash address=""> <ram address=""> <number bytes="" of=""></number></ram></flash>	Table 296
Go	G <address> <mode></mode></address>	Table 297
Erase sector(s)	E <start number="" sector=""> <end number="" sector=""></end></start>	Table 298
Blank check sector(s)	I <start number="" sector=""> <end number="" sector=""></end></start>	Table 299
Read Part ID	J	Table 300
Read Boot code version	К	Table 302
Compare	M <address1> <address2> <number bytes="" of=""></number></address2></address1>	Table 303

21.8.1 Unlock <unlock code>

Table 289: ISP Unlock command

U
Unlock code: 23130 ₁₀
CMD_SUCCESS
INVALID_CODE
PARAM_ERROR
This command is used to unlock flash Write, Erase, and Go commands.
"U 23130 <cr><lf>" unlocks the flash Write/Erase & Go commands.</lf></cr>

21.8.2 Set Baud Rate <baud rate> <stop bit>

Table 290: ISP Set Baud Rate command

Command	В
Input	Baud Rate: 9600 19200 38400 57600 115200 230400
	Stop bit: 1 2
Return Code	CMD_SUCCESS
	INVALID_BAUD_RATE
	INVALID_STOP_BIT
	PARAM_ERROR
Description	This command is used to change the baud rate. The new baud rate is effective after the command handler sends the CMD_SUCCESS return code.
Example	"B 57600 1 <cr><lf>" sets the serial port to baud rate 57600 bps and 1 stop bit.</lf></cr>

Table 291: Correlation between possible ISP baudrates and external crystal frequency (in MHz)

ISP Baudrate .vs. External Crystal Frequency	9600	19200	38400	57600	115200	230400
10.0000	+	+	+			
11.0592	+	+		+		
12.2880	+	+	+			
14.7456	+	+	+	+	+	+
15.3600	+					
18.4320	+	+		+		
19.6608	+	+	+			
24.5760	+	+	+			
25.0000	+	+	+			

21.8.3 Echo <setting>

Table 292: ISP Echo command

Command	A
Input	Setting: ON = 1 OFF = 0
Return Code	CMD_SUCCESS
	PARAM_ERROR
Description	The default setting for echo command is ON. When ON the ISP command handler sends the received serial data back to the host.
Example	"A 0 <cr><lf>" turns echo off.</lf></cr>

21.8.4 Write to RAM <start address> <number of bytes>

The host should send the data only after receiving the CMD_SUCCESS return code. The host should send the check-sum after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum should be of the actual number of bytes sent. The ISP command handler compares it with the check-sum of the received bytes. If the check-sum matches, the ISP command handler responds with "OK<CR><LF>" to continue further transmission. If the check-sum does not match, the ISP command handler responds with "RESEND<CR><LF>". In response the host should retransmit the bytes.

Table 293: ISP Write to RAM command

Volume 1

Command	W
Input	Start Address: RAM address where data bytes are to be written. This address should be a word boundary.
	Number of Bytes: Number of bytes to be written. Count should be a multiple of 4
Return Code	CMD_SUCCESS
	ADDR_ERROR (Address not on word boundary)
	ADDR_NOT_MAPPED
	COUNT_ERROR (Byte count is not multiple of 4)
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to download data to RAM. Data should be in UU-encoded format. This command is blocked when code read protection is enabled.
Example	"W 1073742336 4 <cr><lf>" writes 4 bytes of data to address 0x4000 0200.</lf></cr>

21.8.5 Read memory <address> <no. of bytes>

The data stream is followed by the command success return code. The check-sum is sent after transmitting 20 UU-encoded lines. The checksum is generated by adding raw data (before UU-encoding) bytes and is reset after transmitting 20 UU-encoded lines. The length of any UU-encoded line should not exceed 61 characters(bytes) i.e. it can hold 45 data bytes. When the data fits in less then 20 UU-encoded lines then the check-sum is of actual number of bytes sent. The host should compare it with the checksum of the received bytes. If the check-sum matches then the host should respond with "OK<CR><LF>" to continue further transmission. If the check-sum does not match then the host should respond with "RESEND<CR><LF>". In response the ISP command handler sends the data again.

Table 294: ISP Read memory command

10016 234. 131	Table 294. 13F Read memory command				
Command	R				
Input	Start Address: Address from where data bytes are to be read. This address should be a word boundary.				
	Number of Bytes: Number of bytes to be read. Count should be a multiple of 4.				
Return Code	CMD_SUCCESS followed by <actual (uu-encoded)="" data=""> </actual>				
	ADDR_ERROR (Address not on word boundary)				
	ADDR_NOT_MAPPED				
	COUNT_ERROR (Byte count is not a multiple of 4)				
	PARAM_ERROR				
	CODE_READ_PROTECTION_ENABLED				
Description	This command is used to read data from RAM or Flash memory. This command is blocked when code read protection is enabled.				
Example	"R 1073741824 4 <cr><lf>" reads 4 bytes of data from address 0x4000 0000.</lf></cr>				

21.8.6 Prepare sector(s) for write operation <start sector number> <end sector number>

This command makes flash write/erase operation a two step process.

Table 295: ISP Prepare sector(s) for write operation command

Command	P
Input	Start Sector Number
	End Sector Number: Should be greater than or equal to start sector number.
Return Code	CMD_SUCCESS
	BUSY
	INVALID_SECTOR
	PARAM_ERROR
Description	This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. The boot block can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.
Example	"P 0 0 <cr><lf>" prepares the flash sector 0.</lf></cr>

21.8.7 Copy RAM to Flash <Flash address> <RAM address> <no of bytes>

Table 296: ISP Copy command

Command	C	
Input	Flash Address(DST): Destination Flash address where data bytes are to be written. The destination address should be a 256 byte boundary.	
	RAM Address(SRC): Source RAM address from where data bytes are to be read.	
	Number of Bytes: Number of bytes to be written. Should be 256 512 1024 4096.	
Return Code	CMD_SUCCESS	
	SRC_ADDR_ERROR (Address not on word boundary)	
	DST_ADDR_ERROR (Address not on correct boundary)	
	SRC_ADDR_NOT_MAPPED	
	DST_ADDR_NOT_MAPPED	
	COUNT_ERROR (Byte count is not 256 512 1024 4096)	
	SECTOR_NOT_PREPARED_FOR WRITE_OPERATION	
	BUSY	
	CMD_LOCKED	
	PARAM_ERROR	
	CODE_READ_PROTECTION_ENABLED	
Description	This command is used to program the flash memory. The "Prepare Sector(s) for Write Operation" command should precede this command. The affected sectors are automatically protected again once the copy command is successfully executed. The boot block cannot be written by this command. This command is blocked when code read protection is enabled.	
Example	"C 0 1073774592 512 <cr><lf>" copies 512 bytes from the RAM address 0x4000 8000 to the flash address 0.</lf></cr>	

Volume 1

21.8.8 Go <address> <mode>

Table 297: ISP Go command

Command	G		
Input	Address: Flash or RAM address from which the code execution is to be started. This address should be on a word boundary.		
	Mode: T (Execute program in Thumb Mode) A (Execute program in ARM mode).		
Return Code	CMD_SUCCESS		
	ADDR_ERROR		
	ADDR_NOT_MAPPED		
	CMD_LOCKED		
	PARAM_ERROR		
	CODE_READ_PROTECTION_ENABLED		
Description	This command is used to execute a program residing in RAM or Flash memory. It may not be possible to return to the ISP command handler once this command is successfully executed. This command is blocked when code read protection is enabled.		
Example	"G 0 A <cr><lf>" branches to address 0x0000 0000 in ARM mode.</lf></cr>		

21.8.9 Erase sector(s) <start sector number> <end sector number>

Table 298: ISP Erase sector command

Command	E	
Input	Start Sector Number	
	End Sector Number: Should be greater than or equal to start sector number.	
Return Code	CMD_SUCCESS	
	BUSY	
	INVALID_SECTOR	
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION	
	CMD_LOCKED	
	PARAM_ERROR	
	CODE_READ_PROTECTION_ENABLED	
Description	rescription This command is used to erase one or more sector(s) of on-chip Flash memory. The boot block can not be erased using this command. This command only allow erasure of all user sectors when the code read protection is enabled.	
Example	"E 2 3 <cr><lf>" erases the flash sectors 2 and 3.</lf></cr>	



21.8.10 Blank check sector(s) < sector number > < end sector number >

Table 299: ISP Blank check sector command

Command	I		
Input	Start Sector Number:		
	End Sector Number: Should be greater than or equal to start sector number.		
Return Code	CMD_SUCCESS		
	SECTOR_NOT_BLANK (followed by <offset blank="" first="" location="" non="" of="" the="" word=""> <contents blank="" location="" non="" of="" word="">) </contents></offset>		
INVALID_SECTOR			
	PARAM_ERROR		
Description	This command is used to blank check one or more sectors of on-chip Flash memory.		
	Blank check on sector 0 always fails as first 64 bytes are re-mapped to flash boot block.		
Example	"I 2 3 <cr><lf>" blank checks the flash sectors 2 and 3.</lf></cr>		

21.8.11 Read Part Identification number

Table 300: ISP Read Part Identification number command

Command	J	
Input	None.	
Return Code	CMD_SUCCESS followed by part identification number in ASCII (see <u>Table 301</u>).	
Description	This command is used to read the part identification number.	

Table 301: LPC214x Part Identification numbers

Device	ASCII/dec coding	Hex coding
LPC2141	196353	0x0002 FF01
LPC2142	196369	0x0002 FF11
LPC2144	196370	0x0002 FF12
LPC2146	196387	0x0002 FF23
LPC2148	196389	0x0002 FF25

21.8.12 Read Boot code version number

Table 302: ISP Read Boot code version number command

Command	K	
Input	None	
Return Code	de CMD_SUCCESS followed by 2 bytes of boot code version number in ASCII format. It is to be interpreted as syte1(Major)>. eyte0(Minor)>.	
Description	This command is used to read the boot code version number.	

21.8.13 Compare <address1> <address2> <no of bytes>

Table 303: ISP Compare command

Volume 1

Command	M	
Input	Address1 (DST): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.	
	Address2 (SRC): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.	
	Number of Bytes: Number of bytes to be compared; should be a multiple of 4.	
Return Code	CMD_SUCCESS (Source and destination data are equal)	
	COMPARE_ERROR (Followed by the offset of first mismatch)	
	COUNT_ERROR (Byte count is not a multiple of 4)	
	ADDR_ERROR	
	ADDR_NOT_MAPPED	
	PARAM_ERROR	
Description	This command is used to compare the memory contents at two locations.	
	Compare result may not be correct when source or destination address contains any of the first 64 bytes starting from address zero. First 64 bytes are re-mapped to flash boot sector	
Example	"M 8192 1073741824 4 <cr><lf>" compares 4 bytes from the RAM address 0x4000 0000 to the 4 bytes from the flash address 0x2000.</lf></cr>	

21.8.14 ISP Return codes

Table 304: ISP Return codes Summary

Return Code	Mnemonic	Description	
0	CMD_SUCCESS	Command is executed successfully. Sent by ISP handler only when command given by the host has been completely and successfully executed.	
1	INVALID_COMMAND	Invalid command.	
2	SRC_ADDR_ERROR	Source address is not on word boundary.	
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.	
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.	
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.	
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.	
7	INVALID_SECTOR	Sector number is invalid or end sector number is greater than start sector number.	
8	SECTOR_NOT_BLANK	Sector is not blank.	
9	SECTOR_NOT_PREPARED_FOR_ WRITE_OPERATION	Command to prepare sector for write operation was not executed.	
10	COMPARE_ERROR	Source and destination data not equal.	
11	BUSY	Flash programming hardware interface is busy.	

Table 304: ISP Return codes Summary

Return Code	Mnemonic	Description
12	PARAM_ERROR	Insufficient number of parameters or invalid parameter.
13	ADDR_ERROR	Address is not on word boundary.
14	ADDR_NOT_MAPPED	Address is not mapped in the memory map. Count value is taken in to consideration where applicable.
15	CMD_LOCKED	Command is locked.
16	INVALID_CODE	Unlock code is invalid.
17	INVALID_BAUD_RATE	Invalid baud rate setting.
18	INVALID_STOP_BIT	Invalid stop bit setting.
19	CODE_READ_PROTECTION_ ENABLED	Code read protection enabled.

21.9 IAP Commands

For in application programming the IAP routine should be called with a word pointer in register r0 pointing to memory (RAM) containing command code and parameters. Result of the IAP command is returned in the result table pointed to by register r1. The user can reuse the command table for result by passing the same pointer in registers r0 and r1. The parameter table should be big enough to hold all the results in case if number of results are more than number of parameters. Parameter passing is illustrated in the Figure 67. The number of parameters and results vary according to the IAP command. The maximum number of parameters is 5, passed to the "Copy RAM to FLASH" command. The maximum number of results is 2, returned by the "Blankcheck sector(s)" command. The command handler sends the status code INVALID_COMMAND when an undefined command is received. The IAP routine resides at 0x7FFF FFF0 location and it is thumb code.

The IAP function could be called in the following way using C.

Define the IAP location entry point. Since the 0th bit of the IAP location is set there will be a change to Thumb instruction set when the program counter branches to this address.

```
#define IAP LOCATION 0x7fffffff1
```

Define data structure or pointers to pass IAP command table and result table to the IAP function:

```
unsigned long command[5];
unsigned long result[2];

or

unsigned long * command;
unsigned long * result;
command=(unsigned long *) 0x......
result= (unsigned long *) 0x......
```

Define pointer to function type, which takes two parameters and returns void. Note the IAP returns the result with the base address of the table residing in R1.

Volume 1

Chapter 21: Flash Memory

```
typedef void (*IAP)(unsigned int [],unsigned int[]);
IAP iap_entry;
```

Setting function pointer:

```
iap entry=(IAP) IAP LOCATION;
```

Whenever you wish to call IAP you could use the following statement.

```
iap_entry (command, result);
```

The IAP call could be simplified further by using the symbol definition file feature supported by ARM Linker in ADS (ARM Developer Suite). You could also call the IAP routine using assembly code.

The following symbol definitions can be used to link IAP routine and user application:

```
#<SYMDEFS># ARM Linker, ADS1.2 [Build 826]: Last Updated: Wed May 08 16:12:23 2002
0x7fffff90 T rm_init_entry
0x7fffffa0 A rm_undef_handler
0x7fffffb0 A rm_prefetchabort_handler
0x7fffffc0 A rm_dataabort_handler
0x7fffffd0 A rm_irqhandler
0x7fffffe0 A rm_irqhandler
0x7ffffffo T iap_entry
```


As per the ARM specification (The ARM Thumb Procedure Call Standard SWS ESPC 0002 A-05) up to 4 parameters can be passed in the r0, r1, r2 and r3 registers respectively. Additional parameters are passed on the stack. Up to 4 parameters can be returned in the r0, r1, r2 and r3 registers respectively. Additional parameters are returned indirectly via memory. Some of the IAP calls require more than 4 parameters. If the ARM suggested scheme is used for the parameter passing/returning then it might create problems due to difference in the C compiler implementation from different vendors. The suggested parameter passing scheme reduces such risk.

The flash memory is not accessible during a write or erase operation. IAP commands, which results in a flash write/erase operation, use 32 bytes of space in the top portion of the on-chip RAM for execution. The user program should not be use this space if IAP flash programming is permitted in the application.

Table 305: IAP Command Summary

IAP Command	Command Code	Described in
Prepare sector(s) for write operation	50 ₁₀	Table 306
Copy RAM to Flash	51 ₁₀	Table 307
Erase sector(s)	52 ₁₀	Table 308
Blank check sector(s)	53 ₁₀	Table 309
Read Part ID	54 ₁₀	Table 310
Read Boot code version	55 ₁₀	Table 311
Compare	56 ₁₀	Table 312
Reinvoke ISP	57 ₁₀	Table 313

Chapter 21: Flash Memory

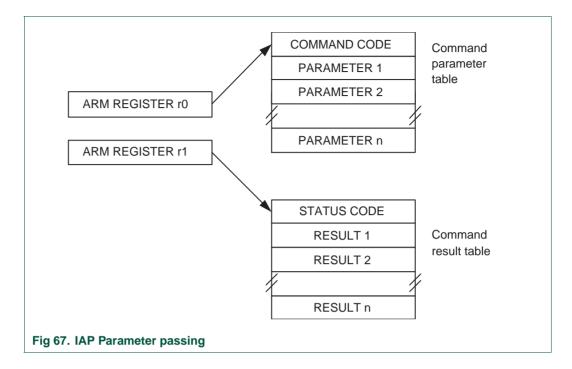

21.9.1 Prepare sector(s) for write operation

This command makes flash write/erase operation a two step process.

Table 306: IAP Prepare sector(s) for write operation command

Command	Prepare sector(s) for write operation			
Input	Command code: 50 ₁₀			
	Param0: Start Sector Number			
	Param1: End Sector Number (should be greater than or equal to start sector number).			
Return Code	CMD_SUCCESS			
	BUSY			
	INVALID_SECTOR			
Result	None			
Description	This command must be executed before executing "Copy RAM to Flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to Flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. The boot sector can not be prepared by this command. To prepare a single sector use the same "Start" and "End" sector numbers.			

Volume 1

21.9.2 Copy RAM to Flash

Table 307: IAP Copy RAM to Flash command

Command	Copy RAM to Flash		
Input	Command code: 51 ₁₀		
	Param0(DST): Destination Flash address where data bytes are to be written. This address should be a 256 byte boundary.		
	Param1(SRC): Source RAM address from which data bytes are to be read. This address should be a word boundary.		
	Param2: Number of bytes to be written. Should be 256 512 1024 4096.		
	Param3: System Clock Frequency (CCLK) in kHz.		
Return Code	CMD_SUCCESS		
	SRC_ADDR_ERROR (Address not a word boundary)		
	DST_ADDR_ERROR (Address not on correct boundary)		
	SRC_ADDR_NOT_MAPPED		
	DST_ADDR_NOT_MAPPED		
	COUNT_ERROR (Byte count is not 256 512 1024 4096)		
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION		
	BUSY		
Result	None		
Description	This command is used to program the flash memory. The affected sectors should be prepared first by calling "Prepare Sector for Write Operation" command. The affected sectors are automatically protected again once the copy command is successfully executed. The boot sector can not be written by this command.		

21.9.3 Erase sector(s)

Table 308: IAP Erase sector(s) command

Command	Erase Sector(s)
Input	Command code: 52 ₁₀
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
	Param2: System Clock Frequency (CCLK) in kHz.
Return Code	CMD_SUCCESS
	BUSY
	SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION
	INVALID_SECTOR
Result	None
Description	This command is used to erase a sector or multiple sectors of on-chip Flash memory. The boot sector can not be erased by this command. To erase a single sector use the same "Start" and "End" sector numbers.

21.9.4 Blank check sector(s)

Table 309: IAP Blank check sector(s) command

Command	Blank check sector(s)		
Input	Command code: 53 ₁₀		
	Param0: Start Sector Number		
	Param1: End Sector Number (should be greater than or equal to start sector number).		
Return Code	CMD_SUCCESS		
	BUSY		
	SECTOR_NOT_BLANK		
	INVALID_SECTOR		
Result	Result0: Offset of the first non blank word location if the Status Code is SECTOR_NOT_BLANK.		
	Result1: Contents of non blank word location.		
Description	This command is used to blank check a sector or multiple sectors of on-chip Flash memory. To blank check a single sector use the same "Start" and "End" sector numbers.		

21.9.5 Read Part Identification number

Table 310: IAP Read Part Identification command

Read part identification number		
Command code: 54 ₁₀		
Parameters: None		
CMD_SUCCESS		
Result0: Part Identification Number (see <u>Table 301 "LPC214x Part Identification numbers" on page 303</u> for details)		
This command is used to read the part identification number.		

21.9.6 Read Boot code version number

Table 311: IAP Read Boot code version number command

Command	Read boot code version number		
Input	Command code: 55 ₁₀		
	Parameters: None		
Return Code	CMD_SUCCESS		
Result	Result0: 2 bytes of boot code version number in ASCII format. It is to be interpreted as <byte1(major)>.<byte0(minor)></byte0(minor)></byte1(major)>		
Description	This command is used to read the boot code version number.		

21.9.7 Compare <address1> <address2> <no of bytes>

Table 312: IAP Compare command

Command	Compare		
Input	Command code: 56 ₁₀		
	Param0(DST): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.		
	Param1(SRC): Starting Flash or RAM address of data bytes to be compared. This address should be a word boundary.		
	Param2: Number of bytes to be compared; should be a multiple of 4.		
Return Code	CMD_SUCCESS		
	COMPARE_ERROR		
	COUNT_ERROR (Byte count is not a multiple of 4)		
	ADDR_ERROR		
	ADDR_NOT_MAPPED		
Result	Result0: Offset of the first mismatch if the Status Code is COMPARE_ERROR.		
Description	This command is used to compare the memory contents at two locations.		
	The result may not be correct when the source or destination includes any of the first 64 bytes starting from address zero. The first 64 bytes can be re-mapped to RAM.		

21.9.8 Reinvoke ISP

Volume 1

Table 313: Reinvoke ISP

Command	Compare			
Input	Command code: 57 ₁₀			
Return Code	None			
Result	None.			
Description	This command is used to invoke the bootloader in ISP mode. This command maps boot vectors, configures P0.1 as an input and sets the VPB divider register to 0 before entering the ISP mode. This command may be used when a valid user program is present in the internal flash memory and the P0.14 pin is not accessible to force the ISP mode. This command does not disable the PLL hence it is possible to invoke the bootloader when the part is running off the PLL. In such case the ISP utility should pass the PLL frequency after autobaud handshake. Another option is to disable the PLL before making this IAP call. Important: TIMER1 registers must be programmed with reset values before "Reinvoke ISP" command is used.			

21.9.9 IAP Status codes

Table 314: IAP Status codes Summary

Status Code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on a word boundary.
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.

Table 314: IAP Status codes Summary

Status Code	Mnemonic	Description
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken in to consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken in to consideration where applicable.
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
7	INVALID_SECTOR	Sector number is invalid.
8	SECTOR_NOT_BLANK	Sector is not blank.
9	SECTOR_NOT_PREPARED_ FOR_WRITE_OPERATION	Command to prepare sector for write operation was not executed.
10	COMPARE_ERROR	Source and destination data is not same.
11	BUSY	Flash programming hardware interface is busy.

21.10 JTAG Flash programming interface

Debug tools can write parts of the flash image to the RAM and then execute the IAP call "Copy RAM to Flash" repeatedly with proper offset.



UM10139

Chapter 22: EmbeddedICE logic

Rev. 01 — 15 August 2005

User manual

22.1 Features

- No target resources are required by the software debugger in order to start the debugging session.
- Allows the software debugger to talk via a JTAG (Joint Test Action Group) port directly to the core.
- Inserts instructions directly in to the ARM7TDMI-S core.
- The ARM7TDMI-S core or the System state can be examined, saved or changed depending on the type of instruction inserted.
- Allows instructions to execute at a slow debug speed or at a fast system speed.

22.2 Applications

The EmbeddedICE logic provides on-chip debug support. The debugging of the target system requires a host computer running the debugger software and an EmbeddedICE protocol convertor. EmbeddedICE protocol convertor converts the Remote Debug Protocol commands to the JTAG data needed to access the ARM7TDMI-S core present on the target system.

22.3 Description

The ARM7TDMI-S Debug Architecture uses the existing JTAG¹ port as a method of accessing the core. The scan chains that are around the core for production test are reused in the debug state to capture information from the data bus and to insert new information into the core or the memory. There are two JTAG-style scan chains within the ARM7TDMI-S. A JTAG-style Test Access Port Controller controls the scan chains. In addition to the scan chains, the debug architecture uses EmbeddedICE logic which resides on chip with the ARM7TDMI-S core. The EmbeddedICE has its own scan chain that is used to insert watchpoints and breakpoints for the ARM7TDMI-S core. The EmbeddedICE logic consists of two real time watchpoint registers, together with a control and status register. One or both of the watchpoint registers can be programmed to halt the ARM7TDMI-S core. Execution is halted when a match occurs between the values programmed into the EmbeddedICE logic and the values currently appearing on the address bus, data bus and some control signals. Any bit can be masked so that its value does not affect the comparison. Either watchpoint register can be configured as a watchpoint (i.e. on a data access) or a break point (i.e. on an instruction fetch). The watchpoints and breakpoints can be combined such that:

 The conditions on both watchpoints must be satisfied before the ARM7TDMI core is stopped. The CHAIN functionality requires two consecutive conditions to be satisfied before the core is halted. An example of this would be to set the first breakpoint to

^{1.}For more details refer to IEEE Standard 1149.1 - 1990 Standard Test Access Port and Boundary Scan Architecture.

trigger on an access to a peripheral and the second to trigger on the code segment that performs the task switching. Therefore when the breakpoints trigger the information regarding which task has switched out will be ready for examination.

Chapter 22: EmbeddedICE

 The watchpoints can be configured such that a range of addresses are enabled for the watchpoints to be active. The RANGE function allows the breakpoints to be combined such that a breakpoint is to occur if an access occurs in the bottom 256 bytes of memory but not in the bottom 32 bytes.

The ARM7TDMI-S core has a Debug Communication Channel function in-built. The debug communication channel allows a program running on the target to communicate with the host debugger or another separate host without stopping the program flow or even entering the debug state. The debug communication channel is accessed as a co-processor 14 by the program running on the ARM7TDMI-S core. The debug communication channel allows the JTAG port to be used for sending and receiving data without affecting the normal program flow. The debug communication channel data and control registers are mapped in to addresses in the EmbeddedICE logic.

22.4 Pin description

Table 315: EmbeddedICE pin description

Pin Name	Туре	Description
TMS	Input	Test Mode Select. The TMS pin selects the next state in the TAP state machine.
TCK	Input	Test Clock. This allows shifting of the data in, on the TMS and TDI pins. It is a positive edge triggered clock with the TMS and TCK signals that define the internal state of the device.
TDI	Input	Test Data In. This is the serial data input for the shift register.
TDO	Output	Test Data Output. This is the serial data output from the shift register. Data is shifted out of the device on the negative edge of the TCK signal.
nTRST	Input	Test Reset . The nTRST pin can be used to reset the test logic within the EmbeddedICE logic.
RTCK	Output	Returned Test Clock. Extra signal added to the JTAG port. Required for designs based on ARM7TDMI-S processor core. Multi-ICE (Development system from ARM) uses this signal to maintain synchronization with targets having slow or widely varying clock frequency. For details refer to "Multi-ICE System Design considerations Application Note 72 (ARM DAI 0072A)".

22.5 Reset state of multiplexed pins

On the LPC2141/2/4/6/8, the pins above are multiplexed with P1.31-26. To have them come up as a Debug port, connect a weak bias resistor (4.7-10 k Ω depending on the external JTAG circuitry) between V_{SS} and the P1.26/RTCK pin. To have them come up as GPIO pins, do not connect a bias resistor, and ensure that any external driver connected to P1.26/RTCK is either driving high, or is in high-impedance state, during Reset.



22.6 Register description


The EmbeddedICE logic contains 16 registers as shown in <u>Table 316</u> below. The ARM7TDMI-S debug architecture is described in detail in "ARM7TDMI-S (rev 4) Technical Reference Manual" (ARM DDI 0234A) published by ARM Limited and is available via Internet at http://www.arm.com.

Table 316: EmbeddedICE logic registers

Name	Width	Description	Address
Debug Control	6	Force debug state, disable interrupts	00000
Debug Status	5	Status of debug	00001
Debug Comms Control Register	32	Debug communication control register	00100
Debug Comms Data Register	32	Debug communication data register	00101
Watchpoint 0 Address Value	32	Holds watchpoint 0 address value	01000
Watchpoint 0 Address Mask	32	Holds watchpoint 0 address mask	01001
Watchpoint 0 Data Value	32	Holds watchpoint 0 data value	01010
Watchpoint 0 Data Mask	32	Holds watchpoint 0 data mask	01011
Watchpoint 0 Control Value	9	Holds watchpoint 0 control value	01100
Watchpoint 0 Control Mask	8	Holds watchpoint 0 control mask	01101
Watchpoint 1 Address Value	32	Holds watchpoint 1 address value	10000
Watchpoint 1 Address Mask	32	Holds watchpoint 1 address mask	10001
Watchpoint 1 Data Value	32	Holds watchpoint 1 data value	10010
Watchpoint 1 Data Mask	32	Holds watchpoint 1 data mask	10011
Watchpoint 1 Control Value	9	Holds watchpoint 1 control value	10100
Watchpoint 1 Control Mask	8	Holds watchpoint 1 control mask	10101

22.7 Block diagram

The block diagram of the debug environment is shown below in Figure 68.

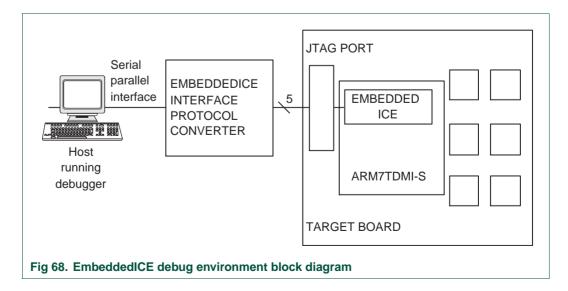



UM10139

Chapter 23: Embedded Trace Macrocell (ETM)

Rev. 01 — 15 August 2005

User manual

23.1 Features

- Closely track the instructions that the ARM core is executing.
- 1 External trigger input
- 10 pin interface
- All registers are programmed through JTAG interface.
- Does not consume power when trace is not being used.
- THUMB instruction set support

23.2 Applications

As the microcontroller has significant amounts of on-chip memories, it is not possible to determine how the processor core is operating simply by observing the external pins. The ETM provides real-time trace capability for deeply embedded processor cores. It outputs information about processor execution to a trace port. A software debugger allows configuration of the ETM using a JTAG interface and displays the trace information that has been captured, in a format that a user can easily understand.

23.3 Description

The ETM is connected directly to the ARM core and not to the main AMBA system bus. It compresses the trace information and exports it through a narrow trace port. An external Trace Port Analyzer captures the trace information under software debugger control. Trace port can broadcast the Instruction trace information. Instruction trace (or PC trace) shows the flow of execution of the processor and provides a list of all the instructions that were executed. Instruction trace is significantly compressed by only broadcasting branch addresses as well as a set of status signals that indicate the pipeline status on a cycle by cycle basis. Trace information generation can be controlled by selecting the trigger resource. Trigger resources include address comparators, counters and sequencers. Since trace information is compressed the software debugger requires a static image of the code being executed. Self-modifying code can not be traced because of this restriction.

23.3.1 ETM configuration

The following standard configuration is selected for the ETM macrocell.

Table 317: ETM configuration

Resource number/type	Small[1]
Pairs of address comparators	1
Data Comparators	0 (Data tracing is not supported)
Memory Map Decoders	4
Counters	1
Sequencer Present	No

Chapter 23: Embedded Trace

Table 317: ETM configuration

Resource number/type	Small ^[1]
External Inputs	2
External Outputs	0
FIFOFULL Present	Yes (Not wired)
FIFO depth	10 bytes
Trace Packet Width	4/8

^[1] For details refer to ARM documentation "Embedded Trace Macrocell Specification (ARM IHI 0014E)".

23.4 Pin description

Table 318: ETM pin description

Pin Name	Type	Description
TRACECLK	Output	Trace Clock. The trace clock signal provides the clock for the trace port. PIPESTAT[2:0], TRACESYNC, and TRACEPKT[3:0] signals are referenced to the rising edge of the trace clock. This clock is not generated by the ETM block. It is to be derived from the system clock. The clock should be balanced to provide sufficient hold time for the trace data signals. Half rate clocking mode is supported. Trace data signals should be shifted by a clock phase from TRACECLK. Refer to Figure 3.14 page 3.26 and figure 3.15 page 3.27 in "ETM7 Technical Reference Manual" (ARM DDI 0158B), for example circuits that implements both half-rate clocking and shifting of the trace data with respect to the clock. For TRACECLK timings refer to section 5.2 on page 5-13 in "Embedded Trace Macrocell Specification" (ARM IHI 0014E).
PIPESTAT[2:0]	Output	Pipe Line status. The pipeline status signals provide a cycle-by-cycle indication of what is happening in the execution stage of the processor pipeline.
TRACESYNC	Output	Trace synchronization. The trace sync signal is used to indicate the first packet of a group of trace packets and is asserted HIGH only for the first packet of any branch address.
TRACEPKT[3:0]	Output	Trace Packet. The trace packet signals are used to output packaged address and data information related to the pipeline status. All packets are eight bits in length. A packet is output over two cycles. In the first cycle, Packet[3:0] is output and in the second cycle, Packet[7:4] is output.
EXTIN[0]	Input	External Trigger Input

23.5 Reset state of multiplexed pins

On the LPC2141/2/4/6/8, the ETM pin functions are multiplexed with P1.25-16. To have these pins come as a Trace port, connect a weak bias resistor (4.7 k Ω) between the P1.20/TRACESYNC pin and V_{SS}. To have them come up as port pins, do not connect a bias resistor to P1.20/TRACESYNC, and ensure that any external driver connected to P1.20/TRACESYNC is either driving high, or is in high-impedance state, during Reset.



23.6 Register description


The ETM contains 29 registers as shown in <u>Table 319</u> below. They are described in detail in the ARM IHI 0014E document published by ARM Limited, which is available via the Internet at http://www.arm.com.

Table 319: ETM registers

Name	Description	Access	Register encoding
ETM Control	Controls the general operation of the ETM.	R/W	000 0000
ETM Configuration Code	Allows a debugger to read the number of each type of resource.	RO	000 0001
Trigger Event	Holds the controlling event.	WO	000 0010
Memory Map Decode Control	Eight-bit register, used to statically configure the memory map decoder.	WO	000 0011
ETM Status	Holds the pending overflow status bit.	RO	000 0100
System Configuration	Holds the configuration information using the SYSOPT bus.	RO	000 0101
Trace Enable Control 3	Holds the trace on/off addresses.	WO	000 0110
Trace Enable Control 2	Holds the address of the comparison.	WO	000 0111
Trace Enable Event	Holds the enabling event.	WO	000 1000
Trace Enable Control 1	Holds the include and exclude regions.	WO	000 1001
FIFOFULL Region	Holds the include and exclude regions.	WO	000 1010
FIFOFULL Level	Holds the level below which the FIFO is considered full.	WO	000 1011
ViewData event	Holds the enabling event.	WO	000 1100
ViewData Control 1	Holds the include/exclude regions.	WO	000 1101
ViewData Control 2	Holds the include/exclude regions.	WO	000 1110
ViewData Control 3	Holds the include/exclude regions.	WO	000 1111
Address Comparator 1 to 16	Holds the address of the comparison.	WO	001 xxxx
Address Access Type 1 to 16	Holds the type of access and the size.	WO	010 xxxx
Reserved	-	-	000 xxxx
Reserved	-	-	100 xxxx
Initial Counter Value 1 to 4	Holds the initial value of the counter.	WO	101 00xx
Counter Enable 1 to 4	Holds the counter clock enable control and event.	WO	101 01xx
Counter reload 1 to 4	Holds the counter reload event.	WO	101 10xx
Counter Value 1 to 4	Holds the current counter value.	RO	101 11xx
Sequencer State and Control	Holds the next state triggering events.	-	110 00xx
External Output 1 to 4	Holds the controlling events for each output.	WO	110 10xx
Reserved	-	-	110 11xx
Reserved	-	-	111 0xxx
Reserved	-	-	111 1xxx

23.7 Block diagram

The block diagram of the ETM debug environment is shown below in Figure 69.

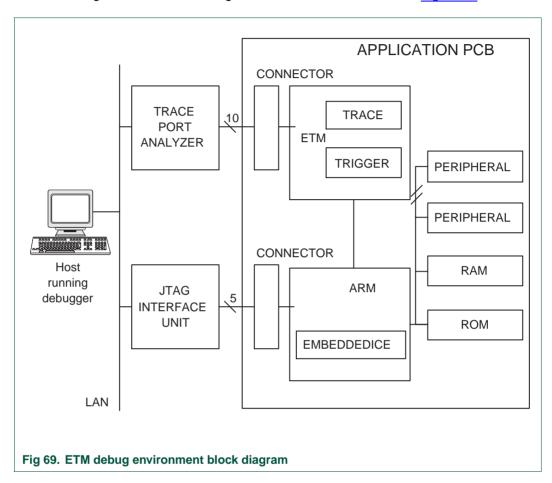




UM10139

Chapter 24: RealMonitor

Rev. 01 — 15 August 2005

User manual



Refer to the white paper "Real Time Debug for System-on-Chip" available at http://www.arm.com/support/White Papers?OpenDocument for background information.

24.1 Features

- Allows user to establish a debug session to a currently running system without halting or resetting the system.
- Allows user time-critical interrupt code to continue executing while other user application code is being debugged.

24.2 Applications

Real time debugging.

24.3 Description

RealMonitor is a lightweight debug monitor that allows interrupts to be serviced while user debug their foreground application. It communicates with the host using the DCC (Debug Communications Channel), which is present in the EmbeddedICE logic. RealMonitor provides advantages over the traditional methods for debugging applications in ARM systems. The traditional methods include:

- Angel (a target-based debug monitor)
- Multi-ICE or other JTAG unit and EmbeddedICE logic (a hardware-based debug solution).

Although both of these methods provide robust debugging environments, neither is suitable as a lightweight real-time monitor.

Angel is designed to load and debug independent applications that can run in a variety of modes, and communicate with the debug host using a variety of connections (such as a serial port or ethernet). Angel is required to save and restore full processor context, and the occurrence of interrupts can be delayed as a result. Angel, as a fully functional target-based debugger, is therefore too heavyweight to perform as a real-time monitor.


Multi-ICE is a hardware debug solution that operates using the EmbeddedICE unit that is built into most ARM processors. To perform debug tasks such as accessing memory or the processor registers, Multi-ICE must place the core into a debug state. While the processor is in this state, which can be millions of cycles, normal program execution is suspended, and interrupts cannot be serviced.

Volume 1

RealMonitor combines features and mechanisms from both Angel and Multi-ICE to provide the services and functions that are required. In particular, it contains both the Multi-ICE communication mechanisms (the DCC using JTAG), and Angel-like support for processor context saving and restoring. RealMonitor is pre-programmed in the on-chip ROM memory (boot sector). When enabled It allows user to observe and debug while parts of application continue to run. Refer to Section 24.4 "How to enable Realmonitor" on page 322 for details.

24.3.1 RealMonitor components

As shown in Figure 70, RealMonitor is split in to two functional components:

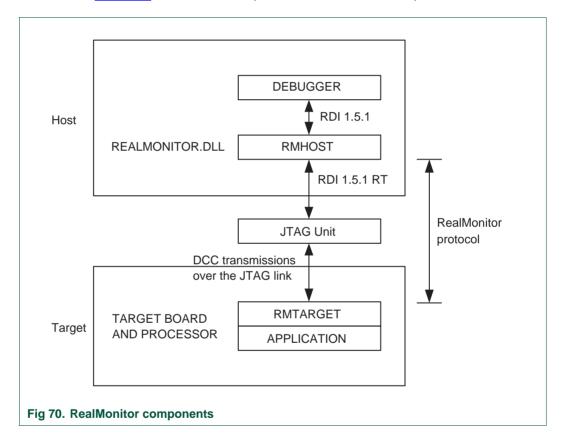

24.3.2 RMHost


This is located between a debugger and a JTAG unit. The RMHost controller, RealMonitor.dll, converts generic Remote Debug Interface (RDI) requests from the debugger into DCC-only RDI messages for the JTAG unit. For complete details on debugging a RealMonitor-integrated application from the host, see the ARM RMHost User Guide (ARM DUI 0137A).

24.3.3 RMTarget

This is pre-programmed in the on-chip ROM memory (boot sector), and runs on the target hardware. It uses the EmbeddedICE logic, and communicates with the host using the DCC. For more details on RMTarget functionality, see the RealMonitor Target Integration Guide (ARM DUI 0142A).

24.3.4 How RealMonitor works

In general terms, the RealMonitor operates as a state machine, as shown in Figure 71. RealMonitor switches between running and stopped states, in response to packets received by the host, or due to asynchronous events on the target. RMTarget supports the triggering of only one breakpoint, watchpoint, stop, or semihosting SWI at a time. There is no provision to allow nested events to be saved and restored. So, for example, if user application has stopped at one breakpoint, and another breakpoint occurs in an IRQ handler, RealMonitor enters a panic state. No debugging can be performed after RealMonitor enters this state.

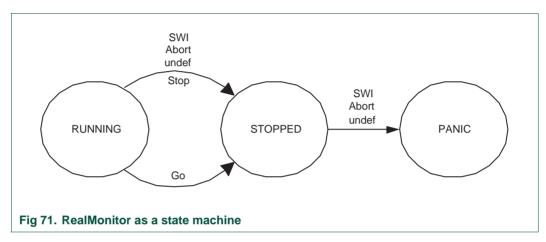

A debugger such as the ARM eXtended Debugger (AXD) or other RealMonitor aware debugger, that runs on a host computer, can connect to the target to send commands and receive data. This communication between host and target is illustrated in Figure 70.

The target component of RealMonitor, RMTarget, communicates with the host component, RMHost, using the Debug Communications Channel (DCC), which is a reliable link whose data is carried over the JTAG connection.

While user application is running, RMTarget typically uses IRQs generated by the DCC. This means that if user application also wants to use IRQs, it must pass any DCC-generated interrupts to RealMonitor.

To allow nonstop debugging, the EmbeddedICE-RT logic in the processor generates a Prefetch Abort exception when a breakpoint is reached, or a Data Abort exception when a watchpoint is hit. These exceptions are handled by the RealMonitor exception handlers that inform the user, by way of the debugger, of the event. This allows user application to continue running without stopping the processor. RealMonitor considers user application to consist of two parts:

- a foreground application running continuously, typically in User, System, or SVC mode
- a background application containing interrupt and exception handlers that are triggered by certain events in user system, including:
 - IRQs or FIQs
 - Data and Prefetch aborts caused by user foreground application. This indicates an
 error in the application being debugged. In both cases the host is notified and the
 user application is stopped.

321

Volume 1

Chapter 24: RealMonitor

 Undef exception caused by the undefined instructions in user foreground application. This indicates an error in the application being debugged. RealMonitor stops the user application until a "Go" packet is received from the host.

When one of these exceptions occur that is not handled by user application, the following happens:

- RealMonitor enters a loop, polling the DCC. If the DCC read buffer is full, control is passed to rm_ReceiveData() (RealMonitor internal function). If the DCC write buffer is free, control is passed to rm_TransmitData() (RealMonitor internal function). If there is nothing else to do, the function returns to the caller. The ordering of the above comparisons gives reads from the DCC a higher priority than writes to the communications link.
- RealMonitor stops the foreground application. Both IRQs and FIQs continue to be serviced if they were enabled by the application at the time the foreground application was stopped.

24.4 How to enable Realmonitor

The following steps must be performed to enable RealMonitor. A code example which implements all the steps can be found at the end of this section.

24.4.1 Adding stacks

User must ensure that stacks are set up within application for each of the processor modes used by RealMonitor. For each mode, RealMonitor requires a fixed number of words of stack space. User must therefore allow sufficient stack space for both RealMonitor and application.

RealMonitor has the following stack requirements:

Table 320: RealMonitor stack requirement

Processor Mode	RealMonitor Stack Usage (Bytes)
Undef	48
Prefetch Abort	16
Data Abort	16
IRQ	8

24.4.2 IRQ mode

A stack for this mode is always required. RealMonitor uses two words on entry to its interrupt handler. These are freed before nested interrupts are enabled.

24.4.3 Undef mode

A stack for this mode is always required. RealMonitor uses 12 words while processing an undefined instruction exception.

24.4.4 SVC mode

RealMonitor makes no use of this stack.

Chapter 24: RealMonitor

24.4.5 Prefetch Abort mode

RealMonitor uses four words on entry to its Prefetch abort interrupt handler.

24.4.6 Data Abort mode

RealMonitor uses four words on entry to its data abort interrupt handler.

24.4.7 User/System mode

RealMonitor makes no use of this stack.

24.4.8 FIQ mode

RealMonitor makes no use of this stack.

24.4.9 Handling exceptions

This section describes the importance of sharing exception handlers between RealMonitor and user application.

24.4.10 RealMonitor exception handling


To function properly, RealMonitor must be able to intercept certain interrupts and exceptions. Figure 72 illustrates how exceptions can be claimed by RealMonitor itself, or shared between RealMonitor and application. If user application requires the exception sharing, they must provide function (such as app_IRQDispatch ()). Depending on the nature of the exception, this handler can either:

- Pass control to the RealMonitor processing routine, such as rm_irqhandler2().
- Claim the exception for the application itself, such as app_IRQHandler ().

In a simple case where an application has no exception handlers of its own, the application can install the RealMonitor low-level exception handlers directly into the vector table of the processor. Although the IRQ handler must get the address of the Vectored Interrupt Controller. The easiest way to do this is to write a branch instruction (<address>) into the vector table, where the target of the branch is the start address of the relevant RealMonitor exception handler.

Volume 1

Chapter 24: RealMonitor

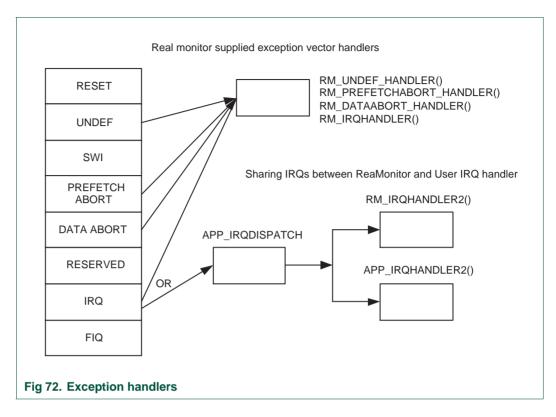

24.4.11 RMTarget initialization

While the processor is in a privileged mode, and IRQs are disabled, user must include a line of code within the start-up sequence of application to call rm_init_entry().

24.4.12 Code example

The following example shows how to setup stack, VIC, initialize RealMonitor and share non vectored interrupts:

```
IMPORT rm init entry
IMPORT rm prefetchabort handler
IMPORT rm_dataabort_handler
IMPORT rm_irqhandler2
IMPORT rm undef handler
IMPORT User_Entry; Entry point of user application.
CODE32
ENTRY
;Define exception table. Instruct linker to place code at address 0x0000 0000
AREA exception_table, CODE
LDR pc, Reset_Address
LDR pc, Undefined Address
LDR pc, SWI_Address
LDR pc, Prefetch Address
LDR pc, Abort_Address
NOP; Insert User code valid signature here.
```

Volume 1

Chapter 24: RealMonitor

```
LDR pc, [pc, #-0xFF0] ;Load IRQ vector from VIC
    LDR PC, FIO Address
Reset Address
                  DCD init
                                    ;Reset Entry point
Undefined_Address DCD rm_undef_handler ; Provided by RealMonitor
SWI Address
                  DCD 0
                                    ;User can put address of SWI handler here
                 DCD rm_prefetchabort_handler ;Provided by RealMonitor
Prefetch_Address
                                             ; Provided by RealMonitor
Abort Address
                 DCD rm_dataabort_handler
FIO Address
                 DCD 0
                                   ;User can put address of FIO handler here
AREA init_code, CODE
ram end EQU 0x4000xxxx; Top of on-chip RAM.
init
; * Set up the stack pointers for various processor modes. Stack grows
; * downwards.
LDR r2, =ram_end; Get top of RAM
    MRS r0, CPSR ; Save current processor mode
    ; Initialize the Undef mode stack for RealMonitor use
    BIC r1, r0, #0x1f
    ORR r1, r1, #0x1b
    MSR CPSR c, r1
    ; Keep top 32 bytes for flash programming routines.
    ; Refer to Flash Memory System and Programming chapter
    SUB sp, r2, #0x1F
    ; Initialize the Abort mode stack for RealMonitor
    BIC r1, r0, #0x1f
    ORR r1, r1, #0x17
    MSR CPSR c, r1
    ; Keep 64 bytes for Undef mode stack
    SUB sp, r2, #0x5F
    ; Initialize the IRQ mode stack for RealMonitor and User
    BIC r1, r0, #0x1f
    ORR r1, r1, #0x12
    MSR CPSR_c, r1
    ; Keep 32 bytes for Abort mode stack
    SUB sp,r2,\#0x7F
    ; Return to the original mode.
    MSR CPSR_c, r0
    ; Initialize the stack for user application
    ; Keep 256 bytes for IRQ mode stack
    SUB sp,r2,\#0x17F
; /*********************
```

Volume 1

Chapter 24: RealMonitor

```
; * Setup Vectored Interrupt controller. DCC Rx and Tx interrupts
; * generate Non Vectored IRQ request. rm_init entry is aware
; * of the VIC and it enables the DBGCommRX and DBGCommTx interrupts.
; * Default vector address register is programmed with the address of
; * Non vectored app irgDispatch mentioned in this example. User can setup
; * Vectored IROs or FIOs here.
EOU 0xFFFFF000 ; VIC Base address
    VICBaseAddr
    VICDefVectAddrOffset EOU 0x34
    LDR r0, =VICBaseAddr
    LDR r1, =app irgDispatch
    STR r1, [r0, #VICDefVectAddrOffset]
    BL rm_init_entry ; Initialize RealMonitor
    ; enable FIQ and IRQ in ARM Processor
    MRS r1, CPSR
                 ; get the CPSR
    BIC r1, r1, #0xC0 ; enable IRQs and FIQs
    MSR CPSR_c, r1
                     ; update the CPSR
                           ; * Get the address of the User entry point.
LDR lr, =User_Entry
    MOV pc, lr
; * Non vectored irg handler (app_irgDispatch)
AREA app irgDispatch, CODE
VICVectAddrOffset EOU 0x30
app_irqDispatch
    ; enable interrupt nesting
    STMFD sp!, {r12,r14}
                          ;Save SPSR in to r12
    MRS r12, spsr
    MSR cpsr c,0x1F
                          ; Re-enable IRQ, go to system mode
;User should insert code here if non vectored Interrupt sharing is
; required. Each non vectored shared irg handler must return to
; the interrupted instruction by using the following code.
    MSR cpsr_c, #0x52
                                   ; Disable irg, move to IRQ mode
    MSR spsr, r12
                                   ;Restore SPSR from r12
    STMFD sp!, {r0}
    LDR r0, =VICBaseAddr
    STR r1, [r0, #VICVectAddrOffset]
                                  ; Acknowledge Non Vectored irq has finished
    LDMFD sp!, {r12,r14,r0}
                                   ;Restore registers
    SUBS pc, r14, #4
                                   :Return to the interrupted instruction
    ; user interrupt did not happen so call rm_irqhandler2. This handler
    ; is not aware of the VIC interrupt priority hardware so trick
    ;rm irghandler2 to return here
```

Volume 1

```
STMFD sp!, {ip,pc}
LDR pc, rm_irghandler2
;rm_irghandler2 returns here
MSR cpsr c, #0x52
                                     ; Disable irg, move to IRQ mode
MSR spsr, r12
                                      :Restore SPSR from r12
STMFD sp!, {r0}
LDR r0, =VICBaseAddr
                                     ; Acknowledge Non Vectored irq has finished
STR r1, [r0, #VICVectAddrOffset]
LDMFD sp!, {r12,r14,r0}
                                     ;Restore registers
SUBS pc, r14, #4
                                      ; Return to the interrupted instruction
END
```

Chapter 24: RealMonitor

24.5 RealMonitor build options

RealMonitor was built with the following options:

```
RM_OPT_DATALOGGING=FALSE
```

This option enables or disables support for any target-to-host packets sent on a non RealMonitor (third-party) channel.

```
RM_OPT_STOPSTART=TRUE
```

This option enables or disables support for all stop and start debugging features.

RM OPT SOFTBREAKPOINT=TRUE

This option enables or disables support for software breakpoints.

RM_OPT_HARDBREAKPOINT=TRUE

Enabled for cores with EmbeddedICE-RT. This device uses ARM-7TDMI-S Rev 4 with EmbeddedICE-RT.

RM_OPT_HARDWATCHPOINT=TRUE

Enabled for cores with EmbeddedICE-RT. This device uses ARM-7TDMI-S Rev 4 with EmbeddedICE-RT.

RM_OPT_SEMIHOSTING=FALSE

This option enables or disables support for SWI semi-hosting. Semi-hosting provides code running on an ARM target use of facilities on a host computer that is running an ARM debugger. Examples of such facilities include the keyboard input, screen output, and disk I/O.

RM_OPT_SAVE_FIQ_REGISTERS=TRUE

This option determines whether the FIQ-mode registers are saved into the registers block when RealMonitor stops.

RM_OPT_READBYTES=TRUE

RM_OPT_WRITEBYTES=TRUE

RM_OPT_READHALFWORDS=TRUE

Volume 1

RM OPT WRITEHALFWORDS=TRUE

RM_OPT_READWORDS=TRUE

RM OPT WRITEWORDS=TRUE

Enables/Disables support for 8/16/32 bit read/write.

RM_OPT_EXECUTECODE=FALSE

Enables/Disables support for executing code from "execute code" buffer. The code must be downloaded first.

RM_OPT_GETPC=TRUE

This option enables or disables support for the RealMonitor GetPC packet. Useful in code profiling when real monitor is used in interrupt mode.

RM_EXECUTECODE_SIZE=NA

"execute code" buffer size. Also refer to RM OPT EXECUTECODE option.

RM OPT GATHER STATISTICS=FALSE

This option enables or disables the code for gathering statistics about the internal operation of RealMonitor.

RM DEBUG=FALSE

This option enables or disables additional debugging and error-checking code in RealMonitor.

RM OPT BUILDIDENTIFIER=FALSE

This option determines whether a build identifier is built into the capabilities table of RMTarget. Capabilities table is stored in ROM.

RM_OPT_SDM_INFO=FALSE

SDM gives additional information about application board and processor to debug tools.

RM_OPT_MEMORYMAP=FALSE

This option determines whether a memory map of the board is built into the target and made available through the capabilities table

RM_OPT_USE_INTERRUPTS=TRUE

This option specifies whether RMTarget is built for interrupt-driven mode or polled mode.

RM FIFOSIZE=NA

This option specifies the size, in words, of the data logging FIFO buffer.

CHAIN VECTORS=FALSE

This option allows RMTarget to support vector chaining through μ HAL (ARM HW abstraction API).

Chapter 24: RealMonitor



Chapter 25: Supplementary information

Rev. 01 — 15 August 2005

User manual

25.1Abbreviations

Table 321: Abbreviations

Acronym	Description
ADC	Analog-to-Digital Converter
BOD	Brown-Out Detection
CPU	Central Processing Unit
DAC	Digital-to-Analog Converter
DCC	Debug Communications Channel
FIFO	First In, First Out
GPIO	General Purpose Input/Output
NA	Not Applicable
PLL	Phase-Locked Loop
POR	Power-On Reset
PWM	Pulse Width Modulator
RAM	Random Access Memory
SRAM	Static Random Access Memory
UART	Universal Asynchronous Receiver/Transmitter
USB	Universal Serial Bus
VIC	Vector Interrupt Controller
VPB	VLSI Peripheral Bus



Chapter 25: Supplementary information

25.2Disclaimers

Life support — These products are not designed for use in life support appliances, devices, or systems where malfunction of these products can reasonably be expected to result in personal injury. Philips Semiconductors customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Philips Semiconductors for any damages resulting from such application.

Right to make changes — Philips Semiconductors reserves the right to make changes in the products - including circuits, standard cells, and/or software - described or contained herein in order to improve design and/or performance. When the product is in full production (status 'Production'), relevant changes will be communicated via a Customer Product/Process Change Notification (CPCN). Philips Semiconductors assumes no responsibility or liability for the use of any of these products, conveys no licence or title under any patent, copyright, or mask work right to these

products, and makes no representations or warranties that these products are free from patent, copyright, or mask work right infringement, unless otherwise specified.

Application information — Applications that are described herein for any of these products are for illustrative purposes only. Philips Semiconductors make no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

25.3Trademarks

Notice — All referenced brands, product names, service names and trademarks are the property of their respective owners.

 ${\bf l^2C\text{-bus}}$ — wordmark and logo are trademarks of Koninklijke Philips Electronics N.V.

SoftConnect — is a trademark of Koninklijke Philips Electronics N.V. **GoodLink** — is a trademark of Koninklijke Philips Electronics N.V.



25.4 Tables

Table 1:	LPC2141/2/4/6/8 device information 4		0xE01F C100) bit description 41
Table 2:	VPB peripheries and base addresses 10	Table 30:	MAM Responses to program accesses of various
Table 3:	ARM exception vector locations		types
Table 4:	LPC2141/2/4/6/8 memory mapping modes 12	Table 31:	MAM responses to data and DMA accesses of
Table 5:	Pin summary		various types
Table 6:	Summary of system control registers	Table 32:	Summary of MAM registers 48
Table 7:	Recommended values for C _{X1/X2} in oscillation	Table 33:	MAM Control Register (MAMCR - address
	mode (crystal and external components		0xE01F C000) bit description48
	parameters)	Table 34:	MAM Timing register (MAMTIM - address
Table 8:	External interrupt registers		0xE01F C004) bit description 48
Table 9:	External Interrupt Flag register (EXTINT - address		VIC register map51
	0xE01F C140) bit description	Table 36:	Software Interrupt register (VICSoftInt - address
Table 10:	Interrupt Wakeup register (INTWAKE - address		0xFFFF F018) bit allocation52
	0xE01F C144) bit description	Table 37:	Software Interrupt register (VICSoftInt - address
Table 11:	External Interrupt Mode register (EXTMODE -		0xFFFF F018) bit description53
	address 0xE01F C148) bit description 23	Table 38:	Software Interrupt Clear register (VICSoftIntClear
Table 12:	External Interrupt Polarity register (EXTPOLAR -		- address 0xFFFF F01C) bit allocation 53
	address 0xE01F C14C) bit description24	Table 39:	Software Interrupt Clear register (VICSoftIntClear
Table 13:	System Control and Status flags register (SCS -		- address 0xFFFF F01C) bit description 53
	address 0xE01F C1A0) bit description 26	Table 40:	Raw Interrupt status register (VICRawIntr -
Table 14:	Memory Mapping control register (MEMMAP -		address 0xFFFF F008) bit allocation54
	address 0xE01F C040) bit description 27	Table 41:	Raw Interrupt status register (VICRawIntr -
	PLL registers28	-	address 0xFFFF F008) bit description54
Table 16:	PLL Control register (PLL0CON - address	Table 42:	Interrupt Enable register (VICIntEnable - address
	0xE01F C080, PLL1CON - address	-	0xFFFF F010) bit allocation54
T	0xE01F C0A0) bit description30	Table 43:	Interrupt Enable register (VICIntEnable - address
Table 17:	PLL Configuration register (PLL0CFG - address		0xFFFF F010) bit description
	0xE01F C084, PLL1CFG - address	Table 44:	Software Interrupt Clear register (VICIntEnClear -
T 11 40	0xE01F C0A4) bit description30	T 45	address 0xFFFF F014) bit allocation 55
Table 18:	PLL Status register (PLL0STAT - address	Table 45:	Software Interrupt Clear register (VICIntEnClear -
	0xE01F C088, PLL1STAT - address	T-1-1- 40:	address 0xFFFF F014) bit description 55
T-61- 40:	0xE01F C0A8) bit description	Table 46:	Interrupt Select register (VICIntSelect - address
	PLL Control bit combinations	T-1-1- 47.	0xFFFF F00C) bit allocation
Table 20:	PLL Feed register (PLL0FEED - address	Table 47:	Interrupt Select register (VICIntSelect - address
	0xE01F C08C, PLL1FEED - address	Toble 40.	0xFFFF F00C) bit description
Table 04.	0xE01F C0AC) bit description	Table 48:	IRQ Status register (VICIRQStatus - address
	Elements determining PLL's frequency33	Toble 40.	0xFFFF F000) bit allocation
	PLL Divider values	Table 49.	IRQ Status register (VICIRQStatus - address
	PLL Multiplier values	Toble FO	0xFFFF F000) bit description
	Power Control registers	Table 50.	FIQ Status register (VICFIQStatus - address
Table 25.	Power Control register (PCON - address 0xE01F COCO) bit description	Table 51:	0xFFFF F004) bit allocation
Table 26:	Power Control for Peripherals register (PCONP -	Table 51.	0xFFFF F004) bit description
Table 20.	address 0xE01F C0C4) bit description37	Table 52:	Vector Control registers 0-15 (VICVectCntl0-15 -
Table 27.	Reset Source identification Register (RSIR -	iable 52.	0xFFFF F200-23C) bit description
iavie ZI.	address 0xE01F C180) bit description	Tahla 52.	Vector Address registers (VICVectAddr0-15 -
Table 28.	VPB divider register map40	iabic JJ.	addresses 0xFFFF F100-13C) bit description . 58
	VPB Divider register (VPBDIV - address	Tahla 5/1	Default Vector Address register (VICDefVectAddr
iabic 23.	VI D DIVIDEL LEGISTEL (VI DDIV - audices	Iabic J4.	Doladit vector Address register (VIODervectAddr

Volume 1

Chapter 25: Supplementary information

	- address 0xFFFF F034) bit description 58	Table 82:	Fast GPIO port 1 Pin value byte and half-word
Table 55:	Vector Address register (VICVectAddr - address		accessible register description88
	0xFFFF F030) bit description	Table 83:	GPIO port 0 output Set register (IO0SET -
Table 56:	Protection Enable register (VICProtection -	T 11 04	address 0xE002 8004 bit description89
T-1-1- F7.	address 0xFFFF F020) bit description58	Table 84:	GPIO port 1 output Set register (IO1SET -
Table 57:	Connection of interrupt sources to the Vectored	Table OF	address 0xE002 8014) bit description 89
Tabla 50.	Interrupt Controller (VIC)	Table 85:	Fast GPIO port 0 output Set register (FIO0SET -
	Pin description	Toble 96.	address 0x3FFF C018) bit description 89
	Pin connect block register map	Table 86:	Fast GPIO port 1 output Set register (FIO1SET -
Table 60.	Pin function Select register 0 (PINSEL0 - address 0xE002 C000) bit description76	Table 97:	address 0x3FFF C038) bit description89
Table 61:	Pin function Select register 1 (PINSEL1 - address	Table o7.	Fast GPIO port 0 output Set byte and half-word accessible register description89
Table 01.	0xE002 C004) bit description	Table 88:	Fast GPIO port 1 output Set byte and half-word
Table 62.	Pin function Select register 2 (PINSEL2 -	Table 00.	accessible register description90
Table 02.	0xE002 C014) bit description80	Tahla 80:	GPIO port 0 output Clear register 0 (IO0CLR -
Table 63.	Pin function select register bits80	Table 09.	address 0xE002 800C) bit description 90
	GPIO pin description81	Table 90:	GPIO port 1 output Clear register 1 (IO1CLR -
	GPIO register map (legacy VPB accessible	Table 30.	address 0xE002 801C) bit description 90
Table 00.	registers)82	Table 91	Fast GPIO port 0 output Clear register 0
Table 66	GPIO register map (local bus accessible registers	14510 011	(FIOOCLR - address 0x3FFF C01C) bit
idbio oo.	- enhanced GPIO features)		description
Table 67:	GPIO port 0 Direction register (IO0DIR - address	Table 92:	Fast GPIO port 1 output Clear register 1
	0xE002 8008) bit description		(FIO1CLR - address 0x3FFF C03C) bit
Table 68:	GPIO port 1 Direction register (IO1DIR - address		description
	0xE002 8018) bit description	Table 93:	Fast GPIO port 0 output Clear byte and half-word
Table 69:	Fast GPIO port 0 Direction register (FIO0DIR -		accessible register description91
	address 0x3FFF C000) bit description 84	Table 94:	Fast GPIO port 1 output Clear byte and half-word
Table 70:	Fast GPIO port 1 Direction register (FIO1DIR -		accessible register description91
	address 0x3FFF C020) bit description 84	Table 95:	UART0 pin description
Table 71:	Fast GPIO port 0 Direction control byte and	Table 96:	UART0 register map96
	half-word accessible register description 84	Table 97:	UART0 Receiver Buffer Register (U0RBR -
Table 72:	Fast GPIO port 1 Direction control byte and		address 0xE000 C000, when DLAB = 0, Read
	half-word accessible register description 85		Only) bit description
Table 73:	Fast GPIO port 0 Mask register (FIO0MASK -	Table 98:	UART0 Transmit Holding Register (U0THR -
	address 0x3FFF C010) bit description 85		address 0xE000 C000, when DLAB = 0, Write
Table 74:	Fast GPIO port 1 Mask register (FIO1MASK -		Only) bit description
	address 0x3FFF C030) bit description 85	Table 99:	UART0 Divisor Latch LSB register (U0DLL -
Table 75:	Fast GPIO port 0 Mask byte and half-word		address 0xE000 C000, when DLAB = 1) bit
	accessible register description		description
Table 76:	Fast GPIO port 1 Mask byte and half-word	lable 100	: UARTO Divisor Latch MSB register (U0DLM -
	accessible register description		address 0xE000 C004, when DLAB = 1) bit
Table //:	GPIO port 0 Pin value register (IO0PIN - address	T 11 404	description
T	0xE002 8000) bit description	Table 101	:UART0 Fractional Divider Register (U0FDR -
Table 78:	GPIO port 1 Pin value register (IO1PIN - address	T-1-1- 400	address 0xE000 C028) bit description 98
Table 70.	0xE002 8010) bit description	Table 102	: Baudrates available when using 20 MHz
Table 79:	Fast GPIO port 0 Pin value register (FIO0PIN -	Table 102	peripheral clock (PCLK = 20 MHz)99
Table 90.	address 0x3FFF C014) bit description 87	18016 103	: UARTO Interrupt Enable Register (U0IER -
iabie ou.	Fast GPIO port 1 Pin value register (FIO1PIN - address 0x3FFF C034) bit description 87		address 0xE000 C004, when DLAB = 0) bit description
Tahle 81.	Fast GPIO port 0 Pin value byte and half-word	Table 104	:UART0 Interrupt Identification Register
Table 01.	accessible register description	TUDIO TU T	(UOIIR - address 0xE000 C008, read only)
	accessio regioter decomption		(5 5 addi 500 5/12000 5000, 10dd 5/11)

Chapter 25: Supplementary information



bit description	description
Table 105:UART0 interrupt handling	Table 129: UART1 Scratch pad register (U1SCR - address
Table 106: UART0 FIFO Control Register (U0FCR - address	0xE001 0014) bit description
0xE000 C008) bit description	Table 130: Auto-baud Control Register (U1ACR -
Table 107: UART0 Line Control Register (U0LCR - address	0xE001 0020) bit description
0xE000 C00C) bit description103	Table 131: UART1 Transmit Enable Register (U1TER -
Table 108: UART0 Line Status Register (U0LSR - address	address 0xE001 0030) bit description 131
0xE000 C014, read only) bit description 104	Table 132:I ² C Pin Description134
Table 109: UART0 Scratch pad register (U0SCR - address	Table 133:I2C0CONSET and I2C1CONSET used to
0xE000 C01C) bit description105	configure Master mode
Table 110: Auto-baud Control Register (U0ACR -	Table 134:I2C0CONSET and I2C1CONSET used to
0xE000 C020) bit description	configure Slave mode136
Table 111:UART0 Transmit Enable Register (U0TER -	Table 135:1 ² C register map142
address 0xE000 C030) bit description 107	Table 136:I ² C Control Set register (I2CONSET: I2C0,
Table 112:UART1 pin description	I2C0CONSET - address 0xE001 C000 and I2C1,
Table 113: UART1 register map114	I2C1CONSET - address 0xE005 C000) bit
Table 114: UART1 Receiver Buffer Register (U1RBR -	description
address 0xE001 0000, when DLAB = 0 Read	Table 137:12C Control Set register (I2CONCLR: I2CO,
Only) bit description	I2COCONCLR - address 0xE001 C018 and I2C1,
Table 115: UART1 Transmitter Holding Register (U1THR -	I2C1CONCLR - address 0xE005 C018) bit
address 0xE001 0000, when DLAB = 0 Write	description
Only) bit description	Table 138:1 ² C Status register (I2STAT: I2C0, I2C0STAT -
Table 116: UART1 Divisor Latch LSB register (U1DLL -	address 0xE001 C004 and I2C1, I2C1STAT -
address 0xE001 0000, when DLAB = 1) bit	address 0xE005 C004) bit description 145
description	Table 139:1 ² C Data register (I2DAT: I2C0, I2C0DAT - address
Table 117: UART1 Divisor Latch MSB register (U1DLM -	0xE001 C008 and I2C1, I2C1DAT - address
address 0xE001 0004, when DLAB = 1) bit description	0xE005 C008) bit description145 Table 140:I ² C Slave Address register (I2ADR:
Table 118: UART1 Fractional Divider Register (U1FDR -	
address 0xE001 0028) bit description	I2C0, I2C0ADR - address 0xE001 C00C and I2C1, I2C1ADR - address 0xE005 C00C)
Table 119: Baudrates available when using 20 MHz	bit description146
peripheral clock (PCLK = 20 MHz)	Table 141:I ² C SCL High Duty Cycle register (I2SCLH: I2C0,
Table 120: UART1 Interrupt Enable Register (U1IER -	I2C0SCLH - address 0xE001 C010 and I2C1,
address 0xE001 0004, when DLAB = 0) bit	I2C1SCLH - address 0xE005 C010) bit
description118	description
Table 121:UART1 Interrupt Identification Register	Table 142:1 ² C SCL Low Duty Cycle register (I2SCLL:
(U1IIR - address 0xE001 0008, read only)	I2C0, I2C0SCLL - address 0xE001 C014 and
bit description	I2C1, I2C1SCLL - address 0xE005 C014)
Table 122:UART1 interrupt handling	bit description146
Table 123: UART1 FIFO Control Register (U1FCR - address	Table 143: Example I ² C clock rates
0xE001 0008) bit description	Table 144: Abbreviations used to describe an I ² C
Table 124: UART1 Line Control Register (U1LCR - address	operation
0xE001 000C) bit description	Table 145: I2CONSET used to initialize Master Transmitter
Table 125: UART1 Modem Control Register (U1MCR -	mode
address 0xE001 0010), LPC2144/6/8 only bit	Table 146:I2C0ADR and I2C1ADR usage in Slave Receiver
description	mode
Table 126: Modem status interrupt generation	Table 147: I2C0CONSET and I2C1CONSET used to initialize
Table 127: UART1 Line Status Register (U1LSR - address	Slave Receiver mode
0xE001 0014, read only) bit description 125	Table 148: Master Transmitter mode 154
Table 128: UART1 Modem Status Register (U1MSR -	Table 149: Master Receiver mode
address 0xE001 0018), LPC2144/6/8 only bit	Table 150: Slave Receiver mode

Volume 1

Chapter 25: Supplementary information

Fable 151: Slave Transmitter mode	(USBDevIntEn - address 0xE009 0004) bit
Fable 152: Miscellaneous States	description
Table 153: SPI data to clock phase relationship 172	Table 180: USB Device Interrupt Clear register
Table 154: SPI pin description	(USBDevIntClr - address 0xE009 0008) bit
Table 155:SPI register map176	allocation
Table 156: SPI Control Register (S0SPCR - address	Table 181: USB Device Interrupt Clear register
0xE002 0000) bit description	(USBDevIntClr - address 0xE009 0008) bit
Table 157:SPI Status Register (S0SPSR - address	description
0xE002 0004) bit description	Table 182: USB Device Interrupt Set register (USBDevIntSet
Table 158: SPI Data Register (S0SPDR - address	- address 0xE009 000C) bit allocation 203
0xE002 0008) bit description	Table 183: USB Device Interrupt Set register (USBDevIntSet
Table 159: SPI Clock Counter Register (S0SPCCR - address	- address 0xE009 000C) bit description 203
0xE002 000C) bit description	Table 184: USB Device Interrupt Priority register
Fable 160: SPI Interrupt register (S0SPINT - address	(USBDevIntPri - address 0xE009 002C) bit
0xE002 001C) bit description	description
Fable 161:SSP pin descriptions180	Table 185: USB Endpoint Interrupt Status register
Table 162:SSP register map	(USBEpIntSt - address 0xE009 0030) bit
Table 163: SSP Control Register 0 (SSPCR0 - address	allocation
0xE006 8000) bit description	Table 186: USB Endpoint Interrupt Status register
Table 164: SSP Control Register 1 (SSPCR1 - address	(USBEpIntSt - address 0xE009 0030) bit
0xE006 8004) bit description	description
Table 165:SSP Data Register (SSPDR - address	Table 187: USB Endpoint Interrupt Enable register
0xE006 8008) bit description	(USBEpIntEn - address 0xE009 0034) bit
Table 166:SSP Status Register (SSPDR - address	allocation
0xE006 800C) bit description	Table 188: USB Endpoint Interrupt Enable register
Table 167:SSP Clock Prescale Register (SSPCPSR -	(USBEpIntEn - address 0xE009 0034) bit
address 0xE006 8010) bit description 191	
Fable 168: SSP Interrupt Mask Set/Clear register (SSPIMSC	description
- address 0xE006 8014) bit description 192	(USBEpIntClr - address 0xE009 0038) bit
Fable 169: SSP Raw Interrupt Status register (SSPRIS -	allocation
address 0xE006 8018) bit description 192	Table 190: USB Endpoint Interrupt Clear register
Table 170: SSP Masked Interrupt Status register (SSPMIS	(USBEpIntClr - address 0xE009 0038) bit
-address 0xE006 801C) bit description 193	description
Table 171:SSP interrupt Clear Register (SSPICR - address	Table 191: USB Endpoint Interrupt Set register (USBEpIntSet
0xE006 8020) bit description	- address 0xE009 003C) bit allocation 207
Table 172: USB related acronyms, abbreviations and	Table 192: USB Endpoint Interrupt Set register (USBEpIntSet
definitions used in this chapter	- address 0xE009 003C) bit description 207
Table 173: Pre-Fixed Endpoint Configuration195	Table 193: USB Endpoint Interrupt Priority register
Fable 174: USB device register map	(USBEpIntPri - address 0xE009 0040) bit
Table 175: USB Interrupt Status register (USBIntSt - address	allocation
0xE01F C1C0) bit description	Table 194: USB Endpoint Interrupt Priority register
Table 176: USB Device Interrupt Status register	(USBEpIntPri - address 0xE009 0040) bit
(USBDevIntSt - address 0xE009 0000) bit	description
allocation	Table 195: USB Realize Endpoint register (USBReEp -
Table 177: USB Device Interrupt Status register	address 0xE009 0044) bit allocation 208
(USBDevIntSt - address 0xE009 0000) bit	Table 196: USB Realize Endpoint register (USBReEp -
description	address 0xE009 0044) bit description 208
Table 178: USB Device Interrupt Enable register	Table 197: USB Endpoint Index register (USBEpIn - address
(USBDevIntEn - address 0xE009 0004) bit	0xE009 0048) bit description
allocation	Table 198: USB MaxPacketSize register (USBMaxPSize -
Table 179: USB Device Interrupt Enable register	address 0xE009 004C) bit description 210

Volume 1

Chapter 25: Supplementary information

Table 199: USB Receive Data register (USBRxData -	description
address 0xE009 0018) bit description211	Table 221: USB New DD Request Interrupt Set register
Table 200: USB Receive Packet Length register (USBRxPlen	(USBNDDRIntSet - address 0xE009 00B4) bit
- address 0xE009 0020) bit description 211	description
Table 201: USB Transmit Data register (USBTxData -	Table 222: USB System Error Interrupt Status register
address 0xE009 001C) bit description 211	(USBSysErrIntSt - address 0xE009 00B8) bit
Table 202: USB Transmit Packet Length register	description
(USBTxPLen - address 0xE009 0024) bit	Table 223: USB System Error Interrupt Clear register
description	(USBSysErrIntClr - address 0xE009 00BC) bit
Table 203: USB Control register (USBCtrl - address	description
0xE009 0028) bit description	Table 224: USB System Error Interrupt Set register
Table 204: USB Command Code register (USBCmdCode -	(USBSysErrIntSet - address 0xE009 00C0) bit
address 0xE009 0010) bit description 213	description
Table 205: USB Command Data register (USBCmdData -	Table 225: Protocol engine command code table 222
address 0xE009 0014) bit description 214	Table 226: Device Set Address Register bit description . 223
Table 206: USB DMA Request Status register (USBDMARSt	Table 227: Configure Device Register bit description 224
- address 0xE009 0050) bit allocation 214	Table 228: Set Mode Register bit description 224
Table 207: USB DMA Request Status register (USBDMARSt	Table 229: Set Device Status Register bit description 225
- address 0xE009 0050) bit description 214	Table 230: Get Error Code Register bit description 227
Table 208: USB DMA Request Clear register (USBDMARCIr	Table 231: Read Error Status Register bit description 227
- address 0xE009 0054) bit description 215	Table 232: Select Endpoint Register bit description 228
Table 209: USB DMA Request Set register (USBDMARSet -	Table 233: Set Endpoint Status Register bit description . 229
address 0xE009 0058) bit description 215	Table 234: Clear Buffer Register bit description 230
Table 210: USB UDCA Head register (USBUDCAH - address	Table 235: DMA descriptor
0xE009 0080) bit description	Table 236: Timer/Counter pin description
Table 211: USB EP DMA Status register (USBEpDMASt -	Table 237:TIMER/COUNTER0 and TIMER/COUNTER1
address 0xE009 0084) bit description 217	register map244
Table 212: USB EP DMA Enable register (USBEpDMAEn -	Table 238: Interrupt Register (IR, TIMER0: TOIR - address
address 0xE009 0088) bit description 217	0xE000 4000 and TIMER1: T1IR - address
Table 213: USB EP DMA Disable register (USBEpDMADis -	0xE000 8000) bit description
address 0xE009 008C) bit description 218	Table 239: Timer Control Register (TCR, TIMER0: TOTCR -
Table 214: USB DMA Interrupt Status register	address 0xE000 4004 and TIMER1: T1TCR -
(USBDMAIntSt - address 0xE009 0090) bit	address 0xE000 8004) bit description 246
description	Table 240: Count Control Register (CTCR,
Table 215: USB DMA Interrupt Enable register	TIMER0: T0CTCR - address 0xE000 4070 and
(USBDMAIntEn - address 0xE009 0094) bit	TIMER1: T1TCR - address 0xE000 8070)
description219	bit description246
Table 216: USB End of Transfer Interrupt Status register	Table 241: Match Control Register (MCR, TIMER0: T0MCR -
(USBEoTIntSt - address 0xE009 00A0s) bit	address 0xE000 4014 and TIMER1: T1MCR -
description219	address 0xE000 8014) bit description 248
Table 217: USB End of Transfer Interrupt Clear register	Table 242: Capture Control Register (CCR, TIMER0: TOCCR
(USBEoTIntCir - address 0xE009 00A4) bit	- address 0xE000 4028 and TIMER1: T1CCR -
description219	address 0xE000 8028) bit description 249
Table 218: USB End of Transfer Interrupt Set register	Table 243: External Match Register (EMR, TIMER0: T0EMR
(USBEoTIntSet - address 0xE009 00A8) bit	- address 0xE000 403C and TIMER1: T1EMR -
description220	address0xE000 803C) bit description 250
Table 219: USB New DD Request Interrupt Status register	
	Table 244: External match control
(USBNDDRIntSt - address 0xE009 00AC) bit	Table 245: Set and reset inputs for PWM Flip-Flops 256
description220 Table 220:USB New DD Request Interrupt Clear register	Table 246: Pin summary
· · · · · · · · · · · · · · · · · · ·	Table 247: Pulse Width Modulator (PWM) register map . 258
(USBNDDRIntClr - address 0xE009 00B0) bit	Table 248: PWM Interrupt Register (PWMIR - address

Chapter 25: Supplementary information



0xE001 4000) bit description	Table 273: Time counter relationships and values 281
Table 249: PWM Timer Control Register (PWMTCR -	Table 274: Time counter registers
address 0xE001 4004) bit description 260	Table 275: Alarm registers282
Table 250: Match Control Register (MCR, TIMER0: T0MCR -	Table 276: Reference clock divider registers 283
address 0xE000 4014 and TIMER1: T1MCR -	Table 277: Prescaler Integer register (PREINT - address
address 0xE000 8014) bit description 261	0xE002 4080) bit description 283
Table 251: PWM Control Register (PWMPCR - address	Table 278: Prescaler Integer register (PREFRAC - address
0xE001 404C) bit description	0xE002 4084) bit description 283
Table 252: PWM Latch Enable Register (PWMLER - address	Table 279: Prescaler cases where the Integer Counter reload
0xE001 4050) bit description	value is incremented 285
Table 253: ADC pin description	Table 280: Recommended values for the RTC external
Table 254: ADC registers	32 kHz oscillator C _{X1/X2} components286
Table 255: A/D Control Register (AD0CR - address	Table 281: Watchdog register map 288
0xE003 4000 and AD1CR - address	Table 282: Watchdog operating modes selection 288
0xE006 0000) bit description	Table 283: Watchdog Mode register (WDMOD - address
Table 256: A/D Global Data Register (AD0GDR - address	0xE000 0000) bit description 289
0xE003 4004 and AD1GDR - address	Table 284: Watchdog Timer Constant register (WDTC -
0xE006 0004) bit description	address 0xE000 0004) bit description 289
Table 257: A/D Global Start Register (ADGSR - address	Table 285: Watchdog Feed register (WDFEED - address
0xE003 4008) bit description	0xE000 0008) bit description 289
Table 258: A/D Status Register (ADSTAT, ADC0: AD0STAT -	Table 286: Watchdog Timer Value register (WDTV - address
address 0xE003 4004 and ADC1: AD1STAT -	0xE000 000C) bit description 289
address 0xE006 0004) bit description 270	Table 287: Flash sectors in LPC2141, LPC2142, LPC2144,
Table 259: A/D Status Register (ADSTAT, ADC0: AD0STAT -	LPC2146 and LPC2148
address 0xE003 4004 and ADC1: AD1STAT -	Table 288: ISP command summary298
address 0xE006 0004) bit description 270	Table 289:ISP Unlock command298
Table 260: A/D Data Registers (ADDR0 to ADDR7, ADC0:	Table 290:ISP Set Baud Rate command 298
AD0DR0 to AD0DR7 - 0xE003 4010 to 0xE003	Table 291: Correlation between possible ISP baudrates and
402C and ADC1: AD1DR0 to AD1DR7- 0xE006	external crystal frequency (in MHz) 299
0010 to 0xE006 402C) bit description 271	Table 292:ISP Echo command
Table 261:DAC pin description	Table 293: ISP Write to RAM command 300
Table 262: DAC Register (DACR - address 0xE006 C000) bit	Table 294:ISP Read memory command300
description273	Table 295: ISP Prepare sector(s) for write operation
Table 263: Real Time Clock (RTC) register map	command
Table 264: Miscellaneous registers277	Table 296:ISP Copy command
Table 265: Interrupt Location Register (ILR - address	Table 297:ISP Go command
0xE002 4000) bit description	Table 298: ISP Erase sector command
Table 266: Clock Tick Counter Register (CTCR - address	Table 299: ISP Blank check sector command 303
0xE002 4004) bit description	Table 300: ISP Read Part Identification number
Table 267: Clock Control Register (CCR - address	command303
0xE002 4008) bit description	Table 301:LPC214x Part Identification numbers 303
Table 268: Counter Increment Interrupt Register (CIIR -	Table 302:ISP Read Boot code version number
address 0xE002 400C) bit description279	command303
Table 269: Alarm Mask Register (AMR - address	Table 303:ISP Compare command304
0xE002 4010) bit description	Table 304: ISP Return codes Summary
Table 270: Consolidated Time register 0 (CTIME0 - address	Table 305: IAP Command Summary
0xE002 4014) bit description	Table 306: IAP Prepare sector(s) for write operation
Table 271: Consolidated Time register 1 (CTIME1 - address	command
0xE002 4018) bit description	Table 307: IAP Copy RAM to Flash command 308
Table 272: Consolidated Time register 2 (CTIME2 - address	Table 308: IAP Erase sector(s) command
0xE002 401C) bit description	Table 309: IAP Blank check sector(s) command 309

Volume 1

Chapter 25: Supplementary information

Table 310:IAP Read Part Identification command309
Table 311: IAP Read Boot code version number
command
Table 312: IAP Compare command
Table 313: Reinvoke ISP
Table 314: IAP Status codes Summary
Table 315: EmbeddedICE pin description
Table 316: EmbeddedICE logic registers
Table 317:ETM configuration315
Table 318: ETM pin description
Table 319:ETM registers
Table 320: RealMonitor stack requirement322
Table 321: Abbreviations



25.5 Figures

Fig 1.	LPC2141/2/4/6/8 block diagram	Fig 37.	Simultaneous repeated START conditions from two
Fig 2.	System memory map8		masters
Fig 3.	Peripheral memory map	Fig 38.	Forced access to a busy I ² C-bus
Fig 4.	AHB peripheral map10	Fig 39.	Recovering from a bus obstruction caused by a low
Fig 5.	Map of lower memory is showing	· ·	level on SDA
•	re-mapped and re-mappable areas	Fig 40.	SPI data transfer format
	(LPC2148 with 512 kB Flash)	Ü	(CPHA = 0 and CPHA = 1)
Fig 6.	Oscillator modes and models: a) slave mode of	Fig 41.	SPI block diagram
•	operation, b) oscillation mode of operation, c)		Texas Instruments synchronous serial frame format:
	external crystal model used for C _{X1} / _{X2} evaluation 19	· ·	a) single and b) continuous/back-to-back two frames
Fig 7.	F _{OSC} selection algorithm		transfer
Fig 8.	External interrupt logic	Fig 43.	SPI frame format with CPOL=0 and CPHA=0 (a)
Fig 9.	PLL block diagram	· ·	single and b) continuous transfer)
Fig 10.	Reset block diagram including the wakeup timer.39	Fig 44.	SPI frame format with CPOL=0 and CPHA=1 184
	VPB divider connections		SPI frame format with CPOL = 1 and CPHA = 0 (a)
	Simplified block diagram of the Memory Accelerator	· ·	single and b) continuous transfer) 185
Ü	Module (MAM)	Fig 46.	SPI frame format with CPOL = 1 and CPHA = 1186
Fig 13.	Block diagram of the Vectored Interrupt Controller		Microwire frame format (single transfer) 187
•	(VIC)60	-	Microwire frame format (continuos transfers) 188
Fig 14.	LPC2141 64-pin package66	_	Microwire frame format (continuos transfers) -
	LPC2142 64-pin package67	· ·	details
	LPC2144/6/8 64-pin package	Fig 50.	USB Device Controller Block Diagram 196
	Illustration of the fast and slow GPIO access and		USB MaxPacket register array indexing 210
•	output showing 3.5 x increase of the pin output		UDCA Head register and DMA descriptors216
	frequency94	Fig 53.	Finding the DMA descriptor
Fig 18.	Autobaud Mode 0 and Mode 1 waveform 109	Fig 54.	Data transfer in ATLE mode 237
Fig 19.	UART0 block diagram111	Fig 55.	Isochronous OUT Endpoint operation example 241
Fig 20.	Auto-RTS functional timing	Fig 56.	A timer cycle in which PR=2, MRx=6, and both
Fig 21.	Auto-CTS functional timing125		interrupt and reset on match are enabled 251
	Autobaud Mode 0 and Mode 1 waveform 130	Fig 57.	A timer cycle in which PR=2, MRx=6, and both
Fig 23.	UART1 block diagram132		interrupt and stop on match are enabled 251
	I ² C-bus Configuration134	Fig 58.	Timer block diagram
Fig 25.	Format in the Master Transmitter mode 135	Fig 59.	PWM block diagram
Fig 26.	Format of Master Receive mode	Fig 60.	Sample PWM waveforms
Fig 27.	A Master Receiver switches to Master Transmitter	Fig 61.	RTC block diagram
	after sending Repeated START	Fig 62.	RTC prescaler block diagram 284
Fig 28.	Format of Slave Receiver mode	Fig 63.	RTC 32kHz crystal oscillator circuit 286
Fig 29.	Format of Slave Transmitter mode	Fig 64.	Watchdog block diagram 290
Fig 30.	I ² C serial interface block diagram139	Fig 65.	Map of lower memory after reset
Fig 31.	Arbitration procedure	Fig 66.	Boot process flowchart 295
Fig 32.	Serial clock synchronization	Fig 67.	IAP Parameter passing
Fig 33.	Format and States in the Master Transmitter	Fig 68.	EmbeddedICE debug environment block
	mode		diagram
Fig 34.	Format and States in the Master Receiver	Fig 69.	ETM debug environment block diagram 318
-	mode		RealMonitor components
Fig 35.	Format and States in the Slave Receiver mode. 152		RealMonitor as a state machine 321
Fig 36.	Format and States in the Slave Transmitter	Fig 72.	Exception handlers
	mode 1F2		



25.6 Contents

Chap	ter 1: General information			
1.1	Introduction 3	1.6	ARM7TDMI-S processor	5
1.2	Features	1.7	On-chip Flash memory system	6
1.3	Applications 4	1.8	On-chip Static RAM (SRAM)	6
1.4	Device information 4	1.9	Block diagram	7
1.5	Architectural overview 4		· ·	
Chap	oter 2: LPC2141/2/4/6/8 Memory Addressin	g		
2.1	Memory maps 8	2.2.1	Memory map concepts and operating modes	
2.2	LPC2141/2142/2144/2146/2148 memory	2.2.2	Memory re-mapping	12
	re-mapping and boot block11	2.3	Prefetch abort and data abort exceptions	15
Chap	ter 3: System Control Block			
3.1	Summary of system control block functions 16	3.8.5	PLL Interrupt	31
3.2	Pin description	3.8.6	PLL Modes	
3.3	Register description	3.8.7	PLL Feed register (PLL0FEED - 0xE01F C08C	
3.4	Crystal oscillator		PLL1FEED - 0xE01F C0AC)	
3.5	External interrupt inputs	3.8.8 3.8.9	PLL and Power-down mode	
3.5.1	Register description 20	3.8.9	PLL frequency calculation	
3.5.2	External Interrupt Flag register (EXTINT -	3.8.11	Procedure for determining PLL settings PLL0 and PLL1 configuring examples	
	0xE01F C140)	3.9	Power control	
3.5.3	Interrupt Wakeup register (INTWAKE -	3.9.1		
	0xE01F C144)	3.9.1	Register description	33
3.5.4	External Interrupt Mode register (EXTMODE -	3.9.2	(PCON - 0xE01F COCO)	35
	0xE01F C148)	3.9.3	Power Control for Peripherals register (PCONP	
3.5.5	External Interrupt Polarity register (EXTPOLAR -	0.0.0	0xE01F COC4)	
	0xE01F C14C)	3.9.4	Power control usage notes	
3.5.6	Multiple external interrupt pins 25	3.10	Reset	
3.6	Other system controls	3.10.1	Reset Source Identification Register (RSIR -	
3.6.1	System Control and Status flags register (SCS -		0xE01F C180)	39
	0xE01F C1A0)	3.11	VPB divider	
3.7	Memory mapping control 26	3.11.1	Register description	
3.7.1	Memory Mapping control register (MEMMAP -	3.11.2	VPBDIV register (VPBDIV - 0xE01F C100)	
0.7.0	0xE01F C040)	3.12	Wakeup timer	
3.7.2	Memory mapping control usage notes 27	3.13	Brown-out detection	
3.8	Phase Locked Loop (PLL)	3.14	Code security vs. debugging	-
3.8.1	Register description	3.14	Code Security vs. debugging	43
3.8.2	PLL Control register (PLL0CON - 0xE01F C080,			
202	PLL1CON - 0xE01F C0A0)			
3.8.3	PLL Configuration register (PLL0CFG - 0xE01F C084, PLL1CFG - 0xE01F C0A4) 30			
3.8.4	PLL Status register (PLL0STAT - 0xE01F C084) 30			
J.J. T	PLL1STAT - 0xE01F C0A8)			



Chapter 4: I	Memory <i>F</i>	Acceleration	Module ((MAM)

	<u> </u>			
4.1	Introduction	44	4.5	MAM configuration 47
4.2	Operation	44	4.6	Register description 47
4.3	MAM blocks	45	4.7	MAM Control Register
4.3.1	Flash memory bank	45		(MAMCR - 0xE01F C000) 48
4.3.2	Instruction latches and data latches		4.8	MAM Timing register
4.3.3	Flash programming Issues			(MAMTIM - 0xE01F C004) 48
4.4	MAM operating modes	46	4.9	MAM usage notes 49
Chap	ter 5: Vectored Interrupt Controller (VI	C)		
5.1	Features		5.4.10	Vector Address registers 0-15 (VICVectAddr0-15 -
5.2	Description	50		0xFFFF F100-13C)
5.3	Register description	50	5.4.11	Default Vector Address register (VICDefVectAddr
5.4	VIC registers	52	5.4.12	- 0xFFFF F034)
5.4.1	Software Interrupt register (VICSoftInt -		5.4.12	0xFFFF F030)
	0xFFFF F018)		5.4.13	Protection Enable register (VICProtection -
5.4.2	Software Interrupt Clear register (VICSoftIntCl			0xFFFF F020)
5 4 2	- 0xFFFF F01C)	53	5.5	Interrupt sources
5.4.3	Raw Interrupt status register (VICRawIntr - 0xFFFF F008)	54	5.6	Spurious interrupts
5.4.4	Interrupt Enable register (VICIntEnable -	J T	5.6.1	Details and case studies on spurious
0	0xFFFF F010)	54		interrupts 61
5.4.5	Interrupt Enable Clear register (VICIntEnClear		5.6.2	Workaround
	0xFFFF F014)	55	5.6.3	Solution 1: test for an IRQ received during a write
5.4.6	Interrupt Select register (VICIntSelect -		F C 4	to disable IRQs
- 4 - 7	0xFFFF F00C)	55	5.6.4	Solution 2: disable IRQs and FIQs using separate writes to the CPSR
5.4.7	IRQ Status register (VICIRQStatus - 0xFFFF F000)	56	5.6.5	Solution 3: re-enable FIQs at the beginning of the
5.4.8	FIQ Status register (VICFIQStatus -	50	0.0.0	IRQ handler 63
0. 1.0	0xFFFF F004)	57	5.7	VIC usage notes 63
5.4.9	Vector Control registers 0-15 (VICVectCntl0-1			
	0xFFFF F200-23C)	57		
Chap	ter 6: Pin configuration			
6.1	LPC2141/2142/2144/2146/2148 pinout	66	6.2	Pin description for LPC2141/2/4/6/8 68
Chap	ter 7: Pin Connect Block			
7.1	Features	75	7.4.3	Pin function Select register 2 (PINSEL2 -
7.2	Applications			0xE002 C014)
7.3	Description		7.4.4	Pin function select register values 80
7.4	Register description			
7.4.1	Pin Function Select Register 0 (PINSEL0 -			
	0xE002 C000)	76		
7.4.2	Pin function Select register 1 (PINSEL1 -			
	0xE002 C004)	77		

Chapter 8: General Purpose Input/Output ports (GPIO)

	to: or comorair arbotto inhancourbair b	· · · · (· · · · · ·	
8.1 8.2 8.3 8.4 8.4.1	Features Applications Pin description Register description GPIO port Direction register (IODIR, Port 0: IO0DIR - 0xE002 8008 and Port 1: IO1DIR -	81 81	8.4.4	GPIO port output Set register (IOSET, Port 0: IO0SET - 0xE002 8004 and Port 1: IO1SET - 0xE002 8014; FIOSET, Port 0: FIO0SET - 0x3FFF C018 and Port 1: FIO1SET - 0x3FFF C038)
	0xE002 8018; FIODIR, Port 0: FIO0DIR - 0x3FFF C000 and Port 1:FIO1DIR - 0x3FFF C020)			IOOCLR - 0xE002 800C and Port 1: IO1CLR - 0xE002 801C; FIOCLR, Port 0: FIOOCLR - 0x3FFF C01C and Port 1: FIO1CLR - 0x3FFF C03C) 90
8.4.2	Fast GPIO port Mask register (FIOMASK, Por FIO0MASK - 0x3FFF C010 and Port	t 0:	8.5	GPIO usage notes 92
8.4.3	1:FIO1MASK - 0x3FFF C010 and Port 1:FIO1MASK - 0x3FFF C030)	85	8.5.1	Example 1: sequential accesses to IOSET and IOCLR affecting the same GPIO pin/bit 92
0.4.3	IOOPIN - 0xE002 8000 and Port 1: IO1PIN - 0xE002 8010; FIOPIN, Port 0: FIOOPIN -		8.5.2	Example 2: an immediate output of 0s and 1s on a GPIO port
	0x3FFF C014 and Port 1: FIO1PIN -		8.5.3	Writing to IOSET/IOCLR .vs. IOPIN 93
	0x3FFF C034)	86	8.5.4	Output signal frequency considerations when using the legacy and enhanced GPIO registers . 93
Chap	ter 9: Universal Asynchronous Receiv	er/Tra	nsmitt	er 0 (UART0)
Q 1	Features	95	937	HARTO Interrupt Identification Register (HOHR -

9.1 9.2	Features 95 Pin description 95	9.3.7	UART0 Interrupt Identification Register (U0IIR - 0xE000 C008, Read Only)
9.2 9.3 9.3.1 9.3.2 9.3.3 9.3.4 9.3.5 9.3.6	Pin description	9.3.8 9.3.9 9.3.10 9.3.11 9.3.12 9.3.13 9.3.14	0xE000 C008, Read Only) 101 UART0 FIFO Control Register (U0FCR - 103 UART0 Line Control Register (U0LCR - 103 UART0 Line Status Register (U0LSR - 104 UART0 Line Status Register (U0LSR - 104 UART0 Scratch pad register (U0SCR - 105 UART0 Auto-baud Control Register (U0ACR - 106 Auto-baud 106 UART0 Transmit Enable Register (U0TER - 107
	0xE000 C004, when DLAB = 0) 100	9.3.15 9.4	Auto-baud Modes. 108 Architecture. 109

Chapter 10: Universal Asynchronous Receiver/Transmitter 1 (UART1)

10.1 10.2 10.3 10.3.1	Features Pin description	112 113	10.3.2	UART1 Transmitter Holding Register (U1THR - 0xE001 0000, when DLAB = 0 Write Only) . 115 UART1 Divisor Latch Registers 0 and 1 (U1DLL - 0xE001 0000 and U1DLM - 0xE001 0004, when DLAB = 1)
10.0.1	0xE001 0000, when DLAB = 0 Read Only) .	115		DLAB = 1)

Chapter 25: Supplementary information



10.3.4	UART1 Fractional Divider Register (U1FDR - 0xE001 0028)	10.3.11	UART1 Line Status Register (U1LSR - 0xE001 0014, Read Only)
10.3.5	UART1 baudrate calculation	10.3.12	
10.3.6	UART1 Interrupt Enable Register (U1IER -	10.5.12	0xE001 0018), LPC2144/6/8 only 127
10.5.0	0xE001 0004, when DLAB = 0)	10.3.13	UART1 Scratch pad register (U1SCR -
10.3.7	UART1 Interrupt Identification Register (U1IIR -	10.5.15	0xE001 001C)
10.5.7	0xE001 0008, Read Only)	10.3.14	UART1 Auto-baud Control Register (U1ACR -
10.3.8	UART1 FIFO Control Register (U1FCR -	10.3.14	0xE001 0020)
10.3.6		10 2 15	•
10 2 0	0xE001 0008)	10.3.15 10.3.16	
10.3.9	· · · · · · · · · · · · · · · · · · ·		
10 0 10	0xE001 000C)	10.3.17	• • • • • • • • • • • • • • • • • • • •
10.3.10	UART1 Modem Control Register (U1MCR -		0xE001 0030)
	0xE001 0010), LPC2144/6/8 only	10.4	Architecture
Chapt	er 11: I ² C interfaces I ² C0 and I ² C1		
11.1	Features	11.7.5	I ² C Slave Address register (I2ADR: I2C0,
11.2	Applications		I2C0ADR - 0xE001 C00C and I2C1, I2C1ADR -
11.3	Description		address 0xE005 C00C)
11.4	Pin description	11.7.6	I ² C SCL High duty cycle register (I2SCLH: I2C0,
			I2C0SCLH - 0xE001 C010 and I2C1, I2C1SCLH -
11.5	I ² C operating modes		0xE0015 C010)
11.5.1	Master Transmitter mode	11.7.7	I ² C SCL Low duty cycle register (I2SCLL: I2C0 -
11.5.2	Master Receiver mode		I2C0SCLL: 0xE001 C014; I2C1 - I2C1SCLL:
11.5.3	Slave Receiver mode		0xE0015 C014)
11.5.4	Slave Transmitter mode	11.7.8	Selecting the appropriate I ² C data rate and duty
11.6	I ² C Implementation and operation 138		cycle
11.6.1	Input filters and output stages 138	11.8	Details of I ² C operating modes 147
11.6.2	Address Register, I2ADDR 140	11.8.1	Master Transmitter mode
11.6.3	Comparator	11.8.2	Master Receiver mode
11.6.4	Shift register, I2DAT	11.8.3	Slave Receiver mode
11.6.5	Arbitration and synchronization logic 140	11.8.4	Slave Transmitter mode
11.6.6	Serial clock generator141	11.8.5	Miscellaneous States 159
11.6.7	Timing and control	11.8.6	I2STAT = 0xF8
11.6.8	Control register, I2CONSET and I2CONCLR 141	11.8.7	I2STAT = 0x00
11.6.9	Status decoder and Status register 142	11.8.8	Some special cases
11.7	Register description	11.8.9	Simultaneous repeated START conditions from
11.7.1	I ² C Control Set register (I2CONSET: I2C0,		two masters
	I2C0CONSET - 0xE001 C000 and I2C1,	11.8.10	Data transfer after loss of arbitration 160
	I2C1CONSET - 0xE005 C000)	11.8.11	Forced access to the I ² C-bus 160
11.7.2	I ² C Control Clear register (I2CONCLR: I2C0,	11.8.12	I ² C-bus obstructed by a low level on
	I2C0CONCLR - 0xE001 C018 and I2C1,		SCL or SDA
	I2C1CONCLR - 0xE005 C018) 144	11.8.13	Bus error
11.7.3	I ² C Status register (I2STAT: I2C0, I2C0STAT -	11.8.14	I ² C State service routines
	0xE001 C004 and I2C1, I2C1STAT -	11.8.15	Initialization
	0xE005 C004)	11.8.16	I ² C interrupt service
11.7.4	I ² C Data register (I2DAT:	11.8.17	The State service routines
	12C0, I2C0DAT - 0xE001 C008 and	11.8.18	Adapting State services to an application 163
	I2C1, I2C1DAT - 0xE005 C008)	11.9	Software example
	,	11.9.1	Initialization routine
		11.9.1	mmanzanom routine

Volume 1

Chapter 25: Supplementary information

11.9.2 11.9.3 11.9.4 11.9.5 11.9.6 11.9.7 11.9.8 11.9.9 11.9.10 11.9.11 11.9.12 11.9.13 11.9.14 11.9.15	Start Master Transmit function 16 Start Master Receive function 16 I²C interrupt routine 16 Non mode specific States 16 State: 0x00 16 Master States 16 State: 0x08 16 State: 0x10 16 Master Transmitter States 16 State: 0x18 16 State: 0x20 16 State: 0x28 16 State: 0x30 16 State: 0x38 16 Master Receive States 16 State: 0x40 16 State: 0x40 16	54 54 54 54 54 55 55 55 55 55 56 66 66 66	11.9.20 11.9.21 11.9.22 11.9.23 11.9.24 11.9.25 11.9.26 11.9.27 11.9.28 11.9.30 11.9.31 11.9.33 11.9.33	State: 0x60. State: 0x68. State: 0x70. State: 0x78. State: 0x80. State: 0x88. State: 0x90. State: 0x98. State: 0xA0 Slave Transmitter States State: 0xA8 State: 0xB0 State: 0xB8 State: 0xB8 State: 0xB8 State: 0xB8 State: 0xB8 State: 0xC0	167 167 168 168 168 169 169 169 169 169 170
11.9.18 11.9.19	State: 0x48		11.9.36	State: 0xC8	170
		,,			
Cnapt	er 12: SPI Interface (SPI0)				
12.1	Features			Pin description	
12.2	Description			Register description	175
12.2.1	SPI overview		12.4.1	SPI Control Register	470
12.2.2 12.2.3	SPI data transfers		12.4.2	(SOSPCR - 0xE002 0000)	1/6
12.2.3	Master operation		12.4.2	SPI Status Register (S0SPSR - 0xE002 0004)	177
12.2.4	Slave operation	-	12.4.3	SPI Data Register (S0SPDR - 0xE002 0008)	
12.2.6	Exception conditions		12.4.4	SPI Clock Counter Register (S0SPCCR -	
12.2.7	Read Overrun				178
12.2.8	Write Collision		12.4.5	SPI Interrupt register	-
12.2.9	Mode Fault	-		(S0SPINT - 0xE002 001C)	178
12.2.10	Slave Abort	75	12.5	Architecture	179
Chapte	er 13: SSP Controller (SPI1)				
13.1	Features	RU .	13.3.9	Setup and hold time requirements on CS with	
13.1	Description		10.0.3	respect to SK in Microwire mode	
13.2	Bus description		13.4	•	188
13.3.1	Texas Instruments Synchronous Serial (SSI)	•	13.4.1	SSP Control Register 0	. 55
10.0.1	frame format			(SSPCR0 - 0xE006 8000)	189
13.3.2	SPI frame format		13.4.2	SSP Control Register 1	-
13.3.3	Clock Polarity (CPOL) and Clock Phase (CPHA)	-		(SSPCR1 - 0xE006 8004)	
	control	32	13.4.3	SSP Data Register (SSPDR - 0xE006 8008)	191
13.3.4	SPI format with CPOL=0,CPHA=0 18	33	13.4.4	SSP Status Register	
13.3.5	SPI format with CPOL=0,CPHA=1 18		40.45	,	191
13.3.6	SPI format with CPOL = 1,CPHA = 0 18	,0	13.4.5	SSP Clock Prescale Register (SSPCPSR -	101
13.3.7	SPI format with CPOL = 1,CPHA = 1 18		13.4.6	0xE006 8010)SSP Interrupt Mask Set/Clear register (SSPIM	191 1SC
13.3.8	Semiconductor Microwire frame format 18	oo	10.7.0	- 0xE006 8014)	

Volume 1

Chapter 25: Supplementary information

13.4.713.4.8	SSP Raw Interrupt Status register (SSPRIS - 0xE006 8018)	13.4.9	SSP Interrupt Clear Register (SSPICR - 0xE006 8020)
	0xE006 801C)193		
Chapt	er 14: USB Device Controller		
14.1	Introduction 194	14.8.3	USB Receive Data register (USBRxData -
14.2	Features		0xE009 0018)
14.3	Fixed Endpoint Configuration 195	14.8.4	USB Receive Packet Length register
14.4	Architecture		(USBRxPLen - 0xE009 0020) 211
14.5	Data Flow	14.8.5	USB Transmit Data register (USBTxData -
14.5.1	Data Flow from USB Host to the Device 197	1406	0xE009 001C)
14.5.2	Data Flow from Device to the Host 197	14.8.6	USB Transmit Packet Length register
14.5.3	Slave Mode Transfer	14.8.7	(USBTxPLen - 0xE009 0024)
14.5.4	DMA Mode Transfer (LPC2146/8 only) 198	14.0.7	(USBCtrl - 0xE009 0028)
14.6	Interfaces	14.8.8	Slave Mode data transfer
14.6.1	Software Interface	14.8.9	USB Command Code register (USBCmdCode -
14.6.2	Register Map		0xE009 0010)
14.7	USB Device register definitions 200	14.8.10	USB Command Data register (USBCmdData -
14.7.1	USB Interrupt Status register (USBIntSt -		0xE009 0014)
	0xE01F C1C0) 200	14.8.11	USB DMA Request Status register (USBDMARSt
14.7.2	USB Device Interrupt Status register		- 0xE009 0050)
	(USBDevIntSt - 0xE009 0000) 201	14.8.12	USB DMA Request Clear register (USBDMARCIr
14.7.3	USB Device Interrupt Enable register	44040	- 0xE009 0054)
	(USBDevIntEn - 0xE009 0004) 202	14.8.13	USB DMA Request Set register (USBDMARSet -
14.7.4	USB Device Interrupt Clear register	14.8.14	0xE009 0058)
	(USBDevIntClr - 0xE009 0008)	14.0.14	0xE009 0080)
14.7.5	USB Device Interrupt Set register (USBDevIntSet	14.8.15	USB EP DMA Status register (USBEpDMASt -
4470	- 0xE009 000C)	1 1.0.10	0xE009 0084)
14.7.6	USB Device Interrupt Priority register	14.8.16	USB EP DMA Enable register (USBEpDMAEn -
14.7.7	(USBDevIntPri - 0xE009 002C) 203 USB Endpoint Interrupt Status register		0xE009 0088)
14.7.7	(USBEpIntSt - 0xE009 0030) 204	14.8.17	USB EP DMA Disable register (USBEpDMADis -
14.7.8	USB Endpoint Interrupt Enable register		0xE009 008C)
	(USBEpIntEn - 0xE009 0034)	14.8.18	USB DMA Interrupt Status register
14.7.9	USB Endpoint Interrupt Clear register		(USBDMAIntSt - 0xE009 0090) 218
	(USBEpIntClr - 0xE009 0038) 206	14.8.19	USB DMA Interrupt Enable register
14.7.10	USB Endpoint Interrupt Set register (USBEpIntSet	44000	(USBDMAIntEn - 0xE009 0094) 218
	- 0xE009 003C) 207	14.8.20	USB End of Transfer Interrupt Status register
14.7.11	USB Endpoint Interrupt Priority register	14001	(USBEoTIntSt - 0xE009 00A0)
	(USBEpIntPri - 0xE009 0040)	14.8.21	(USBEoTIntCir - 0xE009 00A4)
14.7.12		14.8.22	USB End of Transfer Interrupt Set register
	0xE009 0044)	17.0.22	(USBEoTIntSet - 0xE009 00A8)
14.8	EP_RAM requirements 209	14.8.23	USB New DD Request Interrupt Status register
14.8.1	USB Endpoint Index register (USBEpIn -		(USBNDDRIntSt - 0xE009 00AC)
	0xE009 0048)	14.8.24	USB New DD Request Interrupt Clear register
14.8.2	USB MaxPacketSize register (USBMaxPSize -		(USBNDDRIntClr - 0xE009 00B0) 220
	0xE009 004C)		

Volume 1

Chapter 25: Supplementary information

14.8.25	USB New DD Request Interrupt Set register	14.10.1	Next_DD_pointer	
14006	(USBNDDRIntSet - 0xE009 00B4)	14.10.2	DMA_mode	
14.8.26	USB System Error Interrupt Status register (USBSysErrIntSt - 0xE009 00B8) 221	14.10.3 14.10.4	Isochronous_endpoint	
14.8.27	USB System Error Interrupt Clear register	14.10.4	Max_packet_size	
14.0.21	(USBSysErrIntClr - 0xE009 00BC) 221	14.10.6	DMA_buffer_length	
14.8.28	USB System Error Interrupt Set register	14.10.7	DMA_buffer_start_addr	
	(USBSysErrIntSet - 0xE009 00C0) 221	14.10.8	DD_retired	
14.9	Protocol engine command description 222	14.10.9	DD_status	
14.9.1	Set Address	14.10.10	Packet_valid	
	(Command: 0xD0, Data: write 1 byte) 223	14.10.11	LS_byte_extracted	233
14.9.2	Configure Device (Command: 0xD8, Data: write 1	14.10.12	MS_byte_extracted	
	byte)		Present_DMA_count	
14.9.3	Set Mode	14.10.14	Message_length_position	
	(Command: 0xF3, Data: write 1 byte) 224		Isochronous_packetsize_memory_address.	
14.9.4	Read Current Frame Number (Command: 0xF5,	14.11 C	OMA operation	
	Data: read 1 or 2 bytes) 225	14.11.1	Triggering the DMA engine	
14.9.5	Read Test Register (Command: 0xFD, Data: read	14.11.2	Arbitration between endpoints	
	2 bytes)		Ion Isochronous Endpoints - Normal Mode	
14.9.6	Set Device Status (Command: 0xFE, Data: write 1		peration	
14.9.7	byte)	14.12.1	Setting up DMA transfer	
14.9.7	byte)	14.12.2	Finding DMA Descriptor	
14.9.8	Get Error Code (Command: 0xFF, Data: read 1	14.12.3	Transferring the Data	
14.5.0	byte)	14.12.4	Optimizing Descriptor Fetch	
14.9.9	Read Error Status (Command: 0xFB, Data: read 1	14.12.5 14.12.6	Ending the packet transfer	
	byte)		No_Packet DD	236
14.9.10	Select Endpoint (Command: 0x00 - 0x1F, Data:		Concatenated transfer (ATLE) mode	
	read 1 byte (optional))		peration	
14.9.11	Select Endpoint/Clear Interrupt (Command:	14.13.1	Setting up the DMA transfer	
	0x40 - 0x5F, Data: read 1 byte) 229	14.13.2 14.13.3	Finding the DMA Descriptor Transferring the Data	
14.9.12	Set Endpoint Status (Command: 0x40 - 0x55,	14.13.4	Ending the packet transfer	
	Data: write 1 byte (optional))			
14.9.13	Clear Buffer (Command: 0xF2, Data: read 1 byte		sochronous Endpoint Operation	
	(optional))	14.14.1 14.14.2	Setting up of DMA transfer	
14.9.14	Validate Buffer	14.14.2	Finding the DMA Descriptor Transferring the Data	
	(Command: 0xFA, Data: none)	14.14.3	Isochronous OUT Endpoint Operation	240
14.10	DMA descriptor	14.14.4	Example	241
Chapt	er 15: Timer/Counter TIMER0 and TIMER1			
15.1	Features	15.5.2	Timer Control Register (TCR, TIMER0: T0T0	`R -
15.2	Applications	10.0.2	0xE000 4004 and TIMER1: T1TCR -	
			0xE000 8004)	245
15.3	Description	15.5.3	Count Control Register (CTCR,	_
15.4	Pin description		TIMER0: TOCTCR - 0xE000 4070 and	
15.5	Register description 243		TIMER1: T1TCR - 0xE000 8070)	246
15.5.1	Interrupt Register (IR,	15.5.4	Timer Counter (TC,	
	TIMER0: T0IR - 0xE000 4000 and		TIMER0: T0TC - 0xE000 4008 and	
	TIMER1: T1IR - 0xE000 8000) 245		TIMER1: T1TC - 0xE000 8008)	247

Volume 1

Chapter 25: Supplementary information

15.5.5	Prescale Register (PR, TIMER0: T0PR - 0xE000 400C and TIMER1: T1PR - 0xE000 800C)	247	15.5.9 15.5.10	Capture Registers (CR0 - CR3) Capture Control Register (CCR, TIMER0: T00 - 0xE000 4028 and TIMER1: T1CCR -	
15.5.6	Prescale Counter Register (PC, TIMER0: T0PC - 0xE000 4010 and TIMER1: T1PC - 0xE000 8010)		15.5.11	0xE000 8028)	
15.5.7 15.5.8	Match Registers (MR0 - MR3)		4= 0	0xE000 803C)	
15.5.6	0xE000 4014 and TIMER1: T1MCR -	JK -	15.6	Example timer operation	
	0xE000 8014)	248	15.7	Architecture	252
Chapt	er 16: Pulse Width Modulator (PWM)				
16.1	Features	253	16.4.3	PWM Timer Counter	
16.2	Description	253		(PWMTC - 0xE001 4008)	260
16.2.1	Rules for single edge controlled		16.4.4	PWM Prescale Register (PWMPR -	200
	PWM outputs	256	16.4.5	0xE001 400C)	260
16.2.2	Rules for double edge controlled	257	10.4.5	0xE001 4010)	260
16.2	PWM outputs		16.4.6	PWM Match Registers	
16.3 16.4	Pin description			(PWMMR0 - PWMMR6)	261
16.4.1	Register description	237	16.4.7	PWM Match Control Register (PWMMCR -	
10.4.1	(PWMIR - 0xE001 4000)	259	10 1 0	0xE001 4014)	261
16.4.2	PWM Timer Control Register (PWMTCR -	200	16.4.8	PWM Control Register (PWMPCR - 0xE001 404C)	262
	0xE001 4004)	259	16.4.9	PWM Latch Enable Register (PWMLER -	
Chapt	er 17: Analog-to-Digital Converter (A	DC)			
17.1	Features	265	17.4.5	A/D Interrupt Enable Register (ADINTEN, AD)C0:
17.2	Description	265		ADOINTEN - 0xE003 400C and ADC1:	
17.3	Pin description	265	47.40	AD1INTEN - 0xE006 000C)	
17.4	Register description	266	17.4.6	A/D Data Registers (ADDR0 to ADDR7, ADC AD0DR0 to AD0DR7 - 0xE003 4010 to	<i>,</i> 0:
17.4.1	A/D Control Register (AD0CR - 0xE003 4000			0xE003 402C and ADC1: AD1DR0 to AD1DR	R7-
	AD1CR - 0xE006 0000)	267		0xE006 0010 to 0xE006 402C)	
17.4.2	A/D Global Data Register (AD0GDR -	000	17.5	Operation	
17.4.3	0xE003 4004 and AD1GDR - 0xE006 0004) A/D Global Start Register (ADGSR -	208	17.5.1	Hardware-triggered conversion	272
17.4.5	0xE003 4008)	269	17.5.2	Interrupts	
17.4.4	A/D Status Register (ADSTAT,		17.5.3	Accuracy vs. digital receiver	272
	ADC0: AD0CR - 0xE003 4004 and	000			
	ADC1: AD1CR - 0xE006 0004)	269			
Chapt	er 18: Digital-to-Analog Converter (D	AC)			
18.1	Features	273	18.3	DAC Register (DACR - 0xE006 C000)	273
18.2	Pin description	273	18.4	Operation	
Chapt	er 19: Real Time Clock				

Chapter 25: Supplementary information

19.1	Features	275	19.4.10	Consolidated Time register 1 (CTIME1 -	
19.2	Description	275		,	280
19.3	Architecture	275	19.4.11	Consolidated Time register 2 (CTIME2 -	200
19.4	Register description	276	10 1 10	•	280
19.4.1	RTC interrupts		19.4.12 19.4.13	3 1	280
19.4.2	Miscellaneous register group		19.4.13	1 /	281
19.4.3	Interrupt Location Register			.	281
	(ILR - 0xE002 4000)	277	19.5		282
19.4.4	Clock Tick Counter Register (CTCR -		19.6	Reference clock divider (prescaler)	282
	0xE002 4004)	278	19.6.1	Prescaler Integer register (PREINT -	
19.4.5	Clock Control Register (CCR - 0xE002 4008)	278			283
19.4.6	Counter Increment Interrupt Register (CIIR -		19.6.2	Prescaler Fraction register (PREFRAC -	
	0xE002 400C)	278		0xE002 4084)	
19.4.7	Alarm Mask Register (AMR - 0xE002 4010)	279	19.6.3	Example of prescaler usage	
19.4.8	Consolidated time registers	279	19.6.4	Prescaler operation	284
19.4.9	Consolidated Time register 0 (CTIME0 -		19.7	RTC external 32 kHz oscillator component	
	0xE002 4014)	279		selection	285
Chapt	er 20: Watchdog Timer				
20.1	Features	297	20.4.2	Watchdog Timer Constant register (WDTC -	
			20.4.2		289
20.2	Applications		20.4.3	Watchdog Feed register (WDFEED -	203
20.3	Description		20.4.0	- · · · · · · · · · · · · · · · · · · ·	289
20.4	Register description	288	20.4.4	Watchdog Timer Value register (WDTV -	200
20.4.1	Watchdog Mode register (WDMOD -		20.1.1	0xE000 000C)	289
	0xE000 0000)	288	20.5	Block diagram	
Chapt	er 21: Flash Memory System and Pro	gramn	ning	•	
21.1	Flash Boot Loader	291	21.6	Flash content protection mechanism	296
21.2	Features		21.7	Code Read Protection (CRP)	
21.3	Applications		21.8	ISP commands	
21.4	Description		21.8.1		298
21.4.1	Memory map after any reset		21.8.2	Set Baud Rate <baud rate=""> <stop bit=""></stop></baud>	
21.4.2	Criterion for valid user code	202	21.8.3	Echo <setting></setting>	299
21.4.3	Communication protocol	200	21.8.4	Write to RAM <start address=""></start>	200
21.4.4	ISP command format		21.8.5	<pre><number bytes="" of=""></number></pre>	
21.4.5	ISP response format		21.8.6	Read memory <address> <no. bytes="" of=""></no.></address>	
21.4.6	ISP data format		21.0.0	Prepare sector(s) for write operation <start senumber=""> <end number="" sector=""></end></start>	
21.4.7	ISP flow control		21.8.7	Copy RAM to Flash <flash address=""> <ram< td=""><td>300</td></ram<></flash>	300
21.4.8	ISP command abort	201	Z1.0.1		301
21.4.9	Interrupts during ISP		21.8.8	Go <address> <mode></mode></address>	
21.4.10	Interrupts during IAP	207	21.8.9	Erase sector(s) <start number="" sector=""> <end< td=""><td>JU2</td></end<></start>	JU2
21.4.11	RAM used by ISP command handler		۵.0.5		302
21.4.12	•		21.8.10	Blank check sector(s) <sector number=""> <end< td=""><td>JU2</td></end<></sector>	JU2
21.4.13 21.4.14			<u>~</u> 1.0.10	* *	303
	•		21.8.11		303
21.5	Sector numbers	295	21.8.12	Read Boot code version number	



Chapter 25: Supplementary information

21.8.13 21.8.14 21.9 21.9.1 21.9.2 21.9.3 21.9.4 Chan t	<no bytes="" of=""></no>	304 305 307 308 308	21.9.5 21.9.6 21.9.7 21.9.8 21.9.9 21.10	Read Part Identification number Read Boot code version number Compare <address1> <address2> <no bytes="" of=""> Reinvoke ISP IAP Status codes JTAG Flash programming interface.</no></address2></address1>	309 310 310 310
Chap	er zz. EmbeddedioE logic				
22.1 22.2 22.3 22.4 Chapt	Features Applications Description Pin description ter 23: Embedded Trace Macrocell (E	312 312 313	22.5 22.6 22.7	Reset state of multiplexed pins	314
23.1	Features	315	23.4	Pin description	316
23.2	Applications		23.5	Reset state of multiplexed pins	
23.3	Description		23.6	Register description	
23.3.1	ETM configuration		23.7	Block diagram	
Chap	er 24: RealMonitor				
24.1 24.2 24.3 24.3.1 24.3.2 24.3.3 24.3.4 24.4 24.4.1 24.4.2 24.4.3 Chape	Features Applications Description RealMonitor components RMHost RMTarget How RealMonitor works How to enable Realmonitor Adding stacks IRQ mode Undef mode ter 25: Supplementary information	319 319 320 320 320 321 322 322 322 322 322	24.4.4 24.4.5 24.4.6 24.4.7 24.4.8 24.4.9 24.4.10 24.4.11 24.4.12	RMTarget initialization	323 323 323 323 323 323 324 324
25.1	Abbreviations				
25.2 25.3	Disclaimers	330			
ソケス	Tradomarke	330			



© Koninklijke Philips Electronics N.V. 2005

All rights are reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner. The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Date of release: 15 August 2005