POWER8 in-core Cryptography The Unofficial Guide

Jeffrey Walton Steven Munroe Dr. William Schmidt

POWER8 in-core Cryptography: The Unofficial Guide by Jeffrey Walton, Steven Munroe, and Dr. William Schmidt

Publication date January 27, 2023

Publication date 1 June 2018

Table of Contents

| 1. Introduction | 1 |
|---------------------------------|----|
| Architecture | 1 |
| OpenPOWER Foundation | 1 |
| Compilers | 1 |
| Source code | 2 |
| Compile Farm | 2 |
| Contributing | 3 |
| Organization | |
| 2. Vector programming | |
| GCC compiler | |
| XLC compiler | |
| Clang compiler | |
| Altivec headers | |
| Preprocessor macros | |
| Machine endianness | |
| Memory allocation | |
| Vector datatypes | |
| Effective addresses | |
| Aligned data references | |
| Unaligned data references | |
| Vector dereferences | |
| Vector shifts | |
| Vector permutes | |
| 32-bit Altivec | |
| 3. Runtime features | |
| Strategy | |
| AIX features | |
| Linux features | |
| L1 Data Cache | |
| 4. Advanced Encryption Standard | |
| Strategy | |
| Endianness | |
| Functions | |
| Golden key | |
| Key schedule | |
| Encryption | |
| Decryption | |
| Performance | |
| 5. Secure Hash Standard | |
| Strategy | |
| Ch function | |
| Maj function | |
| Sigma functions | |
| SHA-256 | |
| SHA-512 | |
| 6. Polynomial multiplication | |
| o. i oijiioinai maapiioadon | 71 |

POWER8 in-core Cryptography

| CRC-32 and CRC-32C | 41 |
|----------------------------|----|
| GCM mode | 41 |
| 7. Assembly language | 44 |
| Cryptogams | 44 |
| DARN generator | |
| 8. Performance | 48 |
| Power states | 48 |
| Benchmarks | 48 |
| 9. References | |
| Cryptogams | 50 |
| GitHubs | |
| IBM and OpenPOWER websites | 50 |
| NIST website | 51 |
| Stack Exchange | 51 |
| Index | |

Chapter 1. Introduction

This document is a guide to using IBM's POWER8 in-core cryptography [https://www.ib-m.com/developerworks/learn/security/index.html]. The purpose of the book is to document in-core cryptography more completely for developers and quality assurance personnel who wish to take advantage of the features.

POWER8 in-core cryptography includes CPU instructions to accelerate AES, SHA-256, SHA-512 and polynomial multiplication. Additionally POWER9 adds a random number generator called DARN. This document includes treatments of AES, SHA-256, SHA-512 and DARN. It does not include a discussion of polynomial multiplication at the moment, but the chapter is stubbed-out (and waiting for a contributor).

The POWER8 extensions for in-core cryptography find their ancestry in the Altivec SIMD coprocessor. The POWER8 vector unit includes Vector-Scalar Extensions (VSX) and the instruction set for in-core cryptography is a part of it. You can find additional information on VSX in Chapter 7 of the IBM Power ISA Version 3.0B [https://openpowerfoundation.org/?resource_lib=power-isa-version-3-0] at the OpenPOWER Foundation website.

Architecture

There are two POWER architectures that you will encounter as you are working on your implementation. The first is POWER7, and it is governed by ISA 2.06B documents. The second is POWER8, and it is governed by ISA 2.07B documents.

In-core cryptography requires POWER8 and ISA 2.07B support. POWER8 is the ISA that provides the instructions for AES, SHA and polynomial multiplication. POWER7 provides other useful instructions, like unaligned loads and stores. If you are working with POWER8, then you have everything in POWER7 and earlier.

Note that if you are developing for little-endian Linux on PowerPC, then POWER7 is not available. POWER8 and ISA 2.07B support is the minimum requirement for little-endian systems.

OpenPOWER Foundation

The OpenPOWER Foundation [https://openpowerfoundation.org] is an open technical community based on the POWER architecture. Its mission is to create an open ecosystem, using the POWER architecture to share expertise, investment, and server-class intellectual property to serve the evolving needs of customers and industry.

The Foundation publishes many technical documents for the POWER architectures in its Resource Catalog [https://openpowerfoundation.org/technical/resource-catalog/], including POWER8 and ISA 2.07B. Change flags in the document show the content added relative to POWER7 and ISA 2.06B, which predates the OpenPOWER Foundation.

Compilers

The book does not discriminate compilers. All the samples will compile with both GCC and IBM XL C/C++. XL C/C++ is IBM's flagship compiler, and it is referred to as XLC on occasion.

The samples may compile with LLVM's Clang but it was not tested. The compile farm does not have Clang installed so we could not test it. We would like to see how well Clang performs when compared to GCC and XLC. If you encounter a problem using Clang then please report it.

The compiler you use can make a measurable difference on you program. For example, you will probably obtain different benchmark results using GCC and XLC. You will even obtain different benchmark results among versions of the same compiler. For example, GCC 7.2 is generally faster than GCC 4.8.5, and both SHA-256 and SHA-512 builtin implementations will speed up by about 2 cycles per byte (cpb) using GCC 7.

Compilers are discussed in more detail at GCC Compiler, XLC Compiler and Clang Compiler.

Source code

The source code in the book is a mix of C and C++. The SHA-256 and SHA-512 samples were written in C++ to avoid compile errors due to the SHA API requiring 4-bit literal constants. We could not pass parameters through functions and obtain the necessary constexpr-ness so template parameters were used instead.

There is no source code library to download *per se*. The code is taken from Botan, Crypto+ and OpenSSL free software projects. Some code is taken from Andy Polyakov and Cryptogams. Some code is taken from GitHub projects. And some code was written and thrown away after testing.

The code for AES and SHA was collected and placed at AES Intrinsics [https://github.com/noloader/AES-Intrinsics] and SHA Intrinsics [https://github.com/noloader/SHA-Intrinsics] GitHubs but the code is not in library format. Rather they are stand alone proof of concepts.

Compile Farm

The GCC Compile Farm (Cfarm) is a collection of hardware available to free and open source software developers run by the GNU organization. The farm provides hardware for Intel x86, Aarch64, MIPS, SPARC and PowerPC.

The Compile Farm offers at least seven PowerPC machines. gcc112 and gcc119 are the POWER8 iron. gcc135 is the POWER9 iron. The other machines are POWER7 hardware. gcc112 and gcc135 are a Linux PowerPC, 64-bit, little-endian machine (ppc64-le), and gcc119 is an AIX PowerPC, 64-bit, big-endian machine (ppc64-be).

Both POWER8 machines are IBM POWER System S822 with two CPU cards. gcc112 has 160 logical CPUs and runs at 3.4 GHz. gcc119 has 64 logical CPUs and runs at 4.1 GHz. At 4.1 GHz and 192 GB of RAM gcc119 is probably one of the fastest machine you will work on.

If you are a free and open software developer then you are eligible for a free GCC Compile Farm [https://cfarm.tetaneutral.net/] account. Access is provided through SSH.

If you work on machines in the Compile Farm then be mindful of the default GCC compiler. It is probably GCC 4.8.5, and you usually get better code generation and performance with GCC 7.2 located at /opt/cfarm/gcc-latest.

Contributing

This book is free software. If you see an opportunity for improvement, an error or an omission then please submit a pull request or open a bug report.

Organization

The book proceeds in eight parts. First, administrivia is discussed, like how to determine machine endianness and how to load and store a vector from memory. A full treatment of vector programming is its own book, but the discussion should be adequate to move on to the more interesting tasks.

Second, runtime feature detections is discussed for AIX and Linux. Runtime detection allows you to switch to a faster implementation at runtime when the hardware provides the support.

Third, AES is discussed. AES is specified in FIPS 197, Advanced Encryption Standard (AES) [https://nvlpubs.nist.gov/nistpubs/fips/nist.fips.197.pdf]. You should read the standard if you are not familiar with the block cipher.

Fourth, SHA is discussed. SHA is specified in FIPS 180-4, Secure Hash Standard (SHS) [https://nvlpubs.nist.gov/nistpubs/fips/nist.fips.180-4.pdf]. You should read the standard if you are not familiar with the hash.

Fifth, polynomial multiplication is discussed. Polynomial multiplications is important for CRC-32, CRC-32C and GCM mode of operation for AES.

Sixth, performance is discussed. The implementations are compared against C and C++ routines and assembly language routines from OpenSSL. The OpenSSL routines are high quality and written by Andy Polyakov.

Seventh, assembly language integration is discussed. Andy Polyakov dual licenses his cryptographic implementations and you can use his routines once you know how to integrate them.

Finally, performance and benchmarking is discussed. C/C++, C++ using builtins and assembly language routines are benchmarked using GCC.

Chapter 2. Vector programming

Several topics need to be discussed to minimize trouble when using the Altivec and POWER8 extensions. They include PowerPC compilers and options, Altivec headers, machine endianness, vector datatypes, memory and alignment, and loads and stores. It is enough information to get to the point you can use AES and SHA but not much more.

Memory alignment, loads, stores and shifts will probably cause the most trouble for someone new to PowerPC vector programming. If you are new to the platform you may want to read this chapter twice. If you are experienced with the platform then you probably want to skip this chapter.

Two compilers are used for testing. The first is GCC and the second is IBM XL C/C++ (XLC). Both produce high quality code. The GCC and XLC compilers are mostly the same but accept slightly different options. LLVM's Clang was not tested because the compile farm lacks a Clang installation.

GCC compiler

Compiling a test program with GCC will generally look like below. The important part is – mcpu=power8 which selects the POWER8 Instruction Set Architecture (ISA). The minimum architecture required for Altivec with GCC is -march=power4.

```
$ g++ -mcpu=power8 -maltivec test.cxx -o test.exe
```

GCC consumes -g and -03. If you want Position Independent Code then use -fPIC.

GCC uses integer math to calculate the effective memory addresses from a memory address and offset. That is, if you have an array $uint32_t vals = \{0, 1, 2, 3, 4, 5, 6, 7\}$, and you call $uint32x4_p v = vec_x1(vals, 4)$, then the vector will have the value $\{1, 2, 3, 4\}$. That is, GCC uses the address of vals and simply adds 4 to it. Effective addresses are discussed in Effective Addresses, and loads and stores are discussed in Aligned Data References.

If you work on the Compile Farm then be mindful of the default GCC compiler. It may be GCC 4.8.5 which is a bit old and unsupported. You usually enjoy better code generation and performance with a modern GCC like 7.2. A newer compiler is usually located at /opt/cfarm/gcc-latest.

XLC compiler

Compiling a test program with IBM XL C/C++ will generally look like below. The important parts are the C++ compiler name of xlc, and -qarch=pwr8 which selects the POWER8 ISA. The minimum architecture required for Altivec with XLC is -qarch=pwr6.

```
$ xlC -qarch=pwr8 -qaltivec test.cxx -o test.exe
```

XLC consumes -g and -03. If you want Position Independent Code then use -gpic for XLC.

XLC uses integer math to calculate the effective memory addresses from a memory address and offset. That is, if you have an array $uint32_t vals = \{0,1,2,3,4,5,6,7\}$, and you call $uint32x4_p v = vec_x1(vals, 4)$, then the vector will have the value $\{1,2,3,4\}$. That is, XLC uses the address of vals and simply adds 4 to it. Effective addresses are discussed in Effective Addresses, and loads and stores are discussed in Aligned Data References.

IBM XLC switched to a LLVM front-end for the Linux compiler at version 13.1 (AIX still uses the IBM front-end). When compiling with XLC version 13.1 or higher on Linux you may need the -qcompatmacros compiler option. Without -qcompatmacros the samples fail to compile because XLC 13.1 does not define $_xlc_$ or $_xlc_$. However, LLVM defines $_GNUC_$ but compilation fails because the compiler cannot consume the GCC POWER8 builtins. 1

Clang compiler

Compiling a test program with LLVM's Clang will generally look like below. The important part is -mcpu=power8 which selects the POWER8 Instruction Set Architecture (ISA). The minimum architecture required for Altivec with Clang is unknown. The Clang compiler was not tested because the compile farm lacks a Clang installation.

```
$ g++ -mcpu=power8 -maltivec test.cxx -o test.exe
```

Clang consumes -g and -03. If you want Position Independent Code then use -fpic.

IBM switched to an LLVM front-end for the Linux compiler at version 13.1 as discussed in XLC Compiler. Be mindful of how you use preprocessor macros when LLVM is the front-end because the compiler claims to be three different compilers — GCC, Clang and XLC.

```
$ xlc -qxlcompatmacros -qshowmacros -E test.cxx | \
   egrep -i -E 'xlc|clang|llvm|gnuc'
#define __GNUC_GNU_INLINE__ 1
#define __GNUC_MINOR__ 2
#define __GNUC_PATCHLEVEL__ 1
#define __GNUC__ 4
#define __clang__ 1
#define __clang_major__ 4
#define __clang_minor__ 0
#define __clang_patchlevel__ 1
#define __clang_patchlevel__ 1
#define __xlc__ 0x0d01
#define __xlc_ver__ 0x00000601
```

The front-end change triggered LLVM Issue 38378 [http://bugs.llvm.org/show_bug.c-gi?id=38378] for one project because the compiler entered GCC code paths but it cannot consume GCC POWER8 builtins.

Clang uses pointer math to calculate the effective memory addresses from a memory address and offset. That is, if you have an array $uint32_t vals = \{0, 1, 2, 3, 4, 5, 6, 7\}$, and you

¹LLVM behavior is befuddling to some people. It is the XLC compiler but fails to define __xlc__ or __xlc__. Then it defines __gnuc__ but fails to consume the GCC POWER8 builtins.

call $\mathtt{uint32x4_p}\ \mathtt{v} = \mathtt{vec_x1}\ (\mathtt{vals},\ 4)$, then the vector will have the value $\{4,5,6,7\}$. That is, Clang uses the address of \mathtt{vals} and adds $4*\mathtt{sizeof}\ (\mathtt{uint32_t})$ to it. Effective addresses are discussed in Effective Addresses, and loads and stores are discussed in Aligned Data References.

If you use the Clang compiler then be sure it is version 7.1 or above due to Bug 39704 [https://bugs.llvm.org/show_bug.cgi?id=39704]. The 39704 bug is due to Clang discarding code it believed was illegal due to an unaligned Altivec load. The code was legal because POWER7 and VSX provides the load of data using natural alignment. The code should not have been removed.

Altivec headers

The header file required for datatypes and functions is <altivec.h>. You must enable Altivec using compiler options -maltivec or -qaltivec as discussed in GCC Compiler and XLC Compiler.

To support C++ projects and compilers the __vector keyword is used rather than vector. A typical Altivec include looks as shown below.

```
#if defined(__ALTIVEC__)
# include <altivec.h>
# undef vector
# undef pixel
# undef bool
#endif
```

The __ALTIVEC__ preprocessor macro will be defined when using -qaltivec or -maltivec compiler options as discussed in GCC Compiler and XLC Compiler. Macros and definitions are discussed more in Preprocessor Macros.

When you need to use the vector datatypes you use the __vector keyword as discussed in the section Vector Datatypes.

```
/* A vector with four elements initialized to 0 */
vector unsigned int v = {0,0,0,0};
```

Preprocessor macros

The following preprocessor macros and defines will be encountered depending on the platform and compiler:

```
__powerpc__ and __powerpc on AIX
__powerpc__ and __powerpc64__ on Linux
_ARCH_PWR3 through _ARCH_PWR9 on AIX and Linux
__linux__, __linux and linux on Linux
AIX, and AIX32 through AIX72 on AIX
```

```
    __GNUC__ when using GCC C/C++ compiler
```

```
• xlc and xlC when using IBM XL C/C++
```

Machine endianness

You will experience both little-endian and big-endian machines in the field when working with a modern PowerPC architecture. Linux is generally little-endian, while AIX is big-endian.

When writing portable source code you should check the value of preprocessor macros __LITTLE_ENDIAN__ or __BIG_ENDIAN__ to determine the configuration. The value of the macros __BIG_ENDIAN__ and __LITTLE_ENDIAN__ are defined to non-0 when in effect. Source code checking endianness should look similar to the code shown below.

```
#if __LITTLE_ENDIAN__
# pragma message "Little-endian system"
#elif __BIG_ENDIAN__
# pragma message "Big-endian system"
#else
# error WTF???
#endif
```

The compilers can show the endian-related preprocessor macros available on a platform. Below is from GCC on gcc112 from the compile farm, which is ppc64-le.

```
$ g++ -dM -E test.cxx | grep -i endian
#define __ORDER_LITTLE_ENDIAN__ 1234
#define _LITTLE_ENDIAN 1
#define __FLOAT_WORD_ORDER__ _ORDER_LITTLE_ENDIAN__
#define __ORDER_PDP_ENDIAN__ 3412
#define __LITTLE_ENDIAN__ 1
#define __ORDER_BIG_ENDIAN__ 4321
#define __BYTE_ORDER ORDER_LITTLE_ENDIAN
```

And the complimentary view from IBM XL C/C++ on gcc112 from the Compile Farm, which is ppc64-le.

```
$ xlC -qshowmacros -E test.cxx | grep -i endian
#define _LITTLE_ENDIAN 1
#define _BYTE_ORDER___ORDER_LITTLE_ENDIAN__
#define _FLOAT_WORD_ORDER__ORDER_LITTLE_ENDIAN__
#define _LITTLE_ENDIAN__ 1
#define _ORDER_BIG_ENDIAN__ 4321
#define _ORDER_LITTLE_ENDIAN__ 1234
#define _ORDER_PDP_ENDIAN__ 3412
#define _VEC_ELEMENT_REG_ORDER__ORDER_LITTLE_ENDIAN__
```

However, below is gcc119 from the compile farm, which is ppc64-be. It runs AIX and notice __BYTE_ORDER__, __ORDER_BIG_ENDIAN__ and __ORDER_LITTLE_ENDIAN__ are not present.

```
$ xlC -qshowmacros -E test.cxx | grep -i endian
#define __BIG_ENDIAN__ 1
#define _BIG_ENDIAN 1
#define __THW_BIG_ENDIAN__ 1
#define __HHW_BIG_ENDIAN__ 1
```

PowerPC is not the only architecture to have the __BIG_ENDIAN__ and __LITTLE_ENDIAN__ trap. The trap is also laid on SPARCv8, and caused BIND users on Net-BSD-8 to fail to validate DNSSEC keys. The problem was the endianness tests used __ORDER_BIG_ENDIAN__ and __ORDER_LITTLE_ENDIAN__. Also see DNSSEC vs netb-sd-8/sparc? [https://mail-index.netbsd.org/netbsd-users/2020/04/16/msg024529.html].

If you wish to use the GCC macros for endianness test, then you should craft your test like below. The tests below will perform properly with Clang, GCC and XLC.

Memory allocation

System calls like malloc and calloc (and friends) are used to acquire memory from the heap. The system calls *do not* guarantee alignment to any particular boundary on all platforms. Linux generally returns a pointer that is at least 16-byte aligned on all platforms, including ARM, PPC, MIPS and x86. AIX *does not* provide the same alignment behavior [http://stack-overflow.com/q/48373188/608639].

To avoid unexpected surprises when using heap allocations you should use posix_memalign [http://pubs.opengroup.org/onlinepubs/009695399/functions/posix_memalign.html] to acquire heap memory aligned to a particular boundary and free to return it to the system.

AIX provides routines for vector memory allocation and alignment. They are vec_malloc and vec_free, and you can use them like _mm_malloc on Intel machines with Streaming SIMD Extensions (SSE).

Vector datatypes

Three vector datatypes are needed for vector programming. The three types used for crypto are listed below.

```
    __vector unsigned char
```

- vector unsigned int
- _vector unsigned long long

__vector unsigned char is arranged as 16 each 8-bit bytes, and it is a typedef to uin-t8x16_p. __vector unsigned int is arranged as 4 each 32-bit words, and it is a typedef to uint32x4_p.

POWER7 and VSX added __vector unsigned long long, and it is arranged as 2 each 64-bit double words. The typedef is $uint64x2_p$. According to the Power Architecture ELF ABI Specification, you should always use __vector unsigned long long for portability because it is available on 32-bit and 64-bit systems. You should not use __vector unsigned long.²

Though POWER7 and VSX added __vector unsigned long long, the associated 64-bit vector operations did not arrive until POWER8. That means you can load a __vector unsigned long long, but you can't add, subtract, or, or xor them until POWER8. You will be OK with crypto operations since crypto is POWER8.

The typedef naming was selected to convey the arrangement, like 32x4 and 64x2. The trailing _p was selected to convey the POWER architecture and avoid collisions with ARM NEON vector data types. The suffix _p8 (for POWER8 architecture) or _v (for Vector) would work just as well. You should avoid _t because it is reserved for the language by the C standards.

Effective addresses

Some vector operations, like loads and stores, can be sensitive to the alignment of a memory address. Operations like <code>vec_ld</code> and <code>vec_st</code> are sensitive, and the documentation clearly states it.

The effective address is a simple sum consisting of the memory address plus the offset into the address with the result rounded down to a multiple of 16. Effective addresses follow integer arithmetic and not pointer arithmetic.

You can calculate an effective address using the following code. Notice the bottom 4 bits are masked after calculating the sum to yield a multiple of 16.

```
uintptr_t maddr = (uintptr_t)mem_addr;
uintptr_t mask = ~(uintptr_t)0xf;
uintptr_t eaddr = (maddr+offset) & mask;
```

²On 32-bit systems a long is 32-bits under the ILP32 data model. A __vector unsigned long on a 32-bit system would be equivalent to a __vector unsigned int with 4 elements.

vec_ld takes a pointer and an offset to load a value into a VSX register. Each of the following yield the same VSX register value because the effective addresses are the same. (Old x86 programmers should reminisce on segmented memory).

```
uint8_t* ptr1 = 0x401000;
int off1 = 32;
uint8x16_p r1 = vec_ld(off1, ptr1);
uint8_t* ptr2 = 0x401010;
int off2 = 16;
uint8x16 p r2 = vec ld(off2, ptr2);
```

The following also yields the same VSX register value because the effective address is the same. If you truly wanted to load 4 bytes beyond ptr then you loaded the wrong value because (0x401010+4) &0xffffffff = 0x401010.

```
uint8_t* ptr1 = 0x401000;
int off1 = 16;
uint8x16_p r1 = vec_ld(off1, ptr1);
uint8_t* ptr2 = 0x401010;
int off2 = 4;
uint8x16 p r2 = vec_ld(off2, ptr2);
```

The application of effective addresses are discussed more below in Aligned Data References and Unaligned Data References.

Aligned data references

Altivec loads and stores have traditionally been performed using vec_ld and vec_st since the early days of Altivec. vec_ld and vec_st are sensitive to alignment of the effective address.

Altivec does not raise a SIGBUS to indicate a misaligned load or store. Instead, the bottom 4 bits of the sum address+offset are masked-off and then the memory at the effective address is loaded.

You can use the Altivec loads and stores when you *control* buffers and ensure they are 16-byte aligned, like an AES key schedule table. Otherwise just use unaligned loads and stores to avoid trouble.

The C/C++ code to perform a load using vec_ld should look similar to below. Notice the assert to warn you of problems in debug builds.

```
template <class T>
uint32x4_p VecLoad(const T* mem_addr, int offset)
{
#ifndef NDEBUG
    uintptr_t maddr = (uintptr_t)mem_addr;
    uintptr_t mask = ~(uintptr_t)0xf;
```

```
uintptr_t eaddr = (maddr+offset) & mask;
    assert(maddr == eaddr);
#endif

    return (uint32x4_p) vec_ld(offset, mem_addr);
}

The C/C++ code to perform a store using vec_st should look similar to below.

template <class T>
void VecStore(const uint32x4_p val, T* mem_addr, int offset)
{
#ifndef NDEBUG
    uintptr_t maddr = (uintptr_t) mem_addr;
    uintptr_t mask = ~(uintptr_t) 0xf;
    uintptr_t eaddr = (maddr+offset) & mask;
    assert(maddr == eaddr);
#endif

    vec_st((uint8x16_p) val, offset, mem_addr);
}
```

Unaligned data references

POWER7 and VSX introduced loads and stores for 32-bit and 64-bit datatypes that avoid the 16-byte aligned memory requirements. POWER9 introduced loads and stores for 8-bit and 16-bit datatypes. In this context "unaligned" means alignment less than 16-bytes required by Altivec, but alignment still must be natural. While POWER9 allows you to load a byte array, POWER7 and POWER8 limits you to 32-bit and 64-bit arrays. If you have a byte array on POWER7, then it must be at least 32-bit or 64-bit aligned or you have to use the Altivec load.

The preferred builtin functions for 32-bit and 64-bit datatype loads and stores are vec_xl and vec_xst . The builtins are available on all currently supported versions of GCC and XLC. However, older versions of GCC such as those installed on many enterprise Linux distributions do not supply them. For compatibility with these older compilers you may use vec_vsx_ld and vec_vsx_st for GCC.

You should use the POWER7 and VSX loads and stores whenever you *do not control* buffers or their alignments, like a message in a buffer supplied by the user.

The C/C++ code to perform a load using vec_x1 and vec_vsx_1d should look similar to below. The function name has a u added to indicate unaligned.

```
template <class T>
uint32x4_p VecLoadu(const T* mem_addr, int offset)
{
#if defined(__xlc__) || defined(__xlC__)
    return (uint32x4_p)vec_xl(offset, mem_addr);
#else
    return (uint32x4_p)vec_vsx_ld(offset, mem_addr);
```

```
#endif
}
```

The C/C++ code to perform a store using vec_xst and vec_vsx_st should look similar to below.

```
template <class T>
void VecStoreu(const uint32x4_p val, T* mem_addr, int offset)
{
#if defined(__xlc__) || defined(__xlC__)
    vec_xst((uint8x16_p)val, offset, mem_addr);
#else
    vec_vsx_st((uint8x16_p)val, offset, mem_addr);
#endif
}
```

If your code will only be compiled with supported compilers, you may simplify it to use the $vec\ xl$ and $vec\ xst$ variants for both XLC and GCC.

Vector dereferences

The OpenPOWER ELF V2 ABI Specification [https://openpowerfoundation.org/?resource_lib=64-bit-elf-v2-abi-specification-power-architecture], version 1.4, incorrectly states that accessing vectors on Power should preferably be done with vector pointers and the dereference operator*. However, this is only permitted for aligned vector references. Examples in Chapter 6 of the ABI document show use of casting operations that represent undefined behavior according to the C standard. An errata document that corrects the ABI may be found at the OpenPOWER Foundation website [https://openpowerfoundation.org/?resource_lib=openpower-elfv2-errata-elfv2-abi-version-1-4]. Subsequent sections describe the proper way to use loads and stores of aligned and unaligned data.

Vector shifts

Altivec shifts and rotates are performed using *Vector Shift Left Double by Octet Immediate*. The vector shift and rotate builtin is vec_sld and it compiles/assembles to vsldoi. Both shift and rotate operate on a concatenation of two vectors. Bytes are shifted out on the left and shifted in on the right. The instructions need an integral constant in the range 0 - 15, inclusive.

Vector shifts and rotates perform as expected on big-endian machines. Little-endian machines require special handling to produce correct results. The catch is, IBM manuals don't tell you about it [http://www.ibm.com/support/knowledgecenter/SSXVZZ_13.1.4/com.ibm.xl-cpp1314.lelinux.doc/compiler ref/vec sld.html].

The issue is shifts and rotates are endian sensitive [http://stackover-flow.com/q/46341923/608639] and you have to use 16-n integrals and swap vector arguments on little-endian systems. The C++ source code provides the following template function to compensate for the little-endian behavior.

```
template <unsigned int N, class T>
```

```
T VecShiftLeft(const T val1, const T val2)
{
#if __LITTLE_ENDIAN__
    enum {R = (16-N)&0xf};
    return vec_sld(val2, val1, R);
#else
    enum {R = N&0xf};
    return vec_sld(val1, val2, R);
#endif
}
```

A VecRotateLeft would be similar to the code below, if needed. Rotate is a special case of shift where both vector arguments are the same value.

```
template <unsigned int N, class T>
T VecRotateLeft(const T val)
{
#if __LITTLE_ENDIAN_
        enum {R = (16-N)&0xf};
        return vec_sld(val, val, R);
#else
        enum {R = N&0xf};
        return vec_sld(val, val, R);
#endif
}
```

Vector permutes

Vector permutes allow you to rearrange elements in a vector. The values to be permuted can be in any arrangement like 64x2 or 32x4, but the mask is always an octet mask using an 8x16 arrangement.

The Altivec permute is very powerful and it stands out among architectures like ARM, Aarch64 and x86. The instruction allows you to select elements from two source vectors. When an index in the mask is in the range [0,15] then elements from the first vector are selected, and index values in the the range [16,31] select elements from the second vector.

As an example, suppose you have a big-endian byte array like a message to be hashed using SHA-256. SHA operates on 32-bit words so the message needs a shuffle on little-endian systems. The code to perform the permute on a little-endian machine would look like below.

```
uint32x4_p msg = vec_ld(/*load from memory*/);
uint8x16_p mask = {3,2,1,0, 7,6,5,4, 11,10,9,8, 15,14,13,12};
msg = vec perm(msg, msg, mask);
```


The previous example only needed one vector so it used msg twice in the call to vec_perm. The Altivec code is similar to _mm_shuffle_epi8 on Intel machines. An example that interleaves two different vectors is shown below.

```
uint32x4 p a = \{ 0, 0, 0, 0 \}; // All 0 bits
```

```
uint32x4_p b = {-1, -1, -1}; // All 1 bits
uint8x16_p m = {0,1,2,3, 16,17,18,19, 4,5,6,7, 20,21,22,23};
uint32x4 p c = vec perm(a, b, m);
```

After the code above executes the vector c will have the value $\{0, -1, 0, -1\}$.

Below is the image IBM provides for the vec_perm documentation. The IBM example shows $d = vec_perm(a, b, c)$. The light gray blocks in vector d are from the first vector, and dark gray blocks in vector d are from the second vector.

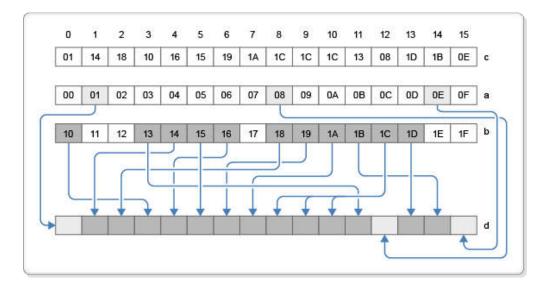

32-bit Altivec

Most PowerPCs, from the early days through POWER7, provide an Altivec unit that is only capable of packed 32-bit operations. POWER7 and VSX added __vector unsigned long long, and POWER8 added 64-bit operations like add and subtract, but none of them are available on older Altivec. Some algorithms you implement may need 64-bit datatypes on the older units. The algorithms include Salsa, ChaCha, Simon-128 and Speck-128. In this case you can implement your own VecAdd64 and VecSub64 using 32-bit datatypes.

The code below provides 64-bit add using 32-bit vectors.

```
inline uint32x4_p
VecAdd64(const uint32x4_p vec1, const uint32x4_p vec2)
{
    // 64-bit elements available at POWER7 with VSX,
    // but addudm requires POWER8
#if defined(_ARCH_PWR8)
    return (uint32x4_p)vec_add((uint64x2_p)vec1, (uint64x2_p)vec2);
#else
    // The carry mask selects carrys for elements 1 and 3 and sets
    // remaining elements to 0. The results is then shifted so the
    // carried values are added to elements 0 and 2.
#if defined(_BIG_ENDIAN__)
```

```
const uint32x4_p zero = {0, 0, 0, 0};
  const uint32x4_p mask = {0, 1, 0, 1};
#else
    const uint32x4_p zero = {0, 0, 0, 0};
    const uint32x4_p mask = {1, 0, 1, 0};
#endif

    uint32x4_p cy = vec_addc(vec1, vec2);
    uint32x4_p res = vec_add(vec1, vec2);
    cy = vec_and(mask, cy);
    cy = vec_sld(cy, zero, 4);
    return vec_add(res, cy);
#endif
}
```

The code below provides 64-bit subtract using 32-bit vectors. The code is slightly more complex than VecAdd64 because the borrow is generated as a compliment.

```
inline uint32x4 p
VecSub64(const uint32x4 p vec1, const uint32x4 p vec2)
#if defined( ARCH PWR8)
    // 64-bit elements available at POWER7 with VSX,
    // but subudm requires POWER8
    return (uint32x4 p) vec sub((uint64x2 p) vec1, (uint64x2 p) vec2);
#else
    // The borrow mask selects borrows for elements 1 and 3 and sets
    // remaining elements to 0. The results is then shifted so the
    // borrowed values are subtracted from elements 0 and 2.
#if defined( BIG ENDIAN )
    const uint32x4 p zero = \{0, 0, 0, 0\};
    const uint32x4 p mask = \{0, 1, 0, 1\};
#else
    const uint32x4 p zero = \{0, 0, 0, 0\};
    const uint32x4 p mask = \{1, 0, 1, 0\};
#endif
    uint32x4 p bw = vec subc(vec1, vec2);
    uint32x4 p res = vec sub(vec1, vec2);
   bw = vec andc(mask, bw);
   bw = vec sld(bw, zero, 4);
    return vec sub(res, bw);
#endif
}
```

While VecAdd64 and VecSub64 look inefficient they are profitable for some algorithms. For example, on a PowerMac G5, Simon-128 and Speck-128 run about 6x faster in the 32-bit Altivec unit compared to a C/C++ implementation in the integer unit.

Chapter 3. Runtime features

Runtime feature detections allows code to switch to a faster implementation when the hard-ware permits. This chapter shows you how to determine POWER8 cryptography availability at runtime on AIX and Linux PowerPC platforms.

Strategy

The strategy to detect availability of in-core cryptography on POWER processors is check for ISA 2.07 or above. Cryptography is an ISA 2.07 and POWER8 requirement, and the cryptography support cannot be disgorged.

AIX systems should check for POWER8. AIX does not provide separate bits for AES, SHA and polynomial multiplies. The ISA level signals the availability of the cryptography on AIX. Linux supplies separate bits for ISA 2.07 and vector cryptography, but you only need to check the ISA level.

There is no need to perform SIGILL probes on AIX or newer Linux systems. If you are using older versions of Glibc or Linux kernel then you may have to fallback to SIGILL probes. Older versions include Glibc 2.24 and Linux kernel 4.08 (and earlier).

AIX features

The AIX system header <systemcfg.h> defines the _system_configuration structure that identifies system characteristics. The header also provides macros to access various fields of the structure. Runtime code to perform the POWER8 cryptography check should look similar to below.

```
#include <sys/systemcfg.h>
#ifndef __power_7_andup
# define __power_7_andup() 0
#endif

#ifndef __power_8_andup
# define __power_8_andup() 0
#endif

bool HasPower7()
{
    if (__power_7_andup() != 0)
        return true;
    return false;
}

bool HasPower8()
{
```

```
if (__power_8_andup() != 0)
          return true;
return false;
}
bool HasCrypto()
{
    if (__power_8_andup() != 0)
         return true;
return false;
}
```

You should not use the __power_vsx() macro to detect in-core cryptography availability. Though cryptography is implemented in the VSX unit, the VSX unit is available in POWER7 and above.

OpenSSL uses the following on AIX to test for cryptography availability in crypto/ppccap.c [https://github.com/openssl/openssl/blob/master/crypto/ppccap.c]. The project effectively reimplements the $power_8$ and $power_8$.

Linux features

Some versions of Glibc and the kernel provide ELF auxiliary vectors with system information. AT_HWCAP2 will show the vcrypto flag when in-core cryptography is available. This is guaranteed for the following little-endian Linux distributions:

- Ubuntu 14.04 and later
- SLES 12 and later
- RHEL 7 and later

Below is a screen capture using the loader's diagnostics to print the auxiliary vector for the /bin/true program on gcc112.

```
$ LD SHOW AUXV=1 /bin/true
AT DCACHEBSIZE: 0x80
AT ICACHEBSIZE: 0x80
AT UCACHEBSIZE: 0x0
AT SYSINFO EHDR: 0x3fff877c0000
                 ppcle true le archpmu vsx arch 2 06 dfp ic snoop
AT HWCAP:
                 smt mmu fpu altivec ppc64 ppc32
AT PAGESZ:
                 65536
AT CLKTCK:
                 100
AT PHDR:
                 0x10000040
AT PHENT:
                 56
AT PHNUM:
```

```
AT BASE:
                0x3fff877e0000
AT FLAGS:
                 0 \times 0
AT ENTRY:
                0x1000145c
AT UID:
                10455
AT EUID:
                10455
AT GID:
                10455
AT EGID:
                10455
AT SECURE:
               0x3fffeaeaa872
AT RANDOM:
AT HWCAP2:
               vcrypto tar isel ebb dscr htm arch 2 07
AT EXECFN:
                /bin/true
                power8
AT PLATFORM:
AT BASE PLATFORM: power8
```

Linux systems with Glibc version 2.16 can use <code>getauxval</code> to determine CPU features. However, defines like <code>PPC_FEATURE2_ARCH_2_07</code> and <code>PPC_FEATURE2_VEC_CRYPTO</code> require Glibc 2.24. Runtime code to perform the check should look similar to below. The defines below were taken from the Linux kernel's cputable.h [https://git.kernel.org/pub/scm/linux/kernel/git/torvalds/linux.git/tree/arch/powerpc/include/asm/cputable.h].

```
#ifndef AT HWCAP
# define AT HWCAP 16
#endif
#ifndef AT HWCAP2
# define AT HWCAP2 26
#endif
#ifndef PPC FEATURE ARCH 2 06
# define PPC FEATURE ARCH 2 06
                                 0x00000100
#endif
#ifndef PPC FEATURE2 ARCH 2 07
# define PPC FEATURE2 ARCH 2 07
                                  0x80000000
#endif
#ifndef PPC FEATURE2 VEC CRYPTO
# define PPC FEATURE2 VEC CRYPTO 0x02000000
#endif
bool HasPower7()
    if (getauxval(AT HWCAP) & PPC FEATURE ARCH 2 06 != 0)
        return true;
    return false;
}
bool HasPower8()
{
    if (getauxval(AT HWCAP2) & PPC FEATURE2 ARCH 2 07 != 0)
       return true;
    return false;
}
```

```
bool HasCrypto()
{
    if (getauxval(AT_HWCAP2) & PPC_FEATURE2_VEC_CRYPTO != 0)
        return true;
    return false;
}
```

L1 Data Cache

The L1 data cache line size is an important security parameter that can be used to avoid leaking information through timing attacks. IBM POWER System S822, like gcc112 and gcc119, have a 128-byte L1 data cache line size.

gcc119 runs AIX and L1 data cache line size can be queried as shown below.

```
#include <sys/systemcfg.h>
int cacheLineSize = getsystemcfg(SC_L1C_DLS);
if (cacheLineSize) <= 0)
    cacheLineSize = DEFAULT_L1_CACHE_LINE_SIZE;</pre>
```

gcc112 runs Linux and L1 data cache line size can be queried as shown below. However, the call requires Glibc 2.26 and Linux kernel 4.10.

```
#include <unistd.h>
int cacheLineSize = sysconf(_SC_LEVEL1_DCACHE_LINESIZE);
if (cacheLineSize) <= 0)
    cacheLineSize = DEFAULT_L1_CACHE_LINE_SIZE;</pre>
```

It is important to check the return value from sysconf on Linux. CentOS 7.4 on gcc112 returns 0 for the query because Glibc is version 2.17 and the Linux kernel is version 3.10. In addition to -1, you should consider a return value of 0 as failure.

You should have a fallback strategy that includes a sane default set for DE-FAULT_L1_CACHE_LINE_SIZE because Glibc does not return a failure. On 32-bit systems you can usually use 32-bytes as a default, and on 64-bit systems you can usually use 64-bytes as a default.

Returning success with a value of 0 for an unimplemented <code>sysconf</code> parameter appears to be a Glibc bug. Also see sysconf and <code>_SC_LEVEL1_DCACHE_LINESIZE</code> returns 0? [https://lists.centos.org/pipermail/centos/2017-September/166236.html] on the CentOS mailing list and Issue 14599: <code>sysconf(_SC_LEVEL1_DCACHE_LINESIZE)</code> returns 0 instead of 128 [https://bugs.centos.org/view.php?id=14599] in the CentOS issue tracker.

Chapter 4. Advanced Encryption Standard

AES is the Advanced Encryption Standard. AES is specified in FIPS 197, Advanced Encryption Standard (AES) [https://nvlpubs.nist.gov/nistpubs/fips/nist.fips.197.pdf]. You should read the standard if you are not familiar with the block cipher.

GCC and XL C/C++ use different data types and intrinsics to perform AES. GCC uses a 64x2 arrangement and IBM XL C/C++ uses a 8x16 arrangement. GCC uses __builtin_cryptoto_vcipher, __builtin_crypto_vcipherlast, __builtin_crypto_vncipher and __builtin_crypto_vncipherlast intrinsics. IBM XL C/C++ uses __vcipher, __vcipherlast, __vncipher and __vncipherlast intrinsics.

POWER8 offers instructions to perform encryption and decryption only. The ISA does not supply instructions that assist in key generation, like Intel's AESKEYGENASSIST.

Finally the code below is available online at AES Intrinsics [https://github.com/noloader/AES-Intrinsics]. The GitHub provides accelerated AES for Intel, ARMv8 and POWER8.

Strategy

The strategy to perform AES encryption and decryption is straight forward. First the subkey or round key table is created based on the user key. The round keys are stored in big-endian format so a swap is avoided when loading a round key. Second, the message is loaded into the AES state array and an endian swap is performed as required. Third the the AES encryption or decryption round function is applied to the state array the required number of times. Each application of the round function is accompanied by a loading of a subkey. Finally the encrypted or decrypted message is stored after performing an endian swap as needed.

Endianness

The AES hardware operates in big-endian mode. On little-endian systems like gcc112 you have to convert from little-endian to big-endian during loads and stores. The code to perform the conversion is shown below. Also recall from Unaligned Data References POWER7 provides unaligned loads and stores so POWER8 has them available.

```
uint8x16_p VecReverse8x16(const uint8x16_p src)
{
    uint8x16_p mask = {15,14,13,12, 11,10,9,8, 7,6,5,4, 3,2,1,0};
    return vec_perm(src, src, mask);
}
uint64x2_p VecReverse64x2(const uint64x2_p src)
{
    uint8x16_p mask = {15,14,13,12, 11,10,9,8, 7,6,5,4, 3,2,1,0};
    uint8x16_p val = (uint8x16_p) src;
    return (uint64x2_p) vec_perm(val, val, mask);
```

```
}
uint8x16 p VecLoad8x16(const uint8 t src[16])
#if defined( xlc ) || defined( xlC )
   return vec xl be(0, (uint8 t*)src);
#else
# if LITTLE ENDIAN
   return VecReverse8x16(vec vsx ld(0, src));
# else
   return vec vsx ld(0, src);
# endif
#endif
void VecStore8x16(const uint8x16 p src, uint8 t dest[16])
#if defined( xlc ) || defined( xlC )
   vec xst be(src, 0, (uint8 t*)dest);
#else
# if LITTLE ENDIAN
   vec vsx st(VecReverse8x16(src), 0, dest);
# else
   vec vsx st(src, 0, dest);
# endif
#endif
uint64x2 p VecLoad64x2(const uint8 t src[16])
#if defined( xlc ) || defined( xlC )
   return (uint64x2 p) vec xl be(0, (uint8 t*)src);
# if LITTLE ENDIAN
   return (uint64x2 p) VecReverse8x16 (vec vsx ld(0, src));
# else
   return (uint64x2 p) vec vsx ld(0, src);
# endif
#endif
}
void VecStore64x2(const uint64x2 p src, uint8_t dest[16])
#if defined( xlc ) || defined( xlC )
   vec xst be((uint8x16 p)src, 0, (uint8 t*)dest);
#else
# if LITTLE ENDIAN
   vec vsx st(VecReverse8x16((uint8x16 p)src), 0, dest);
# else
```

```
vec_vsx_st((uint8x16_p)src, 0, dest);
# endif
#endif
}
```

Functions

GCC and IBM XL C/C++ uses different intrinsics and different datatypes for encryption and decryption. GCC uses a 64x2 vector arrangement while IBM XL CC++ uses a 8x16 arrangement. An intrinsics based implementation should wrap two functions for encryption and two functions for decryption.

For the encryption operation POWER8 provides a standard round function and a function to encrypt the last round. Source code should look similar to below.

```
template <class T>
T VecEncrypt(const T state, const T rkey)
#if defined( xlc ) || defined( xlC )
    uint8x16 p s = (uint8x16 p) state;
    uint8x16 p k = (uint8x16 p) rkey;
    return (T) vcipher(s, k);
#else
    uint64x2 p s = (uint64x2 p) state;
    uint64x2 p k = (uint64x2 p)rkey;
    return (T) builtin crypto vcipher(s, k);
#endif
template <class T>
T VecEncryptLast(const T state, const T rkey)
{
#if defined( xlc ) || defined( xlC )
    uint8x16 p s = (uint8x16 p) state;
    uint8x16 p k = (uint8x16 p)rkey;
    return (T) vcipherlast(s, k);
#else
    uint64x2 p s = (uint64x2 p) state;
    uint64x2 p k = (uint64x2 p) rkey;
    return (T) builtin crypto vcipherlast(s, k);
#endif
}
And the corresponding decryption functions are shown below.
template <class T>
T VecDecrypt(const T state, const T rkey)
```

#if defined(__xlc__) || defined(__xlC__)

```
uint8x16 p s = (uint8x16 p) state;
    uint8x16 p k = (uint8x16 p) rkey;
    return (T) vncipher(s, k);
#else
    uint64x2 p s = (uint64x2 p) state;
    uint64x2 p k = (uint64x2 p) rkey;
    return (T) builtin crypto vncipher(s, k);
#endif
}
template <class T>
T VecDecryptLast(const T state, const T rkey)
#if defined( xlc ) || defined( xlC )
    uint8x16 p s = (uint8x16 p) state;
    uint8x16 p k = (uint8x16 p) rkey;
    return (T) vncipherlast(s, k);
#else
    uint64x2_p s = (uint64x2 p)state;
    uint64x2 p k = (uint64x2 p) rkey;
    return (T) builtin crypto vncipherlast(s, k);
#endif
}
```

Golden key

FIPS 197 Appendix B provides a user key expanded into round keys. We refer to it as the "golden key" and it allows us to independently test round key derivation, encryption and decryption. The sections AES Encryption and AES Decryption use the golden key to simplify the discussions.

Appendix B provides two key parameters. The first is the AES key supplied by the user. The second is the expanded subkey or round key table. Below is the user key supplied by Appendix B

```
const uint8_t key[16] = {
     0x32, 0x43, 0xf6, 0xa8, 0x88, 0x5a, 0x30, 0x8d,
     0x31, 0x31, 0x98, 0xa2, 0xe0, 0x37, 0x07, 0x34
};
```

The round keys for AES-128 are as follows. Since we control the round key buffer we can make it aligned. The aligned loads will save a tiny amount of time during each load of a round key.

```
{0x3D, 0x80, 0x47, 0x7D, 0x47, 0x16, 0xFE, 0x3E,
        0x1E, 0x23, 0x7E, 0x44, 0x6D, 0x7A, 0x88, 0x3B},
     {0xEF, 0x44, 0xA5, 0x41, 0xA8, 0x52, 0x5B, 0x7F,
        0xB6, 0x71, 0x25, 0x3B, 0xDB, 0x0B, 0xAD, 0x00},
     {0xD4, 0xD1, 0xC6, 0xF8, 0x7C, 0x83, 0x9D, 0x87,
        0xCA, 0xF2, 0xB8, 0xBC, 0x11, 0xF9, 0x15, 0xBC},
     {0x6D, 0x88, 0xA3, 0x7A, 0x11, 0x0B, 0x3E, 0xFD,
        0xDB, 0xF9, 0x86, 0x41, 0xCA, 0x00, 0x93, 0xFD},
     {0x4E, 0x54, 0xF7, 0x0E, 0x5F, 0x5F, 0xC9, 0xF3,
        0x84, 0xA6, 0x4F, 0xB2, 0x4E, 0xA6, 0xDC, 0x4F},
     {0xEA, 0xD2, 0x73, 0x21, 0xB5, 0x8D, 0xBA, 0xD2,
        0x31, 0x2B, 0xF5, 0x60, 0x7F, 0x8D, 0x29, 0x2F},
     {0xAC, 0x77, 0x66, 0xF3, 0x19, 0xFA, 0xDC, 0x21,
        0x28, 0xD1, 0x29, 0x41, 0x57, 0x5c, 0x00, 0x6E},
     {0xD0, 0x14, 0xF9, 0xA8, 0xC9, 0xEE, 0x25, 0x89,
        0xE1, 0x3F, 0x0c, 0xC8, 0xB6, 0x63, 0x0C, 0xA6}
};
```

Key schedule

TODO. We don't have optimized code for key scheduling. Use Paulo Barreto's code to generate the key table in C/C++. It is available on the internet.

A brief discussion of an POWER8 optimized key schedule can be found at POWER8 incore cryptography [https://www.ibm.com/developerworks/library/se-power8-in-core-cryptography/index.html].

Encryption

AES encryption consists of three steps. First, the user's message is loaded into a state buffer. On little-endian machines the byte order will be reversed. Second, a round key is loaded and the AES round function is applied. The second part is repeated a required number of times. For example, AES with 128-bit key applies the round function 10 times. The third part stores the result of encrypting the state, which is the encrypted block. On little-endian machines the byte order will be reversed.

Part 1. Load the user message into the state vector. VecLoad64x2 swaps endianness as required. The 64x2 arrangement tells this is a GCC code path.

```
uint64x2_p s = VecLoad64x2(input);
uint64x2_p k = VecLoad64x2(key);
s = VecXor(s, k);
```

Part 2. Load a subkey and encrypt the state buffer. The round key does not need an endian swap. Lather, rinse and repeat the required number of times.

In the code below remember that subkeys is subkeys [10] [16]. The expression subkeys [i] is a byte pointer and indexes into the i-th 16-byte round key.

```
k = VecLoad64x2(subkeys[0]);
s = VecEncrypt(s, k);

k = VecLoad64x2(subkeys[1]);
s = VecEncrypt(s, k);

k = VecLoad64x2(subkeys[2]);
s = VecEncrypt(s, k);

...

k = VecLoad64x2(subkeys[7]);
s = VecEncrypt(s, k);

k = VecLoad64x2(subkeys[8]);
s = VecEncrypt(s, k);

k = VecLoad64x2(subkeys[8]);
s = VecEncrypt(s, k);
```

Part 3. Store the new state which is the encrypted block. VecStore64x2 swaps endianness as required.

```
VecStore64x2(s, output);
```

The AES-128 code shown above demonstrates a GCC code path using the 64x2 arrangement. Below is the IBM XL C/C++ code path using an 8x16 arrangement. In the code below remember that subkeys is subkeys [10] [16]. The expression subkeys [i] is a byte pointer and indexes into the i-th 16-byte round key.

```
uint8x16_p s = VecLoad8x16(input);
uint8x16_p k = VecLoad8x16(key);
s = VecXor(s, k);

k = VecLoad8x16(subkeys[0]);
s = VecEncrypt(s, k);

k = VecLoad8x16(subkeys[1]);
s = VecEncrypt(s, k);

k = VecLoad8x16(subkeys[2]);
s = VecEncrypt(s, k);

...

k = VecLoad8x16(subkeys[7]);
s = VecEncrypt(s, k);

k = VecLoad8x16(subkeys[7]);
s = VecEncrypt(s, k);
```

```
k = VecLoad8x16(subkeys[9]);
s = VecEncryptLast(s, k);
VecStore8x16(s, output);
```

Decryption

AES decryption is the reverse operation of AES encryption. There are three parts as with AES decryption. First, the encrypted message is loaded into a state buffer. The message is endian swapped as required. The second part loads a subkey and applies the AES inverse round function. The second part is repeated a required number of times. For example, AES with 128-bit key applies the inverse round function 10 times. The third part stores the result of decrypting the state, which is the decrypted block. The decrypted message is endian swapped as required.

AES decryption has two minor differences from the encryption algorithm. First the round keys are iterated in reverse order. Second, the user or master key is used last instead of first.

The code below demonstrates AES-128 using the GCC code path. GCC uses the 64x2 arrangement. In the code below remember that <code>subkeys</code> is <code>subkeys[10][16]</code>. The expression <code>subkeys[i]</code> is a byte pointer and indexes into the i-th 16-byte round key.

```
uint64x2 p s = VecLoad64x2(input);
uint64x2 p k = VecLoad64x2(subkeys[9]);
s = VecXor(s, k);
k = VecLoad64x2(subkeys[8]);
s = VecDecrypt(s, k);
k = VecLoad64x2(subkeys[7]);
s = VecDecrypt(s, k);
k = VecLoad64x2(subkeys[6]);
s = VecDecrypt(s, k);
k = VecLoad64x2(subkeys[1]);
s = VecDecrypt(s, k);
k = VecLoad64x2(subkeys[0]);
s = VecDecrypt(s, k);
k = VecLoad64x2(key);
s = VecDecryptLast(s, k);
VecStore8x16(s, output);
```

As with AES encryption there is a different code path for IBM XL C/C++ using the 8x16 datatypes. The code below shows XL C/C++ decryption using the 8x16 datatype. In the code below remember that subkeys is subkeys [10] [16]. The expression subkeys [i] is a byte pointer and indexes into the i-th 16-byte round key.

```
uint8x16 p s = VecLoad8x16(input);
uint8x16 p k = VecLoad8x16(subkeys[9]);
s = VecXor(s, k);
k = VecLoad8x16(subkeys[8]);
s = VecDecrypt(s, k);
k = VecLoad8x16(subkeys[7]);
s = VecDecrypt(s, k);
k = VecLoad8x16(subkeys[6]);
s = VecDecrypt(s, k);
k = VecLoad8x16(subkeys[1]);
s = VecDecrypt(s, k);
k = VecLoad8x16(subkeys[0]);
s = VecDecrypt(s, k);
k = VecLoad8x16(key);
s = VecDecryptLast(s, k);
VecStore8x16(s, output);
```

Performance

The code in AES Encryption and AES Decryption provides the basic AES algorithms. They will perform well when compared to C/C++ but there is room for improvement. You can improve the code to run closer to 1 to 2 cycle-per-byte (cpb) by processing multiple blocks at a time.

Experimentation shows 6 or 8 blocks at a time is a good place to be. Crypto++ processes 6 blocks at a time while Botan processes 8 blocks at a time. The Linux kernel processes 12 blocks at a time for some POWER8 algorithms.

The code below processes 16*8 or 128-bytes of data at a time using the GCC code path. The IBM code path would be similar.

In the code below remember that subkeys is subkeys[10][16]. The expression subkeys[i] is a byte pointer and indexes into the i-th 16-byte round key.

```
uint64x2 p k = VecLoad64x2 (key);
```

```
uint64x2 p s0 = VecLoad64x2(input+0);
uint64x2 p s1 = VecLoad64x2(input+16);
uint64x2 p s2 = VecLoad64x2(input+32);
uint64x2 p s3 = VecLoad64x2(input+48);
uint64x2 p s4 = VecLoad64x2(input+64);
uint64x2 p s5 = VecLoad64x2(input+80);
uint64x2 p s6 = VecLoad64x2(input+96);
uint64x2 p s7 = VecLoad64x2(input+112);
s0 = VecXor(s0, k);
s1 = VecXor(s1, k);
s2 = VecXor(s2, k);
s3 = VecXor(s3, k);
s4 = VecXor(s4, k);
s5 = VecXor(s5, k);
s6 = VecXor(s6, k);
s7 = VecXor(s7, k);
for (size t i=0; i<rounds-1; ++i)</pre>
    k = VecLoad64x2(subkeys[i]);
    s0 = VecEncrypt(s0, k);
    s1 = VecEncrypt(s1, k);
    s2 = VecEncrypt(s2, k);
    s3 = VecEncrypt(s3, k);
    s4 = VecEncrypt(s4, k);
    s5 = VecEncrypt(s5, k);
    s6 = VecEncrypt(s6, k);
    s7 = VecEncrypt(s7, k);
}
k = VecLoad64x2(subkeys[rounds-1]);
s0 = VecEncryptLast(s0, k);
s1 = VecEncryptLast(s1, k);
s2 = VecEncryptLast(s2, k);
s3 = VecEncryptLast(s3, k);
s4 = VecEncryptLast(s4, k);
s5 = VecEncryptLast(s5, k);
s6 = VecEncryptLast(s6, k);
s7 = VecEncryptLast(s7, k);
VecStore64x2(s0, output+0);
VecStore64x2(s1, output+16);
VecStore64x2(s2, output+32);
VecStore64x2(s3, output+48);
VecStore64x2(s4, output+64);
VecStore64x2(s5, output+80);
VecStore64x2(s6, output+96);
VecStore64x2(s7, output+112);
```

Chapter 5. Secure Hash Standard

SHA is the Secure Hash Standard. SHA is specified in FIPS 180-4, Secure Hash Standard (SHS) [https://nvlpubs.nist.gov/nistpubs/fips/nist.fips.180-4.pdf]. You should read the standard if you are not familiar with the hash family.

The code below is available online at SHA Intrinsics [https://github.com/noloader/SHA-Intrinsics]. The GitHub provides accelerated SHA for Intel, ARMv8 and POWER8.

Strategy

SHA provides a lot of freedom to an implementation. You can approach your SHA implementation in several ways, but most of them will result in an under-performing SHA. This section provides one of the strategies for a better performing implementation.

The first design element is to perform everything in vector registers. The only integer operations should be reading 2 longs or 4 integers from memory during a load, and writing 2 longs or 4 integers after the round during a store.

Second, when you need an integer for a calculation you will shift it out from a vector register to another vector register using vec_sld. Most of the time you only care about element 0 in a vector register, and the remainder of elements are "don't care" elements.

Third, don't maintain a full W[64] or W[80] table. Use X[16] instead, and transform each element in-place using a rolling strategy.

Fourth, the eight working variables $\{A, B, C, D, E, F, G, H\}$ each get their own vector register. The one you care about is located at element 0, the remainder of the elements in the vector are "don't care" elements.

It does not matter if you rotate the working variables $\{A, B, C, D, E, F, G, H\}$ in the caller or in the callee. Both designs have nearly the same performance characteristics.

Since you are operating on X[16] in a rolling fashion instead of W[64] or W[80] the main body of your compression function will look similar to below.

```
// SHA-256 partial compression function
uint32x4_p X[16];
...

for (i = 16; i < 64; i++)
{
   uint32x4_p s0, s1, T0, T1;

   s0 = sigma0(X[(i + 1) & 0x0f]);
   s1 = sigma1(X[(i + 14) & 0x0f]);</pre>
```

```
T1 = (X[i & 0xf] += s0 + s1 + X[(i + 9) & 0xf]);

T1 += h + Sigma1(e) + Ch(e, f, g) + KEY[i];

T2 = Sigma0(a) + Maj(a, b, c);

...
```

Ch function

The SHA Ch function is implemented in POWER systems using the <code>vsel</code> instruction or the <code>vec_sel</code> builtin. The implementation for the 32x4 arrangement is shown below. The code is the same for the 64x2 arrangement, but the function takes <code>uint64x2_p</code> arguments. The important piece of information is <code>x</code> used as the selector.

```
uint32x4_p
VecCh(uint32x4_p x, uint32x4_p y, uint32x4_p z)
{
    return vec_sel(z, y, x);
}
```

Maj function

The SHA Maj function is implemented in POWER systems using the vsel instruction or the vec_sel builtin. The implementation for the 32x4 arrangement is shown below. The code is the same for the 64x2 arrangement, but the function takes uint64x2_p arguments. The important piece of information is x^y used as the selector.

```
uint32x4_p
VecCh(uint32x4_p x, uint32x4_p y, uint32x4_p z)
{
    return vec_sel(y, z, vec_xor(x, y));
}
```

Sigma functions

POWER8 provides the vshasigmaw and vshasigmad instructions to accelerate SHA calculations for 32-bit and 64-bit words, respectively. The instructions take two integer arguments and the constants are used to select among Sigma0, Sigma1, sigma0 and sigma1.

The builtin GCC functions for the instructions are __builtin_crypto_vshasigmaw and __builtin_crypto_vshasigmad. The XLC functions for the instructions are __vshasigmaw and __vshasigmad. The C/C++ wrapper for the SHA-256 functions should look similar to below.

```
uint32x4_p Vec_sigma0(const uint32x4_p val)
{
#if defined(__xlc__) || defined(__xlc__)
    return __vshasigmaw(val, 0, 0);
```

```
#else
   return builtin crypto vshasigmaw(val, 0, 0);
#endif
uint32x4 p Vec sigma1(const uint32x4 p val)
#if defined( xlc ) || defined( xlC )
   return vshasigmaw(val, 0, 0xf);
#else
   return builtin crypto vshasigmaw(val, 0, 0xf);
#endif
}
uint32x4 p VecSigma0(const uint32x4 p val)
#if defined( xlc ) || defined( xlC )
   return vshasigmaw(val, 1, 0);
#else
   return builtin crypto vshasigmaw(val, 1, 0);
#endif
uint32x4 p VecSigma1(const uint32x4 p val)
#if defined( xlc ) || defined( xlC )
   return vshasigmaw(val, 1, 0xf);
#else
   return builtin crypto vshasigmaw(val, 1, 0xf);
#endif
}
```

SHA-256

The SHA-256 implementation has four parts. The first part is loads the existing state and creates working variables $\{A, B, C, D, E, F, G, H\}$. The second part loads the message and performs the first 16 rounds. The third part performs the remaining rounds. The final part stores the new state.

Part 1. Load the existing state and create working variables {A,B,C,D,E,F,G,H}.

```
uint32x4_p abcd = VecLoad32x4u(state+0, 0);
uint32x4_p efgh = VecLoad32x4u(state+4, 0);
enum {A=0,B=1,C,D,E,F,G,H};
uint32x4_p X[16], S[8];

S[A] = abcd; S[E] = efgh;
S[B] = VecShiftLeft<4>(S[A]);
```

```
S[F] = VecShiftLeft<4>(S[E]);
S[C] = VecShiftLeft<4>(S[B]);
S[G] = VecShiftLeft<4>(S[F]);
S[D] = VecShiftLeft<4>(S[C]);
S[H] = VecShiftLeft<4>(S[G]);
```

Part 2. Load the message and perform the first 16 rounds.

```
const uint32 t* k = reinterpret cast<const uint32 t*>(KEY256);
const uint32 t* m = reinterpret cast<const uint32 t*>(data);
uint32x4 p vm, vk;
unsigned int i, offset=0;
vk = VecLoad32x4(k, offset);
vm = VecLoadMsg32x4(m, offset);
SHA256 ROUND1<0>(X, S, vk, vm);
SHA256 ROUND1<1>(X,S, VecShiftLeft<4>(vk), VecShiftLeft<4>(vm));
SHA256 ROUND1<2>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
SHA256 ROUND1<3>(X,S, VecShiftLeft<12>(vk), VecShiftLeft<12>(vm));
offset+=16;
vk = VecLoad32x4(k, offset);
vm = VecLoadMsq32x4(m, offset);
SHA256 ROUND1<4>(X, S, Vk, Vm);
SHA256 ROUND1<5>(X,S, VecShiftLeft<4>(vk), VecShiftLeft<4>(vm));
SHA256 ROUND1<6>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
SHA256 ROUND1<7>(X,S, VecShiftLeft<12>(vk), VecShiftLeft<12>(vm));
offset+=16;
vk = VecLoad32x4(k, offset);
vm = VecLoadMsq32x4(m, offset);
SHA256 ROUND1<8>(X, S, vk, vm);
SHA256 ROUND1<9>(X,S, VecShiftLeft<4>(vk), VecShiftLeft<4>(vm));
SHA256 ROUND1<10>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
SHA256 ROUND1<11>(X,S, VecShiftLeft<12>(vk), VecShiftLeft<12>(vm));
offset+=16;
vk = VecLoad32x4(k, offset);
vm = VecLoadMsg32x4(m, offset);
SHA256 ROUND1<12>(X,S,vk,vm);
SHA256 ROUND1<13>(X,S, VecShiftLeft<4>(vk), VecShiftLeft<4>(vm));
SHA256 ROUND1<14>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
SHA256 ROUND1<15>(X,S, VecShiftLeft<12>(vk), VecShiftLeft<12>(vm));
offset+=16;
```

Part 3. Perform the remaining rounds.

```
for (i=16; i<64; i+=16) {
```

vk = VecLoad32x4(k, offset);

```
SHA256 ROUND2<0>(X, S, vk);
    SHA256 ROUND2<1>(X,S, VecShiftLeft<4>(vk));
    SHA256 ROUND2<2>(X,S, VecShiftLeft<8>(vk));
    SHA256 ROUND2<3>(X,S, VecShiftLeft<12>(vk));
    offset+=16;
    vk = VecLoad32x4(k, offset);
    SHA256 ROUND2<4>(X, S, vk);
    SHA256 ROUND2<5>(X,S, VecShiftLeft<4>(vk));
    SHA256 ROUND2<6>(X,S, VecShiftLeft<8>(vk));
    SHA256 ROUND2<7>(X,S, VecShiftLeft<12>(vk));
    offset+=16;
    vk = VecLoad32x4(k, offset);
    SHA256 ROUND2<8>(X, S, vk);
    SHA256 ROUND2<9>(X,S, VecShiftLeft<4>(vk));
    SHA256 ROUND2<10>(X,S, VecShiftLeft<8>(vk));
    SHA256 ROUND2<11>(X,S, VecShiftLeft<12>(vk));
    offset+=16;
    vk = VecLoad32x4(k, offset);
    SHA256 ROUND2<12>(X,S, vk);
    SHA256 ROUND2<13>(X,S, VecShiftLeft<4>(vk));
    SHA256 ROUND2<14>(X,S, VecShiftLeft<8>(vk));
    SHA256 ROUND2<15>(X,S, VecShiftLeft<12>(vk));
    offset+=16;
}
Part 4. Repack and store the new state.
abcd += VecPack(S[A],S[B],S[C],S[D]);
efgh += VecPack(S[E],S[F],S[G],S[H]);
VecStore32x4u(abcd, state+0, 0);
VecStore32x4u(efgh, state+4, 0);
VecLoadMsg32x4. Perform an endian-aware load of a user message into a word.
template <class T>
uint32x4 p VecLoadMsg32x4(const T* data, int offset)
#if LITTLE ENDIAN
    uint8x16_p mask = {3,2,1,0, 7,6,5,4, 11,10,9,8, 15,14,13,12};
    uint32x4 p r = VecLoad32x4u(data, offset);
    return (uint32x4 p)vec perm(r, r, mask);
    return VecLoad32x4u(data, offset);
#endif
```

SHA256_ROUND1. Mix state with a round key and user message.

```
template <unsigned int R>
void SHA256 ROUND1(uint32x4 p X[16], uint32x4 p S[8],
                   const uint32x4 p K, const uint32x4 p M)
{
    uint32x4 p T1, T2;
   X[R] = M;
    T1 = S[H] + VecSigmal(S[E]);
    T1 += VecCh(S[E], S[F], S[G]) + K + M;
    T2 = VecSigma0(S[A]) + VecMaj(S[A], S[B], S[C]);
    S[H] = S[G]; S[G] = S[F]; S[F] = S[E];
    S[E] = S[D] + T1;
    S[D] = S[C]; S[C] = S[B]; S[B] = S[A];
    S[A] = T1 + T2;
}
SHA256_ROUND2. Mix state with a round key.
template <unsigned int R>
void SHA256 ROUND2(uint32x4 p X[16], uint32x4 p S[8],
                   const uint32x4 p K)
{
    // Indexes into the X[] array
    enum {IDX0 = (R+0) \& 0xf, IDX1 = (R+1) \& 0xf,
          IDX9 = (R+9) \& 0xf, IDX14 = (R+14) \& 0xf;
    const uint32x4_p s0 = Vec sigma0(X[IDX1]);
    const uint32x4 p s1 = Vec sigma1(X[IDX14]);
    uint32x4 p T1 = (X[IDX0] += s0 + s1 + X[IDX9]);
    T1 += S[H] + VecSigmal(S[E]) + VecCh(S[E],S[F],S[G]) + K;
    uint32x4 p T2 = VecSigma0(S[A]) + VecMaj(S[A],S[B],S[C]);
    S[H] = S[G]; S[G] = S[F]; S[F] = S[E];
    S[E] = S[D] + T1;
    S[D] = S[C]; S[C] = S[B]; S[B] = S[A];
    S[A] = T1 + T2;
}
VecPack. Repack working variables.
uint32x4 p VecPack(const uint32x4 p a, const uint32x4 p b,
                    const uint32x4 p c, const uint32x4 p d)
{
    uint8x16 p m2 = {0,1,2,3, 4,5,6,7, 16,17,18,19, 20,21,22,23};
    return vec perm(vec perm(a,b,m1), vec perm(c,d,m1), m2);
```

}

SHA-512

The SHA-512 implementation is like SHA-256 and has four parts. The first part is loads the existing state and creates working variables $\{A, B, C, D, E, F, G, H\}$. The second part loads the message and performs the first 16 rounds. The third part performs the remaining rounds. The final part stores the new state.

Part 1. Load the existing state and create working variables {A,B,C,D,E,F,G,H}.

```
uint64x2_p ab = VecLoad64x2u(state+0, 0);
uint64x2_p cd = VecLoad64x2u(state+2, 0);
uint64x2_p ef = VecLoad64x2u(state+4, 0);
uint64x2_p gh = VecLoad64x2u(state+6, 0);

// Indexes into the S[] array
enum {A=0, B=1, C, D, E, F, G, H};
uint64x2_p X[16], S[8];

S[A] = ab; S[C] = cd;
S[E] = ef; S[G] = gh;
S[B] = VecShiftLeft<8>(S[A]);
S[D] = VecShiftLeft<8>(S[C]);
S[F] = VecShiftLeft<8>(S[E]);
S[H] = VecShiftLeft<8>(S[G]);
```

Part 2. Load the message and perform the first 16 rounds.

```
const uint64 t* k = reinterpret cast<const uint64 t*>(KEY512);
const uint64 t* m = reinterpret cast<const uint64_t*>(data);
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<0>(X, S, vk, vm);
SHA512 ROUND1<1>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<2>(X, S, vk, vm);
SHA512 ROUND1<3>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<4>(X, S, vk, vm);
SHA512 ROUND1<5>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
```

```
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<6>(X,S, vk,vm);
SHA512 ROUND1<7>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<8>(X,S, vk,vm);
SHA512 ROUND1<9>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
vk = VecLoad64x2(k, offset);
vm = VecLoadMsq64x2(m, offset);
SHA512 ROUND1<10>(X, S, vk, vm);
SHA512 ROUND1<11>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<12>(X,S, vk,vm);
SHA512 ROUND1<13>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
vk = VecLoad64x2(k, offset);
vm = VecLoadMsg64x2(m, offset);
SHA512 ROUND1<14>(X, S, vk, vm);
SHA512 ROUND1<15>(X,S, VecShiftLeft<8>(vk), VecShiftLeft<8>(vm));
offset+=16;
Part 3. Perform the remaining rounds.
for (i=16; i<80; i+=16)
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<0>(X, S, vk);
    SHA512 ROUND2<1>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<2>(X, S, vk);
    SHA512 ROUND2<3>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<4>(X,S,vk);
    SHA512 ROUND2<5>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
```

vk = VecLoad64x2(k, offset);

```
SHA512 ROUND2<6>(X, S, Vk);
    SHA512 ROUND2<7>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<8>(X, S, Vk);
    SHA512 ROUND2<9>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<10>(X, S, Vk);
    SHA512 ROUND2<11>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<12>(X, S, Vk);
    SHA512 ROUND2<13>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
    vk = VecLoad64x2(k, offset);
    SHA512 ROUND2<14>(X, S, Vk);
    SHA512 ROUND2<15>(X,S, VecShiftLeft<8>(vk));
    offset+=16;
}
Part 4. Repack and store the new state.
ab += VecPack(S[A], S[B]);
cd += VecPack(S[C],S[D]);
ef += VecPack(S[E],S[F]);
gh += VecPack(S[G], S[H]);
VecStore64x2u(ab, state+0, 0);
VecStore64x2u(cd, state+2, 0);
VecStore64x2u(ef, state+4, 0);
VecStore64x2u(gh, state+6, 0);
VecLoadMsg64x2. Perform an endian-aware load of a user message into a word.
template <class T>
uint32x4 p VecLoadMsg64x2(const T* data, int offset)
#if LITTLE ENDIAN
    uint8x16 p mask = \{7,6,5,4,3,2,1,0,15,14,13,12,11,10,9,8\};
    uint64x2 p r = VecLoad64x2u(data, offset);
```

return (uint64x2 p)vec perm(r, r, mask);

return VecLoad64x2u(data, offset);

#else

```
#endif
}
SHA512_ROUND1. Mix state with a round key and user message.
template <unsigned int R>
void SHA512 ROUND1(uint64x2_p X[16], uint64x2_p S[8],
                    const uint64x2 p K, const uint64x2 p M)
{
    uint64x2 p T1, T2;
    X[R] = M;
    T1 = S[H] + VecSigmal(S[E]);
    T1 += VecCh(S[E], S[F], S[G]) + K + M;
    T2 = VecSigma0(S[A]) + VecMaj(S[A],S[B],S[C]);
    S[H] = S[G]; S[G] = S[F]; S[F] = S[E];
    S[E] = S[D] + T1;
    S[D] = S[C]; S[C] = S[B]; S[B] = S[A];
    S[A] = T1 + T2;
}
SHA512_ROUND2. Mix state with a round key.
template <unsigned int R>
void SHA512 ROUND2(uint64x2 p X[16], uint64x2 p S[8],
                    const uint64x2 p K)
{
    // Indexes into the X[] array
    enum {IDX0 = (R+0) \& 0xf, IDX1 = (R+1) \& 0xf,
          IDX9 = (R+9) \& 0xf, IDX14 = (R+14) \& 0xf;
    const uint64x2 p s0 = Vec sigma0(X[IDX1]);
    const uint64x2 p s1 = Vec sigma1(X[IDX14]);
    uint64x2 p T1 = (X[IDX0] += s0 + s1 + X[IDX9]);
    T1 += S[H] + VecSigmal(S[E]) + VecCh(S[E],S[F],S[G]) + K;
    uint64x2 p T2 = VecSigma0(S[A]) + VecMaj(S[A],S[B],S[C]);
    S[H] = S[G]; S[G] = S[F]; S[F] = S[E];
    S[E] = S[D] + T1;
    S[D] = S[C]; S[C] = S[B]; S[B] = S[A];
    S[A] = T1 + T2;
}
VecPack. Repack working variables.
uint64x2 p VecPack(const uint64x2 p x, const uint64x2 p y)
{
    const uint8x16 p m = \{0,1,2,3,4,5,6,7,16,17,18,19,20,21,22,23\};
```

```
return vec_perm(x,y,m);
}
```

The SHA-512 implementation uses the same functions as SHA-256, but SHA-512 uses a 64x2 arrangement rather than the 32x4 arrangement. You should copy/paste/replace as required for SHA-512. For example, below is the SHA Ch for the 64x2 arrangement.

```
uint64x2_p
VecCh(uint64x2_p x, uint64x2_p y, uint64x2_p z)
{
    return vec_sel(z,y,x);
}
```

In fact, since this is C++ code, a template function works nicely. The language will use the template to instantiate VecCh using both $uint32x4_p$ and $uint64x2_p$.

```
template <class T>
T VecCh(T x, T y, T z)
{
    return vec_sel(z,y,x);
}
```

Templates do not work the Sigma functions and you will have to supply C++ overloaded functions as shown below.

```
uint64x2 p Vec sigma0(const uint64x2 p val)
#if defined(__xlc__) || defined(__xlC__)
   return __vshasigmad(val, 0, 0);
#else
   return builtin crypto vshasigmad(val, 0, 0);
#endif
}
uint64x2 p Vec sigma1(const uint64x2 p val)
#if defined( xlc ) || defined( xlC )
    return vshasigmad(val, 0, 0xf);
   return builtin crypto vshasigmad(val, 0, 0xf);
#endif
uint64x2 p VecSigma0(const uint64x2 p val)
#if defined( xlc ) || defined( xlC )
   return __vshasigmad(val, 1, 0);
#else
   return builtin crypto vshasigmad(val, 1, 0);
#endif
```

```
uint64x2_p VecSigmal(const uint64x2_p val)
{
#if defined(__xlc__) || defined(__xlC__)
    return __vshasigmad(val, 1, 0xf);
#else
    return __builtin_crypto_vshasigmad(val, 1, 0xf);
#endif
}
```

Chapter 6. Polynomial multiplication

This chapter discusses polynomial multiplication used with CRC codes and the GCM mode of operation for AES.

CRC-32 and CRC-32C

CRC checksums on POWER8 are nothing like the SSE4 or Aarch64 CRC instructions. Please refer to Anton Blanchard's GitHub at CRC32/vpmsum [https://github.com/antonblanchard/crc32-vpmsum] for the discussion and sample code.

GCM mode

POWER8 GCM mode is implemented using the <code>vpmsumd</code> instruction. GCM uses the double-word variant and to perform $64x64 \rightarrow 128$ -bit polynomial multiplies. The GCC builtin is <code>__builtin_crypto_vpmsumd</code>, and the XLC intrinsic is <code>__vpmsumd</code>.

vpmsumd creates two 128-bit products and xor's them together. One product is from the multiplication of the low dwords, and the second product is from the multiplication of the high dwords. The trick to using vpmsumd is to ensure one of the products is 0. You can ensure one of the products is 0 by setting one of the 64-bit dwords to 0.

The output of <code>vpmsumd</code> is endian sensitive like the <code>vec_sld</code> instruction. On big-endian systems the result of a multiply is $\{a,b\}$, where a and b are double words in a vector. The same multiplication on a little-endian system produces $\{b,a\}$. The swapping can be seen with the test program below.

```
$ cat test.cxx
#include <altivec.h>
#undef vector
typedef __vector unsigned long long uint64x2_p;
int main(int argc, char* argv[])
{
  uint64x2_p a = {0, 04};
  uint64x2_p b = {0, 64};
  uint64x2_p c = __builtin_crypto_vpmsumd(a, b);
  return 0;
}
```

Running the program on gcc112, which is ppc64-le, results in the following output. Notice the output is $\{0x100, 0x0\}$.

```
(gdb) r
Starting program: /home/test/test.exe
Breakpoint 1, main (argc=0x1, argv=0x3fffffffff4b8) at test.cxx:11
11 return 0;
```

```
(gdb) p c $1 = \{0x100, 0x0\}
```

And running the program on gcc119, which is ppc64-be, results in the following output. Notice the output is $\{0x0, 0x100\}$.

```
(gdb) r
Starting program: /home/test/test.exe
Breakpoint 1, main (argc=0x1, argv=0x2ff22bb8) at test.cxx:11
11         return 0;
(gdb) p c
$1 = {0x0, 0x100}
```

Three helper functions are needed for GCM mode. The first two are <code>VecGetHigh</code> and <code>VecGetLow</code>. The functions extract the high and low 64-bit double words and return them in a vector. The third is <code>VecSwapWords</code>. <code>VecSwapWords</code> exchanges 64-bit double words on little-endian systems after the multiplication.

VecGetHigh and VecGetLow return a vector padded on the left with 0's. That means the return vector already has one of the terms set to 0 so vpmsumd will behave like ARM's pmull p64 or Intel's mm clmulepi64 si128.

The source code for the three functions are shown below. Shifts and rotates are preferred over permutes or masks because shifts are generally faster and use fewer instructions.

```
uint64x2_p VecGetHigh(uint64x2_p val)
{
    return VecShiftRight<8>(val);
}
uint64x2_p VecGetLow(uint64x2_p val)
{
    return VecShiftRight<8>(VecShiftLeft<8>(val));
}
template <class T>
VecSwapWords(const T val)
{
    return (T) VecRotateLeft<8>(val);
}
```

Using VecGetHigh and VecGetLow the function VecPolyMultiply can be implemented as follows using the vpmsumd builtin.

```
uint64x2_p
VecPolyMultiply(uint64x2_p a, uint64x2_p b)
{
#if defined(__xlc__) || defined(__xlc__)
# if __BIG_ENDIAN__
    return __vpmsumd(VecGetLow(a), VecGetLow(b));
# else
```

The code listed above provides Intel's $_{mm}_{clmulepi64}_{si128}$ (a, b, 0x00) or ARM's pmull_p64. The function may be better named VecPolyMult00 because it multiplies the two low 64-bit double words. The table below shows how to create the four variations needed for GCM mode.

| Function | Parameter a | Parameter b |
|---------------|---------------|---------------|
| VecPolyMult00 | VecGetLow(a) | VecGetLow(b) |
| VecPolyMult01 | VecGetLow(a) | VecGetHigh(b) |
| VecPolyMult10 | VecGetHigh(a) | VecGetLow(b) |
| VecPolyMult11 | VecGetHigh(a) | VecGetHigh(b) |

The next steps are implement the GCM multiplication and reduction routines. The code for multiplication is easy and shown below. The code for reduction is the tricky one and left as an exercise to the reader.

```
uint64x2_p
GCM_Multiply(uint64x2_p x, uint64x2_p h)
{
    uint64x2_p c0 = VecPolyMult00(x, h);
    uint64x2_p c1 = VecXor(VecPolyMult01(x, h), VecPolyMult10(x, h));
    uint64x2_p c2 = VecPolyMult11(x, h);
    return GCM_Reduce(c0, c1, c2);
}
```

Implementing GCM_Multiply and GCM_Reduce will require some forethought. You will likely use a reflected algorithm, and nearly everything gets turned on its head. For example, GCM's vpmsum wrapper swaps words on big-endian systems and leaves words alone on little-endian systems. As another example GCM's vpmsum wrapper reads low words with VecGetHigh and high words with VecGetLow to ensure the correct words are presented to the function call.

Also see the head notes for POWER8 in the Crypto++ implementation at gcm-simd.cpp [https://github.com/weidai11/cryptopp/blob/master/gcm-simd.cpp]. If you are feeling adventurous then you can find the Cryptogams implementation for OpenSSL at ghashp8-ppc.pl [https://github.com/openssl/openssl/blob/master/crypto/modes/asm/ghashp8-ppc.pl].

Chapter 7. Assembly language

This chapter shows you how to build and link against a POWER8 SHA assembly language routine. The function is Cryptogams SHA-256 compression function.

A second example of PowerPC assembly language is provided for the DARN random number generator. The generator is available on POWER9 machines, but the compiler intrinsics and builtins to access the generator are mostly missing.

Cryptogams

Cryptogams [https://www.openssl.org/~appro/cryptogams/] is the incubator used by Andy Polyakov to develop assembly language routines for OpenSSL. Andy dual licenses his implementations and a more permissive license is available for his assembly language source code.

The steps that follow were carried out on gcc112, which is ppc64-le. Andy's GitHub is located at dot-asm [https://github.com/dot-asm], so clone the project and read the README.

```
$ git clone https://github.com/dot-asm/cryptogams
$ cd cryptogams
```

The README contains instructions for using the source files:

```
"Flavor" refers to ABI family or specific OS. E.g. x86_64 scripts recognize "elf", "elf32", "macosx", "mingw64", "nasm". PPC scripts recognize "linux32", "linux64", "linux64le", "aix32", "aix64", "osx32", "osx64", and so on...
```

Unfortunately Andy has not uploaded the SHA gear to Cryptogams so you will have to switch to OpenSSL to get the Cryptogams sources. Make a cryptogams directory, and then copy sha512p8-ppc.pl and ppc-xlate.pl from the OpenSSL source directory:

```
$ mkdir cryptogams
$ cp openssl/crypto/sha/asm/sha512p8-ppc.pl cryptogams/
$ cp openssl/crypto/perlasm/ppc-xlate.pl cryptogams/
$ cd cryptogams/
```

Next examine the head notes in sha512p8-ppc.pl, which is used to create the source files for SHA-256 and SHA-512. The comments say the script takes two arguments. The first is a "flavor", and the 32 or 64 is used to convey the platform architecture. Adding "le" to flavor will produce a source file for a little endian machine. The second argument is "output", and 256 or 512 in the output filename selects either SHA-256 or SHA-512.

The commands to produce a SHA-256 assembly source file for gcc112 and assemble it are shown below.

```
$ ./sha512p8-ppc.pl linux64le sha256le_compress.s
$ as -mpower8 sha256le compress.s -o sha256le compress.o
```

The head notes in sha512p8-ppc.pl do not state the public API. However the source file crypto/ppccap.c says:

```
$ grep -IR sha256_block_p8 *
crypto/ppccap.c:void sha256_block_p8(void *ctx, const void *inp,
size_t len);
...
```

The signature using len is a bit misleading since it is a block count, and not a byte count. The signature for <code>sha256_block_p8</code> is better documented as shown below. There are no alignment requirements for <code>state</code> or <code>input</code>.

Finally, a program that links to sha256 block p8 might look like the following.

```
$ cat test.cxx
#include <stdio.h>
#include <string.h>
#include <stdint.h>
extern "C" {
 void sha256 block p8(uint32 t*, const uint8 t*, size t);
int main(int argc, char* argv[])
 /* empty message with padding */
 uint8 t message[64];
 memset(message, 0x00, sizeof(message));
 message[0] = 0x80;
 /* initial state */
 uint32 t state[8] = {
   0x6a09e667, 0xbb67ae85, 0x3c6ef372, 0xa54ff53a,
    0x510e527f, 0x9b05688c, 0x1f83d9ab, 0x5be0cd19
  } ;
 size t blocks = sizeof(message)/64;
  sha256_block_p8(state, message, blocks);
 const uint8 t b1 = (uint8 t) (state[0] >> 24);
 const uint8 t b2 = (uint8 t) (state[0] >> 16);
 const uint8 t b3 = (uint8 t) (state[0] >> 8);
 const uint8 t b4 = (uint8 t) (state[0] >> 0);
 const uint8 t b5 = (uint8 t) (state[1] >> 24);
 const uint8 t b6 = (uint8 t) (state[1] >> 16);
 const uint8 t b7 = (uint8 t) (state[1] >> 8);
 const uint8 t b8 = (uint8 t) (state[1] >> 0);
 /* e3b0c44298fc1c14... */
 printf("SHA256 hash of empty message: ");
```

```
printf("%02X%02X%02X%02X%02X%02X%02X...\n",
         b1, b2, b3, b4, b5, b6, b7, b8);
  int success = ((b1 == 0xE3) \&\& (b2 == 0xB0) \&\&
                  (b3 == 0xC4) \&\& (b4 == 0x42) \&\&
                  (b5 == 0x98) \&\& (b6 == 0xFC) \&\&
                  (b7 == 0x1C) \&\& (b8 == 0x14));
  if (success)
    printf("Success!\n");
  else
    printf("Failure!\n");
  return (success != 0 ? 0 : 1);
}
Compiling and linking to sha256le compress.o would look similar to below.
$ g++ -mcpu=power8 test.cxx sha256le compress.o -o test.exe
$ ./test.exe
SHA256 hash of empty message: E3B0C44298FC1C14...
Success!
```

DARN generator

POWER9 added the DARN random number generator. The DARN generator is a hardware based random number generator like RDRAND on Intel systems. The generator returns either 32-bits or 64-bits of random material.

The generator is accessed using builtins or assembly language. __builtin_darn_32 and __builtin_darn_64 are available on GCC 7.0 and above, but missing on XLC and Clang. To access the generator under most compilers you should use assembly language. To cover old compilers, like GCC 4.8.5, you can issue the instruction's byte codes.

```
inline void DARN32(uint32_t* output)
{
    do
    {
        // This is "darn r3, 0". When L=0 a conditioned
        // 32-bit word is returned.
        __asm__ __volatile__ (
        #if (__BIG_ENDIAN__)
        ".byte 0x7c, 0x60, 0x05, 0xe6 \n\t" // r3 = darn 3, 0
        "mr %0, 3 \n\t" // output = r3
        #else
```

```
".byte 0xe6, 0x05, 0x60, 0x7c \n\t" // r3 = darn 3, 0
"mr %0, 3 \n\t" // output = r3
#endif
: "=r" (*output) :: "r3"
);
} while (*output == 0xFFFFFFFF);
}
```

```
inline void DARN64(uint64 t* output)
 do
   // This is "darn r3, 1". When L=1 a conditioned
   // 64-bit word is returned.
   __asm__ __volatile__ (
     #if (__BIG_ENDIAN__)
     ".byte 0x7c, 0x61, 0x05, 0xe6 \n\t" // r3 = darn 3, 1
     "mr %0, 3
                                     \n\t" // output = r3
     #else
     ".byte 0xe6, 0x05, 0x61, 0x7c \n\t" // r3 = darn 3, 1
     "mr %0, 3
                                     \n\t" // output = r3
     #endif
      : "=r" (*output) : : "r3"
  } while (*output == 0xFFFFFFFFFFFFFFFFI);
}
```

You can test the code on gcc135 at the Compile Farm.

Chapter 8. Performance

This chapter presents benchmarking numbers and discusses some of the issues that affect performance. Benchmarking an application is an art and can be tricky to collect accurate results.

Power states

Linux desktop systems are usually configured in either on-demand or powersave mode. The configuration is usually a kernel parameter, and the default energy states are usually efficient states that use less power. Before benchmarking you should leave on-demand or powersave mode, and enter a performance state.

Cryptogams uses a script to enter performance mode for benchmarking but it is not available online. A modified version of Andy's script is available at governor.sh [https://github.com/weidai11/cryptopp/blob/master/TestScripts/governor.sh]. The script changes the scaling frequency using the $sys/devices/system/cpu/cpu*/cpufreq/scaling_governor key (where <math>sys/devices/system/cpu0$). Below is an example of running the script on a x86_64 Linux system.

```
$ sudo ./governor.sh perf
Current CPU governor scaling settings:
    CPU 0: powersave
    CPU 1: powersave
    CPU 2: powersave
    CPU 3: powersave
New CPU governor scaling settings:
    CPU 0: performance
    CPU 1: performance
    CPU 2: performance
    CPU 3: performance
```

TODO: We are not aware of a similar script for AIX. In fact we don't know how to check a similar setting to determine if a script is needed.

Benchmarks

The table below presents benchmark statistics using standard C++, C++ with builtins, and assembly language routines. The "standard C++" and "C++ with builtins" columns were derived using Crypto++. The "assembly language" column was taken from Cryptogams and OpenSSL source file notes.

The measurements were taken on gcc112, which is a Linux PowerPC, 64-bit, little-endian machine. The hardware is IBM POWER System S822 with two CPU cards, 160 logical CPUs at 3.4 GHz. The kernel is CentOS 7.4 version 3.10.0-514 and the compiler is GCC 7.2.0.

| Algorithm | Standard C++ | | Built-ins | | Assembly | |
|-----------|--------------|------|-----------|------|----------|-------------------|
| | MiB/s | cpb | MiB/s | cpb | MiB/s | cpb |
| AES/ECB | 121 | 26.7 | 3151 | 1.03 | - | _† |
| AES/CTR | 120 | 27.1 | 2544 | 1.27 | - | 0.74 [‡] |
| AES/GCM | 93 | 34.7 | 2269 | 1.35 | - | _† |
| SHA-1 | 307 | 10.6 | N/A | N/A | - | _† |
| SHA-256 | 129 | 25.2 | 275 | 12.0 | - | 9.9 [‡] |
| SHA-512 | 281 | 11.5 | 368 | 8.8 | - | 6.3 [‡] |

[†] The Cryptogams and OpenSSL source files do not provide a meaningful metric for cycles per byte in this case. The metrics are reported as +150% or +90%, but we don't know the frame of reference.

POWER8 *does not* provide instructions for SHA-1, and based on the benchmarks it is easy to see why. A good compiler generates quality code. Other factors probably include SHA-1 has been superseded by SHA-256 and SHA-512.

[‡] As reported in the head notes of the Cryptogams and OpenSSL source files. MiB/s is not provided, and the metric is only meaningful on the same hardware using the same test configuration.

Chapter 9. References

Cryptogams

CRYPTOGAMS: low-level cryptographic primitives collection [https://www.openssl.org/~ap-pro/cryptogams/]

GitHubs

- AES Intrinsics [https://github.com/noloader/AES-Intrinsics]
- Cryptogams [https://github.com/dot-asm/cryptogams]
- CRC32 [https://github.com/antonblanchard/crc32-vpmsum]
- PVECLIB [https://github.com/munroesj52/pveclib]
- SHA Intrinsics [https://github.com/noloader/SHA-Intrinsics]

IBM and OpenPOWER websites

- Recommended debug, compiler, and linker settings for Power processor tuning [https://www.ibm.com/support/knowledgecenter/en/linuxonibm/liaal/iplsdkrecbldset.htm]
- AIX vector programming [https://www.ibm.com/support/knowledgecenter/en/ss-w_aix_61/com.ibm.aix.genprogc/vector_prog.htm]
- POWER8 in-core cryptography [https://www.ibm.com/developerworks/library/se-power8-in-core-cryptography/index.html]
- IBM Advance Toolchain (for latest gcc and glibc) [https://developer.ibm.com/linuxonpower/advance-toolchain/]
- 64-Bit ELF V2 ABI Specification: Power Architecture [https://openpowerfoundation.org/?resource_lib=64-bit-elf-v2-abi-specification-power-architecture]
- IBM Power ISA Version 3.0B [https://openpowerfoundation.org/?resource_lib=power-isa-version-3-0]
- Function calls and the PowerPC 64-bit ABI [https://www.ibm.com/developerworks/library/l-powasm4/index.html]
- Performance Optimization and Tuning Techniques for IBM Power Systems Processors Including IBM POWER8 [https://www.redbooks.ibm.com/redbooks/pdfs/sg248171.pdf]

NIST website

- FIPS 197, Advanced Encryption Standard (AES) [https://nvlpubs.nist.gov/nistpubs/fips/nist.fips.197.pdf]
- FIPS 180-4, Secure Hash Standard (SHS) [https://nvlpubs.nist.gov/nistpubs/fips/nist.fip-s.180-4.pdf]
- FIPS 140-2, Security Requirements for Cryptographic Modules [https://csrc.nist.gov/publications/detail/fips/140/2/final]
- SP800-53a, Assessing Security and Privacy Controls in Federal Information Systems and Organizations [https://csrc.nist.gov/publications/detail/sp/800-53a/rev-4/final]

Stack Exchange

- Detect POWER8 in-core crypto through getauxval? [https://stackover-flow.com/q/46144668/608639]
- Is vec_sld endian sensitive? [https://stackoverflow.com/q/46341923/608639]

| Index | B Benchmarks, 48, 48 |
|--|--|
| Symbols -qshowmacros, 5, 7 | C calloc, 8 |
| -qxlcompatmacros, 5 _mm_clmulepi64_si128, 42 _SC_LEVEL1_DCACHE_LINESIZE, 19 BIG_ENDIAN, 7 | ChaCha, 14 Clang, 1, 5 Compile farm, 2, 47 gcc112, 2 |
| builtin_crypto_vcipher, 20, 24, 27 builtin_crypto_vcipherlast, 20, 24, 27 builtin_crypto_vncipher, 20, 26 builtin_crypto_vncipherlast, 20, 26 | gcc119, 2 gcc135, 2, 47 Compiler Clang, 1 |
| builtin_crypto_vpmsumd, 41 builtin_crypto_vshasigmad, 30 builtin_crypto_vshasigmaw, 30 builtin_darn_32, 46 | GCC, 1 XLC, 1 Contributing, 3 CRC-32, 41 |
| builtin_darn_64, 46 BYTE_ORDER, 7 LITTLE_ENDIAN, 7 ORDER_BIG_ENDIAN, 7 | Cryptogams, 44, 48, 50 Andy Polyakov, 44 |
| ORDER_LITTLE_ENDIAN, 7power_7_andup, 16power_8_andup, 16power_set, 17 | DARN, 46 Feature detection, 3, 16 |
| power_vsx, 17 vcipher, 20, 25 vcipherlast, 20, 25 | AIX, 16, 16 Glibc, 18 Linux, 17 FIPS 140-2, 51 |
| vector, 9 vncipher, 20, 27 vncipherlast, 20, 27 vpmsumd, 41 | FIPS 180, 51 FIPS 197, 51 |
| vshasigmad, 30 vshasigmaw, 30 | GCC, 1, 4 GCM mode, 41 GCM_Multiply, 43 |
| A Administrivia, 3 AES, 3, 20 Decryption, 26 Encryption, 24 Key schedule, 24 | GCM_Reduce, 43 getauxval, 18 getsystemcfg, 19 GitHub, 50 Glibc, 17 |
| Performance, 27 AIX, 8 Andy Polyakov, 44, 48, 50 Anton Blanchard, 41, 50 | IBM, 4 IBM website, 50 Introduction, 1 |
| Assembly language, 3, 44 AT_HWCAP, 18 AT_HWCAP2, 18 | J Jeffrey Walton, 50, 50 |

| L L1 data cache, 19 AIX, 19 Linux, 19 LD_SHOW_AUXV, 17 LLVM, 5 M macros, 6 malloc, 8 | SHA-512, 35 Sigma functions, 30 SIGBUS, 10 Simon-128, 14 Source code, 2 SP800-53a, 51 SPARCv8, 8 Speck-128, 14 Stack Exchange, 51 Steven Munroe, 50 sysconf, 19 |
|---|--|
| N NIST website, 51 O On-demand, 48 | U uint32x4_p, 9 uint64x2_p, 9 uint8x16_p, 9 |
| OpenPOWER website, 50 | V VecAdd64, 14 |
| Performance, 3, 48, 48 pmull_p64, 42 Polynomial multiplication, 3, 41 CRC-32, 41 GCM mode, 41 posix_memalign, 8 Power state on-demand, 48 performance, 48 powersave, 48 POC_FEATURE2_ARCH_2_07, 18 PPC_FEATURE2_ARCH_3_00, 18 PPC_FEATURE2_VEC_CRYPTO, 18 PPC_FEATURE_ARCH_2_06, 18 PPC_FEATURE_HAS_ALTIVEC, 18 preprocessor, 6 | VecGetHigh, 42 VecCetLow, 42 VecLoad, 10 VecLoadu, 11 VecPolyMultiply, 42 VecRotateLeft, 13, 13 VecShiftLeft, 12 VecStore, 11 VecStoreu, 12 VecSub64, 14 VecSwapWords, 42 vec_free, 8 vec_ld, 10, 10, 10, 10 vec_malloc, 8 vec_perm, 13, 13 vec_sld, 12, 12, 13 vec_st, 11, 11 vec_vsx_ld, 11, 11 vec_vsx_st, 11, 12 |
| R RDRAND, 46 References, 50 | vec_vsx_st, 11, 12 vec_xl, 11, 11 vec_xst, 11, 12 vsldoi, 12 |
| Salsa, 14 SC_L1C_DLS, 19 SHA, 3, 29 Ch function, 30 Maj function, 30 SHA-256, 31 | X XLC, 1, 4 |