
IvozProvider 1.5 Documentation

Release Oasis

Irontec

Aug 17, 2017

Basic Concepts

Introduction to IvozProvider

The following sections will serve as general introduction to IvozProvider:

1.1 About this document

This document describes the process of installation and usage of IvozProvider, the multi-tenant telephony platform for providers developed by Irontec.

This should be the starting point for anyone interested in this solution, both from the technical point of view and the user one and it's divided in four blocks:

- The first block is about *Basic Concepts* where each element of the product and its main function is described.
- The second block describes the *Minimum Configuration* process with a fresh installed platform, leaving the deep configuration details for the next block.
- The third block goes deeper into the most *Advanced Configuration* features like **trarification, billing, PBX advanced options and every call details** that were omitted in the previous block.
- The fourth and last block describes the *Security and Maintenance* measures that implements the solution.

1.2 Getting help

IvozProvider is an alive and highly developed project. There are multiple channels to get information or report bugs:

- GitHub: <https://github.com/irontec/ivozprovider>
- Users mailing list: users@lists-ivozprovider.irontec.com
- Developers mailing list: dev@lists-ivozprovider.irontec.com
- email: vozip@irontec.com
- Twitter: [@irontec](#)
- IRC Channel [#ivozprovider](#) at irc.freenode.net

Don't hesitate to contact us for any kind of feedback :)

1.3 What is IvozProvider?

IvozProvider is a *provider oriented multilevel IP telephony solution exposed to the public network*.

1.3.1 IP Telephony

IvozProvider supports telephony systems that use *Session Initialitation Protocol, SIP*, described in RFC 3261 and any related RFCs independent of manufacturers.

This allows total freedom to choose *softphones, hardphones* and the rest of elements that interact with IvozProvider, without any kind of binding with a manufacturer.

Right now, IvozProvider supports the following **transport protocols** for SIP:

- UDP
- TCP
- TLS
- Websockets


This last transport protocol described in [RFC 7118](#) supports web integrated softphones, using the WebRTC standard allowing browsers to establish real-time *peer-to-peer* connections.

The **supported audio codec** list is:

- PCMA (*alaw*)
- PCMU (*ulaw*)
- GSM
- SpeeX
- G.722
- G.726
- G.729
- iLBC
- OPUS

1.3.2 Multilevel

The web portal design of IvozProvider allows **multiple actors within the same infrastructure**:

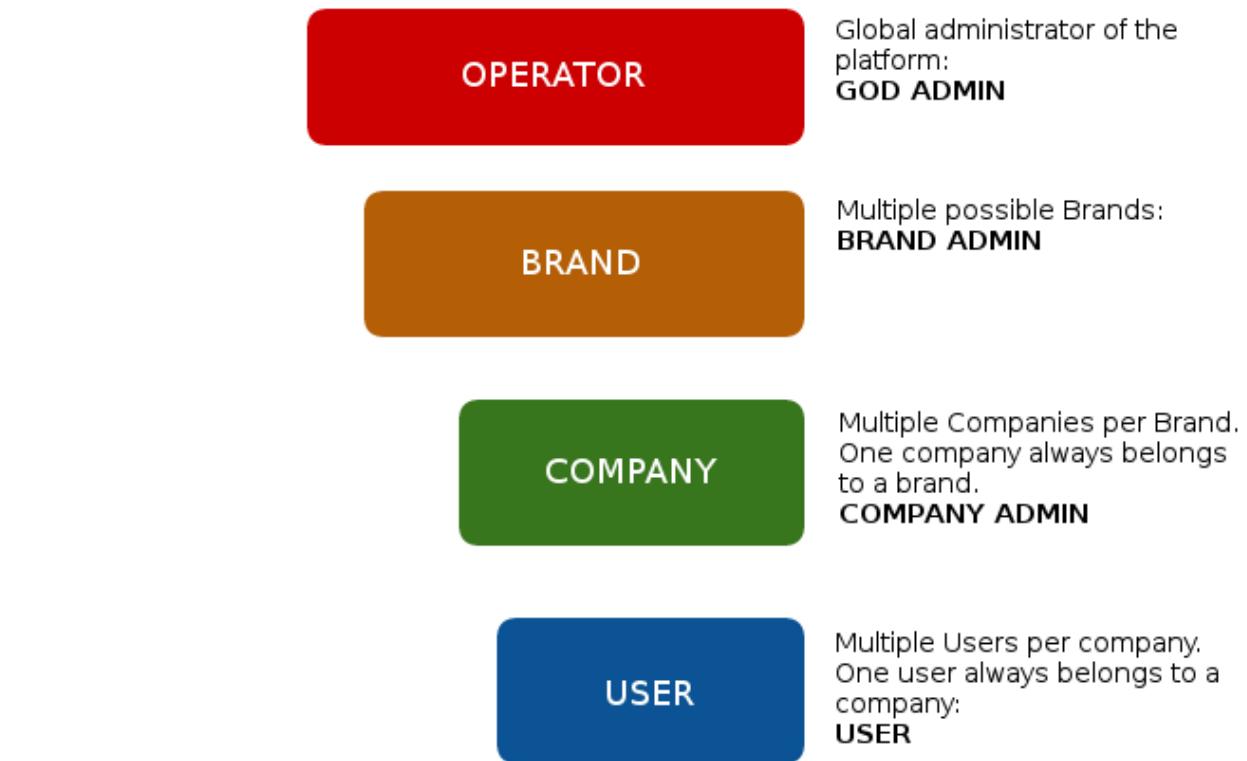

In *Platform roles* section, the different roles are deeply described, but to sum up:

- **God Admin:** The administrator and maintainer of the solution. Provides access to multiple brand operators.
- **Brand Operator:** Responsible of giving access, tarificate and bill to multiple company operators.
- **Company Operator:** Responsible of its own PBX configuration and to manage the final platform users.
- **Users:** The last link of the chain, has SIP credentials and can access its own portal for custom configurations.

Each one of this roles **has its own portal** that allows them to fulfill their tasks. Each portal can be customized in the following ways:

- Themes and *skins* for corporate colours.
- Company Logos.
- Customized URLs with the Brand or Company domain.

1.3.3 Provider oriented

IvozProvider is a telephony solution **designed with horizontal scaling in mind**, what allows handling a great amount of **traffic and users** only by increasing the machines and resources of them.

This are the main ideas that makes this product provider oriented:

- Despite the fact that all machine profiles can run in the same host, what makes it easier for the initial testing, each profile of IvozProvider can be splitted from the rest to make it run in its own machine.
- A **distributed installation** allows to distribute the correct amount of resources to each task, but also:
 - Geographic distribution of elements to warranty high availability in case of CPD failure.

- Setup of key elements near the final users, to minimize the communication latencies.
- Horizontal scaling of key profiles to handle hundred of thousands concurrent calls.

The resource consuming elements that limit the service of VoIP solutions use to be:

- Already established calls audio management.
- Managing configuration for each company administrator (IVRs, conference rooms, external call filters, etc.)
- Databases of configuration and records.

IvozProvider was designed always keeping in mind the **horizontal scaling** of each of its elements, so it **can handle hundred of thousands concurrent calls** and what is more important, **adapt the platform resources to the expected service quality**:

- **Media-relay** servers handle audio frames for the already established calls:
 - You can use as many media-relays as you need.
 - You can join media-relay in groups, and force some companies to use a group if you want.
 - You can setup media-relays near the final users, to minimize network latencies in the calls.
- **Application servers** are in charge of processing the configurated logics:
 - They scale horizontally: new Application Servers can be installed and added to the pool if you feel the need.
 - Every call is handled by the least busy Application Server
 - By default, there is no static assignment * between Companies and Application Servers. This way failure of any Application Server is not critical: the platform will ignore the faulty Application Server while distributing calls.

1.3.4 Exposed to the public network

As showed in the installation process, **IvozProvider is designed to serve users directly from Internet**. Although it can be used in local environments, IvozProvider is designed to use public IP addresses for its services, removing the need of VPN or IPSec tunnels that connect the infrastructure with the final users


Highlights:

- Only the required services will be exposed to Internet.
- The untrusted origins access can be filtered out by integrated firewall
- Access from IP addresses or networks can be filtered to avoid any kind of phishing.
- There is also an anti-flood mechanism to avoid short-life Denial of Service attacks.
- Each company concurrent calls can be limited to a fixed amount.
- IvozProvider supports connection from terminals behind **NAT**.
- IvozProvider keeps track of those NAT windows and keeps them alive with *nat-piercing* mechanisms.

1.4 What is inside IvozProvider?

IvozProvider uses well-known and stable **Free Software** projects to fulfill the different required tasks of the platform.

Nothing better than an image to show all the software that is integrated into IvozProvider:

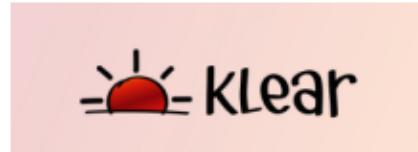

Note: We can not stress enough our gratitude to the developers and communities of this projects.

The task of each of this software will be deeply detailed in the block *Platform general architecture*.

1.5 Who should use IvozProvider?

IvozProvider is a good option for those interested in having a telephony platform that can provide service to **thousands concurrent calls**.

The greatest strengths of IvozProvider can help to decide if the solution feeds your needs:


- VoIP: SIP
- Multilevel, multitenant
- Horizontal scaling
- PseudoSBC: open to Internet
- PBX Features

The installation process is so simple, that the best way to test if IvozProvider fulfills your needs is to test it!


Platform general architecture

2.1 General diagram

Following diagram shows the global architecture of IvozProvider solution, with all its components:

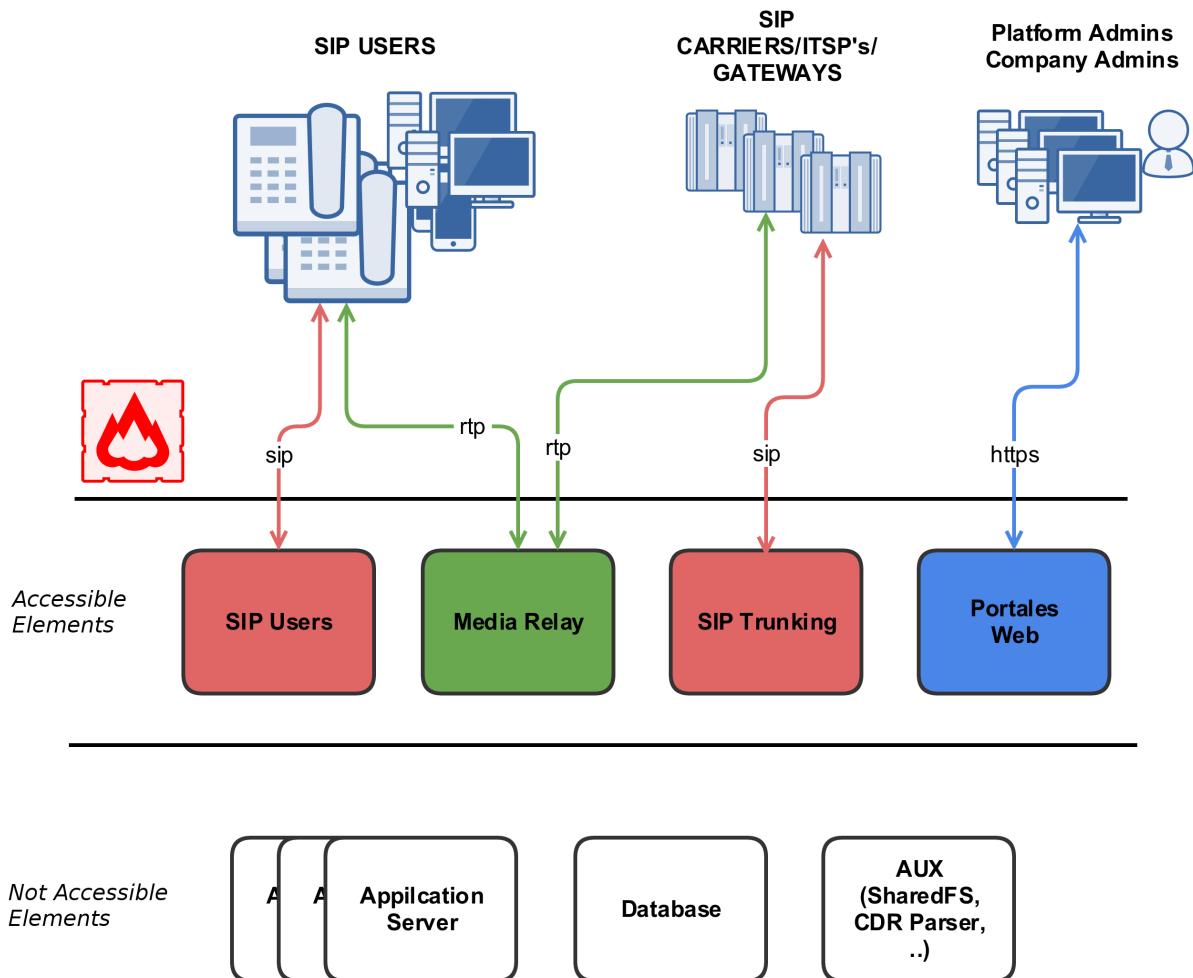

This is a more conceptual diagram:

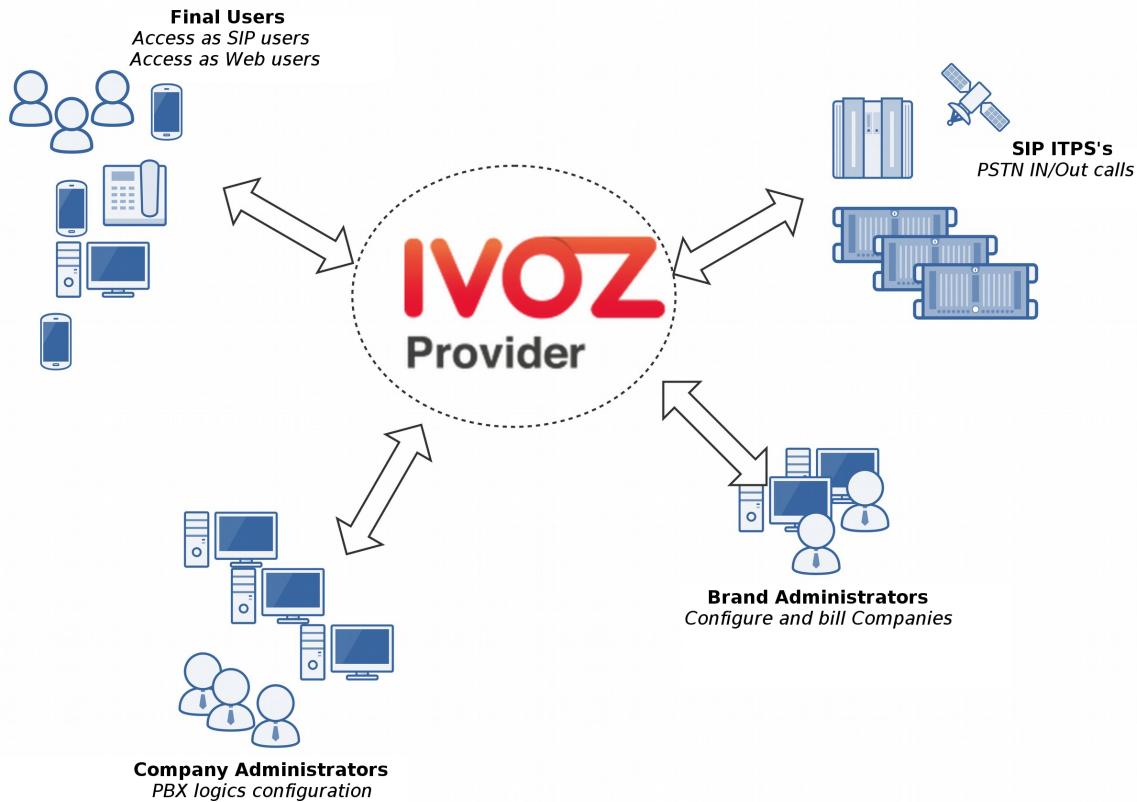

2.2 SIP signalling flow

The first diagram shows the SIP signalling traffic involved in the establishment, modification and termination of sessions following the SIP [RFC 3261](#) and any related RFCs.

These are the **external SIP entities** involved:

- UACs: users hardphones, softphones, SIP-capable gadget.
- SIP carriers: carriers used to interconnect IvozProvider with external SIP networks (and, probably, with PSTN).

All the SIP traffic (in any of the supported transports: TCP, UDP, TLS, WSS) they send/receive is to/from this two **internal SIP entities** of IvozProvider:

- Users SIP Proxy (running [Kamailio](#)).
- Trunks SIP Proxy (running [Kamailio](#)).

In fact, users UACs only talks to *Users SIP Proxy* and 'SIP carriers' only talks to *Trunks SIP Proxy*.

Inside IvozProvider these two proxies talk to *Application Servers* running [Asterisk](#), but **no external element is allowed to talk to Application Servers directly**.

2.3 RTP audio flow

Sessions initiated by SIP signalling protocol imply media streams shared by involved entities.

This media streams use [RTP](#) to send and receive the media itself, usually using [UDP](#) as a transport protocol.

External entities involved in RTP sessions can be divided in:

- Users.
- Carriers.

Both entities exchanges RTP with the same IvozProvider entity: *media-relays*.

IvozProvider implements *media-relays* using both [RTPengine](#) and [RTPproxy](#).

Similar to SIP, these *media-relays* exchanges RTP when is needed with *Application Servers*, but **external entities never talk directly to them**.

2.4 HTTPS traffic

HTTPS is the third traffic type exchanged between IvozProvider and *external world*.

HTTPS traffic is used for:

- **Terminal provisioning:** several hardphones ask for their configuration when they wake up and this configuration files can be served through HTTPS.
- **Web portals:** IvozProvider has 4-level web portals for all the *platform roles*.

Both of these traffics are handled by *Web portals* IvozProvider entity.

2.5 Additional elements

IvozProvider has multiple elements that are not exposed to the *external world* but play a crucial task.

The most remarkable profile is **database profile** that gathers all the information of the platform and shares it between the majority of software packaged. IvozProvider uses [MySQL database engine](#) for this task.

Another remarkable task is **asynchronous tasks handler**: CDR must be parsed, calls must be billed, recordings must be encoded, etc.

2.6 Auxiliar elements

Aux profile runs software that, even though is not vital for calls placing, makes IvozProvider mantainer's life much more easier.

In fact, without them, debugging problems would be much harder and the quality of given service would be damaged.


IvozProvider ships:

- **Homer SIP capture:** This amazing software lets us capture all the SIP traffic for later analysis, for obtaining statistics, call quality measuring, etc. Visit [SIP Capture website](#) for more information.
- **Graylog log viewer:** All logs of all IvozProvider profiles are stored and shown with [Graylog](#) and divied in brands.
- **Grafana graph dashboard:** Grafana lets us graph everything. Literally.

Platform roles

IvozProvider is a multilevel role provider solution.

The following images shows the different available levels and the relation between them:

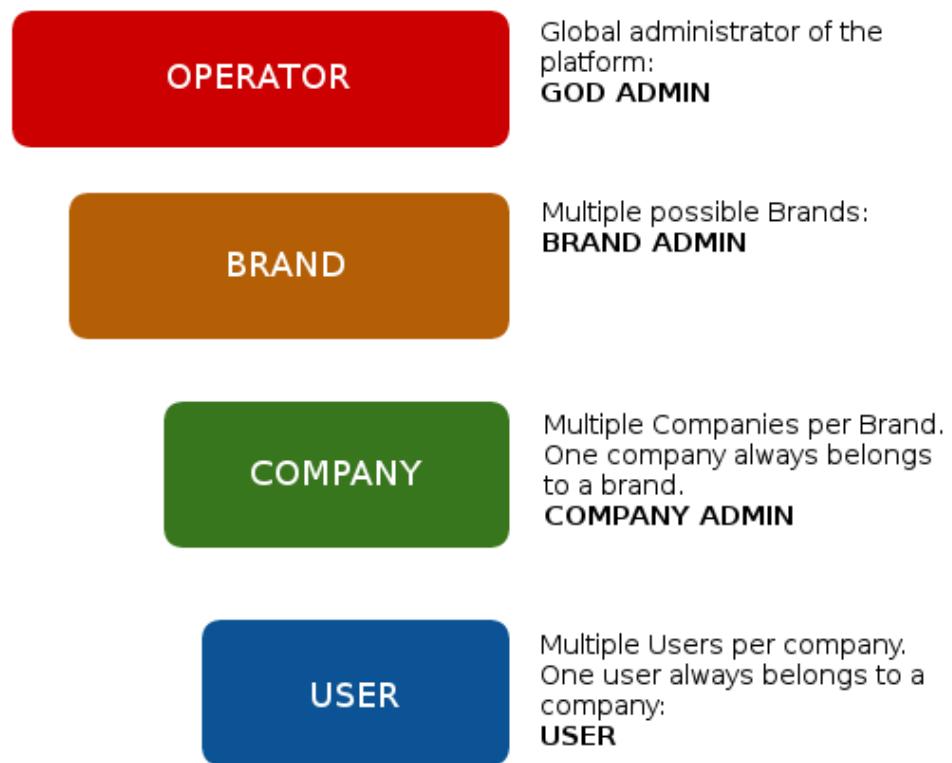

This section will explain each of the available roles, describing their responsibilities and more important tasks.

3.1 Global administrator role

The global administrator role (operator in the image) is usually done by the installation responsible.

All options and platform features are visible to this role and usually is in charge of its maintenance.

Their most important task is to **create Brands** and configure them so they have the enough autonomy to properly use the platform:

- Configure their web access.
- Configure their brand portal look and feel: themes, colors, etc.

Appart from their main task, their global visibility and total access makes them responsible of:

- Monitor the platform so it keeps always UP & RUNNING
- Analyze platform logs to track possible errors.
- Polish the security mechanisms to avoid external attacks.
- Obtain global statistics of calls audio quality.
- Increase the available resources of the platform as long as is needed:
 - Increasing resources available in a standalone installation
 - Migrating, whenever required, to a distributed installation with multiple AS, media relays, etc.

To sum up, **this role is the only one that has no limits within the platform**, tharts why *God* is a term used in multiple places along this documentation.

Important: *This role is responsible of maintain the platform**, configuring it for the correct behaviour. This role **doesn't have any kind of limit** and **grants access to the brand operators**.

3.2 Brand administrator role

Brand operator can access a portal with less sections available compared to the previous role. The general (God) administrator is in charge of providing an URL with credentials for its brand portal.

The most important task for brand operator can be managed through this portal: **create and configure companies so they can work properly**.

Due to brand operators are also resposible of billing their companies and make sure the external cals are properly setup, it must also manage:

- Peering contracts with other IP providers for PSTN interconectivity.
- Include all required company information for the billing process.
- Pricing plans that will offer to their companies, that will determine how much they pay for each call.
- Setup the routes for each outgoing call types based on their final destination
- Create the invoices for each billing period and send them to their clients.

As you can see, the task of brand operator has little in common with the global operator, but their importance is vital so the final users can use all the features includes in IvozProvider

Important: To sum up, the brand operators **grant access** to the **company** administrators they serve and **configure the platform to route, tarificate and bill their calls**.

3.3 Company administrator role

The company administrator has access to the portal supplied by the brand operator.

From its point of view, it has a virtual pbx in the cloud that must configure for its users.

To accomplish that, it's required:

- Configure terminals, extensions and users.
- Configure the DDI incoming process with the proper logic:
 - Directly to an user
 - IVRs
 - Hunt groups
 - Faxes
- Give access to the final users to their web portal, so they can configure their profile options:
 - Call forward
 - Do not disturb
 - Call waiting

Important: To sum up, the company administrators are responsible for **configuring the telephony system and make use of all the features available in IvozProvider**.

3.4 Final user role

The final user has two different kinds of credentials, both supplied by its company administrator:

- User portal access credentials
- SIP credentials used to register its terminal (or terminals) to IvozProvider

Through the user portal, it can browse their call registry and configure:

- Call forward
- Do not disturb
- Call waiting

On the other hand, the SIP credentials allow the users to configure their terminal (or terminals) to place and receive calls.

Note: The same SIP credentials can be used in multiple devices at the same time, generating what is known as *parallel-forking*: whenever a call is placed to an user, all the active devices will ring so the user can answer the call from any of them.

Important: Final users are the ones that use and enjoy all the feature of IvozProvider

Initial Installation

4.1 Installation Types

4.1.1 Distributed Install

IvozProvider software is designed to run distributed between multiple systems in what we call profiles:

Each profile is in charge of performing one of the platform functionalities:

- Data storage
- SIP Proxy
- Application Server
- Web portal

For each of this profiles, there's a virtual package that will install all the required dependencies (see *Installing profile package*).

You can install as many instances as you want for each profile, but take into account, that while some of them are designed to scale horizontally (for example: asterisk or media-relays) others will require additional software so the systems that have the same profile are synchronized (for example: database replication or http request balancing).

4.1.2 StandAlone Install

If you want a small installation to make a couple of tests or give a basic service, we have designed all this configuration so they can work in a single machine.

We have called this kind of installations **StandAlone** and we have also created *Automatic ISO CD image* so you can install in a couple of minutes.

4.2 Minimum requirements

4.2.1 System requirements

IvozProvider is designed to be installed using Debian GNU/Linux APT package system.

Important: It's recommended to install IvozProvider in a dedicated server for the platform. Many of the installed software may not work properly with other pre-installed services (like MySQL or DNS servers).

For a StandAlone installation, we recommend at least:

- 4 CPUs (x86_64 or i386)
- 4 Gb memory
- 30GB HDD
- 1/2 public IP Addresses (read note behind)

Note: Since version 1.2 it is possible to make both KamUsers and KamTrunks share a unique public IP address. If so, **KamTrunks ports will be changed from 5060 (TCP/UDP) to 7060 (TCP/UDP) and from 5061 (TCP) to 7061 (TCP)**.

If you're not using a *Automatic ISO CD image* you will also need:

- Debian Jessie 8.0 base install
- Internet access

4.3 Debian packages install

IvozProvider is designed to be installed and updated using Debian packages. More exactly, the current release is ready to be installed on [Debian Jessie 8](#).

It's recommended to use one of the [official installation guides](#) to install the minimum base system. The rest of required dependencies will be installed automatically with IvozProvider meta packages.

No matter if you are installing a *StandAlone Install* or a *Distributed Install*, it's required to configure Irontec debian repositories.

4.3.1 APT Repository configuration

Right now, two different repositories are used for the latest IvozProvider release (called oasis) and it's frontend Klear release (called chloe).

```
cd /etc/apt/sources.list.d
echo deb http://packages.irontec.com/debian oasis main extra > ivozprovider.list
echo deb http://packages.irontec.com/debian chloe main > klear.list
```

Optionally, we can add the repository key to check signed packages:

```
wget http://packages.irontec.com/public.key -q -O - | apt-key add -
```

4.3.2 Installing profile package

Once the repositories are configured, it will be required to select the proper metapackage depending on the type of installation.

- **For a StandAlone Install:**

- ivozprovider
- For a *Distributed Install*: one of the profile packages depending on the role the machine will perform.
 - ivozprovider-profile-data
 - ivozprovider-profile-proxy
 - ivozprovider-profile-portal
 - ivozprovider-profile-as

```
apt-get update  
apt-get install ivozprovider
```

4.3.3 Finish the installation

Distributed installation require a couple manual configuration based on the roles that are performing. Check [finishing role configuration](#) for more information.

Standalone installation have a menu that can be used to configure the basic services used in IvozProvider. Most of the services are automatically configured to work in the same machine with the default values.

This menu allows:

- Configure IP address(es) for SIP proxies
- Default platform language
- Administrator MySQL database password

It's possible to change any of this values anytime by running:

```
dpkg-reconfigure ivozprovider
```

Important: Any of the public IP addresses configured during the installation will work to acces the web portal. Default credentials are **admin / changeme**.


4.4 Automatic ISO CD image

You can download one of the [IvozProvider Automatic ISO CD images](#) (generated using simplecdd) in stable or nightly versions:


Important: IMPORTANT: Automatic install CDs will format target machine disk!

- Configure the target machine to boot from CD. It will display the Debian GNU/Linux installation menu.


Note: You can use graphic installation if you prefer, but the following screenshots show the standard installation.

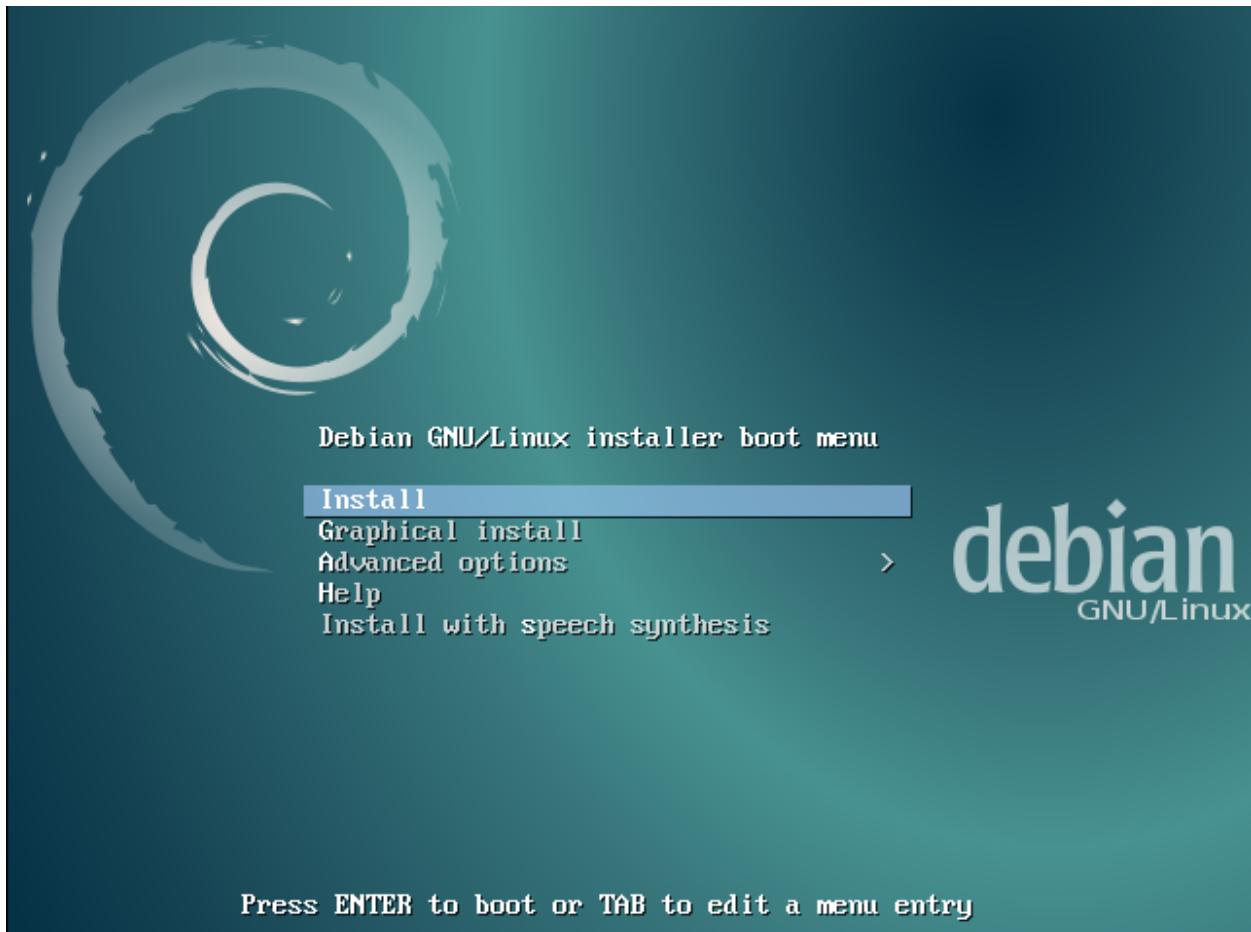


- Choose installation language:

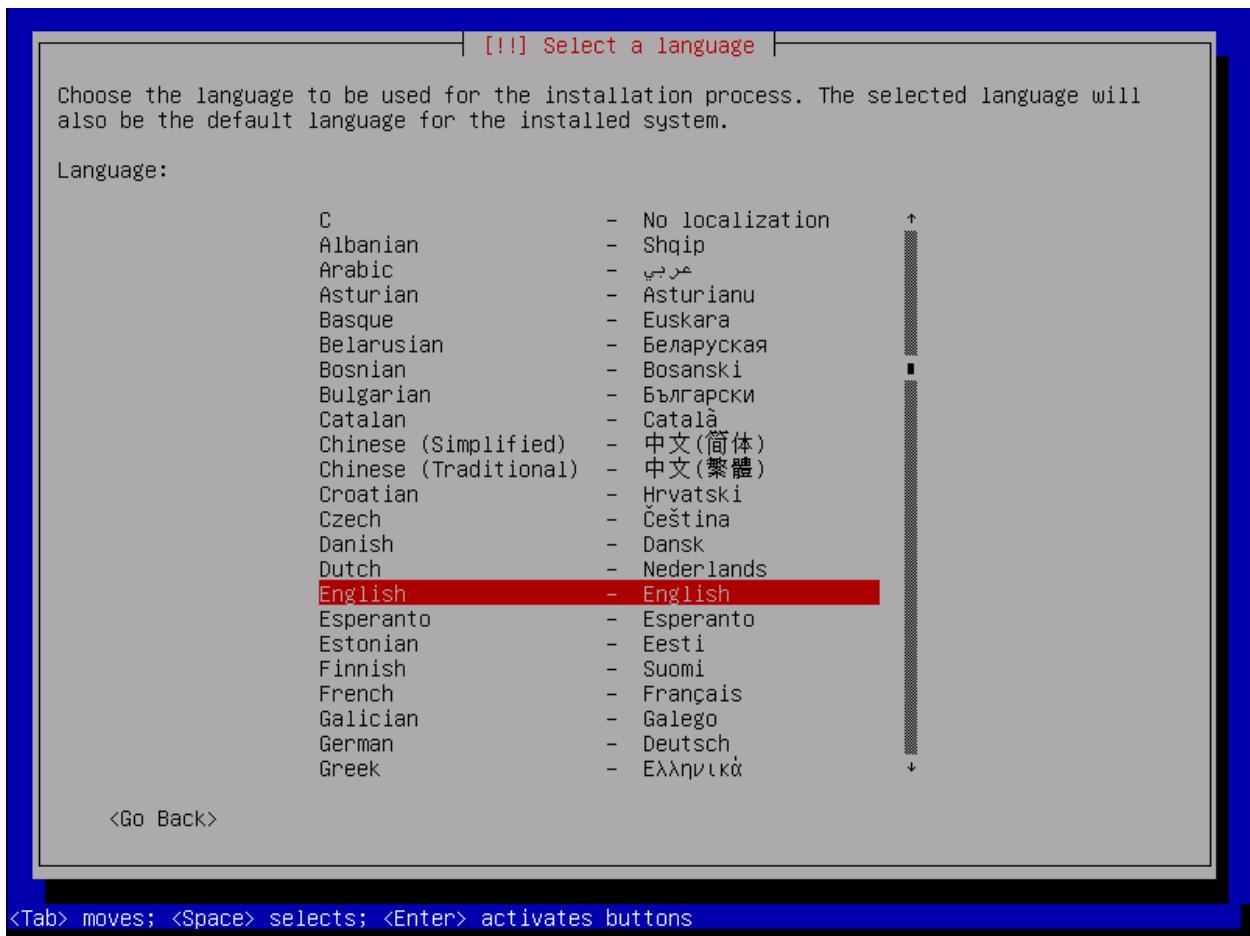

- Choose location:

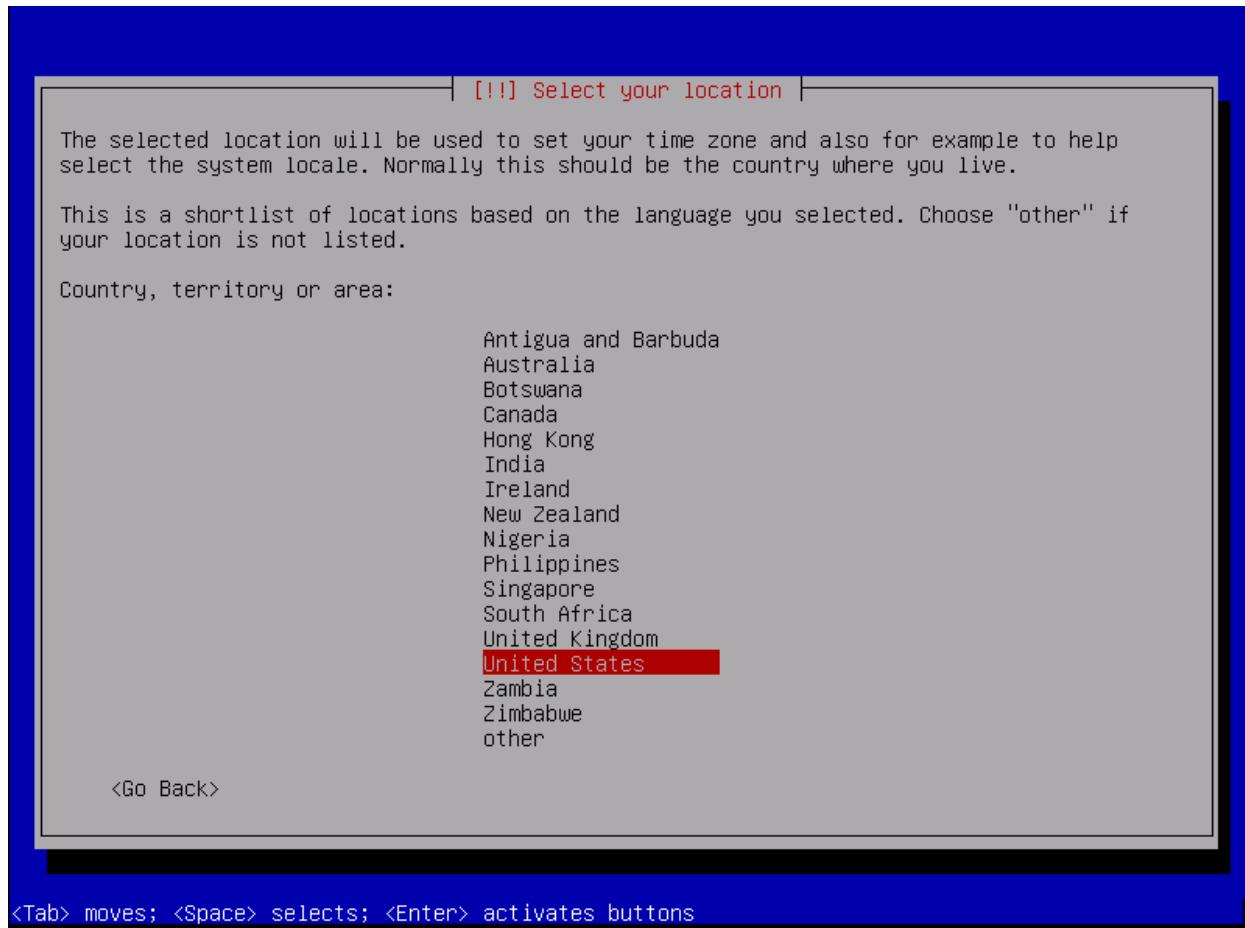


- Choose date and time configuration:

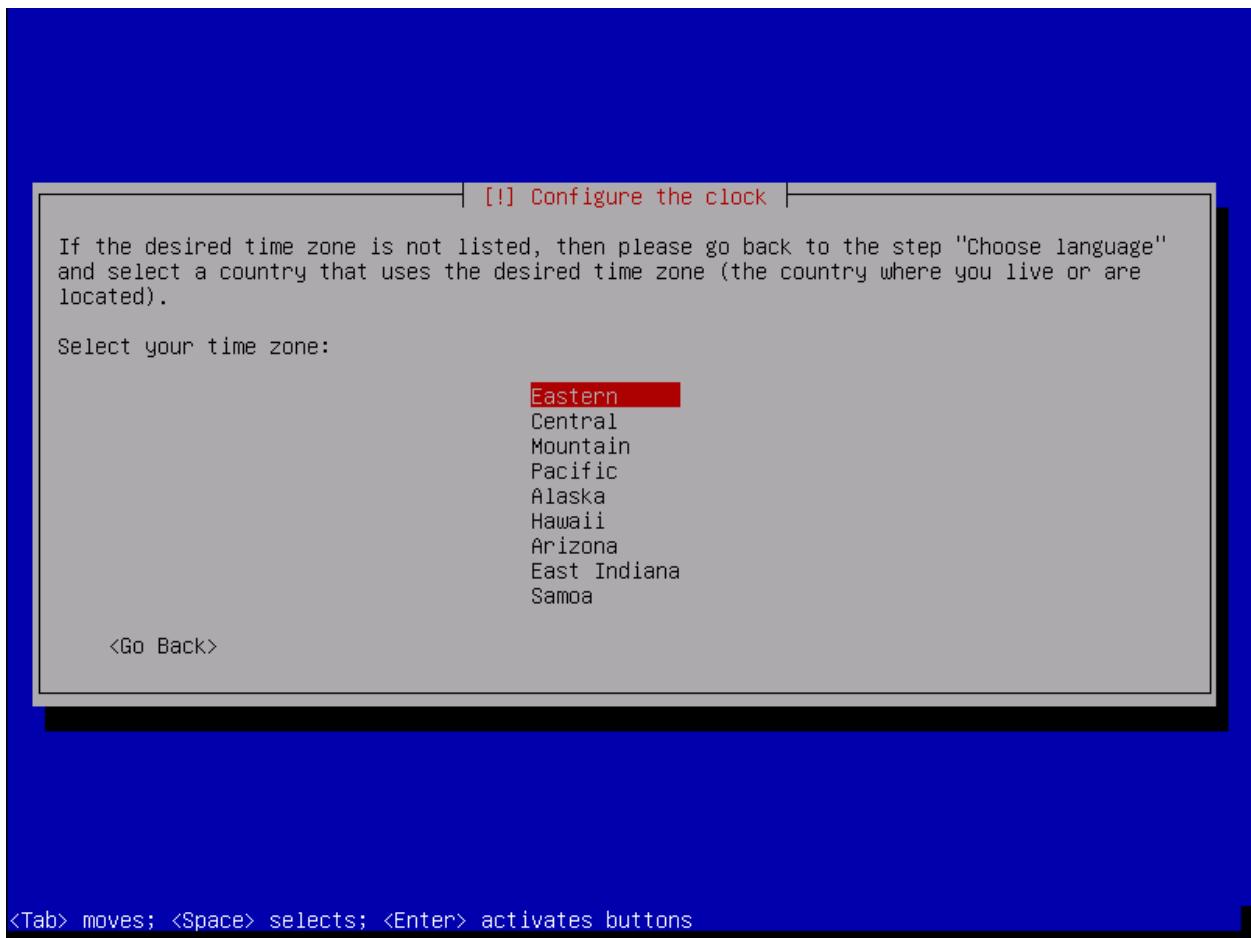


Note: At this point, a generic network configuration and disk partitioning will be performed, and also a installation of base system.

- Configure IvozProvider:

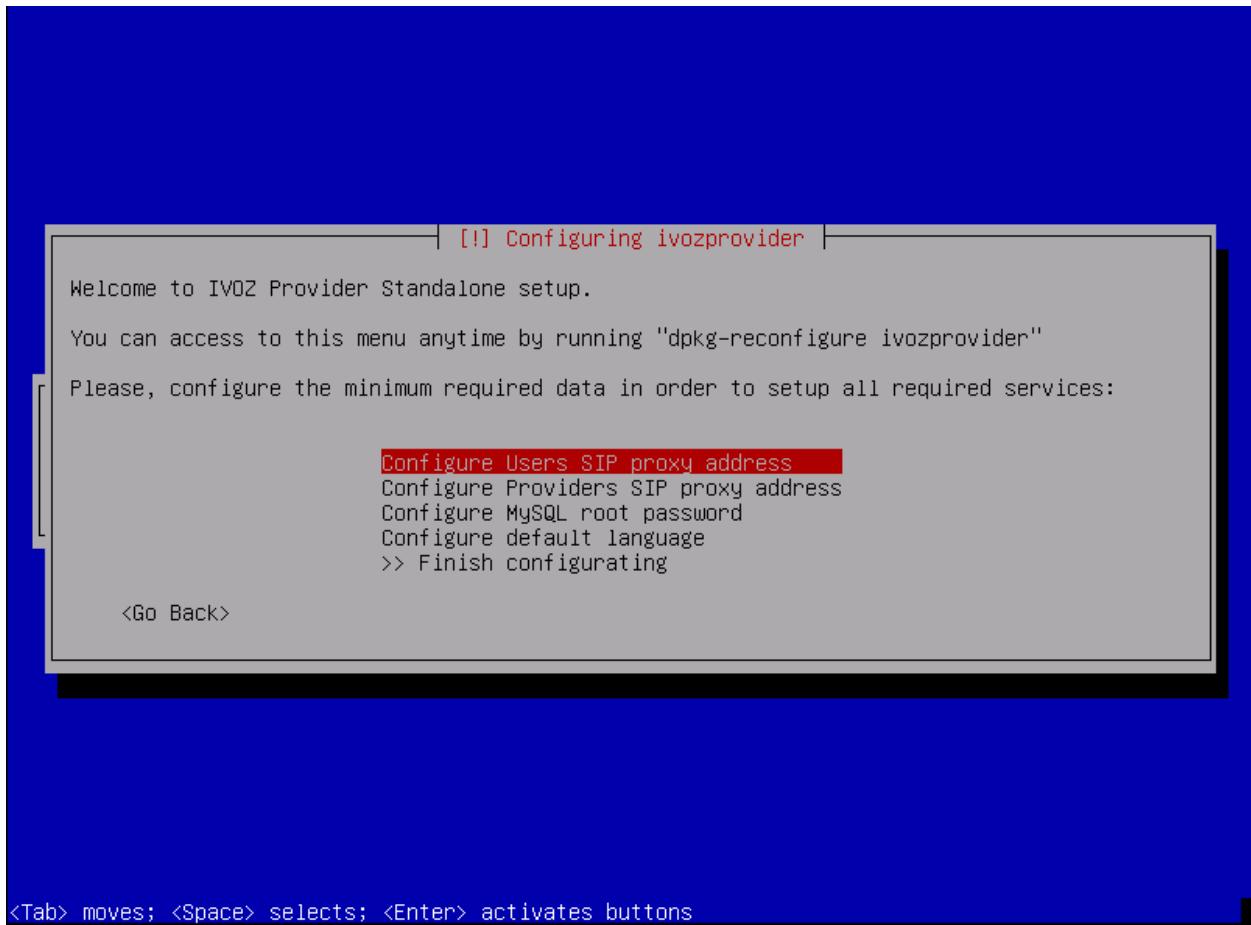


As mentioned in *Minimum requirements* is required at least one public IP address for User and Trunk SIP proxies. Remember that if you use only one, KamTrunks will use different SIP ports to avoid collision.

You can set its addresses right now and configure the interfaces properly when the system is fully installed. This menu can be displayed anytime after the installation.

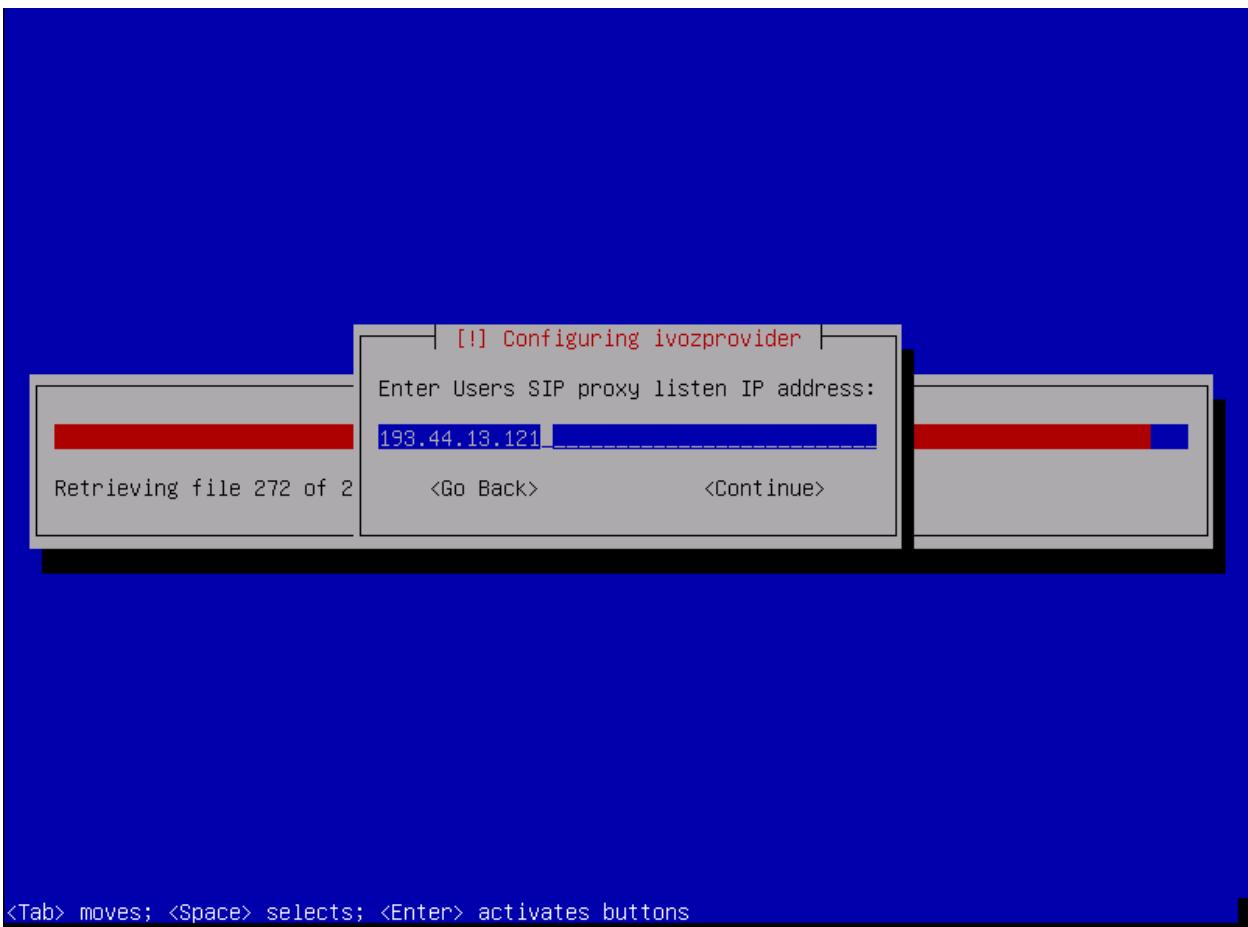


You can also configure default root MySQL password right now.


Note: If you don't configure MySQL password, default password will be used (changeme). You can still change it later.

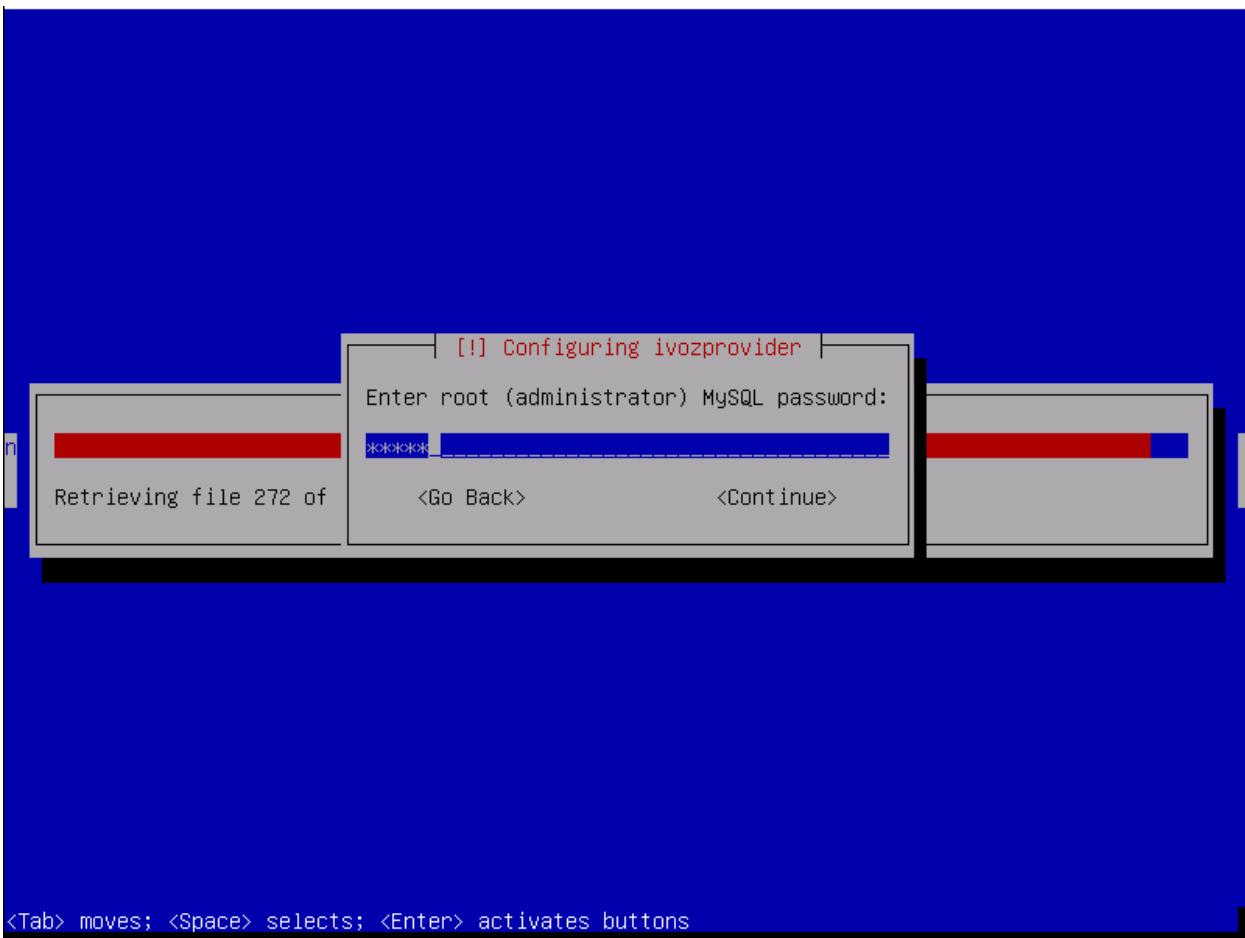

And default language for portals:

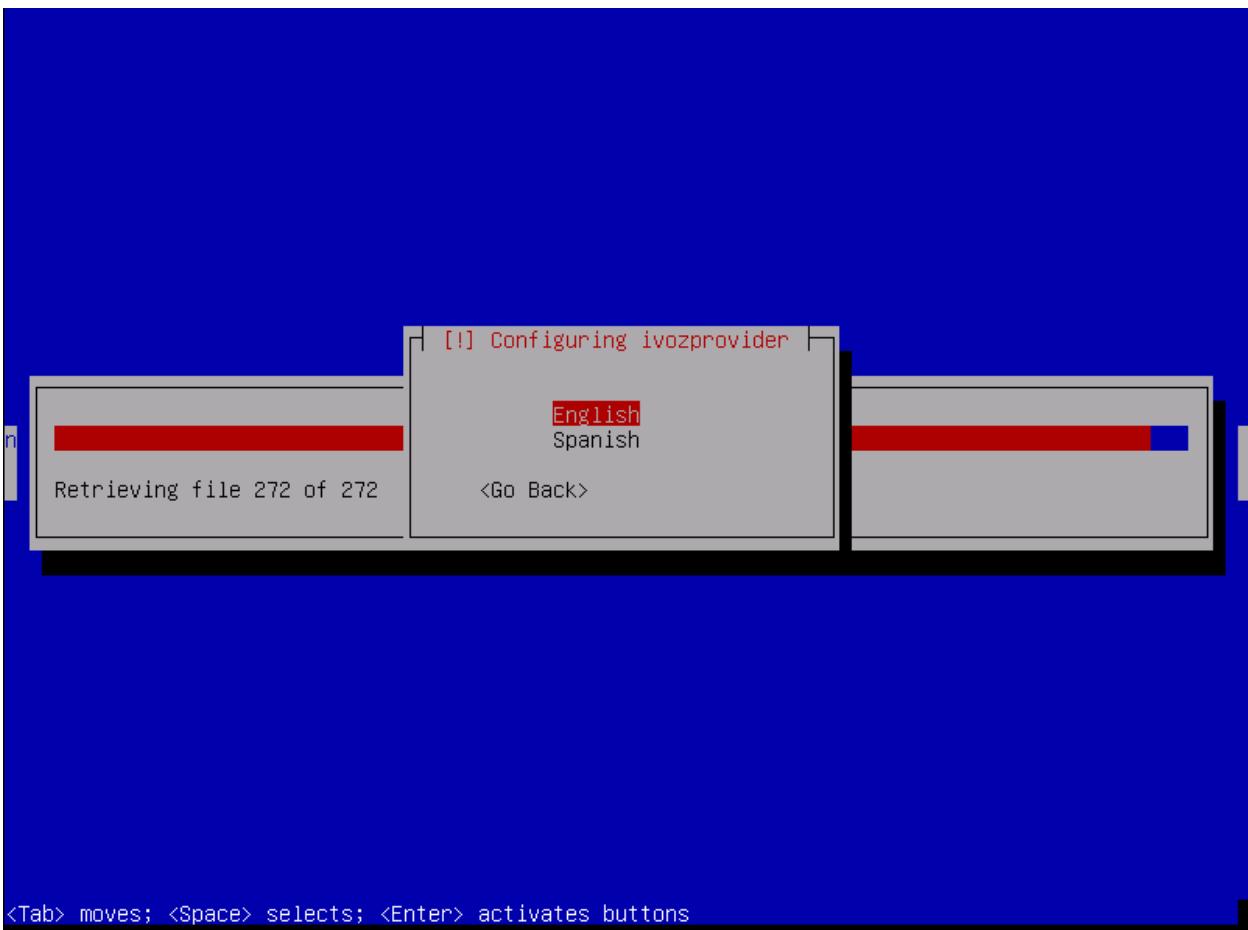


Note: It is not required to configure all settings during initial installation. In case any setting has been left without configuration a warning dialog will be displayed.

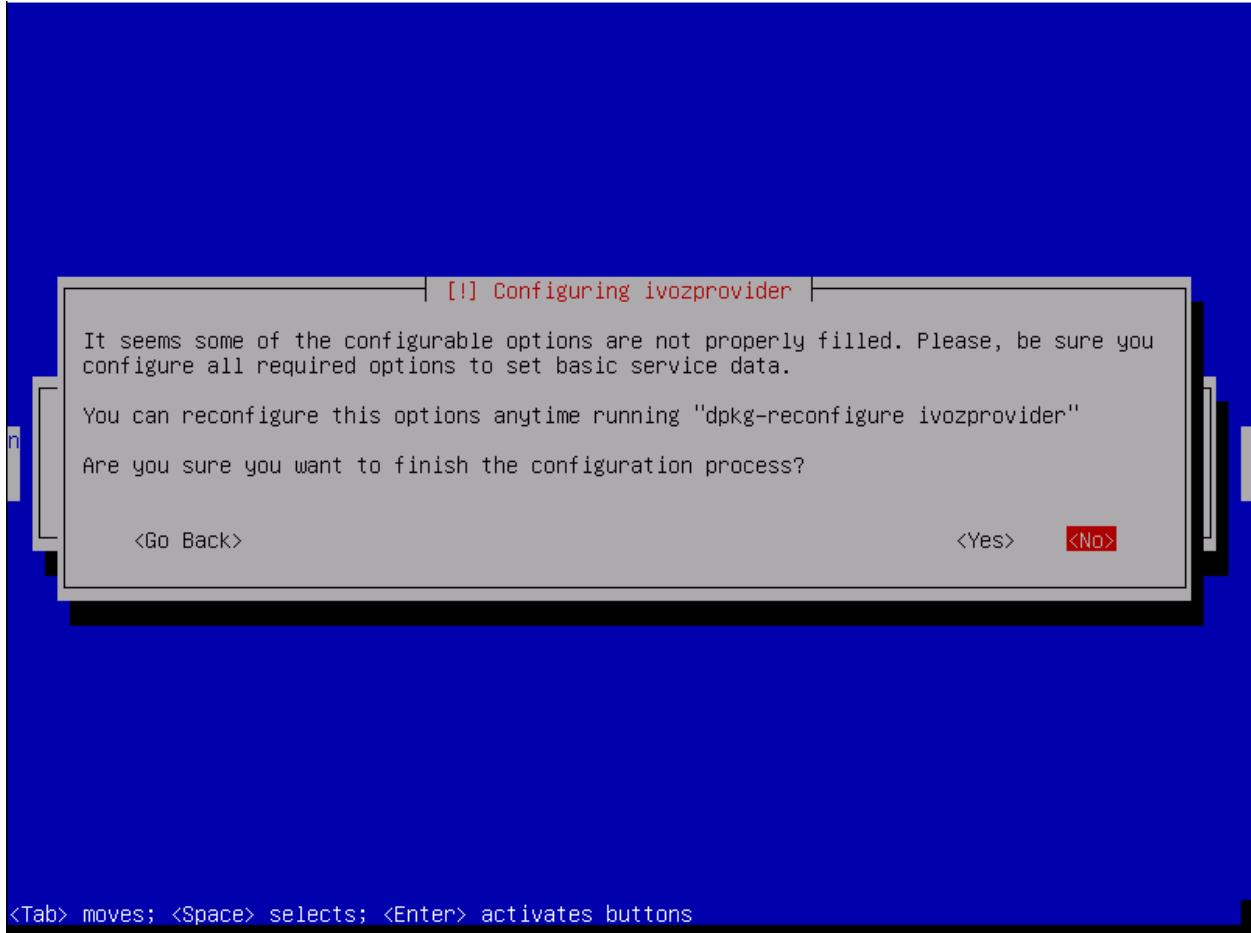

<Tab> moves; <Space> selects; <Enter> activates buttons

At last, select where the GRUB boot loader will be installed.

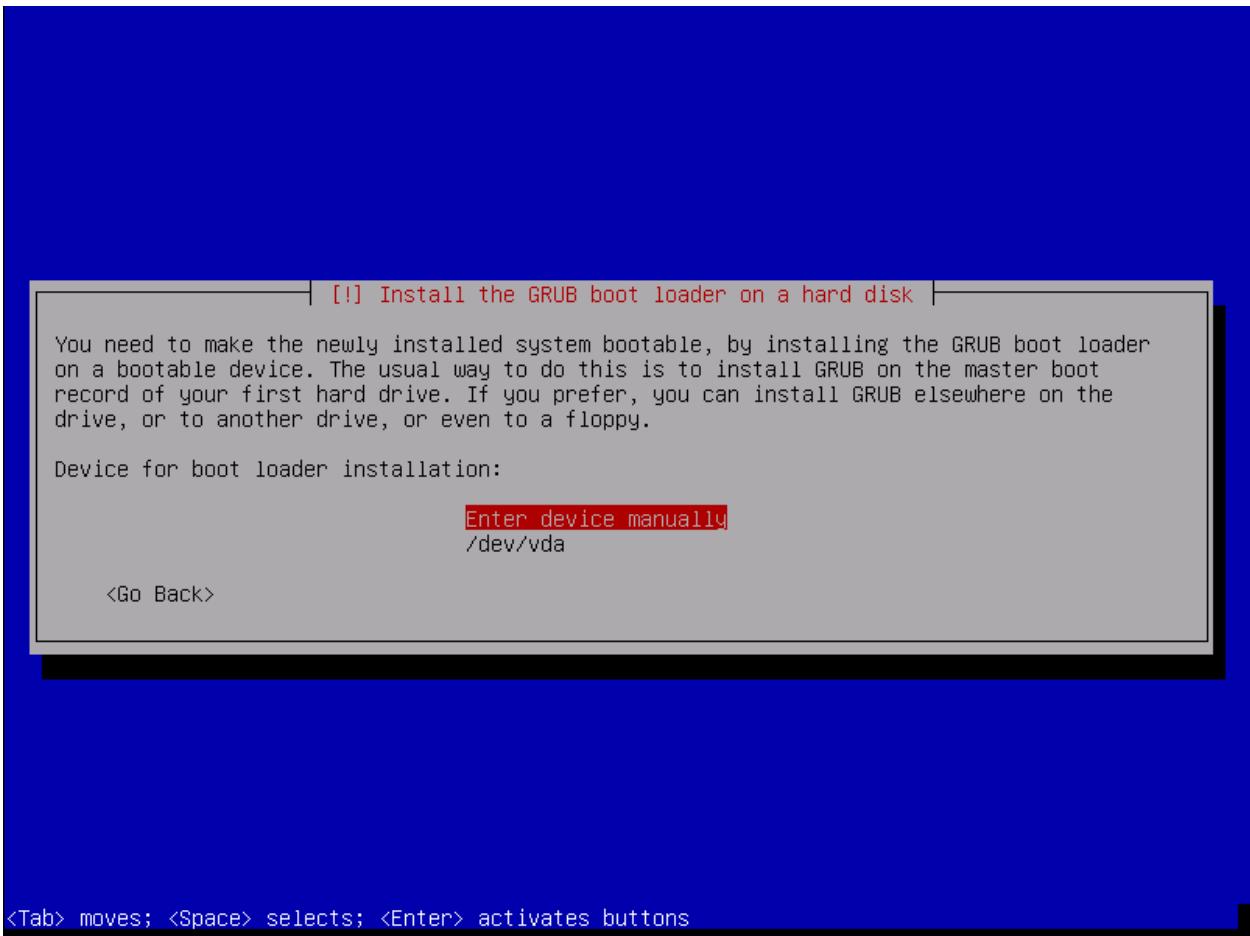

After the reboot, you are ready to access using the web portals!

Important: Any of the public IP addresses configured during the installation will work to access the web portal. Default credentials are **admin / changeme**.

4.5 Extra components

4.5.1 G.729

Important: In some countries, you might have to pay royalty fees in order to use G.729 codec to their patent holders. We're not legal advisors regarding active or withdrawn world patents.

You can use G.729 with IvozProvider, but installation must be done manually. G.729 codec is optimized for each CPU type and version of asterisk, so each installation may require a different codec module.

You can download codec from [here](#) under the section Asterisk 13.

Once downloaded, move the .so file to **/usr/lib/asterisk/modules/** and rename it to **codec_g729.so**

You can check the codec is valid by restarting asterisk and printing the available codec translations using:

```
systemctl restart asterisk # Restart asterisk  
asterisk -rx 'core show translation' | grep 729
```

Making internal calls


The goal of this block will be to configure IvozProvider in order to make internal calls, using as the starting point the base installation described in the previous step.

In order to archive a call between Alice and Bob, we have to do some task in the three configuration levels described in *Platform roles*, and that is why we have ordered the index in this blocks:

5.1 Main Management

Important: Any of the 2 Public IP addresses configured during the installation will work to acces the web portal. Default credentials are **admin / changeme**.

In this section will reference global administrator configuration options, avaible in the menu (**Main management**) of the web portal (only visible to God Admins):

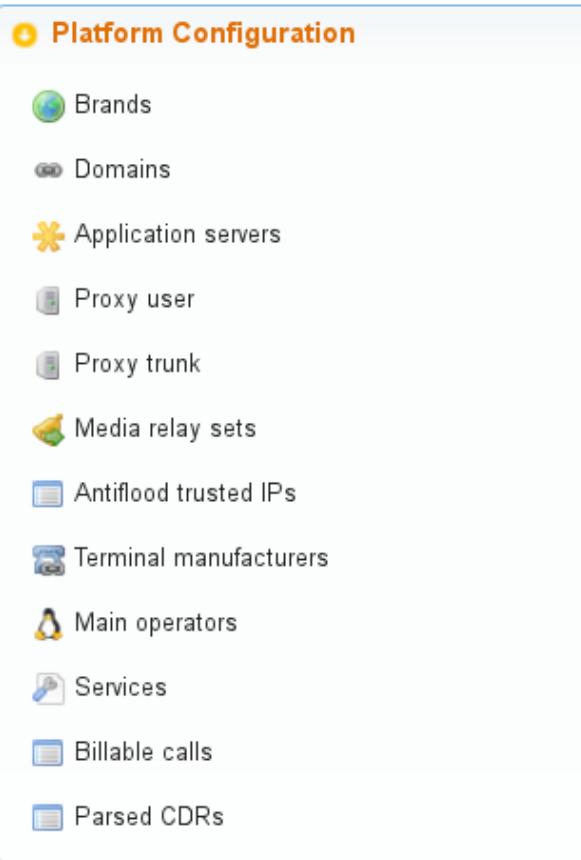

5.1.1 Custom installation configuration

During the install process two IP addresses will be requested in order to run the following two processes:

Users SIP Proxy

This is the SIP proxy exposed to the external world where users register their terminals.

The value displayed in the section **Proxy users** will show the IP address entered during the installation process.

| List of Proxy users | | | Total: 1 Records |
|---------------------|---------|---------|------------------|
| Name | Ip | Options | |
| proxyusers | A.B.C.D | | |

Providers SIP proxy

This is the SIP proxy exposed to the external world in charge of connecting the provider that brand administrators will configure for *peering*.

The value displayed in the section **Proxy trunk** will show the IP address entered during the installation process.

| List of Proxy trunks | | | Total: 1 Records |
|----------------------|---------|---------|------------------|
| Name | Ip | Options | |
| proxytrunks | A.B.C.D | | |

Note: Only the IP address will be entered as the port will be always 5060 (5061 for SIP over TLS).

Danger: This 2 values can be changed from the portal, but they must always have the same IP address that proxy process listen to requests.

5.1.2 Standard global configuration

The installation process includes other global values that are the same in any standalone IvozProvider installation and can also be checked from the web interface.

Application Servers

The section **Application Servers** will list the IP address where the existing Asterisk processes will listen for request, and like previously mentioned, can scale horizontally to adapt the platform for the required load.

Contrary to the Proxies, Asterisk is not exposed to the external world, so for a standalone installation there will only be one listening at 127.0.0.1.

| List of Application servers | | | Total: 1 Records |
|-----------------------------|-----------|---------|------------------|
| Name | Ip | Options | |
| as001 | 127.0.0.1 | | |

Note: The listening port will not be displayed in the field because it will always be 6060 (UDP).

Important: As soon as another Application Server is added, the proxies will try to balance load using it. If no response is received from added Application server, it will be disabled automatically.

Media relay

Media relays are in charge of bridging RTP traffic of established calls. Like the Application Servers, they can scale horizontally as much as required.

Media relays are organized in groups so they can be assigned to a company. Each element of the group has a **metric** that allows non-equal load balancing within the same group (i.e. media-relay1 metric 1; media-relay2 metric 2: the second media relay will handle two times the calls than the first one).

Hint: The static assignment of media relay groups is not the common practice but allow us to assign strategic resources to companies that need a warranted service. The most common usage of this **groups of media relays** is to place them near the geographic area of the company (usually far from the rest of the platform systems) in order to reduce **latencies** in their conversations.

In a standalone installation, only one media relay group will exist:



The screenshot shows a table titled "List of Media relay sets" with one record. The columns are "Name", "Description", and "Options". The single row contains "Default" in the Name column and "Default media relay set" in the Description column. The Options column contains a pencil icon.

| Name | Description | Options |
|---------|-------------------------|---------|
| Default | Default media relay set | |

By default this group only has a media server:



The screenshot shows a table titled "List of Media relay(s) (Default)" with one record. The columns are "Url", "Weight", and "Description". The single row contains "udp:127.0.0.1:22222" in the Url column, "1" in the Weight column, and "Local media relay" in the Description column. The Options column contains a pencil icon and a camera icon.

| Url | Weight | Description | Options |
|---------------------|--------|-------------------|---------|
| udp:127.0.0.1:22222 | 1 | Local media relay | |

Note: The address displayed is the control socket, not the SDP address that will be included during SIP negotiation. By default this alone media-relay will share the same IP address that the User's SIP proxy.

SIP Domains

The section **Domains** will display the SIP domains that points to our two public IP addresses.

- Users SIP Proxy IP address
- Trunks SIP Proxy IP address

After the initial installation, there will be two domains, one for each address:

| Domain | Scope | Points to | description | Options |
|---------------------------|--------|-------------|-----------------------------------|---------|
| users.ivozprovider.local | Global | proxyusers | Minimal proxyusers global domain | |
| trunks.ivozprovider.local | Global | proxytrunks | Minimal proxytrunks global domain | |

This domains will be used internally by a builtin DNS server included in the solution.

Attention: As mentioned in the section *Company SIP Domain*, each company will require a DNS pointing to the users SIP proxy. Once configured, the domain will be displayed in this list so global administrator can check what domains are registered for each company.

Brands

After the initial installation, the platform will have an already created brand called DemoBrand. Let's inspect its parameters:

Name Sets the name for this brand.

NIF Number used in this brand's invoices.

Logo Used as default logo in invoices and in portals (if they don't specify another logo).

Invoice data Data included in invoices created by this brand.

Mail data Display name and from address used in external emails for this brand (faxes, voicemail, etc.)

SIP domain Introduced in 1.4. Domain pointing to Users SIP proxy used by all the Retail Accounts of this brand.

Recordings Configures a limit for the size of recordings of this brand. A notification is sent to configured address when 80% is reached and older recordings are rotated when configured size is reached.

Features Introduced in 1.3, lets god operator choose the features of the created brand. An equivalent configuration is available in Companies, to choose between the ones that god operator gave to your Brand. Related sections are hidden consequently.

Hint: Some features (currently invoices and billing) are related to brand and cannot be assigned to companies. Remaining features are related to companies and lets the brand operator to assign them to its companies.

Warning: Disabling billing hides all related sections and assumes that an external element will set a price for calls (external tarification module is needed, ask for it!).

Note: Disabling invoices hides related sections, assuming you will use an external tool to generate them.


5.1.3 Emulate the Demo brand

As mentioned above, the initial installation will have an already created brand called DemoBrand, that will be used for our goal: to have 2 telephones registered that can call each other.


Before going to the next section, is quite important to understand how the **emulation** works.

- As global operator, you have access to the menu **Main management** only visible to *God* administrators.

- Apart from that menu, you will also have access to the **Brand configuration** and **Company configuration** that will look more or less like this:

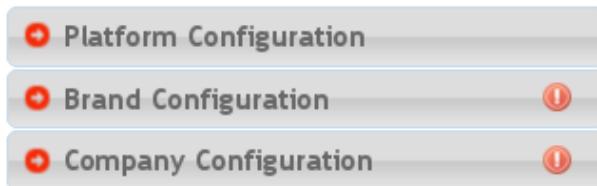

- Check following button

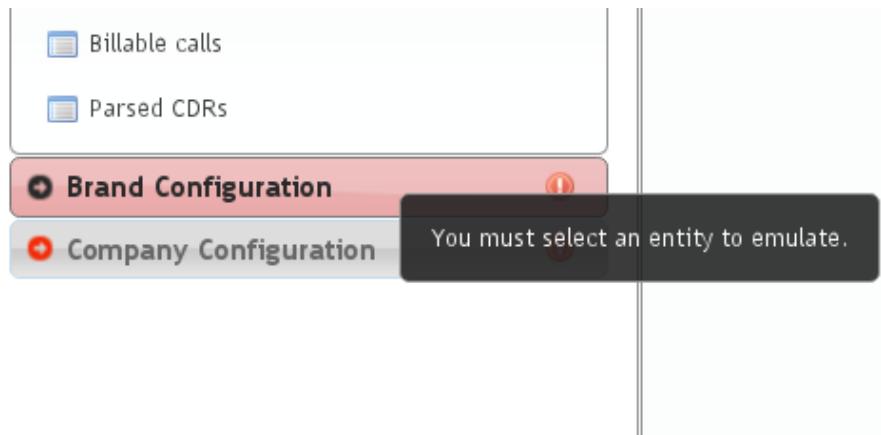

- When pressed, a popup will be displayed:



- After selecting the DemoBrand brand, the icon will change and shows the emulated brand:



- The upper right corner of the portal will also display the brand that is being emulated:

[Platform Administration Portal]

Operator: admin ivozprovider
Emulated brand: DemoBrand



What emulation means

Basically, that **everything in the menu ‘Brand configuration’ will be relative to the chosen brand** and is exactly the same menu entries that the brand operator will see using its brand portal.

Tip: Ok, ok. maybe exactly is not totally accurate. The global operator is able to see some fields in some screens that other admins can't (i.e. On Company edit screen, fields like ‘Media relays’ or ‘Application server’ are only configurable by the global operator.

5.2 Brand Configuration

We need that the default DemoBrand have a company with at least 2 users. In order to archive this we will require little configuration in this section.

In fact, if we check **Companies** in the brand menu, we'll discover that there is already an existing *DemoCompany* that we can use to fulfill our desired goal :)

| List of Companies | | | | | | | Total: 1 Records | | | | |
|--|---------------------------|---------------------------------------|------------------------------------|----------------------------------|--------------------------------|-------------------------------|------------------|--|--|--|--|
| <input checked="" type="checkbox"/> Name | <input type="radio"/> Nif | <input type="radio"/> Outbound prefix | <input type="radio"/> Country code | <input type="radio"/> SIP domain | <input type="radio"/> Language | <input type="radio"/> Options | | | | | |
| <input type="checkbox"/> DemoCompany | 12345678A | | Spain (+34) | EDIT | Spanish | | | | | | |

Only a thing is required to configure for this company, marked as edit in the previous image.

5.2.1 Company SIP Domain

As mentioned in the previous section, is **required** that each of the companies have a public domain that resolves to the configured IP address for *Users SIP Proxy*.

Note: DNS register can be type A (supported by all the hardphones/softphones) or even NAPTR+SRV.

Once the domain has been configured (by means that are out of scope of this document), it will be enough to write it in our company configuration:

Server data

Outbound prefix:

255 characters remaining

Application server id:

Dispatch to any AS

Country code:

★ Spain (+34)

Filter by IP address:

No

Media relay Set:

Default

SIP domain:

★ users.democompany.com

234 characters remaining

Areacode:

10 characters remaining

External max call:

0

Once the company has been saved, the domain will be also displayed in the list *previously mentioned*:

| List of Domains | | | | | | Total: 3 Records |
|---------------------------|-----------------------|-------------|-----------------------------------|---------|--|------------------|
| Domain | Scope | Points to | description | Options | | |
| users.ivozprovider.local | Global | proxyusers | Minimal proxyusers global domain | | | |
| trunks.ivozprovider.local | Global | proxytrunks | Minimal proxytrunks global domain | | | |
| users.democompany.com | DemoCompany (company) | proxyusers | DemoCompany proxyusers domain | | | |

Attention: It's important to understand this block. *Unless we've a single company registered*, without a DNS domain pointing to our users proxy IP address, everything will fail.

This is a good sign for the domain we have configured right now, replacing the 10.10.3.10 with the public address we have used to configure *Users SIP Proxy*.

```
[~]$ ping users.democompany.com
PING users.democompany.com (10.10.3.10) 56(84) bytes of data.
64 bytes from oasis-dev (10.10.3.10): icmp_seq=1 ttl=63 time=0.476 ms
64 bytes from oasis-dev (10.10.3.10): icmp_seq=2 ttl=63 time=0.467 ms
64 bytes from oasis-dev (10.10.3.10): icmp_seq=3 ttl=63 time=0.548 ms
^C
--- users.democompany.com ping statistics ---
3 packets transmitted, 3 received, 0% packet loss, time 1998ms
rtt min/avg/max/mdev = 0.467/0.497/0.548/0.036 ms
```

Danger: Have we stressed enough that without a properly configured DNS pointing to the Users proxy IP address nothing will work?

I have no time for a DNS registry

Everything we have said is true: as we create new brands and brands create new companies, each of them will need a DNS registry.

But the first company of the platform is quite special and can take over the IP address of the proxy to use it as a domain:

The screenshot shows the 'Server data' configuration screen. It includes the following fields:

- Outbound prefix:** A text input field with a placeholder "255 characters remaining".
- Media relay Set:** A dropdown menu set to "Default".
- Application server id:** A dropdown menu set to "Dispatch to any AS".
- SIP domain:** A text input field containing "A.B.C.D" with a red star icon and a placeholder "248 characters remaining".
- Country code:** A dropdown menu containing "Spain (+34)" with a red star icon.
- Areacode:** A text input field with a placeholder "10 characters remaining".
- Filter by IP address:** A dropdown menu set to "No".
- External max call:** A numeric input field set to "0" with up/down arrows.

Although it is not a domain, but being used like it was, it will be displayed in Domain section:

| Domain | Scope | Points to | description |
|---------|-----------------------|------------|-------------------------------|
| A.B.C.D | DemoCompany (company) | proxyusers | DemoCompany proxyusers domain |

Tip: It's important to understand this trick is only valid for the first company of the platform ;)

5.2.2 Remaining parameters

These are remaining relevant parameters configured in Companies section:

Name Sets the name for this company.

NIF Number used in this company's invoices.

Invoice data Data included in invoices created by this brand.

Outbound prefix Some companies are used to dial an additional prefix for outgoing calls.

Outgoing DDI Introduced in 1.3, this setting selects a DDI for outgoing calls of this company, if it is not overridden in a lower level (e.g. user level)

Media relay set As mentioned above, media-relay can be grouped in sets to reserve capacities or on a geographical purpose. This section lets you assign them to companies.

Application Server IvozProvider will distribute calls between all application servers, but you can make a static assignment here (e.g. debugging).

Recordings Configures a limit for the size of recordings of this company. A notification is sent to configured address when 80% is reached and older recordings are rotated when configured size is reached.

Features Introduced in 1.3, lets brand operator choose the features of the company. Related sections are hidden consequently and the company cannot use them.

Note: Most of the features are self-explanatory, but **voice notification** deserves an explanation: if you enable them, when a call fails, the user will listen a locution explaining what occurred (“you have no permissions to place this call”, “the call cannot be billed”, etc.)


Warning: Recordings rotation happens at two levels: brand and company. This means that **a company's recordings can be rotated even though its limit has not arrived (or even it has no limit) if brand's limit applies first.**

Error: Again: recordings rotation happens at two levels: brand and company. This means that **a company's recordings can be rotated even though its limit has not arrived (or even it has no limit) if brand's limit applies first.**

Hint: To avoid this, make sure that the sum of all companies does not exceed the size assigned to your brand and make sure that all companies has a size configured (if 0, it has unlimited size).

5.2.3 Emulate Demo company

The company emulation process is the same as the brand emulation, with the difference that it filters the block ‘Company Configuration’ instead of ‘Brand Configuration’.

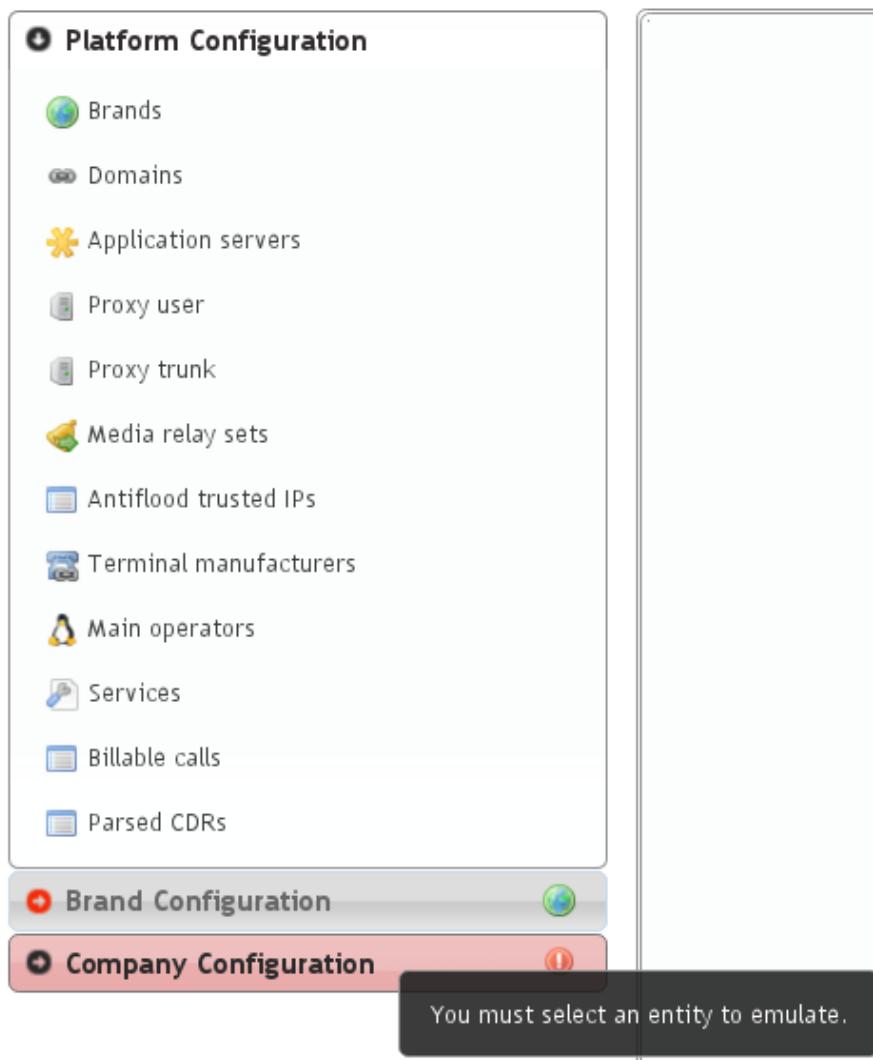


The screenshot shows a modal dialog titled 'Select Company'. It contains a text input field with the placeholder 'Select the company you want to emulate' and a dropdown menu showing 'DemoCompany'. At the bottom is a large 'Enter' button.

Once the company has been emulated, the top right corner of the portal will show that we are in the right path :)

[Platform Administration Portal]

Operator: admin ivozprovider
 Emulated brand: DemoBrand
 Emulated company: DemoCompany

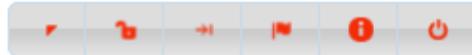

5.3 Company Configuration

We're close to make our first call in our fresh installed IvozProvider, there are only 6 steps to configure in our Demo-Company company.

- 2 terminals
- 2 extensions
- 2 users

5.3.1 Creating Terminals

Go to the terminal section and... voilà! We already have 2 terminals created:

| List of Terminals | | | | | | | | Total: 2 Records |
|--------------------------|-------|--------|----------------|-----|--------------------|------------------------------------|---------|------------------|
| | Name | Domain | Terminal Model | Mac | Allowed codecs | Status | Options | |
| <input type="checkbox"/> | alice | asd | Generic | | alaw - G.711 a-law | ! | | |
| <input type="checkbox"/> | bob | asd | Generic | | alaw - G.711 a-law | ! | | |

5.3.2 Creating Extensions

Then we go to extensions, just to check that we have 2 extensions already created for us:

| List of Extensions | | | | | Total: 2 Records |
|--------------------------|--------|------------|--------------|---------|------------------|
| | Number | Route type | Target | Options | |
| <input type="checkbox"/> | 101 | User | Alice Alison | | |
| <input type="checkbox"/> | 102 | User | Bob Bobson | | |

Nothing more to do in this section, let's go the next one!

5.3.3 Creating Users

As expected, we also have 2 created users:

| List of Users | | | | | | | | Total: 2 Records |
|--------------------------|-------|----------|------------------|----------|--------------|---------|--|------------------|
| | Name | Lastname | Screen Extension | Terminal | Outgoing DDI | Options | | |
| <input type="checkbox"/> | Alice | Alison | 101 | alice | Unassigned | 0 0 0 | | |
| <input type="checkbox"/> | Bob | Bobson | 102 | bob | Unassigned | 0 0 0 | | |

At this point, we have everything ready to make a call between these two users: Alice and Bob.

5.4 SIP Terminal configuration

The last thing we need is 2 SIP terminals (hardphones, softphones or even mobile applications) and configure them as follows:

ALICE

- **User:** alice
- **Password:** alice
- **Domain:** users.democompany.com (or the IP if we are using *the DNS trick*)

BOB

- **User:** bob
- **Password:** bob
- **Domain:** users.democompany.com (or the IP if we are using *the DNS trick*)

Tip: Sometimes the user and domain is configured in a single option. In this case we should enter alice@users.democompany.com and bob@users.democompany.com (or the IP if we are using *the DNS trick*)

After configuring the terminals, Alice should be able to call Bob only by dialing 102 in her terminal.

Receive external calls

The goal of this block will be configure IvozProvider to receive incoming external calls.

In order to achieve this, these steps will be followed:


6.1 Numeric transformations

6.1.1 Concept

IvozProvider is designed to provide service **anywhere in the planet**, not only the original country where the platform is installed.

A very important concept to achieve this goal is the numeric transformation, that **adapts the different number format systems of the countries of the world** defined in [E.164 to a neutral format](#).

The section that allows the brand operator to configure all the **numeric transformations** is:

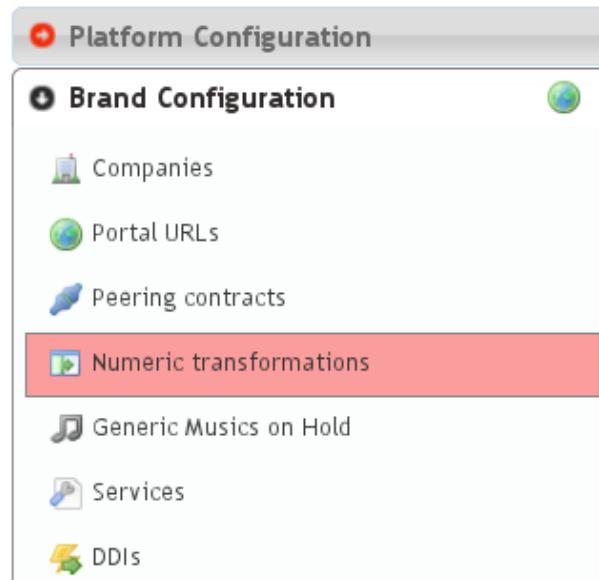

There are two different transformation scenarios:

Incoming transformations

When a new call is received in IvozProvider matching a provider that has been configured for *peering*, we must adapt the numbers that make reference to:

- Origin of the call
- Destination of the call

Depending on the country of the provider, the international numbers will have a format or another. In this case, the spanish provider will use, for example:

- 00 + 33 + number belonging to France
- It's possible that the international numbers came without the 00 code.
- It's possible that, if the call comes from the same country that the provider, the number comes without the calling code (911234567 instead of 00 + 34 + 911234567 for Spain).

For an Ukrainian provider, that doesn't use the 00 as international code:

- It will use 810 + 33 + number belonging to France.
- It's possible that even part of the internation code (00 in most of the countries of the world) the provider use specific codes as prefix.

The goal of the incoming transformation is that, no matter what numeric system the provider uses, the number will end in a general and common format.

Important: This common format is usually called E.164 and shows the numbers without internation code, but with country calling code: i.e. 34911234567

Outgoing transformations

In the same whay the origin and destination must adaptat incoming numbers, it will be required to adapt outgoing dialed numbers to properly work with each of the providers that will route our call.

For example, for a number with spanish number system:

- *Spanish provider:* Destination will come in E164 (34911234567) and for this provider, we can remove the calling code (will understand it belongs to its country), so the number sent to them will be 911234567.
- *French provider:* The destination will come in E164 (34911234567) and we must add the international code for France, so the number sent to them will be 0034911234567.

Note: To sum up, we aim to send the origin and destination in the format the provider is expecting.

Tip: Numeric transformation uses [simple regular expresions](#) to describe the changes done to the numbers. You can find multiple tutorials on net with the basic regular expression format.

6.1.2 ‘National provider’ transformations

IvozProvider comes with an automatic transformation rules generator that fits with most of the countries.

In order to create a new set of transformations for spanish provider:

Add Numeric transformation group

| | |
|--|---|
| Basic configuration | |
| Name: ★ 100 characters remaining | Description: 500 characters remaining |
| Automatic creation of rules | |
| Generate rules?: Yes | Country code: ★ Spain (+34) |
| International Code: 00 8 characters remaining | National number length: 9 |

The rules that has been auto-created will transform the numbers for spanish providers that follow this rules:

- A spanish number: Neither international nor calling code (34).
- Not a spanish number: International code (00) and calling code (34).

The numeric transformation *sets* must be assigned to **Peering Contracts**, as shown in the following section. This *set* can be shared by multiple spanish providers.

Let's check this *set* to understand what transformation rule does:

| List of Numeric transformation groups | | | | | Total: 2 Records |
|---------------------------------------|---------|-----------------------|------------------|-----------------------|------------------|
| <input type="checkbox"/> | Name | <input type="radio"/> | Description | <input type="radio"/> | Options |
| <input type="checkbox"/> | Spanish | <input type="radio"/> | Spanish operator | <input type="radio"/> | |

Attention: The automatic rule generation will create 8 common rules based on the given parameters. This rules can be edited later to match the provider requirements.

Spanish incoming transformation

Displayed in blue in the previous image:

- Left called/destination
- Right callee/origin

The same rules will be applied for the origin and destination:

| Callee In transformations | | | | | Total: 2 Records | | | | |
|---------------------------|----|-----------------------|---------------------------|-----------------------|------------------|-----------------------|------------------------|-----------------------|---------|
| <input type="checkbox"/> | Pr | <input type="radio"/> | Match exp | <input type="radio"/> | Repl exp | <input type="radio"/> | Attr | <input type="radio"/> | Options |
| <input type="checkbox"/> | 1 | <input type="radio"/> | ^ (001\+) ([1-9][0-9]+)\$ | <input type="radio"/> | \2 | <input type="radio"/> | International to E.164 | <input type="radio"/> | |
| <input type="checkbox"/> | 2 | <input type="radio"/> | ^ ([1-9][0-9]{8})\$ | <input type="radio"/> | 34\1 | <input type="radio"/> | National to E.164 | <input type="radio"/> | |

- The **metric** field will be used to order the rules (smaller first).

- If a rule doesn't *match*, the next rule is evaluated.
 - If a rule *matches*, no more rules are evaluated.
 - If no rule *matches*, no change is applied.
- The **Search** field is evaluated against the number (depending of the transformation type it will be destination or origin).
 - Metric 1: Starting with (^) 00 or '+', followed by a digit between 1 and 9 and only digits between 0 and 9 until the end (\$).
 - Metric 2: Starting with a digit between 1 and 9, followed by eight digits between 0 and 9 until the end(\$).
 - The **Replace** field will use the capture groups that matched the Search field (displayed between brackets, 1 for the first one, 2 for the second one, and so on) to determine how the number will end.
 - Metric 1: The number will be converted just to the second capture (2)
 - Metric 2: The number will be converted to the first capture with 34 prefix
 - Or in other words:
 - Metric 1: Strip the international code (00 or '+')
 - Metric 2: Add 34 to spanish numbers that come without calling code.

Spanish outgoing transformation

| Caller Out transformations | | | | | | Total: 2 Records |
|----------------------------|----|---------------|----------|------------------------|---|------------------|
| | Pr | Match exp | Repl exp | Attr | Options | |
| <input type="checkbox"/> | 1 | ^34([0-9]+)\$ | \1 | E.164 to national |   | |
| <input type="checkbox"/> | 2 | ^([0-9]+)\$ | 00\1 | E.164 to international |   | |

Following the same logic, these 2 rules make the change of the outgoing external destination numbers:


- Metric 1: If the number starts with 34 prefix, remove it. This converts E.164 spanish numbers to national format.
- Metric 2: If the number doesn't start with 34 prefix, add 00. This converts E.164 international numbers to spanish international numbers.

Attention: To sum up: numeric transformation can adapt origin and destination numbers to E.164 for the platform, and to providers expected formats, based on regular expressions and metric that can be grouped in *sets* to be shared between multiple **Peering Contracts**.

6.2 Configuring a Peering Contract

We understand a **Peering contract** the agreeing between a **Brand Operator** and a VoIP Provider to make and receive calls.

IvozProvider is ready to integrate with IP providers created on the section **Peering contracts**:

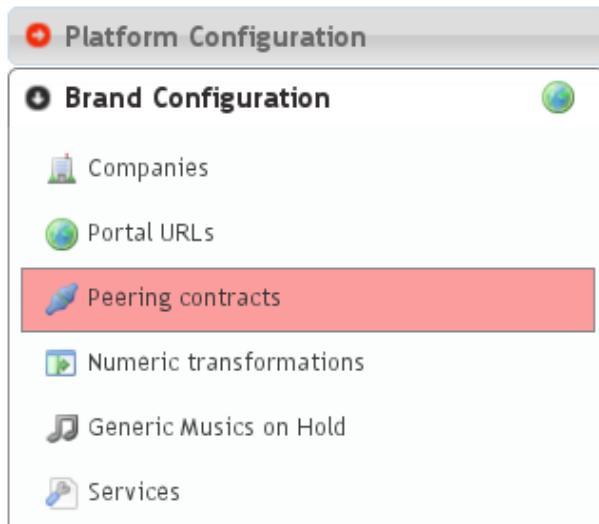

6.2.1 Peering contract Basic data

These are the basic information of a Peering contract:

| List of Peering contracts | | | | | Total: 1 Records |
|---------------------------|----------|----------------|--------------------------------------|---------|------------------|
| | Name | Description | Transformation ruleset groups trunks | Options | |
| | OPERATOR | My IP Provider | Spanish | | |

If we edit it, well see something like this:

The screenshot shows the 'Edit Peering contract (OPERATOR)' dialog box. It contains four input fields:

- Name:** OPERATOR
- Description:** My IP Provider
- Transformation ruleset groups trunks:** Spanish
- Externally rated:** No

Name Used to reference this Peering contract.

Description Optional field with any required extra information.

Numeric Transformation Transformation that will be applied to the origin and destination of the incoming and outgoing numbers that use this Peering contact (see *Numeric transformations*).

External tarification This setting requires the external tarification module and allows tarification on special numbers.
This module is not standard so don't hesitate in *contact us* if you are interested.

Important: Fields marked with a red start are mandatory.

6.2.2 Peer Servers

A **Peer Server** is a SIP server associated to an IP Provider. In order to add some Peer Servers for the Peer Contract that have just created, we only have to use the following section:

| List of Peering contracts | | | | | Total: 1 Records | | |
|---------------------------------------|----------|----------------------------------|----------------|----------------------------------|--------------------------------------|--|---------|
| <input type="checkbox"/> | Name | <input checked="" type="radio"/> | Description | <input checked="" type="radio"/> | Transformation ruleset groups trunks | <input checked="" type="radio"/> | Options |
| | OPERATOR | | My IP Provider | | Spanish | | |
| Add Peering contract | | | | | | Delete Peering contract | |
| | | | | | | List of Peer servers (OPERATOR) | |

As displayed by the zero counter, no Peer Serve has been created yet:

Add Peer server

Basic Settings

Name: **Description:**

SIP Proxy: **Uri scheme:** **Transport:**

Outbound Proxy:
128 characters remaining

Authentication Settings

Auth needed:

Source number header

Send PAI: **Send RPID:**

R-URI customization pre-transformations

Strip: **Prefix:**

R-URI params:

From optional customization

From user:
64 characters remaining **From domain:**
64 characters remaining

Name Used to identify this Peer Server

Description Optional field with any required extra information.

SIP Proxy IP address (or DNS registry) of the Peer Server. You can also specify a port if it's different from 5060.

URI Scheme Supported schemes are sip and sips. Use 'sip' in case of doubt.

Transport Supported transport protocols. Use 'udp' in case of doubt.

Outbound Proxy Usually this is left empty. It can be filled with the IP address of the **SIP Proxy** domain (to avoid

DNS resolution, but keeping the domain in the SIP messages). It works like a web proxy: instead of sending the SIP messages to destination **SIP Proxy**, they will be sent to the IP:PORT of this field.

Requires Authentication Some Peering contracts validate our platform by IP, others require each session that we want to establish. For this last case, this section allows to configure user and password for this authentication.

Call Origin Header Some Providers get origin from SIP From header. Others use the From header for accounting and need extra headers to identify the origin. In case of doubt leave **PAI** checked.

R-URI Transformations before numeric transformations This setting allow static changes to the destination of the calls before applying numeric transformation rules mentioned in *Numeric transformations*. Some digits can be stripped from the begining, add a prefix, or even, add extra parameters to the URI following the given format. In case of doubt, leave empty.

From header customization For those providers that show origin in other headers (PAI/RPID), it is possible that request that From User have the account code being used and from domain their SIP domain. In case of doubt, leave empty.

Tip: There are many fields to establish *peering* with multiple kind of providers, but usually with the name and SIP Proxy will be enough (for those that validate our platform by IP) and Authentication (for those that won't).

Warning: In case of defining multiple Peering Servers for a single Peering Contract, IvozProvider will balance and failover using all of them. Like with Application Servers, it will disable those who doesn't respond to our requests.

6.2.3 SIP Register

Some providers require a **SIP Register** active in order to receive incoming calls to our DDIs. Some of them, even require this register in order to process our outgoing calls through their services.

Note: IvozProvider supports any kind of *peering*, but we highly recomend *peer to peer peerings*: without authentication, without registry and validated by IP. This will avoid unnecessary traffic (authentication in each session and preriodic registers) and simplifies its configuration, just by leaving most of the fields by default.

For this reason, IvozProvider allows periodic SIP register configuration in the following section:

| List of Peering contracts | | | Total: 1 Records |
|--|--|--|---|
| <input type="checkbox"/> Name | <input checked="" type="radio"/> Description | <input type="radio"/> Transformation ruleset groups trunks | <input type="radio"/> Options |
| <input checked="" type="checkbox"/> OPERATOR | My IP Provider | Spanish |      |
| Add Peering contract | | | Delete Peering contract |
| List of Providers register(s) (OPERATOR) | | | |

If we create a new one, the following screen will be displayed:

Username Account number or similar provider by the provider that requires SIP register.

Domain Domain or IP of the registrar server. Usually the same as the SIP proxy of the Peer server.

DDI This will be sent in the SIP Contact header and must be unique in all the platform. For Peering contracts with an associated DDI, it is recommended to enter that DDI. In case of multiples DDI for the same Peering Contract, use any of them. If no DDI is associated with this Peering Contract just enter an unique numeric value.

User Authentication user. Most of the time it's the same as username, so it's recommended to leave empty.

Register server URI Usually this can be left empty, as it can be obtained from the Domain. If it is not the case, enter the IP address with the 'sip:' prefix.

Realm Leave empty to accept the authentication realm proposed by the provider. Define only if you are familiar to the authentication mechanism used in SIP.

Expire Default suggested register expire time.


Tip: Similar to the Peer Servers, there are lots of fields in the screen. You must have into account that most of the provider doesn't require register , and those who does, will only use user, domain and password.

Once we have an agreement with a VoIP provider and we have configured it in the *peering* section, only two task are pending:

6.3 Configuring an external DDI

The brand operator, responsible of this *peering* agreements with VoIP providers , has the task to create the DDIs for each provider.


To accomplish this, following section can be used:

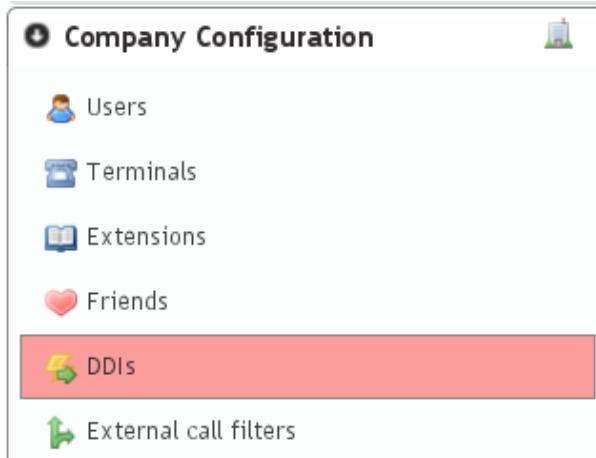

Notice that in order to access this section, the brand operator (or *god*) must have emulated the proper company and access the menu section **Company Configuration**.

Attention: Section **Company configuration > DDIs** is different when the company administrator access than the displayed data when a global or brand administrator does. Company administrator are unable to create or delete DDIs, just edit the one created by the brand or god administrator.

The section **Brand configuration > DDIs** is a *read-only* display of all the DDIs of the brand, associated with the different companies.

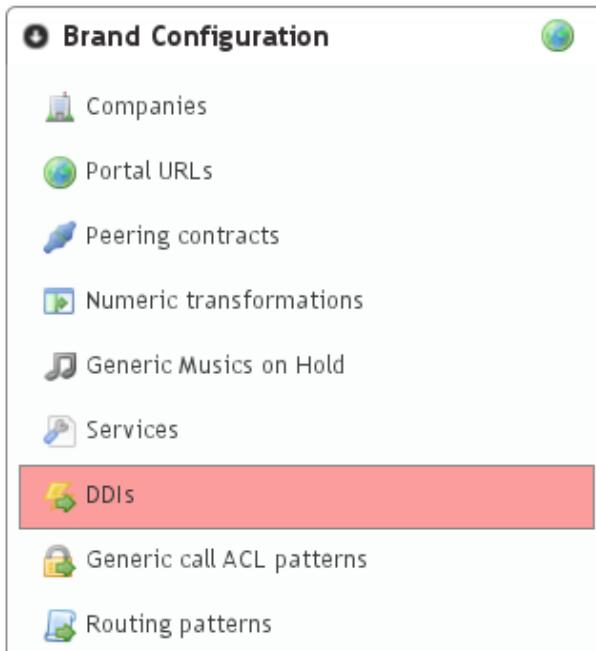

Taking into account this concepts, we create a new DDI and fill the required fields:

Country The country of the new created DDI. Used for E164 standardization.

DDI The number, without country code.

Peering contract The peering contract that provides this number. This relation allow the platform to apply the required *Numeric transformations* in order to determine its standard form.

External Call Filter Allows configuration based on Calendars and Schedulers as shown in *External Call filters*. Leave empty if you don't need to apply any kind of filter.

Route A DDI can have different *treatments*. For our current goal, set route to user and select *Alice*.

Record calls Can be used to record external calls (see *Call recording*).

Tarificate incoming calls This setting requires the external tarification module and allows tarification on special numbers. This module is not standard so don't hesitate in *contact us* if you are interested.

6.4 Configure incoming routes

In the previous section, we have created the DDI and configure it, but **the most common procedure** is that the brand operator just create it while the **company administrator**, using the same saction **will configure** it choosing the correct route (user, huntgroup, etc.), its filters with calendars and so on.

Note: At this point, calling the number of the configured DDI will make the *Alice* phone ring.

Making external calls

The goal of this section is configuring IvozProvider to make external outgoing calls, taking previous section configuration as a starting point.

We will follow this steps:


7.1 Where do I call?

At this point of the configuration, we have to configure IvozProvider to use the already configured *Contract Peering* to place the external calls we are making.

To achieve this, in first place, we need that the dialed external numbers fall in an existing **target pattern**.

7.1.1 Target patterns

When a user dials an external phone number, IvozProvider tries to categorize this call into a one of the target patterns defined in this section:

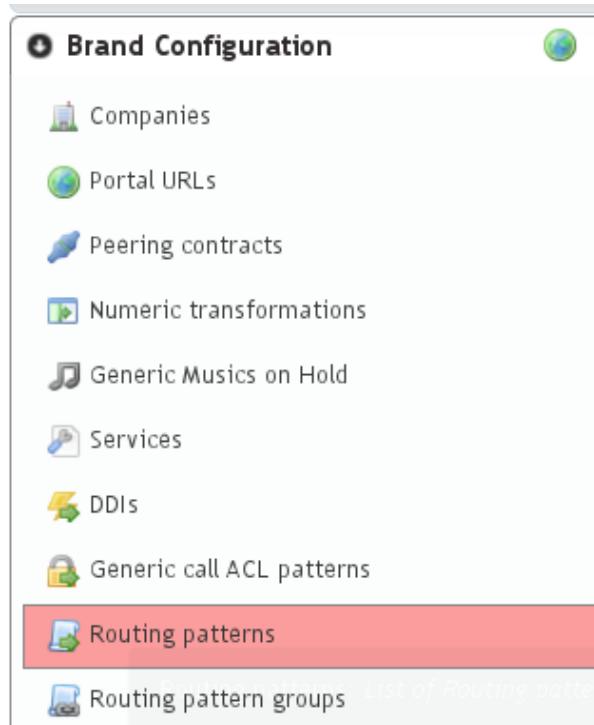

Usually, it will be useful to have one target pattern for the 254 countries defined in the ISO 3166. That's why IvozProvider automatically includes all these countries and their prefixes:

| List of Routing patterns | | | | | Total: 249 Records Records per page: 25 |
|--------------------------|----------------------|-------------|------------------|---------|---|
| | Name | Description | Reg exp / Prefix | Options | |
| | Andorra | | 376 | | |
| | United Arab Emirates | | 971 | | |
| | Afghanistan | | 93 | | |
| | Antigua and Barbuda | | 1268 | | |
| | Anguilla | | 1264 | | |
| | Albania | | 355 | | |
| | Armenia | | 374 | | |
| | Angola | | 244 | | |
| | Antarctica | | 672 | | |
| | Argentina | | 54 | | |

Within this list we can find Spain's prefix, that will be the prefix of the test call we are going to make in this section:

| List of Routing patterns | | | | | Total: 1 Records |
|--------------------------|-------|-------------|------------------|---------|------------------|
| | Name | Description | Reg exp / Prefix | Options | |
| | Spain | | 34 | | |

Warning: Brand operator can choose between keeping this target pattern if finds them useful or deleting them and creating the ones that meet his needs. In fact, apart from phone prefixes it is also possible to use regular expressions. e.g. Unique target pattern that contains all possible targets: ^[0-9]+\$


Danger: Notice that using regular expressions instead of prefixes can make a phone number to match more than one target pattern. Use with responsibility.

7.1.2 Target pattern groups

As we will see in *rutas salientes* section, every target pattern will be linked to a Peering Contract.

That's why it can be useful to group the target patterns in **target pattern group** so that we can link a whole group to a Peering Contract more easily.

This is the goal of this section:

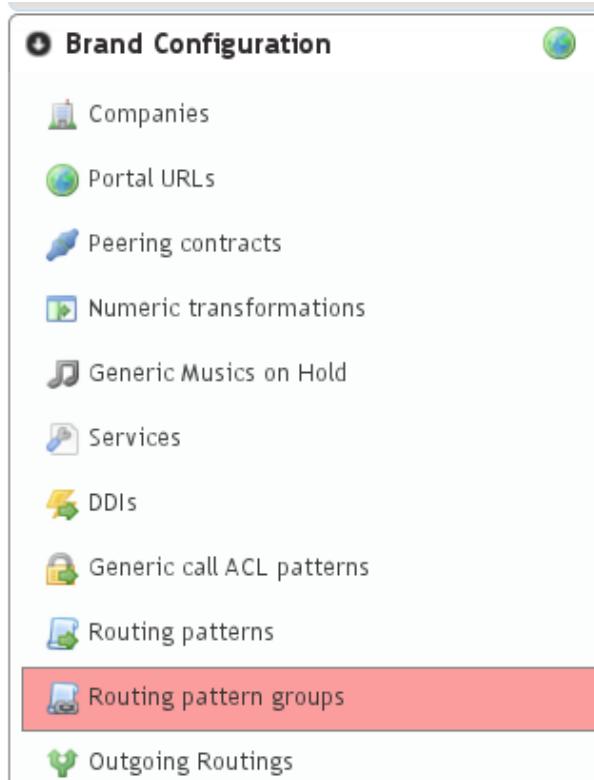

By default we can see the 254 countries grouped in the continents defined in ISO 3166:

| List of Routing pattern groups | | | | Total: 7 Records |
|--------------------------------|--------|-------------|--|------------------|
| | Name | Description | Destination patterns | Options |
| <input type="checkbox"/> | Europe | | Andorra (376), Albania (355), Austria (43), Åland Islands (358), Bosnia and Herzegovina (387), Belgium (32), Bulgaria (359), Belarus (375), Switzerland (41), Czech Republic (420), Germany (49), Denmark (45), Estonia (372), Spain (34), Finland (358), Faroe Islands (298), France (33), United Kingdom (44), Guernsey (44), Gibraltar (350), Greece (30), Croatia (385), Hungary (36), Ireland (353), Isle of Man (44), Iceland (354), Italy (39), Jersey (44), Liechtenstein (423), Lithuania (370), Luxembourg (352), Latvia (371), Monaco (377), Moldova (373), Montenegro (382), Macedonia (389), Malta (356), Netherlands (31), Norway (47), Poland (48), Portugal (351), Romania (40), Serbia (381), Russia (7), Sweden (46), Slovenia (386), Svalbard and Jan Mayen (47), Slovakia (421), San Marino (378), Turkey (90), Ukraine (380), Vatican City State (39) | |
| <input type="checkbox"/> | Asia | | United Arab Emirates (971), Afghanistan (93), Armenia (374), Azerbaijan (994), Bangladesh (880), Bahrain (973), Brunei (673), Bhutan (975), Cocos (Keeling) Islands (61), China (86), Christmas Island (61), Cyprus (357), Georgia (995), Hong Kong (852), Indonesia (62), Israel (972), India (91), British Indian Ocean Territory (246), Iraq (964), Iran (98), Jordan (962), Japan (81), Kyrgyzstan (96), Cambodia (855), North Korea (850), South Korea (82), Kuwait (965), Kazakhstan (7), Laos (856), Lebanon (961), Sri Lanka (94), Myanmar (95), Mongolia (976), Macao (853), Maldives (960), Malaysia (60), Nepal (977), Oman (968), Philippines (63), Pakistan (92), Palestine (970), Qatar (974), Saudi Arabia (966), Singapore (65), Syria (963), Thailand (66), Tajikistan (992), East Timor (670), Turkmenistan (993), Taiwan (886), Uzbekistan (998), Vietnam (84), Yemen (967) | |

Important: To sum up, when a user dials an external number, IvozProvider looks up a matching target pattern to


decide which PeeringContract must be used to place this call.

To achieve our goal of making an external call to a spanish number, we didn't have to modify the initial contents of this two sections :) We already have our test call categorized as a call within the **Target pattern** 'Spain'. In addition, we also have a **Target pattern group** including 'Spain', called 'Europe'.

Now we have to tell IvozProvider that calls to 'Spain' or 'Europe' should be established through our **Contract Peering**.

7.2 Outgoing Routing

To make this assignment, we use the section **Outgoing routing**:

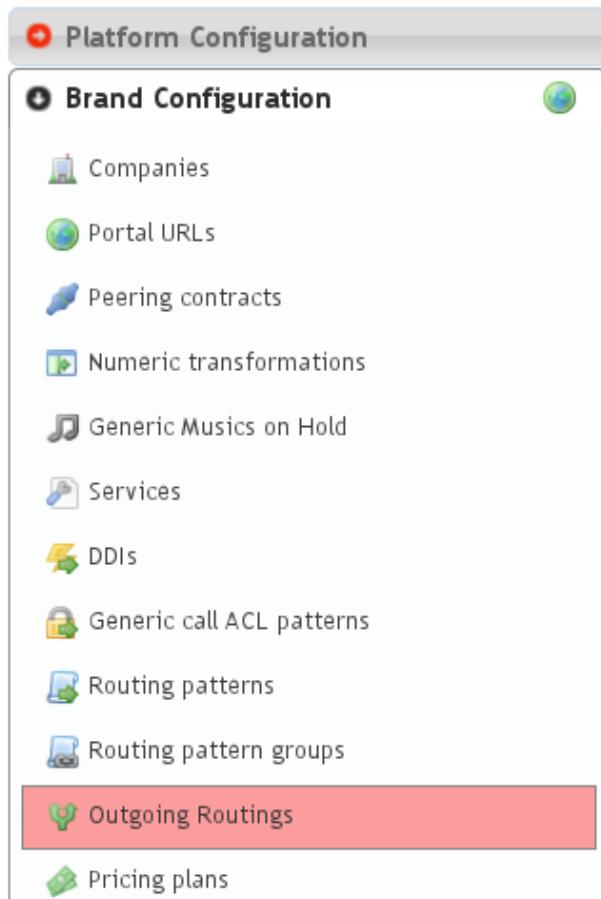

If we choose routing 'Spain' calls only through our *Peering contract*, we will make this configuration:

Add Outgoing routing

Company:
Apply to all companies

Call destination

Type: Pattern **Select destination pattern:** Spain (34)

Outgoing route

Peering contract: ★ OPERATOR

Failover and load-balancing

Priority: ★ 1 **Weight:** ★ 1

On the other hand, if we are more generous and we decide to place calls to all european countries, we would make this configuration:

Add Outgoing routing

Company: Apply to all companies

Call destination

Type: Group Select destination group: Europe

Outgoing route

Peering contract: ★ OPERATOR

Failover and load-balancing

Priority: ★ 1 Weight: ★ 1

Two parameters deserve an explanation in this section:

Priority If a call matches several routes, it will be placed using the outgoing route with lower priority, as long as it is available.

Metric If a call matches several routes with equal priority, metric will determine the proportion of calls that will use one route or another.

Note: This are the key parameters to achieve two interesting features: **load-balancing** and **failover-routes**.

7.2.1 Load balancing

Load-balancing lets us distribute calls matching the same pattern using several valid outgoing routes.

Example 1

- Route A: priority 1, metric 1
- Route B: priority 1, metric 1

Call matching these routes will use route A for %50 of the calls and route B for %50 of the calls.

Example 2

- Route A: priority 1, metric 1

- Route B: priority 1, metric 2

Call matching these routes will use route A for %33 of the calls and route B for %66 of the calls.

7.2.2 Failover routes

Failover route lets us use another route whenever the main route fails.

Example

- Route A: priority 1, metric 1
- Route B: priority 2, metric 1

All calls matching these routes will try to use route A. In case the call fails, the call will be placed using route B.

Tip: Although given examples use two routes, more routes can be chained and failover and load-balancing estrategies can be combined.

7.3 Outgoing DDI configuration

Before placing our first outgoing call, it would be desirable to choose the number that the callee will see when the phone rings, so that he can return the call easily.

To achieve this goal, we have to configure our DDI as *Alice's outbound DDI*, because she will be the chosen one to place our first outgoing call:

Edit User (alice)

Personal data

Name: **alice** Lastname: **aliceson** Email: **alice@irontec.com** 83 characters remaining

Country code: Company's default Area code: 10 characters remaining

Language: Company's default Timezone: Europe/Madrid

Login info

Active: Yes Password: Change password

Basic Configuration

Terminal: **alice** Screen Extension: **104** Outgoing DDI: **+34946941239**

Call ACL: Allow all outgoing calls Do not disturb: No

Outgoing DDI dropdown menu:
Unassigned
+34946941239

We can set this up editing **Alice** in **Company Configuration > Users**. If this change is made by brand operator or global operator, he must *emulate the corresponding company* previously.

Warning: Calls from users without an outgoing DDI will be rejected by IvozProvider.

At this point, we are looking forward to make our first outgoing call with our new IvozProvider, we may have even tried to call with current configuration but...

7.4 No pricing plan, no call

Just the way we warned *when we described the duties of the brand operator*, the brand operator is **responsible for making all the needed setup so that IvozProvider is able to bill all external calls**.


Note: **Billing a call** is the action of **assigning price** to a call that implies cost.

IvozProvider checks live that a call can be billed when it is established to avoid placing calls that imply cost but won't be billed because Brand Operator, due to a mistake, hasn't assigned a price.

Error: If a call can't be billed, IvozProvider won't allow its establishment.

7.4.1 Creating a pricing pattern

Just the way *target patterns* exist, **pricing patterns** exist and are configured in this section:

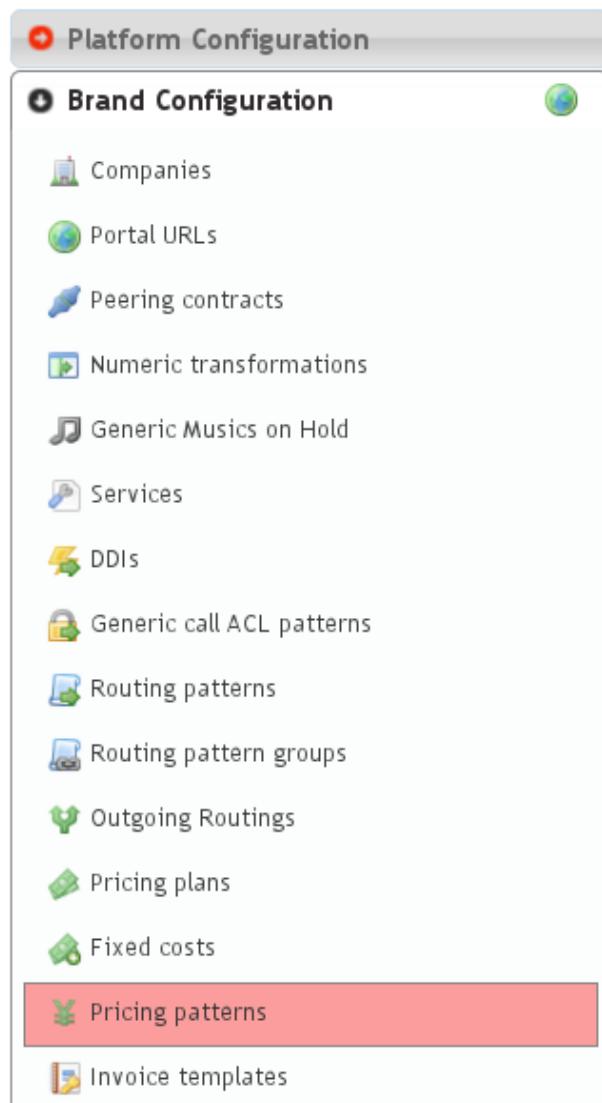

Important: A call is considered billable if there is a pricing pattern that matches this call.

Pricing patterns section is empty by default, as opposed to target patterns section, that has all the 254 countries of the world. The reason is that pricing pattern will usually imply lots of pattern per country (GSM networks, especial numbers, mobile numbers, fixed lines, etc.).


We will create the pricing plan 'Spain' for our outgoing call:

Add Pricing pattern

| | |
|---|--|
| Name: | Description: |
| [en] ★ Spain 50 characters remaining | [en] Spanin Landline 285 characters remaining |
| [es] ★ España 49 characters remaining | [es] España Fijos 288 characters remaining |
| Prefix: ★ 34 78 characters remaining | |

7.4.2 Creating a pricing plan

A **Pricing plan** determines the price of a type of call (of a pricing pattern) and is configured in this section:

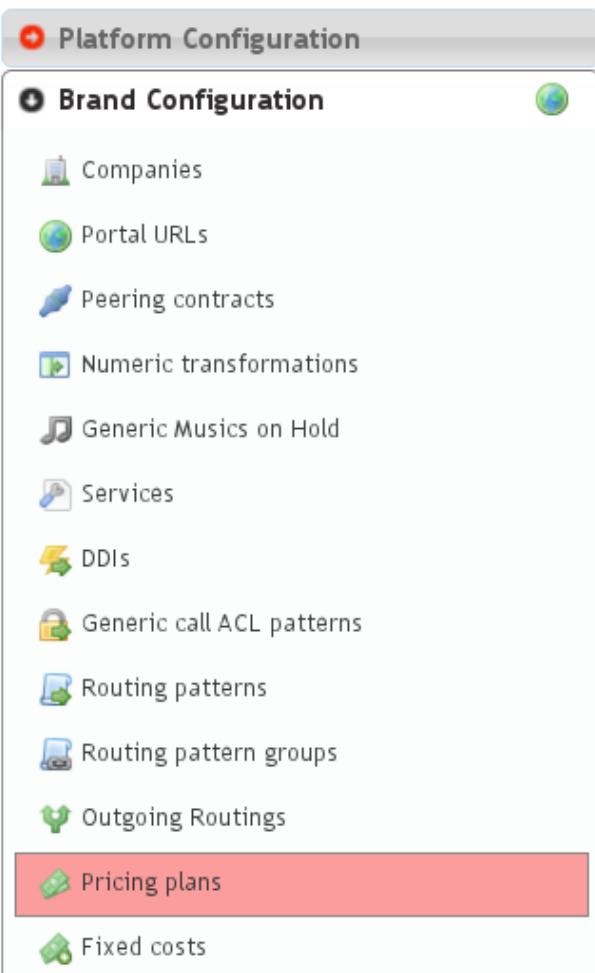

We create a **pricing plan** for our goal:

Add Pricing plan

Name:

[en] ★ Testing pricing plan
35 characters remaining

[es] ★ Testing pricing plan
35 characters remaining



Description:

[en] Do not use in production environments
263 characters remaining

[es] Do not use in production environments
263 characters remaining



And we add the **pricing patter** we have just created:

| List of Pricing plans | | | | | Total: 1 Records |
|--|--|--|----------------------------------|---|---|
| <input type="checkbox"/> Name | <input type="checkbox"/> Description | <input type="checkbox"/> Created on | <input type="checkbox"/> Options | | |
| <input checked="" type="checkbox"/> Testing pricing plan | <input type="checkbox"/> Do not use in production environments | <input type="checkbox"/> 2017/03/16 16:24:09 | <input type="checkbox"/> |  |  |
| List of Prices (Testing pricing plan) | | | | | |

 Add Pricing plan  Delete Pricing plan  Find a Plan  Export to CSV

Add Price

Price pattern:
★  Spain (34)

 **Connection charge:**
★ 0.15 €

 **Charge period:**
★ 1 s

 **Per minute charge:**
★ 0.02 €

Note: Floating number must use the "." as decimal separator (e.g. 0.02)

Finding a pricing plan for a specific destination

To check the configuration so far we can **find a pricing plan** for a call pressing:

List of Pricing plans

| Name | Description | Created on |
|----------------------|---------------------------------------|---------------------|
| Testing pricing plan | Do not use in production environments | 2017/03/16 16:24:09 |

Add Pricing plan | Delete Pricing plan | Find a Plan | Export to CSV | Find a Plan

We introduce the destination number in *E.164 format*:

| Phone number | Duration (s) |
|--------------|--------------|
| 34944944944 | 60 |

Close | Test

And we can check that it matches the **pricing plan** we have just created:

| 34676676676 | | | | | | 30 seconds |
|----------------------|---------------------|-----------------|-------------------|-----------------------|------|------------|
| Plan | Pattern | Con. charge (€) | Charge period (s) | Per minute charge (€) | Cost | |
| Testing pricing plan | Spain Landline (34) | 0.15 | 1 | 0.02 | 0.16 | |

Close

7.4.3 Assigning a pricing plan to a company

A specific **pricing plan** can be linked to ‘n’ companies and the *brand operator* is responsible for this task.

In the section **Brand configuration > Companies** we select the *demo* company:

List of Companies Total: 1 Records

| Name | Nif | Outbound prefix | Country code | SIP domain | Language | Options | | | | | |
|-------------|-----------|-----------------|--------------|------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| DemoCompany | 12345678A | Spain (+34) | A.B.C.D | Spanish | <input checked="" type="checkbox"/> |

Add Company | Delete Company | Import Companies | Export to CSV | List of Pricing plans (DemoCompany)

The **Pricing plan** and **Companies** relationship is set for a determined period of time, that’s why we have to select *Start time* and *End time*:

Add Pricing plan

| | | | |
|---------------|---|---------|---------------------------------|
| Pricing plan: | <input type="text" value="Testing pricing plan"/> | Metric: | <input type="text" value="10"/> |
| Valid from: | 2017/01/01 00:00:00 | | |
| Valid to: | 2017/12/31 23:59:59 | | |

The **metric** of the link lets you assign more than one *pricing plan* for a company, even though some destinations are included in more than one of those pricing plans.

Attention: If a given call can be billed with more than one active pricing plan, it will be billed using the pricing plan with lower metric.

Tip: This allows having a general *Pricing plan* and concrete the price of a specific destination in another *pricing plan* with lower metric (free cell phone calls, for example).

Simulating a call of a specific company

We can simulate a call for a given company and check the price it will imply. This way, we can be sure that the configuration is ok and that calls to that destination will be billed using a specific *Pricing plan*:

Companies List of Pricing plans (DemoCompany)

Help Filter fields

| Pricing plan | Valid from | Valid to |
|----------------------|---------------------|---------------------|
| Testing pricing plan | 2017/01/01 00:00:00 | 2017/12/30 23:59:59 |

Add Pricing plan Simulate a call Delete Pricing plan de (DemoCompany)
Simulate a call

We introduce the destination number in *E.164 format*:

Pricing Plans Tester

| Phone number | Duration (s) |
|--------------|--------------|
| 34676676676 | 30 |

Close **Test**

And we confirm that it will be billed with the pricing plan that we have just created and linked:

Results

| 34676676676 | | | | | | | | | | | | 30 seconds |
|-----------------------|-----------------------|-------------|----------------------|-------------|------------------------|------------------------|---------------------|--------|-------------|---------------|-------------------|------------|
| Call date | Metering date | Company | Plan | Plan Metric | Valid from | Valid to | Pattern Name | Prefix | Con. Charge | Charge Period | Per Minute Charge | Cost |
| 16/3/2017 16:40:55 | 16/3/2017 16:40:55 | DemoCompany | Testing pricing plan | 10 | 2016-12-31 23:00:00 | 2017-12-30 22:59:59 | Spain Landline (34) | 34 | 0.15 | 1 | 0.02 | 0.16 |

Close

Note: At this point, *Alice* should be able to make outgoing calls to spanish destinations and this calls should be billed accordingly.

PBX Features

In the previous block we have successfully make internal and external calls with just a minimum configuration, based on the base data left by the installer itself and ignoring a lot of the sections and features.

The goal of this section will be describe each one of those features that are also included in IvozProvider.


8.1 Extensions

The base configuration includes 2 extensions (101 and 102) that route directly to *Alice* and *Bob*, so we had almost nothing to do with the section **Company configuration > Extensions**.

Note: An extensions is, by definition, an internal number with an assigned logic.

Create a new extension

The new extension window looks like this:

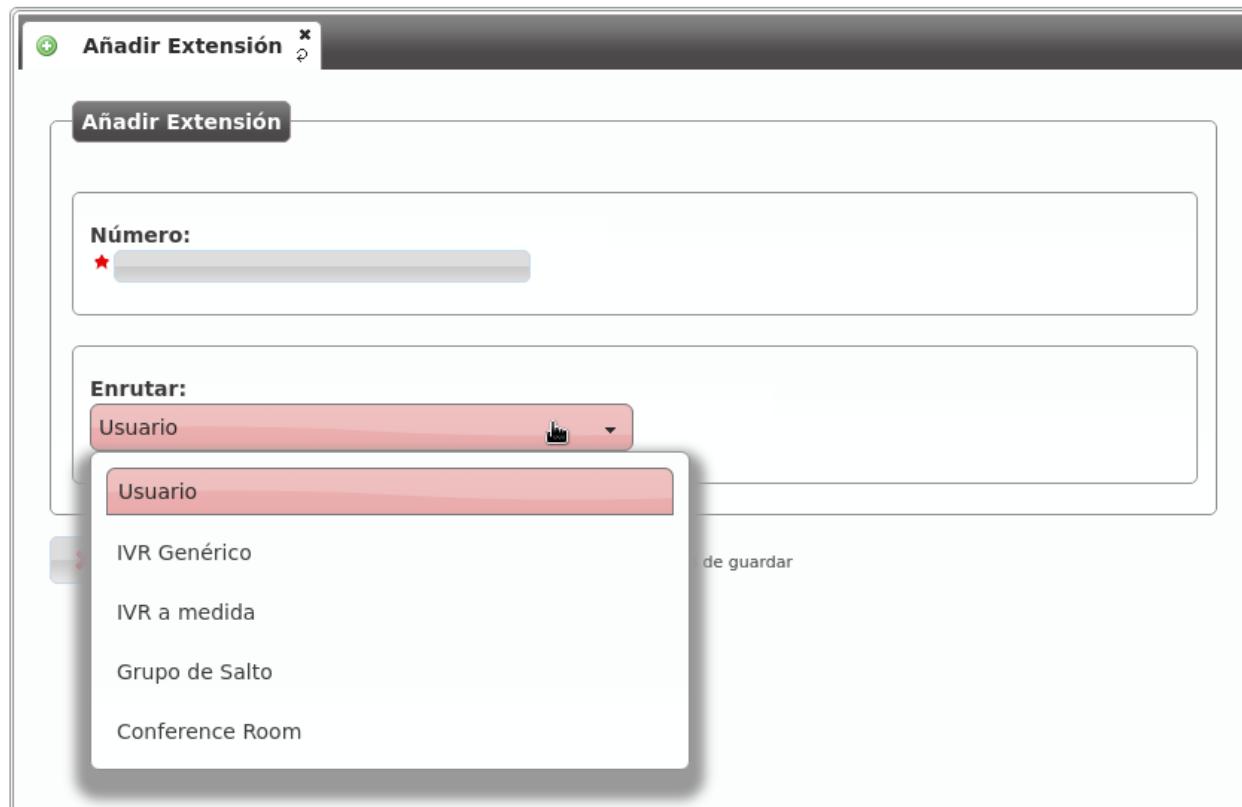

Number The number that must be dialed by the internal user that will trigger the configured logic. It must have a minimum length of 2 and must be a number.

Route This select will allow us to choose the logic that will use this extension when is dialed from an internal user. Depending on the selected route, and additional select or input will be shown to select the hungroup, conference room, user, etc.

Warning: If an extension has a number that conflicts with an external number, this external number will be masked and, in practice, will be unavailable for the whole company.

8.2 Terminals configuration

The section **Company configuration > Terminals** allows creating new SIP credentials that can be used by multiple SIP devices to place and receive calls from IvozProvider.

The best way to understand this section is creating a new item and see the fields that must be filled.

Name Username that will use the terminal during the SIP authentication phase with IvozProvider.

Password Password that will use the terminal to answer the SIP authentication challenge. You can use the automatic password generator to fulfill the secure password requirements.

Allowed/Disallowed codecs Determines what audio and video codecs will be used with the terminal.

CallerID update method Choose the SIP method the terminal prefers to receive the session update information: INVITE or UPDATE. The help hint can be used as guide to configure different terminal manufacturers. Use INVITE in case of doubt.

Terminal model Determines the provisioning type that will receive this terminal. The section *terminal provisioning* will explain in depth the different models for automatic provision. If your device does not require provisioning, just select *Generic*.

MAC Optional field that is only required if you plan to use IvozProvider *terminal provisioning*. This is the physical address of the network adapter of the SIP device.

Note: For most of devices that doesn't require provisioning just filling **username** and **password** will be enough.

Hint: Once the terminal has been created, most devices will only require the name, password and *Company SIP domain* in order to place calls.

8.3 Call ACL Control

The **Call ACLs** determines what users can call to external numbers.

Attention: The internal extensions are allowed to all users, the **Call ACLs only apply to external numbers**

The Call ACL setup has two different parts:

- Classify the call in different types based on **regular expressions**:
 - Brand level: **Brand Configuration > Generic call ACL patterns**
 - Company level: **Company Configuration > Call ACL patterns**
- Choose policies for groups of patterns: **Company Configuration > Call ACLs**

8.3.1 Call ACL patterns

The destination number is matched against the **Company ACL patterns** to determine the destination type.

Note: When a Brand operator creates a new company, all of the **Generic ACL patterns** defined in the **Brand configuration** are copied to the **Company configuration > Call ACLs**. This way, the brand operator can define the most common patterns to speed up the company configuration.

The patterns creation process is quite simple:



The dialog box has a title bar 'Add Call ACL pattern'. It contains two input fields: 'Name:' with the value 'Spanish Mobile' and 'Reg exp:' with the value '^34[67][0-9]{8}\$'. Both fields have red asterisks indicating they are required.

This new ACL pattern are grouped the calls starting with the spanish E.164 prefix followed by 6 or 7 and 8 more digits between 0 and 9. These is the E.164 format for the spanish mobile numbers.

Following this spanish example, other formats will be:

- **Spanish Landline (including special numbers prefix: 902, etc.):** ^34[89][0-9]{8}\$
 - 8 or 9 followed by 8 digits
- **Spanish Landline (excluding special number prefix: 902, etc.):** ^34[89][1-9][0-9]{7}\$
 - 8 or 9, followed by one dígito between 1 and 9, followed by 7 digits.
- **United Kingdom Landline:** ^44[0-9]+\$
 - 44 (UK E.164 prefix), followed by more digits

External numbers format

The regular expresions of the Call ACL patterns must be in E.164 format. The main reason for this is that the same pattern will be applied to all the users of the company no matter what country the user is.

For example, a spanish user will call a french number using its international prefix (00) and France E.164 code (33) followed by the number, while a french user of the same company will only dial the number. For both of them the same company ACL pattern will be applied.

8.3.2 Call ACL

The **Call ACL** configuration is easier to explain with an example:

Imagine the following **CALL ACL patterns**:

| List of Call ACL patterns | | | Total: 2 Records |
|---|--------------------------------|---|------------------|
| <input checked="" type="checkbox"/> Name | <input type="radio"/> Reg exp | <input type="radio"/> Options | |
| <input type="checkbox"/> Spanish Mobile | <code>^34[67][0-9]{8}\$</code> |   | |
| <input type="checkbox"/> Spanish Landline | <code>^34[89][0-9]{8}\$</code> |   | |

We could create a **Call ACL** that only allow calling to this destinations:

Añadir Permiso llamada

Nombre:
★ Solo fijos y móviles nacionales

Acción por defecto:
★ Rechazar ▾

Note: The default action determines what to do with the call when the destination number **does not match any ACL patterns**.

After creating the **Call ACL** we can edit it to add the required rules:

Editar Permiso llamada (Solo fijos y móviles nacionales)

| Datos permisos | Acción por defecto: | | | | | | | | |
|---|---------------------|--------|-----------|--------|----------|--|--|--|--|
| Nombre: ★ Solo fijos y móviles nacionales | ★ Rechazar ▾ | | | | | | | | |
| Patrones | | | | | | | | | |
| Patrón permisos llamada: | | | | | | | | | |
| (0 items) | | | | | | | | | |
| <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Nombre</th> <th>Prioridad</th> <th>Acción</th> <th>Opciones</th> </tr> </thead> <tbody> <tr> <td colspan="4" style="height: 100px;"></td> </tr> </tbody> </table> | | Nombre | Prioridad | Acción | Opciones | | | | |
| Nombre | Prioridad | Acción | Opciones | | | | | | |
| | | | | | | | | | |
| Añadir patrón a Solo fijos y móviles nacionales | | | | | | | | | |

The metric determines the evaluation order of the rules and the action that that will be applied if it *matches* the pattern (allow/deny).

Añadir patrón a Solo fijos y móviles nacionales

| |
|---------------------------------|
| Patrón permisos llamada: |
| ★ Fijos nacionales ▾ |
| Prioridad: |
| ★ 1 ▲ ▼ |
| Acción: |
| ★ Permitir ▾ |

Once we have added our two spanish **Call ACL patterns**, our **Call ACL** will look like this:

Editar Permiso Llamada (Solo fijos y móviles nacionales)

Datos permisos

Nombre: ★ Solo fijos y móviles nacionales **Acción por defecto:** ★ Rechazar

Patrones

Patrón permisos llamada: P (2 items)

| Nombre | Prioridad | Acción | Opciones |
|--------------------|-----------|--------|----------|
| Fijos nacionales | 1 | allow | |
| Móviles nacionales | 2 | allow | |

Añadir patrón a Solo fijos y móviles nacionales

We only have to assign this ACL to the users in the section **Company configuration > Users**:

Editar Usuario (Alice)

Datos personales

Nombre: ★ Alice **Apellido:** ★ Allison **Email:** ★ alice@example.com

Código de País: Usar configuración empresa **Lenguaje:** Español **Zona Horaria:** Europe/Madrid

Información Login

Nombre de usuario: ★ alice (45 caracteres pendientes) **Contraseña:** ★ Modificar contraseña **Activo:** Si

Datos básicos

Terminal: alice **Extensión:** 101 **DDI de salida:** 941941941

Permiso llamada: Solo fijos y móviles ... **No molestar:** No **Llamada en espera:** No

From this moment on, Alice will only be allowed to call internal extensions (they are always allowed) and spanish numbers.

8.4 Users configuration

The installation process creates *Alice* and *Bob* users, allowing us to test internals calls between them without too much effort.

We skipped most of the settings in **Users** configuration that we will described in this section.

8.4.1 Personal data

The screenshot shows the 'Personal data' configuration screen. It includes fields for Name (Alice), Lastname (Allison), Email (alice@example.com with 83 characters remaining), Country code (Company's default), Area code (222 with 7 characters remaining), Language (Company's default), and Timezone (Europe/Madrid).

| Personal data | | | | | |
|---------------|-------------------|-------------|-------------------------------|-----------|--|
| ★ Name: | Alice | ★ Lastname: | Allison | ✉ Email: | alice@example.com 83 characters remaining |
| Country code: | Company's default | Area code: | 222 7 characters remaining | Language: | Company's default |
| Timezone: | Europe/Madrid | | | | |

Name Used to identify this user in most of the screens. This is also the name that will be displayed in internal calls made from this user.

Lastname Most of the times this is used to complete the previous field.

Email Email used to send the user's received voicemails. This is also used to identify the user in their portal.

Country code / Area code Defines the way the user calls and the way the numbers are presented to this user.

Language When a locution is played to this user, this language is used.

Timezone User portal call list times will use this timezone.

8.4.2 Login Info

The screenshot shows the 'Login info' configuration screen. It includes fields for Active (Yes), Password (Change password with a red asterisk), and QR Code (No).

| Login info | | | | | |
|------------|-----|------------|--------------------------|----------|----|
| Active: | Yes | >Password: | Change password | QR Code: | No |

Active Allows administrators to grant or disable user's acces to the *user's portal*.

Password Password used to access the *user's portal*.

QR Code If enabled, a QR code for Grandstream Wave softphone configuration will be shown.

8.4.3 Basic Configuration

| Basic Configuration | |
|--|---|
| Terminal: alice | Screen Extension: 1000 |
| Outgoing DDI: Company's default | Outgoing DDI Rules: Company's default |
| Call ACL: Allow all outgoing calls | Do not disturb: No |
| Max calls: 0 | Calls from non-granted IPs: None |

Terminal The available terminals created in *Terminals configuration* are listed here for assignment.

Screen Extension One of the available *Extensions* that this user will display when placing internal calls. While multiple extensions can be routed to the user, only one of them will be presented when the user calls.

Outgoing DDI As described in *Outgoing DDI configuration*, determines the number that will present when placing external outgoing calls.

Outgoing DDI Rules Manages exceptions to previous setting. Read *Outgoing DDI Rules* for further reference.

Call ACL One of the created *Call ACL* groups, described in the previous sections.

Do not disturb When this setting is enabled, the user won't receive any call but can still place calls.

Max Calls Limits the number of received calls if the user is handling simultaneously (inbound and outbound) more than the number set. Set 0 for unlimited calls.

Calls from non-granted IPs: Enable calling from non-granted IP addresses for this user. It limits the number of outgoing calls to avoid toll-fraud. 'None' value makes outgoing calls unlimited as long as company IP policy is fulfilled. Read *Roadwarrior users* for further reference.

8.4.4 Voicemail

| | |
|------------------------------------|--|
| Voicemail enabled: Yes | Voicemail Locution: Unassigned |
| Voicemail send mail: Yes | Voicemail attach sound: Yes |

VoiceMail enabled Enables or disables the **existance** of a users voicemail. This only makes the voicemail available to be routed as described in the section *forward to voicemail*.

Voicemail Locution If set, this locution is played as voicemail welcome message when a voicemail for this user is going to be recorded. This only applies for call forwardings to voicemail described in the section *forward to voicemail*.

Email notification Send an email to the configured user address when a new voicemail is received.

Attach sounds: Attach the audio message to the sent email.

Note: If voicemail locution is not assigned, default locution will be used as long as the user has not recorded a custom message through the voicemail menu (calling to voicemail service code).

8.4.5 Boss-Assistant

| | |
|--------------------|---------------------------------|
| Jefe: Si | Asistente: bob Bobson |
|--------------------|---------------------------------|

Whitelist jefe/asistente:
^945945945\$
244 caracteres pendientes

This feature will turn the user into a boss that can only be directly call by:

- The selected assistant.
- Any exception defined in the whitelist regular expression.

The rest of the calls to *a bos* will be redirected to the assistant.

Is boss Determines if this user is a boss.

Assistant Who will receive the redirected calls of this boss.

Whitelist regular expression. Regular expresion to match numbers that are allowed to call directly to the boss.

With the setup in the image, every call to *Alice* will be redirected to *Bob*, except the ones placed by *Bob* itself and those coming from the number 945 945 945.

8.4.6 Group Configuration

The screenshot shows a configuration interface for groups. At the top, there's a section labeled "Pertenencia a grupos" with a dropdown menu set to "Seleccionar una opción". Below this, there's a section for "Grupos de salto" (Junk Groups) which is currently empty, indicated by "(0 items)". There's also a table header for "Grupo de salto" with columns for "Time out time", "Prioridad" (Priority), and "Opciones" (Options). At the bottom left, there's a button labeled "Unirse a Grupo de Captura (Alice)".

As described in the sections *Hunt groups* and *Call pickup*, the user can be part of one or more huntgroups and pickup groups.

Those groups can be configured from the sections *Hunt groups* and *Call pickup* or the user's screen if the groups already exists.

You can also configure the user's **hunt groups** from the icon in each user line of the users list.

The screenshot shows a user list interface titled "Usuarios". It includes a search bar and a table titled "Listado de Usuarios" with 2 entries. The table columns are: Nombre, Apellido, Extensión, Terminal, DDI de salida, and Opciones. The rows show users "Alice" and "bob". A context menu is open over the "Alice" row, with an option labeled "Listado de Grupos de salto (Alice)".

| | Nombre | Apellido | Extensión | Terminal | DDI de salida | Opciones |
|--------------------------|--------|----------|-----------|----------|---------------|------------------------------------|
| <input type="checkbox"/> | Alice | Allison | 101 | alice | 941941941 | |
| <input type="checkbox"/> | bob | Bobson | 102 | bob | Sin asignar | Listado de Grupos de salto (Alice) |

8.4.7 User Call Forward

The user's call forward can be configured in the following button:

| Listado de Usuarios | | | | | | Total:2 Registros |
|-------------------------------------|--------|----------|-----------|----------|---------------|---|
| | Nombre | Apellido | Extensión | Terminal | DDI de salida | Opciones |
| <input checked="" type="checkbox"/> | Alice | Allison | 101 | alice | 941941941 | |
| <input type="checkbox"/> | bob | Bobson | 102 | bob | Sin asignar | Listado de Opciones de desvío (Alice) |

For example, to forward all external calls that are not answered after 15 seconds, we could configure a call forward like this:

Editar Opción de desvío (external)

| | | |
|---|---|-------------------------------------|
| Tipo de llamada: ★ externa | Tipo desvío: ★ Perdida | Timeout no contesta: ★ 15 |
| Tipo de destino: ★ Buzón de voz | Buzón de voz: ★ Alice Allison | |

These are the fields and available values:

Call Type Determines if the forward must be applied to external, internal or any type of call.

Forward type

When this forward must be applied:

- Inconditional: always
- No answer: when the call is not answered in X seconds
- Busy: When the user is talking to someone (and call waiting is disabled), when *Do not disturb* is enabled or when the user rejects an incoming call.
- Not registered: when the user SIP terminal is not registered against IvozProvider.

Target type

What route will use the forwarded call.

- VoiceMail
- Number (external)
- Extension (internal)

Hint: If we want to forward to other process, we can create an extension routed to that object and use the target type

Extension.

8.5 Friends

Friends section in the **Company configuration** allows interconnection of IvozProvider with other SIP PBX systems through a SIP *trunk*. The most typical use case is when a company have multiple PBX systems that want to integrate in a single flow.

Warning: It's important to understand the difference between **Contract peering** defined by the **brand operator** to connect with the public network and **Friends**, defined by **company administrators** to connect the system with other PBXs.

8.5.1 What does this allow?

This sections allows not just communication between users at boths ends of the SIP *trunk*, but also:

- Users “from the other side” can call to the public network just like native Ivozprovider *Users*.
- Public network calls can be routed to the other SIP *trunk* end.

8.5.2 Types of friends

There are 2 main types of SIP PBX that can be integrate with IvozProvider:

- **Direct connection PBX:** IvozProvider must be able to talk SIP directly with this kind of friends by just redirecting the traffic to the proper port of the public IP address of the PBX.
- **PBX behind NAT:** Not directly accesible. This kind of PBX must register at IvozProvider (just like all the *Terminals* do).

8.5.3 What kind of calls can be routed through a *friend*?

IvozProvider must know what calls must be routed to the different defined *friends*. For that, **company administrator** will configure regular expressions that describe the numbers that *can be reached* through the **friend**.

Note: Internal *extensions* have priority over any expression defined in the *friends*.

To sum up, IvozProvider will route a call received by a *user* or a *friend* following this logic:

1. Destination matches an existing IvozProvider extension?
2. If not: Destination matches any *friend* regular expression?
3. If not: This is an external call.

8.5.4 Configuration

The **Friend** configuration is a merge between a **User** and a **Terminal**

Hint: **Friends** are so similar to **Users** that both talk SIP with the *Users SIP Proxy*.

This are the configurable settings of *friends*:

Name Name of the **friend**, like in **Terminals**. This will also be used in SIP messages (sent **From User**).

Description Optional. Extra information for this **friend**.

Priority Used to solve conflicts while routing calls through **friends**. If a call destination **matches** more than one friend regular expression the call will be routed through the friend with **less priority value**.

Password When the *friend* send requests, IvozProvider will authenticate it using this password. Like in terminals **using password IS A MUST**.

Direct connection If you choose ‘Yes’ here, you’ll have to fill the protocol, address and port where this *friend* can be contacted.

Call ACL Similar to *internal users*, friends can place internal company calls without restriction (including Extension or other Friends). When calling to external numbers, this ACL will be checked if set.

Fallback Outgoing DDI External calls from this *friend* will be presented with this DDI, **unless the source presented by friend is a DDI that exists in DDIs section**.

Country and Area code Used for number transformation from and to this friend.

Allowed codecs Like a terminal, *friends* will talk the selected codec.

From domain Request from IvozProvider to this friend will include this domain in the From header.

Note: Calls to *friends* are considered internal. That means that ACLs won’t be checked when calling a friend, no matter if the origin of the call is a user or another friend.

8.5.5 Asterisk as a friend

At the other end of a friend can be any kind of SIP entity. This section takes as example an Asterisk PBX system using SIP channel driver that wants to connect to IvozProvider.

register

If the system can not be directly accessed, Asterisk will have to register in the platform (like a terminal will do).

Configuration will be something like this:

```
register => friend-name:friend-password@ivozprovider-company.sip-domain.com
```

peer

```
[nombre-friend]
type=peer
host=ivozprovider-company.sip-domain.com
context=XXXXXX
disallow=all
allow=alaw
defaultuser=friend-name
secret=friend-password
fromdomain=ivozprovider-company.sip-domain.com
insecure=port,invite
```

Warning: *Friends*, like terminals, MUST NOT challenge IvozProvider. That's why the *insecure* setting is used here.

8.5.6 Summary

The key point is understanding that a *friend* has a direct relation with the extension-user-terminal trio:

- Can place calls to all internal extensions and other friends.
- Can place external calls that its ACL allows
- Display their configured outgoing DDI when calling to external entities
- Never challenge IvozProvider requests (don't request authentication on received requests)
- Answers IvozProvider authentication challenges (All request from them to IvozProvider must be authenticated for security reasons)
- Only connects with *Users SIP Proxy*, like terminals. In fact, SIP traffic from friends are identical to any other user terminal traffic in format.

8.6 Music on Hold

The music on hold will be played when the user holds the call and the other member waits until the call is resumed.

IvozProvider can be configured at two levels what music will be played:

- At brand level: **Brand Configuration > Generic Music on Hold**
- At company level: **Company Configuration > Music on Hold**

If a company has defined a music on hold, it will be played. Otherwise, the one defined by the brand administrator. If none of this is configured, a global music will be played.

Note: Multiple files can be added to be played as Music on Hold. The system will choose them randomly for each call.

Add a new music on hold

Añadir Generic music on hold

Nombre:
★ back to the future

Fichero:
★ backtothefuture.mp3 (74.7kB) x

No disponible

Once the music has been *encoded* the **Status** field will display *ready* and the music will be used for the next calls.

| Listado de Generic music on hold(s) | | | | | Total:1 Registros | | |
|-------------------------------------|--------------------|--------------------------|---------------------|--------------------------|-------------------|--------------------------|---|
| <input type="checkbox"/> | Nombre | <input type="checkbox"/> | Fichero | <input type="checkbox"/> | status | <input type="checkbox"/> | Opciones |
| <input type="checkbox"/> | back to the future | <input type="checkbox"/> | backtothefuture.mp3 | <input type="checkbox"/> | ready | <input type="checkbox"/> |   |

Tip: IvozProvider supports most of the common audio formats and *encodes* them to the optimal format for the platform.

After the *encoding*, we can download both the original and the converted version in the edit screen.

Editar Generic music on hold (back to the future)

Nombre:
★ back to the future

Fichero:
★ backtothefuture.mp3 00:00 / 00:07
 Subir un Fichero

Fichero:
backtothefuture.wav 00:00 / 00:07

8.7 Locutions

The locutions of the platform are created and uploaded just like the files of *Music on Hold*.

The section **Company configuration > Locutions** allows the company admin to choose the sounds that will be played in many configuration places (IVR, etc) accross the platform.

Locuciones *

Filtrado de elementos

Listado de Locuciones Total:3 Registros

| Nombre | Fichero original | status | Opciones |
|------------------|-------------------|--------|----------|
| Fuera de horario | fuerahorario.mp3 | ready | |
| Festivo | festivo.mp3 | ready | |
| IVR principal | ivr_principal.mp3 | ready | |

Attention: Locutions can be recorded from any terminal by dialing the Recording extension displayed in their edit screen.

Hint: The main difference between a **locution** and **music on hold** is that the administrator chooses when the first one

will be played (out of schedule, IVRs, and so on) and the second one will be played when a call is held by an user.

8.8 Outgoing DDI Rules

Most calling entities in IvozProvider require an outgoing DDI when placing calls to external numbers. This includes: Users, Friends, Faxes, Retail Accounts, and so on..

But there are some cases when a single outgoing DDI is not enough, and the presented DDI depends on the called number. To achieve this dynamic outgoing DDI selection you can use Outgoing DDI rules.

Before creating a new rule, it would be required to first group the destination numbers in *Match Lists*.

For this example, we will create a match list of corporative mobiles with all the mobile numbers of our company workers. When we call to those numbers, we will keep the original outgoing DDI assigned to the user, and for the rest of the cases we will force the DDI to the main company outgoing DDI.

Create a new Outgoing DDI Rule

The main creation screen defines the action that will take place when no rule matches the dialed destination, so we define to force the main company DDI here.

The screenshot shows a configuration interface for an Outgoing DDI Rule. At the top, a title bar reads "Edit Outgoing DDI Rule (Keep DDI for Corporative mobiles)". Below it, there are two main sections: "Basic data" and "Action configuration".

Basic data:
★ **Name:** Keep DDI for Corporative mobiles
18 characters remaining

Action configuration:
★ **Default Action:** Force DDI
Forced DDI: +34666666666

Assign rule lists actions

Now we add a new rule that will match our mobiles to make the user's outgoing DDI be kept untouched.

Add Outgoing DDI Rule Pattern

| | |
|--------------------------------------|-----------|
| Basic data | Priority: |
| ★ Match List: Corporative Mobiles | 1 |
| Action configuration | |
| ★ Action: Keep Original DDI | |

Assign rule to callers

At last, we have to configure who will use this rule to dynamically change its presentation number. We can do this in the **Company's edit screen** or the **Users's edit screen**.

Outgoing DDI:

+34777777777

Outgoing DDI Rules:

Keep DDI for Corporative mobiles

In this case, the User will present 7777777777 DDI when calling Corporative mobiles and 666666666 when calling the rest of the external numbers.

Attention: Current implementation of Outgoing DDI rules won't work for diverted calls (out of schedule, holidays or user's call forward settings).

8.9 External Call filters

One of the most common task a company's administrator will do is to configure schedules and calendars to apply to existing *External DDIs*.

The first step is creating a schedule.

Create a new schedule

The section **Company configuration > Schedule** allows to configure different time gaps when an *external DDI* will be available.

The screen displayed to the company administrator looks like this:

Editar Horario (L-J mañana)

| | | | | |
|--|---|--|---|---|
| Nombre: ★ L-J mañana | | | | |
| Inicio: ★ 09:00:00 | Fin: ★ 14:00:00 | | | |
| Lunes: <input checked="" type="checkbox"/> | Martes: <input checked="" type="checkbox"/> | Miércoles: <input checked="" type="checkbox"/> | Jueves: <input checked="" type="checkbox"/> | Viernes: <input type="checkbox"/> |
| Sábado: <input type="checkbox"/> | Domingo: <input type="checkbox"/> | | | |

With the above configuration, we have defined a morning schedule that will be applied from Monday to Thursday. We can also define an afternoon schedule for Monday to Thursday too:

Editar Horario (L-J tarde)

| | | | | |
|--|---|--|---|---|
| Nombre: ★ L-J tarde | | | | |
| Inicio: ★ 15:00:00 | Fin: ★ 18:00:00 | | | |
| Lunes: <input checked="" type="checkbox"/> | Martes: <input checked="" type="checkbox"/> | Miércoles: <input checked="" type="checkbox"/> | Jueves: <input checked="" type="checkbox"/> | Viernes: <input type="checkbox"/> |
| Sábado: <input type="checkbox"/> | Domingo: <input type="checkbox"/> | | | |

And apply a different time gap for the Fridays:

Editar Horario (Viernes)

| | | | | | | | | | |
|----------------|--------------------------|-----------------|--------------------------|-------------------|--------------------------|----------------|--------------------------|-----------------|-------------------------------------|
| Nombre: | ★ Viernes | | | | | | | | |
| Inicio: | ★ 08:00:00 | Fin: | ★ 15:00:00 | | | | | | |
| Lunes: | <input type="checkbox"/> | Martes: | <input type="checkbox"/> | Miércoles: | <input type="checkbox"/> | Jueves: | <input type="checkbox"/> | Viernes: | <input checked="" type="checkbox"/> |
| Sábado: | <input type="checkbox"/> | Domingo: | <input type="checkbox"/> | | | | | | |

We have the following time gaps that combined will determine our company office schedule.

| Listado de Horarios | | | | | Total:3 Registros |
|----------------------------|---------------|---------------|------------|-----------------|-------------------|
| | Nombre | Inicio | Fin | Opciones | |
| <input type="checkbox"/> | L-J mañana | 09:00:00 | 14:00:00 | | |
| <input type="checkbox"/> | L-J tarde | 15:00:00 | 18:00:00 | | |
| <input type="checkbox"/> | Viernes | 08:00:00 | 15:00:00 | | |

Warning: The schedule will be defined by combining the active time gaps: Any time outside this grouped gaps will be considered out-of-schedule.

Create a new Calendar

Calenders are used to define what days are considered as holiday. Like schedules, multiples calendars can be combined.

Let's imagine three calendars with the following configuration:

| Listado de Calendarios | | | Total:3 Registros |
|-------------------------------|----------------------|-----------------|-------------------|
| | Nombre | Opciones | |
| <input type="checkbox"/> | Festivos autonómicos | | |
| <input type="checkbox"/> | Festivos locales | | |
| <input type="checkbox"/> | Festivos nacionales | | |

Calendar creation process only requires a name. Once created, we can add what days will be holidays using the buttons in its row:

Editar Festivo (Año nuevo)

| |
|---|
| Calendario: Festivos nacionales |
| Nombre: ★ Año nuevo |
| Fecha evento: ★ 01/12/2016 |
| Locución: Feliz año ▾ |

From this moment on, the calendar has the 1st of January of 2016 as holiday date with the locution “Happy New Year”.

Warning: Calendars logic is opposite to Schedulers: If a day is not defined as holiday in any of the calendars, it will be considered a normal day and no filtering will be applied.

Hint: Holidays without special locutions will apply the external call filter holiday generic locution (see below).

Create a new External call filter

Once we have our new created schedules and calendars, it's time to apply them in what we call **External call filter**.

The company admin can configure them in the following screen:

Editar Filtro de entrada externo (Número principal)

| | |
|---|--------------------------------|
| Nombre: | Locución Bienvenida: |
| ★ Número principal | Bienvenida |
| | |
| Locución Festivo: | |
| Fuera de horario | |
| Tipo desvío festivo: | Número: |
| Número | ★ 676676676 |
| | |
| Locución fuera horario: | |
| Fuera de horario | |
| Tipo desvío fuera horario: | |
| Sin asignar | |
| | |
| Calendario: | Horarios: |
| Festivos autonómicos, Festivos locales, Festivos nacionales | L-J mañana, L-J tarde, Viernes |

Name Descriptive name that will reference this filter in DDIs configuration.

Welcome locution This locution will be played if the call is not going to be forwarded by out of schedule or holiday filtering (in other words if the normal routing of the DDI is going to be applied).

Black list External origin will be checked against the associated *Match Lists*, if a coincidence is found, the call will be rejected immediately.

White list External origin will be checked against the associated *Match Lists*, if a coincidence is found, the call will be directly routed to the DDI destination, skipping the filter process. Take into account that black listed are checked before white lists.

Holiday locution The locution will be played when the day is marked as holiday in any of the calendars associated with the filter **if the calendar entry has no locution** for that day.

Holiday forward type After playing the above locution (if configured), call can be forwarded to a voicemail, external number or internal extension. For example, the filter of the image will redirect calls during holidays to the external number 676 676 676.

Out of schedule locution The locution will be played when, not being holiday, the current time is not in any of the time gaps defined in the schedules assigned to the filter.

Out of schedule forward type Like in the holidays forward, but for out of schedule. The image above won't apply any forward (and the call will be hanguped).

Calendars One or more calendars can be associated with the filter. The combination of all the callendars will be applied.

Schedules One or more schedules can be applied. The combination of all the time gaps defined in the schedules will be applied.

Attention: Holidays are processed **before** out of schedule events.

In the next section we will use this new created filter with *External DDIs* so we can configure a welcome locution for normal days, and especial behaviours for hoildays and out of schedule events.

8.10 Match Lists

Match Lists are designed to group well known numbers or patterns in order to use them in specific treatments.

Depending on the section used, this numbers can be matched with the origin or the destination of the call, so be sure to use distinctive names for your match lists.

For example, like mentioned in the previous section *External Call filters*, white and black lists contain one or more match lists. In this case, the **origin** of the call will be matched agains the list entries to determine if the treatment of **skipping** the filter or **rejecting** the call will be applied.

Note: Match lists themselves have no behaviour associated, they only provide a common way for all process to determine if a number has a treatment.

Attention: Beware that numbers of a Match list are checked against origins or destinations depending on the configuration section that use them.

The section **Company configuration > Match Lists** allows to configure different items that will group the numbers and patterns.

The screen displayed to the company administrator looks like this:

| List of Match Lists | | Total: 2 Records |
|--------------------------|---------------------------|--|
| <input type="checkbox"/> | Name | <input checked="" type="radio"/> Options |
| <input type="checkbox"/> | Corporative Mobiles | 3 |
| <input type="checkbox"/> | Unwanted publicity agents | 2 |

After creating a new Match list, you can include numbers and patterns.

| List of Match List Patterns (Corporative Mobiles) | | | | | Total: 3 Records |
|---|----------------|---------------------|---|--|------------------|
| Type | Match value | Description | Options | | |
| Number | +4218888888881 | Alice Alison Mobile |   | | |
| Number | +4218888888882 | Bob Bobson |   | | |
| Regular Expression | ^34[67] | Any Spanish mobile |   | | |

As shown, the match list can contain specific numbers or groups using [Regular Expressions](#)

8.11 Hunt groups

The hungrups allows configuring more complex *ringing* process than the traditional **call to a user**.

There are multiple types:

Ring all The call will make all the terminals of the group during a predefined time.

Sequential The call will *jump* from one user to another in a predefined order ringing during the configured time. If the call is not answered by any user of the group, it will be hanguped (or trigger the no answer logic).

Sequential (infinite) The call will *jump* from one user to another in a predefined order ringing during the configured time. If the call is not answered by any user of the group, the call will *jump* again to the first member of the group and keep looping.

Random The call will *jump* from one user to another in a random order, ringing during the configured time. If the call is not answered by any user of the group, it will be hanguped (or trigger the no answer logic).

Example 1: *Ringall* hunt group

The following example will show how to create a hunt group that will call our 2 users at the same time during 30 seconds:

The screenshot shows a configuration dialog for adding a hunt group. The title bar says "Añadir Grupo de salto". The main area has a section titled "Configuración básica" (Basic Configuration) with the following fields:

- Nombre:** Recepción
- Descripción:** A Alice y Bob
- Estrategia:** A todos
- Tiempo máximo sonando:** 30

Pressing the proper icon, we can add Alice and Bob to the hunt group:

| Listado de Grupos de salto | | | | | Total: 1 Registros |
|----------------------------|---------------|------------|---|--|--------------------|
| Nombre | Descripción | Estrategia | Opciones | | |
| Recepción | A Alice y Bob | A todos |   | | |

Example 2: Sequential hunt group

We will edit the hunt group to convert it into sequential: the call will ring Alice during 10 seconds, then it will ring Bob 15 seconds, repeating this process until one of them answers.

Editar Grupo de salto (Recepción)

Configuración básica

Nombre: Recepción **Descripción:** A Alice y Bob

Estrategia: ★ Secuencialmente (∞)

For this type of groups we have to configure priority (the call will *jump* from the users with lower number priority to the ones with higher number priority) and a *ringing* time for each user.

| Listado de Usuarios (Recepción) | | | | | Total:2 Registros |
|---------------------------------|---------------|---------|-----------|---|-------------------|
| ■ | Usuario | Timeout | Prioridad | Opciones | |
| <input type="checkbox"/> | Alice Allison | 10 | 1 |   | |
| <input type="checkbox"/> | bob Bobson | 15 | 2 |   | |

Hint: Hunt groups can be routed from any process of IvozProvider by simply adding an extension that route to them.

Let's create a new extension that routes to this hunt group:

Añadir Extensión

Número: ★ 200

Enrutar: Grupo de Salto **Grupo de salto:** ★ Recepción

8.12 Queues

Easy queue behaviour was included in IvozProvider in 1.3 version. It is a simple approach with **the unique goal to provide the capability to handle more calls than users attending them.**

Warning: Queues and callcenter are close terms but different. **IvozProvider is not a suitable product for callcenters**, as it does not provide advanced features that are crucial to them (reports, RT visualization, queue related stat, etc.).

This easy approach has a drawback **in distributed installations**: as Asterisk does not provide yet a way to share queue information between multiple instances and as we have not found a proper way neither, **a company that uses queues must have an static assignment to one of the Application Servers** (in Companies section).

Hint: Brand operators can choose which Companies have queues (see **Features** in *Brand Configuration* and *Company Configuration*).

8.12.1 Queue configuration

This are the settings related to a queue:

Name Use to reference this queue

Weight Priorizes calls to an agent that attends calls in two (or more) calls. The higher, the more prioritized.

Strategy How will the queue deliver the calls? Calling to all agents, calling to a random one?

Member call seconds Defines how long will a call to an agent last.

Member rest seconds Seconds between calls for an agent.

Announce Select a locution and its frequency. Caller waiting in the call will listen to this locution.

Timeout configuration Limits the time that a call can wait in a queue and the following behaviour.

Full Queue configuration Limits the amount of people waiting in a call and the behaviour when this limit is reached.

Apart from creating a queue, you have to assign users to it. This users will have a **penalty: a user will not be selected to deliver a call if any user with lower penalty is available.**

Hint: A call can be sent to a queue selecting it in the “Route type” selectors available in multiple sections of IvozProvider (extension to queue, DDI to queue, etc.)

8.12.2 Queue strategy

The queue strategy **always applies to current penalty members** starting with the smallest penalty value and only going to the next penalty if all members of current one are busy or unavailable.

Ring all The call will make all the members of the current priority during a predefined time.

Least recent The call will *jump* from one member to another in a predefined order based on the last time the member attended a call. Members whose latest call is older will be called first.

Fewer calls The call will *jump* from one member to another in a predefined order based on the number of attended calls. Members that have attended less calls will be called first.

Random The call will *jump* from one member to another in a random order, ringing during the configured time.

Round Robin memory The call will *jump* from one member to another in a predefined order starting past the last member that attended a call.

Linear The call will *jump* from one member to another in a predefined order based on the creation time of the member.

8.13 Interactive Voice Response (IVR)

IVRs are the most common way to make **audio menus** where the caller must choose the destination of the call by **pressing codes** based on the locutions instructions that will be played.

8.13.1 Generic IVRs

In this type of IVRs, the caller will directly press the extension that must previously know (or the welcome locution suggests) and the system will automatically connect with that extension:

Añadir IVR genérico

| | |
|---|-----------------------------------|
| Configuración básica | |
| Nombre: ★ IVR principal | Timeout: ★ 5 |
| Loc. Bienvenida: ★ IVR principal | Loc. Éxito: Contactando |
| Expresión regular lista negra: ^105 106\$ | |
| Configuración No Contesta | |
| Loc. No contesta: No contesta | Timeout no contesta: 10 |
| Enrutado timeout: Extensión | Extensión: ★ 101 |
| Configuración Error | |
| Loc. Error: Invalido | |
| Enrutado error: Extensión | Extensión: ★ 101 |

Generic IVRs have the following fields:

Name Descriptive name of the IVR that will be used in other sections.

Timeout Time that caller has to enter the digits of the target extension.

Welcome locution This locution will be played as soon as the caller enters the IVR.

Success locution In case the dialed extension exists in the company, this locution will be played (usually something like ‘Connecting, please wait...’).

Blacklist regular expression This field can be used to avoid some extensions to be accessed from the IVR. In the image above, the extensions 105 and 106 will not be available, and trying to dialing them will trigger the **error configuration**.

No answer process If the dialed extension does not answer in X seconds, the no answer process will trigger, playing the configured locution and redirecting the call to another number, extension or voicemail.

Error process If the dialed extension is invalid (or nothing has been dialed), the error process will trigger, playing the configured locution and redirecting the call to another number, extension or voicemail.

8.13.2 Custom IVRs

Contrary to the generic IVRs where the caller can only dial internal extensions, the custom IVRS can configure up to 10 options that can be routed in different ways.

Hint: The most common usage for this IVR is combining them with a welcome locution that says something like 'Press 1 to contact XXX, Press 2 to contact YYY, ...'

Most of the configurable fields are the same that generic IVR uses:

| Configuración básica | |
|-------------------------|---------------------|
| Nombre: | ★ IVR departamentos |
| Timeout: | ★ 5 |
| Loc. Bienvenida: | IVR departamentos |
| Loc. Éxito: | Contactando |

| Configuración No Contesta | |
|-----------------------------|-------------|
| Loc. No contesta: | No contesta |
| Timeout No contesta: | 10 |
| Enrutado timeout: | Extensión |
| Extensión: | ★ 101 |

| Configuración Error | |
|------------------------|-----------|
| Loc. Error: | Invalido |
| Enrutado error: | Extensión |
| Extensión: | ★ 101 |

The main difference on these screens is that **Blacklist regular expression** makes no sense in this kind of IVRs.

The process of each entry of the IVR can be defined in the following button:

| Listado de IVRs a medida | | | | | | | | Total: 1 Registros |
|--------------------------|-------------------|---------|---------------------|------------------|--------------------|----------------|---------------|--------------------|
| | Nombre | Timeout | Timeout No contesta | Enrutado timeout | Destino si timeout | Enrutado error | Destino error | Opciones |
| | IVR departamentos | 5 | 10 | Extensión | 101 | Extensión | 101 | |

Listado de IVRs a medida
(IVR departamentos)

In this example, the caller can dial 1, 2 or 3 (the rest will be considered as an error and will trigger the **Error process**):

| Listado de IVRs a medida (IVR departamentos) | | | | | Total: 3 Registros |
|--|-----------------|-------------|-----------|----------|--------------------|
| Entrada | Loc. Bienvenida | Target type | Destino | Opciones | |
| 1 | Administración | Extensión | 200 | | |
| 2 | Sin asignar | Extensión | 101 | | |
| 3 | Sin asignar | Número | 676676676 | | |

- 1: Call to the internal extension 200, created in *previous section* that routes to hunt group *Reception*.
- 2: Call to the internal extension 101.
- 3: Route this call to the external number 676 676 676.

Note: Each of the Custom IVR entries supports a locution that, if set, will be played instead of the IVR **success locution**. This way, you can configure a generic locution (like ‘Connecting....’) or a custom one for a given entry (like ‘Connecting reception department, please wait...’).

8.14 Conference rooms

IvozProvider supports Conference rooms that can be configured in the section **Company configuration > Conference rooms**.

Create a new audio conference

The following image shows the process of creating a new conference room:

Name Name that will be used to identify this conference room in other sections

Max members Maximum number of participants in the conference. When this limit is reached, join requests will be rejected.

Pin protected Conference rooms can be pin protected. The pin will be requested before entering and must be numeric.

Note: Member limit can be disabled by setting it to 0.

Route an extension or DDI to the conference

In order to enter a conference there must be a number that is route to them:

The screenshot shows a configuration dialog titled "Añadir Extensión". It contains three main fields: "Número" (Number) with the value "300", "Enrutar" (Route) with the value "Conference Room", and "Conference room id" with the value "Reunión". Each field has a red star icon indicating it is a required field.

In the following section we will see how to configure a *external DDI* to a conference room so it can be used by external callers.

Hint: There are other ways to make external callers join a conference room without using a DDI: it can be assigned to an Extension. This way, any user can transfer the call to the conference extension, or can be routed, for example using an IVR entry.

8.15 External DDIs

In the previous section *Configuring an external DDI* we described in detail the required configuration for an external DDI routed to user. This section will go a bit further and explain the rest of configurable options of DDIs.

8.15.1 DDI external filters

We can assign a **external call filter** configured in *previous section*.

The screenshot shows a configuration dialog titled "Información filtrado". It contains a single field "Filtro de entrada" (Input Filter) with the value "Número principal".

8.15.2 DDI routes

Once the call has passed all the checks in the filter (schedules and calendars) and after the welcome locution has been played (if there is any configured), we can route the call to the following processes:

- *Hunt groups*

Información enrutado

Enrutar: ★ Grupo de Salto

Grupo de salto: ★ Recepción

- *Generic IVR*

Información enrutado

Enrutar: ★ IVR Genérico

IVR Genérico: ★ IVR principal

- *Custom IVR*

Información enrutado

Enrutar: ★ IVR a medida

IVR a medida: ★ IVR departamentos

- *Conference rooms*

Información enrutado

Enrutar: ★ ConferenceRoom

Conference room id: ★ Reunión

Hint: We can also route the DDI to a *Virtual Fax*, but this is something we will explain in the following block.

8.16 Call pickup

Call pickup is the process where a user can answer a call that is being ringing in another terminal. No need to say that, somehow (sound, flashing lights, notification, etc) the users must know that the call is ringing elsewhere.

IvozProvider supports two kind of call pickups:

Direct pickup In this type of pickup, the user that is trying to capture the ringing call must include the extension of the target phone after the service code. For example, if the direct pickup code is *95, the user must dial *95101 to capture a call that is ringing in the extension 101.

Group pickup In this type of pickup, the user that is trying to capture the ringing call will just dial the service code. If anyone in any of the pickup groups of the user has a ringing call, it will be answered by the capturer.

8.16.1 Call pickup groups

In order to make **call group pickups**, the capturer user must be part of the same group that the target user that wants to capture.

The section **Pickup groups** allows the company administrator to configure what users will be in each group:

Añadir Grupo de captura

Nombre:
★ Todos

Usuarios:
Alice Allison, bob Bobson

As shown in the section *Users configuration*, we can add or edit the groups of a user in the user's edit screen.

Note: A user can be part of multiple pickup groups. The system will take all of them into account when using the group pickup service.

8.16.2 Group pickup service code

IvozProvider supports 2 different configuration levels for defining the service codes for pickup:

- At brand level: **Brand configuration > Services**.
- At company level: **Company configuration > Services**.

The brand administrator can configure generic codes that all the companies will use. Companies can customize this codes if they are used to another ones.

The *following section* explains the services in depth, with all the additional services that can be accessed by dialing codes starting with *.

8.17 Additional services

There are **special services** that can be accessed by calling to some codes **from the terminal**.

Danger: Services defined in this section **are not accessible during a conversation**. They are activated by **calling the codes**, not using DTMF codes while talking.

8.17.1 Global Services codes

There are the folowing **special services** avaialble in the section **Global configuration > Services**:

| List of Services | | | | | | Total: 4 Records |
|------------------|-----------------|---|------|---------|--|------------------|
| Iden | Name | Description | Code | Options | | |
| RecordLocution | Record Locution | Add the locution code after the service code | * 00 | | | |
| Voicemail | Check Voicemail | Check and configure the voicemail of the user | * 93 | | | |
| DirectPickUp | Direct Pickup | Add the capture extension after the service code | * 94 | | | |
| GroupPickUp | Group Pickup | Captura la llamada de un miembro de los grupos de captura del usuario | * 95 | | | |

Direct pickup This service allows capturing a ringing call from another terminal by calling the code followed by the extension from the target user.

Group pickup This service allows capturing a ringing call for any terminal whose user is part of one of the capturer pickup groups.

Check voicemail This service allows checking the user's voicemail using an interactive menu from which new voicemails can be listen, deleted, etc. This is an active alternative to receive voicemails via the email. Since 1.4, this service allows optional extension after the service code to check another users voicemails. Users can protect their voicemail using the internal menu options.

Record locution This service allows any user to record their company's locutions by dialing an special code. Voice instructions will be provided in the user's language.

As soon as new services are implemented into IvozProvider, they will be listed in this section.

Attention: This section lists the available services and the default codes when a **new brand** is created.

Hint: Changing the default code in this section will only affect new created brands.

8.17.2 Services and codes for Brands

The section **Brand configuration > Services** allows the brand operator to:

- Change the default service code for all the brand companies (assuming the company hasn't already customized the code)
- Delete services so it won't be available for the companies.

By default this list has all the services and codes from the global configuration:

Attention: This section lists the available services and the default codes when a **new company** is created.

Hint: Changing the default code in this section will only affect new created companies.

8.17.3 Services and codes for Companies

Each company can *customize* the default values assigned by the *brand operator* using the section **Company configuration > Services** and changing the codes listed there.

Company that wants to capture using ** instead of the default *95:

Service: ***** Group Pickup

Code: ***** *

5 characters remaining

Hint: Services deleted by the *company admin* will not available to users.

8.18 Call recording

Attention: Beware that local legislation may enforce to announce that the call is being recorded (sometimes to both parties). You should include a recording disclaimer in your welcome locutions for DDIs with automatic recording enabled.

IvozProvider supports two different ways of recording calls:

- **Automatic recordings** for the incoming/outgoing calls that use a *External DDI*.
- **On demand recordings** requested by a user during a call.

8.18.1 Automatic DDI recordings

In this type of recording, **the whole conversation will be recorded**: from the start until it finishes.


Two different scenarios:

- **Incoming calls to a DDI:** The call will continue until the external dialer hangs up (no matter whom is talking to).
- **Outgoing calls using a DDI as Outgoing DDI:** the recording will continue as long as the external destination keeps in the conversation.

Attention: Take into account that the call will be recorded while the external entity is present, even if the call is being transferred between multiple users of the platform.

Record all the calls of a DDI

To enable this feature, edit the DDI and configure the field under the section recording data:

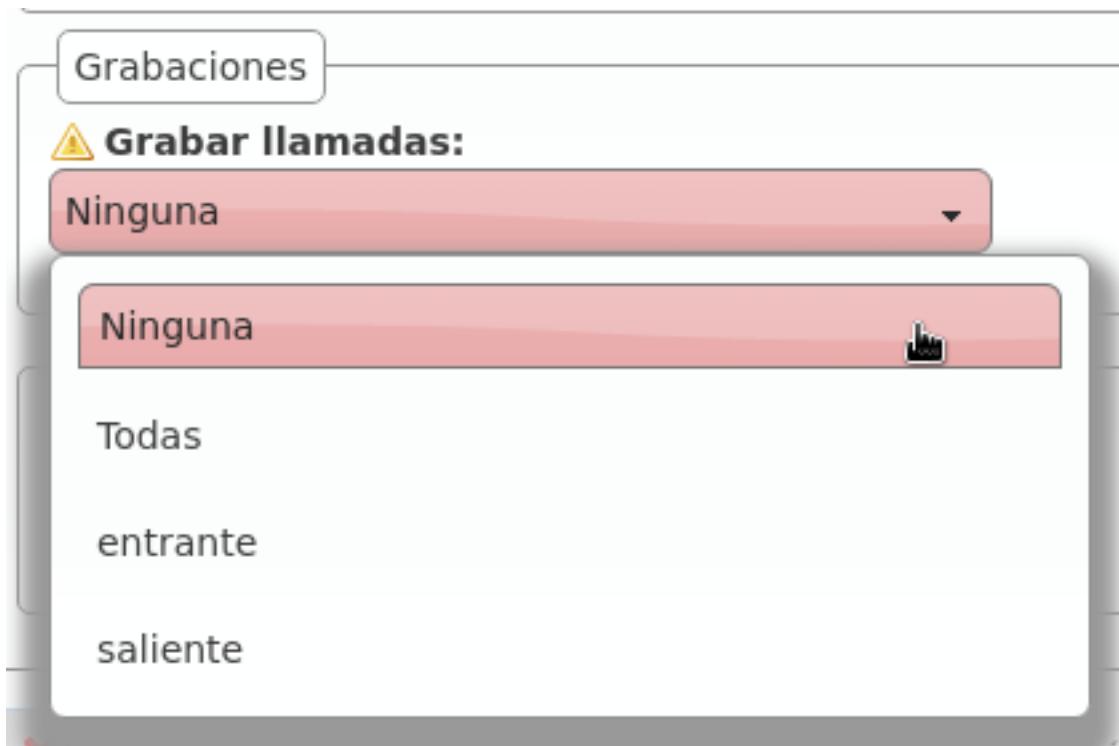

There are 4 available options:

- Disable recordings
- Enable incoming recordings
- Enable outgoing recordings
- Enable all call recordings

8.18.2 On demand recordings

The *on-demand* recordings must be enabled by the *brand administrator* for the companies that request it. This can be done in the company edit screen:



Warning: Contrary to the *Services* mentioned in the previous section, the on demand record are activated within a conversation.

Contrary to automatic ones, on demand recording can be stopped using the same process that started them.

Activated using the *Record* key

Some terminals (for example, *Yealink*) support sending a **SIP INFO** message during the conversation with a special *Record* header (see [reference](#)). This is not a standard for the protocol, but being Yealink one of the supported manufacturers of the solution, we include this kind of on-demand recording.

Important: For this recording requests, the configured code doesn't matter but the company still must have on demand records enabled.

To start or stop this kind of recordings, just press the Record key in the terminal and the system will handle the sent message.

Activated using *DTMF* codes

The more traditional approach for this feature is to press a combination of keys during the call. Some notification will be played and the recording will start or stop. This combination is sent to the system using **DTMF tones** using the same audio stream that the conversation (as mentioned in [RFC 4733](#)).

IvozProvider supports this kind of on demand record activation but with an important downside. In order to capture this codes, the pbx must process each audio packet to detect the code, avoiding the direct flow of media between the final endpoints.

Important: Enabling this record mode highly affects the performance of the platform. Use at your own risk.

Activated using a frustrated blind transfer

There is a tricky way to access this feature for terminals that does not support the INFO message and don't want its audio to be parsed:

Danger: This method is a workaround for those terminals that does not support the native *Record* key activation (recommended). Take into account that not all terminals will behave the same way while performing the transfer described in this section.

The keys for this methods are:

- It's not activated using a code during the conversation.
- It's activated making a **blind transfer** to the on demand record code.
- The system will understand this as a request to record and will reject the transfer.
- The user will continue with the existing call and keep talking.

Why this method does even exist?

The reason behind this tricky method is based, as explained in the previous block, on the design of the *Platform general architecture* and the *RTP audio flow*.

8.18.3 Recordings list

The *company administrator* can access to all the recordings in the section **Company configuration > Recordings**:

| Listado de Grabaciones | | | | | | | Total:21 Registros |
|---|----------------------------|-----------|------------------------------|--------------------------------|--------------------------------|--|--------------------|
| <input checked="" type="checkbox"/> Fecha | <input type="radio"/> Tipo | Caller | <input type="radio"/> Callee | <input type="radio"/> Duración | <input type="radio"/> Opciones | | |
| 22/09/2016 16:20:24 | DDI | 676676676 | 941941941 | 28.127 | | | |
| 22/09/2016 16:16:36 | DDI | 941941941 | 91123456 | 60.385 | | | |
| 20/09/2016 17:11:10 | On-demand (1007) | 941941941 | 676676676 | 91.816 | | | |

Recordings can be heard from the *web* or downloaded in MP3 format:

Ver Grabación (676676676)

Caller:
676676676

Callee:
941941941

Duración:
28.127

Recorded file:
 20x210d2c41ebd342ee400mm4m0akexd@SoftX3000.mp3

Tipo:
DDI

If the recording has been started on demand, it will also include the user that requested it:

Ver Grabación (941941941)

Caller:
941941941

Callee:
676676676

Duración:
91.816

Recorded file:
d2627ba1-d78ecf99@10.10.1.123.mp3 


Tipo:
On-demand (1007)

Retail Clients

Retail clients are a special type of company that only provide a connectivity service with contract peerings through retail accounts.

Attention: Contrary to the Virtual PBX companies, all Retail clients use the brand domain to unequivocally identify their accounts. You'll need to configure Brand's domain to use this feature.

Hint: Retail clients can be enabled per Brand basis via Features.

The goal of this section will be describe each of the configuration settings associated with Retail clients included in IvozProvider.

9.1 Retail Accounts

Retail Accounts are the main routable option in Retail clients. More or less like *Friends* are to Virtual PBX Companies, accounts contain the required configurable options to provide a SIP connectivity service with IvozProvider and an external SIP entity.

Warning: Although both **Contract peering** and **Retail accounts** are defined by the **brand operator**, the first ones are designed to connect with the public network while the second ones connect the system with other SIP agents.

9.1.1 Types of retail accounts

There are 2 main types of SIP PBX that can use retail with IvozProvider:

- **Direct connection PBX:** IvozProvider must be able to talk SIP directly with this kind of accounts by just redirecting the traffic to the proper port of the public IP address of the PBX.
- **PBX behind NAT:** Not directly accesible. This kind of PBX must register at IvozProvider (just like all the *Terminals* do).

9.1.2 What kind of calls can be routed through a *Retail Account*?

Contrary to Friends, **Retail Accounts** have some simplifications and limitations.

- Retail Accounts only route their assigned DDIs
- Retail Accounts only place externals calls to Contract Peerings
- Retail Accounts only receive external calls from Contract Peerings

9.1.3 Retail Accounts Configuration

These are the configurable settings of *Retail accounts*:

Name Name of the **retail account**. This name must be unique in the whole brand so it's recommended to use some kind of sequential identifier. This will also be used in SIP messages (sent **From User**).

Description Optional. Extra information for this *retail account*.

Password When the *retail account* send requests, IvozProvider will authenticate it using this password. Like in other SIP agents in IvozProvider **using password IS A MUST**.

Direct connection If you choose 'Yes' here, you'll have to fill the protocol, address and port where this *retail account* can be contacted.

Fallback Outgoing DDI External calls from this *retail account* will be presented with this DDI, **unless the source presented matches a DDI belonging to the account**.

Country and Area code Used for number transformation from and to this retail account.

Allowed codecs Like a other SIP entities, *retail accounts* will talk the selected codec.

From domain Request from IvozProvider to this account will include this domain in the From header.

9.1.4 Asterisk as an account client

At the other end of a account can be any kind of SIP entity. This section takes as example an Asterisk PBX system using SIP channel driver that wants to connect to IvozProvider.

Account register

If the system can not be directly access, Asterisk will have to register in the platform (like a terminal will do).

Configuration will be something like this:

```
register => account-name:account-password@ivozprovider-brand.sip-domain.com
```

Account peer

```
[name-peer]
type=peer
host=ivozprovider-brand.sip-domain.com
context=XXXXXX
disallow=all
allow=alaw
defaultuser=account-name
secret=account-password
```

```
fromdomain=ivozprovider-brand.sip-domain.com
insecure=port,invite
```

Warning: *Account clients* MUST NOT challenge IvozProvider. That's why the *insecure* setting is used here.

9.2 Retail DDI filters

Retail External Filters can be assigned to DDIs to temporary forward calls to an external number.

9.2.1 Filters Configuration

This are the configurable settings of *Retail external filters*:

Name Name of the filter.

Number External Destination for this filter.

Attention: Calls forwarded by a filter will keep the original caller identification, adding the forwarding info in a SIP *Diversion* header.

9.3 Retail DDIs

DDIs are the external entry point from Contract Peerings to Retail Clients that can be routed through Retail Accounts.

9.3.1 DDI filters

We can assign an **external call filter** configured in *previous section*. Contrary to Virtual PBX External Call filters, Retail DDIs filters only allow static redirection to another external number.

9.3.2 Retail DDI routes

Retail DDIs can only be routed to a *Retail Accounts* or *Virtual Fax*.

Hint: Routing a DDI through a Retail account will allow to place external calls from that account presenting that DDI as origin.

9.3.3 Recordings

If Retail Client has *Recordings* feature enabled, DDIs can also record incoming and/or outgoing calls.

9.4 Virtual Fax System

IvozProvider includes a simple but efficient *faxing* solution that allows:

- Sending PDF files via Fax.
- Receiving faxes through email or check them through the web portal.

Error: IvozProvider uses [T.38](#) for both sending and receiving faxes. Brand Operator must use *peering contracts* that have support for it.

9.4.1 Creating a virtual fax

This is the interface that turns up when we create a new fax in section **Company configuration > Virtual Faxes**:

Añadir Fax Virtual

Configuración de Salida

Nombre: 43 caracteres pendientes

DDI de salida:

Configuración de Entrada

Enviar por email:

Email: 232 caracteres pendientes

Fields are nearly self-explanatory:

Name Used by remaining section to reference a fax

Email Email address when we want to receive incoming faxes (if we check ‘Send by email’)

Outbound DDI DDI used as source number for outgoing faxes

To receive faxes in this DDI, we need to point it to our new fax in the section **DDIs**:

Editar DDI (941941941)

Información número

País: ★ España (+34) ▾ **DDI:** ★ 941941941 **Contrato de Peering:** ★ OPERADOR ▾

Información filtrado

Filtro de entrada: Sin asignar

Información enrutado

Enrutar: ★ Fax ▾ **Fax:** ★ Compras ▾

Additional configuration

⚠ **Bill inbound call:** No

Brand Operator can choose one or more *Outgoing Routes* for sending faxes:

Añadir Ruta saliente

Empresa: ★ DemoCompany ▾

Destino llamada

Tipo: Fax Virtual ▾

Enrutado saliente

Contrato de Peering: ★ OPERADOR ▾

Contingencia y balanceo de carga

Prioridad: ★ 1 ▾ **Peso:** ★ 1 ▾


This route applies to all faxes sent by selected company (or for all companies).

Note: *load-balancing* y *failover* logics described in *previous sections* apply to faxes too.

Important: If no fax-specific route is defined, faxes will be routed using standard call routes.

9.4.2 Sending a fax

Sending a fax is an easy task. First, we upload de PDF file and set the destination:

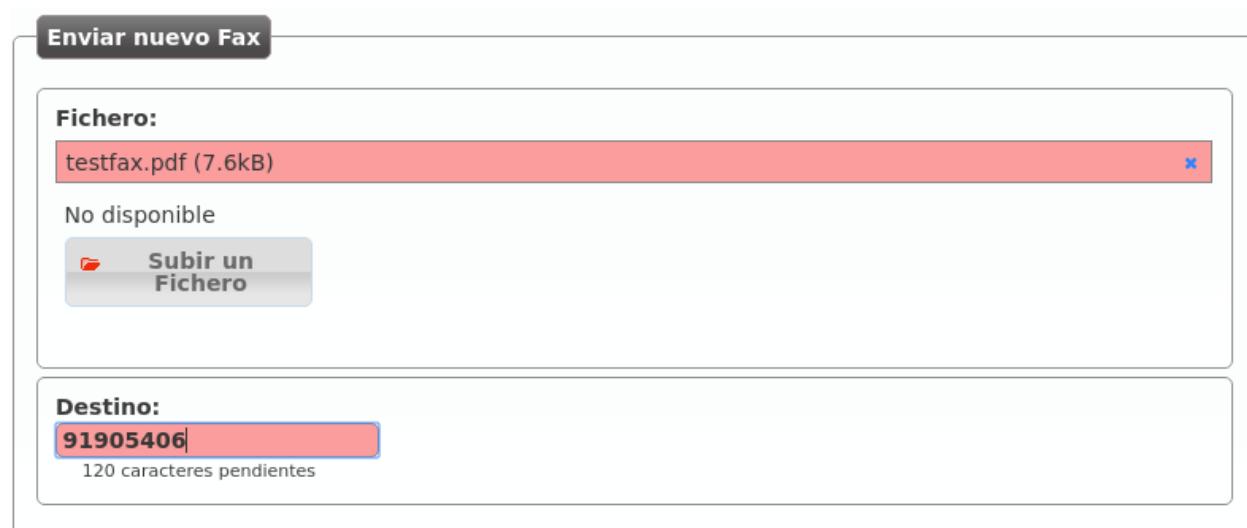

The screenshot shows a web-based form for sending a new fax. At the top, it says "Enviar nuevo Fax". The first section is labeled "Fichero:" and contains a red input field with the text "testfax.pdf (7.6kB)". Below this is a button labeled "Subir un Fichero" with a folder icon. The second section is labeled "Destino:" and contains a red input field with the text "91905406". Below this is the text "120 caracteres pendientes".

The list shows the fax and its status:

| Listado de Faxes salientes (Compras) | | | | | | | Total:1 Registros | | | | | | |
|--------------------------------------|-------------|-----------------------|---------------------|-----------------------|----------|-----------------------|-------------------|-----------------------|---------|-----------------------|-----------|--------------------------|--------------------------|
| <input type="checkbox"/> | Fichero | <input type="radio"/> | Fecha | <input type="radio"/> | Destino | <input type="radio"/> | Tipo | <input type="radio"/> | Páginas | <input type="radio"/> | Estado | <input type="radio"/> | Opciones |
| <input type="checkbox"/> | testfax.pdf | <input type="radio"/> | 14/10/2016 18:15:45 | <input type="radio"/> | 91905406 | <input type="radio"/> | Salida | <input type="radio"/> | | <input type="radio"/> | Pendiente | <input type="checkbox"/> | <input type="checkbox"/> |

9.4.3 Incoming faxes display

Apart from being received by mail, faxes can be watched and downloaded within the web portal too:

| Listado de Faxes Virtuales | | | | | Total:1 Registros | | | | |
|----------------------------|---------|-----------------------|---------------|-----------------------|-------------------|-----------------------|-------------------------|-----------------------|---|
| <input type="checkbox"/> | Nombre | <input type="radio"/> | DDI de salida | <input type="radio"/> | Enviar por email | <input type="radio"/> | Email | <input type="radio"/> | Opciones |
| <input type="checkbox"/> | Compras | <input type="radio"/> | 941941941 | <input type="radio"/> | Si | <input type="radio"/> | compras@democompany.com | <input type="radio"/> |     |

Añadir Fax Virtual **Borrar Fax Virtual**

Listado de Faxes entrantes (Compras)

Billing and Invoices

This block is essential for brand administrators as we will explain how to:

- Create pricing plans to assign a price to calls made by final users.
- Create invoices that show call details and global costs of each of their companies.

We will cover this topics:

10.1 Call Registry

Call Registry section shows the calls of the whole telephony platform and it is present in three different levels:

- **Main management > Call Registry**
- **Brand configuration > Call Registry**
- **Company configuration > Call Registry**

Each section filters calls conveniently.

Main management (god)

Lists all the calls of the platform, showing which brand and company they belong to:

| Listado de Registros de llamadas | | | | | | | | | | | Total:297 Registros Registros por página: 50 |
|----------------------------------|---------|----------|---------|----------|--------|-------------|----------|----------|--|--|--|
| Fecha | Marca | Compañía | Tipo | Subtype | Caller | Callee | Duración | Opciones | | | |
| 23/09/2016 12:31:56 | Irontec | Irontec | interna | | 1007 | 3219 | 8 | | | | |
| 23/09/2016 12:31:23 | Irontec | Irontec | interna | | 1007 | 1020 | 37 | | | | |
| 23/09/2016 12:30:28 | Irontec | Irontec | interna | | 1007 | 1020 | 6 | | | | |
| 23/09/2016 12:27:41 | Irontec | Irontec | interna | | 1007 | 1020 | 20 | | | | |
| 23/09/2016 12:07:46 | Irontec | Irontec | interna | | 3219 | 1007 | 43 | | | | |
| 23/09/2016 12:07:00 | Irontec | Irontec | interna | | 1020 | 3219 | 88 | | | | |
| 23/09/2016 12:06:39 | Irontec | Irontec | interna | | 1007 | 1020 | 78 | | | | |
| 23/09/2016 12:05:21 | Irontec | Irontec | interna | | 1007 | 1020 | 15 | | | | |
| 23/09/2016 12:03:16 | Irontec | Irontec | interna | | 1007 | 1020 | 24 | | | | |
| 23/09/2016 11:56:46 | Irontec | Irontec | interna | saliente | 1007 | 1020 | 6 | | | | |
| 22/09/2016 17:45:16 | Irontec | Irontec | externa | saliente | 1007 | 34948240514 | 11 | | | | |

Brand level

Lists all the calls of the currently emulated brand, showing which company they belong to:

| Listado de Registros de llamadas | | | | | | | Total:297 Registros Registros por página: 50 | | |
|----------------------------------|----------|---------|---------|--------|--------|----------|--|--|--|
| Fecha | Compañía | Tipo | Subtype | Caller | Callee | Duración | Opciones | | |
| 23/09/2016 12:31:56 | Irontec | interna | | 1007 | 3219 | 8 | | | |
| 23/09/2016 12:31:23 | Irontec | interna | | 1007 | 1020 | 37 | | | |
| 23/09/2016 12:30:28 | Irontec | interna | | 1007 | 1020 | 6 | | | |
| 23/09/2016 12:27:41 | Irontec | interna | | 1007 | 1020 | 20 | | | |
| 23/09/2016 12:07:46 | Irontec | interna | | 3219 | 1007 | 43 | | | |
| 23/09/2016 12:07:00 | Irontec | interna | | 1020 | 3219 | 88 | | | |
| 23/09/2016 12:06:39 | Irontec | interna | | 1007 | 1020 | 78 | | | |
| 23/09/2016 12:05:21 | Irontec | interna | | 1007 | 1020 | 15 | | | |

Company level

Lists all the calls of the currently emulated company:

| Listado de Registros de llamadas | | | | | | | Total:297 Registros Registros por página: 50 | | |
|----------------------------------|---------|---------|--------|--------|----------|----------|--|--|--|
| Fecha | Tipo | Subtype | Caller | Callee | Duración | Opciones | | | |
| 23/09/2016 12:31:56 | interna | | 1007 | 3219 | 8 | | | | |
| 23/09/2016 12:31:23 | interna | | 1007 | 1020 | 37 | | | | |
| 23/09/2016 12:30:28 | interna | | 1007 | 1020 | 6 | | | | |
| 23/09/2016 12:27:41 | interna | | 1007 | 1020 | 20 | | | | |
| 23/09/2016 12:07:46 | interna | | 3219 | 1007 | 43 | | | | |
| 23/09/2016 12:07:00 | interna | | 1020 | 3219 | 88 | | | | |
| 23/09/2016 12:06:39 | interna | | 1007 | 1020 | 78 | | | | |
| 23/09/2016 12:05:21 | interna | | 1007 | 1020 | 15 | | | | |

Note: [CSV](#) export makes possible to download the list for its later analysis.

Hint: If you choose one specific call, additional information is shown. This additional information is dependant of the current level (*god*, brand or company) and shows details about call transfers, call forwards, etc.

10.2 Billable calls

Billable calls sections only list **calls that imply cost**.

Important: *Call Registry* sections, on the other hand, show all calls, even the ones that do not imply cost, such as internal calls, incoming calls, etc.

These lists therefore include the price of each call (once it is calculated). Since companies are notified about its call's price via invoices issued by **brand operator**, this section is only available at two levels:

- Main level (god level)
- Brand level

Each entry shows this information:

Date Date and time of the call establishment.

Brand Only visible for *god*, shows the brand of each call.

Company Visible for *god* and *brand operator*, show the company of each call.

Destination External number dialed.

Pricing pattern Shows the *pricing pattern* used to set the price.

Duration Shows how long the call lasted.

Metered (yes/no) Shows if the asynchronous task that sets the price of each call has parsed each call.

Price The cost of the call.

Pricing plan Shows the *Pricing plan* used to set the price.

Peering contract Shows which *Peering contract* was used for each call.

Invoice Show if a call is already included in any *invoice*.

Type (inbound/outbound) Since some incoming calls can imply cost (see *billing of inbound calls*), show if the call is an incoming call or an outgoing one.

Note: As soon as the call is hung up, they appear in this list. In some minutes time the asynchronous process will set *Metered* to ‘yes’ and will assign a **price**.

10.3 Pricing plans

In *No pricing plan, no call* section the process of creating a *pricing plan* was described quite thoroughly and main concepts were introduced:

- A pricing plan groups some pricing patterns (prefixes) with their cost details:
 - Cost per minute
 - Call establishment cost
 - Bill by seconds, by minutes, etc.
- A pricing plan is linked to a specific company with a period of time in which this association is valid.
- One company may have more than one valid pricing plan for a specific call at a specific moment.
- In such cases, the call price will be calculated using the price detail of the matching pricing plan with minor metric.

10.3.1 Manual creation

Manual creation of a pricing plan implied the previous creation of at least one *price pattern*.

At this point, the future brand operator may have noticed that creating thousands of pricing patterns would be a really annoying and time consuming task, as there are 254 countries, each of them with their mobile networks, landline networks, special service numbers, etc.

That's why the creation of pricing patterns and pricing plans is done using a [CSV](#) file.

10.3.2 Importing a CSV file

The first step is creating an empty pricing plan to import the prices in (section **Brand configuration > Pricing plans**):

Añadir Plan de precio

Nombre:
 [es] ★ Plan de precio de prueba
 31 caracteres pendientes

[en] ★ Plan de precio de prueba
 31 caracteres pendientes

Descripción:
 [es] No usar en producción
 279 caracteres pendientes

[en] No usar en producción
 279 caracteres pendientes

We enter the empty pricing plan we have just created:

| Listado de Planes de precios | | | | Total: 1 Registros |
|------------------------------|-----------------------|---------------------|----------------|---|
| Nombre | Descripción | Creado | Opciones | |
| Plan de precio de prueba | No usar en producción | 11/10/2016 15:21:40 | | |
| Añadir Plan de precio | Borrar Plan de precio | Encontrar un Plan | Exportar a CSV | Listado de Precios (Plan de precio de prueba) |

This is the key button for the massive pricing pattern import process:

>Listado de Precios (Plan de precio de prueba)

Prices Help

Filtrado de elementos

Listado de Precios (Plan de precio de prueba)

Patrón de destino Coste de conexión Período de facturación

Añadir Precio Borrar Precio Importar Precios Exportar a CSV.

Importar Precios

Once chosen the CSV file to import, this window turns up:

Parse file and import

Import system. Set column configuration and continue.
Fields with * are required.

- Target Pattern Name*: *Target Pattern Name*
- Target Pattern Description*: *Target Pattern Description*
- Prefix*: *Regular Expresion*
- Per minute charge*: *Per minute charge*
- Connection charge*: *Connection charge*
- Charge period*: *Charge period*

| Target Pattern Name* | Target Pattern Descripti | Prefix* | Per minut |
|----------------------|----------------------------|---------|------------|
| Target Pattern Name | Target Pattern Description | Prefix | Per minute |
| Afghanistan | Areeba Mobile | 9377 | 0.273 |
| Afghanistan | Roshan Mobile | 9379 | 0.255 |

Ignore first line.

Close **Yes, continue!**

We can select which column contains which field, in case we want to import a **CSV** file in a non-recommended format. We can also decide whether to import the first line or discard it as it may have titles instead of data.

Hint: The importing process is done in background, letting the brand operator continue doing other stuff while it is finished.

CSV format

Although the above window allowed importing non-recommended format **CSV** files, we encourage you to import a file in the proposed format, as it will make this process much easier.

The recommended **CSV** format is described in the contextual help section, that includes even a link to download an example file:

€ Listado de Precios (nuevo)

CSV file must be as following example:

```
Target Pattern Name,Target Pattern Description,Prefix,Per minute charge,Connection charge,Charge period
"Spain","Mobile",347,0.028,0.028,60
```

You can download an example file [here](#)

[Ayuda Precios](#)

The order of the columns should be:

- Pricing pattern name
- Pricing pattern description
- Prefix
- Price per minute
- Establishment cost
- Billing period

Note: It is recommended to double quote alphanumeric entries, though it is not compulsory for single word entries (or entries without odd symbols). **If they contain any comma, they MUST be quoted.**

Error: Floating numbers **MUST** use point as decimal separator.

Note: Numeric entries can be quoted with double quotes, but it is not mandatory.

Important: The importing system will just bind the price to an existing price pattern or, if prefix doesn't match any existing pricing pattern, it will create one.

Warning: The price of the call will be increased every billing period unit.

- If *billing period* is set to 1, every second the price will be increased *price per minute* divided by 60 (bill by seconds).
- If *billing period* is set to 60, every minute the price will be increased *price per minute* (bill by minutes).

Once the import process is over, we just have to bind the pricing plan to the companies we want following *the procedure explained in the previous block*.

10.4 Call billing

Billing a call is the **action of setting a price** to a call that implies cost.

10.4.1 Automatic billing

As exposed previously, billing calls depends upon an automatic process:

- When a call is about to be established, IvozProvider verifies that it will be able to bill it.
 - If with the current configuration (active and applicable pricing plans for a given company and for the specific destination) it won't be possible to bill the call, IvozProvider will prevent its establishment.
- Once a call that implies cost is hung up, it is listed in *Billable calls*.
- Some minutes later, the billing task will evaluate each unbilled call and will update this fields:
 - Price

- Pricing plan
- Pricing pattern
- Set Metered to ‘yes’

10.4.2 Manual re-billing


It may happen that the brand operator needs to re-bill an specific call due to multiple reasons:

- Mistake on imported pricing plan/pattern.
- Multiple pricing plans with incorrect metric value.
- Not associated pricing plan.
- Etc.

In these cases, the *brand operator* can re-bill wrongly billed calls.

Important: Billing a call again means setting the price as it is made right now. It uses, therefore, the current configuration of pricing plans not the configuration of the moment the call was made.

In order to re-bill some calls (or just one), select them in **Brand configuration > Billable calls** and press the button **Bill calls**.

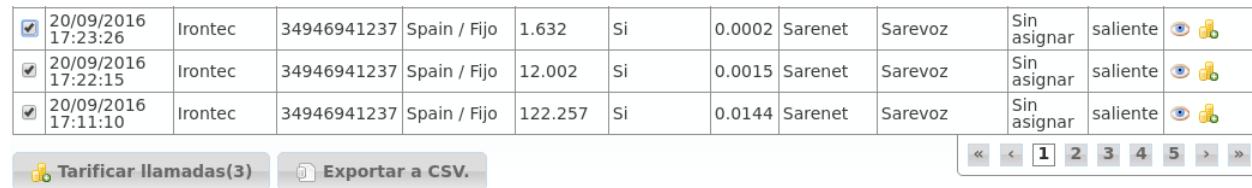

| | | | | | | | | | | | | |
|--|---------|-------------|--------------|---------|----|--------|---------|---------|-------------|----------|--|--|
| <input checked="" type="checkbox"/> 20/09/2016 17:23:26 | Irontec | 34946941237 | Spain / Fijo | 1.632 | Si | 0.0002 | Sarenet | Sarevoz | Sin asignar | saliente | | |
| <input checked="" type="checkbox"/> 20/09/2016 17:22:15 | Irontec | 34946941237 | Spain / Fijo | 12.002 | Si | 0.0015 | Sarenet | Sarevoz | Sin asignar | saliente | | |
| <input checked="" type="checkbox"/> 20/09/2016 17:11:10 | Irontec | 34946941237 | Spain / Fijo | 122.257 | Si | 0.0144 | Sarenet | Sarevoz | Sin asignar | saliente | | |

Tarificar llamadas(3) Exportar a CSV

« < **1** 2 3 4 5 > »

Error: It is not possible to re-bill a call that is currently included in an existing invoice. In other words, if a selected call has a non-empty **Invoice** field, this invoice must be deleted before. The reason behind this logic is that we don't want an invoice containing calls with a wrong price.

10.5 Invoice generation

The final goal of this section is to generate invoices with the call that imply cost of a given company.

10.5.1 Invoice templates

Before generating an example invoice, it is important to understand that invoice creation process uses templates.

Hint: This way, every **brand operator** can adapt which information is shown and how this information is shown, add logos, graphs, etc..

Templates are parsed by handlebars and rendered using wkhtmltopdf library.

The helper in the section **Brand configuration > Invoice templates** include a summarized explanation of the creation of templates. In the [official site of wkhtmltopdf](#) there is plenty additional information. You can delve into template expressions [here](#) as well.

By default, this section provides some basic example templates:

| Listado de Plantillas de facturas | | | Total:4 Registros |
|-----------------------------------|-----------------------------------|--|---|
| <input type="checkbox"/> | Nombre | Descripción | Opciones |
| <input type="checkbox"/> | Básica | Básica |   |
| <input type="checkbox"/> | Costes fijos | Básica + costes fijos |   |
| <input type="checkbox"/> | Llamadas entrantes | Básica + Llamadas entrantes |   |
| <input type="checkbox"/> | Costes fijos y Llamadas entrantes | Básica + Costes fijos + Llamadas entrantes |   |

10.5.2 Fixed costs

Fixed cost are a constant concept that can be added to invoices that use invoice templates that take into account these fixed costs.

Take this image as an example (section **Fixed costs**):

| Listado de Costes fijos | | | Total:3 Registros |
|--------------------------|--------------------------|-------|---|
| <input type="checkbox"/> | Descripción | Coste | Opciones |
| <input type="checkbox"/> | Alquiler de equipos | 20 € |   |
| <input type="checkbox"/> | Servicio técnico premium | 7 € |   |
| <input type="checkbox"/> | Líneas FTTH | 50 € |   |

We will explain afterwards how these fixed costs can be added to a invoice and in what amount.

10.5.3 Invoice creation

Invoices section lets **brand operator** to generate invoices to issue to its clients.

This is the process to add a create a new invoice:

Añadir Factura

| | |
|--|-----------------------------------|
| Número: ★ 23412342 22 caracteres pendientes | Empresa: ★ DemoCompany |
| Fecha inicio: ★ 01/09/2016 | Fecha fin: ★ 30/09/2016 |
| Impuesto: ★ 21 % | |
| Plantilla: ★ Costes fijos | |

Number Will be included in the invoice and shows the invoice number

Company The company whose calls will be invoiced

Start/End date The time period of the calls that will be invoiced

Taxes Taxes to add to the final cost (e.g. VAT)

Template Invoice template that will be used


Let's add some fixed costs to this invoice:

| | | | | | | | | | | | |
|--------------------------|-------------|----------|------------|------------|---|------|---|-----------|--------------|---|--|
| <input type="checkbox"/> | DemoCompany | 23412342 | 01/09/2016 | 30/09/2016 | € | 21 % | € | Esperando | Costes fijos |   | Listado de Costes fijo para factura (23412342) |
|--------------------------|-------------|----------|------------|------------|---|------|---|-----------|--------------|---|--|


Select previously defined fixed costs and their amounts:

| Listado de Costes fijo para factura (23412342) | | | Total:3 Registros |
|---|----------|---|-------------------|
| ■ Coste fijo | Quantity | Opciones | |
| <input type="checkbox"/> Alquiler de equipos - 20 € | 1 |   | |
| <input type="checkbox"/> Líneas FTTH - 50 € | 3 |   | |
| <input type="checkbox"/> Servicio técnico premium - 7 € | 1 |   | |


At this point, we can generate the invoice pressing this button:

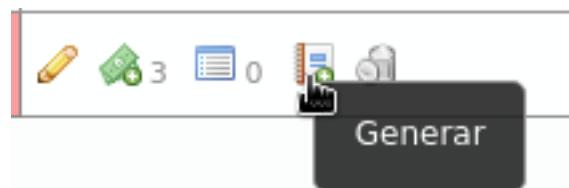

Pressing this button we can see which calls have been included in the invoice:

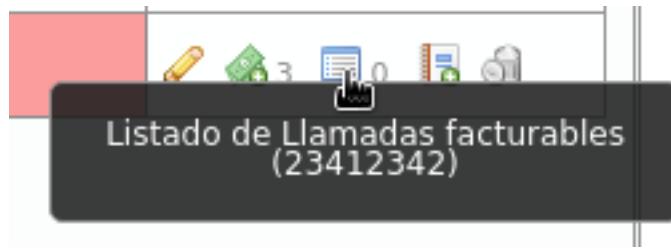

And pressing this one we can download the invoice in PDF format:

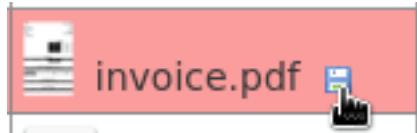

Warning: End date must be a past date. In other words, it is not allowed to generate invoices for future dates or dates including today.

Error: All the calls of the selected period must be billed.

Terminal provisioning

IvozProvider supports provisioning of terminals via HTTP/HTTPS that fulfill the following requirements:

- Assuming a just unboxed terminal, just plugged and connected to the network:
 - Ask IP address via DHCP.
 - DHCP has enabled the option 66 that points to the platform portal
 - The first requested provisioning file is a static file (different for each model) prefixed with the previous step URL.
 - The served file can redefine the URL for further requests

Any terminal model that can adapt to this provisioning way can be added into the section **Platform Configuration > Terminal manufacturers**.

Example Cisco SPA504G

- Cisco SPA504G is turned on and requests an IP address to DHCP
- Receives “<http://provision.example.com/provision>” as DHCP option 66
- Request HTTP configuration from <http://provision.example.com/provision/spa504g.cfg>
- All 504G request the same file (spa504.cfg), prefixed with the given URL
- This file only contain basic configuration settings for the model and the URL for the next request (p.e. <https://provision.example.com/provision\protect\T1\textdollarMAC.cfg>)
- This way, each terminal (MAC should be unique) request a specific file (and different) after the generic one has been served.
- This file will contain the specific configuration for the terminal:
 - User
 - Password
 - SIP Domain

Note: IvozProvider provisioning system, right now, only has one goal: provide credential and language settings for the terminals.

11.1 Configuration of supported models

IvozProvider uses a template system that allows global operator (God) to define new models and configure what files will be served.

The help section of **Terminal manufacturers** has examples for models supported *out-of-the-box* in IvozProvider:

- Cisco SPA (502, 504, 509, 514 y 525)
- Yealink (T21P, T21Pe2, T23P, T27P, T48G, W52P, W56P)

Hint: These models will be available after the initial installation, but you must edit them and load the default configuration before you can use the provisioning system (option **Restore default template**).

Analyzing the suggested templates you can have a basic idea of the flexibility of the system to configure any existing terminal model in the market.

User Portal

IvozProvider provides a web portal where final users can do the following actions:

- See all calls he or she has been involved.
- Configure call forwards:
 - To voicemail
 - To an internal extension
 - To an external number
- Enable functionalities:
 - Call waiting
 - Do Not Disturb
- See the state of his or her SIP device registration

12.1 Access URLs

Prior to accessing to user portal, the URL addresses must be configured (domains in these URLs must point to any of the public IP addresses of the platform).

2 roles can perform this task:

12.1.1 God operator

In the section **Platform configuration > Brands** you can configure as many user URLs as you wish, using the button **Portal list** of each brand.

Note: URLs are linked to brands and god operator may choose where to create one shared user portal URL for all the companies of a brand or creating one per company.

Warning: URLs MUST be HTTPS.

This section also allows setting a logo per URL, a theme and a phrase to use as the title of user portal.

Hint: This allows creating corporative user portals.

12.1.2 Brand Operator

Brand Operator can also perform this same task in order to configure the user portal URLs of his companies.

This way, he can choose whether to configure one URL per Company (with custom domains, logos, theme and title) or sharing a global URL for all of them.

The section to do this is **Brand configuration > Portal URLs**.

12.2 Access credentials

Access credentials to user portal is configured in **Company configuration > Users** section.

Specifically:

- **Login information** block, the access of each user is enabled or disabled.
- You can set the **Password** too.
- To log in the user portal, the user must use his/her email address.

Warning: The **email** of each user MUST be **globally unique**.

Security elements

13.1 Firewall

IvozProvider does not currently include a firewall but...

Danger: We strongly encourage any production installation to implement a firewall to protect the platform from the wild Internet.

The protection method could be:

- Local firewall based on [iptables](#)
- External firewall
- Both

13.1.1 Exposed ports/services

These are the **ports IvozProvider needs to expose** to work properly:

SIP signalling:

- Port 5060 (TCP/UDP)
- Port 5061 (TCP)
- Port 7060 (TCP/UDP) y 7061 TCP (just in case both ProxyUsers and ProxyTrunks share IP)

RTP audioflow:

- Port range 13000-19000 UDP

Web portal and provisioning:

- Ports TCP 443, 1443 y 2443

Hint: We recommend using **iptables geoIP module** to drop connections from countries where we don't have any users.

13.2 Authorized company IP ranges

During the Company creating process, we skipped the security mechanism that **limits the IP addresses or ranges that the company terminals can use in their terminals**.

This can be activated in the section **Brand configuration > Company**:



Rest of the users won't be allowed to connect from another network, even if the credentials are valid.

Warning: Once the filter has been activated you **MUST** add networks or valid IP addresses, otherwise, all the calls will be rejected.

| Listado de Empresas | | | | | | | | Total:1 Registros |
|--|--------------------------------|----------------------------------|--------------------------------|----------------|------------|----------|----------|-------------------|
| | Nombre | NIF | Prefijo de salida | Código de País | SIP domain | Lenguaje | Opciones | |
| <input checked="" type="checkbox"/> | DemoCompany | 12345678 | | España (+34) | A.B.C.D | Español | | |
| Listado de Redes autorizadas (DemoCompany) | | | | | | | | |
| Añadir Empresa | Borrar Empresa | Importar Fichero | Exportar a CSV | | | | | |

Both IP addresses or ranges can be used, in CIDR format (IP/mask):

| Listado de Redes autorizadas (DemoCompany) | | | Total:2 Registros |
|--|----------------|----------------|-------------------|
| | Red autorizada | Descripción | Opciones |
| <input type="checkbox"/> | 8.8.8.8 | DemoCompany HQ | |
| <input type="checkbox"/> | 8.8.4.0/24 | My network | |

Important: This mechanism limits the origin of the users of a company, it doesn't filter origin from **Contract Peerings**.

13.2.1 Roadwarrior users

Some companies have roadwarrior users that travel often and connect from external networks, forcing Companies to disable the IP filter security mechanism.

To solve this issue, there is a user option called **Calls for non-granted IPs** that enables these users to call from non-granted IPs while their companies are still protected with IP filter mechanism.

When users like these call from non-granted IPs, their amount of concurrent outgoing calls are limited to 1, 2 or 3 to avoid being a security breach.

Warning: Only calls generated by this kind of user (both internals and externals) are counted and limited, received calls are not affected by this setting (they are controlled with **MaxCalls** setting).

To sum up, with this feature:

- There are users that are allowed to make a fixed amount of calls from non-granted IPs.
- This calls from non-granted IPs are counted and limited.

Example 1 - Company without IP check

It doesn't matter if the user is allowed to make calls from non-granted IPs, as there are no non-granted IPs.

Example 2 - Company with IP check

- If the user is calling from one of the allowed IPs, it doesn't matter if the user is allowed to make calls from non-granted IPs: this calls are not counted nor limited.
- If the user is NOT calling from one of the allowed IPs, it is verified the amount of calls that this user is allowed to make. If the user is allowed to make calls from non-granted IPs and has not exceeded his limit, the call is granted and counted.

Note: If Calls for non-granted IPs is set to *None* the user must fulfill the IP policy of his company.

13.3 Anti-flooding

IvozProvider comes with an *anti-flooding* mechanism to avoid that a single sender can deny the platform service by sending lots of requests. Both *proxies* (users and trunks) use this mechanism, that **limits the number of requests from an origin address in a time lapse**.

Warning: When an origin reaches this limit, the proxy will stop sending responses for a period of time. After this time, the requests will be again handled normally.

Some origins are automatically excluded from this *anti-flooding* mechanism:

- Application Servers from the platform.
- Company authorized IP addresses or ranges (see previous section).

Global operator of the platform can also add exceptions to this mechanism in the section **Global configuration > Antiflood trusted IPs**.

| Listado de Direcciones IP de confianza | | | Total: 1 Registros |
|--|-----------------------------------|---|--------------------|
| <input checked="" type="checkbox"/> IP | <input type="radio"/> Descripción | <input type="checkbox"/> Opciones | |
| <input type="checkbox"/> 5.196.32.101 | I know this is safe |   | |

13.4 Concurrent call limit

Another security mechanism can avoid that compromised credentials are used to establish hundreds of calls in little time. This mechanism **limits the number of external calls** of each company.

Note: This mechanism only takes into account the external channels, both incoming or outgoing external calls.

This can be configured in the company edit screen:



Tip: To disable this mechanism, set its value to 0.

Maintenance and troubleshooting

This section described the tools included in IvozProvider to troubleshoot any problems you may have:

14.1 Analyzing SIP traffic

Although all production IvozProvider installations maintained by Irontec include a Homer SIP Capture Server, it is not installed in the standalone version of IvozProvider. The reason behind this is that we prefer awesome SIPCAPTURE stack running on an additional machine.

sngrep Ncurses SIP Messages flow viewer developed by Irontec is currently the preferred tool to inspect SIP traffic included in IvozProvider.

| 127.0.0.1:6060 | kamusers:5060 | UAC:11842 |
|------------------------------|------------------------------|-----------|
| | INVITE (SDP) | |
| 11:26:33.849821 +0.006569 | → 100 trying -- your call is | |
| 11:26:33.856390 +0.002063 | < | |
| 11:26:33.858453 +0.087589 | | |
| 11:26:33.946042 +0.041127 | | |
| 11:26:33.987169 +0.001091 | 180 Ringing | |
| 11:26:33.988260 +0.547098 | < | |
| 11:26:34.535358 +0.003601 | | |
| 11:26:34.538959 +0.000936 | 200 OK (SDP) | |
| 11:26:34.539895 +0.002482 | < | |
| 11:26:34.542377 +0.012710 | ACK | |
| 11:26:34.555087 +0.003954 | | |
| 11:26:34.559041 +0.129279 | UPDATE (SDP) | |
| 11:26:34.688320 +0.000890 | → | |
| 11:26:34.689210 | 200 OK (SDP) | |
| | < | |

14.1.1 sngrep

See live SIP traffic (all):

```
sngrep
```

See live SIP traffic related to calls:

```
sngrep -c
```

See live SIP traffic and capture RTP too:

```
sngrep -c -r
```

For more reference, visit [sngrep official site](#).

14.1.2 Other capturing tools

Although sngrep is our preferred capturing tool, IvozProvider ships other tools to capture SIP/RTP traffic, such as [tcpdump](#) and [ngrep](#).

14.2 Log viewer

Although all production IvozProvider installations maintained by [Irontec](#) include a [Graylog](#) server, [journalctl](#) is currently the unique tool to inspect logs generated by different elements of the solution in the past.

14.2.1 Asterisk CLI

Asterisk CLI gives tons of realtime information too and are formatted beautifully to detect possible configuration errors:

```
> [b1][6acea02f] Executing [1007@users:1] NoOp("PJSIP/blc1t1_alice-0000001f", "Outgoing call from user \"Alice\" <101> to 1007") in new stack
> [b1][6acea02f] Executing [1007@users:2] AGI("PJSIP/blc1t1_alice-0000001f", "agi://127.0.0.1:4573/cli.php?model=default/calls/users") in new stack
> [b1][6acea02f] [CallsController.php:141] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "_COMPANYID = 1")
> [b1][6acea02f] [CallsController.php:147] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "_CALL_TYPE = internal")
> [b1][6acea02f] [CallsController.php:150] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "CALL_ID = 1_387598376@10.10.0.133")
> [b1][6acea02f] [CallsController.php:153] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "CHANNEL(language) = es")
> [b1][6acea02f] [CallsController.php:154] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "CHANNEL(musicclass) = default")
> [b1][6acea02f] [CallsController.php:634] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "CALLER_TYPE = USER")
> [b1][6acea02f] [CallsController.php:639] AGI SetVar("PJSIP/blc1t1_alice-0000001f", "CALLER_ID = 1")
> [b1][6acea02f] [CallsController.php:177] AGI Notice("PJSIP/blc1t1_alice-0000001f", "Processing outgoing call from Alice Allison [user1] to number 1007")
> [b1][6acea02f] [CallsController.php:236] AGI Verbos("PJSIP/blc1t1_alice-0000001f", "Number 1007 is handled as external number.")
> [b1][6acea02f] [ExternalUserCallAction:33] AGI Notice("PJSIP/blc1t1_alice-0000001f", "Processing External call from Alice Allison [user1] to 1007")
> [b1][6acea02f] [ExternalCallAction.php:57] AGI Verbos("PJSIP/blc1t1_alice-0000001f", "Skipping tariffic checking as Externally Rating will be used")
> [b1][6acea02f] [ExternalCallAction.php:93] AGI Error ("PJSIP/blc1t1_alice-0000001f", "User 1 has no external DDI")
> [b1][6acea02f] [ExternalUserCallAction:72] AGI Error ("PJSIP/blc1t1_alice-0000001f", "User Alice [user1] has not OutgoingDDI configured")
```

You can access Asterisk CLI typing *ast* in the shell.

14.2.2 Kamailio realtime log viewing

You can see Kamailio logs in realtime too typing *kamtail-proxyusers* and *kamtail-proxytrunks* in the shell:

```
[feb 02 19:32:28] [b1][91a76fd8] Request: 'INVITE sip:1007@5.196.32.133:5060' ('1 INVITE') from 'sip:alice@5.196.32.133:5060' (62.99.78.6:2700) [udp]
[feb 02 19:32:28] [b1][91a76fd8] REQINIT: 62.99.78.6 will be checked against antiflood
[feb 02 19:32:28] [b1][91a76fd8] REQINIT: 62.99.78.6 granted by antiflood
[feb 02 19:32:28] [b1][91a76fd8] REQINIT: All checks passed, continue...
[feb 02 19:32:28] [b1][91a76fd8] NATDETECT: Force rport
[feb 02 19:32:28] [b1][91a76fd8] NATDETECT: NAT detected, set FLT_NATS
[feb 02 19:32:28] [b1][91a76fd8] NATDETECT: Non-REGISTER and first hop ---> Add contact alias
[feb 02 19:32:28] [b1][91a76fd8] NOT in dialog request - not has_to_tag: Initial transaction
[feb 02 19:32:28] [b1][91a76fd8] AUTH: Auth needed
[feb 02 19:32:28] [b1][91a76fd8] Calculated hash for 1_1553598527@10.10.0.133
[feb 02 19:32:28] [b1][91a76fd8] Request: 'INVITE sip:1007@5.196.32.133:5060' ('2 INVITE') from 'sip:alice@5.196.32.133:5060' (62.99.78.6:2700) [udp]
[feb 02 19:32:28] [b1][91a76fd8] REQINIT: 62.99.78.6 will be checked against antiflood
[feb 02 19:32:28] [b1][91a76fd8] REQINIT: 62.99.78.6 granted by antiflood
[feb 02 19:32:28] [b1][91a76fd8] REQINIT: All checks passed, continue...
[feb 02 19:32:28] [b1][91a76fd8] NATDETECT: Force rport
[feb 02 19:32:28] [b1][91a76fd8] NATDETECT: NAT detected, set FLT_NATS
[feb 02 19:32:28] [b1][91a76fd8] NATDETECT: Non-REGISTER and first hop ---> Add contact alias
[feb 02 19:32:28] [b1][91a76fd8] NOT in dialog request - not has_to_tag: Initial transaction
[feb 02 19:32:28] [b1][91a76fd8] AUTH: Authentication OK, consume credentials
[feb 02 19:32:28] [b1][91a76fd8] Domain strict checking success
[feb 02 19:32:28] [b1][91a76fd8] Remove preloaded route headers
[feb 02 19:32:28] [b1][91a76fd8] dialog_manage()
[feb 02 19:32:28] [b1][91a76fd8] Add record-route
[feb 02 19:32:28] [b1][91a76fd8] R-URI: My domain
[feb 02 19:32:28] [b1][91a76fd8] Local subscriber calling to my domain, dispatch to AS(-es)
```

