# ELE 206/COS 306 Lab 0: Install and Verify Capabilities of Tools

Due Date: September 26th, 2018

No demonstration required for this lab assignment.

### Introduction

In this lab, you will install the tools needed for the course's lab assignments. Additionally, you will become familiar with the tools by compiling and simulating a small amount of Verilog, the hardware description language used throughout the labs.

Directly copy/pasting code from this document may cause unwanted formatting changes and compilation errors. Therefore, you should type out all code contained in this lab.

# Part 1: Installing command line tools

Instructions for installing the tools needed for the lab assignments is provided in a separate document titled "ELE 206/COS 306: Software Installation Guide". Please read and follow those instructions. If you run into any difficulties, you can talk to a TA during lab hours, check if the issue has been discussed on Piazza, or post a question on Piazza if the issue has not already been addressed.

You must know basic command line usage for this class. You should review the COS 126 command line cheat sheet at http://www.cs.princeton.edu/courses/archive/spr15/cos126/cmdline.html. Unless you are already familiar with the command line in your operating system of choice, it will be

very helpful for you to read in full the 15-minute introduction to the command line in your operating system provided in the COS 126 booksite. The Windows version is available at: http://introcs.cs.princeton.edu/java/15inout/msdos.html. The version for Mac, Linux, and other \*nix systems is available at: http://introcs.cs.princeton.edu/java/15inout/unix.html

This course recommends Visual Studio Code as your IDE. We recommend it because it is fast, cross-platform, and contains an integrated terminal which allows Verilog commands to be easily executed. All of the examples/tutorials in this course will use VSCode.

## Part 2: Compile and test a small Verilog module

Before continuing into this section, you should become familiar with Chapter 1 and 2 of the Verilog tutorial. Although you will not be tested on your knowledge of Verilog in this lab, you will be required to write your own Verilog from the next lab onward.

We will now compile and test the following very simple circuit in Verilog.

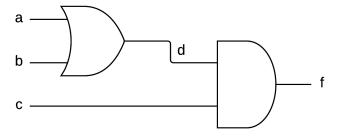


Figure 0.1: A simple combinational circuit

First, you may wish to create a directory to work in. Open up a command line, and navigate to a place where you would like to do your work for ELE 206. Then, from that location, create a directory named  $lab\theta$  and change in to that directory:

```
1 mkdir lab0
2 cd lab0
```

Now, inside the  $lab\theta$  directory, create a text file containing the following code.

```
module SimpleCircuit(
input a,
input b,
input c,
output f

);
wire d;

assign d = a || b;
assign f = d && c;
endmodule
```

SimpleCircuit is a module that takes three one-bit inputs and produces a single one-bit output. Save this file in the  $lab\theta$  directory with the name SimpleCircuit.v. Be sure that you are not creating a text file named SimpleCircuit.v.txt with an extra, possibly hidden file extension. Next, create a second file and type the following code:

```
module SimpleCircuit_test;
     reg [3:0] counter;
 3
     wire out;
 5
     SimpleCircuit circuit_under_test(
       .a(counter[2]),
 6
       .b(counter[1]),
       .c(counter[0]),
 8
9
       .f(out)
10
11
12
     always @( * ) begin
       if (counter[3]) begin
13
         $finish;
14
       end
15
16
     end
17
18
     initial begin
       $dumpfile("SimpleCircuit_test.vcd");
19
20
       $dumpvars;
21
22
       counter = 4'b0000;
23
24
       while (1) begin
25
         #1 // Delay for one second
26
         counter = counter + 3'b001;
27
       end
28
     end
29
   endmodule
```

Save this with the name SimpleCircuit.t.v in the same directory. This will be the testbench for SimpleCircuit. It contains one instance of SimpleCircuit, named circuit\_under\_test, and will generate all possible input values. When simulated, the input and output values will all be recorded to a .vcd file named SimpleCircuit\_test.vcd. After typing and saving both files, run the following command to compile the two Verilog files:

#### | iverilog -Wall -o SimpleCircuit\_test SimpleCircuit.v SimpleCircuit.t.v

iverilog is the Icarus Verilog compiler command. The -Wall argument tells the compiler to generate all usual warning types, which will help you identify bugs. The -o argument tells the compiler that the next argument is the filename to save the output to. The final arguments tell the compiler what source files to compile. If you have typed the files correctly, no warnings should be generated, and the command should succeed without displaying much. If you see any messages, you may have made a typo. Reexamine your code carefully to eliminate it. After successfully compiling the code, if you examine the contents of the directory, you should now see a new file named SimpleCircuit\_test. This is the compiled version of SimpleCircuit and its testbench. To simulate the compiled circuit, run the following command:

#### vvp SimpleCircuit\_test

vvp is the command to run the output of the Icarus Verilog compiler. It takes the filename of the compiler output as an argument. After running the simulation, if you check the contents of the current directory, you should see a file named  $SimpleCircuit\_test.vcd$ . This file contains a record of how values changed during the simulation. The recorded data can be viewed by running the following command:

#### gtkwave SimpleCircuit\_test.vcd

This will open a GTKWave window with the .vcd file loaded. To view the recorded values, select the SimpleCircuit\_test module in the SST (Signal Search Tree) pane in the upper left. The counter vector of registers and the wire out will appear as signals you can select. Click and drag them one at a time to the "Signals" pane in the middle of the window. To the right of each signal in the "Signals" pane, a green waveform will appear in the "Waves" pane showing how that signal varied over time during the simulation. You can adjust the time scale to show roughly the entire duration of the simulation within the window by clicking the "Time" menu in the top menu bar, selecting "Zoom" and then "Zoom Best Fit". This can also be done by clicking the Zoom Fit button in the toolbar near the top of the window, which looks like a

magnifying glass with a square inside of it. You should see that all the signals changed over the course of the simulation. You may further adjust your view by zooming in and out or scrolling. Clicking in the "Waves" pane places a vertical marker at a point in time, and values at that time will be shown in the "Signals" pane.



Figure 0.2: Selecting a module in the upper part of the "SST" pane (upper left) will show signals recorded for that module (lower left) which can be dragged to the "Signals" pane (center) to view their values in the "Waves" pane (right).

You may notice that the wires a, b, c, d, and f did not appear as signals that could be viewed when you selected the SimpleCircuit\_test module in the SST pane. This is because these wires are internal to the SimpleCircuit module, and are not recorded as part of the SimpleCircuit\_test testbench. If you expand the SimpleCircuit\_test module by clicking the box with a "+" to its left, you will see the submodule circuit\_under\_test, which, as mentioned previously, is an instance of the SimpleCircuit module. If you select circuit\_under\_test, you should be able to see the five wires, a, b, c, d, and f, which are in a SimpleCircuit. You can now click and drag all of these wires over to the "Signals" pane to view its values during the simulation.

## Write-Up and Submission

A demonstration is not required for this lab. In future labs, you may be required to visit the F114 lab during a lab TA session to demonstrate lab completion.

#### Write-Up

For your write-up, answer the following questions briefly but completely. You may create the write-up in any program. You may hand-write and scan your answers to any problems if you would prefer. However, you must submit your write-up as a single PDF document.

Name your PDF  $netid\_lab0\_writeup.pdf$ , with netid replaced with your Princeton NetID.

- 1. [10 points] Suppose I have a command line open at a directory named foo. This directory contains a subdirectory named bar. What command or sequence of commands could I issue on your system to find out what files are contained within the subdirectory bar, such that after the command or sequence of commands is executed, foo is the current directory as it was before the commands were executed?
- 2. [10 points] Include a screenshot of the simulated circuit behavior displayed in GTKWave, showing waveforms for all inputs and outputs of circuit\_under\_test for the entire duration of the simulation. In particular, counter[3:0] and out should be displayed in the viewer. Additionally, include the waveform for the internal wire d. In the screenshot, place a marker at a location such that the "Signals" pane shows the values of all the signals when the inputs were a = 0, b = 1, c = 1. Is the output of the circuit what you expect?
- 3. [5 points] How long did the entire simulation run in simulated time?
- 4. [5 points] How much time did you spend on this lab assignment, including time spent installing software?

#### Submission

Submit the following to Blackboard:

•  $netid\_lab0\_writeup.pdf$