Java CardTM 2.2 Runtime Environment (JCRE) Specification



Sun Microsystems, Inc. 901 San Antonio Road Palo Alto, CA 94303 USA 650 960-1300 fax 650 969-9131

June, 2002

Java CardTM 2.2 Runtime Environment (JCRE) Specification ("Specification") Version: 2.2 Status: FCS Release: May 13, 2002 Copyright 2002 Sun Microsystems, Inc. 4150 Network Circle, Santa Clara, California 95054, U.S.A All rights reserved.

NOTICE

The Specification is protected by copyright and the information described therein may be protected by one or more U.S. patents, foreign patents, or pending applications. Except as provided under the following license, no part of the Specification may be reproduced in any form by any means without the prior written authorization of Sun Microsystems, Inc. ("Sun") and its licensors, if any. Any use of the Specification and the information described therein will be governed by the terms and conditions of this license and the Export Control Guidelines as set forth in the Terms of Use on Sun's website. By viewing, downloading or otherwise copying the Specification, you agree that you have read, understood, and will comply with all of the terms and conditions set forth herein.

Subject to the terms and conditions of this license, Sun hereby grants you a fully-paid, non-exclusive, non-transferable, worldwide, limited license (without the right to sublicense) under Sun's intellectual property rights to review the Specification internally solely for the purposes of designing and developing your implementation of the Specification and designing and developing your applets and applications intended to run on the Java Card platform. Other than this limited license, you acquire no right, title or interest in or to the Specification or any other Sun intellectual property. You acknowledge that any commercial or productive use of an implementation of the Specification requires separate and appropriate licensing agreements. The Specification contains the proprietary information of Sun and may only be used in accordance with the license terms set forth herein. This license will terminate immediately without notice from Sun if you fail to comply with any provision of this license. Upon termination or expiration of this license, you must cease use of or destroy the Specification.

TRADEMARKS

No right, title, or interest in or to any trademarks, service marks, or trade names of Sun or Sun's licensors is granted hereunder. Sun, Sun Microsystems, the Sun logo, Java, Java Card, and Java Card Compatible are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

DISCLAIMER OF WARRANTIES

THE SPECIFICATION IS PROVIDED "AS IS" AND IS EXPERIMENTAL AND MAY CONTAIN DEFECTS OR DEFICIENCIES WHICH CANNOT OR WILL NOT BE CORRECTED BY SUN. SUN MAKES NO REPRESENTATIONS OR WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT THAT THE CONTENTS OF THE SPECIFICATION ARE SUITABLE FOR ANY PURPOSE OR THAT ANY PRACTICE OR IMPLEMENTATION OF SUCH CONTENTS WILL NOT INFRINGE ANY THIRD PARTY PATENTS, COPYRIGHTS, TRADE SECRETS OR OTHER RIGHTS. This document does not represent any commitment to release or implement any portion of the Specification in any product.

THE SPECIFICATION COULD INCLUDE TECHNICAL INACCURACIES OR TYPOGRAPHICAL ERRORS. CHANGES ARE PERIODICALLY ADDED TO THE INFORMATION THEREIN; THESE CHANGES WILL BE INCORPORATED INTO NEW VERSIONS OF THE SPECIFICATION, IF ANY. SUN MAY MAKE IMPROVEMENTS AND/OR CHANGES TO THE PRODUCT(S) AND/OR THE PROGRAM(S) DESCRIBED IN THE SPECIFICATION AT ANY TIME. Any use of such changes in the Specification will be governed by the then-current license for the applicable version of the Specification.

LIMITATION OF LIABILITY

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL SUN OR ITS LICENSORS BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION, LOST REVENUE, PROFITS OR DATA, OR FOR SPECIAL, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR PUNITIVE DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF OR RELATED TO ANY FURNISHING, PRACTICING, MODIFYING OR ANY USE OF THE SPECIFICATION, EVEN IF SUN AND/OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

You will indemnify, hold harmless, and defend Sun and its licensors from any claims arising or resulting from: (i) your use of the Specification; (ii) the use or distribution of your Java applications or applets; and/or (iii) any claims that later versions or releases of any Specification furnished to you are incompatible with the Specification provided to you under this license.

RESTRICTED RIGHTS LEGEND

If this Software is being acquired by or on behalf of the U.S. Government or by a U.S. Government prime contractor or subcontractor (at any tier), then the Government's rights in the Software and accompanying documentation shall be only as set forth in this license; this is in accordance with 48 C.F.R. 227.7201 through 227.7202-4 (for Department of Defense (DoD) acquisitions) and with 48 C.F.R. 2.101 and 12.212 (for non-DoD acquisitions).

REPORT

You may wish to report any ambiguities, inconsistencies or inaccuracies you may find in connection with your evaluation of the Specification ("Feedback"). To the extent that you provide Sun with any Feedback, you hereby: (i) agree that such Feedback is provided on a non-proprietary and non-confidential basis, and (ii) grant Sun a perpetual, non-exclusive, worldwide, fully paid-up, irrevocable license, with the right to sublicense through multiple levels of sublicensees, to incorporate, disclose, and use without limitation the Feedback for any purpose related to the Specification and future versions, implementations, and test suites thereof. (LFI#113310/Form ID#011801)

Contents

Contents iii

1.

2.

3.5

Preface ix Who Should Use This Specification? ix Before You Read This Specification x How This Specification Is Organized x Related Books xi Sun Documentation xi What Typographic Changes Mean xi Introduction 1 **Lifetime of the Java Card Virtual Machine** 3 Java Card Applet Lifetime 5 3.1 The Method install 5 3.2 The Method select 6 3.3 The Method process 7 3.4 The Method deselect 7

Power Loss and Reset 8

- 4.1 The Default Applets 11
- 4.2 Multiselectable Applets 12
- 4.3 Forwarding APDU Commands To a Logical Channel 15
- 4.4 Opening and Closing Logical Channels 15
 - 4.4.1 MANAGE CHANNEL Command Processing 16
- 4.5 Applet Selection 16
 - 4.5.1 Applet Selection with MANAGE CHANNEL OPEN 17
 - 4.5.2 Applet Selection with SELECT FILE 19
- 4.6 Applet Deselection 21
 - 4.6.1 MANAGE CHANNEL CLOSE Command 22
- 4.7 Other Command Processing 23

5. Transient Objects 25

5.1 Events That Clear Transient Objects 26

6. Applet Isolation and Object Sharing 29

- 6.1 Applet Firewall 29
 - 6.1.1 Firewall Protection 29
 - 6.1.2 Contexts and Context Switching 30
 - 6.1.3 Object Ownership 32
 - 6.1.4 Object Access 33
 - 6.1.5 Transient Objects and Contexts 33
 - 6.1.6 Static Fields and Methods 34
- 6.2 Object Access Across Contexts 35
 - 6.2.1 JCRE Entry Point Objects 35
 - 6.2.2 Global Arrays 36
 - 6.2.3 JCRE Privileges 37
 - 6.2.4 Shareable Interfaces 38
 - 6.2.5 Determining the Previous Context 40
 - 6.2.6 Shareable Interface Details 40
 - 6.2.7 Obtaining Shareable Interface Objects 41

6.2.8 Class and Object Access Behavior 42

7.	Trar	ansactions and Atomicity 47		
	7.1	Atomicity 47		
	7.2	Transactions 48		
	7.3	Transaction Duration 48		
	7.4	Nested Transactions 49		
	7.5	Tear or Reset Transaction Failure 49		
	7.6	Aborting a Transaction 49		
		7.6.1 Programmatic Abortion 50		
		7.6.2 Abortion by the JCRE 50		
		7.6.3 Cleanup Responsibilities of the JCRE 50		
	7.7	Transient Objects and Global Arrays 51		
	7.8	Commit Capacity 51		
	7.9	Context Switching 51		
		mote Method Invocation Service 53		
8.	Ren	note Method Invocation Service 53		
8.	Rem 8.1	note Method Invocation Service 53 JCRMI 53		
8.				
8.		JCRMI 53 8.1.1 Remote Objects 53		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55 8.2.1 Applet Selection 55 8.2.2 Method Invocation 56		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55 8.2.1 Applet Selection 55 8.2.2 Method Invocation 56		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55 8.2.1 Applet Selection 55 8.2.2 Method Invocation 56 Data Formats 56		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55 8.2.1 Applet Selection 55 8.2.2 Method Invocation 56 Data Formats 56 8.3.1 Remote Object Identifier 57		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55 8.2.1 Applet Selection 55 8.2.2 Method Invocation 56 Data Formats 56 8.3.1 Remote Object Identifier 57 8.3.2 Remote Object Reference Descriptor 57		
8.	8.1	JCRMI 53 8.1.1 Remote Objects 53 The RMI Messages 55 8.2.1 Applet Selection 55 8.2.2 Method Invocation 56 Data Formats 56 8.3.1 Remote Object Identifier 57 8.3.2 Remote Object Reference Descriptor 57 8.3.3 Method Identifier 60		

8.4.1 SELECT FILE Command 64

8.4.2 INVOKE Command 66

8.5 The RMIService Class 66
8.5.1 setInvokeInstructionByte Method 67
8.5.2 processCommand Method 67

9. API Topics 69

- 9.1 Resource Use within the API 69
- 9.2 Exceptions thrown by API Classes 69
- 9.3 Transactions within the API 69
- 9.4 The APDU Class 70
 - 9.4.1 T=0 Specifics for Outgoing Data Transfers 70
 - 9.4.2 T=1 Specifics for Outgoing Data Transfers 73
 - 9.4.3 T=1 Specifics for Incoming Data Transfers 74
- 9.5 The Security and Crypto Packages 75
- 9.6 JCSystem Class 76

10. Virtual Machine Topics 77

- 10.1 Resource Failures 77
- 10.2 Security Violations 77

11. Applet Installation and Deletion 79

- 11.1 The Installer 79
 - 11.1.1 Installer Implementation 80
 - 11.1.2 Installer AID 80
 - 11.1.3 Installer APDUs 80
 - 11.1.4 CAP File Versions 81
 - 11.1.5 Installer Behavior 81
 - 11.1.6 Installer Privileges 82
- 11.2 The Newly Installed Applet 82
 - 11.2.1 Installation Parameters 83
- 11.3 The Applet Deletion Manager 84
 - 11.3.1 Applet Deletion Manager Implementation 85

- 11.3.2 Applet Deletion Manager AID 85
- 11.3.3 Applet Deletion Manager APDUs 85
- 11.3.4 Applet Deletion Manager Behavior 86
- 11.3.5 Applet Deletion Manager Privileges 90

12. API Constants 91

Glossary 97

Index 105

Preface

Java Card™ technology combines a portion of the Java™ programming language with a runtime environment optimized for smart cards and related, small-memory embedded devices. The goal of Java Card technology is to bring many of the benefits of Java software programming to the resource-constrained world of smart cards.

This document is a specification of the Java Card™ 2.2 Runtime Environment (JCRE). A vendor of a Java Card-enabled device provides an implementation of the JCRE. A JCRE implementation within the context of this specification refers to a vendor's implementation of the Java Card Virtual Machine (VM), the Java Card Application Programming Interface (API), or other component, based on the Java Card technology specifications. A Reference Implementation is an implementation produced by Sun Microsystems, Inc. Applets written for the Java Card platform are referred to as Java Card applets.

Who Should Use This Specification?

This specification is intended to assist JCRE implementers in creating an implementation, developing a specification to extend the Java Card technology specifications, or in creating an extension to the Java Card Runtime Environment (JCRE). This specification is also intended for Java Card applet developers who want a greater understanding of the Java Card technology specifications.

Before You Read This Specification

Before reading this guide, you should be familiar with the Java programming language, the Java Card technology specifications, and smart card technology. A good resource for becoming familiar with Java technology and Java Card technology is the Sun Microsystems, Inc. website, located at: http://java.sun.com.

How This Specification Is Organized

Chapter 1 "Introduction," gives an overview of the information contained in this specification.

Chapter 2 "Lifetime of the Java Card Virtual Machine," defines the lifetime of the Java Card Virtual Machine.

Chapter 3 "Java Card Applet Lifetime," defines the lifetime of an applet.

Chapter 4 "Logical Channels and Applet Selection," describes how the JCRE handles applet selection.

Chapter 5 "Transient Objects," describes the properties of transient objects.

Chapter 6 "Applet Isolation and Object Sharing," describes applet isolation and object sharing.

Chapter 7 "Transactions and Atomicity," describes the functionality of atomicity and transactions.

Chapter 8 "Remote Method Invocation Service," describes the server-side (card-side) functionality of the Remote Method Invocation (RMI) feature of Java Card 2.2.

Chapter 9 "API Topics," describes API functionality required of a JCRE but not completely specified in the *Java Card*TM 2.2 *Application Programming Interface*.

Chapter 10 "Virtual Machine Topics," describes virtual machine specifics.

Chapter 11 "Applet Installation and Deletion," provides an overview of the Applet Installer and JCRE required behavior.

Chapter 12 "API Constants," provides the numeric value of constants that are not specified in the *Java Card* $^{\text{\tiny IM}}$ 2.2 Application Programming Interface.

"Glossary," provides definitions of selected terms used in this specification.

Related Books

References to various documents or products are made in this guide. You should have the following documents available:

- Java Card[™] 2.2 Application Programming Interface (Sun Microsystems, Inc., 2002)
- Java Card™ 2.2 Virtual Machine Specification (Sun Microsystems, Inc., 2002)
- The Java™ Language Specification by James Gosling, Bill Joy, and Guy L. Steele (Addison-Wesley, 1996).
- The Java[™] Virtual Machine Specification (Java Series), Second Edition by Tim Lindholm and Frank Yellin (Addison-Wesley, 1999).
- The Java™ Remote Method Invocation Specification, Sun Microsystems, Inc. (http://java.sun.com/products/jdk/rmi)
- The Java Class Libraries: An Annotated Reference, Second Edition (Java Series) by Patrick Chan, Rosanna Lee and Doug Kramer (Addison-Wesley, 1999).
- ISO 7816 Specification Parts 1-6. (http://www.iso.org)
- EMV '96 Integrated Circuit Card Specification for Payment Systems (http://www.emvco.com)

Sun Documentation

This URL links you to technical information covering all aspects of the Java platform.

http://developer.java.sun.com/developer/infodocs/

What Typographic Changes Mean

The following table describes the typographic conventions used in this book.

Typeface	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your .login file. Use ls -a to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
	Procedural steps	1. Run cref in a new window.
AaBbCc123	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Command-line variable; replace with a real name or value	To delete a file, type rm filename.

Introduction

The Java Card™ 2.2 Runtime Environment (JCRE) contains the Java Card Virtual Machine (VM), the Java Card Application Programming Interface (API) classes (and industry-specific extensions), and support services.

This document, the *Java Card*^{IM} 2.2 Runtime Environment (*JCRE*) Specification, specifies the JCRE functionality required by the Java Card technology. Any implementation of Java Card technology shall provide this necessary behavior and environment.

Lifetime of the Java Card Virtual Machine

In a PC or workstation, the Java Virtual Machine runs as an operating system process. When the OS process is terminated, the Java applications and their objects are automatically destroyed.

In Java Card technology the execution lifetime of the Virtual Machine (VM) is the lifetime of the card. Most of the information stored on a card shall be preserved even when power is removed from the card. Persistent memory technology (such as EEPROM) enables a smart card to store information when power is removed. Since the VM and the objects created on the card are used to represent application information that is persistent, the Java Card VM appears to run forever. When power is removed, the VM only stops temporarily. When the card is next reset, the VM starts up again and recovers its previous object heap from persistent storage.

Aside from its persistent nature, the Java Card Virtual Machine is just like the Java Virtual Machine.

The card initialization time is the time after masking, and prior to the time of card personalization and issuance. At the time of card initialization, the JCRE is initialized. The framework objects created by the JCRE exist for the lifetime of the Virtual Machine. Because the execution lifetime of the Virtual Machine and the JCRE framework span CAD sessions of the card, the lifetimes of objects created by applets will also span CAD sessions. (CAD means Card Acceptance Device, or card reader. Card sessions are those periods when the card is inserted in the CAD, powered up, and exchanging streams of APDUs with the CAD. The card session ends when the card is removed from the CAD.) Objects that have this property are called persistent objects.

The JCRE implementer shall make an object persistent when:

■ The Applet.register method is called. The JCRE stores a reference to the instance of the applet object. The JCRE implementer shall ensure that instances of class applet are persistent.

•	A reference to an object is stored in a field of any other persistent object or in class's static field. This requirement stems from the need to preserve the integ of the JCRE's internal data structures.	

Java Card Applet Lifetime

For the purposes of this specification, applet refers to an applet written for the Java Card platform. An applet instance's lifetime begins when it is successfully registered with the JCRE via the Applet.register method. Applets registered with the Applet.register method exist until deleted by the Applet Deletion Manager (Section 11.3 "The Applet Deletion Manager.") The JCRE initiates interactions with the applet via the applet's public methods install, select, deselect, and process. An applet shall implement the static install(byte[], short, byte) method. If the install(byte[], short, byte) method is not implemented, the applet's objects cannot be created or initialized. A JCRE implementation shall call an applet's install, select, deselect, and process methods as described below.

When the applet is installed on the smart card, the static install(byte[], short, byte) method is called once by the JCRE for each applet instance created. The JCRE shall not call the applet's constructor directly.

3.1 The Method install

When the install(byte[], short, byte) method is called, the applet instance has not yet been created. The main task of the install method within the applet is to create an instance of the Applet subclass using its constructor, and to register the instance. All other objects that the applet will need during its lifetime can be created as is feasible. Any other preparations necessary for the applet to be selected and accessed by a CAD also can be done as is feasible. The install method obtains initialization parameters from the contents of the incoming byte array parameter.

Typically, an applet creates various objects, initializes them with predefined values, sets some internal state variables, and calls either the Applet.register() method or the Applet.register(byte[], short, byte) method to specify the AID (applet IDentifier as defined in ISO 7816-5) to be used to select it. This installation is considered successful when the call to the Applet.register method completes

without an exception. The installation is deemed unsuccessful if the install method does not call the Applet.register method, or if an exception is thrown from within the install method prior to the Applet.register method being called, or if the Applet.register method throws an exception. If the installation is unsuccessful, the JCRE shall perform all cleanup when it regains control. That is, all atomically updated persistent objects shall be returned to the state they had prior to calling the install method. If the installation is successful, the JCRE can mark the applet as available for selection.

Only one applet instance can be successfully registered each time the JCRE calls the Applet.install method.

3.2 The Method select

Applets remain in a suspended state until they are explicitly selected. Selection occurs when the JCRE receives a SELECT FILE APDU in which the name data matches the AID of the applet. Applet selection can also occur on a MANAGE CHANNEL OPEN command. Selection causes an applet to become the currently selected applet. For more details, see Section 4.5 "Applet Selection".

Prior to calling select, the JCRE shall deselect the previously selected applet. The JCRE indicates this to the applet by invoking the applet's deselect method or, if multiply selected on more than one logical channel, its

Multiselectable.deselect method (for more details, see Section 4.2, "Multiselectable Applets").

The JCRE informs the applet of selection by invoking its select method or, if being multiply selected on more than one logical channel, its Multiselectable.select method (for more details, see Section 4.2, "Multiselectable Applets").

The applet may decline to be selected by returning false from the call to the select method or by throwing an exception. If the applet returns true, the actual SELECT FILE APDU command is supplied to the applet in the subsequent call to its process method, so that the applet can examine the APDU contents. The applet can process the SELECT FILE APDU command exactly like it processes any other APDU command. It can respond to the SELECT FILE APDU with data (see Section 3.3 "The Method process" for details), or it can flag errors by throwing an ISOException with the appropriate returned status word. The status word and optional response data are returned to the CAD.

The Applet.selectingApplet method shall return true when called during the select method. The Applet.selectingApplet method will continue to return true during the subsequent process method, which is called to process the SELECT FILE APDU command.

If the applet declines to be selected, the JCRE will return an APDU response status word of ISO7816.SW_APPLET_SELECT_FAILED to the CAD. Upon selection failure, the JCRE state is set to indicate that no applet is selected. (See Section 4.5 "Applet Selection" for more details).

After successful selection, all subsequent APDUs directed to the assigned logical channel are delivered to the currently selected applet via the process method.

3.3 The Method process

All APDUs are received by the JCRE and pre-processed. All commands, except for the MANAGE CHANNEL command result in an instance of the APDU class containing the command being passed to the process(APDU) method of the currently selected applet.

Note – A SELECT FILE APDU might cause a change in the currently selected applet prior to the call to the process method. (The actual change occurs before the call to the select method).

On normal return, the JCRE automatically appends 0x9000 as the completion response status word to any data already sent by the applet.

At any time during process, the applet may throw an ISOException with an appropriate status word, in which case the JCRE catches the exception and returns the status word to the CAD.

If any other exception is thrown during process, the JCRE catches the exception and returns the status word ${\tt ISO7816.SW_UNKNOWN}$ to the CAD.

3.4 The Method deselect

When the JCRE receives a SELECT FILE APDU command in which the name matches the AID of an applet, the JCRE calls the deselect method of the currently selected applet or, if multiply selected on more than one logical channel, its Multiselectable.deselect method (for more details see Section 4.2, "Multiselectable Applets".) Applet deselection may also be requested by the MANAGE CHANNEL CLOSE command (For more details, see Section 4.6 "Applet Deselection.") The deselect method allows the applet to perform any cleanup operations that may be required in order to allow some other applet to execute.

The Applet.selectingApplet method shall return false when called during the deselect method. Exceptions thrown by the deselect method are caught by the JCRE, but the applet is deselected.

3.5 Power Loss and Reset

Power loss occurs when the card is withdrawn from the CAD or if there is some other mechanical or electrical failure. When power is reapplied to the card and on card reset (warm or cold) the JCRE shall ensure that:

- Transient data is reset to the default value.
- The transaction in progress, if any, when power was lost (or reset occurred) is aborted.
- The applet instance that was selected when power was lost (or reset occurred) becomes implicitly deselected. (In this case the deselect method is not called.)
- If the JCRE implements default applet selection (see Section 4.1, "The Default Applets"), the default applet is selected as the active applet instance for the basic logical channel (channel 0), and the default applet's select method is called. Otherwise, the JCRE sets its state to indicate that no applet is active on the basic logical channel.

Logical Channels and Applet Selection


Java Card 2.2 provides support for logical channels: the ability to allow a terminal to open up to four sessions into the smart card, one session per logical channel. (Logical channels functionality is described in detail in ISO 7816-4.)

Cards receive requests for service from the CAD in the form of APDUs. The SELECT FILE APDU and MANAGE CHANNEL OPEN APDU are used by the JCRE to designate the *active applet instance* for a logical channel session. Once selected, an applet instance receives all subsequent APDUs dispatched to that logical channel, until the applet instance becomes deselected.

A new Java Card 2.2 applet can be designed to take advantage of logical channel support. Such an applet can take advantage of multi-session functionality, and can be concurrently selected alongside another applet on a different logical channel and even be selected multiple times simultaneously on different logical channels. As shown in FIGURE 1, an implementation may support from 1 to 4 logical channels, each with its own distinct CLEAR ON DESELECT memory segment.

Only one logical channel, logical channel 0 (the *basic logical channel*) is active on card reset. A MANAGE CHANNEL APDU command may be issued on this logical channel to instruct the card to open a new logical channel. Applet instances can be selected on different logical channels using the SELECT FILE APDU command, just as they would in a single logical channel environment. The MANAGE CHANNEL APDU command is also used for closing a logical channel. Note that the basic logical channel is permanent and can never be closed.

Legacy applets (Java Card 2.1 applets) running on a Java Card 2.2 platform need not be aware of logical channel support (and they shall still work correctly). The JCRE must guarantee that an applet that was not designed to be aware of multiple sessions is not selected more than once or concurrently with another applet from the same package.

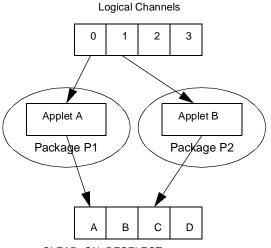

CLEAR_ON_DESELECT memory segments

FIGURE 1 Logical Channels for distinct applets

Support for multiple logical channels (with multiple selected applet instances) requires a change to the Java Card 2.1 concept of *selected applet*. Since more than one applet instance can be selected at the same time, and one applet instance can be selected on different logical channels simultaneously, it is necessary to differentiate the state of the applet instances in more detail.

An applet instance will be considered an *active applet instance* if it is currently selected in at least one logical channel, up to a maximum of 4. Each active applet instance from a distinct package executes with a distinct CLEAR_ON_DESELECT transient RAM space (see FIGURE 1). An applet instance is the *currently selected applet instance* only if it is processing the current command. There can only be one currently selected applet instance at a given time.

Applets having the capability of being selected on multiple logical channels at the same time, or accepting other applets belonging to the same package being selected simultaneously, are referred to as multiselectable applets. (Refer to FIGURE 2 below.)

No applet is active on the new (or only) logical channel when one of the following occurs:

- The card is reset and no applet has been designated as the default applet instance for the basic channel, or the default applet instance for the basic channel rejects selection.
- A MANAGE CHANNEL OPEN command on the basic channel opens a new channel, and no applet has been designated as the *default applet instance* for that logical channel.

- A new logical channel is opened when a MANAGE CHANNEL OPEN command is issued on a logical channel other than the basic channel, on which there is no active applet.
- A SELECT FILE command fails when attempting to select an applet instance.

4.1 The Default Applets

Normally, applet instances become selected only via a successful SELECT FILE command. However, some smart card CAD applications require that there be a *default card applet instance* to become implicitly selected after every card reset. In addition, some CAD applications may also require a default applet selection when a new logical channel is opened.

Java Card 2.2 allows the card implementer to designate a *default applet instance* for each of the logical channels supported by the card. For any logical channel, the card implementation may designate an applet instance as the default applet instance for that logical channel. Alternatively, for any logical channel, the implementation may choose to designate no default applet instance at all. Logical channels may share the same applet instance as the default applet instance for more than one channel.

Upon card reset, only the *basic logical channel* (channel 0) is automatically opened. The default card applet instance, if any, is therefore the default applet instance for logical channel 0.

The card reset behavior is:

1. After card reset (or power on, which is a form of reset) the JCRE performs its initialization and checks to see if its internal state indicates that a particular applet instance is the default applet instance for the basic logical channel. If so, the JCRE makes this applet instance the currently selected applet instance on the basic logical channel, and the applet's select method is called. If this method throws an exception or returns false, then the JCRE sets its state to indicate that no applet is active on the basic logical channel.

When a default card applet instance becomes active upon card reset, it shall not require its process method to be called. The applet instance's process method is not called during default applet selection because there is no SELECT FILE APDU.

2. The JCRE ensures that the ATR has been sent and the card is now ready to accept APDU commands.

The default applet selection behavior on opening a new channel is:

When a MANAGE CHANNEL command is issued on the basic logical channel and a new logical channel is opened, the JCRE checks if there is a designated default applet instance for the newly opened logical channel. If so, the JCRE makes this applet instance the currently selected applet instance on the new logical channel, and the applet's select method (MultiSelectable.select method if required) is called. If this method throws an exception or returns false, then the JCRE closes the new logical channel. (The applet instance's process method is not called during default applet selection, because there is no SELECT FILE APDU). A default applet instance shall not require its process method to be called.

If a default applet instance was successfully selected, then APDU commands can be sent directly to the applet instance on that logical channel. If no applet is active, then only SELECT FILE commands for applet selection or MANAGE CHANNEL commands can be processed on that logical channel.

The mechanism for specifying the default applet instance for a logical channel is not defined in the Java Card API. It is a JCRE implementation detail and is left to the individual JCRE implementers.

4.2 Multiselectable Applets

Applets having the capability of being selected on multiple logical channels at the same time, or accepting other applets belonging to the same package being selected simultaneously, are referred to as *multiselectable* applets.

Note - All applets within a package shall be multiselectable or none shall be.

An *applet's context is active* when either an instance of the applet is already active, or when another applet instance from the same package is active. For more information about contexts see Section 6.1.2 "Contexts and Context Switching." An attempt to select an applet instance when the applet's context is active, is referred to as a *multiselection* attempt. If successful, multiselection occurs, and the applet instance becomes *multiselected*.

Multiselectable applets shall implement the

javacard.framework.MultiSelectable interface. In case of multiselection, the applet instance will be informed by invoking its methods

MultiSelectable.select and MultiSelectable.deselect during selection and deselection respectively.

When an applet instance not currently active is the first one selected in its package, its Applet.select method is called. Subsequent multiselections to this applet instance or selection of other applet instances in the same package shall result in a

call to MultiSelectable.select method. This method is defined in the MultiSelectable interface. Its only purpose is to inform the applet instance that it will be multiselected. The applet instance may accept or reject a multiselection attempt.

If a multiselection attempt is made on an applet which does not implement the MultiSelectable interface, the selection shall be rejected by the JCRE.

When a multiselected applet instance is deselected from one of the logical channels, the method MultiSelectable.deselect is called. Only when the multiselected applet instance is the last active applet instance in the applet's context, is its regular method Applet.deselect called.

There are two cases of multiselection:

1. When two distinct applet instances from within the same package are multiselected, each applet instance shares the same CLEAR_ON_DESELECT memory transient segment. The applet instances share objects within the context firewall as well as their transient data. The JCRE shall not reset this CLEAR_ON_DESELECT transient objects until all applet instances within the package are deselected.(Refer to FIGURE 2.)


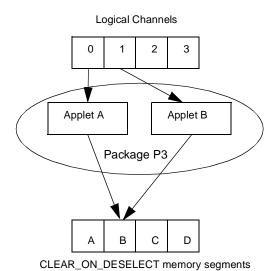


FIGURE 2 Different applet instances in same package

2. When the same applet instance is multiselected on two different logical channels simultaneously, it shares the CLEAR_ON_DESELECT memory segment space across logical channels. The JCRE shall not reset the CLEAR_ON_DESELECT transient objects until all applet instances within the package are deselected. (Refer to FIGURE 3.)

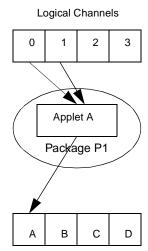

CLEAR_ON_DESELECT memory segments

FIGURE 3 Same applet instance selected on multiple logical channels

In both cases of multiselection described above, the applet(s) must implement the MultiSelectable interface. If the applet(s) do not support this feature, then the selection must be rejected by the JCRE.

4.3 Forwarding APDU Commands To a Logical Channel

According to Section 5.4 of the *ISO 7816-4 Specification*, only APDU commands that contain the following encoding of the header CLA byte contain logical channel information:

0x0X or 0x8X or 0x9X or 0xAX.

The X nibble is responsible for logical channels and secure messaging encoding. Only the two least significant bits (b2,b1*) of the nibble are used for logical channel encoding, which ranges from 0 to 3. When an APDU command is received, the JCRE shall process it and determine whether or not the command has logical channel information. If logical channel information is encoded, then the card dispatches the APDU command to the appropriate logical channel. All other APDU commands are forwarded to the card's basic logical channel (logical channel 0).

The JCRE always forwards the command "as is" to the appropriate applet instance. In particular, the JCRE does not clear the least significant bits (b2,b1*) of the CLA byte.

Note – An asterisk indicates binary notation (%b) using bit numbering as in ISO7816. Most significant bit = b8. Least significant bit = b1.

4.4 Opening and Closing Logical Channels

According to Section 5.5.2 of the *ISO 7816-4 Specification*, there are two ways to open a logical channel in the smart card:

- 1. By selecting an applet instance on a new logical channel. This is accomplished by issuing a Applet SELECT FILE APDU command, and specifying in the lower two bits of the CLA byte the logical channel's number (from 0 to 3). If this logical channel is currently closed, it shall be opened, and the specified applet instance shall be selected. (See Section 4.5.2 "Applet Selection with SELECT FILE.")
- 2. By issuing a MANAGE CHANNEL OPEN APDU command. MANAGE CHANNEL commands are provided to open a logical channel from another logical channel, or to close a logical channel from another logical channel. (See Section 4.4.1.)

4.4.1 MANAGE CHANNEL Command Processing

The JCRE shall intercept all APDU messages coming into the card, perform card management functions (such as selecting or deselecting applet instances), and shall forward APDU messages to the appropriate applet instance. As part of its card management functions, the JCRE notifies applet instances about selection events (a function it performs by calling the applet instances' select and deselect methods), and it initiates APDU processing within the currently selected applet instance by calling the applet instance's process method.

With the addition of logical channels in Java Card 2.2, the JCRE includes a multichannel dispatching mechanism, as well as checks to ensure applet integrity during multi-channel operations. The JCRE must ensure that applets written to operate in a single logical channel environment operate consistently on a multiple logical channel smart card.

A new class of APDU commands, called MANAGE CHANNEL commands, are now defined in Java Card 2.2. The following subsections summarize the functions the JCRE must perform via MANAGE CHANNEL command processing:

MANAGE CHANNEL OPEN: Open a new logical channel from an already-open logical channel. Two variants of this command are supported:

- The JCRE selects the new logical channel specified in the command
- The JCRE automatically assigns a new logical channel.

MANAGE CHANNEL CLOSE: Close a specified logical channel from another open logical channel.

In addition, the SELECT FILE APDU command to select an applet instance is extended to specify a new or already opened logical channel on which the specified applet instance is to be selected.

In the following sections, the term *origin logical channel* is used to refer to the logical channel on which the command was received: that is, the two least significant bits (b2,b1*) of the CLA byte, as described in Section 4.3.

4.5 Applet Selection

There are two ways to select an applet instance in Java Card 2.2: with a MANAGE CHANNEL OPEN command (Section 4.5.1), or with a SELECT FILE command, (See Section 4.5.2 "Applet Selection with SELECT FILE.")

The JCRE shall guarantee that an applet that is designed to run on any logical channel can be selected on any of the available logical channels on the card. The resources accessed by the applet instance must be the same, irrespective of the logical channel it is selected on.

Note – An asterisk in the following sections indicates binary notation (%b) using bit numbering as in the ISO7816 specification. Most significant bit is b8. Least significant bit = b1.

4.5.1 Applet Selection with MANAGE CHANNEL OPEN

Upon receiving a MANAGE CHANNEL OPEN command, the JCRE shall run the following procedure:

- 1. The MANAGE CHANNEL OPEN command uses: $CLA=\%b000000cc^*$ (where cc in the bits (b2,b1) denotes the origin logical channel: 0-3), INS=0x70 and P1=0. Two variants of this command are supported:
- P2=0 when the JCRE shall assign a new logical channel number
- P2= the logical channel number specified.

If the MANAGE CHANNEL OPEN command has non-zero secure messaging bits (b4,b3*) in the CLA byte, the JCRE responds with status code 0x6882 (SW_SECURE_MESSAGING_NOT_SUPPORTED).

If the MANAGE CHANNEL command is issued with P1 not equal 0 or 0×80 , or if the unsigned value of P2 is greater than 3, the JCRE responds with status code $0 \times 6A81$ (SW_FUNC_NOT_SUPPORTED).

- 2. If the origin logical channel is not open, the JCRE responds with status code 0x6881 (SW_LOGICAL_CHANNEL_NOT_SUPPORTED).
- 3. If the JCRE supports only the basic logical channel, the JCRE responds with status code 0x6881 (SW_LOGICAL_CHANNEL_NOT_SUPPORTED)
- 4. If the P2=0 variant is used:
- If the expected length value (Le) is not equal to 1, the JCRE responds with status code 0x6C01 (SW_CORRECT_LENGTH_00+0x01).
- If resources for the new logical channel are not available, the JCRE responds with status code 0x6A81 (SW_FUNC_NOT_SUPPORTED.)
- 5. If the P2<>0 variant is used:

- If resources for the specified logical channel are not available or the logical channel is already open, the JCRE responds with status code 0x6A86 (SW_INCORRECT_P1P2).
- 6. The new logical channel is now open. This logical channel will be the *assigned channel* for the applet instance that will be selected on it.
- 7. Determine the applet instance to be selected on the new logical channel.
- If the origin logical channel is the basic logical channel (logical channel 0), then:
 - If a default applet instance for the new logical channel is defined, pick the default applet instance for that logical channel as the candidate for selection on the new logical channel.
 - Otherwise, set the JCRE state so that no applet is active on the new logical channel. The JCRE responds with status code 0x9000 and if the P2=0 variant is used, 1 data byte containing the newly assigned logical channel number.
- If the origin logical channel is not the basic logical channel:
 - If an applet instance is active on the origin logical channel, pick the applet instance as the candidate for selection on the new logical channel.
 - Otherwise, set the JCRE state so that no applet is active on the new logical channel. The JCRE responds with status code 0x9000 and if the P2=0 variant is used, 1 data byte containing the newly assigned logical channel number.
- 8. If the candidate applet instance is not a multiselectable applet (as defined in Section 4.2) and the candidate applet's context is active, the JCRE shall close the new logical channel. The JCRE responds with status code 0x6985 (SW_CONDITIONS_NOT_SATISFIED).
- 9. Assign the CLEAR_ON_DESELECT transient memory segment for the new logical channel:
- If the applet's context is active, assign the CLEAR_ON_DESELECT transient memory segment associated with that context to this logical channel.
- Otherwise, assign a new (zero-filled) CLEAR_ON_DESELECT transient memory segment to this new logical channel.
- 10. Check whether the candidate applet instance accepts selection:
- If the candidate applet's context is active, the JCRE shall set the candidate applet instance as the currently selected applet instance and call the MultiSelectable.select method, where the parameter appInstAlreadyActive is set to true if the same applet instance is already active on another logical channel. A context switch into the candidate applet instance's context occurs at this point. (For more details on contexts, see Section 6.1.2)
- Otherwise, if the candidate applet's context is not active, the JCRE shall set the candidate applet instance as the currently selected applet instance and call the Applet.select method. A context switch into the candidate applet instance's context occurs at this point.

- If the applet instance's select method throws an exception or returns false, then the JCRE closes the new logical channel. The JCRE responds with status code 0x6999 (SW_APPLET_SELECT_FAILED).
- 11. The JCRE responds with status code 0x9000 (and if the P2=0 variant is used, 1 data byte containing the newly assigned logical channel number.)

Note – Unlike the SELECT FILE commands to select an applet instance, the MANAGE CHANNEL command is never forwarded to the applet instance.

4.5.2 Applet Selection with SELECT FILE

Upon receiving a SELECT FILE command, the JCRE shall run the following procedure:

- 1. The Applet SELECT FILE command uses: CLA=%b000000cc* (where cc in the bits (b2,b1*) specifies the logical channel to be selected: 0-3) and INS=0xA4.
 - If the SELECT FILE command has non-zero secure messaging bits (b4,b3*) in the CLA byte, it is deemed not to be an Applet SELECT FILE command. The JCRE simply forwards the command to the active applet on the specified logical channel.
- The Applet SELECT FILE command uses "Selection by DF name" with P1=0x04.
- The JCRE shall support both :
 - selection by "exact DF name(AID)" with P2=%b0000xx00 (b4,b3* are don't care) and
 - the RFU variant described in ISO7816-4 specification with P2=%b0001xx00 (b4,b3* are don't care).
- All other partial DF name SELECT FILE options (b2,b1* variants) are JCRE implementation-dependent.
- All file control information options codes (b4,b3*) shall be supported by the JCRE and interpreted and processed by the applet instance itself.
- 2. If resources for the specified logical channel (in cc) are not available, the JCRE responds with status code 0x6881 (SW_LOGICAL_CHANNEL_NOT_SUPPORTED)
- 3. If the specified logical channel is not open, it is now opened and the JCRE state is set so that no applet is active on this new logical channel. The specified logical channel will be the *assigned channel* for the applet instance that will be active on it.

- 4. The JCRE searches the internal applet table which lists all successfully installed applet instances on the card for an applet instance with a matching AID. If a matching applet instance is found, it is picked as the candidate applet instance. Otherwise, if no AID match is found:
- If there is no active applet instance on the specified logical channel, the JCRE responds with status code 0x6999 (SW_APPLET_SELECT_FAILED).
- Otherwise, the active applet instance on this logical channel is set as the currently selected applet instance and the SELECT FILE command is forwarded to that applet instance's process method. A context switch into the applet instance's context occurs at this point (See Section 6.1.1). Applets may use the SELECT FILE command for their own internal processing. Upon return from the applet's process method, the JCRE sends the applet instance's response as the response to the SELECT FILE command.
- 5. If there is an active applet instance on the logical channel, then the JCRE deselects the applet instance, as described in Section 4.6 "Applet Deselection".
- 6. If the candidate applet instance is not a multiselectable applet (as defined in Section 4.2), and the candidate applet's context is active, set the JCRE state so that no applet is active on the specified logical channel. The logical channel remains open, and the JCRE responds with status code 0x6985 (SW CONDITIONS NOT SATISFIED).
- 7. Assign the CLEAR_ON_DESELECT transient memory segment for the new logical channel:
- If any applet instance from the same package as that of the candidate applet instance is active on another logical channel, assign the same CLEAR_ON_DESELECT transient memory segment to this logical channel.
- Otherwise, assign a different (zero-filled) CLEAR_ON_DESELECT transient memory segment to this new logical channel.
- 8. Check whether the candidate applet instance accepts selection:
- If the candidate applet's context is active, the JCRE shall set the candidate applet instance as the currently selected applet instance and call the MultiSelectable.select(appInstAlreadyActive) method, where the parameter appInstAlreadyActive is set to true if the same applet instance is already active on another logical channel. A context switch into the candidate applet instance's context occurs at this point (See Section 6.1.2).
- Otherwise, if the candidate applet's context is not active, the JCRE shall set the candidate applet instance as the currently selected applet instance and call the Applet.select method. A context switch into the candidate applet instance's context occurs at this point.
- If the applet instance's select method throws an exception or returns false, then the JCRE state is set so that no applet is active on the specified logical channel. The logical channel remains open, and the JCRE responds with status code 0x6999 (SW_APPLET_SELECT_FAILED).

9. The JCRE shall set the candidate applet instance as the currently selected applet instance and call the Applet.process method with the SELECT FILE APDU as the input parameter. A context switch occurs into the applet instance's context at this point. Upon return from the applet instance's process method, the JCRE sends the applet instance's response as the response to the SELECT FILE command.

Notes -

If the SELECT FILE command does not conform to the exact format of an Applet SELECT FILE command described in item 1 above or if there is no matching AID, the SELECT FILE command is forwarded to the active applet instance (if any) on that logical channel for processing as a normal applet APDU command.

If there is a matching AID and the SELECT FILE command fails, the JCRE always sets the state in which no applet is active on that logical channel.

If the matching AID is the same as the active applet instance on the specified logical channel, the JCRE still goes through the process of deselecting the applet instance and then selecting it. Reselection could fail, leaving the card in a state in which no applet is active on that logical channel.

4.6 Applet Deselection

An applet instance is deselected either upon receipt of a MANAGE CHANNEL CLOSE command, or as a result of a SELECT FILE command that selects a different (or the same) applet instance on the specified logical channel.

In either case, when an applet instance is deselected the following procedure shall be followed by the JCRE:

- If the applet instance to be deselected is active on more than one logical channel, or another applet instance from the same package is also active, the JCRE sets the currently selected applet instance to be the applet instance being deselected, and calls its MultiSelectable.deselect(appInstStillActive) method, where the appInstStillActive parameter is set to true if the same applet instance is still active on another logical channel. A context switch occurs into the applet instance's context at this point (See Section 6.1.2).
- Otherwise, the JCRE sets the currently selected applet instance to be the applet instance being deselected, and calls its Applet.deselect method. Upon return or uncaught exception, the JCRE clears the fields of all CLEAR_ON_DESELECT transient objects in the context of deselected applet instance.

Note – Note that the deselection is always successful even if the applet instance throws an exception from within the deselect method.

4.6.1 MANAGE CHANNEL CLOSE Command

Upon receiving a MANAGE CHANNEL CLOSE command, the JCRE shall run the following procedure:

1. The MANAGE CHANNEL CLOSE command uses: CLA=%b000000cc* (where cc in the bits (b2,b1) denotes the origin logical channel: 0-3), INS=0x70, P1=0x80 and P2 specifies the logical channel to be closed.

If the MANAGE CHANNEL CLOSE command has non-zero secure messaging bits (b4,b3) in the CLA byte, the JCRE responds with status code 0x6882 (SW_SECURE_MESSAGING_NOT_SUPPORTED).

If the MANAGE CHANNEL command is issued with P1 not equal 0 or 0x80, the JCRE responds with status code 0x6A81 (SW_FUNC_NOT_SUPPORTED).

- 2. If the origin logical channel is not open, the JCRE responds with status code 0x6881 (SW_LOGICAL_CHANNEL_NOT_SUPPORTED).
- 3. If the JCRE supports only the basic logical channel, the JCRE responds with status code 0x6881 (SW_LOGICAL_CHANNEL_NOT_SUPPORTED).
- 4. If the specified logical channel to close is the *basic logical channel* (logical channel 0) or the specified logical channel number is greater than 3, the JCRE responds with status code 0x6A81 (SW_FUNC_NOT_SUPPORTED).
- 5. If the specified logical channel to close is currently open, deselect the active applet instance (if any) on the specified logical channel as described above in Section 4.6. The specified logical channel is now closed. The JCRE responds with status code 0x9000.
- 6. Otherwise, if the specified logical channel is closed or not available, the JCRE responds with warning status code 0x6200 (SW_WARNING_STATE_UNCHANGED).

4.7 Other Command Processing

When an APDU other than a SELECT FILE or MANAGE CHANNEL command is received, the logical channel to be used for dispatching the command is based on the CLA byte as described in Section 4.3 "Forwarding APDU Commands To a Logical Channel."

If there is no active applet instance on the logical channel to be used for dispatching the command, the JCRE shall respond to the APDU with status code 0x6999 (SW_APPLET_SELECT_FAILED).

When an APDU other than a Applet SELECT FILE or a MANAGE CHANNEL command is received, and there is an active applet instance on the logical channel to be used for dispatching the command, the JCRE sets the active applet instance on the origin channel as the currently selected applet instance and invokes the process method passing the APDU as a parameter. This causes a context switch from the JCRE context into the currently selected applet instance's context (For more information on contexts see Section 6.1.2 "Contexts and Context Switching.") When the process method exits, the VM switches back to the JCRE context. The JCRE sends the response APDU and waits for the next command APDU.

Note that the JCRE dispatches the APDU command "as is" to the applet instance for processing via the process method. Therefore, the CLA byte in the command header will contain in its least significant bits the origin channel number. An applet designed to run on any logical channel needs to mask out these two bits before checking for specific values.

Transient Objects

Applets sometimes require objects that contain temporary (transient) data that need not be persistent across CAD sessions. Java Card does not support the Java keyword transient. However, Java Card technology provides methods to create transient arrays with primitive components or references to Object.

Note — In this section, the term *field* is used to refer to the *component* of an array object also.

The term "transient object" is a misnomer. It can be incorrectly interpreted to mean that the object itself is transient. However, only the *contents* of the fields of the object (except for the length field) have a transient nature. As with any other object in the Java programming language, transient objects within the Java Card platform exist as long as they are referenced from:

- The stack
- Local variables
- A class static field
- A field in another existing object

A transient object within the Java Card platform has the following required behavior:

- The fields of a transient object shall be *cleared* to the field's default value (zero, false, or null) at the occurrence of certain events (see Section 5.1 "Events That Clear Transient Objects").
- For security reasons, the fields of a transient object shall never be stored in a "persistent memory technology." Using current smart card technology as an example, the contents of transient objects can be stored in RAM, but never in EEPROM. The purpose of this requirement is to allow transient objects to be used to store session keys.

- Writes to the fields of a transient object shall not have a performance penalty. (Using current smart card technology as an example, the contents of transient objects can be stored in RAM, while the contents of persistent objects can be stored in EEPROM. Typically, RAM technology has a much faster write cycle time than EEPROM.)
- Writes to the fields of a transient object shall not be affected by "transactions." That is, an abortTransaction will never cause a field in a transient object to be restored to a previous value.

This behavior makes transient objects ideal for small amounts of temporary applet data that is frequently modified, but that need not be preserved across CAD or select sessions.

5.1 Events That Clear Transient Objects

Persistent objects are used for maintaining states that shall be preserved across card resets. When a transient object is created, one of two events is specified that causes its fields to be cleared. CLEAR_ON_RESET transient objects are used for maintaining states that shall be preserved across applet selections, but not across card resets. CLEAR_ON_DESELECT transient objects are used for maintaining states that must be preserved while an applet is selected, but not across applet selections or card resets.

Details of the two clear events are as follows:

■ CLEAR_ON_RESET—the object's fields (except for the length field) are cleared when the card is reset. When a card is powered on, this also causes a card reset.

Note – It is not necessary to clear the fields of transient objects before power is removed from a card. However, it is necessary to guarantee that the previous contents of such fields cannot be recovered once power is lost.

■ CLEAR_ON_DESELECT—the object's fields (except for the length field) are cleared whenever the applet is deselected and no other applets from the same package are active on the card. Because a card reset implicitly deselects the currently selected applet, the fields of CLEAR_ON_DESELECT objects are also cleared by the same events specified for CLEAR_ON_RESET.

The currently selected applet is explicitly deselected (its deselect method is called) only when a SELECT FILE command or MANAGE CHANNEL CLOSE command is processed. The currently selected applet is deselected and then the fields of all CLEAR_ON_DESELECT transient objects owned by the applet are cleared if no other applets from the same package are active on the card, regardless of whether the SELECT FILE command:

- Fails to select an applet.
- Selects a different applet.
 Reselects the same applet.

Applet Isolation and Object Sharing

Any implementation of the JCRE shall support isolation of contexts and applets. Isolation means that one applet can not access the fields or objects of an applet in another context unless the other applet explicitly provides an interface for access. The JCRE mechanisms for applet isolation and object sharing are detailed in the sections below.

6.1 Applet Firewall

The *applet firewall* within Java Card technology is runtime-enforced protection and is separate from the Java technology protections. The Java language protections still apply to Java Card applets. The Java language ensures that strong typing and protection attributes are enforced.

Applet firewalls are always enforced in the Java Card VM. They allow the VM to automatically perform additional security checks at runtime.

6.1.1 Firewall Protection

The Java Card firewall provides protection against the most frequently anticipated security concern: developer mistakes and design oversights that might allow sensitive data to be "leaked" to another applet. An applet may be able to obtain an object reference from a publicly accessible location. However, if the object is owned by an applet protected by its own firewall, then the requesting applet must satisfy certain access rules before it can use the reference to access the object.

The firewall also provides protection against incorrect code. If incorrect code is loaded onto a card, the firewall still protects objects from being accessed by this code.


The Java Card™ 2.2 Runtime Environment (JCRE) Specification specifies the basic minimum protection requirements of contexts and firewalls because the features described in this document are not transparent to the applet developer. Developers shall be aware of the behavior of objects, APIs, and exceptions related to the firewall.

JCRE implementers are free to implement additional security mechanisms beyond those of the applet firewall, as long as these mechanisms are transparent to applets and do not change the externally visible operation of the VM.

6.1.2 Contexts and Context Switching

Firewalls essentially partition the Java Card platform's object system into separate protected object spaces called *contexts*. These are illustrated in FIGURE 4. The firewall is the boundary between one context and another. The JCRE shall allocate and manage a *context* for each Java package containing applets¹. All applet instances within a single Java package share the same context. There is no firewall between individual applet instances within the same package; that is, an applet instance can freely access objects belonging to another applet instance that resides in the same package.

FIGURE 4 Contexts within the Java Card Platform's Object System

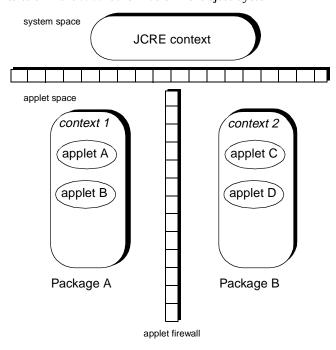

Note that a library package is not assigned a separate context. Objects from a library package belong to the context of the creating applet instance.

In addition, the JCRE maintains its own *JCRE context*. This context is much like the context of an applet, but it has special system privileges so that it can perform operations that are denied to contexts of applets. For example, access from the JCRE context to any applet instance's context is allowed, but the converse, access from an applet instance's context to the JCRE context, is prohibited by the firewall.

6.1.2.1 Active Contexts in the VM

At any point in time, there is only one *active context* within the VM. (This is called the *currently active context*.) This can be either the JCRE context or an applet's context. All bytecodes that access objects are checked at *runtime* against the currently active context in order to determine if the access is allowed. A <code>java.lang.SecurityException</code> is thrown when an access is disallowed.

6.1.2.2 Context Switching in the VM

If access is allowed, the VM determines if a *context switch* is required. A context switch occurs when certain well-defined conditions, as described in Section 6.2.8, are met during the execution of invoke-type bytecodes. For example, a context switch may be caused by an attempt to access a shareable object that belongs to an applet instance that resides in a different package. The result of a context switch is a new currently active context.

During a context switch, the previous context and object owner information is pushed on an internal VM stack, a new context becomes the currently active context, and the invoked method executes in this new context. Upon exit from that method the VM performs a restoring context switch. The original context (of the caller of the method) is popped from the stack and is restored as the currently active context. Context switches can be nested. The maximum depth depends on the amount of VM stack space available.

Most method invocations in Java Card technology do not cause a context switch. For example, a context switch is unnecessary when an attempt is made to access an object that belongs to an applet instance that resides in the same package. Context switches only occur during invocation of and return from certain methods, as well as during exception exits from those methods (see Section 6.2.8).

Further details of contexts and context switching are provided in later sections of this chapter.

6.1.3 Object Ownership

Any given object in the Java Card object space has a context and an owner associated with it. When a new object is created, it is associated with the currently active context. But the object is *owned* by the applet instance within the currently active context when the object is instantiated. An object can be owned by an applet instance, or by the JCRE.

The combined rules of context and object ownership within the firewall are:

- Every applet instance belongs to a context. All applet instances from the same package belong to the same context.
- Every object is owned by an applet instance (or the JCRE). An applet instance is identified by its AID. When executing in an instance method of an object (or a static class method called from within), the object's owner must be in the currently active context.

For example, assume that applets A and B are in the same package, and applet C is in another package. A and B therefore belong to the same context: 1. C belongs to a different context: 2. For an illustration of this situation, see FIGURE 5.

If Context 1 is the currently active context, and a method m1 in an object owned by applet A is invoked, no context switch occurs. If method m1 invokes a method m2 in an object owned by applet B, again no context switch occurs (in spite of the object "owner" change), and no firewall restrictions apply.

However, if the method m2 now calls a method m0 in an object owned by applet C, firewall restrictions apply and, if access is allowed, a context switch shall occur. Upon return to method m2 from the method m0, the context of applet B is restored.

applet space context 1 context 2 applet A applet C switch no context context switch restore context applet B applet D m2 🚄 Package A Package B

applet firewall

FIGURE 5 Context Switching and Object Access

To emphasize a few points:

- when the m1 method in the object owned by applet A calls the method m2 in the object owned by applet B, the context does not change but the owner of the object does change. If the JCSystem.getAID method is called from method m2 within context 1, the AID of Applet B is returned.
- when method m2 calls method m0 in an object owned by applet C, applet B is the owner of the object when the context switches from 1 to 2. Therefore, if the JCSystem.getAID method is called from method m0 within context 2, the AID of applet C shall be returned. If the JCSystem.getPreviousContextAID method is called, the AID of applet B shall be returned.
- when the JCSystem.getAID method is called from method m2 after the return from method m0 in context 2, the AID of applet B is returned. However, if the JCSystem.getPreviousContextAID method is called, the AID of the applet which called into context 1 (or null if JCRE) is returned and not the AID of applet C.

6.1.4 Object Access

In general, an object can only be *accessed* by its owning context, that is, when the owning context is the currently active context. The firewall prevents an object from being accessed by another applet in a different context.

In implementation terms, each time an object is accessed, the object's owner context is compared to the currently active context. If these do not match, the access is not performed and a SecurityException is thrown.

An object is accessed when one of the following bytecodes is executed using the object's reference:

```
getfield, putfield, invokevirtual, invokeinterface,
  athrow, <T>aload, <T>astore, arraylength, checkcast, instanceof
```

<T> refers to the various types of array bytecodes, such as baload, sastore, etc.

This list includes any special or optimized forms of these bytecodes implemented in the Java Card VM, such as getfield_b, getfield_s_this, etc.

6.1.5 Transient Objects and Contexts

Transient objects of CLEAR_ON_RESET type behave like persistent objects in that they can be accessed only when the currently active context is the object's owning context (the currently active context at the time when the object was created).

Transient objects of CLEAR_ON_DESELECT type can only be created or accessed when the currently active context is the context of the currently selected applet. If any of the makeTransient factory methods of JCSystem class are called to create a CLEAR_ON_DESELECT type transient object when the currently active context is not the context of the currently selected applet (even if the attempting context is that of an active applet instance on another logical channel), the method shall throw a java.lang.SystemException with reason code of ILLEGAL_TRANSIENT. If an attempt is made to access a transient object of CLEAR_ON_DESELECT type when the currently active context is not the context of the currently selected applet (even if the attempting context is that of an active applet instance on another logical channel), the JCRE shall throw a java.lang.SecurityException.

Applets that are part of the same package share the same context. Every applet instance from a package shares all its object instances with all other instances from the same package. (This includes transient objects of both <code>CLEAR_ON_RESET</code> type and <code>CLEAR_ON_DESELECT</code> type owned by these applet instances.)

The transient objects of CLEAR_ON_DESELECT type owned by any applet instance in the same package shall be accessible when any of the applet instances is the currently selected applet.

6.1.6 Static Fields and Methods

Instances of classes—objects—are owned by contexts; classes themselves are not. There is no runtime context check that can be performed when a class static field is accessed. Neither is there a context switch when a static method is invoked. (Similarly, invokespecial causes no context switch.)

Public static fields and public static methods are accessible from any context: static methods execute in the same context as their caller.

Objects referenced in static fields are just regular objects. They are owned by whomever created them and standard firewall access rules apply. If it is necessary to share them across multiple contexts, then these objects need to be *Shareable Interface Objects* (SIOs). (See Section 6.2.4 below.)

Of course, the conventional Java technology protections are still enforced for static fields and methods. In addition, when applets are installed, the Installer verifies that each attempt to link to an external static field or method is permitted. Installation and specifics about linkage are beyond the scope of this specification.

6.1.6.1 Optional static access checks

The JCRE may perform optional runtime checks that are redundant with the constraints enforced by a verifier. A Java Card VM may detect when code violates fundamental language restrictions, such as invoking a private method in another class, and report or otherwise address the violation.

6.2 Object Access Across Contexts

The applet firewall confines an applets actions to its designated context. To enable applets to interact with each other and with the JCRE, some well-defined yet secure mechanisms are provided so one context can access an object belonging to another context.

These mechanisms are provided in the Java Card API and are discussed in the following sections:

- JCRE Entry Point Objects
- Global Arrays
- JCRE Privileges
- Shareable Interfaces

6.2.1 JCRE Entry Point Objects

Secure computer systems must have a way for non-privileged user processes (that are restricted to a subset of resources) to request system services performed by privileged "system" routines.

In the Java Card API, this is accomplished using *JCRE Entry Point Objects*. These are objects owned by the JCRE context, but they have been flagged as containing entry point methods.

The firewall protects these objects from access by applets. The entry point designation allows the methods of these objects to be invoked from any context. When that occurs, a context switch to the JCRE context is performed. These methods are the gateways through which applets request privileged JCRE system services. The requested service is performed by the entry point method after verifying that the method parameters are within bounds and all objects passed in as parameters are accessible from the caller's context.

There are two categories of JCRE Entry Point Objects:

■ Temporary JCRE Entry Point Objects

Like all JCRE Entry Point Objects, methods of temporary JCRE Entry Point Objects can be invoked from any context. However, references to these objects cannot be stored in class variables, instance variables or array components. The JCRE detects and restricts attempts to store references to these objects as part of the firewall functionality to prevent unauthorized re-use.

The APDU object and all JCRE owned exception objects are examples of temporary JCRE Entry Point Objects.

■ Permanent JCRE Entry Point Objects

Like all JCRE Entry Point Objects, methods of permanent JCRE Entry Point Objects can be invoked from any context. Additionally, references to these objects can be stored and freely re-used.

JCRE owned AID instances are examples of permanent JCRE Entry Point Objects.

The JCRE is responsible for:

- Determining what privileged services are provided to applets.
- Defining classes containing the entry point methods for those services.
- Creating one or more object instances of those classes.
- Designating those instances as JCRE Entry Point Objects.
- Designating JCRE Entry Point Objects as temporary or permanent.
- Making references to those objects available to applets as needed.

Note – Only the *methods* of these objects are accessible through the firewall. The fields of these objects are still protected by the firewall and can only be accessed by the JCRE context.

Only the JCRE itself can designate Entry Point Objects and whether they are temporary or permanent. JCRE implementers are responsible for implementing the mechanism by which JCRE Entry Point Objects are designated and how they become temporary or permanent.

6.2.2 Global Arrays

The global nature of some objects requires that they be accessible from any context. The firewall would ordinarily prevent these objects from being used in a flexible manner. The Java Card VM allows an object to be designated as *global*.

All global arrays are temporary global array objects. These objects are owned by the JCRE context, but can be accessed from any context. However, references to these objects cannot be stored in class variables, instance variables or array components. The JCRE detects and restricts attempts to store references to these objects as part of the firewall functionality to prevent unauthorized re-use.

For added security, only arrays can be designated as global and only the JCRE itself can designate global arrays. Because applets cannot create them, no API methods are defined. JCRE implementers are responsible for implementing the mechanism by which global arrays are designated.

At the time of publication of this specification, the only global arrays required in the Java Card API are the APDU buffer and the byte array input parameter (bArray) to the applet's install method.

Note – Because of the global status of the APDU buffer, the *Java Card* $^{\text{TM}}$ 2.2 *Application Programming Interface* specifies that this buffer is cleared to zeroes whenever an applet is selected, before the JCRE accepts a new APDU command. This is to prevent an applet's potentially sensitive data from being "leaked" to another applet via the global APDU buffer. The APDU buffer can be accessed from a shared interface object context and is suitable for passing data across different contexts. The applet is responsible for protecting secret data that may be accessed from the APDU buffer.

6.2.3 JCRE Privileges

Because it is the "system" context, the JCRE context has a special privilege. It can invoke a method of any object on the card. For example, assume that object X is owned by applet A. Normally, only the context of A can access the fields and methods of X. But the JCRE context is allowed to invoke any of the methods of X. During such an invocation, a context switch occurs from the JCRE context to the context of the applet that owns X.

Again, because it is the "system" context, the JCRE context can access fields and components of any object on the card including CLEAR_ON_DESELECT transient objects owned by the currently selected applet.

Note — The JCRE can access both *methods* and *fields* of X. Method access is the mechanism by which the JCRE enters the context of an applet. Although the JCRE could invoke any method through the firewall, it shall only invoke the select, process, deselect, and getShareableInterfaceObject (see Section 6.2.7.1) methods defined in the Applet class, and methods on the objects passed to the API as parameters.

The JCRE context is the currently active context when the VM begins running after a card reset. The JCRE context is the "root" context and is always either the currently active context or the bottom context saved on the stack.

6.2.4 Shareable Interfaces

Shareable interfaces are a feature in the Java Card API to enable applet interaction. A shareable interface defines a set of shared interface methods. These interface methods can be invoked from one context even if the object implementing them is owned by an applet in another context.

In this specification, an object instance of a class implementing a shareable interface is called a *Shareable Interface Object* (SIO).

To the owning context, the SIO is a normal object whose fields and methods can be accessed. To any other context, the SIO is an instance of the shareable interface, and only the methods defined in the shareable interface are accessible. All other fields and methods of the SIO are protected by the firewall.

Shareable interfaces provide a secure mechanism for inter-applet communication, as follows:

6.2.4.1 Server applet A builds a Shareable Interface Object

- 1. To make an object available for sharing with another applet in a different context, applet A first defines a shareable interface, SI. A shareable interface extends the interface javacard.framework.Shareable. The methods defined in the shareable interface, SI, represent the services that applet A makes accessible to other applets.
- 2. Applet A then defines a class C that implements the shareable interface SI. C implements the methods defined in SI. C may also define other methods and fields, but these are protected by the applet firewall. Only the methods defined in SI are accessible to other applets.
- 3. Applet A creates an object instance O of class C. O belongs to applet A, and the firewall allows A to access any of the fields and methods of O.

6.2.4.2 Client applet B obtains the Shareable Interface Object

- 1. To access applet A's object O, applet B creates an object reference SIO of type SI.
- 2. Applet B invokes a special method (JCSystem.getAppletShareableInterfaceObject, described in section 6.2.7.2) to request a shared interface object reference from applet A.
- 3. Applet A receives the request and the AID of the requester (B) via Applet.getShareableInterfaceObject, and determines whether it will share object O with applet B. A's implementation of the getShareableInterfaceObject method executes in A's context.

- 4. If applet A agrees to share with applet B, A responds to the request with a reference to O. As this reference is returned as type Shareable, none of the fields or methods of O are visible.
- 5. Applet B receives the object reference from applet A, casts it to the interface type SI, and stores it in object reference variable SIO. Even though SIO actually refers to A's object O, SIO is an interface of type SI. Only the shareable interface methods defined in SI are visible to B. The firewall prevents the other fields and methods of O from being accessed by B.

In the above sequence, applet B initiates communication with applet A using the special system method in the JCSystem class to request a Shareable Interface Object from applet A. Once this communication is established, applet B can obtain other Shareable Interface Objects from applet A using normal parameter passing and return mechanisms. It can also continue to use the special JCSystem method described above to obtain other Shareable Interface Objects.

6.2.4.3 Client applet B requests services from applet A

- 1. Applet B can request service from applet A by invoking one of the shareable interface methods of SIO. During the invocation the Java Card VM performs a context switch. The original currently active context (B) is saved on a stack and the context of the owner (A) of the actual object (O) becomes the new currently active context. A's implementation of the shareable interface method (SI method) executes in A's context.
- 2. The SI method can find out the AID of its client (B) via the JCSystem.getPreviousContextAID method. This is described in section 6.2.5. The method determines whether or not it will perform the service for applet B.
- 3. Because of the context switch, the firewall allows the SI method to access all the fields and methods of object O and any other object in the context of A. At the same time, the firewall prevents the method from accessing non-shared objects in the context of B.
- 4. The SI method can access the parameters passed by B and can provide a return value to B.
- 5. During the return, the Java Card VM performs a restoring context switch. The original currently active context (B) is popped from the stack, and again becomes the currently active context.
- 6. Because of the context switch, the firewall again allows B to access any of its objects and prevents B from accessing non-shared objects in the context of A.

6.2.5 Determining the Previous Context

When an applet calls <code>JCSystem.getPreviousContextAID</code>, the JCRE shall return the instance AID of the applet instance active at the time of the last context switch.

6.2.5.1 The JCRE Context

The JCRE context does not have an AID. If an applet calls the getPreviousContextAID method when the context of the applet was entered directly from the JCRE context, this method returns null.

If the applet calls <code>getPreviousContextAID</code> from a method that may be accessed either from within the applet itself or when accessed via a shareable interface from an external applet, it shall check for <code>null</code> return before performing caller AID authentication.

6.2.6 Shareable Interface Details

A shareable interface is simply one that extends (either directly or indirectly) the tagging interface javacard.framework.Shareable. This Shareable interface is similar in concept to the Remote interface used by the RMI facility, in which calls to the interface methods take place across a local/remote boundary.

6.2.6.1 The Java Card Shareable Interface

Interfaces extending the Shareable tagging interface have this special property: calls to the interface methods take place across Java Card's applet firewall boundary via a context switch.

The Shareable interface serves to identify all shared objects. Any object that needs to be shared through the applet firewall shall directly or indirectly implement this interface. Only those methods specified in a shareable interface are available through the firewall.

Implementation classes can implement any number of shareable interfaces and can extend other shareable implementation classes.

Like any Java platform interface, a shareable interface simply defines a set of service methods. A service provider class declares that it "implements" the shareable interface and provides implementations for each of the service methods of the interface. A service client class accesses the services by obtaining an object reference, casting it to the shareable interface type, and invoking the service methods of the interface.

The shareable interfaces within the Java Card technology shall have the following properties:

- When a method in a shareable interface is invoked, a context switch occurs to the context of the object's owner.
- When the method exits, the context of the caller is restored.
- Exception handling is enhanced so that the currently active context is correctly restored during the stack frame unwinding that occurs as an exception is thrown.

6.2.7 Obtaining Shareable Interface Objects

Inter-applet communication is accomplished when a client applet invokes a shareable interface method of a SIO belonging to a server applet. For this to work, there must be a way for the client applet to obtain the SIO from the server applet in the first place. The JCRE provides a mechanism to make this possible. The Applet class and the JCSystem class provide methods to enable a client to request services from the server.

6.2.7.1 The Method Applet.getShareableInterfaceObject(AID, byte)

This method is implemented by the server applet instance. It shall be called by the JCRE to mediate between a client applet that requests to use an object belonging to another applet, and the server applet that makes its objects available for sharing.

The default behavior shall return null, which indicates that an applet does not participate in inter-applet communication.

A server applet that is intended to be invoked from another applet needs to override this method. This method should examine the clientAID and the parameter. If the clientAID is not one of the expected AIDs, the method should return null. Similarly, if the parameter is not recognized or if it is not allowed for the clientAID, then the method also should return null. Otherwise, the applet should return an SIO of the shareable interface type that the client has requested.

The server applet need not respond with the same SIO to all clients. The server can support multiple types of shared interfaces for different purposes and use clientAID and parameter to determine which kind of SIO to return to the client.

6.2.7.2 The Method JCSystem.getAppletShareableInterfaceObject

The JCSystem class contains the method getAppletShareableInterfaceObject, which is invoked by a client applet to communicate with a server applet.

The JCRE shall implement this method to behave as follows:

- 1. The JCRE searches its internal applet table which lists all successfully installed applets on the card for one with serverAID. If not found, null is returned.
- The JCRE invokes this applet's getShareableInterfaceObject method, passing the clientAID of the caller and the parameter.
- 3. A context switch occurs to the server applet, and its implementation of getShareableInterfaceObject proceeds as described in the previous section. The server applet returns a SIO (or null).
- 4. getAppletShareableInterfaceObject returns the same SIO (or null) to its caller.

For enhanced security, the implementation shall make it impossible for the client to tell which of the following conditions caused a null value to be returned:

- The serverAID was not found.
- The server applet does not participate in inter-applet communication.
- The server applet does not recognize the clientAID or the parameter.
- The server applet won't communicate with this client.
- The server applet won't communicate with this client as specified by the parameter.

6.2.8 Class and Object Access Behavior

A static class field is accessed when one of the following Java bytecodes is executed:

```
getstatic, putstatic
```

An object is *accessed* when one of the following Java bytecodes is executed using the object's reference:

```
getfield, putfield, invokevirtual, invokeinterface, athrow,
<T>aload, <T>astore, arraylength, checkcast, instanceof
```

<T> refers to the various types of array bytecodes, such as baload, sastore, etc.

This list also includes any special or optimized forms of these bytecodes that can be implemented in the Java Card VM, such as getfield b, getfield s_this, etc.

Prior to performing the work of the bytecode as specified by the Java VM, the Java Card VM will perform an *access check* on the referenced object. If access is denied, then a java.lang.SecurityException is thrown.

The access checks performed by the Java Card VM depend on the type and owner of the referenced object, the bytecode, and the currently active context. They are described in the following sections.

6.2.8.1 Accessing Static Class Fields

Bytecodes:

getstatic, putstatic

- If the JCRE is the currently active context, then access is allowed.
- Otherwise, if the bytecode is putstatic and the field being stored is a reference type and the reference being stored is a reference to a temporary JCRE Entry Point Object or a global array, then access is denied.
- Otherwise, access is allowed.

6.2.8.2 Accessing Array Objects

Bytecodes:

<T>aload, <T>astore, arraylength, checkcast, instanceof

- If the JCRE is the currently active context, then access is allowed.
- Otherwise, if the bytecode is aastore and the component being stored is a reference type and the reference being stored is a reference to a temporary JCRE Entry Point Object or a global array, then access is denied.
- Otherwise, if the array is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the array is designated global, then access is allowed.
- Otherwise, access is denied.

6.2.8.3 Accessing Class Instance Object Fields

Bytecodes:

getfield, putfield

- If the JCRE is the currently active context, then access is allowed.
- Otherwise, if the bytecode is putfield and the field being stored is a reference type and the reference being stored is a reference to a temporary JCRE Entry Point Object or a global array, then access is denied.
- Otherwise if the object is owned by an applet in the currently active context, then access is allowed.
- Otherwise, access is denied.

6.2.8.4 Accessing Class Instance Object Methods

Bytecodes:

invokevirtual

If the object is owned by an applet in the currently active context, then access is allowed.

- Otherwise, if the object is designated a JCRE Entry Point Object, then access is allowed. Context is switched to the object owner's context (shall be JCRE).
- Otherwise, if JCRE is the currently active context, then access is allowed. Context is switched to the object owner's context.
- Otherwise, access is denied.

6.2.8.5 Accessing Standard Interface Methods

Bytecodes:

invokeinterface

- If the object is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the object is designated a JCRE Entry Point Object, then access is allowed. Context is switched to the object owner's context (shall be JCRE).
- Otherwise, if the JCRE is the currently active context, then access is allowed. Context is switched to the object owner's context.
- Otherwise, access is denied.

6.2.8.6 Accessing Shareable Interface Methods

Bytecodes:

invokeinterface

- If the object is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the object is owned by a non-multiselectable applet instance which is not in the context of the currently selected applet instance, and which is active on another logical channel, access is denied. (See Section 4.2)
- Otherwise, if the object's class implements a Shareable interface, and if the interface being invoked extends the Shareable interface, then access is allowed. Context is switched to the object owner's context.
- Otherwise, if the JCRE is the currently active context, then access is allowed. Context is switched to the object owner's context.
- Otherwise, access is denied.

6.2.8.7 Throwing Exception Objects

Bytecodes:

athrow

 If the object is owned by an applet in the currently active context, then access is allowed.

- Otherwise, if the object is designated a JCRE Entry Point Object, then access is allowed.
- Otherwise, if the JCRE is the currently active context, then access is allowed.
- Otherwise, access is denied.

6.2.8.8 Accessing Classes

Bytecodes:

checkcast, instanceof

- If the object is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the object is designated a JCRE Entry Point Object, then access is allowed.
- Otherwise, if the JCRE is the currently active context, then access is allowed.
- Otherwise, access is denied.

6.2.8.9 Accessing Standard Interfaces

Bytecodes:

checkcast, instanceof

- If the object is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the object is designated a JCRE Entry Point Object, then access is allowed.
- Otherwise, if the JCRE is the currently active context, then access is allowed.
- Otherwise, access is denied.

6.2.8.10 Accessing Shareable Interfaces

Bytecodes:

checkcast, instanceof

- If the object is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the object's class implements a Shareable interface, and if the object is being cast into (checkcast) or is being verified as being an instance of (instanceof) an interface that extends the Shareable interface, then access is allowed.
- Otherwise, if the JCRE is the currently active context, then access is allowed.
- Otherwise, access is denied.

6.2.8.11 Accessing Array Object Methods

Note – The method access behavior of global arrays is identical to that of JCRE Entry Point Objects.

Bytecodes:

invokevirtual

- If the array is owned by an applet in the currently active context, then access is allowed.
- Otherwise, if the array is designated a global array, then access is allowed. Context is switched to the array owner's context (JCRE context).
- Otherwise, if JCRE is the currently active context, then access is allowed. Context is switched to the array owner's context.
- Otherwise, access is denied.

Transactions and Atomicity

A *transaction* is a logical set of updates of persistent data. For example, transferring some amount of money from one account to another is a banking transaction. It is important for transactions to be atomic: either all of the data fields are updated, or none are. The JCRE provides robust support for atomic transactions, so that card data is restored to its original pre-transaction state if the transaction does not complete normally. This mechanism protects against events such as power loss in the middle of a transaction, and against program errors that might cause data corruption should all steps of a transaction not complete normally.

7.1 Atomicity

Atomicity defines how the card handles the contents of persistent storage after a stop, failure, or fatal exception during an update of a single object or class field or array component. If power is lost during the update, the applet developer shall be able to rely on what the field or array component contains when power is restored.

The Java Card platform guarantees that any update to a single persistent object or class field will be atomic. In addition, the Java Card platform provides single component level atomicity for persistent arrays. That is, if the smart card loses power during the update of a data element (field in an object/class or component of an array) that shall be preserved across CAD sessions, that data element shall be restored to its previous value.

Some methods also guarantee atomicity for block updates of multiple data elements. For example, the atomicity of the Util.arrayCopy method guarantees that either all bytes are correctly copied or else the destination array is restored to its previous byte values.

An applet might not require atomicity for array updates. The Util.arrayCopyNonAtomic method is provided for this purpose. It does not use the transaction commit buffer even when called with a transaction in progress.

7.2 Transactions

An applet might need to atomically update several different fields or array components in several different objects. Either all updates take place correctly and consistently, or else all fields/components are restored to their previous values.

The Java Card platform supports a transactional model in which an applet can designate the beginning of an atomic set of updates with a call to the <code>JCSystem.beginTransaction</code> method. Each object update after this point is conditionally updated. The field or array component appears to be updated—reading the field/array component back yields its latest conditional value—but the update is not yet committed.

When the applet calls JCSystem.commitTransaction, all conditional updates are committed to persistent storage. If power is lost or if some other system failure occurs prior to the completion of JCSystem.commitTransaction, all conditionally updated fields or array components are restored to their previous values. If the applet encounters an internal problem or decides to cancel the transaction, it can programmatically undo conditional updates by calling JCSystem.abortTransaction.

7.3 Transaction Duration

A transaction always ends when the JCRE regains programmatic control upon return from the applet's select, deselect, process or install methods. This is true whether a transaction ends normally, with an applet's call to commitTransaction, or with an abortion of the transaction (either programmatically by the applet, or by default by the JCRE). For more details on transaction abortion, refer to section 7.6.

Transaction duration is the life of a transaction between the call to JCSystem.beginTransaction, and either a call to commitTransaction or an abortion of the transaction.

7.4 Nested Transactions

The model currently assumes that nested transactions are not possible. There can be only one transaction in progress at a time. If <code>JCSystem.beginTransaction</code> is called while a transaction is already in progress, then a <code>TransactionException</code> is thrown.

The JCSystem.transactionDepth method is provided to allow you to determine if a transaction is in progress.

7.5 Tear or Reset Transaction Failure

If power is lost (tear) or the card is reset or some other system failure occurs while a transaction is in progress, then the JCRE shall restore to their previous values all fields and array components conditionally updated since the previous call to JCSystem.beginTransaction.

This action is performed automatically by the JCRE when it reinitializes the card after recovering from the power loss, reset, or failure. The JCRE determines which of those objects (if any) were conditionally updated, and restores them.

Note — The contents of an array component which is updated using the Util.arrayCopyNonAtomic method or the Util.arrayFillNonAtomic method while a transaction is in progress, is not predictable, following a tear or reset during that transaction.

Note – Object space used by instances created during the transaction that failed due to power loss or card reset can be recovered by the JCRE.

7.6 Aborting a Transaction

Transactions can be aborted either by an applet or by the JCRE.

Note — The contents of an array component which is updated using the Util.arrayCopyNonAtomic method or the Util.arrayFillNonAtomic method while a transaction is in progress, is not predictable, following the abortion of the transaction.

7.6.1 Programmatic Abortion

If an applet encounters an internal problem or decides to cancel the transaction, it can programmatically undo conditional updates by calling JCSystem.abortTransaction. If this method is called, all conditionally updated fields and array components since the previous call to JCSystem.beginTransaction are restored to their previous values, and the JCSystem.transactionDepth value is reset to 0.

7.6.2 Abortion by the JCRE

If an applet returns from the select, deselect, process, or install methods when an applet initiated transaction is in progress, the JCRE automatically aborts the transaction and proceeds as if an uncaught exception was thrown.

If the JCRE catches an uncaught exception from the select, deselect, process, or install methods when an applet initiated transaction is in progress, the JCRE automatically aborts the transaction.

Note – The abortion of a transaction by the JCRE does not directly affect the response status sent to the CAD. The response status is determined as described in Section 3.3 "The Method process."

7.6.3 Cleanup Responsibilities of the JCRE

Object instances created during the transaction that is being aborted can be deleted only if references to these deleted objects can no longer be used to access these objects. The JCRE shall ensure that a reference to an object created during the aborted transaction is equivalent to a null reference.

Alternatively, programmatic abortion after creating objects within the transaction can be deemed to be a programming error. When this occurs, the JCRE may, to ensure the security of the card and to avoid heap space loss, lock up the card session to force tear/reset processing.

7.7 Transient Objects and Global Arrays

Only updates to persistent objects participate in the transaction. Updates to transient objects and global arrays are never undone, regardless of whether or not they were "inside a transaction."

7.8 Commit Capacity

Since platform resources are limited, the number of bytes of conditionally updated data that can be accumulated during a transaction is limited. The Java Card technology provides methods to determine how much *commit capacity* is available on the implementation. The commit capacity represents an upper bound on the number of conditional byte updates available. The actual number of conditional byte updates available may be lower due to management overhead.

A TransactionException is thrown if the commit capacity is exceeded during a transaction.

7.9 Context Switching

Context switches shall not alter the state of a transaction in progress. If a transaction is in progress at the time of a context switch (see Section 6.1.2), updates to persistent data continue to be conditional in the new context until the transaction is committed or aborted.

Remote Method Invocation Service

Java Card Remote Method Invocation (JCRMI) is a subset of the Java Remote Method Invocation (RMI) system. It provides a mechanism for a client application running on the CAD platform to invoke a method on a remote object on the card. The on-card transport layer for JCRMI is provided in the package <code>javacard.framework.service</code> by the class RMIService. It is designed as a service requested by the JCRMI based applet when it is the currently selected applet.

The JCRMI message is encapsulated within the APDU object passed into the RMIService methods.

8.1 JCRMI

This section defines the subset of the RMI system that is supported by Java Card RMI.

8.1.1 Remote Objects

A remote object is one whose remote methods can be invoked remotely from the CAD client. A remote object is described by one or more remote interfaces. A remote interface is an interface which extends, directly or indirectly, the interface java.rmi.Remote. The methods of a remote interface are referred to as remote methods. A remote method declaration includes the exception java.rmi.RemoteException (or one of its superclasses such as java.io.IOException or java.lang.Exception) in its throws clause. Additionally, in the remote method declaration, a remote object declared as the return value must be declared as the remote interface, not the implementation class of that interface.

JCRMI imposes additional constraints on the definition of remote methods. These constraints are a result of the Java Card language subset and other feature limitations.

8.1.1.1 Parameters and Return Values

The parameters of a remote method must only include parameters of the following types:

- any supported primitive data types.
- any single-dimension array of a supported primitive data type.

The return value of a remote method must only be one of the following types:

- any supported primitive data type.
- any single-dimension array type of a supported primitive data type.
- any remote interface type
- a void return

All parameters including array parameters are always transmitted by value during the remote method invocation. The return values from a remote method are transmitted by value for primitive types and arrays; return values that are remote object references are transmitted by reference using a remote object reference descriptor.

8.1.1.2 Exceptions

JCRMI for Java Card 2.2 uses the following simplified model for returning exceptions thrown by remote methods:

- When an exception defined in the Java Card API is thrown by a remote method the exact exception type and the embedded reason code is transmitted back to the client application. In essence, the exception object is transmitted by value.
- When an exception not defined in the Java Card API is thrown by a remote method, the "closest" superclass exception type from the API and the embedded reason code is transmitted back to the client application. In this case, the "closest" API defined superclass exception object is transmitted by value. The client application can distinguish an inexact exception from an exact one.

8.1.1.3 Functional Limitations

The definition of the supported subset of JCRMI for Java Card 2.2 implies functional limitations during the execution of Java Card remote methods:

- CAD client application remote objects cannot be passed as arguments to remote methods.
- Card remote objects cannot be passed as arguments to remote methods.
- Applets on the card cannot invoke remote methods on the CAD client.
- Method argument data and return values, along with the JCRMI protocol overhead must fit within the size constraints of an APDU command and APDU response respectively.

8.2 The RMI Messages

The JCRMI message protocol for Java Card 2.2 consists of two commands that are used to:

- get the initial remote object reference for the JCRMI based applet. The initial remote object reference is the seed remote object which the CAD client application needs to begin remote method invocations.
- send a remote method invocation request to the card.

To ensure that the protocol is compatible with all applications, the SELECT FILE command is used for getting the initial reference. The response to the SELECT FILE command allows the remote method invocation command itself to be customized by the applet.

8.2.1 Applet Selection

The selection command used to retrieve the initial reference is the ISO7816-4 SELECT FILE command, with the following options in the header:

- Direct selection by DF Name: that is, selection by AID. This is the normal option used to select all applet instances in Java Card.
- Return FCI (File Control Information ISO7816-4), optional template.

 This is an additional option that indicates that the applet is expected to return FCI information.

In addition, an alternate RFU variant of the Return FCI option is required to configure the RMIService for an alternate JCRMI protocol format. (For more details see Section 8.4.1 "SELECT FILE Command.")

The answer to this command is a constructed TLV(tag-length-value) data structure (ISO 7816-6) that includes the following information:

- The byte to be used as instruction byte (INS) for subsequent invocation commands.
- The initial remote object reference descriptor. The descriptor includes the remote object identifier and information to identify the associated class.

8.2.2 Method Invocation

In order to request a method invocation, the CAD client provides the following information:

- The remote object identifier:
 This identifier is used to uniquely identify the object on the card.
- The invoked method identifier: A designator to uniquely identify the remote method within the remote object class or superclass.
- The values of the arguments: These values are raw values for primitive data types, and for arrays, a length followed by the values.

The response to the invocation request may include one of the following items:

- A primitive return value:
 This is a raw primitive data type value.
- An array of primitive components:
 This is a length followed by the raw primitive data type values.
- A remote object reference descriptor:
 The descriptor includes the remote object identifier and information to instantiate a proxy instance of the remote card object.
- An exception thrown by the remote method.

8.3 Data Formats

This section describes the formats used to encapsulate the following:

- A remote object identifier which identifies the remote object on the card.
- A remote object reference descriptor which describes the remote object on the card for the CAD client.
- A method identifier which identifies the remote method on the card.
- The method parameters and return values.

This section uses a C-like structure notation similar to that used in the *Java Card Virtual Machine Specification*.

8.3.1 Remote Object Identifier

A remote object identifier is a 16-bit unsigned number which uniquely identifies a remote object on the card.

8.3.2 Remote Object Reference Descriptor

The remote object reference descriptor includes the remote object identifier, as well as information to instantiate the proxy class on the CAD client. The remote object reference descriptor uses one of two alternate formats. The representation based on the name of the class uses the remote_ref_with_class format. The representation based on the names of the implemented remote interfaces uses the remote_ref_with_interfaces format.

A remote object reference descriptor is therefore defined as follows:

Note – Even though the above structure uses the C-like "union" notation, the lengths of the alternate representations within the union do not use any padding to normalize their lengths.

The items in the remote_ref_descriptor structure are:

ref_null is the represention of a null reference using the following format:

```
ref_null {
   u2 remote_ref_id = 0xFFFF
   }
```

The remote_ref_id item must be the reserved value 0xFFFF.

remote_ref_with_class is the definition of a remote object reference using the class name and uses the following format:

```
remote_ref_with_class {
   u2 remote_ref_id <> 0xFFFF
   u1 hash_modifier_length
   u1 hash_modifier[ hash_modifier_length ]
   u1 pkg_name_length
   u1 package_name[ pkg_name_length ]
   u1 class_name_length
   u1 class_name[ class_name_length ]
}
```

The remote_ref_id item represents the remote reference identifier. The value of this field must not be <code>0xFFFF</code> which denotes the <code>null</code> reference.

The hash_modifier item is an UTF-8 string of length specified in the hash_modifier_length item and is used to ensure that method identifier hash codes are unique.

The pkg_name_length item is the number of bytes in the package_name item to represent the name of the package in UTF-8 string notation. The value of this item must be non-zero.

The package_name item is the variable length representation of the fully qualified name of the package which contains the remote class in UTF-8 string notation. The fully qualified name of the package represented here uses the internal form wherein the ASCII periods ('.') that normally separate the indentifiers that make up the fully qualified name are replaced by ASCII forward slashes ('/'). For example, the internal form of the normally fully qualified package name of the package java.rmi is java/rmi.

The class_name_length item is the number of bytes in the class_name item to represent the name of the remote class in UTF-8 string notation. The value of this item must be non-zero.

The class_name item is the variable length representation of the name of the implementation class of the remote object in UTF-8 string notation.

remote_ref_with_interfaces item is the definition of a remote object reference using the names of the interfaces and uses the following format:

```
remote_ref_with_interfaces {
   u2 remote_ref_id <> 0xFFFF
   u1 hash_modifier_length
   u1 hash_modifier[ hash_modifier_length ]
   u1 remote_interface_count
   rem_interface_def remote_interfaces[remote_interface_count]
}
```

The definition of the remote_ref_id, the hash_modifier_length and the hash_modifier item are the same as that described earlier in the remote ref with class structure.

The remote_interface_count item indicates the number of rem_interface_def format entries in the remote_interfaces item. This number must be less than 16.

The remote_interfaces item comprises a sufficient list of rem_interface_def format entries containing the names of remote interfaces implemented. This list is such that when combined with their remote superinterfaces, the complete set of remote interfaces implemented by the remote object can be enumerated. The rem_interface_def item uses the following format:

```
rem_interface_def {
  u1 pkg_name_length
  u1 package_name[ pkg_name_length ]
  u1 interface_name_length
  u1 interface_name[ interface_name_length ]
  }
```

The items in the rem_interface_def structure are as follows:

The pkg_name_length item is the number of bytes used in the package_name item to represent the name of the package in UTF-8 string notation. If the value of this item is 0, it indicates that the package name of the previous remote_interfaces item must be used instead. The value of this item in remote_interfaces[0] must not be 0.

The package_name item is the pkg_name_length byte length representation of the fully qualified name of the package which contains the remote interface in UTF-8 string notation. The fully qualified name of the package represented here uses the internal form wherein the ASCII periods ('.') that normally separate the indentifiers that make up the fully qualified name are replaced by ASCII forward slashes ('/'). For example, the internal form of the normally fully qualified package name of the package java.rmi is java/rmi.

The interface_name_length item is the number of bytes in the interface_name item to represent the name of the remote interface in UTF-8 string notation.

The interface_name item is the variable length representation of the name of the remote interface implemented by the remote object in UTF-8 string notation.

8.3.3 Method Identifier

A method identifier will always be used in association with a remote object reference. A method identifier is defined as follows:

```
u2 method id
```

The method_id is a unique 16-bit hashcode identifier of the remote method within the remote class. This 16-bit hashcode consists of the first two bytes of the SHA-1 message digest function performed on a class specific hash modifier string followed the name of the method followed by the method descriptor representation in UTF-8 format. Representation of a method descriptor is the same as that described in *The Java Virtual Machine Specification* (§4.3.3)

8.3.4 Parameter Encoding

Every parameter will have the following generic format:

```
param {
     ul value[]
}
```

8.3.4.1 Primitive Data Type Parameter Encoding

Primitive data types boolean, byte, short and int will respectively be encoded as follows:

```
boolean_param {
    u1 boolean_value
  }
byte_param {
    s1 byte_value
  }
short_param {
    s2 short_value
  }
int_param {
    s4 int_value
  }
```

The boolean_value field may only take the values 0 (for false) and 1 (for true). All the other fields can take any value in their range.

8.3.4.2 Array Parameter Encoding

The representation of the null array parameter and arrays of the boolean, byte, short and int component types include the length information and will respectively be encoded as follows:

```
null_array_param {
    ul length = 0xFF
}
boolean_array_param {
    ul length <> 0xFF
    ul boolean_value[length]
}
byte_array_param {
    ul length <> 0xFF
    s1 byte_value[length]
}
short_array_param {
    ul length <> 0xFF
    s2 short_value[length]
}
int_array_param {
    ul length <> 0xFF
    s2 short_value[length]
}
int_array_param {
    ul length <> 0xFF
    s4 int_value[length]
}
```

Note – The length field in each of the array data structure defined above represents the number of elements of the array, and not its size in bytes.

8.3.5 Return Value Encoding

A return value may be any of the parameter types described in the previous section encapsulated within a normal response format. In addition, the return value may represent a remote object reference type, a null return type, various exceptions and the error type.

The generic structure of a return value is as follows:

```
return_response {
    u1 tag
    u1[] value
}
```

The return value using the return_response encoding is always followed by a good completion status code of 0x9000 in the response APDU.

8.3.5.1 Normal Response Encoding

A normal response encapsulates primitive return types, arrays of primitive data types using the same format for the param item as described in the Parameter Encoding section §8.3.4 using the following format:

```
normal_param_response {
    u1 normal_tag (= 0x81)
    param normalValue
}
```

The null_array_param format described in the Parameter Encoding Section 8.3.4 is not used to represent a null array reference. Instead, a null object reference as well as a null array reference share the following common format:

```
normal_null_response {
    u1 normal_tag (= 0x81)
    ref_null null_array_or_ref
}
```

In addition, a remote object reference descriptor type is also encapsulated using the normal response format as follows:

```
normal_ref_response {
    u1 normal_tag (= 0x81)
    remote_ref_descriptor remote_ref
}
```

8.3.5.2 Exception Response Encoding

The following is the encoding when an API defined exception is thrown by the remote method. It may be returned during any remote method invocation. The reason item is the Java Card exception reason code, or 0 for a java.lang, java.rmi or java.io exceptions:

```
exception_response {
    u1 exception_tag = 0x82
    u1 exception_type
    s2 reason
```

}

The values for the exception_type item are shown below:

```
java.lang.Throwable = 0x00
java.lang.ArithmeticException = 0x01
java.lang.ArrayIndexOutOfBoundsException = 0x02
java.lang.ArrayStoreException = 0x03
java.lang.ClassCastException = 0x04
java.lang.Exception = 0x05
java.lang.IndexOutOfBoundsException = 0x06
java.lang.NegativeArraySizeException = 0x07
java.lang.NullPointerException = 0x08
java.lang.RuntimeException = 0x09
java.lang.SecurityException = 0x0A
java.io.IOException = 0x0B
java.rmi.RemoteException = 0x0C
javacard.framework.APDUException = 0x20
javacard.framework.CardException = 0x21
javacard.framework.CardRuntimeException = 0x22
javacard.framework.ISOException = 0x23
javacard.framework.PINException = 0x24
javacard.framework.SystemException = 0x25
javacard.framework.TransactionException = 0x26
javacard.framework.UserException = 0x27
javacard.security.CryptoException = 0x30
javacard.framework.service.ServiceException = 0x40
```

The following is the encoding when a user defined exception is thrown by the remote method. The exception_type item represents the closest API defined exception type. It may be returned during any remote method invocation. The reason item is the Java Card exception reason code, or 0 for the subclasses of java.lang, java.rmi or java.io exceptions:

```
exception_subclass_response {
    u1 exception_subclass_tag = 0x83
    u1 exception_type
    s2 reason
}
```

8.3.5.3 Error Response Encoding

The following encoding represents an error condition on the card. The error may occur due to marshalling, unmarshalling or resource related problems.

```
error_response {
    u1 error_tag = 0x99
    s2 error_detail
}
```

The values of the error_detail item are enumerated below:

- The Remote Object Identifier is invalid or ineligible for JCRMI = 0x0001
- The Remote Method could not be identified = 0x0002
- The Remote Method signature did not match the parameter format = 0×0003
- Insufficient resources available to unmarshall parameters = 0×0004
- Insufficient resources available to marshall response = 0×0005
- Java Card Remote Method Invocation protocol error = 0x0006
- Internal Error occurred = 0xffff

8.4 APDU Command Formats

This Data Formats section §8.3 described the various elements included in the data portion of the JCRMI messages. This section describes the complete format of the APDU commands - the header as well as the data portion containing the message elements described earlier.

8.4.1 SELECT FILE Command

The Select command for an RMI based applet must have the following format:

Note – An asterisk (*) indicates binary notation (%) using bit numbering as in ISO7816. Most significant bit = b8. Least significant bit = b1. An x represents a don't care.

CLA %b000000xx - The bits (b2,b1*) are used for logical channels

INS 0xA4 - SELECT FILE P1 0x04 - Select by AID.

P2 %b000x00xx - Return FCI information. The bits (b2,b1*) are used for partial selection if supported. If bit b5* is 1, the remote reference descriptor uses the $remote_ref_with_interfaces$ format, otherwise it uses the alternate $remote_ref_with_class$ format.

Lc xx - Length of the AID

Data - AID of the applet to be selected (between 5 and 16 bytes)

The format of the response is defined as shown below. Note that the applet may extend the format to include additional information, if necessary before sending the response back to the CAD. The additional information must retain the TLV format and must not introduce any additional information under the jc_rmi_data_tag.

The jc_rmi_data_length item above is the combined length in bytes of the version item, invoke_ins item and the initial_ref item. The application_data_length item is jc_rmi_data_length + 2. The fci_length item is application_data_length + 2.

The response data includes <code>invoke_ins</code>, the instruction byte to use in the method invocation command. It also includes <code>initial_ref</code>, the initial remote object reference descriptor. The <code>initial_ref</code> item corresponds to the remote object designated as the initial reference to the <code>RMIService</code> instance during construction. The <code>initial_ref</code> item can be a <code>normal_ref_response</code> item described in Section 8.3.5.1 or a null representation using a <code>normal_null_response</code> item described in Section 8.3.5.1, if the initial remote reference object is not enabled for remote access. Also, note that if an error occurs during the marshalling of the initial remote reference descriptor, an error response is returned in <code>initial_ref</code> instead using the <code>error_response</code> item format described in Section 8.3.5.3.

Note – Even though the select_response structure shown above uses the C-like "union" notation, the lengths of the alternate representations within the union do not use any padding to normalize their lengths.

The format of the remote_ref_descriptor to be used in this response as well as all subsequent responses - remote_ref_with_class or remote_ref_with_interfaces - is determined by the value of the P2 byte of the SELECT FILE command.

Note — Only the RMIService instance which processes the SELECT FILE command sets (or changes) the format of the remote object reference descriptor based on the value of the P2 byte. Once set or changed, the RMIService instance uses only that format in all JCRMI responses it generates.

8.4.2 INVOKE Command

The Invoke command for a remote method invocation request must have the following format:

The data part of the request command is structured as:

```
invoke_data {
    u2 object_id
    u2 method_id
    param parameters[]
}
```

The object_id is the remote object identifier of the object whose remote method is to be invoked. The method to be invoked is specified by the method_id item, and each parameter is specified by a param structure.

The response format uses the return_response structure as described in Section 8.3.5 "Return Value Encoding" above.

8.5 The RMIService Class

The RMIService class implements the JCRMI protocol and processes the RMI access commands described earlier: SELECT FILE and INVOKE. It performs the function of the transport layer for Java Card RMI commands on the card.

The RMIService object maintains a list of remote objects which have been returned during the current applet selection session. It enforces the following rules for the lifetime of the remote object references:

- A remote reference is valid only when the INVOKE command is processed by the RMIService instance which returned the reference.
- A remote reference is valid with any applet instance in the package of the applet instance which returned it.
- A remote reference is valid as long as at least one applet instance within the same package has been active at all times since the point in time when the remote reference was returned.
- A valid remote object cannot be garbage collected during the lifetime of the remote reference.

In addition, a remote object reference descriptor of an object must only be returned from the card if it is exported (See the class

javacard.framework.service.CardRemoteObject.) Otherwise, an exception is thrown (See the class javacard.framework.service.RMIService.)

8.5.1 setInvokeInstructionByte Method

This method sets the value of invoke_ins described in §8.4.1, which is returned in the response to the SELECT FILE command. The change in the JCRMI protocol only goes into effect the next time this RMIService instance processes the SELECT FILE command. If this method is not called, the default instruction byte value (DEFAULT RMI_INVOKE_INSTRUCTION) is used.

8.5.2 processCommand Method

The processCommand method of the RMIService class is invoked by the applet to process an incoming RMI message. RMIService collaborates with other services by using the common service format (CSF) in the APDU buffer. It processes only the incoming JCRMI APDU commands and produces output as described in the previous sections.

When called with a SELECT FILE command with format described in section §8.4.1, this method builds a response APDU as described in that section.

When called with an INVOKE command with the format described in §8.4.2, this method must call the specified remote method of the identified remote object with the specified parameters. It must catch all exceptions thrown by the remote method. When an exception is caught or the remote method returns, this method must build a response APDU in the format described in §8.4.2.

Prior to invoking the remote method the following errors must be detected and must result in an error response in the format described in §8.3.5.3:

■ The remote object identifier is not valid.

- The remote object identifier has not been returned during the current selection session.
- The method identifier does not match any remote methods in the remote class associated with the identified remote object.
- The length of the INVOKE message is inconsistent with the signature of the remote method.
- There is insufficient space to allocate array parameters for the remote method. The implementation must support at least 8 input parameters of type array.
- There is insufficient space to allocate the array response from the remote method. The implementation must support at least a 133 byte APDU buffer.

In addition to the above, the object access firewall rules must be enforced in a manner similar to that of the invokevirtual instruction (§6.2.8.4) by this method when a remote method is invoked. Only methods of a remote object owned by the context of the currently selected applet may be invoked.

Allocation of Incoming Objects

Since array parameters to remote methods are transmitted by value, array objects need to be allocated on the card when a remote method with array arguments is invoked via the INVOKE command. Global array objects (§6.2.2) must be used for incoming remote method arguments. Global arrays have the following properties:

- They are owned by the JCRE, but they can be freely accessed from all contexts.
- They are temporary objects and cannot be stored in any object.
- They are not subject to transactions

The implementation may choose to maintain the data portion of these global array objects used for remote method parameters in the APDU buffer itself.

API Topics

The topics in this chapter complement the requirements specified in the *Java Card*TM 2.2 Application Programming Interface.

9.1 Resource Use within the API

Unless specified in the *Java Card*TM 2.2 Application Programming Interface, the implementation shall support the invocation of API instance methods, even when the owner of the object instance is not the currently selected applet. In other words, unless specifically called out, the implementation shall not use resources such as transient objects of CLEAR_ON_DESELECT type.

9.2 Exceptions thrown by API Classes

All exception objects thrown by the API implementation shall be temporary JCRE Entry Point Objects. Temporary JCRE Entry Point Objects cannot be stored in class variables, instance variables or array components (See Section 6.2.1).

9.3 Transactions within the API

Unless explicitly called out in the API descriptions, implementation of the Java Card API methods shall not initiate or otherwise alter the state of a transaction in progress.

Unless explicitly called out in the API descriptions, updates to internal implementation state within the API objects must be conditional. In other words, internal state updates must participate in any ongoing transaction.

9.4 The APDU Class

The APDU class encapsulates access to the ISO 7816-4 based I/O across the card serial line. The APDU class is designed to be independent of the underlying I/O transport protocol.

The JCRE may support T=0 or T=1 transport protocols or both.

9.4.1 T=0 Specifics for Outgoing Data Transfers

The setOutgoing and setOutgoingNoChaining methods in the APDU class are used to specify that data needs to be returned to the CAD. These methods return the expected length (Le) value as follows:

```
ISO 7816-4 CASE 1: Not applicable. Assume Case 2
ISO 7816-4 CASE 2: P3 (If P3=0, 256)
ISO 7816-4 CASE 3: Not applicable. Assume Case 4
ISO 7816-4 CASE 4: 256
```

For compatibility with legacy CAD/terminals that do not support block chained mechanisms, the APDU class allows a non-chained transfer mode selection via the setOutgoingNoChaining method. The related behaviors are discussed in the following sections.

9.4.1.1 Constrained Transfers with No Chaining

When the no chaining mode of output transfer is requested by the applet by calling the setOutgoingNoChaining method, the following protocol sequence shall be followed:

When the no chaining mode is used (that is, after the invocation of the setOutgoingNoChaining method), calls to the waitExtension method shall throw an APDUException with reason code ILLEGAL USE.

Notation

Le = CAD expected length.

Lr = Applet response length set via setOutgoingLength method.

<INS> = the protocol byte equal to the incoming header INS byte, which indicates that all data bytes will be transferred next.

<~INS> = the protocol byte that is the complement of the incoming header INS byte, which indicates that 1 data byte will be transferred next.

 $\langle SW1,SW2 \rangle =$ the response status bytes as in ISO7816-4.

ISO 7816-4 CASE 2

Le == Lr

- 1. The card sends Lr bytes of output data using the standard T=0 <INS> or <~INS> procedure byte mechanism.
- 2. The card sends <SW1,SW2> completion status on completion of the Applet.process method.

Lr < Le

- 1. The card sends <0x61,Lr> completion status bytes
- 2. The CAD sends GET RESPONSE command with Le = Lr.
- 3. The card sends Lr bytes of output data using the standard T=0 <INS> or <~INS> procedure byte mechanism.
- 4. The card sends <SW1,SW2> completion status on completion of the Applet.process method.

Lr > Le

- 1. The card sends Le bytes of output data using the standard T=0 <INS> or <~INS> procedure byte mechanism.
- 2. The card sends <0x61,(Lr-Le)> completion status bytes
- 3. The CAD sends GET RESPONSE command with new Le \leftarrow Lr.

- 4. The card sends (new) Le bytes of output data using the standard T=0 <INS> or <~INS> procedure byte mechanism.
- 5. Repeat steps 2-4 as necessary to send the remaining output data bytes (Lr) as required.
- 6. The card sends <SW1,SW2> completion status on completion of the Applet.process method.

ISO 7816-4 CASE 4

In Case 4, Le is determined after the following initial exchange:

- 1. The card sends <0x61,Lr status bytes>
- 2. The CAD sends GET RESPONSE command with Le <= Lr.

The rest of the protocol sequence is identical to CASE 2 described above.

If the applet aborts early and sends less than Le bytes, zeros shall be sent instead to fill out the length of the transfer expected by the CAD.

9.4.1.2 Regular Output Transfers

When the no chaining mode of output transfer is not requested by the applet (that is, the setOutgoing method is used), any ISO-7816-3/4 compliant T=0 protocol transfer sequence may be used.

Note – The waitExtension method may be invoked by the applet at any time. The waitExtension method shall request an additional work waiting time (ISO 7816-3) using the 0x60 procedure byte.

9.4.1.3 Additional T=0 Requirements

At any time, when the T=0 output transfer protocol is in use, and the APDU class is awaiting a GET RESPONSE command from the CAD in reaction to a response status of <0x61, xx> from the card, if the CAD sends in a different command on the same origin logical channel, or a command on a different origin logical channel, the sendBytes or the sendBytesLong methods shall throw an APDUException with reason code NO_TO_GETRESPONSE.

At any time, when the T=0 output transfer protocol is in use, and the APDU class is awaiting a command reissue from the CAD in reaction to a response status of <0x6C, xx> from the card, if the CAD sends in a different command on the same origin

logical channel, or a command on a different origin logical channel, the sendBytes or the sendBytesLong methods shall throw an APDUException with reason code NO_TO_REISSUE.

Calls to sendBytes or sendBytesLong methods after the NO_TO_GETRESPONSE exception or the NO_TO_REISSUE exception has been thrown, shall result in an APDUException with reason code ILLEGAL_USE. If an ISOException is thrown by the applet after the NO_TO_GETRESPONSE exception or the NO_TO_REISSUE exception has been thrown, the JCRE shall discard the response status in its reason code. The JCRE shall restart APDU processing with the newly received command and resume APDU dispatching.

9.4.2 T=1 Specifics for Outgoing Data Transfers

The setOutgoing and setOutgoingNoChaining methods in the APDU class are used to specify that data needs to be returned to the CAD. These methods return the expected length (Le) value as follows:

```
ISO 7816-4 CASE 1: 0
ISO 7816-4 CASE 2: Le
ISO 7816-4 CASE 3: 0
ISO 7816-4 CASE 4: Le
```

Constrained Transfers with No Chaining 9421

When the no chaining mode of output transfer is requested by the applet by calling the setOutgoingNoChaining method, the following protocol specifics shall be followed:

Notation

Le = CAD expected length.

Lr = Applet response length set via setOutgoingLength method.

The transport protocol sequence shall not use block chaining. Specifically, the M-bit (more data bit) shall not be set in the PCB of the I-blocks during the transfers (ISO 7816-3). In other words, the entire outgoing data (Lr bytes) shall be transferred in one I-block.

If the applet aborts early and sends less than Lr bytes, zeros shall be sent instead to fill out the remaining length of the block.

Note — When the no chaining mode is used (i.e. after the invocation of the setOutgoingNoChaining method), calls to the waitExtension method shall throw an APDUException with reason code ILLEGAL_USE.

9.4.2.2 Regular Output Transfers

When the no chaining mode of output transfer is not requested by the applet (i.e. the setOutgoing method is used) any ISO-7816-3/4 compliant T=1 protocol transfer sequence may be used.

Note — The waitExtension method may be invoked by the applet at any time. The waitExtension method shall send an S-block command with WTX request of INF units, which is equivalent to a request of 1 additional work waiting time in T=0 mode. (See ISO 7816-3).

Chain Abortion by the CAD

If the CAD aborts a chained outbound transfer using an S-block ABORT request (see ISO 7816-3), the sendBytes or sendBytesLong method shall throw an APDUException with reason code T1_IFD_ABORT.

Calls to sendBytes or sendBytesLong methods from this point on shall result in an APDUException with reason code ILLEGAL_USE. If an ISOException is thrown by the applet after the T1_IFD_ABORT exception has been thrown, the JCRE shall discard the response status in its reason code. The JCRE shall restart APDU processing with the newly received command, and resume APDU dispatching.

9.4.3 T=1 Specifics for Incoming Data Transfers

9.4.3.1 Incoming Transfers using Chaining

Chain Abortion by the CAD

If the CAD aborts a chained inbound transfer using an S-block ABORT request (see ISO 7816-3), the setIncomingAndReceive or receiveBytes method shall throw an APDUException with reason code T1_IFD_ABORT.

Calls to receiveBytes, sendBytes or sendBytesLong methods from this point on shall result in an APDUException with reason code ILLEGAL_USE. If an ISOException is thrown by the applet after the T1_IFD_ABORT exception has been thrown, the JCRE shall discard the response status in its reason code. The JCRE shall restart APDU processing with the newly received command, and resume APDU dispatching.

9.5 The Security and Crypto Packages

The getInstance method in the following classes return an implementation instance in the context of the calling applet of the requested algorithm:

```
javacard.security.MessageDigest
javacard.security.Signature
javacard.security.RandomData
javacardx.crypto.Cipher
```

An implementation of the JCRE may implement 0 or more of the algorithms listed in the Java Card $^{\text{TM}}$ 2.2 Application Programming Interface. When an algorithm that is not implemented is requested this method shall throw a CryptoException with reason code NO_SUCH_ALGORITHM.

Implementations of the above classes shall extend the corresponding base class and implement all the abstract methods. All data allocation associated with the implementation instance shall be performed at the time of instance construction to ensure that any lack of required resources can be flagged early during the installation of the applet.

Similarly, the buildKey method of the javacard.security.keyBuilder class returns an implementation instance of the requested Key type. The JCRE may implement 0 or more types of keys. When a key type that is not implemented is requested, the method shall throw a CryptoException with reason code NO_SUCH_ALGORITHM.

Implementations of key types shall implement the associated interface. All data allocation associated with the key implementation instance shall be performed at the time of instance construction to ensure that any lack of required resources can be flagged early during the installation of the applet.

The MessageDigest object uses temporary storage for intermediate results when the update() method is invoked. This intermediate state need not be preserved across power up and reset. The object is reset to the state it was in when previously initialized via a call to reset().

The Signature and Cipher objects use temporary storage for intermediate results when the update() method is invoked. This intermediate state need not be preserved across power up and reset. The object is reset to the state it was in when previously initialized via a call to init().

9.6 JCSystem Class

In Java Card 2.2, the getVersion method shall return (short) 0x0202.

Virtual Machine Topics

The topics in this chapter detail virtual machine specifics.

10.1 Resource Failures

A lack of resources condition (such as heap space) which is recoverable shall result in a SystemException with reason code NO_RESOURCE. The factory methods in JCSystem used to create transient arrays throw a SystemException with reason code NO_TRANSIENT_SPACE to indicate lack of transient space.

All other (non-recoverable) virtual machine errors such as stack overflow shall result in a virtual machine error. These conditions shall cause the virtual machine to halt. When such a non-recoverable virtual machine error occurs, an implementation can optionally require the card to be muted or blocked from further use.

10.2 Security Violations

The JCRE throws a java.lang.SecurityException exception when it detects an attempt to illegally access an object belonging to another applet across the firewall boundary. A java.lang.SecurityException exception may optionally be thrown by a Java Card VM implementation to indicate a violation of fundamental language restrictions, such as attempting to invoke a private method in another class.

For security reasons, the JCRE implementation may mute the card instead of throwing the exception object.

Applet Installation and Deletion

Applet installation and deletion on smart cards using Java Card technology is a complex topic. The design of the Java $Card^{\text{TM}}$ 2.2 Application Programming Interface is intended to give JCRE implementers as much freedom as possible in their implementations. However, some basic common specifications are required in order to allow Java Card applets to be installed and deleted without knowing the implementation details of a particular installer or deletion manager.

This specification defines the concepts of an Installer and an Applet Deletion Manager, and specifies minimal requirements in order to achieve interoperability across a wide range of possible Installer implementations.

The Applet Installer is an optional part of the *Java Card*TM *2.2 Runtime Environment (JCRE) Specification*. That is, an implementation of the JCRE does not necessarily need to include a post-issuance Installer. However, if implemented, the installer is required to support the behavior specified in this chapter.

If the implementation of the JCRE includes a post-issuance Installer, then an Applet Deletion Manager which supports the behavior specified in this chapter is also required.

11.1 The Installer

The mechanisms necessary to install an applet on smart cards using Java Card technology are embodied in an on-card component called the *Installer*.

To the CAD the Installer appears to be an applet. It has an AID, and it becomes the currently selected applet when this AID is successfully processed by a SELECT FILE command. Once selected on a logical channel, the Installer behaves in much the same way as any other applet:

- It receives all APDUs dispatched to this logical channel just like any other active applet.
- Its design specification prescribes the various kinds and formats of APDUs that it expects to receive along with the semantics of those commands under various preconditions.
- It processes and responds to all APDUs that it receives. Incorrect APDUs are responded to with an error condition of some kind.
- When another applet is selected on this logical channel(or when the card is reset or when power is removed from the card), the Installer becomes deselected and remains suspended until the next time that it is selected.

11.1.1 Installer Implementation

The Installer need not be implemented as an applet on the card. The requirement is only that the Installer functionality be SELECTable. The corollary to this requirement is that Installer component shall not be able to be invoked on a logical channel on which a non-Installer applet is an active applet instance nor when no applet is active.

Obviously, a JCRE implementer could choose to implement the Installer as an applet. If so, then the Installer might be coded to extend the Applet class and respond to invocations of the select, process, and deselect methods; and, if necessary, the methods of the javacard.framework.Multiselectable interface.

But a JCRE implementer could also implement the Installer in other ways, as long as it provides the SELECTable behavior to the outside world. In this case, the JCRE implementer has the freedom to provide some other mechanism by which APDUs are delivered to the Installer code module.

11.1.2 Installer AID

Because the Installer is SELECTable, it shall have an AID. JCRE implementers are free to choose their own AIDs by which their Installer is selected. Multiple installers may be implemented.

11.1.3 Installer APDUs

The Java Card specification does not specify any APDUs for the Installer. JCRE implementers are entirely free to choose their own APDU commands to direct their Installer in its work.

The model is that the Installer on the card is initiated by an installation program running on the CAD. In order for installation to succeed, this CAD installation program shall be able to:

- Recognize the card.
- SELECT FILE the Installer on the card.
- Coordinate the installation process by sending the appropriate APDUs to the card Installer. These APDUs will include:
 - Authentication information, to ensure that the installation is authorized.
 - The applet code to be loaded into the card's memory.
 - Linkage information to link the applet code with code already on the card.
 - Instance initialization parameter data to be sent to the applet's install method.

The *Java Card™ 2.2 Application Programming Interface* does not specify the details of the CAD installation program nor the APDUs passed between it and the Installer.

11.1.4 CAP File Versions

The Installer shall support the following CAP file versions:

- Version 2.1 as specified in the *Java Card*[™] 2.1.1 *Virtual Machine Specification*.
- Version 2.2 as specified in the *Java Card*TM 2.2 Virtual Machine Specification.

11.1.5 Installer Behavior

JCRE implementers shall also define other behaviors of their Installer, including:

- Whether or not installation can be aborted and how this is done.
- What happens if an exception, reset, or power fail occurs during installation.
- What happens if another applet is selected before the Installer is finished with its work.

The JCRE shall guarantee that an applet will *not* be deemed successfully installed if:

- the applet package as identified by the package AID is already resident on the card.
- the applet package contains an applet with the same Java Card name as that of another applet already resident on the card. The Java Card name of an applet identified by the AID item is described in section 6.5 of the Java Card™ 2.2 Virtual Machine Specification.
- the applet package requires more memory than is available on the card.
- the applet package references a package that is not resident on the card.

- the applet package references another package already resident on the card, but the version of the resident package is not binary compatible with the applet package. For more information on binary compatibility in the Java programming language please see the Java[™] Language Specification. Binary compatibility in Java Card technology is discussed in the Java Card[™] 2.2 Virtual Machine Specification.
- a class in the applet package is found to contain more package visible virtual methods or instance fields than the limitations enumerated in section 2.2.4.3 of the Java Card[™] 2.2 Virtual Machine Specification.
- a reset or power fail occurs while executing the applet's install method and before successful return from the Applet.register method (see Section 3.1).
- the applet's install method throws an exception before successful return from the Applet.register method (see Section 3.1).

When applet installation is unsuccessful, the JCRE shall guarantee that objects created during the execution of the install method, or by the JCRE on its behalf—initialized static arrays—can never be accessed by any applet on the card. In particular, any reference in CLEAR_ON_RESET transient space to an object created during an unsuccessful applet installation must be reset as a null reference.

11.1.6 Installer Privileges

Although an Installer may be implemented as an applet, an Installer will typically require access to features that are not available to "other" applets. For example, depending on the JCRE implementer's implementation, the Installer will need to:

- Read and write directly to memory, bypassing the object system and/or standard security.
- Access objects owned by other applets or by the JCRE.
- Invoke non-entry point methods of the JCRE.
- Be able to invoke the install method of a newly installed applet.

Again, it is up to each JCRE implementer to determine the Installer implementation and supply such features in their JCRE implementations as necessary to support their Installer. JCRE implementers are also responsible for the security of such features, so that they are not available to normal applets.

11.2 The Newly Installed Applet

There is a single interface between the Installer and the applet that is being installed. After the Installer has correctly prepared the applet for execution (performed steps such as loading and linking), the Installer shall invoke the applet's install method. This method is defined in the Applet class.

The precise mechanism by which an applet's <code>install(byte[], short, byte)</code> method is invoked from the Installer is a JCRE implementer-defined implementation detail. However, there shall be a context switch so that any context-related operations performed by the <code>install</code> method (such as creating new objects) are done in the context of the new applet and not in the context of the Installer. The Installer shall also ensure that array objects created in the class initialization (<code><clinit></code>) methods of the applet package are also owned by the context of the new applet.

The Installer shall not invoke the <code>install(byte[], short, byte)</code> method of an applet if another applet from the same package is active on the card. The applet instantiation shall be deemed unsuccessful.

The Installer shall ensure that during the execution of the <code>install()</code> method, the new applet (not the Installer) is the *currently selected applet*. In addition, any <code>CLEAR_ON_DESELECT</code> objects created during the <code>install()</code> method shall be associated with the selection context of the new applet.

The installation of an applet is deemed complete if all steps are completed without failure or an exception being thrown, up to and including successful return from executing the Applet.register method. At that point, the installed applet will be selectable.

The maximum size of the parameter data is 127 bytes. The bArray parameter is a global array (install(byte[] bArray, short bOffset, byte bLength)), and for security reasons is zeroed after the return from the install method, just as the APDU buffer is zeroed on return from an applet's process method.

11.2.1 Installation Parameters

The format of the input data passed to the target applet's install method in the barray parameter is as follows:

```
bArray[offset] = length(Li) of instance AID
bArray[offset+L.offset+Li] = instance AID bytes (5-16 bytes)
bArray[offset+Li+1] = length(Lc) of control info
bArray[offset+Li+2..offset+Li+Lc+1] = control info
bArray[offset+Li+Lc+2] = length(La) of applet data
bArray[offset+Li+Lc+2..offset+Li+Lc+La+1] = applet data
```

Any of the length items: Li, Lc, La may be zero. If length Li is non-zero, the instance AID bytes item is the proposed AID of the applet instance.

The control info item of the parameter data is implementation dependent and is specified by the Installer.

Other than the need for the entire parameter data to not be greater than 127 bytes, the Java Card API does not specify anything about the contents of the applet data item of the global byte array installation parameter. This is fully defined by the applet designer and can be in any format desired. In addition, the applet data portion is intended to be opaque to the Installer.

JCRE implementers should design their Installers so that it is possible for an installation program running in a CAD to specify the applet data delivered to the Installer. The Installer simply forwards this along with the other items in the format defined above to the target applet's <code>install</code> method in the <code>bArray</code> parameter. A typical implementation might define a JCRE implementer-proprietary APDU command that has the semantics "call the applet's <code>install</code> method passing the contents of the accompanying <code>applet data</code>."

11.3 The Applet Deletion Manager

The mechanisms necessary to delete an applet on smart cards using Java Card technology are embodied in an on-card component called the *Applet Deletion Manager*.

To the CAD, the Applet Deletion Manager appears to be an applet, and may be one and the same as the Applet Installer. It has an AID, and it becomes the currently selected applet instance when this AID is successfully processed by a SELECT FILE command. Once selected on a logical channel, the Applet Deletion Manager behaves in much the same way as any other applet:

- It receives all APDUs dispatched to this logical channel, just like any other active applet.
- Its design specification prescribes the various kinds and formats of APDUs that it expects to receive, along with the semantics of those commands under various preconditions.
- It processes and responds to all APDUs that it receives. Incorrect APDUs are responded to with an error condition of some kind.
- When another applet is selected on this logical channel (or when the card is reset or when power is removed from the card), the Applet Deletion Manager becomes deselected and remains suspended until the next time that it is selected.

11.3.1 Applet Deletion Manager Implementation

The Applet Deletion Manager need not be implemented as an applet on the card. The requirement is only that the Applet Deletion Manager functionality be SELECTable. The corollary to this requirement is that Applet Deletion Manager component shall not be able to be invoked on a logical channel where a non-Applet Deletion Manager applet is an active applet instance, nor when no applet is active.

Obviously, a JCRE implementer could choose to implement the Applet Deletion Manager as an applet. If so, then the Applet Deletion Manager might be coded to extend the Applet class and to respond to invocations of the select, process, and deselect methods, and if necessary the methods of the javacard.framework.Multiselectable interface.

But a JCRE implementer could also implement the Applet Deletion Manager in other ways, as long as it provides the SELECTable behavior to the outside world. In this case, the JCRE implementer has the freedom to provide some other mechanism by which APDUs are delivered to the Applet Deletion Manager code module.

11.3.2 Applet Deletion Manager AID

Because the Applet Deletion Manager is SELECTable, it shall have an AID which may be the same as that of the Applet Installer. JCRE implementers are free to choose their own AIDs by which their Applet Deletion Manager is selected. Multiple Applet Deletion Managers may be implemented.

11.3.3 Applet Deletion Manager APDUs

The Java Card API does not specify any APDUs for the Applet Deletion Manager. JCRE implementers are entirely free to choose their own APDU commands to direct their Applet Deletion Manager in its work.

The model is that the Applet Deletion Manager on the card is initiated by an applet deletion program running on the CAD. In order for applet deletion to succeed, this CAD applet deletion program shall be able to:

- Recognize the card.
- SELECT FILE the Applet Deletion Manager on the card.
- Coordinate the applet deletion process by sending the appropriate APDUs to the card Applet Deletion Manager. These APDUs will include:
 - Authentication information, to ensure that the applet deletion is authorized.
 - Identify the applet(s) code or instance to be deleted from the card's memory.

The Java Card™ 2.2 Application Programming Interface does not specify the details of the CAD applet deletion program nor the APDUs passed between it and the Applet Deletion Manager.

11.3.4 Applet Deletion Manager Behavior

JCRE implementers shall also define other behaviors of their Applet Deletion Manager, including:

- Whether or not applet deletion can be aborted and how this is done.
- What happens if an exception, reset, or power fail occurs during applet deletion.
- What happens if another applet is selected before the Applet Deletion Manager is finished with its work.

There are three categories of applet deletion requirements on the card:

- Applet instance deletion involves the removal of the applet object instance and the objects owned by the applet instance and associated JCRE structures.
- Applet/library package deletion involves the removal of all the card resident components of the CAP file, including code and any associated JCRE management structures.
- Deletion of the applet package and the contained applet instances involves the removal of the card-resident code and JCRE structures associated with the applet package, and all the applet instances and objects in the context of the package and associated JCRE structures.

11.3.4.1 Applet Instance Deletion

The JCRE shall guarantee that applet instance deletion will not be attempted and thereby deemed unsuccessful if:

- any object owned by the applet instance is referenced from an object owned by another applet instance on the card, or
- any object owned by the applet instance is referenced from a static field on any package on the card, or
- the applet is active on the card.

Otherwise, the JCRE shall delete the applet instance.

Note – The applet deletion attempt may fail due to security considerations or resource limitations.

The applet instance deletion operation must be atomic. If a reset or power fail occurs during the deletion process, it must result in either an unsuccessful applet instance deletion or a successfully completed applet instance deletion before any applet is selected on the card.

Following an unsuccessful applet instance deletion, the applet instance shall be selectable, and all objects owned by the applet shall remain unchanged. In other words, the functionality of all applet instances on the card remains the same as prior to the unsuccessful attempt.

Following a successful applet instance deletion, it shall not be possible to select that applet, and no object owned by the applet can be accessed by any applet currently on the card or by a new applet created in the future.

The resources used by the applet instance may be recovered for re-use.

The AID of the deleted applet instance may be re-assigned to a new applet instance.

Multiple Applet Instance Deletion

The JCRE shall guarantee that multiple applet instance deletion will not be attempted, and thereby deemed unsuccessful if:

- an object owned by any of the applet instances being deleted is referenced from an object owned by an applet instance on the card which is not being deleted, or
- an object owned by any of the applet instances being deleted is referenced from a static field on any package on the card, or
- an applet being deleted is active on the card.

Otherwise, the JCRE shall delete the applet instances.

Note – The applet deletion attempt may fail due to security considerations or resource limitations.

The multiple applet instance deletion operation must be atomic. If a reset or power fail occurs during the deletion process, it must result in either an unsuccessful multiple applet instance deletion or a successfully completed multiple applet instance deletion before any applet is selected on the card.

Following an unsuccessful multiple applet instance deletion, all applet instances shall be selectable, and all objects owned by the applets shall remain unchanged. In other words, the functionality of all applet instances on the card remains the same as prior to the unsuccessful attempt.

Following a successful multiple applet instance deletion, it shall not be possible to select any of the deleted applets, and no object owned by the deleted applets can be accessed by any applet currently on the card or by a new applet created in the future.

The resources used by the applet instances may be recovered for re-use.

The AID of the deleted applet instances may be re-assigned to new applet instances.

11.3.4.2 Applet/Library Package deletion

The JCRE shall guarantee that applet/library package deletion will not be attempted and thereby deemed unsuccessful if:

- a reachable (non-garbage) instance of a class belonging to the package being deleted exists on the card, or
- another package on the card depends on this package (as expressed in the CAP file's import component).

Otherwise, if the applet/library package is resident in mutable memory, then the JCRE shall delete the applet/library package.

Note – The package deletion attempt may fail due to security considerations or resource limitations.

The applet/library package deletion operation must be atomic. If a reset or power fail occurs during the deletion process, it must result in either an unsuccessful applet/library package deletion or a successfully completed applet/library package deletion before any applet is selected on the card.

Following an unsuccessful applet/library package deletion, any object or package that depends on the package continues to function unaffected. In other words, the functionality of all applets on the card remains the same as prior to the unsuccessful attempt.

Following a successful applet/library package deletion, it shall not be possible to install another package which depends on the deleted package. Additionally, it shall be possible to re-install the same package (with exactly the same package AID) or an upgraded version of the deleted package onto the card.

The resources used by the applet/library package may be recovered for re-use.

11.3.4.3 Deletion of Applet Package and Contained Instances

The JCRE shall guarantee that deletion of the applet package and contained instances will not be attempted and thereby deemed unsuccessful if:

- another package on the card depends on this package (as expressed in the CAP file's import component), or
- an object owned by any of the applet instances being deleted is referenced from an object owned by an applet instance on the card which is not being deleted, or
- an object owned by any of the applet instances being deleted is referenced from a static field of a package which is not being deleted, or
- an applet being deleted is active on the card.

Otherwise, if the applet package is resident in mutable memory, then the JCRE shall delete the applet package and contained instances.

Note – The applet and package deletion attempt may fail due to security considerations or resource limitations.

The deletion of applet package and contained instances operation must be atomic. If a reset or power fail occurs during the deletion process, it must result in either an unsuccessful deletion of the applet package and contained instances or a successfully completed deletion of the applet package and contained instances before any applet is selected on the card.

Following an unsuccessful deletion of the applet package and contained instances, any object or package that depends on the package continues to function unaffected. In other words, the functionality of all applets on the card remains the same as prior to the unsuccessful attempt.

Following a successful deletion of the applet package and contained instances, it shall not be possible to install another package which depends on the deleted package. Additionally, it shall be possible to re-install the same package (with exactly the same package AID) or an upgraded version of the deleted package onto the card.

The resources used by the applet package may be recovered for re-use.

Following a successful deletion of the applet package and contained instances, it shall not be possible to select any of the deleted applets, and no object owned by the deleted applets can be accessed by any applet currently on the card or by a new applet created in the future.

The resources used by the applet instances may be recovered for re-use.

The AID for the deleted applet instances may be re-assigned to new applet instances.

11.3.5 Applet Deletion Manager Privileges

Although an Applet Deletion Manager may be implemented as an applet, an Applet Deletion Manager will typically require access to features that are not available to "other" applets. For example, depending on the JCRE implementer's implementation, the Applet Deletion Manager will need to:

- Read and write directly to memory, bypassing the object system and/or standard security.
- Access objects owned by other applets or by the JCRE.
- Invoke non-entry point methods of the JCRE.

Again, it is up to each JCRE implementer to determine the Applet Deletion Manager implementation and supply such features in their JCRE implementations as necessary to support their Applet Deletion Manager. JCRE implementers are also responsible for the security of such features, so that they are not available to normal applets.

API Constants

Some of the API classes don't have values specified for their constants in the Java $Card^{\text{TM}}$ 2.2 Application Programming Interface. If constant values are not specified consistently by implementers of this Java $Card^{\text{TM}}$ 2.2 Runtime Environment (JCRE) Specification, industry-wide interoperability is impossible. This chapter provides the required values for constants that are not specified in the Java $Card^{\text{TM}}$ 2.2 Application Programming Interface.

Class javacard.framework.APDU

```
public static final byte PROTOCOL_TYPE_MASK = (byte)0x0F;
public static final byte PROTOCOL_TO = 0;
public static final byte PROTOCOL_T1 = 1;
public static final byte PROTOCOL MEDIA MASK = (byte)0xF0;
public static final byte PROTOCOL_MEDIA_DEFAULT = (byte)0x00;
public static final byte PROTOCOL_MEDIA_CONTACTLESS_TYPE_A = (byte)0x80;
public static final byte PROTOCOL_MEDIA_CONTACTLESS_TYPE_B = (byte)0x90;
public static final byte PROTOCOL_MEDIA_USB = (byte)0xA0;
public static final byte STATE_INITIAL = 0;
public static final byte STATE_PARTIAL_INCOMING = 1;
public static final byte STATE_FULL_INCOMING = 2;
public static final byte STATE_OUTGOING = 3;
public static final byte STATE_OUTGOING_LENGTH_KNOWN = 4;
public static final byte STATE_PARTIAL_OUTGOING = 5;
public static final byte STATE_FULL_OUTGOING = 6;
public static final byte STATE_ERROR_NO_TO_GETRESPONSE = (byte)-1;
public static final byte STATE_ERROR_T1_IFD_ABORT = (byte)-2;
public static final byte STATE_ERROR_IO = (byte) -3;
public static final byte STATE ERROR NO TO REISSUE = (byte) -4;
```

Class javacard.framework.APDUException

```
public static final short ILLEGAL_USE = 1;
public static final short BUFFER_BOUNDS = 2;
```

```
public static final short BAD_LENGTH = 3;
public static final short IO_ERROR = 4;
public static final short NO_TO_GETRESPONSE = 0xAA;
public static final short T1_IFD_ABORT = 0xAB;
public static final short NO TO REISSUE = 0xAC;
```

Interface javacard.framework.ISO7816

```
public final static short SW NO ERROR = (short)0x9000;
public final static short SW_BYTES_REMAINING_00 = 0x6100;
public final static short SW_WARNING_STATE_UNCHANGED = 0x6200;
public final static short SW WRONG LENGTH = 0x6700;
public final static short SW_LOGICAL_CHANNEL_NOT_SUPPORTED = 0x6881;
public final static short SW_SECURE_MESSAGING_NOT_SUPPORTED = 0x6882;
public final static short SW SECURITY STATUS NOT SATISFIED = 0x6982;
public final static short SW_FILE_INVALID = 0x6983;
public final static short SW_DATA_INVALID = 0x6984;
public final static short SW_CONDITIONS_NOT_SATISFIED = 0x6985;
public final static short SW_COMMAND_NOT_ALLOWED = 0x6986;
public final static short SW_APPLET_SELECT_FAILED = 0x6999;
public final static short SW_WRONG_DATA = 0x6A80;
public final static short SW_FUNC_NOT_SUPPORTED = 0x6A81;
public final static short SW_FILE_NOT_FOUND = 0x6A82;
public final static short SW RECORD NOT FOUND = 0x6A83;
public final static short SW_INCORRECT_P1P2 = 0x6A86;
public final static short SW_WRONG_P1P2 = 0x6B00;
public final static short SW_CORRECT_LENGTH_00 = 0x6C00;
public final static short SW_INS_NOT_SUPPORTED = 0x6D00;
public final static short SW_CLA_NOT_SUPPORTED = 0x6E00;
public final static short SW_UNKNOWN = 0x6F00;
public static final short SW_FILE_FULL = 0x6A84;
public final static byte OFFSET_CLA = 0;
public final static byte OFFSET_INS = 1;
public final static byte OFFSET_P1 = 2;
public final static byte OFFSET_P2 = 3;
public final static byte OFFSET LC = 4;
public final static byte OFFSET_CDATA= 5;
public final static byte CLA_ISO7816 = 0x00;
public final static byte INS_SELECT = (byte) 0xA4;
public final static byte INS_EXTERNAL_AUTHENTICATE = (byte) 0x82;
```

Class javacard.framework.JCSystem

```
public static final byte NOT_A_TRANSIENT_OBJECT = 0;
public static final byte CLEAR_ON_RESET = 1;
public static final byte CLEAR_ON_DESELECT = 2;
public static final byte MEMORY TYPE PERSISTENT = 0;
```

```
public static final byte MEMORY_TYPE_TRANSIENT_RESET = 1;
public static final byte MEMORY_TYPE_TRANSIENT_DESELECT = 2;
```

Class javacard.framework.PINException

```
public static final short ILLEGAL_VALUE = 1;
```

Class javacard.framework.SystemException

```
public static final short ILLEGAL_VALUE = 1;
public static final short NO_TRANSIENT_SPACE = 2;
public static final short ILLEGAL_TRANSIENT = 3;
public static final short ILLEGAL_AID = 4;
public static final short NO_RESOURCE = 5;
public static final short ILLEGAL_USE = 6;
```

Class javacard.framework.TransactionException

```
public static final short IN_PROGRESS = 1;
public static final short NOT_IN_PROGRESS = 2;
public static final short BUFFER_FULL = 3;
public static final short INTERNAL_FAILURE = 4;
```

Class javacard.framework.service.Dispatcher

```
public static final byte PROCESS_NONE = (byte)0;
public static final byte PROCESS_INPUT_DATA = (byte)1;
public static final byte PROCESS_COMMAND= (byte)2;
public static final byte PROCESS_OUTPUT_DATA = (byte)3;
```

Class javacard.framework.service.RMIService

```
public static final byte DEFAULT_RMI_INVOKE_INSTRUCTION = 0x38;
```

Class javacard.framework.service.ServiceException

```
public static final short ILLEGAL_PARAM = 1;
public static final short DISPATCH_TABLE_FULL = 2;
public static final short COMMAND_DATA_TOO_LONG = 3;
public static final short CANNOT_ACCESS_IN_COMMAND = 4;
public static final short CANNOT_ACCESS_OUT_COMMAND = 5;
public static final short COMMAND_IS_FINISHED = 6;
public static final short REMOTE_OBJECT_NOT_EXPORTED = 7;
```

Class javacard.security.Checksum

```
public static final byte ALG_ISO3309_CRC16 = 1;
public static final byte ALG_ISO3309_CRC32 = 2;
```

Class javacard.security.CryptoException

```
public static final short ILLEGAL_VALUE = 1;
public static final short UNINITIALIZED_KEY = 2;
public static final short NO_SUCH_ALGORITHM = 3;
public static final short INVALID_INIT = 4;
public static final short ILLEGAL_USE = 5;
```

Class javacard.security.KeyAgreement

```
public static final byte ALG_EC_SVDP_DH = 1;
public static final byte ALG_EC_SVDP_DHC = 2;
```

Class javacard.security.KeyBuilder

```
public static final byte TYPE_DES_TRANSIENT_RESET = 1;
public static final byte TYPE_DES_TRANSIENT_DESELECT = 2;
public static final byte TYPE_DES = 3;
public static final byte TYPE_RSA_PUBLIC = 4;
public static final byte TYPE_RSA_PRIVATE = 5;
public static final byte TYPE_RSA_CRT_PRIVATE = 6;
public static final byte TYPE_DSA_PUBLIC = 7;
public static final byte TYPE_DSA_PRIVATE = 8;
public static final byte TYPE_EC_F2M_PUBLIC = 9;
public static final byte TYPE_EC_F2M_PRIVATE = 10;
public static final byte TYPE_EC_FP_PUBLIC = 11;
public static final byte TYPE_EC_FP_PRIVATE = 12;
public static final byte TYPE_AES_TRANSIENT_RESET = 13;
public static final byte TYPE_AES_TRANSIENT_DESELECT = 14;
public static final byte TYPE_AES = 15;
public static final short LENGTH_DES = 64;
public static final short LENGTH DES3 2KEY = 128;
public static final short LENGTH_DES3_3KEY = 192;
public static final short LENGTH_RSA_512 = 512;
public static final short LENGTH RSA 736 = 736;
public static final short LENGTH_RSA_768 = 768;
public static final short LENGTH_RSA_896 = 896;
public static final short LENGTH RSA 1024 = 1024;
public static final short LENGTH_RSA_1280 = 1280;
public static final short LENGTH_RSA_1536 = 1536;
public static final short LENGTH_RSA_1984 = 1984;
```

```
public static final short LENGTH_RSA_2048 = 2048;
public static final short LENGTH_DSA_512 = 512;
public static final short LENGTH_DSA_768 = 768;
public static final short LENGTH_DSA_1024 = 1024;
public static final short LENGTH_EC_FP_112 = 112;
public static final short LENGTH_EC_FP_113 = 113;
public static final short LENGTH_EC_FP_128 = 128;
public static final short LENGTH_EC_FP_128 = 128;
public static final short LENGTH_EC_FP_160 = 160;
public static final short LENGTH_EC_FP_163 = 163;
public static final short LENGTH_EC_FP_192 = 192;
public static final short LENGTH_EC_FP_193 = 193;
public static final short LENGTH_AES_128 = 128;
public static final short LENGTH_AES_128 = 128;
public static final short LENGTH_AES_192 = 192;
public static final short LENGTH_AES_192 = 192;
public static final short LENGTH_AES_192 = 192;
```

Class javacard.security.KeyPair

```
public static final byte ALG_RSA = 1;
public static final byte ALG_RSA_CRT = 2;
public static final byte ALG_DSA = 3;
public static final byte ALG_EC_F2M = 4;
public static final byte ALG_EC_FP = 5;
```

Class javacard.security.MessageDigest

```
public static final byte ALG_SHA = 1;
public static final byte ALG_MD5 = 2;
public static final byte ALG_RIPEMD160 = 3;
```

Class javacard.security.RandomData

```
public static final byte ALG_PSEUDO_RANDOM = 1;
public static final byte ALG_SECURE_RANDOM = 2;
```

Class javacard.security.Signature

```
public static final byte ALG_DES_MAC4_NOPAD = 1;
public static final byte ALG_DES_MAC8_NOPAD = 2;
public static final byte ALG_DES_MAC4_ISO9797_M1 = 3;
public static final byte ALG_DES_MAC8_ISO9797_M1 = 4;
public static final byte ALG_DES_MAC4_ISO9797_M2 = 5;
public static final byte ALG_DES_MAC8_ISO9797_M2 = 6;
public static final byte ALG_DES_MAC4_PKCS5 = 7;
public static final byte ALG_DES_MAC8_PKCS5 = 8;
```

```
public static final byte ALG_RSA_SHA_ISO9796 = 9;
public static final byte ALG_RSA_SHA_PKCS1 = 10;
public static final byte ALG_RSA_MD5_PKCS1 = 11;
public static final byte ALG_RSA_RIPEMD160_ISO9796 = 12;
public static final byte ALG RSA RIPEMD160 PKCS1 = 13;
public static final byte ALG_DSA_SHA = 14;
public static final byte ALG_RSA_SHA_RFC2409 = 15;
public static final byte ALG RSA MD5 RFC2409 = 16;
public static final byte ALG_ECDSA_SHA = 17;
public static final byte ALG_AES_MAC_128_NOPAD = 18;
public static final byte ALG DES MAC4 ISO9797 1 M2 ALG3 = 19;
public static final byte ALG_DES_MAC8_ISO9797_1_M2_ALG3 = 20;
public static final byte ALG_RSA_SHA_PKCS1_PSS = 21;
public static final byte ALG_RSA_MD5_PKCS1_PSS = 22;
public static final byte ALG_RSA_RIPEMD160_PKCS1_PSS = 23;
public static final byte MODE_SIGN = 1;
public static final byte MODE_VERIFY = 2;
```

Class javacardx.crypto.Cipher

```
public static final byte ALG_DES_CBC_NOPAD = 1;
public static final byte ALG_DES_CBC_ISO9797_M1 = 2;
public static final byte ALG_DES_CBC_ISO9797_M2 = 3;
public static final byte ALG_DES_CBC_PKCS5 = 4;
public static final byte ALG_DES_ECB_NOPAD = 5;
public static final byte ALG_DES_ECB_ISO9797_M1 = 6;
public static final byte ALG_DES_ECB_ISO9797_M2 = 7;
public static final byte ALG_DES_ECB_PKCS5 = 8;
public static final byte ALG_RSA_ISO14888 = 9;
public static final byte ALG_RSA_PKCS1 = 10;
public static final byte ALG_RSA_ISO9796 = 11;
public static final byte ALG_RSA_NOPAD = 12;
public static final byte ALG_AES_BLOCK_128_CBC_NOPAD = 13;
public static final byte ALG_AES_BLOCK_128_ECB_NOPAD = 14;
public static final byte ALG_RSA_PKCS1_OAEP = 15;
public static final byte MODE DECRYPT = 1;
public static final byte MODE_ENCRYPT = 2;
```

Glossary

active applet instance—an applet instance that is selected on at least one of the logical channels.

AID (application identifier)—defined by ISO 7816, a string used to uniquely identify card applications and certain types of files in card file systems. An AID consists of two distinct pieces: a 5-byte RID (resource identifier) and a 0 to 11-byte PIX (proprietary identifier extension). The RID is a resource identifier assigned to companies by ISO. The PIX identifiers are assigned by companies.

There is a unique AID for each package and a unique AID for each applet in the package. The package AID and the default AID for each applet defined in the package are specified in the CAP file. They are supplied to the converter when the CAP file is generated.

APDU—an acronym for Application Protocol Data Unit as defined in ISO 7816-4.

API—an acronym for Application Programming Interface. The API defines calling conventions by which an application program accesses the operating system and other services.

applet—within the context of this document means a Java Card Applet, which is the basic unit of selection, context, functionality, and security in Java Card technology.

applet developer—refers to a person creating an applet using Java Card technology.

applet execution context—context of a package that contains currently active applet.

applet firewall—the mechanism that prevents unauthorized accesses to objects in contexts other than currently active context.

applet package—see library package.

assigned logical channel—the logical channel on which the applet instance is either the active applet instance or will become the active applet instance.

atomic operation—an operation that either completes in its entirety or no part of the operation completes at all.

atomicity—refers to whether a particular operation is atomic. Atomicity of data update guarantee that data are not corrupted in case of power loss or card removal.

ATR—an acronym for Answer to Reset. An ATR is a string of bytes sent by the Java Card after a reset condition.

basic logical channel—logical channel 0, the only channel that is active at card reset. This channel is permanent and can never be closed.

big-endian—a technique of storing multibyte data where the high-order bytes come first. For example, given an 8-bit data item stored in big-endian order, the first bit read is considered the high bit.

binary compatibility—in a Java Card system, a change to a type in a Java package results in a new CAP file. A new CAP file is binary compatible with (equivalently, does not break compatibility with) a preexisting CAP file if another CAP file converted using the export file of the preexisting CAP file can link with the new CAP file without errors.

bytecode—machine-independent code generated by the Java compiler and executed by the Java interpreter.

CAD—an acronym for Card Acceptance Device. The CAD is the device in which the card is inserted.

CAP file—the CAP file is produced by the Converter and is the standard file format for the binary compatibility of the Java Card platform. A CAP file contains an executable binary representation of the classes of a Java package. The CAP file also contains the CAP file components (see also **CAP file component**). The CAP files produced by the converter are contained in JAR files.

CAP file component—a Java Card CAP file consists of a set of components which represent a Java package. Each component describes a set of elements in the Java package, or an aspect of the CAP file. A complete CAP file must contain all of the required components: Header, Directory, Import, Constant Pool, Method, Static Field, and Reference Location

These components are optional: the Applet, Export, and Debug. The Applet component is included only if one or more Applets are defined in the package. The Export component is included only if classes in other packages may import elements in the package defined. The Debug component is optional. It contains all of the data necessary for debugging a package.

card session—a card session begins with the insertion of the card into the CAD. The card is powered up, and exchanges streams of APDUs with the CAD. The card session ends when the card is removed from the CAD.

cast—the explicit conversion from one data type to another.

constant pool—the constant pool contains variable-length structures representing various string constants, class names, field names and other constants referred to within the CAP file and the ExportFile structure. Each of the constant pool entries, including entry zero, is a variable-length structure whose format is indicated by its first tag byte. There are no ordering constraints on entries in the constant pool entries. One constant pool is associated with each package.

There are differences between the Java language constant pool and the Java Card constant pool. For example, in the Java constant pool there is one constant type for method references, while in the Java Card constant pool there are three constant types for method references. The additional information provided by a constant type in Java Card technologies simplifies resolution of references.

context—protected object space associated with each applet package and JCRE. All objects owned by an applet belong to context of the applet's package.

context switch—a change from one currently active context to another. For example, a context switch is caused by an attempt to access an object that belongs to an applet instance that resides in a different package. The result of a context switch is a new currently active context.

Converter—a piece of software that preprocesses all of the Java class files that make up a package, and converts the package to a CAP file. The Converter also produces an export file.

currently active context—when an object instance method is invoked, an owning context of this object becomes currently active context.

currently selected applet—the JCRE keeps track of the currently selected Java Card applet. Upon receiving a SELECT FILE command with this applet's AID, the JCRE makes this applet the currently selected applet. The JCRE sends all APDU commands to the currently selected applet.

custom CAP file component—a new component added to the CAP file. The new component must must conform to the general component format. Otherwise, it will be silently ignored by the JCVM. The identifiers associated with the new component are recorded in the custom_component item of the CAP file's Directory component.

default applet—an applet that is selected by default on a logical channel when it is opened. If an applet is designated the default applet on a particular logical channel on the Java Card, it will become the active applet by default when that logical channel is opened via the basic channel.

EEPROM—an acronym for Electrically Erasable, Programmable Read Only Memory.

Export file—the Export file is produced by the Converter and represents the fields and methods of a package which can be imported by classes in other packages.

externally visible—in Java Card, "externally visible from a package" refers to any classes, interfaces, their constructors, methods and fields that can be accessed from another package according to the Java Language semantics, as defined by the JavaTM Language Specification, and Java Card package access control restrictions (see the JavaTM Language Specification, section 2.2.1.1).

Externally visible items may be represented in an export file. For a library package, all externally visible items are represented in an export file. For an applet package, only those externally visible items which are part of a shareable interface are represented in an export file.

finalization—the process by which a Java VM allows an unreferenced object instance to release non-memory resources (e.g. close/open files) prior to reclaiming the object's memory. Finalization is only performed on an object when that object is ready to be garbage collected (i.e. there are no references to the object).

Finalization is not supported by the Java Card virtual machine. finalize() will not be called automatically by the Java Card virtual machine.

firewall—see applet firewall.

flash memory—a type of persistent mutable memory. It is more efficient in space and power that EPROM. Flash memory can be read bit-by-bit but can be updated only as a block. Thus, flash memory is typically used for storing additional programs or large chunks of data that are updated as a whole.

framework—the set of classes that implement the API. This includes core and extension packages. Responsibilities include applet selection, sending APDU bytes, and managing atomicity.

garbage collection—the process by which dynamically allocated storage is automatically reclaimed during the execution of a program.

heap—a common pool of free memory usable by a program. A part of the computer's memory used for dynamic memory allocation, in which blocks of memory are used in an arbitrary order. The Java Card virtual machine's heap is not required to be garbage collected. Objects allocated from the heap will not necessarily be reclaimed.

installer—the on-card mechanism to download and install CAP files. The installer receives executable binary from the off-card installation program, writes the binary into the smart card memory, links it with the other classes on the card, and creates and initializes any data structures used internally by the Java Card Runtime Environment.

installation program—the off-card mechanism that employs a card acceptance device (CAD) to transmit the executable binary in a CAP file to the installer running on the card.

instance variables—are also known as non-static fields.

instantiation—in object-oriented programming, means to produce a particular object from its class template. This involves allocation of a data structure with the types specified by the template, and initialization of instance variables with either default values or those provided by the class's constructor function.

instruction—a statement that indicates an operation for the computer to perform and any data to be used in performing the operation. An instruction can be in machine language or a programming language.

internally visible—items which are not externally visible. These items are not described in a package's export file, but some such items use private tokens to represent internal references. See also **externally visible**.

JAR file—a file format used for aggregating many files into one.

Java Card Remote Method Invocation (JCRMI)—a subset of the Java Remote Method Invocation (RMI) system. It provides a mechanism for a client application running on the CAD platform to invoke a method on a remote object on the card.

Java Card Runtime Environment (JCRE)—consists of the Java Card Virtual Machine, the framework, and the associated native methods.

Java Card Virtual Machine (JCVM)—a subset of the Java Virtual Machine which is designed to be run on smart cards and other resource-constrained devices. The JCVM acts an engine that loads Java class files and executes them with a particular set of semantics.

JCRE entry point objects—objects owned by the JCRE context that contain entry point methods. These methods can be invoked from any context and allow non-privileged users (applets) to request privileged JCRE system services. JCRE entry point objects can be either temporary or permanent:

- temporary—references to temporary JCRE entry point objects cannot be stored in class variables, instance variables or array components. The JCRE detects and restricts attempts to store references to these objects as part of the firewall functionality to prevent unauthorized re-use. Examples of these objects are APDU objects and all JCRE-owned exception objects.
- **permanent**—references to permanent JCRE entry point objects can be stored and freely re-used. Examples of these objects are JCRE-owned AID instances.

JDK—is an acronym for Java Development Kit. The JDK is a Sun Microsystems, Inc. product that provides the environment required for software development in the Java programming language. The JDK is available for a variety of platforms, for example Sun Solaris and Microsoft Windows.

library package—a library package is a Java package that does not contain any non-abstract classes which extend the class javacard.framework.Applet. An applet package contains one or more non-abstract classes which extend the javacard.framework.Applet class.

local variable—a data item known within a block, but inaccessible to code outside the block. For example, any variable defined within a method is a local variable and can't be used outside the method.

logical channel—a logical channel, as seen at the card edge, works as a logical link to an application on the card. A logical channel establishes a communications session between a card applet and the terminal. Commands issued on a specific logical channel are forwarded to the active applet on that logical channel. For more information, see the *ISO 7816 Specification, Part 4.* (http://www.iso.org).

MAC—an acronym for Message Authentication Code. MAC is an encryption of data for security purposes.

mask production (masking)—refers to embedding the Java Card virtual machine, runtime environment, and applets in the read-only memory of a smart card during manufacture.

method—the name given to a procedure or routine, associated with one or more classes, in object-oriented languages.

multiselectable applets—implements the

javacard.framework.MultiSelectable interface. Multiselectable applets can be selected on multiple logical channels at the same time. They can also accept other applets belonging to the same package being selected simultaneously.

multiselected applet—an applet instance that is selected (that is, the active applet instance) on more than one logical channel simultaneously.

namespace—a set of names in which all names are unique.

native method—a method which is not implemented in the Java programming language, but rather, in another language. The CAP file format does not support native methods.

object-oriented—a programming methodology based on the concept of an *object*, which is a data structure encapsulated with a set of routines, called *methods*, which operate on the data.

object owner—the applet instance within the currently active context when the object is instantiated. An object can be owned by an applet instance, or by the JCRE.

objects—in object-oriented programming, are unique instances of a data structure defined according to the template provided by its class. Each object has its own values for the variables belonging to its class and can respond to the messages (methods) defined by its class.

origin logical channel—the logical channel on which an APDU command is issued.

owning context—the context in which an object is instantiated or created.

package—a namespace within the Java programming language and can have classes and interfaces.

persistent object—persistent objects and their values persist from one CAD session to the next, indefinitely. Objects are persistent by default. Persistent object values are updated atomically using transactions. The term persistent does not mean there is an object-oriented database on the card or that objects are serialized/deserialized, just that the objects are not lost when the card loses power.

PIX—see AID.

RAM (random access memory)—used as temporary working space for storing and modifying data. RAM is non persistent memory; that is, the information content is not preserved when power is removed from the memory cell. RAM can be accessed an unlimited number of times and none of the restrictions of EEPROM apply.

reference implementation—a fully functional and compatible implementation of a given technology. It enables developers to build prototypes of applications based on the technology.

remote interface—an interface which extends, directly or indirectly, the interface java.rmi.Remote.

Each method declaration in the remote interface or its super-interfaces includes the exception java.rmi.RemoteException (or one of its superclasses) in its throws clause.

In a remote method declaration, if a remote object is declared as a return type, it is declared as the remote interface, not the implementation class of that interface.

In addition, JCRMI imposes additional constraints on the definition of remote methods. These constraints are as a result of the Java Card language subset and other feature limitations.

remote methods—the methods of a remote interface.

remote object—an object whose remote methods can be invoked remotely from the CAD client. A remote object is described by one or more remote interfaces.

RFU—acronym for "Reserved for Future Use".

RID—see AID.

RMI—an acronym for Remote Method Invocation. RMI is a mechanism for invoking instance methods on objects located on remote virtual machines (i.e. a virtual machine other than that of the invoker).

ROM (read-only memory)—used for storing the fixed program of the card. No power is needed to hold data in this kind of memory. It cannot be written to after the card is manufactured. A smart card's ROM contains operating system routines as well as permanent data and user applications. Writing a binary image to the ROM is called masking. It occurs during the chip manufacturing process.

runtime environment—see JCRE.

shareable interface—defines a set of shared interface methods. These interface methods can be invoked from an applet in one context when the object implementing them is owned by an applet in another context.

shareable interface object (SIO)—an object that implements the shareable interface.

smart card—a card which stores and processes information through the electronic circuits embedded in silicon in the substrate of its body. Unlike magnetic stripe cards, smart cards carry both processing power and information. They do not require access to remote databases at the time of a transaction.

terminal—a Card Acceptance Device that is typically a computer in its own right and can integrate a card reader as one of its components. In addition to being a smart card reader, a terminal can process data exchanged between itself and the smart card.

thread—the basic unit of program execution. A process can have several threads running concurrently each performing a different job, such as waiting for events or performing a time consuming job that the program doesn't need to complete before going on. When a thread has finished its job, the thread is suspended or destroyed.

The Java Card virtual machine can support only a single thread of execution. Java Card programs cannot use class Thread or any of the thread-related keywords in the Java programming language.

transaction—an atomic operation in which the developer defines the extent of the operation by indicating in the program code the beginning and end of the transaction.

transient object—the state of transient objects do not persist from one CAD session to the next, and are reset to a default state at specified intervals. Updates to the values of transient objects are not atomic and are not affected by transactions.

verification—a process performed on a CAP file which ensures that the binary representation of the package is structurally correct.

word—an abstract storage unit. A word is large enough to hold a value of type byte, short, reference or returnAddress. Two words are large enough to hold a value of integer type.

Index

A	selection behavior 11
accessing	deletion 5, 79
array object methods 46	manager 84
array objects 43	deselection 6, 21
class instance object fields 43	firewall 29, 32
class instance object methods 43	installation 5, 79
class instance objects 45	parameters 83
objects 33	installer 79
across contexts 35	isolation 29
shareable interface 45	legacy 9
methods 44	multiselectable 10, 12
standard interface methods 44	selected 10
standard interfaces 45	selection 6, 9, 16, 55
static class fields 43	MANAGE CHANNEL OPEN 17
active applet instance 9, 10	SELECT FILE 19
APDU class 70	arrays
incoming data transfers	accessing object methods 46
T=1 specifics 74	global 36, 51
outgoing data transfers	objects, accessing 43
T=0 specifics 70	atomicity 47
T=1 specifics 73	
APDU commands	
See commands	В
API 69	basic logical channel 9, 11
constants	basic logical challilet 9, 11
See constants, API	
applet	
active instance 9, 10	C
context 12	CAD 3
currently selected instance 10	card
default	initialization time 3
card instance 11	reset behavior 11
instance 10	

sessions 3	javacard.framework.service.
Card Acceptance Device 3	ServiceException 93
class	javacard.framework.
access behavior 42	${\tt SystemException}~93$
javacard.framework.APDU 91	javacard.framework.
javacard.framework.APDUExceptions 91	TransactionException 93
javacard.framework.JCSystem 92	javacard.security.Checksum 94
javacard.framework.PINException 93	javacard.security.CryptoException
javacard.framework.service.	94
Dispatcher 93	javacard.security.KeyAgreement 94
javacard.framework.service.	javacard.security.KeyBuilder 94
RMIService 93	javacard.security.KeyPair 95
javacard.framework.service.	javacard.security.MessageDigest 95
ServiceException 93	javacard.security.RandomData 95
javacard.framework.SystemException 93	javacard.security.Signature 95
javacard.framework.	javacardx.crypto.Cipher 96
TransactionException 93	contexts 30, 40
javacard.security.Checksum 94	currently active 31
javacard.security.CryptoException 94	JCRE 31, 37
javacard.security.KeyAgreement 94	object accessing across 35
javacard.security.KeyBuilder 94	rules in firewall 32
javacard.security.KeyPair 95	switching 30, 51
javacard.security.MessageDigest 95	in the VM 31
javacard.security.RandomData 95	system 37
javacard.security.Signature 95	crypto packages 75
javacardx.crypto.Cipher 96	
commands	currently selected applet instance 10
APDU formats 64	
INVOKE 66	
MANAGE CHANNEL CLOSE 21	D
MANAGE CHANNEL CLOSE 21 MANAGE CHANNEL OPEN 17	data formats 56
MANAGE CHANNEL processing 16	deletion 5
processing 23	applet 79, 84
SELECT FILE 19, 64	deselect method 7
commit capacity 51	deselection 6
component 25	applets 21
constants	
API	
<code>javacard.framework.APDU91</code>	_
javacard.framework.APDUExceptions	E
91	encoding
javacard.framework.ISO7816 92	error response 63
javacard.framework.JCSystem 92	exception response 62
javacard.framework.PINException 93	normal response 62
javacard.framework.service.	parameter 60
Dispatcher 93	return value 61
javacard.framework.service.	error response encoding 63
RMIService 93	exceptions

objects 44 response encoding 62	javacard.framework.APDUExceptions class 91
thrown by the API 69	javacard.framework.ISO7816 interface 92
	javacard.framework.JCSystem class 92
	javacard.framework.PINException class 93
F	javacard.framework.service.Dispatcher
fields 25	class 93
accessing class instance object 43	javacard.framework.service.RMIService
accessing static class 43	class 93
static 34	javacard.framework.service.
firewall	ServiceException class 93
See applet, firewall	javacard.framework.SystemException ${ m class}$
formats	93
APDU command 64 data 56	javacard.framework. TransactionException class 93
data 50	javacard.security.Checksum class 94
	javacard.security.CryptoException class
G	94
	javacard.security.KeyAgreement class 94
global arrays 36	javacard.security.KeyBuilder class 94
	javacard.security.KeyPair class 95
	javacard.security.MessageDigest class 95
	javacard.security.RandomData class 95
install method 5	javacard.security.Signature class 95
installation 5	javacardx.crypto.Cipher class 96
applet 79	JCRE
parameters 83	cleanup 50
interfaces	entry point objects 35
accessing shareable 45	privileges 37
accessing shareable methods 44	JCRMI 53
accessing standard 45	messages 55
accessing standard methods 44 javacard.framework.ISO7816 92	JCSystem class 76
shareable 38, 40	
INVOKE command 66	
isolation 29	L
isolation 29	legacy applets 9
	logical channels 9
	basic 9, 11
J	closing 15
Java Card applet	forwarding APDU commands to 15
See applet	opening 15
Java Card Remote Method Invocation See JCRMI	
Java Virtual Machine 3	
iavacard framework ADDII class 91	

M	clearing 26
MANAGE CHANNEL CLOSE 22	contexts 33
MANAGE CHANNEL command processing 16	required behavior 25
MANAGE CHANNEL OPEN 17	
messages	
JCRMI 55	Р
methods accessing array object 46 class instance object 43 shareable interface 44 standard interface 44 deselect 7 identifier 60 install 5	packages crypto 75 security 75 parameter encoding 60 persistent objects 3 power loss 8 process method 7
invocation 56 process 7	5
select 6	R
static 34	remote methods 53
multichannel dispatching mechanism 16	remote object
multiselectable applets 10, 12	identifier 57
multiselection attempt 12	reference descriptor 57
multi-session functionality 9	reset 8, 49
	card behavior 11
	return value encoding 61
	RMI See JCRMI
0	RMIService Class 66
objects	RMISERVICE Class 00
access behavior 42	
accessing 33 across contexts 35	
array 43	S
array methods 46	security
class instance 45	packages 75
class instance fields 43	violations 77
class instance methods 43	SELECT FILE 19
JCRE entry point 35	SELECT FILE command 64
ownership 32	${ t select method 6}$
persistent 3, 26	selected applet 10
remote 53	selection 6
remote identifier 57	applet 16, 55
remote reference descriptor 57 sharing 29	Shareable Interface Objects
throwing exception 44	See SIOs
transient 25, 51	shareable interfaces
CLEAR_ON_DESELECT 26, 34	See interfaces, shareable
CLEAR_ON_RESET 26, 33	SIOs 34, 38 obtaining 41

static accessing class fields 43 fields 34 methods 34

Т

tear 49 transactions 47 aborting 49 duration 48 failure 49 nested 49 within the API 69 ${\tt transient}\; keyword\; 25$ transient objects See objects, transient typographic conventions xi

٧

virtual machine 77 resource failures 77 security violations 77