

# UM10914 LPC5411x User manual Rev. 1.2 — 30 June 2016

**User manual** 

#### **Document information**

Info	Content
Keywords	ARM Cortex-M4, ARM Cortex-M0+, microcontroller, sensor hub, USB FS device
Abstract	LPC5411x User Manual



#### LPC5411x User manual

#### **Revision history**

Rev	Date	Description
1.2	20160630	Incorrect bit fields in the IOCON chapter have been corrected.
		<ul> <li>Typographic errors have been corrected and minor pieces of information added or clarified throughout the document.</li> </ul>
1.1	20160525	An incorrect mention of an SPI Flash Interface has been removed from the introduction.
		<ul> <li>In the Syscon chapter, block diagrams have been added for the Flash Accelerator and the frequency measurement functions.</li> </ul>
		Bit positions in IOCON registers have been corrected.
		References to IrDA have been removed from the USART chapter.
		<ul> <li>Details of SPI/I2C ISP have been added to the Flash API chapter.</li> </ul>
		The Power profiles/Power control API chapter has had significant updates and corrections.
		<ul> <li>Typographic errors have been corrected and minor pieces of information added or clarified throughout the document.</li> </ul>
1.0	20160216	Initial release of the LPC5411x User Manual

#### **Contact information**

For more information, please visit: <a href="http://www.nxp.com">http://www.nxp.com</a>

For sales office addresses, please send an email to: <a href="mailto:salesaddresses@nxp.com">salesaddresses@nxp.com</a>

# **UM10914**

#### **Chapter 1: LPC5411x Introductory information**

Rev. 1.2 — 30 June 2016

**User manual** 

#### 1.1 Introduction

The LPC5411x are ARM Cortex-M4 based microcontrollers for embedded applications. These devices include an optional ARM Cortex-M0+ coprocessor, up to 192 KB of on-chip SRAM, up to 256 KB on-chip flash, Full Speed USB device interface, a DMIC subsystem with dual-channel PDM microphone interface and I2S, five general-purpose timers, one versatile timer with PWM and many other capabilities (SCTimer/PWM), one RTC/alarm timer, one 24-bit Multi-Rate Timer (MRT), a Windowed Watchdog Timer (WWDT), eight flexible serial communication peripherals (each of which can be a USART, SPIs, or I<sup>2</sup>C interface), and one 12-bit 5.0 Msamples/sec ADC, and a temperature sensor.

The ARM Cortex-M4 is a 32-bit core that offers system enhancements such as low power consumption, enhanced debug features, and a high level of support block integration. The ARM Cortex-M4 CPU, operating at up to 100 MHz, incorporates a 3-stage pipeline, uses a Harvard architecture with separate local instruction and data buses as well as a third bus for peripherals, and includes an internal prefetch unit that supports speculative branching. The ARM Cortex-M4 supports single-cycle digital signal processing and SIMD instructions. The Cortex-M4 is the Cortex-M4 with the inclusion of the 32-bit Floating Point Unit.

The ARM Cortex-M0+ coprocessor available on some devices is an energy-efficient and easy-to-use 32-bit core which is code- and tool-compatible with the Cortex-M4 core. The Cortex-M0+ coprocessor offers up to 100 MHz performance with a simple instruction set and reduced code size.

Refer to LPC5411x data sheets for complete details on specific products and configurations. LPC5411x devices are essentially pin-function compatible with LPC5410x devices in the same package/pinout versions.

#### 1.2 Features

- Dual processor core: ARM Cortex-M4 and ARM Cortex-M0+ included for selected devices (see specific device data sheet for details). Cortex-M4 only is present on other devices.
- ARM Cortex-M4 CPU (present on all LPC5411x devices):
  - ARM Cortex-M4 processor, running at a frequency of up to 100 MHz.
  - Floating Point Unit (FPU) and Memory Protection Unit (MPU).
  - ARM built-in Nested Vectored Interrupt Controller (NVIC).
  - Non-maskable Interrupt (NMI) with a selection of sources.
  - Serial Wire Debug (SWD) with 6 instruction breakpoints, 2 literal comparators, and
     4 watchpoints. Includes Serial Wire Output for enhanced debug capabilities.
  - System tick timer.
- ARM Cortex-M0+ CPU (present on selected devices):
  - ARM Cortex-M0+ processor, running at a frequency of up to 100 MHz (using the same clock as the Cortex-M4).

#### Chapter 1: LPC5411x Introductory information

- Single cycle multiplier.
- ARM Cortex-M0+ built-in Nested Vectored Interrupt Controller (NVIC).
- Non-maskable Interrupt (NMI) with a selection of sources.
- Serial Wire Debug (SWD) with 4 breakpoints and 2 watchpoints.
- System tick timer.
- On-Chip memory:
  - Up to 256 KB on-chip flash programming memory with flash accelerator and 256 Byte page write and erase.
  - Up to 192 KB total SRAM composed of up to 160 KB contiguous main SRAM, plus an additional 32 KB SRAM on the I&D buses.

#### ROM API support:

- Flash In-Application Programming (IAP) and In-System Programming (ISP).
- USB drivers.

#### Serial interfaces:

- Eight Flexcomm Interface serial peripherals. Each can be selected by software to be a USART, SPI, or I<sup>2</sup>C interface. Two Flexcomm Interfaces also include an I2S interface, for a total of 2 channel pairs. Each Flexcomm Interface includes a FIFO that supports USART, SPI, and I<sup>2</sup>S if supported by that Flexcomm Interface. A variety of clocking options are available to each Flexcomm Interface, and include a shared Fractional Rate Generator.
- I<sup>2</sup>C supports Fast mode and Fast-mode Plus with data rates of up to 1 Mbit/s and with multiple address recognition and monitor mode. Two sets of true open drain I<sup>2</sup>C pads also support High Speed Mode (up to 3.4 Mbit/s) as a slave.
- USB Full Speed device interface with option for crystal-less operation.

#### Digital peripherals:

- DMA controller with 20 channels and 20 programmable triggers, able to access all memories and DMA-capable peripherals.
- Up to 50 General-Purpose I/O (GPIO) pins (64-pin device with no USB). Most GPIOs have configurable pull-up/pull-down resistors, open-drain mode, and input inverter.
- GPIO registers are located on AHB for fast access.
- Up to eight GPIOs can be selected as pin interrupts (PINT), triggered by rising, falling or both input edges.
- Two GPIO grouped interrupts (GINT) enable an interrupt based on a logical (AND/OR) combination of input states.
- CRC engine.

#### Analog peripherals:

- 12-bit ADC with 12 input channels and with multiple internal and external trigger inputs and sample rates of up to 5.0 MS/s. The ADC supports two independent conversion sequences.
- Integrated temperature sensor connected to the ADC.
- DMIC subsystem, including a dual-channel PDM microphone interface, flexible decimators, 16 entry FIFOs, optional DC blocking, and option to stream to I<sup>2</sup>S.

#### Chapter 1: LPC5411x Introductory information

#### Timers

- Five standard general purpose timers/counters, four of which support up to 4 capture inputs and 4 compare outputs, PWM mode, and external count input.
   Specific timer events can be selected to generate DMA requests. The fifth timer does not have external pin connections and may be used for internal timing operations.
- One SCTimer/PWM (SCT) 8 input and 8 output functions (including capture and match). Inputs and outputs can be routed to/from external pins and internally to/from selected peripherals. Internally, the SCT supports 10 captures/matches, 10 events and 10 states.
- 32-bit Real-time clock (RTC) with 1 s resolution running in the always-on power domain. A timer in the RTC can be used for wake-up from all low power modes including deep power-down, with 1 ms resolution.
- Multiple-channel multi-rate 24-bit timer (MRT) for repetitive interrupt generation at up to four programmable, fixed rates.
- Windowed Watchdog timer (WWDT).
- Ultra-low power Micro-tick Timer, running from the Watchdog oscillator, that can be used to wake up the device from most low power modes.

#### · Clock generation:

- Internal FRO oscillator, factory trimmed for accuracy, that can optionally be used as a system clock as well as other purposes. This oscillator provides a selectable 48 MHz or 96 MHz output, and a 12 MHz output (divided down from the selected higher frequency) that can optionally be used as a system clock as well as other purposes.
- External clock input for up to 25 MHz.
- Watchdog oscillator with a frequency range of 200 kHz to 1.5 MHz.
- 32 kHz low-power RTC oscillator.
- System PLL allows CPU operation up to the maximum CPU rate without the need for a high-frequency external clock. May be run from the internal FRO 12 MHz output, the external clock input CLKIN, or the RTC oscillator.
- Clock output function with divider that can reflect many internal clocks.
- Frequency measurement unit for measuring the frequency of any on-chip or off-chip clock signal.

#### Power control:


- Integrated PMU (Power Management Unit) to minimize power consumption.
- Reduced power modes: sleep mode, deep-sleep mode, and deep power-down mode.
- Wake-up from deep-sleep mode on activity on USART, SPI, and I<sup>2</sup>C peripherals when operating as slaves.
- Wake-up from sleep, deep-sleep and deep power-down modes from the RTC alarm.
- The Micro-tick Timer can wake-up the device from most reduced power modes by using the watchdog oscillator when no other on-chip resources are running, for ultra-low power wake-up.
- Power-On Reset (POR).

#### **Chapter 1: LPC5411x Introductory information**

- Brownout detect.
- JTAG boundary scan supported.
- Unique device serial number for identification.
- Single power supply 1.62 V to 3.6 V.
- Operating temperature range of -40°C to +105°C.
- Available as 7x7 WLCSP49 and LQFP64 packages.

#### Chapter 1: LPC5411x Introductory information

#### 1.3 Block diagram

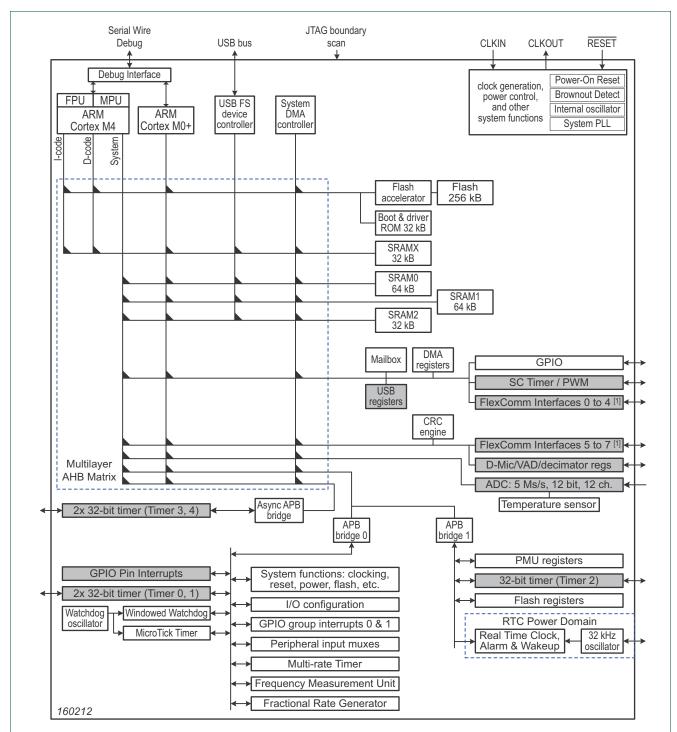

**Notes:** Each Flexcomm Interface includes USART, SPI, and I2C functions. Flexcomm Interfaces 6 and 7 each also provide an I2S function.

Grey-shaded blocks indicate peripherals that provide DMA requests or are otherwise able to trigger DMA transfers.

#### Fig 1. Block diagram

#### Chapter 1: LPC5411x Introductory information

#### 1.4 Architectural overview

The ARM Cortex-M4 includes three AHB-Lite buses, one system bus and the I-code and D-code buses. One bus is dedicated for instruction fetch (I-code), and one bus is dedicated for data access (D-code). The use of two core buses allows for simultaneous operations if concurrent operations target different devices.

A multi-layer AHB matrix connects the CPU buses and other bus masters to peripherals in a flexible manner that optimizes performance by allowing peripherals on different slaves ports of the matrix to be accessed simultaneously by different bus masters. More information on the multilayer matrix can be found in <a href="Section 2.1.3">Section 2.1.3</a>. Connections in the multilayer matrix are shown in <a href="Figure 1">Figure 1</a>. Note that while the AHB bus itself supports word, halfword, and byte accesses, not all AHB peripherals need or provide that support.

APB peripherals are connected to the AHB matrix via two APB buses using separate slave ports from the multilayer AHB matrix. This allows for better performance by reducing collisions between the CPU and the DMA controller, and also for peripherals on the asynchronous bridge to have a fixed clock that does not track the system clock. Note that APB, by definition, does not directly support byte or halfword accesses.

#### 1.5 ARM Cortex-M4 processor

The Cortex-M4 is a general purpose 32-bit microprocessor, which offers high performance and very low power consumption. The Cortex-M4 offers a Thumb-2 instruction set, low interrupt latency, interruptible/continuable multiple load and store instructions, automatic state save and restore for interrupts, tightly integrated interrupt controller, multiple core buses capable of simultaneous accesses, and a floating point unit.

A 3-stage pipeline is employed so that all parts of the processing and memory systems can operate continuously. Typically, while one instruction is being executed, its successor is being decoded, and a third instruction is being fetched from memory.

A Mailbox facility is provided to facilitate inter-processor communication between the Cortex-M4 and Cortex-M0+ on devices that include both processors (see <a href="Chapter 29">Chapter 29</a>).

Information about Cortex-M4 configuration options can be found in Chapter 35.

#### 1.6 ARM Cortex-M0+ processor (present on selected LPC5411x devices)

The Cortex-M0+ is a general purpose 32-bit microprocessor with extremely low power consumption. The Cortex-M0+ includes the bulk of the Thumb instruction set and a small subset of Thumb-2 Instructions. The Cortex-M0+ has a 2-stage pipeline in order to decrease power consumption, and includes a single cycle multiplier.

A Mailbox facility is provided to facilitate inter-processor communication between the Cortex-M4 and Cortex-M0+ on devices that include both processors (see Chapter 29).

Information about Cortex-M0+ configuration options can be found in Chapter 35.

# **UM10914**

#### Chapter 2: LPC5411x Memory map

Rev. 1.2 — 30 June 2016

**User manual** 

#### 2.1 General description

The LPC5411x incorporates several distinct memory regions. <u>Figure 2</u> shows the overall map of the entire address space from the user program viewpoint following reset.

The APB peripheral area (detailed in Figure 3) is divided into fixed 4 KB slots to simplify addressing.

The registers incorporated into the CPU, such as NVIC, SysTick, and sleep mode control, are located on the private peripheral bus.

#### 2.1.1 Main SRAM

The Main SRAM is comprised of up to a total 160 KB of contiguous, on-chip static RAM memory (this is in addition to SRAMX as noted in the next section below, so the total device SRAM can be up to 192 KB). The Main SRAM is further divided to allow for more control of power usage when less SRAM is required: SRAM0 (up to 64 KB), SRAM1 (up to 64 KB), and SRAM2 (up to 32 KB). Each SRAM has a separate clock control and power switch, see <a href="Section 4.5.16">Section 4.5.16</a> "AHB Clock Control register 0" and <a href="Section 4.5.52">Section 4.5.52</a> "Power configuration register 0".

Table 1. SRAM configuration

	•							
	SRAM0	SRAM1	SRAM2	SRAMX				
(total main SRA	(total main SRAM = up to 160 KB)							
Size	Up to 64 KB	Up to 64KB	Up to 32KB	Up to 32KB				
Address range	Begins at 0x2000 0000	If present, begins at 0x2001 0000	If present, begins at 0x2002 0000	Begins at 0x0400 0000				

#### 2.1.1.1 SRAMX

An additional on-chip static RAM memory is available that is not contiguous to the main SRAM. This RAM is called SRAMX, and resides on the local buses (I-Code and D-Code) of the Cortex-M4, and on the main bus of the Cortex-M0+. This RAM can be used, for example, as the location for the program stack, common data, or any other use where a separate access away from the Main SRAM has an advantage. SRAMX can be disabled or enabled in the SYSCON block to save power. See <a href="Section 4.5.52">Section 4.5.52</a> "Power configuration register 0".

#### 2.1.1.2 SRAM usage notes

Although always contiguous on all LPC5411x devices, SRAM0, SRAM1, and SRAM2 are placed on different AHB matrix ports. This allows user programs to potentially obtain better performance by dividing RAM usage among the ports. For example, simultaneous access to SRAM0 by the CPU and SRAM1 by the system DMA controller does not result in any bus stalls for either master.

Generally, data being communicated via peripherals will be accessed by the CPU at some point, even when peripheral data is mainly being transferred via DMA. So, in order to minimizing data read/write stalls, data buffers may be placed in RAMs on different AHB matrix ports. For instance, if DMA is writing to one buffer on a specific AHB matrix port

Chapter 2: LPC5411x Memory map

while the CPU is reading data from a buffer on a different AHB matrix port, there is no stall for either the CPU or the DMA. Sequences of data from the same peripheral could be alternated between RAM on each port. This could be helpful if DMA fills or empties a RAM buffer, then signals the CPU before proceeding on to a second buffer. The CPU would then tend to access the data while the DMA is using the other RAM.

#### 2.1.1.3 Bit-band addressing

The ARM Cortex-M4 CPU provides a bit-band addressing feature. This offers efficient bit accesses. Bits in the bit-band region (0x2000 0000 to 0x2010 0000 and 0x4000 0000 to 0x40100000) can be accessed in the so-called alias region at 0x2200 0000 and 0x4200 0000. Reads return the respective bit from the bit-band region. Writes perform an atomic read-modify-write on the respective bit of the bit-band region. For details, see the ARM Cortex-M4 technical reference manual.

**Remark:** because bit-band operations are implemented as read-modify-write operations, and appear on the AHB bus in that manner, some uses of bit-banding may not work as expected. For example, if a peripheral register contains several write-one-to-clear status flags, attempting to clear one such flag using bit-banding will actually clear all such flags that read as a one in that register.

10 of 590

#### Chapter 2: LPC5411x Memory map

#### 2.1.2 Memory mapping

The overall memory map is shown in Figure 2 "Main memory map". Details of APB peripheral mapping are shown in Figure 3 "APB memory map".

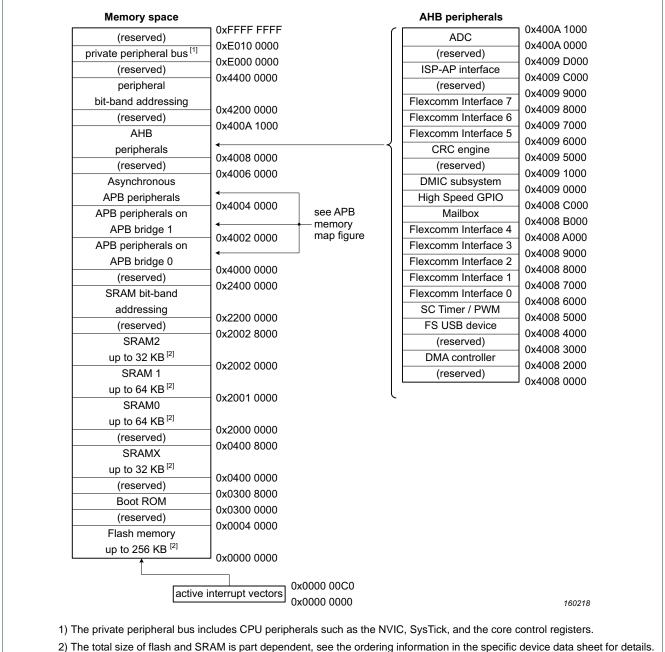


Fig 2. Main memory map

#### Chapter 2: LPC5411x Memory map

#### APB bridge 0

		0.4004 EEEE
31-15	(reserved)	0x4001 FFFF
14	Micro-Tick Timer	0x4000 F000
13	Multi-Rate Timer	0x4000 E000
		0x4000 D000
12	Watchdog timer	0x4000 C000
11-10	(reserved)	0x4000 A000
9	CTIMER 1	
8	CTIMER 0	0x4000 9000
7-6	(reserved)	0x4000 8000
5	Input Muxes	0x4000 6000
4	•	0x4000 5000
-	Pin Interrupts (PINT)	0x4000 4000
3	GINT1	0x4000 3000
2	GINT0	0x4000 2000
1	IOCON	
0	Syscon	0x4000 1000
	,	0x4000 0000

#### APB bridge 1

31-21	(reserved)	0x4003 FFFF
20	Flash controller	0x4003 5000
19-13	(reserved)	0x4003 4000
12	RTC	0x4002 D000
11-9	(reserved)	0x4002 C000
8	CTIMER 2	0x4002 9000
<u> </u>		0x4002 8000
7-0	(reserved)	0x4002 0000

#### Asynchronous APB bridge

31-10	(reserved)
9	CTIMER 4
8	CTIMER 3
7-1	(reserved)
0	Asynch Syscon

0x4005 FFFF 0x4004 A000 0x4004 9000 0x4004 8000 0x4004 1000 0x4004 0000

160628

Fig 3. APB memory map

#### 2.1.3 AHB multilayer matrix

The LPC5411x uses a multi-layer AHB matrix to connect the CPU buses and other bus masters to peripherals in a flexible manner that optimizes performance by allowing peripherals that are on different slave ports of the matrix to be accessed simultaneously by different bus masters. Figure 1 shows details of the potential matrix connections.

#### 2.1.4 Memory Protection Unit (MPU)

The Cortex-M4 processor has a memory protection unit (MPU) that provides fine grain memory control, enabling applications to implement security privilege levels, separating code, data and stack on a task-by-task basis. Such requirements are critical in many embedded applications.

The MPU register interface is located on the private peripheral bus and is described in detail in Ref. 1 "Cortex-M4 TRM".

# **UM10914**

# **Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)**

Rev. 1.2 — 30 June 2016

**User manual** 

#### 3.1 How to read this chapter

Available interrupt sources may vary with specific LPC5411x device type.

#### 3.2 Features

- Nested Vectored Interrupt Controller that is an integral part of each CPU.
- Tightly coupled interrupt controller provides low interrupt latency.
- Controls system exceptions and peripheral interrupts.
- The NVIC of the Cortex-M4 supports:
  - 40 vectored interrupt slots.
  - 8 programmable interrupt priority levels with hardware priority level masking.
  - Vector table offset register VTOR.
  - Software interrupt generation.
- The Cortex- M0+ (present on selected devices) supports the first 32 interrupts.
  - 32 vectored interrupt slots.
  - 4 programmable interrupt priority levels with hardware priority level masking.
  - Vector table offset register VTOR.
- Support for NMI from any interrupt (see Section 4.5.3).

#### 3.3 General description

The tight coupling to the NVIC to the CPU allows for low interrupt latency and efficient processing of late arriving interrupts.

#### 3.3.1 Interrupt sources

<u>Table 2</u> lists the interrupt sources for each peripheral function. Each peripheral device may have one or more interrupt lines to the Vectored Interrupt Controller. Each line may represent more than one interrupt source. The interrupt number does not imply any interrupt priority.

See Ref. 1 "Cortex-M4 TRM" and Ref. 2 "Cortex-M0+ TRM" for detailed descriptions of the NVIC and the NVIC registers.

Table 2. Connection of interrupt sources to the NVIC

Interrupt	Name	Interrupt description	Flags
0	WDT, BOD		WARNINT - watchdog warning interrupt BODINTVAL - BOD interrupt level
1	DMA	DMA controller	Interrupt A and interrupt B, error interrupt
2	GINT0	GPIO group 0	Enabled pin interrupts

#### **Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)**

Table 2. Connection of interrupt sources to the NVIC

Interrupt	Name	Interrupt description	Flags
3	GINT1	GPIO group 1	Enabled pin interrupts
4	PIN_INT0	Pin interrupt 0 or pattern match engine slice 0	PSTAT - pin interrupt status
5	PIN_INT1	Pin interrupt 1or pattern match engine slice 1	PSTAT - pin interrupt status
6	PIN_INT2	Pin interrupt 2 or pattern match engine slice 2	PSTAT - pin interrupt status
7	PIN_INT3	Pin interrupt 3 or pattern match engine slice 3	PSTAT - pin interrupt status
8	UTICK	Micro-tick Timer	INTR
9	MRT	Multi-rate timer	Global MRT interrupts: GFLAG0, 1, 2, 3
10	CTIMER0	Standard counter/timer CTIMER0	Match and Capture interrupts
11	CTIMER1	Standard counter/timer CTIMER1	Match and Capture interrupts
12	SCT0	SCTimer/PWM	EVFLAG SCT event
13	CTIMER3	Standard counter/timer CTIMER3	Match and Capture interrupts
14	Flexcomm0	Flexcomm Interface 0 (USART, SPI, I2C)	See Table 314, Table 336, Table 362.
15	Flexcomm1	Flexcomm Interface 1 (USART, SPI, I2C)	Same as Flexcomm0
16	Flexcomm2	Flexcomm Interface 2 (USART, SPI, I2C)	Same as Flexcomm0
17	Flexcomm3	Flexcomm Interface 3 (USART, SPI, I2C)	Same as Flexcomm0
18	Flexcomm4	Flexcomm Interface 4 (USART, SPI, I2C)	Same as Flexcomm0
19	Flexcomm5	Flexcomm Interface 5 (USART, SPI, I2C)	Same as Flexcomm0
20	Flexcomm6	Flexcomm Interface 6 (USART, SPI, I2C, I2S)	Same as Flexcomm0, plus I <sup>2</sup> S
21	Flexcomm7	Flexcomm Interface 7 (USART, SPI, I2C, I2S)	Same as Flexcomm0, plus I <sup>2</sup> S (Table 390)
22	ADC0_SEQA	ADC0 sequence A completion.	See Table 439.
23	ADC0_SEQB	ADC0 sequence B completion.	See Table 439.
24	ADC0_THCMP	ADC0 threshold compare and error.	See Table 439.
25	DMIC	Digital microphone and DMIC subsystem	See Chapter 26.
26	HWVAD	Hardware Voice Activity Detector	See Chapter 26.
27	USB_WAKEUP	USB Activity Interrupt	USB_NEED_CLK, see Chapter 20.
28	USB	USB device	See <u>Table 298</u> .
29	RTC	RTC alarm and wake-up interrupts	See <u>Table 263</u> .
30	(reserved)	-	-
31	MAILBOX	Mailbox interrupt (present on selected devices)	Mailbox Interrupt
The follow	ving interrupts are	supported only on the Cortex-M4	
32	PIN_INT4	Pin interrupt 4 or pattern match engine slice 4 int	PSTAT - pin interrupt status
33	PIN_INT5	Pin interrupt 5 or pattern match engine slice 5 int	PSTAT - pin interrupt status
34	PIN_INT6	Pin interrupt 6 or pattern match engine slice 6 int	PSTAT - pin interrupt status
35	PIN_INT7	Pin interrupt 7 or pattern match engine slice 7 int	PSTAT - pin interrupt status
36	CTIMER2	Standard counter/timer CTIMER2	Match and Capture interrupts
37	CTIMER4	Standard counter/timer CTIMER4	Match and Capture interrupts
38	(reserved)	-	-
39	(reserved)	_	-

#### **Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)**

### 3.4 Register description

The NVIC registers are located on the ARM private peripheral bus.

Table 3. Register overview: NVIC (base address 0xE000 E000)

Name	Access	Offset	Description	Reset value	Section
ISER0	R/W	0x100	Interrupt Set Enable Register 0. This register allows enabling interrupts and reading back the interrupt enables for peripheral functions.	0x0	3.4.1
ISER1	R/W	0x104	Interrupt Set Enable Register 1. See ISER0 description.	0x0	3.4.2
ICER0	R/W	0x180	Interrupt Clear Enable Register 0. This register allows disabling interrupts and reading back the interrupt enables for peripheral functions.	0x0	3.4.3
ICER1	R/W	0x184	Interrupt Clear Enable Register 1. See ISER0 description.	0x0	3.4.4
ISPR0	R/W	0x200	Interrupt Set Pending Register 0. This register allows changing the interrupt state to pending and reading back the interrupt pending state for peripheral functions.	0x0	3.4.5
ISPR1	R/W	0x204	Interrupt Set Pending Register 1. See ISPR0 description.	0x0	3.4.6
ICPR0	R/W	0x280	Interrupt Clear Pending Register 0. This register allows changing the interrupt state to not pending and reading back the interrupt pending state for peripheral functions.	0x0	3.4.7
ICPR1	R/W	0x284	Interrupt Clear Pending Register 1. See ICPR0 description.	0x0	3.4.8
IABR0 🗓	RO	0x300	Interrupt Active Bit Register 0. This register allows reading the current interrupt active state for specific peripheral functions.	0x0	3.4.9
IABR1 [1]	RO	0x304	Interrupt Active Bit Register 1. See IABR0 description.	0x0	3.4.10
IPR0	R/W	0x400	Interrupt Priority Register 0. This register contains the priority fields for interrupts 0 to 3. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.11
IPR1	R/W	0x404	Interrupt Priority Register 1. This register contains the 3-bit priority fields for interrupts 4 to 7. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.12
IPR2	R/W	0x408	Interrupt Priority Register 2. This register contains the 3-bit priority fields for interrupts 8 to 11. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.13
IPR3	R/W	0x40C	Interrupt Priority Register 3. This register contains the 3-bit priority fields for interrupts 12 to 15. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.14
IPR4	R/W	0x410	Interrupt Priority Register 4. This register contains the 3-bit priority fields for interrupts 16 to 19. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.15
IPR5	R/W	0x414	Interrupt Priority Register 5. This register contains the 3-bit priority fields for interrupts 20 to 23. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.16
IPR6	R/W	0x418	Interrupt Priority Register 6. This register contains the 3-bit priority fields for interrupts 24 to 27. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.17
IPR7	R/W	0x41C	Interrupt Priority Register 7. This register contains the 3-bit priority fields for interrupts 28 to 31. Three bits for the Cortex-M4, 2 bits for the Cortex-M0+.	0x0	3.4.18
IPR8	R/W	0x420	Interrupt Priority Register 8. This register contains the 3-bit priority fields for interrupts 32 to 35. Three bits for the Cortex-M4.	0x0	3.4.19
IPR9	R/W	0x424	Interrupt Priority Register 9. This register contains the 3-bit priority fields for interrupts 36 to 39. Three bits for the Cortex-M4.	0x0	3.4.20
STIR [1]	WO	0xF00	Software Trigger Interrupt Register, allows software to generate interrupts.	-	3.4.21

<sup>[1]</sup> This register is not available for the Cortex-M0+.

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

#### 3.4.1 Interrupt Set-Enable Register 0 register

The ISER0 register allows enabling the first 32 peripheral interrupts, or for reading the enabled state of those interrupts. The remaining interrupts are enabled via the ISER1 register (Section 3.4.2). Disabling interrupts is done through the ICER0 and ICER1 registers (Section 3.4.3 and Section 3.4.4).

Table 4. Interrupt Set-Enable Register 0 register

Bit	Name	Value	Function
0	ISE_WDTBOD	[1]	Watchdog Timer, BOD interrupt enable.
1	ISE_DMA	[1]	DMA interrupt enable.
2	ISE_GINT0	[1]	GPIO group 0 interrupt enable.
3	ISE_GINT1	[1]	GPIO group 1 interrupt enable.
4	ISE_PINT0	[1]	Pin interrupt / pattern match engine slice 0 interrupt enable.
5	ISE_PINT1	<u>[1]</u>	Pin interrupt / pattern match engine slice 1 interrupt enable.
6	ISE_PINT2	<u>[1]</u>	Pin interrupt / pattern match engine slice 2 interrupt enable.
7	ISE_PINT3	<u>[1]</u>	Pin interrupt / pattern match engine slice 3 interrupt enable.
8	ISE_UTICK	[1]	Micro-Tick Timer interrupt enable.
9	ISE_MRT	[1]	Multi-Rate Timer interrupt enable.
10	ISE_CTIMER0	[1]	Standard counter/timer CTIMER0 interrupt enable.
11	ISE_CTIMER1	[1]	Standard counter/timer CTIMER1 interrupt enable.
12	ISE_SCT0	[1]	SCT0 interrupt enable.
13	ISE_CTIMER3	[1]	Standard counter/timer CTIMER3 interrupt enable.
14	ISE_FC0	[1]	Flexcomm Interface 0 interrupt enable.
15	ISE_FC1	[1]	Flexcomm Interface 1 interrupt enable.
16	ISE_FC2	[1]	Flexcomm Interface 2 interrupt enable.
17	ISE_FC3	[1]	Flexcomm Interface 3 interrupt enable.
18	ISE_FC4	[1]	Flexcomm Interface 4 interrupt enable.
19	ISE_FC5	[1]	Flexcomm Interface 5 interrupt enable.
20	ISE_FC6	[1]	Flexcomm Interface 6 interrupt enable.
21	ISE_FC7	<u>[1]</u>	Flexcomm Interface 7 interrupt enable.
22	ISE_ADC0SEQA	<u>[1]</u>	ADC0 sequence A interrupt enable.
23	ISE_ADC0SEQB	<u>[1]</u>	ADC0 sequence B interrupt enable.
24	ISE_ADC0THOV	<u>[1]</u>	ADC0 threshold and error interrupt enable.
25	ISE_DMIC	[1]	Digital microphone subsystem interrupt enable.
26	-	-	Reserved. Read value is undefined, only zero should be written.
27	ISE_USBACT	[1]	USB activity interrupt enable.
28	ISE_USB	<u>[1]</u>	USB device interrupt enable.
29	ISE_RTC	[1]	Real Time Clock (RTC) interrupt enable.
30	-	-	Reserved. Read value is undefined, only zero should be written.
31	ISE_MAILBOX	[1]	Mailbox interrupt enable (present on selected devices).

<sup>[1]</sup> Write: writing 0 has no effect, writing 1 enables the interrupt.
Read: 0 indicates that the interrupt is disabled, 1 indicates that the interrupt is enabled.

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

#### 3.4.2 Interrupt Set-Enable Register 1 register

The ISER1 register allows enabling the second group of peripheral interrupts, or for reading the enabled state of those interrupts. Disabling interrupts is done through the ICER0 and ICER1 registers (Section 3.4.3 and Section 3.4.4).

Table 5. Interrupt Set-Enable Register 1 register

Bit	Name	Value	Function
0	ISE_PINT4	[1]	Pin interrupt / pattern match engine slice 4 interrupt enable.
1	ISE_PINT5	[1]	Pin interrupt / pattern match engine slice 5 interrupt enable.
2	ISE_PINT6	[1]	Pin interrupt / pattern match engine slice 6 interrupt enable.
3	ISE_PINT7	[1]	Pin interrupt / pattern match engine slice 7 interrupt enable.
4	ISE_CTIMER2	[1]	Standard counter/timer CTIMER2 interrupt enable.
5	ISE_CTIMER4	[1]	Standard counter/timer CTIMER4 interrupt enable.
31:6	-	-	Reserved. Read value is undefined, only zero should be written.

<sup>[1]</sup> Write: writing 0 has no effect, writing 1 enables the interrupt.

Read: 0 indicates that the interrupt is disabled, 1 indicates that the interrupt is enabled.

#### 3.4.3 Interrupt Clear-Enable Register 0

The ICER0 register allows disabling the first 32 peripheral interrupts, or for reading the enabled state of those interrupts. The remaining interrupts are disabled via the ICER1 register (Section 3.4.4). Enabling interrupts is done through the ISER0 and ISER1 registers (Section 3.4.1 and Section 3.4.2).

Table 6. Interrupt Clear-Enable Register 0

Bit	Name	Function
31:0	ICE	Peripheral interrupt disables. Bit numbers match ISER0 registers ( <u>Table 4</u> ). Unused bits are reserved.
		Write: writing 0 has no effect, writing 1 disables the interrupt.  Read: 0 indicates that the interrupt is disabled, 1 indicates that the interrupt is enabled.

#### 3.4.4 Interrupt Clear-Enable Register 1 register

The ICER1 register allows disabling the second group of peripheral interrupts, or for reading the enabled state of those interrupts. Enabling interrupts is done through the ISER0 and ISER1 registers (Section 3.4.1 and Section 3.4.2).

Table 7. Interrupt Clear-Enable Register 1 register

Bit	Name	Function	
31:0	0 ICE Peripheral interrupt disables. Bit numbers match ISER1 registers (Table 5). Unused bits are reserved		
		Write: writing 0 has no effect, writing 1 disables the interrupt.  Read: 0 indicates that the interrupt is disabled, 1 indicates that the interrupt is enabled.	

#### 3.4.5 Interrupt Set-Pending Register 0 register

The ISPR0 register allows setting the pending state of the first 32 peripheral interrupts, or for reading the pending state of those interrupts. The remaining interrupts can have their pending state set via the ISPR1 register (Section 3.4.6). Clearing the pending state of interrupts is done through the ICPR0 and ICPR1 registers (Section 3.4.7 and Section 3.4.8).

UM10914

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

Table 8. Interrupt Set-Pending Register 0 register

Bit	Name	Function	
31:0	ISP	Peripheral interrupt pending set. Bit numbers match ISER0 registers (Table 4). Unused bits are reserved	
		Write: writing 0 has no effect, writing 1 changes the interrupt state to pending. Read: 0 indicates that the interrupt is not pending, 1 indicates that the interrupt is pending.	

#### 3.4.6 Interrupt Set-Pending Register 1 register

The ISPR1 register allows setting the pending state of the second group of peripheral interrupts, or for reading the pending state of those interrupts. Clearing the pending state of interrupts is done through the ICPR0 and ICPR1 registers (<u>Section 3.4.7</u> and <u>Section 3.4.8</u>).

Table 9. Interrupt Set-Pending Register 1 register

Bit	Name	Function
31:0	ISP	Peripheral interrupt pending set. Bit numbers match ISER1 registers (Table 5). Unused bits are reserved.
		Write: writing 0 has no effect, writing 1 changes the interrupt state to pending.  Read: 0 indicates that the interrupt is not pending, 1 indicates that the interrupt is pending.

#### 3.4.7 Interrupt Clear-Pending Register 0 register

The ICPR0 register allows clearing the pending state of the first 32 peripheral interrupts, or for reading the pending state of those interrupts. The remaining interrupts can have their pending state cleared via the ICPR1 register (<u>Section 3.4.8</u>). Setting the pending state of interrupts is done through the ISPR0 and ISPR1 registers (<u>Section 3.4.5</u>) and <u>Section 3.4.6</u>).

Table 10. Interrupt Clear-Pending Register 0 register

Bit	Name	Function
31:0	ICP	Peripheral interrupt pending clear. Bit numbers match ISER0 registers (Table 4). Unused bits are reserved.
		Write: writing 0 has no effect, writing 1 changes the interrupt state to not pending.  Read: 0 indicates that the interrupt is not pending, 1 indicates that the interrupt is pending.

#### 3.4.8 Interrupt Clear-Pending Register 1 register

The ICPR1 register allows clearing the pending state of the second group of peripheral interrupts, or for reading the pending state of those interrupts. Setting the pending state of interrupts is done through the ISPR0 and ISPR1 registers (<u>Section 3.4.5</u> and <u>Section 3.4.6</u>).

Table 11. Interrupt Clear-Pending Register 1 register

Bit	Name	Function
31:0	ICP	Peripheral interrupt pending clear. Bit numbers match ISER1 registers (Table 5). Unused bits are reserved.
		Write: writing 0 has no effect, writing 1 changes the interrupt state to not pending.  Read: 0 indicates that the interrupt is not pending, 1 indicates that the interrupt is pending.

#### 3.4.9 Interrupt Active Bit Register 0

The IABR0 register is a read-only register that allows reading the active state of the first 32 peripheral interrupts. Bits in IABR are set while the corresponding interrupt service routines are in progress. Additional interrupts can have their active state read via the IABR1 register (Section 3.4.10). IABR registers are not available for the Cortex-M0+.

UM10914

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

Table 12. Interrupt Active Bit Register 0

Bit	Name	Function	
31:0	IAB	Peripheral interrupt active. Bit numbers match ISER0 registers ( <u>Table 4</u> ). Unused bits are reserved.	
		Read: 0 indicates that the interrupt is not active, 1 indicates that the interrupt is active.	

#### 3.4.10 Interrupt Active Bit Register 1

The IABR1 register is a read-only register that allows reading the active state of the second group of peripheral interrupts. Bits in IABR are set while the corresponding interrupt service routines are in progress. IABR registers are not available for the Cortex-M0+.

Table 13. Interrupt Active Bit Register 1

Bit	Name	Function	
31:0	IAB	Peripheral interrupt active. Bit numbers match ISER1 registers (Table 5). Unused bits are reserved.	
		Read: 0 indicates that the interrupt is not active, 1 indicates that the interrupt is active.	

#### 3.4.11 Interrupt Priority Register 0

The IPR0 register controls the priority of the first 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

Table 14. Interrupt Priority Register 0

Bit	Name	Function
4:0	-	Unused
7:5	IP_WDTBOD	Watchdog Timer and BOD interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_DMA	DMA interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	IP_GINT0	GPIO Group 0 interrupt priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_GINT1	GPIO Group 1 interrupt priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.12 Interrupt Priority Register 1

The IPR1 register controls the priority of the second group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

Table 15. Interrupt Priority Register 1

Bit	Name	Function
4:0	-	Unused
7:5	IP_PINT0	Pin interrupt / pattern match engine slice 0 priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_PINT1	Pin interrupt / pattern match engine slice 1 priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

Table 15. Interrupt Priority Register 1 ... continued

Bit	Name	Function
23:21	IP_PINT2	Pin interrupt / pattern match engine slice 2 priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_PINT3	Pin interrupt / pattern match engine slice 3 priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.13 Interrupt Priority Register 2

The IPR2 register controls the priority of the third group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

Table 16. Interrupt Priority Register 2

Bit	Name	Function
4:0	-	Unused
7:5	IP_UTICK	Micro-Tick Timer interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_MRT	Multi-Rate Timer interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	IP_CTIMER0	Standard counter/timer CTIMER0 interrupt priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_CTIMER1	Standard counter/timer CTIMER1 interrupt priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.14 Interrupt Priority Register 3

The IPR3 register controls the priority of the fourth group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

Table 17. Interrupt Priority Register 3

Bit	Name	Function
4:0	-	Unused
7:5	IP_SCT0	SCT0 interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_CTIMER3	Standard counter/timer CTIMER3 interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	IP_FC0	Flexcomm Interface 0 interrupt priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_FC1	Flexcomm Interface 1 interrupt priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.15 Interrupt Priority Register 4

The IPR4 register controls the priority of the fifth group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

Table 18. Interrupt Priority Register 4

Bit	Name	Function
4:0	-	Unused
7:5	IP_FC2	Flexcomm Interface 2 interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_FC3	Flexcomm Interface 3 interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	IP_FC4	Flexcomm Interface 4 interrupt priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_FC5	Flexcomm Interface 5 interrupt priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.16 Interrupt Priority Register 5

The IPR5 register controls the priority of the sixth group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

Table 19. Interrupt Priority Register 5

Bit	Name	Function
4:0	-	Unused
7:5	IP_FC6	Flexcomm Interface 6 interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_FC7	Flexcomm Interface 7 interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	IP_ADC0SEQA	ADC 0 sequence A interrupt priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_ADC0SEQB	ADC 0 sequence B interrupt priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.17 Interrupt Priority Register 6

The IPR6 register controls the priority of the seventh group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

Table 20. Interrupt Priority Register 6

Bit	Name	Function
4:0	-	Unused
7:5	IP_ADC0THOV	ADC 0 threshold and error interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_DMIC	Digital microphone subsystem interrupt priority. 0 = highest priority, 7 = lowest priority.
28:16	-	Unused
31:29	IP_USBACT	USB Activity interrupt priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.18 Interrupt Priority Register 7

The IPR7 register controls the priority of the eighth group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, 4 for the Cortex-M0+. 0 is the highest priority.

**User manual** 

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

Table 21. Interrupt Priority Register 7

Bit	Name	Function
4:0	-	Unused
7:5	IP_USB	USB interrupt enable. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_RTC	Real Time clock (RTC) interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	-	Reserved
28:24	-	Unused
31:29	IP_MAILBOX	Mailbox interrupt priority. $0 = \text{highest priority}$ . $31 (0x1F) = \text{lowest priority}$ (present on selected devices).

#### 3.4.19 Interrupt Priority Register 8

The IPR8 register controls the priority of the ninth group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, where 0 is the highest priority.

Table 22. Interrupt Priority Register 8

Bit	Name	Function
4:0	-	Unused
7:5	IP_PINT4	Pin interrupt / pattern match engine slice 4 priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_PINT5	Pin interrupt / pattern match engine slice 5 priority 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	IP_PINT6	Pin interrupt / pattern match engine slice 6 priority. 0 = highest priority, 7 = lowest priority.
28:24	-	Unused
31:29	IP_PINT7	Pin interrupt / pattern match engine slice 7 priority. 0 = highest priority, 7 = lowest priority.

#### 3.4.20 Interrupt Priority Register 9

The IPR9 register controls the priority of the tenth group of 4 peripheral interrupts. Each interrupt can have one of 8 priorities for the Cortex-M4, where 0 is the highest priority.

Table 23. Interrupt Priority Register 9

Bit	Name	Function
4:0	-	Unused
7:5	IP_CTIMER2	Standard counter/timer CTIMER2 interrupt priority. 0 = highest priority, 7 = lowest priority.
12:8	-	Unused
15:13	IP_CTIMER4	Standard counter/timer CTIMER4 interrupt priority. 0 = highest priority, 7 = lowest priority.
20:16	-	Unused
23:21	-	Reserved
28:24	-	Unused
31:29	-	Reserved

#### Chapter 3: LPC5411x Nested Vectored Interrupt Controller (NVIC)

#### 3.4.21 Software Trigger Interrupt Register

The STIR register provides an alternate way for software to generate an interrupt, in addition to using the ISPR registers. This mechanism can only be used to generate peripheral interrupts, not system exceptions. The STIR register is not available for the Cortex-M0+.

By default, only privileged software can write to the STIR register. Unprivileged software can be given this ability if privileged software sets the USERSETMPEND bit in the CCR register.

The interrupt number to be programmed in this register is listed in <u>Table 2</u>.

Table 24. Software Trigger Interrupt Register (STIR)

Bit	Symbol	Description
8:0	INTID	Writing a value to this field generates an interrupt for the specified the interrupt number.
31:9	-	Reserved. Read value is undefined, only zero should be written.

23 of 590

# **UM10914**

#### **Chapter 4: LPC5411x System configuration (SYSCON)**

Rev. 1.2 — 30 June 2016

**User manual** 

#### 4.1 Features

- · System and bus configuration.
- Clock select and control.
- PLL configuration
- · Reset control.
- · Wake-up control.
- BOD configuration.
- High-accuracy frequency measurement function for on-chip and off-chip clocks.
- Uses a selection of on-chip clocks as reference clock.
- · Device ID register.

#### 4.2 Basic configuration

Configure the SYSCON block as follows:

- No clock configuration is needed. The clock to the SYSCON block is always enabled.
   By default, the SYSCON block is clocked by the FRO 12 MHz (fro\_12m).
- Target and reference clocks for the frequency measurement function are selected in the input mux block. See <u>Table 142</u>.
- The SYSCON block controls use of the CLKIN and CLKOUT pins which must also be configured through IOCON. See Section 4.3. RESET is a dedicated pin.

#### 4.2.1 Set up the PLL

The PLL creates a stable output clock at a higher frequency than the input clock. If a main clock is needed with a frequency higher than the FRO 12 MHz clock and the FRO 96 or 48 MHz clock (fro\_hf) is not appropriate, use the PLL to boost the input frequency. The PLL can be set up by calling an API supplied by NXP Semiconductors. Also see <a href="Section 4.6.5">Section 4.6.5</a> "PLL functional description", <a href="Section 4.5.49">Section 4.5.49</a> "PLL registers", and <a href="Section 31.4.1">Section 31.4.1</a> "Chip\_POWER\_SetPLL".

#### 4.2.2 Configure the main clock and system clock

The clock source for the registers and memories is derived from main clock. The main clock can be selected from the sources listed in step 1 below.

The main clock, after being optionally divided by the CPU Clock Divider, is called the system clock and clocks the core, the memories, and the peripherals (register interfaces and peripheral clocks).

- 1. Select the main clock. The following options are available:
  - FRO 12 MHz output (fro\_12m) from internal oscillator (default). This clock is divided down from the currently selected FRO oscillator.
  - FRO high speed output (fro\_hf), 96 or 48 MHz from internal oscillator.

#### Chapter 4: LPC5411x System configuration (SYSCON)

- CLKIN.
- Watchdog oscillator.
- The output of the system PLL.
- The RTC 32 kHz oscillator.

<u>Section 4.5.22 "Main clock source select register A"</u> and <u>Section 4.5.23 "Main clock source select register B"</u>.

2. Select the divider value for the system clock.

Section 4.5.34 "AHB clock divider register"

3. Select the memories and peripherals that are operating in the application and therefore must have an active clock. The core is always clocked.

Section 4.5.16 "AHB Clock Control register 0" and Section 4.5.17 "AHB Clock Control register 1".

#### 4.2.3 Measure the frequency of a clock signal

The frequency of any on-chip or off-chip clock signal can be measured accurately with a selectable reference clock. For example, the frequency measurement function can be used to accurately determine the frequency of the watchdog oscillator which varies over a wide range depending on process and temperature.

The clock frequency to be measured and the reference clock are selected in the input mux block. See Section 8.6.4 "Frequency measure function reference clock select register" and Section 8.6.5 "Frequency measure function target clock select register".

Details on the accuracy and measurement process are described in <u>Section 4.6.6</u> "Frequency measure function".

To start a frequency measurement cycle and read the result, see <u>Table 73</u>.

#### 4.3 Pin description

Table 25. SYSCON pin description

Function Type		Pin	Pin Description	
CLKOUT	0	PIO0_21	CLKOUT clock output.	Chapter 7
CLKIN	I	PIO0_22	External clock input.	Chapter 7

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### 4.4 General description

#### 4.4.1 Clock generation

The system control block facilitates the clock generation. Many clocking variations are possible. Figure 4 gives an overview of potential clock options. Table 26 describes signals on the clocking diagram. The maximum clock frequency is 100 MHz.

Remark: The indicated clock multiplexers shown in Figure 4 are synchronized. In order to operate, the currently selected clock must be running, and the clock to be switched to must also be running. This is so that the multiplexer can gracefully switch between the two clocks without glitches. Other clock multiplexers are not synchronized. The output divider can be stopped and restarted gracefully during switching if a glitch-free output is needed.


The low-power watchdog oscillator provides a selectable frequency in the range of 200 kHz to 1.5 MHz. The accuracy of this clock is limited to +/- 40% over temperature, voltage, and silicon processing variations. To determine the actual watchdog oscillator output, use the frequency measure block. See Section 4.2.3.

The part contains one system PLL that can be configured to use a number of clock inputs and produce an output clock in the range of 1.2 MHz up to the maximum chip frequency, and can be used to run most on-chip functions. The output of the PLL can be monitored through the CLKOUT pin.

Table 26. Clocking diagram signal name descriptions

Name	Description
32k_clk	The 32 kHz output of the RTC oscillator. The 32 kHz clock must be enabled in the RTCOSCCTRL register (see Section 4.5.48).
clk_in	This is the internal clock that comes from the main CLK_IN pin function. That function must be connected to the pin by selecting it in the IOCON block.
frg_clk	The output of the Fractional Rate Generator. The FRG and its source selection are shown in Figure 4.
fro_12m	12 MHz divided down from the currently selected on-chip FRO oscillator. See Section 4.5.46.
fro_hf	The currently selected FRO high speed output. This may be either 96 MHz or 48 MHz. See Section 4.5.46.
main_clk	The main clock used by the CPU and AHB bus, and potentially many others. The main clock and its source selection are shown in Figure 4.
mclk_in	The MCLK input function, when it is connected to a pin by selecting it in the IOCON block.
pll_clk	The output of the PLL. The PLL and its source selection are shown in Figure 4.
wdt_clk	The output of the watchdog oscillator, which has a selectable target frequency (see Section 4.5.47). It must also be enabled in the PDRINCFG0 register (see Section 4.5.52).
"none"	A tied-off source that should be selected to save power when the output of the related multiplexor is not used.

#### Chapter 4: LPC5411x System configuration (SYSCON)

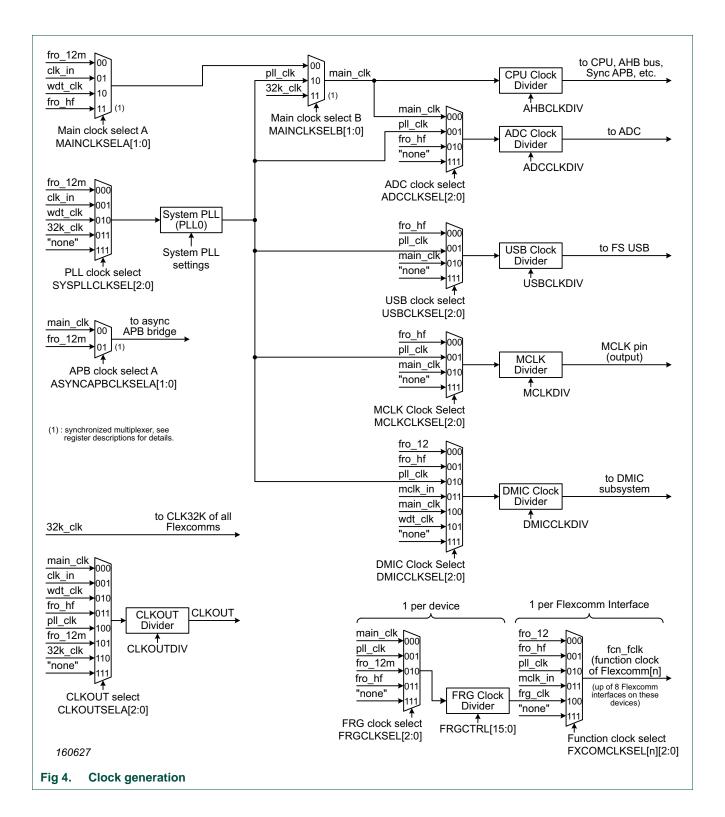

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### 4.5 Register description

All system control block registers reside on word address boundaries. Details of the registers appear in the description of each function. System configuration functions are divided into 3 groups: Main system configuration at base address 0x4000 0000 (see <a href="Table 27">Table 28</a>), and Other system registers at base address 0x4002 0000 (see <a href="Table 29">Table 29</a>).

All address offsets not shown in the tables are reserved and should not be written to.

**Remark:** The reset value column shows the reset value seen when the boot loader executes and the flash contains valid user code. During code development, a different value may be seen if a debugger is used to halt execution prior to boot completion.

Table 27. Register overview: Main system configuration (base address 0x4000 0000)

Name	Access	Offset	Description	Reset value [1]	Section
AHBMATPRIO	R/W	0x010	AHB multilayer matrix priority control	0x0	4.5.1
SYSTCKCAL	R/W	0x040	System tick counter calibration	0x0	4.5.2
NMISRC	R/W	0x048	NMI Source Select	0x0	4.5.3
ASYNCAPBCTRL	R/W	0x04C	Asynchronous APB Control	0x1	4.5.4
PIOPORCAP0	RO	0x0C0	POR captured value of port 0	Note [2]	4.5.5
PIOPORCAP1	RO	0x0C4	POR captured value of port 1	Note [2]	4.5.6
PIORESCAP0	RO	0x0D0	Reset captured value of port 0	Note [3]	4.5.7
PIORESCAP1	RO	0x0D4	Reset captured value of port 1	Note [3]	4.5.8
PRESETCTRL0	R/W	0x100	Peripheral reset control 0	0x0	4.5.9
PRESETCTRL1	R/W	0x104	Peripheral reset control 1	0x0	4.5.10
PRESETCTRLSET0	WO	0x120	Set bits in PRESETCTRL0	-	4.5.11
PRESETCTRLSET1	WO	0x124	Set bits in PRESETCTRL1	-	4.5.12
PRESETCTRLCLR0	WO	0x140	Clear bits in PRESETCTRL0	-	4.5.13
PRESETCTRLCLR1	WO	0x144	Clear bits in PRESETCTRL1	-	4.5.14
SYSRSTSTAT	R/W	0x1F0	System reset status register	Note [4]	4.5.15
AHBCLKCTRL0	R/W	0x200	AHB Clock control 0	0x18B	4.5.16
AHBCLKCTRL1	R/W	0x204	AHB Clock control 1	0x0	4.5.17
AHBCLKCTRLSET0	WO	0x220	Set bits in AHBCLKCTRL0	-	4.5.18
AHBCLKCTRLSET1	WO	0x224	Set bits in AHBCLKCTRL1	-	4.5.19
AHBCLKCTRLCLR0	WO	0x240	Clear bits in AHBCLKCTRL0	-	4.5.20
AHBCLKCTRLCLR1	WO	0x244	Clear bits in AHBCLKCTRL1	-	4.5.21
MAINCLKSELA	R/W	0x280	Main clock source select A	0x0	4.5.22
MAINCLKSELB	R/W	0x284	Main clock source select B	0x0	4.5.23
CLKOUTSELA	R/W	0x288	CLKOUT clock source select A	0x7	4.5.24
SYSPLLCLKSEL	R/W	0x290	PLL clock source select	0x7	4.5.25
ADCCLKSEL	R/W	0x2A4	ADC clock source select	0x7	4.5.26
USBCLKSEL	R/W	0x2A8	USB clock source select	0x7	4.5.27
FXCOMCLKSEL0	R/W	0x2B0	Flexcomm Interface 0 clock source select	0x7	4.5.28
FXCOMCLKSEL1	R/W	0x2B4	Flexcomm Interface 1 clock source select	0x7	4.5.28
FXCOMCLKSEL2	R/W	0x2B8	Flexcomm Interface 2 clock source select	0x7	4.5.28

UM10914

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 27. Register overview: Main system configuration (base address 0x4000 0000) ...continued

Name	Access	Offset	Description	Reset value [1]	Section
FXCOMCLKSEL3	R/W	0x2BC	Flexcomm Interface 3 clock source select	0x7	4.5.28
FXCOMCLKSEL4	R/W	0x2C0	Flexcomm Interface 4 clock source select	0x7	4.5.28
FXCOMCLKSEL5	R/W	0x2C4	Flexcomm Interface 5 clock source select	0x7	4.5.28
FXCOMCLKSEL6	R/W	0x2C8	Flexcomm Interface 6 clock source select	0x7	4.5.28
FXCOMCLKSEL7	R/W	0x2CC	Flexcomm Interface 7 clock source select	0x7	4.5.28
MCLKCLKSEL	R/W	0x2E0	MCLK clock source select	0x7	4.5.29
FRGCLKSEL	R/W	0x2E8	Fractional Rate Generator clock source select	0x7	4.5.30
DMICCLKSEL	R/W	0x2EC	Digital microphone (DMIC) subsystem clock select	0x7	4.5.31
SYSTICKCLKDIV	R/W	0x300	SYSTICK clock divider	0x4000 0000	4.5.32
TRACECLKDIV	R/W	0x304	Trace clock divider	0x4000 0000	4.5.33
AHBCLKDIV	R/W	0x380	AHB clock divider	0x0	4.5.34
CLKOUTDIV	R/W	0x384	CLKOUT clock divider	0x4000 0000	4.5.35
ADCCLKDIV	R/W	0x394	ADC clock divider	0x4000 0000	4.5.36
USBCLKDIV	R/W	0x398	USB clock divider	0x4000 0000	4.5.37
FRGCTRL	R/W	0x3A0	Fractional rate divider	0xFF	4.5.38
DMICCLKDIV	R/W	0x3A8	DMIC clock divider	0x4000 0000	4.5.39
I2SMCLKDIV	R/W	0x3AC	I2S MCLK clock divider	0x4000 0000	4.5.40
FLASHCFG	R/W	0x400	Flash wait states configuration	0x001A	4.5.41
USBCLKCTRL	R/W	0x40C	USB clock control	0x0	4.5.42
USBCLKSTAT	R/W	0x410	USB clock status	0x0	4.5.43
FREQMECTRL	R/W	0x418	Frequency measure register	0x0	4.5.44
MCLKIO	R/W	0x420	MCLK input/output control	0x0	4.5.45
FROCTRL	R/W	0x500	FRO oscillator control	Note [5]	4.5.46
WDTOSCCTRL	R/W	0x508	Watchdog oscillator control	0xA0	4.5.47
RTCOSCCTRL	R/W	0x50C	RTC oscillator 32 kHz output control	0x1	4.5.48
SYSPLLCTRL	R/W	0x580	PLL control	0x8000	4.5.49.1
SYSPLLSTAT	RO	0x584	PLL status	0x0	4.5.49.2
SYSPLLNDEC	R/W	0x588	PLL N decoder	0x0	4.5.49.2
SYSPLLPDEC	R/W	0x58C	PLL P decoder	0x0	4.5.49.3
SYSPLLSSCTRL0	R/W	0x590	PLL spread spectrum control 0	0x0	4.5.49.5
SYSPLLSSCTRL1	R/W	0x594	PLL spread spectrum control 1	0x1000 0000	4.5.49.5
PDSLEEPCFG0	R/W	0x600	Sleep configuration register 0	0x02F8 0540	4.5.50
PDSLEEPCFG1	R/W	0x604	Sleep configuration register 1	0x1000 0000	4.5.51
PDRUNCFG0	R/W	0x610	Power configuration register 0	0x02F8 0540	4.5.52
PDRUNCFG1	R/W	0x614	Power configuration register 1	0x1000 0000	4.5.53
PDRUNCFGSET0	WO	0x620	Set bits in PDRUNCFG0	-	4.5.54
PDRUNCFGSET1	WO	0x624	Set bits in PDRUNCFG1	-	4.5.55
PDRUNCFGCLR0	WO	0x630	Clear bits in PDRUNCFG0	-	4.5.56
PDRUNCFGCLR1	WO	0x634	Clear bits in PDRUNCFG1	-	4.5.57
STARTER0	R/W	0x680	Start logic 0 wake-up enable register	0x0	4.5.58
STARTER1	R/W	0x684	Start logic 1 wake-up enable register	0x0	4.5.59

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 27. Register overview: Main system configuration (base address 0x4000 0000) ... continued

Name	Access	Offset	Description	Reset value [1]	Section
STARTERSET0	WO	0x6A0	Set bits in STARTER0	-	4.5.60
STARTERSET1	WO	0x6A4	Set bits in STARTER1	-	4.5.61
STARTERCLR0	WO	0x6C0	Clear bits in STARTER0	-	4.5.62
STARTERCLR1	WO	0x6C4	Clear bits in STARTER1	-	4.5.63
HWWAKE	R/W	0x780	Configures special cases of hardware wake-up	0x0	4.5.64
CPUCTRL	R/W	0x800	CPU Control for multiple processors	0x4D	4.5.65.1
CPBOOT	R/W	0x804	Coprocessor Boot Address	0x0	4.5.65.2
CPSTACK	R/W	0x808	Coprocessor Stack Address	0x0	4.5.65.3
CPSTAT	RO	0x80C	Coprocessor Status	0x0	4.5.65.4
AUTOCGOR	R/W	0xE04	Auto Clock-Gate Override Register	0x0	4.5.66
JTAGIDCODE	RO	0xFF4	JTAG ID code register	see table	4.5.67
DEVICE_ID0	RO	0xFF8	Part ID register	Note [5]	4.5.68
DEVICE_ID1	RO	0xFFC	Boot ROM and die revision register	Note [5]	4.5.69

Reset Value reflects the data stored in defined bits only. Reserved bits assumed to be 0. [1]

Table 28. Register overview: Asynchronous system configuration (base address 0x4004 0000)

Name	Access	Offset	Description	Reset value [1]	Section
ASYNCPRESETCTRL	R/W	0x000	Async peripheral reset control	0x0	4.5.70
ASYNCPRESETCTRLSET	WO	0x004	Set bits in ASYNCPRESETCTRL	-	4.5.71
ASYNCPRESETCTRLCLR	WO	0x008	Clear bits in ASYNCPRESETCTRL	-	4.5.72
ASYNCAPBCLKCTRL	R/W	0x010	Async peripheral clock control	0x0	4.5.73
ASYNCAPBCLKCTRLSET	WO	0x014	Set bits in ASYNCAPBCLKCTRL	-	4.5.74
ASYNCAPBCLKCTRLCLR	WO	0x018	Clear bits in ASYNCAPBCLKCTRL	-	4.5.75
ASYNCAPBCLKSELA	R/W	0x020	Async APB clock source select A	0x0	4.5.76

<sup>[1]</sup> Reset Value reflects the data stored in defined bits only. Reserved bits assumed to be 0.

Table 29. Register overview: Other system configuration (base address 0x4002 0000)

Name	Access	Offset	Description	Reset value [1]	Section
BODCTRL	R/W	0x44	Brown-Out Detect control	0x0	4.5.77

<sup>[1]</sup> Reset Value reflects the data stored in defined bits only. Reserved bits assumed to be 0.

Determined by the voltage levels on device pins upon power-on reset.

Determined by the voltage levels on device pins when a reset other than power-on reset occurs.

Depends on the source of the most recent reset.

Part dependent.

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### 4.5.1 AHB matrix priority register

The Multilayer AHB Matrix arbitrates between several masters, only if they attempt to access the same matrix slave port at the same time. Care should be taken if the value in this register is changed, improper settings can seriously degrade performance.

Priority values are 3 = highest, 0 = lowest. When the priority is the same, the master with the lower master number is given priority. An example setting could put the Cortex-M4 D-code bus as the highest priority, followed by the I-Code bus. All other masters could share a lower priority.

Table 30. AHB matrix priority register 0 (AHBMATPRIO, main syscon: offset 0x010) bit description

Bit	Symbol	Master number	Description	Reset value
1:0	PRI_ICODE	0	Cortex-M4 I-Code bus priority. Should typically be lower than PRI_DCODE for best operation.	0x0
3:2	PRI_DCODE	1	Cortex M4 D-Code bus priority.	0x0
5:4	PRI_SYS	2	Cortex M4 System bus priority.	0x0
7:6	PRI_M0	3	Cortex-M0+ bus priority. Present on selected devices.	0x0
9:8	PRI_USB	4	USB interface priority.	0x0
11:10	PRI_DMA	5	DMA controller priority.	0x0
31:12	-	-	Reserved. Read value is undefined, only zero should be written.	-

#### 4.5.2 System tick counter calibration register

This register allows software to set up a default value for the SYST\_CALIB register in the System Tick Timer of each CPU. See Chapter 18.

Table 31. System tick timer calibration register (SYSTCKCAL, main syscon: offset 0x040) bit description

Bit	Symbol	Description	Reset value
23:0	CAL	System tick timer calibration value.	0x0
24	SKEW	Initial value for the Systick timer.	
25	NOREF	Initial value for the Systick timer.	
31:26	-	Reserved	-

#### 4.5.3 NMI source selection register

The NMI source selection register selects a peripheral interrupts as source for the NMI interrupt of both CPUs. For a list of all peripheral interrupts and their IRQ numbers see <a href="Table 2">Table 2</a>. For a description of the NMI functionality, see <a href="Ref. 1">Ref. 1"Cortex-M4 TRM"</a>.

**Remark:** In order to change the interrupt source for the NMI, the NMI source must first be disabled by writing 0 to the NMIEN bit. Then change the source by updating the IRQN bits and re-enable the NMI source by setting NMIEN.

31 of 590

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 32. NMI source selection register (NMISRC, main syscon: offset 0x048) bit description

Bit	Symbol	Description	Reset value
5:0	IRQM4	The IRQ number of the interrupt that acts as the Non-Maskable Interrupt (NMI) for the Cortex-M4, if enabled by NMIENM4.	
7:6	-	Reserved. Read value is undefined, only zero should be written.	-
13:8	IRQM0	The IRQ number of the interrupt that acts as the Non-Maskable Interrupt (NMI) for the Cortex-M0+, if enabled by NMIENM0. Present on selected devices.	0x0
29:14	-	Reserved. Read value is undefined, only zero should be written.	-
30	NMIENM0	Write a 1 to this bit to enable the Non-Maskable Interrupt (NMI) source selected by IRQM0. Present on selected devices.	0x0
31	NMIENM4	Write a 1 to this bit to enable the Non-Maskable Interrupt (NMI) source selected by IRQM4.	0x0

**Remark:** If the NMISRC register is used to select an interrupt as the source of Non-Maskable interrupts, and the selected interrupt is enabled, one interrupt request can result in both a Non-Maskable and a normal interrupt. This can be avoided by disabling the normal interrupt in the NVIC.

#### 4.5.4 Asynchronous APB Control register

ASYNCAPBCTRL contains a global enable bit for the asynchronous APB bridge and subsystem, allowing connection to the associated peripherals.

Table 33. Asynchronous APB Control register (ASYNCAPBCTRL, main syscon: offset 0x04C) bit description

Bit	Symbol	Value	Description	Reset value
0	ENABLE		Enables the asynchronous APB bridge and subsystem.	0x1
		0	Disabled. Asynchronous APB bridge is disabled.	
		1	Enabled. Asynchronous APB bridge is enabled.	
31:1	-	-	Reserved. Read value is undefined, only zero should be written.	-

#### 4.5.5 POR captured value of port 0

The PIOPORCAP0 register captures the state of GPIO port 0 at power-on-reset. Each bit represents the power-on reset state of one GPIO pin. This register is a read-only register.

Table 34. POR captured PIO status register 0 (PIOPORCAP0, main syscon: offset 0x0C0) bit description

Bit	Symbol	Description	Reset value
31:0	PIOPORCAP	State of PIO0_31 through PIO0_0 at power-on reset	Depends on external circuitry

#### 4.5.6 POR captured value of port 1

The PIOPORCAP1 register captures the state of GPIO port 1 at power-on-reset. Each bit represents the power-on reset state of one GPIO pin. This register is a read-only register.

Table 35. POR captured PIO status register 1 (PIOPORCAP1, main syscon: offset 0x0C4) bit description

Bit	Symbol	Description	Reset value
31:0	PIOPORCAP	State of PIO1_31 through PIO1_0 at power-on reset	Depends on external circuitry

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### 4.5.7 Reset captured value of port 0

The PIORESCAP0 register captures the state of GPIO port 0 when a reset other than a power-on reset occurs. Each bit represents the reset state of one GPIO pin. This register is a read-only register.

Table 36. Reset captured PIO status register 0 (PIORESCAP0, main syscon: offset 0x0D0) bit description

Bit	Symbol	Description	Reset value
31:0	PIORESCAP	State of PIO0_31 through PIO0_0 for resets other than POR.	Depends on external circuitry

#### 4.5.8 Reset captured value of port 1

The PIORESCAP0 register captures the state of GPIO port 1 when a reset other than a power-on reset occurs. Each bit represents the reset state of one GPIO pin. This register is a read-only register.

Table 37. Reset captured PIO status register 1 (PIORESCAP1, main syscon: offset 0x0D4) bit description

Bit	Symbol	Description	Reset value
31:0	PIORESCAP	State of PIO1_31 through PIO1_0 for resets other than POR.	Depends on external circuitry

#### 4.5.9 Peripheral reset control register 0

The PRESETCTRL0 register allows software to reset specific peripherals. Writing a zero to any assigned bit in this register clears the reset and allows the specified peripheral to operate. Writing a one asserts the reset.

**Remark:** It is recommended that changes to the PRESETCTRL registers be accomplished by using the related PRESETCTRLSET and PRESETCTRLCLR registers. This avoids any unintentional setting or clearing of other bits.

Table 38. Peripheral reset control register 0 (PRESETCTRL0, main syscon: offset 0x100) bit description

Bit	Symbol	Description	Reset value
6:0	-	Reserved. Read value is undefined, only zero should be written.	0x0
7	FLASH_RST	Flash controller reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
8	FMC_RST	Flash accelerator reset control. Note that the FMC must not be reset while executing from flash, and must be reconfigured after reset.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
10:9	-	Reserved. Read value is undefined, only zero should be written.	0x0
11	MUX_RST	Input mux reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
12	-	Reserved. Read value is undefined, only zero should be written.	0x0
13	IOCON_RST	IOCON reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
14	GPIO0_RST	GPIO0 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
15	GPIO1_RST	GPIO1 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
17:16	-	Reserved. Read value is undefined, only zero should be written.	0x0
18	PINT_RST	Pin interrupt (PINT) reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 38. Peripheral reset control register 0 (PRESETCTRL0, main syscon: offset 0x100) bit description

Bit	Symbol	Description	Reset value
19	GINT_RST	Grouped interrupt (GINT) reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
20	DMA_RST	DMA reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
21	CRC_RST	CRC generator reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
22	WWDT_RST	Watchdog timer reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
26:23	-	Reserved. Read value is undefined, only zero should be written.	0x0
27	ADC0_RST	ADC0 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
31:28	-	Reserved. Read value is undefined, only zero should be written.	-

#### 4.5.10 Peripheral reset control register 1

The PRESETCTRL1 register allows software to reset specific peripherals. Writing a zero to any assigned bit in this register clears the reset and allows the specified peripheral to operate. Writing a one asserts the reset.

**Remark:** It is recommended that changes to the PRESETCTRL registers be accomplished by using the related PRESETCTRLSET and PRESETCTRLCLR registers. This avoids any unintentional setting or clearing of other bits.

Table 39. Peripheral reset control register 1 (PRESETCTRL1, main syscon: offset 0x104) bit description

Bit	Symbol	Description	Reset value
0	MRT_RST	Multi-rate timer (MRT) reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
1	-	Reserved. Read value is undefined, only zero should be written.	-
2	SCT0_RST	SCTimer/PWM 0 (SCT0) reset control. 0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
9:3	-	Reserved. Read value is undefined, only zero should be written.	0x0
10	UTICK_RST	Micro-tick Timer reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
11	FC0_RST	Flexcomm Interface 0 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
12	FC1_RST	Flexcomm Interface 1 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
13	FC2_RST	Flexcomm Interface 2 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
14	FC3_RST	Flexcomm Interface 3 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
15	FC4_RST	Flexcomm Interface 4 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
16	FC5_RST	Flexcomm Interface 5 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
17	FC6_RST	Flexcomm Interface 6 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 39. Peripheral reset control register 1 (PRESETCTRL1, main syscon: offset 0x104) bit description

Bit	Symbol	Description	Reset value
18	FC7_RST	Flexcomm Interface 7 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
19	DMIC_RST	Digital microphone interface reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
21:20	-	Reserved. Read value is undefined, only zero should be written.	0x0
22	CTIMER2_RST	CTIMER2 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function	0x0
24:23	-	Reserved. Read value is undefined, only zero should be written.	0x0
25	USB_RST	USB reset control. 0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
26	CTIMER0_RST	CTIMER0 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
27	CTIMER1_RST	CTIMER1 reset control.  0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
31:28	-	Reserved. Read value is undefined, only zero should be written.	-

#### 4.5.11 Peripheral reset control set register 0

Writing a 1 to a bit position in PRESETCTRLSET0 sets the corresponding position in PRESETCTRL0. This is a write-only register. For bit assignments, see <u>Table 38</u>.

Table 40. Peripheral reset control set register 0 (PRESETCTRLSET0, main syscon: offset 0x120) bit description

Bit	Symbol	Description	Reset value
31:0		Writing ones to this register sets the corresponding bit or bits in the PRESETCTRL0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PRESETCTRL0 are reserved and only zeroes should be written to them.	

#### 4.5.12 Peripheral reset control set register 1

Writing a 1 to a bit position in PRESETCTRLSET1 sets the corresponding position in PRESETCTRL1. This is a write-only register. For bit assignments, see <u>Table 39</u>.

Table 41. Peripheral reset control set register 1 (PRESETCTRLSET1, main syscon: offset 0x124) bit description

Bit	Symbol	Description	Reset value
31:0	RST_SET1	Writing ones to this register sets the corresponding bit or bits in the PRESETCTRL1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PRESETCTRL1 are reserved and only zeroes should be written to them.	

#### 4.5.13 Peripheral reset control clear register 0

Writing a 1 to a bit position in PRESETCTRLCLR0 clears the corresponding position in PRESETCTRL0. This is a write-only register. For bit assignments, see <u>Table 38</u>.

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 42. Peripheral reset control clear register 0 (PRESETCTRLCLR0, main syscon: offset 0x140) bit description

Bit	Symbol	Description	Reset value
31:0	RST_CLR0	Writing ones to this register clears the corresponding bit or bits in the PRESETCTRL0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PRESETCTRL0 are reserved and only zeroes should be written to them.	

#### 4.5.14 Peripheral reset control clear register 1

Writing a 1 to a bit position in PRESETCTRLCLR1 clears the corresponding position in PRESETCTRL1. This is a write-only register. For bit assignments, see Table 39.

Table 43. Peripheral reset control clear register 1 (PRESETCTRLCLR1, main syscon: offset 0x144) bit description

Bit	Symbol	Description	Reset value
31:0	RST_CLR1	Writing ones to this register clears the corresponding bit or bits in the PRESETCTRL1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PRESETCTRL1 are reserved and only zeroes should be written to them.	

#### 4.5.15 System reset status register

The SYSRSTSTAT register shows the source of the latest reset event. The bits are cleared by writing a one to any of the bits. The POR event clears all other bits in this register. If another reset signal - for example the external RESET pin - remains asserted after the POR signal is negated, then its bit is set to detected.

Table 44. System reset status register (SYSRSTSTAT, main syscon: offset 0x01F0) bit description

Bit	Symbol	Value	Description
0	POR		POR reset status. Assertion of the POR signal sets this bit, and clears all of the other bits in this register. But if another Reset signal (e.g., External Reset) remains asserted after the POR signal is negated, then its bit is set. This bit is not affected by any of the other sources of Reset.
		0	No POR detected.
		1	POR detected. Writing a one clears this flag.
1	EXTRST		Status of the external RESET pin. External reset status. Assertion of the external RESET signal sets this bit.
		0	No reset event detected.
		1	Reset detected. This bit is cleared by software writing a one to this bit, and by POR.
2	WDT		Status of the Watchdog reset. This bit is set when the Watchdog Timer times out and the WDTRESET bit in the Watchdog Mode Register is 1.
		0	No WDT reset detected.
		1	WDT reset detected. Writing a one clears this flag. This bit is cleared by software writing a one to this bit, and by POR.

# Chapter 4: LPC5411x System configuration (SYSCON)

Table 44. System reset status register (SYSRSTSTAT, main syscon: offset 0x01F0) bit description

Bit	Symbol	Value	Description
3	BOD		Status of the Brown-out detect reset.  This bit is set when the VDD voltage reaches a level below the BOD reset trip level.  If the VDD voltage dips from the normal operating range to below the BOD reset trip level and recovers, the BOD bit will be set to 1.  If the VDD voltage dips from the normal operating range to below the BOD reset trip level and continues to decline to the level at which POR is asserted, the BOD bit is cleared.  If the VDD voltage rises continuously from the POR assertion level to a level above the BOD reset trip level, the BOD bit will be set to 1.  This bit is cleared by software writing a one to this bit, and by POR.  Note: Only in the case where a reset occurs and the POR = 0, the BODR bit indicates if the VDD voltage was below the BOD reset trip level.
		0	No BOD reset detected.
		1	BOD reset detected. Writing a one clears this flag.
4	SYSRST		Status of the software system reset. This bit is set if the processor has been reset due to a system reset request. Setting the SYSRESETREQ bit in the Cortex-M4 AIRCR register causes a chip reset. This bit is cleared by software writing a one to this bit, and by POR.
		0	No System reset detected.
		1	System reset detected. Writing a one clears this flag.
31:5	-	-	Reserved

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.16 AHB Clock Control register 0

The AHBCLKCTRL0 register enables the clocks to individual system and peripheral blocks. The system clock (bit 0) provides the clock for the AHB, the APB bridge, the CPU, the SYSCON block, and the PMU. This clock cannot be disabled.

**Remark:** It is strongly recommended that changes to the AHBCLKCTRL registers be accomplished by using the related AHBCLKCTRLSET and AHBCLKCTRLCLR registers. This avoids any unintentional setting or clearing of other bits, which could have detrimental effects.

Regarding bits 3 and 4, see <u>Section 2.1.1</u> for details of SRAM configuration.

Table 45. AHB Clock Control register 0 (AHBCLKCTRL0, main syscon: offset 0x200) bit description

Bit	Symbol	Description	Reset value after boot
0	-	Reserved. This read-only bit cannot be cleared.	0x1
1	ROM	Enables the clock for the Boot ROM. 0 = Disable; 1 = Enable.	0x1
2	-	Reserved	-
3	SRAM1	Enables the clock for SRAM1. 0 = Disable; 1 = Enable.	0x1
4	SRAM2	Enables the clock for SRAM2. 0 = Disable; 1 = Enable.	0x0
6:5	-	Reserved	-
7	FLASH	Enables the clock for the flash controller. 0 = Disable; 1 = Enable. This clock is needed for flash programming, not for flash read.	0x1
8	FMC	Enables the clock for the Flash accelerator. 0 = Disable; 1 = Enable. This clock is needed if the flash is being read.	0x1
10:9	-	Reserved	-
11	INPUTMUX	Enables the clock for the input muxes. 0 = Disable; 1 = Enable.	0x0
12	-	Reserved	0x0
13	IOCON	Enables the clock for the IOCON block. 0 = Disable; 1 = Enable.	0x0
14	GPIO0	Enables the clock for the GPIO0 port registers. 0 = Disable; 1 = Enable.	0x0
15	GPIO1	Enables the clock for the GPIO1 port registers. 0 = Disable; 1 = Enable.	0x0
17:16	-	Reserved	0x0
18	PINT	Enables the clock for the pin interrupt block.0 = Disable; 1 = Enable.	0x0
19	GINT	Enables the clock for the grouped pin interrupt block. 0 = Disable; 1 = Enable.	0x0
20	DMA	Enables the clock for the DMA controller. 0 = Disable; 1 = Enable.	0x0
21	CRC	Enables the clock for the CRC engine. 0 = Disable; 1 = Enable.	0x0
22	WWDT	Enables the clock for the Watchdog Timer. 0 = Disable; 1 = Enable.	0x0
23	RTC	Enables the bus clock for the RTC. 0 = Disable; 1 = Enable.	0x0
25:24	-	Reserved	-
26	MAILBOX	Enables the clock for the Mailbox. 0 = Disable; 1 = Enable. Present on selected devices	0x0
27	ADC0	Enables the clock for the ADC0 register interface. 0 = Disable; 1 = Enable.	0x0
31:28	-	Reserved	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.17 AHB Clock Control register 1

The AHBCLKCTRL1 register enables the clocks to individual peripheral blocks.

Table 46. AHB Clock Control register 1 (AHBCLKCTRL1, main syscon: offset 0x204) bit description

Bit	Symbol	Description	Reset value
0	MRT	Enables the clock for the Multi-Rate Timer. 0 = Disable; 1 = Enable.	0x0
1	-	Reserved	-
2	SCT0	Enables the clock for SCT0. 0 = Disable; 1 = Enable.	0x0
9:3	-	Reserved	-
10	UTICK	Enables the clock for the Micro-tick Timer. 0 = Disable; 1 = Enable.	0x0
11	FLEXCOMM0	Enables the clock for Flexcomm Interface 0. 0 = Disable; 1 = Enable.	0x0
12	FLEXCOMM1	Enables the clock for Flexcomm Interface 1. 0 = Disable; 1 = Enable.	0x0
13	FLEXCOMM2	Enables the clock for Flexcomm Interface 2. 0 = Disable; 1 = Enable.	0x0
14	FLEXCOMM3	Enables the clock for Flexcomm Interface 3. 0 = Disable; 1 = Enable.	0x0
15	FLEXCOMM4	Enables the clock for Flexcomm Interface 4. 0 = Disable; 1 = Enable.	0x0
16	FLEXCOMM5	Enables the clock for Flexcomm Interface 5. 0 = Disable; 1 = Enable.	0x0
17	FLEXCOMM6	Enables the clock for Flexcomm Interface 6. 0 = Disable; 1 = Enable.	0x0
18	FLEXCOMM7	Enables the clock for Flexcomm Interface 7. 0 = Disable; 1 = Enable.	0x0
19	DMIC	Enables the clock for the digital microphone interface. 0 = Disable; 1 = Enable.	0x0
21:20	-	Reserved	0x0
22	CTIMER2	Enables the clock for CTIMER 2. 0 = Disable; 1 = Enable.	0x0
24:23	-	Reserved	-
25	USB	Enables the clock for the USB interface. 0 = Disable; 1 = Enable.	0x0
26	CTIMER0	Enables the clock for timer CTIMER0. 0 = Disable; 1 = Enable.	0x0
27	CTIMER1	Enables the clock for timer CTIMER1. 0 = Disable; 1 = Enable.	0x0
31:28	-	Reserved	-

## 4.5.18 AHB Clock Control Set register 0

Writing a 1 to a bit position in AHBCLKCTRLSET0 sets the corresponding position in AHBCLKCTRL0. This is a write-only register. For bit assignments, see <u>Table 45</u>.

Table 47. Clock control set register 0 (AHBCLKCTRLSET0, main syscon: offset 0x220) bit description

Bit	Symbol	Description	Reset value
31:0	CLK_SET0	Writing ones to this register sets the corresponding bit or bits in the AHBCLKCTRL0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in AHBCLKCTRL0 are reserved and only zeroes should be written to them.	

## 4.5.19 AHB Clock Control Set register 1

Writing a 1 to a bit position in AHBCLKCTRLSET1 sets the corresponding position in AHBCLKCTRL1. This is a write-only register. For bit assignments, see <u>Table 46</u>.

## Chapter 4: LPC5411x System configuration (SYSCON)

Table 48. Clock control set register 1 (AHBCLKCTRLSET1, main syscon: offset 0x224) bit description

Bit	Symbol	Description	Reset value
31:0	CLK_SET1	Writing ones to this register sets the corresponding bit or bits in the AHBCLKCTRL1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in AHBCLKCTRL1 are reserved and only zeroes should be written to them.	

## 4.5.20 AHB Clock Control Clear register 0

Writing a 1 to a bit position in AHBCLKCTRLCLR0 clears the corresponding position in AHBCLKCTRLO. This is a write-only register. For bit assignments, see Table 45.

Table 49. Clock control clear register 0 (AHBCLKCTRLCLR0, main syscon: offset 0x240) bit description

Bit	Symbol	Description	Reset value
31:0	CLK_CLR0	Writing ones to this register clears the corresponding bit or bits in the AHBCLKCTRL0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in AHBCLKCTRL0 are reserved and only zeroes should be written to them.	

# 4.5.21 AHB Clock Control Clear register 1

Writing a 1 to a bit position in AHBCLKCTRLCLR1 clears the corresponding position in AHBCLKCTRL1. This is a write-only register. For bit assignments, see <u>Table 46</u>.

Table 50. Clock control clear register 1 (AHBCLKCTRLCLR1, main syscon: offset 0x244) bit description

Bit	Symbol	Description	Reset value
31:0	CLK_CLR1	Writing ones to this register clears the corresponding bit or bits in the AHBCLKCTRL1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in AHBCLKCTRL1 are reserved and only zeroes should be written to them.	

## 4.5.22 Main clock source select register A

This register selects one of the internal oscillators, FRO, system oscillator, or watchdog oscillator. The oscillator selected is then one of the inputs to the main clock source select register B (see Table 52), which selects the clock source for the main clock. All clocks to the core, memories, and peripherals on the synchronous APB bus are derived from the main clock.

Remark: Note that this selection is internally synchronized: the clock being switched from and the clock being switched to must both be running and have occurred in specific states before the selection actually changes.

## Chapter 4: LPC5411x System configuration (SYSCON)

Table 51. Main clock source select register A (MAINCLKSELA, main syscon: offset 0x280) bit description

Bit	Symbol	Value	Description	Reset value
1:0	SEL		Clock source for main clock source selector A	0x0
		0x0	FRO 12 MHz (fro_12m)	
		0x1	CLKIN (clk_in)	
		0x2	Watchdog oscillator (wdt_clk)	
		0x3	FRO 96 or 48 MHz (fro_hf)	
31:2	-	-	Reserved	-

# 4.5.23 Main clock source select register B

This register selects the clock source for the main clock. All clocks to the core, memories, and peripherals are derived from the main clock.

One input to this register is the main clock source select register A (see <u>Table 51</u>), which selects one of the three internal oscillators, FRO, system oscillator, or watchdog oscillator.

**Remark:** Note that this selection is internally synchronized: the clock being switched from and the clock being switched to must both be running and have occurred in specific states before the selection actually changes.

Table 52. Main clock source select register B (MAINCLKSELB, main syscon: offset 0x284) bit description

Bit	Symbol	Value	Description	Reset value
1:0	SEL		Clock source for main clock source selector B. Selects the clock source for the main clock.	0x0
		0x0	MAINCLKSELA. Use the clock source selected in MAINCLKSELA register.	
		0x1	Reserved setting	
		0x2	System PLL output (pll_clk)	
		0x3	RTC oscillator 32 kHz output (32k_clk)	
31:2	-	-	Reserved	-

41 of 590

## Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.24 CLKOUT clock source select register A

This register pre-selects one of the internal oscillators for the clock sources visible on the CLKOUT pin.

Table 53. CLKOUT clock source select register (CLKOUTSELA, main syscon: offset 0x288) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		CLKOUT clock source selection	0x7
		0x0	Main clock (main_clk)	
		0x1	CLKIN (clk_in)	
		0x2	Watchdog oscillator (wdt_clk)	
		0x3	FRO 96 or 48 MHz (fro_hf)	
		0x4	PLL output (pll_clk)	
		0x5	FRO 12 MHz (fro_12m)	
		0x6	RTC oscillator 32 kHz output (32k_clk)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
31:3	-	-	Reserved	-

# 4.5.25 System PLL clock source select register

This register selects the clock source for the system PLL.

Table 54. System PLL clock source select register (SYSPLLCLKSEL, main syscon: offset 0x290) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		System PLL clock source selection	0x7
		0x0	FRO 12 MHz (fro_12m)	
		0x1	CLKIN (clk_in)	
		0x2	Watchdog oscillator (wdt_clk)	
		0x3	RTC 32 kHz clock (32k_clk)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
			Other values are reserved settings.	
31:3	-	-	Reserved	-

# 4.5.26 ADC clock source select register

This register selects a clock source for the 12-bit ADCs that is to the system clock. To use a clock other than the Main clock, select the asynchronous clock mode in the ADC control register.

Table 55. ADC clock source select (ADCCLKSEL, main syscon: offset 0x2A4) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		ADC clock source selection	0x7
		0x0	Main clock (main_clk)	
		0x1	System PLL output (pll_clk)	
		0x2	FRO 96 or 48 MHz (fro_hf)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
			Other values are reserved settings.	
31:3	-	-	Reserved	-

UM10914

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.27 USB clock source select register

This register selects a clock source for the USB device.

Table 56. USB clock source select register (USBCLKSEL, main syscon: offset 0x2A8) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		USB device clock source selection	0x7
		0x0	FRO 96 or 48 MHz (fro_hf)	
		0x1	System PLL output (pll_clk)	
		0x2	Main clock (main_clk)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
			Other values are reserved settings.	
31:3	-	-	Reserved	-

# 4.5.28 Flexcomm Interface clock source select registers

These registers select the clock source for each Flexcomm Interface serial peripheral. Each Flexcomm Interface has its own clock source selection.

Table 57. Flexcomm Interface clock source select registers (FXCOMCLKSEL, main syscon: offsets 0x2B0 through 2CC) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		Flexcomm Interface clock source selection. One per Flexcomm Interface.	0x7
		0x0	FRO 12 MHz (fro_12m)	
		0x1	FRO 96 or 48 MHz (fro_hf)	
		0x2	System PLL output (pll_clk)	
		0x3	MCLK pin input, when selected in IOCON (mclk_in)	
		0x4	FRG clock, the output of the fractional rate generator (frg_clk)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
			Other values are reserved settings.	
31:3	-	-	Reserved	-

# 4.5.29 MCLK clock source select register

This register selects a clock to provide to the MCLK output function. In a system using I<sup>2</sup>S and/or digital microphone, this should be related to the clock used by those functions.

Table 58. MCLK clock source select register (MCLKCLKSEL, main syscon: offset 0x2E0) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		MCLK source select. This may be used by Flexcomm Interfaces that support I2S, and/or by the digital microphone subsystem.	0x7
		0x0	FRO 96 or 48 MHz (fro_hf)	
		0x1	System PLL output (pll_clk)	
		0x2	Main clock (main_clk)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
			Other values are reserved settings.	
31:3	-	-	Reserved. Read value is undefined, only zero should be written.	-

UM10914

## Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.30 FRG clock source select register

This register selects a clock source for the Fractional Rate Generator.

Table 59. FRG clock source select register (FRGCLKSEL, main syscon: offset 0x2E8) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		Fractional Rate Generator clock source select.	0x7
		0x0	Main clock (main_clk)	
		0x1	System PLL output (pll_clk)	
		0x2	FRO 12 MHz (fro_12m)	
		0x3	FRO 96 or 48 MHz (fro_hf)	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
			Other values are reserved settings.	
31:3	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.31 DMIC clock source select register

This register selects a clock to provide to the DMIC subsystem.

Table 60. DMIC clock source select register (DMICCLKSEL, main syscon: offset 0x2EC) bit description

Bit	Symbol	Value	Description	Reset value
2:0	SEL		DMIC subsystem clock source select.	0x7
		0x0	FRO 12 MHz (fro_12m)	
		0x1	FRO 96 or 48 MHz (fro_hf)	
		0x2	System PLL output (pll_clk)	
		0x3 MCLK pin input, when selected in IOCON (mclk_in)	MCLK pin input, when selected in IOCON (mclk_in)	
		0x4	Main clock (main_clk)	
		0x5	Watchdog oscillator (wdt_clk)	
		0x6	Reserved setting	
		0x7	None, this may be selected in order to reduce power when no output is needed.	
31:3	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.32 SYSTICK clock divider register

This register configures the SYSTICK peripheral clock.

Table 61. SYSTICK clock divider (SYSTICKCLKDIV, main syscon: offset 0x300) bit description

Bit	Symbol	Description	Reset value
7:0	DIV		0x0
		0: Divide by 1	
		255: Divide by 256.	
28:8	-	Reserved. Read value is undefined, only zero should be written.	-

## Chapter 4: LPC5411x System configuration (SYSCON)

Table 61. SYSTICK clock divider (SYSTICKCLKDIV, main syscon: offset 0x300) bit description

Bit	Symbol	Description	Reset value
29		Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.33 Trace clock divider register

This register configures the trace clock, which is used in conjunction with SWO during debug.

Table 62. Trace clock divider (TRACECLKDIV, main syscon: offset 0x304) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value. 0: Divide by 1	0x0
		255: Divide by 256.	
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

## 4.5.34 AHB clock divider register

This register controls how the main clock is divided to provide the system clock to the AHB bus, CPU, and memories.

Table 63. System clock divider register (AHBCLKDIV, main syscon: offset 0x380) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value. 0: Divide by 1 255: Divide by 256.	0x0
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x0
31	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.35 CLKOUT clock divider register

This register determines the divider value for the clock signal on the CLKOUT pin.

## Chapter 4: LPC5411x System configuration (SYSCON)

Table 64. CLKOUT clock divider register (CLKOUTDIV, main syscon: offset 0x384) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value.	0x0
		0: Divide by 1.	
		255: Divide by 256.	
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.36 ADC clock source divider register

This register divides the clock to the ADC.

Table 65. ADC clock source divider (ADCCLKDIV, main syscon: offset 0x394) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value. 0: Divide by 1 255: Divide by 256.	0x0
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.37 USB clock divider register

This register determines the divider value for the USB function clock.

Table 66. USB clock divider register (USBCLKDIV, main syscon: offset 0x398) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value. 0: Divide by 1 255: Divide by 256.	0x0
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

## 4.5.38 Fractional baud rate generator register

All Flexcomm Interfaces have, as one of their possible clock sources, a common clock (see <u>Figure 4</u>), that can be adjusted by a fractional divider. This is intended primarily to create a base baud rate clock for USART functions, but may potentially be used for other purposes. This register sets the MULT and DIV values for the fractional rate generator.

**Remark:** When the FRG is used to create a clock for use by one or more Flexcomm Interfaces (the typical use of the FRG), the FRG output frequency should not be higher than 48 MHz.

The output rate is:

Flexcomm Interface function clock = (clock selected via FRGCLKSEL) / (1 + MULT / DIV)

The clock used by the fractional rate generator is selected via the FRGSEL register (see Section 4.5.30).

**Remark:** In order to use the fractional baud rate generator, 0xFF must first be written to the DIV value to yield a denominator value of 256. All other values are not supported.

See also <u>Section 22.3.1 "Configure the Flexcomm Interface clock and USART baud rate"</u> and Section 22.7.2 "Clocking and baud rates".

Table 67. Fractional baud rate generator register (FRGCTRL, main syscon: offset 0x3A0) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Denominator of the fractional divider. DIV is equal to the programmed value +1. Always set to 0xFF to use with the fractional baud rate generator.	0xFF
15:8	MULT	Numerator of the fractional divider. MULT is equal to the programmed value.	0x0
31:16	-	Reserved	-

# 4.5.39 Digital microphone interface clock divider register

This register determines the divider value for the digital microphone interface and subsystem.

Table 68. Digital microphone interface clock divider register (DMICCLKDIV, main syscon: offset 0x3A8) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value. 0: Divide by 1.	0x0
		 255: Divide by 256.	
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

## 4.5.40 MCLK clock divider register

This register determines the divider value for the MCLK output, if used by the application.

UM10914

# Chapter 4: LPC5411x System configuration (SYSCON)

Table 69. MCLK clock divider register (MCLKDIV, main syscon: offset 0x3AC) bit description

Bit	Symbol	Description	Reset value
7:0	DIV	Clock divider value. 0: Divide by 1 255: Divide by 256.	0x0
28:8	-	Reserved. Read value is undefined, only zero should be written.	-
29	RESET	Resets the divider counter. Can be used to make sure a new divider value is used right away rather than completing the previous count.	0x0
30	HALT	Halts the divider counter. The intent is to allow the divider's clock source to be changed without the risk of a glitch at the output.	0x1
31	-	Reserved. Read value is undefined, only zero should be written.	-

48 of 590

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.41 Flash configuration register

Depending on the system clock frequency, access to the flash memory can be configured with various access times by writing to the FLASHCFG register. It is recommended to use the Chip\_POWER\_SetVoltage Power API (see <u>Section 31.4.2</u>) to configure device operation in order to achieve lower power operation. However, flash timing can also be set up by user software as shown in <u>Table 70</u>.

Enabling buffering, acceleration, and prefetch will substantially improve performance. Buffering saves power by allowing previously accessed information to be reused without a flash read. Acceleration saves power by reducing CPU stalls. Prefetch typically has a small power cost due to some flash reads being performed that ultimately are not needed. Additional information about the flash accelerator may be found in Section 4.6.4.

**Remark:** Improper setting of this register may result in incorrect operation of the flash memory. Do not change the flash access time when using the power API in low-power mode.

Table 70. Flash configuration register (FLASHCFG, main syscon: offset 0x400) bit description

Bit	Symbol	Value	Description	Reset value
1:0	FETCHCFG		Instruction fetch configuration. This field determines how flash accelerator buffers are used for instruction fetches.	0x2
		0x0	Instruction fetches from flash are not buffered. Every fetch request from the CPU results in a read of the flash memory. This setting may use significantly more power than when buffering is enabled.	
		0x1	One buffer is used for all instruction fetches.	
		0x2	All buffers may be used for instruction fetches.	
		0x3	Reserved setting, do not use.	
3:2	DATACFG		Data read configuration. This field determines how flash accelerator buffers are used for data accesses.	0x2
		0x0	Data accesses from flash are not buffered. Every data access from the CPU results in a read of the flash memory.	
		0x1	One buffer is used for all data accesses.	
		0x2	All buffers may be used for data accesses.	
		0x3	Reserved setting, do not use.	
4	ACCEL		Acceleration enable.	0x1
		0	Flash acceleration is disabled. Every flash read (including those fulfilled from a buffer) takes FLASHTIM + 1 system clocks. This allows more determinism at a cost of performance.	
		1	Flash acceleration is enabled. Performance is enhanced, dependent on other FLASHCFG settings.	
5	PREFEN		Prefetch enable.	0x0
		0	No instruction prefetch is performed.	
		1	If the FETCHCFG field is not 0, the next flash line following the current execution address is automatically prefetched if it is not already buffered.	

## Chapter 4: LPC5411x System configuration (SYSCON)

Table 70. Flash configuration register (FLASHCFG, main syscon: offset 0x400) bit description

Bit	Symbol	Value	Description	Reset value	
6	PREFOVR		Prefetch override. This bit only applies when PREFEN = 1 and a buffered instruction is completing for which the next flash line is not already buffered or being prefetched.	0x0	
		0	Any previously initiated prefetch will be completed.		
		1	Any previously initiated prefetch will be aborted, and the next flash line following the current execution address will be prefetched if not already buffered.		
11:7	-	-	Reserved	-	
15:12	FLASHTIM	FLASHTIM		Flash memory access time. The number of system clocks used for flash accesses is equal to FLASHTIM +1.	0x0
		0x0	1 system clock flash access time (for system clock rates up to 12 MHz).		
		0x1	2 system clocks flash access time (for system clock rates up to 30 MHz).		
		0x2	3 system clocks flash access time (for system clock rates up to 60 MHz).		
		0x3	4 system clocks flash access time (for system clock rates up to 85 MHz).		
		0x4	5 system clocks flash access time (for system clock rates up to 100 MHz).		
			Other values give: "FLASHTIM" + 1 system clocks flash access time.		
31:16	-	-	Reserved	-	

# 4.5.42 USB clock control register

This register controls the polarity of the USB\_NEED\_CLK signal for triggering the USB wake-up interrupt. For details of how to use the USB\_NEED\_CLK signal for waking up the part from deep-sleep mode, see <u>Section 20.7.6</u>.

Table 71. USB clock control register (USBCLKCTRL, main syscon: offset 0x40C) bit description

Bit	Symbol	Value	Description	Reset value
0	-	-	Reserved	-
1	POL_CLK		USB_NEED_CLK polarity for triggering the USB wake-up interrupt.	0x0
		0	Falling edge of the USB_NEED_CLK triggers the USB wake-up (default).	
		1	Rising edge of the USB_NEED_CLK triggers the USB wake-up.	
31:2	-	-	Reserved	-

# 4.5.43 USB clock status register

This register is read-only and returns the status of the USB\_NEED\_CLK signal. For details of how to use the USB\_NEED\_CLK signal for waking up the part from deep-sleep mode, see Section 20.7.6.

Table 72. USB clock status register (USBCLKSTAT, main syscon: offset 0x410) bit description

Bit	Symbol	Value	Description	Reset value
0	NEED_CLKST		USB_NEED_CLK signal status	0x0
		0	Low	
		1	High	
31:1	-	-	Reserved	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

## 4.5.44 Frequency measure function control register

This register starts the frequency measurement function and stores the result in the CAPVAL field. The target frequency can be calculated as follows with the frequencies given in MHz:

 $F_{target} = (CAPVAL - 2) \times F_{reference}/2^{14}$ 

Select the reference and target frequencies using the FREQMEAS\_REF and FREQMEAS\_TARGET before starting a frequency measurement by setting the PROG bit in FREQMECTRL.

Table 73. Frequency measure function control register (FREQMECTRL, main syscon: offset 0x418) bit description

Bit	Symbol	Description	Reset value		
13:0	CAPVAL	Stores the capture result which is used to calculate the frequency of the target clock. This field is read-only.			
30:14	-	Reserved. Read value is undefined, only zero should be written.	-		
31	PROG	Set this bit to one to initiate a frequency measurement cycle. Hardware clears this bit when the measurement cycle has completed and there is valid capture data in the CAPVAL field (bits 13:0).	0x0		

#### Also see:

- Section 4.2.3 "Measure the frequency of a clock signal"
- Section 4.6.6 "Frequency measure function"
- Frequency reference clock select register (FREQMEAS\_REF) Section 8.6.4
- Frequency target clock select register (FREQMEAS\_TARGET) Section 8.6.5

#### 4.5.45 MCLK input/output control register

This register selects the direction of the pin associated with MCLK when MCLK is the elected function on that pin.

Table 74. MCLK input/output control register (MCLKIO, main syscon: offset 0x420) bit description

Bit	Symbol	Value	Description	Reset value
0	DIR		MCLK direction control.	0x0
		0	The MCLK function is an input.	
		1	The MCLK function is an output.	
31:1	-	-	Reserved, only zero should be written.	-

# 4.5.46 FRO Control register

This register is used to select and trim the on-chip FRO oscillator for the higher frequency clock, as well as configuration for the automatic USB rate adjustment mode. The FRO High Speed selection (determines which oscillator produces fro\_hf) and the current trim have an effect on the 12 MHz FRO output (fro\_12m) because it is derived from the currently selected high frequency output. The trim value is factory-preset for the 48 MHz oscillator and written by the boot code on start-up.

## Chapter 4: LPC5411x System configuration (SYSCON)

Table 75. FRO control register (FROCTRL, main syscon: offset 0x500) bit description

Bit	Symbol	Value	Description	Reset value
13:0	TRIM	-	This value is factory trimmed to account for bias and temperature compensation. The value should not be changed by software. Also see the WRTRIM bit description.	NA
14	SEL		Select the fro_hf output frequency. This bit can only be changed by software when the WRTRIM bit = 1. Note that the initial factory trim value is for the 48 MHz FRO.	0x0
		0	48 MHz	
		1	96 MHz	
15	-	-	Reserved, only zero should be written.	NA
23:16	FREQTRIM	-	Frequency trim. Boot code configures this to a device-specific factory trim value for the 48 MHz FRO.  If USBCLKADJ = 1, this field is read-only and provides the value resulting from USB rate adjustment. See the USBMODCFG flag regarding reading this field.  Application code may adjust this field when USBCLKADJ = 0. A single step of FREQTRIM is roughly equivalent to 0.1% of the selected FRO frequency.	see description
24	USBCLKADJ		USB clock adjust mode.	0x0
		0	Normal operation.	
		1	Automatic USB rate adjustment mode. If the USB FS device peripheral is enabled and connected to a USB host, it provides clock adjustment information to the FRO based on SOF packets.  USB rate adjustment requires a number of cycles to take place. the USBMODCHG bit (see below) indicates when initial adjustment is complete, and when later adjustments are in progress.	
			Remark: software must not alter TRIM and FREQTRIM while USBCLKADJ = 1.	
			Remark: see USBCLKADJ usage notes below this table.	
25	USBMODCHG	-	USB Mode value Change flag. When 1, indicates that the USB trim is currently being updated (or is still starting up) and software should wait to read FREQTRIM. Update occurs at most once per millisecond.	0x0
29:26	-	-	Reserved, only zero should be written.	NA
30	HSPDCLK		High speed clock disable. Allows disabling the highs-speed FRO output if it is not needed.	0x1
		0	The high-speed FRO output is disabled.	
		1	The selected high-speed FRO output (48 MHz or 96 MHz) is enabled.	
31	WRTRIM	-	Write Trim value. Must be written to 1 to modify the SEL or TRIM fields, during the same write. This bit always reads as 0.	0x0

# **Notes on using USBCLKADJ**

When turning on USBCLKADJ, the current FREQTRIM value will be used as the starting value. From then on, the adjusted value will be used as long as enabled (whether USB is active or not).

If USBCLKADJ is turned off, the application may take one of two actions:

 Read the register to pick up the adjusted FREQTRIM and then write back with the USBADJ cleared. The FRO will continue to use the adjusted value.

## Chapter 4: LPC5411x System configuration (SYSCON)

2. If software saved the original factory trimmed value of FREQTRIM, it can be written back as above.

# 4.5.47 Watchdog oscillator control register

This register controls the frequency of the watchdog oscillator, in the range of 200 kHz to 1.5 MHz. This oscillator is connected to the watchdog timer and the Micro-tick Timer. The low-power nature of this oscillator limits its accuracy to +/- 40% over temperature, voltage, and silicon processing variations. The actual frequency may be measured using the frequency measure block. See Section 4.2.3.

Table 76. Watchdog oscillator control register (WDTOSCCTRL, main syscon: offset 0x508) bit description

Bit	Symbol	Description	Reset value
4:0	DIVSEL	Divider select. Selects the value of the divider that adjusts the output of the oscillator.  0x00 = divide by 2  0x01 = divide by 4  0x02 = divide by 6   0x1E = divide by 62  0x1F = divide by 64	0x0
9:5	FREQSEL	Frequency select. Selects the frequency of the oscillator.  0x00 = invalid setting when watchdog oscillator is running  0x01 = 0.4 MHz  0x02 = 0.6 MHz  0x03 = 0.75 MHz  0x04 = 0.9 MHz  0x05 = 1.0 MHz  0x06 = 1.2 MHz  0x07 = 1.3 MHz  0x08 = 1.4 MHz  0x08 = 1.4 MHz  0x09 = 1.5 MHz  0x00 = 1.8 MHz  0x00 = 1.9 MHz  0x0C = 1.8 MHz  0x0E = 2.0 MHz  0x0F = 2.05 MHz  0x10 = 2.1 MHz  0x11 = 2.2 MHz  0x12 = 2.25 MHz  0x12 = 2.25 MHz  0x14 = 2.4 MHz  0x15 = 2.45 MHz  0x16 = 2.5 MHz  0x17 = 2.6 MHz  0x18 = 2.65 MHz  0x19 = 2.7 MHz  0x19 = 2.7 MHz  0x10 = 2.9 MHz  0x11 = 2.9 MHz  0x12 = 2.9 MHz  0x13 = 2.3 MHz  0x14 = 2.8 MHz  0x15 = 2.9 MHz  0x16 = 2.5 MHz  0x17 = 2.6 MHz  0x18 = 2.85 MHz  0x19 = 2.7 MHz  0x19 = 2.7 MHz  0x110 = 2.95 MHz  0x110 = 2.95 MHz  0x111 = 2.95 MHz  0x111 = 2.95 MHz  0x112 = 3.05 MHz  0x115 = 3.05 MHz	0x5
31:10	-	Reserved	-

## Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.48 RTC oscillator control register

This register enables the 32 kHz output of the RTC oscillator (32k\_clk). This clock can be used to create the main clock when the PLL input or output is selected as the clock source to the main clock.

Table 77. RTC oscillator control register (RTCOSCCTRL, main syscon: offset 0x50C) bit description

Bit	Symbol	Value	Description	Reset value
0	EN		RTC 32 kHz clock enable.	0x1
		0	Disabled. RTC clock off.	
		1	Enabled. RTC clock on.	
31:1	-	-	Reserved	0x0

54 of 590

## Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.49 PLL registers

The PLL provides a wide range of frequencies and can potentially be used for many on-chip functions. the PLL can be used with or without a spread spectrum clock generator. See Section 4.6.5 "PLL functional description" for additional details of PLL operation.

### 4.5.49.1 System PLL control register

The SYSPLLCTRL register provides most of the control over basic selections of PLL modes and operating details.

Table 78. System PLL control register (SYSPLLCTRL, main syscon: offset 0x580 bit description

Bit	Symbol	Value	Description	Reset value
3:0	SELR	-	Bandwidth select R value.	
9:4	SELI	-	Bandwidth select I value.	
14:10	SELP	-	Bandwidth select P value.	
15	BYPASS		PLL bypass control.	0x1
		0	Bypass disabled. PLL CCO is sent to the PLL post-dividers.	
		1	Bypass enabled. PLL input clock is sent to the PLL post-dividers (default).	
16	BYPASS		Bypass feedback clock divide by 2.	0x0
	CCODIV2	0	Divide by 2. The CCO feedback clock is divided by 2 in addition to the programmed M divide.	
		1	Bypass. The CCO feedback clock is divided only by the programmed M divide.	
17	UPLIMOFF		Disable upper frequency limiter.	0x0
			For spread spectrum mode: SEL_EXT = 0, BANDSEL = 0, and UPLIMOFF = 1.	
		0	Normal mode.	
		1	Upper frequency limiter disabled.	
18	BANDSEL		PLL filter control. Set this bit to one when the spread spectrum controller is disabled or at low frequencies.	0x0
			For spread spectrum mode: SEL_EXT = 0, BANDSEL = 0, and UPLIMOFF = 1.	
		0	SSCG control. The PLL filter uses the parameters derived from the spread spectrum controller.	
		1	MDEC control. The PLL filter uses the programmable fields SELP, SELR, and SELI in this register to control the filter constants.	
19	DIRECTI		PLL0 direct input enable.	0x0
		0	Disabled. The PLL input divider (N divider) output is used to drive the PLL CCO.	
		1	Enabled. The PLL input divider (N divider) is bypassed. the PLL input clock is used directly to drive the PLL CCO input.	
20	DIRECTO		PLL0 direct output enable.	0x0
		0	Disabled. The PLL output divider (P divider) is used to create the PLL output.	
		1	Enabled. The PLL output divider (P divider) is bypassed, the PLL CCO output is used as the PLL output.	
31:21	-	-	Reserved. Read value is undefined, only zero should be written.	-
	-1			

The values for SELP, SELI, and SELR depend on the value for M as expressed by the following pseudo-code:

if (M < 60) then

#### Chapter 4: LPC5411x System configuration (SYSCON)

```
SELP = (M>>1) + 1
     else
        SELP = 31;
if (M > 16384) then
        SELI = 1
     else if (M > 8192) then
        SELT = 2
     else if (M > 2048) then
        SELI = 4
     else if (M >= 501) then
        SELI = 8
     else if (M >= 60) then
        SELI = 4*(1024/(M+9))
     else
        SELI = (M \& 0x3C) + 4; /* \& denotes bitwise AND */
     SELR = 0;
```

**Remark:** The values for SELP, SELI, and SELR are generated by the encoding block when the spread spectrum clock generator is enabled and need not be programmed explicitly.

#### 4.5.49.2 System PLL status register

The read-only PLL0\_STAT register provides the PLL lock status

**Remark:** The lock status does not reliably indicate the PLL status for the following two configurations: spread-spectrum mode or fractional enabled or low input clock frequencies such as 32 kHz. In these cases, refer to the PLL lock times listed in the specific device data sheet to obtain appropriate wait times for the PLL to lock.

Table 79. System PLL status register (SYSPLLSTAT, main syscon: offset 0x584) bit description

Bit	Symbol	Description	Reset value
0	LOCK	PLL0 lock indicator.	0x0
31:1	-	Reserved.	-

#### 4.5.49.3 System PLL N-divider register

**Remark:** The PLL N-divider register does not use the direct binary representation of N divide value directly. Instead, it uses an encoded version NDEC.

**Remark:** While the PLL0 output is in use, do not change the NDEC value. Changing the NDEC value changes the FCCO frequency and can cause the system to fail.

• The valid range for N is 1 to 2^8. This value is encoded into a 10-bit NDEC value. The relationship can be expressed through the following pseudo-code:

```
N_max=0x00000100, x=0x00000080;
switch (N) {
    case 0: x = 0xFFFFFFFF;
    case 1: x = 0x00000302;
    case 2: x = 0x00000202;

default: for (i = N; i <= N_max; i++)</pre>
```

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 80. System PLL N-divider register (SYSPLLNDEC, main syscon: offset 0x588) bit description

Bit	Symbol	Description	Reset value
9:0	NDEC	Decoded N-divider coefficient value.	0x0
10	NREQ	NDEC reload request. When a 1 is written to this bit, the NDEC value is loaded into the PLL. Must be cleared by software for any subsequent load, or the PLL can be powered down and back up via the PDEN_SYS_PLL bit in the PDRUNCFG register if the NDEC value is changed.	0x0
31:11	-	Reserved. Read value is undefined, only zero should be written.	-

## 4.5.49.4 System PLL P-divider register

**Remark:** The PLL P-divider register does not use the direct binary representation of P divide value directly. Instead, it uses an encoded version PDEC.

**Remark:** While the PLL0 output is in use, do not change the PDEC value. Changing the PDEC value changes the PLL output frequency and can cause the system to fail.

• The valid range for P is from 1 to 2^5. This value is encoded into a 7-bit PDEC value. The relationship can be expressed through the following pseudo-code:

Table 81. System PLL P-divider register (SYSPLLPDEC, main syscon: offset 0x58C) bit description

Bit	Symbol	Description	Reset value
6:0	PDEC	Decoded P-divider coefficient value.	0x0
7		PDEC reload request. When a 1 is written to this bit, the PDEC value is loaded into the PLL. Must be cleared by software for any subsequent load, or the PLL can be powered down and back up via the PDEN_SYS_PLL bit in the PDRUNCFG register if the PDEC value is changed.	0x0
31:8	-	Reserved. Read value is undefined, only zero should be written.	-

## 4.5.49.5 Spread spectrum control with PLL0

The spread spectrum functionality can be used to modulate the PLL output frequency. This can decrease electromagnetic interference (EMI) in an application.

The Spread Spectrum Clock Generator can be used in several ways:

- It can encode M-divider values between 1 and 255 to produce the MDEC value used directly by the PLL, saving the need for executing encoding algorithm code, or hard-coding predetermined values into an application.
- It can provide a fractional rate feature to the PLL.

UM10914

#### Chapter 4: LPC5411x System configuration (SYSCON)

• It can be set up to automatically alter the PLL CCO frequency on an ongoing basis to decrease electromagnetic interference (EMI).

If the spread spectrum mode is enabled, choose N to ensure 2 MHz < Fin/N < 4 MHz. Spread spectrum mode cannot be used when Fin = 32 kHz.

When the modulation (MR) is set to zero, the PLL becomes a fractional PLL.

#### 4.5.49.5.1 System PLL spread spectrum control register 0

Table 82. System PLL spread spectrum control register 0 (SYSPLLSSCTRL0, main syscon: offset 0x590) bit description

Bit	Symbol	Value	Description	Reset value				
16:0	MDEC	-	Decoded M-divider coefficient value.	0x0				
17	MREQ	-	MDEC reload request. When a 1 is written to this bit, the MDEC value is loaded into he PLL. Must be cleared by software for any subsequent load, or the PLL can be bowered down and back up via the PDEN_SYS_PLL bit in the PDRUNCFG register if he MDEC value is changed.					
18	SEL_EXT		Select spread spectrum mode. Selects the source of the feedback divider value. For normal mode, this must be the value from the MDEC field in this register.	0x0				
			For spread spectrum mode: SEL_EXT = 0, BANDSEL = 0, and UPLIMOFF = 1.					
		0	The PLL feedback divider value comes from the spread spectrum controller.					
		1	The PLL feedback divider value comes from the MDEC field in this register.					
31:19	-	-	Reserved. Read value is undefined, only zero should be written.	-				

**PLL0 M-divider register:** The PLL0 M-divider value (MDEC) can be set directly if the PLL0 is not used with the spread spectrum clock generator (SSCG). If the SSCG is enabled via the SEL\_EXT bit, then the SSCG sets the MDEC value.

**Remark:** MDEC does not use the direct binary representations of M directly. Instead, it uses an encoded version of M. The valid range for M is 1 to 2^15. This value is encoded into a 17-bit MDEC value.

The relationship between M and MDEC is expressed via the following pseudo-code.

The values for SELP, SELI, and SELR depend on the value for M as expressed by the following pseudo-code:

#### Chapter 4: LPC5411x System configuration (SYSCON)

**Remark:** If the 32 kHz RTC oscillator is used as the reference input to the PLL, then use fixed values SELI=1, SELP=6 and SELR=0, instead of applying the above rules. These values reduce the PLL loop bandwidth to combat the effect of reference oscillator jitter on the PLL output signal.

**Remark:** The values for SELP, SELI, and SELR are generated by the encoding block when the spread spectrum clock generator is enabled and need not be programmed explicitly.

**Remark:** While the PLL0 output is in use, do not change the MDEC value. Changing the MDEC value changes the FCCO frequency and can cause the system to fail.

## 4.5.49.5.2 System PLL spread spectrum control register 1

Table 83. System PLL spread spectrum control register 1 (SYSPLLSSCTRL1, main syscon: offset 0x594) bit description

Bit	Symbol	Value	Description	Reset value				
18:0	MD  M- divider value with fraction.  MD[18:11]: integer portion of the feedback divider value.  MD[10:0]: fractional portion of the feedback divider value.  In fractional mode, fcco = (2 - BYPASSCCODIV2) x (MD x 2^-11) x Fref							
19	MDREQ	-	MD reload request. When a 1 is written to this bit, the MD value is loaded into the PLL. This bit is cleared when the load is complete.	0x0				
22:20	MF	-	Programmable modulation frequency fm = Fref/Nss with Fref = Fin/N 0b000 => Nss = 512 (fm $\approx 3.9$ - 7.8 kHz) 0b001 => Nss $\approx 384$ (fm $\approx 5.2$ - 10.4 kHz) 0b010 => Nss = 256 (fm $\approx 7.8$ - 15.6 kHz) 0b011 => Nss = 128 (fm $\approx 15.6$ - 31.3 kHz) 0b100 => Nss = 64 (fm $\approx 32.3$ - 64.5 kHz) 0b101 => Nss = 32 (fm $\approx 62.5$ - 125 kHz) 0b101 => Nss $\approx 24$ (fm $\approx 83.3$ - 166.6 kHz) 0b111 => Nss = 16 (fm $\approx 125$ - 250 kHz)	0x0				

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 83. System PLL spread spectrum control register 1 (SYSPLLSSCTRL1, main syscon: offset 0x594) bit description ...continued

Bit	Symbol	Value	Description	Reset value
25:23	MR	-	Programmable frequency modulation depth. 0 = no spread. δfmodpk-pk = Fref x k/Fcco = k/MDdec	0x0
			0b000 => k = 0 (no spread spectrum) $0b001 => k \approx 1$ $0b010 => k \approx 1.5$ $0b011 => k \approx 2$ $0b100 => k \approx 3$ $0b101 => k \approx 4$ $0b110 => k \approx 6$ $0b111 => k \approx 8$	
27:26	MC	-	Modulation waveform control. 0 = no compensation.  Compensation for low pass filtering of the PLL to get a triangular modulation at the output of the PLL, giving a flat frequency spectrum.	0x0
			0b00 => no compensation 0b10 => recommended setting 0b11 => max. compensation	
28	PD		Spread spectrum power-down.	0x1
		0	Enabled. Spread spectrum controller is enabled.	
		1	Disabled. Spread spectrum controller is disabled.	
29	DITHER		Select modulation frequency.	0x0
		0	Fixed. Fixed modulation frequency.	
		1	Dither. Randomly dither between two modulation frequencies.	
31:30	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.50 Sleep configuration register 0

The PDSLEEPCFG0 register controls the power to various analog blocks while the CPU is in a reduced power mode. Entering reduced power modes is typically accomplished by calling the Power API. See <a href="Section 31.4.3">Section 31.4.3</a>. It is also possible to configure the PDSLEEPCFG0 and PDSLEEPCFG1 directly, then execute a WFI instruction to enter reduced power modes.

Table 84. Sleep configuration register (PDSLEEPCFG0, main syscon: offset 0x600) bit description

Bit	Symbol	Description	Reset value
31:0	-	See bit descriptions in the PDRUNCFG0 register.	0x02F8 0540

# 4.5.51 Sleep configuration register 1

See description of PDSLEEPCFG0.

Table 85. Sleep configuration register (PDSLEEPCFG1, main syscon: offset 0x604) bit description

Bit	Symbol	Description	Reset value
31:0	-	See bit descriptions in the PDRUNCFG1 register.	0x1000 0000

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.52 Power configuration register 0

The PDRUNCFG0 register controls the power to various analog blocks. See also Section 4.5.53 "Power configuration register 1"

**Remark:** For safety, changes to this register should generally be accomplished by writing to PDRUNCFGSET0 and/or PDRUNCFGCLR0. This avoids the possibility of an interrupt changing the value of PDRUNCFG0 after it is read, but before an altered value is written back. It also avoids accidentally changing bits that may have been altered by an API or another portion of user software. **Reserved bits must not be changed by user software.** 

Regarding bits 13 through 16, see <u>Section 2.1.1</u> for details of SRAM configuration.

Table 86. Power Configuration register (PDRUNCFG0, main syscon: offset 0x610) bit description

Bit	Symbol	Description	Reset value					
3:0	-	Reserved	-					
4	PDEN_FRO	FRO oscillator. 0 = Powered; 1 = Powered down.	0x0					
5	PD_FLASH	Part of flash power control. See <u>Table 87 "Flash power configurations"</u> . Only certain combinations of flash power configuration bits may be used.	0x0					
6	PDEN_TS	Temp sensor. 0 = Powered; 1 = Powered down.	0x1					
7	PDEN_BOD_RST	Brown-out Detect reset. 0 = Powered; 1 = Powered down.	0x0					
8	PDEN_BOD_INTR	rown-out Detect interrupt. 0 = Powered; 1 = Powered down.						
9	-	Reserved						
10	PDEN_ADC0 ADC0. 0 = Powered; 1 = Powered down.							
11	combinations of flash power configuration bits may be used.							
12	LP_VDDFLASH Part of flash power control. See <u>Table 87 "Flash power configurations"</u> . Only certain combinations of flash power configuration bits may be used.							
13	PDEN_SRAM0	SRAM0. 0 = Powered; 1 = Powered down.	0x0					
14	PDEN_SRAM1	SRAM1. 0 = Powered; 1 = Powered down.	0x0					
15	PDEN_SRAM2	SRAM2. 0 = Powered; 1 = Powered down.	0x0					
16	PDEN_SRAMX	SRAMX. 0 = Powered; 1 = Powered down.	0x0					
17	PDEN_ROM	ROM. 0 = Powered; 1 = Powered down.	0x0					
18	PD_VDDHV_ENA	Part of flash power control. See <u>Table 87 "Flash power configurations"</u> . Only certain combinations of flash power configuration bits may be used.	0x0					
19	PDEN_VDDA	VDDA to the ADC, must be enabled for the ADC to work. Also see bit 23. 0 = Powered; 1 = Powered down.	0x1					
20	PDEN_WDT_OSC	Watchdog oscillator. 0 = Powered; 1 = Powered down.	0x1					
21	PDEN_USB_PHY	USB pin interface. 0 = Powered; 1 = Powered down.	0x1					
22	PDEN_SYS_PLL	PLL0. 0 = Powered; 1 = Powered down.	0x1					
23	PDEN_VREFP Vrefp to the ADC, must be enabled for the ADC to work. Also see bit 19. 0 = Powered 1 = Powered down.							
24	-	Reserved	-					
25	PD_FLASH_BG	Part of flash power control. See <u>Table 87 "Flash power configurations"</u> . Only certain combinations of flash power configuration bits may be used.	0x1					
31:26	-	Reserved	-					

61 of 590

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### Flash power configuration

Table 87 shows the useful combinations of the flash configuration bits in the two PDRUNCFG registers. Other combinations must not be used. Clearly, turning off the flash cannot be done while executing from the flash, or if a potential interrupt of function call would map to the flash.

Table 87. Flash power configurations

Flash mode	PDRUN	NCFG1	PDRU	JNCFG	0			Description
	Bit 29 (SEL_ALT_FLASH_IBG)	Bit 28 (PD_ALT_FLASH_IBG)	Bit 25 (PD_FLASH_BG)	Bit 18 (PD_VDDHV_ENA)	Bit 12 (LP_VDDFLASH)	Bit 11 (PD_VDDFLASH)	Bit 5 (PD_FLASH)	
Read only (no write)	1	0	1	0	0	0	0	Flash is powered up and ready for read. Flash write is not supported. This configuration would be used for normal operation. When entering this mode, SEL_ALTFLASH_IBG must be set first, then PD_FLASH_BG can be set.
Read & write	0	0	0	0	0	0	0	Flash is powered up and ready for read or write. This configuration uses more power, so should only be used when the flash is to be written. When entering this mode, PD_FLASH_BG must be cleared first, then SEL_ALTFLASH_IBG can be cleared. Enabling PD_FLASH_BG will take 150 microseconds.
Standby	1	1	1	1	1	0	0	Flash is in a limited reduced power mode, but ready to be enabled with minimal delay.
Off	1	1	1	1	1	1	1	Flash is in full reduced power mode, enabling the flash will take an additional 150 microseconds.

# 4.5.53 Power configuration register 1

The PDRUNCFG1 register contains additional power configuration bits.

**Remark:** For safety, changes to this register should generally be accomplished by writing to PDRUNCFGSET1 and/or PDRUNCFGCLR1. This avoids the possibility of an interrupt changing the value of PDRUNCFG1 after it is read, but before an altered value is written back. It also avoids accidentally changing bits that may have been altered by an API or another portion of user software. **Reserved bits must not be changed by user software.** 

Table 88. Power Configuration register (PDRUNCFG1, main syscon: offset 0x614) bit description

Bit	Symbol	Description	Reset value
27:0	-	Reserved	-
28	PD_ALT_FLASH_IBG	Part of flash power control. See <u>Table 87 "Flash power configurations"</u> . Only certain combinations of flash power configuration bits may be used.	0x1
29	SEL_ALT_FLASH_IBG	Part of flash power control. See <u>Table 87 "Flash power configurations"</u> . Only certain combinations of flash power configuration bits may be used.	0x0
31:30	-	Reserved	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

## 4.5.54 Power configuration set register 0

Writing a 1 to a bit position in PDRUNCFGSET0 sets the corresponding position in PDRUNCFG0. This is a write-only register. For bit assignments, see Table 86.

Table 89. Power configuration set registers (PDRUNCFGSET0 main syscon: offset 0x620) bit description

Bit	Symbol	Description	Reset value
31:0	PD_SET	Writing ones to this register sets the corresponding bit or bits in the PDRUNCFG0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PDRUNCFG0 are reserved and only zeroes should be written to them.	

## 4.5.55 Power configuration set register 1

Writing a 1 to a bit position in PDRUNCFGSET1 sets the corresponding position in PDRUNCFG1. This is a write-only register. For bit assignments, see Table 88.

Table 90. Power configuration set registers (PDRUNCFGSET1 main syscon: offset 0x624) bit description

Bit	Symbol	Description	Reset value
31:0		Writing ones to this register sets the corresponding bit or bits in the PDRUNCFG1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PDRUNCFG1 are reserved and only zeroes should be written to them.	

# 4.5.56 Power configuration clear register 0

Writing a 1 to a bit position in PDRUNCFGCLR0 clears the corresponding position in PDRUNCFG0. This is a write-only register. For bit assignments, see Table 86.

Table 91. Power configuration clear registers (PDRUNCFGCLR0, main syscon: offset 0x630) bit description

Bit	Symbol	Description	Reset value
31:0	_	Writing ones to this register clears the corresponding bit or bits in the PDRUNCFG register, if they are implemented.	-
		Bits that do not correspond to defined bits in PDRUNCFG are reserved and only zeroes should be written to them.	

# 4.5.57 Power configuration clear register 1

Writing a 1 to a bit position in PDRUNCFGCLR1 clears the corresponding position in PDRUNCFG1. This is a write-only register. For bit assignments, see Table 88.

Table 92. Power configuration clear registers (PDRUNCFGCLR1, main syscon: offset 0x634 bit description

Bit	Symbol	Description	Reset value
31:0	PD_CLR	Writing ones to this register clears the corresponding bit or bits in the PDRUNCFG1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in PDRUNCFG1 are reserved and only zeroes should be written to them.	

#### 4.5.58 Start enable register 0

The STARTER0 and STARTER1 registers enable an interrupt for wake-up from deep-sleep mode.

UM10914

#### Chapter 4: LPC5411x System configuration (SYSCON)

Some interrupts are typically used in sleep mode only and will not occur during deep-sleep mode because relevant clocks are stopped. However, it is possible to enable those clocks (significantly increasing power consumption in the reduced power mode), making these wake-ups possible.

The pattern match feature of the pin interrupt requires a clock in order to operate, and will not wake up the device from reduced power modes beyond sleep mode.

Whether peripheral interrupts can occur during deep-sleep mode depends on the peripheral, its configuration, and system setup.

**Remark:** It is recommended that changes to the STARTER registers be accomplished by using the related STARTERSET and STARTERCLR registers. This avoids any unintentional setting or clearing of other bits.

**Remark:** Also enable the corresponding interrupts in the NVIC. See <u>Table 4 "Interrupt Set-Enable Register 0 register"</u>.

Table 93. Start enable register 0 (STARTER0, main syscon: offset 0x680) bit description

Bit	Symbol	Description	Reset value
0	WDT, BOD	WWDT and BOD interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
1	DMA	DMA wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
2	GINT0	Group interrupt 0 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	-
3	GINT1	Group interrupt 1 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
4	PIN_INT0	GPIO pin interrupt 0 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
5	PIN_INT1	GPIO pin interrupt 1 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
6	PIN_INT2	GPIO pin interrupt 2 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
7	PIN_INT3	GPIO pin interrupt 3 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
8	UTICK	Micro-tick Timer wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
9	MRT	Multi-Rate Timer wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
10	CTIMER0	Standard counter/timer CTIMER0 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
11	CTIMER1	Standard counter/timer CTIMER1 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
12	SCT0	SCT0 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
13	CTIMER3	Standard counter/timer CTIMER3 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
14	FLEXCOMM0	Flexcomm0 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
15	FLEXCOMM1	Flexcomm1 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
16	FLEXCOMM2	Flexcomm2 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0

#### Chapter 4: LPC5411x System configuration (SYSCON)

Start enable register 0 (STARTER0, main syscon: offset 0x680) bit description ...continued

Bit	Symbol	Description	Reset value
17	FLEXCOMM3	Flexcomm3 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
18	FLEXCOMM4	Flexcomm4 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
19	FLEXCOMM5	Flexcomm5 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
20	FLEXCOMM6	Flexcomm6 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
21	FLEXCOMM7	Flexcomm7 peripheral interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
22	ADC0_SEQA	ADC0 sequence A interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
23	ADC0_SEQB	ADC0 sequence B interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
24	ADC0_THCMP	ADC0 threshold and error interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
25	DMIC	Digital microphone interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
26	HWVAD	HW Voice Activity Detect interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
27	USB_NEEDCLK	USB activity interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
28	USB	USB function interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
29	RTC	RTC interrupt alarm and wake-up timer. 0 = Wake-up disabled. 1 = Wake-up enabled.	0x0
30	-	Reserved. Read value is undefined, only zero should be written.	-
31	MAILBOX	Mailbox interrupt wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled.At least one CPU must be running in order for a mailbox interrupt to occur. Present on selected devices.	0x0

# 4.5.59 Start enable register 1

The STARTER1 register selects additional interrupts that may wake up the part from deep-sleep mode.

Some interrupts are typically used in sleep mode only and will not occur during deep-sleep mode because relevant clocks are stopped. However, it is possible to enable those clocks (significantly increasing power consumption in the reduced power mode), making these wake-ups possible.

The pattern match feature of the pin interrupt requires a clock in order to operate, and will not wake up the device from reduced power modes beyond sleep mode.

Remark: It is recommended that changes to the STARTER registers be accomplished by using the related STARTERSET and STARTERCLR registers. This avoids any unintentional setting or clearing of other bits.

Remark: Also enable the corresponding interrupts in the NVIC. See Table 5 "Interrupt Set-Enable Register 1 register".

#### Chapter 4: LPC5411x System configuration (SYSCON)

Table 94. Start enable register 1 (STARTER1, main syscon: offset 0x684) bit description

Bit	Symbol	Description	Reset value
0	PINT4	GPIO pin interrupt 4 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
1	PINT5	GPIO pin interrupt 5 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
2	PINT6	GPIO pin interrupt 6 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
3	PINT7	GPIO pin interrupt 7 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Not for pattern match.	0x0
4	CTIMER2	Standard counter/timer CTIMER2 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
5	CTIMER4	Standard counter/timer CTIMER4 wake-up. 0 = Wake-up disabled. 1 = Wake-up enabled. Typically used in sleep mode only since the peripheral clock must be running for it to function.	0x0
31:6	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.60 Start enable set register 0

Writing a 1 to a bit position in STARTERSET0 sets the corresponding position in STARTER0. This is a write-only register. For bit assignments, see Table 93.

Table 95. Start enable set register 0 (STARTERSET0, main syscon: offset 0x6A0) bit description

Bit	Symbol	Description	Reset value
31:0	START_SET0	Writing ones to this register sets the corresponding bit or bits in the STARTER0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in STARTER0 are reserved and only zeroes should be written to them.	

## 4.5.61 Start enable set register 1

Writing a 1 to a bit position in STARTERSET1 sets the corresponding position in STARTER1. This is a write-only register. For bit assignments, see <u>Table 94</u>.

Table 96. Start enable set register 1 (STARTERSET1, main syscon: offset 0x6A4) bit description

Bit	Symbol	Description	Reset value
31:0	START_SET1	Writing ones to this register sets the corresponding bit or bits in the STARTER1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in STARTER1 are reserved and only zeroes should be written to them.	

## 4.5.62 Start enable clear register 0

Writing a 1 to a bit position in STARTERCLR0 clears the corresponding position in STARTER0. This is a write-only register. For bit assignments, see Table 93.

Table 97. Start enable clear register 0 (STARTERCLR0, main syscon: offset 0x6C0) bit description

Bit	Symbol	Description	Reset value
31:0	START_CLR0	Writing ones to this register clears the corresponding bit or bits in the STARTER0 register, if they are implemented.	-
		Bits that do not correspond to defined bits in STARTER0 are reserved and only zeroes should be written to them.	

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.63 Start enable clear register 1

Writing a 1 to a bit position in STARTERCLR1 clears the corresponding position in STARTER1. This is a write-only register. For bit assignments, see Table 94.

Table 98. Start enable clear register 1 (STARTERCLR1, main syscon: offset 0x6C4) bit description

Bit	Symbol	Description	Reset value
31:0		Writing ones to this register clears the corresponding bit or bits in the STARTER1 register, if they are implemented.	-
		Bits that do not correspond to defined bits in STARTER1 are reserved and only zeroes should be written to them.	

# 4.5.64 Hardware Wake-up control register

The purpose of the Hardware Wake-up control register is to provide the possibility for some peripherals to have DMA service during deep-sleep mode without waking up entire device.

These wake-ups are based on peripheral FIFO levels, not directly related to peripheral DMA requests and interrupts.

Table 99. Hardware Wake-up control register (HWWAKE, main syscon: offset 0x780) bit description

Bit	Symbol	Description	Reset value
0	FORCEWAKE	Force peripheral clocking to stay on during deep-sleep mode. When 1, clocking to peripherals is prevented from being shut down when the CPU enters deep-sleep mode. This is intended to allow a coprocessor to continue operating while the main CPU(s) are shut down.	0x0
1	FCWAKE	Wake for Flexcomm Interfaces. When 1, any Flexcomm Interface FIFO reaching the level specified by its own TXLVL will cause peripheral clocking to wake up temporarily while the related status is asserted.	0x0
2	WAKEDMIC	Wake for Digital Microphone. When 1, the digital microphone input FIFO reaching the level specified by TRIGLVL of either channel will cause peripheral clocking to wake up temporarily while the related status is asserted.	0x0
3	WAKEDMA	Wake for DMA. When 1, DMA being busy will cause peripheral clocking to remain running until DMA completes. This is generally used in conjunction with bit 1 and/or 2 in order to prevent peripheral clocking from being shut down as soon as the cause of wake-up is cleared, but before DMA has completed its related activity.	0x0
31:4	-	Reserved. Read value is undefined, only zero should be written.	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.65 Dual-CPU related registers

These registers control usage aspects of the two CPUs in selected devices. They are not used in other devices that only provide a single CPU.

#### 4.5.65.1 CPU Control register

The CPUCTRL register provides control for the 2 CPUs. Note that the Cortex-M4 is factory set to be the master. The master CPU cannot be reset or have its clock disabled via this register. Only the master CPU can use the Power APIs to cause the device to enter reduced power modes.

If the clock to the slave CPU is to be disabled at some point in the application for power savings, that CPU should have entered its own sleep mode prior to that point. This avoids incomplete operations in the slave CPU.

Table 100. CPU Control register (CPUCTRL, main syscon: offset 0x800) bit description

Bit	Symbol	Value	Description	Reset value
0	MASTERCPU		Indicates which CPU is considered the master. This is factory set assign the Cortex-M4 as the master.	0x1
			The master CPU cannot have its clock turned off via the related CMnCLKEN bit or be reset via the related CMxRSTEN in this register.	
			The slave CPU wakes up briefly following device reset, then goes back to sleep until activated by the master CPU.	
		0	M0+. Cortex-M0+ is the master CPU.	
		1	M4. Cortex-M4 is the master CPU.	
1	-	-	Reserved. Read value is undefined, only zero should be written.	-
2	CM4CLKEN		Cortex-M4 clock enable.	0x1
		0	Disabled. The Cortex-M4 clock is not enabled.	
		1	Enabled. The Cortex-M4 clock is enabled.	
3	CM0CLKEN		Cortex-M0+ clock enable.	0x1
		0	Disabled. The Cortex-M0+ clock is not enabled.	
		1	Enabled. The Cortex-M0+ clock is enabled.	
4	CM4RSTEN		Cortex-M4 reset.	0x0
		0	The Cortex-M4 is not held in reset.	
		1	The Cortex-M4 is held in reset.	
5	CM0RSTEN		Cortex-M0+ reset.	0x0
		0	Disabled. The Cortex-M0+ is not held in reset.	
		1	Enabled. The Cortex-M0+ is held in reset.	
6	POWERCPU		Identifies the owner of reduced power mode control: which CPU can cause the device to enter deep-sleep and deep power-down modes.	0x1
		0	M0+. Cortex-M0+ is the owner of reduced power mode control.	
		1	M4. Cortex-M4 is the owner of reduced power mode control.	
14:7	-	-	Reserved. Read value is undefined, only zero should be written.	
15	-	-	Must be written as a 1.	-
31:16	-	-	Must be written as 0xC0C4 for the write to have an effect.	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.65.2 Coprocessor Boot register

CPBOOT can be used in an application that uses both CPUs in order to send the slave processor (the CPU not selected as the master by the MASTERCPU bit in the CPUCTRL register) to an appropriate boot address that is different than the master CPU.

Table 101. Coprocessor Boot register (CPBOOT, main syscon: offset 0x804) bit description

Bit	Symbol	Description	Reset value
31:0	BOOTADDR	Slave processor boot address.	0x0

#### 4.5.65.3 Coprocessor Stack register

CPSTACK can be used in an application that uses both CPUs in order to set up the stack for the slave processor (the CPU not selected as the master by the MASTERCPU bit in the CPUCTRL register) to an appropriate address that is different than the master CPU.

Table 102. Coprocessor Stack register (CPSTACK, main syscon: offset 0x808) bit description

Bit	Symbol	Description	Reset value
31:0	STACKADDR	Slave processor stack address.	0x0

## 4.5.65.4 Coprocessor Status register

CPU\_STAT provides some status for dual CPUs. This register can be read by software at run time, or with a debugger.

Table 103. Coprocessor Status register (CPSTAT, main syscon: offset 0x80C) bit description

Bit	Symbol	Description	Reset value
0	CM4SLEEPING	When 1, the Cortex-M4 CPU is sleeping.	0x0
1	CM0SLEEPING	When 1, the Cortex-M0+ CPU is sleeping.	0x0
2	CM4LOCKUP	When 1, the Cortex-M4 CPU is in lockup.	0x0
3	CM0LOCKUP	When 1, the Cortex-M0+ CPU is in lockup.	0x0
31:4	-	Reserved. Read value is undefined, only zero should be written.	-

# 4.5.66 Auto Clock-Gate Override Register

This register allows selectively disabling automatic clock gating for device SRAMs. By default, automatic clock gating turns off clocks to each internal SRAM after 16 bus clocks with no activity. This saves power when the SRAMs are not used for a period of time. When turned off due to automatic clock gating, there is a 1 clock delay for the next access to an SRAM. Automatic clock gating may be disabled for time-critical code, which may typically give a 1 or 2% speed improvement.

Table 104. Auto Clock-Gate Override Register (AUTOCGOR, main syscon: offset 0xE04) bit description

Bit	Symbol	Description	Reset value
0	-	Reserved. Read value is undefined, only zero should be written.	-
1	RAM0X	When 1, automatic clock gating for RAMX and RAM0 are turned off.	0x0
2	RAM1	When 1, automatic clock gating for RAM1 is turned off.	0x0
3	RAM2	When 1, automatic clock gating for RAM2 is turned off.	0x0
31:5	-	Reserved. Read value is undefined, only zero should be written.	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

# 4.5.67 JTAG ID code register

This register contains the JTAG ID code.

Table 105. JTAG ID code register (JTAGIDCODE, main syscon: offset 0xFF4) bit description

Bit	Symbol	Description	Value
31:0	JTAGID	JTAG ID code.	0x1725E02B

# 4.5.68 Device ID0 register

This register contains the part ID. The part ID can also be obtained using the ISP or IAP ReadPartID commands. See Table 491 and Table 504.

Table 106. Device ID0 register (DEVICE\_ID0, main syscon: offset 0xFF8) bit description

Bit	Symbol	Description	Reset value
31:0	PARTID	Part ID	part dependent

Table 107. Device ID0 register values

Part number	Part ID
LPC54113J128	0x06254113
LPC54113J256	0x36454113
LPC54114J256	0x36454114

# 4.5.69 Device ID1 register

This register contains the boot ROM and die revisions.

Table 108. Device ID1 register (DEVICE\_ID1, main syscon: offset 0xFFC) bit description

Bit	Symbol	Description	Value
31:0	REVID	Revision.	0x0041725E

#### Chapter 4: LPC5411x System configuration (SYSCON)

## 4.5.70 Asynchronous peripheral reset control register

The ASYNCPRESETCTRL register allows software to reset specific peripherals attached to the async APB bridge. Writing a zero to any assigned bit in this register clears the reset and allows the specified peripheral to operate. Writing a one asserts the reset.

**Remark:** It is recommended that changes to the ASYNCPRESETCTRL registers be accomplished by using the related ASYNCPRESETCTRLSET and ASYNCPRESETCTRLCLR registers. This avoids any unintentional setting or clearing of other bits.

Table 109. Asynchronous peripheral reset control register (ASYNCPRESETCTRL, async syscon: offset 0x000) bit description

Bit	Symbol	Description	Reset value
12:0	-	Reserved	-
13	CTIMER3	Standard counter/timer CTIMER3 reset control. 0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
14	CTIMER4	Standard counter/timer CTIMER4 reset control. 0 = Clear reset to this function. 1 = Assert reset to this function.	0x0
31:15	-	Reserved	-

# 4.5.71 Asynchronous peripheral reset control set register

Writing a 1 to a bit position in ASYNCPRESETCTRLSET sets the corresponding position in ASYNCPRESETCTRL. This is a write-only register. For bit assignments, see Table 109.

Table 110. Asynchronous peripheral reset control set register (ASYNCPRESETCTRLSET, async syscon: offset 0x004) bit description

Bit	Symbol	Description	Reset value
31:0	ARST_SET	Writing ones to this register sets the corresponding bit or bits in the ASYNCPRESETCTRL register, if they are implemented.	-
		Bits that do not correspond to defined bits in ASYNCPRESETCTRL are reserved and only zeroes should be written to them.	

# 4.5.72 Asynchronous peripheral reset control clear register

Writing a 1 to a bit position in ASYNCPRESETCTRLCLR clears the corresponding position in PRESETCTRLO. This is a write-only register. For bit assignments, see <u>Table 109</u>.

Table 111. Asynchronous peripheral reset control clear register (ASYNCPRESETCTRLCLR, async syscon: offset 0x008) bit description

Bit	Symbol	Description	Reset value
31:0	ARST_CLR	Writing ones to this register clears the corresponding bit or bits in the ASYNCPRESETCTRL register, if they are implemented.	-
		Bits that do not correspond to defined bits in ASYNCPRESETCTRL are reserved and only zeroes should be written to them.	

#### Chapter 4: LPC5411x System configuration (SYSCON)

## 4.5.73 Asynchronous APB clock control register

This register controls how the clock selected for the asynchronous APB peripherals is divided to provide the clock to the asynchronous peripherals. The clock will be stopped if the DIV field is set to zero.

**Remark:** It is recommended that changes to the ASYNCAPBCLKCTRL registers be accomplished by using the related ASYNCAPBCLKCTRLSET and ASYNCAPBCLKCTRLCLR registers. This avoids any unintentional setting or clearing of other bits.

Table 112. Asynchronous APB clock control register (ASYNCAPBCLKCTRL, async syscon: offset 0x010) bit description

Bit	Symbol	Description	Reset value
12:0	-	Reserved	-
13	CTIMER3	Controls the clock for CTIMER3. 0 = Disable; 1 = Enable.	0x0
14	CTIMER4	Controls the clock for CTIMER4. 0 = Disable; 1 = Enable.	0x0
31:15	-	Reserved	-

# 4.5.74 Asynchronous APB clock control set register

Writing a 1 to a bit position in ASYNCAPBCLKCTRLSET sets the corresponding position in ASYNCAPBCLKCTRL. This is a write-only register. For bit assignments, see Table 109.

Table 113. Asynchronous APB clock control set register (ASYNCAPBCLKCTRLSET, async syscon: offset 0x014) bit description

Bit	Symbol	Description	Reset value
31:0	_	Writing ones to this register sets the corresponding bit or bits in the ASYNCAPBCLKCTRL register, if they are implemented.	-
		Bits that do not correspond to defined bits in ASYNCPRESETCTRL are reserved and only zeroes should be written to them.	

## 4.5.75 Asynchronous APB clock control clear register

Writing a 1 to a bit position in ASYNCAPBCLKCTRLCLR clears the corresponding position in ASYNCAPBCLKCTRL. This is a write-only register. For bit assignments, see <u>Table 109</u>.

Table 114. Asynchronous APB clock control clear register (ASYNCAPBCLKCTRLCLR, async syscon: offset 0x018) bit description

Bit	Symbol	Description	Reset value
31:0	ACLK_CLR	Writing ones to this register clears the corresponding bit or bits in the ASYNCAPBCLKCTRL register, if they are implemented.	-
		Bits that do not correspond to defined bits in ASYNCAPBCLKCTRL are reserved and only zeroes should be written to them.	

## 4.5.76 Asynchronous clock source select register A

This register selects a potential clock for the asynchronous APB peripherals from among several clock sources.

UM10914

#### Chapter 4: LPC5411x System configuration (SYSCON)

**Remark:** Note that this selection is internally synchronized: the clock being switched from and the clock being switched to must both be running and have occurred in specific states before the selection actually changes.

Table 115. Asynchronous clock source select register A (ASYNCAPBCLKSELA, async syscon: offset 0x020) bit description

Bit	Symbol	Value	Description	Reset value	
1:0	SEL		Clock source for asynchronous clock source selector A	0x0	
		0x0	Main clock		
		0x1	FRO 12 MHz		
		0x2	Reserved setting		
		0x3	Reserved setting		
31:2	-	-	Reserved	-	

## 4.5.77 BOD control register

The BOD control register selects four separate threshold values for sending a BOD interrupt to the NVIC and for forced reset. Reset and interrupt threshold values listed in Table 116 are typical values. More details can be found in specific device data sheets.

Both the BOD interrupt and the BOD reset can wake-up the chip from sleep and deep-sleep, modes if enabled. See <a href="Chapter 31">Chapter 31 "LPC5411x Power profiles/Power control API"</a>.

Table 116. BOD control register (BODCTRL, other system registers: offset 0x044) bit description

Bit	Symbol	Value	Description	Reset value
1:0	1:0 BODRSTLEV		BOD reset level	0x0
		0x0	Level 0: 1.5 V	1
		0x1	Level 1: 1.85 V	
		0x2	Level 2: 2.0 V	
		0x3	Level 3: 2.3 V	
2	BODRSTENA		BOD reset enable	0x0
		0	Disable reset function.	
		1	Enable reset function.	
4:3	BODINTLEV		BOD interrupt level	0x0
		0x0	Level 0: 2.05 V	
		0x1	Level 1: 2.45 V	
		0x2	Level 2: 2.75 V	
		0x3	Level 3: 3.05 V	
5	BODINTENA		BOD interrupt enable	0x0
		0	Disable interrupt function.	
		1	Enable interrupt function.	
6	BODRSTSTAT		BOD reset status. When 1, a BOD reset has occurred. Cleared by writing 1 to this bit.	0x0
7	BODINTSTAT		BOD interrupt status. When 1, a BOD interrupt has occurred. Cleared by writing 1 to this bit.	0x0
31:8	-	-	Reserved	-

#### Chapter 4: LPC5411x System configuration (SYSCON)

## 4.6 Functional description

#### 4.6.1 Reset

Reset has the following sources:

- The RESET pin.
- · Watchdog reset.
- Power-On Reset (POR).
- Brown Out Detect (BOD).
- · ARM software reset.
- ISP-AP debug reset.

Assertion of the POR or the BOD reset, once the operating voltage attains a usable level, starts the FRO. After the FRO-start-up time (maximum of 6  $\mu$ s on power-up), the FRO provides a stable clock output. The reset remains asserted until the external Reset is released, the oscillator is running, and the flash controller has completed its initialization.

On the assertion of any reset source (ARM software reset, POR, BOD reset, External reset, and Watchdog reset), the following processes are initiated:

- 1. The FRO is enabled or starts up if not running.
- 2. The flash wake-up starts. This takes approximately 250 μs or less.
- The boot code in the ROM starts. The boot code performs the boot tasks and may jump to the flash.

When the internal Reset is removed, the processor begins executing at address 0, which is initially the Reset vector mapped from the boot block. At that point, all of the processor and peripheral registers have been initialized to predetermined values.

## 4.6.2 Start-up behavior

The FRO 12 MHz oscillator provides the default clock at Reset and provides a clean system clock shortly after the supply pins reach operating voltage. See the device datasheet for details of start-up timing.

#### 4.6.3 Brown-out detection

The part includes up to four levels for monitoring the voltage on the  $V_{DD}$  pin. If this voltage falls below one of the selected levels, the BOD asserts an interrupt signal to the NVIC or issues a reset, depending on the value of the BODRSTENA bit in the BOD control register (Table 116).

The interrupt signal can be enabled for interrupt in the Interrupt Enable Register in the NVIC (see <u>Table 4</u>) in order to cause a CPU interrupt; if not, software can monitor the signal by reading a dedicated status register.

If the BOD interrupt is enabled in the STARTER0 register and in the NVIC, the BOD interrupt can wake up the chip from reduced power modes, not including deep power-down.

#### Chapter 4: LPC5411x System configuration (SYSCON)

If the BOD reset is enabled, the forced BOD reset can wake up the chip from reduced power modes, not including deep power-down.

## 4.6.4 Flash accelerator functional description


The flash accelerator block allows maximization of the performance of the CPU when it is running code from flash memory, while also saving power. The flash accelerator also provides speed and power improvements for data accesses to the flash memory.

A description of the flash accelerator configuration register may be found in Section 4.5.41.

The flash accelerator is divided into several functional blocks:

- AHB matrix interface, accessible by all bus masters that have a connection to the matrix slave port used for flash memory.
- An array of eight 128-bit buffers
- Flash accelerator control logic, including address compare and flash control
- A flash memory interface

Figure 5 shows a simplified diagram of the flash accelerator blocks and data paths.

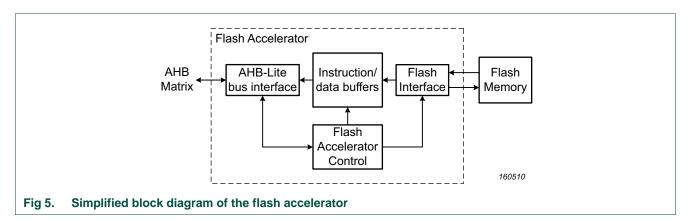

In the following descriptions, the term "fetch" applies to an explicit flash read request from the CPU. "Prefetch" is used to denote a flash read of instructions beyond the current processor fetch address.

#### 4.6.4.1 Flash memory bank

Flash programming operations are not controlled by the flash accelerator, but are handled as a separate function. The boot code includes flash programming functions that may be called as part of the application program, as well as loaders that may be used to accomplish initial flash programming.

#### 4.6.4.2 Flash programming constraints

Since the flash memory does not allow accesses during programming and erase operations, it is necessary for the flash accelerator to force the CPU to wait if a memory access to a flash address is requested while the flash memory is busy with a programming operation. Under some conditions, this delay could result in a Watchdog time-out. The user will need to be aware of this possibility and take steps to insure that an

UM10914 **NXP Semiconductors** 


#### Chapter 4: LPC5411x System configuration (SYSCON)

unwanted Watchdog reset does not cause a system failure while programming or erasing the flash memory. Application code, especially interrupts, can continue to run from other memories during flash erase/write operations.

In order to preclude the possibility of stale data being read from the flash memory, the flash accelerator buffers are automatically invalidated at the beginning of any flash programming or erase operation. Any subsequent read from a flash address will cause a new fetch to be initiated after the flash operation has completed.

## 4.6.5 PLL functional description

The PLL is typically used to create a frequency that is higher than other on-chip clock sources, and used to operate the CPU and/or other on-chip functions. It may also be used to obtain a specific clock that is otherwise not available. For example, a source clock with a frequency of any integer MHz (e.g. the 12 MHz FRO) can be divided down to 1 MHz, then multiplied up to any other integer MHz (e.g. 13, 14, 15, etc.). The PLL can be set up by calling an API supplied by NXP Semiconductors. Also see Section 4.5.49 "PLL registers", and Section 31.4.1 "Chip POWER SetPLL".

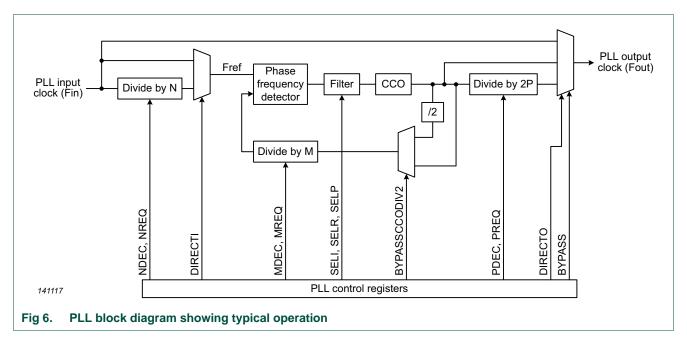

#### 4.6.5.1 PLL Features

- Input frequency: in normal mode, can include the 32 kHz RTC clock and 12 MHz FRO, or up to 25 MHz from the CLKIN pin. In fractional mode, Fref (see Figure 7) between 2 and 4 MHz.
- CCO frequency: 75 MHz to 150 MHz.
- Output clock range: 1.2 MHz to 150 MHz. Note that the upper frequency limit of the PLL exceeds the upper frequency limit of this device.
- Programmable dividers:
  - Pre-divider. Divide by N, where N = 1 to 256
  - Feedback-divider. Divide by M or 2 x M (where M = 1 to 32,768)
  - Post-divider. Divide by 1 or 2 x P, where P = 1 to 32

All information provided in this document is subject to legal disclaimers.

#### Chapter 4: LPC5411x System configuration (SYSCON)

- · Lock detector.
- Power-down mode.
- Fractional divider mode.
- Spread Spectrum mode.

#### 4.6.5.2 PLL description

A number of sources may be used as an input to the PLL, see <u>Figure 4</u>. In addition, a block diagram of the PLL is shown in <u>Figure 6</u>. The PLL input, in the range of 32 kHz to 25 MHz, may initially be divided down by a value "N", which may be in the range of 1 to 256. This input division provides a greater number of possibilities in providing a wide range of output frequencies from the same input frequency.

Following the PLL input divider is the PLL multiplier. The multiplier can multiply the input divider output through the use of a Current Controlled Oscillator (CCO) by a value "M", in the range of 1 through 32,768. The resulting frequency must be in the range of 75 MHz to 150 MHz. The multiplier works by dividing the CCO output by the value of M, then using a phase-frequency detector to compare the divided CCO output to the multiplier input. The error value is filtered and used to adjust the CCO frequency.

The PLL output may further be divided by a value "2P" if desired, where P is value in the range of 1 to 32.

All of the dividers that are part of the PLL use an encoded value, not the binary divide value. The Chip\_POWER\_SetPLL API (see <u>Section 31.4.1</u>) adjusts the value for the main feedback divider (the M divider), but does not accept pre- and post-divider values. See section <u>Section 4.6.5.3</u> and <u>Section 4.6.5.5</u> for information on how to obtain divider values.

There are additional dividers in the clocking system to bring the PLL output frequency down to what is needed for the CPU, USB, and other peripherals. The PLL output dividers are described in the Clock Dividers section following the PLL description.

For PLL register descriptions, see Section 4.5.49.

#### 4.6.5.2.1 Lock detector

The lock detector measures the phase difference between the rising edges of the input and feedback clocks. Only when this difference is smaller than the so called "lock criterion" for more than seven consecutive input clock periods, the lock output switches from low to high. A single too large phase difference immediately resets the counter and causes the lock signal to drop (if it was high). Requiring seven phase measurements in a row to be below a certain figure ensures that the lock detector will not indicate lock until both the phase and frequency of the input and feedback clocks are very well aligned. This effectively prevents false lock indications, and thus ensures a glitch free lock signal.

The PLL lock indicator is not dependable when Fref is below 100 kHz or above 20 MHz. Instead, software should use a 6 ms time interval to insure the PLL will be stable.

In fractional mode and spread spectrum mode, the PLL will generally not lock, software should use a 6 ms time interval to insure the PLL will be stable. See Section 4.6.5.5.1.

77 of 590

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### 4.6.5.2.2 Power-down

To reduce the power consumption when the PLL clock is not needed, a PLL power-down mode has been incorporated. This mode is enabled by setting the PDEN\_SYS\_PLL bit to one in the power configuration register PDRUNCFG0 (Section 4.5.52). In this mode, the internal current reference will be turned off, the oscillator and the phase-frequency detector will be stopped and the dividers will enter a reset state. While in PLL power-down mode, the lock output will be low to indicate that the PLL is not in lock.

When the PLL power-down mode is terminated by setting the PDEN\_SYS\_PLL bit to zero, the PLL will resume its normal operation and will make the lock signal high once it has regained lock on the input clock. While in this state, new divider values may be entered, which will be used when the PLL power-down state is exited by clearing PDEN\_SYS\_PLL.

#### 4.6.5.3 PLL operating modes

The PLL includes several main operating modes, and a power-down mode. These are summarized in Table 117 and detailed in the following sections.

Table 117. PLL operating mode summary

Mode	PDEN_SYS_PLL	Bits in SY	SPLLCTRL:		SEL_EXT bit in	PD bit in SYSYPLLSSCTRL1	
	bit in PDRUNCFG	BYPASS	UPLIMOFF	BANDSEL	SYSYPLLSSCTRL0		
Normal	0	0	0	1	1	1	
Fractional divider	0	0	1	0	0	0	
Spread spectrum	0	0	1	0	0	0	
Power-down	1	x [1]	х	х	х	1	

<sup>[1]</sup> Use 1 if the PLL output is used even though the PLL is not altering the frequency.

#### 4.6.5.3.1 Normal modes

Typical operation of the PLL includes an optional pre-divide of the PLL input, followed by a frequency multiplication, and finally an optional post-divide to produce the PLL output.

Notations used in the frequency equations:

- Fin = the input to the PLL.
- Fout = the output of the PLL.
- Fref = the PLL reference frequency, the input to the phase frequency detector.
- N = optional pre-divider value.
- M = feedback divider value, which represents the multiplier for the PLL. Note that an additional divide-by-2 may optionally be included in the divider path.
- P = optional post-divider value. An additional divide-by-2 is included in the post-divider path.

A block diagram of the PLL as used in normal modes is shown in Figure 4.

In all variations of normal mode, the following requirements must be met:

- 75 MHz ≤ Fcco ≤ 150 MHz
- 4 kHz ≤ Fin / N ≤ 25 MHz

**User manual** 

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### Normal mode with optional pre-divide

In the equations, use N = 1 when the pre-divider is not used:

When the extra divide by 2 is in the feedback divider path (BYPASSCCODIV2 = 0):

Fout =  $Fcco = 2 \times M \times Fin / N$ 

When the extra divide by 2 is not in the feedback divider path (BYPASSCCODIV2 = 1):

Fout =  $Fcco = M \times Fin / N$ 

#### Normal mode with post-divide and optional pre-divide

In the equations, use N = 1 when the pre-divider is not used:

When the extra divide by 2 **is** in the feedback divider path (BYPASSCCODIV2 = 0). Use N = 1 when the pre-divider is not used:

Fout = Fcco /  $(2 \times P) = M \times Fin / (N \times P)$ 

When the extra divide by 2 is not in the feedback divider path (BYPASSCCODIV2 = 1):

Fout = Fcco /  $(2 \times P) = M \times Fin / (N \times 2 \times P)$ 


#### 4.6.5.3.2 Fractional divider mode

The PLL includes an fractional divide mode. The fractional mode uses an integer divide value and that value plus 1 in a ratio determined by the fractional part of the divide value in order to obtain an average rate that is a fractional multiple of the PLL reference frequency. The SEL\_EXT bit in the SYSPLLSSCTRL0 register determines whether the fractional divider is used (SEL\_EXT = 0) or bypassed (SEL\_EXT = 1). In the first case, the MD value from the SYSPLLSSCTRL1 register is used to generate the feedback divider values. In the latter case, the MDEC value from the SYSPLLSSCTRL0 register is used directly to control the feedback divider.

When the fractional divider is active, the spread spectrum controller block generates divider values M and M+1 in the correct proportion so that the average CCO frequency is represented by the specified fraction. the average CCO frequency is:

The overall effect of the PLL otherwise the same as normal modes. A block diagram of the PLL as used in fractional mode is shown in <u>Figure 7</u>.

#### Chapter 4: LPC5411x System configuration (SYSCON)

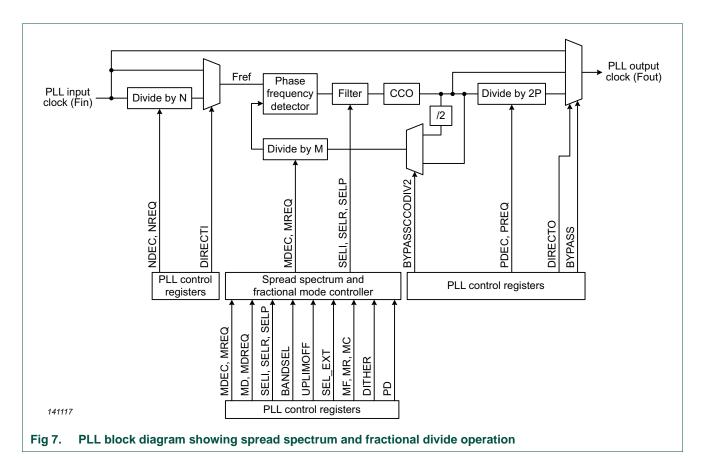

#### **Spread Spectrum mode** 4.6.5.3.3

The spread spectrum functionality can be used to modulate the PLL output frequency automatically, in a programmable manner. This can decrease electromagnetic interference (EMI) in an application.

The Spread Spectrum Clock Generator can be used in several ways:

- It can encode M-divider values between 1 and 255 to produce the MDEC value used directly by the PLL, saving the need for executing encoding algorithm code, or hard-coding predetermined values into an application.
- It can provide a fractional rate feature to the PLL.
- It can be set up to automatically alter the PLL CCO frequency on an ongoing basis to decrease electromagnetic interference (EMI).

A block diagram of the PLL as used in fractional mode is shown in Figure 7.

If the spread spectrum mode is enabled, choose N to ensure 2 MHz < Fin/N < 4 MHz. Spread spectrum mode cannot be used when Fin = 32 kHz.

When the modulation (MR) is set to zero, the PLL becomes a fractional PLL.

80 of 590

### Chapter 4: LPC5411x System configuration (SYSCON)

**Triangular wave modulation:** For the center spread triangular waveform modulation with a modulation frequency depth  $\delta$ fmodpk-pk and a modulation frequency fm, the clock cycle displacement and spectral tone reduction  $\Delta P$  can be calculated. The theoretical maximum clock cycle displacement (peak-to-peak) can be expressed with the following equation below:

if directo<sub>PLL</sub> = 1:

$$\Delta n_{max;theoretically} = \frac{N_{ss} \times k}{16}$$

if  $directo_{PLL} = 0$ ,  $P_{PLL} = 1$ :

$$\Delta n_{max;theoretically} = \frac{N_{ss} \times k}{32 \times P_{PII}}$$

In practice, the clock cycle displacement could be larger. So, for safety reasons (buffer overflow) use:

if  $directo_{PLL} = 1$ :

$$\Delta n_{max;practically} = \frac{N_{ss} \times k}{8}$$

if  $directo_{PLL} = 0$ ,  $P_{PLL} = 1$ :

$$\Delta n_{max;practically} = \frac{N_{ss} \times k}{16 \times P_{PLL}}$$

The spectral tone reduction/EMI reduction  $\Delta P$  at  $F_{out}$  is approximately:

if directo<sub>PLL</sub> = 1:

$$\Delta P \approx 10 \log \frac{N_{ss} \times k}{2}$$

if  $directo_{PLL} = 0$ ,  $P_{PLL} = 1$ :

$$\Delta P \approx 10 log \frac{N_{ss} \times k}{4 \times P_{PLL}}$$

See <u>Table 118</u> for the spectral tone reduction and clock cycle displacement for directo<sub>PLL</sub> = 0 and  $P_{PLL}$  = 1.

Table 118. Values for different settings, directo<sub>PLL</sub> = 0, P<sub>PLL</sub> = 1

Table values are: $\Delta P \qquad \Delta n_{max}$	mf[2:0] N <sub>SS</sub> = 5	•	mf[2:0] N <sub>SS</sub> ≈ 3	•	mf[2:0] N <sub>SS</sub> = 2	•	mf[2:0] N <sub>SS</sub> = 1	•	mf[2:0] N <sub>SS</sub> = 6		mf[2:0]= N <sub>SS</sub> = 32		mf[2:0] N <sub>SS</sub> ≈ 2	•	mf[2:0] N <sub>SS</sub> = 1	
mr[2:0]=000, k≈0	0 dB	0	0 dB	0	0 dB	0	0 dB	0	0 dB	0	0 dB	0	0 dB	0	0 dB	0
mr[2:0]=001, k≈1	21 dB	32	20 dB	24	18 dB	16	15 dB	8	12 dB	4	9 dB	2	8 dB	1.5	6 dB	1
mr[2:0]=010, k≈1.5	23 dB	48	22 dB	32	20 dB	24	17 dB	12	14 dB	6	11 dB	3	10 dB	2.2	8 dB	1.5
mr[2:0]=011, k≈2	24 dB	64	23 dB	48	21 dB	32	18 dB	16	15 dB	8	12 dB	4	11 dB	3	9 dB	2
mr[2:0]=100, k≈3	26 dB	96	25 dB	64	25 dB	48	20 dB	24	17 dB	12	14 dB	6	13 dB	4.5	12 dB	4
mr[2:0]=101, k≈4	27 dB	128	26 dB	96	24 dB	64	21 dB	32	18 dB	16	15 dB	8	14 dB	6	12 dB	4
mr[2:0]=110, k≈6	28 dB	192	28 dB	128	26 dB	96	23 dB	48	20 dB	24	17 dB	12	16 dB	9	14 dB	6
mr[2:0]=111, k≈8	30 dB	256	29 dB	192	27 dB	128	24 dB	64	21 dB	32	18 dB	16	17 dB	12	15 dB	8

#### Chapter 4: LPC5411x System configuration (SYSCON)

#### 4.6.5.3.4 PLL power-down mode

If the PLL is not used, or if it there are cases where it is turned off in a running application, power can be saved by putting the PLL in power-down mode. Before this is done, the CPU and any peripherals that are not meant to stopped as well must be running from some other clock source.

## 4.6.5.4 PLL related registers

The PLL is controlled by registers described elsewhere in this chapter (see Section 4.5.49), and summarized below.

Table 119. Summary of PLL related registers

Register	Description	Section
SYSPLLCTRL	PLL control	4.5.49.1
SYSPLLSTAT	PLL status	4.5.49.2
SYSPLLNDEC	PLL N divider	4.5.49.3
SYSPLLPDEC	PLL P divider	4.5.49.4
SYSPLLSSCTRL0	PLL spread spectrum control 0	4.5.49.5.1
SYSPLLSSCTRL1	PLL spread spectrum control 1	4.5.49.5.2

#### 4.6.5.5 PLL usage

As previously noted, the PLL divider settings used in the PLL registers are not simple binary values, they are encoded as shown in the PLL register descriptions. The divider values and their encoding can be found by calculation using the information in this document. For simple PLL usage with no pre- or post-divide, the Chip\_POWER\_SetPLL API can be used (see <a href="Section 31.4.1">Section 31.4.1</a>). Also, a PLL setting calculator can be found on the NXP website. The latter two possibilities are recommended in order to avoid PLL setup issues.

### 4.6.5.5.1 Procedure for determining PLL settings

In general, PLL configuration values may be found as follows:

- Identify a desired PLL output frequency. This may depend on a specific interface frequency needed or be based on expected CPU performance requirements, and may be limited by system power availability.
- Determine which clock source to use as the PLL input. This can be influenced by power or accuracy required, or by the potential to obtain the desired PLL output frequency.
- 3. Identify PLL settings to obtain the desired output from the selected input. The Fcco frequency must be either the actual desired output frequency, or the desired output frequency times 2 x P, where P is from 2 to 32. The Fcco frequency must also be a multiple of the PLL reference frequency, which is either the PLL input, or the PLL input divided by N, where N is from 2 to 256.
- 4. There may be several ways to obtain the same PLL output frequency. PLL power depends on Fcco (a lower frequency uses less power) and the divider used. Bypassing the input and/or output divider saves power.
- Check that the selected settings meet all of the PLL requirements:
  - Fin is in the range of 32 kHz to 25 MHz.

#### Chapter 4: LPC5411x System configuration (SYSCON)

- Fcco is in the range of 75 MHz to 150 MHz.
- Fout is in the range of 1.2 MHz to 150 MHz.
- The pre-divider is either bypassed, or N is in the range of 2 to 256.
- The post-divider is either bypassed, or P is in the range of 2 to 32.
- M is in the range of 3 to 32,768.

Also note that PLL startup time becomes longer as Fref drops below 500 kHz. At 500 kHz and above, startup time is up to 500 microseconds. Below 500 kHz, startup time can be estimated as 200 / Fref, or up to 6.1 milliseconds for Fref = 32 kHz. PLL accuracy and jitter is better with higher values of Fref.

#### 4.6.5.5.2 PLL setup sequence

The following sequence should be followed to initialize and connect the PLL:

- Make sure that the PLL output is disconnected from any downstream functions. If the PLL was previously being used to clock the CPU, and the CPU Clock Divider is being used, it may be set to speed up operation while the PLL is disconnected.
- Select a PLL input clock source. See <u>Section 4.5.25 "System PLL clock source select</u> register".
- Set up the PLL dividers and mode settings. See Section 4.5.49 "PLL registers".
- 4. Wait for the PLL output to stabilize. The value of the PLI lock may not be stable when the PLL reference frequency (FREF, the frequency of REFCLK, which is equal to the PLL input frequency divided by the pre-divider value) is less than 100 kHz or greater than 20 MHz. In these cases, the PLL may be assumed to be stable after a start-up time has passed. This time is 500 μs when Fref is 500 kHz or greater and 200 / Fref seconds when FREF is less than 500 kHz.
- 5. If the PLL will be used to clock the CPU, change the CPU Clock Divider setting for operation with the PLL, if needed. This must be done before connecting the PLL.
- 6. Connect the PLL to whichever downstream function is will be used with. The structure of the clock dividers may be seen on the right of Figure 4 "Clock generation".

# 4.6.6 Frequency measure function

The Frequency Measure circuit is based on two 14-bit counters, one clocked by the reference clock and one by the target clock. Synchronization between the clocks is performed at the start and end of each count sequence.

A measurement cycle is initiated by software setting a control/status bit in the FREQMECTRL register (<u>Table 73</u>). The software can then poll this same measurement-in-progress bit which will be cleared by hardware when the measurement operation is completed.

The measurement cycle terminates when the reference counter rolls-over. At that point the state of the target counter is loaded into a capture field in the FREQMEAS register, and the measure-in-progress bit is cleared. Software can read this capture value and apply to it a specific calculation which will return the precise frequency of the target clock in MHz.

#### Chapter 4: LPC5411x System configuration (SYSCON)

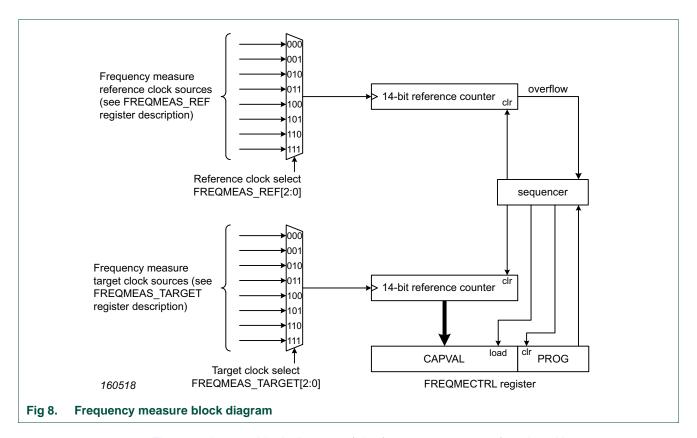


Figure 8 shows a block diagram of the frequency measure function. Also see:

- Section 4.2.3 "Measure the frequency of a clock signal"
- Frequency measure control register (FREQMECTRL)- Section 4.5.44
- Frequency reference clock select register (FREQMEAS REF) Section 8.6.4
- Frequency target clock select register (FREQMEAS\_TARGET) Section 8.6.5

## 4.6.6.1 Accuracy

The frequency measurement function can measure the frequency of any on-chip (or off-chip) clock (referred to as the target clock) to a high degree of accuracy using another on-chip clock of known frequency as a reference.

The following constraints apply:

- The frequency of the reference clock must be (somewhat) greater that the frequency of the target clock.
- The system clock used to access the frequency measure function register must also be greater than the frequency of the target clock.

The frequency measurement function circuit is able to measure the target frequency with an error of less than 0.1%, provided the reference frequency is precisely known.

Uncertainty in the reference clock (for example the 1% accuracy of the FRO) will add to the measurement error of the target clock. In general, though, this additional error is less than the uncertainty of the reference clock.

## Chapter 4: LPC5411x System configuration (SYSCON)

There can also be a modest loss of accuracy if the reference frequency exceeds the target frequency by a very large margin (25x or more). Accuracy is not a simple function of the magnitude of the frequency difference, however. Nearly identical frequency combinations, still with a spread of about 43x, result in errors of less than 0.05%.

If the target and reference clocks are different by more than a factor of approximately 500, then the accuracy decreases to +/- 4%.

# **UM10914**

# **Chapter 5: LPC5411x Power management**

Rev. 1.2 — 30 June 2016

**User manual** 

## 5.1 Introduction

This chapter provides an overview of power related information about LPC5411x devices. These devices include a variety of adjustable regulators, power switches, and clock switches to allow fine tuning power usage to match requirements at different performance levels and reduced power modes.

To turn analog components on or off in active and sleep modes, use the PDRUNCFG0 register (see <u>Table 86</u>). In deep-sleep mode, the power profile API controls which analog peripherals remain powered up (see <u>Section 31.4.3 "Chip\_POWER\_EnterPowerMode"</u>). There is no register implemented to turn analog peripherals on or off for deep-sleep mode.

# 5.2 General description

Power to the part is supplied via two power domains. The main power domain is powered by VDD and supplies power to the core, peripheral, memories, inputs and outputs via an on-chip regulator.

A second, always-on power domain is also powered by VDD, and includes the RTC and wake-up timer. This domain always has power as long as sufficient voltage is supplied to VDD.

Power usage is controlled by settings in register within the SYSCON block, regulator settings controlled via a Power API, and the operating mode of a CPU. The following modes are supported in order from highest to lowest power consumption:

#### 1. Active mode:

The part is in active mode after a Power-On Reset (POR) and when it is fully powered and operational after booting.

#### 2. Sleep mode:

Sleep mode saves a significant amount of power by stopping CPU execution without affecting peripherals or requiring significant wake-up time. The sleep mode affects the relevant CPU only. The clock to the core is shut off. Peripherals and memories are active and operational.

#### 3. Deep-sleep mode:

Deep-sleep mode is highly configurable and can potentially turn off nearly all on-chip power consumption other than the on-chip power supply, with the cost of a longer wake-up time. The deep-sleep mode affects the entire system, the clock to all CPUs is shut down and the peripherals receive no internal clocks. All SRAM and registers maintain their internal states. Entry to this mode can only be accomplished by the master CPU in devices that support 2 CPUs.

Through the power profiles API, selected peripherals can be left running for safe operation of the part (WWDT and BOD).

#### 4. Deep power-down mode:

#### Chapter 5: LPC5411x Power management

Deep power-down mode shuts down virtually all on-chip power consumption, but requires a significantly longer wake-up time. For maximal power savings, the entire system (CPUs and all peripherals) is shut down except for the PMU and the RTC. On wake-up, the part reboots. Entry to deep power-down mode can only be accomplished by the master CPU in a device that supports two CPUs.

Table 120. Peripheral configuration in reduced power modes

Peripheral	Sleep mode	Deep-sleep mode	Deep power- down mode
FRO	Software configured	Software configured	Off
Flash	Software configured	Off	Off
BOD	Software configured	Software configured	Off
PLL	Software configured	Off	Off
Watchdog osc and WWDT	Software configured	Software configured	Off
USART	Software configured	Off; but can create a wake-up interrupt in synchronous slave mode or 32 kHz clock mode	Off
SPI	Software configured	Off; but can create a wake-up interrupt in slave mode	Off
I2C	Software configured	Off; but can create a wake-up interrupt in slave mode	Off
Other digital peripherals	Software configured	Off	Off
Analog peripherals	Software configured	Software configured	Off
RTC oscillator	Software configured	Software configured	Software configured

## 5.2.1 Wake-up process

The part always wakes up to the active mode. To wake up from the reduced power modes, you must configure the wake-up source. Each reduced power mode supports its own wake-up sources and needs to be configured accordingly as shown in Table 121.

Table 121. Wake-up sources for reduced power modes

Power mode	Wake-up source	Conditions
Sleep	Any interrupt	Enable interrupt in NVIC.
	HWWAKE	Certain Flexcomm Interface and DMIC subsystem activity. See Section 4.5.64 "Hardware Wake-up control register".

## **Chapter 5: LPC5411x Power management**

Table 121. Wake-up sources for reduced power modes

Power mode	Wake-up source	Conditions			
Deep-sleep	Pin interrupts	Enable pin interrupts in NVIC and STARTER0 and/or STARTER1 registers.			
	BOD interrupt	Enable interrupt in NVIC and STARTER0 registers.			
		Enable interrupt in BODCTRL register.			
		<ul> <li>Configure the BOD to keep running in this mode with the power API.</li> </ul>			
	BOD reset	Enable reset in BODCTRL register.			
	Watchdog interrupt	Enable the watchdog oscillator in the PDRUNCFG0 register.			
		<ul> <li>Enable the watchdog interrupt in NVIC and STARTER0 registers.</li> </ul>			
		<ul> <li>Enable the watchdog in the WWDT MOD register and feed.</li> </ul>			
		Enable interrupt in WWDT MOD register.			
		<ul> <li>Configure the WDTOSC to keep running in this mode with the power API.</li> </ul>			
	Watchdog reset	<ul> <li>Enable the watchdog oscillator in the PDRUNCFG0 register.</li> </ul>			
		<ul> <li>Enable the watchdog and watchdog reset in the WWDT MOD register and feed.</li> </ul>			
	Reset pin	Always available.			
	RTC 1 Hz alarm timer	Enable the RTC 1 Hz oscillator in the RTCOSCCTRL register.			
		Enable the RTC bus clock in the AHBCLKCTRL0 register.			
		Start RTC alarm timer by writing a time-out value to the RTC COUNT register.			
		Enable the RTCALARM interrupt in the STARTER0 register.			
	RTC 1 kHz timer time-out and alarm	<ul> <li>Enable the RTC 1 Hz oscillator and the RTC 1 kHz oscillator in the RTC CTRL register.</li> </ul>			
		Start RTC 1 kHz timer by writing a value to the WAKE register of the RTC.			
		<ul> <li>Enable the RTC wake-up interrupt in the STARTER0 register.</li> </ul>			
	Micro-tick timer	Enable the watchdog oscillator in the PDRUNCFG0 register.			
	(intended for ultra-low power wake-up from deep-sleep mode	Enable the Micro-tick timer clock by writing to the AHBCLKCTRL1 register.			
		Start the Micro-tick timer by writing UTICK CTRL register.			
		Enable the Micro-tick timer interrupt in the STARTER0 register.			
	I2C interrupt	Interrupt from I2C in slave mode. See Chapter 24 "LPC5411x I2C-bus interfaces".			
	SPI interrupt	Interrupt from SPI in slave mode. See Chapter 23 "LPC5411x Serial Peripheral Interfaces (SPI)".			
	USART interrupt	Interrupt from USART in slave or 32 kHz mode. See Chapter 22 "LPC5411x USARTs".			
	USB need clock interrupt	Interrupt from USB when activity is detected that requires a clock. See Section 20.7.6 "USB wake-up".			
	DMA interrupt	See Chapter 12 for details of DMA-related interrupts.			
	HWWAKE	Certain Flexcomm Interface and DMIC subsystem activity. See Section 4.5.64 "Hardware Wake-up control register".			
Deep	RTC 1 Hz alarm timer	Enable the RTC 1 Hz oscillator in the RTC CTRL register.			
power-down		Start RTC alarm timer by writing a time-out value to the RTC COUNT register.			
	RTC 1 kHz timer time-out and alarm	<ul> <li>Enable the RTC 1 Hz oscillator and the RTC 1 kHz oscillator in the RTCOSCCTRL register.</li> </ul>			
		Enable the RTC bus clock in the AHBCLKCTRL0 register.			
		Start RTC 1 kHz timer by writing a value to the WAKE register of the RTC.			
	Reset pin	Always available.			

Chapter 5: LPC5411x Power management

# 5.3 Functional description

## 5.3.1 Power management

The LPC5411x support a variety of power control features. In Active mode, when the chip is running, power and clocks to selected peripherals can be optimized for power consumption. In addition, there are three special modes of processor power reduction with different peripherals running: sleep mode, deep-sleep mode, and deep power-down mode, activated by the power mode configure API (see <a href="Section 31.4.3">Section 31.4.3</a> "Chip\_POWER\_EnterPowerMode").

**Remark:** The Debug mode is not supported in sleep, deep-sleep, or deep power-down modes.

#### 5.3.2 Active mode

In Active mode, the CPU, memories, and peripherals are clocked by the AHB/CPU clock.

The chip is in Active mode after reset and the default power configuration is determined by the reset values of the PDRUNCFG0, AHBCLKCTRL0, and AHBCLKCTRL1 registers. The power configuration can be changed during run time.

#### 5.3.2.1 Power configuration in Active mode

Power consumption in Active mode is determined by the following configuration choices:

- The AHBCLKCTRL registers control which memories and peripherals are running (Section 4.5.16 "AHB Clock Control register 0" and Section 4.5.17 "AHB Clock Control register 1"). Generally speaking, in order to save power, functions that are not needed by the application should be turned off. If specific times are known when certain functions will not be needed, they can be turned off temporarily and turned back on when they will be needed.
- The power to various analog blocks (RAMs, PLL, oscillators, the BOD circuit, and the flash block) can be controlled individually through the PDRUNCFG0 register (Table 86). As with clock controls, these blocks should generally be tuned off if not needed by the application. If turned off, time will be needed before these blocks can be used again after being turned on.
- The clock source for the system clock can be selected from the FRO (default), the system oscillator, the 32 kHz oscillator, or the watchdog oscillator (see <u>Figure 4</u> and related registers).
- The system clock frequency can be selected (see <u>Section 4.6.5 "PLL functional description"</u> and other clocking related sections). You can find optimal settings for setting the system PLL by using the Chip\_POWER\_SetPLL routine in the power API (<u>Section 31.4.1 "Chip\_POWER\_SetPLL"</u>). Generally speaking, everything uses less power at lower frequencies, so running the CPU and other device features at a frequency sufficient for the application (plus some margin) will save power. If the PLL is not needed, it should be turned off to save power. Also, running the PLL at a lower CCO frequency saves power.
- Several peripherals use individual peripheral clocks with their own clock dividers. The
  peripheral clocks can be shut down through the corresponding clock divider registers
  if the base clock is still needed for another function.

UM10914

#### Chapter 5: LPC5411x Power management

 The power API provides an easy way to optimize power consumption depending on CPU load and performance requirements. See <u>Chapter 31 "LPC5411x Power</u> <u>profiles/Power control API"</u>.

## 5.3.3 Sleep mode

In sleep mode, the system clock to the CPU is stopped and execution of instructions is suspended until either a reset or an interrupt occurs.

Peripheral functions, if selected to be clocked in the AHBCLKCTRL registers, continue operation during sleep mode and may generate interrupts to cause the processor to resume execution. Sleep mode eliminates dynamic power used by the processor itself, memory systems and related controllers, and internal buses. The processor state and registers, peripheral registers, and internal SRAM values are maintained, and the logic levels of the pins remain static.

As in active mode, the power API provides an easy way to optimize power consumption depending on CPU load and performance requirements in sleep mode. See Section 31.4.3 "Chip\_POWER\_EnterPowerMode".

#### 5.3.3.1 Power configuration in sleep mode

Power consumption in sleep mode is configured by the same settings as in Active mode:

- Enabled clocks remain running.
- The system clock frequency remains the same as in Active mode, but the processor is not clocked.
- Analog and digital peripherals are powered and selected as in Active mode through the PDRUNCFG0, AHBCLKCTRL0, and AHBCLKCTRL1 registers.

#### 5.3.3.2 Programming sleep mode

The following steps must be performed to enter sleep mode:

- 1. In the NVIC, enable all interrupts that are needed to wake up the part.
- 2. Call power API Chip\_POWER\_EnterPowerMode (see Section 31.4.3).

#### 5.3.3.3 Wake-up from sleep mode

Sleep mode is exited automatically when an interrupt enabled by the NVIC arrives at the processor or a reset occurs. After wake-up caused by an interrupt, the device returns to its original power configuration defined by the contents of the PDRUNCFG0 and the AHBCLKCTRL registers. If a reset occurs, the microcontroller enters the default configuration in Active mode.

## 5.3.4 Deep-sleep mode

In deep-sleep mode, the system clock to the processor is disabled as in sleep mode. All analog blocks are powered down by default but can be selected to keep running through the power API if needed as wake-up sources. The main clock, and therefore all peripheral clocks, are disabled. The FRO is disabled. The flash is turned off.

#### Chapter 5: LPC5411x Power management

Deep-sleep mode eliminates all power used by analog peripherals and all dynamic power used by the processor itself, memory systems and related controllers, and internal buses. The processor state and registers, peripheral registers, and internal SRAM values are maintained, and the logic levels of the pins remain static.

#### 5.3.4.1 Power configuration in deep-sleep mode

Power consumption in deep-sleep mode is determined primarily by which analog wake-up sources remain enabled. Serial peripherals and pin interrupts configured to wake up the contribute to the power consumption only to the extent that they are clocked by external sources. All wake-up events (other than reset) must be enabled in the STARTER registers and in the NVIC. In addition, any related analog block (e.g. the RTC oscillator or the watchdog oscillator) must be explicitly enabled through the power API function Chip\_POWER\_EnterPowerMode for wake-up. See Table 121.

## 5.3.4.2 Programming deep-sleep mode

The following steps must be performed to enter deep-sleep mode:

- 1. Select wake-up sources and enable all selected wake-up events in the STARTER registers (Table 93 and Table 94) and in the NVIC.
- 2. Select the FRO 12 MHz as the main clock. See Table 51 and Table 52.
- 3. Call the power API with the peripheral parameter set to enable the analog peripherals that serve as wake-up sources (see Table 472 "Chip\_POWER\_EnterPowerMode" routine").

#### 5.3.4.3 Wake-up from deep-sleep mode

The part can wake up from deep-sleep mode in the following ways:

- Using a signal on one of the eight pin interrupts selected in Section 8.6.1 "Pin interrupt select registers". Each pin interrupt must also be enabled in the STARTER0 register (Table 93) and in the NVIC.
- Using an interrupt from a block such as the watchdog interrupt or RTC interrupt, when enabled during the reduced power mode via the power API. Also enable the wake-up sources in the STARTER registers (Table 93 and Table 94) and the NVIC.
- Using a reset from the RESET pin, or the BOD or WWDT (if enabled in the power
- Using a wake-up signal from any of the serial peripherals that are operating in deep-sleep mode. Also enable the wake-up sources in the STARTER registers (Table 93 and Table 94) and the NVIC.
- GPIO group interrupt signal. The interrupt must also be enabled in the STARTER1 register (Table 94) and in the NVIC.
- RTC alarm signal or wake-up signal. See Chapter 16. Interrupts must also be enabled in the STARTER1 register (Table 94) and in the NVIC.

#### 5.3.5 Deep power-down mode

In deep power-down mode, power and clocks are shut off to the entire chip with the exception of the RTC.

#### Chapter 5: LPC5411x Power management

During deep power-down mode, the contents of the SRAM and registers (other than those in the RTC) are not retained. All functional pins are tri-stated in deep power-down mode as long as chip power supplied externally.

#### Power configuration in deep power-down mode 5.3.5.1

Deep power-down mode has no configuration options. All clocks, the core, and all peripherals are powered down. Only the RTC is powered, as long as power is supplied to the device.

### 5.3.5.2 Wake-up from deep power-down mode:

Wake-up from deep power-down can be accomplished via the reset pin or the RTC.

## 5.3.5.3 Programming deep power-down mode using the RTC for wake-up:

The following steps must be performed to enter deep power-down mode when using the RTC for waking up:

- 1. Set up the RTC high resolution timer. Write to the RTC VAL register. This starts the high res timer if enabled. Another option is to use the 1 Hz alarm timer.
- 2. Call the power API Chip\_POWER\_EnterPowerMode (see Table 472).

#### 5.3.5.4 Wake-up from deep power-down mode using the RTC:

The part goes through the entire reset process when the RTC times out:

- The PMU will turn on the on-chip voltage regulator. When the core voltage reaches the power-on-reset (POR) trip point, a system reset will be triggered and the chip boots.
- All registers will be in their reset state.

# **UM10914**

# Chapter 6: LPC5411x Boot process

Rev. 1.2 — 30 June 2016

**User manual** 

## 6.1 Features

- On-chip boot ROM.
- Contains the boot loader with In-System Programming (ISP) facility and the following APIs:
  - In-Application Programming (IAP) of flash memory.
  - Power profiles for optimizing power consumption and system performance and for controlling low power modes.
- · Legacy and enhanced boot image support.

# 6.2 Pin description

The parts support ISP via USART, I<sup>2</sup>C, SPI, and USB. The ISP mode is determined by the state of the ISP0, ISP1, and VBUS pins at power-up or external reset:

Table 122. ISP modes

Boot source	ISP0 (PI00_31)	ISP1 (PIO0_4)	VBUS (PIO1_6)	Description
Flash, no ISP	1	x	x	ISP is bypassed. The device boots from flash if valid user code is detected.
I2C / SPI	0	0	х	The first valid probe message on I <sup>2</sup> C of Flexcomm Interface 1 or SPI of Flexcomm Interface 3 chooses that interface.
USART	0	1	0	Part enters ISP via the USART of Flexcomm Interface 0.
USB	0	1	1	Allow programming flash as USB mass storage device class (MSC).

The USART ISP interface is implemented on the following pins:

- PIO0\_0 for receive
- PIO0 1 for transmit

The USB interface is implemented on the following pins:

- PIO1 6 for VBUS
- USB0\_DP for USB D+
- USB0\_DM for USB D-

The I2C ISP interface is implemented on the following pins:

- ISP1 (PIO0\_4) for I2C/SPI IRQ pin to and from the host system
- PIO0\_23 for I2C SCL (clock) signal
- PIO0\_24 for I2C SDA (data) signal

The SPI ISP interface is implemented on the following pins:

- PIO0 11 for SPI CLK (clock)
- PIO0\_12 for SPI MOSI (master out, slave in) data signal

#### Chapter 6: LPC5411x Boot process

- PIO0\_13 for SPI MISO (master in, slave out) data signal
- PIO0\_14 for SPI SSEL (select) signal
- PIO0\_4 for I2C/SPI IRQ pin to and from the host system

# 6.3 General description

The boot loader controls initial operation after reset and also provides the means to program the flash memory. This could be initial programming of a blank device, erasure and re-programming of a previously programmed device, or programming of the flash memory by the application program in a running system.

The boot loader code is executed every time the part is powered on or reset (see Figure 9). The loader can execute the ISP command handler or the user application code.

The boot loader version can be read by ISP/IAP calls (see Table 493 or Table 505).

Assuming that power supply pins are at their nominal levels when the rising edge on RESET pin is generated, it may take up to 3 ms before the boot pins are sampled and the decision whether to continue with user code or ISP handler is made. If the boot pins select ISP and the watchdog timeout flag (WDTOF) is set, the external hardware request to start the ISP command handler is ignored. If there is no request for ISP command handler execution, a search is made for a valid user program. If a valid user program is found (see Section 32.3.4 "Criteria for Valid User Code"), then execution is transferred to it. If a valid user program is not found, the selected ISP routine is invoked.

See <u>Section 4.6 "Functional description"</u> for more details of reset, startup behavior, and more. See <u>Chapter 32 "LPC5411x Flash API"</u> for ISP and IAP commands.


94 of 590

UM10914 **NXP Semiconductors** 


#### Chapter 6: LPC5411x Boot process


# 6.4 Boot process

The following figures show the ROM's boot flow process of the LPC5411x. This includes ISP selection, CRP checks, and image type detection. (DE0 = Dual Enhanced image at sector 0, DEn- Dual Enhanced image at sector n (where n > 0), SE = Single Enhanced image).

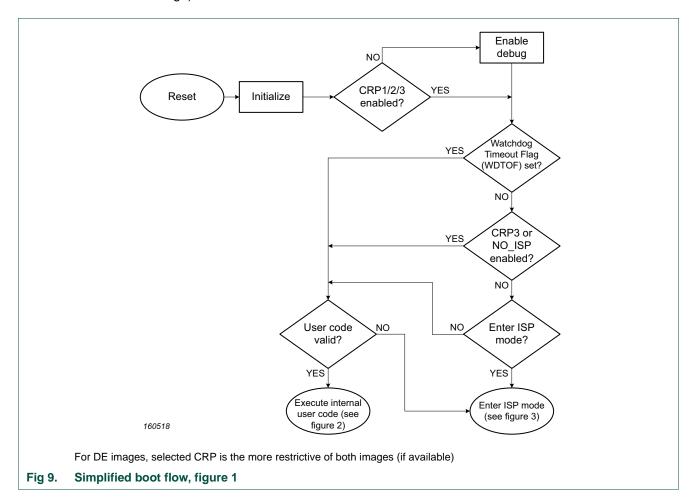

#### Chapter 6: LPC5411x Boot process

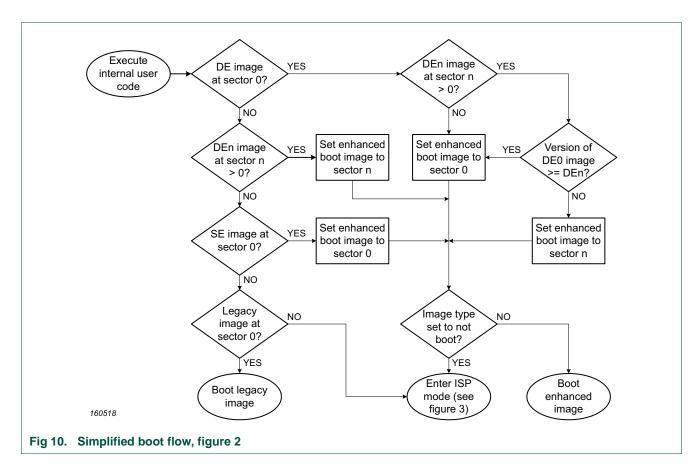

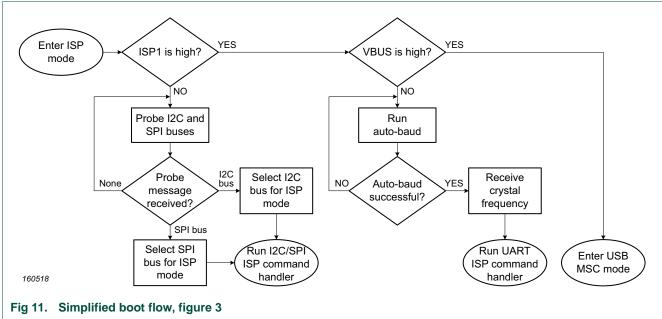

Chapter 6: LPC5411x Boot process

# 6.5 Image boot support

The LPC5411x supports booting executable images from internal flash located at sector 0, but also supports enhanced images that can boot from sectors greater than 0, even if sector 0 is blank.

The LPC5411x supports 3 types of images: legacy images, Single Enhanced (SE) images, and Dual Enhanced (DE) images. Selection of the image type is based on several fields defined in the application itself.

## 6.5.1 Legacy images

A legacy image is located in sector 0 and does not contain an enhanced image marker or an image header structure. The only requirement for a legacy image is that the checksum of the first 8 32-bit words of the image must add to 0x00000000.

## 6.5.2 Enhanced images

Single Enhanced (SE) and Dual Enhanced (DE) images differ from a legacy image in that they add an enhanced marker value at offset 0x24 in the image and an image header that optionally enables the image CRC capability and adds an image version number. Offset 0x28 in the image must point to the location of a valid image header in the image.

#### 6.5.2.1 Single Enhanced (SE) images

The Single Enhanced image can only be located at sector 0. For an image to be Single Enhanced, it needs to have the Single Enhanced image marker value (0xEDDC9494) at offset 0x24. It must also have a valid image header in the image pointed to at offset 0x28. The image header is explained in Section 6.5.7 "Enhanced Image Boot Block Header".

#### 6.5.2.2 Dual Enhanced (DE) images

The Dual Enhanced image type is similar to the Single Enhanced image type except that it adds the ability to select and boot 1 of 2 images in flash based on the highest version number in the image header. Up to 2 Dual Enhanced images may be located in flash. If only 1 Dual Enhanced image is located in flash, it may be located at the start of any sector. If 2 dual enhanced images are in flash, one of the images must be at sector 0 and the other must start at any sector greater than 0. If 2 images exist, the version number is checked on both images. If the version numbers are the same, the image at sector 0 is executed. If the version numbers are not the same, the image with the highest version number is executed. If more than 2 Dual Enhanced images exist, only the first 2 are checked.

Dual Enhanced images give the ability to run one image from flash, while programming another image located elsewhere in flash. The Dual Enhanced image facility may also be used to locate a boot loader at sector 0 and an application at another sector. If the application is ever erased and the chip is reset, the image at sector 0 will execute following reset.

For an image to be Dual Enhanced, it needs to have the Dual Enhanced image marker value (0x0FFEB6B6) at offset 0x24. It must also have a valid image header in the image pointed to at offset 0x28. The image header is explained in <a href="Section 6.5.7">Section 6.5.7</a> "Enhanced Image Boot Block Header".

#### Chapter 6: LPC5411x Boot process

For Dual Enhanced images not at sector 0, the image must be linked to run at the sector start address where the image is programmed and must be aligned on a sector boundary.

## 6.5.3 When to use legacy, single enhanced or dual enhanced images

Each image type has its own advantages and disadvantages. The table below outlines the advantages and disadvantages of each image type and the best use cases for them.

Table 123. Image type considerations

Image type	Advantage	Disadvantage	Best use
Legacy	Simple to create, works with all tool chains without special processing.	Slightly longer boot time than Single Enhanced images.	When debugging an application.
Single Enhanced	Fastest boot time (without CRC), Supports optional CRC checking, more secure.	More complex to build than legacy images, CRC generation can be complex, may increase boot time if CRC is used.	Production systems that benefit from fastest boot time (no CRC).
Dual Enhanced	Single Enhanced advantages plus up to 2 selectable images based on version, more secure.	More complex to build than legacy images, CRC generation can be complex, may increase boot time.	Systems that require boot image cycling based on version.

## 6.5.4 Default operations when image boot fails

If an image – legacy or enhanced – fails to boot or an image isn't available to boot, ISP mode is entered based on the states of the ISP1 and USB0 VBUS pins only regardless of the ISP0 pin state.

## 6.5.5 Enhanced image boot failures

For an image to be enhanced, it must contain a valid enhanced marker at offset 0x24 and a valid image header that is pointed to at offset 0x28. The image header also has requirements that must be met to be considered valid.

Prior to an enhanced image booting, the LPC5411x performs multiple checks on the image to verify that it is valid or that the image is allowed to boot. If all the image checks are valid, the enhanced image is booted. If any of the checks fail, the enhanced image is not booted and the system enters the ISP mode selected by the ISP0 and VBUS pin states. The following cases on an enhanced image check will prevent the application from booting:

- First 8 words (checksum) do not add up to 0x00000000.
- Image header is invalid.
- Invalid header marker in image header.
- CRC check is invalid (For images where optional CRC check is enabled).
- ISP0 pin is asserted (enters ISP mode) and NO\_ISP image type is not used.
- Invalid 'img\_type' value in the image header.

Chapter 6: LPC5411x Boot process

## 6.5.6 Modifications to startup code to enable enhanced boot support

Several modifications need to be made to the startup code to enable enhanced boot support. The value at offset 0x24 in the image must contain an enhanced image marker and the value at offset 0x28 must point to a valid image header in the image. See the box below for an example setup using a Single Enhanced image. Changes are in bold and made to the vector table are of the startup code.

```
; Vector Table Mapped to Address 0 at Reset
                RESET, DATA, READONLY
          AREA
          EXPORT ___Vectors
__Vectors DCD
                  __initial_sp ; Top of Stack
                  Reset_Handler ; Reset Handler
          DCD
          DCD
                 NMI_Handler
                 HardFault_Handler
          DCD
          חטת
                 MemManage_Handler
          DCD
                  BusFault_Handler
                  UsageFault_Handler
          DCD
__vector_table_0x1c
                              ; Checksum of the first 7 words
                  n
          DCD
          DCD
          DCD
                  0xEDDC9494 ; Enhanced image marker, set to 0x0 for legacy boot
          IMPORT imageHeader
                  imageHeader; Pointer to enhanced image header, use 0x0 for legacy
          DCD
                                boot
```

The image header for the startup code must be located somewhere in non-volatile memory. A simple image header that doesn't perform CRC is shown below. All field sizes are 32-bits.

### 6.5.7 Enhanced Image Boot Block Header

This header must be present and be valid for any type of enhanced image [Single/Dual]. A pointer to this header structure must be stored at offset 0x28 of the enhanced image and located in non-volatile memory.

#### Chapter 6: LPC5411x Boot process

Table 124. Image Header structure

Field	Offset	Size (bytes)	Value	Description
header_marker	0x00	0x4	0xFEEDA5A5	Image header marker must always be 0xFEEDA5A5
img_type	0x04	0x4	-	Image type. 0 - IMG_NORMAL 1 - IMG_NO_CRC (All other values invalid, will not boot)
crc_len	0X08	0X4	-	Length of the image.  Applications requiring fast boot time can have partial CRC check by altering this length field. Note, the crc_value field should be calculated for the length of image specified in this field.
crc_value	0x0C	0x4	-	CRC32 of the image excluding this field.
Version	0x10	0x4	-	Image version for Dual Enhanced image support

#### 6.5.7.1 Image Type (img\_type)

The "img\_type" field in the image header alters how the application boots and enters I2C/SPI ISP mode.

• IMG\_NORMAL (0):

For this type of image, the ROM code will check the CRC32 of the image. If the CRC32 computation is valid, the image will boot.

• IMG\_NO\_CRC (1):

For this type of image, no image checks are made of the image header. The image will always boot.

All other values are invalid.

#### 6.5.7.2 Enhanced Image CRC computation

The enhanced image CRC computation is enabled in an enhanced image if a CRC enabled image type (IMG\_NORMAL) is used. The CRC is performed from the start of an image (at a sector boundary) and uses an embedded length value (crc\_len) and expected CRC value (crc\_value) from the programmed image's image header. CRC computations are always done on a contiguous range of data, but will skip the embedded CRC value location in the image if the CRC range passes through that address.

The CRC length must be a byte length that is 32-bit aligned (8, 12, 16, etc.). The CRC length can be as small as 4 bytes and as large as the image size minus 4 bytes and adjusted for a 32-bit size. The adjustment of (-4) bytes is needed for the CRC value of the image header.

Because the image header can be embedded anywhere in the programmed image, care must be taken to not use the CRC value field in the CRC computation itself. The CRC length field is used in the CRC computation.

#### Example: CRC computation length for a full image with image length = 40997 bytes

For an image length of 40997 bytes, the CRC length will be the length of the image adjusted by (-4) for the embedded CRC value field. This adjusts the length to 40993 bytes. The length must also be 32-bit aligned, so the length's lower 2 bytes are masked off. The final length = (40993 & -0x3) = 40992 bytes.

**User manual** 

#### Chapter 6: LPC5411x Boot process

#### CRC generation approach for an enhanced image and CRC parameters

The following basic approach is used to generate the CRC length and value field on an enhanced image.

1. Determine the OFFSET in the image the CRC length and value fields are located.

This can be done by looking at the image header address in the image at offset 0x28. This address points to an enhanced image header in the image. For images in sector 0, the address is the offset in the file to the image header. For images greater than sector 0, the address minus the sector start address is the offset in the file to the image header.

- Increment the OFFSET by 16 to get the offset for the CRC length (OFFSET\_CRCLEN). Increment the OFFSET by 20 to get the offset for the CRC value (OFFSET\_CRCVAL).
- 3. Prepare for CRC using the following parameters:

```
CRC_SEED_VALUE = 0xFFFFFFF
```

CRC\_MODE is CRC-32, CRC operations on 32-bit values

4. Determine length of CRC generation (CRC\_LEN)

This must be a minimum of 4 bytes and a maximum of the image size minus 4 bytes. If the CRC generation range goes through the CRC value field, the CRC value field will be skipped. The CRC length must be 32-bit aligned and not longer than the size of the image minus 4 bytes.

- Update the CRC length value (CRC\_LEN) in the image header
   Write the desired CRC length (CRC\_LEN) into the image file at offset OFFSET\_CRCLEN. This is a 32-bit field.
- 6. Generate CRC-32 value for the CRC length

Initialize the CRC-32 algorithm with the correct parameters and use the following algorithm to compute the CRC-32 value starting at the beginning of the file.

- 7. Perform 1's complement on generated CRC-32 value
- Update the CRC value (CRC\_VAL) in the image header
   Write the generated CRC value (CRC\_VAL) into the image file at offset OFFSET\_CRCVAL. This is a 32-bit field.

#### Considerations with enhanced images

Images that enable CRC checks can take considerably longer to boot than images that don't use CRC. The CRC must be computed and verified prior to image boot for these image types. Using a smaller CRC length (ie, 256 bytes) can reduce this time or avoid using a CRC enabled image type if boot time is important.

#### Chapter 6: LPC5411x Boot process

## 6.5.7.3 Dual enhanced Image Versioning

The "Version" field in the image header is only used for Dual Enhanced image checks when 2 Dual Enhanced images are detected in sector 0 and another sector. The LPC5411x will boot the image with the higher version number.

#### Considerations with dual-boot images

When the system checks an enhanced image to make sure it's bootable, it performs the legacy checksum verification, verifies that the image marker is valid, and will perform CRC checks on the image if enabled. When 2 images are available, all of these checks are performed on both images prior to checking the version of the images. This may make boot times considerably longer than normal when CRC is enabled.

# **UM10914**

# Chapter 7: LPC5411x I/O pin configuration (IOCON)

Rev. 1.2 — 30 June 2016

**User manual** 

# 7.1 How to read this chapter

The IOCON block is included on all LPC5411x parts. Registers for pins that are not available on a specific package are reserved.

Table 125. Available pins and configuration registers

Package	USB	Total GPIOs	GPIO Port 0	GPIO Port 1
49-pins (WLCSP)	Yes	37	PIO0_0 to PIO0_1, PIO0_4 to PIO0_26, PIO0_29 to PIO0_31	PIO1_0 to PIO1_8
64-pins	Yes	48	PIO0_0 to PIO0_26, PIO0_29 to PIO0_31	PIO1_0 to PIO1_17
64-pins	No	50	PIO0_0 to PIO0_31	PIO1_0 to PIO1_17

**Remark:** Some functions, such as SCTimer/PWM inputs, Frequency Measure, and ADC triggers are not selected through IOCON. The connections for these function are described in either the Input Multiplexing chapter (<a href="Chapter 8">Chapter 8</a>) or the chapter for the specific function.

## 7.2 Features

The following electrical properties are configurable for standard port pins:

- Pull-up/pull-down resistor
- · Open-drain mode
- Inverted function


Pins PIO0\_23 through PIO0\_26 are true open-drain pins that can be configured for different I<sup>2</sup>C-bus speeds. Configuration options are somewhat different for these pins, as described in this chapter. Refer to a specific device data sheets for electrical details of these and other pins.

# 7.3 Basic configuration

Enable the clock to the IOCON in the AHBCLKCTRL0 register (<u>Table 45</u>). Once the pins are configured, the IOCON clock can be disabled in order to conserve power.

# 7.4 General description

## 7.4.1 Pin configuration

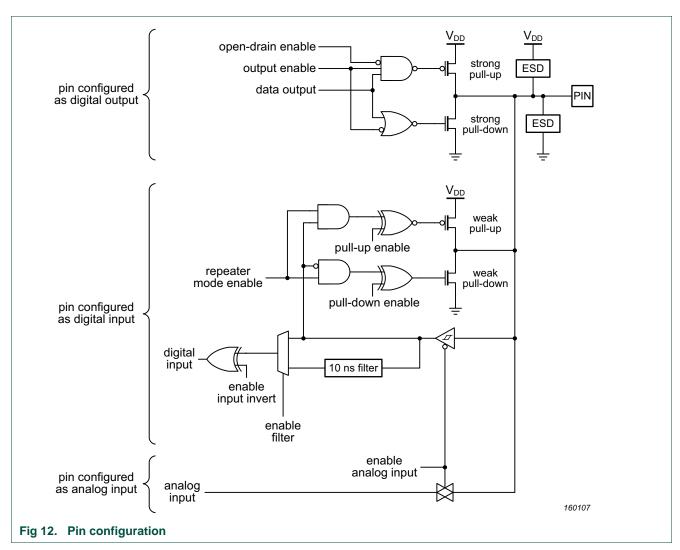

## 7.4.2 IOCON registers

The IOCON registers control the functions of device pins. Each GPIO pin has a dedicated control register to select its function and characteristics. Each pin has a unique set of functional capabilities. Not all pin characteristics are selectable on all pins. For instance, pins that have an I<sup>2</sup>C function can be configured for different I<sup>2</sup>C-bus modes, while pins that have an analog alternate function have an analog mode can be selected. Details of the IOCON registers are in Section 7.4.2. The following sections describe specific characteristics of pins.

## **Multiple connections**

Since a particular peripheral function may be allowed on more than one pin, it is possible to configure more than one pin to perform the same function. If a peripheral output function is configured to appear on more than one pin, it will in fact be routed to those

#### Chapter 7: LPC5411x I/O pin configuration (IOCON)

pins. If a peripheral input function is defined as coming from more than one source, the values will be logically combined, possibly resulting in incorrect peripheral operation. Therefore care should be taken to avoid this situation.

#### 7.4.2.1 Pin function

The FUNC bits in the IOCON registers can be set to GPIO (typically value 0) or to a special function. For pins set to GPIO, the DIR registers determine whether the pin is configured as an input or output (see <u>Section 9.5.3</u>). For any special function, the pin direction is controlled automatically depending on the function. The DIR registers have no effect for special functions.

#### 7.4.2.2 Pin mode

The MODE bits in the IOCON register allow the selection of on-chip pull-up or pull-down resistors for each pin or select the repeater mode.

The possible on-chip resistor configurations are pull-up enabled, pull-down enabled, or no pull-up/pull-down. The default value is pull-up enabled.

The repeater mode enables the pull-up resistor if the pin is high and enables the pull-down resistor if the pin is low. This causes the pin to retain its last known state if it is configured as an input and is not driven externally. Such state retention is not applicable to the deep power-down mode. Repeater mode may typically be used to prevent a pin from floating (and potentially using significant power if it floats to an indeterminate state) if it is temporarily not driven.

## 7.4.2.3 Hysteresis

The input buffer for digital functions has built-in hysteresis. See the appropriate specific device data sheet for quantitative details.

## 7.4.2.4 Invert pin

This option is included to avoid having to include an external inverter on an input that is meant to be the opposite polarity of the external signal.

#### 7.4.2.5 Analog/digital mode

When not in digital mode (DIGIMODE = 0) a pin is in analog mode, some digital pin functions are disabled and any analog pin functions are enabled. In digital mode (DIGIMODE = 1), any analog pin functions are disabled and digital pin functions are enabled. This protects the analog input from voltages outside the range of the analog power supply and reference that may sometimes be present on digital pins, since they are typically 5V tolerant. All pin types include this control, even if they do not support any analog functions.

In order to use a pin that has an ADC input option for that purpose, select GPIO (FUNC field = 0) and disable the digital pin function (DIGIMODE = 0). The MODE field should also be set to 0.

In analog mode, the MODE field should be "Inactive" (00); the INVERT, FILTEROFF, and OD settings have no effect. For an unconnected pin that has an analog function, keep the DIGIMODE bit set to 1 (digital mode), and pull-up or pull-down mode selected in the MODE field.

#### Chapter 7: LPC5411x I/O pin configuration (IOCON)

#### 7.4.2.6 Input filter

Some pins include a filter that can be selectively disabled by setting the FILTEROFF bit. The filter suppresses input pulses smaller than about 10 ns.

## 7.4.2.7 Output slew rate

The SLEW bits of digital outputs that do not need to switch state very quickly should be set to "standard". This setting allows multiple outputs to switch simultaneously without noticeably degrading the power/ground distribution of the device, and has only a small effect on signal transition time. This is particularly important if analog accuracy is significant to the application. See the relevant specific device data sheet for more details.

#### 7.4.2.8 I<sup>2</sup>C modes

Pins that support I<sup>2</sup>C with specialized pad electronics (P0[23] through P0[28]) have additional configuration bits. These have multiple configurations to support I<sup>2</sup>C variants. These are not hard-wired so that the pins can be more easily used for non-I<sup>2</sup>C functions. See Table 130 for recommended mode settings.

For non-I<sup>2</sup>C operation, these pins remain open-drain and can only drive low, regardless of how I2CSLEW and I2CDRIVE are set. They would typically be used with an external pull-up resistor if they are used as outputs unless they are used only to sink current. Leave I2CSLEW = 1, I2CDRIVE = 0, and I2CFILTER = 0 to maximize compatibility with other GPIO pins.

## 7.4.2.9 Open-Drain Mode

When output is selected, either by selecting a special function in the FUNC field, or by selecting the GPIO function for a pin having a 1 in the related bit of that port's DIR register, a 1 in the OD bit selects open-drain operation, that is, a 1 disables the high-drive transistor. This option has no effect on the primary I<sup>2</sup>C pins. Note that the properties of a pin in this simulated open-drain mode are somewhat different than those of a true open drain output.

## Chapter 7: LPC5411x I/O pin configuration (IOCON)

# 7.5 Register description

Each port pin PIOm\_n has one IOCON register assigned to control the pin's electrical characteristics.

**Remark:** refer to the Pinning information section of the appropriate device data sheet for details on which pins listed here exist on each package configuration.

Table 126. Register overview: I/O configuration (base address 0x4000 1000)

Name	Access	Offset	Description	Reset value[1]	Pin type	Section
PIO0_[0:15]	R/W	[0x000: 0x03C]	Digital I/O control for port 0 pins PIO0_0 to PIO0_15.	0x0190	D	7.5.1
PIO0_[16:17]	R/W	[0x040: 0x044]	Digital I/O control for port 0 pins PIO0_16 to PIO0_17.	0x0195	D	7.5.1
PIO0_[18:22]	R/W	[0x048: 0x058]	Digital I/O control for port 0 pins PIO0_18 to PIO0_22.	0x0190	D	7.5.1
PIO0_[23:26]	R/W	[0x05C: 0x068]	Digital I/O control for port 0 pins PIO0_23 to PIO0_26. These pins support I <sup>2</sup> C with true open-drain, drive and filtering for modes up to Fast-mode Plus. [2]	0x01A0	I	7.5.2
PIO0_[29:31]	R/W	[0x074: 0x07C]	Digital I/O control for port 0 pins PIO0_29 to PIO0_31. These pins include an ADC input.	0x0190	Α	7.5.3
PIO1_[0:8]	R/W	[0x080: 0x0A0]	Digital I/O control for port 1 pins PIO0_0 to PIO0_8. These pins include an ADC input.	0x0190	Α	7.5.3
PIO1_[9:17]	R/W	[0x0A4: 0x0C4]	Digital I/O control for port 1 pins PIO1_9 to PIO1_17.	0x0190	D	7.5.4

<sup>[1]</sup> Reset Value reflects the data stored in defined bits only. Reserved bits assumed to be 0.

<sup>[2]</sup> These pin are open drain and require an external pull-up to provide output functionality.

## Chapter 7: LPC5411x I/O pin configuration (IOCON)

## 7.5.1 Type D IOCON registers (PIO0)

This IOCON table applies to port pins P0[0 to 2] and P0[4 to 22]. Other pins include ADC or I2C functions that alter the contents of the related IOCON registers.

**Remark:** The FUNC field for P0[16] and P0[17] resets to 0b101 (0x5), selecting the Serial Wire Debug function by default.

Table 127. Type D IOCON registers (PIO0\_[0:22], offsets [0x000:0x058]) bit description

Bit	Symbol	Value	Description	Reset value	
2:0	FUNC	-	Selects pin function.	0x0 [1]	
4:3	MODE		Selects function mode (on-chip pull-up/pull-down resistor control).	0x2	
		0x0	Inactive (no pull-down/pull-up resistor enabled).		
		0x1	Pull-down resistor enabled.		
		0x2	Pull-up resistor enabled.		
		0x3	Repeater mode.		
5	-	-	Reserved. Read value is undefined, only zero should be written.	NA	
6	INVERT		Input polarity.	0x0	
		0	Disabled. Input function is not inverted.		
		1	Enabled. Input is function inverted.		
7	DIGIMODE		Select Analog/Digital mode.	0x1	
		0	Analog mode.		
		1	Digital mode.		
9	FILTEROFF		Controls input glitch filter.	0x1	
		0	Filter enabled. Noise pulses below approximately 10 ns are filtered out.		
		1	Filter disabled. No input filtering is done.		
9	SLEW		Driver slew rate.	0x0	
		0	Standard mode, output slew rate control is enabled. More outputs can be switched simultaneously.		
		1	Fast mode, slew rate control is disabled. Refer to the appropriate specific device data sheet for details.		
10	OD		Controls open-drain mode.	0x0	
		0	Normal. Normal push-pull output		
		1	Open-drain. Simulated open-drain output (high drive disabled).		
31:11	-	-	Reserved. Read value is undefined, only zero should be written.	NA	

<sup>[1]</sup> For PIO0\_16 and PIO0\_17, the reset value is 0x5.

User manual

Table 128. Type D I/O Control registers: FUNC values and pin functions

Reg name/FUNC = 000	FUNC = 001	FUNC = 010	FUNC = 011	FUNC = 100	FUNC = 101	FUNC = 110	FUNC = 111
PIO0_0	FC0_RXD_SDA_MOSI	FC3_CTS_SSEL0	CTIMER0_CAP0	-	SCT0_OUT3	-	-
PIO0_1	FC0_TXD_SCL_MISO	FC3_RTS_SSEL1	CTIMER0_CAP1	-	SCT0_OUT1	-	-
PIO0_2	FC0_CTS_SSEL0	FC2_SSEL3	CTIMER2_CAP1	-	-	-	-
PIO0_3	FC0_RTS_SSEL1	FC2_SSEL2	CTIMER1_MAT3	-	-	-	-
PIO0_4	FC0_SCK	FC3_SSEL2	CTIMER0_CAP2	-	-	-	-
PIO0_5	FC6_RXD_SDA_MOSI_DATA	SCT0_OUT6	CTIMER0_MAT0	-	-	-	-
PIO0_6	FC6_TXD_SCL_MISO_WS	-	CTIMER0_MAT1	-	UTICK_CAP0	-	-
PIO0_7	FC6_SCK	SCT0_OUT0	CTIMER0_MAT2	-	CTIMER0_CAP2	-	-
PIO0_8	FC2_RXD_SDA_MOSI	SCT0_OUT1	CTIMER0_MAT3	-	-	-	-
PIO0_9	FC2_TXD_SCL_MISO	SCT0_OUT2	CTIMER3_CAP0	-	FC3_CTS_SSEL0	-	-
PIO0_10	FC2_SCK	SCT0_OUT3	CTIMER3_MAT0	-	-	-	-
PIO0_11	FC3_SCK	FC6_RXD_SDA_MOSI_DATA	CTIMER2_MAT1	-	-	-	-
PIO0_12	FC3_RXD_SDA_MOSI	FC6_TXD_SCL_MISO_WS	CTIMER2_MAT3	-	-	-	-
PIO0_13	FC3_TXD_SCL_MISO	SCT0_OUT4	CTIMER2_MAT0	-	-	-	-
PIO0_14	FC3_CTS_SSEL0	SCT0_OUT5	CTIMER2_MAT1	-	FC1_SCK	-	-
PIO0_15	FC3_RTS_SSEL1	SWO	CTIMER2_MAT2	-	FC4_SCK	-	-
PIO0_16	FC3_SSEL2	FC6_CTS_SSEL0	CTIMER3_MAT1	-	SWCLK	-	-
PIO0_17	FC3_SSEL3	FC6_RTS_SSEL1	CTIMER3_MAT2	-	SWDIO	-	-
PIO0_18	FC5_TXD_SCL_MISO	SCT0_OUT0	CTIMERO_MATO	=	-	-	-
PIO0_19	FC5_SCK	SCT0_OUT1	CTIMER0_MAT1	-	-	-	-
PIO0_20	FC5_RXD_SDA_MOSI	FC0_SCK	CTIMER3_CAP0	-	-	-	-
PIO0_21	CLKOUT	FC0_TXD_SCL_MISO	CTIMER3_MAT0	-	-	-	-
PIO0_22	CLKIN	FC0_RXD_SDA_MOSI	CTIMER3_MAT3	-	-	-	-

## Chapter 7: LPC5411x I/O pin configuration (IOCON)

# 7.5.2 Type I IOCON registers (PIO0)

This IOCON table applies to pins P0[23 to 26]. See <u>Table 130</u> for recommended setting for I2C operation.

Table 129. Type I IOCON registers (PIO0\_[23:26], offsets [0x05C:0x068]) bit description

Bit	Symbol	Value	Description	Reset value
2:0	FUNC	-	Selects pin function.	0x0
4:3	-	-	Reserved. Read value is undefined, only zero should be written.	NA
5	I2CSLEW		Controls slew rate of I <sup>2</sup> C pad.	0x1
		0	I <sup>2</sup> C mode.	
		1	GPIO mode.	
6	INVERT		Input polarity.	0x0
		0	Disabled. Input function is not inverted.	
		1	Enabled. Input is function inverted.	
7	DIGIMODE		Select Analog/Digital mode.	0x1
		0	Analog mode.	
		1	Digital mode.	
8	FILTEROFF		Controls input glitch filter.	0x1
		0	Filter enabled. Noise pulses below approximately 10 ns are filtered out.	
		1	Filter disabled. No input filtering is done.	
9	I2CDRIVE		Controls the current sink capability of the pin.	0x0
		0	Low drive. Output drive sink is 4 mA. This is sufficient for Standard and Fast-mode I <sup>2</sup> C.	
		1	High drive. Output drive sink is 20 mA. This is needed for Fast Mode Plus I <sup>2</sup> C. Refer to the appropriate specific device data sheet for details.	
10 I2CFILTER			Configures I <sup>2</sup> C features for Standard mode, Fast-mode, and Fast-mode Plus operation.	0x0
		0	I <sup>2</sup> C 50 ns glitch filter enabled. Typically used for Fast-mode and Fast-mode Plus I <sup>2</sup> C.	
		1	I <sup>2</sup> C 50 ns glitch filter not enabled. Typically used for Standard-mode I <sup>2</sup> C.	
31:11	-	-	Reserved. Read value is undefined, only zero should be written.	NA

Table 130. Suggested IOCON settings for I2C functions

Mode	IOCON register bit								
	10: I2CFILTER	9: I2CDRIVE	8: FILTEROFF	7: DIGIMODE	6: INVERT	5: I2CSLEW			
GPIO 4 mA drive	0	0	0 [1]	1 🛂	0	1			
GPIO 20 mA drive	0	1	0 [1]	1 🛂	0	1			
Fast / Standard mode I <sup>2</sup> C	0	0	1	1	0	0			
Fast-mode Plus I <sup>2</sup> C	1	1	1	1	0	0			
High Speed slave I <sup>2</sup> C	1	1	1	1	0	0			

<sup>[1]</sup> The input filter may be turned by setting FILTEROFF off if it is not needed.

<sup>[2]</sup> The input may be turned off by clearing DIGIMODE if it is not needed.

# Chapter 7: LPC5411x I/O pin configuration (IOCON)

Table 131. Type I I/O Control registers: FUNC values and pin functions

Reg name/ FUNC = 000	FUNC = 001	FUNC = 010	FUNC = 011	FUNC = 100	FUNC = 101	FUNC = 110	FUNC = 111
PIO0_23	FC1_RTS_SCL_SSEL1	-	CTIMER0_CAP0	-	UTICK_CAP1	-	-
PIO0_24	FC1_CTS_SDA_SSEL0	-	CTIMER0_CAP1	-	CTIMER0_MAT0	-	-
PIO0_25	FC4_RTS_SCL_SSEL1	FC6_CTS_SSEL0	CTIMER0_CAP2	-	CTIMER1_CAP1	-	-
PIO0_26	FC4_CTS_SDA_SSEL0	-	CTIMER0_CAP3	-	-	-	-

# Chapter 7: LPC5411x I/O pin configuration (IOCON)

# 7.5.3 Type A IOCON registers (PIO0, PIO1)

This IOCON table applies to pins P0[29 to 31], P1[0 to 8].

Table 132. Type A IOCON registers(PIO0\_[29:31], offsets [0x074:0x07C]) bit description

Bit	Symbol	Value	Description	Reset value
2:0	FUNC	-	Selects pin function.	0x0
4:3	MODE		Selects function mode (on-chip pull-up/pull-down resistor control).	0x2
		0x0	Inactive (no pull-down/pull-up resistor enabled).	
		0x1	Pull-down resistor enabled.	
		0x2	Pull-up resistor enabled.	
		0x3	Repeater mode.	
5	-	-	Reserved. Read value is undefined, only zero should be written.	NA
6	INVERT		Input polarity.	0x0
		0	Disabled. Input function is not inverted.	
		1	Enabled. Input is function inverted.	
7	DIGIMODE		Select Analog/Digital mode.	0x1
		0	Analog mode.	
		1	Digital mode.	
8	FILTEROFF		Controls input glitch filter.	0x1
		0	Filter enabled. Noise pulses below approximately 10 ns are filtered out.	
		1	Filter disabled. No input filtering is done.	
9	-	-	Reserved. Read value is undefined, only zero should be written.	NA
10	OD		Controls open-drain mode.	0x0
		0	Normal. Normal push-pull output	
		1	Open-drain. Simulated open-drain output (high drive disabled).	
31:11	-	-	Reserved. Read value is undefined, only zero should be written.	NA

## Table 133. Type A IOCON registers(PIO1\_[0:8], offsets [0x080:0x0A0]) bit description

Bit	Symbol	Value	Description	Reset value
2:0	FUNC	-	Selects pin function.	0x0
4:3	MODE		Selects function mode (on-chip pull-up/pull-down resistor control).	0x2
		0x0	Inactive (no pull-down/pull-up resistor enabled).	
		0x1	Pull-down resistor enabled.	
		0x2	Pull-up resistor enabled.	
		0x3	Repeater mode.	
5	-	-	Reserved. Read value is undefined, only zero should be written.	NA
6	INVERT		Input polarity.	0x0
		0	Disabled. Input function is not inverted.	
		1	Enabled. Input is function inverted.	
7	DIGIMODE		Select Analog/Digital mode.	0x1
		0	Analog mode.	
		1	Digital mode.	

# Chapter 7: LPC5411x I/O pin configuration (IOCON)

Table 133. Type A IOCON registers(PIO1\_[0:8], offsets [0x080:0x0A0]) bit description

Bit	Symbol	Value	Description	Reset value
8	FILTEROFF		Controls input glitch filter.	0x1
		0	Filter enabled. Noise pulses below approximately 10 ns are filtered out	
		1	Filter disabled. No input filtering is done	
9	-	-	Reserved. Read value is undefined, only zero should be written.	NA
10	OD		Controls open-drain mode.	0x0
	0		Normal. Normal push-pull output	
		1	Open-drain. Simulated open-drain output (high drive disabled)	
31:11	-	-	Reserved. Read value is undefined, only zero should be written.	NA

User manual

Table 134. Type A I/O Control registers: FUNC values and pin functions

Register	FUNC = 000	FUNC = 001	FUNC = 010	FUNC = 011	FUNC = 100	FUNC = 101	FUNC = 110	FUNC = 111
PIO0_29	PIO0_29/ADC0_0	FC1_RXD_SDA_MOSI	SCT0_OUT2	CTIMER0_MAT3	-	CTIMER0_CAP1	-	CTIMER0_MAT1
PIO0_30	PIO0_30/ADC0_1	FC1_TXD_SCL_MISO	SCT0_OUT3	CTIMER0_MAT2	-	CTIMER0_CAP2	-	-
PIO0_31	PIO0_31/ADC0_2	PDM0_CLK	FC2_CTS_SSEL0	CTIMER2_CAP2	-	CTIMER0_CAP3	CTIMER0_MAT3	-
PIO1_0	PIO1_0/ADC0_3	PDM0_DATA	FC2_RTS_SSEL1	CTIMER3_MAT1	-	CTIMER0_CAP0	-	-
PIO1_1	PIO1_1/ADC0_4	-	SWO	SCT0_OUT4	FC5_SSEL2	FC4_TXD_SCL_MISO	-	-
PIO1_2	PIO1_2/ADC0_5	MCLK	FC7_SSEL3	SCT0_OUT5	FC5_SSEL3	FC4_RXD_SDA_MOSI	-	-
PIO1_3	PIO1_3/ADC0_6	-	FC7_SSEL2	SCT0_OUT6	-	FC3_SCK	CTIMER0_CAP1	USB0_UP_LED
PIO1_4	PIO1_4/ADC0_7	PDM1_CLK	FC7_RTS_SSEL1	SCT0_OUT7	-	FC3_TXD_SCL_MISO	CTIMER0_MAT1	-
PIO1_5	PIO1_5/ADC0_8	PDM1_DATA	FC7_CTS_SSEL0	CTIMER1_CAP0	-	CTIMER1_MAT3	-	USB0_FRAME
PIO1_6	PIO1_6/ADC0_9	-	FC7_SCK	CTIMER1_CAP2	-	CTIMER1_MAT2	-	USB0_VBUS
PIO1_7	PIO1_7/ADC0_10	-	FC7_RXD_SDA_MOSI_DATA	CTIMER1_MAT2	-	CTIMER1_CAP2	-	-
PIO1_8	PIO1_8/ADC0_11	-	FC7_TXD_SCL_MISO_WS	CTIMER1_MAT3	-	CTIMER1_CAP3	-	-

<sup>[1]</sup> To enable an ADC input, select the GPIO function and disable the digital functions of the pin by clearing the DIGIMODE bit in the related IOCON register.

# Chapter 7: LPC5411x I/O pin configuration (IOCON)

# 7.5.4 Type D IOCON registers (PIO1)

This IOCON table applies to port pins P1[9 to 17]. Other pins include ADC or I2C functions that alter the contents of the related IOCON registers.

Table 135. Type D IOCON registers (PIO1\_[9:17], offsets [0x0A4:0x0C4]) bit description

Bit	Symbol	Value	Description	Reset value
2:0	FUNC	-	Selects pin function.	0x0
4:3	MODE		Selects function mode (on-chip pull-up/pull-down resistor control).	0x2
		0x0	Inactive (no pull-down/pull-up resistor enabled).	
		0x1	Pull-down resistor enabled.	
		0x2	Pull-up resistor enabled.	
		0x3	Repeater mode.	
5	-	-	Reserved. Read value is undefined, only zero should be written.	NA
6	INVERT		Input polarity.	0x0
		0	Disabled. Input function is not inverted.	
		1	Enabled. Input is function inverted.	
7	DIGIMODE		Select Analog/Digital mode.	0x1
		0	Analog mode.	
		1	Digital mode.	
8	FILTEROFF		Controls input glitch filter.	0x1
		0	Filter enabled. Noise pulses below approximately 10 ns are filtered out.	
		1	Filter disabled. No input filtering is done.	
9	SLEW		Driver slew rate.	0x0
		0	Standard mode, output slew rate control is enabled. More outputs can be switched simultaneously.	
		1	Fast mode, slew rate control is disabled. Refer to the appropriate specific device data sheet for details.	
10	OD		Controls open-drain mode.	0x0
		0	Normal. Normal push-pull output	
		1	Open-drain. Simulated open-drain output (high drive disabled).	
31:11	-	-	Reserved. Read value is undefined, only zero should be written.	NA

User manual

Table 136. Type D I/O Control registers: FUNC values and pin functions

Reg name/FUNC = 000	FUNC = 001	FUNC = 010	FUNC = 011	FUNC = 100	FUNC = 101	FUNC = 110	FUNC = 111
PIO1_9		FC3_RXD_SDA_MOSI	CTIMER0_CAP2			USB0_UP_LED	
PIO1_10		FC6_TXD_SCL_MISO_WS	SCT0_OUT4	FC1_SCK			USB0_FRAME
PIO1_11		FC6_RTS_SSEL1	CTIMER1_CAP0	FC4_SCK			USB0_VBUS
PIO1_12		FC5_RXD_SDA_MOSI	CTIMER1_MAT0	FC7_SCK	UTICK_CAP2		
PIO1_13		FC5_TXD_SCL_MISO	CTIMER1_MAT1	FC7_RXD_SDA_MOSI_DATA			
PIO1_14		FC2_RXD_SDA_MOSI	SCT0_OUT7	FC7_TXD_SCL_MISO_WS			
PIO1_15	PDM0_CLK	SCT0_OUT5	CTIMER1_CAP3	FC7_CTS_SSEL0			
PIO1_16	PDM0_DATA	CTIMER0_MAT0	CTIMER0_CAP0	FC7_RTS_SSEL1			
PIO1_17				MCLK	UTICK_CAP3		

# **UM10914**

# Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

Rev. 1.2 — 30 June 2016

**User manual** 

# 8.1 How to read this chapter

Input multiplexing is present on all LPC5411x devices. Depending on the package, not all inputs from external pins may be available.

#### 8.2 Features

- Configures the inputs to the pin interrupt block and pattern match engine.
- Configures the inputs to the DMA triggers.
- Configures the inputs to the frequency measure function. This function is controlled by the FREQMECTRL register in the SYSCON block.

# 8.3 Basic configuration

Once set up, no clocks are needed for the input multiplexer to function. The system clock is needed only to write to or read from the INPUT MUX registers. Once the input multiplexer is configured, disable the clock to the INPUT MUX block in the AHBCLKCTRL register.

# 8.4 Pin description

The input multiplexer has no dedicated pins. However, all digital pins of ports 0 and 1 can be selected as inputs to the pin interrupts. Multiplexer inputs from external pins work independently of any other function assigned to the pin as long as no analog function is enabled.

Table 137. INPUT MUX pin description

Pins	Peripheral	Section
Any existing pin on port 0 or 1	Pin interrupts 0 to 7	8.6.1
PIO0_4, PIO0_20, PIO0_24, PIO1_4	Frequency measure block	8.6.4

# 8.5 General description

The inputs to the DMA triggers, to the eight pin interrupts, and to the frequency measure block are multiplexed to multiple input sources. The sources can be external pins, interrupts, or output signals of other peripherals.


The input multiplexing makes it possible to design event-driven processes without CPU intervention by connecting peripherals like the ADC.

The DMA can use trigger input multiplexing to sequence DMA transactions without the use of interrupt service routines.


## Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

# 8.5.1 Pin interrupt input multiplexing

The input mux for the pin interrupts and pattern match engine multiplexes all existing pins from ports 0 and 1.

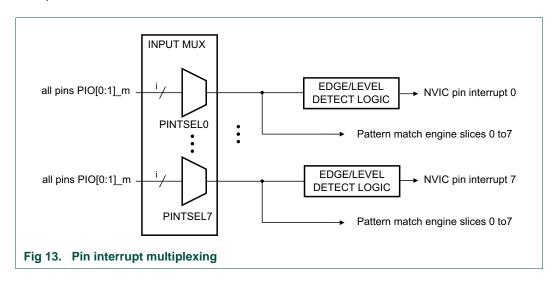

# 8.5.2 DMA trigger input multiplexing

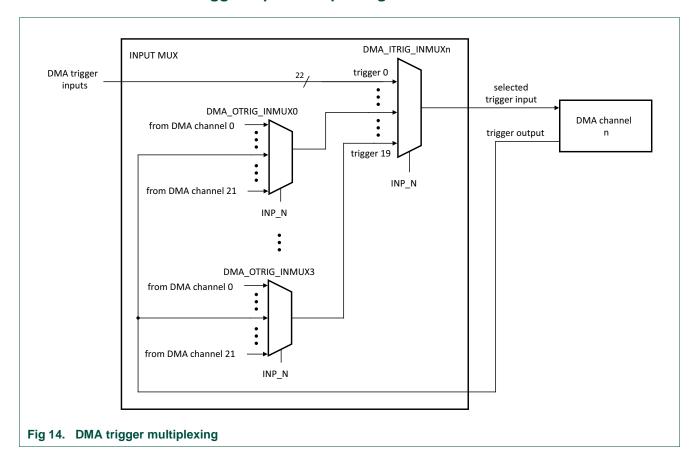

# Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

# 8.6 Register description

All input mux registers reside on word address boundaries. Details of the registers appear in the description of each function.

All address offsets not shown in Table 138 are reserved and should not be written to.

Table 138. Register overview: Input multiplexing (base address 0x4000 5000)

Name	Access	Offset	Description	Reset value	Section
PINTSEL0	R/W	0x0C0	Pin interrupt select register 0	0x0	8.6.1
PINTSEL1	R/W	0x0C4	Pin interrupt select register 1	0x0	8.6.1
PINTSEL2	R/W	0x0C8	Pin interrupt select register 2	0x0	8.6.1
PINTSEL3	R/W	0x0CC	Pin interrupt select register 3	0x0	8.6.1
PINTSEL4	R/W	0x0D0	Pin interrupt select register 4	0x0	8.6.1
PINTSEL5	R/W	0x0D4	Pin interrupt select register 5	0x0	8.6.1
PINTSEL6	R/W	0x0D8	Pin interrupt select register 6	0x0	8.6.1
PINTSEL7	R/W	0x0DC	Pin interrupt select register 7	0x0	8.6.1
DMA_ITRIG_INMUX0	R/W	0x0E0	Trigger select register for DMA channel 0	0x1F	8.6.2
DMA_ITRIG_INMUX1	R/W	0x0E4	Trigger select register for DMA channel 1	0x1F	8.6.2
DMA_ITRIG_INMUX2	R/W	0x0E8	Trigger select register for DMA channel 2	0x1F	8.6.2
DMA_ITRIG_INMUX3	R/W	0x0EC	Trigger select register for DMA channel 3	0x1F	8.6.2
DMA_ITRIG_INMUX4	R/W	0x0F0	Trigger select register for DMA channel 4	0x1F	8.6.2
DMA_ITRIG_INMUX5	R/W	0x0F4	Trigger select register for DMA channel 5	0x1F	8.6.2
DMA_ITRIG_INMUX6	R/W	0x0F8	Trigger select register for DMA channel 6	0x1F	8.6.2
DMA_ITRIG_INMUX7	R/W	0x0FC	Trigger select register for DMA channel 7	0x1F	8.6.2
DMA_ITRIG_INMUX8	R/W	0x100	Trigger select register for DMA channel 8	0x1F	8.6.2
DMA_ITRIG_INMUX9	R/W	0x104	Trigger select register for DMA channel 9	0x1F	8.6.2
DMA_ITRIG_INMUX10	R/W	0x108	Trigger select register for DMA channel 10	0x1F	8.6.2
DMA_ITRIG_INMUX11	R/W	0x10C	Trigger select register for DMA channel 11	0x1F	8.6.2
DMA_ITRIG_INMUX12	R/W	0x110	Trigger select register for DMA channel 12	0x1F	8.6.2
DMA_ITRIG_INMUX13	R/W	0x114	Trigger select register for DMA channel 13	0x1F	8.6.2
DMA_ITRIG_ INMUX14	R/W	0x118	Trigger select register for DMA channel 14	0x1F	8.6.2
DMA_ITRIG_INMUX15	R/W	0x11C	Trigger select register for DMA channel 15	0x1F	8.6.2
DMA_ITRIG_INMUX16	R/W	0x120	Trigger select register for DMA channel 16	0x1F	8.6.2
DMA_ITRIG_INMUX17	R/W	0x124	Trigger select register for DMA channel 17	0x1F	8.6.2
DMA_ITRIG_INMUX18	R/W	0x128	Trigger select register for DMA channel 18	0x1F	8.6.2
DMA_ITRIG_INMUX19	R/W	0x12C	Trigger select register for DMA channel 19	0x1F	8.6.2
DMA_ITRIG_INMUX20	R/W	0x130	Trigger select register for DMA channel 20	0x1F	8.6.2
DMA_ITRIG_INMUX21	R/W	0x134	Trigger select register for DMA channel 21	0x1F	8.6.2
DMA_OTRIG_INMUX0	R/W	0x160	DMA output trigger selection to become DMA trigger 16	0x1F	8.6.3
DMA_OTRIG_INMUX1	R/W	0x164	DMA output trigger selection to become DMA trigger 17	0x1F	8.6.3
DMA_OTRIG_INMUX2	R/W	0x168	DMA output trigger selection to become DMA trigger 18	0x1F	8.6.3

#### Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

Table 138. Register overview: Input multiplexing (base address 0x4000 5000) ...continued

Name	Access	Offset	Description	Reset value	Section
DMA_OTRIG_INMUX3	R/W	0x16C	DMA output trigger selection to become DMA trigger 19	0x1F	8.6.3
FREQMEAS_REF	R/W	0x180	Selection for frequency measurement reference clock	0x1F	8.6.4
FREQMEAS_TARGET	R/W	0x184	Selection for frequency measurement target clock	0x1F	<u>8.6.5</u>

# 8.6.1 Pin interrupt select registers

Each of these 8 registers selects one pin from among ports 0 and 1 as the source of a pin interrupt or as the input to the pattern match engine. To select a pin for any of the 8 pin interrupts or pattern match engine inputs, write the GPIO port pin number as 0 to 31 for pins PIO0\_0 to PIO0\_31 to the INTPIN bits. Port 1 pins correspond to pin numbers 32 to 63. For example, setting INTPIN to 0x5 in PINTSEL0 selects pin PIO0\_5 for pin interrupt 0. To determine the GPIO port pin number for a given device package, see the pin description table in the data sheet.

Each of the pin interrupts must be enabled in the NVIC (see <u>Table 2</u>) before it becomes active.

To use the selected pins for pin interrupts or the pattern match engine, see <u>Section 10.5.2</u> "Pattern match engine".

Table 139. Pin interrupt select registers (PINTSEL[0:7], offsets [0x0C0:0x0DC]) bit description

Bit	Symbol	Description	Reset value
7:0		Pin number select for pin interrupt or pattern match engine input. (PIO0_0 to PIO1_31 correspond to numbers 0 to 63).	0x0
31:8	-	Reserved	-

## Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

# 8.6.2 DMA trigger input mux registers 0 to 21

With the DMA trigger input mux registers, one trigger input can be selected for each of the DMA channels from the potential internal sources. By default, none of the triggers are selected.

Table 140. DMA trigger Input mux registers (DMA\_ITRIG\_INMUX[0:21], offsets [0x0E0:0x134]) bit description

Bit	Symbol	Description	Reset value
4:0	INP	Trigger input number (decimal value) for DMA channel n (n = 0 to 21).	0x1F
		0 = ADC0 Sequence A interrupt	
		1 = ADC0 Sequence B interrupt	
		2 = SCT0 DMA request 0	
		3 = SCT0 DMA request 1	
		4 = Timer CTIMER0 Match 0	
		5 = Timer CTIMER0 Match 1	
		6 = Timer CTIMER1 Match 0	
		7 = Timer CTIMER2 Match 0	
		8 = Timer CTIMER2 Match 1	
		9 = Timer CTIMER3 Match 0	
		10 = Timer CTIMER4 Match 0	
		11 = Timer CTIMER4 Match 1	
		12 = Pin interrupt 0	
		13 = Pin interrupt 1	
		14 = Pin interrupt 2	
		15 = Pin interrupt 3	
		16 = DMA output trigger mux 0	
		17 = DMA output trigger mux 1	
		18 = DMA output trigger mux 2	
		19 = DMA output trigger mux 3	
31:5	-	Reserved.	-

# 8.6.3 DMA output trigger feedback mux registers 0 to 3

This register provides a multiplexer for inputs 16 to 19 of each DMA trigger input mux register DMA\_ITRIG\_INMUX. These inputs can be selected from among the trigger outputs generated by the each DMA channel. By default, none of the triggers are selected.

Table 141. DMA output trigger feedback mux registers (DMA\_OTRIG\_INMUX[0:3], offset [0x160:0x16C]) bit description

Bit	Symbol	Description	Reset value
4:0	INP	DMA trigger output number (decimal value) for DMA channel n (n = 0 to 19).	0x1F
31:5	-	Reserved.	-

## Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

# 8.6.4 Frequency measure function reference clock select register

This register selects a clock for the reference clock of the frequency measure function. By default, no clock is selected.

#### Also see:

- Section 4.2.3 "Measure the frequency of a clock signal"
- Section 4.6.6 "Frequency measure function"
- Frequency measure control register (FREQMECTRL) Section 4.5.44
- Frequency target clock select register (FREQMEAS TARGET) Section 8.6.5

Table 142. Frequency measure function frequency clock select register (FREQMEAS\_REF, offset 0x180) bit description

Bit	Symbol	Description	Reset value
4:0	CLKIN	Clock source number (decimal value) for frequency measure function target clock:	0x1F
		0 = CLK_IN	
		1 = FRO 12 MHz oscillator	
		2 = Watchdog oscillator	
		3 = 32 kHz RTC oscillator	
		4 = Main clock (see Section 4.5.23)	
		5 = PIO0_4	
		6 = PIO0_20	
		7 = PIO0_24	
		8 = PIO1_4	
		0x1F = none	
		Other settings are undefined.	
31:5	-	Reserved.	-

# 8.6.5 Frequency measure function target clock select register

This register selects a clock for the target clock of the frequency measure function. By default, no clock is selected.

#### Also see:

- Section 4.2.3 "Measure the frequency of a clock signal"
- Section 4.6.6 "Frequency measure function"
- Frequency measure control register (FREQMECTRL) Section 4.5.44
- Frequency target clock select register (FREQMEAS REF) Section 8.6.4

# Chapter 8: LPC5411x Input multiplexing (INPUT MUX)

Table 143. Frequency measure function target clock select register (FREQMEAS\_TARGET, offset 0x184) bit description

Bit	Symbol	Description	Reset value
4:0	CLKIN	Clock source number (decimal value) for frequency measure function target clock:	0x1F
		0 = CLK_IN	
		1 = FRO 12 MHz oscillator	
		2 = Watchdog oscillator	
		3 = 32 kHz RTC oscillator	
		4 = Main clock (see Section 4.5.23)	
		5 = PIO0_4	
		6 = PIO0_20	
		7 = PIO0_24	
		8 = PIO1_4	
		0x1F = none	
		Other settings are undefined.	
31:5	-	Reserved.	-

# **UM10914**

# Chapter 9: LPC5411x General Purpose I/O (GPIO)

Rev. 1.2 — 30 June 2016

**User manual** 

# 9.1 How to read this chapter

GPIO registers support up to 32 pins on each port. Depending on the device and package type, a subset of those pins may be available, and the unused bits in GPIO registers are reserved (see Table 125).

# 9.2 Basic configuration

For the GPIO port registers, enable the clock to each GPIO port in the AHBCLKCTRL0 register (Table 45).

## 9.3 Features

- GPIO pins can be configured as input or output by software.
- · All GPIO pins default to inputs with interrupt disabled at reset.
- Pin registers allow pins to be sensed and set individually.
- Direction (input/output) can be set and cleared individually.

# 9.4 General description

The GPIO pins can be used in several ways to set pins as inputs or outputs and use the inputs as combinations of level and edge sensitive interrupts.

The GPIOs can be used as external interrupts together with the pin interrupt and group interrupt blocks, see <u>Chapter 10</u> and <u>Chapter 11</u>.

The GPIO port registers configure each GPIO pin as input or output and read the state of each pin if the pin is configured as input or set the state of each pin if the pin is configured as output.

## Chapter 9: LPC5411x General Purpose I/O (GPIO)

# 9.5 Register description

Note: In all GPIO registers, bits that are not shown are reserved.

GPIO port addresses can be read and written as bytes, halfwords, or words.

**Remark:** A reset value noted as "ext" in this table and subsequent tables indicates that the data read after reset depends on the state of the pin, which in turn may depend on an external source.

Table 144. Register overview: GPIO port (base address 0x4008 C000)

Name	Access	Offset	Description	Reset value	Width (bits)	Section
B[0:49]	R/W	[0x0000:0x0031]	Byte pin registers for all port 0 and 1 GPIO pins	ext	8	9.5.1
W[0:49]	R/W	[0x1000:0x10C4]	Word pin registers for all port 0 and 1 GPIO pins	ext	32	9.5.2
DIR0	R/W	0x2000	Direction registers port 0	0x0	32	9.5.3
DIR1	R/W	0x2004	Direction registers port 1	0x0	32	9.5.3
MASK0	R/W	0x2080	Mask register port 0	0x0	32	9.5.4
MASK1	R/W	0x2084	Mask register port 1	0x0	32	9.5.4
PIN0	R/W	0x2100	Port pin register port 0	ext	32	9.5.5
PIN1	R/W	0x2104	Port pin register port 1	ext	32	9.5.5
MPIN0	R/W	0x2180	Masked port register port 0	ext	32	9.5.6
MPIN1	R/W	0x2184	Masked port register port 1	ext	32	9.5.6
SET0	R/W	0x2200	Write: Set register for port 0 Read: output bits for port 0	0x0	32	9.5.7
SET1	R/W	0x2204	Write: Set register for port 1 Read: output bits for port 1	0x0	32	9.5.7
CLR0	WO	0x2280	Clear port 0	NA	32	9.5.8
CLR1	WO	0x2284	Clear port 1	NA	32	9.5.8
NOT0	WO	0x2300	Toggle port 0	NA	32	9.5.9
NOT1	WO	0x2304	Toggle port 1	NA	32	9.5.9
DIRSET0	WO	0x2380	Set pin direction bits for port 0	0x0	32	9.5.10
DIRSET1	WO	0x2384	Set pin direction bits for port 1	0x0	32	9.5.10
DIRCLR0	WO	0x2400	Clear pin direction bits for port 0	-	32	9.5.11
DIRCLR1	WO	0x2404	Clear pin direction bits for port 1	-	32	9.5.11
DIRNOT0	WO	0x2480	Toggle pin direction bits for port 0	-	32	9.5.12
DIRNOT1	WO	0x2484	Toggle pin direction bits for port 1	-	32	9.5.12

#### Chapter 9: LPC5411x General Purpose I/O (GPIO)

# 9.5.1 GPIO port byte pin registers

Each GPIO pin has a byte register in this address range. Software typically reads and writes bytes to access individual pins, but can read or write halfwords to sense or set the state of two pins, and read or write words to sense or set the state of four pins.

Table 145. GPIO port byte pin registers (B[0:49], offset [0x0000:0x0031]) bit description

Bit	Symbol	Description	Reset value	Access
0	PBYTE	<b>Read:</b> 0 when pin PIOm_n is LOW; 0xFF when pin PIOm_n is HIGH. The read reflects the state of the pin PIOm_n, regardless of direction, masking, or alternate function, except that pins configured as analog I/O always read as 0. <b>Write:</b> 0 clears the output bit; any value from 0x01 to 0xFF sets the output bit.	ext	R/W
		<b>Remark:</b> One register for each port pin. Supported pins depends on the specific device and package.		
7:1	-	Reserved (0 on read, ignored on write)	0x0	-

# 9.5.2 GPIO port word pin registers

Each GPIO pin has a word register in this address range. Any byte, halfword, or word read in this range will be all zeros if the pin is low or all ones if the pin is high, regardless of direction, masking, or alternate function, except that pins configured as analog I/O always read as zeros. Any write will clear the pin's output bit if the value written is all zeros, else it will set the pin's output bit.

Table 146. GPIO port word pin registers (W[0:49], offsets [0x1000:0x10C4]) bit description

Bit	Symbol	Description	Reset value	Access
31:0	PWORD	<b>Read:</b> 0 when pin PIOm_n is LOW; 0xFFFF FFFF when pin PIOm_n is HIGH. The read reflects the state of the pin PIOm_n, regardless of direction, masking, or alternate function, except that pins configured as analog I/O always read as 0. <b>Write:</b> 0 clears the output bit; any value from 0x0000 0001 to 0xFFFF FFFF sets the output bit.	ext	R/W
		<b>Remark:</b> One register for each port pin. Supported pins depends on the specific device and package.		

# 9.5.3 GPIO port direction registers

Each GPIO port has one direction register for configuring the port pins as inputs or outputs.

Table 147. GPIO direction port register (DIR[0:1], offset [0x2000:0x2004]) bit description

Bit	Symbol	Description	Reset value	Access
31:0	DIRP	Selects pin direction for pin PIOm_n (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.).  Supported pins depends on the specific device and package.  0 = input.  1 = output.	0x0	R/W

## 9.5.4 GPIO port mask registers

These registers affect writing and reading the MPORT registers. Zeroes in these registers enable reading and writing; ones disable writing and result in zeros in corresponding positions when reading.

#### Chapter 9: LPC5411x General Purpose I/O (GPIO)

Table 148. GPIO mask port register (MASK[0:1], offset [0x2080:0x2084]) bit description

Bit	Symbol	Description	Reset value	Access
31:0		Controls which bits corresponding to PIOm_n are active in the MPORT register (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = Read MPORT: pin state; write MPORT: load output bit.  1 = Read MPORT: 0; write MPORT: output bit not affected.	0x0	R/W

# 9.5.5 GPIO port pin registers

Reading these registers returns the current state of the pins read, regardless of direction, masking, or alternate functions, except that pins configured as analog I/O always read as 0s. Writing these registers loads the output bits of the pins written to, regardless of the Mask register.

Table 149. GPIO port pin register (PIN[0:1], offset [0x2100:0x2104]) bit description

Bit	Symbol	Description	Reset value	Access
31:0		Reads pin states or loads output bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.).  Supported pins depends on the specific device and package.  0 = Read: pin is low; write: clear output bit.  1 = Read: pin is high; write: set output bit.	ext	R/W

# 9.5.6 GPIO masked port pin registers

These registers are similar to the PORT registers, except that the value read is masked by ANDing with the inverted contents of the corresponding MASK register, and writing to one of these registers only affects output register bits that are enabled by zeros in the corresponding MASK register

Table 150. GPIO masked port pin register (MPIN[0:1], offset [0x2180:0x2184]) bit description

Bit	Symbol	Description	Reset value	Access
31:0		Masked port register (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = Read: pin is LOW and/or the corresponding bit in the MASK register is 1; write: clear output bit if the corresponding bit in the MASK register is 0.  1 = Read: pin is HIGH and the corresponding bit in the MASK register is 0; write: set output bit if the corresponding bit in the MASK register is 0.	ext	R/W

## 9.5.7 GPIO port set registers

Output bits can be set by writing ones to these registers, regardless of MASK registers. Reading from these register returns the port's output bits, regardless of pin directions.

Table 151. GPIO set port register (SET[0:1], offset [0x2200:0x2204]) bit description

Bit	Symbol	Description	Reset value	Access
31:0		Read or set output bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = Read: output bit: write: no operation.  1 = Read: output bit; write: set output bit.	0x0	R/W

#### Chapter 9: LPC5411x General Purpose I/O (GPIO)

# 9.5.8 GPIO port clear registers

Output bits can be cleared by writing ones to these write-only registers, regardless of MASK registers.

Table 152. GPIO clear port register (CLR[0:1], offset [0x2280:0x2284]) bit description

Bit	Symbol	Description	Reset value	Access
31:0		Clear output bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = No operation.  1 = Clear output bit.	NA	WO

# 9.5.9 GPIO port toggle registers

Output bits can be toggled/inverted/complemented by writing ones to these write-only registers, regardless of MASK registers.

Table 153. GPIO toggle port register (NOT[0:1], offset [0x2300:0x2304]) bit description

Bit	Symbol	Description	Reset value	Access
31:0		Toggle output bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = no operation.  1 = Toggle output bit.	NA	WO

## 9.5.10 GPIO port direction set registers

Direction bits can be set by writing ones to these registers.

Table 154. GPIO port direction set register (DIRSET[0:1], offset 0x2380:0x2384) bit description

Bit	Symbol	Description	Reset value	Access
28:0	DIRSETP	Set direction bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = No operation.  1 = Set direction bit.	0x0	wo
31:29	-	Reserved.	0x0	-

# 9.5.11 GPIO port direction clear registers

Direction bits can be cleared by writing ones to these write-only registers.

Table 155. GPIO port direction clear register (DIRCLR[0:1], offset 0x2400:0x2404) bit description

Bit	Symbol	Description	Reset value	Access
28:0		Clear direction bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = No operation.  1 = Clear direction bit.	NA	WO
31:29	-	Reserved.	0x0	-

## 9.5.12 GPIO port direction toggle registers

Direction bits can be set by writing ones to these write-only registers.

# Chapter 9: LPC5411x General Purpose I/O (GPIO)

# Table 156. GPIO port direction toggle register (DIRNOT[0:1], offset 0x2480:0x2484) bit description

Bit	Symbol	Description	Reset value	Access
28:0	DIRNOTP	Toggle direction bits (bit 0 = PIOn_0, bit 1 = PIOn_1, etc.). Supported pins depends on the specific device and package.  0 = no operation.  1 = Toggle direction bit.	NA	WO
31:29	-	Reserved.	0x0	-

#### Chapter 9: LPC5411x General Purpose I/O (GPIO)

# 9.6 Functional description

## 9.6.1 Reading pin state

Software can read the state of all GPIO pins except those selected for analog input or output in the "I/O Configuration" logic. A pin does not have to be selected for GPIO in "I/O Configuration" in order to read its state. There are four ways to read pin state:

- The state of a single pin can be read with 7 high-order zeros from a Byte Pin register.
- The state of a single pin can be read in all bits of a byte, halfword, or word from a Word Pin register.
- The state of multiple pins in a port can be read as a byte, halfword, or word from a PORT register.
- The state of a selected subset of the pins in a port can be read from a Masked Port (MPORT) register. Pins having a 1 in the port's Mask register will read as 0 from its MPORT register.

# 9.6.2 GPIO output

Each GPIO pin has an output bit in the GPIO block. These output bits are the targets of write operations to the pins. Two conditions must be met in order for a pin's output bit to be driven onto the pin:

- 1. The pin must be selected for GPIO operation via IOCON (this is the default), and
- 2. the pin must be selected for output by a 1 in its port's DIR register.

If either or both of these conditions is (are) not met, writing to the pin has no effect.

There are seven ways to change GPIO output bits:

- Writing to a Byte Pin register loads the output bit from the least significant bit.
- Writing to a Word Pin register loads the output bit with the OR of all of the bits written.
   (This feature follows the definition of truth of a multi-bit value in programming languages.)
- Writing to a port's PORT register loads the output bits of all the pins written to.
- Writing to a port's MPORT register loads the output bits of pins identified by zeros in corresponding positions of the port's MASK register.
- Writing ones to a port's SET register sets output bits.
- Writing ones to a port's CLR register clears output bits.
- Writing ones to a port's NOT register toggles/complements/inverts output bits.

The state of a port's output bits can be read from its SET register. Reading any of the registers described in <u>9.6.1</u> returns the state of pins, regardless of their direction or alternate functions.

#### Chapter 9: LPC5411x General Purpose I/O (GPIO)

#### 9.6.3 Masked I/O

A port's MASK register defines which of its pins should be accessible in its MPORT register. Zeroes in MASK enable the corresponding pins to be read from and written to MPORT. Ones in MASK force a pin to read as 0 and its output bit to be unaffected by writes to MPORT. When a port's MASK register contains all zeros, its PORT and MPORT registers operate identically for reading and writing.

Applications in which interrupts can result in Masked GPIO operation, or in task switching among tasks that do Masked GPIO operation, must treat code that uses the Mask register as a protected/restricted region. This can be done by interrupt disabling or by using a semaphore.

The simpler way to protect a block of code that uses a MASK register is to disable interrupts before setting the MASK register, and re-enable them after the last operation that uses the MPORT or MASK register.

More efficiently, software can dedicate a semaphore to the MASK registers, and set/capture the semaphore controlling exclusive use of the MASK registers before setting the MASK registers, and release the semaphore after the last operation that uses the MPORT or MASK registers.

#### 9.6.4 GPIO direction

Each pin in a GPIO port can be configured as input or output using the DIR registers. The direction of individual pins can be set, cleared, or toggled using the DIRSET, DIRCLR, and DIRNOT registers.

#### 9.6.5 Recommended practices

The following lists some recommended uses for using the GPIO port registers:

- For initial setup after Reset or re-initialization, write the PORT registers.
- To change the state of one pin, write a Byte Pin or Word Pin register.
- To change the state of multiple pins at a time, write the SET and/or CLR registers.
- To change the state of multiple pins in a tightly controlled environment like a software state machine, consider using the NOT register. This can require less write operations than SET and CLR.
- To read the state of one pin, read a Byte Pin or Word Pin register.
- To make a decision based on multiple pins, read and mask a PORT register.

# **UM10914**

# Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

Rev. 1.2 — 30 June 2016

**User manual** 

# 10.1 How to read this chapter

The pin interrupt generator and the pattern match engine are available on all LPC5411x parts.

# 10.2 Features

#### Pin interrupts

- Up to eight pins can be selected from all GPIO pins on ports 0 and 1 as edge- or level-sensitive interrupt requests. Each request creates a separate interrupt in the NVIC.
- Edge-sensitive interrupt pins can interrupt on rising or falling edges or both.
- Level-sensitive interrupt pins can be HIGH- or LOW-active.

#### • Pattern match engine

- Up to 8 pins can be selected from all digital pins on ports 0 and 1 to contribute to a boolean expression. The boolean expression consists of specified levels and/or transitions on various combinations of these pins.
- Each bit slice minterm (product term) comprising the specified boolean expression can generate its own, dedicated interrupt request.
- Any occurrence of a pattern match can be programmed to also generate an RXEV notification to the CPU.
- Pattern match can be used, in conjunction with software, to create complex state machines based on pin inputs.

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.3 Basic configuration

#### Pin interrupts:

 Select up to eight external interrupt pins from all digital port pins on ports 0 and 1 in the Input Mux block (<u>Table 139</u>). The pin selection process is the same for pin interrupts and the pattern match engine. The two features are mutually exclusive.

Enable the clock to the pin interrupt register block in the AHBCLKCTRL0 register (Table 45).

- In order to use the pin interrupts to wake up the part from deep-sleep mode, enable
  the pin interrupt wake-up feature in the STARTER0 register for pin interrupt 0
  through 3 and the STARTER1 register for pin interrupt 4 through 7 (<u>Table 93</u> and
  <u>Table 94</u> respectively).
- Each selected pin interrupt is assigned to one interrupt in the NVIC (pin interrupts 0 to 3 in one group, pin interrupts 4 through 7 in another group, see <u>Table 2</u>). Note that only the first 4 are available to the Cortex M0+, which is present on selected devices.
- Pattern match engine:
  - Select up to eight external pins from all digital port pins on ports 0 and 1 in the Input mux block (<u>Table 139</u>). The pin selection process is the same for pin interrupts and the pattern match engine. The two features are mutually exclusive.

Enable the clock to the pin interrupt register block in the AHBCLKCTRL0 register (<u>Table 45</u>).

Each bit slice of the pattern match engine is assigned to one interrupt in the NVIC (pin interrupts 0 to 3 in one group, pin interrupts 4 through 7 in another group, see <a href="Table 2">Table 2</a>). Note that only the first 4 are available to the Cortex M0+, which is present on selected devices.

# 10.3.1 Configure pins as pin interrupts or as inputs to the pattern match engine

Follow these steps to configure pins as pin interrupts:

- 1. Determine the pins that serve as pin interrupts on the LPC5411x package. See the data sheet for determining the GPIO port pin number associated with the package pin.
- 2. For each pin interrupt, program the GPIO port pin number from ports 0 and 1 into one of the eight PINTSEL registers in the Input mux block.
  - **Remark:** The port pin number serves to identify the pin to the PINTSEL register. Any function, including GPIO, can be assigned to this pin via IOCON.
- 3. Enable each pin interrupt in the NVIC.

Once the pin interrupts or pattern match inputs are configured, the pin interrupt detection levels or the pattern match boolean expression can set up.

See <u>Section 8.6.1 "Pin interrupt select registers"</u> in the Input mux block for the PINTSEL registers.

**Remark:** The inputs to the Pin interrupt select registers bypass the IOCON function selection. They do not have to be selected as GPIO in IOCON. Make sure that no analog function is selected on pins that are input to the pin interrupts.

UM10914

## Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.4 Pin description


The inputs to the pin interrupt and pattern match engine are determined by the pin interrupt select registers in the Input mux. See Section 8.6.1 "Pin interrupt select registers".

# 10.5 General description

Pins with configurable functions can serve as external interrupts or inputs to the pattern match engine. Up to eight pins can be configured using the PINTSEL registers in the Input mux block for these features.

## 10.5.1 Pin interrupts

From all available GPIO pins, up to eight pins can be selected in the system control block to serve as external interrupt pins (see <u>Table 139</u>). The external interrupt pins are connected to eight individual interrupts in the NVIC and are created based on rising or falling edges or on the input level on the pin.

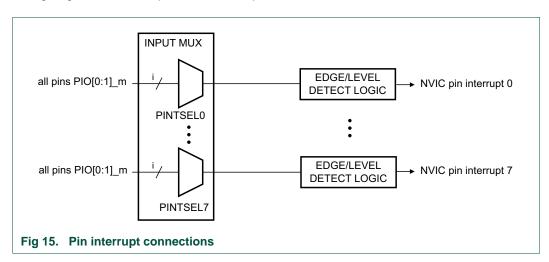

## 10.5.2 Pattern match engine

The pattern match feature allows complex boolean expressions to be constructed from the same set of eight GPIO pins that were selected for the GPIO pin interrupts. Each term in the boolean expression is implemented as one slice of the pattern match engine. A slice consists of an input selector and a detect logic that monitors the selected input continuously and creates a HIGH output if the input qualifies as detected, that is as true. Several terms can be combined to a minterm and a pin interrupt is asserted when the minterm evaluates as true.

The detect logic of each slice can detect the following events on the selected input:

Edge with memory (sticky): A rising edge, a falling edge, or a rising or falling edge that
is detected at any time after the edge-detection mechanism has been cleared. The
input qualifies as detected (the detect logic output remains HIGH) until the pattern
match engine detect logic is cleared again.

## Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

- Event (non-sticky): Every time an edge (rising or falling) is detected, the detect logic output for this pin goes HIGH. This bit is cleared after one clock cycle, and the detect logic can detect another edge,
- Level: A HIGH or LOW level on the selected input.


Figure 17 shows the details of the edge detection logic for each slice.

Sticky events can be combined with non-sticky events to create a pin interrupt whenever a rising or falling edge occurs after a qualifying edge event.

A time window can be created during which rising or falling edges can create a pin interrupt by combining a level detect with an event detect. See <u>Section 10.7.3</u> for details.

The connections between the pins and the pattern match engine are shown in <u>Figure 16</u>. All pins that are inputs to the pattern match engine are selected in the Syscon block and can be GPIO port pins or other pin function depending on the IOCON configuration.

**Remark:** note that the pattern match feature requires clocks in order to operate, and can thus not generate an interrupt or wake up the device during reduced power modes below sleep mode.

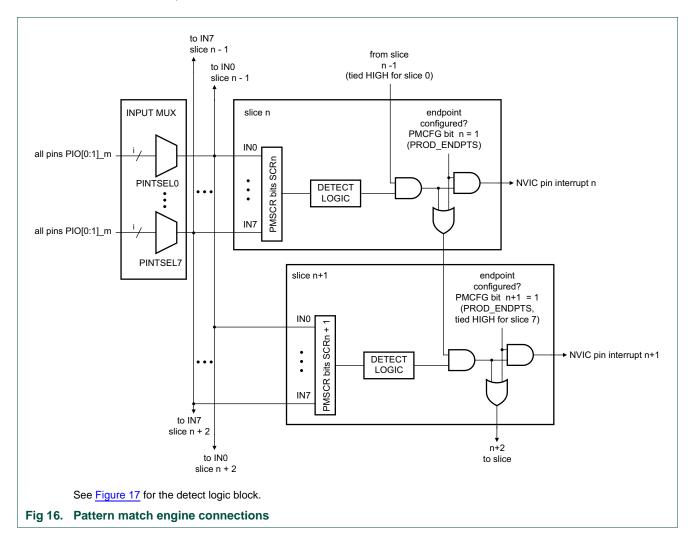

## Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

The pattern match logic continuously monitors the eight inputs and generates interrupts when any one or more minterms (product terms) of the specified boolean expression is matched. A separate interrupt request is generated for each individual minterm.


In addition, the pattern match module can be enabled to generate a Receive Event (RXEV) output to the ARM core when the entire boolean expression is true (i.e. when any minterm is matched).

The pattern match function utilizes the same eight interrupt request lines as the pin interrupts so these two features are mutually exclusive as far as interrupt generation is concerned. A control bit is provided to select whether interrupt requests are generated in response to the standard pin interrupts or to pattern matches. Note that, if the pin interrupts are selected, the RXEV request to the CPU can still be enabled for pattern matches.

**Remark:** Pattern matching cannot be used to wake the part up from deep-sleep mode. Pin interrupts must be selected in order to use the GPIO for wake-up.

The pattern match module is constructed of eight bit-slice elements. Each bit slice is programmed to represent one component of one minterm (product term) within the boolean expression. The interrupt request associated with the last bit slice for a particular minterm will be asserted whenever that minterm is matched. (See bit slice drawing Figure 17).

The pattern match capability can be used to create complex software state machines. Each minterm (and its corresponding individual interrupt) represents a different transition event to a new state. Software can then establish the new set of conditions (that is a new boolean expression) that will cause a transition out of the current state.

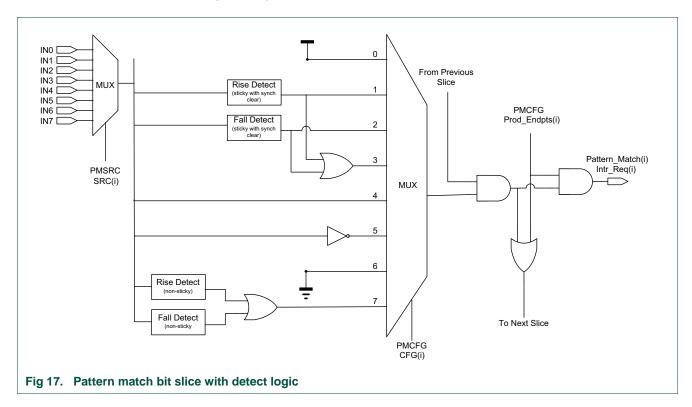

**User manual** 

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

#### 10.5.2.1 Example

Assume the expression: (IN0)~(IN1)(IN3)^+ (IN1)(IN2) + (IN0)~(IN3)~(IN4) is specified through the registers PMSRC (<u>Table 169</u>) and PMCFG (<u>Table 170</u>). Each term in the boolean expression, (IN0), ~(IN1), (IN3)^, etc., represents one bit slice of the pattern match engine.

- In the first minterm (IN0)~(IN1)(IN3)^, bit slice 0 monitors for a high-level on input (IN0), bit slice 1 monitors for a low level on input (IN1) and bit slice 2 monitors for a rising-edge on input (IN3). If this combination is detected, that is if all three terms are true, the interrupt associated with bit slice 2 will be asserted.
- In the second minterm (IN1)(IN2), bit slice 3 monitors input (IN1) for a high level, bit slice 4 monitors input (IN2) for a high level. If this combination is detected, the interrupt associated with bit slice 4 will be asserted.
- In the third minterm (IN0)~(IN3)~(IN4), bit slice 5 monitors input (IN0) for a high level, bit slice 6 monitors input (IN3) for a low level, and bit slice 7 monitors input (IN4) for a low level. If this combination is detected, the interrupt associated with bit slice 7 will be asserted.
- The ORed result of all three minterms asserts the RXEV request to the CPU. That is, if any of the three terms are true, the output is asserted.

Related links:

**Section 10.7.2** 

# Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.6 Register description

## Table 157. Register overview: Pin interrupts/pattern match engine (base address 0x4000 4000)

Name	Access	Offset	Description	Reset value	Section
ISEL	R/W	0x000	Pin Interrupt Mode register	0x0	10.6.1
IENR	R/W	0x004	Pin interrupt level or rising edge interrupt enable register	0x0	10.6.2
SIENR	WO	0x008	Pin interrupt level or rising edge interrupt set register	NA	10.6.3
CIENR	WO	0x00C	Pin interrupt level (rising edge interrupt) clear register	NA	10.6.4
IENF	R/W	0x010	Pin interrupt active level or falling edge interrupt enable register	0x0	10.6.5
SIENF	WO	0x014	Pin interrupt active level or falling edge interrupt set register	NA	10.6.6
CIENF	WO	0x018	Pin interrupt active level or falling edge interrupt clear register	NA	10.6.7
RISE	R/W	0x01C	Pin interrupt rising edge register	0x0	10.6.8
FALL	R/W	0x020	Pin interrupt falling edge register	0x0	10.6.9
IST	R/W	0x024	Pin interrupt status register	0x0	10.6.10
PMCTRL	R/W	0x028	Pattern match interrupt control register	0x0	10.6.11
PMSRC	R/W	0x02C	Pattern match interrupt bit-slice source register	0x0	10.6.12
PMCFG	R/W	0x030	Pattern match interrupt bit slice configuration register	0x0	10.6.13

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.6.1 Pin interrupt mode register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the ISEL register determines whether the interrupt is edge or level sensitive.

Table 158. Pin interrupt mode register (ISEL, offset 0x000) bit description

Bit	Symbol	Description	Reset value	Access
7:0	PMODE	Selects the interrupt mode for each pin interrupt. Bit n configures the pin interrupt selected in PINTSELn.  0 = Edge sensitive  1 = Level sensitive	0x0	R/W
31:8	-	Reserved. Read value is undefined, only zero should be written.	-	-

## 10.6.2 Pin interrupt level or rising edge interrupt enable register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the IENR register enables the interrupt depending on the pin interrupt mode configured in the ISEL register:

- If the pin interrupt mode is edge sensitive (PMODE = 0), the rising edge interrupt is enabled.
- If the pin interrupt mode is level sensitive (PMODE = 1), the level interrupt is enabled.
   The IENF register configures the active level (HIGH or LOW) for this interrupt.

Table 159. Pin interrupt level or rising edge interrupt enable register (IENR, offset 0x004) bit description

Bit	Symbol	Description	Reset value	Access
7:0	ENRL	Enables the rising edge or level interrupt for each pin interrupt. Bit n configures the pin interrupt selected in PINTSELn.  0 = Disable rising edge or level interrupt.  1 = Enable rising edge or level interrupt.	0x0	R/W
31:8	-	Reserved. Read value is undefined, only zero should be written.	-	-

# 10.6.3 Pin interrupt level or rising edge interrupt set register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the SIENR register sets the corresponding bit in the IENR register depending on the pin interrupt mode configured in the ISEL register:

- If the pin interrupt mode is edge sensitive (PMODE = 0), the rising edge interrupt is set.
- If the pin interrupt mode is level sensitive (PMODE = 1), the level interrupt is set.

Table 160. Pin interrupt level or rising edge interrupt set register (SIENR, offset 0x008) bit description

Bit	Symbol	Description	Reset value	Access
7:0	SETENRL	Ones written to this address set bits in the IENR, thus enabling interrupts. Bit n sets bit n in the IENR register.  0 = No operation.  1 = Enable rising edge or level interrupt.	NA	WO
31:8	-	Reserved.	-	-

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.6.4 Pin interrupt level or rising edge interrupt clear register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the CIENR register clears the corresponding bit in the IENR register depending on the pin interrupt mode configured in the ISEL register:

- If the pin interrupt mode is edge sensitive (PMODE = 0), the rising edge interrupt is cleared.
- If the pin interrupt mode is level sensitive (PMODE = 1), the level interrupt is cleared.

Table 161. Pin interrupt level or rising edge interrupt clear register (CIENR, offset 0x00C) bit description

Bit	Symbol	Description	Reset value	Access
7:0	CENRL	Ones written to this address clear bits in the IENR, thus disabling the interrupts. Bit n clears bit n in the IENR register.  0 = No operation.  1 = Disable rising edge or level interrupt.	NA	WO
31:8	-	Reserved.	-	-

# 10.6.5 Pin interrupt active level or falling edge interrupt enable register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the IENF register enables the falling edge interrupt or the configures the level sensitivity depending on the pin interrupt mode configured in the ISEL register:

- If the pin interrupt mode is edge sensitive (PMODE = 0), the falling edge interrupt is enabled.
- If the pin interrupt mode is level sensitive (PMODE = 1), the active level of the level interrupt (HIGH or LOW) is configured.

Table 162. Pin interrupt active level or falling edge interrupt enable register (IENF, offset 0x010) bit description

Bit	Symbol	Description	Reset value	Access
7:0	ENAF	Enables the falling edge or configures the active level interrupt for each pin interrupt. Bit n configures the pin interrupt selected in PINTSELn.  0 = Disable falling edge interrupt or set active interrupt level LOW.  1 = Enable falling edge interrupt enabled or set active interrupt level HIGH.	0x0	R/W
31:8	-	Reserved.	-	-

#### 10.6.6 Pin interrupt active level or falling edge interrupt set register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the SIENF register sets the corresponding bit in the IENF register depending on the pin interrupt mode configured in the ISEL register:

- If the pin interrupt mode is edge sensitive (PMODE = 0), the falling edge interrupt is set.
- If the pin interrupt mode is level sensitive (PMODE = 1), the HIGH-active interrupt is selected.

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

Table 163. Pin interrupt active level or falling edge interrupt set register (SIENF, offset 0x014) bit description

Bit	Symbol	Description	Reset value	Access
7:0	SETENAF	Ones written to this address set bits in the IENF, thus enabling interrupts. Bit n sets bit n in the IENF register.  0 = No operation.  1 = Select HIGH-active interrupt or enable falling edge interrupt.	NA	WO
31:8	-	Reserved.	-	-

# 10.6.7 Pin interrupt active level or falling edge interrupt clear register

For each of the 8 pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>), one bit in the CIENF register sets the corresponding bit in the IENF register depending on the pin interrupt mode configured in the ISEL register:

- If the pin interrupt mode is edge sensitive (PMODE = 0), the falling edge interrupt is cleared.
- If the pin interrupt mode is level sensitive (PMODE = 1), the LOW-active interrupt is selected.

Table 164. Pin interrupt active level or falling edge interrupt clear register (CIENF, offset 0x018) bit description

Bit	Symbol	Description	Reset value	Access
7:0	CENAF	Ones written to this address clears bits in the IENF, thus disabling interrupts. Bit n clears bit n in the IENF register.  0 = No operation.  1 = LOW-active interrupt selected or falling edge interrupt disabled.	NA	WO
31:8	-	Reserved.	-	-

## 10.6.8 Pin interrupt rising edge register

This register contains ones for pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>) on which a rising edge has been detected. Writing ones to this register clears rising edge detection. Ones in this register assert an interrupt request for pins that are enabled for rising-edge interrupts. All edges are detected for all pins selected by the PINTSELn registers, regardless of whether they are interrupt-enabled.

Table 165. Pin interrupt rising edge register (RISE, offset 0x01C) bit description

Bit	Symbol	Description	Reset value	Access
7:0	RDET	Rising edge detect. Bit n detects the rising edge of the pin selected in PINTSELn. Read 0: No rising edge has been detected on this pin since Reset or the last time a one was written to this bit. Write 0: no operation. Read 1: a rising edge has been detected since Reset or the last time a one was written to this bit. Write 1: clear rising edge detection for this pin.	0x0	R/W
31:8	-	Reserved.	-	-

#### 10.6.9 Pin interrupt falling edge register

This register contains ones for pin interrupts selected in the PINTSELn registers (see <u>Table 139</u>) on which a falling edge has been detected. Writing ones to this register clears falling edge detection. Ones in this register assert an interrupt request for pins that are enabled for falling-edge interrupts. All edges are detected for all pins selected by the PINTSELn registers, regardless of whether they are interrupt-enabled.

UM10914

## Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

Table 166. Pin interrupt falling edge register (FALL, offset 0x020) bit description

Bit	Symbol	Description	Reset value	Access
7:0	FDET	Falling edge detect. Bit n detects the falling edge of the pin selected in PINTSELn.  Read 0: No falling edge has been detected on this pin since Reset or the last time a one was written to this bit.  Write 0: no operation.  Read 1: a falling edge has been detected since Reset or the last time a one was written to this bit.  Write 1: clear falling edge detection for this pin.	0x0	R/W
31:8	-	Reserved.	-	-

# 10.6.10 Pin interrupt status register

Reading this register returns ones for pin interrupts that are currently requesting an interrupt. For pins identified as edge-sensitive in the Interrupt Select register, writing ones to this register clears both rising- and falling-edge detection for the pin. For level-sensitive pins, writing ones inverts the corresponding bit in the Active level register, thus switching the active level on the pin.

Table 167. Pin interrupt status register (IST, offset 0x024) bit description

Bit	Symbol	Description	Reset value	Access
7:0	PSTAT	Pin interrupt status. Bit n returns the status, clears the edge interrupt, or inverts the active level of the pin selected in PINTSELn.  Read 0: interrupt is not being requested for this interrupt pin.  Write 0: no operation.  Read 1: interrupt is being requested for this interrupt pin.  Write 1, when pin is in edge-sensitive mode: clear rising- and falling-edge detection for this pin.  Write 1, when pin is in level-sensitive mode: switch the active level for this pin (in the IENF register).	0x0	R/W
31:8	-	Reserved.	-	-

# 10.6.11 Pattern Match Interrupt Control Register

The pattern match control register contains one bit to select pattern-match interrupt generation (as opposed to pin interrupts which share the same interrupt request lines), and another to enable the RXEV output to the CPU. This register also allows the current state of any pattern matches to be read.

If the pattern match feature is not used (either for interrupt generation or for RXEV assertion) bits SEL\_PMATCH and ENA\_RXEV of this register should be left at 0 to conserve power.

**Remark:** Set up the pattern-match configuration in the PMSRC and PMCFG registers before writing to this register to enable (or re-enable) the pattern-match functionality. This eliminates the possibility of spurious interrupts as the feature is being enabled.

**Remark:** note that the pattern match feature requires clocks in order to operate, and can thus not generate an interrupt or wake up the device during reduced power modes below sleep mode.

## Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

Table 168. Pattern match interrupt control register (PMCTRL, offset 0x028) bit description

Bit	Symbol	Value	Description	Reset value
0	SEL_PMATCH		Specifies whether the 8 pin interrupts are controlled by the pin interrupt function or by the pattern match function.	0x0
		0	Pin interrupt. Interrupts are driven in response to the standard pin interrupt function.	
		1	Pattern match. Interrupts are driven in response to pattern matches.	
1	ENA_RXEV		Enables the RXEV output to the CPU when the specified boolean expression evaluates to true.	0x0
		0	Disabled. RXEV output to the CPU is disabled.	
		1	Enabled. RXEV output to the CPU is enabled.	
23:2	-	-	Reserved. Do not write 1s to unused bits.	0x0
31:24	PMAT	-	This field displays the current state of pattern matches. A 1 in any bit of this field indicates that the corresponding product term is matched by the current state of the appropriate inputs.	0x0

# 10.6.12 Pattern Match Interrupt Bit-Slice Source register

The bit-slice source register specifies the input source for each of the eight pattern match bit slices.

Each of the possible eight inputs is selected in the pin interrupt select registers in the SYSCON block. See <u>Section 8.6.1</u>. Input 0 corresponds to the pin selected in the PINTSEL0 register, input 1 corresponds to the pin selected in the PINTSEL1 register, and so forth.

**Remark:** Writing any value to either the PMCFG register or the PMSRC register, or disabling the pattern-match feature (by clearing both the SEL\_PMATCH and ENA\_RXEV bits in the PMCTRL register to zeros) will erase all edge-detect history.

Table 169. Pattern match bit-slice source register (PMSRC, offset 0x02C) bit description

Bit	Symbol	Value	Description	Reset value			
7:0	Reserved	-	Software should not write 1s to unused bits.	0x0			
10:8	SRC0		Selects the input source for bit slice 0	0x0			
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 0.				
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 0.				
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 0.				
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 0.				
					0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 0.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 0.				
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 0.				
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 0.				

# Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

Table 169. Pattern match bit-slice source register (PMSRC, offset 0x02C) bit description

Bit	Symbol	Value	Description	Reset value
13:11	SRC1		Selects the input source for bit slice 1	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 1.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 1.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 1.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 1.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 1.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 1.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 1.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 1.	
16:14	SRC2		Selects the input source for bit slice 2	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 2.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 2.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 2.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 2.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 2.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 2.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 2.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 2.	
19:17	SRC3		Selects the input source for bit slice 3	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 3.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 3.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 3.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 3.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 3.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 3.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 3.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 3.	
22:20	SRC4		Selects the input source for bit slice 4	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 4.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 4.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 4.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 4.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 4.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 4.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 4.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 4.	

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

Table 169. Pattern match bit-slice source register (PMSRC, offset 0x02C) bit description

Bit	Symbol	Value	Description	Reset value
25:23	SRC5		Selects the input source for bit slice 5	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 5.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 5.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 5.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 5.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 5.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 5.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 5.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 5.	
28:26	SRC6		Selects the input source for bit slice 6	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 6.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 6.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 6.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 6.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 6.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 6.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 6.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 6.	
31:29	SRC7		Selects the input source for bit slice 7	0x0
		0x0	Input 0. Selects the pin selected in the PINTSEL0 register as the source to bit slice 7.	
		0x1	Input 1. Selects the pin selected in the PINTSEL1 register as the source to bit slice 7.	
		0x2	Input 2. Selects the pin selected in the PINTSEL2 register as the source to bit slice 7.	
		0x3	Input 3. Selects the pin selected in the PINTSEL3 register as the source to bit slice 7.	
		0x4	Input 4. Selects the pin selected in the PINTSEL4 register as the source to bit slice 7.	
		0x5	Input 5. Selects the pin selected in the PINTSEL5 register as the source to bit slice 7.	
		0x6	Input 6. Selects the pin selected in the PINTSEL6 register as the source to bit slice 7.	
		0x7	Input 7. Selects the pin selected in the PINTSEL7 register as the source to bit slice 7.	

# 10.6.13 Pattern Match Interrupt Bit Slice Configuration register

The bit-slice configuration register configures the detect logic and contains bits to select from among eight alternative conditions for each bit slice that cause that bit slice to contribute to a pattern match. The seven LSBs of this register specify which bit-slices are the end-points of product terms in the boolean expression (i.e. where OR terms are to be inserted in the expression).

Two types of edge detection on each input are possible:

Sticky: A rising edge, a falling edge, or a rising or falling edge that is detected at any
time after the edge-detection mechanism has been cleared. The input qualifies as
detected (the detect logic output remains HIGH) until the pattern match engine detect
logic is cleared again.

## Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

 Non-sticky: Every time an edge (rising or falling) is detected, the detect logic output for this pin goes HIGH. This bit is cleared after one clock cycle, and the edge detect logic can detect another edge,

**Remark:** To clear the pattern match engine detect logic, write any value to either the PMCFG register or the PMSRC register, or disable the pattern-match feature (by clearing both the SEL\_PMATCH and ENA\_RXEV bits in the PMCTRL register to zeros). This will erase all edge-detect history.

To select whether a slice marks the final component in a minterm of the boolean expression, write a 1 in the corresponding PROD\_ENPTSn bit. Setting a term as the final component has two effects:

- 1. The interrupt request associated with this bit slice will be asserted whenever a match to that product term is detected.
- 2. The next bit slice will start a new, independent product term in the boolean expression (i.e. an OR will be inserted in the boolean expression following the element controlled by this bit slice).

Table 170. Pattern match bit slice configuration register (PMCFG, offset 0x030) bit description

Bit	Symbol	Value	Description	Reset value	
0	PROD_EN		Determines whether slice 0 is an endpoint.	0x0	
	DPTS0	0	No effect. Slice 0 is not an endpoint.		
		1	endpoint. Slice 0 is the endpoint of a product term (minterm). Pin interrupt 0 in the NVIC is raised if the minterm evaluates as true.		
1	PROD_EN		Determines whether slice 1 is an endpoint.	0x0	
	DPTS1	0	No effect. Slice 1 is not an endpoint.		
		1	endpoint. Slice 1 is the endpoint of a product term (minterm). Pin interrupt 1 in the NVIC is raised if the minterm evaluates as true.		
2	PROD_EN		Determines whether slice 2 is an endpoint.	0x0	
	DPTS2	0	No effect. Slice 2 is not an endpoint.		
		1	endpoint. Slice 2 is the endpoint of a product term (minterm). Pin interrupt 2 in the NVIC is raised if the minterm evaluates as true.		
3	PROD_EN		Determines whether slice 3 is an endpoint.	0x0	
	DPTS3	0	No effect. Slice 3 is not an endpoint.		
		1	endpoint. Slice 3 is the endpoint of a product term (minterm). Pin interrupt 3 in the NVIC is raised if the minterm evaluates as true.		
4	PROD_EN		Determines whether slice 4 is an endpoint.	0x0	
	DPTS4	0	No effect. Slice 4 is not an endpoint.		
		1	endpoint. Slice 4 is the endpoint of a product term (minterm). Pin interrupt 4 in the NVIC is raised if the minterm evaluates as true.		
5	PROD_EN			Determines whether slice 5 is an endpoint.	0x0
	DPTS5	0	No effect. Slice 5 is not an endpoint.		
		1	endpoint. Slice 5 is the endpoint of a product term (minterm). Pin interrupt 5 in the NVIC is raised if the minterm evaluates as true.		
6	PROD_EN		Determines whether slice 6 is an endpoint.	0x0	
	DPTS6	0	No effect. Slice 6 is not an endpoint.		
		1	endpoint. Slice 6 is the endpoint of a product term (minterm). Pin interrupt 6 in the NVIC is raised if the minterm evaluates as true.		

Table 170. Pattern match bit slice configuration register (PMCFG, offset 0x030) bit description ...continued

Bit	Symbol	Value	Description	Reset value
7	-	-	Reserved. Bit slice 7 is automatically considered a product end point.	0x0
10:8	CFG0		Specifies the match contribution condition for bit slice 0.	0x0
		0x0	Constant HIGH. This bit slice always contributes to a product term match.	
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	_
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.	
		0x5	Low level. Match occurs when there is a low level on the specified input.	
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).	
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.	
13:11	CFG1		Specifies the match contribution condition for bit slice 1.	0x0
		0x0	Constant HIGH. This bit slice always contributes to a product term match.	
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.	
		0x5	Low level. Match occurs when there is a low level on the specified input.	1
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).	
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.	

Table 170. Pattern match bit slice configuration register (PMCFG, offset 0x030) bit description ...continued

Bit	Symbol	Value	Description	Reset value	
16:14	CFG2		Specifies the match contribution condition for bit slice 2.	0x0	
		0x0	Constant HIGH. This bit slice always contributes to a product term match.		
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.		
		0x5	Low level. Match occurs when there is a low level on the specified input.		
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).		
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.		
19:17	CFG3		Specifies the match contribution condition for bit slice 3.	0x0	
		0x0	Constant HIGH. This bit slice always contributes to a product term match.		
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.		
		0x5	Low level. Match occurs when there is a low level on the specified input.		
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).		
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.		

Table 170. Pattern match bit slice configuration register (PMCFG, offset 0x030) bit description ...continued

Bit	Symbol	Value	Description	Reset value
22:20	CFG4		Specifies the match contribution condition for bit slice 4.	0x0
		0x0	Constant HIGH. This bit slice always contributes to a product term match.	
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.	
		0x5	Low level. Match occurs when there is a low level on the specified input.	
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).	
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.	
25:23	CFG5		Specifies the match contribution condition for bit slice 5.	0x0
		0x0	Constant HIGH. This bit slice always contributes to a product term match.	
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.	
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.	
		0x5	Low level. Match occurs when there is a low level on the specified input.	
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).	
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.	

Table 170. Pattern match bit slice configuration register (PMCFG, offset 0x030) bit description ...continued

Bit	Symbol	Value	Description	Reset value	
28:26	CFG6		Specifies the match contribution condition for bit slice 6.	0x0	
		0x0	Constant HIGH. This bit slice always contributes to a product term match.		
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.		
		0x5	Low level. Match occurs when there is a low level on the specified input.		
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).		
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.		
31:29	CFG7		Specifies the match contribution condition for bit slice 7.	0x0	
		0x0	Constant HIGH. This bit slice always contributes to a product term match.		
		0x1	Sticky rising edge. Match occurs if a rising edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x2	Sticky falling edge. Match occurs if a falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x3	Sticky rising or falling edge. Match occurs if either a rising or falling edge on the specified input has occurred since the last time the edge detection for this bit slice was cleared. This bit is only cleared when the PMCFG or the PMSRC registers are written to.		
		0x4	High level. Match (for this bit slice) occurs when there is a high level on the input specified for this bit slice in the PMSRC register.		
		0x5	Low level. Match occurs when there is a low level on the specified input.		
		0x6	Constant 0. This bit slice never contributes to a match (should be used to disable any unused bit slices).		
		0x7	Event. Non-sticky rising or falling edge. Match occurs on an event - i.e. when either a rising or falling edge is first detected on the specified input (this is a non-sticky version of value 0x3). This bit is cleared after one clock cycle.		

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.7 Functional description

# 10.7.1 Pin interrupts

In this interrupt facility, up to 8 pins are identified as interrupt sources by the Pin Interrupt Select registers (PINTSEL0-7). All registers in the pin interrupt block contain 8 bits, corresponding to the pins called out by the PINTSEL0-7 registers. The ISEL register defines whether each interrupt pin is edge- or level-sensitive. The RISE and FALL registers detect edges on each interrupt pin, and can be written to clear (and set) edge detection. The IST register indicates whether each interrupt pin is currently requesting an interrupt, and this register can also be written to clear interrupts.

The other pin interrupt registers play different roles for edge-sensitive and level-sensitive pins, as described in Table 171.

Table 171. P	in interrupt i	registers f	or edge- and	level-sensitive pins
--------------	----------------	-------------	--------------	----------------------

Name	Edge-sensitive function	Level-sensitive function
IENR	Enables rising-edge interrupts.	Enables level interrupts.
SIENR	Write to enable rising-edge interrupts.	Write to enable level interrupts.
CIENR	Write to disable rising-edge interrupts.	Write to disable level interrupts.
IENF	Enables falling-edge interrupts.	Selects active level.
SIENF	Write to enable falling-edge interrupts.	Write to select high-active.
CIENF	Write to disable falling-edge interrupts.	Write to select low-active.

# 10.7.2 Pattern Match engine example

Suppose the desired boolean pattern to be matched is: (IN1) + (IN1 \* IN2) + (~IN2 \* ~IN3 \* IN6fe) + (IN5 \* IN7ev)

with:

IN6fe = (sticky) falling-edge on input 6

IN7ev = (non-sticky) event (rising or falling edge) on input 7


Each individual term in the expression shown above is controlled by one bit-slice. To specify this expression, program the pattern match bit slice source and configuration register fields as follows:


- PMSRC register (Table 169):
  - Since bit slice 5 will be used to detect a sticky event on input 6, a 1 can be written to the SRC5 bits to clear any pre-existing edge detects on bit slice 5.
  - SRC0: 001 select input 1 for bit slice 0
  - SRC1: 001 select input 1 for bit slice 1
  - SRC2: 010 select input 2 for bit slice 2
  - SRC3: 010 select input 2 for bit slice 3
  - SRC4: 011 select input 3 for bit slice 4
  - SRC5: 110 select input 6 for bit slice 5
  - SRC6: 101 select input 5 for bit slice 6


- SRC7: 111 select input 7 for bit slice 7
- PMCFG register (Table 170):
  - PROD ENDPTS0 = 1
  - PROD ENDPTS02 = 1
  - PROD ENDPTS5 = 1
  - All other slices are not product term endpoints and their PROD\_ENDPTS bits are
     Slice 7 is always a product term endpoint and does not have a register bit associated with it.
  - = 0100101 bit slices 0, 2, 5, and 7 are product-term endpoints. (Bit slice 7 is an endpoint by default no associated register bit).
  - CFG0: 000 high level on the selected input (input 1) for bit slice 0
  - CFG1: 000 high level on the selected input (input 1) for bit slice 1
  - CFG2: 000 high level on the selected input (input 2) for bit slice 2
  - CFG3: 101 low level on the selected input (input 2) for bit slice 3
  - CFG4: 101 low level on the selected input (input 3) for bit slice 4
  - CFG5: 010 (sticky) falling edge on the selected input (input 6) for bit slice 5
  - CFG6: 000 high level on the selected input (input 5) for bit slice 6
  - CFG7: 111 event (any edge, non-sticky) on the selected input (input 7) for bit slice 7
- PMCTRL register (Table 168):
  - Bit0: Setting this bit will select pattern matches to generate the pin interrupts in place of the normal pin interrupt mechanism.
    - For this example, pin interrupt 0 will be asserted when a match is detected on the first product term (which, in this case, is just a high level on input 1).
    - Pin interrupt 2 will be asserted in response to a match on the second product term.
    - Pin interrupt 5 will be asserted when there is a match on the third product term.
    - Pin interrupt 7 will be asserted on a match on the last term.
  - Bit1: Setting this bit will cause the RxEv signal to the CPU to be asserted whenever a match occurs on ANY of the product terms in the expression. Otherwise, the RXEV line will not be used.
  - Bit31:24: At any given time, bits 0, 2, 5 and/or 7 may be high if the corresponding product terms are currently matching.
  - The remaining bits will always be low.

#### Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

# 10.7.3 Pattern match engine edge detect examples

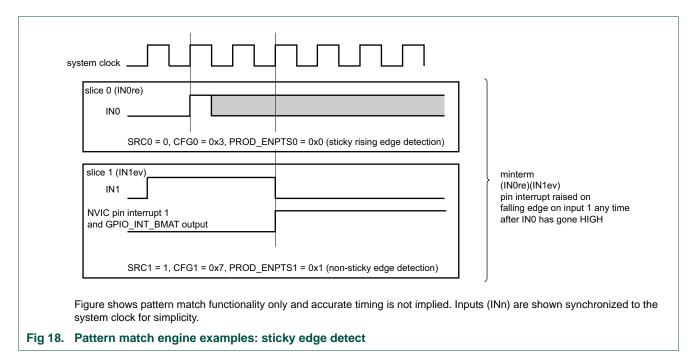

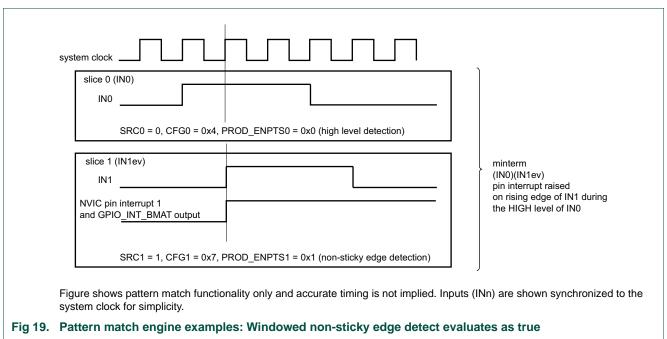

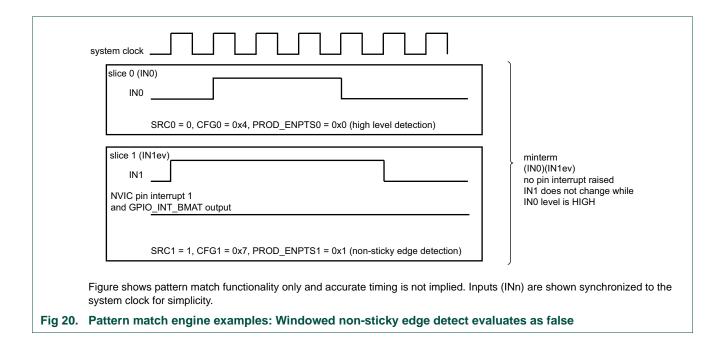

# **UM10914**

# Chapter 11: LPC5411x Group GPIO input interrupt (GINT0/1)

Rev. 1.2 — 30 June 2016

**User manual** 

#### 11.1 Features

- The inputs from any number of digital pins can be enabled to contribute to a combined group interrupt.
- The polarity of each input enabled for the group interrupt can be configured HIGH or LOW.
- Enabled interrupts can be logically combined through an OR or AND operation.
- Two group interrupts are supported to reflect two distinct interrupt patterns.
- The grouped interrupts can wake up the part from sleep or deep-sleep modes.

# 11.2 Basic configuration

For the group interrupt feature, enable the clock to both the GROUP0 and GROUP1 register interfaces in the AHBCLKCTRL0 register ((<u>Table 45</u>). The group interrupt wake-up feature is enabled in the STARTER0 register for GINT0 and the STARTER1 register for GINT1 (<u>Table 93</u> and <u>Table 94</u> respectively). The interrupt must also be enabled in the NVIC (see <u>Table 2</u>).

The pins can be configured as GPIO pins through IOCON, but they don't have to be. The GINT block reads the input from the pin bypassing IOCON multiplexing. Make sure that no analog function is selected on pins that are input to the group interrupts. Selecting an analog function in IOCON disables the digital pad and the digital signal is tied to 0.

# 11.3 General description

The GPIO pins can be used in several ways to set pins as inputs or outputs and use the inputs as combinations of level and edge sensitive interrupts.

For each port/pin connected to one of the two the GPIO Grouped Interrupt blocks (GROUP0 and GROUP1), the GPIO grouped interrupt registers determine which pins are enabled to generate interrupts and what the active polarities of each of those inputs are.

The GPIO grouped interrupt registers also select whether the interrupt output will be level or edge triggered and whether it will be based on the OR or the AND of all of the enabled inputs.

When the designated pattern is detected on the selected input pins, the GPIO grouped interrupt block generates an interrupt. If the part is in a power-savings mode, it I first asynchronously wakes the part up prior to asserting the interrupt request. The interrupt request line can be cleared by writing a one to the interrupt status bit in the control register.

# Chapter 11: LPC5411x Group GPIO input interrupt (GINT0/1)

# 11.4 Register description

Note: In all registers, bits that are not shown are reserved.

Table 172. Register overview: GROUP0 interrupt (base address 0x4000 2000 (GINT0) and 0x4000 3000 (GINT1))

Name	Access	Offset	Description	Reset value	Section
CTRL	R/W	0x000	GPIO grouped interrupt control register	0x0	11.4.1
PORT_POL0	R/W	0x020	GPIO grouped interrupt port 0 polarity register	0xFFFF FFFF	11.4.2
PORT_POL1	R/W	0x024	GPIO grouped interrupt port 1 polarity register	0xFFFF FFFF	11.4.2
PORT_ENA0	R/W	0x040	GPIO grouped interrupt port 0 enable register	0x0	11.4.3
PORT_ENA1	R/W	0x044	GPIO grouped interrupt port 1 enable register	0x0	11.4.3

#### Chapter 11: LPC5411x Group GPIO input interrupt (GINT0/1)

# 11.4.1 Grouped interrupt control register

Table 173. GPIO grouped interrupt control register (CTRL, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset value
0	INT		Group interrupt status. This bit is cleared by writing a one to it. Writing zero has no effect.	0x0
		0	No request. No interrupt request is pending.	
		1	Request active. Interrupt request is active.	
1	COMB		Combine enabled inputs for group interrupt	0x0
		0	Or. OR functionality: A grouped interrupt is generated when any one of the enabled inputs is active (based on its programmed polarity).	
		1	And. AND functionality: An interrupt is generated when all enabled bits are active (based on their programmed polarity).	
2	TRIG		Group interrupt trigger	0x0
		0	Edge-triggered.	
		1	Level-triggered.	
31:3	-	-	Reserved. Read value is undefined, only zero should be written.	0x0

# 11.4.2 GPIO grouped interrupt port polarity registers

The grouped interrupt port polarity registers determine how the polarity of each enabled pin contributes to the grouped interrupt. Each port is associated with its own port polarity register, and the values of both registers together determine the grouped interrupt.

Each register PORT\_POLm controls the polarity of pins in port m.

Table 174. GPIO grouped interrupt port polarity registers (PORT\_POL[0:1], offset 0x020 for POL0; 0x024 for POL1) bit description

Bit	Symbol	Description	Reset value
31:0	POL	Configure pin polarity of port m pins for group interrupt. Bit n corresponds to pin PIOm_n of port m.  0 = the pin is active LOW. If the level on this pin is LOW, the pin contributes to the group interrupt.  1 = the pin is active HIGH. If the level on this pin is HIGH, the pin contributes to the group interrupt.	0xFFFF FFFF

# 11.4.3 GPIO grouped interrupt port enable registers

The grouped interrupt port enable registers enable the pins which contribute to the grouped interrupt. Each port is associated with its own port enable register, and the values of both registers together determine which pins contribute to the grouped interrupt.

Each register PORT\_ENm enables pins in port m.

Table 175. GPIO grouped interrupt port enable registers (PORT\_ENA[0:1], offset 0x040 for PORT\_ENA0; 0x044 PORT\_ENA1) bit description

Bit	Symbol	Description	Reset value
31:0		Enable port 0 pin for group interrupt. Bit n corresponds to pin Pm_n of port m.  0 = the port 0 pin is disabled and does not contribute to the grouped interrupt.  1 = the port 0 pin is enabled and contributes to the grouped interrupt.	0x0

#### Chapter 11: LPC5411x Group GPIO input interrupt (GINT0/1)

# 11.5 Functional description

Any subset of the pins in each port can be selected to contribute to a common group interrupt (GINT) and can be enabled to wake the part up from deep-sleep mode.

An interrupt can be requested for each port, based on any selected subset of pins within each port. The pins that contribute to each port interrupt are selected by 1s in the port's Enable register, and an interrupt polarity can be selected for each pin in the port's Polarity register. The level on each pin is exclusive-ORed with its polarity bit, and the result is ANDed with its enable bit. These results are then inclusive-ORed among all the pins in the port to create the port's raw interrupt request.

The raw interrupt request from each of the two group interrupts is sent to the NVIC, which can be programmed to treat it as level- or edge-sensitive, or it can be edge-detected by the wake-up interrupt logic (see <u>Table 93</u>).

# **UM10914**

# Chapter 12: LPC5411x DMA controller

Rev. 1.2 — 30 June 2016

**User manual** 

# 12.1 How to read this chapter

The DMA controller is available on all LPC5411x devices.

## 12.2 Features

- 20 channels, 19 of which are connected to peripheral DMA requests. These come
  from the Flexcomm Interface (USART, SPI, I<sup>2</sup>C, and I<sup>2</sup>S), and digital microphone. One
  spare channel has no DMA request connected and can be used for functions such as
  memory-to-memory moves. Any otherwise unused channel can also be used for other
  purposes.
- DMA operations can be triggered by on- or off-chip events. Each DMA channel can select one trigger input from 20 sources. Trigger sources include ADC interrupts, Timer interrupts, pin interrupts, and the SCT DMA request lines.
- Priority is user selectable for each channel (up to eight priority levels).
- Continuous priority arbitration.
- Address cache with four entries (each entry is a pair of transfer addresses).
- Efficient use of data bus.
- Supports single transfers up to 1,024 words.
- Address increment options allow packing and/or unpacking data.

# 12.3 Basic configuration

Configure the DMA as follows:

Use the AHBCLKCTRL0 register (<u>Table 45</u>) to enable the clock to the DMA registers interface.

- Clear the DMA peripheral reset using the PRESETCTRL0 register (Table 38).
- The DMA controller provides an interrupt to the NVIC, see Table 2.
- Most peripherals that support DMA, the ADC being an exception, have at least one DMA request line associated with them. The related channel(s) must be set up according to the desired operation. the ADC uses a trigger instead of a DMA request.
   DMA requests and triggers are described in detail in Section 12.5.1
- For peripherals using DMA requests, DMA operation must be triggered before any transfer will occur. This can be done by software, or can optionally be signalled by one of 20 hardware triggers, through the input mux registers DMA\_ITRIG\_INMUX[0:19].
   DMA requests and triggers are described in detail in Section 12.5.1
- Trigger outputs may optionally cause other DMA channels to be triggered for more complex DMA functions. Trigger outputs are connected to DMA\_INMUX\_INMUX[0:3] as inputs to DMA triggers.


For details on the trigger input and output multiplexing, see <u>Section 8.5.2 "DMA trigger input multiplexing"</u>.

Chapter 12: LPC5411x DMA controller

# 12.4 Pin description

The DMA controller has no direct pin connections. However, some DMA triggers can be associated with pin functions (see Section 12.5.1.2).

# 12.5 General description

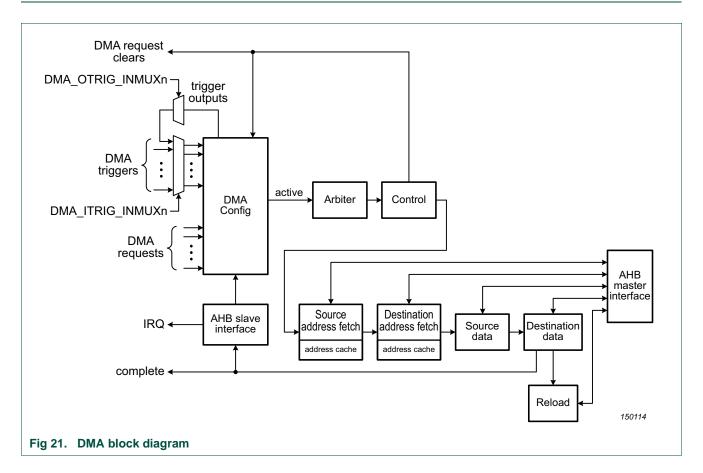

# 12.5.1 DMA requests and triggers

In general, DMA requests are intended to pace transfers to match what the peripheral (including its FIFO if it has one) can do. For example, the USART will issue a transmit DMA request when its transmit FIFO is not full, and a receive DMA request when its receive FIFO is not empty. DMA requests are summarized in <u>Table 176</u>.

Triggers start the transfer. In typical cases, only a software trigger will probably be used. Other possibilities are provided for, such as starting a DMA transfer when certain timer or pin related events occur. Those transfers would usually still be paced by a peripheral DMA request if a peripheral is involved in the transfer. Note that no DMA activity will take place for any particular DMA channel unless that channel has been triggered, either by software or hardware. DMA triggers are summarized in Table 178.

There is one specific exception to the above description, which is the ADC. The ADC doesn't fit the simple pacing signal model very well because of the possibilities represented by the programmable conversion sequences. A sequence complete DMA

#### Chapter 12: LPC5411x DMA controller

request is likely to require transferring several non-contiguous result registers at once (see <a href="Chapter 27">Chapter 27 "LPC5411x 12-bit ADC controller (ADC)"</a>). It might also require other things to be done that can be done by the DMA without software intervention. This model fits better with the trigger facility, so that is how the ADC is connected to the DMA controller.

Once triggered by software or hardware, a DMA operation on a specific channel is initiated by a DMA request if it is enabled for that channel.

A DMA channel using a trigger can respond by moving data from any memory address to any other memory address. This can include fixed peripheral data registers, or incrementing through RAM buffers. The amount of data moved by a single trigger event can range from a single transfer to many transfers. A transfer that is started by a trigger can still be paced using the channel's DMA request. This allows sending a string to a serial peripheral, for instance, without overrunning the peripheral's transmit buffer.

Each DMA channel also has an output that can be used as a trigger input to another channel. The trigger outputs appear in the trigger source list for each channel and can be selected through the DMA\_INMUX registers as inputs to other channels.

# **12.5.1.1 DMA requests**

DMA requests are directly connected to the peripherals. Each channel supports one DMA request line and one trigger input which is multiplexed to many possible input sources, as shown in Table 176.

Table 176. DMA requests & trigger muxes

DMA channel #	Request input	DMA trigger mux
0	Flexcomm Interface 0 RX / I2C Slave [1]	DMA_ITRIG_INMUX0
1	Flexcomm Interface 0 TX / I2C Master [1]	DMA_ITRIG_INMUX1
2	Flexcomm Interface 1 RX / I2C Slave [1]	DMA_ITRIG_INMUX2
3	Flexcomm Interface 1 TX / I2C Master [1]	DMA_ITRIG_INMUX3
4	Flexcomm Interface 2 RX / I2C Slave [1]	DMA_ITRIG_INMUX4
5	Flexcomm Interface 2 TX / I2C Master [1]	DMA_ITRIG_INMUX5
6	Flexcomm Interface 3 RX / I2C Slave [1]	DMA_ITRIG_INMUX6
7	Flexcomm Interface 3 TX / I2C Master [1]	DMA_ITRIG_INMUX7
8	Flexcomm Interface 4 RX / I2C Slave [1]	DMA_ITRIG_INMUX8
9	Flexcomm Interface 4 TX / I2C Master [1]	DMA_ITRIG_INMUX9
10	Flexcomm Interface 5 RX / I2C Slave [1]	DMA_ITRIG_INMUX10
11	Flexcomm Interface 5 TX / I2C Master [1]	DMA_ITRIG_INMUX11
12	Flexcomm Interface 6 RX / I2C Slave [1]	DMA_ITRIG_INMUX12
13	Flexcomm Interface 6 TX / I2C Master [1]	DMA_ITRIG_INMUX13
14	Flexcomm Interface 7 RX / I2C Slave [1]	DMA_ITRIG_INMUX14
15	Flexcomm Interface 7 TX / I2C Master [1]	DMA_ITRIG_INMUX15
16	D_MIC0	DMA_ITRIG_INMUX16
17	D_MIC1	DMA_ITRIG_INMUX17
18	(no DMA request)	DMA_ITRIG_INMUX18
19	(no DMA request)	DMA_ITRIG_INMUX19

<sup>[1]</sup> See Section 12.5.1.1.1 below for information about DMA for the I<sup>2</sup>C Monitor function.

**User manual** 

#### Chapter 12: LPC5411x DMA controller

#### 12.5.1.1.1 DMA with I2C monitor mode

The I<sup>2</sup>C monitor function may be used with DMA if one of the channels related to the same Flexcomm Interface is available.

Table 177. DMA with the I<sup>2</sup>C Monitor function

I <sup>2</sup> C Master DMA	I <sup>2</sup> C Slave DMA	I <sup>2</sup> C Monitor DMA
Not enabled	-	If $I^2C$ Monitor DMA is enabled, it will use the DMA channel for the Master function of the same Flexcomm Interface.
Enabled	Not enabled	If I <sup>2</sup> C Monitor is DMA enabled, it will use the DMA channel for the Slave function of the same Flexcomm Interface.
Enabled	Enabled	The I <sup>2</sup> C Monitor function cannot use DMA.

# 12.5.1.2 Hardware triggers

Each DMA channel can use one trigger that is independent of the request input for this channel. The trigger input is selected in the DMA\_ITRIG\_INMUX registers. There are 20 possible internal trigger sources for each DMA channel. In addition, the DMA trigger output can be routed to the trigger input of another channel through the trigger input multiplexing. See Table 176 and Section 8.5.2 "DMA trigger input multiplexing".

Note that the ADC is unique in that it uses DMA triggers only, and has no DMA requests.

Table 178. DMA trigger sources

DMA trigger #	Trigger input	Software trigger
0	ADC0 sequence A interrupt	Yes
1	ADC0 sequence B interrupt	Yes
2	SCT0 DMA request 0	Yes
3	SCT0 DMA request 1	Yes
4	Timer CTIMER0 Match 0 DMA request	Yes
5	Timer CTIMER0 Match 1 DMA request	Yes
6	Timer CTIMER1 Match 0 DMA request	Yes
7	Timer CTIMER2 Match 0 DMA request	Yes
8	Timer CTIMER2 Match 1 DMA request	Yes
9	Timer CTIMER3 Match 0 DMA request	Yes
10	Timer CTIMER4 Match 0 DMA request	Yes
11	Timer CTIMER4 Match 1 DMA request	Yes
12	Pin interrupt 0	Yes
13	Pin interrupt 1	Yes
14	Pin interrupt 2	Yes
15	Pin interrupt 3	Yes
16	DMA output trigger 0	Yes
17	DMA output trigger 1	
18	DMA output trigger 2	
19	DMA output trigger 3	

#### Chapter 12: LPC5411x DMA controller

### 12.5.1.3 Trigger operation detail

A trigger of some kind is always needed to start a transfer on a DMA channel. This can be a hardware or software trigger, and can be used in several ways.

If a channel is configured with the SWTRIG bit equal to 0, the channel can be later triggered either by hardware or software. Software triggering is accomplished by writing a 1 to the appropriate bit in the SETTRIG register. Hardware triggering requires setup of the HWTRIGEN, TRIGPOL, TRIGTYPE, and TRIGBURST fields in the CFG register for the related channel. When a channel is initially set up, the SWTRIG bit in the XFERCFG register can be set, causing the transfer to begin immediately.

Once triggered, transfer on a channel will be paced by DMA requests if the PERIPHREQEN bit in the related CFG register is set. Otherwise, the transfer will proceed at full speed.

The TRIG bit in the CTLSTAT register can be cleared at the end of a transfer, determined by the value CLRTRIG (bit 0) in the XFERCFG register. When a 1 is found in CLRTRIG, the trigger is cleared when the descriptor is exhausted.

### 12.5.1.4 Trigger output detail

Each channel of the DMA controller provides a trigger output. This allows the possibility of using the trigger outputs as a trigger source to a different channel in order to support complex transfers on selected peripherals. This kind of transfer can, for example, use more than one peripheral DMA request. An example use would be to input data to a holding buffer from one peripheral, and then output the data to another peripheral, with both transfers being paced by the appropriate peripheral DMA request. This kind of operation is called "chained operation" or "channel chaining".

### 12.5.2 DMA Modes

The DMA controller doesn't really have separate operating modes, but there are ways of using the DMA controller that have commonly used terminology in the industry.

Once the DMA controller is set up for operation, using any specific DMA channel requires initializing the registers associated with that channel (see <u>Table 176</u>), and supplying at least the channel descriptor, which is located somewhere in memory, typically in on-chip SRAM (see <u>Section 12.6.3</u>). The channel descriptor is shown in <u>Table 179</u>.

Table 179: Channel descriptor

Offset	Description
+ 0x0	Reserved
+ 0x4	Source data end address
+ 0x8	Destination end address
+ 0xC	Link to next descriptor

The source and destination end addresses, as well as the link to the next descriptor are just memory addresses that can point to any valid address on the device. The starting address for both source and destination data is the specified end address minus the transfer length (XFERCOUNT \* the address increment as defined by SRCINC and DSTINC). The link to the next descriptor is used only if it is a linked transfer.

#### Chapter 12: LPC5411x DMA controller

After the channel has had a sufficient number of DMA requests and/or triggers, depending on its configuration, the initial descriptor will be exhausted. At that point, if the transfer configuration directs it, the channel descriptor will be reloaded with data from memory pointed to by the "Link to next descriptor" entry of the initial channel descriptor. Descriptors loaded in this manner look slightly different the channel descriptor, as shown in <a href="Table 180">Table 180</a>. The difference is that a new transfer configuration is specified in the reload descriptor instead of being written to the XFERCFG register for that channel.

This process repeats as each descriptor is exhausted as long as reload is selected in the transfer configuration for each new descriptor.

Table 180: Reload descriptors

Offset	Description
+ 0x0	Transfer configuration.
+ 0x4	Source end address. This points to the address of the last entry of the source address range if the address is incremented. The address to be used in the transfer is calculated from the end address, data width, and transfer size.
+ 0x8	Destination end address. This points to the address of the last entry of the destination address range if the address is incremented. The address to be used in the transfer is calculated from the end address, data width, and transfer size.
+ 0xC	Link to next descriptor. If used, this address must be aligned to a multiple of 16 bytes (i.e., the size of a descriptor).

# 12.5.3 Single buffer

This generally applies to memory to memory moves, and peripheral DMA that occurs only occasionally and is set up for each transfer. For this kind of operation, only the initial channel descriptor shown in <u>Table 181</u> is needed.

Table 181: Channel descriptor for a single transfer

Offset	Description
+ 0x0	Reserved
+ 0x4	Source data end address
+ 0x8	Destination data end address
+ 0xC	(not used)

This case is identified by the Reload bit in the XFERCFG register = 0. When the DMA channel receives a DMA request or trigger (depending on how it is configured), it performs one or more transfers as configured, then stops. Once the channel descriptor is exhausted, additional DMA requests or triggers will have no effect until the channel configuration is updated by software.

# 12.5.4 Ping-Pong

Ping-pong is a special case of a linked transfer. It is described separately because it is typically used more frequently than more complicated versions of linked transfers.

A ping-pong transfer uses two buffers alternately. At any one time, one buffer is being loaded or unloaded by DMA operations. The other buffer has the opposite operation being handled by software, readying the buffer for use when the buffer currently being used by the DMA controller is full or empty. Table 182 shows an example of descriptors for ping-pong from a peripheral to two buffers in memory.

#### Chapter 12: LPC5411x DMA controller

Table 182: Example descriptors for ping-pong operation: peripheral to buffer

Channel Descriptor					
+ 0x0	(not used)				
+ 0x4	Peripheral data end address				
+ 0x8	Buffer A memory end address				
+ 0xC	Address of descriptor B				

Descriptor B				
+ 0x0	Buffer B transfer configuration			
+ 0x4	Peripheral data end address			
+ 0x8	Buffer B memory end address			
+ 0xC	Address of descriptor A			

Descriptor A			
+ 0x0	Buffer A transfer configuration		
+ 0x4	Peripheral data end address		
+ 0x8	Buffer A memory end address		
+ 0xC	Address of descriptor B		

In this example, the channel descriptor is used first, with a first buffer in memory called buffer A. The configuration of the DMA channel must have been set to indicate a reload. Similarly, both descriptor A and descriptor B must also specify reload. When the channel descriptor is exhausted, descriptor B is loaded using the link to descriptor B, and a transfer interrupt informs the CPU that buffer A is available.


Descriptor B is then used until it is also exhausted, when descriptor A is loaded using the link to descriptor A contained in descriptor B. Then a transfer interrupt informs the CPU that buffer B is available for processing. The process repeats when descriptor A is exhausted, alternately using each of the 2 memory buffers.

#### 12.5.5 Interleaved transfers

One use for the SRCINC and DSTINC configurations (located in the channel transfer configuration registers, XFERCFGn) is to handle data in a buffer such that it is interleaved with other data.

For example, if 4 data samples from several peripherals need to be interleaved into a single data structure, this may be done while the data is being read in by the DMA. Setting SRCINC to 4x width for each channel involved will allow room for 4 samples in a row in the buffer memory. The DMA will place data for each successive value at the next location for that peripheral.

The reverse of this process could be done using DSTINC to de-interleave combined data from the buffer and send it to several peripherals or locations.

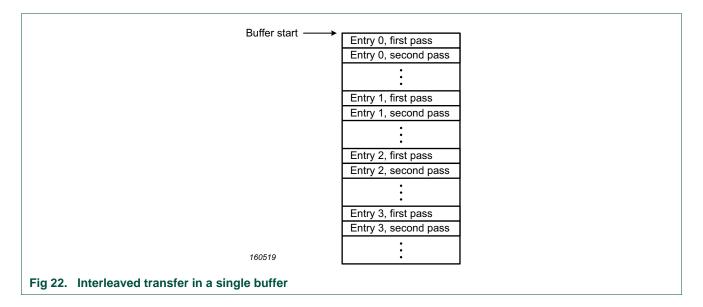

#### Chapter 12: LPC5411x DMA controller

# 12.5.6 Linked transfers (linked list)

A linked transfer can use any number of descriptors to define a complicated transfer. This can be configured such that a single transfer, a portion of a transfer, one whole descriptor, or an entire structure of links can be initiated by a single DMA request or trigger.

An example of a linked transfer could start out like the example for a ping-pong transfer (<u>Table 182</u>). The difference would be that descriptor B would not link back to descriptor A, but would continue on to another different descriptor. This could continue as long as desired, and can be ended anywhere, or linked back to any point to repeat a sequence of descriptors. Of course, any descriptor not currently in use can be altered by software as well.

# 12.5.7 Address alignment for data transfers

Transfers of 16 bit width require an address alignment to a multiple of 2 bytes. Transfers of 32 bit width require an address alignment to a multiple of 4 bytes. Transfers of 8 bit width can be at any address.

# 12.5.8 Channel chaining

Channel chaining is a feature which allows completion of a DMA transfer on channel x to trigger a DMA transfer on channel y. This feature can for example be used to have DMA channel x reading n bytes from UART to memory, and then have DMA channel y transferring the received bytes to the CRC engine, without any action required from the ARM core.

To use channel chaining, first configure DMA channels x and y as if no channel chaining would be used. Then:

- For channel x:
  - If channel x is configured to auto reload the descriptor on exhausting of the descriptor (bit RELOAD in the transfer configuration of the descriptor is set), then enable 'clear trigger on descriptor exhausted' by setting bit CLRTRIG in the channel's transfer configuration in the descriptor.
- For channel y:
  - Configure the input trigger input mux register (DMA\_ITRIG\_INMUX[0:21]) for channel y to use any of the available DMA trigger muxes (DMA trigger mux 0/1).
  - Configure the chosen DMA trigger mux to select DMA channel x.
  - Enable hardware triggering by setting bit HWTRIGEN in the channel configuration register.
  - Set the trigger type to edge sensitive by clearing bit TRIGTYPE in the channel configuration register.
  - Configure the trigger edge to falling edge by clearing bit TRIGPOL in the channel configuration register.

Note that after completion of channel x the descriptor may be reloaded (if configured so), but remains un-triggered. To configure the chain to auto-trigger itself, setup channels x and y for channel chaining as described above. In addition to that:

• A ping-pong configuration for both channel x and y is recommended, so that data currently moved by channel y is not altered by channel x.

UM10914

#### Chapter 12: LPC5411x DMA controller

#### For channel x:

- Configure the input trigger input mux register (DMA\_ITRIG\_INMUX[0:21]) for channel y to use the same DMA trigger mux as chosen for channel y.
- Enable hardware triggering by setting bit HWTRIGEN in the channel configuration register.
- Set the trigger type to edge sensitive by clearing bit TRIGTYPE in the channel configuration register.
- Configure the trigger edge to falling edge by clearing bit TRIGPOL in the channel configuration register.

# 12.5.9 DMA in reduced power modes

### **DMA** in sleep mode

In sleep mode, the DMA can operate and access all enabled SRAM blocks, without waking up the CPU.

### DMA in deep-sleep mode

Some peripherals support DMA service during deep-sleep mode without waking up the CPU or the rest of the device. These peripherals are the Flexcomm Interface functions that include FIFO support (USART, SPI, and I2S), and the DMIC.

These wake-ups are based on peripheral FIFO levels, not directly related to peripheral DMA requests and interrupts. See Section 4.5.64 for more information.

Chapter 12: LPC5411x DMA controller

# 12.6 Register description

The DMA registers are grouped into DMA control, interrupt and status registers and DMA channel registers. DMA transfers are controlled by a set of three registers per channel, the CFG[0:19], CTRLSTAT[0:19], and XFERCFG[0:19] registers.

The reset value reflects the data stored in used bits only. It does not include the content of reserved bits.

Table 183. Register overview: DMA controller (base address 0x4008 2000)

Name	Access	Offset	Description	Reset value	Section
Global control and	status regi	sters	· ·		
CTRL	R/W	0x000	DMA control.	0x0	12.6.1
INTSTAT	RO	0x004	Interrupt status.	0x0	12.6.2
SRAMBASE	R/W	0x008	SRAM address of the channel configuration table.	0x0	12.6.3
Shared registers					
ENABLESET0	R/W	0x020	Channel Enable read and Set for all DMA channels.	0x0	12.6.4
ENABLECLR0	WO	0x028	Channel Enable Clear for all DMA channels.	NA	12.6.5
ACTIVE0	RO	0x030	Channel Active status for all DMA channels.	0x0	12.6.6
BUSY0	RO	0x038	Channel Busy status for all DMA channels.	0x0	12.6.7
ERRINT0	R/W	0x040	Error Interrupt status for all DMA channels.	0x0	12.6.8
INTENSET0	R/W	0x048	Interrupt Enable read and Set for all DMA channels.	0x0	12.6.9
INTENCLR0	WO	0x050	Interrupt Enable Clear for all DMA channels.	NA	12.6.10
INTA0	R/W	0x058	Interrupt A status for all DMA channels.	0x0	12.6.11
INTB0	R/W	0x060	Interrupt B status for all DMA channels.	0x0	12.6.12
SETVALID0	WO	0x068	Set ValidPending control bits for all DMA channels.	NA	12.6.13
SETTRIG0	WO	0x070	Set Trigger control bits for all DMA channels.	NA	12.6.14
ABORT0	WO	0x078	Channel Abort control for all DMA channels.	NA	12.6.15
Channel 0 registers	s			,	1
CFG0	R/W	0x400	Configuration register for DMA channel 0.	0x0	12.6.16
CTLSTAT0	RO	0x404	Control and status register for DMA channel 0.	0x0	12.6.17
XFERCFG0	R/W	0x408	Transfer configuration register for DMA channel 0.	0x0	12.6.18
Channel 1 registers	S				
CFG1	R/W	0x410	Configuration register for DMA channel 1.	0x0	12.6.16
CTLSTAT1	RO	0x414	Control and status register for DMA channel 1.	0x0	12.6.17
XFERCFG1	R/W	0x418	Transfer configuration register for DMA channel 1.	0x0	12.6.18
Channel 2 registers	S				
CFG2	R/W	0x420	Configuration register for DMA channel 2.	0x0	12.6.16
CTLSTAT2	RO	0x424	Control and status register for DMA channel 2.	0x0	12.6.17
XFERCFG2	R/W	0x428	Transfer configuration register for DMA channel 2.	0x0	12.6.18
Channel 3 registers	s				
CFG3	R/W	0x430	Configuration register for DMA channel 3.	0x0	12.6.16
CTLSTAT3	RO	0x434	Control and status register for DMA channel 3.	0x0	12.6.17
XFERCFG3	R/W	0x438	Transfer configuration register for DMA channel 3.	0x0	12.6.18

### Chapter 12: LPC5411x DMA controller

Table 183. Register overview: DMA controller (base address 0x4008 2000)

Name	Access	Offset	Description	Reset value	Section
Channel 4 registers	5				
CFG4	R/W	0x440	Configuration register for DMA channel 4.	0x0	12.6.16
CTLSTAT4	RO	0x444	Control and status register for DMA channel 4.	0x0	12.6.17
XFERCFG4	R/W	0x448	Transfer configuration register for DMA channel 4.	0x0	12.6.18
Channel 5 registers	6				
CFG5	R/W	0x450	Configuration register for DMA channel 5.	0x0	12.6.16
CTLSTAT5	RO	0x454	Control and status register for DMA channel 5.	0x0	12.6.17
XFERCFG5	R/W	0x458	Transfer configuration register for DMA channel 5.	0x0	12.6.18
Channel 6 registers	6				
CFG6	R/W	0x460	Configuration register for DMA channel 6.	0x0	12.6.16
CTLSTAT6	RO	0x464	Control and status register for DMA channel 6.	0x0	12.6.17
XFERCFG6	R/W	0x468	Transfer configuration register for DMA channel 6.	0x0	12.6.18
Channel 7 registers	3		, ,	I	
CFG7	R/W	0x470	Configuration register for DMA channel 7.	0x0	12.6.16
CTLSTAT7	RO	0x474	Control and status register for DMA channel 7.	0x0	12.6.17
XFERCFG7	R/W	0x478	Transfer configuration register for DMA channel 7.	0x0	12.6.18
Channel 8 registers	3				
CFG8	R/W	0x480	Configuration register for DMA channel 8.	0x0	12.6.16
CTLSTAT8	RO	0x484	Control and status register for DMA channel 8.	0x0	12.6.17
XFERCFG8	R/W	0x488	Transfer configuration register for DMA channel 8.	0x0	12.6.18
Channel 9 registers	3				
CFG9	R/W	0x490	Configuration register for DMA channel 9.	0x0	12.6.16
CTLSTAT9	RO	0x494	Control and status register for DMA channel 9.	0x0	12.6.17
XFERCFG9	R/W	0x498	Transfer configuration register for DMA channel 9.	0x0	12.6.18
Channel 10 registe	rs	- I			
CFG10	R/W	0x4A0	Configuration register for DMA channel 10.	0x0	12.6.16
CTLSTAT10	RO	0x4A4	Control and status register for DMA channel 10.	0x0	12.6.17
XFERCFG10	R/W	0x4A8	Transfer configuration register for DMA channel 10.	0x0	12.6.18
Channel 11 register	rs	-	1	1	-
CFG11	R/W	0x4B0	Configuration register for DMA channel 11.	0x0	12.6.16
CTLSTAT11	RO	0x4B4	Control and status register for DMA channel 11.	0x0	12.6.17
XFERCFG11	R/W	0x4B8	Transfer configuration register for DMA channel 11.	0x0	12.6.18
Channel 12 registe	rs	-		1	
CFG12	R/W	0x4C0	Configuration register for DMA channel 12.	0x0	12.6.16
CTLSTAT12	RO	0x4C4	Control and status register for DMA channel 12.	0x0	12.6.17
XFERCFG12	R/W	0x4C8	Transfer configuration register for DMA channel 12.	0x0	12.6.18
Channel 13 registe	rs				,
CFG13	R/W	0x4D0	Configuration register for DMA channel 13.	0x0	12.6.16
CTLSTAT13	RO	0x4D4	Control and status register for DMA channel 13.	0x0	12.6.17
XFERCFG13	R/W	0x4D8	Transfer configuration register for DMA channel 13.	0x0	12.6.18
Channel 14 registe	rs				

### Chapter 12: LPC5411x DMA controller

Table 183. Register overview: DMA controller (base address 0x4008 2000)

Name	Access	Offset	Description	Reset value	Section
CFG14	R/W	0x4E0	Configuration register for DMA channel 14.	0x0	12.6.16
CTLSTAT14	RO	0x4E4	Control and status register for DMA channel 14.	0x0	12.6.17
XFERCFG14	R/W	0x4E8	Transfer configuration register for DMA channel 14.	0x0	12.6.18
Channel 15 regist	ters			'	
CFG15	R/W	0x4F0	Configuration register for DMA channel 15.	0x0	12.6.16
CTLSTAT15	RO	0x4F4	Control and status register for DMA channel 15.	0x0	12.6.17
XFERCFG15	R/W	0x4F8	Transfer configuration register for DMA channel 15.	0x0	12.6.18
Channel 16 regist	ters				
CFG16	R/W	0x500	Configuration register for DMA channel 16.	0x0	12.6.16
CTLSTAT16	RO	0x504	Control and status register for DMA channel 16.	0x0	12.6.17
XFERCFG16	R/W	0x508	Transfer configuration register for DMA channel 16.	0x0	12.6.18
Channel 17 regist	ters				
CFG17	R/W	0x510	Configuration register for DMA channel 17.	0x0	12.6.16
CTLSTAT17	RO	0x514	Control and status register for DMA channel 17.	0x0	12.6.17
XFERCFG17	R/W	0x518	Transfer configuration register for DMA channel 17.	0x0	12.6.18
Channel 18 regist	ters				
CFG18	R/W	0x520	Configuration register for DMA channel 18.	0x0	12.6.16
CTLSTAT18	RO	0x524	Control and status register for DMA channel 18.	0x0	12.6.17
XFERCFG18	R/W	0x528	Transfer configuration register for DMA channel 18.	0x0	12.6.18
Channel 19 regist	ters				
CFG19	R/W	0x530	Configuration register for DMA channel 19.	0x0	12.6.16
CTLSTAT19	RO	0x534	Control and status register for DMA channel 19.	0x0	12.6.17
XFERCFG19	R/W	0x538	Transfer configuration register for DMA channel 19.	0x0	12.6.18

#### Chapter 12: LPC5411x DMA controller

# 12.6.1 Control register

The CTRL register contains global the control bit for a enabling the DMA controller.

Table 184. Control register (CTRL, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset value
0	ENABLE		DMA controller master enable.	0x0
		0	Disabled. The DMA controller is disabled. This clears any triggers that were asserted at the point when disabled, but does not prevent re-triggering when the DMA controller is re-enabled.	
		1	Enabled. The DMA controller is enabled.	
31:1	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 12.6.2 Interrupt Status register

The Read-Only INTSTAT register provides an overview of DMA status. This allows quick determination of whether any enabled interrupts are pending. Details of which channels are involved are found in the interrupt type specific registers.

Table 185. Interrupt Status register (INTSTAT, offset 0x004) bit description

Bit	Symbol	Value	Description	Reset value
0	-	-	Reserved. Read value is undefined, only zero should be written.	NA
1	ACTIVEINT		Summarizes whether any enabled interrupts (other than error interrupts) are pending.	0x0
		0	Not pending. No enabled interrupts are pending.	
		1	Pending. At least one enabled interrupt is pending.	
2	ACTIVEERRINT		Summarizes whether any error interrupts are pending.	0x0
		0	Not pending. No error interrupts are pending.	
		1	Pending. At least one error interrupt is pending.	
31:3	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 12.6.3 SRAM Base address register

The SRAMBASE register must be configured with an address (preferably in on-chip SRAM) where DMA descriptors will be stored. Software must set up the descriptors for those DMA channels that will be used in the application.

Table 186. SRAM Base address register (SRAMBASE, offset 0x008) bit description

Bit	Symbol	Description	Reset value
8:0	-	Reserved. Read value is undefined, only zero should be written.	NA
31:9	OFFSET	Address bits 31:9 of the beginning of the DMA descriptor table. For 18 channels, the table must begin on a 512 byte boundary.	0x0

Each DMA channel has an entry for the channel descriptor in the SRAM table. The values for each channel start at the address offsets found in <u>Table 187</u>. Only the descriptors for channels defined at extraction are used. The contents of each channel descriptor are described in <u>Table 179</u>.

Table 187. Channel descriptor map

Descriptor	Table offset
Channel descriptor for DMA channel 0	0x000
Channel descriptor for DMA channel 1	0x010
Channel descriptor for DMA channel 2	0x020
Channel descriptor for DMA channel 3	0x030
Channel descriptor for DMA channel 4	0x040
Channel descriptor for DMA channel 5	0x050
Channel descriptor for DMA channel 6	0x060
Channel descriptor for DMA channel 7	0x070
Channel descriptor for DMA channel 8	0x080
Channel descriptor for DMA channel 9	0x090
Channel descriptor for DMA channel 10	0x0A0
Channel descriptor for DMA channel 11	0x0B0
Channel descriptor for DMA channel 12	0x0C0
Channel descriptor for DMA channel 13	0x0D0
Channel descriptor for DMA channel 14	0x0E0
Channel descriptor for DMA channel 15	0x0F0
Channel descriptor for DMA channel 16	0x100
Channel descriptor for DMA channel 17	0x110
Channel descriptor for DMA channel 18	0x120
Channel descriptor for DMA channel 19	0x130

# 12.6.4 Enable read and Set registers

The ENABLESET0 register determines whether each DMA channel is enabled or disabled. Disabling a DMA channel does not reset the channel in any way. A channel can be paused and restarted by clearing, then setting the Enable bit for that channel.

Reading ENABLESET0 provides the current state of all of the DMA channels represented by that register. Writing a 1 to a bit position in ENABLESET0 that corresponds to an implemented DMA channel sets the bit, enabling the related DMA channel. Writing a 0 to any bit has no effect. Enables are cleared by writing to ENABLECLR0.

Table 188. Enable read and Set register 0 (ENABLESET0, offset 0x020) bit description

Bit	Symbol	Description	Reset value
31:0	ENA	Enable for DMA channels. Bit n enables or disables DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.  0 = disabled.  1 = enabled.	0x0

# 12.6.5 Enable Clear register

The ENABLECLR0 register is used to clear the enable of one or more DMA channels. This register is write-only.

#### Chapter 12: LPC5411x DMA controller

Table 189. Enable Clear register 0 (ENABLECLR0, offset 0x028) bit description

Bit	Symbol	Description	Reset value
31:0		Writing ones to this register clears the corresponding bits in ENABLESET0. Bit n clears the channel enable bit n. The number of bits = number of DMA channels in this device. Other bits are reserved.	NA

# 12.6.6 Active status register

The ACTIVE0 register indicates which DMA channels are active at the point when the read occurs. The register is read-only.

A DMA channel is considered active when a DMA operation has been started but not yet fully completed. The Active status will persist from a DMA operation being started, until the pipeline is empty after end of the last descriptor (when there is no reload). An active channel may be aborted by software by setting the appropriate bit in one of the Abort register (see Section 12.6.15).

Table 190. Active status register 0 (ACTIVE0, offset 0x030) bit description

Bit	Symbol	Description	Reset value
31:0		Active flag for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.  0 = not active.  1 = active.	0x0

# 12.6.7 Busy status register

The BUSY0 register indicates which DMA channels is busy at the point when the read occurs. This registers is read-only.

A DMA channel is considered busy when there is any operation related to that channel in the DMA controller's internal pipeline. This information can be used after a DMA channel is disabled by software (but still active), allowing confirmation that there are no remaining operations in progress for that channel.

Table 191. Busy status register 0 (BUSY0, offset 0x038) bit description

Bit	Symbol	Description	Reset value
31:0		Busy flag for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.  0 = not busy.  1 = busy.	0x0

# 12.6.8 Error Interrupt register

The ERRINT0 register contains flags for each DMA channel's Error Interrupt. Any pending interrupt flag in the register will be reflected on the DMA interrupt output.

Reading the registers provides the current state of all DMA channel error interrupts. Writing a 1 to a bit position in ERRINT0 that corresponds to an implemented DMA channel clears the bit, removing the interrupt for the related DMA channel. Writing a 0 to any bit has no effect.

#### Chapter 12: LPC5411x DMA controller

Table 192. Error Interrupt register 0 (ERRINT0, offset 0x040) bit description

Bit	Symbol	Description	Reset value
31:0	ERR	Error Interrupt flag for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	0x0
		<ul><li>0 = error interrupt is not active.</li><li>1 = error interrupt is active.</li></ul>	

# 12.6.9 Interrupt Enable read and Set register

The INTENSET0 register controls whether the individual Interrupts for DMA channels contribute to the DMA interrupt output.

Reading the registers provides the current state of all DMA channel interrupt enables. Writing a 1 to a bit position in INTENSET0 that corresponds to an implemented DMA channel sets the bit, enabling the interrupt for the related DMA channel. Writing a 0 to any bit has no effect. Interrupt enables are cleared by writing to INTENCLR0.

Table 193. Interrupt Enable read and Set register 0 (INTENSET0, offset 0x048) bit description

Bit	Symbol	Description	Reset value
31: 0		Interrupt Enable read and set for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	0x0
		<ul><li>0 = interrupt for DMA channel is disabled.</li><li>1 = interrupt for DMA channel is enabled.</li></ul>	

# 12.6.10 Interrupt Enable Clear register

The INTENCLR0 register is used to clear interrupt enable bits in INTENSET0. The register is write-only.

Table 194. Interrupt Enable Clear register 0 (INTENCLR0, offset 0x050) bit description

Bit	Symbol	Description	Reset value
31:0		Writing ones to this register clears corresponding bits in the INTENSET0. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	NA

# 12.6.11 Interrupt A register

The IntA0 register contains the interrupt A status for each DMA channel. The status will be set when the SETINTA bit is 1 in the transfer configuration for a channel, when the descriptor becomes exhausted. Writing a 1 to a bit in this register clears the related INTA flag. Writing 0 has no effect. Any interrupt pending status in the registers will be reflected on the DMA interrupt output if it is enabled in the related INTENSET register.

Table 195. Interrupt A register 0 (INTA0, offset 0x058) bit description

Bit	Symbol	Description	Reset value
31:0	IA	Interrupt A status for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	0x0
		<ul><li>0 = the DMA channel interrupt A is not active.</li><li>1 = the DMA channel interrupt A is active.</li></ul>	

#### Chapter 12: LPC5411x DMA controller

# 12.6.12 Interrupt B register

The INTB0 register contains the interrupt B status for each DMA channel. The status will be set when the SETINTB bit is 1 in the transfer configuration for a channel, when the descriptor becomes exhausted. Writing a 1 to a bit in the register clears the related INTB flag. Writing 0 has no effect. Any interrupt pending status in this register will be reflected on the DMA interrupt output if it is enabled in the INTENSET register.

Table 196. Interrupt B register 0 (INTB0, offset 0x060) bit description

Bit	Symbol	Description	Reset value
31:0		Interrupt B status for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	0x0
		0 = the DMA channel interrupt B is not active. 1 = the DMA channel interrupt B is active.	

# 12.6.13 Set Valid register

The SETVALID0 register allows setting the Valid bit in the CTRLSTAT register for one or more DMA channels. See <u>Section 12.6.17</u> for a description of the VALID bit. This register is write-only.

The CFGVALID and SV (set valid) bits allow more direct DMA block timing control by software. Each Channel Descriptor, in a sequence of descriptors, can be validated by either the setting of the CFGVALID bit or by setting the channel's SETVALID flag. Normally, the CFGVALID bit is set. This tells the DMA that the Channel Descriptor is active and can be executed. The DMA will continue sequencing through descriptor blocks whose CFGVALID bit are set without further software intervention. Leaving a CFGVALID bit set to 0 allows the DMA sequence to pause at the Descriptor until software triggers the continuation. If, during DMA transmission, a Channel Descriptor is found with CFGVALID set to 0, the DMA checks for a previously buffered SETVALID0 setting for the channel. If found, the DMA will set the descriptor valid, clear the SV setting, and resume processing the descriptor. Otherwise, the DMA pauses until the channels SETVALID0 bit is set.

Table 197. Set Valid 0 register (SETVALID0, offset 0x068) bit description

Bit	Symbol	Description	Reset value
31:0		SETVALID control for DMA channel n. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	NA
		0 = no effect. 1 = sets the VALIDPENDING control bit for DMA channel n	

### 12.6.14 Set Trigger register

The SETTRIGO register allows setting the TRIG bit in the CTRLSTAT register for one or more DMA channel. See <u>Section 12.6.17</u> for a description of the TRIG bit, and <u>Section 12.5.1</u> for a general description of triggering. This register is write-only.

Table 198. Set Trigger 0 register (SETTRIG0, offset 0x070) bit description

Bit	Symbol	Description	Reset value
31:0		Set Trigger control bit for DMA channel 0. Bit n corresponds to DMA channel n. The number of bits = number of DMA channels in this device. Other bits are reserved.	NA
		0 = no effect. 1 = sets the TRIG bit for DMA channel n.	

UM10914

### Chapter 12: LPC5411x DMA controller

# 12.6.15 Abort register

The Abort0 register allows aborting operation of a DMA channel if needed. To abort a selected channel, the channel should first be disabled by clearing the corresponding Enable bit by writing a 1 to the proper bit ENABLECLR. Then wait until the channel is no longer busy by checking the corresponding bit in BUSY. Finally, write a 1 to the proper bit of ABORT. This prevents the channel from restarting an incomplete operation when it is enabled again. This register is write-only.

Table 199. Abort 0 register (ABORT0, offset 0x078) bit description

Bit	Symbol	Description	Reset value
31:0	ABORTCTRL	Abort control for DMA channel 0. Bit n corresponds to DMA channel n.	NA
		0 = no effect. 1 = aborts DMA operations on channel n.	

### Chapter 12: LPC5411x DMA controller

# 12.6.16 Channel configuration registers

The CFGn register contains various configuration options for DMA channel n.

See Table 201 for a summary of trigger options.

Table 200. Channel configuration registers bit description

Bit	Symbol	Value	Description	Reset value
0	PERIPHREQEN		Peripheral request Enable. If a DMA channel is used to perform a memory-to-memory move, any peripheral DMA request associated with that channel can be disabled to prevent any interaction between the peripheral and the DMA controller.	0x0
		0	Disabled. Peripheral DMA requests are disabled.	
		1	Enabled. Peripheral DMA requests are enabled.	
1	HWTRIGEN		Hardware Triggering Enable for this channel.	0x0
		0	Disabled. Hardware triggering is not used.	
		1	Enabled. Use hardware triggering.	
3:2	-	-	Reserved. Read value is undefined, only zero should be written.	NA
4	TRIGPOL		Trigger Polarity. Selects the polarity of a hardware trigger for this channel.	0x0
		0	Active low - falling edge. Hardware trigger is active low or falling edge triggered, based on TRIGTYPE.	
		1	Active high - rising edge. Hardware trigger is active high or rising edge triggered, based on TRIGTYPE.	
5	TRIGTYPE		Trigger Type. Selects hardware trigger as edge triggered or level triggered.	0x0
		0	Edge. Hardware trigger is edge triggered. Transfers will be initiated and completed, as specified for a single trigger.	
		1	Level. Hardware trigger is level triggered. Note that when level triggering without burst (BURSTPOWER = 0) is selected, only hardware triggers should be used on that channel.	
			Transfers continue as long as the trigger level is asserted. Once the trigger is deasserted, the transfer will be paused until the trigger is, again, asserted. However, the transfer will not be paused until any remaining transfers within the current BURSTPOWER length are completed.	
6	TRIGBURST		Trigger Burst. Selects whether hardware triggers cause a single or burst transfer.	0x0
		0	Single transfer. Hardware trigger causes a single transfer.	
		1	Burst transfer. When the trigger for this channel is set to edge triggered, a hardware trigger causes a burst transfer, as defined by BURSTPOWER.	
			When the trigger for this channel is set to level triggered, a hardware trigger causes transfers to continue as long as the trigger is asserted, unless the transfer is complete.	
7	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 12: LPC5411x DMA controller

Table 200. Channel configuration registers bit description

Bit	Symbol	Value	Description	Reset value
11:8	BURSTPOWER		Burst Power is used in two ways. It always selects the address wrap size when SRCBURSTWRAP and/or DSTBURSTWRAP modes are selected (see descriptions elsewhere in this register).	0x0
			When the TRIGBURST field elsewhere in this register = 1, Burst Power selects how many transfers are performed for each DMA trigger. This can be used, for example, with peripherals that contain a FIFO that can initiate a DMA operation when the FIFO reaches a certain level.	
			0000: Burst size = 1 (2 <sup>0</sup> ). 0001: Burst size = 2 (2 <sup>1</sup> ). 0010: Burst size = 4 (2 <sup>2</sup> ).	
			1010: Burst size = 1024 (2 <sup>10</sup> ). This corresponds to the maximum supported transfer count. others: not supported.	
			The total transfer length as defined in the XFERCOUNT bits in the XFERCFG register must be an even multiple of the burst size. Note that the total number of bytes transferred is: (XFERCOUNT + 1) x data width (as defined by the WIDTH field).	
13:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA
14	SRCBURSTWRAP		Source Burst Wrap. When enabled, the source data address for the DMA is "wrapped", meaning that the source address range for each burst will be the same. As an example, this could be used to read several sequential registers from a peripheral for each DMA burst, reading the same registers again for each burst.	0x0
		0	Disabled. Source burst wrapping is not enabled for this DMA channel.	
		1	Enabled. Source burst wrapping is enabled for this DMA channel.	
15	DSTBURSTWRAP		Destination Burst Wrap. When enabled, the destination data address for the DMA is "wrapped", meaning that the destination address range for each burst will be the same. As an example, this could be used to write several sequential registers to a peripheral for each DMA burst, writing the same registers again for each burst.	0x0
		0	Disabled. Destination burst wrapping is not enabled for this DMA channel.	
		1	Enabled. Destination burst wrapping is enabled for this DMA channel.	1
18:16	CHPRIORITY		Priority of this channel when multiple DMA requests are pending.	0x0
			Eight priority levels are supported: $0x0 = \text{highest priority.}$ $0x7 = \text{lowest priority.}$	
31:19	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Table 201. Trigger setting summary

	-	•	
TrigBurst	TrigType	TrigPol	Description
0	0	0	Hardware DMA trigger is falling edge sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap.
0	0	1	Hardware DMA trigger is rising edge sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap.
0	1	0	Hardware DMA trigger is low level sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap.

### Chapter 12: LPC5411x DMA controller

Table 201. Trigger setting summary

TriaDurat	TrigType	TriaDal	Description
TrigBurst	TrigType	TrigPol	Description
0	1	1	Hardware DMA trigger is high level sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap.
1	0	0	Hardware DMA trigger is falling edge sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap, and also determines how much data is transferred for each trigger.
1	0	1	Hardware DMA trigger is rising edge sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap, and also determines how much data is transferred for each trigger.
1	1	0	Hardware DMA trigger is low level sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap, and also determines how much data is transferred for each trigger.
1	1	1	Hardware DMA trigger is high level sensitive. The BURSTPOWER field controls address wrapping if enabled via SrcBurstWrap and/or DstBurstWrap, and also determines how much data is transferred for each trigger.

# 12.6.17 Channel control and status registers

The CTLSTATn register provides status flags specific to DMA channel n. These registers are read-only.

Table 202. Channel control and Status registers bit description

Bit	Symbol	Value	Description	Reset value
0	VALIDPENDING		Valid pending flag for this channel. This bit is set when a 1 is written to the corresponding bit in the related SETVALID register when CFGVALID = 1 for the same channel.	0x0
		0	No effect. No effect on DMA operation.	
		1	Valid pending.	
1	-	-	Reserved. Read value is undefined, only zero should be written.	NA
2	TRIG		Trigger flag. Indicates that the trigger for this channel is currently set. This bit is cleared at the end of an entire transfer or upon reload when CLRTRIG = 1.	0x0
		0	Not triggered. The trigger for this DMA channel is not set. DMA operations will not be carried out.	
		1	Triggered. The trigger for this DMA channel is set. DMA operations will be carried out.	
31:3	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 12: LPC5411x DMA controller

# 12.6.18 Channel transfer configuration registers

The XFERCFGn register contains transfer related configuration information for DMA channel n. Using the Reload bit, this register can optionally be automatically reloaded when the current settings are exhausted (the full transfer count has been completed), allowing linked transfers with more than one descriptor to be performed.

See "Trigger operation detail" for details on trigger operation.

Table 203. Channel transfer configuration registers bit description

Bit	Symbol	Value	Description	Reset value
0	CFGVALID		Configuration Valid flag. This bit indicates whether the current channel descriptor is valid and can potentially be acted upon, if all other activation criteria are fulfilled.	0x0
		0	Not valid. The channel descriptor is not considered valid until validated by an associated SETVALID0 setting.	
		1	Valid. The current channel descriptor is considered valid.	
1	RELOAD		Indicates whether the channel's control structure will be reloaded when the current descriptor is exhausted. Reloading allows ping-pong and linked transfers.	0x0
		0	Disabled. Do not reload the channels' control structure when the current descriptor is exhausted.	
		1	Enabled. Reload the channels' control structure when the current descriptor is exhausted.	
2	SWTRIG		Software Trigger.	0x0
		0	Not set. When written by software, the trigger for this channel is not set. A new trigger, as defined by the HWTRIGEN, TRIGPOL, and TRIGTYPE will be needed to start the channel.	
		1	Set. When written by software, the trigger for this channel is set immediately. This feature should not be used with level triggering when TRIGBURST = 0.	
3	CLRTRIG		Clear Trigger.	0x0
		0	Not cleared. The trigger is not cleared when this descriptor is exhausted. If there is a reload, the next descriptor will be started.	
		1	Cleared. The trigger is cleared when this descriptor is exhausted.	
4	SETINTA		Set Interrupt flag A for this channel. There is no hardware distinction between interrupt A and B. They can be used by software to assist with more complex descriptor usage. By convention, interrupt A may be used when only one interrupt flag is needed.	0x0
		0	No effect.	
		1	Set. The INTA flag for this channel will be set when the current descriptor is exhausted.	
5	SETINTB		Set Interrupt flag B for this channel. There is no hardware distinction between interrupt A and B. They can be used by software to assist with more complex descriptor usage. By convention, interrupt A may be used when only one interrupt flag is needed.	0x0
		0	No effect.	
		1	Set. The INTB flag for this channel will be set when the current descriptor is exhausted.	
7:6	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 12: LPC5411x DMA controller

Table 203. Channel transfer configuration registers bit description

Bit	Symbol	Value	Description	Reset value
9:8	WIDTH		Transfer width used for this DMA channel.	0x0
		0x0	8-bit. 8-bit transfers are performed (8-bit source reads and destination writes).	
		0x1	16-bit. 6-bit transfers are performed (16-bit source reads and destination writes).	
		0x2	32-bit. 32-bit transfers are performed (32-bit source reads and destination writes).	
		0x3	Reserved. Reserved setting, do not use.	
11:10	-	-	Reserved. Read value is undefined, only zero should be written.	NA
13:12	SRCINC		Determines whether the source address is incremented for each DMA transfer.	0x0
		0x0	No increment. The source address is not incremented for each transfer. This is the usual case when the source is a peripheral device.	
		0x1	1 x width. The source address is incremented by the amount specified by Width for each transfer. This is the usual case when the source is memory.	
		0x2	2 x width. The source address is incremented by 2 times the amount specified by Width for each transfer.	
		0x3	4 x width. The source address is incremented by 4 times the amount specified by Width for each transfer.	
15:14	DSTINC		Determines whether the destination address is incremented for each DMA transfer.	0x0
		0x0	No increment. The destination address is not incremented for each transfer. This is the usual case when the destination is a peripheral device.	
		0x1	1 x width. The destination address is incremented by the amount specified by Width for each transfer. This is the usual case when the destination is memory.	
		0x2	2 x width. The destination address is incremented by 2 times the amount specified by Width for each transfer.	
		0x3	4 x width. The destination address is incremented by 4 times the amount specified by Width for each transfer.	
25:16	XFERCOUNT		Total number of transfers to be performed, minus 1 encoded.	0x0
			<b>Remark:</b> The DMA controller uses this bit field during transfer to count down. Hence, it cannot be used by software to read back the size of the transfer, for instance, in an interrupt handler.	
			0x0 = a total of 1 transfer will be performed. 0x1 = a total of 2 transfers will be performed. 	
			0x3FF = a total of 1,024 transfers will be performed.	
31:26	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# **UM10914**

## Chapter 13: LPC5411x SCTimer/PWM (SCT)

Rev. 1.2 — 30 June 2016

**User manual** 

## 13.1 How to read this chapter

The SCTimer/PWM is available on all LPC5411x devices.

**Remark:** For a detailed description of SCTimer/PWM applications and code examples, see Ref. 3 "AN11538".

#### 13.2 Features

- The SCTimer/PWM supports:
  - Eight inputs.
  - Eight outputs.
  - Ten match/capture registers.
  - Ten events.
  - Ten states.
- Counter/timer features:
  - Each SCTimer is configurable as two 16-bit counters or one 32-bit counter.
  - Counters clocked by system clock or selected input.
  - Configurable as up counters or up-down counters.
  - Configurable number of match and capture registers. Up to 10 match and capture registers total.
  - Upon match and/or an input or output transition create the following events: interrupt; stop, limit, halt the timer or change counting direction; toggle outputs; change the state.
  - Counter value can be loaded into capture register triggered by a match or input/output toggle.
- PWM features:
  - Counters can be used in conjunction with match registers to toggle outputs and create time-proportioned PWM signals. PWM waveforms can change based on the current State.
  - Up to 8 single-edge or 4 dual-edge PWM outputs with independent duty cycle and common PWM cycle length.
- Event creation features:
  - In bi-directional mode, events can be enabled based on the count direction.
  - The following conditions define an event: a counter match condition, an input (or output) condition such as an rising or falling edge or level, a combination of match and/or input/output condition.
  - Selected events can limit, halt, start, or stop a counter or change its direction.
  - Events trigger state changes, output transitions, timer captures, interrupts, and DMA transactions.


#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

- Match register 0 can be used as an automatic limit.
- In bi-directional mode, events can be enabled based on the count direction.
- Match events can be held until another qualifying event occurs.
- State control features:
  - A state is defined by events that can happen in the state while the counter is running.
  - A state changes into another state as a result of an event.
  - Each event can be assigned to one or more states.
  - State variable allows sequencing across multiple counter cycles.


## 13.3 Basic configuration

Configure the SCT as follows:

- Enable the clock to the SCTimer/PWM (SCT) in the AHBCLKCTRL1 register (Section 4.5.17) to enable the register interface and the peripheral clock.
- Clear the SCT peripheral reset using the PRESETCTRL register (Section 4.5.10).
- The SCT provides an interrupt to the NVIC, see <u>Table 2</u>.
- Use the IOCON registers to connect the SCT outputs to external pins. See Chapter 7.
- The SCT DMA request lines are connected to the DMA trigger inputs via the DMA\_ITRIG\_PINMUX registers. See <u>Section 8.6.2 "DMA trigger input mux registers 0</u> to 21".

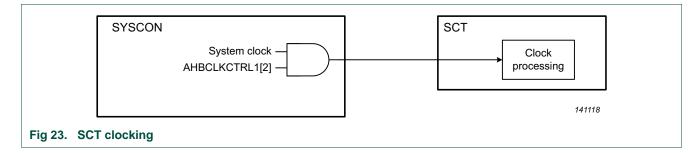

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

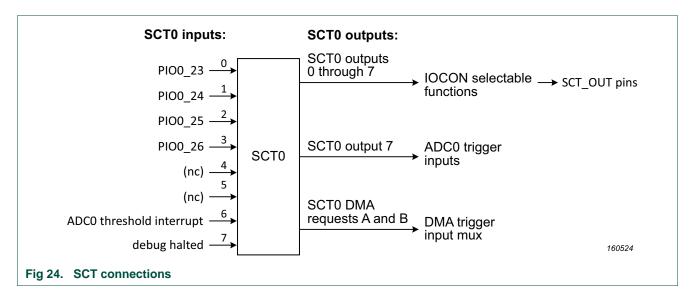

## 13.4 Pin description

See Chapter 7 to assign the SCT functions to external pins.

SCT input signals are predefined. The signals from external pins and internal signals are connected directly to the SCT inputs and not routed through IOCON.

SCT outputs can be routed to multiple places and can be connected to both a pin and an of ADC trigger at the same time.

Table 204. SCT0 pin description (inputs)

Function	Туре	Connect to	Reference
SCT0_IN[0:7]	external from pin	6 GPIO pins (PIO0_23 to PIO0_26)	Figure 24
	internal	ADC0_THCMP_IRQ, DEBUG_HALTED	Figure 24

Table 205. SCT0 pin description (outputs)

Туре	Function	Connect to	Use register	Reference
external to pin	SCT0_OUT0	PIO0_7, PIO018	IOCON register for the	See Chapter 7
	SCT0_OUT1	PIO0_1, PIO0_8, PIO0_19	related pin	
	SCT0_OUT2	PIO0_9, PIO0_29		
	SCT0_OUT3	PIO0_0, PIO0_10, PIO0_30		
	SCT0_OUT4	PIO0_13, PIO1_1, PIO1_10		
	SCT0_OUT5	PIO0_14, PIO1_2, PIO1_15		
	SCT0_OUT6	PIO0_5, PIO1_3		
	SCT0_OUT7	PIO1_4, PIO1_14		
internal	-	ADC0 trigger	SEQ_A, SEQ_B	<u>Table 429, Table 430, Table 443</u>

Recommended IOCON settings are shown in <u>Table 206</u> and <u>Table 207</u>. See <u>Chapter 7</u> for definitions of pin types.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 206: Suggested SCT input pin settings

IOCON bit(s)	Type D pin
10	I2CFILTER: Set to 1
9	I2CDRIVE: Set to 0.
8	FILTEROFF: Generally set to 1.
7	DIGIMODE: Set to 1.
6	INVERT: Set to 0.
5	I2CSLEW: Set to 1.
4:3	Not used, set to 0.
2:0	FUNC: not used, set to 0. Specific pin inputs are directly connected to the SCT.

Table 207: Suggested SCT output pin settings

IOCON bit(s)	Type D pin	Type A pin	Type I pin
10	OD: Set to 0 unless open-drain output is desired.	Same as type D.	I2CFILTER: Set to 1
9	SLEW: Set to 0.	Not used, set to 0	I2CDRIVE: Set to 0.
8	FILTEROFF: Set to 1.	Same as type D.	Same as type D.
7	DIGIMODE: Set to 1.	Same as type D.	Same as type D.
6	INVERT: Set to 0.	Same as type D.	Same as type D.
5	Not used, set to 0.	Same as type D.	I2CSLEW: Set to 1.
4:3	MODE: set to 0.	Same as type D.	Not used, set to 0.
2:0	FUNC: Must select the correct function for this peripheral.	Same as type D.	Same as type D.
General comment	A good choice for an SCT output.	A reasonable choice for an SCT output.	Not recommended for SCT outputs.

## 13.5 General description

The SCTimer/PWM is a powerful, flexible timer module capable of creating complex PWM waveforms and performing other advanced timing and control operations with minimal or no CPU intervention.

The SCT can operate as a single 32-bit counter or as two independent, 16-bit counters in uni-directional or bi-directional mode. As with most timers, the SCT supports a selection of match registers against which the count value can be compared, and capture registers where the current count value can be recorded when some pre-defined condition is detected.

An additional feature contributing to the versatility of the SCT is the concept of "events". The SCT module supports multiple separate events that can be defined by the user based on some combination of parameters including a match on one of the match registers, and/or a transition on one of the SCT inputs or outputs, the direction of count, and other factors.

Every action that the SCT block can perform occurs in direct response to one if these user-defined events without any software overhead. Any event can be enabled to:

Start, stop, or halt the counter.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

- Limit the counter which means to clear the counter in unidirectional mode or change its direction in bi-directional mode.
- Set, clear, or toggle any SCT output.
- Force a capture of the count value into any capture registers.
- Generate an interrupt of DMA request.

The SCT allows the user to group and filter events, thereby selecting some events to be enabled together while others are disabled in a given context. A group of enabled and disabled events can be described as a state, and several states with different sets of enabled and disabled events are allowed. Changing from one state to another is event driven as well and can therefore happen without software intervention. By defining these states, the SCTimer/PWM provides the means to run entire state machines in hardware with any desired level of complexity to accomplish complex waveform and timing tasks.

In a simple system such as a classical timer/counter with capture and match capabilities. all events that could cause the timer to capture the timer value or toggle a match output are enabled and remain enabled at all times while the counter is running. In this case, no events are filtered and the system is described by one state that does not change. This is the default configuration of the SCT.


In a more complex system, two states could be set up that allow some events in one state and not in the other. An event itself, enabled in both states, can then be used, to move from one state to the other and back while filtering out events in either state. In such a two-state system different waveforms at the SCT output can be created depending on the event history. Changing between states is event-driven and happens without any intervention by the CPU.


Formally, the SCTimer/PWM can be programmed as state machine generator. The ability to perform switching between groups of events provides the SCT the unique capability to be utilized as a highly complex State Machine engine. Events identify the occurrence of conditions that warrant state changes and determine the next state to move to. This provides an extremely powerful control tool - particularly when the SCT inputs and outputs are connected to other on-chip resources (such as ADC triggers, other timers etc.) in addition to general-purpose I/O.

In addition to events and states, the SCTimer/PWM provides other enhanced features:

- Four alternative clocking modes including a fully asynchronous mode.
- Selection of any SCT input as a clock source or a clock gate.
- Capability of selecting a "greater-than-or-equal-to" match condition for the purpose of event generation.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

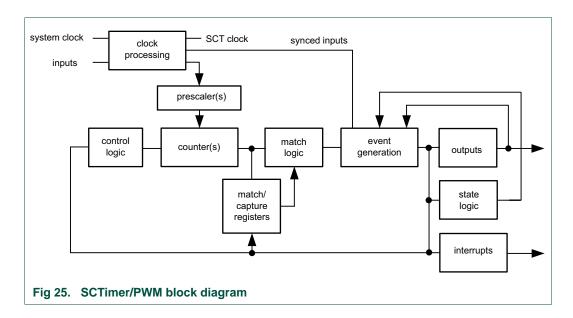

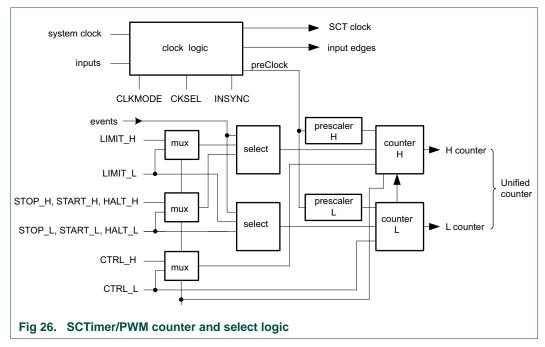

**Remark:** In this chapter, the term bus error indicates an SCT response that makes the processor take an exception.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

## 13.6 Register description

The register addresses of the SCTimer/PWM are shown in <u>Table 208</u>. For most of the SCT registers, the register function depends on the setting of certain other register bits:

- The UNIFY bit in the CONFIG register determines whether the SCT is used as one 32-bit register (for operation as one 32-bit counter/timer) or as two 16-bit counter/timers named L and H. The setting of the UNIFY bit is reflected in the register map:
  - UNIFY = 1: Only one register is used (for operation as one 32-bit counter/timer).
  - UNIFY = 0: Access the L and H registers by a 32-bit read or write operation or can be read or written to individually (for operation as two 16-bit counter/timers).

Typically, the UNIFY bit is configured by writing to the CONFIG register before any other registers are accessed.

- 2. The REGMODEn bits in the REGMODE register determine whether each set of Match/Capture registers uses the match or capture functionality:
  - REGMODEn = 0: Registers operate as match and reload registers.
  - REGMODEn = 1: Registers operate as capture and capture control registers.

Table 208. Register overview: SCTimer/PWM (base address 0x4008 5000)

Name	Access	Offset	Description	Reset value	Section
CONFIG	R/W	0x000	SCT configuration register	0x0000 7E00	13.6.2
CTRL	R/W	0x004	SCT control register	0x0004 0004	13.6.3
CTRL_L	R/W	0x004	SCT control register low counter 16-bit	0x0004 0004	13.6.3
CTRL_H	R/W	0x006	SCT control register high counter 16-bit	0x0004 0004	13.6.3
LIMIT	R/W	0x008	SCT limit event select register	0x0	13.6.4
LIMIT_L	R/W	0x008	SCT limit event select register low counter 16-bit	0x0	13.6.4
LIMIT_H	R/W	0x00A	SCT limit event select register high counter 16-bit	0x0	13.6.4
HALT	R/W	0x00C	SCT halt event select register	0x0	13.6.5
HALT_L	R/W	0x00C	SCT halt event select register low counter 16-bit	0x0	13.6.5
HALT_H	R/W	0x00E	SCT halt event select register high counter 16-bit	0x0	13.6.5
STOP	R/W	0x010	SCT stop event select register	0x0	13.6.6
STOP_L	R/W	0x010	SCT stop event select register low counter 16-bit	0x0	13.6.6
STOP_H	R/W	0x012	SCT stop event select register high counter 16-bit	0x0	13.6.6
START	R/W	0x014	SCT start event select register	0x0	13.6.7
START_L	R/W	0x014	SCT start event select register low counter 16-bit	0x0	13.6.7
START_H	R/W	0x016	SCT start event select register high counter 16-bit	0x0	13.6.7
COUNT	R/W	0x040	SCT counter register	0x0	13.6.8
COUNT_L	R/W	0x040	SCT counter register low counter 16-bit	0x0	13.6.8
COUNT_H	R/W	0x042	SCT counter register high counter 16-bit	0x0	13.6.8
STATE	R/W	0x044	SCT state register	0x0	13.6.9
STATE_L	R/W	0x044	SCT state register low counter 16-bit	0x0	13.6.9
STATE_H	R/W	0x046	SCT state register high counter 16-bit	0x0	13.6.9
INPUT	RO	0x048	SCT input register	0x0	13.6.10
REGMODE	R/W	0x04C	SCT match/capture mode register	0x0	13.6.11

UM10914

All information provided in this document is subject to legal disclaimers.

## Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 208. Register overview: SCTimer/PWM (base address 0x4008 5000) ...continued

Name	Access	Offset	Description	Reset value	Section
REGMODE_L	R/W	0x04C	SCT match/capture mode register low counter 16-bit	0x0	13.6.11
REGMODE_H	R/W	0x04E	SCT match/capture registers mode register high counter 16-bit	0x0	13.6.11
OUTPUT	R/W	0x050	SCT output register	0x0	13.6.12
OUTPUTDIRCTRL	R/W	0x054	SCT output counter direction control register	0x0	13.6.13
RES	R/W	0x058	SCT conflict resolution register	0x0	13.6.14
DMAREQ0	R/W	0x05C	SCT DMA request 0 register	0x0	13.6.15
DMAREQ1	R/W	0x060	SCT DMA request 1 register	0x0	13.6.15
EVEN	R/W	0x0F0	SCT event interrupt enable register	0x0	13.6.16
EVFLAG	R/W	0x0F4	SCT event flag register	0x0	13.6.17
CONEN	R/W	0x0F8	SCT conflict interrupt enable register	0x0	13.6.18
CONFLAG	R/W	0x0FC	SCT conflict flag register	0x0	13.6.19
MATCH0 to MATCH9	R/W	0x100 to 0x124	SCT match value register of match channels 0 to 9; REGMODE0 to REGMODE9 = 0	0x0	13.6.20
MATCH0_L to MATCH9_L	R/W	0x100 to 0x124	SCT match value register of match channels 0 to 9; low counter 16-bit; REGMODE0_L to REGMODE9_L = 0	0x0	13.6.20
MATCH0_H to MATCH9_H	R/W	0x102 to 0x126	SCT match value register of match channels 0 to 9; high counter 16-bit; REGMODE0_H to REGMODE9_H = 0	0x0	13.6.20
CAP0 to CAP9	R/W	0x100 to 0x124	SCT capture register of capture channel 0 to 9; REGMODE0 to REGMODE9 = 1	0x0	13.6.21
CAP0_L to CAP9_L	R/W	0x100 to 0x124	SCT capture register of capture channel 0 to 9; low counter 16-bit; REGMODE0_L to REGMODE9_L = 1	0x0	13.6.21
CAP0_H to CAP9_H	R/W	0x102 to 0x126	SCT capture register of capture channel 0 to 9; high counter 16-bit; REGMODE0_H to REGMODE9_H = 1	0x0	13.6.21
MATCHREL0 to MATCHREL9	R/W	0x200 to 0x224	SCT match reload value register 0 to 9; REGMODE0 = 0 to REGMODE9 = 0	0x0	13.6.22
MATCHRELO_L to MATCHREL9_L	R/W	0x200 to 0x224	SCT match reload value register 0 to 9; low counter 16-bit; REGMODE0_L = 0 to REGMODE9_L = 0	0x0	13.6.22
MATCHRELO_H to MATCHREL9_H	R/W	0x202 to 0x226	SCT match reload value register 0 to 9; high counter 16-bit; REGMODE0_H = 0 to REGMODE9_H = 0	0x0	13.6.22
CAPCTRL0 to CAPCTRL9	R/W	0x200 to 0x224	SCT capture control register 0 to 9; REGMODE0 = 1 to REGMODE9 = 1	0x0	13.6.23
CAPCTRL0_L to CAPCTRL9_L	R/W	0x200 to 0x224	SCT capture control register 0 to 9; low counter 16-bit; REGMODE0_L = 1 to REGMODE9_L = 1	0x0	13.6.23
CAPCTRL0_H to CAPCTRL9_H	R/W	0x202 to 0x226	SCT capture control register 0 to 9; high counter 16-bit; REGMODE0 = 1 to REGMODE9 = 1	0x0	13.6.23
EV0_STATE	R/W	0x300	SCT event state register 0	0x0	13.6.24
EV0_CTRL	R/W	0x304	SCT event control register 0	0x0	13.6.25
EV1_STATE	R/W	0x308	SCT event state register 1	0x0	13.6.24
EV1_CTRL	R/W	0x30C	SCT event control register 1	0x0	13.6.25
EV2_STATE	R/W	0x310	SCT event state register 2	0x0	13.6.24
EV2_CTRL	R/W	0x314	SCT event control register 2	0x0	13.6.25
EV3_STATE	R/W	0x318	SCT event state register 3	0x0	13.6.24
EV3_CTRL	R/W	0x31C	SCT event control register 3	0x0	13.6.25

UM10914

All information provided in this document is subject to legal disclaimers.

### Chapter 13: LPC5411x SCTimer/PWM (SCT)


Table 208. Register overview: SCTimer/PWM (base address 0x4008 5000) ...continued

Name	Access	Offset	Description	Reset value	Section
EV4_STATE	R/W	0x320	SCT event state register 4	0x0	13.6.24
EV4_CTRL	R/W	0x324	SCT event control register4	0x0	13.6.25
EV5_STATE	R/W	0x328	SCT event state register 5	0x0	13.6.24
EV5_CTRL	R/W	0x32C	SCT event control register 5	0x0	13.6.25
EV6_STATE	R/W	0x330	SCT event state register 6	0x0	13.6.24
EV6_CTRL	R/W	0x334	SCT event control register 6	0x0	13.6.25
EV7_STATE	R/W	0x338	SCT event state register 7	0x0	13.6.24
EV7_CTRL	R/W	0x33C	SCT event control register 7	0x0	13.6.25
EV8_STATE	R/W	0x340	SCT event state register 8	0x0	13.6.24
EV8_CTRL	R/W	0x344	SCT event control register 8	0x0	13.6.25
EV9_STATE	R/W	0x348	SCT event state register 9	0x0	13.6.24
EV9_CTRL	R/W	0x34C	SCT event control register 9	0x0	13.6.25
OUT0_SET	R/W	0x500	SCT output 0 set register	0x0	13.6.26
OUT0_CLR	R/W	0x504	SCT output 0 clear register	0x0	13.6.27
OUT1_SET	R/W	0x508	SCT output 1 set register	0x0	13.6.26
OUT1_CLR	R/W	0x50C	SCT output 1 clear register	0x0	13.6.27
OUT2_SET	R/W	0x510	SCT output 2 set register	0x0	13.6.26
OUT2_CLR	R/W	0x514	SCT output 2 clear register	0x0	13.6.27
OUT3_SET	R/W	0x518	SCT output 3 set register	0x0	13.6.26
OUT3_CLR	R/W	0x51C	SCT output 3 clear register	0x0	13.6.27
OUT4_SET	R/W	0x520	SCT output 4 set register	0x0	13.6.26
OUT4_CLR	R/W	0x524	SCT output 4 clear register	0x0	13.6.27
OUT5_SET	R/W	0x528	SCT output 5 set register	0x0	13.6.26
OUT5_CLR	R/W	0x52C	SCT output 5 clear register	0x0	13.6.27
OUT6_SET	R/W	0x530	SCT output 6 set register	0x0	13.6.26
OUT6_CLR	R/W	0x534	SCT output 6 clear register	0x0	13.6.27
OUT7_SET	R/W	0x538	SCT output 7 set register	0x0	13.6.26
OUT7_CLR	R/W	0x53C	SCT output 7 clear register	0x0	13.6.27

## 13.6.1 Register functional grouping

Most SCT registers either configure an event or select an event for a specific action of the counter (or counters) and outputs. <u>Figure 27</u> shows the registers and register bits that need to be configured for each event.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

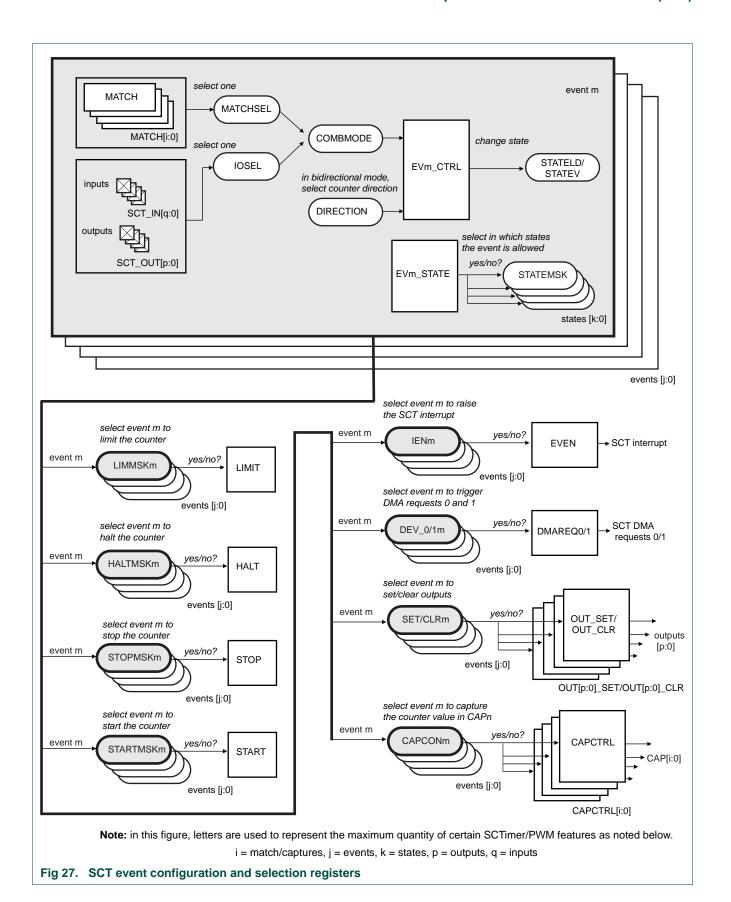

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

#### 13.6.1.1 Counter configuration and control registers

The SCT contains two registers for configuring the SCT and monitor and control its operation by software.

- The configuration register (CONFIG) configures the SCT in single, 32-bit counter mode or in dual, 16-bit counter mode, configures the clocking and clock synchronization, and configures automatic limits and the use of reload registers.
- The control register (CTRL) allows to monitor and set the counter direction, and to clear, start, stop, or halt the 32-bit counter or each individual 16-bit counter if in dual-counter mode.

#### 13.6.1.2 Event configuration registers

Each event is associated with two registers:

- One EVn\_CTRL register per event to define what triggers the event.
- One EVn\_STATE register per event to enable the event.

#### 13.6.1.3 Match and capture registers

The SCT includes a set of registers to store the SCT match or capture values. Each match register is associated with a match reload register which automatically reloads the match register at the beginning of each counter cycle. This register group includes the following registers:

- One REGMODE register per match/capture register to configure each match/capture register for either storing a match value or a capture value.
- A set of match/capture registers with each register, depending on the setting of REGMODE, either storing a match value or a counter value.
- One reload register for each match register.

#### 13.6.1.4 Event select registers for the counter operations

This group contains the registers that select the events which affect the counter. Counter actions are limit, halt, and start or stop and apply to the unified counter or to the two 16-bit counters. Also included is the counter register with the counter value, or values in the dual-counter set-up. This register group includes the following registers:

- LIMIT selects the events that limit the counter.
- START and STOP select events that start or stop the counter.
- HALT selects events that halt the counter: HALT
- COUNT contains the counter value.

The LIMIT, START, STOP, and HALT registers each contain one bit per event that selects for each event whether the event limits, stops, starts, or halts the counter, or counters in dual-counter mode.

In the dual-counter mode, the events can be selected independently for each counter.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

#### 13.6.1.5 Event select registers for setting or clearing the outputs

This group contains the registers that select the events which affect the level of each SCT output. Also included are registers to manage conflicts that occur when events try to set or clear the same output. This register group includes the following registers:

- One OUTn SET register for each output to select the events which set the output.
- One OUTn\_CLR register for each output to select the events which clear the output.
- The conflict resolution register which defines an action when more than one event try to control an output at the same time.
- The conflict flag and conflict interrupt enable registers that monitor interrupts arising from output set and clear conflicts.
- The output direction control register that interchanges the set and clear output operation caused by an event in bi-directional mode.

The OUTn\_SET and OUTn\_CLR registers each contain one bit per event that selects whether the event changes the state a given output n.

In the dual-counter mode, the events can be selected independently for each output.

#### 13.6.1.6 Event select registers for capturing a counter value

This group contains registers that select events which capture the counter value and store it in one of the CAP registers. Each capture register m has one associated CAPCTRLm register which in turn selects the events to capture the counter value.

#### 13.6.1.7 Event select register for initiating DMA transfers

One register is provided for each of the two DMA requests to select the events that can trigger a DMA request.

The DMAREQn register contain one bit for each event that selects whether this event triggers a DMA request. An additional bit enables the DMA trigger when the match registers are reloaded.

#### 13.6.1.8 Interrupt handling registers

The following registers provide flags that are set by events and select the events that when they occur request an interrupt.

- The event flag register provides one flag for each event that is set when the event occurs.
- The event flag interrupt enable register provides one bit for each event to be enabled for the SCT interrupt.

### 13.6.1.9 Registers for controlling SCT inputs and outputs by software

Two registers are provided that allow software (as opposed to events) to set input and outputs of the SCT:

- The SCT input register to read the state of any of the SCT inputs.
- The SCT output register to set or clear any of the SCT outputs or to read the state of the outputs.

UM10914

### Chapter 13: LPC5411x SCTimer/PWM (SCT)

## 13.6.2 SCT configuration register

This register configures the overall operation of the SCT. Write to this register before any other registers. Only word-writes are permitted to this register. Attempting to write a half-word value results in a bus error.

Table 209. SCT configuration register (CONFIG, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset value
0	UNIFY		SCT operation	0x0
		0	The SCT operates as two 16-bit counters named COUNTER_L and COUNTER_H.	
		1	The SCT operates as a unified 32-bit counter.	
2:1	CLKMODE		SCT clock mode	0x0
		0x0	System Clock Mode. The system clock clocks the entire SCT module including the counter(s) and counter prescalers.	
		0x1	Sampled System Clock Mode. The system clock clocks the SCT module, but the counter and prescalers are only enabled to count when the designated edge is detected on the input selected by the CKSEL field. The minimum pulse width on the selected clock-gate input is 1 bus clock period. This mode is the high-performance, sampled-clock mode.	
		0x2	SCT Input Clock Mode. The input/edge selected by the CKSEL field clocks the SCT module, including the counters and prescalers, after first being synchronized to the system clock. The minimum width of the positive and negative phases of the clock input must each be greater than one full period of the bus/system clock.	
		0x3	Asynchronous Mode. The entire SCT module is clocked directly by the input/edge selected by the CKSEL field. In this mode, the SCT outputs are switched synchronously to the SCT input clock - not the system clock. The input clock rate must be at least half the system clock rate and can be the same or faster than the system clock.	
6:3	CKSEL		SCT clock select. The specific functionality of the designated input/edge is dependent on the CLKMODE bit selection in this register.	0x0
		0x0	Rising edges on input 0.	
		0x1	Falling edges on input 0.	
		0x2	Rising edges on input 1.	
		0x3	Falling edges on input 1.	
		0x4	Rising edges on input 2.	
		0x5	Falling edges on input 2.	
		0x6	Rising edges on input 3.	
		0x7	Falling edges on input 3.	
		0x8	Rising edges on input 4.	
		0x9	Falling edges on input 4.	
		0xA	Rising edges on input 5.	
		0xB	Falling edges on input 5.	
		0xC	Rising edges on input 6.	
		0xD	Falling edges on input 6.	
		0xE	Rising edges on input 7.	
		0XF	Falling edges on input 7.	

### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 209. SCT configuration register (CONFIG, offset 0x000) bit description ...continued

Bit	Symbol	Value	Description	Reset value
7	NORELAOD_L	-	A 1 in this bit prevents the lower match registers from being reloaded from their respective reload registers. Setting this bit eliminates the need to write to the reload registers MATCHREL if the match values are fixed. Software can write to set or clear this bit at any time. This bit applies to both the higher and lower registers when the UNIFY bit is set.	0x0
8	NORELOAD_H	-	A 1 in this bit prevents the higher match registers from being reloaded from their respective reload registers. Setting this bit eliminates the need to write to the reload registers MATCHREL if the match values are fixed. Software can write to set or clear this bit at any time. This bit is not used when the UNIFY bit is set.	0x0
12:9	INSYNC	-	Synchronization for input N (bit 9 = input 0, bit 10 = input 1,, bit 12 = input 3); all other bits are reserved. A 1 in one of these bits subjects the corresponding input to synchronization to the SCT clock, before it is used to create an event. This synchronization injects a two SCT-clock delay in the input path. Clearing this bit bypasses synchronization on the corresponding input.	0xF
			This bit may be cleared for faster input response time if both of the following conditions are met (for all Clock Modes):  The corresponding input is already synchronous to the SCT clock.	
			The SCT clock frequency does not exceed 100 MHz.	
			Note: The SCT clock is the bus/system clock for CKMODE 0-2 or the selected, asynchronous input clock for CKMODE3.	
			Alternatively, for CKMODE2 only, it is also allowable to bypass synchronization if both of the following conditions are met:	
			The corresponding input is synchronous to the designated CKMODE2 input clock.	
			The CKMODE2 input clock frequency is less than one-third the frequency of the bus/system clock.	
16:13	-	-	Reserved.	-
17	AUTOLIMIT_L	-	This bit applies to the lower registers when the UNIFY bit = 0, and both the higher and lower registers when the UNIFY bit is set. Software can write to set or clear this bit at any time.	0x0
			A one in this bit causes a match on match register 0 to be treated as a de-facto LIMIT condition without the need to define an associated event.	
			As with any LIMIT event, this automatic limit causes the counter to be cleared to zero in unidirectional mode or to change the direction of count in bi-directional mode.	
18	AUTOLIMIT_H	-	This bit applies to the upper registers when the UNIFY bit = 0, and is not used when the UNIFY bit is set. Software can write to set or clear this bit at any time.	0x0
			A one in this bit will cause a match on match register 0 to be treated as a de-facto LIMIT condition without the need to define an associated event.	
			As with any LIMIT event, this automatic limit causes the counter to be cleared to zero in unidirectional mode or to change the direction of count in bi-directional mode.	
31:19	-	-	Reserved	-

## 13.6.3 SCT control register

If bit UNIFY = 1 in the CONFIG register, only the \_L bits are used.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

If bit UNIFY = 0 in the CONFIG register, this register can be written to as two registers CTRL\_L and CTRL\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

All bits in this register can be written to when the counter is stopped or halted. When the counter is running, the only bits that can be written are STOP or HALT. (Other bits can be written in a subsequent write after HALT is set to 1.)

**Remark:** If CLKMODE = 0x3 is selected, wait at least 12 system clock cycles between a write access to the H, L or unified version of this register and the next write access. This restriction does not apply when writing to the HALT bit or bits and then writing to the CTRL register again to restart the counters - for example because software must update the MATCH register, which is only allowed when the counters are halted.

**Remark:** If the SCTimer/PWM is operating as two 16-bit counters, events can only modify the state of the outputs when neither counter is halted. This is true regardless of what triggered the event.

Table 210. SCT control register (CTRL, offset 0x004) bit description

Bit	Symbol	Value	Description	Reset value
0	DOWN_L	-	This read-only bit is 1 when the L or unified counter is counting down. Hardware sets this bit when the counter is counting up, counter limit occurs, and BIDIR = 1.Hardware clears this bit when the counter is counting down and a limit condition occurs or when the counter reaches 0.	0x0
1	STOP_L	-	When this bit is 1 and HALT is 0, the L or unified counter does not run, but I/O events related to the counter can occur. If a designated start event occurs, this bit is cleared and counting resumes.	0x0
2	HALT_L	-	When this bit is 1, the L or unified counter does not run and no events can occur. A reset sets this bit. When the HALT_L bit is one, the STOP_L bit is cleared. It is possible to remove the halt condition while keeping the SCT in the stop condition (not running) with a single write to this register to simultaneously clear the HALT bit and set the STOP bit.	0x1
			<b>Remark:</b> Once set, only software can clear this bit to restore counter operation. This bit is set on reset.	
3	CLRCTR_L	-	When the counter halted (not just stopped), writing a 1 to this bit will clear the L or unified counter. This bit always reads as 0.	0x0
4	BIDIR_L		L or unified counter direction select	0x0
		0	Up. The counter counts up to a limit condition, then is cleared to zero.	
		1	Up-down. The counter counts up to a limit, then counts down to a limit condition or to 0.	
12:5	PRE_L	-	Specifies the factor by which the SCT clock is prescaled to produce the L or unified counter clock. The counter clock is clocked at the rate of the SCT clock divided by PRE_L+1.	0x0
			<b>Remark:</b> Clear the counter (by writing a 1 to the CLRCTR bit) whenever changing the PRE value.	
15:13	-	-	Reserved	-
16	DOWN_H	-	This read-only bit is 1 when the H counter is counting down. Hardware sets this bit when the counter is counting, a counter limit condition occurs, and BIDIR is 1. Hardware clears this bit when the counter is counting down and a limit condition occurs or when the counter reaches 0.	0x0

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 210. SCT control register (CTRL, offset 0x004) bit description

Bit	Symbol	Value	Description	Reset value
17	STOP_H	-	When this bit is 1 and HALT is 0, the H counter does not, run but I/O events related to the counter can occur. If such an event matches the mask in the Start register, this bit is cleared and counting resumes.	0x0
18	HALT_H	-	When this bit is 1, the H counter does not run and no events can occur. A reset sets this bit. When the HALT_H bit is one, the STOP_H bit is cleared.	0x1
			It is possible to remove the halt condition while keeping the SCT in the stop condition (not running) with a single write to this register to simultaneously clear the HALT bit and set the STOP bit.	
			<b>Remark:</b> Once set, this bit can only be cleared by software to restore counter operation. This bit is set on reset.	
19	CLRCTR_H	-	When the counter halted (not just stopped), writing a 1 to this bit will clear the H counter. This bit always reads as 0.	0x0
20	BIDIR_H		Direction select	0x0
		0	The H counter counts up to its limit condition, then is cleared to zero.	
		1	The H counter counts up to its limit, then counts down to a limit condition or to 0.	
28:21	PRE_H	-	Specifies the factor by which the SCT clock is prescaled to produce the H counter clock. The counter clock is clocked at the rate of the SCT clock divided by PRELH+1.	0x0
			<b>Remark:</b> Clear the counter (by writing a 1 to the CLRCTR bit) whenever changing the PRE value.	
31:29	-	-	Reserved	-

## 13.6.4 SCT limit event select register

The running counter can be limited by an event. When any of the events selected in this register occur, the counter is cleared to zero from its current value or changes counting direction if in bi-directional mode.

Each bit of the register is associated with a different event (bit 0 with event 0, etc.). Setting a bit causes its associated event to serve as a LIMIT event. When any limit event occurs, the counter is reset to zero in uni-directional mode or changes its direction of count in bi-directional mode and keeps running. To define the actual limiting event (a match, an I/O pin toggle, etc.), see the EVn\_CTRL register.

**Remark:** Counting up to all ones or counting down to zero is always equivalent to a limit event occurring.

Note that in addition to using this register to specify events that serve as limits, it is also possible to automatically cause a limit condition whenever a match register 0 match occurs. This eliminates the need to define an event for the sole purpose of creating a limit. The AUTOLIMITL and AUTOLIMITH bits in the configuration register enable/disable this feature (see Table 209).

If UNIFY = 1 in the CONFIG register, only the \_L bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers LIMIT\_L and LIMIT\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 211. SCT limit event select register (LIMIT, offset 0x008) bit description

Bit	Symbol	Description	Reset value
15:0		If bit n is one, event n is used as a counter limit for the L or unified counter (event $0 = bit 0$ , event $1 = bit 1,$ ). The number of bits = number of events supported by this SCT.	0x0
31:16	_	If bit n is one, event n is used as a counter limit for the H counter (event 0 = bit 16, event 1 = bit 17,). The number of bits = number of events supported by this SCT.	0x0

### 13.6.5 SCT halt event select register

The running counter can be disabled (halted) by an event. When any of the events selected in this register occur, the counter stops running and all further events are disabled.

Each bit of the register is associated with a different event (bit 0 with event 0, etc.). Setting a bit will cause its associated event to serve as a HALT event. To define the actual events that cause the counter to halt (a match, an I/O pin toggle, etc.), see the EVn\_CTRL registers.

**Remark:** A HALT condition can only be removed when software clears the HALT bit in the CTRL register (Table 210).

If UNIFY = 1 in the CONFIG register, only the L bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers HALT\_L and HALT\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

Table 212. SCT halt event select register (HALT, offset 0x00C) bit description

Bit	Symbol	Description	Reset value
15:0		If bit n is one, event n sets the HALT_L bit in the CTRL register (event 0 = bit 0, event 1 = bit 1,). The number of bits = number of events supported by this SCT.	0x0
31:16	_	If bit n is one, event n sets the HALT_H bit in the CTRL register (event 0 = bit 16, event 1 = bit 17,). The number of bits = number of events supported by this SCT.	0x0

### 13.6.6 SCT stop event select register

The running counter can be stopped by an event. When any of the events selected in this register occur, counting is suspended, that is the counter stops running and remains at its current value. Event generation remains enabled, and any event selected in the START register such as an I/O event or an event generated by the other counter can restart the counter.

This register specifies which events stop the counter. Each bit of the register is associated with a different event (bit 0 with event 0, etc.). Setting a bit will cause its associated event to serve as a STOP event. To define the actual event that causes the counter to stop (a match, an I/O pin toggle, etc.), see the EVn\_CTRL register.

**Remark:** Software can stop and restart the counter by writing to the CTRL register.

If UNIFY = 1 in the CONFIG register, only the \_L bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers STOPT\_L and STOP\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 213. SCT stop event select register (STOP, offset 0x010) bit description

Bit	Symbol	Description	Reset value
15:0	STOPMSK_L	If bit n is one, event n sets the STOP_L bit in the CTRL register (event $0 = bit 0$ , event $1 = bit 1,$ ). The number of bits = number of events supported by this SCT.	0x0
31:16	STOPMSK_H	If bit n is one, event n sets the STOP_H bit in the CTRL register (event $0 = bit 16$ , event $1 = bit 17$ ,). The number of bits = number of events supported by this SCT.	0x0

## 13.6.7 SCT start event select register

The stopped counter can be re-started by an event. When any of the events selected in this register occur, counting is restarted from the current counter value.

Each bit of the register is associated with a different event (bit 0 with event 0, etc.). Setting a bit will cause its associated event to serve as a START event. When any START event occurs, hardware will clear the STOP bit in the Control Register CTRL. Note that a START event has no effect on the HALT bit. Only software can remove a HALT condition. To define the actual event that starts the counter (an I/O pin toggle or an event generated by the other running counter in dual-counter mode), see the EVn\_CTRL register.

If UNIFY = 1 in the CONFIG register, only the \_L bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers START\_L and START\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

Table 214. SCT start event select register (START, offset 0x014) bit description

Bit	Symbol	Description	Reset value
15:0		If bit n is one, event n clears the STOP_L bit in the CTRL register (event $0 = bit 0$ , event $1 = bit 1,$ ). The number of bits = number of events supported by this SCT.	0x0
31:16	_	If bit n is one, event n clears the STOP_H bit in the CTRL register (event $0 = bit 16$ , event $1 = bit 17$ ,). The number of bits = number of events supported by this SCT.	

### 13.6.8 SCT counter register

If UNIFY = 1 in the CONFIG register, the counter is a unified 32-bit register and both the \_L and \_H bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers COUNT\_L and COUNT\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation. In this case, the L and H registers count independently under the control of the other registers.

Writing to the COUNT\_L, COUNT\_H, or unified register is only allowed when the corresponding counter is halted (HALT bits are set to 1 in the CTRL register). Attempting to write to the counter when it is not halted causes a bus error. Software can read the counter registers at any time.

Table 215. SCT counter register (COUNT, offset 0x040) bit description

Bit	Symbol	Description	Reset value
15:0	CTR_L	When UNIFY = 0, read or write the 16-bit L counter value. When UNIFY = 1, read or write the lower 16 bits of the 32-bit unified counter.	0x0
31:16	_	When UNIFY = 0, read or write the 16-bit H counter value. When UNIFY = 1, read or write the upper 16 bits of the 32-bit unified counter.	0x0

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

### 13.6.9 SCT state register

Each group of enabled and disabled events is assigned a number called the state variable. For example, a state variable with a value of 0 could have events 0, 2, and 3 enabled and all other events disabled. A state variable with the value of 1 could have events 1, 4, and 5 enabled and all others disabled.

**Remark:** The EVm\_STATE registers define which event is enabled in each group.

Software can read the state associated with a counter at any time. Writing to the STATE\_L, STATE\_H, or unified register is only allowed when the corresponding counter is halted (HALT bits are set to 1 in the CTRL register).

The state variable is the main feature that distinguishes the SCTimer/PWM from other counter/timer/ PWM blocks. Events can be made to occur only in certain states. Events, in turn, can perform the following actions:

- · set and clear outputs
- · limit, stop, and start the counter
- cause interrupts and DMA requests
- modify the state variable

The value of a state variable is completely under the control of the application. If an application does not use states, the value of the state variable remains zero, which is the default value.

A state variable can be used to track and control multiple cycles of the associated counter in any desired operational sequence. The state variable is logically associated with a state machine diagram which represents the SCT configuration. See <a href="Section 13.6.24">Section 13.6.24</a> and <a href="13.6.25">13.6.25</a> for more about the relationship between states and events.

The STATELD/STADEV fields in the event control registers of all defined events set all possible values for the state variable. The change of the state variable during multiple counter cycles reflects how the associated state machine moves from one state to the next.

If UNIFY = 1 in the CONFIG register, only the \_L bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers STATE\_L and STATE\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

Table 216. SCT state register (STATE, offset 0x044) bit description

Bit	Symbol	Description	Reset value
4:0	STATE_L	State variable.	0x0
15:5	-	Reserved.	-
20:16	STATE_H	State variable.	0x0
31:21	-	Reserved.	-

### 13.6.10 SCT input register

Software can read the state of the SCT inputs in this read-only register in slightly different forms.

**User manual** 

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

- The AIN bit displays the state of the input captured on each rising edge of the SCT clock This corresponds to a nearly direct read-out of the input but can cause spurious fluctuations in case of an asynchronous input signal.
- 2. The SIN bit displays the form of the input as it is used for event detection. This may include additional stages of synchronization, depending on what is specified for that input in the INSYNC field in the CONFIG register:
  - If the INSYNC bit is set for the input, the input is triple-synchronized to the SCT clock resulting in a stable signal that is delayed by three SCT clock cycles.
  - If the INSYNC bit is not set, the SIN bit value is identical to the AIN bit value.

Table 217. SCT input register (INPUT, offset 0x048) bit description

Bit	Symbol	Description	Reset value
0	AIN0	Input 0 state. Input 0 state on the last SCT clock edge.	-
1	AIN1	Input 1 state. Input 1 state on the last SCT clock edge.	-
2	AIN2	Input 2 state. Input 2 state on the last SCT clock edge.	-
3	AIN3	Input 3 state. Input 3 state on the last SCT clock edge.	-
15:4	AIN	Input state for the remainder of inputs implemented in this SCT.	-
16	SIN0	Input 0 state. Input 0 state following the synchronization specified by INSYNC0.	-
17	SIN1	Input 1 state. Input 1 state following the synchronization specified by INSYNC0.	-
18	SIN2	Input 2 state. Input 2 state following the synchronization specified by INSYNC0.	-
19	SIN3	Input 3 state. Input 3 state following the synchronization specified by INSYNC0.	-
31:20	SIN	Input state for the remainder of states implemented in this SCT.	-

## 13.6.11 SCT match/capture mode register

If UNIFY = 1 in the CONFIG register, only the \_L bits of this register are used. In this case, REGMODE\_H is not used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers REGMODE\_L and REGMODE\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation. The \_L bits/registers control the L match/capture registers, and the \_H bits/registers control the H match/capture registers.

The SCT contains multiple Match/Capture registers. The Register Mode register selects whether each register acts as a Match register (see Section 13.6.20) or as a Capture register (see Section 13.6.21). Each Match/Capture register has an accompanying register which functions as a Reload register when the primary register is used as a Match register (Section 13.6.22) or as a Capture-Control register when the register is used as a capture register (Section 13.6.23). REGMODE\_H is used only when the UNIFY bit is 0.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 218. SCT match/capture mode register (REGMODE, offset 0x04C) bit description

Bit	Symbol	Description	Reset value
15:0	REGMOD_L	Each bit controls one match/capture register (register 0 = bit 0, register 1 = bit 1,). The number of bits = number of match/captures supported by this SCT.	0x0
		0 = register operates as match register. 1 = register operates as capture register.	
31:16	REGMOD_H	Each bit controls one match/capture register (register 0 = bit 16, register 1 = bit 17,). The number of bits = number of match/captures supported by this SCT.	0x0
		<ul><li>0 = register operates as match registers.</li><li>1 = register operates as capture registers.</li></ul>	

### 13.6.12 SCT output register

Each SCT output has a corresponding bit in this register to allow software to control the output state directly or read its current state.

While the counter is running, outputs are set, cleared, or toggled only by events. However, using this register, software can write to any of the output registers when both counters are halted to control the outputs directly. Writing to the OUT register is only allowed when all counters (L-counter, H-counter, or unified counter) are halted (HALT bits are set to 1 in the CTRL register).

Software can read this register at any time to sense the state of the outputs.

Table 219. SCT output register (OUTPUT, offset 0x050) bit description

Bit	Symbol	Description	Reset value
15:0	OUT	Writing a 1 to bit n forces the corresponding output HIGH. Writing a 0 forces the corresponding output LOW (output 0 = bit 0, output 1 = bit 1,). The number of bits = number of outputs supported by this SCT.	0x0
31:16	-	Reserved	-

#### 13.6.13 SCT bi-directional output control register

For bi-directional mode, this register specifies (for each output) the impact of the counting direction on the meaning of set and clear operations on the output (see <u>Section 13.6.26</u> and <u>Section 13.6.27</u>). The purpose of this register is to facilitate the creation of center-aligned output waveforms without the need to define additional events.

Table 220. SCT bidirectional output control register (OUTPUTDIRCTRL, offset 0x054) bit description

Bit	Symbol	Value	Description	Reset value
1:0	SETCLR0		Set/clear operation on output 0.	0x0
		0x0	Set and clear do not depend on the direction of any counter.	
		0x1	Set and clear are reversed when counter L or the unified counter is counting down.	
		0x2	Set and clear are reversed when counter H is counting down. Do not use if UNIFY = 1.	
		0x3	Value 0x3 is reserved. Do not program this value.	

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 220. SCT bidirectional output control register (OUTPUTDIRCTRL, offset 0x054) bit description

Bit	Symbol	Value	Description	Reset value		
3:2	SETCLR1		Set/clear operation on output 1. Value 0x3 is reserved. Do not program this value.	0		
		0x0	Set and clear do not depend on the direction of any counter.			
		0x1	Set and clear are reversed when counter L or the unified counter is counting down.			
		0x2	Set and clear are reversed when counter H is counting down. Do not use if UNIFY = 1.			
5:4	SETCLR2		Set/clear operation on output 2. Value 0x3 is reserved. Do not program this value.	0		
		0x0	Set and clear do not depend on the direction of any counter.	=		
		0x1	Set and clear are reversed when counter L or the unified counter is counting down.			
		0x2	Set and clear are reversed when counter H is counting down. Do not use if UNIFY = 1.			
7:6	SETCLR3		Set/clear operation on output 3. Value 0x3 is reserved. Do not program this value.	0		
				0x0	Set and clear do not depend on the direction of any counter.	
		0x1	Set and clear are reversed when counter L or the unified counter is counting down.			
		0x2	Set and clear are reversed when counter H is counting down. Do not use if UNIFY = 1.			
9:8	SETCLR4		Set/clear operation on output 4. Value 0x3 is reserved. Do not program this value.	0		
		0x0 Set	Set and clear do not depend on the direction of any counter.	=		
		0x1	Set and clear are reversed when counter L or the unified counter is counting down.			
		0x2	Set and clear are reversed when counter H is counting down. Do not use if UNIFY = 1.			
31:10	SETCLR		Set/clear operation controls for the remainder of outputs on this SCT.	0		

<sup>[1]</sup> For as many outputs as are supported by the specific SCTimer/PWM.

## 13.6.14 SCT conflict resolution register

The output conflict resolution register specifies what action should be taken if multiple events (or even the same event) dictate that a given output should be both set and cleared at the same time.

To enable an event to toggle an output each time the event occurs, set the bits for that event in both the OUTn\_SET and OUTn\_CLR registers and set the On\_RES value to 0x3 in this register.

Table 221. SCT conflict resolution register (RES, offset 0x058) bit description

Bit	Symbol	Value	Description	Reset value
1:0	O0RES		Effect of simultaneous set and clear on output 0.	0x0
		0x0	No change.	
		0x1	Set output (or clear based on the SETCLR0 field in the OUTPUTDIRCTRL register).	
		0x2	Clear output (or set based on the SETCLR0 field).	
		0x3	Toggle output.	

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 221. SCT conflict resolution register (RES, offset 0x058) bit description ...continued

Bit	Symbol	Value	Description	Reset value
3:2	O1RES		Effect of simultaneous set and clear on output 1.	0
		0x0	No change.	
		0x1	Set output (or clear based on the SETCLR1 field in the OUTPUTDIRCTRL register).	
		0x2	Clear output (or set based on the SETCLR1 field).	
		0x3	Toggle output.	
5:4	O2RES		Effect of simultaneous set and clear on output 2.	0
		0x0	No change.	
		0x1	Set output (or clear based on the SETCLR2 field in the OUTPUTDIRCTRL register).	1
		0x2	Clear output n (or set based on the SETCLR2 field).	
		0x3	Toggle output.	
7:6	O3RES		Effect of simultaneous set and clear on output 3.	0
		0x0	No change.	
		0x1	Set output (or clear based on the SETCLR3 field in the OUTPUTDIRCTRL register).	
		0x2	Clear output (or set based on the SETCLR3 field).	
		0x3	Toggle output.	
9:8	O4RES		Effect of simultaneous set and clear on output 4.	0
		0x0	No change.	
		0x1	Set output (or clear based on the SETCLR4 field in the OUTPUTDIRCTRL register).	
		0x2	Clear output (or set based on the SETCLR4 field).	
		0x3	Toggle output.	
31:10	ORES		Resolution controls for the remainder of outputs on this SCT.	0

<sup>[1]</sup> For as many outputs as are supported by the specific SCTimer/PWM.

## 13.6.15 SCT DMA request 0 and 1 registers

The SCT includes two DMA request outputs. These registers enable the DMA requests to be triggered when a particular event occurs or when counter Match registers are loaded from its Reload registers. The DMA request registers are word-write only. Attempting to write a half-word value to these registers result in a bus error.

Event-triggered DMA requests are particularly useful for launching DMA activity to or from other peripherals under the control of the SCT.

Table 222. SCT DMA 0 request register (DMAREQ0, offset 0x05C) bit description

Bit	Symbol	Description	Reset value
15:0	DEV_0	If bit n is one, event n triggers DMA request 0 (event 0 = bit 0, event 1 = bit 1,). The number of bits = number of events supported by this SCT.	0x0
29:16	-	Reserved	-
30	DRL0	A 1 in this bit triggers DMA request 0 when it loads the MATCH_L/Unified registers from the RELOAD_L/Unified registers.	0x0
31	DRQ0	This read-only bit indicates the state of DMA Request 0.  Note that if the related DMA channel is enabled and properly set up, it is unlikely that software will see this flag, it will be cleared rapidly by the DMA service. The flag remaining set could point to an issue with DMA setup.	0x0

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 223. SCT DMA 1 request register (DMAREQ1, offset 0x060) bit description

Bit	Symbol	Description	Reset value
15:0	DEV_1	If bit n is one, event n triggers DMA request 1 (event 0 = bit 0, event 1 = bit 1,). The number of bits = number of events supported by this SCT.	0x0
29:16	-	Reserved	-
30	DRL1	A 1 in this bit triggers DMA request 1 when it loads the Match L/Unified registers from the Reload L/Unified registers.	0x0
31	DRQ1	This read-only bit indicates the state of DMA Request 1.  Note that if the related DMA channel is enabled and properly set up, it is unlikely that software will see this flag, it will be cleared rapidly by the DMA service. The flag remaining set could point to an issue with DMA setup.	0x0

### 13.6.16 SCT event interrupt enable register

This register enables flags to request an interrupt if the FLAGn bit in the SCT event flag register (Section 13.6.17) is also set.

Table 224. SCT event interrupt enable register (EVEN, offset 0x0F0) bit description

Bit	Symbol	Description	Reset value
15:0	IEN	The SCT requests an interrupt when bit n of this register and the event flag register are both one (event 0 = bit 0, event 1 = bit 1,). The number of bits = number of events supported by this SCT.	0x0
31:16	-	Reserved	-

### 13.6.17 SCT event flag register

This register records events. Writing ones to this register clears the corresponding flags and negates the SCT interrupt request if all enabled flag register bits are zero.

Table 225. SCT event flag register (EVFLAG, offset 0x0F4) bit description

Bit	Symbol	Description	Reset value
15:0		Bit n is one if event n has occurred since reset or a 1 was last written to this bit (event $0 = bit 0$ , event $1 = bit 1,$ ). The number of bits = number of events supported by this SCT.	0x0
31:16	-	Reserved	-

## 13.6.18 SCT conflict interrupt enable register

This register enables the no-change conflict events specified in the SCT conflict resolution register to generate an interrupt request.

Table 226. SCT conflict interrupt enable register (CONEN, offset 0x0F8) bit description

Bit	Symbol	Description	Reset value
15:0	NCEN	The SCT requests an interrupt when bit n of this register and the SCT conflict flag register are both one (output $0 = bit 0$ , output $1 = bit 1$ ,). The number of bits = number of outputs supported by this SCT.	0x0
31:16	-	Reserved	

#### 13.6.19 SCT conflict flag register

This register records a no-change conflict occurrence and provides details of a bus error. Writing ones to the NCFLAG bits clears the corresponding read bits and negates the SCT interrupt request if all enabled Flag bits are zero.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 227. SCT conflict flag register (CONFLAG, offset 0x0FC) bit description

Bit	Symbol	Description	Reset value
15:0	NCFLAG	Bit n is one if a no-change conflict event occurred on output n since reset or a 1 was last written to this bit (output 0 = bit 0, output 1 = bit 1,). The number of bits = number of outputs supported by this SCT.	0x0
29:16	-	Reserved.	-
30	BUSERRL	The most recent bus error from this SCT involved writing CTR L/Unified, STATE L/Unified, MATCH L/Unified, or the Output register when the L/U counter was not halted. A word write to certain L and H registers can be half successful and half unsuccessful.	0x0
31	BUSERRH	The most recent bus error from this SCT involved writing CTR H, STATE H, MATCH H, or the Output register when the H counter was not halted.	0x0

### 13.6.20 SCT match registers 0 to 9 (REGMODEn bit = 0)

Match registers are compared to the counters to help create events. When the UNIFY bit is 0, the L and H registers are independently compared to the L and H counters. When UNIFY is 1, the combined L and H registers hold a 32-bit value that is compared to the unified counter. A Match can only occur in a clock in which the counter is running (STOP and HALT are both 0).

Match registers can be read at any time. Writing to the MATCH\_L, MATCH\_H, or unified register is only allowed when the corresponding counter is halted (HALT bits are set to 1 in the CTRL register). Match events occur in the SCT clock in which the counter is (or would be) incremented to the next value. When a Match event limits its counter as described in Section 13.6.4, the value in the Match register is the last value of the counter before it is cleared to zero (or decremented if BIDIR is 1).

There is no "write-through" from Reload registers to Match registers. Before starting a counter, software can write one value to the Match register used in the first cycle of the counter and a different value to the corresponding Match Reload register used in the second cycle.

Table 228. SCT match registers 0 to 9 (MATCH[0:9], offset 0x100 (MATCH0) to 0x124 (MATCH9)) bit description (REGMODEn bit = 0)

Bit	Symbol	Description	Reset value
15:0	MATCHn_L	When UNIFY = 0, read or write the 16-bit value to be compared to the L counter. When UNIFY = 1, read or write the lower 16 bits of the 32-bit value to be compared to the unified counter.	0x0
31:16	MATCHn_H	When UNIFY = 0, read or write the 16-bit value to be compared to the H counter. When UNIFY = 1, read or write the upper 16 bits of the 32-bit value to be compared to the unified counter.	0x0

## 13.6.21 SCT capture registers 0 to 9 (REGMODEn bit = 1)

These registers allow software to record the counter values upon occurrence of the events selected by the corresponding Capture Control registers occurred.

Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 229. SCT capture registers 0 to 9 (CAP[0:9], offset 0x100 (CAP0) to 0x124 (CAP9)) bit description (REGMODEn bit = 1)

Bit	Symbol	Description	Reset value
15:0	CAPn_L	When UNIFY = 0, read the 16-bit counter value at which this register was last captured. When UNIFY = 1, read the lower 16 bits of the 32-bit value at which this register was last captured.	0x0
31:16	CAPn_H	When UNIFY = 0, read the 16-bit counter value at which this register was last captured. When UNIFY = 1, read the upper 16 bits of the 32-bit value at which this register was last captured.	0x0

### 13.6.22 SCT match reload registers 0 to 9 (REGMODEn bit = 0)

A Match register (L, H, or unified 32-bit) is loaded from its corresponding Reload register at the start of each new counter cycle, that is

- when BIDIR = 0 and the counter is cleared to zero upon reaching it limit condition.
- when BIDIR = 1 and the counter counts down to 0, unless the appropriate NORELOAD bit is set in the CFG register.

Table 230. SCT match reload registers 0 to 9 (MATCHREL[0:9], offset 0x200 (MATCHREL0) to 0x224 (MATCHREL9)) bit description (REGMODEn bit = 0)

Bit	Symbol	Description	Reset value
15:0	RELOADn_L	When UNIFY = 0, specifies the 16-bit value to be loaded into the MATCHn_L register. When UNIFY = 1, specifies the lower 16 bits of the 32-bit value to be loaded into the MATCHn register.	0x0
31:16	RELOADn_H	When UNIFY = 0, specifies the 16-bit to be loaded into the MATCHn_H register. When UNIFY = 1, specifies the upper 16 bits of the 32-bit value to be loaded into the MATCHn register.	0x0

### 13.6.23 SCT capture control registers 0 to 9 (REGMODEn bit = 1)

If UNIFY = 1 in the CONFIG register, only the \_L bits are used.

If UNIFY = 0 in the CONFIG register, this register can be written to as two registers CAPCTRLn\_L and CAPCTRLn\_H. Both the L and H registers can be read or written individually or in a single 32-bit read or write operation.

Based on a selected event, the capture registers can be loaded with the current counter value when the event occurs.

Each Capture Control register (L, H, or unified 32-bit) controls which events cause the load of corresponding Capture register from the counter.

Table 231. SCT capture control registers 0 to 9 (CAPCTRL[0:9], offset 0x200 (CAPCTRL0) to 0x224 (CAPCTRL9)) bit description (REGMODEn bit = 1)

Bit	Symbol	Description	Reset value
15:0	CAPCONn_L	If bit m is one, event m causes the CAPn_L (UNIFY = 0) or the CAPn (UNIFY = 1) register to be loaded (event 0 = bit 0, event 1 = bit 1,). The number of bits = number of match/captures supported by this SCT.	0x0
31:16	CAPCONn_H	If bit m is one, event m causes the CAPn_H (UNIFY = 0) register to be loaded (event 0 = bit 16, event 1 = bit 17,). The number of bits = number of match/captures supported by this SCT.	0x0

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

### 13.6.24 SCT event enable registers 0 to 9

Each event can be enabled in some contexts (or states) and disabled in others. Each event defined in the EV\_CTRL register has one associated event enable register that can enable or disable the event for each available state.

Each event has one associated SCT event state mask register that allow this event to happen in one or more states of the counter selected by the HEVENT bit in the corresponding EVn\_CTRL register.

An event n is disabled when its EVn\_STATE register contains all zeros, since it is masked regardless of the current state.

In simple applications that do not use states, write 0x01 to this register to enable each event in exactly one state. Since the state doesn't change (that is, the state variable always remains at its reset value of 0), writing 0x01 permanently enables this event.

Table 232. SCT event state mask registers 0 to 9 (EV[0:9]\_STATE, offsets 0x300 (EV0\_STATE) to 0x348 (EV9\_STATE)) bit description

Bit	Symbol	Description	Reset value
15:0		If bit m is one, event n happens in state m of the counter selected by the HEVENT bit $(n = \text{event number}, m = \text{state number}; \text{ state } 0 = \text{bit } 0, \text{ state } 1 = \text{bit } 1, \ldots)$ . The number of bits = number of states supported by this SCT.	0
31:16	-	Reserved.	-

## 13.6.25 SCT event control registers 0 to 9

This register defines the conditions for an event to occur based on the counter values or input and output states. Once the event is configured, it can be selected to trigger multiple actions (for example stop the counter and toggle an output) unless the event is blocked in the current state of the SCT or the counter is halted. To block a particular event from occurring, use the EV\_STATE register. To block all events for a given counter, set the HALT bit in the CTRL register or select an event to halt the counter.

An event can be programmed to occur based on a selected input or output edge or level and/or based on its counter value matching a selected match register. In bi-directional mode, events can also be enabled based on the direction of count.

When the UNIFY bit is 0, each event is associated with a particular counter by the HEVENT bit in its event control register. An event is permanently disabled when its event state mask register contains all 0s.

Each event can modify its counter STATE value. If more than one event associated with the same counter occurs in a given clock cycle, only the state change specified for the highest-numbered event among them takes place. Other actions dictated by any simultaneously occurring events all take place.

## Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 233. SCT event control register 0 to 9 (EV[0:9]\_CTRL, offset 0x304 (EV0\_CTRL) to 0x34C (EV9\_CTRL)) bit description

Bit	Symbol	Value	Description	Reset value
3:0	MATCHSEL	-	Selects the Match register associated with this event (if any). A match can occur only when the counter selected by the HEVENT bit is running.	0x0
4	HEVENT		Select L/H counter. Do not set this bit if UNIFY = 1.	0x0
		0	Selects the L state and the L match register selected by MATCHSEL.	
		1	Selects the H state and the H match register selected by MATCHSEL.	
5	OUTSEL		Input/output select	0x0
		0	Selects the inputs selected by IOSEL.	
		1	Selects the outputs selected by IOSEL.	
9:6	IOSEL	-	Selects the input or output signal number associated with this event (if any). Do not select an input in this register if CKMODE is 1x. In this case the clock input is an implicit ingredient of every event.	0x0
11:10	IOCOND		Selects the I/O condition for event n. (The detection of edges on outputs lag the conditions that switch the outputs by one SCT clock). In order to guarantee proper edge/state detection, an input must have a minimum pulse width of at least one SCT clock period .	0x0
		0x0	LOW	
		0x1	Rise	
		0x2	Fall	
		0x3	HIGH	
13:12	COMBMODE		Selects how the specified match and I/O condition are used and combined.	0x0
		0x0	OR. The event occurs when either the specified match or I/O condition occurs.	
		0x1	MATCH. Uses the specified match only.	
		0x2	IO. Uses the specified I/O condition only.	
		0x3	AND. The event occurs when the specified match and I/O condition occur simultaneously.	
14	STATELD		This bit controls how the STATEV value modifies the state selected by HEVENT when this event is the highest-numbered event occurring for that state.	0x0
		0	STATEV value is added into STATE (the carry-out is ignored).	
		1	STATEV value is loaded into STATE.	
19:15	STATEV		This value is loaded into or added to the state selected by HEVENT, depending on STATELD, when this event is the highest-numbered event occurring for that state. If STATELD and STATEV are both zero, there is no change to the STATE value.	0x0
20	MATCHMEM		If this bit is one and the COMBMODE field specifies a match component to the triggering of this event, then a match is considered to be active whenever the counter value is GREATER THAN OR EQUAL TO the value specified in the match register when counting up, LESS THEN OR EQUAL TO the match value when counting down.	0x0
			If this bit is zero, a match is only be active during the cycle when the counter is equal to the match value.	

Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 233. SCT event control register 0 to 9 (EV[0:9]\_CTRL, offset 0x304 (EV0\_CTRL) to 0x34C (EV9\_CTRL)) bit description

Bit	Symbol	Value	Description	Reset value
22:21	DIRECTION		Direction qualifier for event generation. This field only applies when the counters are operating in BIDIR mode. If BIDIR = 0, the SCT ignores this field. Value 0x3 is reserved.	0x0
		0x0	Direction independent. This event is triggered regardless of the count direction.	
		0x1	Counting up. This event is triggered only during up-counting when BIDIR = 1.	
		0x2	Counting down. This event is triggered only during down-counting when BIDIR = 1.	
31:23	-	-	Reserved	-

### 13.6.26 SCT output set registers 0 to 7

Based on a selected event, each SCT output can be set.

There is one output set register for each SCT output which selects which events can set that output. Each bit of an output set register is associated with a different event (bit 0 with event 0, etc.). A selected event can set or clear the output depending on the setting of the SETCLRn field in the OUTPUTDIRCTRL register. To define the actual event that sets the output (a match, an I/O pin toggle, etc.), see the EVn\_CTRL register.

**Remark:** If the SCTimer/PWM is operating as two 16-bit counters, events can only modify the state of the outputs when neither counter is halted. This is true regardless of what triggered the event.

Table 234. SCT output set register (OUT[0:9]\_SET, offset 0x500 (OUT0\_SET) to 0x538 (OUT7\_SET) bit description

Bit	Symbol	Description	Reset value
15:0	SET	A 1 in bit m selects event m to set output n (or clear it if SETCLRn = 0x1 or 0x2) output 0 = bit 0, output 1 = bit 1, The number of bits = number of events supported by this SCT.	0x0
		When the counter is used in bi-directional mode, it is possible to reverse the action specified by the output set and clear registers when counting down, See the OUTPUTCTRL register.	
31:16	-	Reserved	-

## 13.6.27 SCT output clear registers 0 to 7

Based on a selected event, each SCT output can be cleared.

There is one register for each SCT output which selects which events can clear that output. Each bit of an output clear register is associated with a different event (bit 0 with event 0, etc.). A selected event can clear or set the output depending on the setting of the SETCLRn field in the OUTPUTDIRCTRL register. To define the actual event that clears the output (a match, an I/O pin toggle, etc.), see the EVn\_CTRL register.

**Remark:** If the SCTimer/PWM is operating as two 16-bit counters, events can only modify the state of the outputs when neither counter is halted. This is true regardless of what triggered the event.

Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 235. SCT output clear register (OUT[0:9]\_CLR, offset 0x504 (OUT0\_CLR) to 0x53C (OUT7\_CLR)) bit description


Bit	Symbol	Description	Reset value
15:0	CLR	A 1 in bit m selects event m to clear output n (or set it if $SETCLRn = 0x1$ or $0x2$ ) event $0 = bit 0$ , event $1 = bit 1$ , The number of bits = number of events supported by this SCT.	0x0
		When the counter is used in bi-directional mode, it is possible to reverse the action specified by the output set and clear registers when counting down, See the OUTPUTCTRL register.	
31:16	-	Reserved	-

UM10914 **NXP Semiconductors** 


Chapter 13: LPC5411x SCTimer/PWM (SCT)

## 13.7 Functional description

#### **Match logic** 13.7.1

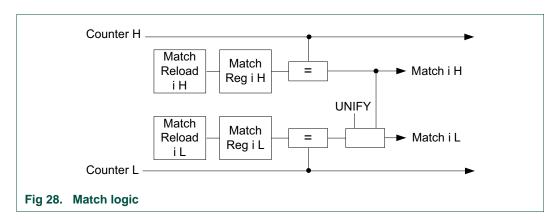


## 13.7.2 Capture logic

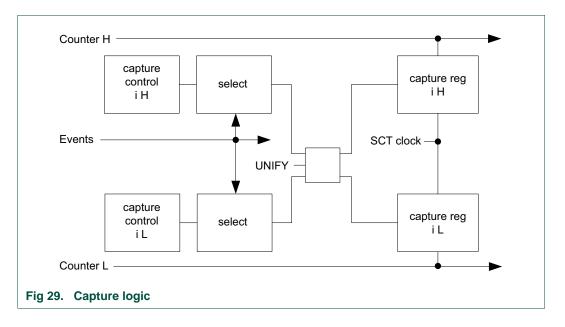

#### 13.7.3 Event selection


State variables allow control of the SCT across more than one cycle of the counter. Counter matches, input/output edges, and state values are combined into a set of general-purpose events that can switch outputs, request interrupts, and change state values.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

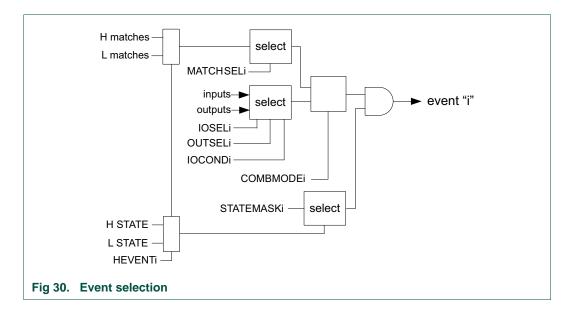

## 13.7.4 Output generation

Figure 31 shows one output slice of the SCT.

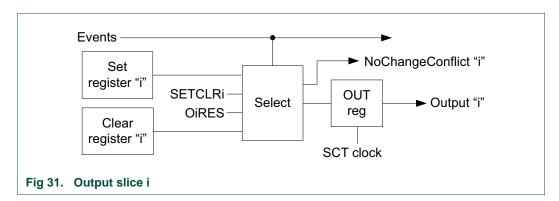

### 13.7.5 State logic

The SCT can be configured as a timer/counter with multiple programmable states. The states are user-defined through the events that can be captured in each particular state. In a multi-state SCT, the SCT can change from one state to another state when a user-defined event triggers a state change. The state change is triggered through each event's EV\_CTRL register in one of the following ways:

- The event can increment the current state number by a new value.
- The event can write a new state value.

If an event increments the state number beyond the number of available states, the SCT enters a locked state in which all further events are ignored while the counter is still running. Software must interfere to change out of this state.


### Chapter 13: LPC5411x SCTimer/PWM (SCT)

Software can capture the counter value (and potentially create an interrupt and write to all outputs) when the event moving the SCT into a locked state occurs. Later, while the SCT is in the locked state, software can read the counter again to record the time passed since the locking event and can also read the state variable to obtain the current state number

If the SCT registers an event that forces an abort, putting the SCT in a locked state can be a safe way to record the time that has passed since the abort event while no new events are allowed to occur. Since multiple states (any state number between the maximum implemented state and 31) are locked states, multiple abort or error events can be defined each incrementing the state number by a different value.

### 13.7.6 Interrupt generation

The SCT generates one interrupt to the NVIC.

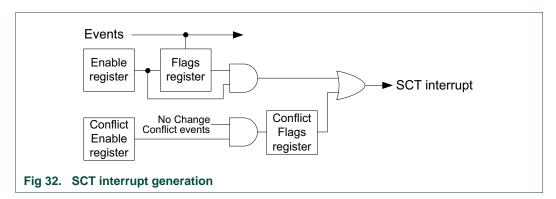

## 13.7.7 Clearing the prescaler

When enabled by a non-zero PRE field in the Control register, the prescaler acts as a clock divider for the counter, like a fractional part of the counter value. The prescaler is cleared whenever the counter is cleared or loaded for any of the following reasons:

- Hardware reset
- Software writing to the counter register
- Software writing a 1 to the CLRCTR bit in the control register
- an event selected by a 1 in the counter limit register when BIDIR = 0

When BIDIR is 0, a limit event caused by an I/O signal can clear a non-zero prescaler. However, a limit event caused by a Match only clears a non-zero prescaler in one special case as described <a href="Section 13.7.8">Section 13.7.8</a>.

A limit event when BIDIR is 1 does not clear the prescaler. Rather it clears the DOWN bit in the Control register, and decrements the counter on the same clock if the counter is enabled in that clock.

#### 13.7.8 Match vs. I/O events

Counter operation is complicated by the prescaler and by clock mode 01 in which the SCT clock is the bus clock. However, the prescaler and counter are enabled to count only when a selected edge is detected on a clock input.

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

- The prescaler is enabled when the clock mode is not 01, or when the input edge selected by the CLKSEL field is detected.
- The counter is enabled when the prescaler is enabled, and (PRELIM=0 or the prescaler is equal to the value in PRELIM).

An I/O component of an event can occur in any SCT clock when its counter HALT bit is 0. In general, a Match component of an event can only occur in a UT clock when its counter HALT and STOP bits are both 0 and the counter is enabled.

Table 236 shows when the various kinds of events can occur.

Table 236. Event conditions

COMBMODE	IOMODE	Event can occur on clock:
IO	Any	Event can occur whenever HALT = 0 (type A).
MATCH	Any	Event can occur when HALT = 0 and STOP = 0 and the counter is enabled (type C).
OR	Any	From the IO component: Event can occur whenever HALT = 0 (A).  From the match component: Event can occur when HALT = 0 and STOP = 0 and the counter is enabled (C).
AND	LOW or HIGH	Event can occur when HALT = 0 and STOP = 0 and the counter is enabled (C).
AND	RISE or FALL	Event can occur whenever HALT = 0 (A).

### 13.7.9 SCT operation

In its simplest, single-state configuration, the SCT operates as an event controlled one- or bidirectional counter. Events can be configured to be counter match events, an input or output level, transitions on an input or output pin, or a combination of match and input/output behavior. In response to an event, the SCT output or outputs can transition, or the SCT can perform other actions such as creating an interrupt or starting, stopping, or resetting the counter. Multiple simultaneous actions are allowed for each event. Furthermore, any number of events can trigger one specific action of the SCT.

An action or multiple actions of the SCT uniquely define an event. A state is defined by which events are enabled to trigger an SCT action or actions in any stage of the counter. Events not selected for this state are ignored.

In a multi-state configuration, states change in response to events. A state change is an additional action that the SCT can perform when the event occurs. When an event is configured to change the state, the new state defines a new set of events resulting in different actions of the SCT. Through multiple cycles of the counter, events can change the state multiple times and thus create a large variety of event controlled transitions on the SCT outputs and/or interrupts.

Once configured, the SCT can run continuously without software intervention and can generate multiple output patterns entirely under the control of events.

- To configure the SCT, see Section 13.7.10.
- To start, run, and stop the SCT, see Section 13.7.11.
- To configure the SCT as simple event controlled counter/timer, see <u>Section 13.7.12</u>.

## 13.7.10 Configure the SCT

To set up the SCT for multiple events and states, perform the following configuration steps:

UM10914

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

#### 13.7.10.1 Configure the counter

- Configure the L and H counters in the CONFIG register by selecting two independent 16-bit counters (L counter and H counter) or one combined 32-bit counter in the UNIFY field.
- 2. Select the SCT clock source in the CONFIG register (fields CLKMODE and CLKSEL) from any of the inputs or an internal clock.

#### 13.7.10.2 Configure the match and capture registers

- 1. Select how many match and capture registers the application uses (not more than what is available on this device):
  - In the REGMODE register, select for each of the match/capture register pairs whether the register is used as a match register or capture register.
- 2. Define match conditions for each match register selected:
  - Each match register MATCH sets one match value, if a 32-bit counter is used, or two match values, if the L and H 16-bit counters are used.
  - Each match reload register MATCHRELOAD sets a reload value that is loaded into the match register when the counter reaches a limit condition or the value 0.

#### 13.7.10.3 Configure events and event responses

- 1. Define when each event can occur in the following way in the EVn\_CTRL registers (up to 6, one register per event):
  - Select whether the event occurs on an input or output changing, on an input or output level, a match condition of the counter, or a combination of match and input/output conditions in field COMBMODE.
  - For a match condition:
    - Select the match register that contains the match condition for the event to occur. Enter the number of the selected match register in field MATCHSEL.
    - If using L and H counters, define whether the event occurs on matching the L or the H counter in field HEVENT.
  - For an SCT input or output level or transition:
    - Select the input number or the output number that is associated with this event in fields IOSEL and OUTSEL.
    - Define how the selected input or output triggers the event (edge or level sensitive) in field IOCOND.
- Define what the effect of each event is on the SCT outputs in the OUTn\_SET or OUTn\_CLR registers (up to the maximum number of outputs on this device, one register per output):
  - For each SCT output, select which events set or clear this output. More than one
    event can change the output, and each event can change multiple outputs.
- 3. Define how each event affects the counter:
  - Set the corresponding event bit in the LIMIT register for the event to set an upper limit for the counter.

When a limit event occurs in unidirectional mode, the counter is cleared to zero and begins counting up on the next clock edge.

UM10914

#### Chapter 13: LPC5411x SCTimer/PWM (SCT)

When a limit event occurs in bidirectional mode, the counter begins to count down from the current value on the next clock edge.

- Set the corresponding event bit in the HALT register for the event to halt the counter. If the counter is halted, it stops counting and no new events can occur.
   The counter operation can only be restored by clearing the HALT\_L and/or the HALT\_H bits in the CTRL register.
- Set the corresponding event bit in the STOP register for the event to stop the counter. If the counter is stopped, it stops counting. However, an event that is configured as a transition on an input/output can restart the counter.
- Set the corresponding event bit in the START register for the event to restart the counting. Only events that are defined by an input changing can be used to restart the counter.
- 4. Define which events contribute to the SCT interrupt:
  - Set the corresponding event bit in the EVEN and the EVFLAG registers to enable the event to contribute to the SCT interrupt.

#### 13.7.10.4 Configure multiple states

- 1. In the EVn\_STATE register for each event (up to the maximum number of events on this device, one register per event), select the state or states (up to 2) in which this event is allowed to occur. Each state can be selected for more than one event.
- 2. Determine how the event affects the system state:

In the EVn\_CTRL registers (up to the maximum number of events on this device, one register per event), set the new state value in the STATEV field for this event. If the event is the highest numbered in the current state, this value is either added to the existing state value or replaces the existing state value, depending on the field STATELD.

**Remark:** If there are higher numbered events in the current state, this event cannot change the state.

If the STATEV and STATELD values are set to zero, the state does not change.

#### 13.7.10.5 Miscellaneous options

- There are a certain (selectable) number of capture registers. Each capture register can be programmed to capture the counter contents when one or more events occur.
- If the counter is in bidirectional mode, the effect of set and clear of an output can be made to depend on whether the counter is counting up or down by writing to the OUTPUTDIRCTRL register.

#### 13.7.11 Run the SCT

- 1. Configure the SCT (see Section 13.7.10 "Configure the SCT").
- Write to the STATE register to define the initial state. By default the initial state is state 0.
- 3. To start the SCT, write to the CTRL register:
  - Clear the counters.
  - Clear or set the STOP\_L and/or STOP\_H bits.

UM10914

**User manual** 

## Chapter 13: LPC5411x SCTimer/PWM (SCT)

**Remark:** The counter starts counting once the STOP bit is cleared as well. If the STOP bit is set, the SCT waits instead for an event to occur that is configured to start the counter.

- For each counter, select unidirectional or bidirectional counting mode (field BIDIR\_L and/or BIDIR\_H).
- Select the prescale factor for the counter clock (CTRL register).
- Clear the HALT\_L and/or HALT\_H bit. By default, the counters are halted and no events can occur.
- 4. To stop the counters by software at any time, stop or halt the counter (write to STOP\_L and/or STOP\_H bits or HALT\_L and/or HALT\_H bits in the CTRL register).
  - When the counters are stopped, both an event configured to clear the STOP bit or software writing a zero to the STOP bit can start the counter again.
  - When the counter are halted, only a software write to clear the HALT bit can start the counter again. No events can occur.
  - When the counters are halted, software can set any SCT output HIGH or LOW directly by writing to the OUT register.

The current state can be read at any time by reading the STATE register.

To change the current state by software (that is independently of any event occurring), set the HALT bit and write to the STATE register to change the state value. Writing to the STATE register is only allowed when the counter is halted (the HALT\_L and/or HALT\_H bits are set) and no events can occur.

## 13.7.12 Configure the SCT without using states

The SCT can be used as standard counter/timer with external capture inputs and match outputs without using the state logic. To operate the SCT without states, configure the SCT as follows:

- Write zero to the STATE register (zero is the default).
- Write zero to the STATELD and STATEV fields in the EVCTRL registers for each event.
- Write 0x1 to the EVn\_STATE register of each event. Writing 0x1 enables the event.
   In effect, the event is allowed to occur in a single state which never changes while the counter is running.

## 13.7.13 SCT PWM Example


<u>Figure 33</u> shows a simple application of the SCT using two sets of match events (EV0/1 and EV3/4) to set/clear SCT output 0. The timer is automatically reset whenever it reaches the MAT0 match value.

In the initial state 0, match event EV0 sets output 0 to HIGH and match event EV1 clears output 0. The SCT input 0 is monitored: If input0 is found LOW by the next time the timer is reset(EV2), the state is changed to state 1, and EV3/4 are enabled, which create the same output but triggered by different match values. If input 0 is found HIGH by the next time the timer is reset, the associated event (EV5) causes the state to change back to state 0where the events EV0 and EV1 are enabled.

### Chapter 13: LPC5411x SCTimer/PWM (SCT)

The example uses the following SCT configuration:

- 1 input
- 1 output
- 5 match registers
- 6 events and match 0 used with autolimit function
- 2 states

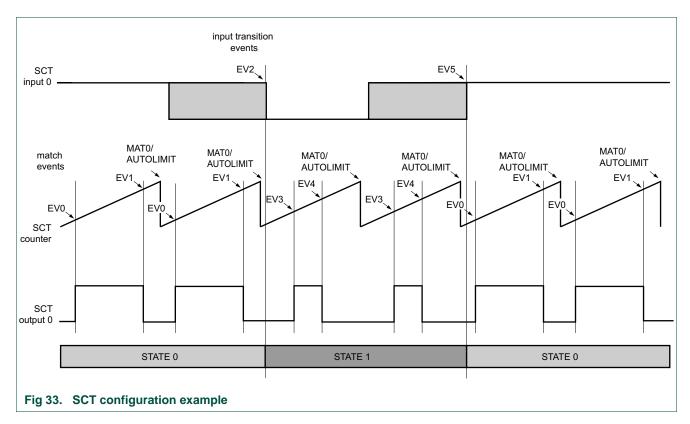

This application of the SCT uses the following configuration (all register values not listed in <u>Table 237</u> are set to their default values):

Table 237. SCT configuration example

Configuration	Registers	Setting
Counter	CONFIG	Uses one counter (UNIFY = 1).
	CONFIG	Enable the autolimit for MAT0. (AUTOLIMIT = 1.)
	CTRL	Uses unidirectional counter (BIDIR_L = 0).
Clock base	CONFIG	Uses default values for clock configuration.
Match/Capture registers	REGMODE	Configure one match register for each match event by setting REGMODE_L bits 0,1, 2, 3, 4 to 0. This is the default.
Define match values	MATCH 0/1/2/3/4	Set a match value MATCH0/1/2/4/5_L in each register. The match 0 register serves as an automatic limit event that resets the counter. without using an event. To enable the automatic limit, set the AUTOLIMIT bit in the CONFIG register.
Define match reload values	MATCHREL 0/1/2/3/4	Set a match reload value RELOAD0/1/2/3/4_L in each register (same as the match value in this example).

## Chapter 13: LPC5411x SCTimer/PWM (SCT)

Table 237. SCT configuration example

Configuration	Registers	Setting
Define when event 0 occurs	EV0_CTRL	<ul> <li>Set COMBMODE = 0x1. Event 0 uses match condition only.</li> <li>Set MATCHSEL = 1. Select match value of match register 1. The match value of MAT1 is associated with event 0.</li> </ul>
Define when event 1 occurs	EV1_CTRL	<ul> <li>Set COMBMODE = 0x1. Event 1 uses match condition only.</li> <li>Set MATCHSEL = 2 Select match value of match register 2. The match value of MAT2 is associated with event 1.</li> </ul>
Define when event 2 occurs	EV2_CTRL	<ul> <li>Set COMBMODE = 0x3. Event 2 uses match condition and I/O condition.</li> <li>Set IOSEL = 0. Select input 0.</li> <li>Set IOCOND = 0x0. Input 0 is LOW.</li> <li>Set MATCHSEL = 0. Chooses match register 0 to qualify the event.</li> </ul>
Define how event 2 changes the state	EV2_CTRL	Set STATEV bits to 1 and the STATED bit to 1. Event 2 changes the state to state 1.
Define when event 3 occurs	EV3_CTRL	<ul> <li>Set COMBMODE = 0x1. Event 3 uses match condition only.</li> <li>Set MATCHSEL = 0x3. Select match value of match register 3. The match value of MAT3 is associated with event 3</li> </ul>
Define when event 4 occurs	EV4_CTRL	<ul> <li>Set COMBMODE = 0x1. Event 4 uses match condition only.</li> <li>Set MATCHSEL = 0x4. Select match value of match register 4. The match value of MAT4 is associated with event 4.</li> </ul>
Define when event 5 occurs	EV5_CTRL	<ul> <li>Set COMBMODE = 0x3. Event 5 uses match condition and I/O condition.</li> <li>Set IOSEL = 0. Select input 0.</li> <li>Set IOCOND = 0x3. Input 0 is HIGH.</li> <li>Set MATCHSEL = 0. Chooses match register 0 to qualify the event.</li> </ul>
Define how event 5 changes the state	EV5_CTRL	Set STATEV bits to 0 and the STATED bit to 1. Event 5 changes the state to state 0.
Define by which events output 0 is set	OUT0_SET	Set SET0 bits 0 (for event 0) and 3 (for event 3) to one to set the output when these events 0 and 3 occur.
Define by which events output 0 is cleared	OUT0_CLR	Set CLR0 bits 1 (for events 1) and 4 (for event 4) to one to clear the output when events 1 and 4 occur.
Configure states in which event 0 is enabled	EV0_STATE	Set STATEMSK0 bit 0 to 1. Set all other bits to 0. Event 0 is enabled in state 0.
Configure states in which event 1 is enabled	EV1_STATE	Set STATEMSK1 bit 0 to 1. Set all other bits to 0. Event 1 is enabled in state 0.
Configure states in which event 2 is enabled	EV2_STATE	Set STATEMSK2 bit 0 to 1. Set all other bits to 0. Event 2 is enabled in state 0.
Configure states in which event 3 is enabled	EV3_STATE	Set STATEMSK3 bit 1 to 1. Set all other bits to 0. Event 3 is enabled in state 1.
Configure states in which event 4 is enabled	EV4_STATE	Set STATEMSK4 bit 1 to 1. Set all other bits to 0. Event 4 is enabled in state 1.
Configure states in which event 5 is enabled	EV5_STATE	Set STATEMSK5 bit 1 to 1. Set all other bits to 0. Event 5 is enabled in state 1.

# **UM10914**

# Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

Rev. 1.2 — 30 June 2016

User manual

# 14.1 How to read this chapter

These five standard timers are available on all LPC5411x parts.

# 14.2 Basic configuration

- Set the appropriate bits to enable clocks to timers that will be used: CTIMER0 and CTIMER1, and CTIMER2 in the AHBCLKCTRL1 register (<u>Section 4.5.17</u>), CTIMER3 and CTIMER4 in the ASYNCAPBCLKCTRL register (<u>Section 4.5.73</u>).
- Clear the timer reset using the ASYNCPRESETCTRL register (<u>Table 39</u> for CTIMER0, CTIMER1, and CTIMER2) and the PRESETCTRL1 register (<u>Table 109</u> for 3 and 4). Note that bit positions in the reset control registers match the bit positions in the clock control registers.
- Pins: Select timer pins and pin modes as needed through the relevant IOCON registers (Chapter 7).
- Interrupts: See register MCR (<u>Table 246</u>) and CCR (<u>Table 248</u>) for match and capture
  events. Interrupts are enabled in the NVIC using the appropriate Interrupt Set Enable
  register. For interrupt connections, see <u>Table 2</u>.
- DMA: Some timer match conditions can be used to generate timed DMA requests, see <u>Table 178</u>.

## 14.3 Features

- Each is a 32-bit counter/timer with a programmable 32-bit prescaler. Four of the timers include external capture and match pin connections.
- Counter or timer operation.
- For each timer with pin connections, up to 4 32-bit capture channels that can take a snapshot of the timer value when an input signal transitions. A capture event may also optionally generate an interrupt.
- The timer and prescaler may be configured to be cleared on a designated capture
  event. This feature permits easy pulse-width measurement by clearing the timer on
  the leading edge of an input pulse and capturing the timer value on the trailing edge.
- Four 32-bit match registers that allow:
  - Continuous operation with optional interrupt generation on match.
  - Stop timer on match with optional interrupt generation.
  - Reset timer on match with optional interrupt generation.
- For each timer with pin connections, up to 4 external outputs corresponding to match registers with the following capabilities:
  - Set LOW on match.
  - Set HIGH on match.
  - Toggle on match.

## Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

- Do nothing on match.
- PWM: for each timer with pin connections, up to 3 match outputs can be used as single edge controlled PWM outputs.

# 14.4 Applications

- Interval Timer for counting internal events.
- PWM outputs
- Pulse Width Demodulator via Capture inputs.
- Free running timer.

# 14.5 General description

Each Counter/timer is designed to count cycles of the APB bus clock or an externally supplied clock and can optionally generate interrupts or perform other actions at specified timer values based on four match registers. Each counter/timer also includes one capture input to trap the timer value when an input signal transitions, optionally generating an interrupt.

In PWM mode, three match registers can be used to provide a single-edge controlled PWM output on the match output pins. One match register is used to control the PWM cycle length.

## 14.5.1 Capture inputs

The capture signal can be configured to load the Capture Register with the value in the counter/timer and optionally generate an interrupt. The capture signal is generated by one of the pins with a capture function. Each capture signal is connected to one capture channel of the timer.

The Counter/Timer block can select a capture signal as a clock source instead of the APB bus clock. For more details see Section 14.7.11.

## 14.5.2 Match outputs

When a match register equals the timer counter (TC), the corresponding match output can either toggle, go LOW, go HIGH, or do nothing. The External Match Register (EMR) and the PWM Control Register (PWMCON) control the functionality of this output.

## 14.5.3 Applications

- Interval timer for counting internal events
- Pulse Width Modulator via match outputs
- Pulse Width Demodulator via capture input
- Free running timer

#### 14.5.4 Architecture


The block diagram for the timers is shown in Figure 34.

UM10914

**User manual** 

**UM10914 NXP Semiconductors** 

## Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

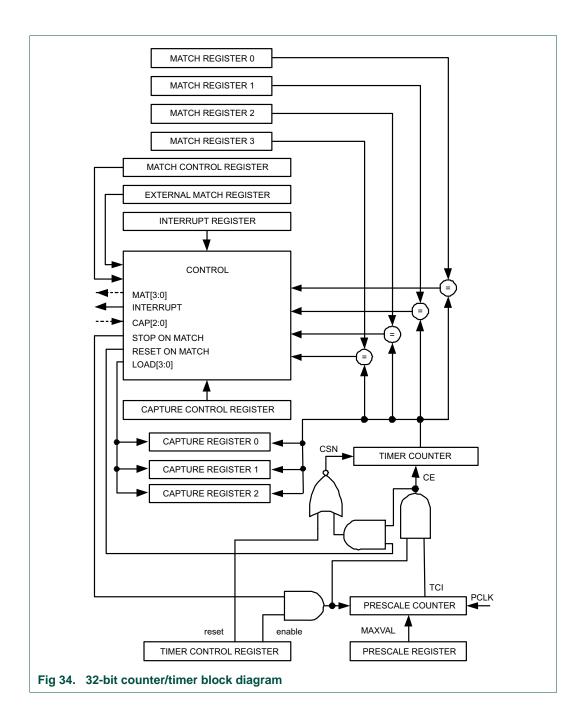

### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

# 14.6 Pin description

Table 238 gives a brief summary of each of the Timer/Counter related pins.

Table 238. Timer/Counter pin description

Pin	Туре	Description
CTIMER0_CAP3:0 CTIMER1_CAP3:0 CTIMER2_CAP3:0 CTIMER3_CAP3:0	Input	Capture Signals- A transition on a capture pin can be configured to load one of the Capture Registers with the value in the Timer Counter and optionally generate an interrupt. Capture functionality can be selected from a number of pins. When more than one pin is selected for a Capture input on a single timer channel, the pin with the lowest Port number is used Timer/Counter block can select a capture signal as a clock source instead of the APB bus
		clock. For more details see Section 14.7.11.
CTIMER0_MAT1:0 CTIMER1_MAT1:0 CTIMER2_MAT3:0 CTIMER3_MAT1:0	Output	External Match Output - When a match register (MR3:0) equals the timer counter (TC) this output can either toggle, go low, go high, or do nothing. The External Match Register (EMR) controls the functionality of this output. Match Output functionality can be selected on a number of pins in parallel.

Recommended IOCON settings are shown in <u>Table 239</u>. See <u>Chapter 7</u> for definitions of pin types.

Table 239: Suggested CTIMER timer pin settings

IOCON bit(s)	Type D pin	Type A pin	Type I pin
10	OD: Set to 0 unless open-drain output is desired.	Same as type D.	I2CFILTER: Set to 1
9	SLEW: Generally set to 0.	Not used, set to 0	I2CDRIVE: Set to 0.
8	FILTEROFF: Generally set to 1.	Same as type D.	Same as type D.
7	DIGIMODE: Set to 1.	Same as type D.	Same as type D.
6	INVERT: Set to 0.	Same as type D.	Same as type D.
5	Not used, set to 0.	Same as type D.	I2CSLEW: Set to 1.
4:3	MODE: Set to 0 (pull-down/pull-up resistor not enabled). Could be another setting if the input might sometimes be floating (causing leakage within the pin input).	Same as type D.	Not used, set to 0.
2:0	FUNC: Must select the correct function for this peripheral.	Same as type D.	Same as type D.
General comment	A good choice for timer capture input or match output.	A reasonable choice for timer capture input or match output.	Not recommended for timer match outputs.

# 14.6.1 Multiple CAP and MAT pins

Software can select from multiple pins for the CAP or MAT functions in the IOCON registers, which are described in <a href="Chapter 7">Chapter 7</a>. Note that match conditions may be used internally without the use of a device pin.

### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

# 14.7 Register description

Each Timer/Counter contains the registers shown in <u>Table 240</u> ("Reset Value" refers to the data stored in used bits only; it does not include reserved bits content). More detailed descriptions follow.

Table 240. Register overview: CTIMER0/1/2/3 (register base addresses 0x4000 8000 (CTIMER0), 0x4000 9000 (CTIMER1), 0x4002 8000 (CTIMER2), 0x4004 8000 (CTIMER3), 0x4004 9000 (CTIMER4))

Name	Access	Offset	Description	Reset value[1]	Section
IR	R/W	0x00	Interrupt Register. The IR can be written to clear interrupts. The IR can be read to identify which of eight possible interrupt sources are pending.	0x0	14.7.1
TCR	R/W	0x04	Timer Control Register. The TCR is used to control the Timer Counter functions. The Timer Counter can be disabled or reset through the TCR.	0x0	14.7.2
TC	R/W	0x08	Timer Counter. The 32 bit TC is incremented every PR+1 cycles of the APB bus clock. The TC is controlled through the TCR.	0x0	14.7.3
PR	R/W	0x0C	Prescale Register. When the Prescale Counter (PC) is equal to this value, the next clock increments the TC and clears the PC.	0x0	14.7.4
PC	R/W	0x10	Prescale Counter. The 32 bit PC is a counter which is incremented to the value stored in PR. When the value in PR is reached, the TC is incremented and the PC is cleared. The PC is observable and controllable through the bus interface.	0x0	14.7.5
MCR	R/W	0x14	Match Control Register. The MCR is used to control if an interrupt is generated and if the TC is reset when a Match occurs.	0x0	14.7.6
MR0	R/W	0x18	Match Register 0. MR0 can be enabled through the MCR to reset the TC, stop both the TC and PC, and/or generate an interrupt every time MR0 matches the TC.	0x0	14.7.7
MR1	R/W	0x1C	Match Register 1. See MR0 description.	0x0	14.7.7
MR2	R/W	0x20	Match Register 2. See MR0 description.	0x0	14.7.7
MR3	R/W	0x24	Match Register 3. See MR0 description.	0x0	14.7.7
CCR	R/W	0x28	Capture Control Register. The CCR controls which edges of the capture inputs are used to load the Capture Registers and whether or not an interrupt is generated when a capture takes place.	0x0	14.7.8
CR0	RO	0x2C	Capture Register 0. CR0 is loaded with the value of TC when there is an event on the CAPn.0 input.	0x0	14.7.9
CR1	RO	0x30	Capture Register 1. See CR0 description.	0x0	14.7.9
CR2	RO	0x34	Capture Register 2. See CR0 description.	0x0	14.7.9
CR3	RO	0x38	Capture Register 3. See CR0 description.	0x0	14.7.9
EMR	R/W	0x3C	External Match Register. The EMR controls the match function and the external match pins.	0x0	14.7.10
CTCR	R/W	0x70	Count Control Register. The CTCR selects between Timer and Counter mode, and in Counter mode selects the signal and edge(s) for counting.	0x0	14.7.11
PWMC	R/W	0x74	PWM Control Register. The PWMCON enables PWM mode for the external match pins.	0x0	14.7.12

<sup>[1]</sup> Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

## 14.7.1 Interrupt Register

The Interrupt Register consists of 4 bits for the match interrupts and 4 bits for the capture interrupts. If an interrupt is generated then the corresponding bit in the IR will be high. Otherwise, the bit will be low. Writing a logic one to the corresponding IR bit will reset the interrupt. Writing a zero has no effect. The act of clearing an interrupt for a timer match also clears any corresponding DMA request. Writing a zero has no effect.

Table 241. Interrupt Register (IR, offset 0x000) bit description

Bit	Symbol	Description	Reset Value
0	MR0INT	Interrupt flag for match channel 0.	0x0
1	MR1INT	Interrupt flag for match channel 1.	0x0
2	MR2INT	Interrupt flag for match channel 2.	0x0
3	MR3INT	Interrupt flag for match channel 3.	0x0
4	CR0INT	Interrupt flag for capture channel 0 event.	0x0
5	CR1INT	Interrupt flag for capture channel 1 event.	0x0
6	CR2INT	Interrupt flag for capture channel 2 event.	0x0
7	CR3INT	Interrupt flag for capture channel 3 event.	0x0
31:8	-	Reserved. Read value is undefined, only zero should be written.	-

## 14.7.2 Timer Control Register

The Timer Control Register (TCR) is used to control the operation of the Timer/Counter.

Table 242. Timer Control Register (TCR, offset 0x004) bit description

Bit	Symbol	Value	Description	Reset value	
0	CEN		Counter enable.	0x0	
		0	Disabled.The counters are disabled.		
		1	Enabled. The Timer Counter and Prescale Counter are enabled.		
1	CRST		Counter reset.	0x0	
			0	Disabled. Do nothing.	
		1	Enabled. The Timer Counter and the Prescale Counter are synchronously reset on the next positive edge of the APB bus clock. The counters remain reset until TCR[1] is returned to zero.		
31:2	-	-	Reserved. Read value is undefined, only zero should be written.	NA	

## 14.7.3 Timer Counter registers

The 32-bit Timer Counter register is incremented when the prescale counter reaches its terminal count. Unless it is reset before reaching its upper limit, the Timer Counter will count up through the value 0xFFFF FFFF and then wrap back to the value 0x0000 0000. This event does not cause an interrupt, but a match register can be used to detect an overflow if needed.

Table 243. Timer counter registers (TC, offset 0x08) bit description

Bit	Symbol	Description	Reset value
31:0	TCVAL	Timer counter value.	0x0

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

## 14.7.4 Prescale register

The 32-bit Prescale register specifies the maximum value for the Prescale Counter.

Table 244. Timer prescale registers (PR, offset 0x00C) bit description

Bit	Symbol	Description	Reset value
31:0	PRVAL	Prescale counter value.	0x0

## 14.7.5 Prescale Counter register

The 32-bit Prescale Counter controls division of the APB bus clock by some constant value before it is applied to the Timer Counter. This allows control of the relationship of the resolution of the timer versus the maximum time before the timer overflows. The Prescale Counter is incremented on every APB bus clock. When it reaches the value stored in the Prescale register, the Timer Counter is incremented and the Prescale Counter is reset on the next APB bus clock. This causes the Timer Counter to increment on every APB bus clock when PR = 0, every 2 APB bus clocks when PR = 1, etc.

Table 245. Timer prescale counter registers (PC, offset 0x010) bit description

Bit	Symbol	Description	Reset value
31:0	PCVAL	Prescale counter value.	0x0

## 14.7.6 Match Control Register

The Match Control Register is used to control what operations are performed when one of the Match Registers matches the Timer Counter.

Table 246. Match Control Register (MCR, offset 0x014) bit description

Bit	Symbol	Description	Reset Value
0	MR0I	Interrupt on MR0: an interrupt is generated when MR0 matches the value in the TC. 0 = disabled. 1 = enabled.	0x0
1	MR0R	Reset on MR0: the TC will be reset if MR0 matches it. 0 = disabled. 1 = enabled.	0x0
2	MR0S	Stop on MR0: the TC and PC will be stopped and TCR[0] will be set to 0 if MR0 matches the TC. 0 = disabled. 1 = enabled.	0x0
3	MR1I	Interrupt on MR1: an interrupt is generated when MR1 matches the value in the TC. 0 = disabled. 1 = enabled. 0 = disabled. 1 = enabled.	0x0
4	MR1R	Reset on MR1: the TC will be reset if MR1 matches it. 0 = disabled. 1 = enabled.	0x0
5	MR1S	Stop on MR1: the TC and PC will be stopped and TCR[0] will be set to 0 if MR1 matches the TC. 0 = disabled. 1 = enabled.	0x0
6	MR2I	Interrupt on MR2: an interrupt is generated when MR2 matches the value in the TC. 0 = disabled. 1 = enabled.	0x0
7	MR2R	Reset on MR2: the TC will be reset if MR2 matches it. 0 = disabled. 1 = enabled.	0x0
8	MR2S	Stop on MR2: the TC and PC will be stopped and TCR[0] will be set to 0 if MR2 matches the TC. 0 = disabled. 1 = enabled.	0x0
9	MR3I	Interrupt on MR3: an interrupt is generated when MR3 matches the value in the TC. 0 = disabled. 1 = enabled.	0x0

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

Table 246. Match Control Register (MCR, offset 0x014) bit description

Bit	Symbol	Description	Reset Value
10	MR3R	Reset on MR3: the TC will be reset if MR3 matches it. 0 = disabled. 1 = enabled.	0x0
11	MR3S	Stop on MR3: the TC and PC will be stopped and TCR[0] will be set to 0 if MR3 matches the TC. 0 = disabled. 1 = enabled.	0x0
31:12	-	Reserved. Read value is undefined, only zero should be written.	NA

## 14.7.7 Match Registers

The Match register values are continuously compared to the Timer Counter value. When the two values are equal, actions can be triggered automatically. The action possibilities are to generate an interrupt, reset the Timer Counter, or stop the timer. Actions are controlled by the settings in the MCR register.

Table 247. Timer match registers (MR[0:3], offset [0x018:0x024]) bit description

Bit	Symbol	Description	Reset value
31:0	MATCH	Timer counter match value.	0x0

## 14.7.8 Capture Control Register

The Capture Control Register is used to control whether one of the four Capture Registers is loaded with the value in the Timer Counter when the capture event occurs, and whether an interrupt is generated by the capture event. Setting both the rising and falling bits at the same time is a valid configuration, resulting in a capture event for both edges. In the description below, "n" represents the timer number, 0 or 1.

Note: If Counter mode is selected for a particular CAP input in the CTCR, the 3 bits for that input in this register should be programmed as 000, but capture and/or interrupt can be selected for the other 3 CAP inputs.

Table 248. Capture Control Register (CCR, offset 0x028) bit description

Bit	Symbol	Description	Reset Value
0	CAP0RE	Rising edge of capture channel 0: a sequence of 0 then 1 causes CR0 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
1	CAP0FE	Falling edge of capture channel 0: a sequence of 1 then 0 causes CR0 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
2	CAP0I	Generate interrupt on channel 0 capture event: a CR0 load generates an interrupt.	0x0
3	CAP1RE	Rising edge of capture channel 1: a sequence of 0 then 1 causes CR1 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
4	CAP1FE	Falling edge of capture channel 1: a sequence of 1 then 0 causes CR1 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
5	CAP1I	Generate interrupt on channel 1 capture event: a CR1 load generates an interrupt.	0x0
6	CAP2RE	Rising edge of capture channel 2: a sequence of 0 then 1 causes CR2 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
7	CAP2FE	Falling edge of capture channel 2: a sequence of 1 then 0 causes CR2 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
8	CAP2I	Generate interrupt on channel 2 capture event: a CR2 load generates an interrupt.	0x0

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

Table 248. Capture Control Register (CCR, offset 0x028) bit description

Bit	Symbol	Description	Reset Value
9	CAP3RE	Rising edge of capture channel 3: a sequence of 0 then 1 causes CR3 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
10	CAP3FE	Falling edge of capture channel 3: a sequence of 1 then 0 causes CR3 to be loaded with the contents of TC. 0 = disabled. 1 = enabled.	0x0
11	CAP3I	Generate interrupt on channel 3 capture event: a CR3 load generates an interrupt.	0x0
31:12	-	Reserved. Read value is undefined, only zero should be written.	NA

## 14.7.9 Capture Registers

Each Capture register is associated with one capture channel and may be loaded with the counter/timer value when a specified event occurs on the signal defined for that capture channel. The signal could originate from an external pin or from an internal source. The settings in the Capture Control Register register determine whether the capture function is enabled, and whether a capture event happens on the rising edge of the associated signal, the falling edge, or on both edges.

Table 249. Timer capture registers (CR[0:3], offsets [0x02C:0x038]) bit description

Bit	Symbol	Description	Reset value
31:0	CAP	Timer counter capture value.	0x0

## 14.7.10 External Match Register

The External Match Register provides both control and status of the external match pins. In the descriptions below, "n" represents the timer number, 0 or 1, and "m" represent a Match number, 0 through 3.

Match events for Match 0 and Match 1 in each timer can cause a DMA request, see Section 14.8.2.

If the match outputs are configured as PWM output, the function of the external match registers is determined by the PWM rules (<u>Section 14.8.1 "Rules for single edge</u> controlled PWM outputs" on page 234).

Table 250. Timer external match registers (EMR, offset 0x03C) bit description

Bit	Symbol	Value	Description	Reset value
0	EMO	-	External Match 0. This bit reflects the state of output MAT0, whether or not this output is connected to a pin. When a match occurs between the TC and MR0, this bit can either toggle, go LOW, go HIGH, or do nothing, as selected by EMR[5:4]. This bit is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.	0x0
1	EM1	-	External Match 1. This bit reflects the state of output MAT1, whether or not this output is connected to a pin. When a match occurs between the TC and MR1, this bit can either toggle, go LOW, go HIGH, or do nothing, as selected by EMR[7:6]. This bit is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.	0x0
2	EM2	-	External Match 2. This bit reflects the state of output MAT2, whether or not this output is connected to a pin. When a match occurs between the TC and MR2, this bit can either toggle, go LOW, go HIGH, or do nothing, as selected by EMR[9:8]. This bit is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.	0x0

**UM10914 NXP Semiconductors** 

## Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

Table 250. Timer external match registers (EMR, offset 0x03C) bit description

Bit	Symbol	Value	Description	Reset value
3	EM3	-	External Match 3. This bit reflects the state of output MAT3, whether or not this output is connected to a pin. When a match occurs between the TC and MR3, this bit can either toggle, go LOW, go HIGH, or do nothing, as selected by MR[11:10]. This bit is driven to the MAT pins if the match function is selected via IOCON. 0 = LOW. 1 = HIGH.	0x0
5:4	EMC0		External Match Control 0. Determines the functionality of External Match 0.	0x0
		0x0	Do Nothing.	
		0x1	Clear. Clear the corresponding External Match bit/output to 0 (MAT0 pin is LOW if pinned out).	
		0x2	Set. Set the corresponding External Match bit/output to 1 (MAT0 pin is HIGH if pinned out).	
		0x3	Toggle. Toggle the corresponding External Match bit/output.	
7:6	EMC1		External Match Control 1. Determines the functionality of External Match 1.	0x0
		0x0	Do Nothing.	
		0x1	Clear. Clear the corresponding External Match bit/output to 0 (MAT1 pin is LOW if pinned out).	
		0x2	Set. Set the corresponding External Match bit/output to 1 (MAT1 pin is HIGH if pinned out).	
		0x3	Toggle. Toggle the corresponding External Match bit/output.	
9:8	EMC2		External Match Control 2. Determines the functionality of External Match 2.	0x0
		0x0	Do Nothing.	
		0x1	Clear. Clear the corresponding External Match bit/output to 0 (MAT2 pin is LOW if pinned out).	
		0x2	Set. Set the corresponding External Match bit/output to 1 (MAT2 pin is HIGH if pinned out).	
		0x3	Toggle. Toggle the corresponding External Match bit/output.	
11:10	EMC3		External Match Control 3. Determines the functionality of External Match 3.	0x0
		0x0	Do Nothing.	
		0x1	Clear. Clear the corresponding External Match bit/output to 0 (MAT3 pin is LOW if pinned out).	
		0x2	Set. Set the corresponding External Match bit/output to 1 (MAT3 pin is HIGH if pinned out).	
		0x3	Toggle. Toggle the corresponding External Match bit/output.	
31:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

## 14.7.11 Count Control Register

The Count Control Register (CTCR) is used to select between Timer and Counter mode, and in Counter mode to select the pin and edge(s) for counting.

When Counter Mode is chosen as a mode of operation, the CAP input (selected by the CTCR bits 3:2) is sampled on every rising edge of the APB bus clock. After comparing two consecutive samples of this CAP input, one of the following four events is recognized: rising edge, falling edge, either of edges or no changes in the level of the selected CAP input. Only if the identified event occurs and the event corresponds to the one selected by bits 1:0 in the CTCR register, will the Timer Counter register be incremented.

Effective processing of the externally supplied clock to the counter has some limitations. Since two successive rising edges of the APB bus clock are used to identify only one edge on the CAP selected input, the frequency of the CAP input cannot exceed one half of the APB bus clock. Consequently, duration of the HIGH/LOWLOW levels on the same CAP input in this case cannot be shorter than 1/APB bus clock.

Bits 7:4 of this register are also used to enable and configure the capture-clears-timer feature. This feature allows for a designated edge on a particular CAP input to reset the timer to all zeros. Using this mechanism to clear the timer on the leading edge of an input pulse and performing a capture on the trailing edge, permits direct pulse-width measurement using a single capture input without the need to perform a subtraction operation in software.

Table 251. Count Control Register (CTCR, offset 0x070) bit description

Bit	Symbol	Value	Description	Reset Value
1:0	CTMODE		Counter/Timer Mode This field selects which rising APB bus clock edges can increment Timer's Prescale Counter (PC), or clear PC and increment Timer Counter (TC).	0x0
			Timer Mode: the TC is incremented when the Prescale Counter matches the Prescale Register.	
		0x0	Timer Mode. Incremented every rising APB bus clock edge.	
		0x1	Counter Mode rising edge. TC is incremented on rising edges on the CAP input selected by bits 3:2.	
		0x2	Counter Mode falling edge. TC is incremented on falling edges on the CAP input selected by bits 3:2.	
		0x3	Counter Mode dual edge. TC is incremented on both edges on the CAP input selected by bits 3:2.	
3:2	CINSEL		Count Input Select When bits 1:0 in this register are not 0, these bits select which CAP pin is sampled for clocking.	0x0
			<b>Note:</b> If Counter mode is selected for a particular CAPn input in the CTCR, the 3 bits for that input in the Capture Control Register (CCR) must be programmed as 000. However, capture and/or interrupt can be selected for the other 3 CAPn inputs in the same timer.	
		0x0	Channel 0. CAPn.0 for CTIMERn	
		0x1	Channel 1. CAPn.1 for CTIMERn	
		0x2	Channel 2. CAPn.2 for CTIMERn	
		0x3	Channel 3. CAPn.3 for CTIMERn	

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

Table 251. Count Control Register (CTCR, offset 0x070) bit description

Bit	Symbol	Value	Description	Reset Value
4	ENCC	-	Setting this bit to 1 enables clearing of the timer and the prescaler when the capture-edge event specified in bits 7:5 occurs.	0x0
7:5	SELCC		Edge select. When bit 4 is 1, these bits select which capture input edge will cause the timer and prescaler to be cleared. These bits have no effect when bit 4 is low. Values 0x2 to 0x3 and 0x6 to 0x7 are reserved.	0x0
		0x0	Channel 0 Rising Edge. Rising edge of the signal on capture channel 0 clears the timer (if bit 4 is set).	
		0x1	Channel 0 Falling Edge. Falling edge of the signal on capture channel 0 clears the timer (if bit 4 is set).	
		0x2	Channel 1 Rising Edge. Rising edge of the signal on capture channel 1 clears the timer (if bit 4 is set).	
		0x3	Channel 1 Falling Edge. Falling edge of the signal on capture channel 1 clears the timer (if bit 4 is set).	
		0x4	Channel 2 Rising Edge. Rising edge of the signal on capture channel 2 clears the timer (if bit 4 is set).	
		0x5	Channel 2 Falling Edge. Falling edge of the signal on capture channel 2 clears the timer (if bit 4 is set).	
31:8	-	-	Reserved. Read value is undefined, only zero should be written.	NA

## 14.7.12 PWM Control Register

The PWM Control Register is used to configure the match outputs as PWM outputs. Each match output can be independently set to perform either as PWM output or as match output whose function is controlled by the External Match Register (EMR).

For each timer, a maximum of three single edge controlled PWM outputs can be selected on the MATn.2:0 outputs. One additional match register determines the PWM cycle length. When a match occurs in any of the other match registers, the PWM output is set to HIGH. The timer is reset by the match register that is configured to set the PWM cycle length. When the timer is reset to zero, all currently HIGH match outputs configured as PWM outputs are cleared.

Table 252: PWM Control Register (PWMC, offset 0x074)) bit description

Bit	Symbol	Value	Description	Reset value
0	PWMEN0		PWM mode enable for channel0.	0x0
		0	Match. CTIMERn_MAT0 is controlled by EM0.	
		1	PWM. PWM mode is enabled for CTIMERn_MAT0.	
1	PWMEN1		PWM mode enable for channel1.	0x0
		0	Match. CTIMERn_MAT01 is controlled by EM1.	
		1	PWM. PWM mode is enabled for CTIMERn_MAT1.	
2	PWMEN2		PWM mode enable for channel2.	0x0
		0	Match. CTIMERn_MAT2 is controlled by EM2.	
		1	PWM. PWM mode is enabled for CTIMERn_MAT2.	

## Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

## Table 252: PWM Control Register (PWMC, offset 0x074)) bit description

Bit	Symbol	Value	Description	Reset value
3	PWMEN3		PWM mode enable for channel3. <b>Note:</b> It is recommended to use match channel 3 to set the PWM cycle.	0x0
		0	Match. CTIMERn_MAT3 is controlled by EM3.	
		1	PWM. PWM mode is enabled for CTIMERn_MAT3.	
31:4	-	-	Reserved. Read value is undefined, only zero should be written.	NA


233 of 590


#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

# 14.8 Functional description

Figure 35 shows a timer configured to reset the count and generate an interrupt on match. The prescaler is set to 2 and the match register set to 6. At the end of the timer cycle where the match occurs, the timer count is reset. This gives a full length cycle to the match value. The interrupt indicating that a match occurred is generated in the next clock after the timer reached the match value.

<u>Figure 36</u> shows a timer configured to stop and generate an interrupt on match. The prescaler is again set to 2 and the match register set to 6. In the next clock after the timer reaches the match value, the timer enable bit in TCR is cleared, and the interrupt indicating that a match occurred is generated.

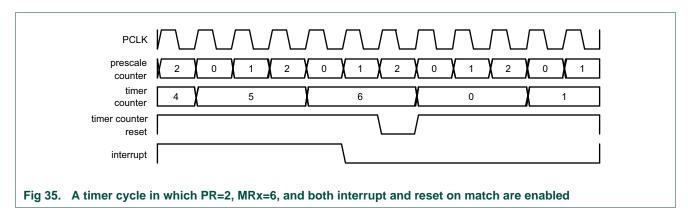

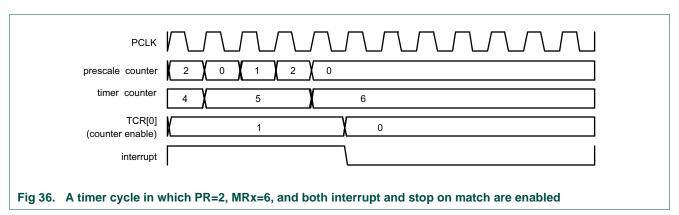

## 14.8.1 Rules for single edge controlled PWM outputs

- 1. All single edge controlled PWM outputs go LOW at the beginning of each PWM cycle (timer is set to zero) unless their match value is equal to zero.
- Each PWM output will go HIGH when its match value is reached. If no match occurs (i.e. the match value is greater than the PWM cycle length), the PWM output remains continuously LOW.
- If a match value larger than the PWM cycle length is written to the match register, and the PWM signal is HIGH already, then the PWM signal will be cleared with the start of the next PWM cycle.

UM10914

#### Chapter 14: LPC5411x Standard counter/timers (CTIMER0 - 4)

4. If a match register contains the same value as the timer reset value (the PWM cycle length), then the PWM output will be reset to LOW on the next clock tick after the timer reaches the match value. Therefore, the PWM output will always consist of a one clock tick wide positive pulse with a period determined by the PWM cycle length (i.e. the timer reload value).

5. If a match register is set to zero, then the PWM output will go to HIGH the first time the timer goes back to zero and will stay HIGH continuously.

**Note:** When the match outputs are selected to perform as PWM outputs, the timer reset (MRnR) and timer stop (MRnS) bits in the Match Control Register MCR must be set to zero except for the match register setting the PWM cycle length. For this register, set the MRnR bit to one to enable the timer reset when the timer value matches the value of the corresponding match register.

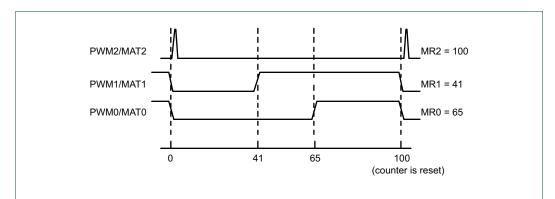


Fig 37. Sample PWM waveforms with a PWM cycle length of 100 (selected by MR3) and MAT3:0 enabled as PWM outputs by the PWCON register.

### 14.8.2 DMA operation

DMA requests are generated by a match of the Timer Counter (TC) register value to either Match Register 0 (MR0) or Match Register 1 (MR1). This is not connected to the operation of the Match outputs controlled by the EMR register. Each match sets a DMA request flag, which is connected to the DMA controller. In order to have an effect, the DMA controller must be configured correctly.

When a timer is initially set up to generate a DMA request, the request may already be asserted before a match condition occurs. An initial DMA request may be avoided by having software write a one to the interrupt flag location, as if clearing a timer interrupt. See <a href="Section 14.7.1">Section 14.7.1</a>. A DMA request will be cleared automatically when it is acted upon by the DMA controller.

**Note:** because timer DMA requests are generated whenever the timer value is equal to the related Match Register value, DMA requests are always generated when the timer is running, unless the Match Register value is higher than the upper count limit of the timer. It is important not to select and enable timer DMA requests in the DMA block unless the timer is correctly configured to generate valid DMA requests.

# **UM10914**

# **Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)**

Rev. 1.2 — 30 June 2016

**User manual** 

# 15.1 How to read this chapter

The watchdog timer is available on all LPC5411x devices.

## 15.2 Features


- Internally resets chip if not reloaded during the programmable time-out period.
- Optional windowed operation requires reload to occur between a minimum and maximum time-out period, both programmable.
- Optional warning interrupt can be generated at a programmable time prior to watchdog time-out.
- Programmable 24-bit timer with internal fixed pre-scaler.
- Selectable time period from 1,024 watchdog clocks (T<sub>WDCLK</sub> × 256 × 4) to over 67 million watchdog clocks (T<sub>WDCLK</sub> × 2<sup>24</sup> × 4) in increments of 4 watchdog clocks.
- "Safe" watchdog operation. Once enabled, requires a hardware reset or a Watchdog reset to be disabled.
- Incorrect feed sequence causes immediate watchdog event if enabled.
- The watchdog reload value can optionally be protected such that it can only be changed after the "warning interrupt" time is reached.
- Flag to indicate Watchdog reset.
- The Watchdog clock (WDCLK) source is a selectable frequency in the range of 200 kHz to 1.5 MHz (see <u>Section 4.5.47</u> for details of Watchdog oscillator configuration). The accuracy of this clock is limited to +/- 40% over temperature, voltage, and silicon processing variations. To determine the actual watchdog oscillator output, use the frequency measure block. See <u>Section 4.2.3</u>.
- The Watchdog timer can be configured to run in deep-sleep mode.
- Debug mode.

#### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

# 15.3 Basic configuration

Configuration of the WWDT is accomplished as follows:

- Turn on and configure the Watchdog oscillator. See the PDEN\_WDT\_OSC bit in the PDRUNCG0 register (<u>Section 4.5.52</u>), and the Watchdog oscillator control register (<u>Section 4.5.47</u>).
- Enable the register interface (WWDT bus clock): set the WWDT bit in the AHBCLKCTRL0 register, Table 45.
- For waking up from a WWDT interrupt, enable the watchdog interrupt for wake-up in the STARTER0 register (Table 93).

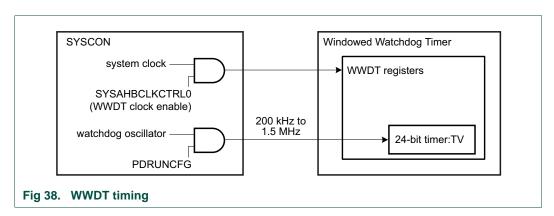

# 15.4 Pin description

The WWDT has no external pins.

# 15.5 General description

The purpose of the Watchdog Timer is to reset or interrupt the microcontroller within a programmable time if it enters an erroneous state. When enabled, a watchdog reset is generated if the user program fails to feed (reload) the Watchdog within a predetermined amount of time.

When a watchdog window is programmed, an early watchdog feed is also treated as a watchdog event. This allows preventing situations where a system failure may still feed the watchdog. For example, application code could be stuck in an interrupt service that contains a watchdog feed. Setting the window such that this would result in an early feed will generate a watchdog event, allowing for system recovery.

The Watchdog consists of a fixed (divide by 4) pre-scaler and a 24-bit counter which decrements when clocked. The minimum value from which the counter decrements is 0xFF. Setting a value lower than 0xFF causes 0xFF to be loaded in the counter. Hence the minimum Watchdog interval is ( $T_{WDCLK} \times 256 \times 4$ ) and the maximum Watchdog interval is ( $T_{WDCLK} \times 2^{24} \times 4$ ) in multiples of ( $T_{WDCLK} \times 4$ ). The Watchdog should be used in the following manner:

Enable and configure the Watchdog oscillator as described in <u>Section 15.3 "Basic configuration"</u>

UM10914

### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)


- Set the Watchdog timer constant reload value in the TC register.
- Set the Watchdog timer operating mode in the MOD register.
- Set a value for the watchdog window time in the WINDOW register if windowed operation is desired.
- Set a value for the watchdog warning interrupt in the WARNINT register if a warning interrupt is desired.
- Enable the Watchdog by writing 0xAA followed by 0x55 to the FEED register.
- The Watchdog must be fed again before the Watchdog counter reaches zero in order to prevent a watchdog event. If a window value is programmed, the feed must also occur after the watchdog counter passes that value.

When the Watchdog Timer is configured so that a watchdog event will cause a reset and the counter reaches zero, the CPU will be reset, loading the stack pointer and program counter from the vector table as for an external reset. The Watchdog time-out flag (WDTOF) can be examined to determine if the Watchdog has caused the reset condition. The WDTOF flag must be cleared by software.

When the Watchdog Timer is configured to generate a warning interrupt, the interrupt will occur when the counter is no longer greater than the value defined by the WARNINT register.

## 15.5.1 Block diagram

The block diagram of the Watchdog is shown below in the <u>Figure 39</u>. The synchronization logic (APB bus clock to WDCLK) is not shown in the block diagram.

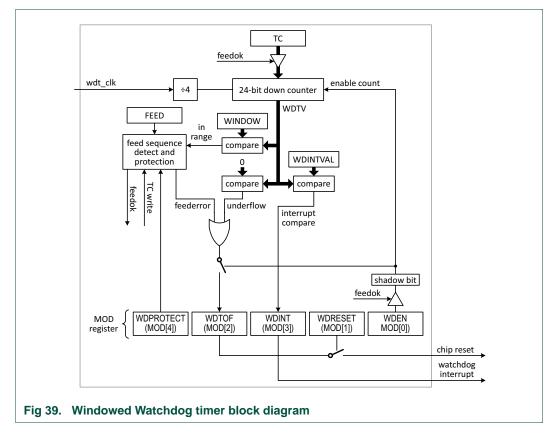

#### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

## 15.5.2 Clocking and power control

The watchdog timer block uses two clocks: APB bus clock and WDCLK. The APB bus clock is used for the APB accesses to the watchdog registers and is derived from the system clock (see <u>Figure 4</u>). The WDCLK is used for the watchdog timer counting and is derived from the watchdog oscillator.

The synchronization logic between the two clock domains works as follows: When the MOD and TC registers are updated by APB operations, the new value will take effect in 3 WDCLK cycles on the logic in the WDCLK clock domain.

When the watchdog timer is counting on WDCLK, the synchronization logic will first lock the value of the counter on WDCLK and then synchronize it with the APB bus clock, so that the CPU can read the TV register.

**Remark:** Because of the synchronization step, software must add a delay of three WDCLK clock cycles between the feed sequence and the time the WDPROTECT bit is enabled in the MOD register. The length of the delay depends on the selected watchdog clock WDCLK.

## 15.5.3 Using the WWDT lock features

The WWDT supports several lock features which can be enabled to ensure that the WWDT is running at all times:

- Disabling the WWDT clock source
- Changing the WWDT reload value

#### 15.5.3.1 Disabling the WWDT clock source

If bit 5 in the WWDT MOD register is set, the WWDT clock source is locked and can not be disabled either by software or by hardware when sleep or deep-sleep modes are entered. Therefore, the user must ensure that the watchdog oscillator for each power mode is enabled **before** setting bit 5 in the MOD register.

#### 15.5.3.2 Changing the WWDT reload value

If bit 4 is set in the WWDT MOD register, the watchdog time-out value (TC) can be changed only after the counter is below the value of WDWARNINT and WDWINDOW.

The reload overwrite lock mechanism can only be disabled by a reset of any type.

### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

# 15.6 Register description

The Watchdog Timer contains the registers shown in Table 253.

The reset value reflects the data stored in used bits only. It does not include the content of reserved bits.

Table 253. Register overview: Watchdog timer (base address 0x4000 C000)

Name	Access	Offset	Description	Reset value	Section
MOD	R/W	0x000	Watchdog mode register. This register contains the basic mode and status of the Watchdog Timer.	0x0	15.6.1
TC	R/W	0x004	Watchdog timer constant register. This 24-bit register determines the time-out value.	0xFF	15.6.2
FEED	WO	0x008	Watchdog feed sequence register. Writing 0xAA followed by 0x55 to this register reloads the Watchdog timer with the value contained in TC.	NA	15.6.3
TV	RO	0x00C	Watchdog timer value register. This 24-bit register reads out the current value of the Watchdog timer.	0xFF	15.6.4
-	-	0x010	Reserved	-	-
WARNINT	R/W	0x014	Watchdog Warning Interrupt compare value.	0x0	15.6.5
WINDOW	R/W	0x018	Watchdog Window compare value.	0xFF FFFF	15.6.6

# 15.6.1 Watchdog mode register

The WDMOD register controls the operation of the Watchdog. Note that a watchdog feed must be performed before any changes to the WDMOD register take effect.

Table 254. Watchdog mode register (MOD, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset value
0	WDEN		Watchdog enable bit. Once this bit is set to one and a watchdog feed is performed, the watchdog timer will run permanently.	0x0
		0	Stop. The watchdog timer is stopped.	
		1	Run. The watchdog timer is running.	
1	WDRESET		Watchdog reset enable bit. Once this bit has been written with a 1 it cannot be re-written with a 0.	0x0
		0	Interrupt. A watchdog time-out will not cause a chip reset.	
		1	Reset. A watchdog time-out will cause a chip reset.	
2	WDTOF	-	Watchdog time-out flag. Set when the watchdog timer times out, by a feed error, or by events associated with WDPROTECT. Cleared by software writing a 0 to this bit position. Causes a chip reset if WDRESET = 1.	0x0 [1]
3	WDINT	-	Warning interrupt flag. Set when the timer is at or below the value in WDWARNINT. Cleared by software writing a 1 to this bit position. Note that this bit cannot be cleared while the WARNINT value is equal to the value of the TV register. This can occur if the value of WARNINT is 0 and the WDRESET bit is 0 when TV decrements to 0.	0x0

#### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

Table 254. Watchdog mode register (MOD, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset value
4	WDPROTECT		Watchdog update mode. This bit can be set once by software and is only cleared by a reset.	0x0
	0 Flexible. The watchdog time-out value (TC) can be changed at any time.			
		1	Threshold. The watchdog time-out value (TC) can be changed only after the counter is below the value of WDWARNINT and WDWINDOW.	
5	LOCK	-	Once this bit is set to one and a watchdog feed is performed, disabling or powering down the watchdog oscillator is prevented by hardware. This bit can be set once by software and is only cleared by any reset.	0x0
31:6	-	-	Reserved. Read value is undefined, only zero should be written.	NA

<sup>[1]</sup> Only an external or power-on reset has this effect.

Once the **WDEN**, **WDPROTECT**, or **WDRESET** bits are set they can not be cleared by software. Both flags are cleared by an external reset or a Watchdog timer reset.

**WDTOF** The Watchdog time-out flag is set when the Watchdog times out, when a feed error occurs, or when PROTECT =1 and an attempt is made to write to the TC register. This flag is cleared by software writing a 0 to this bit.

**WDINT** The Watchdog interrupt flag is set when the Watchdog counter is no longer greater than the value specified by WARNINT. This flag is cleared when any reset occurs, and is cleared by software by writing a 0 to this bit.

In all power modes except deep power-down mode, a Watchdog reset or interrupt can occur when the watchdog is running and has an operating clock source. The watchdog oscillator can be configured to keep running in sleep and deep-sleep modes.

If a watchdog interrupt occurs in sleep or deep-sleep mode, and the WWDT interrupt is enabled in the NVIC, the device will wake up. Note that in deep-sleep mode, the WWDT interrupt must be enabled in the STARTER0 register in addition to the NVIC.

See the following registers:

Table 93 "Start enable register 0 (STARTER0, main syscon: offset 0x680) bit description"

Table 255. Watchdog operating modes selection

WDRESET	Mode of Operation
X (0 or 1)	Debug/Operate without the Watchdog running.
0	Watchdog interrupt mode: the watchdog warning interrupt will be generated but watchdog reset will not.  When this mode is selected, the watchdog counter reaching the value specified by WDWARNINT will set the WDINT flag and the Watchdog interrupt request will be generated.
1	Watchdog reset mode: both the watchdog interrupt and watchdog reset are enabled.  When this mode is selected, the watchdog counter reaching the value specified by WDWARNINT will set the WDINT flag and the Watchdog interrupt request will be generated, and the watchdog counter reaching zero will reset the microcontroller. A watchdog feed prior to reaching the value of
>	( (0 or 1)

## Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

## 15.6.2 Watchdog Timer Constant register

The TC register determines the time-out value. Every time a feed sequence occurs the value in the TC is loaded into the Watchdog timer. The TC resets to 0x00 00FF. Writing a value below 0xFF will cause 0x00 00FF to be loaded into the TC. Thus the minimum time-out interval is  $T_{WDCLK} \times 256 \times 4$ .

If the WDPROTECT bit in WDMOD = 1, an attempt to change the value of TC before the watchdog counter is below the values of WDWARNINT and WDWINDOW will cause a watchdog reset and set the WDTOF flag.

Table 256. Watchdog Timer Constant register (TC, offset 0x04) bit description

Bit	Symbol	Description	Reset value
23:0	COUNT	Watchdog time-out value.	0x00 00FF
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

## 15.6.3 Watchdog Feed register

Writing 0xAA followed by 0x55 to this register will reload the Watchdog timer with the TC value. This operation will also start the Watchdog if it is enabled via the WDMOD register. Setting the WDEN bit in the WDMOD register is not sufficient to enable the Watchdog. A valid feed sequence must be completed after setting WDEN before the Watchdog is capable of generating a reset. Until then, the Watchdog will ignore feed errors.

After writing 0xAA to WDFEED, access to any Watchdog register other than writing 0x55 to WDFEED causes an immediate reset/interrupt when the Watchdog is enabled, and sets the WDTOF flag. The reset will be generated during the second APB bus clock following an incorrect access to a Watchdog register during a feed sequence.

It is good practice to disable interrupts around a feed sequence, if the application is such that an interrupt might result in rescheduling processor control away from the current task in the middle of the feed, and then lead to some other access to the WDT before control is returned to the interrupted task.

Table 257. Watchdog Feed register (FEED, offset 0x08) bit description

Bit	Symbol	Description	Reset value
7:0	FEED	Feed value should be 0xAA followed by 0x55.	NA
31:8	-	Reserved. Read value is undefined, only zero should be written.	NA

## 15.6.4 Watchdog Timer Value register

The TV register is used to read the current value of Watchdog timer counter.

When reading the value of the 24-bit counter, the lock and synchronization procedure takes up to 6 WDCLK cycles plus 6 APB bus clock cycles, so the value of TV is older than the actual value of the timer when it's being read by the CPU.

Table 258. Watchdog Timer Value register (TV, offset 0x0C) bit description

Bit	Symbol	Description	Reset value
23:0	COUNT	Counter timer value.	0x00 00FF
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

#### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

## 15.6.5 Watchdog Timer Warning Interrupt register

The WDWARNINT register determines the watchdog timer counter value that will generate a watchdog interrupt. When the watchdog timer counter is no longer greater than the value defined by WARNINT, an interrupt will be generated after the subsequent WDCLK.

A match of the watchdog timer counter to WARNINT occurs when the bottom 10 bits of the counter have the same value as the 10 bits of WARNINT, and the remaining upper bits of the counter are all 0. This gives a maximum time of 1,023 watchdog timer counts (4,096 watchdog clocks) for the interrupt to occur prior to a watchdog event. If WARNINT is 0, the interrupt will occur at the same time as the watchdog event.

Table 259. Watchdog Timer Warning Interrupt register (WARNINT, offset 0x14) bit description

Bit	Symbol	Description	Reset value
9:0	WARNINT	Watchdog warning interrupt compare value.	0x0
31:10	-	Reserved, only zero should be written.	NA

## 15.6.6 Watchdog Timer Window register

The WINDOW register determines the highest TV value allowed when a watchdog feed is performed. If a feed sequence occurs when TV is greater than the value in WINDOW, a watchdog event will occur.

WINDOW resets to the maximum possible TV value, so windowing is not in effect.


Table 260. Watchdog Timer Window register (WINDOW, offset 0x18) bit description


Bit	Symbol	Description	Reset value
23:0	WINDOW	Watchdog window value.	0xFF FFFF
31:24	-	Reserved, only zero should be written.	NA


### Chapter 15: LPC5411x Windowed Watchdog Timer (WWDT)

# 15.7 Functional description

The following figures illustrate several aspects of Watchdog Timer operation.

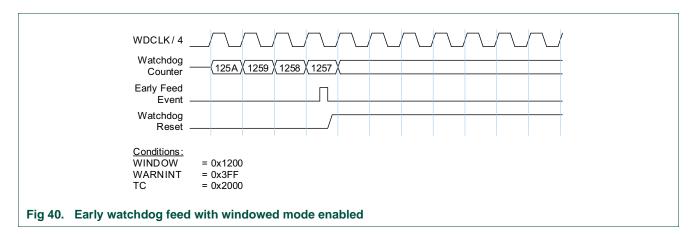

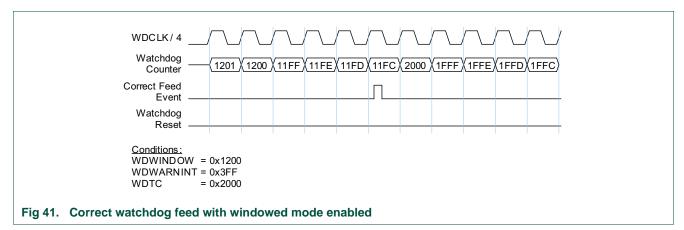

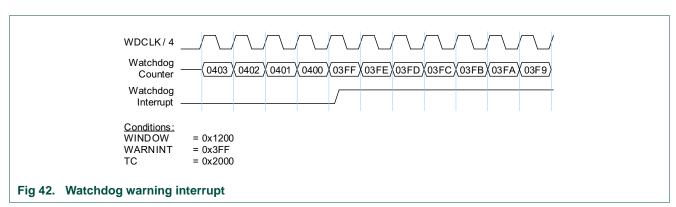

# **UM10914**

# Chapter 16: LPC5411x Real-Time Clock (RTC)

Rev. 1.2 — 30 June 2016

**User manual** 

# 16.1 How to read this chapter

The RTC is available on all LPC5411x devices.

## 16.2 Features


- The RTC and its independent oscillator operate directly from the device power pins, not using the on-chip regulator. The RTC oscillator has the following clock outputs:
  - 32 kHz clock, selectable for system clock and CLKOUT pin.
  - 1 Hz clock for RTC timing.
  - 1 kHz clock for high-resolution RTC timing.
- 32-bit, 1 Hz RTC counter and associated match register for alarm generation.
- Separate 16-bit high-resolution/wake-up timer clocked at 1 kHz for 1 ms resolution with a more that one minute maximum time-out period.
- RTC alarm and high-resolution/wake-up timer time-out each generate independent interrupt requests. Either time-out can wake up the part from any of the low power modes, including deep power-down.

# 16.3 Basic configuration

Configure the RTC as follows:

- Use the AHBCLKCTRL0 register (<u>Table 45</u>) to enable the clock to the RTC register interface and peripheral clock.
- For RTC software reset use the RTC CTRL register. See <u>Table 263</u>. The RTC is reset
  only by initial power-up of the device or when an RTC software reset is applied, it is
  not initialized by other system resets.
- The RTC provides an interrupt to the NVIC for the RTC\_WAKE and RTC\_ALARM functions, see Table 2.
- To enable the RTC interrupts for waking up from deep-sleep mode, enable the interrupts in the STARTER0 register (Table 93) and the NVIC.
- To enable the RTC interrupts for waking up from deep power-down, enable the appropriate RTC clock and wake-up in the RTC CTRL register (Table 263).
- If enabled, the RTC and its oscillator continue running in all reduced power modes as long as power is supplied to the device. So, the 32 kHz output is always available to be enabled for syscon clock generation (see <u>Table 77</u>). Once enabled, the 32 kHz clock can be selected for the system clock or be observed through the CLKOUT pin. The 1 Hz output is enabled in the RTC CTRL register (RTC\_EN bit). Once the 1 Hz output is enabled, the 1 kHz output for the high-resolution wake-up timer can be enabled in the RTC CTRL register (RTC1KHZ\_EN bit).
- If the 32 kHz output of the RTC is used by another part of the system, enable it via the EN bit in the RTCOSCCTRL register. See <u>Table 77</u>.

#### Chapter 16: LPC5411x Real-Time Clock (RTC)

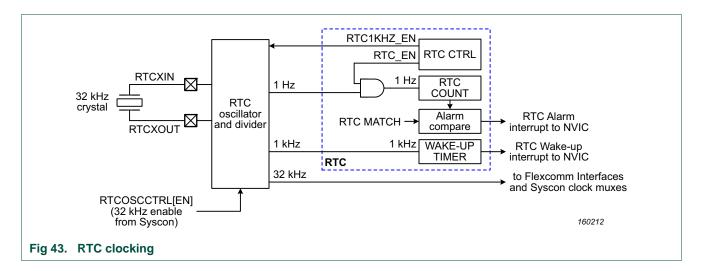

#### 16.3.1 RTC timers

The RTC contains two timers:

- The main RTC timer. This 32-bit timer uses a 1 Hz clock and is intended to run
  continuously as a real-time clock. When the timer value reaches a match value, an
  interrupt is raised. The alarm interrupt can also wake up the part from any low power
  mode if enabled.
- 2. The high-resolution/wake-up timer. This 16-bit timer uses a 1 kHz clock and operates as a one-shot down timer. Once the timer is loaded, it starts counting down to 0 at which point an interrupt is raised. The interrupt can wake up the part from any low power mode if enabled. This timer is intended to be used for timed wake-up from deep-sleep or deep power-down modes. The high-resolution wake-up timer can be disabled to conserve power if not used.

Chapter 16: LPC5411x Real-Time Clock (RTC)

## 16.4 General description

#### 16.4.1 Real-time clock

The real-time clock is a 32-bit up-counter which can be cleared or initialized by software. Once enabled, it counts continuously at a 1 Hz clock rate as long as the device is powered up and the RTC remains enabled.

The main purpose of the RTC is to count seconds and generate an alarm interrupt to the processor whenever the counter value equals the value programmed into the associated 32-bit match register.

If the part is in one of the reduced-power modes (deep-sleep, deep power-down) an RTC alarm interrupt can also wake up the part to exit the power mode and begin normal operation.

## 16.4.2 High-resolution/wake-up timer

The time interval required for many applications, including waking the part up from a low-power mode, will often demand a greater degree of resolution than the one-second minimum interval afforded by the main RTC counter. For these applications, a higher frequency secondary timer has been provided.

This secondary timer is an independent, stand-alone wake-up or general-purpose timer for timing intervals of up to 64 seconds with approximately one millisecond of resolution.

The High-Resolution/Wake-up Timer is a 16-bit down counter which is clocked at a 1 kHz rate when it is enabled. Writing any non-zero value to this timer will automatically enable the counter and launch a countdown sequence. When the counter is being used as a wake-up timer, this write can occur just prior to entering a reduced power mode.

When a starting count value is loaded, the High-Resolution/Wake-up Timer will turn on, count from the pre-loaded value down to zero, generate an interrupt and/or a wake-up command, and then turn itself off until re-launched by a subsequent software write.

# 16.4.3 RTC power

The RTC module and the oscillator that drives it, run directly from device power pins. As a result, the RTC will continue operating in deep power-down mode when power is internally turned off to the rest of the device.

# 16.5 Pin description

Table 261 gives a summary of pins related to the RTC.

Table 261. RTC pin description

Pin	Туре	Description
RTCXIN	Input	RTC oscillator input.
RTCXOUT	Output	RTC oscillator output.

### Chapter 16: LPC5411x Real-Time Clock (RTC)

# 16.6 Register description

Reset Values pertain to initial power-up of the device or when an RTC software reset is applied (except where noted). This block is not initialized by any other system reset.

Table 262. Register overview: RTC (base address 0x4002 C000)

Name	Access	Offset	Description	SWRESET bit in CTRL = 1	Reset value	Section
CTRL	R/W	0x000	RTC control register	0x1	0x1	16.6.1
MATCH	R/W	0x004	RTC match register	0xFFFF FFFF	0xFFFF FFFF	16.6.2
COUNT	R/W	0x008	RTC counter register	0x0	0x0	16.6.3
WAKE	R/W	0x00C	High-resolution/wake-up timer control register	0x0	0x0	16.6.4

## 16.6.1 RTC CTRL register

This register controls which clock the RTC uses (1 kHz or 1 Hz) and enables the two RTC interrupts to wake up the part from deep power-down. To wake up the part from deep-sleep mode, enable the RTC interrupts in the system control block STARTLOGIC1 register.

Table 263. RTC control register (CTRL, offset 0x000) bit description

be cleared prior to  et value except the lister. the RTC - including same time that the
et value except the ister. the RTC - including
ister. the RTC - including
same time that the
e written. NA
0x0
er. Writing a 0 has
C timer. This flag If which can also clears this bit.
0x0
o effect.
timed out. This flag also wake up the it.
0x0
ne part out of deep
ut of deep
no s hi

UM10914

## Chapter 16: LPC5411x Real-Time Clock (RTC)

Table 263. RTC control register (CTRL, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset value
5	WAKEDPD_EN		RTC 1 kHz timer wake-up enable for deep power-down.	0x0
		0	Disable. A match on the 1 kHz RTC timer will not bring the part out of deep power-down mode.	
		1	Enable. A match on the 1 kHz RTC timer bring the part out of deep power-down mode.	
6	RTC1KHZ_EN		RTC 1 kHz clock enable.	0x0
			This bit can be set to 0 to conserve power if the 1 kHz timer is not used. This bit has no effect when the RTC is disabled (bit 7 of this register is 0).	
		0	Disable. A match on the 1 kHz RTC timer will not bring the part out of deep power-down mode. The WAKE1KHZ flag clears when disabled.	
		1	Enable. The 1 kHz RTC timer is enabled.	
7	RTC_EN		RTC enable.	0x0
		0	Disable. The RTC 1 Hz and 1 kHz clocks are shut down and RTC operation is disabled. This bit should be 0 when writing to load a value in the RTC counter register.	
		1	Enable. The 1 Hz RTC clock is running and RTC operation is enabled. This bit must be set to initiate operation of the RTC. The first clock to the RTC counter occurs 1 s after this bit is set. To also enable the high-resolution, 1 kHz clock, set bit 6 in this register.	
8	RTC_OSC_PD		RTC oscillator power-down control.	0x0
		0	RTC oscillator is powered up and can output a clock if a crystal is correctly connected externally, or in BYPASS mode.	
		1	RTC oscillator is powered-down and outputs no clock, independent of BYPASS mode.	
9	RTC_OSC_BYPASS		RTC oscillator bypass control.	0x0
		0	RTC oscillator is in normal crystal oscillation mode.	
		1	RTC oscillator is bypassed. RTCXIN may be driven by an external clock. See specific device datasheet for connection details.	
31:10	-	-	Reserved. Read value is undefined, only zero should be written.	NA
		1		

# 16.6.2 RTC match register

### Table 264. RTC match register (MATCH, offset 0x04) bit description

Bit	Symbol	Description	Reset value
31:0	MATVAL	Contains the match value against which the 1 Hz RTC timer will be compared to set the	0xFFFF FFFF
		alarm flag RTC_ALARM and generate an alarm interrupt/wake-up if enabled.	

## Chapter 16: LPC5411x Real-Time Clock (RTC)

## 16.6.3 RTC counter register

Table 265. RTC counter register (COUNT, offset 0x08) bit description

Bit	Symbol	Description	Reset value
31:0	VAL	A read reflects the current value of the main, 1 Hz RTC timer.	0x0
		A write loads a new initial value into the timer.	
		The RTC counter will count up continuously at a 1 Hz rate once the RTC Software Reset is removed (by clearing bit 0 of the CTRL register).	
		<b>Remark:</b> No synchronization is provided to prevent a read of the counter register during a count transition. The suggested method to read a counter is to read the location twice and compare the results. If the values match, the time can be used. If they do not match, then the read should be repeated until two consecutive reads produce the same result.	
		<b>Remark:</b> Only write to this register when the RTC_EN bit in the RTC CTRL Register is 0. The counter increments one second after the RTC_EN bit is set.	

# 16.6.4 RTC high-resolution/wake-up register

## Table 266. RTC high-resolution/wake-up register (WAKE, offset 0x0C) bit description

Bit	Symbol	Description	Reset value
15:0	VAL	A read reflects the current value of the high-resolution/wake-up timer.	0x0
		A write pre-loads a start count value into the wake-up timer and initializes a count-down sequence.	
		Do not write to this register while counting is in progress.	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

250 of 590

# **UM10914**

# Chapter 17: LPC5411x Multi-Rate Timer (MRT)

Rev. 1.2 — 30 June 2016

**User manual** 

# 17.1 How to read this chapter

The MRT is available on all LPC5411x parts.

## 17.2 Features

- 24-bit interrupt timer
- Four channels independently counting down from individually set values
- Repeat interrupt, one-shot interrupt, and one-shot bus stall modes

# 17.3 Basic configuration

Configuration of the MRT is accomplished as followings:

- In the AHBCLKCTRL1 register (<u>Table 46</u>), set the MRT bit to enable the clock to the register interface.
- Clear the MRT reset using the PRESETCTRL1 register (Table 39).
- The global MRT interrupt is connected to an interrupt slot in the NVIC (see Table 2).

# 17.4 Pin description

The MRT is not associated with any device pins.

# 17.5 General description


The Multi-Rate Timer (MRT) provides a repetitive interrupt timer with four channels. Each channel can be programmed with an independent time interval.

Each channel operates independently from the other channels in one of the following modes:

- Repeat interrupt mode. See Section 17.5.1.
- One-shot interrupt mode. See Section 17.5.2.
- One-shot stall mode. See Section 17.5.3.

The modes for each timer are set in the timer's control register. See Table 270.

#### Chapter 17: LPC5411x Multi-Rate Timer (MRT)

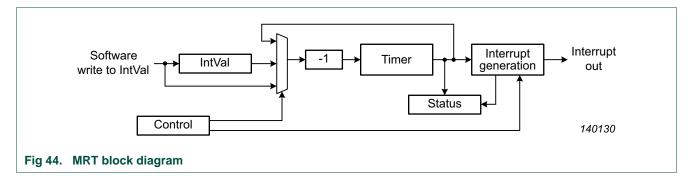

## 17.5.1 Repeat interrupt mode

The repeat interrupt mode generates repeated interrupts after a selected time interval. This mode can be used for software-based PWM or PPM applications.

When the timer n is in idle state, writing a non-zero value IVALUE to the INTVALn register immediately loads the time interval value IVALUE - 1, and the timer begins to count down from this value. When the timer reaches zero, an interrupt is generated, the value in the INTVALn register IVALUE - 1 is reloaded automatically, and the timer starts to count down again.

While the timer is running in repeat interrupt mode, the following actions can be performed:

- Change the interval value on the next timer cycle by writing a new value (>0) to the INTVALn register and setting the LOAD bit to 0. An interrupt is generated when the timer reaches zero. On the next cycle, the timer counts down from the new value.
- Change the interval value on-the-fly immediately by writing a new value (>0) to the INTVALn register and setting the LOAD bit to 1. The timer immediately starts to count down from the new timer interval value. An interrupt is generated when the timer reaches 0.
- Stop the timer at the end of time interval by writing a 0 to the INTVALn register and setting the LOAD bit to 0. An interrupt is generated when the timer reaches zero.
- Stop the timer immediately by writing a 0 to the INTVALn register and setting the LOAD bit to 1. No interrupt is generated when the INTVALn register is written.

## 17.5.2 One-shot interrupt mode

The one-shot interrupt generates one interrupt after a one-time count. With this mode, a single interrupt can be generated at any point. This mode can be used to introduce a specific delay in a software task.

When the timer is in the idle state, writing a non-zero value IVALUE to the INTVALn register immediately loads the time interval value IVALUE - 1, and the timer starts to count down. When the timer reaches 0, an interrupt is generated and the timer stops and enters the idle state.

While the timer is running in the one-shot interrupt mode, the following actions can be performed:

#### Chapter 17: LPC5411x Multi-Rate Timer (MRT)

- Update the INTVALn register with a new time interval value (>0) and set the LOAD bit to 1. The timer immediately reloads the new time interval, and starts counting down from the new value. No interrupt is generated when the TIME\_INTVALn register is updated.
- Write a 0 to the INTVALn register and set the LOAD bit to 1. The timer immediately stops counting and moves to the idle state. No interrupt is generated when the INTVALn register is updated.

#### 17.5.3 One-shot stall mode

One-shot stall mode is similar to one-shot interrupt mode, except that it is intended for very short delays, for instance when the delay needed is less than the time it takes to get to an interrupt service routine. This mode is designed for very low software overhead, requiring only a single write to the INTVAL register (if the channel is already configured for one-shot stall mode). The MRT times the requested delay while stalling the bus write operation, concluding the write when the delay is complete. No interrupt or status polling is needed.

Bus stall mode can be used when a short delay is need between two software controlled events, or when a delay is expected before software can continue. Since in this mode there are no bus transactions while the MRT is counting down, the CPU consumes a minimum amount of power during that time.

Note that bus stall mode provides a minimum amount of time between the execution of the instruction that performs the write to INTVAL and the time that software continues. Other system events, such as interrupts or other bus masters accessing the APB bus where the MRT resides, can cause the delay to be longer.

## Chapter 17: LPC5411x Multi-Rate Timer (MRT)

# 17.6 Register description

The reset values shown in <u>Table 267</u> are POR reset values.

Table 267. Register overview: MRT (base address 0x4000 D000)

Name	Access	Offset	Description	Reset value	Section
MRT Timer	0 registers	<b>S</b>			
INTVAL0	R/W	0x0	MRT0 Time interval value register. This value is loaded into the TIMER0 register.	0x0	17.6.1
TIMER0	RO	0x4	MRT0 Timer register. This register reads the value of the down-counter.	0xFF FFFF	17.6.2
CTRL0	R/W	8x0	MRT0 Control register. This register controls the MRT0 modes.	0x0	17.6.3
STAT0	R/W	0xC	MRT0 Status register.	0x0	17.6.4
MRT Timer	1 registers	5			
INTVAL1	R/W	0x10	MRT1 Time interval value register. This value is loaded into the TIMER1 register.	0x0	17.6.1
TIMER1	R/W	0x14	MRT1 Timer register. This register reads the value of the down-counter.	0xFF FFFF	17.6.2
CTRL1	R/W	0x18	MRT1 Control register. This register controls the MRT1 modes.	0x0	17.6.3
STAT1	R/W	0x1C	MRT1 Status register.	0x0	17.6.4
MRT Timer	2 registers	3		•	•
INTVAL2	R/W	0x20	MRT2 Time interval value register. This value is loaded into the TIMER2 register.	0x0	17.6.1
TIMER2	R/W	0x24	MRT2 Timer register. This register reads the value of the down-counter.	0xFF FFFF	17.6.2
CTRL2	R/W	0x28	MRT2 Control register. This register controls the MRT2 modes.	0x0	17.6.3
STAT2	R/W	0x2C	MRT2 Status register.	0x0	17.6.4
MRT Timer	3 registers	3			
INTVAL3	R/W	0x30	MRT3 Time interval value register. This value is loaded into the TIMER3 register.	0x0	17.6.1
TIMER3	R/W	0x34	MRT3 Timer register. This register reads the value of the down-counter.	0xFF FFFF	17.6.2
CTRL3	R/W	0x38	MRT3 Control register. This register controls the MRT modes.	0x0	17.6.3
STAT3	R/W	0x3C	MRT3 Status register.	0x0	17.6.4
Global MRT	registers			•	
MODCFG	R/W	0xF0	Module Configuration register. This register provides information about this particular MRT instance, and allows choosing an overall mode for the idle channel feature.	0x0	17.6.5
IDLE_CH	RO	0xF4	Idle channel register. This register returns the number of the first idle channel.	0x0	17.6.6
IRQ_FLAG	R/W	0xF8	Global interrupt flag register	0x0	17.6.7

#### **Chapter 17: LPC5411x Multi-Rate Timer (MRT)**

## 17.6.1 Time interval register

This register contains the MRT load value and controls how the timer is reloaded. The load value is IVALUE -1.

Table 268. Time interval register (INTVAL[0:3], offset 0x000 (INTVAL0) to 0x030 (INTVAL3)) bit description

Bit	Symbol	Value	Description	
23:0	IVALUE		Time interval load value. This value is loaded into the TIMERn register and the MRT channel n starts counting down from IVALUE -1.	0x0
			If the timer is idle, writing a non-zero value to this bit field starts the timer immediately.	
			If the timer is running, writing a zero to this bit field does the following:	
			<ul> <li>If LOAD = 1, the timer stops immediately.</li> </ul>	
			<ul> <li>If LOAD = 0, the timer stops at the end of the time interval.</li> </ul>	
30:24	-	-	Reserved. Read value is undefined, only zero should be written.	-
31	LOAD		Determines how the timer interval value IVALUE -1 is loaded into the TIMERn register. This bit is write-only. Reading this bit always returns 0.	0x0
		0	No force load. The load from the INTVALn register to the TIMERn register is processed at the end of the time interval if the repeat mode is selected.	
		1	Force load. The INTVALn interval value IVALUE -1 is immediately loaded into the TIMERn register while TIMERn is running.	

## 17.6.2 Timer register

The timer register holds the current timer value. This register is read-only.

Table 269. Timer register (TIMER[0:3], offset 0x004 (TIMER0) to 0x034 (TIMER3)) bit description

Bit	Symbol	Description	Reset value
23:0	VALUE	Holds the current timer value of the down-counter. The initial value of the TIMERn register is loaded as IVALUE - 1 from the INTVALn register either at the end of the time interval or immediately in the following cases:	0x00FF FFFF
		INTVALn register is updated in the idle state.	
		INTVALn register is updated with LOAD = 1.	
		When the timer is in idle state, reading this bit fields returns -1 (0x00FF FFFF).	
31:24	-	Reserved. Read value is undefined, only zero should be written.	0x0

#### Chapter 17: LPC5411x Multi-Rate Timer (MRT)

## 17.6.3 Control register

The control register configures the mode for each MRT and enables the interrupt.

Table 270. Control register (CTRL[0:3], offset 0x08 (CTRL0) to 0x38 (CTRL3)) bit description

Bit	Symbol	Value	Description	Reset value
0	INTEN		Enable the TIMERn interrupt.	0x0
		0	Disabled. TIMERn interrupt is disabled.	
		1	Enabled. TIMERn interrupt is enabled.	
2:1	MODE		Selects timer mode.	0x0
		0x0	Repeat interrupt mode.	
		0x1	One-shot interrupt mode.	
		0x2	One-shot stall mode.	
		0x3	Reserved.	
31:3	-	-	Reserved.	0x0

## 17.6.4 Status register

This register indicates the status of each MRT.

Table 271. Status register (STAT[0:3], offset 0x0C (STAT0) to 0x3C (STAT3)) bit description

Bit	Symbol	Value	Description	Reset value
0	INTFLAG		Monitors the interrupt flag.	0x0
		0	No pending interrupt. Writing a zero is equivalent to no operation.	
		1	Pending interrupt. The interrupt is pending because TIMERn has reached the end of the time interval. If the INTEN bit in the CONTROLn is also set to 1, the interrupt for timer channel n and the global interrupt are raised.	
			Writing a 1 to this bit clears the interrupt request.	
1	1 RUN		Indicates the state of TIMERn. This bit is read-only.	0x0
		0	Idle state. TIMERn is stopped.	
		1	Running. TIMERn is running.	
2	INUSE		Channel In Use flag. Operating details depend on the MULTITASK bit in the MODCFG register, and affects the use of IDLE_CH. See Section 17.6.6 "Idle channel register" for details of the two operating modes.	0x0
		0	This channel is not in use.	
		1	This channel is in use. Writing a 1 to this bit clears the status.	
31:3	-	-	Reserved.	0x0

256 of 590

#### Chapter 17: LPC5411x Multi-Rate Timer (MRT)

### 17.6.5 Module Configuration register

The MODCFG register provides the configuration (number of channels and timer width) for this MRT. See Section 17.6.6 "Idle channel register" for details.

Table 272. Module Configuration register (MODCFG, offset 0xF0) bit description

Bit	Symbol	Value	Description	Reset Value
3:0	NOC	-	Identifies the number of channels in this MRT. (4 channels on this device.)	0x3
8:4	NOB	-	Identifies the number of timer bits in this MRT. (24 bits wide on this device.)	0x17
30:9	-	-	Reserved. Read value is undefined, only zero should be written.	NA
31	MULTITASK		Selects the operating mode for the INUSE flags and the IDLE_CH register.	0x0
		0	Hardware status mode. In this mode, the INUSE(n) flags for all channels are reset.	
		1	Multi-task mode.	

## 17.6.6 Idle channel register

The idle channel register can be used to assist software in finding available channels in the MRT. This allows more flexibility by not giving hard assignments to software that makes use of the MRT, without the need to search for an available channel. Generally, IDLE CH returns the lowest available channel number.

IDLE\_CH can be used in two ways, controlled by the value of the MULTITASK bit in the MODCFG register. MULTITASK affects both the function of IDLE\_CH, and the function of the INUSE bit for each MRT channel as follows:

- MULTITASK = 0: hardware status mode. The INUSE flags for all MRT channels are reset. IDLECH returns the lowest idle channel number. A channel is considered idle if its RUN flag = 0, and there is no interrupt pending for that channel.
- MULTITASK = 1: multi-task mode. In this mode, the INUSE flags allow more control over when MRT channels are released for further use. When IDLE\_CH is read, returning a channel number of an idle channel, the INUSE flag for that channel is set by hardware. That channel will not be considered idle until its RUN flag = 0, there is no interrupt pending, and its INUSE flag = 0. This allows reserving an MRT channel with a single register read, and no need to start the channel before it is no longer considered idle by IDLE\_CH. It also allows software to identify a specific MRT channel that it can use, then use it more than once without releasing it, removing the need to ask for an available channel for every use.

Table 273. Idle channel register (IDLE\_CH, offset 0xF4) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved.	0x0
7:4	CHAN	Idle channel. Reading the CHAN bits, returns the lowest idle timer channel. The number is positioned such that it can be used as an offset from the MRT base address in order to access the registers for the allocated channel.	0x0
		If all timer channels are running, CHAN = 0xF. See text above for more details.	
31:8	-	Reserved.	0x0

#### Chapter 17: LPC5411x Multi-Rate Timer (MRT)

## 17.6.7 Global interrupt flag register

The global interrupt register combines the interrupt flags from the individual timer channels in one register. Setting and clearing each flag behaves in the same way as setting and clearing the INTFLAG bit in each of the STATUSn registers.

Table 274. Global interrupt flag register (IRQ\_FLAG, offset 0xF8) bit description

Bit	Symbol	Value	Description	Reset value
0	GFLAG0		Monitors the interrupt flag of TIMER0.	0x0
		0	No pending interrupt. Writing a zero is equivalent to no operation.	
		1	Pending interrupt. The interrupt is pending because TIMER0 has reached the end of the time interval. If the INTEN bit in the CONTROL0 register is also set to 1, the interrupt for timer channel 0 and the global interrupt are raised.  Writing a 1 to this bit clears the interrupt request.	
1	GFLAG1	_	Monitors the interrupt flag of TIMER1. See description of channel 0.	0x0
2	GFLAG2	-	Monitors the interrupt flag of TIMER2. See description of channel 0.	0x0
3	GFLAG3	-	Monitors the interrupt flag of TIMER3. See description of channel 0.	0x0
31:4	-	-	Reserved. Read value is undefined, only zero should be written.	0x0

258 of 590

# **UM10914**

## Chapter 18: LPC5411x CPU system tick timer (SYSTICK)

Rev. 1.2 — 30 June 2016

**User manual** 

# 18.1 How to read this chapter

The system tick timer (SysTick timer) is present on all LPC5411x devices in both the ARM Cortex-M4 and ARM Cortex-M0+ cores (when the Cortex-M0+ is present on selected devices).

# 18.2 Basic configuration

Configuration of the system tick timer is accomplished as follows:


- 1. Pins: The system tick timer uses no external pins.
- 2. Power: The system tick timer is enabled through the SysTick control register). The system tick timer clock is fixed to half the frequency of the system clock.
- 3. Enable the clock source for the SysTick timer in the SYST\_CSR register.

#### 18.3 Features

- Simple 24-bit timer.
- Uses dedicated exception vector.
- Clocked internally by the system clock or the SYSTICKCLK.

# 18.4 General description

Block diagrams of the SysTick timer for each CPU is shown in Figure 45.

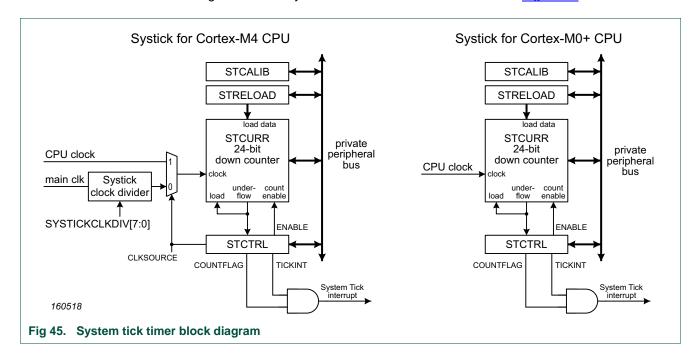

UM10914

#### Chapter 18: LPC5411x CPU system tick timer (SYSTICK)

The SysTick timer is an integral part of both the Cortex-M4 and Cortex-M0+ (if present). The SysTick timer is intended to generate a fixed 10 millisecond interrupt for use by an operating system or other system management software.

Since the SysTick timer is a part of the CPU, it facilitates porting of software by providing a standard timer that is available on ARM Cortex-based devices. The SysTick timer can be used for:

- An RTOS tick timer which fires at a programmable rate (for example 100 Hz) and invokes a SysTick routine.
- A high-speed alarm timer using the core clock.
- A simple counter. Software can use this to measure time to completion and time used.
- An internal clock source control based on missing/meeting durations. The COUNTFLAG bit-field in the control and status register can be used to determine if an action completed within a set duration, as part of a dynamic clock management control loop.

Refer to the appropriate ARM Cortex User Guide for details.

#### Chapter 18: LPC5411x CPU system tick timer (SYSTICK)

## 18.5 Register description

The systick timer registers are located on the private peripheral bus of each CPU (see Figure 4).

Table 275. Register overview: SysTick timer (base address 0xE000 E000)

Name	Access	Offset	Description	Reset value[1]	Section
SYST_CSR	R/W	0x010	System Timer Control and status register	0x0	18.5.1
SYST_RVR	R/W	0x014	System Timer Reload value register	0x0	18.5.2
SYST_CVR	R/W	0x018	System Timer Current value register	0x0	18.5.3
SYST_CALIB	RO	0x01C	System Timer Calibration value register	0x0	18.5.4

<sup>[1]</sup> Reset Value reflects the data stored in used bits only. It does not include content of reserved bits.

## 18.5.1 System Timer Control and status register

The SYST\_CSR register contains control information for the SysTick timer and provides a status flag. This register is part of the CPU.

This register determines the clock source for the system tick timer.

Table 276. SysTick Timer Control and status register (SYST\_CSR, offset 0x010) bit description

Bit	Symbol	Description	Reset value
0	ENABLE	System Tick counter enable. When 1, the counter is enabled. When 0, the counter is disabled.	0x0
1	TICKINT	System Tick interrupt enable. When 1, the System Tick interrupt is enabled. When 0, the System Tick interrupt is disabled. When enabled, the interrupt is generated when the System Tick counter counts down to 0.	0x0
2	CLKSOURCE	System Tick clock source selection. When 1, the system clock is selected. When 0, the output clock from the system tick clock divider (SYSTICKCLKDIV, see Figure 45 and Table 61) is selected as the reference clock.	0x0
		<b>Remark:</b> When the system tick clock divider is selected as the clock source, the CPU clock must be at least 2.5 times faster than the divider output.	
15:3	-	Reserved. Read value is undefined, only zero should be written.	NA
16	COUNTFLAG	Returns 1 if the SysTick timer counted to 0 since the last read of this register. Cleared automatically when read or when the counter is cleared.	0x0
31:17	-	Reserved. Read value is undefined, only zero should be written.	NA

### 18.5.2 System Timer Reload value register

The SYST\_RVR register is set to the value that will be loaded into the SysTick timer whenever it counts down to zero. This register is loaded by software as part of timer initialization. The SYST\_CALIB register may be read and used as the value for SYST\_RVR register if the CPU is running at the frequency intended for use with the SYST\_CALIB value.

#### Chapter 18: LPC5411x CPU system tick timer (SYSTICK)

Table 277. System Timer Reload value register (SYST\_RVR, offset 0x014) bit description

Bit	Symbol	Description	Reset value
23:0	RELOAD	This is the value that is loaded into the System Tick counter when it counts down to 0.	0x0
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

## 18.5.3 System Timer Current value register

The SYST\_CVR register returns the current count from the System Tick counter when it is read by software.

Table 278. System Timer Current value register (SYST\_CVR, offset 0x018) bit description

Bit	Symbol	Description	Reset value
23:0	CURRENT	Reading this register returns the current value of the System Tick counter. Writing any value clears the System Tick counter and the COUNTFLAG bit in SYST_CSR.	0x0
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

## 18.5.4 System Timer Calibration value register

The value of the SYST\_CALIB register is read-only and is provided by the value of the SYSTCKCAL register in the system configuration block (see Table 31).

Table 279. System Timer Calibration value register (SYST\_CALIB, offset 0x01C) bit description

Bit	Symbol	Description	Reset value
23:0	TENMS	Reload value from the SYSTCKCAL register in the SYSCON block. This field is loaded from the SYSTCKCAL register in Syscon.	0x0
29:24	-	Reserved. Read value is undefined, only zero should be written.	NA
30	SKEW	Indicates whether the TENMS value will generate a precise 10 millisecond time, or an approximation. This bit is loaded from the SYSTCKCAL register in Syscon.	0x0
		When 0, the value of TENMS is considered to be precise. When 1, the value of TENMS is not considered to be precise.	
31	NOREF	Indicates whether an external reference clock is available. This bit is loaded from the SYSTCKCAL register in Syscon.	0x0
		When 0, a separate reference clock is available. When 1, a separate reference clock is not available.	

#### Chapter 18: LPC5411x CPU system tick timer (SYSTICK)

## 18.6 Functional description

The SysTick timer is a 24-bit timer that counts down to zero and generates an interrupt. The intent is to provide a fixed 10 millisecond time interval between interrupts. The SysTick timer is clocked from the CPU clock (the system clock, see Figure 4) or from the reference clock, which is fixed to half the frequency of the CPU clock. In order to generate recurring interrupts at a specific interval, the SYST\_RVR register must be initialized with the correct value for the desired interval.

# 18.7 Example timer calculations

To use the system tick timer, do the following:

- 1. Program the SYST RVR register with the reload value calculated as shown below to obtain the desired time interval.
- 2. Clear the SYST\_CVR register by writing to it. This ensures that the timer will count from the SYST\_RVR value rather than an arbitrary value when the timer is enabled.

The following examples illustrate selecting SysTick timer reload values for different system configurations. All of the examples calculate an interrupt interval of 10 milliseconds, as the SysTick timer is intended to be used, and there are no rounding errors.

#### System clock = 72 MHz

Program the SYST\_CSR register with the value 0x7 which selects the system clock as the clock source and enables the SysTick timer and the SysTick timer interrupt.

SYST\_RVR = (system clock frequency  $\times$  10 ms) -1 = (72 MHz  $\times$  10 ms) -1 = 720000 -1 = 719999 = 0x000A FC7F

#### System tick timer clock = 24 MHz

Program the SYST CSR register with the value 0x3 which selects the clock from the system tick clock divider (see Section 4.5.32 "SYSTICK clock divider register") as the clock source and enables the SysTick timer and the SysTick timer interrupt. Use DIV = 3.

SYST\_RVR = (system tick timer clock frequency  $\times$  10 ms) -1 = (24 MHz  $\times$  10 ms) -1 = 240000 - 1 = 239999 = 0x0003 A97F

#### System clock = 12 MHz

Program the SYST CSR register with the value 0x7 which selects the system clock as the clock source and enables the SysTick timer and the SysTick timer interrupt.

In this case the system clock is derived from the FRO 12 MHz clock.

SYST\_RVR = (system clock frequency  $\times$  10 ms) -1 = (12 MHz  $\times$  10 ms) -1 = 120000 -1 = 119999 = 0x0001 D4BF

# **UM10914**

# **Chapter 19: LPC5411x Micro-tick Timer (UTICK)**

Rev. 1.2 — 30 June 2016

**User manual** 

# 19.1 How to read this chapter

The Micro-Tick Timer is available on all LPC5411x devices.

#### 19.2 Features

- Ultra simple, ultra-low power timer that can run and wake up the device in reduced power modes other than deep power-down.
- · Write once to start.
- Interrupt or software polling.
- Four capture registers that can be triggered by external pin transitions.

## 19.3 Basic configuration


Configure the Micro-Tick Timer as follows:

- Set the UTICK bit in the AHBCLKCTRL1 register (<u>Table 46</u>) to enable the clock to the Micro-Tick Timer register interface.
- The Micro-Tick Timer provides an interrupt to the NVIC, see <u>Table 2</u>.
- To enable Micro-Tick timer interrupts for waking up from deep-sleep mode, enable the interrupts in the STARTER0 register (Table 93) and the NVIC.
- Configure the pin functions of any Micro-tick Timer capture pins that will be used via IOCON, see <u>Chapter 7</u>.
- Enable the Watchdog oscillator that provides the Micro-Tick Timer clock in the syscon block by clearing the appropriate bit in PDRUNCFG. See <u>Section 4.5.52</u>.

Chapter 19: LPC5411x Micro-tick Timer (UTICK)

# 19.4 General description

Figure 46 shows a conceptual view of the Micro-tick Timer.

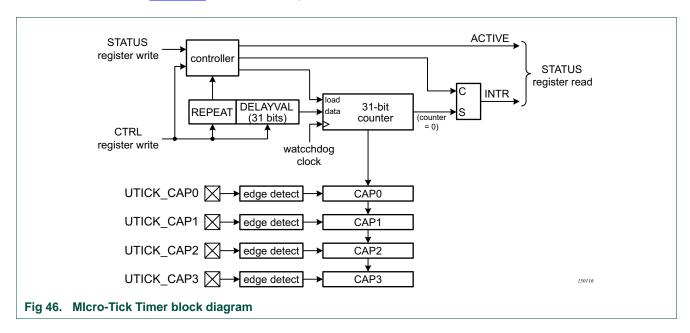

# 19.5 Pin description

Table 280 gives a summary of pins related to the Micro-tick Timer.

Table 280. Micro-tick Timer pin description

Pin	Туре	Description
UTICK_CAP0, UTICK_CAP1, UTICK_CAP2, UTICK_CAP3		Capture inputs. The selected transition on a capture pin can be configured to load the related CAP register with the value of counter.

#### Chapter 19: LPC5411x Micro-tick Timer (UTICK)

# 19.6 Register description

The Micro-Tick Timer contains the registers shown in <u>Table 281</u>. Note that the Micro-Tick Timer operates from a different (typically slower) clock than the CPU and bus systems. This means there may be a synchronization delay when accessing Micro-Tick Timer registers.

Table 281. Register overview: Micro-Tick Timer (base address 0x4000 E000)

Name	Access	Offset	Description	Reset value	Section
CTRL	R/W	0x000	Control register.	0x0	19.6.1
STAT	R/W	0x004	Status register.	0x0	19.6.2
CFG	R/W	800x0	Capture configuration register.	0x0	19.6.3
CAPCLR	WO	0x00C	Capture clear register.	NA	<u>19.6.4</u>
CAP0	RO	0x010	Capture register 0.	0x0	<u>19.6.5</u>
CAP1	RO	0x014	Capture register 1.	0x0	19.6.5
CAP2	RO	0x018	Capture register 2.	0x0	19.6.5
CAP3	RO	0x01C	Capture register 3.	0x0	19.6.5

## 19.6.1 CTRL register

This register controls the Micro-tick Timer. Any write to the CTRL register resets the counter, meaning a new interval will be measured if one was in progress.

Table 282. Control register (CTRL, offset 0x000) bit description

Bit	Symbol	Description	Reset value
30:0	DELAYVAL	Tick interval value. The delay will be equal to DELAYVAL + 1 periods of the timer clock. The minimum usable value is 1, for a delay of 2 timer clocks. A value of 0 stops the timer.	0x0
31	REPEAT	Repeat delay.	0x0
		<ul><li>0 = One-time delay.</li><li>1 = Delay repeats continuously.</li></ul>	

### 19.6.2 Status register

This register provides status for the Micro-tick Timer.

Table 283. Status register (STAT, offset 0x004) bit description

Bit	Symbol	Description	Reset value
0	INTR	Interrupt flag.	0x0
		<ul><li>0 = No interrupt is pending.</li><li>1 = An interrupt is pending. A write of any value to this register clears this flag.</li></ul>	
1	ACTIVE	Active flag.	0x0
		<ul><li>0 = The Micro-Tick Timer is stopped.</li><li>1 = The Micro-Tick Timer is currently active.</li></ul>	
31:2	-	Reserved	-

## 19.6.3 Capture configuration register

This register allows enabling Micro-tick capture functions and selects the polarity of the capture triggers.

**User manual** 

#### Chapter 19: LPC5411x Micro-tick Timer (UTICK)

Table 284. Capture configuration register (CFG, offset 0x008) bit description

Bit	Symbol	Description	Reset value
0	CAPEN0	Enable Capture 0. 1 = Enabled, 0 = Disabled.	0x0
1	CAPEN1	Enable Capture 1. 1 = Enabled, 0 = Disabled.	0x0
2	CAPEN2	Enable Capture 2. 1 = Enabled, 0 = Disabled.	0x0
3	CAPEN3	Enable Capture 3. 1 = Enabled, 0 = Disabled.	0x0
7:4	-	Reserved	-
8	CAPPOL0	Capture Polarity 0. 0 = Positive edge capture, 1 = Negative edge capture.	0x0
9	CAPPOL1	Capture Polarity 1. 0 = Positive edge capture, 1 = Negative edge capture.	0x0
10	CAPPOL2	Capture Polarity 2. 0 = Positive edge capture, 1 = Negative edge capture.	0x0
11	CAPPOL3	Capture Polarity 3. 0 = Positive edge capture, 1 = Negative edge capture.	0x0
31:12	-	Reserved	-

### 19.6.4 Capture clear register

This read-only register allows clearing previous capture values, allowing new captures to take place.

Table 285. Capture clear register (CAPCLR, offset 0x00C) bit description

Bit	Symbol	Description	Reset value
0	CAPCLR0	Clear capture 0. Writing 1 to this bit clears the CAP0 register value.	NA
1	CAPCLR1	Clear capture 1. Writing 1 to this bit clears the CAP1 register value.	NA
2	CAPCLR2	Clear capture 2. Writing 1 to this bit clears the CAP2 register value.	NA
3	CAPCLR3	Clear capture 3. Writing 1 to this bit clears the CAP3 register value.	NA
31:4	-	Reserved	-

## 19.6.5 Capture registers

This register contains the Micro-tick time value based on any previously capture events. Each Capture register is associated with one of the capture trigger inputs.

Table 286. Capture registers (CAP[0:3], offsets [0x010:0x01C]) bit description

Bit	Symbol	Description	Reset value
30:0	CAP_VALUE	Capture value for the related capture event (UTICK_CAPn. Note: the value is 1 lower than the actual value of the Micro-tick Timer at the moment of the capture event.	0x0
31	VALID	Capture Valid. When 1, a value has been captured based on a transition of the related UTICK_CAPn pin. Cleared by writing to the related bit in the CAPCLR register.	0x0

267 of 590

# **UM10914**

# Chapter 20: LPC5411x USB 2.0 device controller

Rev. 1.2 — 30 June 2016

**User manual** 

## 20.1 How to read this chapter

The USB block is available on selected LPC5411x devices.

# 20.2 Basic configuration

Initial configuration of the USB is accomplished as follows:

- Pins: Configure the USB pins in the IOCON register block.
- In the AHBCLKCTRL1 register, enable the clock to the USB controller register interface (see <u>Section 4.5.17</u>).
- Power: Enable the power to the USB PHY in the PDRUNCFG0 register (Section 4.5.52).
- Configure the USB main clock (see Section 4.5.27 and Section 4.5.37).
- Configure the USB wake-up signal (see <u>Section 20.7.6</u>) if needed.

#### 20.3 Features

- USB2.0 full-speed device controller.
- Supports 10 physical (5 logical) endpoints including two control endpoints if physical, one control endpoint if logical.
- Single and double-buffering supported.
- Each non-control endpoint supports bulk, interrupt, or isochronous endpoint types.
- Supports wake-up from deep-sleep mode on USB activity and remote wake-up.
- Supports SoftConnect internally.
- Link Power Management (LPM) supported.

# 20.4 General description

The Universal Serial Bus (USB) is a four-wire bus that supports communication between a host and one or more (up to 127) peripherals. The host controller allocates the USB bandwidth to attached devices through a token-based protocol. The bus supports hot plugging and dynamic configuration of the devices. All transactions are initiated by the host controller.

The host schedules transactions in 1 ms frames. Each frame contains a Start-Of-Frame (SOF) marker and transactions that transfer data to or from device endpoints. Each device can have a maximum of 16 logical or 32 physical endpoints. The device controller supports up to 10 physical endpoints. There are four types of transfers defined for the endpoints. Control transfers are used to configure the device.


#### Chapter 20: LPC5411x USB 2.0 device controller

Interrupt transfers are used for periodic data transfer. Bulk transfers are used when the latency of transfer is not critical. Isochronous transfers have guaranteed delivery time but no error correction.

For more information on the Universal Serial Bus, see the USB Implementers Forum website.

The USB device controller enables full-speed (12 Mb/s) data exchange with a USB host controller.

Figure 47 shows the block diagram of the USB device controller.

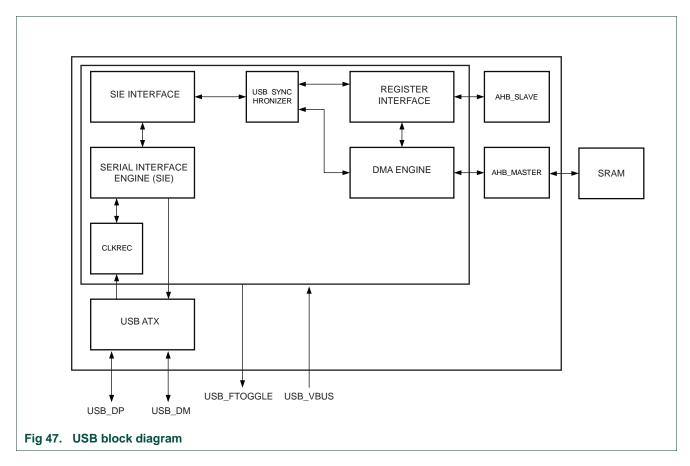


The USB Device Controller has a built-in analog transceiver (ATX). The USB ATX sends/receives the bi-directional USB0\_DP and USB0\_DM signals of the USB bus.

The SIE implements the full USB protocol layer. It is completely hard-wired for speed and needs no software intervention. It handles transfer of data between the endpoint buffers in USB RAM and the USB bus. The functions of this block include: synchronization pattern recognition, parallel/serial conversion, bit stuffing/de-stuffing, CRC checking/generation, PID verification/generation, address recognition, and handshake evaluation/generation.

#### Chapter 20: LPC5411x USB 2.0 device controller

#### 20.4.1 USB software interface

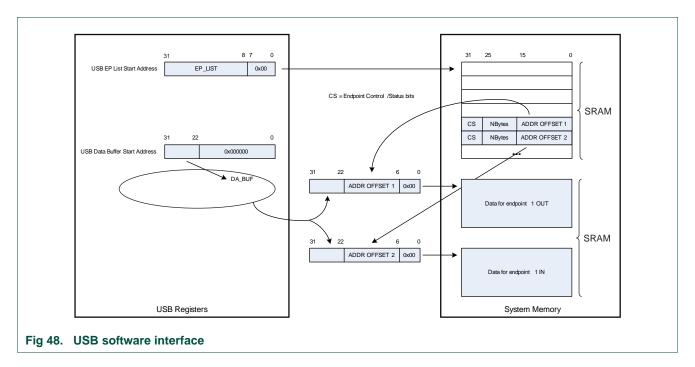

## 20.4.2 Fixed endpoint configuration

<u>Table 287</u> shows the supported endpoint configurations. The packet size is configurable up to the maximum value shown in <u>Table 287</u> for each type of end point.

Table 287. Fixed endpoint configuration

Logical endpoint	Physical endpoint	Endpoint type	Direction	Max packet size (byte)	Double buffer
0	0	Control	Out	64	No
0	1	Control	In	64	No
1	2	Interrupt/Bulk/Isochronous	Out	64/64/1023	Yes
1	3	Interrupt/Bulk/Isochronous	In	64/64/1023	Yes
2	4	Interrupt/Bulk/Isochronous	Out	64/64/1023	Yes
2	5	Interrupt/Bulk/Isochronous	In	64/64/1023	Yes
3	6	Interrupt/Bulk/Isochronous	Out	64/64/1023	Yes
3	7	Interrupt/Bulk/Isochronous	In	64/64/1023	Yes
4	8	Interrupt/Bulk/Isochronous	Out	64/64/1023	Yes
4	9	Interrupt/Bulk/Isochronous	In	64/64/1023	Yes

#### 20.4.3 SoftConnect

The softConnect signal is implemented internally. An external pull-up resistor between USB\_DP and VDD is not necessary.

#### Chapter 20: LPC5411x USB 2.0 device controller

### 20.4.4 Interrupts

The USB controller has two interrupt lines, a general USB interrupt and a USB activity wake-up interrupt (USB\_NEEDCLK). An general interrupt is generated by the hardware if both the interrupt status bit and the corresponding interrupt enable bit are set. The interrupt status bit is set by hardware if the interrupt condition occurs (irrespective of the interrupt enable bit setting).

## 20.4.5 Suspend and resume

The USB protocol insists on power management by the USB device. This becomes even more important if the device draws power from the bus (bus-powered device). The following constraints should be met by the bus-powered device.

- A device in the non-configured state should draw a maximum of 100mA from the USB bus.
- A configured device can draw only up to what is specified in the Max Power field of the configuration descriptor. The maximum value is 500 mA.
- A suspended device should draw a maximum of 500 μA.

A device will go into the L2 suspend state if there is no activity on the USB bus for more than 3 ms. A suspended device wakes up, if there is transmission from the host (host-initiated wake up). The USB controller also supports software initiated remote wake-up. To initiate remote wake-up, software on the device must enable all clocks and clear the suspend bit. This will cause the hardware to generate a remote wake-up signal upstream.

The USB controller supports Link Power Management (LPM). Link Power Management defines an additional link power management state L1 that supplements the existing L2 state by utilizing most of the existing suspend/resume infrastructure but provides much faster transitional latencies between L1 and L0 (On).

The assertion of USB suspend signal indicates that there was no activity on the USB bus for the last 3 ms. At this time an interrupt is sent to the processor on which the software can start preparing the device for suspend.

If there is no activity for the next 2 ms, the USB NEEDCLK signal will go low. This indicates that the USB main clock can be switched off.

When activity is detected on the USB bus, the USB suspend signal is deactivated and USB NEEDCLK signal is activated. This process is fully combinatorial and hence no USB main clock is required to activate the USB NEEDCLK signal.

## 20.4.6 Frame toggle output

The USB0\_FTOGGLE output pin reflects the 1 kHz clock derived from the incoming Start of Frame tokens sent by the USB host.

### 20.4.7 Clocking

The USB device controller has the following clock connections:

#### Chapter 20: LPC5411x USB 2.0 device controller

- USB main clock: The USB main clock is a 48 MHz clock used for USB functions (see <u>Section 4.5.27</u> and <u>Section 4.5.37</u>). If the FRO is used as the USB clock source, it can be configured to adjust automatically to the USB bus rate (see <u>Section 4.5.46</u>).
- AHB clock: This is the AHB system bus clock. The minimum frequency of the AHB clock is 6 MHz when the USB device controller is receiving or transmitting USB packets.

## 20.5 Pin description

The device controller can access one USB port.

Table 288. USB device pin description

Name	Direction	Description
V <sub>BUS</sub>	I	$V_{\text{BUS}}$ status input. When this function is not enabled via its corresponding IOCON register, it is driven HIGH internally.
USB0_FTOGGLE	0	USB 1 ms SoF (Start of Frame) signal.
USB0_DP	I/O	Positive differential data. If the device is put into Deep power-down mode, this pin should not be allowed to float, i.e. externally pulled up or down.
USB0_DM	I/O	Negative differential data. If the device is put into Deep power-down mode, this pin should not be allowed to float, i.e. externally pulled up or down.

#### Chapter 20: LPC5411x USB 2.0 device controller

# 20.6 Register description

Table 289. Register overview: USB (base address 0x4008 4000)

Name	Access	Offset	Description	Reset value	Section
DEVCMDSTAT	R/W	0x000	USB Device Command/Status register	0x800	20.6.1
INFO	R/W	0x004	USB Info register	0x0	20.6.2
EPLISTSTART	R/W	800x0	USB EP Command/Status List start address	0x0	20.6.3
DATABUFSTART	R/W	0x00C	USB Data buffer start address	0x0	20.6.4
LPM	R/W	0x010	USB Link Power Management register	0x0	20.6.5
EPSKIP	R/W	0x014	USB Endpoint skip	0x0	20.6.6
EPINUSE	R/W	0x018	USB Endpoint Buffer in use	0x0	20.6.7
EPBUFCFG	R/W	0x01C	USB Endpoint Buffer Configuration register	0x0	20.6.8
INTSTAT	R/W	0x020	USB interrupt status register	0x0	20.6.9
INTEN	R/W	0x024	USB interrupt enable register	0x0	20.6.10
INTSETSTAT	R/W	0x028	USB set interrupt status register	0x0	20.6.11
EPTOGGLE	RO	0x034	USB Endpoint toggle register	0x0	20.6.12

# 20.6.1 USB Device Command/Status register

Table 290. USB Device Command/Status register (DEVCMDSTAT, offset 0x00) bit description

Bit	Symbol	Value	Description	Reset value	Access
6:0	DEV_ADDR	-	USB device address. After bus reset, the address is reset to 0x00. If the enable bit is set, the device will respond on packets for function address DEV_ADDR. When receiving a SetAddress Control Request from the USB host, software must program the new address before completing the status phase of the SetAddress Control Request.	0x0	R/W
7	DEV_EN	-	USB device enable. If this bit is set, the HW will start responding on packets for function address DEV_ADDR.	0x0	R/W
8	SETUP	-	SETUP token received. If a SETUP token is received and acknowledged by the device, this bit is set. As long as this bit is set all received IN and OUT tokens will be NAKed by HW. SW must clear this bit by writing a one. If this bit is zero, HW will handle the tokens to the CTRL EP0 as indicated by the CTRL EP0 IN and OUT data information programmed by SW.	0x0	R/W1C
9	FORCE_		Forces the NEEDCLK output to always be on:	0x0	R/W
	NEEDCLK	0	USB_NEEDCLK has normal function.		
		1	USB_NEEDCLK always 1. Clock will not be stopped in case of suspend.		
10	-	-	Reserved.	0x0	RO
11	LPM_SUP		LPM Supported:	0x1	R/W
		0	LPM not supported.		
		1	LPM supported.		
12	INTONNAK_AO		Interrupt on NAK for interrupt and bulk OUT EP	0x0	R/W
		0	Only acknowledged packets generate an interrupt		
		1	Both acknowledged and NAKed packets generate interrupts.		

**User manual** 

#### Chapter 20: LPC5411x USB 2.0 device controller

Table 290. USB Device Command/Status register (DEVCMDSTAT, offset 0x00) bit description

Bit	Symbol	Value	Description	Reset value	Access
13	INTONNAK_AI		Interrupt on NAK for interrupt and bulk IN EP	0x0	R/W
		0	Only acknowledged packets generate an interrupt		
		1	Both acknowledged and NAKed packets generate interrupts.		
14	INTONNAK_CO		Interrupt on NAK for control OUT EP	0x0	R/W
		0	Only acknowledged packets generate an interrupt		
		1	Both acknowledged and NAKed packets generate interrupts.		
15	INTONNAK_CI		Interrupt on NAK for control IN EP	0x0	R/W
		0	Only acknowledged packets generate an interrupt		
		1	Both acknowledged and NAKed packets generate interrupts.		
16	DCON	-	Device status - connect. The connect bit must be set by SW to indicate that the device must signal a connect. The pull-up resistor on USB0_DP will be enabled when this bit is set and the VBUSDEBOUNCED bit is one.	0x0	R/W
17	DSUS	-	Device status - suspend.  The suspend bit indicates the current suspend state. It is set to 1 when the device hasn't seen any activity on its upstream port for more than 3 milliseconds. It is reset to 0 on any activity. When the device is suspended (Suspend bit DSUS = 1) and the software writes a 0 to it, the device will generate a remote wake-up. This will only happen when the device is connected (Connect bit = 1). When the device is not connected or not suspended, a writing a 0 has no effect. Writing a 1 never has an effect.	0x0	R/W
18	-	-	Reserved.	0x0	RO
19	LPM_SUS	-	Device status - LPM Suspend. This bit represents the current LPM suspend state. It is set to 1 by HW when the device has acknowledged the LPM request from the USB host and the Token Retry Time of 10 $\mu s$ has elapsed. When the device is in the LPM suspended state (LPM suspend bit = 1) and the software writes a zero to this bit, the device will generate a remote walk-up. Software can only write a zero to this bit when the LPM_REWP bit is set to 1. HW resets this bit when it receives a host initiated resume. HW only updates the LPM_SUS bit when the LPM_SUPP bit is equal to one.	0x0	R/W
20	LPM_REWP	-	LPM Remote Wake-up Enabled by USB host. HW sets this bit to one when the bRemoteWake bit in the LPM extended token is set to 1. HW will reset this bit to 0 when it receives the host initiated LPM resume, when a remote wake-up is sent by the device or when a USB bus reset is received. Software can use this bit to check if the remote wake-up feature is enabled by the host for the LPM transaction.	0x0	RO
23:21	-	-	Reserved.	0x0	RO
24	DCON_C	-	Device status - connect change. The Connect Change bit is set when the device's pull-up resistor is disconnected because VBus disappeared. The bit is reset by writing a one to it.	0x0	R/W1C

#### Chapter 20: LPC5411x USB 2.0 device controller

Table 290. USB Device Command/Status register (DEVCMDSTAT, offset 0x00) bit description

Bit	Symbol	Value	Description	Reset value	Access
25	DSUS_C	-	Device status - suspend change. The suspend change bit is set to 1 when the suspend bit toggles. The suspend bit can toggle because: - The device goes in the suspended state - The device is disconnected - The device receives resume signaling on its upstream port. The bit is reset by writing a one to it.	0x0	R/W1C
26	DRES_C	-	Device status - reset change.  This bit is set when the device received a bus reset. On a bus reset the device will automatically go to the default state (unconfigured and responding to address 0). The bit is reset by writing a one to it.	0x0	R/W1C
27	-	-	Reserved.	0x0	RO
28	VBUS DEBOUNCED	-	This bit indicates if Vbus is detected or not. The bit raises immediately when Vbus becomes high. It drops to zero if Vbus is low for at least 3 ms. If this bit is high and the DCon bit is set, the HW will enable the pull-up resistor to signal a connect.	0x0	RO
31:29	-	-	Reserved.	0x0	RO

# 20.6.2 USB Info register

## Table 291. USB Info register (INFO, offset 0x04) bit description

Bit	Symbol	Value	Description	Reset value	Access
10:0	FRAME_NR	-	Frame number. This contains the frame number of the last successfully received SOF. In case no SOF was received by the device at the beginning of a frame, the frame number returned is that of the last successfully received SOF. In case the SOF frame number contained a CRC error, the frame number returned will be the corrupted frame number as received by the device.	0x0	RO

#### Chapter 20: LPC5411x USB 2.0 device controller

Table 291. USB Info register (INFO, offset 0x04) bit description

Bit	Symbol	Value	Description	Reset value	Access
14:11	ERR_CODE		The error code which last occurred:	0x0	R/W
		0x0	No error		
		0x1	PID encoding error	-	
		0x2	PID unknown		
		0x3	Packet unexpected		
		0x4	Token CRC error		
		0x5	Data CRC error		
		0x6	Time out		
		0x7	Babble		
		0x8	Truncated EOP		
		0x9	Sent/Received NAK		
		0xA	Sent Stall		
		0xB	Overrun		
		0xC	Sent empty packet		
		0xD	Bitstuff error		
		0xE	Sync error		
		0xF	Wrong data toggle		
15	-	-	Reserved.	0x0	RO
31:16	-	-	Reserved	-	RO

#### 20.6.3 USB EP Command/Status List start address

This 32-bit register indicates the start address of the USB EP Command/Status List. Only a subset of these bits is programmable by software. The 8 least-significant bits are hardcoded to zero because the list must start on a 256 byte boundary. Bits 31 to 8 can be programmed by software.

Table 292. USB EP Command/Status List start address (EPLISTSTART, offset 0x08) bit description

Bit	Symbol	Description	Reset value	Access
7:0	-	Reserved	0x0	RO
31:8	EP_LIST	Start address of the USB EP Command/Status List.	0x0	R/W

## 20.6.4 USB Data buffer start address

This register indicates the page of the AHB address where the endpoint data can be located.

Table 293. USB Data buffer start address (DATABUFSTART, offset 0x0C) bit description

Bit	Symbol	Description	Reset value	Access
21:0	-	Reserved	0x0	R
31:22	DA_BUF	Start address of the buffer pointer page where all endpoint data buffers are located.	0x0	R/W

276 of 590

#### Chapter 20: LPC5411x USB 2.0 device controller

## 20.6.5 USB Link Power Management register

Table 294. Link Power Management register (LPM, offset 0x10) bit description

Bit	Symbol	Description	Reset value	Access
3:0	HIRD_HW	Host Initiated Resume Duration - HW. This is the HIRD value from the last received LPM token	0x0	RO
7:4	HIRD_SW	Host Initiated Resume Duration - SW. This is the time duration required by the USB device system to come out of LPM initiated suspend after receiving the host initiated LPM resume.	0x0	R/W
8	DATA_PENDING	As long as this bit is set to one and LPM supported bit is set to one, HW will return a NYET handshake on every LPM token it receives.  If LPM supported bit is set to one and this bit is zero, HW will return an ACK handshake on every LPM token it receives.  If SW has still data pending and LPM is supported, it must set this bit to 1.	0x0	R/W
31:9	RESERVED	Reserved	0x0	RO

## 20.6.6 USB Endpoint skip

#### Table 295. USB Endpoint skip (EPSKIP, offset 0x14) bit description

Bit	Symbol	Description	Reset value	Access
29:0	SKIP	Endpoint skip: Writing 1 to one of these bits, will indicate to HW that it must deactivate the buffer assigned to this endpoint and return control back to software. When HW has deactivated the endpoint, it will clear this bit, but it will not modify the EPINUSE bit. An interrupt will be generated when the Active bit goes from 1 to 0. Note: In case of double-buffering, HW will only clear the Active bit of the buffer indicated by the EPINUSE bit.	0x0	R/W
31:30	-	Reserved	0x0	RO

## 20.6.7 USB Endpoint Buffer in use

#### Table 296. USB Endpoint Buffer in use (EPINUSE, offset 0x18) bit description

Bit	Symbol	Description	Reset value	Access
1:0	-	Reserved. Fixed to zero because the control endpoint zero is fixed to single-buffering for each physical endpoint.	0x0	RO
9:2	BUF	Buffer in use: This register has one bit per physical endpoint. 0: HW is accessing buffer 0. 1: HW is accessing buffer 1.	0x0	R/W
31:10	-	Reserved	0x0	RO

#### Chapter 20: LPC5411x USB 2.0 device controller

## 20.6.8 USB Endpoint Buffer Configuration

Table 297. USB Endpoint Buffer Configuration (EPBUFCFG, offset 0x1C) bit description

Bit	Symbol	Description	Reset value	Access
1:0	-	Reserved. Fixed to zero because the control endpoint zero is fixed to single-buffering for each physical endpoint.	0x0	RO
9:2	BUF_SB	Buffer usage: This register has one bit per physical endpoint.  0: Single-buffer.  1: Double-buffer.  If the bit is set to single-buffer (0), it will not toggle the corresponding EPINUSE bit when it clears the active bit. If the bit is set to double-buffer (1), HW will toggle the EPINUSE bit when it clears the Active bit for the buffer.	0x0	R/W
31:10	-	Reserved	0x0	RO

## 20.6.9 USB interrupt status register

#### Table 298. USB interrupt status register (INTSTAT, offset 0x20) bit description

Bit	Symbol	Description	Reset value	Access
0	EP0OUT	Interrupt status register bit for the Control EP0 OUT direction.  This bit will be set if NBytes transitions to zero or the skip bit is set by software or a SETUP packet is successfully received for the control EP0.  If the IntOnNAK_CO is set, this bit will also be set when a NAK is transmitted for the Control EP0 OUT direction.  Software can clear this bit by writing a one to it.	0x0	R/W1C
1	EPOIN	Interrupt status register bit for the Control EP0 IN direction.  This bit will be set if NBytes transitions to zero or the skip bit is set by software.  If the IntOnNAK_CI is set, this bit will also be set when a NAK is transmitted for the Control EP0 IN direction.  Software can clear this bit by writing a one to it.	0x0	R/W1C
2	EP1OUT	Interrupt status register bit for the EP1 OUT direction.  This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AO is set, this bit will also be set when a NAK is transmitted for the EP1 OUT direction.  Software can clear this bit by writing a one to it.	0x0	R/W1C
3	EP1IN	Interrupt status register bit for the EP1 IN direction.  This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AI is set, this bit will also be set when a NAK is transmitted for the EP1 IN direction.  Software can clear this bit by writing a one to it.	0x0	R/W1C
4	EP2OUT	Interrupt status register bit for the EP2 OUT direction.  This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AO is set, this bit will also be set when a NAK is transmitted for the EP2 OUT direction.  Software can clear this bit by writing a one to it.	0x0	R/W1C
5	EP2IN	Interrupt status register bit for the EP2 IN direction. This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AI is set, this bit will also be set when a NAK is transmitted for the EP2 IN direction. Software can clear this bit by writing a one to it.	0x0	R/W1C

UM10914

#### Chapter 20: LPC5411x USB 2.0 device controller

Table 298. USB interrupt status register (INTSTAT, offset 0x20) bit description

Bit	Symbol	Description	Reset value	Access
6	EP3OUT	Interrupt status register bit for the EP3 OUT direction. This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AO is set, this bit will also be set when a NAK is transmitted for the EP3 OUT direction. Software can clear this bit by writing a one to it.	0x0	R/W1C
7	EP3IN	Interrupt status register bit for the EP3 IN direction. This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AI is set, this bit will also be set when a NAK is transmitted for the EP3 IN direction. Software can clear this bit by writing a one to it.	0x0	R/W1C
8	EP4OUT	Interrupt status register bit for the EP4 OUT direction. This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AO is set, this bit will also be set when a NAK is transmitted for the EP4 OUT direction. Software can clear this bit by writing a one to it.	0x0	R/W1C
9	EP4IN	Interrupt status register bit for the EP4 IN direction.  This bit will be set if the corresponding Active bit is cleared by HW. This is done in case the programmed NBytes transitions to zero or the skip bit is set by software. If the IntOnNAK_AI is set, this bit will also be set when a NAK is transmitted for the EP4 IN direction.  Software can clear this bit by writing a one to it.	0x0	R/W1C
29:10	-	Reserved	0x0	RO
30	FRAME_INT	Frame interrupt. This bit is set to one every millisecond when the VbusDebounced bit and the DCON bit are set. This bit can be used by software when handling isochronous endpoints. Software can clear this bit by writing a one to it.	0x0	R/W1C
31	DEV_INT	Device status interrupt. This bit is set by HW when one of the bits in the Device Status Change register are set. Software can clear this bit by writing a one to it.	0x0	R/W1C

# 20.6.10 USB interrupt enable register

## Table 299. USB interrupt enable register (INTEN, offset 0x24) bit description

Bit	Symbol	Description	Reset value	Access
9:0	EP_INT_EN	If this bit is set and the corresponding USB interrupt status bit is set, a HW interrupt is generated on the interrupt line indicated by the corresponding USB interrupt routing bit.	0x0	R/W
29:10	-	Reserved	0x0	RO
30	FRAME_INT_EN	If this bit is set and the corresponding USB interrupt status bit is set, a HW interrupt is generated on the interrupt line indicated by the corresponding USB interrupt routing bit.	0x0	R/W
31	DEV_INT_EN	If this bit is set and the corresponding USB interrupt status bit is set, a HW interrupt is generated on the interrupt line indicated by the corresponding USB interrupt routing bit.	0x0	R/W

#### Chapter 20: LPC5411x USB 2.0 device controller

## 20.6.11 USB set interrupt status register

Table 300. USB set interrupt status register (INTSETSTAT, offset 0x28) bit description

Bit	Symbol	Description	Reset value	Access
9:0	EP_SET_INT	If software writes a one to one of these bits, the corresponding USB interrupt status bit is set.  When this register is read, the same value as the USB interrupt status register is returned.	0x0	R/W
29:10	-	Reserved	0x0	RO
30	FRAME_SET_INT	If software writes a one to one of these bits, the corresponding USB interrupt status bit is set.  When this register is read, the same value as the USB interrupt status register is returned.	0x0	R/W
31	DEV_SET_INT	If software writes a one to one of these bits, the corresponding USB interrupt status bit is set.  When this register is read, the same value as the USB interrupt status register is returned.	0x0	R/W

# 20.6.12 USB Endpoint toggle

## Table 301. USB Endpoint toggle (EPTOGGLE, offset 0x34) bit description


Bit	Symbol	Description	Reset value	Access
9:0	TOGGLE	Endpoint data toggle: This field indicates the current value of the data toggle for the corresponding endpoint.	0x0	RO
31:10	-	Reserved	0x0	RO

#### Chapter 20: LPC5411x USB 2.0 device controller

## 20.7 Functional description

#### 20.7.1 Endpoint command/status list

<u>Figure 49</u> gives an overview on how the Endpoint List is organized in memory. The USB EP Command/Status List start register points to the start of the list that contains all the endpoint information in memory. The order of the endpoints is fixed as shown in the picture.

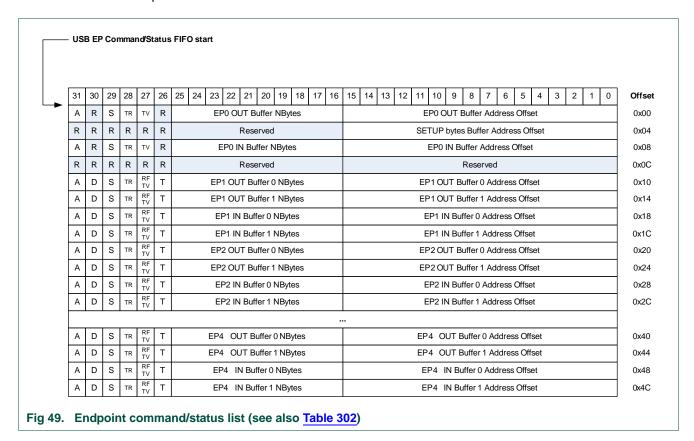

281 of 590

**UM10914 NXP Semiconductors** 

## Chapter 20: LPC5411x USB 2.0 device controller

Table 302. Endpoint commands

Symbol	Access	Description
Α	R/W	Active
		The buffer is enabled. HW can use the buffer to store received OUT data or to transmit data on the IN endpoint.
		Software can only set this bit to '1'. As long as this bit is set to one, software is not allowed to update any of the values in this 32-bit word. In case software wants to deactivate the buffer, it must write a one to the corresponding "skip" bit in the USB Endpoint skip register. Hardware can only write this bit to zero. It will do this when it receives a short packet or when the NBytes field transitions to zero or when software has written a one to the "skip" bit.
D	R/W	Disabled
		The selected endpoint is enabled.     The selected endpoint is disabled.
		If a USB token is received for an endpoint that has the disabled bit set, hardware will ignore the token and not return any data or handshake. When a bus reset is received, software must set the disable bit of all endpoints to 1.
		Software can only modify this bit when the active bit is zero.
S	R/W	Stall
		The selected endpoint is not stalled.     The selected endpoint is stalled.
		The Active bit has always higher priority than the Stall bit. This means that a Stall handshake is only sent when the active bit is zero and the stall bit is one.
		Software can only modify this bit when the active bit is zero.
TR	R/W	Toggle Reset
		When software sets this bit to one, the HW will set the toggle value equal to the value indicated in the "toggle value" (TV) bit.
		For the control endpoint zero, this is not needed to be used because the hardware resets the endpoint toggle to one for both directions when a setup token is received.
		For the other endpoints, the toggle can only be reset to zero when the endpoint is reset.
RF/TV	R/W	Rate Feedback mode / Toggle value
		For bulk endpoints and isochronous endpoints this bit is reserved and must be set to zero.
		For the control endpoint zero this bit is used as the toggle value. When the toggle reset bit is set, the data toggle is updated with the value programmed in this bit.
		When the endpoint is used as an interrupt endpoint, it can be set to the following values.
		<ul><li>0: Interrupt endpoint in 'toggle mode'.</li><li>1: Interrupt endpoint in 'rate feedback mode'. This means that the data toggle is fixed to zero for all data packets.</li></ul>
		When the interrupt endpoint is in 'rate feedback mode', the TR bit must always be set to zero.

#### Chapter 20: LPC5411x USB 2.0 device controller


Table 302. Endpoint commands

Symbol	Access	Description
Т	R/W	Endpoint Type
		<ul><li>0: Generic endpoint. The endpoint is configured as a bulk or interrupt endpoint.</li><li>1: Isochronous endpoint</li></ul>
NBytes	R/W	For OUT endpoints this is the number of bytes that can be received in this buffer.
		For IN endpoints this is the number of bytes that must be transmitted.
		HW decrements this value with the packet size every time when a packet is successfully transferred.
		Note: If a short packet is received on an OUT endpoint, the active bit will be cleared and the NBytes value indicates the remaining buffer space that is not used. Software calculates the received number of bytes by subtracting the remaining NBytes from the programmed value.
Address Offset	R/W	Bits 21 to 6 of the buffer start address.
		The address offset is updated by hardware after each successful reception/transmission of a packet. Hardware increments the original value with the integer value when the packet size is divided by 64.
		Examples:
		• If an isochronous packet of 200 bytes is successfully received, the address offset is incremented by 3.
		<ul> <li>If a packet of 64 bytes is successfully received, the address offset is incremented by 1.</li> </ul>
		<ul> <li>If a packet of less than 64 bytes is received, the address offset is not incremented.</li> </ul>

**Remark:** When receiving a SETUP token for endpoint zero, the HW will only read the SETUP bytes Buffer Address offset to know where it has to store the received SETUP bytes. The hardware will ignore all other fields. In case the SETUP stage contains more than 8 bytes, it will only write the first 8 bytes to memory. A USB compliant host must never send more than 8 bytes during the SETUP stage.


#### Chapter 20: LPC5411x USB 2.0 device controller

## 20.7.2 Control endpoint 0

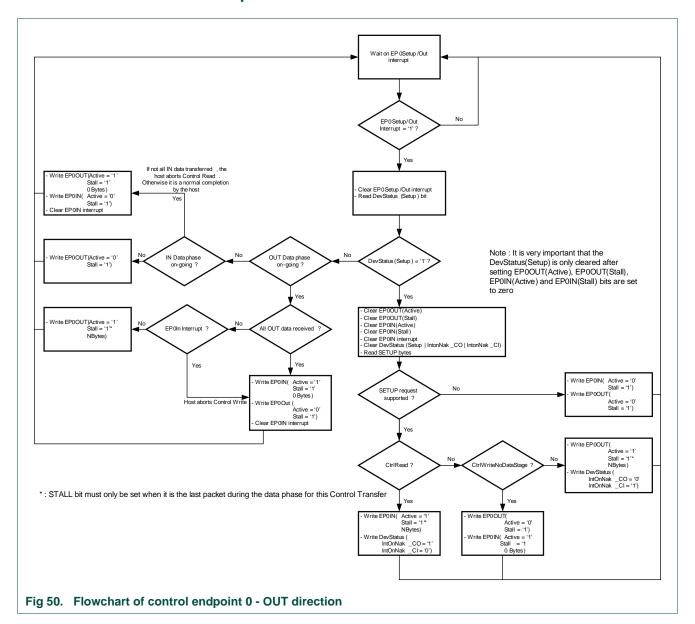

284 of 590

#### Chapter 20: LPC5411x USB 2.0 device controller

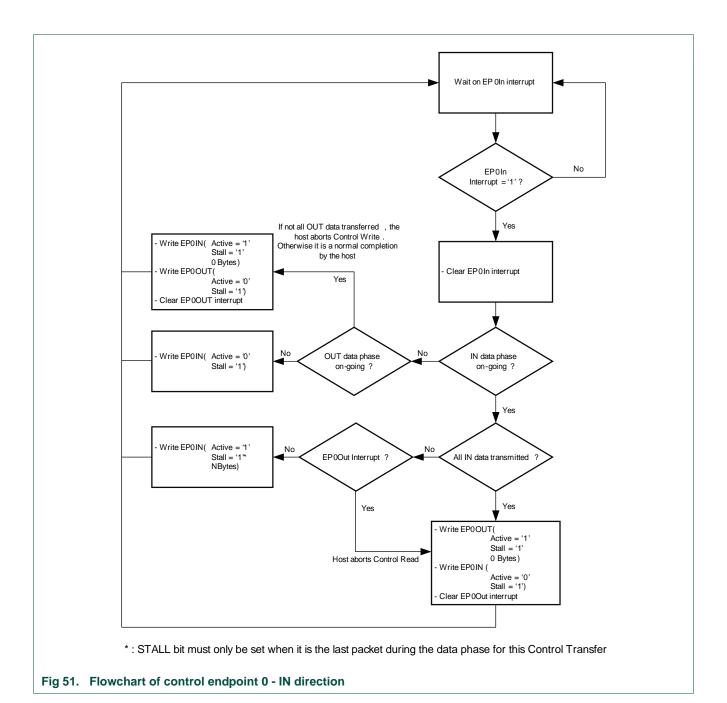

# 20.7.3 Generic endpoint: single-buffering

To enable single-buffering, software must set the corresponding "USB EP Buffer Config" bit to zero. In the "USB EP Buffer in use" register, software can indicate which buffer is used in this case.

When software wants to transfer data, it programs the different bits in the Endpoint command/status entry and sets the active bits. The hardware will transmit/receive multiple packets for this endpoint until the NBytes value is equal to zero. When NBytes goes to zero, hardware clears the active bit and sets the corresponding interrupt status bit.

**User manual** 

#### Chapter 20: LPC5411x USB 2.0 device controller

Software must wait until hardware has cleared the Active bit to change some of the command/status bits. This prevents hardware from overwriting a new value programmed by software with some old values that were still cached.

If software wants to disable the active bit before the hardware has finished handling the complete buffer, it can do this by setting the corresponding endpoint skip bit in USB endpoint skip register.

### 20.7.4 Generic endpoint: double-buffering

To enable double-buffering, software must set the corresponding "USB EP Buffer Config" bit to one. The "USB EP Buffer in use" register indicates which buffer will be used by HW when the next token is received.

When HW clears the active bit of the current buffer in use, it will switch the buffer in use. Software can also force HW to use a certain buffer by writing to the "USB EP Buffer in use" bit.

#### 20.7.5 Special cases

#### 20.7.5.1 Use of the Active bit

The use of the Active bit is a bit different between OUT and IN endpoints.

When data must be received for the OUT endpoint, the software will set the Active bit to one and program the NBytes field to the maximum number of bytes it can receive.

When data must be transmitted for an IN endpoint, the software sets the Active bit to one and programs the NBytes field to the number of bytes that must be transmitted.

#### 20.7.5.2 Generation of a STALL handshake

Special care must be taken when programming the endpoint to send a STALL handshake. A STALL handshake is only sent in the following situations:

- The endpoint is enabled (Disabled bit = 0)
- The active bit of the endpoint is set to 0. (No packet needs to be received/transmitted for that endpoint).
- The stall bit of the endpoint is set to one.

#### 20.7.5.3 Clear Feature (endpoint halt)

When a non-control endpoint has returned a STALL handshake, the host will send a Clear Feature (Endpoint Halt) for that endpoint. When the device receives this request, the endpoint must be un-stalled and the toggle bit for that endpoint must be reset back to zero. In order to do that the software must program the following items for the endpoint that is indicated.

If the endpoint is used in single-buffer mode, program the following:

- Set STALL bit (S) to 0.
- Set toggle reset bit (TR) to 1 and set toggle value bit (TV) to 0.

If the endpoint is used in double-buffer mode, program the following:

**User manual** 

#### Chapter 20: LPC5411x USB 2.0 device controller

- Set the STALL bit of both buffer 0 and buffer 1 to 0.
- Read the buffer in use bit for this endpoint.
- Set the toggle reset bit (TR) to 1 and set the toggle value bit (TV) to 0 for the buffer indicated by the buffer in use bit.

#### 20.7.5.4 Set configuration

When a SetConfiguration request is received with a configuration value different from zero, the device software must enable all endpoints that will be used in this configuration and reset all the toggle values. To do so, it must generate the procedure explained in Section 20.7.5.3 for every endpoint that will be used in this configuration.

For all endpoints that are not used in this configuration, it must set the Disabled bit (D) to one.

#### 20.7.6 **USB** wake-up

#### 20.7.6.1 Waking up from deep-sleep mode on USB activity

To allow the chip to wake up from deep-sleep mode on USB activity, complete the following steps:

- 1. Set bit USB\_NEED\_CLK in the DEVCMDSTAT register (<u>Section 20.6.1</u>) to 0 (default) to enable automatic control of the USB NEEDCLK signal.
- 2. Wait until USB activity is suspended by polling the DSUS bit in the DSVCMD\_STAT register (DSUS = 1).
- The USB NEEDCLK signal will be deasserted after another 2 ms. Poll the USBCLKST register until the USB NEEDCLK status bit is 0
- 4. Once the USBCLKST register returns 0, enable the USB activity wake-up interrupt in the NVIC and clear it (see Table 2).
- 5. Set bit 1 in the USBCLKCTRL register to 1 to trigger the USB activity wake-up interrupt on the rising edge of the USB NEEDCLK signal.
- 6. Enable the wake-up from deep-sleep mode on this interrupt by enabling the USB NEEDCLK signal in the STARTER0 register (Section 4.5.58, bit 19).
- 7. Enter deep-sleep mode via the Chip\_POWER\_EnterPowerMode API (see Section 31.4.3).

The chip will automatically wake up and resume execution on USB activity.

#### 20.7.6.2 Remote wake-up

To issue a remote wake-up when the USB activity is suspended, complete the following steps:

- 1. Set bit FORCE\_NEEDCLK in the DEVCMDSTAT register to 0 (Section 20.6.1, default) to enable automatic control of the USB NEEDCLK signal.
- When it is time to issue a remote wake-up, turn on the USB clock and enable the USB clock source.
- 3. Force the USB clock on by writing a 1 to bit FORCE\_NEEDCLK (Section 20.6.1) in the DEVCMDSTAT register.
- 4. Write a 0 to the DSUS bit in the DSVCMD\_STAT register.

UM10914

#### Chapter 20: LPC5411x USB 2.0 device controller

- 5. Wait until the USB leaves the suspend state by polling the DSUS bit in the DSVCMD\_STAT register (DSUS =0).
- 6. Clear the FORCE\_NEEDCLK bit (Section 20.6.1, bit 0) in the DEVCMDSTAT to enable automatic USB clock control.

# **UM10914**

# Chapter 21: LPC5411x Flexcomm Interface serial communication

Rev. 1.2 — 30 June 2016

**User manual** 

### 21.1 How to read this chapter

Multiple Flexcomm Interfaces are available on all LPC5411x parts.

#### 21.2 Introduction

Each Flexcomm Interface provides one peripheral function from a choice of several, chosen by the user. This chapter describes the overall Flexcomm Interface and how to choose peripheral functions. Details of the different peripherals are found in separate chapters for each type.

#### 21.3 Features

Each Flexcomm Interface provides a choice of peripheral functions, one of which must be chosen by the user before the function can be configured and used.

- USART with asynchronous operation or synchronous master or slave operation.
- SPI master or slave, with up to 4 slave selects.
- I<sup>2</sup>C, including separate master, slave, and monitor functions.
- Some Flexcomm Interfaces may also provide an I<sup>2</sup>S function. If so, there may be from one to four I<sup>2</sup>S channel pairs, one of which may optionally be a master and the rest slaves, configured together for either transmit or receive.
- Data for USART, SPI, and I<sup>2</sup>S traffic uses the Flexcomm Interface FIFO. The I<sup>2</sup>C function does not use the FIFO.

### 21.4 Basic configuration

The Flexcomm Interface is configured as follows:


- 1. Peripheral clock: Make sure that the related Flexcomm Interface is enabled in the AHBCLKCTRL1 register (Section 4.5.17).
- Flexcomm Interface clock: Select a clock source for the related Flexcomm Interface.
   Options are shown in Figure 4. Also see Section 4.5.28.
- 3. Select the desired Flexcomm Interface function by writing to the PSELID register of the related Flexcomm Interface (Section 21.7.1).
- 4. See specific peripheral chapters for information on configuring those peripherals: UART (<u>Chapter 22</u>), SPI (<u>Chapter 23</u>), I2C (<u>Chapter 24</u>), I2S (<u>Chapter 25</u>).

**Remark:** The Flexcomm Interface function clock frequency should not be higher than 48 MHz.

#### Chapter 21: LPC5411x Flexcomm Interface serial communication

### 21.5 Architecture

The overall structure of one Flexcomm Interface is shown in Figure 52.

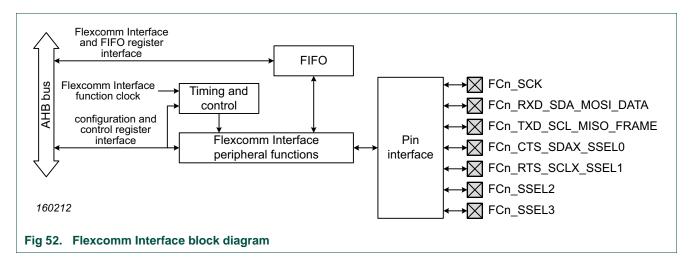

### 21.5.1 Function Summary

LPC5411x devices include Flexcomm Interfaces and functions as shown in <u>Table 303</u>. Specific part numbers and package variations may include a subset of this list.

Table 303: Flexcomm Interface base addresses and functions

Flexcomm number	Base address	USART ( <u>Chapter 22</u> )	SPI ( <u>Chapter 23</u> )	I <sup>2</sup> C (Chapter 24)	I <sup>2</sup> S (Chapter 25)
0	0x4008 6000	Yes	Yes	Yes	-
1	0x4008 7000	Yes	Yes	Yes, special I <sup>2</sup> C pins available	-
2	0x4008 8000	Yes	Yes	Yes	-
3	0x4008 9000	Yes	Yes	Yes	-
4	0x4008 A000	Yes	Yes	Yes, special I <sup>2</sup> C pins available	-
5	0x4009 6000	Yes	Yes	Yes	-
6	0x4009 7000	Yes	Yes	Yes	Yes, 1 channel pair
7	0x4009 8000	Yes	Yes	Yes	Yes, 1 channel pair

#### 21.5.2 Choosing a peripheral function

A specific peripheral function, from among those supported by a particular Flexcomm Interface, is selected by software writing to the PSELID register. Reading the PSELID register provides information on which peripheral functions are available on that Flexcomm Interface.

Once a specific peripheral function has been selected, the PID register will supply an identifier for the selected peripheral. Software may use this information to confirm the selection before proceeding.

### 21.5.3 FIFO usage

Refer to the chapter for a specific peripheral function for information on how the FIFO is used (see <u>Table 303</u>).

#### Chapter 21: LPC5411x Flexcomm Interface serial communication

#### 21.5.4 DMA

The Flexcomm Interface generates DMA requests if desired, based on a selectable FIFO level. Refer to the chapter for a specific peripheral function for information on how the FIFO is used (see Table 303).

#### 21.5.5 AHB bus access

Generally, the bus interface to the registers contained in the Flexcomm Interface (including its serial peripheral functions) support only word writes. Byte and halfword writes should not be used. An exception is that the FIFOWR register, when the Flexcomm Interface is configured for use as an SPI interface, it also allows byte and halfword writes. This allows support for control information embedded in DMA buffers, for example. See Section 23.6.14 "FIFO write data register" for more information.

### 21.6 Pin description

Each Flexcomm Interface allows up to 7 pin connections. Specific uses of a Flexcomm Interface typically do not use all of these, and some Flexcomm Interface instances may not provide a means to connect all functions to device pins. Pin usage for a specific peripheral function is described in the chapter for that peripheral.

**Table 304: Flexcomm Interface Pin Description** 

Pin	Туре	Description
SCK	I/O	Clock input or output for the USART function in synchronous modes.
	I/O	Clock input or output for the SPI function.
	I/O	Clock input or output for the I <sup>2</sup> S function (if present).
RXD_SDA_MOSI or	Input	Receive data input for the USART function.
RXD_SDA_MOSI_DATA	I/O	SDA (data) input/output for the I <sup>2</sup> C function.
	I/O	Master data output/slave data input for the SPI function.
	I/O	Data input or output for the I <sup>2</sup> S function (if present).
TXD_SCL_MISO or	Output	Transmit data output for the USART function.
TXD_SCL_MISO_WS	I/O	SCL input/output for the I <sup>2</sup> C function.
	I/O	Master data input/slave data output for the SPI function.
	I/O	WS (also known as LRCLK) input or output for the I <sup>2</sup> S function (if present).
CTS_SDA_SSEL0	Input	Clear To Send input for the USART function.
	I/O	SDA (data) input/output for the I <sup>2</sup> C function.
	I/O	Slave Select 0 input or output for the SPI function.
RTS_SCL_SSEL1	Output	Request To Send output for the USART function.
	I/O	SCL (clock) input/output for the I <sup>2</sup> C function.
	I/O	Slave Select 1 input or output for the SPI function.
SSEL2	I/O	Slave Select 2 input or output for the SPI function.
SSEL3	I/O	Slave Select 3 input or output for the SPI function.

#### Chapter 21: LPC5411x Flexcomm Interface serial communication

### 21.7 Register description

Each Flexcomm Interface contains registers that are related to configuring the Flexcomm Interface to do a specific peripheral function and other registers related to peripheral FIFOs and data access. The latter depend somewhat on the chosen peripheral functions and are described in the chapters for each specific function (USART, SPI, I2C, and I<sup>2</sup>S if present in a specific Flexcomm Interface). The Flexcomm Interface registers that identify and configure the Flexcomm Interface are shown in Table 305.

The base addresses of all Flexcomm Interfaces may be found in Table 303.

Table 305: Register map for the first channel pair within one Flexcomm Interface

Name	Access	Offset	Description	Reset Value [1]	Section
PSELID	R/W	0xFF8	Peripheral Select and Flexcomm Interface ID register.	0x0	21.7.1
PID	RO	0xFFC	Peripheral identification register.	Section 21.7.2	21.7.2

<sup>[1]</sup> Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

### 21.7.1 Peripheral Select and Flexcomm Interface ID register

The PSELID register identifies the Flexcomm Interface and provides information about which peripheral functions are supported by each Flexcomm Interface. It also provides the means to select one peripheral function for each Flexcomm Interface.

Table 306. Peripheral Select and Flexcomm Interface ID register (PSELID - offset 0xFF8) bit description

Bit	Symbol	Value	Description	Reset Value
2:0	PERSEL		Peripheral Select. This field is writable by software.	0x0
		0x0	No peripheral selected.	
		0x1	USART function selected.	
		0x2	SPI function selected.	
		0x3	I <sup>2</sup> C function selected.	
		0x4	I <sup>2</sup> S transmit function selected.	
		0x5	I <sup>2</sup> S receive function selected.	
		0x6	Reserved	
		0x7	Reserved	
3	LOCK		Lock the peripheral select. This field is writable by software.	0x0
		0	Peripheral select can be changed by software.	
		1	Peripheral select is locked and cannot be changed until this Flexcomm Interface or the entire device is reset.	
4	USARTPRESENT		USART present indicator. This field is Read-only.	0x0
		0	This Flexcomm Interface does not include the USART function.	
		1	This Flexcomm Interface includes the USART function.	
5	SPIPRESENT		SPI present indicator. This field is Read-only.	0x0
		0	This Flexcomm Interface does not include the SPI function.	
		1	This Flexcomm Interface includes the SPI function.	
6	I2CPRESENT		I <sup>2</sup> C present indicator. This field is Read-only.	0x0
		0	This Flexcomm Interface does not include the I <sup>2</sup> C function.	
		1	This Flexcomm Interface includes the I <sup>2</sup> C function.	7

UM10914

#### Chapter 21: LPC5411x Flexcomm Interface serial communication

Table 306. Peripheral Select and Flexcomm Interface ID register (PSELID - offset 0xFF8) bit description

Bit	Symbol	Value	Description	Reset Value
7	I2SPRESENT		I <sup>2</sup> S present indicator. This field is Read-only.	0x0
		0	This Flexcomm Interface does not include the I <sup>2</sup> S function.	
		1	This Flexcomm Interface includes the I <sup>2</sup> S function.	
11:8	-		Reserved. Read value is undefined, only zero should be written.	NA
31:12	ID		Flexcomm Interface ID.	0x00101

### 21.7.2 Peripheral identification register

This register is read-only and will read as 0 until a specific Flexcomm Interface function is selected via the PID register. Once the Flexcomm Interface is configured for a function, this register confirms the selection by returning the module ID for that function, and identifies the revision of that function. A software driver could make use of this information register to implement module type or revision specific behavior.

Table 307. Peripheral identification register (PID - offset 0xFFC) bit description

Bit	Symbol	Description	Reset Value
7:0	-	-	0x0
11:8	Minor_Rev	Minor revision of module implementation.	See specific device chapter
15:12	Major_Rev	Major revision of module implementation.	See specific device chapter
31:16	ID	Module identifier for the selected function.	See specific device chapter

# **UM10914**

### Chapter 22: LPC5411x USARTs

Rev. 1.2 — 30 June 2016

**User manual** 

### 22.1 How to read this chapter

USART functions are available on all LPC5411x devices as a selectable function in each Flexcomm Interface peripheral. Up to 8 Flexcomm Interfaces are available.

#### 22.2 Features

- 7, 8, or 9 data bits and 1 or 2 stop bits.
- Synchronous mode with master or slave operation. Includes data phase selection and continuous clock option.
- Multiprocessor/multidrop (9-bit) mode with software address compare.
- RS-485 transceiver output enable.
- Parity generation and checking: odd, even, or none.
- Software selectable oversampling from 5 to 16 clocks in asynchronous mode.
- · One transmit and one receive data buffer.
- The USART function supports separate transmit and receive FIFO with 16 entries each.
- RTS/CTS for hardware signaling for automatic flow control. Software flow control can be performed using Delta CTS detect, Transmit Disable control, and any GPIO as an RTS output.
- Break generation and detection.
- Receive data is 2 of 3 sample "voting". Status flag set when one sample differs.
- Built-in Baud Rate Generator.
- Auto-baud mode for automatic baud rate detection.
- Special operating mode allows operation at up to 9600 baud using the 32 kHz RTC oscillator as the USART clock. This mode can be used while the device is in deep-sleep mode and can wake-up the device when a character is received.
- A fractional rate divider is shared among all USARTs.
- Interrupts available for FIFO receive level reached, FIFO transmit level reached, FIFO overflow or underflow, Transmitter Idle, change in receiver break detect, Framing error, Parity error, Delta CTS detect, and receiver sample noise detected (among others).
- USART transmit and receive functions can operated with the system DMA controller.
- Loopback mode for testing of data and flow control.

# 22.3 Basic configuration

Initial configuration of a USART peripheral is accomplished as follows:

• If needed, use the PRESETCTRL1 register (<u>Table 39</u>) to reset the Flexcomm Interface that is about to have a specific peripheral function selected.

UM10914

Chapter 22: LPC5411x USARTs

- Select the desired Flexcomm Interface function by writing to the PSELID register of the related Flexcomm Interface (Section 21.7.1).
- Configure the FIFOs for operation.
- Configure USART for receiving and transmitting data:
  - In the AHBCLKCTRL1 register (<u>Table 46</u>), set the appropriate bit for the related Flexcomm Interface in order to enable the clock to the register interface.
  - Enable or disable the related Flexcomm Interface interrupt in the NVIC (see Table 2).
  - Configure the related Flexcomm Interface pin functions via IOCON, see Chapter 7.
  - Configure the Flexcomm Interface clock and USART baud rate. See Section 22.3.1.

**Remark:** The Flexcomm Interface function clock frequency should not be above 48 MHz.

- Configure the USART to wake up the part from low power modes. See Section 22.3.2.
- Configure the USART to receive and transmit data in synchronous slave mode. See Section 22.3.2.

### 22.3.1 Configure the Flexcomm Interface clock and USART baud rate

Each Flexcomm Interface has a separate clock selection, which can include a shared fractional divider (also see <u>Section 22.7.2.3 "32 kHz mode"</u>). The function clock and the fractional divider for the baud rate calculation are set up in the SYSCON block as follows:

 If a fractional value is needed to obtain a particular baud rate, program the fractional rate divider (FRG, controlled by Syscon register FRGCTRL). The fractional divider value is the fraction of MULT/DIV. The MULT and DIV values are programmed in the FRGCTRL register. The DIV value must be programmed with the fixed value of 256.

Flexcomm Interface clock = (FRG input clock) / (1+(MULT / DIV))

The following rules apply for MULT and DIV:

- Always set DIV to 256 by programming the FRGCTRL register with the value of 0xFF.
- Set the MULT to any value between 0 and 255.

See Table 67 for more information on the FRG.

In asynchronous mode: configure the baud rate divider BRGVAL in the BRG register.
The baud rate divider divides the Flexcomm Interface function clock (FCLK) to create
the clock needed to produce the desired baud rate.

Generally: baud rate = [FCLK / oversample rate] / BRG divide

With specific register values: baud rate = [FCLK / (OSRVAL+1)] / (BRGVAL + 1)

Generally: BRG divide = [FCLK / oversample rate] / baud rate

With specific register values: BRGVAL = [[FCLK / (OSRVAL + 1)] / baud rate] - 1

See Section 22.6.6 "USART Baud Rate Generator register".

3. In synchronous master mode: The serial clock is Un\_SCLK = FCLK / (BRGVAL+1).

The USART can also be clocked by the 32 kHz RTC oscillator. Set the MODE32K bit to enable this 32 kHz mode. See also Section 22.7.2.3 "32 kHz mode".

UM10914

Chapter 22: LPC5411x USARTs

For details on the clock configuration see:

Section 22.7.2 "Clocking and baud rates"

#### 22.3.2 Configure the USART for wake-up

A USART can wake up the system from sleep mode in asynchronous or synchronous mode on any enabled USART interrupt.

In deep-sleep mode, there are two options for configuring USART for wake-up:

- If the USART is configured for synchronous slave mode, the USART block can create
  an interrupt on a received signal even when the USART block receives no on-chip
  clocks that is in deep-sleep mode.
  - As long as the USART receives a clock signal from the master, it can receive up to one byte in the RXDAT register while in deep-sleep mode. Any interrupt raised as part of the receive data process can then wake up the part.
- If the 32 kHz mode is enabled, the USART can run in asynchronous mode using the 32 kHz RTC oscillator and create interrupts.

#### 22.3.2.1 Wake-up from sleep mode

- Configure the USART in either asynchronous mode or synchronous mode. See Table 311.
- Enable the USART interrupt in the NVIC.
- Any enabled USART interrupt wakes up the part from sleep mode.

#### 22.3.2.2 Wake-up from deep-sleep mode

- Configure the USART in synchronous slave mode. See <u>Table 311</u>. The SCLK function
  must be connected to a pin and also connect the pin to the master. Alternatively, the
  32 kHz mode can be enabled and the USART operated in asynchronous mode with
  the 32 kHz RTC oscillator.
- Enable the USART interrupt in the STARTER0 register. See Table 93.
- Enable the USART interrupt in the NVIC.
- The USART wakes up the part from deep-sleep mode on all events that cause an interrupt and are enabled. Typical wake-up events are:
  - A start bit has been received.
  - Received data becomes available.
  - In synchronous mode, data is available in the FIFO to be transmitted, and a serial clock from the master has been received.
  - A change in the state of the CTS pin if the CTS function is connected.
  - Remark: By enabling or disabling specific USART interrupts, you can customize
    when the wake-up occurs.

Chapter 22: LPC5411x USARTs

### 22.4 Pin description

The USART receive, transmit, and control signals are movable Flexcomm Interface functions and are assigned to external pins through via IOCON. See the IOCON description (Chapter 7) to assign the USART functions to pins on the device package.

Table 308. USART pin description

Pin	Туре	Name used in Pin Configuration chapter	Description
TXD	0	FCn_TXD_SCL_MISO_WS	Transmitter output for USART on Flexcomm Interface n. Serial transmit data.
RXD	I	FCn_RXD_SDA_MOSI_DATA	Receiver input for USART on Flexcomm Interface n. Serial receive data.
RTS	О	FCn_RTS_SCL_SSEL1	Request To Send output for USART on Flexcomm Interface n. This signal supports inter-processor communication through the use of hardware flow control. This signal can also be configured to act as an output enable for an external RS-485 transceiver. RTS is active when the USART RTS signal is configured to appear on a device pin.
CTS	I	FCn_CTS_SDA_SSEL0	Clear To Send input for USART on Flexcomm Interface n. Active low signal indicates that the external device that is in communication with the USART is ready to accept data. This feature is active when enabled by the CTSEn bit in CFG register and when configured to appear on a device pin. When deasserted (high) by the external device, the USART will complete transmitting any character already in progress, then stop until CTS is again asserted (low).
SCLK	I/O	FCn_SCK	Serial clock input/output for USART on Flexcomm Interface n in synchronous mode. Clock input or output in synchronous mode.
			<b>Remark:</b> when the USART is configured as a master, such that SCK is an output, it must actually be connected to a pin in order for the USART to work properly.

Recommended IOCON settings are shown in <u>Table 309</u>. See <u>Chapter 7</u> for definitions of pin types.

Table 309: Suggested USART pin settings

IOCON bit(s)	Type D pin	Type A pin	Type I pin
10	OD: Set to 0 unless open-drain output is desired.	Same as type D.	I2CFILTER: Set to 1.
9	SLEW: Generally set to 0.	Not used, set to 0.	I2CDRIVE: Set to 0.
8	FILTEROFF: Generally set to 1.	Same as type D.	Same as type D.
7	DIGIMODE: Set to 1.	Same as type D.	Same as type D.
6	INVERT: Set to 0.	Same as type D.	Same as type D.
5	Not used, set to 0.	Not used, set to 0.	I2CSLEW: Set to 1.
4:3	MODE: Set 0 (to pull-down/pull-up resistor not enabled). Could be another setting if the input might sometimes be floating (causing leakage within the pin input).	Same as type D.	Not used, set to 0.
2:0	FUNC: Must select the correct function for this peripheral.	Same as type D.	Same as type D.
General comment	A good choice for USART input or output.	A reasonable choice for USART input or output.	Not recommended for USART functions that can be outputs in the chosen mode.

**User manual** 

UM10914 **NXP Semiconductors** 

Chapter 22: LPC5411x USARTs

### 22.5 General description

The USART receiver block monitors the serial input line, Un\_RXD, for valid input. The receiver shift register assembles characters as they are received, after which they are passed to the receiver FIFO to await access by the CPU or DMA controller. When RTS is configured as an RS-485 output enable, it is asserted at the beginning of an transmitted character, and deasserted either at the end of the character, or after a one character delay (selected by software).


The USART transmitter block accepts data written by the CPU or DMA controller to the transmit FIFO. When the transmitter is available, the transmit shift register takes that data, formats it, and serializes it to the serial output, Un\_TXD.

The Baud Rate Generator block divides the incoming clock to create an oversample clock (typically 16x) in the standard asynchronous operating mode. The BRG clock input source is the shared Fractional Rate Generator that runs from the USART function clock. The 32 kHz operating mode generates a specially timed internal clock based on the RTC oscillator frequency.

In synchronous slave mode, data is transmitted and received using the serial clock directly. In synchronous master mode, data is transmitted and received using the baud rate clock without division.

Status information from the transmitter and receiver is provided via the STAT register. Many of the status flags are able to generate interrupts, as selected by software. The INTSTAT register provides a view of all interrupts that are both enabled and pending.

#### Chapter 22: LPC5411x USARTs

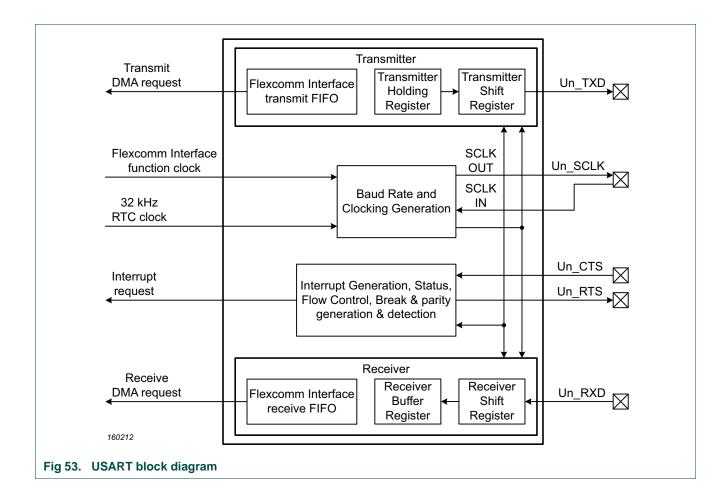

299 of 590

Chapter 22: LPC5411x USARTs

## 22.6 Register description

The reset value reflects the data stored in used bits only. It does not include the content of reserved bits. Address offsets are within the related Flexcomm Interface address space **after** the USART function has been selected for that Flexcomm Interface (see <u>Section 21.5.1</u> for a summary of Flexcomm Interface addresses).

Table 310: USART register overview

Name	Access	Offset	Description	Reset value	Section
Registers for the	USART fu	inction:			
CFG	R/W	0x000	USART Configuration register. Basic USART configuration settings that typically are not changed during operation.	0x0	22.6.1
CTL	R/W	0x004	USART Control register. USART control settings that are more likely to change during operation.	0x0	22.6.2
STAT	R/W	0x008	USART Status register. The complete status value can be read here. Writing ones clears some bits in the register. Some bits can be cleared by writing a 1 to them.	0x0A	22.6.3
INTENSET	R/W	0x00C	Interrupt Enable read and Set register for USART (not FIFO) status. Contains individual interrupt enable bits for each potential USART interrupt. A complete value may be read from this register. Writing a 1 to any implemented bit position causes that bit to be set.	0x0	22.6.4
INTENCLR	WO	0x010	Interrupt Enable Clear register. Allows clearing any combination of bits in the INTENSET register. Writing a 1 to any implemented bit position causes the corresponding bit to be cleared.	-	22.6.5
BRG	R/W	0x020	Baud Rate Generator register. 16-bit integer baud rate divisor value.	0x0	22.6.6
INTSTAT	RO	0x024	Interrupt status register. Reflects interrupts that are currently enabled.	0x0	22.6.7
OSR	R/W	0x028	Oversample selection register for asynchronous communication.	0xF	22.6.8
ADDR	R/W	0x02C	Address register for automatic address matching.	0x0	22.6.9
Registers for FIF	O control	and data	access:		
FIFOCFG	R/W	0xE00	FIFO configuration and enable register.	0x0	22.6.10
FIFOSTAT	R/W	0xE04	FIFO status register.	0x30	22.6.11
FIFOTRIG	R/W	0xE08	FIFO trigger level settings for interrupt and DMA request.	0x0	22.6.12
FIFOINTENSET	R/W1S	0xE10	FIFO interrupt enable set (enable) and read register.	0x0	22.6.13
FIFOINTENCLR	R/W1C	0xE14	FIFO interrupt enable clear (disable) and read register.	0x0	22.6.14
FIFOINTSTAT	RO	0xE18	FIFO interrupt status register.	0x0	22.6.15
FIFOWR	WO	0xE20	FIFO write data.	NA	22.6.16
FIFORD	RO	0xE30	FIFO read data.	NA	22.6.17
FIFORDNOPOP	RO	0xE40	FIFO data read with no FIFO pop.	NA	22.6.18
ID register:					
ID	RO	0xFFC	USART module Identification. This value appears in the shared Flexcomm Interface peripheral ID register when USART is selected.	0xE000 0000	22.6.19

Chapter 22: LPC5411x USARTs

### 22.6.1 USART Configuration register

The CFG register contains communication and mode settings for aspects of the USART that would normally be configured once in an application.

**Remark:** Only the CFG register can be written when the ENABLE bit = 0. CFG can be set up by software with ENABLE = 1, then the rest of the USART can be configured.

**Remark:** If software needs to change configuration values, the following sequence should be used: 1) Make sure the USART is not currently sending or receiving data. 2) Disable the USART by writing a 0 to the Enable bit (0 may be written to the entire register). 3) Write the new configuration value, with the ENABLE bit set to 1.

Table 311. USART Configuration register (CFG, offset 0x000) bit description

Bit	Symbol	Value	Description	Reset Value
0	ENABLE		USART Enable.	0x0
		0	Disabled. The USART is disabled and the internal state machine and counters are reset. While Enable = 0, all USART interrupts and DMA transfers are disabled. When Enable is set again, CFG and most other control bits remain unchanged. When re-enabled, the USART will immediately be ready to transmit because the transmitter has been reset and is therefore available.	
		1	Enabled. The USART is enabled for operation.	
1	-	-	Reserved. Read value is undefined, only zero should be written.	NA
3:2	DATALEN		Selects the data size for the USART.	0x0
		0x0	7 bit Data length.	
		0x1	8 bit Data length.	
		0x2	9 bit data length. The 9th bit is commonly used for addressing in multidrop mode. See the ADDRDET bit in the CTL register.	
		0x3	Reserved.	
5:4	PARITYSEL		Selects what type of parity is used by the USART.	0x0
		0x0	No parity.	
		0x1	Reserved.	
		0x2	Even parity. Adds a bit to each character such that the number of 1s in a transmitted character is even, and the number of 1s in a received character is expected to be even.	
		0x3	Odd parity. Adds a bit to each character such that the number of 1s in a transmitted character is odd, and the number of 1s in a received character is expected to be odd.	
6	STOPLEN		Number of stop bits appended to transmitted data. Only a single stop bit is required for received data.	0x0
		0	1 stop bit.	
		1	2 stop bits. This setting should only be used for asynchronous communication.	
7	MODE32K		Selects standard or 32 kHz clocking mode.	0x0
		0	Disabled. USART uses standard clocking.	
		1	Enabled. USART uses the 32 kHz clock from the RTC oscillator as the clock source to the BRG, and uses a special bit clocking scheme.	
8	LINMODE		LIN break mode enable.	0x0
		0	Disabled. Break detect and generate is configured for normal operation.	
		1	Enabled. Break detect and generate is configured for LIN bus operation.	

Chapter 22: LPC5411x USARTs

Table 311. USART Configuration register (CFG, offset 0x000) bit description ...continued

Bit	Symbol	Value	Description	Reset Value
9	CTSEN		CTS Enable. Determines whether CTS is used for flow control. CTS can be from the input pin, or from the USART's own RTS if loopback mode is enabled.	0x0
		0	No flow control. The transmitter does not receive any automatic flow control signal.	
		1	Flow control enabled. The transmitter uses the CTS input (or RTS output in loopback mode) for flow control purposes.	
10	-	-	Reserved. Read value is undefined, only zero should be written.	NA
11	SYNCEN		Selects synchronous or asynchronous operation.	0x0
		0	Asynchronous mode.	
		1	Synchronous mode.	
12	CLKPOL		Selects the clock polarity and sampling edge of received data in synchronous mode.	0x0
		0	Falling edge. Un_RXD is sampled on the falling edge of SCLK.	
		1	Rising edge. Un_RXD is sampled on the rising edge of SCLK.	
13	-	-	Reserved. Read value is undefined, only zero should be written.	NA
14	SYNCMST		Synchronous mode Master select.	0x0
		0	Slave. When synchronous mode is enabled, the USART is a slave.	
		1	Master. When synchronous mode is enabled, the USART is a master.	
15 L	LOOP		Selects data loopback mode.	0x0
		0	Normal operation.	
		1	Loopback mode. This provides a mechanism to perform diagnostic loopback testing for USART data. Serial data from the transmitter (Un_TXD) is connected internally to serial input of the receive (Un_RXD). Un_TXD and Un_RTS activity will also appear on external pins if these functions are configured to appear on device pins. The receiver RTS signal is also looped back to CTS and performs flow control if enabled by CTSEN.	
17:16	-	-	Reserved. Read value is undefined, only zero should be written.	NA
18	OETA		Output Enable Turnaround time enable for RS-485 operation.	0x0
		0	Disabled. If selected by OESEL, the Output Enable signal deasserted at the end of the last stop bit of a transmission.	
		1	Enabled. If selected by OESEL, the Output Enable signal remains asserted for one character time after the end of the last stop bit of a transmission. OE will also remain asserted if another transmit begins before it is deasserted.	
19	AUTOADDR		Automatic Address matching enable.	0x0
		0	Disabled. When addressing is enabled by ADDRDET, address matching is done by software. This provides the possibility of versatile addressing (e.g. respond to more than one address).	
		1	Enabled. When addressing is enabled by ADDRDET, address matching is done by hardware, using the value in the ADDR register as the address to match.	
20	OESEL		Output Enable Select.	0x0
		0	Standard. The RTS signal is used as the standard flow control function.	
		1	RS-485. The RTS signal configured to provide an output enable signal to control an RS-485 transceiver.	
21	OEPOL		Output Enable Polarity.	0x0
		0	Low. If selected by OESEL, the output enable is active low.	
		1	High. If selected by OESEL, the output enable is active high.	1

Chapter 22: LPC5411x USARTs

Table 311. USART Configuration register (CFG, offset 0x000) bit description ...continued

Bit	Symbol	Value	Description	Reset Value
22	RXPOL		Receive data polarity.	0x0
		0	Standard. The RX signal is used as it arrives from the pin. This means that the RX rest value is 1, start bit is 0, data is not inverted, and the stop bit is 1.	
		1	Inverted. The RX signal is inverted before being used by the USART. This means that the RX rest value is 0, start bit is 1, data is inverted, and the stop bit is 0.	
23	TXPOL		Transmit data polarity.	0x0
		0	Standard. The TX signal is sent out without change. This means that the TX rest value is 1, start bit is 0, data is not inverted, and the stop bit is 1.	
		1	Inverted. The TX signal is inverted by the USART before being sent out. This means that the TX rest value is 0, start bit is 1, data is inverted, and the stop bit is 0.	
31:24	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.2 USART Control register

The CTL register controls aspects of USART operation that are more likely to change during operation.

Table 312. USART Control register (CTL, offset 0x004) bit description

Bit	Symbol	Value	Description	Reset Value
0	-	-	Reserved. Read value is undefined, only zero should be written.	NA
1	TXBRKEN		Break Enable.	0x0
		0	Normal operation.	
		1	Continuous break. Continuous break is sent immediately when this bit is set, and remains until this bit is cleared.	
			A break may be sent without danger of corrupting any currently transmitting character if the transmitter is first disabled (TXDIS in CTL is set) and then waiting for the transmitter to be disabled (TXDISINT in STAT = 1) before writing 1 to TXBRKEN.	0x0 0x0 0x0
2	ADDRDET		Enable address detect mode.	0x0
		0	Disabled. The USART presents all incoming data.	
		1	Enabled. The USART receiver ignores incoming data that does not have the most significant bit of the data (typically the 9th bit) = 1. When the data MSB bit = 1, the receiver treats the incoming data normally, generating a received data interrupt. Software can then check the data to see if this is an address that should be handled. If it is, the ADDRDET bit is cleared by software and further incoming data is handled normally.	
5:3	-	-	Reserved. Read value is undefined, only zero should be written.	NA
6	TXDIS		Transmit Disable.	0x0
		0	Not disabled. USART transmitter is not disabled.	
		1	Disabled. USART transmitter is disabled after any character currently being transmitted is complete. This feature can be used to facilitate software flow control.	
7	-	-	Reserved. Read value is undefined, only zero should be written.	NA

Chapter 22: LPC5411x USARTs

Table 312. USART Control register (CTL, offset 0x004) bit description

Bit	Symbol	Value	Description	Reset Value
8	СС		Continuous Clock generation. By default, SCLK is only output while data is being transmitted in synchronous mode.	0x0
		0	Clock on character. In synchronous mode, SCLK cycles only when characters are being sent on Un_TXD or to complete a character that is being received.	
		1	Continuous clock. SCLK runs continuously in synchronous mode, allowing characters to be received on Un_RxD independently from transmission on Un_TXD).	
9	CLRCCONRX		Clear Continuous Clock.	0x0
		0	No effect. No effect on the CC bit.	
		1	Auto-clear. The CC bit is automatically cleared when a complete character has been received. This bit is cleared at the same time.	
15:10	-	-	Reserved. Read value is undefined, only zero should be written.	NA
16	AUTOBAUD		Auto-baud enable.	0x0
		0	Disabled. USART is in normal operating mode.	
		1	Enabled. USART is in auto-baud mode. This bit should only be set when the USART receiver is idle. The first start bit of RX is measured and used the update the BRG register to match the received data rate. AUTOBAUD is cleared once this process is complete, or if there is an AERR.	
31:17	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.3 USART Status register

The STAT register primarily provides a set of USART status flags (not including FIFO status) for software to read. Flags other than read-only flags may be cleared by writing ones to corresponding bits of STAT. Interrupt status flags that are read-only and cannot be cleared by software, can be masked using the INTENCLR register (see Table 315).

The error flags for received noise, parity error, and framing error are set immediately upon detection and remain set until cleared by software action in STAT.

Table 313. USART Status register (STAT, offset 0x008) bit description

Bit	Symbol	Description	Reset value	Access [1]
0	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
1	RXIDLE	Receiver Idle. When 0, indicates that the receiver is currently in the process of receiving data. When 1, indicates that the receiver is not currently in the process of receiving data.	0x1	RO
2	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
3	TXIDLE	Transmitter Idle. When 0, indicates that the transmitter is currently in the process of sending data. When 1, indicate that the transmitter is not currently in the process of sending data.	0x1	RO
4	CTS	This bit reflects the current state of the CTS signal, regardless of the setting of the CTSEN bit in the CFG register. This will be the value of the CTS input pin unless loopback mode is enabled.	NA	RO
5	DELTACTS	This bit is set when a change in the state is detected for the CTS flag above. This bit is cleared by software.	0x0	W1

**User manual** 

Chapter 22: LPC5411x USARTs

Table 313. USART Status register (STAT, offset 0x008) bit description

Bit	Symbol	Description	Reset value	Access
6	TXDISSTAT	Transmitter Disabled Status flag. When 1, this bit indicates that the USART transmitter is fully idle after being disabled via the TXDIS bit in the CFG register (TXDIS = 1).	0x0	RO
9:7	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
10	RXBRK	Received Break. This bit reflects the current state of the receiver break detection logic. It is set when the Un_RXD pin remains low for 16 bit times. Note that FRAMERRINT will also be set when this condition occurs because the stop bit(s) for the character would be missing. RXBRK is cleared when the Un_RXD pin goes high.	0x0	RO
11	DELTARXBRK	This bit is set when a change in the state of receiver break detection occurs. Cleared by software.	0x0	R/W1C
12	START	This bit is set when a start is detected on the receiver input. Its purpose is primarily to allow wake-up from deep-sleep mode immediately when a start is detected. Cleared by software.	0x0	R/W1C
13	FRAMERRINT	Framing Error interrupt flag. This flag is set when a character is received with a missing stop bit at the expected location. This could be an indication of a baud rate or configuration mismatch with the transmitting source.	0x0	R/W1C
14	PARITYERRINT	Parity Error interrupt flag. This flag is set when a parity error is detected in a received character.	0x0	R/W1C
15	RXNOISEINT	Received Noise interrupt flag. Three samples of received data are taken in order to determine the value of each received data bit, except in synchronous mode. This acts as a noise filter if one sample disagrees. This flag is set when a received data bit contains one disagreeing sample. This could indicate line noise, a baud rate or character format mismatch, or loss of synchronization during data reception.	0x0	R/W1C
16	ABERR	Auto baud Error. An auto baud error can occur if the BRG counts to its limit before the end of the start bit that is being measured, essentially an auto baud time-out.	0x0	R/W1C
31:17	-	Reserved. Read value is undefined, only zero should be written.	NA	NA

<sup>[1]</sup> RO = Read-only, W1C = write 1 to clear.

### 22.6.4 USART Interrupt Enable read and set register

The INTENSET register is used to enable various USART interrupt sources (not including FIFO interrupts). Enable bits in INTENSET are mapped in locations that correspond to the flags in the STAT register. Interrupt enables may also be read back from this register. Writing ones to implemented bits in this register causes those bits to be set. The INTENCLR register is used to clear bits in this register.

Table 314. USART Interrupt Enable read and set register (INTENSET, offset 0x00C) bit description

Bit	Symbol	Description	Reset Value
2:0	-	Reserved. Read value is undefined, only zero should be written.	NA
3	TXIDLEEN	When 1, enables an interrupt when the transmitter becomes idle (TXIDLE = 1).	0x0
4	-	Reserved. Read value is undefined, only zero should be written.	NA
5	DELTACTSEN	When 1, enables an interrupt when there is a change in the state of the CTS input.	0x0
6	TXDISEN	When 1, enables an interrupt when the transmitter is fully disabled as indicated by the TXDISINT flag in STAT. See description of the TXDISINT bit for details.	0x0

UM10914

Chapter 22: LPC5411x USARTs

Table 314. USART Interrupt Enable read and set register (INTENSET, offset 0x00C) bit description ...continued

Bit	Symbol	Description	Reset Value
10:7	-	Reserved. Read value is undefined, only zero should be written.	NA
11	DELTARXBRKEN	When 1, enables an interrupt when a change of state has occurred in the detection of a received break condition (break condition asserted or deasserted).	0x0
12	STARTEN	When 1, enables an interrupt when a received start bit has been detected.	0x0
13	FRAMERREN	When 1, enables an interrupt when a framing error has been detected.	0x0
14	PARITYERREN	When 1, enables an interrupt when a parity error has been detected.	0x0
15	RXNOISEEN	When 1, enables an interrupt when noise is detected. See description of the RXNOISEINT bit in Table 313.	0x0
16	ABERREN	When 1, enables an interrupt when an auto baud error occurs.	0x0
31:17	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.5 USART Interrupt Enable Clear register

The INTENCLR register is used to clear bits in the INTENSET register.

Table 315. USART Interrupt Enable clear register (INTENCLR, offset 0x010) bit description

Bit	Symbol	Description	Reset value
2:0	-	Reserved. Read value is undefined, only zero should be written.	NA
3	TXIDLECLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
4	-	Reserved. Read value is undefined, only zero should be written.	NA
5	DELTACTSCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
6	TXDISCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
10:7	-	Reserved. Read value is undefined, only zero should be written.	NA
11	DELTARXBRKCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
12	STARTCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
13	FRAMERRCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
14	PARITYERRCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
15	RXNOISECLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
16	ABERRCLR	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
31:17	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.6 USART Baud Rate Generator register

The Baud Rate Generator is a simple 16-bit integer divider controlled by the BRG register. The BRG register contains the value used to divide the Flexcomm Interface clock (FCLK) in order to produce the clock used for USART internal operations.

A 16-bit value allows producing standard baud rates from 300 baud and lower at the highest frequency of the device, up to 921,600 baud from a base clock as low as 14.7456 MHz.

Typically, the baud rate clock is 16 times the actual baud rate. This overclocking allows for centering the data sampling time within a bit cell, and for noise reduction and detection by taking three samples of incoming data.

#### Chapter 22: LPC5411x USARTs

Note that in 32 kHz mode, the baud rate generator is still used and must be set to 0 if 9600 baud is required.

For more information on USART clocking, see <u>Section 22.7.2</u> and <u>Section 22.3.1</u>.

**Remark:** In order to change a baud rate after a USART is running, the following sequence should be used:

- 1. Make sure the USART is not currently sending or receiving data.
- 2. Disable the USART by writing a 0 to the Enable bit (0 may be written to the entire register).
- 3. Write the new BRGVAL.
- 4. Write to the CFG register to set the Enable bit to 1.

Table 316. USART Baud Rate Generator register (BRG, offset 0x020) bit description

Bit	Symbol	Description	Reset value
15:0	BRGVAL	This value is used to divide the USART input clock to determine the baud rate, based on the input clock from the FRG.	0x0
		0 = FCLK is used directly by the USART function. 1 = FCLK is divided by 2 before use by the USART function. 2 = FCLK is divided by 3 before use by the USART function 0xFFFF = FCLK is divided by 65,536 before use by the USART function.	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.7 USART Interrupt Status register

The read-only INTSTAT register provides a view of those interrupt flags that are currently enabled. This can simplify software handling of interrupts. See <u>Table 313</u> for detailed descriptions of the interrupt flags.

Table 317. USART Interrupt Status register (INTSTAT, offset 0x024) bit description

Bit	Symbol	Description	Reset value
2:0	-	Reserved. Read value is undefined, only zero should be written.	NA
3	TXIDLE	Transmitter Idle status.	0x0
4	-	Reserved. Read value is undefined, only zero should be written.	NA
5	DELTACTS	This bit is set when a change in the state of the CTS input is detected.	0x0
6	TXDISINT	Transmitter Disabled Interrupt flag.	0x0
10:7	-	Reserved. Read value is undefined, only zero should be written.	NA
11	DELTARXBRK	This bit is set when a change in the state of receiver break detection occurs.	0x0
12	START	This bit is set when a start is detected on the receiver input.	0x0
13	FRAMERRINT	Framing Error interrupt flag.	0x0
14	PARITYERRINT	Parity Error interrupt flag.	0x0
15	RXNOISEINT	Received Noise interrupt flag.	0x0
16	ABERRINT	Auto baud Error Interrupt flag.	0x0
31:17	-	Reserved. Read value is undefined, only zero should be written.	NA

307 of 590

Chapter 22: LPC5411x USARTs

### 22.6.8 Oversample selection register

The OSR register allows selection of oversampling in asynchronous modes. The oversample value is the number of BRG clocks used to receive one data bit. The default is industry standard 16x oversampling.

Changing the oversampling can sometimes allow better matching of baud rates in cases where the function clock rate is not a multiple of 16 times the expected maximum baud rate. For all modes where the OSR setting is used, the USART receiver takes three consecutive samples of input data in the approximate middle of the bit time. Smaller values of OSR can make the sampling position within a data bit less accurate and may potentially cause more noise errors or incorrect data.

Table 318. Oversample selection register (OSR, offset 0x028) bit description

Bit	Symbol	Description	Reset value
3:0	OSRVAL	Oversample Selection Value.	0xF
		0 to 3 = not supported 0x4 = 5 function clocks are used to transmit and receive each data bit. 0x5 = 6 function clocks are used to transmit and receive each data bit 0xF= 16 function clocks are used to transmit and receive each data bit.	
31:4	-	Reserved, the value read from a reserved bit is not defined.	NA

### 22.6.9 Address register

The ADDR register holds the address for hardware address matching in address detect mode with automatic address matching enabled.

Table 319. Address register (ADDR, offset 0x02C) bit description

Bit	Symbol	Description	Reset value
7:0		8-bit address used with automatic address matching. Used when address detection is enabled (ADDRDET in CTL = 1) and automatic address matching is enabled (AUTOADDR in CFG = 1).	0x0
31:8	-	Reserved, the value read from a reserved bit is not defined.	NA

308 of 590

Chapter 22: LPC5411x USARTs

### 22.6.10 FIFO Configuration register

This register configures FIFO usage. A peripheral function within the Flexcomm Interface must be selected prior to configuring the FIFO.

Table 320. FIFO Configuration register (FIFOCFG - offset 0xE00) bit description

Bit	Symbol	Value	Description	Reset value	Access
0	ENABLETX		Enable the transmit FIFO.	0x0	R/W
		0	The transmit FIFO is not enabled.		
		1	The transmit FIFO is enabled.		
1	ENABLERX		Enable the receive FIFO.	0x0	R/W
		0	The receive FIFO is not enabled.		
		1	The receive FIFO is enabled.		
3:2	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
5:4	SIZE		FIFO size configuration. This is a read-only field.	NA	RO
			0x0 = FIFO is configured as 16 entries of 8 bits. 0x1, 0x2, 0x3 = not applicable to USART.		
11:6	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
12	DMATX		DMA configuration for transmit.	0x0	R/W
		0	DMA is not used for the transmit function.		
		1	Generate a DMA request for the transmit function if the FIFO is not full. Generally, data interrupts would be disabled if DMA is enabled.	-	
13	DMARX		DMA configuration for receive.	0x0	R/W
		0	DMA is not used for the receive function.		
		1	Generate a DMA request for the receive function if the FIFO is not empty. Generally, data interrupts would be disabled if DMA is enabled.		
14	WAKETX		Wake-up for transmit FIFO level. This allows the device to be woken from reduced power modes (up to deep-sleep, as long as the peripheral function works in that power mode) without enabling the TXLVL interrupt. Only DMA wakes up, processes data, and goes back to sleep. The CPU will remain stopped until woken by another cause, such as DMA completion.See Section 4.5.64 "Hardware Wake-up control register".	0x0	R/W
		0	Only enabled interrupts will wake up the device form reduced power modes.		
		1	A device wake-up for DMA will occur if the transmit FIFO level reaches the value specified by TXLVL in FIFOTRIG, even when the TXLVL interrupt is not enabled.		
15	WAKERX		Wake-up for receive FIFO level. This allows the device to be woken from reduced power modes (up to deep-sleep, as long as the peripheral function works in that power mode) without enabling the TXLVL interrupt. Only DMA wakes up, processes data, and goes back to sleep. The CPU will remain stopped until woken by another cause, such as DMA completion. See Section 4.5.64 "Hardware Wake-up control register".	0x0	R/W
		0	Only enabled interrupts will wake up the device form reduced power modes.		
		1	A device wake-up for DMA will occur if the receive FIFO level reaches the value specified by RXLVL in FIFOTRIG, even when the RXLVL interrupt is not enabled.		

Chapter 22: LPC5411x USARTs

Table 320. FIFO Configuration register (FIFOCFG - offset 0xE00) bit description

Bit	Symbol	Value	Description	Reset value	Access
16	EMPTYTX	-	Empty command for the transmit FIFO. When a 1 is written to this bit, the TX FIFO is emptied.	NA	WO
17	EMPTYRX	-	mpty command for the receive FIFO. When a 1 is written to this bit, the X FIFO is emptied.		WO
31:18	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA

### 22.6.11 FIFO status register

This register provides status information for the FIFO and also indicates an interrupt from the peripheral function.

Table 321. FIFO status register (FIFOSTAT - offset 0xE04) bit description

Bit	Symbol	Description	Reset value	Access
0	TXERR	TX FIFO error. Will be set if a transmit FIFO error occurs. This could be an overflow caused by pushing data into a full FIFO, or by an underflow if the FIFO is empty when data is needed. Cleared by writing a 1 to this bit.		R/W1C
1	RXERR	RX FIFO error. Will be set if a receive FIFO overflow occurs, caused by software or DMA not emptying the FIFO fast enough. Cleared by writing a 1 to this bit.		R/W1C
2	-	Reserved. Read value is undefined, only zero should be written.	NA	
3	PERINT	Peripheral interrupt. When 1, this indicates that the peripheral function has asserted an interrupt. The details can be found by reading the peripheral's STAT register.	0x0	RO
4	TXEMPTY	Transmit FIFO empty. When 1, the transmit FIFO is empty. The peripheral may still be processing the last piece of data.		RO
5	TXNOTFULL	Transmit FIFO not full. When 1, the transmit FIFO is not full, so more data can be written. When 0, the transmit FIFO is full and another write would cause it to overflow.		RO
6	RXNOTEMPTY	Receive FIFO not empty. When 1, the receive FIFO is not empty, so data can be read. When 0, the receive FIFO is empty.	0x0	RO
7	RXFULL	Receive FIFO full. When 1, the receive FIFO is full. Data needs to be read out to prevent the peripheral from causing an overflow.	0x0	RO
12:8	TXLVL	Transmit FIFO current level. A 0 means the TX FIFO is currently empty, and the TXEMPTY and TXNOTFULL flags will be 1. Other values tell how much data is actually in the TX FIFO at the point where the read occurs. If the TX FIFO is full, the TXEMPTY and TXNOTFULL flags will be 0.		RO
15:13	-	Reserved. Read value is undefined, only zero should be written.		
20:16	RXLVL	Receive FIFO current level. A 0 means the RX FIFO is currently empty, and the RXFULL and RXNOTEMPTY flags will be 0. Other values tell how much data is actually in the RX FIFO at the point where the read occurs. If the RX FIFO is full, the RXFULL and RXNOTEMPTY flags will be 1.		RO
31:21	-	Reserved. Read value is undefined, only zero should be written.	NA	-

Chapter 22: LPC5411x USARTs

### 22.6.12 FIFO trigger level settings register

This register allows selecting when FIFO-level related interrupts occur.

Table 322. FIFO trigger level settings register (FIFOTRIG - offset 0xE08) bit description

Bit	Symbol	Value	Description	Reset value
0	TXLVLENA		Transmit FIFO level trigger enable. The FIFO level trigger will cause an interrupt if enabled in FIFOINTENSET. This field is not used for DMA requests (see DMATX in FIFOCFG).	0x0
		0	Transmit FIFO level does not generate a FIFO level trigger.	
		1	An interrupt will be generated if the transmit FIFO level reaches the value specified by the TXLVL field in this register.	
1	FIFOINTENSET. This field is not used for DMA requests (see DMAR		Receive FIFO level trigger enable. This trigger will become an interrupt if enabled in FIFOINTENSET. This field is not used for DMA requests (see DMARX in FIFOCFG).	0x0
		0	Receive FIFO level does not generate a FIFO level trigger.	
		1	An interrupt will be generated if the receive FIFO level reaches the value specified by the RXLVL field in this register.	
10:2	-	-	Reserved. Read value is undefined, only zero should be written.	NA
11:8	TXLVL		Transmit FIFO level trigger point. This field is used only when TXLVLENA = 1. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See Section 4.5.64 "Hardware Wake-up control register".	0x0
			0 = generate an interrupt when the TX FIFO becomes empty. 1 = generate an interrupt when the TX FIFO level decreases to one entry 15 = generate an interrupt when the TX FIFO level decreases to 15 entries (is no longer full).	
15:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA
19:16	RXLVL		Receive FIFO level trigger point. The RX FIFO level is checked when a new piece of data is received. This field is used only when RXLVLENA = 1. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See Section 4.5.64 "Hardware Wake-up control register".  0 = generate an interrupt when the RX FIFO has one entry (is no longer empty).	0x0
			1 = generate an interrupt when the RX FIFO has two entries.      15 = generate an interrupt when the RX FIFO increases to 16 entries (has become full).	
31:20	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.13 FIFO interrupt enable set and read

This register is used to enable various interrupt sources. The complete set of interrupt enables may be read from this register. Writing ones to implemented bits in this register causes those bits to be set. The FIFOINTENCLR register is used to clear bits in this register.

Chapter 22: LPC5411x USARTs

Table 323. FIFO interrupt enable set and read register (FIFOINTENSET - offset 0xE10) bit description

Bit	Symbol	Value	Description	Reset value
0	TXERR		Determines whether an interrupt occurs when a transmit error occurs, based on the TXERR flag in the FIFOSTAT register.	0x0
		0	No interrupt will be generated for a transmit error.	
		1	An interrupt will be generated when a transmit error occurs.	
1	RXERR		Determines whether an interrupt occurs when a receive error occurs, based on the RXERR flag in the FIFOSTAT register.	0x0
		0	No interrupt will be generated for a receive error.	
		1	An interrupt will be generated when a receive error occurs.	
2	TXLVL		Determines whether an interrupt occurs when a the transmit FIFO reaches the level specified by the TXLVL field in the FIFOTRIG register.	0x0
		0	No interrupt will be generated based on the TX FIFO level.	
		1	If TXLVLENA in the FIFOTRIG register = 1, an interrupt will be generated when the TX FIFO level decreases to the level specified by TXLVL in the FIFOTRIG register.	
3	RXLVL		Determines whether an interrupt occurs when a the receive FIFO reaches the level specified by the TXLVL field in the FIFOTRIG register.	0x0
		0	No interrupt will be generated based on the RX FIFO level.	
		1	If RXLVLENA in the FIFOTRIG register = 1, an interrupt will be generated when the when the RX FIFO level increases to the level specified by RXLVL in the FIFOTRIG register.	
31:4	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.14 FIFO interrupt enable clear and read

The FIFOINTENCLR register is used to clear interrupt enable bits in FIFOINTENSET. The complete set of interrupt enables may also be read from this register as well as FIFOINTENSET.

Table 324. FIFO interrupt enable clear and read (FIFOINTENCLR - offset 0xE14) bit description

Bit	Symbol	Description	Reset value
0	TXERR	Vriting a one to this bit disables the TXERR interrupt.	
1	RXERR	Writing a one to this bit disables the RXERR interrupt.	0x0
2	TXLVL	Vriting a one to this bit disables the interrupt caused by the transmit FIFO reaching the level pecified by the TXLVL field in the FIFOTRIG register.	
3	RXLVL	Writing a one to this bit disables the interrupt caused by the receive FIFO reaching the level specified by the RXLVL field in the FIFOTRIG register.	
31:4		Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.15 FIFO interrupt status register

The read-only FIFOINTSTAT register provides a view of those interrupt flags that are both pending and currently enabled. This can simplify software handling of interrupts. Refer to the descriptions of interrupts in <u>Section 22.6.11</u> and <u>Section 22.6.12</u> for details.

Chapter 22: LPC5411x USARTs

Table 325. FIFO interrupt status register (FIFOINTSTAT - offset 0xE18) bit description

Bit	Symbol	Description	Reset value
0	TXERR	TX FIFO error.	0x0
1	RXERR	RX FIFO error.	0x0
2	TXLVL	Transmit FIFO level interrupt.	0x0
3	RXLVL	Receive FIFO level interrupt.	0x0
4	PERINT	Peripheral interrupt.	0x0
31:5	-	Reserved. Read value is undefined, only zero should be written.	NA

### 22.6.16 FIFO write data register

The FIFOWR register is used to write values to be transmitted to the FIFO.

Table 326. FIFO write data register (FIFOWR - offset 0xE20) bit description

Bit	Symbol	Description	Reset value
8:0	TXDATA	Transmit data to the FIFO.	NA

### 22.6.17 FIFO read data register

The FIFORD register is used to read values that have been received by the FIFO.

Table 327. FIFO read data register (FIFORD - offset 0xE30) bit description

Bit	Symbol	Description	Reset value
8:0	RXDATA	Received data from the FIFO. The number of bits used depends on the DATALEN and PARITYSEL settings.	NA
12:9	-	Reserved, the value read from a reserved bit is not defined.	NA
13	FRAMERR	Framing Error status flag. This bit reflects the status for the data it is read along with from the FIFO, and indicates that the character was received with a missing stop bit at the expected location. This could be an indication of a baud rate or configuration mismatch with the transmitting source.	NA
14	PARITYERR	Parity Error status flag. This bit reflects the status for the data it is read along with from the FIFO. This bit will be set when a parity error is detected in a received character.	
15	RXNOISE	Received Noise flag. See description of the RxNoiseInt bit in Table 313.	NA
31:16	-	Reserved, the value read from a reserved bit is not defined.	NA

### 22.6.18 FIFO data read with no FIFO pop

This register acts in exactly the same way as FIFORD, except that it supplies data from the top of the FIFO without popping the FIFO (i.e. leaving the FIFO state unchanged). This could be used to allow system software to observe incoming data without interfering with the peripheral driver.

Table 328. FIFO data read with no FIFO pop (FIFORDNOPOP - offset 0xE40) bit description

Bit	Symbol	Description	Reset value
8:0	RXDATA	Received data from the FIFO.	NA
12:9	-	Reserved, the value read from a reserved bit is not defined.	NA
13	FRAMERR	Framing Error status flag.	NA

Chapter 22: LPC5411x USARTs

Table 328. FIFO data read with no FIFO pop (FIFORDNOPOP - offset 0xE40) bit description

Bit	Symbol	Description	Reset value
14	PARITYERR	Parity Error status flag.	NA
15	RXNOISE	Received Noise flag.	
31:16	-	Reserved, the value read from a reserved bit is not defined.	NA

### 22.6.19 Module identification register

The ID register identifies the type and revision of the USART module. A generic SW driver can make use of this information register to implement module type or revision specific behavior.

Table 329. Module identification register (ID - offset 0xFFC) bit description

Bit	Symbol	Description	Reset Value
7:0	APERTURE	Aperture: encoded as (aperture size/4K) -1, so 0x00 means a 4K aperture.	0x0
11:8		Minor revision of module implementation, starting at 0. Minor revision of module implementation, starting at 0. Software compatibility is expected between minor revisions.	-
15:12	MAJOR_REV Major revision of module implementation, starting at 0. There may not be software compatibility between major revisions.		-
31:16	ID	Unique module identifier for this IP block.	0xE010

Chapter 22: LPC5411x USARTs

### 22.7 Functional description

#### 22.7.1 AHB bus access

The bus interface to the USART registers contained in the Flexcomm Interface support only word writes. Byte and halfword writes are not supported in conjunction with the USART function.

#### 22.7.2 Clocking and baud rates

In order to use the USART, clocking details must be defined such as setting up the clock source selection, the BRG, and setting up the FRG if it is the selected clock source.

Also see Section 22.3.1 "Configure the Flexcomm Interface clock and USART baud rate".

#### 22.7.2.1 Fractional Rate Generator (FRG)

The Fractional Rate Generator can be used to obtain more precise baud rates when the function clock is not a good multiple of standard (or otherwise desirable) baud rates.

The FRG is typically set up to produce an integer multiple of the highest required baud rate, or a very close approximation. The BRG is then used to obtain the actual baud rate needed.

The FRG register controls the Fractional Rate Generator, which provides the base clock that may be used by any Flexcomm Interface. The Fractional Rate Generator creates a lower rate output clock by suppressing selected input clocks. When not needed, the value of 0 can be set for the FRG, which will then not divide the input clock.

The FRG output clock is defined as the input clock divided by 1 + (MULT / 256), where MULT is in the range of 1 to 255. This allows producing an output clock that ranges from the input clock divided by 1+1/256 to 1+255/256 (just more than 1 to just less than 2). Any further division can be done specific to each USART block by the integer BRG divider contained in each USART.

The base clock produced by the FRG cannot be perfectly symmetrical, so the FRG distributes the output clocks as evenly as is practical. Since USARTs normally uses 16x overclocking, the jitter in the fractional rate clock in these cases tends to disappear in the ultimate USART output.

For setting up the fractional divider, see Section 4.5.28 and Section 4.5.38.

#### 22.7.2.2 Baud Rate Generator (BRG)

The Baud Rate Generator (see Section 22.6.6) is used to divide the base clock to produce a rate 16 times the desired baud rate. Typically, standard baud rates can be generated by integer divides of higher baud rates.

#### 22.7.2.3 32 kHz mode

In order to use a 32 kHz clock to operate a USART at any reasonable speed, a number of adaptations need to be made. First, 16x overclocking has to be abandoned. Otherwise, the maximum data rate would be very low. For the same reason, multiple samples of each

**User manual** 

315 of 590

Chapter 22: LPC5411x USARTs

data bit must be reduced to one. Finally, special clocking has to be used for individual bit times because 32 kHz is not particularly close to an even multiple of any standard baud rate.

When 32 kHz mode is enabled, clocking comes from the RTC oscillator. The FRG is bypassed, and the BRG can be used to divide down the default 9600 baud to lower rates. Other adaptations required to make the USART work for rates up to 9600 baud are done internally. Rate error will be less than one half percent in this mode, provided the RTC oscillator is operating at the intended frequency of 32.768 kHz.

#### 22.7.3 DMA

A DMA request is provided for each USART direction, and can be used in lieu of interrupts for transferring data by configuring the DMA controller and FIFO level triggering appropriately. The DMA controller provides an acknowledgement signal that clears the related request when it completes handling a that request. The transmitter DMA request is asserted when the transmitter can accept more data. The receiver DMA request is asserted when received data is available to be read.

When DMA is used to perform USART data transfers, other mechanisms can be used to generate interrupts when needed. For instance, completion of the configured DMA transfer can generate an interrupt from the DMA controller. Also, interrupts for special conditions, such as a received break, can still generate useful interrupts.

#### 22.7.4 Synchronous mode

In synchronous mode, a master generates a clock as defined by the clock selection and BRG, which is used to transmit and receive data. As a slave, the external clock is used to transmit and receive data. There is no overclocking in either case.

#### 22.7.5 Flow control

The USART supports both hardware and software flow control.


#### 22.7.5.1 Hardware flow control

The USART supports hardware flow control using RTS and/or CTS signalling. If RTS is configured to appear on a device pin so that it can be sent to an external device, it indicates to an external device the ability of the receiver to receive more data. It can also be used internally to throttle the transmitter from the receiver, which can be especially useful if loopback mode is enabled.

If connected to a pin, and if enabled to do so, the CTS input can allow an external device to throttle the USART transmitter. Both internal and external CTS can be used separately or together.

Figure 54 shows an overview of RTS and CTS within the USART.

Chapter 22: LPC5411x USARTs

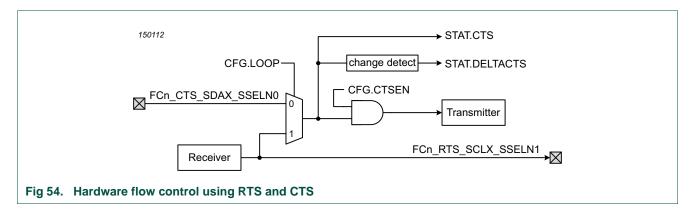

#### 22.7.5.2 Software flow control

Software flow control could include XON / XOFF flow control, or other mechanisms. these are supported by the ability to check the current state of the CTS input, and/or have an interrupt when CTS changes state (via the CTS and DELTACTS bits, respectively, in the STAT register), and by the ability of software to gracefully turn off the transmitter (via the TXDIS bit in the CTL register).

#### 22.7.6 Auto-baud function

The auto-baud functions attempts to measure the start bit time of the next received character. For this to work, the measured character must have a 1 in the least significant bit position, so that the start bit is bounded by a falling and rising edge. Before an auto-baud operation is requested, the BRG value must be set to 0. The measurement is made using the current clocking settings, including the oversampling configuration. The result is that a value is stored in the BRG register that is as close as possible to the correct setting for the sampled character and the current clocking settings. The sampled character is provided in the RXDAT and RXDATSTAT registers, allowing software to double check for the expected character.

Auto-baud includes a time-out that is flagged by ABERR if no character is received at the expected time. It is recommended that auto-baud only be enabled when the USART receiver is idle. Once enabled, either data will become available in the FIFO or ABERR will be asserted at some point, at which time software should turn off auto-baud.

Auto-baud has no meaning and should not be enabled when the USART is in synchronous mode.

#### 22.7.7 RS-485 support

RS-485 support requires some form of address recognition and data direction control.

This USART has provisions for hardware address recognition (see the AUTOADDR bit in the CFG register in <u>Section 22.6.1</u> and the ADDR register in <u>Section 22.6.9</u>), as well as software address recognition (see the ADDRDET bit in the CTL register in <u>Section 22.6.2</u>).

Automatic data direction control with the RTS pin can be set up using the OESEL, OEPOL, and OETA bits in the CFG register (<u>Section 22.6.1</u>). Data direction control can also be implemented in software using a GPIO pin.

Chapter 22: LPC5411x USARTs

#### 22.7.8 Oversampling

Typical industry standard USARTs use a 16x oversample clock to transmit and receive asynchronous data. This is the number of BRG clocks used for one data bit. The Oversample Select Register (OSR) allows this USART to use a 16x down to a 5x oversample clock. There is no oversampling in synchronous modes.

Reducing the oversampling can sometimes help in getting better baud rate matching when the baud rate is very high, or the function clock is very low. For example, the closest actual rate near 115,200 baud with a 12 MHz function clock and 16x oversampling is 107,143 baud, giving a rate error of 7%. Changing the oversampling to 15x gets the actual rate to 114,286 baud, a rate error of 0.8%. Reducing the oversampling to 13x gets the actual rate to 115,385 baud, a rate error of only 0.16%.

There is a cost for altering the oversampling. In asynchronous modes, the USART takes three samples of incoming data on consecutive oversample clocks, as close to the center of a bit time as can be done. When the oversample rate is reduced, the three samples spread out and occupy a larger proportion of a bit time. For example, with 5x oversampling, there is one oversample clock, then three data samples taken, then one more oversample clock before the end of the bit time. Since the oversample clock is running asynchronously from the input data, skew of the input data relative to the expected timing has little room for error. At 16x oversampling, there are several oversample clocks before actual data sampling is done, making the sampling more robust. Generally speaking, it is recommended to use the highest oversampling where the rate error is acceptable in the system.

### 22.7.9 Break generation and detection

A line break may be sent at any time, regardless of other USART activity. Received break is also detected at any time, including during reception of a character. Received break is signaled when the RX input remains low for 16 bit times. Both the beginning and end of a received break are noted by the DELTARXBRK status flag, which can be used as an interrupt. See Section 22.7.10 for details of LIN mode break.

In order to avoid corrupting any character currently being transmitted, it is recommended that the USART transmitter be disabled by setting the TXDIS bit in the CTL register, then waiting for the TXDISSTAT flag to be set prior to sending a break. Then a 1 may be written to the TXBRKEN bit in the CTL register. This sends a break until TXBRKEN is cleared, allowing any length break to be sent.

#### 22.7.10 LIN bus

The only difference between standard operation and LIN mode is that LIN mode alters the way that break generation and detection is performed (see Section 22.7.9 for details of the standard break). When a break is requested by setting the TXBRKEN bit in the CTL register, then sending a dummy character, a 13 bit time break is sent. A received break is flagged when the RX input remains low for 11 bit times. As for non-LIN mode, a received character is also flagged, and accompanied by a framing error status.

As a LIN slave, the auto-baud feature can be used to synchronize to a LIN sync byte, and will return the value of the sync byte as confirmation of success.

318 of 590

Chapter 22: LPC5411x USARTs

Wake-up for LIN can potentially be handled in a number of ways, depending on the system, and what clocks may be running in a slave device. For instance, as long as the USART is receiving internal clocks allowing it to function, it can be set to wake up the CPU for any interrupt, including a received start bit. If there are no clocks running, the GPIO function of the USART RX pin can be programmed to wake up the device.

# **UM10914**

### **Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)**

Rev. 1.2 — 30 June 2016

**User manual** 

### 23.1 How to read this chapter

SPI functions are available on all LPC5411x devices as a selectable function in each Flexcomm Interface peripheral. Up to 8 Flexcomm Interfaces are available.

#### 23.2 Features

- Master and slave operation.
- Data transmits of 4 to 16 bits supported directly. Larger frames supported by software.
- The SPI function supports separate transmit and receive FIFOs with 8 entries each.
- Supports DMA transfers: SPIn transmit and receive functions can be operated with the system DMA controller.
- Data can be transmitted to a slave without the need to read incoming data. This can be useful while setting up an SPI memory.
- Up to four Slave Select input/outputs with selectable polarity and flexible usage.

Remark: Texas Instruments SSI and National Microwire modes are not supported.

### 23.3 Basic configuration

Initial configuration of an SPI peripheral is accomplished as follows:

- If needed, use the PRESETCTRL1 register (<u>Table 39</u>) to reset the Flexcomm Interface that is about to have a specific peripheral function selected.
- Select the desired Flexcomm Interface function by writing to the PSELID register of the related Flexcomm Interface (Section 21.7.1).
- Configure the FIFOs for operation.
- Configure the SPI for receiving and transmitting data:
  - In the AHBCLKCTRL1 (<u>Table 45</u>) register, set the appropriate bit for the related Flexcomm Interface in order to enable the clock to the register interface.
  - Enable or disable the related Flexcomm Interface interrupts in the NVIC (see <u>Table 2</u>).
  - Configure the required Flexcomm Interface pin functions through IOCON. See Section 23.4.
  - Configure the Flexcomm Interface clock and SPI data rate (see <u>Section 23.7.4</u>).
     Remark: The Flexcomm Interface function clock frequency should not be above 48 MHz.
  - Set the RXIGNORE bit to only transmit data and not read the incoming data.
     Otherwise, the transmit halts when the FIFORD buffer is full.
- Configure the SPI function to wake up the part from low power modes. See Section 23.3.1.

#### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

#### 23.3.1 Configure the SPI for wake-up

In sleep mode, any signal that triggers an SPI interrupt can wake up the part, provided that the interrupt is enabled in the INTENSET register and the NVIC. As long as the SPI clock is configured to be active in sleep mode, the SPI can wake up the part independently of whether the SPI block is configured in master or slave mode.

In deep-sleep mode, the SPI clock is turned off. However, if the SPI is configured in slave mode and an external master on the provides the clock signal, the SPI can create an interrupt asynchronously and wake up the device. The appropriate interrupt(s) must be enabled in the SPI and the NVIC.

### 23.3.1.1 Wake-up from sleep mode

- Configure the SPI in either master or slave mode. See Table 333.
- Enable the SPI interrupt in the NVIC.
- Any enabled SPI interrupt wakes up the part from sleep mode.

#### 23.3.1.2 Wake-up from deep-sleep mode

- Configure the SPI in slave mode. See <u>Table 333</u>. The SCK function must be connected to a pin and the pin connected to the master.
- Enable the SPI interrupt in the STARTER0 register. See <u>Table 93</u>.
- Enable the SPI interrupt in the NVIC.
- Enable desired SPI interrupts. Examples are the following wake-up events:
  - A change in the state of the SSEL pins.
  - Data available to be received.
  - Receive FIFO overflow.

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

### 23.4 Pin description

The SPI signals are movable Flexcomm Interface functions and are assigned to external pins via IOCON.

Table 330: SPI Pin Description

Function	Туре	Pin name used in Pin Description chapter	Description
SCK	I/O	FCn_SCK	Serial Clock for SPI on Flexcomm Interface n. SCK is a clock signal used to synchronize the transfer of data. It is driven by the master and received by the slave. When the SPI interface is used, the clock is programmable to be active-high or active-low. SCK only switches during a data transfer. It is driven whenever the Master bit in CFG equals 1, regardless of the state of the Enable bit.
MOSI	I/O	FCn_RXD_SDA_MOSI or FCn_RXD_SDA_MOSI_DATA	Master Out Slave In for SPI on Flexcomm Interface n. The MOSI signal transfers serial data from the master to the slave. When the SPI is a master, it outputs serial data on this signal. When the SPI is a slave, it clocks in serial data from this signal. MOSI is driven whenever the Master bit in Cfg equals 1, regardless of the state of the Enable bit.
MISO	I/O	FCn_TXD_SCL_MISO or FCn_TXD_SCL_MISO_WS	Master In Slave Out for SPI on Flexcomm Interface n. The MISO signal transfers serial data from the slave to the master. When the SPI is a master, serial data is input from this signal. When the SPI is a slave, serial data is output to this signal. MISO is driven when the SPI block is enabled, the Master bit in CFG equals 0, and when the slave is selected by one or more SSEL signals.
SSEL0	I/O	FCn_CTS_SDA_SSEL0	Slave Select 0 for SPI on Flexcomm Interface n. When the SPI interface is a master, it will drive the SSEL signals to an active state before the start of serial data and then release them to an inactive state after the serial data has been sent. By default, this signal is active low but can be selected to operate as active high. When the SPI is a slave, any SSEL in an active state indicates that this slave is being addressed. The SSEL pin is driven whenever the Master bit in the CFG register equals 1, regardless of the state of the Enable bit.
SSEL1	I/O	FCn_RTS_SCL_SSEL1	Slave Select 1 for SPI on Flexcomm Interface n.
SSEL2	I/O	FCn_SSEL2	Slave Select 2 for SPI on Flexcomm Interface n.
SSEL3	I/O	FCn_SSEL3	Slave Select 3 for SPI on Flexcomm Interface n.

Recommended IOCON settings are shown in <u>Table 331</u>. See <u>Chapter 7</u> for definitions of pin types.


322 of 590

#### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 331: Suggested SPI pin settings

IOCON bit(s)	Type D pin	Type A pin	Type I pin	
10	OD: Set to 0 unless open-drain output is desired.	Same as type D.	I2CFILTER: Set to 1.	
9	SLEW: Generally set to 0. Setting to 1 at higher SPI rates may improve performance.	Not used, set to 0.	I2CDRIVE: Set to 0	
8	FILTEROFF: Generally set to 1.	Same as type D.	Same as type D.	
7	DIGIMODE: Set to 1.	DIGIMODE: Set to 1.	DIGIMODE: Set to 1.	
6	INVERT: Set to 0.	Same as type D.	Same as type D.	
5	Not used, set to 0.	Same as type D.	I2CSLEW: Set to 1.	
4:3	MODE: Set to 0 (pull-down/pull-up resistor not enabled). Could be another setting if the input might sometimes be floating (causing leakage within the pin input).	Same as type D.	Not used, set to 0.	
2:0	FUNC: Must select the correct function for this peripheral.	Same as type D.	Same as type D.	
General comment	A good choice for SPI input or output.	A reasonable choice for SPI input or output.	Not recommended for SPI functions that can be outputs in the chosen mode.	

### 23.5 General description

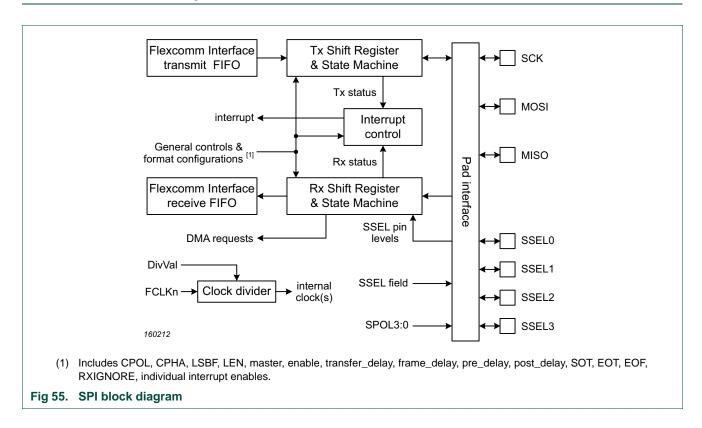

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

# 23.6 Register description

Address offsets are within the address space of the related Flexcomm Interface. The Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

Table 332. SPI register overview

Name	Access	Offset	Description	Reset value	Section			
Registers for the SPI function:								
CFG	R/W	0x400	SPI Configuration register.	0x0	23.6.1			
DLY	R/W	0x404	SPI Delay register.	0x0	23.6.2			
STAT	R/W	0x408	SPI Status. Some status flags can be cleared by writing a 1 to that bit position.	0x100	23.6.3			
INTENSET	R/W	0x40C	SPI Interrupt Enable read and Set. A complete value may be read from this register. Writing a 1 to any implemented bit position causes that bit to be set.	0x0	23.6.4			
INTENCLR	WO	0x410	SPI Interrupt Enable Clear. Writing a 1 to any implemented bit position causes the corresponding bit in INTENSET to be cleared.	NA	23.6.5			
DIV	R/W	0x424	SPI clock Divider.	0x0	23.6.6			
INTSTAT	RO	0x428	SPI Interrupt Status.	0x0	23.6.7			
Registers for FIFO control and data access:								
FIFOCFG	R/W	0xE00	FIFO configuration and enable register.	0x0	23.6.8			
FIFOSTAT	R/W	0xE04	FIFO status register.	0x30	23.6.9			
FIFOTRIG	R/W	0xE08	FIFO trigger level settings for interrupt and DMA request.	0x0	23.6.10			
FIFOINTENSET	R/W1C	0xE10	FIFO interrupt enable set (enable) and read register.	0x0	23.6.11			
FIFOINTENCLR	R/W1C	0xE14	FIFO interrupt enable clear (disable) and read register.	0x0	23.6.12			
FIFOINTSTAT	RO	0xE18	FIFO interrupt status register.	0x0	23.6.13			
FIFOWR	WO	0xE20	FIFO write data.	NA	23.6.14			
FIFORD	RO	0xE30	FIFO read data.	NA	23.6.15			
FIFORDNOPOP	RO	0xE40	FIFO data read with no FIFO pop.	NA	23.6.16			
ID register:	•	-		•				
ID	RO	0xFFC	SPI module Identification. This value appears in the shared Flexcomm Interface peripheral ID register when SPI is selected.	see table	23.6.17			

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.6.1 SPI Configuration register

The CFG register contains information for the general configuration of the SPI. Typically, this information is not changed during operation. See the description of the master idle status (MSTIDLE in Table 335) for more information.

Remark: A setup sequence is recommended for initial SPI setup (after the SPI function has been selected (see Chapter 21), and when changes need to be made to settings in the CFG register after the interface has been in use. See the list below. In the case of changing existing settings, the interface should first be disabled by clearing the ENABLE bit once the interface is fully idle. See the description of the master idle status (MSTIDLE in Table 335) for more information.

- Disable the FIFO by clearing the ENABLETX and ENABLERX bits in FIFOCFG
- Setup the SPI interface in the CFG register, leaving ENABLE = 0.
- Enable the FIFO by setting the ENABLETX and/or ENABLERX bits in FIFOCFG
- Enable the SPI by setting the ENABLE bit in CFG.

Table 333. SPI Configuration register (CFG, offset 0x400) bit description

Bit	Symbol	Value	Description	Reset value
0	ENABLE		SPI enable.	0x0
		0	Disabled. The SPI is disabled and the internal state machine and counters are reset.	
		1	Enabled. The SPI is enabled for operation.	
1	-	-	Reserved. Read value is undefined, only zero should be written.	NA
2	MASTER		Master mode select.	0x0
		0	Slave mode. The SPI will operate in slave mode. SCK, MOSI, and the SSEL signals are inputs, MISO is an output.	
		1	Master mode. The SPI will operate in master mode. SCK, MOSI, and the SSEL signals are outputs, MISO is an input.	
3	LSBF		LSB First mode enable.	0x0
		0	Standard. Data is transmitted and received in standard MSB first order.	
		1	Reverse. Data is transmitted and received in reverse order (LSB first).	
4	СРНА		Clock Phase select.	0x0
		0	Change. The SPI captures serial data on the first clock transition of the transfer (when the clock changes away from the rest state). Data is changed on the following edge.	
		1	Capture. The SPI changes serial data on the first clock transition of the transfer (when the clock changes away from the rest state). Data is captured on the following edge.	
5	CPOL		Clock Polarity select.	0x0
		0	Low. The rest state of the clock (between transfers) is low.	
		1	High. The rest state of the clock (between transfers) is high.	
6	-	-	Reserved. Read value is undefined, only zero should be written.	NA
7	LOOP		Loopback mode enable. Loopback mode applies only to Master mode, and connects transmit and receive data connected together to allow simple software testing.	0x0
		0	Disabled.	
		1	Enabled.	1

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 333. SPI Configuration register (CFG, offset 0x400) bit description ...continued

Bit	Symbol	Value	Description	Reset value
8	SPOL0		SSEL0 Polarity select.	0x0
		0	Low. The SSEL0 pin is active low.	
		1	High. The SSEL0 pin is active high.	
9	SPOL1		SSEL1 Polarity select.	0x0
		0	Low. The SSEL1 pin is active low.	
		1	High. The SSEL1 pin is active high.	
10	SPOL2		SSEL2 Polarity select.	0x0
		0	Low. The SSEL2 pin is active low.	
		1	High. The SSEL2 pin is active high.	
11	SPOL3		SSEL3 Polarity select.	0x0
		0	Low. The SSEL3 pin is active low.	
		1	High. The SSEL3 pin is active high.	
31:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 23.6.2 SPI Delay register

The DLY register controls several programmable delays related to SPI signalling. These delays apply only to master mode, and are all stated in SPI clocks.

Timing details are shown in <u>Section 23.7.3.1 "Pre\_delay and Post\_delay"</u>, <u>Section 23.7.3.2 "Frame\_delay"</u>, and <u>Section 23.7.3.3 "Transfer\_delay"</u>.

Table 334. SPI Delay register (DLY, offset 0x404) bit description

Bit	Symbol	Description	Reset value
3:0	PRE_ DELAY	Controls the amount of time between SSEL assertion and the beginning of a data transfer.  There is always one SPI clock time between SSEL assertion and the first clock edge. This is not considered part of the pre-delay.  0x0 = No additional time is inserted.  0x1 = 1 SPI clock time is inserted.  0x2 = 2 SPI clock times are inserted.   0xF = 15 SPI clock times are inserted.	0x0
7:4	POST_ DELAY	Controls the amount of time between the end of a data transfer and SSEL deassertion.  0x0 = No additional time is inserted.  0x1 = 1 SPI clock time is inserted.  0x2 = 2 SPI clock times are inserted.   0xF = 15 SPI clock times are inserted.	0x0

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 334. SPI Delay register (DLY, offset 0x404) bit description

Bit	Symbol	Description	Reset value
11:8	FRAME_ DELAY	If the EOF flag is set, controls the minimum amount of time between the current frame and the next frame (or SSEL deassertion if EOT).	0x0
		0x0 = No additional time is inserted. 0x1 = 1 SPI clock time is inserted. 0x2 = 2 SPI clock times are inserted 0xF = 15 SPI clock times are inserted.	
15:12	TRANSFER _ DELAY	Controls the minimum amount of time that the SSEL is deasserted between transfers.  0x0 = The minimum time that SSEL is deasserted is 1 SPI clock time. (Zero added time.)  0x1 = The minimum time that SSEL is deasserted is 2 SPI clock times.  0x2 = The minimum time that SSEL is deasserted is 3 SPI clock times.   0xF = The minimum time that SSEL is deasserted is 16 SPI clock times.	0x0
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

## 23.6.3 SPI Status register

The STAT register provides SPI status flags for software to read, and a control bit for forcing an end of transfer. Flags other than read-only flags may be cleared by writing ones to corresponding bits of STAT.

In this register, the following notation is used: RO = Read-only, W1C = write 1 to clear.

Table 335. SPI Status register (STAT, offset 0x408) bit description

Bit	Symbol	Description	Reset value	Access
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
4	SSA	Slave Select Assert. This flag is set whenever any slave select transitions from deasserted to asserted, in both master and slave modes. This allows determining when the SPI transmit/receive functions become busy, and allows waking up the device from reduced power modes when a slave mode access begins. This flag is cleared by software.	0x0	W1C
5	SSD	Slave Select Deassert. This flag is set whenever any asserted slave selects transition to deasserted, in both master and slave modes. This allows determining when the SPI transmit/receive functions become idle. This flag is cleared by software.	0x0	W1C
6	STALLED	Stalled status flag. This indicates whether the SPI is currently in a stall condition.	0x0	RO
7	END TRANSFER	End Transfer control bit. Software can set this bit to force an end to the current transfer when the transmitter finishes any activity already in progress, as if the EOT flag had been set prior to the last transmission. This capability is included to support cases where it is not known when transmit data is written that it will be the end of a transfer. The bit is cleared when the transmitter becomes idle as the transfer comes to an end. Forcing an end of transfer in this manner causes any specified FRAME_DELAY and TRANSFER_DELAY to be inserted.	0x0	RO/ W1C
8	MSTIDLE	Master idle status flag. This bit is 1 whenever the SPI master function is fully idle. This means that the transmit holding register is empty and the transmitter is not in the process of sending data.	0x1	RO
31:9	-	Reserved. Read value is undefined, only zero should be written.	NA	NA

Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.6.4 SPI Interrupt Enable read and Set register

The INTENSET register is used to enable various SPI interrupt sources. Enable bits in INTENSET are mapped in locations that correspond to the flags in the STAT register. The complete set of interrupt enables may be read from this register. Writing ones to implemented bits in this register causes those bits to be set. The INTENCLR register is used to clear bits in this register. See Table 335 for details of the interrupts.

Table 336. SPI Interrupt Enable read and Set register (INTENSET, offset 0x40C) bit description

Bit	Symbol	Value	Description	Reset value
3:0	-	-	Reserved. Read value is undefined, only zero should be written.	NA
4	SSAEN		Slave select assert interrupt enable. Determines whether an interrupt occurs when the Slave Select is asserted.	0x0
		0	Disabled. No interrupt will be generated when any Slave Select transitions from deasserted to asserted.	
		1	Enabled. An interrupt will be generated when any Slave Select transitions from deasserted to asserted.	
5	SSDEN		Slave select deassert interrupt enable. Determines whether an interrupt occurs when the Slave Select is deasserted.	0x0
			Disabled. No interrupt will be generated when all asserted Slave Sele deasserted.	Disabled. No interrupt will be generated when all asserted Slave Selects transition to deasserted.
		1	Enabled. An interrupt will be generated when all asserted Slave Selects transition to deasserted.	
7:6	-	-	Reserved. Read value is undefined, only zero should be written.	NA
8	MSTIDLEEN		Master idle interrupt enable.	0x0
		0	No interrupt will be generated when the SPI master function is idle.	
		1	An interrupt will be generated when the SPI master function is fully idle.	
31:9	-	-	Reserved. Read value is undefined, only zero should be written.	NA

## 23.6.5 SPI Interrupt Enable Clear register

The INTENCLR register is used to clear interrupt enable bits in the INTENSET register.

Table 337. SPI Interrupt Enable clear register (INTENCLR, offset 0x410) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA
4	SSAEN	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
5	SSDEN	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
7:6	-	Reserved. Read value is undefined, only zero should be written.	NA
8	MSTIDLE	Writing 1 clears the corresponding bit in the INTENSET register.	0x0
31:9	-	Reserved. Read value is undefined, only zero should be written.	NA

## 23.6.6 SPI Divider register

The DIV register determines the clock used by the SPI in master mode.

For details on clocking, see Section 23.7.4 "Clocking and data rates".

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 338. SPI Divider register (DIV, offset 0x424) bit description

Bit	Symbol	Description	Reset Value
15:0	DIVVAL	Rate divider value. Specifies how the Flexcomm Interface clock (FCLK) is divided to produce the SPI clock rate in master mode.	0x0
		DIVVAL is -1 encoded such that the value 0 results in FCLK/1, the value 1 results in FCLK/2, up to the maximum possible divide value of 0xFFFF, which results in FCLK/65536.	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

# 23.6.7 SPI Interrupt Status register

The read-only INTSTAT register provides a view of those interrupt flags that are currently enabled. This can simplify software handling of interrupts. See <u>Table 335</u> for detailed descriptions of the interrupt flags.

Table 339. SPI Interrupt Status register (INTSTAT, offset 0x428) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA
4	SSA	Slave Select Assert.	0x0
5	SSD	Slave Select Deassert.	0x0
7:6	-	Reserved. Read value is undefined, only zero should be written.	NA
8	MSTIDLE	Master Idle status flag.	0x0
31:9	-	Reserved. Read value is undefined, only zero should be written.	NA

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

# 23.6.8 FIFO Configuration register

This register configures FIFO usage. A peripheral function within the Flexcomm Interface must be selected prior to configuring the FIFO.

Table 340. FIFO Configuration register (FIFOCFG - offset 0xE00) bit description

Bit	Symbol	Value	Description	Reset value	Access
0	ENABLETX		Enable the transmit FIFO.	0x0	R/W
		0	The transmit FIFO is not enabled.		
		1	The transmit FIFO is enabled.		
1	ENABLERX		Enable the receive FIFO.	0x0	R/W
		0	The receive FIFO is not enabled.		
		1	The receive FIFO is enabled.		
3:2	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
5:4	SIZE		FIFO size configuration. This is a read-only field.	NA	RO
			0x1 = FIFO is configured as 8 entries of 16 bits. 0x0, 0x2, 0x3 = not applicable to SPI.		
11:6	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
12	DMATX		DMA configuration for transmit.	0x0	R/W
		0	DMA is not used for the transmit function.		
		1	Generate a DMA request for the transmit function if the FIFO is not full. Generally, data interrupts would be disabled if DMA is enabled.		
13	DMARX		DMA configuration for receive.	0x0	R/W
		0	DMA is not used for the receive function.		
		1	Generate a DMA request for the receive function if the FIFO is not empty. Generally, data interrupts would be disabled if DMA is enabled.		
14	WAKETX		Wake-up for transmit FIFO level. This allows the device to be woken from reduced power modes (up to deep-sleep, as long as the peripheral function works in that power mode) without enabling the TXLVL interrupt. Only DMA wakes up, processes data, and goes back to sleep. The CPU will remain stopped until woken by another cause, such as DMA completion.See Section 4.5.64 "Hardware Wake-up control register".	0x0	R/W
		0	Only enabled interrupts will wake up the device form reduced power modes.		
		1	A device wake-up for DMA will occur if the transmit FIFO level reaches the value specified by TXLVL in FIFOTRIG, even when the TXLVL interrupt is not enabled.		
15	WAKERX		Wake-up for receive FIFO level. This allows the device to be woken from reduced power modes (up to deep-sleep, as long as the peripheral function works in that power mode) without enabling the TXLVL interrupt. Only DMA wakes up, processes data, and goes back to sleep. The CPU will remain stopped until woken by another cause, such as DMA completion. See Section 4.5.64 "Hardware Wake-up control register".	0x0	R/W
		0	Only enabled interrupts will wake up the device form reduced power modes.		
		1	A device wake-up for DMA will occur if the receive FIFO level reaches the value specified by RXLVL in FIFOTRIG, even when the RXLVL interrupt is not enabled.		

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 340. FIFO Configuration register (FIFOCFG - offset 0xE00) bit description

Bit	Symbol	Value	Description	Reset value	Access
16	EMPTYTX	-	Empty command for the transmit FIFO. When a 1 is written to this bit, the TX FIFO is emptied.	NA	WO
17	EMPTYRX	-	Empty command for the receive FIFO. When a 1 is written to this bit, the RX FIFO is emptied.	NA	WO
31:18	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA

# 23.6.9 FIFO status register

This register provides status information for the FIFO and also indicates an interrupt from the peripheral function.

Table 341. FIFO status register (FIFOSTAT - offset 0xE04) bit description

Bit	Symbol	Description	Reset value	Access
0	TXERR	TX FIFO error. Will be set if a transmit FIFO error occurs. This could be an overflow caused by pushing data into a full FIFO, or by an underflow if the FIFO is empty when data is needed. Cleared by writing a 1 to this bit.	0x0	R/W1C
1	RXERR	RX FIFO error. Will be set if a receive FIFO overflow occurs, caused by software or DMA not emptying the FIFO fast enough. Cleared by writing a 1 to this bit.	0x0	R/W1C
2	-	Reserved. Read value is undefined, only zero should be written.	NA	
3	PERINT	Peripheral interrupt. When 1, this indicates that the peripheral function has asserted an interrupt. The details can be found by reading the peripheral's STAT register.	0x0	RO
4	TXEMPTY	Transmit FIFO empty. When 1, the transmit FIFO is empty. The peripheral may still be processing the last piece of data.	0x1	RO
5	TXNOTFULL	Transmit FIFO not full. When 1, the transmit FIFO is not full, so more data can be written. When 0, the transmit FIFO is full and another write would cause it to overflow.	0x1	RO
6	RXNOTEMPTY	Receive FIFO not empty. When 1, the receive FIFO is not empty, so data can be read. When 0, the receive FIFO is empty.	0x0	RO
7	RXFULL	Receive FIFO full. When 1, the receive FIFO is full. Data needs to be read out to prevent the peripheral from causing an overflow.	0x0	RO
12:8	TXLVL	Transmit FIFO current level. A 0 means the TX FIFO is currently empty, and the TXEMPTY and TXNOTFULL flags will be 1. Other values tell how much data is actually in the TX FIFO at the point where the read occurs. If the TX FIFO is full, the TXEMPTY and TXNOTFULL flags will be 0.	0x0	RO
15:13	-	Reserved. Read value is undefined, only zero should be written.	NA	
20:16	RXLVL	Receive FIFO current level. A 0 means the RX FIFO is currently empty, and the RXFULL and RXNOTEMPTY flags will be 0. Other values tell how much data is actually in the RX FIFO at the point where the read occurs. If the RX FIFO is full, the RXFULL and RXNOTEMPTY flags will be 1.	0x0	RO
31:21	-	Reserved. Read value is undefined, only zero should be written.	NA	-

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

# 23.6.10 FIFO trigger settings register

This register allows selecting when FIFO-level related interrupts occur.

Table 342. FIFO trigger settings register (FIFOTRIG - offset 0xE08) bit description

Bit	Symbol	Value	Description	Reset value		
0	TXLVLENA		Transmit FIFO level trigger enable. The FIFO level trigger will cause an interrupt if enabled in FIFOINTENSET. This field is not used for DMA requests (see DMATX in FIFOCFG).	0x0		
		0	Transmit FIFO level does not generate a FIFO level trigger.			
		1	An interrupt will be generated if the transmit FIFO level reaches the value specified by the TXLVL field in this register.			
1	RXLVLENA		Receive FIFO level trigger enable. This trigger will become an interrupt if enabled in FIFOINTENSET. This field is not used for DMA requests (see DMARX in FIFOCFG).	0x0		
		0	Receive FIFO level does not generate a FIFO level trigger.			
		1	An interrupt will be generated if the receive FIFO level reaches the value specified by the RXLVL field in this register.			
7:2	-	-	Reserved. Read value is undefined, only zero should be written.	NA		
11:8	TXLVL	TXLVL	TXLVL		Transmit FIFO level trigger point. This field is used only when TXLVLENA = 1. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See Section 4.5.64 "Hardware Wake-up control register".	0x0
			0 = generate an interrupt when the TX FIFO becomes empty. 1 = generate an interrupt when the TX FIFO level decreases to one entry 7 = generate an interrupt when the TX FIFO level decreases to 7 entries (is no longer full).			
15:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA		
19:16	RXLVL		Receive FIFO level trigger point. The RX FIFO level is checked when a new piece of data is received. This field is used only when RXLVLENA = 1. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See Section 4.5.64 "Hardware Wake-up control register".	0x0		
			<ul><li>0 = generate an interrupt when the RX FIFO has one entry (is no longer empty).</li><li>1 = generate an interrupt when the RX FIFO has two entries.</li><li></li></ul>			
			7 = generate an interrupt when the RX FIFO increases to 8 entries (has become full).			
31:20	-	-	Reserved. Read value is undefined, only zero should be written.	NA		

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.6.11 FIFO interrupt enable set and read

This register is used to enable various interrupt sources. The complete set of interrupt enables may be read from this register. Writing ones to implemented bits in this register causes those bits to be set. The FIFOINTENCLR register is used to clear bits in this register.

Table 343. FIFO interrupt enable set and read register (FIFOINTENSET - offset 0xE10) bit description

Bit	Symbol	Value	Description	
0	TXERR		Determines whether an interrupt occurs when a transmit error occurs, based on the TXERR flag in the FIFOSTAT register.	0x0
		0	No interrupt will be generated for a transmit error.	
		1	An interrupt will be generated when a transmit error occurs.	
1	RXERR		Determines whether an interrupt occurs when a receive error occurs, based on the RXERR flag in the FIFOSTAT register.	0x0
		0	No interrupt will be generated for a receive error.	
		1	An interrupt will be generated when a receive error occurs.	
2	TXLVL		Determines whether an interrupt occurs when a the transmit FIFO reaches the level specified by the TXLVL field in the FIFOTRIG register.	0x0
		0	No interrupt will be generated based on the TX FIFO level.	
		1	If TXLVLENA in the FIFOTRIG register = 1, an interrupt will be generated when the TX FIFO level decreases to the level specified by TXLVL in the FIFOTRIG register.	
3	RXLVL		Determines whether an interrupt occurs when a the receive FIFO reaches the level specified by the TXLVL field in the FIFOTRIG register.	0x0
		0	No interrupt will be generated based on the RX FIFO level.	
		1	If RXLVLENA in the FIFOTRIG register = 1, an interrupt will be generated when the when the RX FIFO level increases to the level specified by RXLVL in the FIFOTRIG register.	
31:4	-	-	Reserved. Read value is undefined, only zero should be written.	NA

## 23.6.12 FIFO interrupt enable clear and read

The FIFOINTENCLR register is used to clear interrupt enable bits in FIFOINTENSET. The complete set of interrupt enables may also be read from this register as well as FIFOINTENSET.

Table 344. FIFO interrupt enable clear and read (FIFOINTENCLR - offset 0xE14) bit description

Bit	Symbol	Description	Reset value
0	TXERR	Writing a one to this bit disables the TXERR interrupt.	0x0
1	RXERR	Writing a one to this bit disables the RXERR interrupt.	0x0
2	TXLVL	Writing a one to this bit disables the interrupt caused by the transmit FIFO reaching the level specified by the TXLVL field in the FIFOTRIG register.	0x0
3	RXLVL	Writing a one to this bit disables the interrupt caused by the receive FIFO reaching the level specified by the RXLVL field in the FIFOTRIG register.	0x0
31:4	-	Reserved. Read value is undefined, only zero should be written.	NA

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.6.13 FIFO interrupt status register

The read-only FIFOINTSTAT register provides a view of those interrupt flags that are both pending and currently enabled. This can simplify software handling of interrupts. Refer to the descriptions of interrupts in Section 23.6.9 and Section 23.6.10 for details.

Table 345. FIFO interrupt status register (FIFOINTSTAT - offset 0xE18) bit description

Bit	Symbol	Description	Reset value
0	TXERR	TX FIFO error.	0x0
1	RXERR	RX FIFO error.	0x0
2	TXLVL	Transmit FIFO level interrupt.	0x0
3	RXLVL	Receive FIFO level interrupt.	0x0
4	PERINT	Peripheral interrupt.	0x0
31:5	-	Reserved. Read value is undefined, only zero should be written. NA	

## 23.6.14 FIFO write data register

The FIFOWR register is used to write values to be transmitted to the FIFO.

FIFOWR provides the possibility of altering some SPI controls at the same time as sending new data. For example, this can allow a series of SPI transactions involving multiple slaves to be stored in a DMA buffer and sent automatically. These added fields are described for bits 16 through 27 below.

Each FIFO entry holds data and associated control bits. Before data and control bits are pushed into the FIFO, the control bit settings can be modified. Halfword writes to just the control bits (offset 0xE22) doesn't push anything into the FIFO. A zero written to the upper halfword will not modify the control settings. Non-zero writes to it will modify all the control bits. Note that this is a write only register. Do not read-modify-write the register.

Byte, halfword or word writes to FIFOWR will push the data and control bits into the FIFO. Word writes with the upper halfword of zero, byte writes or halfword writes to FIFOWR will push the data and the current control bits, into the FIFO. Word writes with a non-zero upper halfword will modify the control bits before pushing them onto the stack.

Table 346. FIFO write data register (FIFOWR - offset 0xE20) bit description

Bit	Symbol	Value	Description	Reset value
15:0	TXDATA	-	ransmit data to the FIFO.	
16	TXSSEL0_N		ransmit Slave Select. This field asserts SSEL0 in master mode. The output on the in is active LOW by default.	
			Remark: The active state of the SSEL0 pin is configured by bits in the CFG register.	
		0	SSEL0 asserted.	
		1	SSEL0 not asserted.	
17	TXSSEL1_N		Transmit Slave Select. This field asserts SSEL1 in master mode. The output on the pin is active LOW by default.	NA
			Remark: The active state of the SSEL1 pin is configured by bits in the CFG regi	
		0	SSEL1 asserted.	
		1	SSEL1 not asserted.	

**User manual** 

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 346. FIFO write data register (FIFOWR - offset 0xE20) bit description

Bit	Symbol	Value	Description	Reset value
18	TXSSEL2_N		Transmit Slave Select. This field asserts SSEL2 in master mode. The output on the pin is active LOW by default.	NA
			Remark: The active state of the SSEL2 pin is configured by bits in the CFG register.	
		0	SSEL2 asserted.	
		1	SSEL2 not asserted.	
19	TXSSEL3_N		Transmit Slave Select. This field asserts SSEL3 in master mode. The output on the pin is active LOW by default.	NA
			Remark: The active state of the SSEL3 pin is configured by bits in the CFG register.	
		0	SSEL3 asserted.	
		1	SSEL3 not asserted.	
20	EOT		End of Transfer. The asserted SSEL will be deasserted at the end of a transfer, and remain so for at least the time specified by the Transfer_delay value in the DLY register.	NA
		0	SSEL not deasserted. This piece of data is not treated as the end of a transfer. SSEL will not be deasserted at the end of this data.	
		1	SSEL deasserted. This piece of data is treated as the end of a transfer. SSEL will be deasserted at the end of this piece of data.	
21	EOF		End of Frame. Between frames, a delay may be inserted, as defined by the FRAME_DELAY value in the DLY register. The end of a frame may not be particularly meaningful if the FRAME_DELAY value = 0. This control can be used as part of the support for frame lengths greater than 16 bits.	NA
		0	Data not EOF. This piece of data transmitted is not treated as the end of a frame.	
		1	Data EOF. This piece of data is treated as the end of a frame, causing the FRAME_DELAY time to be inserted before subsequent data is transmitted.	
22	RXIGNORE		Receive Ignore. This allows data to be transmitted using the SPI without the need to read unneeded data from the receiver. Setting this bit simplifies the transmit process and can be used with the DMA.	NA
		0	Read received data. Received data must be read in order to allow transmission to progress. SPI transmit will halt when the receive data FIFO is full. In slave mode, an overrun error will occur if received data is not read before new data is received.	
		1	Ignore received data. Received data is ignored, allowing transmission without reading unneeded received data. No receiver flags are generated.	
23	-	-	Reserved. Read value is undefined, only zero should be written.	NA
27:24	LEN		Data Length. Specifies the data length from 4 to 16 bits. Note that transfer lengths greater than 16 bits are supported by implementing multiple sequential transmits.	NA
			0x0-2 = Reserved 0x3 = Data transfer is 4 bits in length. 0x4 = Data transfer is 5 bits in length.	
			0xF = Data transfer is 16 bits in length.	
31:28	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 23.6.15 FIFO read data register

The FIFORD register is used to read values that have been received by the FIFO.

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Table 347. FIFO read data register (FIFORD - offset 0xE30) bit description

Bit	Symbol	Description	Reset value
15:0	RXDATA	Received data from the FIFO.	NA
16	RXSSEL0_N	Slave Select for receive. This field allows the state of the SSEL0 pin to be saved along with received data. The value will reflect the SSEL0 pin for both master and slave operation. A zero indicates that a slave select is active. The actual polarity of each slave select pin is configured by the related SPOL bit in CFG.	NA
17	RXSSEL1_N	Slave Select for receive. This field allows the state of the SSEL1 pin to be saved along with received data. The value will reflect the SSEL1 pin for both master and slave operation. A zero indicates that a slave select is active. The actual polarity of each slave select pin is configured by the related SPOL bit in CFG.	NA
18	RXSSEL2_N	Slave Select for receive. This field allows the state of the SSEL2 pin to be saved along with received data. The value will reflect the SSEL2 pin for both master and slave operation. A zero indicates that a slave select is active. The actual polarity of each slave select pin is configured by the related SPOL bit in CFG.	
19	RXSSEL3_N	Slave Select for receive. This field allows the state of the SSEL3 pin to be saved along with received data. The value will reflect the SSEL3 pin for both master and slave operation. A zero indicates that a slave select is active. The actual polarity of each slave select pin is configured by the related SPOL bit in CFG.	
20	SOT	Start of Transfer flag. This flag will be 1 if this is the first data after the SSELs went from deasserted to asserted (i.e., any previous transfer has ended). This information can be used to identify the first piece of data in cases where the transfer length is greater than 16 bits.	
31:21	-	Reserved. Read value is undefined, only zero should be written.	NA

## 23.6.16 FIFO data read with no FIFO pop

This register acts in exactly the same way as FIFORD, except that it supplies data from the top of the FIFO without popping the FIFO (i.e. leaving the FIFO state unchanged). This could be used to allow system software to observe incoming data without interfering with the peripheral driver.

Table 348. FIFO data read with no FIFO pop (FIFORDNOPOP - offset 0xE40) bit description

Bit	Symbol	Description	Reset value
15:0	RXDATA	Received data from the FIFO.	NA
16	RXSSEL0_N	Slave Select for receive.	NA
17	RXSSEL1_N	Slave Select for receive.	NA
18	RXSSEL2_N	Slave Select for receive.	NA
19	RXSSEL3_N	Slave Select for receive.	NA
20	SOT	Start of Transfer flag.	NA
31:21	-	Reserved. Read value is undefined, only zero should be written.	NA

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

# 23.6.17 Module identification register

The ID register identifies the type and revision of the SPI module. A generic SW driver can make use of this information register to implement module type or revision specific behavior.

Table 349. Module identification register (ID - offset 0xFFC) bit description

Bit	Symbol	Description	Reset Value
7:0	APERTURE	Aperture: encoded as (aperture size/4K) -1, so 0x00 means a 4K aperture.	0x0
11:8	MINOR_REV	Minor revision of module implementation, starting at 0. Minor revision of module implementation, starting at 0. Software compatibility is expected between minor revisions.	-
15:12	MAJOR_REV	Major revision of module implementation, starting at 0. There may not be software compatibility between major revisions.	
31:16	ID	Unique module identifier for this IP block.	0xE020

Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

# 23.7 Functional description

### 23.7.1 AHB bus access

With the exception of the FIFOWR register, the bus interface to the SPI registers contained in the Flexcomm Interface support only word writes. Byte and halfword writes are not supported in conjunction with the SPI function for those registers.

The FIFOWR register also supports byte and halfword (data only) writes in order to allow writing FIFO data without affecting the SPI control fields above bit 15 (see <u>Section 23.6.14</u> "FIFO write data register").


# 23.7.2 Operating modes: clock and phase selection

SPI interfaces typically allow configuration of clock phase and polarity. These are sometimes referred to as numbered SPI modes, as described in <u>Table 350</u> and shown in <u>Figure 56</u>. CPOL and CPHA are configured by bits in the CFG register (<u>Section 23.6.1</u>).

Table 350: SPI mode summary

CPOL	СРНА	SPI Mode	Description	SCK rest state	SCK data change edge	SCK data sample edge
0	0	0	The SPI captures serial data on the first clock transition of the transfer (when the clock changes away from the rest state). Data is changed on the following edge.	low	falling	rising
0	1	1	The SPI changes serial data on the first clock transition of the transfer (when the clock changes away from the rest state). Data is captured on the following edge.		falling	
1	0	2	Same as mode 0 with SCK inverted. high rising fa		falling	
1	1	3	Same as mode 1 with SCK inverted.	high	falling	rising

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

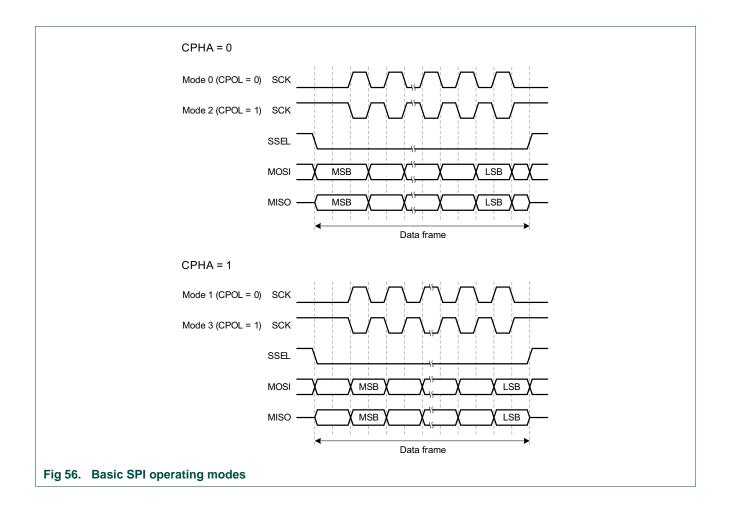

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)


## 23.7.3 Frame delays

Several delays can be specified for SPI frames. These include:

- Pre\_delay: delay after SSEL is asserted before data clocking begins
- Post\_delay: delay at the end of a data frame before SSEL is deasserted
- Frame\_delay: delay between data frames when SSEL is not deasserted
- Transfer delay: minimum duration of SSEL in the deasserted state between transfers

### 23.7.3.1 Pre\_delay and Post\_delay


Pre\_delay and Post\_delay are illustrated by the examples in <u>Figure 57</u>. The Pre\_delay value controls the amount of time between SSEL being asserted and the beginning of the subsequent data frame. The Post\_delay value controls the amount of time between the end of a data frame and the deassertion of SSEL.

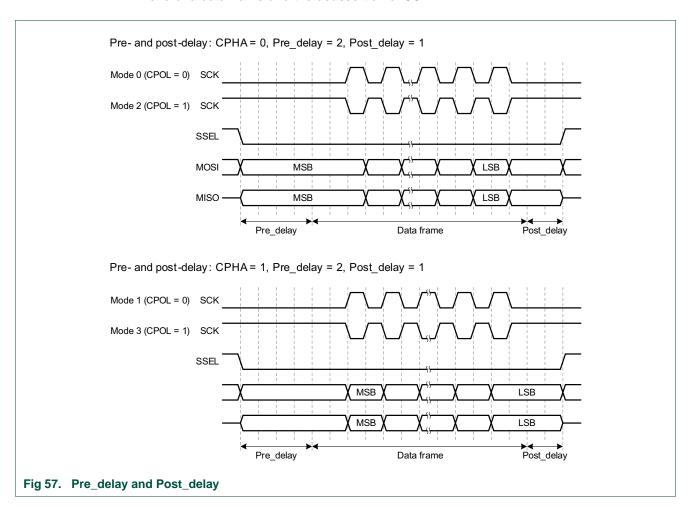

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.7.3.2 Frame\_delay


The Frame\_delay value controls the amount of time at the end of each frame. This delay is inserted when the EOF bit = 1. Frame\_delay is illustrated by the examples in <u>Figure 58</u>. Note that frame boundaries occur only where specified. This is because frame lengths can be any size, involving multiple data writes. See <u>Section 23.7.7</u> for more information.

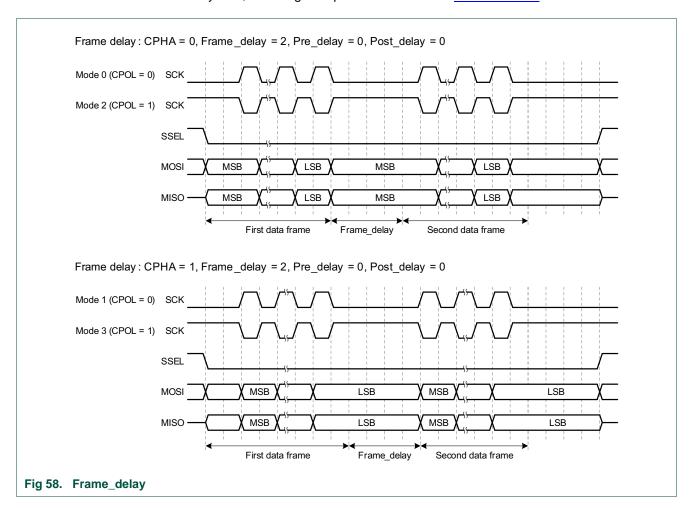

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.7.3.3 Transfer\_delay

The Transfer\_delay value controls the minimum amount of time that SSEL is deasserted between transfers, because the EOT bit = 1. When Transfer\_delay = 0, SSEL may be deasserted for a minimum of one SPI clock time. Transfer\_delay is illustrated by the examples in Figure 59.

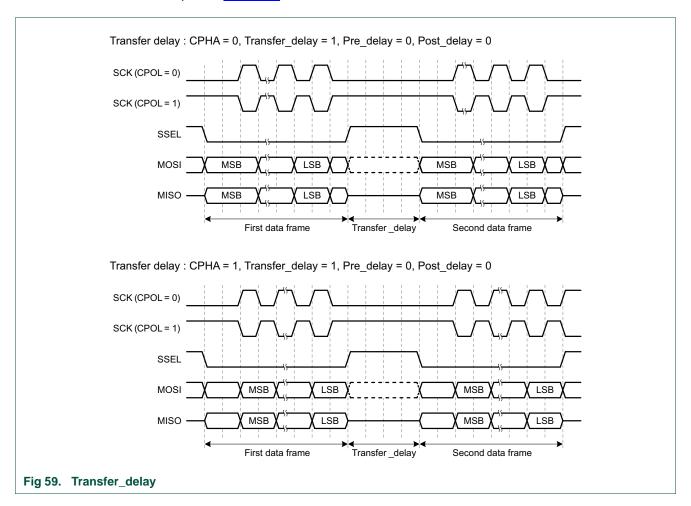

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.7.4 Clocking and data rates

In order to use the SPI, clocking details must be defined. This includes configuring the system clock and selection of the clock divider value in DIV. See <a href="Figure 4"Clock generation">Figure 4 "Clock generation"</a>.

### 23.7.4.1 Data rate calculations

The SPI interface is designed to operate asynchronously from any on-chip clocks, and without the need for overclocking.

In slave mode, this means that the SCK from the external master is used directly to run the transmit and receive shift registers and other logic.

In master mode, the SPI rate clock produced by the SPI clock divider is used directly as the outgoing SCK.

The SPI clock divider is an integer divider. The SPI in master mode can be set to run at the same speed as the selected FCLK, or at lower integer divide rates. The SPI rate will be = FCLK of Flexcomm Interface n / DIVVAL.

In slave mode, the clock is taken from the SCK input and the SPI clock divider is not used.

### 23.7.5 Slave select

The SPI block provides for four Slave Select inputs in slave mode or outputs in master mode. Each SSEL can be set for normal polarity (active low), or can be inverted (active high). Representation of the 4 SSELs in a register is always active low. If an SSEL is inverted, this is done as the signal leaves/enters the SPI block.

In slave mode, **any** asserted SSEL that is connected to a pin will activate the SPI. In master mode, all SSELs that are connected to a pin will be output as defined in the SPI registers. In the latter case, the SSELs could potentially be decoded externally in order to address more than four slave devices. Note that at least one SSEL is asserted when data is transferred in master mode.

In master mode, Slave Selects come from the TXSSEL bits in the FIFOWR register. In slave mode, the state of all four SSELs is saved along with received data in the RXSSEL\_N field of the FIFORD register.

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

## 23.7.6 DMA operation

A DMA request is provided for each SPI direction, and can be used in lieu of interrupts for transferring data by configuring the DMA controller appropriately. The DMA controller provides an acknowledgement signal that clears the related request when it completes handling that request.

The transmitter DMA request is asserted when Tx DMA is enabled and the transmitter can accept more data.

The receiver DMA request is asserted when Rx DMA is enabled and received data is available to be read.

### 23.7.6.1 DMA master mode End-Of-Transfer

When using polled or interrupt mode to transfer data in master mode, the transition to end-of-transfer status (drive SSEL inactive) is straightforward. The EOT bit of the FIFOWR control bits would be set just before or along with the writing of the last data to be sent.

When using the DMA in master mode, the end-of-transfer status (drive SSEL inactive) can be generated in a number of ways:

1. Using DMA interrupt and a second DMA transfer:

To use only 8 or 16 bit wide DMA transfers for all the data, a second DMA transfer can be used to terminate the transfer (drive SSEL inactive).

The transfer would be started by setting the control bits and then initiating the DMA transfer of all but the last byte/halfword of data. The DMA completion interrupt function must modify the control bits to set EOT and then set-up DMA to send the last data.

2. Using DMA and SPI interrupts (or background SPI status polling):

To use only one 8 or 16 bit wide DMA transfer for all the data, two interrupts would be required to properly terminate the transfer (drive SSEL inactive).

The SPI Tx DMA completion interrupt function sets the TXLVL field in the SPI FIFOTRIG register to 0 and sets the TXLVL interrupt enable bit in the FIFOINTENSET register.

The interrupt function handling the SPI TXLVL would set the SPI STAT register "END TRANSFER" bit, to force termination after all data output is complete.

3. Using DMA linked descriptor:

The DMA controller provides for a linked list of DMA transfer control descriptors. The initial descriptor(s) can be used to transfer all but the last data byte/halfword. These data transfers can be done as 8 or 16 bit wide DMA operations. A final DMA descriptor, linked to the first DMA descriptor, can be used to send the last data along with control bits to the FIFOWR register. The control bits would include the setting of the EOT bit.

Note: The DMA interrupt function cannot set the SPI Status register (STAT) END TRANSFER control bit. This may terminate the transfer while the FIFO still has data to send.

4. Using 32 bit wide DMA:

### Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

Write both data and control bits to FIFOWR for all data. The control bits for the last entry would include the setting of the EOT bit. This also allows a series of SPI transactions involving multiple slaves with one DMA operation, by changing the TXSSELn\_N bits.

## 23.7.7 Data lengths greater than 16 bits

The SPI interface handles data frame sizes from 4 to 16 bits directly. Larger sizes can be handled by splitting data up into groups of 16 bits or less. For example, 24 bits can be supported as 2 groups of 16 bits and 8 bits or 2 groups of 12 bits, among others. Frames of any size, including greater than 32 bits, can supported in the same way.

Details of how to handle larger data widths depend somewhat on other SPI configuration options. For instance, if it is intended for Slave Selects to be deasserted between frames, then this must be suppressed when a larger frame is split into more than one part. Sending 2 groups of 12 bits with SSEL deasserted between 24-bit increments, for instance, would require changing the value of the EOF bit on alternate 12-bit frames.

### 23.7.8 Data stalls


A stall for Master transmit data can happen in modes 0 and 2 when SCK cannot be returned to the rest state until the MSB of the next data frame can be driven on MOSI. In this case, the stall happens just before the final clock edge of data if the next piece of data is not yet available.

A stall for Master receive can happen when a FIFO overflow (see RXERR in the FIFOSTAT register) would otherwise occur if the transmitter was not stalled. In modes 0 and 2, this occurs if the FIFO is full when the next piece of data is received. This stall happens one clock edge earlier than the transmitter stall.

In modes 1 and 3, the same kind of receiver stall can occur, but just before the final clock edge of the received data. Also, a transmitter stall will not happen in modes 1 and 3 because the transmitted data is complete at the point where a stall would otherwise occur, so it is not needed.

Stalls are reflected in the STAT register by the Stalled status flag, which indicates the current SPI status. The transmitter will be stalled until data is read from the receive FIFO. Use the RXIGNORE control bit setting to avoid the need to read the received data.

## Chapter 23: LPC5411x Serial Peripheral Interfaces (SPI)

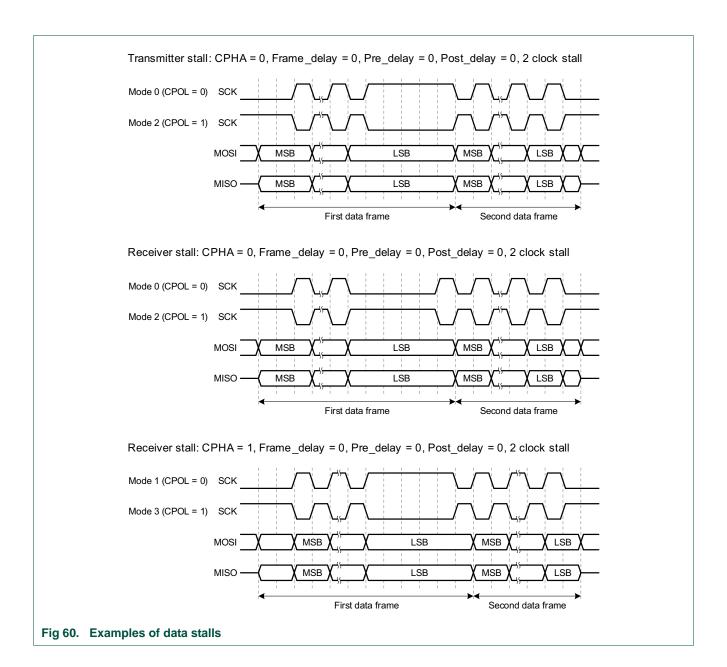

# **UM10914**

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Rev. 1.2 — 30 June 2016

**User manual** 

# 24.1 How to read this chapter

I<sup>2</sup>C-bus functions are available on all LPC5411x devices as a selectable function in each Flexcomm Interface peripheral. Up to 8 Flexcomm Interfaces are available.

### 24.2 Features

- Independent Master, Slave, and Monitor functions.
- Bus speeds supported:
  - Standard mode, up to 100 kbits/s.
  - Fast-mode, up to 400 kbits/s.
  - Fast-mode Plus, up to 1 Mbits/s (on pins PIO0\_23 and 24 or PIO0\_25 and 26 that include specific I<sup>2</sup>C support).
  - High speed mode, 3.4 Mbits/s as a Slave only (on pins PIO0\_23 and 24 or PIO0\_25 and 26 that include specific I<sup>2</sup>C support).
- Supports both Multi-master and Multi-master with Slave functions.
- Multiple I<sup>2</sup>C slave addresses supported in hardware.
- One slave address can be selectively qualified with a bit mask or an address range in order to respond to multiple I<sup>2</sup>C bus addresses.
- 10-bit addressing supported with software assist.
- Supports System Management Bus (SMBus).
- Separate DMA requests for Master, Slave, and Monitor functions.
- No chip clocks are required in order to receive and compare an address as a Slave, so this event can wake up the device from deep-sleep mode.
- Automatic modes optionally allow less software overhead for some use cases.

# 24.3 Pin description

The I<sup>2</sup>C pins are fixed-pin functions and enabled through IOCON. Refer to the IOCON settings in Table 352 and in Section 7.5.2.

### Table 351. I<sup>2</sup>C-bus pin description

Function	Туре	Pin name used in data sheet Pin Description	Description
SCL	I/O	FCn_TXD_SCL_MISO, FCn_TXD_SCL_MISO_WS, or FCn_RTS_SCL_SSEL1	I <sup>2</sup> C serial clock.
SDA	I/O	FCn_RXD_SDA_MOSI, FCn_RXD_SDA_MOSI_DATA, or FCn_CTS_SDA_SSEL0	I <sup>2</sup> C serial data.

## Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 352: Suggested I<sup>2</sup>C pin settings

IOCON bit(s)	Type D pin	Type A pin	Type I pin
10	OD: Set to 1 for simulated open-drain output.	Same as type D.	I2CFILTER: 0 for Fast / Standard mode I <sup>2</sup> C. 1 for Fast Mode Plus or High Speed slave.
9	SLEW: Set to 0.	Not used, set to 0.	I2CDRIVE: 0 for Fast / Standard mode I <sup>2</sup> C. 1 for Fast Mode Plus or High Speed slave.
8	FILTEROFF: Generally set to 1.	Same as type D.	Same as type D.
7	DIGIMODE: Set to 1.	Same as type D.	Same as type D.
6	INVERT: Set to 0.	Same as type D.	Same as type D.
5	Not used, set to 0.	Same as type D.	I2CSLEW: Set to 0.
4:3	MODE: Set to 0 (pull-down/pull-up resistor disabled).	Same as type D.	Not used, set to 0.
2:0	FUNC: The function will be "SCL" or "SDA".	Same as type D.	FUNC: The function will be "SCL" or "SDA".
General comment	A reasonable choice for I <sup>2</sup> C at or below 400 kHz.	Same as type D.	Recommended for I <sup>2</sup> C operation above 400 kHz.

# 24.4 Basic configuration

Configure the I<sup>2</sup>C and related clocks as follows:

- If needed, use the PRESETCTRL1 register (<u>Table 39</u>) to reset the Flexcomm Interface that is about to have a specific peripheral function selected.
- Select the desired Flexcomm Interface function by writing to the PSELID register of the related Flexcomm Interface (<u>Section 21.7.1</u>). Note that any selection that has been made will be cleared if the Flexcomm Interface itself is reset via the PRESETCTRL1 register.
- Configure the I<sup>2</sup>C for the desired functions:
  - In the AHBCLKCTRL1 register (<u>Table 46</u>), set the appropriate bit for the related Flexcomm Interface in order to enable the clock to the register interface.
  - Enable or disable the related Flexcomm Interface interrupt in the NVIC (see Table 2).
  - Configure the related Flexcomm Interface pin functions via IOCON, see Chapter 7.
  - Configure the I<sup>2</sup>C clock and data rate. This includes the CLKDIV register for both master and slave modes, and MSTTIME for master mode. Also see <u>Section 24.6.6</u> and <u>Section 24.7.2</u>.

**Remark:** The Flexcomm Interface function clock frequency should not be above 48 MHz.

**Remark:** while the I<sup>2</sup>C function is incorporated into the Flexcomm Interface, it does not make use of the Flexcomm Interface FIFO.

## 24.4.1 I<sup>2</sup>C transmit/receive in master mode

In this example, Flexcomm Interface 1 is configured as an I<sup>2</sup>C master. The master sends 8 bits to the slave and then receives 8 bits from the slave.

UM10914

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

If specialized I<sup>2</sup>C pins are used (PIO0\_23 through PIO0\_26), the pins should be configured as required for the I<sup>2</sup>C-bus mode that will be used (SM, FM, FM+, HS) via the IOCON block. If these or standard pins are used, they should be configured as described in Section 7.5.2.

The transmission of the address and data bits is controlled by the state of the MSTPENDING status bit. Whenever the status is Master pending, the master can read or write to the MSTDAT register and go to the next step of the transmission protocol by writing to the MSTCTL register.

Configure the I<sup>2</sup>C bit rate:

- Select a source for the Flexcomm Interface 1 clock that will allow for the desired I<sup>2</sup>C-bus rate. Divide the clock as needed, see Table 365.
- Further divide the source clock if needed using the CLKDIV register (Section 24.6.6).
- Set the SCL high and low times to complete the bus rate setup. See <u>Section 24.6.9</u>.

#### 24.4.1.1 Master write to slave

Configure Flexcomm Interface 1 as I<sup>2</sup>C interface, see Chapter 21.

Configure the I<sup>2</sup>C as a master: set the MSTEN bit to 1 in the CFG register. See Table 358.

Write data to the slave:

- 1. Write the slave address with the  $\overline{\text{RW}}$  bit set to 0 to the Master data register MSTDAT. See Table 369.
- 2. Start the transmission by setting the MSTSTART bit to 1 in the Master control register. See Table 367. The following happens:
  - The pending status is cleared and the I<sup>2</sup>C-bus is busy.
  - The I<sup>2</sup>C master sends the start bit and address with the RW bit to the slave.
- 3. Wait for the pending status to be set (MSTPENDING = 1) by polling the STAT register.
- 4. Write 8 bits of data to the MSTDAT register.
- Continue with the transmission of data by setting the MSTCONT bit to 1 in the Master control register. See <u>Table 367</u>. The following happens:
  - The pending status is cleared and the I<sup>2</sup>C-bus is busy.
  - The I<sup>2</sup>C master sends the data bits to the slave address.
- 6. Wait for the pending status to be set (MSTPENDING = 1) by polling the STAT register.
- 7. Stop the transmission by setting the MSTSTOP bit to 1 in the Master control register. See Table 367.

## Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

### Table 353. Code example

### Master write to slave

```
//Master write 1 byte to slave. Address 0x23, Data 0xdd. Polling mode.
I2C->CFG = I2C_CFG_MSTEN;
while(!(I2C->STAT & I2C_STAT_MSTPENDING));
if((I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_IDLE) abort();
I2C->MSTDAT = (0x23 << 1) | 0; // address and 0 for RWn bit
I2C->MSTCTL = I2C_MSTCTL_MSTSTART; // send start
while(!(I2C->STAT & I2C_STAT_MSTPENDING));
if((I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_TX) abort();
I2C->MSTDAT = 0xdd; // send data
I2C->MSTCTL = I2C_MSTCTL_MSTCONTINUE; // continue transaction
while(!(I2C->STAT & I2C_STAT_MSTPENDING));
if((I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_TX) abort();
I2C->MSTCTL = I2C_MSTCTL_MSTSTOP; // send stop
while(!(I2C->STAT & I2C_STAT_MSTSTOP); // send stop
while(!(I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_IDLE) abort();
```

### 24.4.1.2 Master read from slave

Configure Flexcomm Interface 1 as I<sup>2</sup>C interface, see Chapter 21.

Configure the I<sup>2</sup>C as a master: set the MSTEN bit to 1 in the CFG register. See Table 358.

Read data from the slave:

- 1. Write the slave address with the  $\overline{\text{RW}}$  bit set to 1 to the Master data register MSTDAT. See Table 369.
- 2. Start the transmission by setting the MSTSTART bit to 1 in the Master control register. See Table 367. The following happens:
  - The pending status is cleared and the I<sup>2</sup>C-bus is busy.
  - The I<sup>2</sup>C master sends the start bit and address with the RW bit to the slave.
  - The slave sends 8 bit of data.
- Wait for the pending status to be set (MSTPENDING = 1) by polling the STAT register.
- 4. Read 8 bits of data from the MSTDAT register.
- 5. Stop the transmission by setting the MSTSTOP bit to 1 in the Master control register. See <u>Table 367</u>.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

### Table 354. Code example

### Master read from slave

```
// Master read 1 byte from slave. Address 0x23. Polling mode. No error checking.
uint8_t data;
I2C->CFG = I2C_CFG_MSTEN;
while(!(I2C->STAT & I2C_STAT_MSTPENDING));
if((I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_IDLE) abort();
I2C->MSTDAT = (0x23 << 1) | 1; // address and 1 for RWn bit
I2C->MSTCTL = I2C_MSTCTL_MSTSTART; // send start
while(!(I2C->STAT & I2C_STAT_MSTPENDING));
if((I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_RX) abort();
data = I2C->MSTDAT; // read data
if(data != 0xdd) abort();
I2C->MSTCTL = I2C_MSTCTL_MSTSTOP; // send stop
while(!(I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_IDLE) abort();
if((I2C->STAT & I2C_STAT_MSTSTATE) != I2C_STAT_MSTST_IDLE) abort();
```

### 24.4.2 I<sup>2</sup>C receive/transmit in slave mode

In this example, Flexcomm Interface 1 is configured as an I<sup>2</sup>C slave. The slave receives 8 bits from the master and then sends 8 bits to the master. The SCL and SDA functions must be enabled on pins PIO0\_22 and PIO0\_23 through IOCON. See Section 7.5.2.

The pins should be configured as required for the I<sup>2</sup>C-bus mode that will be used (SM, FM, FM+, HS) via the IOCON block. See <u>Section 7.5.2</u>.

The transmission of the address and data bits is controlled by the state of the SLVPENDING status bit. Whenever the status is Slave pending, the slave can acknowledge ("ack") or send or receive an address and data. The received data or the data to be sent to the master are available in the SLVDAT register. After sending and receiving data, continue to the next step of the transmission protocol by writing to the SLVCTL register.

## 24.4.2.1 Slave read from master

Configure Flexcomm Interface 1 as I<sup>2</sup>C interface, see Chapter 21.

Configure the  $I^2C$  as a slave with address x:

- Set the SLVEN bit to 1 in the CFG register. See Table 358.
- Write the slave address x to the address 0 match register. See <u>Table 372</u>.

Read data from the master:

- 1. Wait for the pending status to be set (SLVPENDING = 1) by polling the STAT register.
- 2. Acknowledge ("ack") the address by setting SLVCONTINUE = 1 in the slave control register. See Table 370.
- 3. Wait for the pending status to be set (SLVPENDING = 1) by polling the STAT register.
- 4. Read 8 bits of data from the SLVDAT register. See Table 371.
- 5. Acknowledge ("ack") the data by setting SLVCONTINUE = 1 in the slave control register. See Table 370.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

### Table 355. Code example

### Slave read from master

```
//Slave read 1 byte from master. Address 0x23. Polling mode.
uint8_t data;

I2C->SLVADR0 = 0x23 << 1; // put address in address 0 register

I2C->CFG = I2C_CFG_SLVEN;

I2C->CFG;
while(!(I2C->STAT & I2C_STAT_SLVPENDING));
if((I2C->STAT & I2C_STAT_SLVSTATE) != I2C_STAT_SLVST_ADDR) abort();

I2C->SLVCTL = I2C_SLVCTL_SLVCONTINUE; // ack address
while(!(I2C->STAT & I2C_STAT_SLVPENDING));
if((I2C->STAT & I2C_STAT_SLVSTATE) != I2C_STAT_SLVST_RX) abort();
data = I2C->SLVDAT; // read data
if(data != 0xdd) abort();
I2C->SLVCTL = I2C_SLVCTL_SLVCONTINUE; // ack data
```

### 24.4.2.2 Slave write to master

Configure Flexcomm Interface 1 as I<sup>2</sup>C interface, see Chapter 21.

Configure the  $I^2C$  as a slave with address x:

- Set the SLVEN bit to 1 in the CFG register. See <u>Table 358</u>.
- Write the slave address x to the address 0 match register. See Table 372.

Write data to the master:

- 1. Wait for the pending status to be set (SLVPENDING = 1) by polling the STAT register.
- 2. ACK the address by setting SLVCONTINUE = 1 in the slave control register. See Table 370.
- Wait for the pending status to be set (SLVPENDING = 1) by polling the STAT register.
- 4. Write 8 bits of data to SLVDAT register. See Table 371.
- 5. Continue the transaction by setting SLVCONTINUE = 1 in the slave control register. See <u>Table 370</u>.

### Table 356. Code example

### Slave write to master

```
//Slave write 1 byte to master. Address 0x23, Data 0xdd. Polling mode.
I2C->SLVADR0 = 0x23 << 1; // put address in address 0 register
I2C->CFG = I2C_CFG_SLVEN;
I2C->CFG;
while(!(I2C->STAT & I2C_STAT_SLVPENDING));
if((I2C->STAT & I2C_STAT_SLVSTATE) != I2C_STAT_SLVST_ADDR) abort();
I2C->SLVCTL = I2C_SLVCTL_SLVCONTINUE; // ack address
while(!(I2C->STAT & I2C_STAT_SLVPENDING));
if((I2C->STAT & I2C_STAT_SLVSTATE) != I2C_STAT_SLVST_TX) abort();
I2C->SLVDAT = 0xdd; // write data
I2C->SLVCTL = I2C_SLVCTL_SLVCONTINUE; // continue transaction
```

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

## 24.4.3 Configure the I<sup>2</sup>C for wake-up

In sleep mode, any activity on the I<sup>2</sup>C-bus that triggers an I<sup>2</sup>C interrupt can wake up the part, provided that the interrupt is enabled in the INTENSET register and the NVIC. As long as the Flexcomm Interface clock remains active in sleep mode, the I<sup>2</sup>C can wake up the part independently of whether the I<sup>2</sup>C interface is configured in master or slave mode.

In deep-sleep mode, the I<sup>2</sup>C clock is turned off as are all peripheral clocks. However, if the I<sup>2</sup>C is configured in slave mode and an external master on the I<sup>2</sup>C-bus provides the clock signal, the I<sup>2</sup>C interface can create an interrupt asynchronously. This interrupt, if enabled in the NVIC and in the I<sup>2</sup>C interface INTENCLR register, can then wake up the core.

#### 24.4.3.1 Wake-up from sleep mode

- Enable the I<sup>2</sup>C interrupt in the NVIC.
- Enable the I<sup>2</sup>C wake-up event in the INTENSET register. Wake-up on any enabled interrupts is supported (see the INTENSET register). Examples are the following events:
  - Master pending
  - Change to idle state
  - Start/stop error
  - Slave pending
  - Address match (in slave mode)
  - Data available/ready


## 24.4.3.2 Wake-up from deep-sleep mode

- Enable the I<sup>2</sup>C interrupt in the NVIC.
- Enable the I<sup>2</sup>C interrupt in the STARTER1 register in the SYSCON block to create the interrupt signal asynchronously while the core and the peripheral are not clocked. See Table 94 "Start enable register 1 (STARTER1, main syscon: offset 0x684) bit description".
- Configure the I<sup>2</sup>C in slave mode.
- Enable the I<sup>2</sup>C the interrupt in the INTENCLR register which configures the interrupt as wake-up event. Examples are the following events:
  - Slave deselect
  - Slave pending (wait for read, write, or ACK)
  - Address match
  - Data available/ready for the Monitor function

## Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

# 24.5 General description

The architecture of the I<sup>2</sup>C-bus interface is shown in Figure 61.

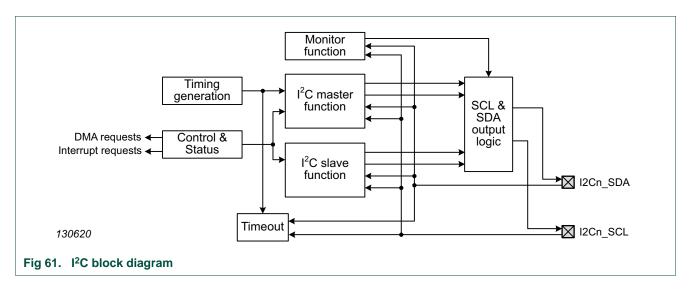

# 24.6 Register description

Address offsets are within the address space of the related Flexcomm Interface. The Reset Value reflects the data stored in used bits only. It does not include reserved bits content.

Table 357: I<sup>2</sup>C register overview

Name	Access	Offset	Description	Reset value	Section
Shared I <sup>2</sup> C r	egisters:				
CFG	R/W	0x800	Configuration for shared functions.	0x0	24.6.1
STAT	R/W	0x804	Status register for Master, Slave, and Monitor functions.	0x0801	24.6.2
INTENSET	R/W	0x808	Interrupt Enable Set and read register.	0x0	24.6.3
INTENCLR	WO	0x80C	Interrupt Enable Clear register.	NA	24.6.4
TIMEOUT	R/W	0x810	Time-out value register.	0xFFFF	24.6.5
CLKDIV	R/W	0x814	Clock pre-divider for the entire I <sup>2</sup> C interface. This determines what time increments are used for the MSTTIME register, and controls some timing of the Slave function.	0x0	24.6.6
INTSTAT	RO	0x818	Interrupt Status register for Master, Slave, and Monitor functions.	0x0	24.6.7
Master funct	tion registe	ers:			
MSTCTL	R/W	0x820	Master control register.	0x0	24.6.8
MSTTIME	R/W	0x824	Master timing configuration.	0x77	24.6.9
MSTDAT	R/W	0x828	Combined Master receiver and transmitter data register.	NA	24.6.10
Slave function	on register	s:			
SLVCTL	R/W	0x840	Slave control register.	0x0	24.6.11
SLVDAT	R/W	0x844	Combined Slave receiver and transmitter data register.	NA	24.6.12
SLVADR0	R/W	0x848	Slave address 0.	0x01	24.6.13

**UM10914 NXP Semiconductors** 

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

## Table 357: I<sup>2</sup>C register overview

Name	Access	Offset	Description	Reset value	Section
SLVADR1	R/W	0x84C	Slave address 1.	0x01	24.6.14
SLVADR2	R/W	0x850	Slave address 2.	0x01	24.6.14
SLVADR3	R/W	0x854	Slave address 3.	0x01	24.6.14
SLVQUAL0	R/W	0x858	Slave Qualification for address 0.	0x0	24.6.15
Monitor funct	ion regist	ers:		"	
MONRXDAT	RO	0x880	Monitor receiver data register.	0x0	24.6.16
ID register:				"	
ID	RO	0xFFC	I2C module Identification. This value appears in the shared Flexcomm Interface peripheral ID register when I2C is selected.	see table	24.6.17

## Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

# 24.6.1 I2C Configuration register

The CFG register contains mode settings that apply to Master, Slave, and Monitor functions.

Table 358. I<sup>2</sup>C Configuration register (CFG, offset 0x800) bit description

Bit	Symbol	Value	Description	Reset Value
0	MSTEN		Master Enable. When disabled, configurations settings for the Master function are not changed, but the Master function is internally reset.	0x0
		0	Disabled. The I <sup>2</sup> C Master function is disabled.	
		1	Enabled. The I <sup>2</sup> C Master function is enabled.	
1	SLVEN		Slave Enable. When disabled, configurations settings for the Slave function are not changed, but the Slave function is internally reset.	0x0
		0	Disabled. The I <sup>2</sup> C slave function is disabled.	
		1	Enabled. The I <sup>2</sup> C slave function is enabled.	
2	MONEN		Monitor Enable. When disabled, configurations settings for the Monitor function are not changed, but the Monitor function is internally reset.	0x0
		0	Disabled. The I <sup>2</sup> C Monitor function is disabled.	
		1	Enabled. The I <sup>2</sup> C Monitor function is enabled.	
3	TIMEOUTEN		I <sup>2</sup> C bus Time-out Enable. When disabled, the time-out function is internally reset.	0x0
		0	Disabled. Time-out function is disabled.	
		1	Enabled. Time-out function is enabled. Both types of time-out flags will be generated and will cause interrupts if they are enabled. Typically, only one time-out will be used in a system.	
4	MONCLKSTR		Monitor function Clock Stretching.	0x0
		0	Disabled. The Monitor function will not perform clock stretching. Software or DMA may not always be able to read data provided by the Monitor function before it is overwritten. This mode may be used when non-invasive monitoring is critical.	
		1	Enabled. The Monitor function will perform clock stretching in order to ensure that software or DMA can read all incoming data supplied by the Monitor function.	
5	HSCAPABLE		High-speed mode Capable enable. Since High Speed mode alters the way I <sup>2</sup> C pins drive and filter, as well as the timing for certain I <sup>2</sup> C signalling, enabling High-speed mode applies to all functions: Master, Slave, and Monitor.	0x0
		0	Standard or Fast modes. The I <sup>2</sup> C interface will support Standard-mode, Fast-mode, and Fast-mode Plus, to the extent that the pin electronics support these modes. Any changes that need to be made to the pin controls, such as changing the drive strength or filtering, must be made by software via the IOCON register associated with each I <sup>2</sup> C pin,	
		1	High-speed. In addition to Standard-mode, Fast-mode, and Fast-mode Plus, the I <sup>2</sup> C interface will support High-speed mode to the extent that the pin electronics support these modes.	
			See Section 24.7.2.2 for more information.	
31:6	-	-	Reserved. Read value is undefined, only zero should be written.	NA

## Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

## 24.6.2 I2C Status register

The STAT register provides status flags and state information about all of the functions of the  $I^2C$  interface. Access to bits in this register varies. RO = Read-only, W1C = write 1 to clear.

Details of the master and slave states described in the MSTSTATE and SLVSTATE bits in this register are listed in <u>Table 360</u> and <u>Table 361</u>.

Table 359. I<sup>2</sup>C Status register (STAT, offset 0x804) bit description

Bit	Symbol	Value	Description	Reset value	Access	
0	MST PENDING		Master Pending. Indicates that the Master is waiting to continue communication on the I <sup>2</sup> C-bus (pending) or is idle. When the master is pending, the MSTSTATE bits indicate what type of software service if any the master expects. This flag will cause an interrupt when set if, enabled via the INTENSET register. The MSTPENDING flag is not set when the DMA is handling an event (if the MSTDMA bit in the MSTCTL register is set). If the master is in the idle state, and no communication is needed, mask this interrupt.	0x1	RO	
		0	In progress. Communication is in progress and the Master function is busy and cannot currently accept a command.			
		1	Pending. The Master function needs software service or is in the idle state. If the master is not in the idle state, it is waiting to receive or transmit data or the NACK bit.			
3:1	MSTSTATE		Master State code. The master state code reflects the master state when the MSTPENDING bit is set, that is the master is pending or in the idle state. Each value of this field indicates a specific required service for the Master function. All other values are reserved. See <a href="Table 360">Table 360</a> for details of state values and appropriate responses.	0x0	RO	
		0x0	Idle. The Master function is available to be used for a new transaction.			
			0x1	Receive ready. Received data available (Master Receiver mode). Address plus Read was previously sent and Acknowledged by slave.		
		0x2	Transmit ready. Data can be transmitted (Master Transmitter mode). Address plus Write was previously sent and Acknowledged by slave.			
		0x3	NACK Address. Slave NACKed address.			
		0x4	NACK Data. Slave NACKed transmitted data.			
4	MST ARBLOSS		Master Arbitration Loss flag. This flag can be cleared by software writing a 1 to this bit. It is also cleared automatically when a 1 is written to MSTCONTINUE.	0x0	W1C	
		0	No Arbitration Loss has occurred.			
		1	Arbitration loss. The Master function has experienced an Arbitration Loss.			
			At this point, the Master function has already stopped driving the bus and gone to an idle state. Software can respond by doing nothing, or by sending a Start in order to attempt to gain control of the bus when it next becomes idle.			
5	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA	

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 359. I<sup>2</sup>C Status register (STAT, offset 0x804) bit description ...continued

Bit	Symbol	Value	Description	Reset value	Access
6	MST STSTPERR		Master Start/Stop Error flag. This flag can be cleared by software writing a 1 to this bit. It is also cleared automatically when a 1 is written to MSTCONTINUE.	0x0	W1C
		0	No Start/Stop Error has occurred.		
		1	The Master function has experienced a Start/Stop Error.		
			A Start or Stop was detected at a time when it is not allowed by the I <sup>2</sup> C specification. The Master interface has stopped driving the bus and gone to an idle state, no action is required. A request for a Start could be made, or software could attempt to insure that the bus has not stalled.		
7	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
8	SLV PENDING		Slave Pending. Indicates that the Slave function is waiting to continue communication on the I <sup>2</sup> C-bus and needs software service. This flag will cause an interrupt when set if enabled via INTENSET. The SLVPENDING flag is not set when the DMA is handling an event (if the SLVDMA bit in the SLVCTL register is set). The SLVPENDING flag is read-only and is automatically cleared when a 1 is written to the SLVCONTINUE bit in the SLVCTL register.	0x0	RO
			The point in time when SlvPending is set depends on whether the I <sup>2</sup> C interface is in HSCAPABLE mode. See Section 24.7.2.2.2.		
			When the I <sup>2</sup> C interface is configured to be HSCAPABLE, HS master codes are detected automatically. Due to the requirements of the HS I <sup>2</sup> C specification, slave addresses must also be detected automatically, since the address must be acknowledged before the clock can be stretched.		
		0	In progress. The Slave function does not currently need service.		
		1	Pending. The Slave function needs service. Information on what is needed can be found in the adjacent SLVSTATE field.		
10:9	SLVSTATE		Slave State code. Each value of this field indicates a specific required service for the Slave function. All other values are reserved. See <u>Table 361</u> for state values and actions.	0x0	RO
			<b>Remark:</b> note that the occurrence of some states and how they are handled are affected by DMA mode and Automatic Operation modes.		
		0x0	Slave address. Address plus R/W received. At least one of the four slave addresses has been matched by hardware.		
		0x1	Slave receive. Received data is available (Slave Receiver mode).		
		0x2	Slave transmit. Data can be transmitted (Slave Transmitter mode).		
11	SLV NOTSTR		Slave Not Stretching. Indicates when the slave function is stretching the I <sup>2</sup> C clock. This is needed in order to gracefully invoke deep-sleep mode during slave operation. This read-only flag reflects the slave function status in real time.	0x1	RO
		0	Stretching. The slave function is currently stretching the I <sup>2</sup> C bus clock. deep-sleep mode cannot be entered at this time.		
		1	Not stretching. The slave function is not currently stretching the I <sup>2</sup> C bus clock. deep-sleep mode could be entered at this time.		

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 359. I<sup>2</sup>C Status register (STAT, offset 0x804) bit description ...continued

Bit	Symbol	Value	Description	Reset value	Access
13:12	SLVIDX		Slave address match Index. This field is valid when the I <sup>2</sup> C slave function has been selected by receiving an address that matches one of the slave addresses defined by any enabled slave address registers, and provides an identification of the address that was matched. It is possible that more than one address could be matched, but only one match can be reported here.	0x0	RO
		0x0	Address 0. Slave address 0 was matched.		
		0x1	Address 1. Slave address 1 was matched.		
		0x2	Address 2. Slave address 2 was matched.		
		0x3	Address 3. Slave address 3 was matched.		
14	SLVSEL		Slave selected flag. SLVSEL is set after an address match when software tells the Slave function to acknowledge the address, or when the address has been automatically acknowledged. It is cleared when another address cycle presents an address that does not match an enabled address on the Slave function, when slave software decides to NACK a matched address, when there is a Stop detected on the bus, when the master NACKs slave data, and in some combinations of Automatic Operation. SLVSEL is not cleared if software NACKs data.	0x0 RO 0x0 RO 0x0 W1C 0x0 W1C	RO
		0	Not selected. The Slave function is not currently selected.		
		1	Selected. The Slave function is currently selected.		
15	SLVDESEL		Slave Deselected flag. This flag will cause an interrupt when set if enabled via INTENSET. This flag can be cleared by writing a 1 to this bit.	0x0	W1C
		0	Not deselected. The Slave function has not become deselected. This does not mean that it is currently selected. That information can be found in the SLVSEL flag.	-	
		1	Deselected. The Slave function has become deselected. This is specifically caused by the SLVSEL flag changing from 1 to 0. See the description of SLVSEL for details on when that event occurs.	-	
16	MONRDY		Monitor Ready. This flag is cleared when the MONRXDAT register is read.	0x0	RO
		0	No data. The Monitor function does not currently have data available.		
		1	Data waiting. The Monitor function has data waiting to be read.		
17	MONOV		Monitor Overflow flag.	0x0	W1C
		0	No overrun. Monitor data has not overrun.		
		1	Overrun. A Monitor data overrun has occurred. This can only happen when Monitor clock stretching not enabled via the MONCLKSTR bit in the CFG register. Writing 1 to this bit clears the flag.	-	
18	MON ACTIVE		Monitor Active flag. Indicates when the Monitor function considers the I <sup>2</sup> C bus to be active. Active is defined here as when some Master is on the bus: a bus Start has occurred more recently than a bus Stop.	0x0	RO
		0	Inactive. The Monitor function considers the I <sup>2</sup> C bus to be inactive.		
		1 A	Active. The Monitor function considers the I <sup>2</sup> C bus to be active.	1	

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 359. I<sup>2</sup>C Status register (STAT, offset 0x804) bit description ...continued

Bit	Symbol	Value	Description	Reset value	Access
19	MONIDLE	Monitor Idle flag. This flag is set when the Monitor function sees the I <sup>2</sup> C bus change from active to inactive. This can be used by software to decide whe to process data accumulated by the Monitor function. This flag will cause ar interrupt when set if enabled via the INTENSET register. The flag can be cleared by writing a 1 to this bit.		0x0	W1C
		0	Not idle. The I <sup>2</sup> C bus is not idle, or this flag has been cleared by software.		
		1	Idle. The I <sup>2</sup> C bus has gone idle at least once since the last time this flag was cleared by software.		
23:20	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA
24	EVENT TIMEOUT		Event Time-out Interrupt flag. Indicates when the time between events has been longer than the time specified by the TIMEOUT register. Events include Start, Stop, and clock edges. The flag is cleared by writing a 1 to this bit. No time-out is created when the I <sup>2</sup> C-bus is idle.	0x0	W1C
		0	No time-out. I <sup>2</sup> C bus events have not caused a time-out.		
		1	Event time-out. The time between I <sup>2</sup> C bus events has been longer than the time specified by the TIMEOUT register.		
25	SCL TIMEOUT		SCL Time-out Interrupt flag. Indicates when SCL has remained low longer than the time specific by the TIMEOUT register. The flag is cleared by writing a 1 to this bit.	0x0	W1C
		0	No time-out. SCL low time has not caused a time-out.	1	
		1	Time-out. SCL low time has caused a time-out.		
31:26	-	-	Reserved. Read value is undefined, only zero should be written.	NA	NA

## Table 360. Master function state codes (MSTSTATE)

MST STATE	Description	Actions	DMA allowed
0x0	<b>Idle.</b> The Master function is available to be used for a new transaction.	Send a Start or disable MSTPENDING interrupt if the Master function is not needed currently.	No
0x1	Received data is available (Master Receiver mode). Address plus Read was previously sent and Acknowledged by slave.	Read data and either continue, send a Stop, or send a Repeated Start.	Yes
0x2	<b>Data can be transmitted (Master Transmitter mode).</b> Address plus Write was previously sent and Acknowledged by slave.	Send data and continue, or send a Stop or Repeated Start.	Yes
0x3	Slave NACKed address.	Send a Stop or Repeated Start.	No
0x4	Slave NACKed transmitted data.	Send a Stop or Repeated Start.	No

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 361. Slave function state codes (SLVSTATE)

SLVSTATE		Description	Actions	
0	SLVST_ ADDR	Address plus R/W received. At least one of the 4 slave addresses has been matched by hardware.	Software can further check the address if needed, for instance if a subset of addresses qualified by SLVQUAL0 is to be used. Software can ACK or NACK the address by writing 1 to either SLVCONTINUE or SLVNACK. Also see <a href="Section 24.7.4">Section 24.7.4</a> regarding 10-bit addressing.	No
1	SLVST_RX	Received data is available (Slave Receiver mode).	Read data, reply with an ACK or a NACK.	Yes
2	SLVST_TX	Data can be transmitted (Slave Transmitter mode).	Send data. Note that when the Master NACKs dat transmitted by the slave, the slave becomes de-selected.	Yes

# 24.6.3 Interrupt Enable Set and read register

The INTENSET register controls which  $I^2C$  status flags generate interrupts. Writing a 1 to a bit position in this register enables an interrupt in the corresponding position in the STAT register (<u>Table 359</u>), if an interrupt is supported there. Reading INTENSET indicates which interrupts are currently enabled.

Table 362. Interrupt Enable Set and read register (INTENSET, offset 0x808) bit description

Bit	Symbol	Value	Description	Reset value
0	MSTPENDINGEN		Master Pending interrupt Enable.	0x0
		0	Disabled. The MstPending interrupt is disabled.	
		1	Enabled. The MstPending interrupt is enabled.	
3:1	-	-	Reserved. Read value is undefined, only zero should be written.	NA
4	MSTARBLOSSEN		Master Arbitration Loss interrupt Enable.	0x0
		0	Disabled. The MstArbLoss interrupt is disabled.	
		1	Enabled. The MstArbLoss interrupt is enabled.	
5	-	-	Reserved. Read value is undefined, only zero should be written.	NA
6	MSTSTSTPERREN		Master Start/Stop Error interrupt Enable.	0x0
		0	Disabled. The MstStStpErr interrupt is disabled.	
		1	Enabled. The MstStStpErr interrupt is enabled.	
7	-	-	Reserved. Read value is undefined, only zero should be written.	NA
8	SLVPENDINGEN		Slave Pending interrupt Enable.	0x0
		0	Disabled. The SlvPending interrupt is disabled.	
		1	Enabled. The SlvPending interrupt is enabled.	
10:9	-	-	Reserved. Read value is undefined, only zero should be written.	NA
11	SLVNOTSTREN		Slave Not Stretching interrupt Enable.	0x0
		0	Disabled. The SlvNotStr interrupt is disabled.	
		1	Enabled. The SlvNotStr interrupt is enabled.	
14:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA
15	SLVDESELEN		Slave Deselect interrupt Enable.	0x0
		0	Disabled. The SlvDeSel interrupt is disabled.	0x0  NA  0x0  NA  0x0  NA  0x0  NA  0x0  NA  0x0
		1	Enabled. The SlvDeSel interrupt is enabled.	

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 362. Interrupt Enable Set and read register (INTENSET, offset 0x808) bit description

Bit	Symbol	Value	Description	Reset value
16	MONRDYEN		Monitor data Ready interrupt Enable.	NA Ox0  NA Ox0  Ox0  Ox0  Ox0  Ox0  Ox0  Ox0  Ox0
		0	Disabled. The MonRdy interrupt is disabled.	
		1	Enabled. The MonRdy interrupt is enabled.	
17	MONOVEN		Monitor Overrun interrupt Enable.	0x0
		0	Disabled. The MonOv interrupt is disabled.	0x0  NA  0x0  NA  0x0
		1	Enabled. The MonOv interrupt is enabled.	
18	-	-	Reserved. Read value is undefined, only zero should be written.	NA
19	MONIDLEEN		Monitor Idle interrupt Enable.	0x0
		0	Disabled. The MonIdle interrupt is disabled.	
		1	Enabled. The MonIdle interrupt is enabled.	
23:20	-	-	Reserved. Read value is undefined, only zero should be written.	NA
24	EVENTTIMEOUTEN		Event time-out interrupt Enable.	0x0
		0	Disabled. The Event time-out interrupt is disabled.	
		1	Enabled. The Event time-out interrupt is enabled.	
25	SCLTIMEOUTEN		SCL time-out interrupt Enable.	0x0
		0	Disabled. The SCL time-out interrupt is disabled.	
		1	Enabled. The SCL time-out interrupt is enabled.	
31:26	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.4 Interrupt Enable Clear register

Writing a 1 to a bit position in INTENCLR clears the corresponding position in the INTENSET register, disabling that interrupt. INTENCLR is a write-only register.

Bits that do not correspond to defined bits in INTENSET are reserved and only zeroes should be written to them.

Table 363. Interrupt Enable Clear register (INTENCLR, offset 0x80C) bit description

Bit	Symbol	Description	Reset value
0	MSTPENDINGCLR	Master Pending interrupt clear. Writing 1 to this bit clears the corresponding bit in the INTENSET register if implemented.	0x0
3:1	-	Reserved. Read value is undefined, only zero should be written.	NA
4	MSTARBLOSSCLR	Master Arbitration Loss interrupt clear.	0x0
5	-	Reserved. Read value is undefined, only zero should be written.	NA
6	MSTSTSTPERRCLR	Master Start/Stop Error interrupt clear.	0x0
7	-	Reserved. Read value is undefined, only zero should be written.	NA
8	SLVPENDINGCLR	Slave Pending interrupt clear.	0x0
10:9	-	Reserved. Read value is undefined, only zero should be written.	NA
11	SLVNOTSTRCLR	Slave Not Stretching interrupt clear.	0x0
14:12	-	Reserved. Read value is undefined, only zero should be written.	NA
15	SLVDESELCLR	Slave Deselect interrupt clear.	0x0
16	MONRDYCLR	Monitor data Ready interrupt clear.	0x0
17	MONOVCLR	Monitor Overrun interrupt clear.	0x0
18	-	Reserved. Read value is undefined, only zero should be written.	NA

UM10914

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 363. Interrupt Enable Clear register (INTENCLR, offset 0x80C) bit description ...continued

Bit	Symbol	Description	Reset value
19	MONIDLECLR	Monitor Idle interrupt clear.	0x0
23:20	-	Reserved. Read value is undefined, only zero should be written.	NA
24	EVENTTIMEOUTCLR	Event time-out interrupt clear.	0x0
25	SCLTIMEOUTCLR	SCL time-out interrupt clear.	0x0
31:26	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.5 Time-out value register

The TIMEOUT register allows setting an upper limit to certain I<sup>2</sup>C bus times, informing by status flag and/or interrupt when those times are exceeded.

Two time-outs are generated, and software can elect to use either of them.

- 1. EVENTTIMEOUT checks the time between bus events while the bus is not idle: Start, SCL rising, SCL falling, and Stop. The EVENTTIMEOUT status flag in the STAT register is set if the time between any two events becomes longer than the time configured in the TIMEOUT register. The EVENTTIMEOUT status flag can cause an interrupt if enabled to do so by the EVENTTIMEOUTEN bit in the INTENSET register.
- 2. SCLTIMEOUT checks only the time that the SCL signal remains low while the bus is not idle. The SCLTIMEOUT status flag in the STAT register is set if SCL remains low longer than the time configured in the TIMEOUT register. The SCLTIMEOUT status flag can cause an interrupt if enabled to do so by the SCLTIMEOUTEN bit in the INTENSET register. The SCLTIMEOUT can be used with the SMBus.

Also see Section 24.7.3 "Time-out".

Table 364. Time-out value register (TIMEOUT, offset 0x810) bit description

Bit	Symbol	Description	Reset value
3:0	TOMIN	Time-out time value, bottom four bits. These are hard-wired to 0xF. This gives a minimum time-out of 16 I <sup>2</sup> C function clocks and also a time-out resolution of 16 I <sup>2</sup> C function clocks.	0xF
15:4	ТО	Time-out time value. Specifies the time-out interval value in increments of 16 I <sup>2</sup> C function clocks, as defined by the CLKDIV register. To change this value while I <sup>2</sup> C is in operation, disable all time-outs, write a new value to TIMEOUT, then re-enable time-outs.	0xFFF
		0x000 = A time-out will occur after 16 counts of the I <sup>2</sup> C function clock. 0x001 = A time-out will occur after 32 counts of the I <sup>2</sup> C function clock 0xFFF = A time-out will occur after 65,536 counts of the I <sup>2</sup> C function clock.	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

#### 24.6.6 Clock Divider register

The CLKDIV register divides down the Flexcomm Interface clock (FCLK) to produce the  $I^2C$  function clock that is used to time various aspects of the  $I^2C$  interface. The  $I^2C$  function clock is used for some internal operations in the  $I^2C$  interface and to generate the timing required by the  $I^2C$  bus specification, some of which are user configured in the MSTTIME register for Master operation. Slave operation uses CLKDIV for some timing functions.

See Section 24.7.2.1 "Rate calculations" for details on bus rate setup.

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 365. I<sup>2</sup>C Clock Divider register (CLKDIV, offset 0x814) bit description

Bit	Symbol	Description	Reset value
15:0	DIVVAL	This field controls how the Flexcomm Interface clock (FCLK) is used by the I <sup>2</sup> C functions that need an internal clock in order to operate.	0x0
		0x0000 = FCLK is used directly by the I <sup>2</sup> C. 0x0001 = FCLK is divided by 2 before use. 0x0002 = FCLK is divided by 3 before use.	
		0xFFFF = FCLK is divided by 65,536 before use.	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.7 Interrupt Status register

The INTSTAT register provides register provides a view of those interrupt flags that are currently enabled. This can simplify software handling of interrupts. See <u>Table 359</u> for detailed descriptions of the interrupt flags.

Table 366. I<sup>2</sup>C Interrupt Status register (INTSTAT, offset 0x818) bit description

Bit	Symbol	Description	Reset value
0	MSTPENDING	Master Pending.	0x1
3:1	-	Reserved.	
4	MSTARBLOSS	Master Arbitration Loss flag.	0x0
5	-	Reserved. Read value is undefined, only zero should be written.	NA
6	MSTSTSTPERR	Master Start/Stop Error flag.	0x0
7	-	Reserved. Read value is undefined, only zero should be written.	NA
8	SLVPENDING	Slave Pending.	0x0
10:9	-	Reserved. Read value is undefined, only zero should be written.	NA
11	SLVNOTSTR	Slave Not Stretching status.	0x1
14:12	-	Reserved. Read value is undefined, only zero should be written.	NA
15	SLVDESEL	Slave Deselected flag.	0x0
16	MONRDY	Monitor Ready.	0x0
17	MONOV	Monitor Overflow flag.	0x0
18	-	Reserved. Read value is undefined, only zero should be written.	NA
19	MONIDLE	Monitor Idle flag.	0x0
23:20	-	Reserved. Read value is undefined, only zero should be written.	NA
24	EVENTTIMEOUT	Event time-out Interrupt flag.	0x0
25	SCLTIMEOUT	SCL time-out Interrupt flag.	0x0
31:26	-	Reserved. Read value is undefined, only zero should be written.	NA

364 of 590

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

# 24.6.8 Master Control register

The MSTCTL register contains bits that control various functions of the  $I^2C$  Master interface. Only write to this register when the master is pending (MSTPENDING = 1 in the STAT register, Table 359).

Software should always write a complete value to MSTCTL, and not OR new control bits into the register as is possible in other registers such as CFG. This is due to the fact that MSTSTART and MSTSTOP are not self-clearing flags. ORing in new data following a Start or Stop may cause undesirable side effects.

After an initial I<sup>2</sup>C Start, MSTCTL should generally only be written when the MSTPENDING flag in the STAT register is set, after the last bus operation has completed. An exception is when DMA is being used and a transfer completes. In this case there is no MSTPENDING flag, and the MSTDMA control bit would be cleared by software potentially at the same time as setting either the MSTSTOP or MSTSTART control bit.

**Remark:** When in the idle or slave NACKed states (see <u>Table 360</u>), set the MSTDMA bit either with or after the MSTCONTINUE bit. MSTDMA can be cleared at any time.

Table 367. Master Control register (MSTCTL, offset 0x820) bit description

Bit	Symbol	Value	Description	Reset value
0	MSTCONTINUE		Master Continue. This bit is write-only.	0x0
		0	No effect.	
		1	Continue. Informs the Master function to continue to the next operation. This must done after writing transmit data, reading received data, or any other housekeeping related to the next bus operation.	
1	MSTSTART		Master Start control. This bit is write-only.	0x0
		0	No effect.	0x0 0x0 0x0
		1	Start. A Start will be generated on the I <sup>2</sup> C bus at the next allowed time.	
2	MSTSTOP		Master Stop control. This bit is write-only.	0x0
		0	No effect.	
		1	Stop. A Stop will be generated on the I <sup>2</sup> C bus at the next allowed time, preceded by a NACK to the slave if the master is receiving data from the slave (Master Receiver mode).	
3	MSTDMA		Master DMA enable. Data operations of the I <sup>2</sup> C can be performed with DMA. Protocol type operations such as Start, address, Stop, and address match must always be done with software, typically via an interrupt. Address acknowledgement must also be done by software except when the I <sup>2</sup> C is configured to be HSCAPABLE (and address acknowledgement is handled entirely by hardware) or when Automatic Operation is enabled. When a DMA data transfer is complete, MSTDMA must be cleared prior to beginning the next operation, typically a Start or Stop. This bit is read/write.	0x0
		0	Disable. No DMA requests are generated for master operation.	
		1	Enable. A DMA request is generated for I <sup>2</sup> C master data operations. When this I <sup>2</sup> C master is generating Acknowledge bits in Master Receiver mode, the acknowledge is generated automatically.	
31:4	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

# 24.6.9 Master Time register

The MSTTIME register allows programming of certain times that may be controlled by the Master function. These include the clock (SCL) high and low times, repeated Start setup time, and transmitted data setup time.

The I<sup>2</sup>C clock pre-divider is described in Table 365.

Table 368. Master Time register (MSTTIME, offset 0x824) bit description

Bit	Symbol	Value	Description	Reset value
2:0	MSTSCLLOW		Master SCL Low time. Specifies the minimum low time that will be asserted by this master on SCL. Other devices on the bus (masters or slaves) could lengthen this time. This corresponds to the parameter t <sub>LOW</sub> in the I <sup>2</sup> C bus specification. I <sup>2</sup> C bus specification parameters t <sub>BUF</sub> and t <sub>SU;STA</sub> have the same values and are also controlled by MSTSCLLOW.	0x7
		0x0	2 clocks. Minimum SCL low time is 2 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x1	3 clocks. Minimum SCL low time is 3 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x2	4 clocks. Minimum SCL low time is 4 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x3	5 clocks. Minimum SCL low time is 5 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x4	6 clocks. Minimum SCL low time is 6 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x5	7 clocks. Minimum SCL low time is 7 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x6	8 clocks. Minimum SCL low time is 8 clocks of the I <sup>2</sup> C clock pre-divider.	
		0x7	9 clocks. Minimum SCL low time is 9 clocks of the I <sup>2</sup> C clock pre-divider.	
3	-	-	Reserved.	0x0
6:4	MSTSCLHIGH		Master SCL High time. Specifies the minimum high time that will be asserted by this master on SCL. Other masters in a multi-master system could shorten this time. This corresponds to the parameter t <sub>HIGH</sub> in the I <sup>2</sup> C bus specification. I <sup>2</sup> C bus specification parameters t <sub>SU;STO</sub> and t <sub>HD;STA</sub> have the same values and are also controlled by MSTSCLHIGH.	0x7
		0x0	2 clocks. Minimum SCL high time is 2 clock of the I <sup>2</sup> C clock pre-divider.	_
		0x1	3 clocks. Minimum SCL high time is 3 clocks of the I <sup>2</sup> C clock pre-divider .	_
		0x2	4 clocks. Minimum SCL high time is 4 clock of the I <sup>2</sup> C clock pre-divider.	_
		0x3	5 clocks. Minimum SCL high time is 5 clock of the I <sup>2</sup> C clock pre-divider.	
		0x4	6 clocks. Minimum SCL high time is 6 clock of the I <sup>2</sup> C clock pre-divider.	
		0x5	7 clocks. Minimum SCL high time is 7 clock of the I <sup>2</sup> C clock pre-divider.	
		0x6	8 clocks. Minimum SCL high time is 8 clock of the I <sup>2</sup> C clock pre-divider.	
		0x7	9 clocks. Minimum SCL high time is 9 clocks of the I <sup>2</sup> C clock pre-divider.	
31:7	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.10 Master Data register

The MSTDAT register provides the means to read the most recently received data for the Master function, and to transmit data using the Master function.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 369. Master Data register (MSTDAT, offset 0x828) bit description

Bit	Symbol	Description	Reset value
7:0	DATA	Master function data register.	0x0
		Read: read the most recently received data for the Master function.  Write: transmit data using the Master function.	
31:8	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.11 Slave Control register

The SLVCTL register contains bits that control various functions of the  $I^2C$  Slave interface. Only write to this register when the slave is pending (SLVPENDING = 1 in the STAT register, Table 359).

Refer to <u>Section 24.7.8 "Automatic operation"</u> for details of the AUTOACK, AUTOMATCHREAD, and related settings.

**Remark:** When in the slave address state (slave state 0, see <u>Table 361</u>), set the SLVDMA bit either with or after the SLVCONTINUE bit. SLVDMA can be cleared at any time.

Table 370. Slave Control register (SLVCTL, offset 0x840) bit description

Bit	Symbol	Value	Description	Reset Value
0	SLVCONTINUE		Slave Continue.	0x0
		0	No effect.	
		1	Continue. Informs the Slave function to continue to the next operation, by clearing the SLVPENDING flag in the STAT register. This must be done after writing transmit data, reading received data, or any other housekeeping related to the next bus operation. Automatic Operation has different requirements. SLVCONTINUE should not be set unless SLVPENDING = 1.	
1	SLVNACK		Slave NACK.	0x0
		0	No effect.	
		1	NACK. Causes the Slave function to NACK the master when the slave is receiving data from the master (Slave Receiver mode).	
2	-	-	Reserved. Read value is undefined, only zero should be written.	NA
3	SLVDMA		Slave DMA enable.	0x0
		0	Disabled. No DMA requests are issued for Slave mode operation.	
		1	Enabled. DMA requests are issued for I <sup>2</sup> C slave data transmission and reception.	
7:4	-	-	Reserved. Read value is undefined, only zero should be written.	NA

367 of 590

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 370. Slave Control register (SLVCTL, offset 0x840) bit description

Bit	Symbol	Value	Description	
8	AUTOACK		Automatic Acknowledge.When this bit is set, it will cause an I <sup>2</sup> C header which matches SLVADR0 and the direction set by AUTOMATCHREAD to be ACKed immediately; this is used with DMA to allow processing of the data without intervention. If this bit is cleared and a header matches SLVADR0, the behavior is controlled by AUTONACK in the SLVADR0 register: allowing NACK or interrupt.	0x0
		0	Normal, non-automatic operation. If AUTONACK = 0, an SlvPending interrupt is generated when a matching address is received. If AUTONACK = 1, received addresses are NACKed (ignored).	
		1	A header with matching SLVADR0 and matching direction as set by AUTOMATCHREAD will be ACKed immediately, allowing the master to move on to the data bytes. The ACK will clear this bit. If the address matches SLVADR0, but the direction does not match AUTOMATCHREAD, the behavior will depend on the bit in the SLVADR0 register: if AUTONACK is set, then it will be Nacked; else if AUTONACK is clear, then a SIvPending interrupt is generated.	
9	AUTOMATCHREAD		When AUTOACK is set, this bit controls whether it matches a read or write request on the next header with an address matching SLVADR0. Since DMA needs to be configured to match the transfer direction, the direction needs to be specified. This bit allows a direction to be chosen for the next operation.	0x0
		0	The expected next operation in Automatic Mode is an I <sup>2</sup> C write.	
		1	The expected next operation in Automatic Mode is an I <sup>2</sup> C read.	
31:10	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.12 Slave Data register

The SLVDAT register provides the means to read the most recently received data for the Slave function and to transmit data using the Slave function.

Table 371. Slave Data register (SLVDAT, offset 0x844) bit description

Bit	Symbol	Description	Reset value
7:0	DATA	Slave function data register.	
		Read: read the most recently received data for the Slave function. Write: transmit data using the Slave function.	
31:8	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.13 Slave Address 0 register

The SLVADR0 register allows enabling and defining one of the addresses that can be automatically recognized by the I<sup>2</sup>C slave hardware.

The  $I^2C$  slave function has a total of 4 address comparators. The value in SLVADR0 can be qualified by the setting of the SLVQUAL0 register. The additional 3 address comparators do not include the address qualifier feature. For handling of the general call address, one of the 4 address registers can be programmed to respond to address 0.

Refer to <u>Section 24.7.8 "Automatic operation"</u> for details of AUTONACK and related settings.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 372. Slave Address 0 register (SLVADR[0], offset 0x848) bit description

Bit	Symbol Value Description		Value Description	
0	SADISABLE0		Slave Address 0 Disable.	0x1
		0	Enabled. Slave Address 0 is enabled.	
		1	Ignored Slave Address 0 is ignored.	
7:1	SLVADR0	-	Slave Address. Seven bit slave address that is compared to received addresses if enabled. The compare can be affected by the setting of the SLVQUAL0 register.	0x0
14:8	-	-	leserved. Read value is undefined, only zero should be written.	
15	AUTONACK		Automatic NACK operation. Used in conjunction with AUTOACK and AUTOMATCHREAD, allows software to ignore I <sup>2</sup> C traffic while handling previous I <sup>2</sup> C data or other operations.	0x0
		0	Normal operation, matching I <sup>2</sup> C addresses are not ignored.	
		1	Automatic-only mode. All incoming addresses are ignored (NACKed), unless AUTOACK is set, it matches SLVADR0, and AUTOMATCHREAD matches the direction.	
31:16	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.14 Slave Address 1, 2, and 3 registers

These slave address registers provide for three additional addresses that can be automatically recognized by the I2C slave hardware.

Table 373. Slave Address registers (SLVADR[1:3], offset [0x84C:0x854]) bit description

Bit	Symbol	Value	Description	Reset value
0	SADISABLE		Slave Address n Disable.	
		0	Enabled. Slave Address n is enabled.	
		1	Ignored Slave Address n is ignored.	
7:1	SLVADR		Slave Address. Seven bit slave address that is compared to received addresses if enabled.	0x0
31:8	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.15 Slave address Qualifier 0 register

The SLVQUAL0 register can alter how Slave Address 0 (specified by the SLVADR0 register) is interpreted.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 374. Slave address Qualifier 0 register (SLVQUAL0, offset 0x858) bit description

Bit	Symbol	Symbol Value Description		Reset Value
0	QUALMODE0		Qualify mode for slave address 0.	0x0
		0	Mask. The SLVQUAL0 field is used as a logical mask for matching address 0.	
		1	Extend. The SLVQUAL0 field is used to extend address 0 matching in a range of addresses.	
7:1	SLVQUAL0	-	Slave address Qualifier for address 0. A value of 0 causes the address in SLVADR0 to be used as-is, assuming that it is enabled.	0x0
			If QUALMODE0 = 0, any bit in this field which is set to 1 will cause an automatic match of the corresponding bit of the received address when it is compared to the SLVADR0 register.	
			If QUALMODE0 = 1, an address range is matched for address 0. This range extends from the value defined by SLVADR0 to the address defined by SLVQUAL0 (address matches when SLVADR0[7:1] ≤ received address ≤ SLVQUAL0[7:1]).	
31:8	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.16 Monitor data register

The read-only MONRXDAT register provides information about events on the I<sup>2</sup>C bus, primarily to facilitate debugging of the I<sup>2</sup>C during application development. All data addresses and data passing on the bus and whether these were acknowledged, as well as Start and Stop events, are reported.

The Monitor function must be enabled by the MONEN bit in the CFG register. Monitor mode can be configured to stretch the I<sup>2</sup>C clock if data is not read from the MONRXDAT register in time to prevent it, via the MONCLKSTR bit in the CFG register. This can help ensure that nothing is missed but can cause the Monitor function to be somewhat intrusive (by potentially adding clock delays, depending on software or DMA response time). In order to improve the chance of collecting all Monitor information if clock stretching is not enabled, Monitor data is buffered such that it is available until the end of the next piece of information from the I<sup>2</sup>C bus.

Details of clock stretching are different in HS mode, see Section 24.7.2.2.2.

Table 375. Monitor data register (MONRXDAT, offset 0x880) bit description

Bit	Symbol	Value Description		Reset value
7:0	MONRXDAT	-	Monitor function Receiver Data. This reflects every data byte that passes on the I <sup>2</sup> C pins.	0x0
8	MONSTART		Monitor Received Start.	0x0
		0	No start detected. The Monitor function has not detected a Start event on the I <sup>2</sup> C bus.	
		1	Start detected. The Monitor function has detected a Start event on the I <sup>2</sup> C bus.	
9	MONRESTART		Monitor Received Repeated Start.	0x0
		0	No repeated start detected. The Monitor function has not detected a Repeated Start event on the I <sup>2</sup> C bus.	
		1	Repeated start detected. The Monitor function has detected a Repeated Start event on the I <sup>2</sup> C bus.	

# Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

Table 375. Monitor data register (MONRXDAT, offset 0x880) bit description

Bit	Symbol	Value	Description	Reset value
10	MONNACK		Monitor Received NACK.	0x0
		0	Acknowledged. The data currently being provided by the Monitor function was acknowledged by at least one master or slave receiver.	
		1	Not acknowledged. The data currently being provided by the Monitor function was not acknowledged by any receiver.	
31:11	-	-	Reserved. Read value is undefined, only zero should be written.	NA

# 24.6.17 Module identification register

The ID register identifies the type and revision of the I<sup>2</sup>C module. A generic SW driver can make use of this information register to implement module type or revision specific behavior.

Table 376. Module identification register (ID - offset 0xFFC) bit description

Bit	Symbol	Description	Reset Value
7:0	APERTURE	Aperture: encoded as (aperture size/4K) -1, so 0x00 means a 4K aperture.	0x00
11:8	MINOR_REV	Minor revision of module implementation, starting at 0. Minor revision of module implementation, starting at 0. Software compatibility is expected between minor revisions.	-
15:12	MAJOR_REV	Major revision of module implementation, starting at 0. There may not be software compatibility between major revisions.	-
31:16	ID	Unique module identifier for this IP block.	0xE030

#### Chapter 24: LPC5411x I2C-bus interfaces

# 24.7 Functional description

#### 24.7.1 AHB bus access

The bus interface to the I<sup>2</sup>C registers contained in the Flexcomm Interface support only word writes. Byte and halfword writes are not supported in conjunction with the I<sup>2</sup>C function.

# 24.7.2 Bus rates and timing considerations

Due to the nature of the I<sup>2</sup>C bus, it is generally not possible to guarantee a specific clock rate on the SCL pin. On the I<sup>2</sup>C-bus, the clock can be stretched by any slave device, extended by software overhead time, etc.

In a multi-master system, the master that provides the shortest SCL high time will cause that time to appear on SCL as long as that master is participating in I<sup>2</sup>C traffic (i.e. when it is the only master on the bus, or during arbitration between masters).

In addition, I<sup>2</sup>C implementations generally base subsequent actions on what actually happens on the bus lines. For instance, a bus master allows SCL to go high. It then monitors the line to make sure it actually did go high (this would be required in a multi-master system). This results in a small delay before the next action on the bus, caused by the rise time of the open drain bus line.

Rate calculations give a base frequency that represents the fastest that the I<sup>2</sup>C bus could operate if nothing slows it down.

#### 24.7.2.1 Rate calculations

#### **Master timing**

SCL high time (in Flexcomm Interface function clocks) = (CLKDIV + 1) \* (MSTSCLHIGH + 2)

SCL low time (in Flexcomm Interface function clocks) = (CLKDIV + 1) \* (MSTSCLLOW + 2)

Nominal SCL rate =

Flexcomm Interface function clock rate / (SCL high time + SCL low time)

#### Slave timing

Most aspects of slave operation are controlled by SCL received from the I<sup>2</sup>C bus master. However, if the slave function stretches SCL to allow for software response, it must provide sufficient data setup time to the master before releasing the stretched clock. This is accomplished by inserting one clock time of CLKDIV at that point.

If CLKDIV is already configured for master operation, that is sufficient. If only the slave function is used, CLKDIV should be configured such that one clock time is greater than the tSU;DAT value noted in the I<sup>2</sup>C bus specification for the I<sup>2</sup>C mode that is being used.

#### 24.7.2.2 Bus rate support

The I<sup>2</sup>C interface can support 4 modes from the I<sup>2</sup>C bus specification:

UM10914

#### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

- Standard-mode (SM, rate up to 100 kbits/s)
- Fast-mode (FM, rate up to 400 kbits/s)
- Fast-mode Plus (FM+, rate up to 1 Mbits/s)
- High-speed mode (HS, rate up to 3.4 Mbits/s)

Refer to Ref. 4 "UM10204" for details of I<sup>2</sup>C modes and other details.

The I<sup>2</sup>C interface supports Standard-mode, Fast-mode, and Fast-mode Plus with the same software sequence, which also supports SMBus. High-speed mode is intrinsically incompatible with SMBus due to conflicting requirements and limitations for clock stretching, and therefore requires a slightly different software sequence.

#### 24.7.2.2.1 High-speed mode support

High-speed mode requires different pin filtering, somewhat different timing, and a different drive strength on SCL for the master function. The changes needed for the handling of the acknowledge bit mean that SMBus cannot be supported when the I<sup>2</sup>C is configured to be HS capable. This limitation is intrinsic to the SMBus and High-speed I<sup>2</sup>C specifications.

Because of the timing of changes to pin drive strength and filtering, the  $I^2C$  interface is designed to directly control those pad characteristics when configured to be HS capable. The  $I^2C$  also recognizes HS master codes and responds to programmed addresses when HS capable.

For software consistency, the changes required for handling of acknowledge and address recognition, and which affect when interrupts occur, are always in effect when the I<sup>2</sup>C is configured to be HS capable. This means that software does not need to know if a particular transfer is actually in HS mode or not.

#### 24.7.2.2.2 Clock stretching

The I<sup>2</sup>C interface automatically stretches the clock when it does not have sufficient information on how to proceed, i.e. software has not supplied data and/or instructions to generate a start or stop. In principle, at least, I<sup>2</sup>C can allow the clock to be stretched by any bus participant at any time that SCL is low, in SM, FM, and MF+ modes.

In practice, the I<sup>2</sup>C interface described here may stretch SCL at the following times, in SM, FM, and MF+ modes:

- As a Slave:
  - after an address is received that complies with at least one slave address (before the address is acknowledged)
  - as a slave receiver, after each data byte received (software then acknowledges the data)
  - as a slave transmitter, after each data byte is sent and the matching acknowledge is received from the master
- As a master:

after each

- address is sent and the acknowledge bit has been received
- as a master receiver, after each after each data byte is received (software then acknowledges the data)

UM10914

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

 as a master transmitter, after each data byte is sent and the matching acknowledge bit has been received from the slave

#### In HS mode:

- As a Slave (only slave functions in HS mode are supported on this device)
  - as a slave receiver, after each data byte is received and automatically acknowledged
  - as a slave transmitter, after each after each data byte is sent and the matching acknowledge is received from the master

In each case, the relevant pending flag (MSTPENDING or SLVPENDING) is set at the point where clock stretching occurs.

#### 24.7.3 Time-out

A time-out feature on an I<sup>2</sup>C interface can be used to detect a "stuck" bus and potentially do something to alleviate the condition. Two different types of time-out are supported. Both types apply whenever the I<sup>2</sup>C interface and the time-out function are both enabled. Master, Slave, or Monitor functions do not need to be enabled.

In the first type of time-out, reflected by the EVENTTIMEOUT flag in the STAT register, the time between bus events governs the time-out check. These events include Start, Stop, and all changes on the I<sup>2</sup>C clock (SCL). This time-out is asserted when the time between any of these events is longer than the time configured in the TIMEOUT register. This time-out could be useful in monitoring an I<sup>2</sup>C bus within a system as part of a method to keep the bus running of problems occur.

The second type of  $I^2C$  time-out is reflected by the SCLTIMEOUT flag in the STAT register. This time-out is asserted when the SCL signal remains low longer than the time configured in the TIMEOUT register. This corresponds to SMBus time-out parameter  $T_{\text{TIMEOUT}}$ . In this situation, a slave could reset its own  $I^2C$  interface in case it is the offending device. If all listening slaves (including masters that can be addressed as slaves) do this, then the bus will be released unless it is a current master causing the problem. Refer to the SMBus specification for more details.

Both types of time-out are generated only when the I<sup>2</sup>C bus is considered busy, i.e. when there has been a Start condition more recently than a Stop condition.

### 24.7.4 Ten-bit addressing

Ten-bit addressing is accomplished by the I<sup>2</sup>C master sending a second address byte to extend a particular range of standard 7-bit addresses. In the case of the master writing to the slave, the I<sup>2</sup>C frame simply continues with data after the 2 address bytes. For the master to read from a slave, it needs to reverse the data direction after the second address byte. This is done by sending a Repeated Start, followed by a repeat of the same standard 7-bit address, with a Read bit. The slave must remember that it had been addressed by the previous write operation and stay selected for the subsequent read with the correct partial I<sup>2</sup>C address.

For the Master function, the I<sup>2</sup>C is simply instructed to perform the 2-byte addressing as a normal write operation, followed either by more write data, or by a Repeated Start with a repeat of the first part of the 10-bit slave address and then reading in the normal fashion.

#### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

For the Slave function, the first part of the address is automatically matched in the same fashion as 7-bit addressing. The slave address qualifier feature (see Section 24.6.15) can be used to intercept all potential 10-bit addresses (first address byte values F0 through F6), or just one. In the case of Slave Receiver mode, data is received in the normal fashion after software matches the first data byte to the remaining portion of the 10-bit address. The Slave function should record the fact that it has been addressed, in case there is a follow-up read operation.

For Slave Transmitter mode, the slave function responds to the initial address in the same fashion as for Slave Receiver mode, and checks that it has previously been addressed with a full 10-bit address. If the address matched is address 0, and address qualification is enabled, software must check that the first part of the 10-bit address is a complete match to the previous address before acknowledging the address.

### 24.7.5 Clocking and power considerations

The Master function of the I<sup>2</sup>C always requires a peripheral clock to be running in order to operate. The Slave function can operate without any internal clocking when the slave is not currently addressed. This means that reduced power modes up to deep-sleep mode can be entered, and the device will wake up when the I<sup>2</sup>C Slave function recognizes an address. Monitor mode can similarly wake up the device from a reduced power mode when information becomes available.

# 24.7.6 Interrupt handling

The I<sup>2</sup>C provides a single interrupt output that handles all interrupts for Master, Slave, and Monitor functions.

#### 24.7.7 DMA

DMA with the I<sup>2</sup>C is done only for data transfer, DMA cannot handle control of the I<sup>2</sup>C. Once DMA is transferring data, I<sup>2</sup>C acknowledges are handled implicitly. No CPU intervention is required while DMA is transferring data.

Generally, data transfers can be handled by DMA for Master mode after an address is sent and acknowledged by a slave, and for Slave mode after software has acknowledged an address. In either mode, software is always involved in the address portion of a message. In master and slave modes, data receive and transmit data can be transferred by the DMA. The DMA supports three DMA requests: data transfer in master mode, slave mode, and Monitor mode.

DMA may be used in connection with Automatic Operation in order to minimize software overhead time for I<sup>2</sup>C handling.

A received NACK (from a slave in Master mode, or from a master in Slave mode) will cause DMA to stop and an interrupt to be generated. A Repeated Start sensed on the bus will similarly cause DMA to stop and an interrupt to be generated.

The Monitor function may be used with DMA if a channel is available See Section 12.5.1.1.1 "DMA with I2C monitor mode" for how DMA channels are used with the Monitor function.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

#### 24.7.7.1 DMA as a Master transmitter

A basic sequence for a Master transmitter:

- Software sets up DMA to transmit a message.
- Software causes a slave address with write command to be sent and checks that the address was acknowledged.
- Software turns on DMA mode in the I<sup>2</sup>C.
- DMA transfers data and eventually completes the transfer.
- Software causes a stop (or repeated start) to be sent.

Software will be invoked to handle any exceptions to the standard transfer, such as the slave sending a NACK before the end of the transfer.

#### 24.7.7.2 DMA as a Master receiver

A basic sequence for a Master receiver:

- Software sets up DMA to receive a message.
- Software causes a slave address with read command to be sent and checks that the address was acknowledged.
- Software starts DMA.
- DMA completes.
- Software causes a stop or repeated start to be sent.

Software will be invoked to handle any exceptions to the standard transfer.

#### 24.7.7.3 DMA as a Slave transmitter

A basic sequence for a Slave transmitter:

- Software acknowledges an I<sup>2</sup>C address.
- Software sets up DMA to transmit a message.
- Software starts DMA.
- DMA completes.

#### 24.7.7.4 DMA as a Slave receiver

A basic sequence for a Slave receiver:

- Software receives an interrupt for a slave address received, and acknowledges the address.
- Software sets up DMA to receive a message, less the final data byte.
- Software starts DMA.
- DMA completes.
- Software sets SLVNACK prior to receiving the final data byte.
- Software receives the final data byte.

### Chapter 24: LPC5411x I<sup>2</sup>C-bus interfaces

# 24.7.8 Automatic operation

Automatic operation modes provide a way to reduce software overhead for I<sup>2</sup>C slave functions with some limitations. They are intended to be used primarily in conjunction with slave DMA. Related control bits are SLVDMA, AUTOACK, and AUTOMATCHREAD in the SLCCTL register, and the AUTONACK bit in the SLVADR0 register. Table 27 shows how these controls may be used. These cases apply when an address matching SLVADR0, qualified by SLVQUAL0, is received.

Table 377: Automatic operation cases

Conditions:			Response:		
AUTONACK bit	AUTOACK bit	Received R/W bit matches AUTOMATCHREAD	SLVPENDING interrupt generated?	ACK/NACK on I <sup>2</sup> C bus	Description
0	0	x	Yes	None	Normal, non-automatic operation.
0	1	No	Yes	None	Automatic slave DMA: unexpected read/write case. Same as normal non-automatic operation.
х	1	Yes	No	ACK	Automatic slave DMA: expected read/write case. When the automatic Ack is sent, the SLVDMA bit is set and the AUTOACK bit is cleared.
1	0	х	No	NACK	Bus is ignored until software changes the setup.
1	1	No	No	NACK	Bus is ignored until software changes the setup.

377 of 590

# **UM10914**

# Chapter 25: LPC5411x I<sup>2</sup>S interface

Rev. 1.2 — 30 June 2016

**User manual** 

# 25.1 How to read this chapter

I2S functionality is available on all LPC5411x devices. I<sup>2</sup>S is a function that is implemented in selected Flexcomm Interface peripherals. In the LPC5411x, the I<sup>2</sup>S function is included in Flexcomm Interface 6 and Flexcomm Interface 7. Each of these Flexcomm Interfaces implements 1 I<sup>2</sup>S channel pair, for a total of 2 channel pairs on this device.

# 25.2 Basic configuration

Initial configuration of the I<sup>2</sup>S peripheral is accomplished as follows:

- 1. Peripheral clock: Make sure that the related Flexcomm Interface is enabled in the AHBCLKCTRL1 register (Section 4.5.17).
- Flexcomm Interface clock: Select a clock source for the related Flexcomm Interface.
   Options are shown in Figure 4. Also see Section 4.5.28.
  - **Remark:** The Flexcomm Interface function clock frequency should not be above 48 MHz
- 3. If needed, use the PRESETCTRL1 register (<u>Table 39</u>) to reset the Flexcomm Interface that is about to have a specific peripheral function selected.
- 4. Select the desired Flexcomm Interface function by writing to the PSELID register of the related Flexcomm Interface (Section 21.7.1).
- Pins: Make sure that the IOCON block is enabled in the AHBCLKCTRL0 register (Section 4.5.16). Select I<sup>2</sup>S pins and pin modes through the relevant IOCON registers (Chapter 7).
- 6. I<sup>2</sup>S rate: For master operation, the I<sup>2</sup>S rate is determined by the clock selected in step 2 above, optionally modified using the DIV register (<u>Table 384</u>). Slave functions typically use the incoming I<sup>2</sup>S clock directly.
- Interrupts: To enable I<sup>2</sup>S channel pair interrupts, see (FIFOINENSET in Section 25.7.8, FIFOINTENCLR in Section 25.7.9, and FIFOINTSTAT in Section 25.7.10). The related Flexcomm Interface interrupt must be enabled in the NVIC using the appropriate Interrupt Set Enable register (see Chapter 3).
- DMA: I<sup>2</sup>S channel pair master and slave functions can operated with the system DMA controller (see <u>Chapter 12</u>), and must be enabled in the FIFOCFG register (<u>Section 25.7.5</u>).

Chapter 25: LPC5411x I<sup>2</sup>S interface

### 25.3 Features

The I<sup>2</sup>S bus provides a standard communication interface for streaming data transfer applications such as digital audio or data collection. The I<sup>2</sup>S bus specification defines a 3-wire serial bus, having one data, one clock, and one word select/frame trigger signal, providing single or dual (mono or stereo) audio data transfer as well as other configurations.

The I<sup>2</sup>S interface within one Flexcomm Interface provides at least one channel pair that can be configured as a master or a slave. Other channel pairs, if present, always operate as slaves. All of the channel pairs within one Flexcomm Interface share one set of I<sup>2</sup>S signals, and are configured together for either transmit or receive operation, using the same mode, same data configuration and frame configuration. All such channel pairs can participate in a time division multiplexing (TDM) arrangement. For cases requiring an MCLK input and/or output, this is handled outside of the I<sup>2</sup>S block in the system level clocking scheme.

- A Flexcomm Interface may implement one or more I<sup>2</sup>S channel pairs, the first of which could be a master or a slave, and the rest of which would be slaves. All channel pairs are configured together for either transmit or receive and other shared attributes. The number of channel pairs is defined for each Flexcomm Interface, and may be from 0 to 4.
- Configurable data size for all channels within one Flexcomm Interface, from 4 bits to 32 bits. Each channel pair can also be configured independently to act as a single channel (mono as opposed to stereo operation).
- All channel pairs within one Flexcomm Interface share a single bit clock (SCK) and word select/frame trigger (WS), and data line (SDA).
- Data for all I<sup>2</sup>S traffic within one Flexcomm Interface uses the Flexcomm Interface FIFO. The FIFO depth is 8 entries.
- Left justified and right justified data modes.
- DMA support using FIFO level triggering.
- TDM (Time Division Multiplexing) with a several stereo slots and/or mono slots is supported. Each channel pair can act as any data slot. Multiple channel pairs can participate as different slots on one TDM data line.
- The bit clock and WS can be selectively inverted.
- Sampling frequencies supported depends on the specific device configuration and applications constraints (e.g. system clock frequency, PLL availability, etc.) but generally supports standard audio data rates.


**User manual** 

379 of 590

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.4 Architecture

The overall architecture of an example I<sup>2</sup>S subsystem is shown in Figure 62.

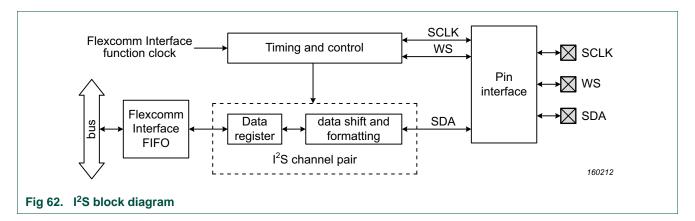

# 25.5 Terminology

Table 378: List of some terminology used in this document

Term	Description
Channel	Essentially, one piece of information on a single SDA line. In classic I <sup>2</sup> S, there is a single set of stereo data, which is 2 channels (left and right). In TDM modes, there may be many channels on a single SDA line.
Channel Pair	Two channels of data can be carried on one wire in classic $I^2S$ : left and right. On a microcontroller, this is typically what is implemented in a single instance of an $I^2S$ interface.
Classic I <sup>2</sup> S	This term is used in this document in reference to the original I <sup>2</sup> S bus specification from Philips Semiconductors. That specification defines 2 channel stereo data on SDA, where the WS state identifies the left (low) and right (high) channel, and data is delayed by 1 clock after WS transitions. The many variations of I <sup>2</sup> S that may be found have descended from this original specification.
DSP mode	DSP mode packs channel data together in the bit stream (left data followed by right data for each slot) and does not use WS to identify left and right data. WS may be a single SCK pulse, or a single data slot long pulse, in addition to a 50% duty cycle pulse. May be used in conjunction with TDM mode.
MCLK	Master Clock. In some I <sup>2</sup> S systems, this is provided as a multiple of the sample rate (fs), higher than the bit rate, such as 256 fs. Devices could potentially use this clock to construct a bit clock, or for internal operations such as data filtering.
SCK	Serial Clock. Sometimes referred to as BCK. This is a bit clock for data on the SDA line.
SDA	Serial Data. A single SDA provides one data stream, which may have many formats.
Slot	One data position in an I <sup>2</sup> S stream, typically each with the same slot length. For classic I <sup>2</sup> S, there is only one slot for stereo data. In a TDM mode, there can be several slots. In MONO mode, each slot is defined as one piece of data, rather than both left and right data.
TDM mode	TDM mode uses multiple data slots in order to put more channels of data into a single stream. May be used in conjunction with DSP mode or I <sup>2</sup> S mode.
WS	Word Select. Sometimes called LRCLK. Distinguishes left versus right data in most single stereo formats. Used as a frame delimiter in DSP and TDM modes.

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.6 Pin description

**Remark:** When the I<sup>2</sup>S function is outputting SCK and/or WS, it uses a return signal from the related pin to adjust internal timing. For that reason, those signals must in fact be connected to a device pin, via IOCON selection, in order for the I<sup>2</sup>S to operate.

Table 379: I<sup>2</sup>S Pin Description

Pin	Туре	Name used in Pin Configuration chapter	Description
SCK	I/O	FCn_SCK	Serial Clock for I2Sn. Clock signal used to synchronize the transfer of data on the SDA pin. It is normally driven by the master and received by one or more slaves.
			<b>Remark:</b> when the primary I <sup>2</sup> S channel pair of a Flexcomm Interface is configured as a master, such that SCK is an output, it must actually be connected to a pin in order for the I <sup>2</sup> S to work properly.
WS	I/O	FCn_TXD_SCL_MISO_WS	Word Select for I2Sn. Synchronizing signal for the beginning of each data frame and, in some modes, left vs. right channel data. It is normally driven by the master and received by one or more slaves.
			<b>Remark:</b> when the primary I <sup>2</sup> S channel pair of a Flexcomm Interface is configured as a master, such that WS is an output, it must actually be connected to a pin in order for the I <sup>2</sup> S to work properly.
SDA	I/O	FCn_RXD_SDA_MOSI_DATA	Serial Data for a single data stream used by one or more I <sup>2</sup> S channel pairs of I2Sn. The format of data is configurable. It is driven by one or more transmitters and read by one or more receivers.
MCLK	I/O	MCLK	Master Clock. A multiple of the sample clock can optionally be provided by a master to other devices in the system, or can be received and divided down within a Flexcomm Interface in order to locally generate SCK and/or WS. This clock is not created inside the I <sup>2</sup> S block. If MCLK is supported as an input to the device, it can be routed to the I <sup>2</sup> S block and used to operate its functions. If MCLK is an output from the device, the clock that is used to create that MCLK can also be routed to the I <sup>2</sup> S block and used to operate its functions.

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7 Register description

The registers shown in  $\underline{\text{Table 380}}$  apply if the I<sup>2</sup>S function is selected in a Flexcomm Interface that supports I<sup>2</sup>S.

The reset value reflects the value of defined bits only, and does not include reserved bits.

Table 380: Register overview for the I<sup>2</sup>S function of one Flexcomm Interface

Name	Access	Offset [1]	Description	Reset Value	Section
Registers for the	primary	channel	pair and shared registers:		
CFG1	R/W	0xC00	Configuration register 1 for the primary channel pair.	0x0	25.7.1
CFG2	R/W	0xC04	Configuration register 2 for the primary channel pair.	0x0	25.7.2
STAT	RO/W1C	0xC08	Status register for the primary channel pair.	0x0	25.7.3
DIV	R/W	0xC1C	Clock divider, used by all channel pairs.		25.7.4
Registers for FIF	O control	and dat	a access:		
FIFOCFG	FIFOCFG R/W 0xE00 FIFO configuration and enable register.		0x0	25.7.5	
FIFOSTAT	FOSTAT R/W 0xE04 FIFO status register.		0x30	25.7.6	
FIFOTRIG	R/W	0xE08	FIFO trigger level settings for interrupt and DMA request.	0x0	25.7.7
FIFOINTENSET	OINTENSET R/W1C 0xE10 FIFO interrupt enable set (enable) and read register.		0x0	25.7.8	
FIFOINTENCLR	R/W1C	0xE14	FIFO interrupt enable clear (disable) and read register.		25.7.9
FIFOINTSTAT	RO	0xE18	FIFO interrupt status register.	0x0	25.7.10
FIFOWR	WO	0xE20	FIFO write data.	NA	25.7.11
FIFOWR48H	WO	0xE24	FIFO write data for upper data bits. May only be used if the I <sup>2</sup> S is configured for 2x 24-bit data and not using DMA.	NA	25.7.12
FIFORD	RO	0xE30	FIFO read data.	NA	25.7.13
FIFORD48H	RO	0xE34	FIFO read data for upper data bits. May only be used if the I <sup>2</sup> S is configured for 2x 24-bit data and not using DMA.	NA	25.7.14
FIFORDNOPOP	RO	0xE40	FIFO data read with no FIFO pop.	NA	25.7.15
FIFORD48H NOPOP	RO	0xE44	FIFO data read for upper data bits with no FIFO pop. May only be used if the I <sup>2</sup> S is configured for 2x 24-bit data and not using DMA.	NA	25.7.16
ID register:		,		,	
ID	RO	0xFFC	I2S Module identification. This value appears in the shared Flexcomm Interface peripheral ID register when I <sup>2</sup> S is the selected function.	see table	25.7.17

<sup>[1]</sup> Offset is within the related Flexcomm Interface address space.

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7.1 Configuration register 1

The CFG1 register contains mode settings, most of which apply to all I<sup>2</sup>S channel pairs within one Flexcomm Interface. A few settings apply only to the primary channel pair, as noted.

Table 381. Configuration register 1 (CFG1 - offset 0xC00) bit description

Bit	Symbol	Value	Description	Reset Value
0	MAINENABLE		Main enable for I <sup>2</sup> S function in this Flexcomm Interface	0x0
		0	All I <sup>2</sup> S channel pairs in this Flexcomm Interface are disabled and the internal state machines, counters, and flags are reset. No other channel pairs can be enabled.	Ox0  Ox0  Ox0  Ox0  Ox0  Ox0
		1	This I <sup>2</sup> S channel pair is enabled. Other channel pairs in this Flexcomm Interface may be enabled in their individual PAIRENABLE bits.	
1	DATAPAUSE		Data flow Pause. Allows pausing data flow between the I <sup>2</sup> S serializer/deserializer and the FIFO. This could be done in order to change streams, or while restarting after a data underflow or overflow. When paused, FIFO operations can be done without corrupting data that is in the process of being sent or received.	0x0
			Once a data pause has been requested, the interface may need to complete sending data that was in progress before interrupting the flow of data. Software must check that the pause is actually in effect before taking action. This is done by monitoring the DATAPAUSED flag in the STAT register.	
			When DATAPAUSE is cleared, data transfer will resume at the beginning of the next frame.	
		0	Normal operation, or resuming normal operation at the next frame if the I <sup>2</sup> S has already been paused.	
		1	A pause in the data flow is being requested. It is in effect when DATAPAUSED in STAT = 1.	
3:2	PAIRCOUNT		Provides the number of I <sup>2</sup> S channel pairs in this Flexcomm Interface This is a read-only field whose value may be different in other Flexcomm Interfaces.	`
			00 = there is one I <sup>2</sup> S channel pair in this Flexcomm Interface. 01 = there are two I <sup>2</sup> S channel pairs in this Flexcomm Interface. 10 = there are three I <sup>2</sup> S channel pairs in this Flexcomm Interface. 11 = there are four I <sup>2</sup> S channel pairs in this Flexcomm Interface.	
5:4	MSTSLVCFG		Master / slave configuration selection, determining how SCK and WS are used by all channel pairs in this Flexcomm Interface.	0x0
		0x0	Normal slave mode, the default mode. SCK and WS are received from a master and used to transmit or receive data.	
		0x1	WS synchronized master. WS is received from another master and used to synchronize the generation of SCK, when divided from the Flexcomm Interface function clock.	
		0x2	Master using an existing SCK. SCK is received and used directly to generate WS, as well as transmitting or receiving data.	
		0x3	Normal master mode. SCK and WS are generated so they can be sent to one or more slave devices.	

# Chapter 25: LPC5411x I<sup>2</sup>S interface

Table 381. Configuration register 1 (CFG1 - offset 0xC00) bit description

Bit	Symbol	Value	Description	Reset Value
7:6	MODE		Selects the basic I <sup>2</sup> S operating mode. Other configurations modify this to obtain all supported cases. See <u>Section 25.8.2 "Formats and modes"</u> for examples.	0x0
		0x0	I <sup>2</sup> S mode a.k.a. "classic" mode. WS has a 50% duty cycle, with (for each enabled channel pair) one piece of left channel data occurring during the first phase, and one pieces of right channel data occurring during the second phase. In this mode, the data region begins one clock after the leading WS edge for the frame.	to detail of the control of the cont
			<b>Remark:</b> For a 50% WS duty cycle, FRAMELEN must define an even number of I2S clocks for the frame. If FRAMELEN defines an odd number of clocks per frame, the extra clock will occur on the right.	
		0x1	DSP mode where WS has a 50% duty cycle. See remark for mode 0.	
		0x2	DSP mode where WS has a one clock long pulse at the beginning of each data frame.	
		0x3	DSP mode where WS has a one data slot long pulse at the beginning of each data frame.	
8	RIGHTLOW		Right channel data is in the Low portion of FIFO data. Essentially, this swaps left and right channel data as it is transferred to or from the FIFO.	0x0
			This bit is not used if the data width is greater than 24 bits or if PDMDATA = 1. Note that if the ONECHANNEL field (bit 10 of this register) = 1, the one channel to be used is the nominally the left channel. POSITION can still place that data in the frame where right channel data is normally located.	
			<b>Remark:</b> if all enabled channel pairs have ONECHANNEL = 1, then RIGHTLOW = 1 is not allowed.	
		0	The right channel is taken from the high part of the FIFO data. For example, when data is 16 bits, FIFO bits 31:16 are used for the right channel.	
		1	The right channel is taken from the low part of the FIFO data. For example, when data is 16 bits, FIFO bits 15:0 are used for the right channel.	
9	LEFTJUST		Left Justify data.	0x0
		0	Data is transferred between the FIFO and the I <sup>2</sup> S serializer/deserializer right justified, i.e. starting from bit 0 and continuing to the position defined by DATALEN. This would correspond to right justified data in the stream on the data bus.	
		1	Data is transferred between the FIFO and the I <sup>2</sup> S serializer/deserializer left justified, i.e. starting from the MSB of the FIFO entry and continuing for the number of bits defined by DATALEN. This would correspond to left justified data in the stream on the data bus.	
10	ONECHANNEL		Single channel mode. Applies to both transmit and receive. This configuration bit applies only to the first I <sup>2</sup> S channel pair. Other channel pairs may select this mode independently in their separate CFG1 registers.	0x0
		0	I <sup>2</sup> S data for this channel pair is treated as left and right channels.	
		1	I <sup>2</sup> S data for this channel pair is treated as a single channel, functionally the left channel for this pair.	
			Remark: In mode 0 only, the right side of the frame begins at POSITION = 0x100. This is because mode 0 makes a clear distinction between the left and right sides of the frame. When ONECHANNEL = 1, the single channel of data may be placed on the right by setting POSITION to 0x100 + the data position within the right side (e.g. 0x108 would place data starting at the 8th clock after the middle of the frame). In other modes, data for the single channel of data is placed at the clock defined by POSITION.	

# Chapter 25: LPC5411x I<sup>2</sup>S interface

Table 381. Configuration register 1 (CFG1 - offset 0xC00) bit description

Bit	Symbol	Value	Description	Reset Value
11	PDMDATA		PDM Data selection. This bit controls the data source for I <sup>2</sup> S transmit, and cannot be set in Rx mode.	NA
			<b>Remark:</b> This bit only has an effect if the device the Flexcomm Interface resides in includes a DMIC subsystem. For the LPC5411x, this bit applies only to Flexcomm Interface 7.	OxO  OxO  NA  NA
		0	Normal operation, data is transferred to or from the Flexcomm Interface FIFO.	
		1	The data source is the DMIC subsystem.	Value t NA  Ox0  Ox0  NA d Ox0
			When PDMDATA = 1, only the primary channel pair can be used in this Flexcomm Interface. If ONECHANNEL = 1, only the PDM left data is used.	
			<b>Remark:</b> the WS rate must match the Fs (sample rate) of the DMIC decimator. A rate mismatch will at some point cause the I <sup>2</sup> S to overrun or underrun.	
12	SCK_POL		SCK polarity.	0x0
		0	Data is launched on SCK falling edges and sampled on SCK rising edges (standard for I <sup>2</sup> S).	
		1	Data is launched on SCK rising edges and sampled on SCK falling edges.	
13	WS_POL		WS polarity.	0x0
		0	Data frames begin at a falling edge of WS (standard for classic I <sup>2</sup> S).	
		1	WS is inverted, resulting in a data frame beginning at a rising edge of WS (standard for most "non-classic" variations of I <sup>2</sup> S).	
15:14	-		Reserved. Read value is undefined, only zero should be written.	NA
20:16	DATALEN		Data Length, minus 1 encoded, defines the number of data bits to be transmitted or received for all I <sup>2</sup> S channel pairs in this Flexcomm Interface. Note that data is only driven to or received from SDA for the number of bits defined by DATALEN.	0x0
			DATALEN is also used in these ways by the I <sup>2</sup> S:	m A OxO OxO NA OxO s J.
			Determines the size of data transfers between the FIFO and the I <sup>2</sup> S serializer/deserializer. See Section 25.8.4 "FIFO buffer configurations and usage"	
			2. In mode 1, 2, and 3, determines the location of right data following left data in the frame.	
			3. In mode 3 (where WS has a one data slot long pulse at the beginning of each data frame) determines the duration of the WS pulse.	
			Values: 0x00 to 0x02 = not supported 0x03 = data is 4 bits in length 0x04 = data is 5 bits in length	
			0x1F = data is 32 bits in length	
31:21	-		Reserved. Read value is undefined, only zero should be written.	NA

385 of 590

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7.2 Configuration register 2

The CFG2 register contains bits that control various aspects of data configuration.

Table 382. Configuration register 2 (CFG2 - offset 0xC04) bit description

Bit	Symbol	Description	Reset Value
8:0	FRAMELEN	Frame Length, minus 1 encoded, defines the number of clocks and data bits in the frames that this channel pair participates in. See Section 25.8.2.1 "Frame format".	0x0
		0x000 to 0x002 = not supported 0x003 = frame is 4 bits in total length 0x004 = frame is 5 bits in total length 	
		0x1FF = frame is 512 bits in total length	
		<b>Remark:</b> if FRAMELEN is an defines an odd length frame (e.g. 33 clocks) in mode 0 or 1, the extra clock appears in the right half.	
		<b>Remark:</b> When MODE = 3, FRAMELEN must be larger than DATALEN in order for the WS pulse to be generated correctly.	
15:9	-	Reserved. Read value is undefined, only zero should be written.	NA
24:16	POSITION	Data Position. Defines the location within the frame of the data for this channel pair. POSITION + DATALEN must be less than FRAMELEN. See Section 25.8.2.1 "Frame format".	0x0
		<b>Remark:</b> When MODE = 0, POSITION defines the location of data in both the left phase and right phase, starting one clock after the WS edge. In other modes, POSITION defines the location of data within the entire frame. ONECHANNEL = 1 while MODE = 0 is a special case, see the description of ONECHANNEL.	
		<b>Remark:</b> The combination of DATALEN and the POSITION fields of all channel pairs must be made such that the channels do not overlap within the frame.	
		0x000 = data begins at bit position 0 (the first bit position) within the frame or WS phase. 0x001 = data begins at bit position 1 within the frame or WS phase. 0x002 = data begins at bit position 2 within the frame or WS phase.	
31:25	-	Reserved. Read value is undefined, only zero should be written.	NA

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7.3 Status register

The STAT register provides status flags for the I<sup>2</sup>S function, and does not include FIFO status. Note that the FIFO status register supplies peripheral interrupt notification and would be the status register normally observed first for an interrupt service. Some information in this register is read-only, some flags can be cleared by writing a 1 to them, details can be found in Table 383.

Table 383. Status register (STAT - offset 0xC08) bit description

Bit	Symbol	Value	Description	Reset value	Туре
0	BUSY		Busy status for the primary channel pair. Other BUSY flags may be found in the STAT register for each channel pair.	0x0	RO
		0	The transmitter/receiver for channel pair is currently idle.	in 0x0 F  ox 0x0 V  ox NA F  ox 0x0 F  ox 0x0 F  ox 0x0 F  ox 0x0 F	
		1	The transmitter/receiver for channel pair is currently processing data.		
1	SLVFRMERR		Slave Frame Error flag. This applies when at least one channel pair is operating as a slave. An error indicates that the incoming WS signal did not transition as expected due to a mismatch between FRAMELEN and the actual incoming I <sup>2</sup> S stream.	0x0	W1C
		0	No error has been recorded.		
		1	An error has been recorded for some channel pair that is operating in slave mode. ERROR is cleared by writing a 1 to this bit position.		
2	LR		Left/Right indication. This flag is considered to be a debugging aid and is not expected to be used by an I <sup>2</sup> S driver.	NA	RO
			Valid when one channel pair is busy. Indicates left or right data being processed for the currently busy channel pair.	not NA R	
		0	Left channel.		
		1	Right channel.		
3	DATA		Data Paused status flag. Applies to all I <sup>2</sup> S channels	0x0	RO
	PAUSED	0	Data is not currently paused. A data pause may have been requested but is not yet in force, waiting for an allowed pause point. Refer to the description of the DATAPAUSE control bit in the CFG1 register.		
		1	A data pause has been requested and is now in force.		
31:4	-		Reserved. Read value is undefined, only zero should be written.	NA	

# 25.7.4 Clock Divider register

The DIV register controls how the Flexcomm Interface function clock is used. See Section 25.8.3 "Data rates" for more details.

**Remark:** DIV must be set to 0 if SCK is used as an input clock for the I2S function, which is the case when the MSTSLVCFG field in the CFG1 register = 0 or 2.

### Chapter 25: LPC5411x I<sup>2</sup>S interface

Table 384. Clock Divider register (DIV - offset 0xC1C) bit description

Bit	Symbol	Description	Reset Value
11:0	DIV	This field controls how this I <sup>2</sup> S block uses the Flexcomm Interface function clock.	0x0
		0x000 = The Flexcomm Interface function clock is used directly. 0x001 = The Flexcomm Interface function clock is divided by 2. 0x002 = The Flexcomm Interface function clock is divided by 3 0xFFF = The Flexcomm Interface function clock is divided by 4,096.	
31:12	-	Reserved. Read value is undefined, only zero should be written.	NA

# 25.7.5 FIFO Configuration register

This register configures FIFO usage. A peripheral must be selected within the Flexcomm Interface prior to configuring the FIFO.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only TX related or RX related flags and controls are meaningful at any particular time. Also note that the FIFO for the selected I<sup>2</sup>S data direction **must** be enabled because the FIFO is the only means for accessing I<sup>2</sup>S data.

Table 385. FIFO Configuration register (FIFOCFG - offset 0xE00) bit description

Bit	Symbol	Value	Description	Reset Value	Access
0	ENABLETX		Enable the transmit FIFO.	0x0	R/W
		0	The transmit FIFO is not enabled.		R/W
		1	The transmit FIFO is enabled.		
1	ENABLERX		Enable the receive FIFO.	0x0	R/W
		0	The receive FIFO is not enabled.		
		1	The receive FIFO is enabled.		
2	TXI2SE0		Transmit I <sup>2</sup> S empty 0.Determines the value sent by the I <sup>2</sup> S in transmit mode if the TX FIFO becomes empty. This value is sent repeatedly until the I <sup>2</sup> S is paused, the error is cleared, new data is provided, and the I <sup>2</sup> S is un-paused.	0x0	R/W
		0	If the TX FIFO becomes empty, the last value is sent. This setting may be used when the data length is 24 bits or less, or when MONO = 1 for this channel pair.		
		1	If the TX FIFO becomes empty, 0 is sent. Use if the data length is greater than 24 bits or if zero fill is preferred.		
3	PACK48		Packing format for 48-bit data. This relates to how data is entered into or taken from the FIFO by software or DMA.	0x0	R/W
		0	48-bit I <sup>2</sup> S FIFO entries are handled as all 24-bit values.		
		1	48-bit I <sup>2</sup> S FIFO entries are handled as alternating 32-bit and 16-bit values.		
5:4	SIZE		FIFO size configuration. This is a read-only field.	NA	RO
			$0x0$ , $0x1$ = not applicable to $I^2S$ . $0x2$ = FIFO is configured as 8 entries of 32 bits, each corresponding to 2 16-bit data values for left and right channels. This setting occurs when the $I^2S$ DATALEN is less than 16 bits, or from 25 to 32 bits. $0x3$ = FIFO is configured as 8 entries of 48 bits, each corresponding to either 2 16-bit data values for left and right channels. This setting occurs when the $I^2S$ DATALEN is from 17 to 24 bits.		

# Chapter 25: LPC5411x I<sup>2</sup>S interface

Table 385. FIFO Configuration register (FIFOCFG - offset 0xE00) bit description

Bit	Symbol	Value	Description	Reset Value	Access
11:6	-		Reserved. Read value is undefined, only zero should be written.	NA	NA
12	DMATX		DMA configuration for transmit.	0x0	R/W
		0	DMA is not used for the transmit function.		
		1	Generate a DMA request for the transmit function if the FIFO is not full. Generally, data interrupts would be disabled if DMA is enabled.		
13	DMARX		DMA configuration for receive.	0x0	R/W
		0	DMA is not used for the receive function.		
		1	Generate a DMA request for the receive function if the FIFO is not empty. Generally, data interrupts would be disabled if DMA is enabled.		
14	WAKETX		Wake-up for transmit FIFO level. This allows the device to be woken from reduced power modes (up to deep-sleep, as long as the peripheral function works in that power mode) without enabling the TXLVL interrupt. Only DMA wakes up, processes data, and goes back to sleep. The CPU will remain stopped until woken by another cause, such as DMA completion. See Section 4.5.64 "Hardware Wake-up control register".	0x0	R/W
		0	Only enabled interrupts will wake up the device form reduced power modes.		
		1	A device wake-up for DMA will occur if the transmit FIFO level reaches the value specified by TXLVL in FIFOTRIG, even when the TXLVL interrupt is not enabled.		
15	WAKERX		Wake-up for receive FIFO level. This allows the device to be woken from reduced power modes (up to deep-sleep, as long as the peripheral function works in that power mode) without enabling the TXLVL interrupt. Only DMA wakes up, processes data, and goes back to sleep. The CPU will remain stopped until woken by another cause, such as DMA completion. See Section 4.5.64 "Hardware Wake-up control register".	0x0	R/W
		0	Only enabled interrupts will wake up the device form reduced power modes.	-	
		1	A device wake-up for DMA will occur if the receive FIFO level reaches the value specified by RXLVL in FIFOTRIG, even when the RXLVL interrupt is not enabled.		
16	EMPTYTX		Empty command for the transmit FIFO. When a 1 is written to this bit, the TX FIFO is emptied.	NA	WO
17	EMPTYRX		Empty command for the receive FIFO. When a 1 is written to this bit, the RX FIFO is emptied.	NA	WO
31:18	-		Reserved. Read value is undefined, only zero should be written.	NA	NA

389 of 590

# Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7.6 FIFO status register

This register provides status information for the FIFO and also indicates an interrupt from the peripheral function.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only TX related or RX related flags and controls are meaningful at any particular time.

Table 386. FIFO status register (FIFOSTAT - offset 0xE04) bit description

Bit	Symbol	Description	Reset Value	Access
0	TXERR	TX FIFO error. Will be set if a transmit FIFO error occurs. This could be an overflow caused by pushing data into a full FIFO, or by an underflow if the FIFO is empty when data is needed. Cleared by writing a 1 to this bit.	0x0	R/W1C
1	RXERR	RX FIFO error. Will be set if a receive FIFO overflow occurs, caused by software or DMA not emptying the FIFO fast enough. Cleared by writing a 1 to this bit.	0x0	R/W1C
2	-	Reserved. Read value is undefined, only zero should be written.	NA	
3	PERINT	Peripheral interrupt. When 1, this indicates that the peripheral function has asserted an interrupt. The details can be found by reading the peripheral's STAT register.	0x0	RO
4	TXEMPTY	Transmit FIFO empty. When 1, the transmit FIFO is empty. The peripheral may still be processing the last piece of data.	0x1	RO
5	TXNOTFULL	Transmit FIFO not full. When 1, the transmit FIFO is not full, so more data can be written. When 0, the transmit FIFO is full and another write would cause it to overflow.	0x1	RO
6	RXNOTEMPTY	Receive FIFO not empty. When 1, the receive FIFO is not empty, so data can be read. When 0, the receive FIFO is empty.	0x0	RO
7	RXFULL	Receive FIFO full. When 1, the receive FIFO is full. Data needs to be read out to prevent the peripheral from causing an overflow.	0x0	RO
12:8	TXLVL	Transmit FIFO current level. A 0 means the TX FIFO is currently empty, and the TXEMPTY and TXNOTFULL flags will be 1. Other values tell how much data is actually in the TX FIFO at the point where the read occurs. If the TX FIFO is full, the TXEMPTY and TXNOTFULL flags will be 0.	0x0	RO
15:13	-	Reserved. Read value is undefined, only zero should be written.	NA	
20:16	RXLVL	Receive FIFO current level. A 0 means the RX FIFO is currently empty, and the RXFULL and RXNOTEMPTY flags will be 0. Other values tell how much data is actually in the RX FIFO at the point where the read occurs. If the RX FIFO is full, the RXFULL and RXNOTEMPTY flags will be 1.	0x0	RO
31:21	-	Reserved. Read value is undefined, only zero should be written.	NA	-

# Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7.7 FIFO trigger settings register

This register allows selecting when FIFO-level related interrupts occur.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only TX related or RX related flags and controls are meaningful at any particular time

Table 387. FIFO trigger settings register (FIFOTRIG - offset 0xE08) bit description

Bit	Symbol	Value	Description	Reset Value
0	TXLVLENA		Transmit FIFO level trigger enable. The FIFO level trigger will cause an interrupt if enabled in FIFOINTENSET. This field is not used for DMA requests (see DMATX in FIFOCFG).	0x0
		0	Transmit FIFO level does not generate a FIFO level trigger.	
		1	An interrupt will be generated if the transmit FIFO level reaches the value specified by the TXLVL field in this register.	
1	RXLVLENA		Receive FIFO level trigger enable. This trigger will become an interrupt if enabled in FIFOINTENSET. This field is not used for DMA requests (see DMARX in FIFOCFG).	0x0
		0	Receive FIFO level does not generate a FIFO level trigger.	
		1	An interrupt will be generated if the receive FIFO level reaches the value specified by the RXLVL field in this register.	
7:2	-		Reserved. Read value is undefined, only zero should be written.	NA
11:8	TXLVL		Transmit FIFO level trigger point. This field is used only when TXLVLENA = 1. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See Section 4.5.64 "Hardware Wake-up control register".	0x0
			<ul> <li>0 = generate an interrupt when the TX FIFO becomes empty.</li> <li>1 = generate an interrupt when the TX FIFO level decreases to one entry.</li> </ul>	
			7 = generate an interrupt when the TX FIFO level decreases to 7 entries (is no longer full).	
15:12	-		Reserved. Read value is undefined, only zero should be written.	NA
19:16	RXLVL		Receive FIFO level trigger point. The RX FIFO level is checked when a new piece of data is received. This field is used only when RXLVLENA = 1. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See Section 4.5.64 "Hardware Wake-up control register".	0x0
			0 = generate an interrupt when the RX FIFO has one entry (is no longer empty). 1 = generate an interrupt when the RX FIFO has two entries.	
			7 = generate an interrupt when the RX FIFO increases to 8 entries (has become full).	
31:20	-		Reserved. Read value is undefined, only zero should be written.	NA

391 of 590

Chapter 25: LPC5411x I<sup>2</sup>S interface

### 25.7.8 FIFO interrupt enable set and read

This register is used to enable various interrupt sources. The complete set of interrupt enables may be read from this register. Writing ones to implemented bits in this register causes those bits to be set. The FIFOINTENCLR register is used to clear bits in this register.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only TX related or RX related flags and controls are meaningful at any particular time

Table 388. FIFO interrupt enable set and read register (FIFOINTENSET - offset 0xE10) bit description

Bit	Symbol	Value	Description	Reset Value
0	TXERR		Determines whether an interrupt occurs when a transmit error occurs, based on the TXERR flag in the FIFOSTAT register.	0x0
		0	No interrupt will be generated for a transmit error.	
		1	An interrupt will be generated when a transmit error occurs.	
1	RXERR		Determines whether an interrupt occurs when a receive error occurs, based on the RXERR flag in the FIFOSTAT register.	0x0
		0	No interrupt will be generated for a receive error.	
		1	An interrupt will be generated when a receive error occurs.	
2	TXLVL		Determines whether an interrupt occurs when a the transmit FIFO reaches the level specified by the TXLVL field in the FIFOTRIG register.	0x0
		0	No interrupt will be generated based on the TX FIFO level.	
		1	If TXLVLENA in the FIFOTRIG register = 1, an interrupt will be generated when the TX FIFO level decreases to the level specified by TXLVL in the FIFOTRIG register.	
3	RXLVL		Determines whether an interrupt occurs when a the receive FIFO reaches the level specified by the TXLVL field in the FIFOTRIG register.	0x0
		0	No interrupt will be generated based on the RX FIFO level.	
		1	If RXLVLENA in the FIFOTRIG register = 1, an interrupt will be generated when the when the RX FIFO level increases to the level specified by RXLVL in the FIFOTRIG register.	
31:4	-		Reserved. Read value is undefined, only zero should be written.	NA

### 25.7.9 FIFO interrupt enable clear and read

The FIFOINTENCLR register is used to clear interrupt enable bits in FIFOINTENSET. The complete set of interrupt enables may also be read from this register as well as FIFOINTENSET.

Table 389. FIFO interrupt enable clear and read (FIFOINTENCLR - offset 0xE14) bit description

Bit	Symbol	Description	Reset value
0	TXERR	Writing a one to this bit disables the TXERR interrupt.	0x0
1	RXERR	Writing a one to this bit disables the RXERR interrupt.	0x0
2	TXLVL	Writing a one to this bit disables the interrupt caused by the transmit FIFO reaching the level specified by the TXLVL field in the FIFOTRIG register.	0x0
3	RXLVL	Writing a one to this bit disables the interrupt caused by the receive FIFO reaching the level specified by the RXLVL field in the FIFOTRIG register.	0x0
31:4	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 25: LPC5411x I<sup>2</sup>S interface

### 25.7.10 FIFO interrupt status register

The read-only FIFOINTSTAT register provides a view of those interrupt flags that are both pending and currently enabled. This can simplify software handling of interrupts. Refer to the descriptions of interrupts in Section 25.7.6 and Section 25.7.7 for details.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only TX related or RX related flags and controls are meaningful at any particular time.

Table 390. FIFO interrupt status register (FIFOINTSTAT - offset 0xE18) bit description

Bit	Symbol	Description	Reset Value
0	TXERR	TX FIFO error.	0x0
1	RXERR	RX FIFO error.	0x0
2	TXLVL	Transmit FIFO level interrupt.	0x0
3	RXLVL	Receive FIFO level interrupt.	0x0
4	PERINT	Peripheral interrupt.	0x0
31:5	-	Reserved. Read value is undefined, only zero should be written.	NA

### 25.7.11 FIFO write data register

The FIFOWR register is used to write values to be transmitted to the FIFO. Details of how FIFOWR and FIFOWR48H are used can be found in <u>Section 25.8.4 "FIFO buffer configurations and usage"</u>.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only FIFO read or write is meaningful at any particular time.

Table 391. FIFO write data register (FIFOWR - offset 0xE20) bit description

Bit	Symbol	Description	Reset Value
31:0	TXDATA	Transmit data to the FIFO. The number of bits used depends on configuration details.	NA

### 25.7.12 FIFO write data for upper data bits

The FIFOWR48H register is used under certain conditions to write values to the FIFO. Details of how FIFOWR and FIFOWR48H are used can be found in <u>Section 25.8.4 "FIFO buffer configurations and usage"</u>.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only FIFO read or write is meaningful at any particular time.

Table 392. FIFO write data for upper data bits (FIFOWR48H - offset 0xE24) bit description

Bit	Symbol	Description	Reset Value
23:0	TXDATA	Transmit data to the FIFO. Whether this register is used and the number of bits used depends on configuration details.	NA
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

Chapter 25: LPC5411x I<sup>2</sup>S interface

### 25.7.13 FIFO read data register

The FIFORD register is used to read values that have been received by the FIFO. Details of how FIFORD and FIFORD48H are used can be found in <u>Section 25.8.4 "FIFO buffer configurations and usage"</u>.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only FIFO read or write is meaningful at any particular time.

Table 393. FIFO read data register (FIFORD - offset 0xE30) bit description

Bit	Symbol	Description	Reset Value
31:0	RXDATA	Received data from the FIFO. The number of bits used depends on configuration details.	NA

# 25.7.14 FIFO read data for upper data bits

The FIFORD48H register is used under certain conditions to read values from the FIFO. Details of how FIFORD and FIFORD48H are used can be found in <u>Section 25.8.4 "FIFO buffer configurations and usage"</u>.

**Remark:** Since all I<sup>2</sup>S channels in a single Flexcomm Interface move data in the same direction, only FIFO read or write is meaningful at any particular time.

Table 394. FIFO read data for upper data bits (FIFORD48H - offset 0xE34) bit description

Bit	Symbol	Description	Reset Value
23:0		Received data from the FIFO. Whether this register is used and the number of bits used depends on configuration details.	NA
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

# 25.7.15 FIFO data read with no FIFO pop

This register acts in exactly the same way as FIFORD, except that it supplies data from the top of the FIFO without popping the FIFO (i.e. leaving the FIFO state unchanged). This could be used to allow system software to observe incoming data without interfering with the peripheral driver.

Table 395. FIFO data read with no FIFO pop (FIFORDNOPOP - offset 0xE40) bit description

Bit	Symbol	Description	Reset Value
31:0	RXDATA	Received data from the FIFO.	NA

### 25.7.16 FIFO data read for upper data bits with no FIFO pop

This register acts in exactly the same way as FIFORD48H, except that it supplies data from the top of the FIFO without popping the FIFO (i.e. leaving the FIFO state unchanged). This could be used to allow system software to observe incoming data without interfering with the peripheral driver.

Table 396. FIFO data read for upper data bits with no FIFO pop (FIFORD48HNOPOP - offset 0xE44) bit description

Bit	Symbol	Description	Reset Value
23:0	RXDATA	Received data from the FIFO.	NA
31:24	-	Reserved. Read value is undefined, only zero should be written.	NA

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.7.17 Module identification register

The ID register identifies the type and revision of the module. A generic SW driver can make use of this information register to implement module type or revision specific behavior.

Table 397. Module identification register (ID - offset 0xFFC) bit description

Bit	Symbol	Description	Reset value
7:0	APERTURE	Aperture: encoded as (aperture size/4K) -1, so 0x00 means a 4K aperture.	0x0
11:8	MINOR_REV	Minor revision of module implementation, starting at 0. Software compatibility is expected between minor revisions.	-
15:12	MAJOR_REV	Major revision of module implementation, starting at 0. There may not be software compatibility between major revisions.	-
31:16	ID	Unique module identifier for this IP block.	0xE090

Chapter 25: LPC5411x I<sup>2</sup>S interface

# 25.8 Functional description

#### 25.8.1 AHB bus access

The bus interface to the I<sup>2</sup>S registers contained in the Flexcomm Interface support only word writes. Byte and halfword writes are not supported in conjunction with the I<sup>2</sup>S function.

#### 25.8.2 Formats and modes

The format of data frames and WS is determined by several fields in the CFG1 and CFG2 registers, described in Sections <u>25.7.1</u> and <u>25.7.2</u> respectively. CFG1 and CFG2 together control the formatting of the data and the format of the frame in which the data is contained.

#### 25.8.2.1 Frame format

The overall frame format is defined by fields in the CFG1 and CFG2 registers. The frame includes data related to the primary channel pair and any other channel pairs implemented by this I<sup>2</sup>S. These fields plus the position of data for each channel pair, as determined by the POSITION field in CFG2, define the main features of the frame.

- MODE: 2-bit field in CFG1 that defines the overall character of the frame.
- FRAMELEN: 9-bit field in CFG2, defines the length of the data frame this I<sup>2</sup>S participates in. This field is Minus 1 encoded: the value 63 means 64 clocks and bit positions in each frame.
- DATALEN: 5-bit field in CFG1, defines the number of data bits that are used by the transmitter or receiver. This field is minus 1 encoded: the value 15 means 16 data bits.
   For each channel pair, data is only driven to or received from SDA for the number of bits defined by DATALEN.


DATALEN is also used in these ways:


- 1) Determines the size of data transfers between the FIFO and the I<sup>2</sup>S serializer/deserializer.
- 2) When MODE = 0x1, 0x2, or 0x3 (i.e. not 0x0), determines the position of Right data following Left data within the frame.
- 3) When MODE = 0x3, determines the duration of the WS pulse.


## Chapter 25: LPC5411x I<sup>2</sup>S interface


## 25.8.2.2 Example frame configurations

A sampling of frame slot formats are shown in the following figures. This is not an exhaustive set of possibilities, but shows the various frame formatting concepts. Note that slot identifications are illustrative only, data positions are flexible and there are no predefined slots for the hardware.

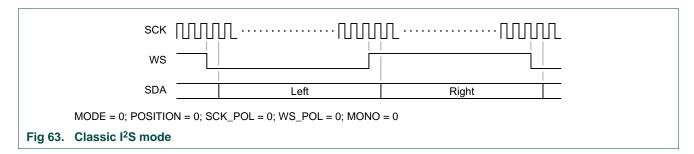


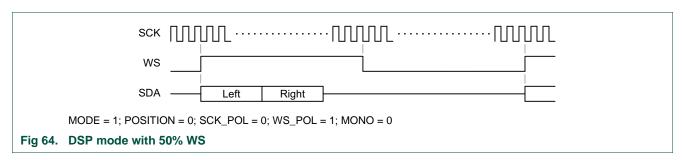


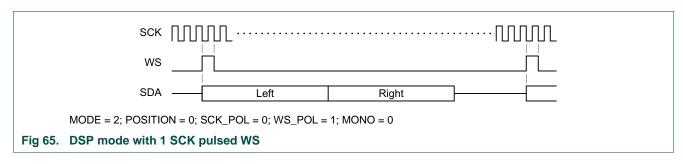


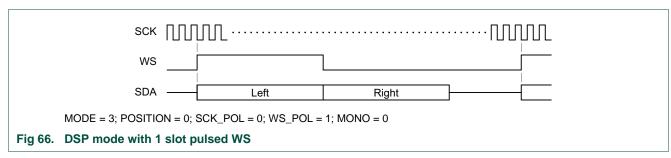


# Chapter 25: LPC5411x I<sup>2</sup>S interface

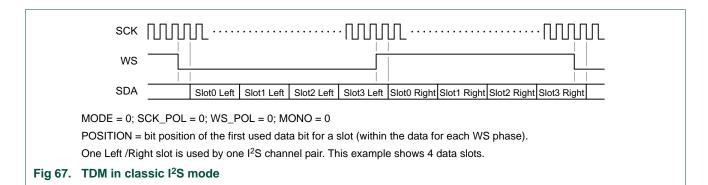

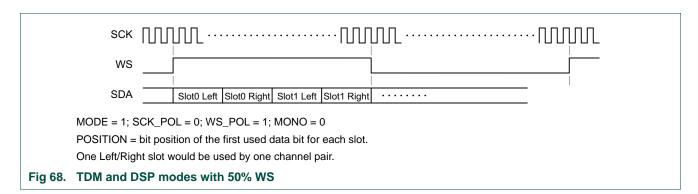


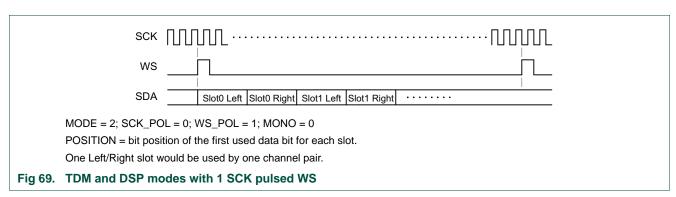

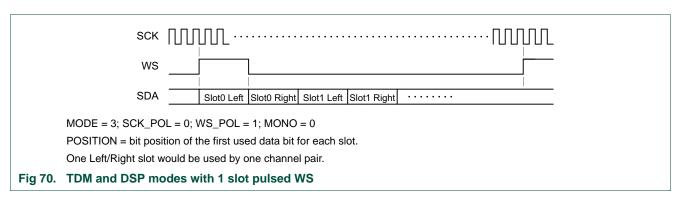

398 of 590


# Chapter 25: LPC5411x I<sup>2</sup>S interface

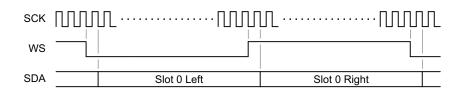

MODE = 0;  $SCK_POL = 0$ ;  $WS_POL = 0$ ; MONO = 1.

POSITION = bit position of the first used data bit for slot 0 Left, bit position within the second half + 0x100 for Slot 0 Right. One slot would be used by one  $I^2S$ .

Fig 71. I2S mode, mono

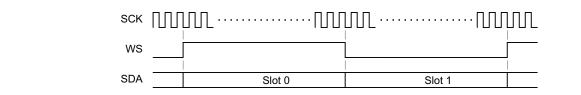


MODE = 1; SCK\_POL = 0; WS\_POL = 1; MONO = 1

POSITION = bit position of the first used data bit for each slot.

One slot would be used by one I2S.

Fig 72. DSP mode, mono

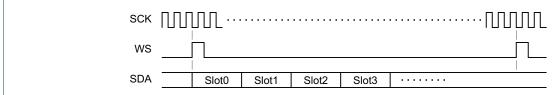

MODE = 2; SCK\_POL = 0; WS\_POL = 1; MONO = 1.

POSITION = bit position of the first used data bit for each slot.


One slot would be used by one  $I^2S$ .

Fig 73. TDM and DSP modes, mono, with WS pulsed for one SCK time

Chapter 25: LPC5411x I<sup>2</sup>S interface

## 25.8.2.3 I<sup>2</sup>S signal polarities

<u>Figure 74</u> shows examples of SCK and WS polarities and how they relate to data positions.

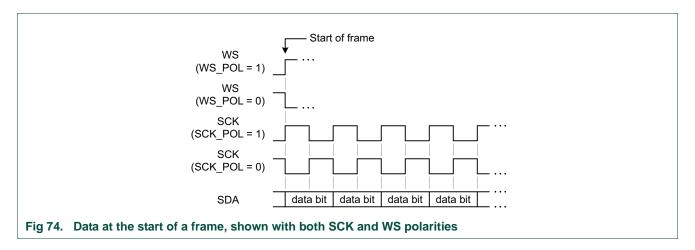

#### 25.8.3 Data rates

## **25.8.3.1** Rate support

The actual I<sup>2</sup>S clock rates, sample rates, etc. that can be supported depend on the clocking that is available to run the interface. As a slave, the interface will be receiving SCK from a master. In that case, there is an upper limit to how fast the interface can operate (this will be specified in the interface AC characteristics in a specific device data sheet) and a limit to how much data and be transferred across clock domains and handled by the CPU.

In general, the I<sup>2</sup>S can support:

- Standard sample rates such as 16, 22.05, 32, 44.1, 48, and 96 kHz, and others.
- External MCLK inputs up to approximately 25 MHz (256 fs of a 96 kHz sample rate) and more. Refer to a specific device data sheet for details.

#### 25.8.3.2 Rate calculations

For operation as a master, the frequency need as the clock input of the I<sup>2</sup>S is generally an integer multiple of:

Frame/sample rate \* number of bits/clocks in a data frame

If this is a multiple of the desired frequency, the I<sup>2</sup>S function divider can be used to produce the desired frequency.

## **Example 1**

This I<sup>2</sup>S channel pair is being used to transfer stereo audio data with 32 bit data slots and a 96 kHz sample rate.

Setup: the sample rate is 96 kHz, the frame is configured for two 32-bit data slots (32-bit stereo). The function clock divider output rate would be 96,000 \* (2 \* 32) = 6.144 MHz.

UM10914

#### Chapter 25: LPC5411x I<sup>2</sup>S interface

The value of DIV would be (function clock divider input frequency / the required divider output frequency) - 1. If the divider input is 24.576 MHz (256 fs of the 96 kHz sample rate), the divider needs to divide by 4 (DIV = 3) to obtain the target divider output rate of 6.144 MHz.

#### Example 2

This I<sup>2</sup>S channel pair is being used to supply one 16-bit data slot in a 4 slot frame with a frame rate of 50 kHz.

Setup: the sample rate is 50 kHz, the frame is configured four 16-bit data slots, The function clock divider output rate would be 50,000 \* (4 \* 16) = 3.2 MHz.

The value of DIV would be (function clock divider input frequency / the required divider output frequency) - 1. If the divider input is 16 MHz, the divider needs to divide by 5 (DIV = 4) to obtain the target divider output rate of 3.2 MHz.

## 25.8.4 FIFO buffer configurations and usage

The Flexcomm Interface supports several possibilities of data packing/unpacking depending on the size of data being handled.

Some details of FIFO usage are determined by the value of the I<sup>2</sup>S DATALEN field in the CFG1 register, and some other configuration bits as follows:

- If DATALEN specifies a number of data bits from 4 to 16:
  - The FIFO will be configured as 32 bits wide and 8 entries deep.
  - Each data transfer between the bus and the FIFO will be a pair of left and right values, which fit into a 32-bit word. The order of left and right data is selectable via the RIGHTLOW configuration bit.
  - If a channel pair is configured with ONECHANNEL = 1, then only one value is transferred, nominally the left.
- If DATALEN specifies a number of data bits from 17 to 24:
  - The FIFO will be configured as 48 bits wide and 8 entries deep.
  - Data transfer between the bus and the FIFO depends the PACK48 configuration bit and whether or not DMA is enabled. When DMA is enabled, all transfers are done with FIFOWR or FIFORD. When DMA is not enabled, transfers will alternate between FIFOWR or FIFORD and FIFOWR48H or FIFORD48H, depending on the data direction selected for the I<sup>2</sup>S function. In all cases, the 2 transfers will constitute a pair of left and right values. The order of left and right data is selectable via the RIGHTLOW configuration bit.
  - If PACK48 = 0, each of the two transfers both define 17 to 24 bits of data. If PACK48 = 1, the first transfer provides 32 bits of data, the second provides the remainder need to complete the paired data as defined.
  - If a channel pair is configured with ONECHANNEL = 1, then only the left value is transferred using the FIFOWR or FIFORD register.
- If DATALEN specifies a number of data bits from 25 to 32:
  - The FIFO will be configured as 32 bits wide and 8 entries deep.
  - Each data transfer between the bus and the FIFO will be a single value, starting with left, then right.

UM10914

## Chapter 25: LPC5411x I<sup>2</sup>S interface

 If a channel pair is configured with ONECHANNEL = 1, then only one value is transferred.

#### 25.8.5 DMA

The Flexcomm Interface can generate DMA requests based on FIFO levels. Data transfers for any channel can be handled by DMA once the I<sup>2</sup>S clocking and has been configured, that channel has been configured, DMA has been configured, and the I<sup>2</sup>S bus is running. DMA operation is similar to any other serial peripheral.

DMA related configurations in the Flexcomm Interface I<sup>2</sup>S may be found in the FIFOCFG register (<u>Section 25.7.5</u>) bits DMATX, DMARX, WAKETX, WAKERX, and PACK48, and in the FIFOTRIG register (<u>Section 25.7.7</u>) bits TXLVLENA, RXLVLENA, and fields TXLVL and RXLVL.

# 25.8.6 Clocking and power considerations

The master function of the I<sup>2</sup>S requires the Flexcomm Interface function clock to be running in order to operate. The slave function can operate using external clocks, and can wake up the CPU when data is needed or available.

# **UM10914**

# Chapter 26: LPC5411x DMIC subsystem

Rev. 1.2 — 30 June 2016

**User manual** 

# 26.1 How to read this chapter

The DMIC subsystem, including the dual-channel digital PDM microphone interface (DMIC) and hardware voice activity detector (HWVAD), is available on all LPC5411x parts.

## 26.2 Features

- DMIC (dual/stereo digital microphone interface)
  - PDM (Pulse-Density Modulation) data input for left and/or right channels on 1 or 2 buses.
  - Flexible decimation.
  - 16 entry FIFO for each channel.
  - DC blocking or unaltered DC bias can be selected.
  - Data can be transferred using DMA from deep-sleep mode without waking up the CPU, then automatically returning to deep-sleep mode.
  - Data can be streamed directly to I2S on Flexcomm Interface 7.
- HWVAD (Hardware-based voice activity detector):
  - Optimized for PCM signals with 16 kHz sampling frequency.
  - Configurable detection levels.
  - Noise envelope estimator register output for further software analysis.

# 26.3 Basic configuration

The DMIC is configured as follows:

- Clock:
  - Enable the clock source that will be used, if it is not already running (most oscillators may be turned off when not needed in order to save power).
  - Select the clock source that will be used in the DMICCLKSEL register. See Section 4.5.31.
  - Set up the clock divider (DMICCLKDIV) that follows the clock source selection mux to obtain the desired clock rate. See Section 4.5.39.
  - Enable clock to the peripheral in the AHBCLKCTRL1 register. See Section 4.5.17.
- Reset: The peripheral may be specifically reset using the PRESETCTRL1 register, but must be removed from the reset state before continuing. See <u>Section 4.5.17</u>.
- Pins: Configure pins that will be used for this peripheral in the IOCON register block.
   See Chapter 7.
- Interrupts: If interrupts will be used with this peripheral, enable them in the NVIC. See Chapter 3.
- Wake-up: Enable interrupts for waking up from deep-sleep mode, enable the interrupts in the STARTER0 register.

UM10914

#### Chapter 26: LPC5411x DMIC subsystem

- PDM internal setup:
  - Enable DMIC PDM channels via the EN\_CH0/1 bits in the CHANEN register. See Section 26.6.1.
  - Set up the internal clock dividers for the PDM channels used via the DIVHFCLK0/1 registers. See <u>Section 26.6.2</u>.
  - If interrupts will be used with this peripheral, enable them in the NVIC. See Chapter 3.
  - If DMA will be used with the PDM data flow, the related channels of the DMA controller must be set up. See <a href="Chapter 12">Chapter 12</a>. DMA must also be enabled via the DMAEN bit in the FIFOCTRL register. See <a href="Section 26.6.6">Section 26.6.6</a>.
  - Set up other functional configurations and controls for this peripheral as needed.
- HWVAD internal setup:
  - The HWVAD is active when the DMIC interface is active.
  - Reset the filters with a '1' pulse of bit RSTT in register HWVADRSTT.
  - Wait for a few milliseconds to let the filter converge.
  - Enable the HWVAD interrupt with the appropriate NVIC bit. See Chapter 3.
  - Start the HWVAD process by toggling bit ST10 in register HWVADST10 from '0' to '1' and back. This also clears the interrupt flag inside the HWVAD block.
  - In the HWVAD interrupt service routine take appropriate action.
  - Restart the HWVAD with step 6. A precedent reset of the filters in step 3 is optional.

#### Chapter 26: LPC5411x DMIC subsystem

# 26.4 Pin description

Table 398 gives a brief summary of each of the PDM pins used by the DMIC subsystem.

Table 398. DMIC subsystem PDM pin description


Pin	Туре	Description
PDM0_CLK	0	Clock output to digital microphone on PDM interface 0.
PDM0_DATA	I	Data input from digital microphone on PDM interface 0.
PDM1_CLK	0	Clock output to digital microphone on PDM interface 1.
PDM1_DATA	I	Data input from digital microphone on PDM interface 1. Also PDM clock input in bypass mode.
I <sup>2</sup> S related pins on Flexcomm Interface 7	I/O	Used as configured for Flexcomm Interface 7 when configured as an I <sup>2</sup> S transmitter, and when this function is selected by Flexcomm Interface 7.

Recommended IOCON settings are shown in <u>Table 399</u>. See <u>Chapter 7</u> for definitions of pin types.

Table 399: Suggested PDM pin settings for the audio input


IOCON bit(s)	Type D pin	Type A pin
10	OD: Set to 0.	Same as type D.
9	SLEW: Generally set to 0.	Not used, set to 0
8	FILTEROFF: Generally set to 1.	Same as type D.
7	DIGIMODE: Set to 1.	Same as type D.
6	INVERT: Set to 0.	Same as type D.
5	Not used, set to 0.	Same as type D.
4:3	MODE: Set to 0 (pull-down/pull-up resistor not enabled). Could be another setting if the input might sometimes be floating (causing leakage within the pin input).	Same as type D.
2:0	FUNC: Must select the correct function for this peripheral.	Same as type D.
General comment	A good choice for PDM data.	A reasonable choice for PDM data.


The PDM interface provides options to support 2 single-channel microphones or a single stereo microphone. The general connections are shown in <u>Figure 75</u>. Specific use examples are shown in <u>Figure 76</u> through <u>Figure 78</u>.

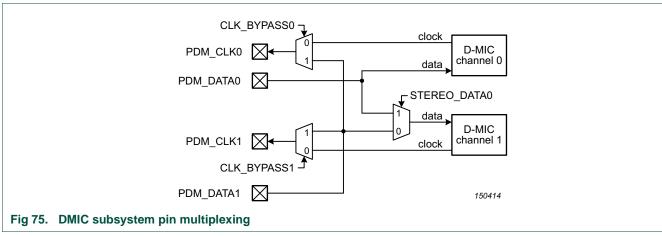


UM10914

## Chapter 26: LPC5411x DMIC subsystem

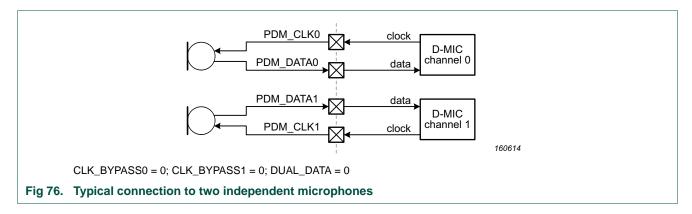


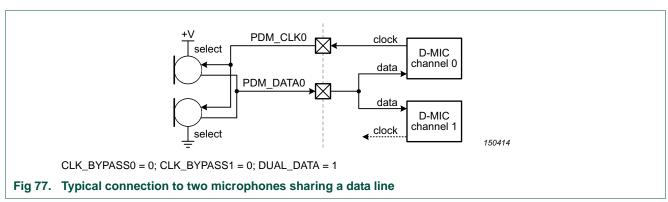

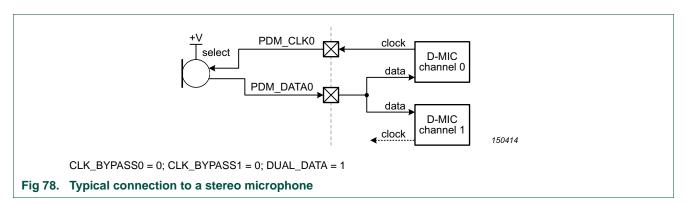

The PDM interface also provides the possibility of an external codec or other PDM master to take over the PDM interface on this device. An example of this using dual microphones sharing one data line is shown in Figure 79.

## Chapter 26: LPC5411x DMIC subsystem

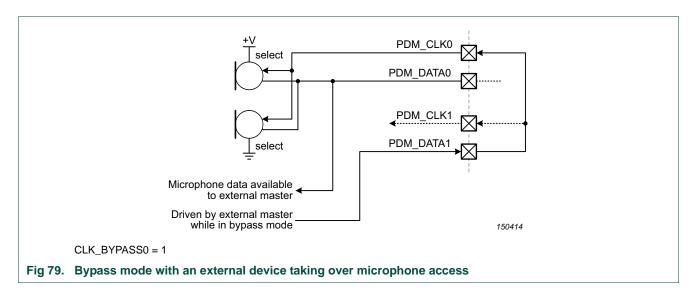


# 26.5 General description

The hardware voice activity detector (HWVAD) implements a wave envelope detector and a floor noise envelope detector. It provides an interrupt when the delta between the two detectors is larger than a predefined value. The input signal for the HWVAD can come from DMIC channel 0.

The basic detection of a voice activity can be the starting point for a more sophisticated task like for example voice recognition. As with the DMA for the DMIC subsystem, the HWVAD can be active during deep-sleep mode and therefore provide lowest power operation, compared with a software based implementation.

The DMIC receives PDM data, typically from one or two digital microphones, and produces a data stream that can be read by the CPU or DMA, or can be sent directly to the I2S of Flexcomm Interface 7.

Detailed descriptions of both blocks can be found in Section 26.7 "Functional description".

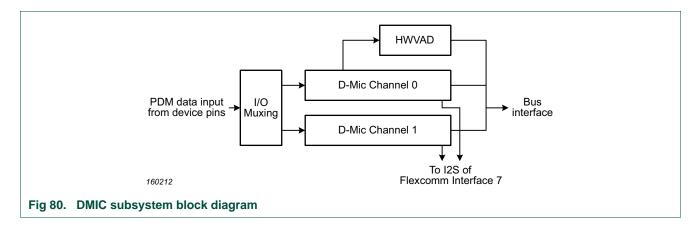

# Chapter 26: LPC5411x DMIC subsystem

# 26.6 Register description

Table 400. Register overview: DMIC subsystem (base address 0x4009 0000)

Name	Access	Offset	Description	Reset value	Section
Registers for DMIC	channel 0:				
OSR0	R/W	0x000	CIC filter decimation rate (oversample rate).	0x0	26.6.1
DIVHFCLK0	R/W	0x004	DMIC clock divider.	0x0	26.6.2
PREAC2FSCOEF0	R/W	800x0	Pre-emphasis filter coefficient for 2 FS.	0x0	26.6.3
PREAC4FSCOEF0	R/W	0x00C	Pre-emphasis filter coefficient for 4 FS.	0x0	26.6.4
GAINSHIFT0	R/W	0x010	Decimator output gain adjustment.	0x0	26.6.5
FIFOCTRL0	R/W	0x080	FIFO control.	0x0	26.6.6
FIFOSTAT0	R/W	0x084	FIFO status.	0x0	26.6.7
FIFODATA0	R/W	0x088	FIFO data.	NA	26.6.8
PDMSRCCFG0	R/W	0x08C	Configures details of the PDM hardware interface.	0x0	26.6.9
DCCTRL0	R/W	0x090	DC filter control.	0x0	26.6.10
Registers for DMIC	channel 1:				
OSR1	R/W	0x100	CIC filter decimation rate (oversample rate).	0x0	26.6.1
DIVHFCLK1	R/W	0x104	DMIC clock divider.	0x0	26.6.2
PREAC2FSCOEF1	R/W	0x108	Pre-emphasis filter coefficient for 2 FS.	0x0	26.6.3
PREAC4FSCOEF1	R/W	0x10C	Pre-emphasis filter coefficient for 4 FS.	0x0	26.6.4
GAINSHIFT1	R/W	0x110	Decimator output gain adjustment.	0x0	26.6.5
FIFOCTRL1	R/W	0x180	FIFO control.	0x0	26.6.6
FIFOSTAT1	R/W	0x184	FIFO status.	0x0	26.6.7
FIFODATA1	R/W	0x188	FIFO data.	NA	26.6.8
PDMSRCCFG1	R/W	0x18C	Configures details of the PDM hardware interface.	0x0	26.6.9
DCCTRL1	R/W	0x190	DC filter control.	0x0	26.6.10
DMIC common regis	sters:				
CHANEN	R/W	0xF00	Channel enable.	0x0	26.6.11
IOCFG	R/W	0xF0C	Configures aspects of pin usage of the PDM interface.	0x0	26.6.12
USE2FS	R/W	0xF10	Use decimate by multiple of 2 (rather than 4).	0x0	26.6.13
HWVAD registers:					
HWVADGAIN	R/W	0xF80	Input gain register.	0x5	26.6.14
HWVADHPFS	R/W	0xF84	Filter control register.	0x1	26.6.15
HWVADST10	R/W	0xF88	Control register.	0x0	26.6.16
HWVADRSTT	R/W	0xF8C	Filter reset register.	0x0	26.6.17
HWVADTHGN	R/W	0xF90	Noise estimator gain register.	0x0	26.6.18
HWVADTHGS	R/W	0xF94	Signal estimator gain register.	0x4	26.6.19
HWVADLOWZ	RO	0xF98	Noise envelope estimator register.	0x0	26.6.20

408 of 590

#### Chapter 26: LPC5411x DMIC subsystem

# 26.6.1 Oversample Rate register

This register selects the oversample rate (CIC decimation rate) for the related input channel.

Table 401. Oversample Rate register (OSR[0:1], offset 0x000 (OSR0) and 0x100 (OSR1)) bit description

Bit	Symbol	Description	Reset value
7:0	OSR	Selects the CIC decimation rate for the related input channel.	0x0
31:8	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.2 DMIC Clock register

This register controls the clock pre-divider for the related input channel.

Table 402. DMIC Clock register (DIVHFCLK[0:1], offset 0x004 (DIVHFCLK0) to 0x104 (DIVHFCLK1)) bit description

Bit	Symbol	Description	Reset value
3:0	PDMDIV	PDMDIV PDM clock divider value.  0 = divide by 1  1 = divide by 2  2 = divide by 3	
		3 = divide by 4 4 = divide by 6 5 = divide by 8 6 = divide by 12 7 = divide by 16 8 = divide by 24 9 = divide by 32	
		10 = divide by 48 11 = divide by 64 12 = divide by 96 13 = divide by 128 others = reserved.	
31:4	-	Reserved. Read value is undefined, only zero should be written.	-

## 26.6.3 Pre-Emphasis Filter Coefficient for 2 FS register


This register selects the pre-emphasis filter coefficient for the related input channel when 2 FS mode is used (see Section 26.6.13 "Use 2 FS register").

Table 403. Pre-Emphasis Filter Coefficient for 2 FS register (PREAC2FSCOEF[0:1], offset 0x008 (PREAC2FSCOEF0) and 0x108 (PREAC2FSCOEF1)) bit description

Bit	Symbol	Description	Reset value
1:0	COMP	Pre-emphasis filer coefficient for 2 FS mode. See Figure 81.  0 = Compensation = 0  1 = Compensation = -0.16  2 = Compensation = -0.15  3 = Compensation = -0.13	0x0
31:2	-	Reserved. Read value is undefined, only zero should be written.	-

409 of 590

Chapter 26: LPC5411x DMIC subsystem

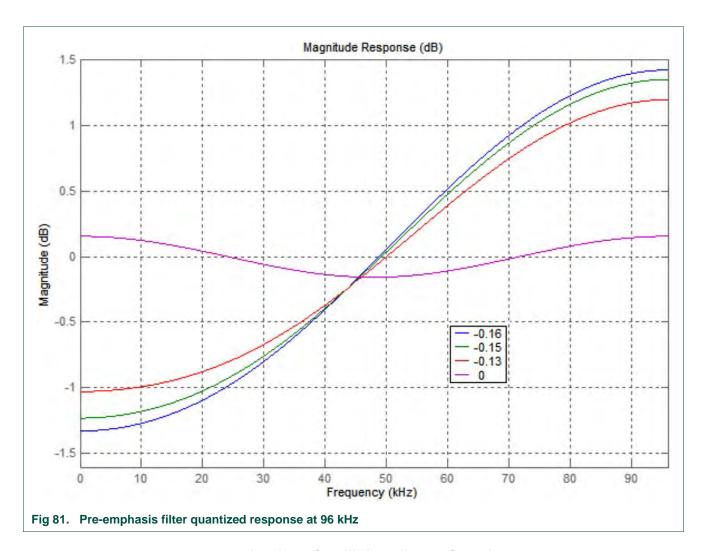

# 26.6.4 Pre-Emphasis Filter Coefficient for 4 FS register

This register selects the pre-emphasis filter coefficient for the related input channel when 4 FS mode is used (see Section 26.6.13 "Use 2 FS register").

Table 404. Pre-Emphasis Filter Coefficient for 4 FS register (PREAC4FSCOEF[0:1], offset 0x00C (PREAC4FSCOEF0) and 0x10C (PREAC4FSCOEF1)) bit description

Bit	Symbol	Description	Reset value
1:0	COMP	Pre-emphasis filer coefficient for 4 FS mode. See Figure 81.  0 = Compensation = 0  1 = Compensation = -0.16  2 = Compensation = -0.15  3 = Compensation = -0.13	0x0
31:2	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.5 Decimator Gain Shift register

This register adjust the gain of the 4FS PCM data from the input filter.

Chapter 26: LPC5411x DMIC subsystem

Table 405. Decimator Gain Shift register (GAINSHFT[0:1], offset 0x010 (GAINSHFT0) and 0x110 (GAINSHFT1)) bit description

Bit	Symbol	Description	Reset value
5:0	GAIN	Gain control, as a positive or negative (two's complement) number of bits to shift.	0x0
31:6	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.6 FIFO Control register

This register configures FIFO usage.

Table 406. FIFO Control register (FIFOCTRL[0:1], offset 0x080 (FIFOCTRL0) and 0x180 (FIFOCTRL1)) bit description

Bit	Symbol	Value	Description	Reset value
0	ENABLE		FIFO enable.	0x0
		ı	0	FIFO is not enabled. Enabling a DMIC channel with the FIFO disabled could be useful while data is being streamed to the I2S, or in order to avoid a filter settling delay when a channel is re-enabled after a period when the data was not needed.
		1	FIFO is enabled. The FIFO must be enabled in order for the CPU or DMA to read data from the DMIC via the FIFODATA register.	
1	RESETN		FIFO reset.	0x0
		0	Reset the FIFO. This bit must be cleared before resuming operation.	
		1	Normal operation.	
2	INTEN		Interrupt enable.	0x0
		0	FIFO level interrupts are not enabled.	
		1	FIFO level interrupts are enabled.	
3	DMAEN		DMA enable.	0x0
		0	DMA requests are not enabled.	
		1	DMA requests based on FIFO level are enabled.	
15:4	-	-	Reserved. Read value is undefined, only zero should be written.	-
20:16	TRIGLVL	FIFO trigger level. Selects the data trigger level for interrupt or DMA operation. If enabled to do so, the FIFO level can wake up the device just enough to perform DMA, then return to the reduced power mode See <a href="Section 4.5.64">Section 4.5.64</a> "Hardware Wake-up control register".	0x0	
			0 = trigger when the FIFO has received one entry (is no longer empty). 1 = trigger when the FIFO has received two entries	
24.04			15 = trigger when the FIFO has received 16 entries (has become full).	
31:21	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.7 FIFO Status register

This register provides status information for the FIFO and also indicates an interrupt from the peripheral function.

Chapter 26: LPC5411x DMIC subsystem

Table 407. FIFO Status register (FIFOSTAT[0:1], offset 0x084 (FIFOSTAT0) and 0x184 (FIFOSTAT1)) bit description

Bit	Symbol	Description	Reset value
0	INT	Interrupt flag. Asserted when FIFO data reaches the level specified in the FIFOCTRL register. Writing a one to this bit clears the flag.	0
		<b>Remark:</b> note that the bus clock to the DMIC subsystem must be running in order for an interrupt to occur.	
1	OVERRUN	Overrun flag. Indicates that a FIFO overflow has occurred at some point. Writing a one to this bit clears the flag. This flag does not cause an interrupt.	0
2	UNDERRUN	Underrun flag. Indicates that a FIFO underflow has occurred at some point. Writing a one to this bit clears the flag.	0
31:3	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.8 FIFO Data register

The FIFODATA register is used to read values that have been received by the via the PDM stream.

Table 408. FIFO Data register (FIFODATA[0:1], offset 0x088 (FIFODATA0) and 0x188 (FIFODATA1)) bit description

Bit	Symbol	Description	Reset value
23:0	DATA	Data from the top of the input filter FIFO.	NA
31:24	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.9 PDM Source Configuration register

This register configure how the PDM source signals are interpreted.

Table 409. PDM Source Configuration register (PDMSRCCFG[0:1], offset 0x08C (PDMSRCCFG0) to 0x18C (PDMSRCCFG1)) bit description

Bit	Symbol	Value	Description	Reset value
0	PHY_FALL	0	PDM_DATA is sampled into the decimator on the rising edge of PDM_CLK.	0x0
		1	PDM_DATA is sampled into the decimator on the falling edge of PDM_CLK.	
1	PHY_HALF	0	Standard half rate sampling. The clock to the DMIC is sent at the same rate as the decimator is providing.	0x0
		1	Use half rate sampling. The PDM clock to DMIC is divided by 2. Each PDM data is sampled twice into the decimator. The purpose of this mode is to allow slower sampling rate in quiet periods of listening for a trigger. Allowing the decimator to maintain the same decimation rate between the higher quality, higher PDM clock rate and the lower quality lower PDM clock rate means that the user can quickly switch to higher quality without re-configuring the decimator, and thus avoiding long filter settling times, when switching to higher quality (higher freq PDM clock) for recognition.	
31:2	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.10 DC Control register

This register controls the DC filter. The frequencies noted for DCPOLE in the table assume a PCM output frequency of 16 kHz. If the actual PCM output frequency is 8 kHz, for example, the noted frequencies would be divided by 2.

## Chapter 26: LPC5411x DMIC subsystem

Table 410. DC Control register (DCCTRL[0:1], offset 0x090 (DCCTRL0) and 0x190 (DCCTRL1)) bit description

Bit	Symbol	Value	Description	Reset value
1:0	DCPOLE		DC block filter.	0x0
		0	Flat response, no filter.	
		1	155 Hz.	
		2	78 Hz.	
		3	39 Hz.	
3:2	-	-	Reserved. Read value is undefined, only zero should be written.	-
7:4	DCGAIN	-	Fine gain adjustment in the form of a number of bits to downshift.	
8	SATURATEAT16BIT		Selects 16-bit saturation.	0x0
		0	Results roll over if out range and do not saturate.	
		1	If the result overflows, it saturates at 0xFFFF for positive overflow and 0x8000 for negative overflow.	
31:9	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.11 Channel Enable register

This register allows enabling either or both PDM channels.

Table 411. Channel Enable register (CHANEN, offset 0xF00) bit description

Bit	Symbol	Description	
0	EN_CH0	Enable channel 0. When 1, PDM channel 0 is enabled.	0x0
1	EN_CH1	Enable channel 1. When 1, PDM channel 1 is enabled.	0x0
31:2	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.12 I/O Configuration register

This register configures the use of the PDM pins.

Table 412. I/O Configuration register (IOCFG, offset 0xF0C) bit description

Bit	Symbol	Description	Reset value
0	CLK_BYPASS0	Bypass CLK0. When 1, PDM_DATA1 becomes the clock for PDM channel 0. This provides for the possibility of an external codec taking over the PDM bus. See <u>Figure 75</u> through <u>Figure 79</u> .	0x0
1	CLK_BYPASS1  Bypass CLK1. When 1, PDM_DATA1 becomes the clock for PDM channel 1. This provides for the possibility of an external codec taking over the PDM bus. See Figure 75 through Figure 79.		0x0
2	STEREO_DATA0 Stereo PDM select. When 1, PDM_DATA0 is routed to both PDM channels in a configuration that supports a single stereo digital microphone. See <a href="Figure 75">Figure 75</a> through <a href="Figure 79">Figure 79</a> .		0x0
31:3	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.13 Use 2 FS register

This register allows selecting 2FS output rather than 1FS output.

## Chapter 26: LPC5411x DMIC subsystem

Table 413. Use 2FS register (USE2FS, offset 0xF10) bit description

Bit	Symbol	Value	Description	Reset value
0	USE2FS	0	Use 1FS output for PCM data.	0x0
		1	Use 2FS output for PCM data.	
31:1	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.14 HWVAD input gain register

This register controls the input gain of the HWVAD.

Table 414. HWVAD input gain register (HWVADGAIN, offset 0xF80) bit description

Bit	Symbol	Description	Reset value
3:0	INPUTGAIN	Shift value for input bits	0x05
		0x00: -10 bits	
		0x01: -8 bits	
		0x02: -6 bits	
		0x03: -4 bits	
		0x04: -2 bits	
		0x05: 0 bits (default)	
		0x06: +2 bits	
		0x07: +4 bits	
		0x08: +6 bits	
		0x09: +8 bits	
		0x0A: +10 bits	
		0x0B: +12 bits	
		0x0C: +14 bits	
		0x0D to 0x0F: Reserved.	-
31:4	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.15 HWVAD filter control register

This filter setting parameter can be used to optimize performance for different background noise situations. In order to find the best setting, software needs to perform a rough spectral analysis of the audio signal.

Rule of thumb: If the amount of low-frequency content in the background noise is small, then HPFS=0x2, else 0x1.

Table 415. HWVAD filter control register (HWVADHPFS, offset 0xF84) bit description

Bit	Symbol	Value	Description	Reset value
1:0	HPFS	0x0	First filter by-pass.	0x1
		0x1	High pass filter with -3dB cut-off at 1750Hz.	
		0x2	High pass filter with -3dB cut-off at 215Hz.	
		0x3	Reserved.	
31:2	-	-	Reserved. Read value is undefined, only zero should be written.	-

## Chapter 26: LPC5411x DMIC subsystem

# 26.6.16 HWVAD control register

This register controls the operation of the filter block and resets the internal interrupt flag. Once the HWVAD triggered an interrupt, a short '1' pulse on bit ST10 clears the interrupt.

Keeping the bit on '1' level for some time also has a special function for filter convergence, see more information in Section 26.7.1.

Table 416. HWVAD control register (HWVADST10, offset 0xF88) bit description

Bit	Symbol	Value	Description	Reset value
0	ST10	0	Normal operation, waiting for HWVAD trigger event (stage 0).	0x0
		1	Reset internal interrupt flag by writing a '1' pulse.	
31:1	-	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.17 HWVAD filter reset register

Setting bit RSTT to '1' causes a synchronous reset of all filters inside the HVWAD. The RSTT bit must be cleared in order to allow HWVAD operation. See more information in Section 26.7.1.

Table 417. HWVAD filter reset register (HWVADRSTT, offset 0xF8C) bit description

Bit	Symbol	Value	Description	Reset value
0	RSTT		HWVAD filter reset. Writing a 1, then writing a 0 resets all filter values	0x0
		0	Filters are not held in reset.	
		1	Holds the filters in reset	
31:1	-		Reserved. Read value is undefined, only zero should be written.	-

## 26.6.18 HWVAD noise estimator gain register

Gain value for the noise estimator value. This parameter is used in the following calculation (implemented in hardware):

```
if z8 * (THGS+1) > z7 * (THGN+1)
          HWVAD_RESULT = 1;
else
          HWVAD RESULT = 0;
```

Table 418. HWVAD noise estimator gain register (HWVADTHGN, offset 0xF90) bit description

Bit	Symbol	Description	Reset value	
3:0	THGN	Gain value for the noise estimator.	0x0	
		0 to 14: 0 corresponds to a gain of 1.		
31:4	-	Reserved. Read value is undefined, only zero should be written.	-	

# 26.6.19 HWVAD signal estimator gain register

Gain value for the signal estimator value. This parameter is used in the following calculation (implemented in hardware):

```
if z8 * (THGS+1) > z7 * (THGN+1)
        HWVAD_RESULT = 1;
else
        HWVAD_RESULT = 0;
```

#### Chapter 26: LPC5411x DMIC subsystem

Table 419. HWVAD signal estimator gain register (HWVADTHGS, offset 0xF94) bit description

Bit	Symbol	Description	Reset value
3:0	THGS	Gain value for the signal estimator.	
		0 to 14: 0 corresponds to a gain of 1.	
31:4	-	Reserved. Read value is undefined, only zero should be written.	-

# 26.6.20 HWVAD noise envelope estimator register

This register contains 2 bytes of the output of filter stage z7. It can be used as an indication for the noise floor and must be evaluated by software. See more information in Section 26.7.1.

Note: For power saving reasons this register is not synchronized to the AHB bus clock domain. To ensure correct data is read, the register should be read twice. If the data is the same, then the data is correct, if not, the register should be read one more time. The noise floor is a slowly moving calculation, so several reads in a row can guarantee that register value being read can be assured to not be in the middle of a transition.

Table 420. HWVAD noise envelope estimator register (HWVADLOWZ, offset 0xF98) bit description

Bit	Symbol	Description	
15:0	LOWZ	Noise envelope estimator value.	0x0
31:16	-	Reserved. Read value is undefined, only zero should be written.	-


Chapter 26: LPC5411x DMIC subsystem

# 26.7 Functional description

#### 26.7.1 HWVAD

The hardware voice activity detector (HWVAD) analyses the PCM data from DMIC channel 0 by means of a filter block. Both the noise floor and the signal wave are examined and result in separate filter outputs. The HWVAD interrupt is issued when a specific delta between the signal and the noise result is detected

Gain levels for the input signal as well as for the signal and noise filter outputs can be set independently from each other, in order to adapt the HWVAD to different acoustic situations.

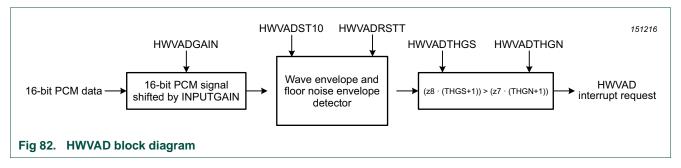

Because of the non-uniqueness of the input signal, which includes normally noise and voice with various frequency components and different volume, there is no one-and-only operation mode for the HWVAD. The few parameters as well as the chronology can play an important role for a good performance.

#### 26.7.1.1 Basic operations

There are some basic operations for the HWVAD, which can be combined differently in order to achieve different behavior.



- 1) The internal HWVAD interrupt flag is reset with a short pulse on ST10
- 2) A pulse on RSTT resets all detection filters
- 3) Keeping ST10 high for a period causes a special filter convergence. The 2.5ms period is valid for 800kHz DMIC sample rate. For 1MHz sample rate the period is 2ms.

Fig 83. Use of ST10 and RSTT controls (in the HWVADST10 and HWVADRSTT registers)

With bit ST10 the HWVAD can be prepared for an interrupt. The internal flag is reset with the rising edge of ST10 and the HWVAD waits for the next event. In case the application involves some post-processing after a HWVAD event (outside of the interrupt service routine), the flag should only be cleared at the end of this processing. The interrupt status on NVIC level is not affected by this bit setting

UM10914


#### Chapter 26: LPC5411x DMIC subsystem

With bit RSTT in register HWVADRSTT all filters can be reset. After this reset the HWVAD filters need to converge, so for the first few milliseconds the result is not reliable. The HWVAD interrupt should be masked on NVIV level during this time frame. The wait period depends on the sample rate of the incoming data, at 1MHz DMIC sample rate the filters need about 2ms to converge, for 800KHz the period is 2.5ms.

If it makes sense to reset the filters before starting into a new detection process depends on the use case. For a voice application the filters can adapt continuously to the background environment, between the voice events there is normally enough time to let the filters converge to a changed background noise situation.

Keeping ST10 on high level during the convergence period enables a special mode. If the filters should adapt to a current background noise floor (without voice), then this can be done during this period. With ST10 returning to low level, the filter calculation is then based on a different filter pre-setting. This could be an advantage in special type of applications, where the signal is not continuously delivered to the HWVAD. In a DMIC system with continuous sampling, this convergence period is not required, bit ST10 is just used to clear the interrupt flag.

A complete setup sequence for standard operation looks like this:

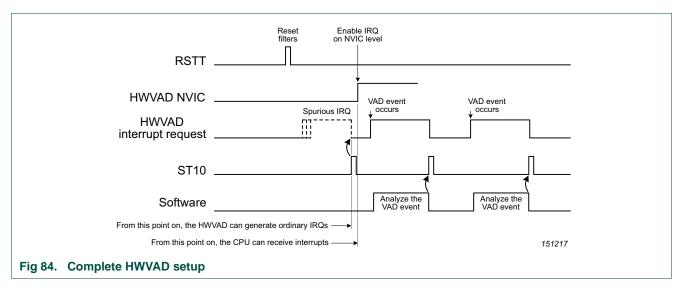

- Reset filters with bit RSTT and provide some time to let the filter converge to the signal conditions.
- Pulse bit ST10 to clear any spurious interrupts which were generated during bad filter conditions.
- 3. Enable HWVAD IRQ on NVIC level.
- 4. Process the VAD event in case of an interrupt, when finished clear the interrupt flag with a high pulse of ST10.

#### 26.7.1.2 Extended operation

There are a few parameters which can be set to influence the behavior of the HWVAD. There is also an intermediate filter result value available, which can be used for proprietary software-based analysis.

418 of 590

#### Chapter 26: LPC5411x DMIC subsystem

#### 26.7.1.2.1 Input gain setting

The 16-bit PCM input signal can be shifted left or right with the gain setting in the register HWVADGAIN. This increases or decreases the volume of the input signal for the HWVAD processing. Note that the reset value 0x05 equals a gain factor of 1, the signal is not shifted in either direction.

#### 26.7.1.2.2 Filter result gain setting

The output values for the final equation can also have a gain factor.

$$[z8 * (THGS+1)] > [z7 * (THGN+1)]$$

These gain factors determine the proportion between the results of the signal and the noise filters. The values depend on the audio signal and noise environment, the reset values THGN = 0 and THGS = 4 are more suitable for a low noise environment. For noisy environment the gain for THGN and THGS needs to be increased. In a typical voice recognition application THGN = 3 and THGS = 6 is a good starting point.

## 26.7.1.2.3 High pass filter setting

The setting in register HWVADHPFS can be used to adapt the filters to different background noise situations. In order to find the best setting, software could perform a rough spectral analysis of the audio signal.

For a background with more low-frequency content, HPFS should be set to 0x1. This is the standard use case. For environments where the low-frequency content is small, the filter can be set to 0x2.

#### 26.7.1.2.4 Noise floor evaluation

The register HWVADLOWZ contains 2 bytes of the output of filter stage z7, which computes the noise floor. The characteristic of the filter block for voice applications is best for a value of 500 ... 1000 in LOWZ. Software can tune the input gain to get the LOWZ value into this region.


Note: For power saving reasons this register is not synchronized to the AHB bus clock domain. To ensure correct data is read, the register should be read twice. If the data is the same, then the data is correct, if not, the register should be read one more time. The noise floor is a slowly moving calculation, so several reads in a row can guarantee that register value being read can be assured to not be in the middle of a transition.

## 26.7.2 DMIC

The DMIC interface receives PDM data from one or two digital microphones and processes it to produce 24-bit PCM data. This data can be read by the CPU or DMA, and/or can be sent to the I2S interface for output. Many aspects of DMIC operation can be controlled. A block diagram of one DMIC channel is shown in Figure 85.

419 of 590


## Chapter 26: LPC5411x DMIC subsystem

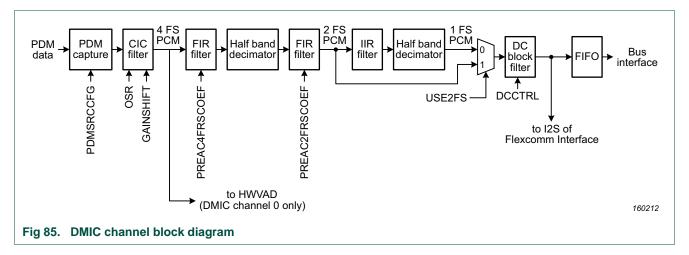

#### 26.7.2.1 Clocking and DMIC data rates

The DMIC interface operation is determined by 3 clock domains:

- DMIC interface base clock: supply clock for the peripheral block
- DMIC clock: sample clock for the digital microphone
- PCM sample rate: sample rate of the PCM data resulting from the PDM to PCM conversion

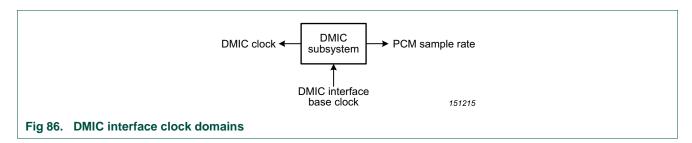

The source for the base clock can be set in register DMICCLKSEL in the SYSCON block (see Section 4.5.31). Note that all of these clock sources may be divided by a factor of up to 256 by the DMIC clock divider, controlled by DMICCLKDIV (Section 4.5.39).

Table 421. Table 1.Base clock sources for DMIC interface peripheral

Source	Range	DMIC interface base clock	Note
FRO	12 MHz	≤ 12 MHz	
FRO	48 MHz or 96 MHz	≤ 24 MHz	
System PLL	1.2 MHz 150 MHz	≤ 24.576 MHz	PLL can produce up to 150 MHz, but main clock is limited to 100 MHz
MCLK input	≤ 100 MHz	≤ 24.576 MHz	
Main clock	≤ 100 MHz	≤ 24.576 MHz	
Watchdog oscillator	200 kHz 1.5 MHz	≤ 1.5 MHz	Inaccurate clock, but very low power

For the DMIC clock, the base clock divider values can be set in registers DIVHFCLK[0:1].

#### Chapter 26: LPC5411x DMIC subsystem

However, for power consumption reasons, it is preferable that the division to the required DMIC clock be done outside of the DMIC interface block (for example using register DMICCLKDIV in the SYSCON block).

The DMIC peripheral block is designed to run at a DMIC clock speed no faster than 6.144 MHz and with an input frequency no faster than 4 \* 6.144 MHz = 24.576 MHz. With regards to power consumption the lowest possible frequency should be selected. This frequency very much depends on the application requirements. For a simple voice activity detection a sample rate of 200 kHz for the DMIC might be sufficient, for a good quality voice tag recognition the DMIC should be clocked at least with 800 kHz. Depending on the current operating mode of the application, the clocks can be set dynamically from one sample rate to the other.

For a glitch free reduction of the DMIC clock rate by factor 2 the DMIC interface contains dedicated circuitry. By setting bit PHY\_HALF in registers PDMSRCCFG[0:1] the DMIC clock is divided to half the frequency internally used for the filters. This enables an on-the-fly switching of the DMIC clock without affecting the operation of the filters. As long as the sample quality on half of the frequency is good enough for the application, for example in listening mode only, this helps to decrease the power consumption of the external digital microphone.

If the PDM interface operates during deep-sleep mode (always listening), then the presence of the clock source in this mode must be taken into account as well. For example, the PLL output is not present during deep-sleep mode, but the 12 MHz FRO is there.

In general, other clocks such as the 48 MHz FRO or the watchdog oscillator are available in deep-sleep mode. It depends on the use case whether a faster or slower clock provides any advantage to the system. At high PDM data rates, for example at 6 MHz, a 48 MHz clock will shorten the "awake" periods compared to 12 MHz operation. A trade-off between the sleep and the active periods, and the internal voltage required at the chosen clock rate, that determine which of the clocks perform better in terms of average power consumption.


The watchdog oscillator low power operation can help to drive the power consumption down in simple voice detection setups. By running the DMIC interface on the slow watchdog oscillator frequency, the HWVAD feature can provide a first audio detection trigger signal to the system. Hereafter the sample rate as well as the processor performance is increased in order to run more sophisticated voice detection and/or voice recognition algorithms.

#### 26.7.2.2 PDM to PCM conversion

The filter block for PDM to PCM conversion consists of four stages. It begins with a CIC filter (Cascaded-Integrator Comb filter) filter which is an optimized finite impulse response (FIR) filter combined with a decimator. The CIC filter converts the PDM stream from the digital microphone into PCM data with a given oversampling rate, set in registers OSR[0] and OSR[1] for each of the two channels. The second block performs a decimation by 2 and compensates for a roll-off at the upper limit of the audio band. The third block decimates the signal again by half, resulting in a PCM signal with the desired sample rate. A final DC filter removes any unwanted DC component in the audio signal.

421 of 590

#### Chapter 26: LPC5411x DMIC subsystem

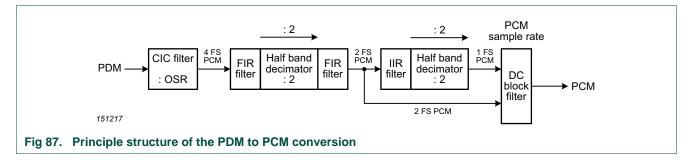

To achieve lower power consumption, the DC filter can be supplied with the 2FS instead of the 1FS signal, bypassing the second half band decimator filter. This reduces the required DMIC base clock by a factor of 2. This is done by setting the USE2FS bit in the USE2FS register.

The PDM to PCM conversion block is designed for providing best results for PCM output signals with a 16 kHz sample rate, covering the enhanced 8 kHz speech band widely used in communication systems. However, other sample rates can be realized as well.

The final relation between the DMIC clock rate and the PCM audio sample rate is:


Table 422. DMIC input and output clock rates

2 FS mode	1 FS mode
PCM Sample rate = DMIC clock rate / (2 * OSR)	PCM Sample rate = DMIC clock rate / (4 * OSR)

Example: DMIC clock = 800 kHz, OSR = 25, 2 FS used

The 800 kHz DMIC data is downsampled by 25 times to 32 kHz. With the following half-band filter the final PCM sample rate is 16 kHz.

#### 26.7.2.3 FIFO and DMA operation

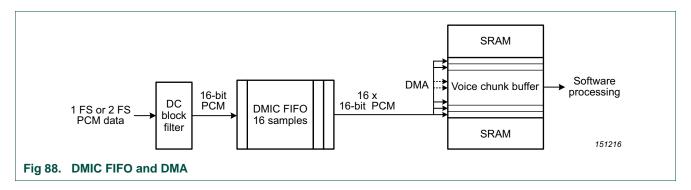

The 16-bit wide FIFO of the DMIC interface consists of 16 entries for each of the two channels. The trigger level for the FIFO can be set in register FIFOCTRL[0:1] individually for each channel.

The trigger level interrupt for the DMIC interface needs to be enabled on NVIC level and with bit INTEN in register FIFOCTRL[0:1]. Bit DMAEN enables DMA operation. With each FIFO trigger level event the DMA performs a copy of the data from the FIFO into SRAM. This data batching works without contribution of the core. When reaching the defined chunk buffer size, the DMA issues an interrupt to the ARM core for further processing of the data.

#### Chapter 26: LPC5411x DMIC subsystem

This also works when the device is in deep-sleep mode, as the FIFO event is able to wake up the required part of the hardware. After the DMA finished the job, the device will return into deep-sleep mode. The two DMIC channel DMA requests are connected to the DMA request input #16 and #17, see table 170 (UM draft v0.6).

Since each DMIC channel provides a separate DMA request, the most obvious configuration of DMA is to have left and right data in separate memory buffers. However, it is possible to configure the DMA controller to interleave left and right data if that is preferable in the application. To do this, the DMA is set up with a data size of halfword, but the next address written to is a word address distance away. The two descriptors would be started on consecutive halfwords. Data is delivered by the DMIC as left channel followed by right channel for each PCM stereo sample.

If more history data is required for a software algorithm, another DMA request can be set up, which copies the current chunk into a larger ring buffer structure. For algorithms like voice detection or voice recognition this is key, in order to converge the software filters to the current background noise situation.

For operation without DMA the dedicated DMIC FIFO interrupt can be enabled in order to inform the ARM core about the FIFO status.

## Example:

- PCM output sample rate is 16 kHz
- The 32-bytes FIFO gets full every 1ms
- The DMA copies every 1ms the 32-bytes content of the DMIC FIFO to SRAM
- The DMA is configured to move 512 bytes (= 256 PCM samples) from the DMIC FIFO to SRAM before issuing a DMA interrupt
- Every 16 ms the 256 PCM samples are processed by the ARM core

#### 26.7.2.4 PCM data output on I2S interface

The converted data can be put on the I2S interface on Flexcomm Interface 7, providing TX data for an external CODEC or host system. The sample rate of the PCM signal and the I2S data rate must match to avoid overrun or underrun.

The I2S interface can be set for this mode with the PDMDATA bit in the CFG1 register the I2S of Flexcomm Interface 7.

## 26.7.2.5 Usage of the DMIC interface in power save modes

The DMIC interface can batch the serial PDM stream from a digital microphone in deep-sleep mode. This requires an appropriate base clock which is active in the respective power saving mode. The best fit for this base clock is the 12 MHz FRO, which provides a good trade-off between power consumption and performance. For lower power operation the watchdog oscillator can be used, taking into account that the clock is relatively inaccurate and the DMIC sample rate is rather low. At any time an external low power clock, connected to pin MCLK, can be used.

In combination with the HWVAD this provides lowest power consumption in listening mode. Except for the short periods with DMA activity, the MCU can remain in deep-sleep mode until the wave envelope detector of the HWVAD identifies an energy change event

#### Chapter 26: LPC5411x DMIC subsystem

and issues an interrupt. With the DMA set to larger transfer sizes (maximum is 1024 transfers), there is quite some history data available for any type of software-based analysis of the data causing the HWVAD event.

This also enables the system to realize different strategies for dealing with a HWVAD event. A concrete analysis of the data could for example just be started when the HWVAD detected events over a longer time frame. This would avoid that the ARM core gets active on spurious noise. In case the decision has been taken to take the next step in data analysis, the history buffer still contains the complete PCM data sampled since the first event, nothing got lost. In average the system can stay longer in power save mode if spurious events can be filtered out.

# **UM10914**

# Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Rev. 1.2 — 30 June 2016

**User manual** 

# 27.1 How to read this chapter

The ADC controller is available on all LPC5411x devices. The number of ADC channels available is dependent on the package size.

## 27.2 Features

- 12-bit successive approximation analog to digital converter.
- Input multiplexing among up to 12 pins.
- Two configurable conversion sequences with independent triggers.
- Optional automatic high/low threshold comparison and "zero crossing" detection.
- Measurement range V<sub>REFN</sub> to V<sub>REFP</sub> (typically 3 V; not to exceed V<sub>DDA</sub> voltage level).
- 12-bit conversion rate of 5.0 MHz. Options for reduced resolution at higher conversion rates.
- Burst conversion mode for single or multiple inputs.
- Synchronous or asynchronous operation. Asynchronous operation maximizes
  flexibility in choosing the ADC clock frequency, Synchronous mode minimizes trigger
  latency and can eliminate uncertainty and jitter in response to a trigger.
- A temperature sensor is connected as an alternative input for ADC channel 0.

# 27.3 Basic configuration

Configure the ADC as follows:

- Set up the ADCTRL register.
- Use the ADC API to start up the ADC.
- The ADC block creates three interrupts which are connected to the NVIC:
   ADC0\_SEQA, ADC0\_SEQB, and ADC0\_THCMP. The ADC0\_THCMP interrupt at the
   NVIC combines ADC0\_THCMP and ADC0\_OVR conditions from the ADC as
   described in this chapter. See <u>Table 2</u> for interrupt numbers. The sequence interrupts
   can also be configured as DMA triggers through the INPUT MUX (see <u>Table 140</u>) for
   each DMA channel and as inputs to the SCT.
- Use IOCON (<u>Chapter 7</u>) to connect and enable analog function on the ADC input pins.
- Calibration is required after every reset or power cycle of the ADC. The ADC API
  function may be used for this. Note that the ADC may be power cycled in deep-sleep
  mode if it is not requested to stay on when these modes are invoked by the
  Chip\_POWER\_EnterPowerMode API.
- There are two options in the ADC CTRL register to clock ADC conversions:
  - Use the system clock to clock the ADC in synchronous mode. This option allows exact timing of triggers but requires a system clock of 72 MHz to obtain the full ADC conversion speed.


## Chapter 27: LPC5411x 12-bit ADC controller (ADC)

 Use the ADC clock, determined by the ADCCLKSEL register (<u>Table 55</u>) and the ADCCLKDIV register (<u>Table 65</u>). Some clock sources are independent of the system clock, and may require extra time to synchronize ADC trigger inputs.

Configure the temperature sensor as follows:

- Clear the PDEN\_TS bit in the PDRUNCFG register (<u>Table 86</u>) in order to enable the temperature sensor.
- Select the temperature sensor as source for channel 0 of the ADC by writing the value 3 to the INSEL register (see <u>Section 27.6.2</u>). In order to return ADC channel 0 to measuring its related device pin, write a 0 to the INSEL register.
- The digital temperature reading is available after an analog-to-digital conversion of ADC channel 0.

**Remark:** To convert the ADC conversion result into a temperature reading, see the specific device data sheet for calibration information.

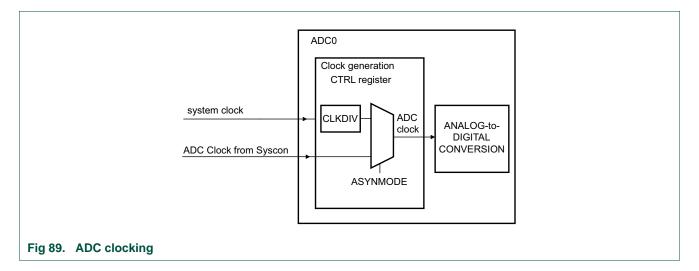

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

# 27.4 Pin description

The ADC can measure the voltage on any of the input signals on the analog input channel. Digital signals must be disconnected from the ADC input pins when the ADC function is to be used by setting DIGIMODE = 0 on those pins in the related IOCON registers.

**Warning:** If the ADC is used, signal levels on analog input pins must not be above the level of  $V_{DDA}$  at any time. Otherwise, ADC readings will be invalid. If the ADC is not used in an application, then the pins associated with ADC inputs can be used as digital I/O pins.

The ADC pin triggers are movable (digital) functions. To use external pin triggers for ADC conversions, assign the pin triggers to a pin via IOCON. In addition to assigning the pin triggers to a pin, they must also be selected in the conversion sequence registers for each ADC conversion sequence defined.

The  $V_{REFP}$  and  $V_{REFN}$  pins provide a positive and negative reference voltage input. The result of the conversion is (4095 x input voltage  $V_{IN}$ )/( $V_{REFP}$  -  $V_{REFN}$ ). The result of an input voltage below  $V_{REFN}$  is 0, and the result of an input voltage above  $V_{REFP}$  is 4095 (0xFFF).

Analog Power and Ground should typically be the same voltages as  $V_{DD}$  and  $V_{SS}$ , but should be isolated to minimize noise and error. If the ADC is not used,  $V_{DDA}$  and  $V_{REFP}$  should be tied to  $V_{DD}$ , and  $V_{SSA}$  and  $V_{REFN}$  should be tied to  $V_{SS}$ .

Table 423. ADC common supply and reference pins

Pin	Description
VDDA	Analog supply voltage. $V_{REFP}$ must not exceed the voltage level on $V_{DDA}$ . This pin should be tied to $V_{DD}$ (not left floating) if the ADC is not used.
	<b>Remark:</b> The supply voltage V <sub>DD</sub> must be equal or lower than V <sub>DDA</sub> .
VSSA	Analog ground. This pin should be tied to V <sub>SS</sub> (not left floating) if the ADC is not used.
VREFP	Positive reference voltage. To operate the ADC within specifications at the maximum sampling rate, ensure that $V_{REFP} = V_{DDA}$ . This pin should be tied to $V_{DD}$ (not left floating) if the ADC is not used.
	<b>Remark:</b> Remark: Note that $V_{REFP}$ is internally connected (not separately pinned) with $V_{DDA}$ for some packages/part numbers.
VREFN	Negative reference voltage. The voltage level should typically be equal Vss and Vssa. This pin should be tied to $V_{SS}$ (not left floating) if the ADC is not used.
	<b>Remark:</b> Note that $V_{REFN}$ is internally connected (not separately pinned) with $V_{SSA}$ for some packages/part numbers.

Table 424. ADC0 pin description

Function	Connect to	Description
ADC0_0	PIO0_29	Analog input channel 0.
ADC0_1	PIO0_30	Analog input channel 1.
ADC0_2	PIO0_31	Analog input channel 2.
ADC0_3	PIO1_0	Analog input channel 3.
ADC0_4	PIO1_1	Analog input channel 4.
ADC0_5	PIO1_2	Analog input channel 5.
ADC0_6	PIO1_3	Analog input channel 6.
ADC0_7	PIO1_4	Analog input channel 7.

UM10914 All information provided in this document is subject to legal disclaimers.

© NXP B.V. 2016. All rights reserved.

**UM10914 NXP Semiconductors** 

# Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 424. ADC0 pin description

Function	Connect to	Description
ADC0_8	PIO1_5	Analog input channel 8.
ADC0_9	PIO1_6	Analog input channel 9.
ADC0_10	PIO1_7	Analog input channel 10.
ADC0_11	PIO1_8	Analog input channel 11.
ADC0_PINTRIG0	PINT0	ADC0 pin trigger input 0, from Pin Interrupt 0. Select in SEQA_CTRL or SEQB_CTRL.
ADC0_PINTRIG1	PINT1	ADC0 pin trigger input 1, from Pin Interrupt 1. Select in SEQA_CTRL or SEQB_CTRL.


Recommended IOCON settings are shown in Table 425. See Chapter 7 for definitions of pin types.

Table 425: Suggested ADC input pin settings

IOCON bit(s)	Type D pin	Type A pin	Type I pin
10	NA	OD: Set to 0.	NA
9	NA	Not used, set to 0.	NA
8	NA	FILTEROFF: Set to 1.	NA
7	NA	DIGIMODE: Set to 0.	NA
6	NA	INVERT: Set to 0.	NA
5	NA	Not used, set to 0.	NA
4:3	NA	MODE: Set to 0.	NA
2:0	NA	FUNC: Select GPIO as the pin function.	NA
General comment	Not applicable for ADC.	Only potential choice for ADC inputs.	Not applicable for ADC.

#### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

# 27.5 General description

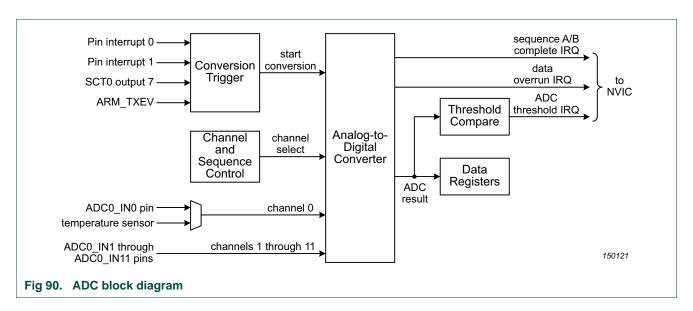

The ADC controller provides a great deal of flexibility in launching and controlling sequences of ADC conversions using the associated 12-bit, successive approximation ADC converter. ADC conversion sequences can be initiated under software control or in response to a selected hardware trigger.

Once the triggers are set up (software and hardware triggers can be mixed), the ADC runs through the pre-defined conversion sequences converting a sample whenever a trigger signal arrives until the sequence is disabled.

The ADC controller uses the system clock as a bus clock. The system clock or the asynchronous ADC clock (see <u>Figure 89</u>) can be used to create the ADC clock which drives the successive approximation process:

- In the synchronous operating mode, this ADC clock is derived from the system clock.
   In this mode, a programmable divider is included to scale the system clock to the maximum ADC clock rate of 72 MHz.
- In the asynchronous mode, an independent clock source is used as the ADC clock source without any further divider in the ADC. The maximum ADC clock rate is
   72 MHz as well. In this mode, the ADC clock frequency must not exceed five times the system clock.

A fully accurate conversion requires 15 ADC clocks.

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

# 27.6 Register description

The reset value reflects the data stored in used bits only. It does not include reserved bits content.

Table 426. Register overview: ADC (base address 0x400A 0000)

Name	Access	Offset	Description	Reset value	Section
CTRL	R/W	0x000	ADC Control register. Contains the clock divide value, resolution selection, sampling time selection, and mode controls.	0x600	27.6.1
INSEL	R/W	0x004	Input Select. Allows selection of the temperature sensor as an alternate input to ADC channel 0.	0x0	27.6.2
SEQA_CTRL	R/W	0x008	ADC Conversion Sequence-A control register: Controls triggering and channel selection for conversion sequence-A. Also specifies interrupt mode for sequence-A.	0x0	27.6.3
SEQB_CTRL	R/W	0x00C	ADC Conversion Sequence-B Control register: Controls triggering and channel selection for conversion sequence-B. Also specifies interrupt mode for sequence-B.	0x0	27.6.4
SEQA_GDAT	RO	0x010	ADC Sequence-A Global Data register. This register contains the result of the most recent ADC conversion performed under sequence-A.	NA	27.6.5
SEQB_GDAT	RO	0x014	ADC Sequence-B Global Data register. This register contains the result of the most recent ADC conversion performed under sequence-B.	NA	27.6.5
DAT0	RO	0x020	ADC Channel 0 Data register. This register contains the result of the most recent conversion completed on channel 0.	NA	27.6.7
DAT1	RO	0x024	ADC Channel 1 Data register. This register contains the result of the most recent conversion completed on channel 1.	NA	27.6.7
DAT2	RO	0x028	ADC Channel 2 Data register. This register contains the result of the most recent conversion completed on channel 2.	NA	27.6.7
DAT3	RO	0x02C	ADC Channel 3 Data register. This register contains the result of the most recent conversion completed on channel 3.	NA	27.6.7
DAT4	RO	0x030	ADC Channel 4 Data register. This register contains the result of the most recent conversion completed on channel 4.	NA	27.6.7
DAT5	RO	0x034	ADC Channel 5 Data register. This register contains the result of the most recent conversion completed on channel 5.	NA	27.6.7
DAT6	RO	0x038	ADC Channel 6 Data register. This register contains the result of the most recent conversion completed on channel 6.	NA	27.6.7
DAT7	RO	0x03C	ADC Channel 7 Data register. This register contains the result of the most recent conversion completed on channel 7.	NA	27.6.7
DAT8	RO	0x040	ADC Channel 8 Data register. This register contains the result of the most recent conversion completed on channel 7.	NA	27.6.7
DAT9	RO	0x044	ADC Channel 9 Data register. This register contains the result of the most recent conversion completed on channel 7.	NA	27.6.7
DAT10	RO	0x048	ADC Channel 10 Data register. This register contains the result of the most recent conversion completed on channel 7.	NA	27.6.7
DAT11	RO	0x04C	ADC Channel 11 Data register. This register contains the result of the most recent conversion completed on channel 7.	NA	27.6.7

# Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 426. Register overview: ADC (base address 0x400A 0000)

Name	Access	Offset	Description	Reset value	Section
THR0_LOW	R/W	0x050	ADC Low Compare Threshold register 0: Contains the lower threshold level for automatic threshold comparison for any channels linked to threshold pair 0.	0x0	27.6.8
THR1_LOW	R/W	0x054	ADC Low Compare Threshold register 1: Contains the lower threshold level for automatic threshold comparison for any channels linked to threshold pair 1.	0x0	27.6.8
THR0_HIGH	R/W	0x058	ADC High Compare Threshold register 0: Contains the upper threshold level for automatic threshold comparison for any channels linked to threshold pair 0.	0x0	27.6.10
THR1_HIGH	R/W	0x05C	ADC High Compare Threshold register 1: Contains the upper threshold level for automatic threshold comparison for any channels linked to threshold pair 1.	0x0	27.6.10
CHAN_ THRSEL	R/W	0x060	ADC Channel-Threshold Select register. Specifies which set of threshold compare registers are to be used for each channel	0x0	27.6.12
INTEN	R/W	0x064	ADC Interrupt Enable register. This register contains enable bits that enable the sequence-A, sequence-B, threshold compare and data overrun interrupts to be generated.	0x0	27.6.13
FLAGS	RO	0x068	ADC Flags register. Contains the four interrupt/DMA trigger flags and the individual component overrun and threshold-compare flags. (The overrun bits replicate information stored in the result registers).	0x0	27.6.14
STARTUP	R/W	0x06C	ADC Startup register.	0x0	27.6.15
CALIB	R/W/RO	0x070	ADC Calibration register.	0x0	27.6.16

# Chapter 27: LPC5411x 12-bit ADC controller (ADC)

# 27.6.1 ADC Control register

This register specifies the clock divider value to be used to generate the ADC clock **in synchronous mode** and general operating mode bits including resolution and sampling time.

Table 427. ADC Control register (CTRL, offset 0x0) bit description

Bit	Symbol	Value	Description	Reset value
7:0 CLKDIV		-	In synchronous mode only, the system clock is divided by this value plus one to produce the clock for the ADC converter, which should be less than or equal to 72 MHz.	0x0
			Typically, software should program the smallest value in this field that yields this maximum clock rate or slightly less, but in certain cases (such as a high-impedance analog source) a slower clock may be desirable.	
			Remark: This field is ignored in the asynchronous operating mode.	
8	ASYNMODE		Select clock mode.	0x0
		0	Synchronous mode. The ADC clock is derived from the system clock based on the divide value selected in the CLKDIV field. The ADC clock will be started in a controlled fashion in response to a trigger to eliminate any uncertainty in the launching of an ADC conversion in response to any synchronous (on-chip) trigger. In Synchronous mode with the SYNCBYPASS bit (in a sequence control register) set, sampling of the ADC input and start of conversion will initiate 2 system clocks after the leading edge of a (synchronous) trigger pulse.	
		1	Asynchronous mode. The ADC clock is based on the output of the ADC clock divider ADCCLKSEL in the SYSCON block.	
10:9	RESOL		The number of bits of ADC resolution. Accuracy can be reduced to achieve higher conversion rates. A single conversion (including one conversion in a burst or sequence) requires the selected number of bits of resolution plus 3 ADC clocks.	0x3
			<b>Remark:</b> This field must only be altered when the ADC is fully idle. Changing it during any kind of ADC operation may have unpredictable results.	
			Remark: ADC clock frequencies for various resolutions must not exceed: - 5x the system clock rate for 12-bit resolution - 4.3x the system clock rate for 10-bit resolution - 3.6x the system clock for 8-bit resolution - 3x the bus clock rate for 6-bit resolution	
		0x0	6-bit resolution. An ADC conversion requires 9 ADC clocks, plus any clocks specified by the TSAMP field.	
		0x1	8-bit resolution. An ADC conversion requires 11 ADC clocks, plus any clocks specified by the TSAMP field.	
		0x2	10-bit resolution. An ADC conversion requires 13 ADC clocks, plus any clocks specified by the TSAMP field.	
		0x3	12-bit resolution. An ADC conversion requires 15 ADC clocks, plus any clocks specified by the TSAMP field.	

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 427. ADC Control register (CTRL, offset 0x0) bit description

Bit	Symbol	Value	Description	Reset value
11	BYPASSCAL		Bypass Calibration. This bit may be set to avoid the need to calibrate if offset error is not a concern in the application.	0x0
		0	Calibrate. The stored calibration value will be applied to the ADC during conversions to compensated for offset error. A calibration cycle must be performed each time the chip is powered-up. Re-calibration may be warranted periodically - especially if operating conditions have changed.	
		1	Bypass calibration. Calibration is not utilized. Less time is required when enabling the ADC - particularly following chip power-up. Attempts to launch a calibration cycle are blocked when this bit is set.	
14:12	TSAMP	-	Sample Time. The default sampling period (TSAMP = "000") at the start of each conversion is 2.5 ADC clock periods. Depending on a variety of factors, including operating conditions and the output impedance of the analog source, longer sampling times may be required. See Section 27.7.10.	0x0
			The TSAMP field specifies the number of additional ADC clock cycles, from zero to seven, by which the sample period will be extended. The total conversion time will increase by the same number of clocks.	
			000 - The sample period will be the default 2.5 ADC clocks. A complete conversion with 12-bits of accuracy will require 15 clocks.	
			001- The sample period will be extended by one ADC clock to a total of 3.5 clock periods. A complete 12-bit conversion will require 16 clocks.	
			010 - The sample period will be extended by two clocks to 4.5 ADC clock cycles. A complete 12-bit conversion will require 17 ADC clocks.	
			111 - The sample period will be extended by seven clocks to 9.5 ADC clock cycles. A complete 12-bit conversion will require 22 ADC clocks.	
31:15	-	-	Reserved. Read value is undefined, only zero should be written.	NA

## 27.6.2 Input Select register

This register allows the temperature sensor to be used as an alternate input for ADC channel 0.

Table 428. Input Select register (INSEL, offset 0x04) bit description

Bit	Symbol	Value	Description	Reset value
1:0	SEL		Selects the input source for channel 0. All other values are reserved.	0x0
		0x0	ADC0_IN0 function.	
		0x3	Internal temperature sensor.	
31:2	-	-	Reserved. Read value is undefined, only zero should be written.	0x0

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.3 ADC Conversion Sequence A Control register

There are two independent conversion sequences that can be configured, each consisting of a set of conversions on one or more channels. This control register specifies the channel selection and trigger conditions for the A sequence and contains bits to allow software to initiate that conversion sequence.

Remark: Set the BURST and SEQU\_ENA bits at the same time.

Table 429: ADC Conversion Sequence A Control register (SEQA\_CTRL, offset 0x08) bit description

Bit	Symbol	Value	Description	Reset value
11:0	CHANNELS	-	Selects which one or more of the ADC channels will be sampled and converted when this sequence is launched. A 1 in any bit of this field will cause the corresponding channel to be included in the conversion sequence, where bit 0 corresponds to channel 0, bit 1 to channel 1 and so forth.	0x00
			When this conversion sequence is triggered, either by a hardware trigger or via software command, ADC conversions will be performed on each enabled channel, in sequence, beginning with the lowest-ordered channel.	
			<b>Remark:</b> This field can ONLY be changed while SEQA_ENA (bit 31) is LOW. It is allowed to change this field and set bit 31 in the same write.	
17:12	TRIGGER	-	Selects which of the available hardware trigger sources will cause this conversion sequence to be initiated. Program the trigger input number in this field. See Table 443.	0x0
			<b>Remark:</b> In order to avoid generating a spurious trigger, it is recommended writing to this field only when SEQA_ENA (bit 31) is low. It is safe to change this field and set bit 31 in the same write.	
18	TRIGPOL		Select the polarity of the selected input trigger for this conversion sequence.	0x0
			<b>Remark:</b> In order to avoid generating a spurious trigger, it is recommended writing to this field only when SEQA_ENA (bit 31) is low. It is safe to change this field and set bit 31 in the same write.	
		0	Negative edge. A negative edge launches the conversion sequence on the selected trigger input.	
		1	Positive edge. A positive edge launches the conversion sequence on the selected trigger input.	
19	SYNCBYPASS		Setting this bit allows the hardware trigger input to bypass synchronization flip-flop stages and therefore shorten the time between the trigger input signal and the start of a conversion. There are slightly different criteria for whether or not this bit can be set depending on the clock operating mode:	0x0
			Synchronous mode (the ASYNMODE in the CTRL register = 0): Synchronization may be bypassed (this bit may be set) if the selected trigger source is already synchronous with the main system clock (eg. coming from an on-chip, system-clock-based timer). Whether this bit is set or not, a trigger pulse must be maintained for at least one system clock period.	
			Asynchronous mode (the ASYNMODE in the CTRL register = 1): Synchronization may be bypassed (this bit may be set) if it is certain that the duration of a trigger input pulse will be at least one cycle of the ADC clock (regardless of whether the trigger comes from and on-chip or off-chip source). If this bit is NOT set, the trigger pulse must at least be maintained for one system clock period.	
		0	Enable trigger synchronization. The hardware trigger bypass is not enabled.	
		1	Bypass trigger synchronization. The hardware trigger bypass is enabled.	
25:20	-	-	Reserved. Read value is undefined, only zero should be written.	N/A

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 429: ADC Conversion Sequence A Control register (SEQA\_CTRL, offset 0x08) bit description

Bit	Symbol	Value	Description	Reset value
26	START	-	Writing a 1 to this field will launch one pass through this conversion sequence. The behavior will be identical to a sequence triggered by a hardware trigger. Do not write 1 to this bit if the BURST bit is set.	0x0
			<b>Remark:</b> This bit is only set to a 1 momentarily when written to launch a conversion sequence. It will consequently always read back as a zero.	
27	BURST	-	Writing a 1 to this bit will cause this conversion sequence to be continuously cycled through. Other sequence A triggers will be ignored while this bit is set.	0x0
			Repeated conversions can be halted by clearing this bit. The sequence currently in progress will be completed before conversions are terminated. Note that a new sequence could begin just before BURST is cleared.	
28	SINGLESTEP	-	When this bit is set, a hardware trigger or a write to the START bit will launch a single conversion on the next channel in the sequence instead of the default response of launching an entire sequence of conversions. Once all of the channels comprising a sequence have been converted, a subsequent trigger will repeat the sequence beginning with the first enabled channel.	0x0
			Interrupt generation will still occur either after each individual conversion or at the end of the entire sequence, depending on the state of the MODE bit.	
29	LOWPRIO		Set priority for sequence A.	0x0
		0	Low priority. Any B trigger which occurs while an A conversion sequence is active will be ignored and lost.	
		(in lat	High priority. Setting this bit to a 1 will permit any enabled B sequence trigger (including a B sequence software start) to immediately interrupt sequence A and launch a B sequence in it's place. The conversion currently in progress will be terminated.	
			The A sequence that was interrupted will automatically resume after the B sequence completes. The channel whose conversion was terminated will be re-sampled and the conversion sequence will resume from that point.	
30	MODE	sequence will be accomplished via reading the global data register (SEC at the end of each conversion, or the individual channel result registers of the entire sequence.  Impacts when conversion-complete interrupt/DMA trigger for sequence-generated and which overrun conditions contribute to an overrun interru	Indicates whether the primary method for retrieving conversion results for this sequence will be accomplished via reading the global data register (SEQA_GDAT) at the end of each conversion, or the individual channel result registers at the end of the entire sequence.  Impacts when conversion-complete interrupt/DMA trigger for sequence-A will be generated and which overrun conditions contribute to an overrun interrupt as described below.	0x0
		0	End of conversion. The sequence A interrupt/DMA trigger will be set at the end of each individual ADC conversion performed under sequence A. This flag will mirror the DATAVALID bit in the SEQA_GDAT register.  The OVERRUN bit in the SEQA_GDAT register will contribute to generation of an overrun interrupt/DMA trigger if enabled.	
		1	End of sequence. The sequence A interrupt/DMA trigger will be set when the entire set of sequence-A conversions completes. This flag will need to be explicitly cleared by software or by the DMA-clear signal in this mode.  The OVERRUN bit in the SEQA_GDAT register will NOT contribute to generation of an overrun interrupt/DMA trigger since it is assumed this register may not be utilized in this mode.	

**UM10914 NXP Semiconductors** 

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 429: ADC Conversion Sequence A Control register (SEQA\_CTRL, offset 0x08) bit description

Bit	Symbol	Value	Description	Reset value
31	SEQA_ENA		Sequence Enable. In order to avoid spuriously triggering the sequence, care should be taken to only set the SEQA_ENA bit when the selected trigger input is in its INACTIVE state (as defined by the TRIGPOL bit). If this condition is not met, the sequence will be triggered immediately upon being enabled.	0x0
			Remark: In order to avoid spuriously triggering the sequence, care should be taken to only set the SEQA_ENA bit when the selected trigger input is in its INACTIVE state (as defined by the TRIGPOL bit). If this condition is not met, the sequence will be triggered immediately upon being enabled.	
		0	Disabled. Sequence A is disabled. Sequence A triggers are ignored. If this bit is cleared while sequence A is in progress, the sequence will be halted at the end of the current conversion. After the sequence is re-enabled, a new trigger will be required to restart the sequence beginning with the next enabled channel.	
		1	Enabled. Sequence A is enabled.	

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.4 ADC Conversion Sequence B Control register

There are two independent conversion sequences that can be configured, each consisting of a set of conversions on one or more channels. This control register specifies the channel selection and trigger conditions for the B sequence, as well bits to allow software to initiate that conversion sequence.

Table 430: ADC Conversion Sequence B Control register (SEQB\_CTRL, offset 0x0C) bit description

Bit	Symbol	Value	Description	Reset value
11:0	CHANNELS	-	Selects which one or more of the ADC channels will be sampled and converted when this sequence is launched. A 1 in any bit of this field will cause the corresponding channel to be included in the conversion sequence, where bit 0 corresponds to channel 0, bit 1 to channel 1 and so forth.	0x00
			When this conversion sequence is triggered, either by a hardware trigger or via software command, ADC conversions will be performed on each enabled channel, in sequence, beginning with the lowest-ordered channel.	
			<b>Remark:</b> This field can ONLY be changed while SEQB_ENA (bit 31) is LOW. It is allowed to change this field and set bit 31 in the same write.	
17:12	TRIGGER	-	Selects which of the available hardware trigger sources will cause this conversion sequence to be initiated. Program the trigger input number in this field. See Table 443.	0x0
			<b>Remark:</b> In order to avoid generating a spurious trigger, it is recommended writing to this field only when SEQB_ENA (bit 31) is low. It is safe to change this field and set bit 31 in the same write.	
18	TRIGPOL		Select the polarity of the selected input trigger for this conversion sequence.	0x0
			<b>Remark:</b> In order to avoid generating a spurious trigger, it is recommended writing to this field only when SEQB_ENA (bit 31) is low. It is safe to change this field and set bit 31 in the same write.	
		0	Negative edge. A negative edge launches the conversion sequence on the selected trigger input.	
		1	Positive edge. A positive edge launches the conversion sequence on the selected trigger input.	
19	SYNCBYPASS		Setting this bit allows the hardware trigger input to bypass synchronization flip-flop stages and therefore shorten the time between the trigger input signal and the start of a conversion. There are slightly different criteria for whether or not this bit can be set depending on the clock operating mode:	0x0
			Synchronous mode (the ASYNMODE in the CTRL register = 0): Synchronization may be bypassed (this bit may be set) if the selected trigger source is already synchronous with the main system clock (eg. coming from an on-chip, system-clock-based timer). Whether this bit is set or not, a trigger pulse must be maintained for at least one system clock period.	
			Asynchronous mode (the ASYNMODE in the CTRL register = 1): Synchronization may be bypassed (this bit may be set) if it is certain that the duration of a trigger input pulse will be at least one cycle of the ADC clock (regardless of whether the trigger comes from and on-chip or off-chip source). If this bit is NOT set, the trigger pulse must at least be maintained for one system clock period.	
		0	Enable synchronization. The hardware trigger bypass is not enabled.	
		1	Bypass synchronization. The hardware trigger bypass is enabled.	
25:20	-	-	Reserved. Read value is undefined, only zero should be written.	N/A

**UM10914 NXP Semiconductors** 

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 430: ADC Conversion Sequence B Control register (SEQB\_CTRL, offset 0x0C) bit description

Bit	Symbol	Value	Description	Reset value
26	START	-	Writing a 1 to this field will launch one pass through this conversion sequence. The behavior will be identical to a sequence triggered by a hardware trigger. Do not write 1 to this bit if the BURST bit is set.	0x0
			<b>Remark:</b> This bit is only set to a 1 momentarily when written to launch a conversion sequence. It will consequently always read back as a zero.	
27	BURST	-	Writing a 1 to this bit will cause this conversion sequence to be continuously cycled through. Other sequence B triggers will be ignored while this bit is set.	0x0
			Repeated conversions can be halted by clearing this bit. The sequence currently in progress will be completed before conversions are terminated.	
28	SINGLESTEP	-	When this bit is set, a hardware trigger or a write to the START bit will launch a single conversion on the next channel in the sequence instead of the default response of launching an entire sequence of conversions. Once all of the channels comprising a sequence have been converted, a subsequent trigger will repeat the sequence beginning with the first enabled channel.	0x0
			Interrupt generation will still occur either after each individual conversion or at the end of the entire sequence, depending on the state of the MODE bit.	
29	-	-	Reserved. Read value is undefined, only zero should be written.	N/A
30	MODE		Indicates whether the primary method for retrieving conversion results for this sequence will be accomplished via reading the global data register (SEQB_GDAT) at the end of each conversion, or the individual channel result registers at the end of the entire sequence.  Impacts when conversion-complete interrupt/DMA trigger for sequence-B will be generated and which overrun conditions contribute to an overrun interrupt as described below.	0x0
		0	End of conversion. The sequence B interrupt/DMA trigger will be set at the end of each individual ADC conversion performed under sequence B. This flag will mirror the DATAVALID bit in the SEQB_GDAT register.  The OVERRUN bit in the SEQB_GDAT register will contribute to generation of an overrun interrupt/DMA trigger if enabled.	
		1	End of sequence. The sequence B interrupt/DMA trigger will be set when the entire set of sequence-B conversions completes. This flag will need to be explicitly cleared by software or by the DMA-clear signal in this mode.  The OVERRUN bit in the SEQB_GDAT register will NOT contribute to generation of an overrun interrupt/DMA trigger since it is assumed this register may not be utilized in this mode.	
31	SEQB_ENA		Sequence Enable. In order to avoid spuriously triggering the sequence, care should be taken to only set the SEQB_ENA bit when the selected trigger input is in its INACTIVE state (as defined by the TRIGPOL bit). If this condition is not met, the sequence will be triggered immediately upon being enabled.	0x0
			Remark: In order to avoid spuriously triggering the sequence, care should be taken to only set the SEQB_ENA bit when the selected trigger input is in its INACTIVE state (as defined by the TRIGPOL bit). If this condition is not met, the sequence will be triggered immediately upon being enabled.	
		0	Disabled. Sequence B is disabled. Sequence B triggers are ignored. If this bit is cleared while sequence B is in progress, the sequence will be halted at the end of the current conversion. After the sequence is re-enabled, a new trigger will be required to restart the sequence beginning with the next enabled channel.	
		1	Enabled. Sequence B is enabled.	1

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.5 ADC Global Data register A

The ADC Global Data registers contain the result of the most recent ADC conversion completed under each conversion sequence.

Results of ADC conversions can be read in one of two ways. One is to use these ADC Global Data registers to read data from the ADC at the end of each ADC conversion. Another is to read the individual ADC Channel Data registers, typically after the entire sequence has completed. It is recommended to use one method consistently for a given conversion sequence.

The global registers are useful in conjunction with DMA operation - particularly when the channels selected for conversion are not sequential (hence the addresses of the individual result registers will not be sequential, making it difficult for the DMA engine to address them). For interrupt-driven code it will more likely be advantageous to wait for an entire sequence to complete and then retrieve the results from the individual channel registers.

**Remark:** The method to be employed for each sequence should be reflected in the MODE bit in the corresponding SEQn\_CTRL register since this will impact interrupt and overrun flag generation.

Table 431: ADC Sequence A Global Data register (SEQA\_GDAT, offset 0x10) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved.	NA
15:4	RESULT	This field contains the 12-bit ADC conversion result from the most recent conversion performed under conversion sequence associated with this register.	NA
		The result is a binary fraction representing the voltage on the currently-selected input channel as it falls within the range of VREFP to VREFN. Zero in the field indicates that the voltage on the input pin was less than, equal to, or close to that on VREFN, while 0xFFF indicates that the voltage on the input was close to, equal to, or greater than that on VREFP.	
		DATAVALID = 1 indicates that this result has not yet been read.	
17:16	THCMPRANGE	Indicates whether the result of the last conversion performed was above, below or within the range established by the designated threshold comparison registers (THRn_LOW and THRn_HIGH).	NA
19:18	THCMPCROSS	Indicates whether the result of the last conversion performed represented a crossing of the threshold level established by the designated LOW threshold comparison register (THRn_LOW) and, if so, in what direction the crossing occurred.	NA
25:20	-	Reserved.	NA
29:26	CHN	These bits contain the channel from which the RESULT bits were converted (e.g. 0000 identifies channel 0, 0001 channel 1, etc.).	NA
30	OVERRUN	This bit is set if a new conversion result is loaded into the RESULT field before a previous result has been read - i.e. while the DATAVALID bit is set. This bit is cleared, along with the DATAVALID bit, whenever this register is read.	0x0
		This bit will contribute to an overrun interrupt/DMA trigger if the MODE bit (in SEQAA_CTRL) for the corresponding sequence is set to '0' (and if the overrun interrupt is enabled).	
31	DATAVALID	This bit is set to '1' at the end of each conversion when a new result is loaded into the RESULT field. It is cleared whenever this register is read.	0x0
		This bit will cause a conversion-complete interrupt for the corresponding sequence if the MODE bit (in SEQA_CTRL) for that sequence is set to 0 (and if the interrupt is enabled).	

UM10914

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

# 27.6.6 ADC Global Data register B

See the description of ADC Global Data register A in Section 27.6.3.

Table 432: ADC Sequence B Global Data register (SEQB\_GDAT, offset 0x14) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved.	NA
15:4	RESULT	This field contains the 12-bit ADC conversion result from the most recent conversion performed under conversion sequence associated with this register.	NA
		The result is a binary fraction representing the voltage on the currently-selected input channel as it falls within the range of VREFP to VREFN. Zero in the field indicates that the voltage on the input pin was less than, equal to, or close to that on VREFN, while 0xFFF indicates that the voltage on the input was close to, equal to, or greater than that on VREFP.	
		DATAVALID = 1 indicates that this result has not yet been read.	
17:16	THCMPRANGE	Indicates whether the result of the last conversion performed was above, below or within the range established by the designated threshold comparison registers (THRn_LOW and THRn_HIGH).	
19:18	THCMPCROSS	Indicates whether the result of the last conversion performed represented a crossing of the threshold level established by the designated LOW threshold comparison register (THRn_LOW) and, if so, in what direction the crossing occurred.	
25:20	-	Reserved.	NA
29:26	CHN	These bits contain the channel from which the RESULT bits were converted (e.g. 0000 identifies channel 0, 0001 channel 1, etc.).	NA
30	OVERRUN	This bit is set if a new conversion result is loaded into the RESULT field before a previous result has been read - i.e. while the DATAVALID bit is set. This bit is cleared, along with the DATAVALID bit, whenever this register is read.	0x0
		This bit will contribute to an overrun interrupt/DMA trigger if the MODE bit (in SEQB_CTRL) for the corresponding sequence is set to '0' (and if the overrun interrupt is enabled).	
31	DATAVALID	This bit is set to '1' at the end of each conversion when a new result is loaded into the RESULT field. It is cleared whenever this register is read.	0x0
		This bit will cause a conversion-complete interrupt for the corresponding sequence if the MODE bit (in SEQB_CTRL) for that sequence is set to 0 (and if the interrupt is enabled).	

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.7 ADC Channel Data registers 0 to 11

The ADC Channel Data registers hold the result of the last conversion completed for each ADC channel. They also include status bits to indicate when a conversion has been completed, when a data overrun has occurred, and where the most recent conversion fits relative to the range dictated by the high and low threshold registers.

Results of ADC conversion can be read in one of two ways. One is to use the ADC Global Data registers for each of the sequences to read data from the ADC at the end of each ADC conversion. Another is to use these individual ADC Channel Data registers, typically after the entire sequence has completed. It is recommended to use one method consistently for a given conversion sequence.

**Remark:** The method to be employed for each sequence should be reflected in the MODE bit in the corresponding SEQ\_CTRL register since this will impact interrupt and overrun flag generation.

The information presented in the DAT registers always pertains to the most recent conversion completed on that channel regardless of what sequence requested the conversion or which trigger caused it.

The OVERRUN fields for each channel are also replicated in the FLAGS register.

Table 433. ADC Data registers (DAT[0:11], offset [0x020:0x04C]) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved.	NA
15:4	RESULT	This field contains the 12-bit ADC conversion result from the last conversion performed on this channel. This will be a binary fraction representing the voltage on the AD0[n] pin, as it falls within the range of $V_{REFP}$ to $V_{REFN}$ . Zero in the field indicates that the voltage on the input pin was less than, equal to, or close to that on $V_{REFN}$ , while 0xFFF indicates that the voltage on the input was close to, equal to, or greater than that on $V_{REFP}$ .	NA
17:16	THCMPRANGE	Threshold Range Comparison result.	NA
		0x0 = In Range: The last completed conversion was greater than or equal to the value programmed into the designated LOW threshold register (THRn_LOW) but less than or equal to the value programmed into the designated HIGH threshold register (THRn_HIGH).	
		0x1 = Below Range: The last completed conversion on was less than the value programmed into the designated LOW threshold register (THRn_LOW).	
		0x2 = Above Range: The last completed conversion was greater than the value programmed into the designated HIGH threshold register (THRn_HIGH).	
		0x3 = Reserved.	

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 433. ADC Data registers (DAT[0:11], offset [0x020:0x04C]) bit description

Bit	Symbol	Description	Reset value
19:18	THCMPCROSS	Threshold Crossing Comparison result.	NA
		0x0 = No threshold Crossing detected: The most recent completed conversion on this channel had the same relationship (above or below) to the threshold value established by the designated LOW threshold register (THRn_LOW) as did the previous conversion on this channel.	
		0x1 = Reserved.	
		$0x2 = Downward Threshold Crossing Detected. Indicates that a threshold crossing in the downward direction has occurred - i.e. the previous sample on this channel was above the threshold value established by the designated LOW threshold register (THRn_LOW) and the current sample is below that threshold.$	
		0x3 = Upward Threshold Crossing Detected. Indicates that a threshold crossing in the upward direction has occurred - i.e. the previous sample on this channel was below the threshold value established by the designated LOW threshold register (THRn_LOW) and the current sample is above that threshold.	
25:20	-	Reserved. Read value is undefined, only zero should be written.	NA
29:26	CHANNEL	This field is hard-coded to contain the channel number that this particular register relates to (i.e. this field will contain 0b0000 for the DAT0 register, 0b0001 for the DAT1 register, etc)	NA
30	OVERRUN	This bit will be set to a 1 if a new conversion on this channel completes and overwrites the previous contents of the RESULT field before it has been read - i.e. while the DONE bit is set.	NA
		This bit is cleared, along with the DONE bit, whenever this register is read or when the data related to this channel is read from either of the global SEQn_GDAT registers.	
		This bit (in any of the 12 registers) will cause an overrun interrupt/DMA trigger to be asserted if the overrun interrupt is enabled.	
		<b>Remark:</b> While it is allowed to include the same channels in both conversion sequences, doing so may cause erratic behavior of the DONE and OVERRUN bits in the data registers associated with any of the channels that are shared between the two sequences. Any erratic OVERRUN behavior will also affect overrun interrupt generation, if enabled.	
31	DATAVALID	This bit is set to 1 when an ADC conversion on this channel completes.	NA
		This bit is cleared whenever this register is read or when the data related to this channel is read from either of the global SEQn_GDAT registers.	
		<b>Remark:</b> While it is allowed to include the same channels in both conversion sequences, doing so may cause erratic behavior of the DONE and OVERRUN bits in the data registers associated with any of the channels that are shared between the two sequences. Any erratic OVERRUN behavior will also affect overrun interrupt generation, if enabled.	

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.8 ADC Compare Low Threshold register 0

These registers set the LOW threshold levels against which ADC conversions on all channels will be compared.

Each channel will either be compared to the THR0\_LOW/HIGH registers or to the THR1\_LOW/HIGH registers depending on what is specified for that channel in the CHAN\_THRSEL register.

A conversion result LESS THAN this value on any channel will cause the THCMP\_RANGE status bits for that channel to be set to 0b01. This result will also generate an interrupt/DMA trigger if enabled to do so via the ADCMPINTEN bits associated with each channel in the INTEN register.

If, for two successive conversions on a given channel, one result is below this threshold and the other is equal-to or above this threshold, than a threshold crossing has occurred. In this case the MSB of the THCMP\_CROSS status bits will indicate that a threshold crossing has occurred and the LSB will indicate the direction of the crossing. A threshold crossing event will also generate an interrupt/DMA trigger if enabled to do so via the ADCMPINTEN bits associated with each channel in the INTEN register.

Table 434. ADC Compare Low Threshold register 0 (THR0\_LOW, offset 0x50) bit description

Bit	Symbol	Description	Reset value
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA
15:4	THRLOW	Low threshold value against which ADC results will be compared	0x000
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

### 27.6.9 ADC Compare Low Threshold register 1

See the description of ADC Compare Low Threshold register 0 in Section 27.6.8.

Table 435. ADC Compare Low Threshold register 1 (THR1\_LOW, offset 0x54) bit description

Bit	Symbol	Symbol Description	
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA
15:4	THRLOW	HRLOW Low threshold value against which ADC results will be compared	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.10 ADC Compare High Threshold register 0

These registers set the HIGH threshold level against which ADC conversions on all channels will be compared.

Each channel will either be compared to the THR0\_LOW/HIGH registers or to the THR1\_LOW/HIGH registers depending on what is specified for that channel in the CHAN\_THRSEL register.

A conversion result greater than this value on any channel will cause the THCMP status bits for that channel to be set to 0b10. This result will also generate an interrupt/DMA trigger if enabled to do so via the ADCMPINTEN bits associated with each channel in the INTEN register.

Table 436: Compare High Threshold register0 (THR0\_HIGH, offset 0x58) bit description

Bit	Symbol Description		Reset value
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA
15:4	THRHIGH	HRHIGH High threshold value against which ADC results will be compared 0	
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

### 27.6.11 ADC Compare High Threshold register 1

See the description of ADC Compare High Threshold register 0 in <u>Section 27.6.10</u>.

Table 437: Compare High Threshold register 1 (THR1\_HIGH, offset 0x5C) bit description

Bit	Symbol	Symbol Description	
3:0	-	Reserved. Read value is undefined, only zero should be written.	NA
15:4	THRHIGH	High threshold value against which ADC results will be compared	0x000
31:16	-	Reserved. Read value is undefined, only zero should be written.	NA

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.12 ADC Channel Threshold Select register

For each channel, this register indicates which pair of threshold registers conversion results should be compared to.

Table 438: ADC Channel Threshold Select register (CHAN\_THRSEL, offset 0x60) bit description

Bit	Symbol	Value	Description	Reset value
0	CH0_THRSEL		Threshold select for channel 0.	0x0
		0	Threshold 0. Results for this channel will be compared against the threshold levels indicated in the THR0_LOW and THR0_HIGH registers.	
		1	Threshold 1. Results for this channel will be compared against the threshold levels indicated in the THR1_LOW and THR1_HIGH registers.	
1	CH1_THRSEL	-	Threshold select for channel 1. See description for channel 0.	0x0
2	CH2_THRSEL	-	Threshold select for channel 2. See description for channel 0.	0x0
3	CH3_THRSEL	-	Threshold select for channel 3. See description for channel 0.	0x0
4	CH4_THRSEL	-	Threshold select for channel 4. See description for channel 0.	0x0
5	CH5_THRSEL	-	Threshold select for channel 5. See description for channel 0.	0x0
6	CH6_THRSEL	-	Threshold select for channel 6. See description for channel 0.	0x0
7	CH7_THRSEL	-	Threshold select for channel 7. See description for channel 0.	0x0
8	CH8_THRSEL	-	Threshold select for channel 8. See description for channel 0.	0x0
9	CH9_THRSEL	-	Threshold select for channel 9. See description for channel 0.	0x0
10	CH10_THRSEL	-	Threshold select for channel 10. See description for channel 0.	0x0
11	CH11_THRSEL	-	Threshold select for channel 11. See description for channel 0.	0x0
31:12	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.13 ADC Interrupt Enable register

There are four separate interrupt requests generated by the ADC: conversion, these are -complete or sequence-complete interrupts for each of the two sequences, a threshold-comparison out-of-range interrupt, and a data overrun interrupt. The two conversion/sequence-complete interrupts can also serve as DMA triggers. The threshold and data overrun interrupts share a slot in the NVIC.

These interrupts may be combined into one request on some chips if there is a limited number of interrupt slots. This register contains the interrupt-enable bits for each interrupt.

In this register, threshold events selected in the ADCMPINTENn bits are described as follows:

- Disabled: Threshold comparisons on channel n will not generate an ADC threshold-compare interrupt/DMA trigger.
- Outside threshold: A conversion result on channel n which is outside the range specified by the designated HIGH and LOW threshold registers will set the channel n THCMP flag in the FLAGS register and generate an ADC threshold-compare interrupt/DMA trigger.
- Crossing threshold: Detection of a threshold crossing on channel n will set the channel n THCMP flag in the FLAGS register and generate an ADC threshold-compare interrupt/DMA trigger.

**Remark:** Overrun and threshold-compare interrupts related to a particular channel will occur regardless of which sequence was in progress at the time the conversion was performed or what trigger caused the conversion.

Table 439: ADC Interrupt Enable register (INTEN, offset 0x64) bit description

Bit	Symbol	Value	Description	Reset value
0	SEQA_INTEN		Sequence A interrupt enable.	0x0
		0	Disabled. The sequence A interrupt/DMA trigger is disabled.	
		1	Enabled. The sequence A interrupt/DMA trigger is enabled and will be asserted either upon completion of each individual conversion performed as part of sequence A, or upon completion of the entire A sequence of conversions, depending on the MODE bit in the SEQA_CTRL register.	
1	SEQB_INTEN		Sequence B interrupt enable.	0x0
		0	Disabled. The sequence B interrupt/DMA trigger is disabled.	
		1	Enabled. The sequence B interrupt/DMA trigger is enabled and will be asserted either upon completion of each individual conversion performed as part of sequence B, or upon completion of the entire B sequence of conversions, depending on the MODE bit in the SEQB_CTRL register.	
2	OVR_INTEN		Overrun interrupt enable.	0x0
		0	Disabled. The overrun interrupt is disabled.	
		1	Enabled. The overrun interrupt is enabled. Detection of an overrun condition on any of the 12 channel data registers will cause an overrun interrupt/DMA trigger.	
			In addition, if the MODE bit for a particular sequence is 0, then an overrun in the global data register for that sequence will also cause this interrupt/DMA trigger to be asserted.	

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 439: ADC Interrupt Enable register (INTEN, offset 0x64) bit description

Bit	Symbol	Value	Description	Reset value
4:3	ADCMPINTEN0		Threshold comparison interrupt enable for channel 0.	0x0
		0x0	Disabled.	
		0x1	Outside threshold.	
		0x2	Crossing threshold.	
		0x3	Reserved	
6:5	ADCMPINTEN1	-	Channel 1 threshold comparison interrupt enable. See description for channel 0.	0x0
8:7	ADCMPINTEN2	-	Channel 2 threshold comparison interrupt enable. See description for channel 0.	0x0
10:9	ADCMPINTEN3	ADCMPINTEN3 - Channel 3 threshold comparison interrupt enable. See description for channel 0.		0x0
12:11	ADCMPINTEN4	-	Channel 4 threshold comparison interrupt enable. See description for channel 0.	0x0
14:13	ADCMPINTEN5	-	Channel 5 threshold comparison interrupt enable. See description for channel 0.	0x0
16:15	ADCMPINTEN6	-	Channel 6 threshold comparison interrupt enable. See description for channel 0.	0x0
18:17	ADCMPINTEN7	-	Channel 7 threshold comparison interrupt enable. See description for channel 0.	0x0
20:19	ADCMPINTEN8	-	Channel 8 threshold comparison interrupt enable. See description for channel 0.	0x0
22:21	ADCMPINTEN9	-	Channel 9 threshold comparison interrupt enable. See description for channel 0.	0x0
24:23	ADCMPINTEN10	-	Channel 10 threshold comparison interrupt enable. See description for channel 0.	0x0
26:25	ADCMPINTEN11	-	Channel 21 threshold comparison interrupt enable. See description for channel 0.	0x0
31:27	-	-	Reserved. Read value is undefined, only zero should be written.	NA

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.14 ADC Flags register

The ADC Flags registers contains the four interrupt/DMA trigger flags along with the individual overrun flags that contribute to an overrun interrupt and the component threshold-comparison flags that contribute to that interrupt. Note that the threshold and overrun interrupts hare a slot in the NVIC.

The channel OVERRUN flags mirror those appearing in the individual DAT registers for each channel and indicate a data overrun in each of those registers.

Likewise, the SEQA\_OVR and SEQB\_OVR bits mirror the OVERRUN bits in the two global data registers (SEQA\_GDAT and SEQB\_GDAT).

**Remark:** The SEQn\_INT conversion/sequence-complete flags also serve as DMA triggers.

Table 440: ADC Flags register (FLAGS, offset 0x68) bit description

Bit	Symbol	Description	Reset value
0	THCMP0	Threshold comparison event on Channel 0. Set to 1 upon either an out-of-range result or a threshold-crossing result if enabled to do so in the INTEN register. This bit is cleared by writing a 1.	0x0
1	THCMP1	Threshold comparison event on Channel 1. See description for channel 0.	0x0
2	THCMP2	Threshold comparison event on Channel 2. See description for channel 0.	0x0
3	THCMP3	Threshold comparison event on Channel 3. See description for channel 0.	0x0
4	THCMP4	Threshold comparison event on Channel 4. See description for channel 0.	0x0
5	THCMP5	Threshold comparison event on Channel 5. See description for channel 0.	0x0
6	THCMP6	Threshold comparison event on Channel 6. See description for channel 0.	0x0
7	THCMP7	Threshold comparison event on Channel 7. See description for channel 0.	0x0
8	THCMP8	Threshold comparison event on Channel 8. See description for channel 0.	0x0
9	THCMP9	Threshold comparison event on Channel 9. See description for channel 0.	0x0
10	THCMP10	reshold comparison event on Channel 10. See description for channel 0.	
11	THCMP11	reshold comparison event on Channel 11. See description for channel 0.	
12	OVERRUN0	Mirrors the OVERRRUN status flag from the result register for ADC channel 0	0x0
13	OVERRUN1	Mirrors the OVERRRUN status flag from the result register for ADC channel 1	0x0
14	OVERRUN2	Mirrors the OVERRRUN status flag from the result register for ADC channel 2	0x0
15	OVERRUN3	Mirrors the OVERRRUN status flag from the result register for ADC channel 3	
16	OVERRUN4	Mirrors the OVERRRUN status flag from the result register for ADC channel 4	0x0
17	OVERRUN5	Mirrors the OVERRRUN status flag from the result register for ADC channel 5	0x0
18	OVERRUN6	Mirrors the OVERRRUN status flag from the result register for ADC channel 6	0x0
19	OVERRUN7	Mirrors the OVERRRUN status flag from the result register for ADC channel 7	0x0
20	OVERRUN8	Mirrors the OVERRRUN status flag from the result register for ADC channel 8	0x0
21	OVERRUN9	Mirrors the OVERRRUN status flag from the result register for ADC channel 9	0x0
22	OVERRUN10	Mirrors the OVERRRUN status flag from the result register for ADC channel 10	0x0
23	OVERRUN11	Mirrors the OVERRRUN status flag from the result register for ADC channel 11	0x0
24	SEQA_OVR	Mirrors the global OVERRUN status flag in the SEQA_GDAT register	0x0
25	SEQB_OVR	Mirrors the global OVERRUN status flag in the SEQB_GDAT register	0x0
27:26	-	Reserved.	NA

UM10914

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 440: ADC Flags register (FLAGS, offset 0x68) bit description

Bit	Symbol	Description	Reset value
28	SEQA_INT	Sequence A interrupt/DMA trigger.	0x0
		If the MODE bit in the SEQA_CTRL register is 0, this flag will mirror the DATAVALID bit in the sequence A global data register (SEQA_GDAT), which is set at the end of every ADC conversion performed as part of sequence A. It will be cleared automatically when the SEQA_GDAT register is read.	
		If the MODE bit in the SEQA_CTRL register is 1, this flag will be set upon completion of an entire A sequence. In this case it must be cleared by writing a 1 to this SEQA_INT bit.	
		This interrupt must be enabled in the INTEN register.	
29	SEQB_INT	Sequence A interrupt/DMA trigger.	0x0
		If the MODE bit in the SEQB_CTRL register is 0, this flag will mirror the DATAVALID bit in the sequence A global data register (SEQB_GDAT), which is set at the end of every ADC conversion performed as part of sequence B. It will be cleared automatically when the SEQB_GDAT register is read.	
		If the MODE bit in the SEQB_CTRL register is 1, this flag will be set upon completion of an entire B sequence. In this case it must be cleared by writing a 1 to this SEQB_INT bit.	
		This interrupt must be enabled in the INTEN register.	
30	THCMP_INT	Threshold Comparison Interrupt.	0x0
		This bit will be set if any of the THCMP flags in the lower bits of this register are set to 1 (due to an enabled out-of-range or threshold-crossing event on any channel).	
		Each type of threshold comparison interrupt on each channel must be individually enabled in the INTEN register to cause this interrupt.	
		This bit will be cleared when all of the individual threshold flags are cleared via writing 1s to those bits.	
31	OVR_INT	Overrun Interrupt flag.	0x0
		Any overrun bit in any of the individual channel data registers will cause this interrupt. In addition, if the MODE bit in either of the SEQn_CTRL registers is 0 then the OVERRUN bit in the corresponding SEQn_GDAT register will also cause this interrupt.	
		This interrupt must be enabled in the INTEN register.	
		This bit will be cleared when all of the individual overrun bits have been cleared via reading the corresponding data registers.	

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.6.15 ADC Startup register

This register is used exclusively when enabling the ADC. This register should never be accessed during normal ADC operation. The ADC clock should be selected and running at full frequency prior to writing to this register.

Table 441: ADC Startup register (STARTUP, offset 0x6C) bit description

Bit	Symbol	Description	Reset value
0	ADC_ENA	ADC Enable bit. This bit can only be set to a 1 by software. It is cleared automatically whenever the ADC is powered down.	0x0
		This bit must not be set until at least 10 microseconds after the ADC is powered up (typically by altering a system-level ADC power control bit).	
1	ADC_INIT	ADC Initialization. After enabling the ADC (setting the ADC_ENA bit), the API calibration function will EITHER set this bit or the CALIB bit in the CALIB register, depending on whether or not calibration is required.	0x0
		Setting this bit will launch the "dummy" conversion cycle that is required if a calibration is not performed. It will also reload the stored calibration value from a previous calibration unless the BYPASSCAL bit is set.	
		This bit should only be set AFTER the ADC_ENA bit is set and after the CALIREQD bit is tested to determine whether a calibration or an ADC dummy conversion cycle is required. It should not be set during the same write that sets the ADC_ENA bit.	
		This bit can only be set to a '1' by software. It is cleared automatically when the "dummy" conversion cycle completes.	
31:2	-	Reserved. Read value is undefined, only zero should be written.	0x0

### 27.6.16 ADC Calibration register

This register is used to perform ADC offset calibration. **The maximum ADC clock frequency during calibration is 30 MHz**. If the operating ADC frequency exceeds this, a slower clock should be selected for calibration (eg. increasing the synchronous divided clock value). See Section 27.7.6.

Table 442: ADC Calibration register (CALIB, offset 0x70) bit description

Bit	Symbol	Description	Reset value
0	CALIB	Calibration request. Setting this bit will launch an ADC calibration cycle.	
		This bit can only be set to a '1' by software. It is cleared automatically when the calibration cycle completes.	
1	CALREQD	Calibration required. This read-only bit indicates if calibration is required when enabling the ADC. CALREQD will be '1' if no calibration has been run since the chip was powered-up and if the BYPASSCAL bit in the CTRL register is low.	0x1
		Software will test this bit to determine whether to initiate a calibration cycle or whether to set the ADC_INIT bit (in the STARTUP register) to launch the ADC initialization process which includes a "dummy" conversion cycle. Note: A "dummy" conversion cycle requires approximately 6 ADC clocks as opposed to 81 clocks required for calibration.	
8:2	CALVALUE	Calibration Value. This read-only field displays the calibration value established during last calibration cycle. This value is not typically of any use to the user.	0x0
31:9	-	Reserved. Read value is undefined, only zero should be written.	0x0

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.7 Functional description

### 27.7.1 Conversion Sequences

A conversion sequence is a single pass through a series of ADC conversions performed on a selected set of ADC channels. Software can configure up to two independent conversion sequences, either of which can be triggered by software or by a transition on one of the hardware triggers. Each sequence can be triggered by a different hardware trigger. One of these conversion sequences is referred to as the A sequence and the other as the B sequence.

An optional single-step mode allows advancing through the channels of a sequence one at a time on each successive occurrence of a trigger.

The user can select whether a trigger on the B sequence can interrupt an already in-progress A sequence. The B sequence, however, can never be interrupted by an A trigger.

### 27.7.2 Hardware-triggered conversion

Software can select among hardware triggers will launch each conversion sequence and it can specify the active edge for the selected trigger independently for each conversion sequence.

For each conversion sequence, if a designated trigger event occurs, one single cycle through that conversion sequence will be launched unless:

- The BURST bit in the SEQn CTRL register for this sequence is set to 1.
- The requested conversion sequence is already in progress.
- A set of conversions for the alternate conversion sequence is already in progress except in the case of a B trigger interrupting an A sequence if the A sequence is set to LOWPRIO.

If any of these conditions is true, the new trigger event will be ignored and will have no effect.

In addition, if the single-step bit for a sequence is set, each new trigger will cause a single conversion to be performed on the next channel in the sequence rather that launching a pass through the entire sequence.

If the A sequence is enabled to be interrupted (i.e. the LOWPRIO bit in the SEQA\_CTRL register is set) and a B trigger occurs while an A sequence is in progress, then the following will occur:

- The ADC conversion which is currently in-progress will be aborted.
- The A sequence will be paused, and the B sequence will immediately commence.
- The interrupted A sequence will resume after the B sequence completes, beginning
  with the conversion that was aborted when the interruption occurred. The channel for
  that conversion will be re-sampled.

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.7.2.1 Avoiding spurious hardware triggers

Care should be taken to avoid generating a spurious trigger when writing to the SEQn\_CTRL register to change the trigger selected for the sequence, switch the polarity of the selected trigger, or to enable the sequence for operation.

In general, the TRIGGER and TRIGPOL bits in the SEQn\_ENA bit is should only be written when the sequence is disabled (while the SEQn\_ENA bit = 0). The SEQn\_ENA bit itself should only be set when the selected trigger input is in its INACTIVE state (as designated by the TRIGPOL bit). If this condition is not met, a trigger will be generated immediately upon enabling the sequence - even though no actual transition has occurred on the trigger input.

### 27.7.3 Software-triggered conversion

There are two ways that software can trigger a conversion sequence:

- Start Bit: Setting the START bit in the corresponding SEQn\_CTRL register. The
  response to this is identical to occurrence of a hardware trigger on that sequence.
  Specifically, one cycle of conversions through that conversion sequence will be
  immediately triggered except as indicated above.
- Burst Mode: Set the BURST bit in the SEQn\_CTRL register. As long as this bit is 1
  the designated conversion sequence will be continuously and repetitively cycled
  through. Any new software or hardware trigger on this sequence will be ignored.

If a bursting A sequence is allowed to be interrupted (i.e. the LOWPRIO bit in its SEQA\_CTRL register is set to 1) and a software or hardware trigger for the B sequence occurs, then the burst will be immediately interrupted and a B sequence will be initiated. The interrupted A sequence will resume continuous cycling, starting with the aborted conversion, after the alternate sequence has completed.

#### 27.7.4 Interrupts

There are four interrupts that can be generated by the ADC:

- Conversion-Complete or Sequence-Complete interrupt for sequence A
- Conversion-Complete or Sequence-Complete interrupt for sequence B
- Threshold-Compare Out-of-Range Interrupt
- Data Overrun Interrupt

Any of these interrupt requests may be individually enabled or disabled in the INTEN register. Note that the threshold and overrun interrupts share a slot in the NVIC.

#### 27.7.4.1 Conversion-Complete or Sequence-Complete interrupts

For each of the two sequences, an interrupt/DMA trigger can either be asserted at the end of each ADC conversion performed as part of that sequence or when the entire sequence of conversions is completed. The MODE bits in the SEQn\_CTRL registers select between these alternative behaviors.

If the MODE bit for a sequence is 0 (conversion-complete mode), then the interrupt flag/DMA request for that sequence will reflect the state of the DATAVALID bit in the global data register (SEQn\_GDAT) for that sequence. In this case, reading the SEQn\_GDAT register will automatically clear the interrupt/DMA trigger.

#### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

If the MODE bit for the sequence is 1 (sequence-complete mode) then the interrupt flag/DMA request must be written-to by software to clear it (except when used as a DMA trigger, in which case it will be cleared in hardware by the DMA engine).

### 27.7.4.2 Threshold-Compare Out-of-Range Interrupt

Every conversion performed on any channel is automatically compared against a designated set of low and high threshold levels specified in the THRn\_HIGH and THRn\_LOW registers. The results of this comparison on any individual channel(s) can be enabled to cause a threshold-compare interrupt if that result was above or below the range specified by the two thresholds or, alternatively, if the result represented a crossing of the low threshold in either direction.

This flag must be cleared by a software write to clear the individual THCMP flags in the FLAGS register.

### 27.7.4.3 Data Overrun Interrupt

This interrupt/DMA trigger will be asserted if any of the OVERRUN bits in the individual channel data registers are set. In addition, the OVERRUN bits in the two sequence global data (SEQn\_GDAT) registers will cause this interrupt/DMA trigger IF the MODE bit for that sequence is set to 0 (conversion-complete mode).

This flag will be cleared when the OVERRUN bit that caused it is cleared via reading the register containing it.

Note that the OVERRUN bits in the individual data registers are cleared when data related to that channel is read from either of the global data registers as well as when the individual data registers themselves are read.

### 27.7.5 Optional Operating Modes

There are three optional modes of ADC operation which may be selected in the CTRL register.

Four alternative ADC accuracy settings are available ranging from 12 bits down to 6 bits of resolution. Lowering the ADC resolution results in faster conversion times. A single ADC conversion (including one conversion in a burst or sequence) requires (resolution+3) ADC clocks when the minimum sampling period is selected. When reduced accuracy is selected, the unused LSBs of result data will automatically be forced to zero.

Two clocking modes are available, synchronous mode and asynchronous mode. The synchronous clocking mode uses the system clock in conjunction with an internal. programmable divider. The main advantage of this mode is determinism. The start of ADC sampling is always a fixed number of system clocks following any ADC trigger. The alternative asynchronous mode (on chips where this mode is supported) uses an independent clock source. In this mode the user has greater flexibility in selecting the ADC clock frequency to better achieve the maximum ADC conversion rate without restricting the clock rate for other peripherals. The penalty for using this mode may be longer latency and greater uncertainty in response to a hardware trigger.

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.7.6 Offset calibration and enabling the ADC

The A/D converter includes a built-in, self-calibration mode which can be used to minimize offset error. For applications where offset error is not a concern, calibration may be disabled by setting the BYPASSCAL bit in the CTRL register. If this bit is not set, a calibration cycle must be performed following chip power-up (including exit from deep-sleep, or deep power-down mode) prior to using the ADC.

Additional calibrations may be performed at any time by setting the CALIB bit in the CALIB register. Re-calibration is recommended if the temperature or voltage operating conditions have changed (including if the chip has been in a low-power mode for a considerable period of time). Re-calibration should also be performed if the ADC clock rate is changed.

A calibration cycle requires approximately 81 ADC clocks to complete. Normal ADC conversions cannot be launched, and the ADC Control register must not be written while calibration is in progress.

**Remark:** Enabling the ADC (following chip power-up, exit from any low-power mode, or when the ADC has been manually disabled) requires a specific start-up procedure. It is strongly recommended that the calibration function of the previously noted API be used to enable or re-enable the ADC.

Important: The ADC clock must be running at its full operating frequency prior to calling the API routine to enable the ADC. This means that the desired clocking mode and clock divide value (for sync mode) must be programmed into the CTRL register. If offset calibration is not desired, the BYPASSCAL bit in the CTRL register should also be set prior to calling the API routine to avoid wasting time on an unnecessary calibration cycle.

The ADC cannot be utilized until the startup routine has completed.

### 27.7.7 ADC vs. digital receiver

The analog ADC input must be selected via IOCON registers in order to get accurate voltage readings on the monitored pin. In the IOCON, the pull-up and pull-down resistors should be both disabled using the MODE bits. For a pin hosting an ADC input, it is not possible to have a have the digital function enabled and yet get valid ADC readings. Software must write a 0 to the DIGIMODE bit in the related IOCON register.

#### 27.7.8 DMA control

The sequence A or sequence B conversion sequence complete interrupts may also be used to generate a DMA transfer trigger. To generate a DMA transfer the same conditions must be met as the conditions for generating an interrupt (see Section 27.7.4 and Section 27.6.13).

**Remark:** If DMA is used for a sequence, the corresponding sequence interrupt must be disabled in the INTEN register.

For DMA transfers, only burst requests are supported. The burst size can be set to one in the DMA channel control register. If the number of ADC channels is not equal to one of the other DMA-supported burst sizes (applicable DMA burst sizes are 1, 4, 8), set the burst size to one.

#### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

The DMA transfer size determines when a DMA interrupt is generated. The transfer size can be set to the number of ADC channels being converted. Non-contiguous channels can be transferred by the DMA using the scatter/gather linked lists.

### 27.7.9 ADC hardware trigger inputs

An analog-to-digital conversion can be initiated by a hardware trigger. The trigger can be selected independently for each of the two conversion sequences in the ADC SEQA\_CTRL or SEQB\_CTRL registers by programming the hardware trigger input # into the TRIGGER bits.

#### Related registers:

- Table 429 "ADC Conversion Sequence A Control register (SEQA\_CTRL, offset 0x08) bit description"
- Table 430 "ADC Conversion Sequence B Control register (SEQB CTRL, offset 0x0C) bit description"

Table 443. ADC0 hardware trigger inputs	<b>Table 443.</b>	ADC0	hardware	trigger	inputs
---	-------------------	------	----------	---------	--------

Input #	Source	Description
0	PINT0	See Chapter 11 Group GPIO input interrupt (GINT0/1)
1	PINT1	See Chapter 11 Group GPIO input interrupt (GINT0/1)
2	SCT_OUT7	See Chapter 13 SCTimer/PWM
4:3	-	Unused
5	ARM_TXEV	Transmit Event output from either CPU
7:6	-	Unused

#### **27.7.10** Sample time

The analog input from the selected channel is sampled at the start of each new A/D conversion. The default (and shortest) duration of this sample period is 2.5 ADC clock cycles. Under some conditions, longer sample times may be required. A variety of factors including operating conditions, the ADC clock frequency, the selected ADC resolution, and the impedance of the analog source will influence the required sample period.

ADC channels 6 to 11 are somewhat slower than channels 0 to 5. Lower analog-source impedances may be required for these slow channels for a given sample period and set of operating conditions.

The following table provides guidelines for the required sample times. The "TSAMP" values displayed in the tables refer to the TSAMP field in the ADCTRL register. This value represents the number of additional clock cycles that must be added to the minimum 2.5-clock sample period in order to meet or exceed the required minimum sample time for the maximum ADC clock rate of 72 MHz under worst-case operating conditions. At slower clock frequencies fewer sample clocks will be needed to achieve the required sample times.

### Chapter 27: LPC5411x 12-bit ADC controller (ADC)

Table 444. Minimum required sample times

Selected ADC	Analog signal	Fast channels	(ADC5:0)	Slow channels	Slow channels (ADC11:6)		
Resolution	source impedance	Min. sample time	TSAMP field	Min. sample time	TSAMP field		
12 bits	under 0.05k ohms	20 ns	0	43 ns	1		
	0.05 to 0.1k ohms	23 ns	0	46 ns	1		
	0.1K to 0.2k ohms	26 ns	0	50 ns	2		
	0.2k to 0.5k ohms	31 ns	0	56 ns	2		
	0.5k to 1.0k ohms	47 ns	1	74 ns	3		
	1k to 5k ohms	75 ns	3	105 ns	6		
10 bits	under 0.05k ohms	15 ns	0	35 ns	1		
	0.05 to 0.1k ohms	18 ns	0	38 ns	1		
	0.1K to 0.2k ohms	20 ns	0	40 ns	1		
	0.2k to 0.5k ohms	24 ns	0	46 ns	1		
	0.5k to 1.0k ohms	38 ns	1	61 ns	2		
	1k to 5k ohms	62 ns	2	86 ns	4		
8 bits	under 0.05k ohms	12 ns	0	27 ns	0		
	0.05 to 0.1k ohms	13 ns	0	29 ns	0		
	0.1K to 0.2k ohms	15 ns	0	32 ns	0		
	0.2k to 0.5k ohms	19 ns	0	36 ns	1		
	0.5k to 1.0k ohms	30 ns	0	48 ns	1		
	1k to 5k ohms	48 ns	1	69 ns	3		
6 bits	under 0.05k ohms	9 ns	0	20 ns	0		
	0.05 to 0.1k ohms	10 ns	0	22 ns	0		
	0.1K to 0.2k ohms	11 ns	0	23 ns	0		
	0.2k to 0.5k ohms	13 ns	0	26 ns	0		
	0.5k to 1.0k ohms	22 ns	0	36 ns	1		
	1k to 5k ohms	36 ns	1	51 ns	2		

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.8 Examples

### 27.8.1 Perform a single ADC conversion triggered by software

**Remark:** When ADC conversions are triggered by software only and hardware triggers are not used in the conversion sequence, follow these steps to avoid spurious conversions:

- 1. Before changing the trigger set-up, disable the conversion sequence by setting the SEQ\_ENA bit to 0 in the SEQA\_CTRL register.
- Set the trigger source to an unused setting using the TRIGGER bits in the SEQA\_CTRL register. The value 3, for example, is not used on this device.
- 3. Set the TRIGPOL bit to 1 in the in the SEQA\_CTRL register.

Once the sequence is enabled again, the ADC converts a sample whenever the START bit is written to.

The ADC converts an analog input signal VIN on the ADC0\_[11:0] pins. The VREFP and VREFN pins provide a positive and negative reference voltage input. The result of the conversion is (4095 x VIN)/(VREFP - VREFN). The result of an input voltage below VREFN is 0, and the result of an input voltage above VREFP is 4095 (0xFFF).

To perform a single ADC conversion for ADC0 channel 1 using the analog signal on pin ADC0\_1, follow these steps:

- 1. Enable the analog function on pin ADC0\_1 via IOCON See Table 132 and Table 134.
- Configure the system clock to be 48 MHz and select a CLKDIV value of 0 for a sampling rate of 48 MHz using the ADC CTRL register. This example clock rate does not exceed the 72 MHz limit, so does not need to be further divided.
- 3. Select the synchronous mode in the CTRL register.
- Select ADC channel 1 to perform the conversion by setting the CHANNELS bits to 0x2 in the SEQA\_CTL register.
- 5. Set the TRIGPOL bit to 1 and the SEQA\_ENA bit to 1 in the SEQA\_CTRL register.
- Set the START bit to 1 in the SEQA\_CTRL register.
- 7. Read the RESULT bits in the DAT1 register for the conversion result.

Chapter 27: LPC5411x 12-bit ADC controller (ADC)

### 27.8.2 Perform a sequence of conversions triggered by an external pin

The ADC can perform conversions on a sequence of selected channels. Each individual conversion of the sequence (single-step) or the entire sequence can be triggered by hardware. Hardware triggers are either a signal from an external pin or an internal signal. See Section 27.7.9.

To perform a single-step conversion on the first four channels of ADC0 triggered by rising edges on pin PIO1\_0, follow these steps:

- 1. Enable the analog function on pin ADC0\_0 to ADC0\_3 via IOCON. See <u>Table 132</u> and <u>Table 134</u>.
- 2. Configure PINT1 to respond to PIO1 0, see Chapter 10 for details.
- Configure the system clock to be 72 MHz and select a CLKDIV value of 0 for a sampling rate of 72 MHz using the ADC CTRL register.
- 4. Select the synchronous mode in the CTRL register.
- 5. Select ADC channels 0 to 3 to perform the conversion by setting the CHANNELS bits to 0xF in the SEQA\_CTRL register.
- 6. Select trigger PINT1 by writing 0x1 the TRIGGER bits in the SEQA\_CTRL register.
- 7. To generate one interrupt at the end of the entire sequence, set the MODE bit to 1 in the SEQA\_CTRL register.
- Select single-step mode by setting the SINGLESTEP bit in the SEQA\_CTRL register to 1.
- 9. Enable the Sequence A by setting the SEQA\_ENA bit.
  - A conversion on ADC0 channel 0 will be triggered whenever the pin PIO1\_0 goes from LOW to HIGH. The conversion on the next channel (initially channel 1) is triggered on the next 0 to 1 transition of PINT1. The ADC0 interrupt is generated when the sequence has finished after four 0 to 1 transitions of PINT1.
- 10. Read the RESULT bits in the DAT0 to DAT3 registers for the conversion result.

# **UM10914**

# Chapter 28: LPC5411x CRC engine

Rev. 1.2 — 30 June 2016

**User manual** 

# 28.1 How to read this chapter

The CRC engine is available on all LPC5411x parts.

### 28.2 Features

- Supports three common polynomials CRC-CCITT, CRC-16, and CRC-32.
  - CRC-CCITT:  $x^{16} + x^{12} + x^5 + 1$
  - CRC-16:  $x^{16} + x^{15} + x^2 + 1$
  - CRC-32:  $x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$
- Bit order reverse and 1's complement programmable setting for input data and CRC sum.
- Programmable seed number setting.
- Supports CPU PIO back-to-back transfer.
- Accept any size of data width per write: 8, 16 or 32-bit.
  - 8-bit write: 1-cycle operation
  - 16-bit write: 2-cycle operation (8-bit x 2-cycle)
  - 32-bit write: 4-cycle operation (8-bit x 4-cycle)

# 28.3 Basic configuration

Set the CRC bit in the AHBCLKCTRL0 register (<u>Table 45</u>) to enable the clock to the CRC engine.


# 28.4 Pin description

The CRC engine has no configurable pins.

Chapter 28: LPC5411x CRC engine

# 28.5 General description

The Cyclic Redundancy Check (CRC) generator with programmable polynomial settings supports several CRC standards commonly used.

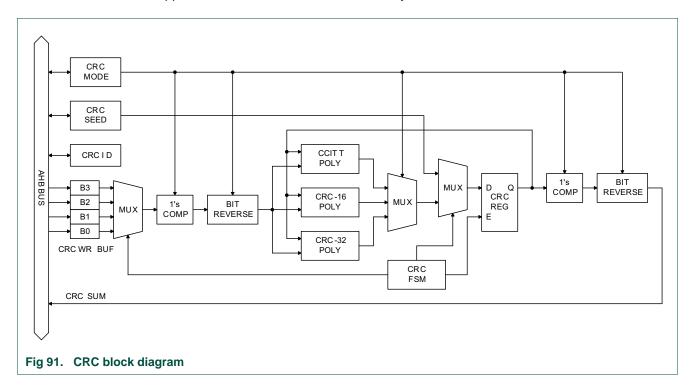

Chapter 28: LPC5411x CRC engine

# 28.6 Register description

Table 445. Register overview: CRC engine (base address 0x4009 5000)

Name	Access	Offset	Description	Reset value	Section
MODE	R/W	0x000	CRC mode register	0x0	28.6.1
SEED	R/W	0x004	CRC seed register	0xFFFF	28.6.2
SUM	RO	0x008	CRC checksum register	0xFFFF	28.6.3
WR_DATA	WO	0x008	CRC data register	-	28.6.4

### 28.6.1 CRC mode register

Table 446. CRC mode register (MODE, offset 0x000) bit description

Bit	Symbol	Description	Reset value
1:0	CRC_POLY	CRC polynomial:  1X = CRC-32 polynomial  01 = CRC-16 polynomial  00 = CRC-CCITT polynomial	0x0
2	BIT_RVS_WR	Data bit order:  1 = Bit order reverse for CRC_WR_DATA (per byte)  0 = No bit order reverse for CRC_WR_DATA (per byte)	0x0
3	CMPL_WR	Data complement: 1 = 1's complement for CRC_WR_DATA 0 = No 1's complement for CRC_WR_DATA	0x0
4	BIT_RVS_SUM	CRC sum bit order:  1 = Bit order reverse for CRC_SUM  0 = No bit order reverse for CRC_SUM	0x0
5	CMPL_SUM	CRC sum complement: 1 = 1's complement for CRC_SUM 0 = No 1's complement for CRC_SUM	0x0
31:6	Reserved	Always 0 when read	0x0

### 28.6.2 CRC seed register

Table 447. CRC seed register (SEED, offset 0x004) bit description

Bit	Symbol	Description	Reset value
31:0	CRC_SEED	A write access to this register will load the CRC seed value the SUM register with selected bit order and 1's complement pre-processes.	0xFFFF
		<b>Remark:</b> A write access to this register will overrule the CRC calculation in progress.	

### 28.6.3 CRC checksum register

This register is a Read-only register containing the most recent checksum.

Table 448. CRC checksum register (SUM, offset 0x008) bit description

Bit	Symbol	Description	Reset value
31:0	CRC_SUM	The most recent CRC sum can be read through this register with selected bit order and	0x0000 FFFF
		1's complement post-processes.	

Chapter 28: LPC5411x CRC engine

### 28.6.4 CRC data register

This register is a Write-only register containing the data block for which the CRC sum will be calculated.

Table 449. CRC data register (WR\_DATA, offset 0x008) bit description

Bit	Symbol	Description	Reset value
31:0		Data written to this register will be taken to perform CRC calculation with selected bit order and 1's complement pre-process. Any write size 8, 16 or 32-bit are allowed and accept back-to-back transactions.	-

### 28.7 Functional description

### 28.7.1 **Timing**

The CRC engine uses some time to process data, which can depend on how it is accessed.

#### A write followed by another write:

For a 16-bit write to the CRC data register followed by another write to the same register, there is 1 wait state added.

For a 32-bit write to the CRC data register followed by another write to the same register, there are 3 wait states added.

### A write followed by a read:

For an 8-bit write to the CRC data register followed by a read of the CRC checksum register, there is 1 wait state added.

For a 16-bit write to the CRC data register followed by a read of the CRC checksum register, there are 2 wait states added.

For a 32-bit write to the CRC data register followed by a read of the CRC checksum register, there are 4 wait states added.

### 28.7.2 Setup

The following sections describe the register settings for each supported CRC standard:

#### **CRC-CCITT** set-up

Polynomial =  $x^{16} + x^{12} + x^5 + 1$ 

Seed Value = 0xFFFF

Bit order reverse for data input: NO 1's complement for data input: NO Bit order reverse for CRC sum: NO 1's complement for CRC sum: NO

CRC\_MODE = 0x0000 0000 CRC\_SEED = 0x0000 FFFF

**User manual** 

### Chapter 28: LPC5411x CRC engine

### CRC-16 set-up

Polynomial =  $x^{16} + x^{15} + x^2 + 1$ 

Seed Value = 0x0000

Bit order reverse for data input: YES
1's complement for data input: NO
Bit order reverse for CRC sum: YES
1's complement for CRC sum: NO
CRC\_MODE = 0x0000 0015
CRC\_SEED = 0x0000 0000

### CRC-32 set-up

Polynomial =  $x^{32}$ +  $x^{26}$  +  $x^{23}$  +  $x^{22}$  +  $x^{16}$  +  $x^{12}$  +  $x^{11}$  +  $x^{10}$  +  $x^8$  +  $x^7$  +  $x^5$  +  $x^4$  +  $x^2$  + x + 1

Seed Value = 0xFFFF FFFF

Bit order reverse for data input: YES 1's complement for data input: NO Bit order reverse for CRC sum: YES 1's complement for CRC sum: YES

CRC\_MODE = 0x0000 0036 CRC\_SEED = 0xFFFF FFFF

# **UM10914**

# Chapter 29: LPC5411x Mailbox

Rev. 1.2 — 30 June 2016

**User manual** 

# 29.1 How to read this chapter

The Mailbox is available on LPC5411x parts that include the Cortex M0+.

### 29.2 Features

- Provides a means Inter-Processor Communication, allowing multiple CPUs to share resources and communicate with each other in a simple manner.
- Each CPU can cause up to 32 user defined interrupts to its partner.
- Each CPU can claim a shared resource if it is available.

# 29.3 Basic configuration

Set the MAILBOX bit in the AHBCLKCTRL0 register (<u>Table 45</u>) to enable the clock to the Mailbox. Enable the interrupt in the NVIC (see <u>Chapter 3</u>).

# 29.4 Pin description

The Mailbox has no configurable pins.

# 29.5 General description

The Mailbox provides a means for simple communication between CPUs.

Chapter 29: LPC5411x Mailbox

### 29.6 Register description

Table 450. Register overview: Mailbox (base address 0x4008 B000)

Name	Access	Offset	Description	Reset value	Section
IRQ0	R/W	0x000	Interrupt request register for the Cortex-M0+ CPU.	0x0	29.6.1
IRQ0SET	WO	0x004	Set bits in IRQ0	-	29.6.2
IRQ0CLR	WO	0x008	Clear bits in IRQ0	-	29.6.3
IRQ1	R/W	0x010	Interrupt request register for the Cortex M4 CPU.	0x0	29.6.4
IRQ1SET	WO	0x014	Set bits in IRQ1	-	29.6.5
IRQ1CLR	WO	0x018	Clear bits in IRQ1	-	29.6.6
MUTEX	R/W	0x0F8	Mutual exclusion register[1]	0x1	29.6.7

<sup>[1]</sup> Reading an writing have specific side effects see detailed register description.

### 29.6.1 M0+ interrupt register

The IRQ0 register allows other CPUs to send interrupt requests to the Cortex-M0+ CPU. This is intended to allow communication between CPUs. For example, one CPU could be handling certain peripherals and signalling another CPU when data is available Each bit can represent a different situation. The use of this feature is entirely up to the user.

Table 451. M0+ interrupt register (IRQ0, offset 0x000) bit description

Bit	Symbol	Description	Reset value
31:0	INTREQ	If any bit is set, an interrupt request is sent to the Cortex-M0+ interrupt controller.	0x0

### 29.6.2 Cortex M0+ interrupt set register

The IRQ0SET register is used to set bits in the IRQ0 register.

Table 452. M0+ interrupt set register (IRQ0SET, offset 0x004) bit description

Bit	Symbol	Description	Reset value
31:0	INTREQSET	Writing 1 sets the corresponding bit in the IRQ0 register.	-

### 29.6.3 M0+ interrupt clear register

The IRQ0CLR register is used to clear bits in the IRQ0 register.

Table 453. M0+ interrupt clear register (IRQ0CLR, offset 0x008) bit description

Bit	Symbol	Description	Reset value
31:0	INTREQCLR	Writing 1 clears the corresponding bit in the IRQ0 register.	-

Chapter 29: LPC5411x Mailbox

### 29.6.4 M4 interrupt register

The IRQ1 register allows other CPUs to send interrupt requests to the Cortex-M4 CPU. This is intended to allow communication between CPUs. For example, one CPU could be handling certain peripherals and signalling another CPU when data is available Each bit can represent a different situation. The use of this feature is entirely up to the user.

Table 454. M4 interrupt (IRQ1, offset 0x010) bit description

Bit	Symbol	Description	Reset value
31:0	INTREQ	If any bit is set, an interrupt request is sent to the Cortex-M0+ interrupt controller.	0x0

### 29.6.5 M4 interrupt set register

The IRQ1SET register is used to set bits in the IRQ1 register.

Table 455. M4 interrupt set register (IRQ1SET, offset 0x014) bit description

Bit	Symbol	Description	Reset value
31:0	INTREQSET	Writing 1 sets the corresponding bit in the IRQ1 register.	-

### 29.6.6 M4 interrupt clear register

The IRQ1CLR register is used to clear bits in the IRQ1 register.

Table 456. M4 interrupt clear register (IRQ1CLR, offset 0x018) bit description

Bit	Symbol	Description	Reset value
31:0	INTREQCLR	Writing 1 clears the corresponding bit in the IRQ1 register.	-

### 29.6.7 Mutual Exclusion register

This register provides an Inter-Processor Communication handshake. When read for any reason, the current value will be returned and the bit will be cleared. The bit will be set again following any write.

This can be used as a resource allocation handshake between 2 CPUs. Whenever a CPU wishes to access a shared resource (possibly a resource allocation table in memory), it reads the MUTEX register. If it sees a 1, it has control over the shared resource allocation. When it has made any needed changes, it writes to the register, causing the EX bit it to become set again, and making control of shared resource allocation available to another CPU. If a CPU reads a 0, it must wait for the bit to read as a 1 before accessing the shared resource allocation information.

Table 457. Mutual Exclusion register (MUTEX, offset 0x0F8) bit description

Bit	Symbol	Description	Reset value
0	EX	Cleared when read, set when written. See usage description above.	0x1
31:1	-	Reserved	-

# **UM10914**

# Chapter 30: LPC5411x Serial Wire Debug (SWD)

Rev. 1.2 — 30 June 2016

**User manual** 

### 30.1 How to read this chapter

Debug functionality is available on all LPC5411x devices. Details depend on whether the Cortex-M0+ is present on the device.

### 30.2 Features

- Supports ARM Serial Wire Debug mode for the Cortex-M4 and, if present, the Cortex-M0+.
- Trace port provides Cortex-M4 CPU instruction trace capability. Output via a Serial Wire Viewer.
- Direct debug access to all memories, registers, and peripherals.
- No target resources are required for the debugging session.
- Breakpoints: the Cortex-M4 includes 6 instruction breakpoints that can also be used to remap instruction addresses for code patches. Two literal comparators that can also be used to remap addresses for patches to literal values. The Cortex-M0+, if present, includes 4 breakpoints.
- Watchpoints: the Cortex-M4 includes 4 data watchpoints that can also be used as triggers. The Cortex-M0+, if present, includes 2 watchpoints.
- Supports JTAG boundary scan.
- Instrumentation Trace Macrocell allows additional software controlled trace for the Cortex-M4.

# 30.3 Basic configuration

The serial wire debug pins are enabled by default. The JTAG pins for boundary scan are selected by hardware after a reset.

# 30.4 Pin description

UM10914

The tables below indicate the various pin functions related to debug. Some of these functions share pins with other functions which therefore may not be used at the same time. Trace using the Serial Wire Output has limited bandwidth.

Table 458. Serial Wire Debug pin description

Function	Type	Connect to	Description
SWCLK	In	PIO0_16	<b>Serial Wire Clock.</b> This pin is the clock for SWD debug logic when in the Serial Wire Debug mode (SWD). This pin is pulled up internally.
SWDIO	I/O	PIO0_17	<b>Serial wire debug data input/output.</b> The SWDIO pin is used by an external debug tool to communicate with and control the part. This pin is pulled up internally.
SWO	Out	PIO0_15 or PIO1_1	<b>Serial Wire Output.</b> The SWO pin optionally provides data from the ITM for an external debug tool to evaluate.

The JTAG boundary pin functions are selected by hardware at reset. See Section 30.6.3.

#### Chapter 30: LPC5411x Serial Wire Debug (SWD)

The following setup is required to enable SWO output on GPIO PIO0-15 (FUNC2) or PIO1\_1 (FUNC2):

- 1. Write 0x0 to TRACECLKDIV (Section 4.5.33). Enables the Trace divider.
- If the clock to the IOCON block is not already enabled, write 0x00002000 to AHBCLKCTRLSET0 (<u>Section 4.5.18</u>). The clock must be enabled in order to access any IOCON registers.

Table 459. JTAG boundary scan pin description

Function	Туре	Description	
TCK	In	JTAG Test Clock. This pin is the clock for JTAG boundary scan when the RESET pin is LOW.	
TMS	In	JTAG Test Mode Select. The TMS pin selects the next state in the TAP state machine. This pin includes an internal pull-up and is used for JTAG boundary scan when the RESET pin is LOW.	
TDI	In	JTAG Test Data In. This is the serial data input for the shift register. This pin includes an internal pull-up and is used for JTAG boundary scan when the RESET pin is LOW.	
TDO	OuT	JTAG Test Data Output. This is the serial data output from the shift register. Data is shifted out of the device on the negative edge of the TCK signal. This pin is used for JTAG boundary scan when the RESET pin is LOW.	
TRST	In	JTAG Test Reset. The TRST pin can be used to reset the test logic within the debug logic. This pin includes an internal pull-up and is used for JTAG boundary scan when the RESET pin is LOW.	

### 30.5 General description

Serial wire debug functions are integrated into each CPU, with up to four breakpoints and two watchpoints. Boundary scan is also available.

Trace on the Cortex-M4 is supported via the Serial Wire Output.

# 30.6 Functional description

#### 30.6.1 Debug limitations

**Important:** Due to limitations of the CPU, the part cannot wake up in the usual manner from deep-sleep mode during debugging.

The debug mode changes the way in which reduced power modes work internal to the CPU. Therefore power measurements should not be made while debugging, power consumption is higher than during normal operation.


During a debugging session, the System Tick Timer is automatically stopped whenever the CPU is stopped. Other peripherals are not affected.


### 30.6.2 Debug connections for SWD

For debugging purposes, it is useful to provide access to the ISP entry pins (see <a href="Chapter 6"LPC5411x Boot process"">Chapter 6 "LPC5411x Boot process"</a>). The ISP entry pins can be used to recover the part from configurations which would disable the SWD port such as improper PLL configuration, assigning another function to the SWD pins via IOCON, entry into deep power-down mode out of reset, etc. The ISP entry pins can be used for other functions such as GPIO but should not be held LOW on power-up or reset.

## Chapter 30: LPC5411x Serial Wire Debug (SWD)

Internal and external SWD connections are shown in Figure 92 and Figure 93.

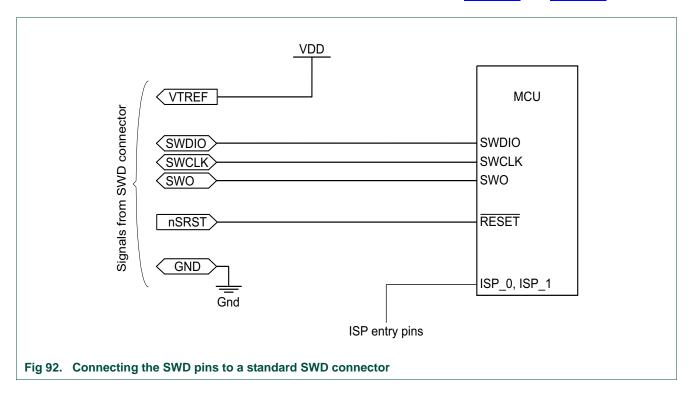

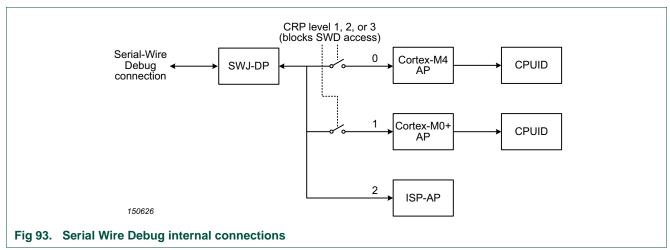

Chapter 30: LPC5411x Serial Wire Debug (SWD)

# 30.6.3 Boundary scan

The RESET pin selects between the test TAP controller for JTAG boundary scan (RESET = LOW) and the ARM SWD debug port TAP controller (RESET = HIGH). The ARM SWD debug port is disabled while the part is in reset. A LOW on the TRST pin resets the test TAP controller.

**Remark:** Boundary scan operations should not be started until 250  $\mu$ s after POR. The test TAP must be reset after the boundary scan and left in either TLR or RTO state. Boundary scan is not affected by Code Read Protection.

**Remark:** POR, BOD reset, or a LOW on the TRST pin puts the test TAP controller in the Test-Logic Reset state. The first TCK clock while RESET = HIGH places the test TAP in Run-Test Idle mode.

# 30.6.4 In-System Programming Access Port (ISP-AP)

The ISP-AP is essentially a register-based communication port that may be accessed by both the CPU and the device debug port.

This port is used to implement certain commands that can operate even when the device has been programmed to the highest Code Read Protection level (CRP level 3). The ISP-AP is active whenever the device is attached to a debugger.

#### 30.6.4.1 Resynchronization request

Communication with the ISP-AP is initiated by the debugger. The debugger first sets the RESYNCH\_REQ bit in the CSW register. The debugger must then reset the device by either writing a 1 to the CHIP\_RESET\_REQ bit in the CSW, or by driving the actual reset pin of the device if it is able to do so.

#### 30.6.4.2 Acknowledgement of resynchronization request

After requesting a resynchronization and resetting the device, the debugger reads the CSW register. This stalls the debugger if the device has not yet completed the resynchronization process. The debugger can repeat this process until it is able to read the CSW and find a 0 there.

#### **30.6.4.3** Return phase

Following the initial resynchronization, communication by the debugger to the device is in the form of 32-bit writes to the REQUEST register. The debugger can read the result in the RETURN register. The debugger polls the RETURN register in the same manner as it polled the CSW following a resynchronization request.

#### 30.6.4.4 Error handling

If an overrun occurs from either side of the communication, the appropriate error flag is set in the CSW. Once such an error occurs, the debugger will need to start with a new resynchronization request in order to clear the error flag.

#### 30.6.4.5 Register description

The registers in the ISP-AP are show below. These registers are readable by the CPU and are intended primarily to allow on-chip ROM routines to implement requests from an external debugger.

#### Chapter 30: LPC5411x Serial Wire Debug (SWD)

Table 460. Register overview: ISP-AP (base address 0x4009 C000)

Name	Access	Offset	Description	Reset value	Section
CSW	R/W	0x000	Command and status word.	0x0	30.6.4.5.1
REQUEST	R/W	0x004	Request from the debugger to the device.	0x0	30.6.4.5.2
RETURN	R/W	0x008	Return value from the device to the debugger.	0x0	30.6.4.5.3
ID	RO	0x0FC	Identification register.	0x002A 0000	30.6.4.5.4

#### 30.6.4.5.1 Command and Status Word register

The CSW register contains command and status bits to facilitate communication between the debugger and the device.

Table 461. Command and Status Word register (CSW, offset 0x000) bit description

Bit	Symbol	Description	Reset value
0	RESYNCH_REQ	The debugger sets this bit to requests a re-synchronization.	0x0
1	REQ_PENDING	A request is pending for the debugger: a value is waiting to be read from the REQUEST register.	0x0
2	DBG_OR_ERR	When 1, a debug overrun has occurred: a REQUEST value has been overwritten by the debugger before it was read by the device.	0x0
3	AHB_OR_ERR	When 1, an AHB overrun has occurred: a RETURN value has been overwritten by the device before it was read by the debugger.	0x0
4	SOFT_RESET	This bit is write-only by the device and resets the ISP-AP.	0x0
5	CHIP_RESET_REQ	This write -only bit causes the device (but not the ISP-AP) to be reset.	0x0
31:6	-	Reserved	-

#### 30.6.4.5.2 Request value register

The REQUEST register is used by a debugger to send action requests to the device.

#### Table 462. Request value register (REQUEST, offset 0x004) bit description

Bit	Symbol	Description	
31:0	1	Request value. Reads as 0 when no new request is present. Cleared by the device. Can	0x0
		be read back by the debugger in order to confirm communication.	

#### 30.6.4.5.3 Return value register

The RETURN register provides any response from the device to the debugger.

#### Table 463. Return value register (RETURN, offset 0x008) bit description

Bit	Symbol	Description	Reset value
31:0		Return value. This is any response from the device to the debugger. If no new data is present, a debugger read will be stalled until new data is available.	0x0

## 30.6.4.5.4 Identification register

The ID register provides an identification of the ISP-AP interface.

#### Table 464. Identification register (ID, offset 0x0FC) bit description

Bit	Symbol	Description	Reset value
31:0	ID	Identification value.	0x002A 0000

#### Chapter 30: LPC5411x Serial Wire Debug (SWD)

#### 30.6.4.6 ISP-AP commands

Commands for the ISP-AP are listed below. These would be written to the REQUEST register.

#### Table 465. ISP-AP commands

Name	Command code	Description
Enter ISP-AP	1	Cause the device to enter ISP-AP command mode. This must be done prior to sending other commands.
Bulk Erase	2	Erase the entire on-chip flash memory.
Query CRP Level	3	Queries the Code Read Protection (CRP) level currently in force on the device.
Exit ISP_AP	4	Cause the device to exit ISP-AP command mode. The Device returns to normal mode.

#### 30.6.4.7 ISP-AP return codes

Return codes for ISP-AP commands are listed below. These would be read from the RETURN register.

#### Table 466. Register overview: ISP-AP return codes

Return code	Description	
0x0000 0000	Command succeeded. Applies to commands other than "Query CRP level".	
0x0010 0001	Debug mode not entered. This is returned if other commands are sent prior to the "Enter ISP-AP" command.	
0x0010 0002	Command not recognized. A command was received other than the ones defined above.	
0x0010 0003	Command failed.	

# 30.7 Debug configuration

#### 30.7.1 Cortex-M4

- Six instruction breakpoints that can also be used to remap instruction addresses for code patches. Two data comparators that can be used to remap addresses for patches to literal values.
- Four data Watchpoints.
- Instrumentation Trace Macrocell allows additional software controlled trace capability.

## 30.7.2 Cortex-M0+ (present on selected devices)

- Four breakpoints.
- Two data Watchpoints.

# **UM10914**

# Chapter 31: LPC5411x Power profiles/Power control API

Rev. 1.2 — 30 June 2016

**User manual** 

# 31.1 How to read this chapter

The Power profiles and Power control APIs can be implemented using the power library from LPCOpen software package.

#### 31.2 Features

- Simple APIs to control power consumption and wake-up in all power modes.
- Manage power consumption for sleep and active modes
- Prepare the part to enter low power modes (sleep, deep-sleep, and deep power-down).
- Configure wake-up from deep-sleep via functions enabled by bits in the PDRUNCFG register.

# 31.3 General description

PLL setup and control of device power consumption or entry to low power modes can be configured through simple calls to the power profile. APIs exist to:

- Set up the System PLL.
- Set up on-chip power based on the expected operating frequency.
- Set up reduced power modes.
- Set up low-frequency low power operation.

**Remark:** Disable all interrupts before making calls to the power profile API. The interrupts can be re-enabled after the power profile API calls have completed.

# 31.4 API description

Power APIs provide functions to configure the system clock and set up the system for expected performance requirements. The Power APIs are available in the power library provided with LPCOpen software package.

#### Chapter 31: LPC5411x Power profiles/Power control API

Table 467. Power API calls

Function prototype	API description	Section
<pre>uint32_t Chip_POWER_SetPLL (uint32_t multiply_by, uint32_t input_freq);</pre>	Power API PLL configuration routine. This API sets up basic PLL operation.	31.4.1
<pre>uint32_t Chip_POWER_SetVoltage (uint32_t desired_freq);</pre>	Power API internal voltage configuration routine. This API configures the internal regulator for the desired active operating mode and frequency. Also sets up corresponding flash wait states.	31.4.2
<pre>void Chip_POWER_EnterPowerMode (POWER_MODE_T mode, uint32_t peripheral_ctrl);</pre>	Power API power mode configuration routine. This API prepares the chip for reduced power modes: sleep, deep-sleep, or deep power-down mode. Also allows selection of which peripherals are kept alive in the reduced mode, and can therefore wake up the device from that mode.	31.4.3
<pre>void Chip_POWER_SetLowPowerVoltage (uint32_t freq)</pre>	Set voltage levels for low power regulation mode. Voltages are optimized for FRO operation at 12 MHz or 48 MHz.	31.4.4
<pre>void Chip_POWER_SetFROHFRate (uint32_t freq)</pre>	Setup the FRO high frequency output for either 48 MHz or 96 MHz. Updates the correct trim value and settings for high frequency FRO operation.	31.4.5

# 31.4.1 Chip\_POWER\_SetPLL

This routine sets up the System PLL given the PLL input frequency and feedback multiplier. Note that this API does not support special PLL operating modes. A library call is available via LPCOpen that supports additional PLL features.

The Chip\_POWER\_SetPLL works by setting the PLL input pre-divider to 2. It then determines what multiplier and post divider settings to use to get the requested frequency (M \* input freq) while keeping the PLL within its various operating limits.

Table 468. Chip\_POWER\_SetPLL routine

Routine	Chip_POWER_SetPLL	
Prototype	uint32_t Chip_POWER_SetPLL (uint32_t multiply_by, uint32_t input_freq);	
Input parameter	Param0: multiplier (1 to 16)	
	Param1: input_freq	
Result	Error code. 0 = no error.	
Description	Sets up the PLL for the requested multiplier and input frequency.	

# 31.4.1.1 Param0: multiplier

The input parameter multiplier (Param0) specifies the feedback multiplier for the PLL. The range supported is from 1 to 16.

## 31.4.1.2 Param1: input\_freq

The input frequency is the clock rate of the PLL input. The input frequency times the multiplier must not be greater than 100 MHz.

#### 31.4.1.3 Error or return codes

A return code of zero indicates that the operation was successful.

Table 469. Error codes

Return code	Error code	Description
0x000B 0002		Parameter out of range or requested frequency too high or not possible

UM10914

#### Chapter 31: LPC5411x Power profiles/Power control API

# 31.4.2 Chip\_POWER\_SetVoltage

This routine configures the device's internal power control settings according to the calling arguments. The goal is to prepare on-chip regulators to deliver the amount of power needed for the requested performance level, as defined by the CPU operating frequency.

**Remark:** The Chip\_POWER\_SetVoltage API should only be used when the system clock divider is 1 (AHBCLKDIV = 1, see Table 63).

Table 470. Chip\_POWER\_SetVoltage routine

Routine	Chip_POWER_SetVoltage
<pre>Prototype      uint32_t Chip_POWER_SetVoltage (uint32_t desired_freq);</pre>	
Input parameter	Param0: desired frequency (in MHz)
Result	Error code. 0 = no error.
Description	Configures the internal device voltage in active mode, as well as setting up the corresponding flash wait states.

## 31.4.2.1 Param0: frequency

The frequency is the clock rate the CPU will be using during the selected mode. microcontroller uses to source the system and peripheral clocks. This operand must be an integer between 1 to 100 MHz inclusive.

#### 31.4.2.2 Error or return codes

A return code of zero indicates that the operation was successful.

Table 471. Error codes

Return code	Error code	Description
0x000C 0004	PWR_ERROR_INVALID_CFG	Mode is invalid
0x000B 0002	ERR_CLK_INVALID_PARAM	Frequency is outside the supported range

## 31.4.3 Chip\_POWER\_EnterPowerMode

The Chip\_POWER\_EnterPowerMode API prepares the part, then enters any of the low power modes. Specifically for the deep-sleep mode, the API function configures which analog components remain running in those two modes, so that an interrupt from one of the analog peripherals can wake up the part.

Table 472. Chip\_POWER\_EnterPowerMode routine

Routine	Chip_POWER_EnterPowerMode	
Prototype	<pre>void Chip_POWER_EnterPowerMode (POWER_MODE_T mode, uint32_t peripheral_ctrl);</pre>	
Input parameter	Param0: mode	
	Param1: peripheral	
Result	None	
Description	Defines the low power mode (either sleep, deep-sleep, or deep power-down modes) and allows controlling which peripherals are powered up in the reduced power mode.	

**Remark:** Aside from the analog peripherals listed with this parameter, the serial peripherals can also wake up the chip from deep-sleep mode from an interrupt triggered by an incoming signal. This wake-up scenario is not configured using the Chip\_POWER\_EnterPowerMode API. For details, see Section 22.3.2 "Configure the

#### Chapter 31: LPC5411x Power profiles/Power control API

<u>USART for wake-up"</u>, <u>Section 23.3.1 "Configure the SPI for wake-up"</u>, or <u>Section 24.4.3</u> "Configure the I<sup>2</sup>C for wake-up".

#### 31.4.3.1 Param0: mode

The mode parameter defines the low power mode and prepares the chip to enter the selected mode.

The following modes are valid:

# 31.4.3.2 Param1: peripheral

If sleep mode is selected with the mode parameter, the peripheral parameter is ignored.

The peripheral parameter defines which analog peripherals can wake up the chip from deep-sleep, or deep power-down mode. The selected peripherals remain running in deep-sleep mode. For example, the watchdog oscillator must be running if the WWDT is to remain active in deep-sleep mode or the RTC must be running if it is to remain active in deep power-down mode.

The peripheral parameter is a 32-bit value that corresponds to the PDRUNCFG register (see <u>Table 86</u>).

# 31.4.4 Chip\_POWER\_SetLowPowerVoltage

This routine sets up internal voltage levels for low power regulation mode. The selected operating frequency must be either 12 MHz or 48 MHz, the two optimal frequencies for power dissipation for the device running from the FRO.

Table 473. Chip POWER SetLowPowerVoltage routine

Routine	Chip_POWER_SetVoltage	
Prototype	oid Chip_POWER_SetLowPowerVoltage (uint32_t freq)	
Input parameter	Param0: desired frequency (in MHz)	
Result	None.	
Description	Set voltage levels for low power regulation mode.	

#### 31.4.4.1 Param0: frequency

The frequency is the clock rate the CPU and peripherals will be using, either 12 MHz or 48 MHz.

# 31.4.5 Chip\_POWER\_SetFROHFRate

This routine sets up the FRO high frequency output. The selected operating frequency must be either 48 MHz or 96 MHz, which are the two potential high frequency outputs of the FRO. The requested frequency is set up and the appropriate factory trim value will be used.

## Chapter 31: LPC5411x Power profiles/Power control API

Table 474. Chip\_POWER\_SetFROHFRate routine

Routine	Chip_POWER_SetVoltage	
Prototype	roid Chip_POWER_SetFROHFRate (uint32_t freq)	
Input parameter	Param0: desired frequency (in MHz)	
Result	None.	
Description	Setup the FRO high frequency output for the selected frequency, either 48 MHz or 96 MHz.	

# 31.4.5.1 Param0: frequency

The frequency is the desired high frequency output clock for the FRO, 48 MHz or 96 MHz.

# 31.5 Functional description

# 31.5.1 Example low power mode control

## 31.5.1.1 Enter sleep mode

```
/* peripheral parameter is don't care*/
Chip_POWER_EnterPowerMode (POWER_SLEEP, 0x0 );
/* going to sleep mode. */
```

#### 31.5.1.2 Enter deep-sleep mode and set up WWDT and BOD for wake-up

# **UM10914**

# Chapter 32: LPC5411x Flash API

Rev. 1.2 — 30 June 2016

**User manual** 

# 32.1 How to read this chapter

See Table 475 for different flash configurations.

Table 475. LPC5411x flash configurations

Type number	Flash KB
LPC54113J128	128
LPC54113J256	256
LPC54114J256	256

**Remark:** In addition to the ISP and IAP commands, the flash configuration register (FLASHCFG) can be accessed in the SYSCON block to configure flash memory access times, see Section 4.5.41.

# 32.2 Features

- In-System Programming: In-System programming (ISP) is programming or reprogramming the on-chip flash memory, using the boot loader software and USART, I<sup>2</sup>C, or SPI serial port. This can be done when the part resides in the end-user board.
- In Application Programming: In-Application (IAP) programming is performing erase and write operation on the on-chip flash memory, as directed by the end-user application code.
- Small size (256 byte) page erase programming.
- Flash access times can be configured through a register in the flash controller block, see <u>Section 4.5.41</u>.

# 32.3 General description

#### 32.3.1 Boot loader

For the boot loader operation and boot pin, see <a href="Chapter 6" LPC5411x Boot process">Chapter 6 "LPC5411x Boot process"</a>.

The boot loader version can be read by ISP/IAP calls (see <u>Section 32.5.13</u> or <u>Section 32.6.6</u>).

# 32.3.2 Memory map after any reset

The boot ROM is located in the memory region starting from the address 0x0300 0000. The boot loader is designed to run from this memory area, but both the ISP and IAP software use parts of the on-chip RAM. The RAM usage is described later in Section 32.3.7.

Chapter 32: LPC5411x Flash API

# 32.3.3 Flash content protection mechanism

The LPC5411x is equipped with the Error Correction Code (ECC) capable Flash memory. The purpose of an error correction module is twofold. Firstly, it decodes data words read from the memory into output data words. Secondly, it encodes data words to be written to the memory. The error correction capability consists of single bit error correction with Hamming code.

The operation of ECC is transparent to the running application. The ECC content itself is stored in a flash memory not accessible by user's code to either read from it or write into it on its own. A byte of ECC corresponds to every consecutive 128 bits of the user accessible Flash. Consequently, Flash bytes from 0x0000 0000 to 0x0000 000F are protected by the first ECC byte, Flash bytes from 0x0000 0010 to 0x0000 001F are protected by the second ECC byte, etc.

Whenever the CPU requests a read from user's Flash, both 128 bits of raw data containing the specified memory location and the matching ECC byte are evaluated. If the ECC mechanism detects a single error in the fetched data, a correction will be applied before data are provided to the CPU. When a write request into the user's Flash is made, write of user specified content is accompanied by a matching ECC value calculated and stored in the ECC memory.

When a sector of Flash memory is erased, the corresponding ECC bytes are also erased. Once an ECC byte is written, it can not be updated unless it is erased first. Therefore, for the implemented ECC mechanism to perform properly, data must be written into the flash memory in groups of 16 bytes (or multiples of 16), aligned as described above.

#### 32.3.4 Criteria for Valid User Code

The reserved CPU exception vector location 7 (offset 0x0000 001C in the vector table) should contain the 2's complement of the check-sum of table entries 0 through 6. This causes the checksum of the first 8 table entries to be 0. The boot loader code checksums the first 8 locations in sector 0 of the flash. For legacy images, if the result is 0, then execution control is transferred to the user code. For enhanced images, the enhanced image marker, enhanced image header, and optional CRC must also be valid in addition to the checksum result being 0.

If the checksum is not 0 or the enhanced image is not valid, the ISP mode selected by the ISP1 and VBUS pins is selected.

# 32.3.5 Flash partitions

Some IAP and ISP commands operate on sectors and specify sector numbers. In addition, a page erase command is available. The size of a sector is 32 KB and the size of a page is 256 Byte. One sector contains 128 pages. Sector 0 and page 0 are located at address 0x0000 0000.

Table 476. Flash sectors and pages

Sector number	Sector size	Page numbers	Address range	Total flash (including this sector)
0	32 KB	0 - 127	0x0000 0000 - 0x0000 7FFF	32 KB
1	32 KB	128 - 255	0x0000 8000 - 0x0000 FFFF	64 KB
2	32 KB	256 - 383	0x0001 0000 - 0x0001 7FFF	96 KB
3	32 KB	384 - 511	0x0001 8000 - 0x0001 FFFF	128 KB

UM10914

Chapter 32: LPC5411x Flash API

Table 476. Flash sectors and pages

Sector number	Sector size	Page numbers	Address range	Total flash (including this sector)
4	32 KB	512 - 639	0x0002 0000 - 0x0002 7FFF	160 KB
5	32 KB	640 - 767	0x0002 8000 - 0x0002 FFFF	192 KB
6	32 KB	768 - 895	0x0003 0000 - 0x0003 7FFF	224 KB
7	32 KB	896 - 1023	0x0003 8000 - 0x0003 FFFF	256 KB

# 32.3.6 Code Read Protection (CRP)

Code Read Protection is a mechanism that allows the user to enable different levels of security in the system so that access to the on-chip flash and use of the ISP can be restricted. When needed, CRP is invoked by programming a specific pattern in the flash image at offset 0x0000 02FC. IAP commands are not affected by the code read protection.

Basic CRP options in USART and I2C/SPI ISP modes are detailed in the ISP command lists in Table 488. I2C and SPI ISP modes may alter these options slightly or may have slightly different commands and parameter sets. CRP permissions in USART and I2C/SPI ISP modes are detailed in the ISP command lists in the USART and I2C/SPI ISP sections.

Important: any CRP change becomes effective only after the device has gone through a power cycle.

Table 477. Code Read Protection (CRP) options

Name	Pattern programmed in 0x0000 02FC	Description
NO_ISP	0x4E69 7370	Prevents sampling of the pins for entering ISP mode. ISP sampling pin is available for other applications.
CRP1	0x1234 5678	Access to chip via the SWD pins is disabled. This mode allows partial flash update using the following ISP commands and restrictions:
		<ul> <li>Write to RAM command cannot access RAM below 0x2000 0300.</li> </ul>
		<ul> <li>Copy RAM to flash command can not write to Sector 0.</li> </ul>
		Erase command can erase Sector 0 only when all sectors are selected for erase.
		Compare command is disabled.
		Read Memory command is disabled.
		This mode is useful when CRP is required and flash field updates are needed but all sectors can not be erased. Since compare command is disabled in case of partial updates the secondary loader should implement checksum mechanism to verify the integrity of the flash.
CRP2	0x8765 4321	Access to chip via the SWD pins is disabled. The following ISP commands are disabled:
		Read Memory
		Write to RAM
		• Go
		Copy RAM to flash
		Compare
		When CRP2 is enabled the ISP erase command only allows erasure of all user sectors.

Chapter 32: LPC5411x Flash API

Table 477. Code Read Protection (CRP) options

Name	Pattern programmed in 0x0000 02FC	Description
CRP3	0x4321 8765	Access to chip via the SWD pins is disabled. ISP entry selected via the ISP entry pin is disabled if a valid user code is present in flash sector 0.
		This mode effectively disables ISP override using the entry pin. It is up to the user's application to provide a flash update mechanism using IAP calls or call reinvoke ISP command to enable flash update via USART.
		Caution: If CRP3 is selected, no future factory testing can be performed on the device.

In case a CRP mode is enabled and access to the chip is allowed via the ISP, an unsupported or restricted ISP command will be terminated with return code CODE\_READ\_PROTECTION\_ENABLED.

#### 32.3.6.1 ISP entry protection

In addition to the three CRP modes, the user can prevent the sampling of the pin for entering ISP mode and thereby release the pin for other applications. This is called the NO\_ISP mode. The NO\_ISP mode can be entered by programming the pattern 0x4E69 7370 at location 0x0000 02FC.

The NO\_ISP mode is identical to the CRP3 mode except for SWD access, which is allowed in NO\_ISP mode but disabled in CRP3 mode. The NO\_ISP mode does not offer any code protection.

# 32.3.7 ISP interrupt and SRAM use

#### 32.3.7.1 Interrupts during IAP

The on-chip flash memory is not accessible during erase/write operations. When the user application code starts executing, the interrupt vectors from the user flash area are active. Before making any IAP call, either disable the interrupts or ensure that the user interrupt vectors are active in RAM and that the interrupt handlers reside in RAM. The IAP code does not use or disable interrupts.

#### 32.3.7.2 RAM used by ISP command handlers

Memory for the USART and I2C/SPI ISP commands is allocated dynamically.

#### 32.3.7.3 RAM used by IAP command handler

Flash programming commands use the top 32 bytes of on-chip SRAM0 (see Section 2.1.1 for details of the SRAM configuration). This corresponds to addresses 0x2000 FFE0 through 0x2000 FFFF. The maximum stack usage in the user allocated stack space is 128 bytes and grows downwards.

Chapter 32: LPC5411x Flash API

# 32.4 USART ISP communication protocol

All USART ISP commands should be sent as single ASCII strings. Strings should be terminated with Carriage Return (CR) and/or Line Feed (LF) control characters. Extra <CR> and <LF> characters are ignored. All ISP responses are sent as <CR><LF> terminated ASCII strings. Data is sent and received in plain binary format.

#### 32.4.1 USART ISP initialization

Once the USART ISP mode is entered, the auto-baud routine needs to synchronize with the host via the serial port (USART).

The host should send a '?' (0x3F) as a synchronization character and wait for a response. The host side serial port settings should be 8 data bits, 1 stop bit and no parity. The auto-baud routine measures the bit time of the received synchronization character in terms of its own frequency and programs the baud rate generator of the serial port. It also sends an ASCII string ("Synchronized<CR><LF>") to the host. In response to this, the host should send back the same string ("Synchronized<CR><LF>").

The auto-baud routine looks at the received characters to verify synchronization. If synchronization is verified then "OK<CR><LF>" string is sent to the host. The host should respond by sending the crystal frequency (in kHz) at which the part is running. The response is required for backward compatibility of the boot loader code and is ignored. "OK<CR><LF>" string is sent to the host after receiving the crystal frequency. If synchronization is not verified then the auto-baud routine waits again for a synchronization character. For auto-baud to work correctly in case of user invoked ISP, the clock frequency should be greater than or equal to 10 MHz. In USART ISP mode, the part is clocked by the FRO 12 MHz and the crystal frequency is ignored.

Once the crystal frequency is received the part is initialized and the ISP command handler is invoked. For safety reasons an "Unlock" command is required before executing the commands resulting in flash erase/write operations and the "Go" command. The rest of the commands can be executed without the unlock command. The Unlock command is required to be executed once per ISP session. The Unlock command is explained in Section 32.5 "USART ISP commands".

#### 32.4.2 USART ISP command format

"Command Parameter\_0 Parameter\_1 ... Parameter\_n<CR><LF>" "Data" (Data only for Write commands).

#### 32.4.3 USART ISP response format

"Return\_Code<CR><LF>Response\_0<CR><LF>Response\_1<CR><LF>...
Response\_n<CR><LF>"Data" (Data only for Read commands).

# 32.4.4 USART ISP data format

The data stream is in plain binary format.

Chapter 32: LPC5411x Flash API

# 32.5 USART ISP commands

The following commands are accepted by the ISP command handler. Detailed status codes are supported for each command. The command handler sends the return code INVALID\_COMMAND when an undefined command is received. Commands and return codes are in ASCII format.

CMD\_SUCCESS is sent by ISP command handler only when received ISP command has been completely executed and the new ISP command can be given by the host. Exceptions from this rule are "Set Baud Rate", "Write to RAM", "Read Memory", and "Go" commands.

Table 478. USART ISP command summary

ISP Command	Usage	Section
Unlock	U <unlock code=""></unlock>	32.5.1
Set Baud Rate	B <baud rate=""> <stop bit=""></stop></baud>	32.5.2
Echo	A <setting></setting>	32.5.3
Write to RAM	W <start address=""> <number bytes="" of=""></number></start>	32.5.4
Read Memory	R <address> <number bytes="" of=""></number></address>	32.5.5
Prepare sectors for write operation	P <start number="" sector=""> <end number="" sector=""></end></start>	32.5.6
Copy RAM to flash	C <flash address=""> <ram address=""> <number bytes="" of=""></number></ram></flash>	32.5.7
Go	G <address> <mode></mode></address>	32.5.8
Erase sector(s)	E <start number="" sector=""> <end number="" sector=""></end></start>	32.5.9
Erase page(s)	X <start number="" page=""> <end number="" page=""></end></start>	32.5.10
Blank check sector(s)	I <start number="" sector=""> <end number="" sector=""></end></start>	32.5.11
Read Part ID	J	32.5.12
Read Boot code version	K	32.5.13
Compare	M <address1> <address2> <number bytes="" of=""></number></address2></address1>	32.5.14
ReadUID	N	32.5.15
Read CRC checksum	S <address> <number bytes="" of=""></number></address>	32.5.16
Read flash signature	Z	32.5.17

Table 479 lists the supported USART ISP commands for each CRP level.

Table 479. ISP commands allowed for different CRP levels

ISP command	CRP1	CRP2	CRP3 (no entry in ISP mode allowed)
Unlock	yes	yes	n/a
Set Baud Rate	yes	yes	n/a
Echo	yes	yes	n/a
Write to RAM	yes; above 0x0200 0300 only	no	n/a
Read Memory	no	no	n/a
Prepare sectors for write operation	yes	yes	n/a
Copy RAM to flash[1]	yes; not to sector 0	no	n/a
Go	no	no	n/a
Erase sector(s)[1]	yes; sector 0 can only be erased when all sectors are erased.	yes; all sectors only	n/a

UM10914

**UM10914 NXP Semiconductors** 

Chapter 32: LPC5411x Flash API

Table 479. ISP commands allowed for different CRP levels

ISP command	CRP1	CRP2	CRP3 (no entry in ISP mode allowed)
Erase page(s)[1]	yes; page 0 can only be erased when all pages are erased (not recommended, use Erase Sector).	yes; all pages only	n/a
Blank check sectors	no	no	n/a
Read Part ID	yes	yes	n/a
Read Boot code version	yes	yes	n/a
Compare	no	no	n/a
ReadUID	yes	yes	n/a
Read CRC	no	no	n/a
Read flash signature	yes	yes	n/a

<sup>[1]</sup> It is not secure to use CRP1 or CRP2 when using Dual Enhanced image types. Use CRP3 instead.

## 32.5.1 Unlock

## Table 480. USART ISP Unlock command

Command	U
Input	Unlock code: 23130 <sub>10</sub>
Return Code	CMD_SUCCESS   INVALID_CODE   PARAM_ERROR
Description	This command is used to unlock Flash Write, Erase, and Go commands.
Example	"U 23130 <cr><lf>" unlocks the Flash Write/Erase &amp; Go commands.</lf></cr>

## 32.5.2 Set Baud Rate

#### Table 481. USART ISP Set Baud Rate command

Command	В	
Input	Baud Rate: 9600   19200   38400   57600   115200	
	Stop bit: 1   2	
Return Code	CMD_SUCCESS   INVALID_BAUD_RATE   INVALID_STOP_BIT   PARAM_ERROR	
Description	This command is used to change the baud rate. The new baud rate is effective after the command handler sends the CMD_SUCCESS return code.	
Example	"B 57600 1 <cr><lf>" sets the serial port to baud rate 57600 bps and 1 stop bit.</lf></cr>	

Chapter 32: LPC5411x Flash API

#### 32.5.3 Echo

Table 482. USART ISP Echo command

Command	A	
Input	Setting: ON = 1   OFF = 0	
Return Code	MD_SUCCESS   ARAM_ERROR	
Description	The default setting for echo command is ON. When ON the ISP command handler sends the received serial data back to the host.	
Example	"A 0 <cr><lf>" turns echo off.</lf></cr>	

## 32.5.4 Write to RAM

The host should send the plain binary code after receiving the CMD\_SUCCESS return code. This ISP command handler responds with "OK<CR><LF>" when the transfer has finished.

Table 483. USART ISP Write to RAM command

Command	W	
Input	<b>Start Address:</b> RAM address where data bytes are to be written. This address should be a word boundary.	
	Number of Bytes: Number of bytes to be written. Count should be a multiple of 4	
Return Code	CMD_SUCCESS   ADDR_ERROR (Address not on word boundary)   ADDR_NOT_MAPPED   COUNT_ERROR (Byte count is not multiple of 4)   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED	
Description	This command is used to download data to RAM. This command is blocked when code read protection levels 2 or 3 are enabled. Writing	
Example	"W 33555200 4 <cr><lf>" writes 4 bytes of data to address 0x0200 0300.</lf></cr>	

# 32.5.5 Read Memory

Reads the plain binary code of the data stream, followed by the CMD\_SUCCESS return code.

Table 484. USART ISP Read Memory command

Command	R	
Input	Start Address: Address from where data bytes are to be read. This address should be a word boundary.	
	Number of Bytes: Number of bytes to be read. Count should be a multiple of 4.	
Return Code	CMD_SUCCESS followed by <actual (plain="" binary)="" data="">   ADDR_ERROR (Address not on word boundary)   ADDR_NOT_MAPPED   COUNT_ERROR (Byte count is not a multiple of 4)   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED</actual>	
Description	This command is used to read data from RAM or flash memory. This command is blocked when code read protection is enabled.	
Example	"R 33554432 4 <cr><lf>" reads 4 bytes of data from address 0x0200 0000.</lf></cr>	

Chapter 32: LPC5411x Flash API

# 32.5.6 Prepare sectors for write operation

This command makes flash write/erase operation a two-step process.

Table 485. USART ISP Prepare sectors for write operation command

Command	P	
Input	Start Sector Number	
	End Sector Number: Should be greater than or equal to start sector number.	
Return Code	CMD_SUCCESS   BUSY   INVALID_SECTOR   PARAM_ERROR	
Description	This command must be executed before executing "Copy RAM to flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. To prepare a single sector use the same "Start" and "End" sector numbers.	
Example	"P 0 0 <cr><lf>" prepares the flash sector 0.</lf></cr>	

# 32.5.7 Copy RAM to flash

When writing to the flash, the following limitations apply:

- 1. The smallest amount of data that can be written to flash by the copy RAM to flash command is 256 byte (equal to one page).
- One page consists of 16 flash words (lines), and the smallest amount that can be modified per flash write is one flash word (one line). This limitation exists because ECC is applied during the flash write operation, see <u>Section 32.3.3</u>.
- To avoid write disturbance (a mechanism intrinsic to flash memories), an erase should be performed after 16 consecutive writes inside the same page. Note that the erase operation then erases the entire sector.

**Remark:** Once a page has been written to 16 times, it is still possible to write to other pages within the same sector without performing a sector erase (assuming that those pages have been erased previously).

Chapter 32: LPC5411x Flash API

# Table 486. USART ISP Copy command

Command	C	
Input	Flash Address(DST): Destination flash address where data bytes are to be written. The destination address should be a 256 byte boundary.	
	RAM Address(SRC): Source RAM address from where data bytes are to be read.	
	Number of Bytes: Number of bytes to be written. Should be 256   512   1024   4096.	
Return Code	CMD_SUCCESS   SRC_ADDR_ERROR (Address not on word boundary)   DST_ADDR_ERROR (Address not on correct boundary)   SRC_ADDR_NOT_MAPPED   DST_ADDR_NOT_MAPPED   COUNT_ERROR (Byte count is not 256   512   1024   4096)   SECTOR_NOT_PREPARED_FOR WRITE_OPERATION   BUSY   CMD_LOCKED   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED	
Description	This command is used to program the flash memory. The "Prepare Sector(s) for Write Operation" command should precede this command. The affected sectors are automatically protected again once the copy command is successfully executed. This command is blocked when code read protection is enabled. Also see <a href="Section 32.3.3">Section 32.3.3</a> for the number of bytes that can be written.	
Example	"C 0 33556480 512 <cr><lf>" copies 512 bytes from the RAM address 0x0200 0800 to the flash address 0.</lf></cr>	

# 32.5.8 Go

## Table 487. USART ISP Go command

Command	G	
Input	<b>Address:</b> Flash or RAM address from which the code execution is to be started. This address should be on a word boundary.	
	Mode: T (Execute program in Thumb Mode)   A (Execute program in ARM mode).	
Return Code	CMD_SUCCESS   ADDR_ERROR   ADDR_NOT_MAPPED   CMD_LOCKED   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED	
Description	This command is used to execute a program residing in RAM or flash memory. It may not be possible to return to the ISP command handler once this command is successfully executed. This command is blocked when code read protection is enabled.	
Example	"G 0 A <cr><lf>" branches to address 0x0000 0000 in ARM mode.</lf></cr>	

Chapter 32: LPC5411x Flash API

#### 32.5.9 Erase sectors

#### Table 488. USART ISP Erase sector command

Command	E	
Input	Start Sector Number	
	End Sector Number: Should be greater than or equal to start sector number.	
Return Code	CMD_SUCCESS   BUSY   INVALID_SECTOR   SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION   CMD_LOCKED   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED	
Description	This command is used to erase one or more sector(s) of on-chip flash memory. This command only allows erasure of all user sectors when the code read protection is enabled.	
Example	"E 2 3 <cr><lf>" erases the flash sectors 2 and 3.</lf></cr>	

# 32.5.10 Erase pages

#### Table 489. USART ISP Erase page command

idasio ioon oo itti isi isiaso pago oo iiinana		
Command	X X	
Input	Start Page Number	
End Page Number: Should be greater than or equal to start page number.		
Return Code	CMD_SUCCESS   BUSY   INVALID_PAGE   SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION   CMD_LOCKED   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED	
Description	This command is used to erase one or more page(s) of on-chip flash memory.	
Example	"X 2 3 <cr><lf>" erases the flash pages 2 and 3.</lf></cr>	

## 32.5.11 Blank check sectors

#### Table 490. USART ISP Blank check sector command

Command		
Input	Start Sector Number:	
	End Sector Number: Should be greater than or equal to start sector number.	
Return Code	CMD_SUCCESS   SECTOR_NOT_BLANK (followed by <offset blank="" first="" location="" non="" of="" the="" word=""> <contents blank="" location="" non="" of="" word="">)   INVALID_SECTOR   PARAM_ERROR</contents></offset>	
Description	This command is used to blank check one or more sectors of on-chip flash memory.	
	When CRP is enabled, the blank check command returns 0 for the offset and value of sectors which are not blank. Blank sectors are correctly reported irrespective of the CRP setting.	
Example	"I 2 3 <cr><lf>" blank checks the flash sectors 2 and 3.</lf></cr>	

Chapter 32: LPC5411x Flash API

## 32.5.12 Read Part Identification number

#### Table 491. USART ISP Read Part Identification command

Command		
Input	lone.	
Return Code	CMD_SUCCESS followed by part identification number (see <u>Table 492</u> ).	
Description	This command is used to read the part identification number.	

#### Table 492. LPCA5411x device identification numbers

	Hex coding
LPC54113J128	0x06254113
LPC54113J256	0x36454113
LPC54114J256	0x36454114

# 32.5.13 Read Boot code version number

#### Table 493. USART ISP Read Boot Code version number command

Command	K
Input	None
Return Code	CMD_SUCCESS followed by 2 bytes of boot code version number in ASCII format. It is to be interpreted as  byte1(Major)>. byte0(Minor)>.
Description	This command is used to read the boot code version number.

# 32.5.14 Compare

#### Table 494. USART ISP Compare command

Command	M
Input	Address1 (DST): Starting flash or RAM address of data bytes to be compared. This address should be a word boundary.
	<b>Address2 (SRC):</b> Starting flash or RAM address of data bytes to be compared. This address should be a word boundary.
	Number of Bytes: Number of bytes to be compared; should be a multiple of 4.
Return Code	CMD_SUCCESS   (Source and destination data are equal)   COMPARE_ERROR   (Followed by the offset of first mismatch)   COUNT_ERROR (Byte count is not a multiple of 4)   ADDR_ERROR   ADDR_NOT_MAPPED   PARAM_ERROR   CODE_READ_PROTECTION_ENABLED
Description	This command is used to compare the memory contents at two locations.
	Compare result may not be correct when source or destination address contains any of the first 512 bytes starting from address zero. First 512 bytes are re-mapped to boot ROM
Example	"M 8192 33587200 4 <cr><lf>" compares 4 bytes from the RAM address 0x0200 8000 to the 4 bytes from the flash address 0x2000.</lf></cr>

Chapter 32: LPC5411x Flash API

#### 32.5.15 ReadUID

#### Table 495. USART ReadUID command

Command	N
Input	None
	CMD_SUCCESS followed by four 32-bit words of a unique serial number in ASCII format. The word sent at the lowest address is sent first.
Description	This command is used to read the unique ID.

## 32.5.16 Read CRC checksum

Get the CRC checksum of a block of RAM or flash. CMD\_SUCCESS followed by 8 bytes of CRC checksum in decimal format.

The checksum is calculated as follows:

CRC-32 polynomial: x32 + x26 + x23 + x22 + x16 + x12 + x11 + x10 + x8 + x7 + x5 + x4 + x2 + x + 1

Seed Value: 0xFFFF FFFF

#### Table 496. USART ISP Read CRC checksum command

Command	S
Input	<b>Address:</b> The data are read from this address for CRC checksum calculation. This address must be on a word boundary.
	Number of Bytes: Number of bytes to be calculated for the CRC checksum; must be a multiple of 4.
Return Code	CMD_SUCCESS followed by data in decimal format
	ADDR_ERROR (address not on word boundary)
	ADDR_NOT_MAPPED
	COUNT_ERROR (byte count is not a multiple of 4)
	PARAM_ERROR
	CODE_READ_PROTECTION_ENABLED
Description	This command is used to read the CRC checksum of a block of RAM or flash memory. This command is blocked when code read protection is enabled.
Example	"S 33587200 4 <cr><lf>" reads the CRC checksum for 4 bytes of data from address 0x0200 8000.</lf></cr>
	If checksum value is 0xCBF43926, then the host will receive:
	"3421780262 <cr><lf>"</lf></cr>

# 32.5.17 Read flash signature

Get the signature for the entire flash memory using an internal flash signature generator (see <a href="Chapter 34">Chapter 34</a>). CMD\_SUCCESS followed by the 32-bit flash signature represented in decimal format.

Chapter 32: LPC5411x Flash API

Table 497. USART ISP Read flash signature command

Command	Z	
Input	none	
Return Code	CMD_SUCCESS followed by data in decimal format	
	CODE_READ_PROTECTION_ENABLED	
Description	This command is used to read the signature of the entire flash memory. This command is blocked when code read protection is enabled.	
Example	"Z <cr><lf>" returns the signature for the entire flash memory.</lf></cr>	
	If signature value is 0x3BD7, then the host will receive:	
	"15319 <cr><lf>"</lf></cr>	

The following pseudo-code shows the algorithm to derive the reference signature:

```
sign = 0
FOR address = FMSSTART.START to FMSSTOP.STOP
{
    FOR i = 0 TO 30
    {
        nextSign[i] = f_Q[address][i] XOR sign[i + 1]
    }
    nextSign[31] = f_Q[address][31] XOR sign[0] XOR sign[10] XOR sign[30] XOR sign[31]
    sign = nextSign
}
signature32 = sign
```

Chapter 32: LPC5411x Flash API

# 32.5.18 UART ISP Error codes

## Table 498. USART ISP Error codes

Return Code	Error code	Description
0x0	ERR_ISP_CMD_SUCCESS	Command is executed successfully. Sent by ISP handler only when command given by the host has been completely and successfully executed.
0x1	ERR_ISP_INVALID_COMMAND	Invalid command.
0x2	ERR_ISP_SRC_ADDR_ERROR	Source address is not on word boundary.
0x3	ERR_ISP_DST_ADDR_ERROR	Destination address is not on a correct boundary.
0x4	ERR_ISP_SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken into consideration where applicable.
0x5	ERR_ISP_DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken into consideration where applicable.
0x6	ERR_ISP_COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
0x7	ERR_ISP_INVALID_SECTOR	Sector number is invalid or end sector number is greater than start sector number.
0x8	ERR_ISP_SECTOR_NOT_BLANK	Sector is not blank.
0x9	ERR_ISP_SECTOR_NOT_PREPARED_ FOR_WRITE_OPERATION	Command to prepare sector for write operation was not executed.
0xA	ERR_ISP_COMPARE_ERROR	Source and destination data not equal.
0xB	ERR_ISP_BUSY	Flash programming hardware interface is busy.
0xC	ERR_ISP_PARAM_ERROR	Insufficient number of parameters or invalid parameter.
0xD	ERR_ISP_ADDR_ERROR	Address is not on word boundary.
0xE	ERR_ISP_ADDR_NOT_MAPPED	Address is not mapped in the memory map. Count value is taken into consideration where applicable.
0xF	ERR_ISP_CMD_LOCKED	Command is locked.
0x10	ERR_ISP_INVALID_CODE	Unlock code is invalid.
0x11	ERR_ISP_INVALID_BAUD_RATE	Invalid baud rate setting.
0x12	ERR_ISP_INVALID_STOP_BIT	Invalid stop bit setting.
0x13	ERR_ISP_CODE_READ_ PROTECTION_ENABLED	Code read protection enabled.
0x14	-	Reserved.
0x15	-	Reserved.
0x16	-	Reserved.
0x17	ERR_ISP_FRO_NO_POWER	FRO not turned on in the PDRUNCFG register.
0x18	ERR_ISP_FLASH_NO_POWER	Flash not turned on in the PDRUNCFG register.
0x19	-	Reserved.
0x1A	-	Reserved.
0x1B	ERR_ISP_FLASH_NO_CLOCK	Flash clock disabled in the AHBCLKCTRL register.
0x1C	ERR_ISP_REINVOKE_ISP_CONFIG	Reinvoke ISP not successful.

UM10914 **NXP Semiconductors** 

#### Chapter 32: LPC5411x Flash API

```
typedef enum
ERR_ISP_BASE = 0x00000000,
/*0x0000001*/ ERR ISP INVALID COMMAND = ERR ISP BASE + 1,
/*0x0000002*/ ERR_ISP_SRC_ADDR_ERROR,
/*0x0000003*/ ERR_ISP_DST_ADDR_ERROR,
/*0x0000004*/ ERR_ISP_SRC_ADDR_NOT_MAPPED,
/*0x0000005*/ ERR_ISP_DST_ADDR_NOT_MAPPED,
/*0x0000006*/ ERR_ISP_COUNT_ERROR,
/*0x00000007*/ ERR_ISP_INVALID_SECTOR,
/*0x0000008*/ ERR_ISP_SECTOR_NOT_BLANK,
/*0x00000009*/ ERR_ISP_SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION,
/*0x000000A*/ ERR_ISP_COMPARE_ERROR,
/*0x0000000B*/ ERR_ISP_BUSY, /* Flash programming hardware interface is busy */
/*0x0000000C*/ ERR ISP PARAM ERROR, /* Insufficient number of parameters */
/*0x000000D*/ ERR_ISP_ADDR_ERROR, /* Address not on word boundary */
/*0x000000E*/ ERR_ISP_ADDR_NOT_MAPPED,
/*0x000000F*/ ERR_ISP_CMD_LOCKED, /* Command is locked */
/*0x00000010*/ ERR_ISP_INVALID_CODE, /* Unlock code is invalid */
/*0x00000011*/ ERR_ISP_INVALID_BAUD_RATE,
/*0x00000012*/ ERR_ISP_INVALID_STOP_BIT,
/*0x0000013*/ ERR_ISP_CODE_READ_PROTECTION_ENABLED,
/*0x00000014*/ ERR_ISP_INVALID_FLASH_UNIT, /* reserved */
/*0x00000015*/ ERR_ISP_USER_CODE_CHECKSUM, /* reserved */
/*0x00000016*/ ERR_ISP_SETTING_ACTIVE_PARTITION, /* reserved */
/*0x0000017*/ ERR ISP FRO NO POWER,
/*0x0000018*/ ERR_ISP_FLASH_NO_POWER,
/*0x0000019*/ ERR_ISP_EEPROM_NO_POWER, /* reserved */
/*0x0000001A*/ ERR_ISP_EEPROM_NO_CLOCK, /* reserved */
/*0x000001B*/ ERR_ISP_FLASH_NO_CLOCK,
/*0x000001C*/ ERR_ISP_REINVOKE_ISP_CONFIG
} ErrorCode t;
```

Chapter 32: LPC5411x Flash API

# 32.6 IAP commands

For in application programming the IAP routine should be called with a word pointer in register r0 pointing to memory (RAM) containing command code and parameters. The result of the IAP command is returned in the result table pointed to by register r1. The user can reuse the command table for result by passing the same pointer in registers r0 and r1. The parameter table should be big enough to hold all the results in case the number of results are more than number of parameters. Parameter passing is illustrated in the Figure 94.

The number of parameters and results vary according to the IAP command. The maximum number of parameters is 5, passed to the "Copy RAM to FLASH" command. The maximum number of results is 5, returned by the "ReadUID" command. The command handler sends the status code INVALID\_COMMAND when an undefined command is received. The IAP routine resides at location 0x03000204 and it is thumb code, therefore called as 0x03000205 by the Cortex-M4 to insure Thumb operation.

The IAP function could be called in the following way using C:

Define the IAP location entry point. Since the least significant bit of the IAP location is set there will be a change to Thumb instruction set if called by the Cortex-M4.

```
#define IAP_LOCATION 0x03000205
```

Define data structure or pointers to pass IAP command table and result table to the IAP function:

```
unsigned int command_param[5];
unsigned int status_result[5];

or

unsigned int * command_param;
unsigned int * status_result;
command_param = (unsigned int *) 0x...
status_result = (unsigned int *) 0x...
```

Define pointer to function type, which takes two parameters and returns void. Note the IAP returns the result with the base address of the table residing in R1.

```
typedef void (*IAP)(unsigned int [],unsigned int[]);
IAP iap_entry;
```

#### Setting the function pointer:

```
#define IAP_LOCATION 0x0300 0205
iap_entry=(IAP) IAP_LOCATION;
```

To call the IAP use the following statement.

```
iap_entry (command_param,status_result);
```

Up to 4 parameters can be passed in the r0, r1, r2 and r3 registers respectively (see the ARM Thumb Procedure Call Standard SWS ESPC 0002 A-05). Additional parameters are passed on the stack. Up to 4 parameters can be returned in the r0, r1, r2 and r3 registers

UM10914


#### Chapter 32: LPC5411x Flash API

respectively. Additional parameters are returned indirectly via memory. Some of the IAP calls require more than 4 parameters. If the ARM suggested scheme is used for the parameter passing/returning then it might create problems due to difference in the C compiler implementation from different vendors. The suggested parameter passing scheme reduces such risk.

The flash memory is not accessible during a write or erase operation. IAP commands, which results in a flash write/erase operation, use 32 bytes of space in the top portion of the on-chip RAM for execution. The user program should not be use this space if IAP flash programming is permitted in the application.

Table 499. IAP Command Summary

IAP Command	Command code	Section
Prepare sector(s) for write operation	50 (decimal)	32.6.1
Copy RAM to flash	51 (decimal)	32.6.2
Erase sector(s)	52 (decimal)	32.6.3
Blank check sector(s)	53 (decimal)	32.6.4
Read Part ID	54 (decimal)	32.6.5
Read Boot code version	55 (decimal)	32.6.6
Compare	56 (decimal)	32.6.7
Reinvoke ISP	57 (decimal)	32.6.8
Read UID	58 (decimal)	32.6.9
Erase page(s)	59 (decimal)	32.6.10
Read Signature	70 (decimal)	32.6.11

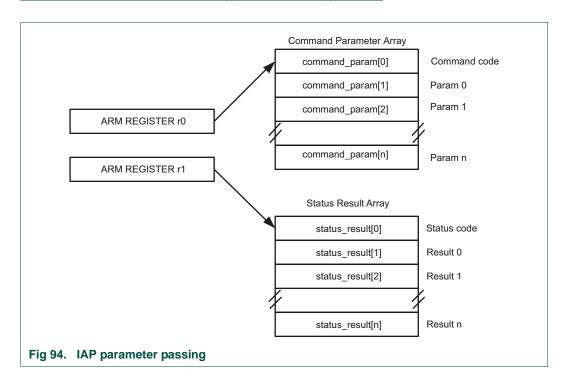

Chapter 32: LPC5411x Flash API

# 32.6.1 Prepare sector(s) for write operation

This command makes flash write/erase operation a two step process.

Table 500. IAP Prepare sector(s) for write operation command

Command	Prepare sector(s) for write operation
Input	Command code: 50 (decimal)
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
Status code	CMD_SUCCESS   BUSY   INVALID_SECTOR
Result	None
Description	This command must be executed before executing "Copy RAM to flash" or "Erase Sector(s)" command. Successful execution of the "Copy RAM to flash" or "Erase Sector(s)" command causes relevant sectors to be protected again. To prepare a single sector use the same "Start" and "End" sector numbers.

# 32.6.2 Copy RAM to flash

See Section 32.5.7 for limitations on the write-to-flash process.

Table 501. IAP Copy RAM to flash command

Command	Copy RAM to flash
Input	Command code: 51 (decimal)
	<b>Param0(DST):</b> Destination flash address where data bytes are to be written. This address should be a 256 byte boundary.
	<b>Param1(SRC):</b> Source RAM address from which data bytes are to be read. This address should be a word boundary.
	Param2: Number of bytes to be written. Should be 256   512   1024   4096.
	Param3: System Clock Frequency (CCLK) in kHz.
Status code	CMD_SUCCESS   SRC_ADDR_ERROR (Address not a word boundary)   DST_ADDR_ERROR (Address not on correct boundary)   SRC_ADDR_NOT_MAPPED   DST_ADDR_NOT_MAPPED   COUNT_ERROR (Byte count is not 256   512   1024   4096)   SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION   BUSY
Result	None
Description	This command is used to program the flash memory. The affected sectors should be prepared first by calling "Prepare Sector for Write Operation" command. The affected sectors are automatically protected again once the copy command is successfully executed. Also see <a href="Section 32.3.3">Section 32.3.3</a> for the number of bytes that can be written.
	<b>Remark:</b> All user code must be written in such a way that no master accesses the flash while this command is executed and the flash is programmed.

Chapter 32: LPC5411x Flash API

# 32.6.3 Erase Sector(s)

## Table 502. IAP Erase Sector(s) command

Command	Erase Sector(s)
Input	Command code: 52 (decimal)
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
	Param2: System Clock Frequency (CCLK) in kHz.
Status code	CMD_SUCCESS   BUSY   SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION   INVALID_SECTOR
Result	None
Description	This command is used to erase a sector or multiple sectors of on-chip flash memory. To erase a single sector use the same "Start" and "End" sector numbers.
	<b>Remark:</b> All user code must be written in such a way that no master accesses the flash while this command is executed and the flash is erased.

# 32.6.4 Blank check sector(s)

#### Table 503. IAP Blank check sector(s) command

Command	Blank check sector(s)
Input	Command code: 53 (decimal)
	Param0: Start Sector Number
	Param1: End Sector Number (should be greater than or equal to start sector number).
Status code	CMD_SUCCESS   BUSY   SECTOR_NOT_BLANK   INVALID_SECTOR
Result	Result0: Offset of the first non blank word location if the status code is SECTOR_NOT_BLANK.  Result1: Contents of non blank word location.
Description	This command is used to blank check a sector or multiple sectors of on-chip flash memory. To blank check a single sector use the same "Start" and "End" sector numbers.

# 32.6.5 Read Part Identification number

#### Table 504. IAP Read Part Identification command

Command	Read part identification number
Input	Command code: 54 (decimal)
	Parameters: None
Status code	CMD_SUCCESS
Result	Result0: Part Identification Number.
Description	This command is used to read the part identification number.

Chapter 32: LPC5411x Flash API

## 32.6.6 Read Boot code version number

#### Table 505. IAP Read Boot Code version number command

Command	Read boot code version number		
Input	Command code: 55 (decimal)		
	Parameters: None		
Status code	CMD_SUCCESS		
Result	Result0: 2 bytes of boot code version number. Read as <byte1(major)>.<byte0(minor)></byte0(minor)></byte1(major)>		
Description	This command is used to read the boot code version number.		

# 32.6.7 Compare <address1> <address2> <no of bytes>

## Table 506. IAP Compare command

Command	Compare				
Input	Command code: 56 (decimal)				
	Param0(DST): Starting flash or RAM address of data bytes to be compared; should be a word boundary.				
	Param1(SRC): Starting flash or RAM address of data bytes to be compared; should be a word boundary.				
	Param2: Number of bytes to be compared; should be a multiple of 4.				
Status code	CMD_SUCCESS   COMPARE_ERROR   COUNT_ERROR (Byte count is not a multiple of 4)   ADDR_ERROR   ADDR_NOT_MAPPED				
Result	Result0: Offset of the first mismatch if the status code is COMPARE_ERROR.				
Description	This command is used to compare the memory contents at two locations.				
	The result may not be correct when the source or destination includes any of the first 512 bytes starting from address zero. The first 512 bytes can be re-mapped to RAM.				

## 32.6.8 Reinvoke ISP

#### Table 507. Reinvoke ISP

Command	Compare			
Input	Command code: 57 (decimal)			
	Param0(mode): Selected ISP mode. 1=USART, 2=USB, 5=I2C, 6=SPI			
Status code	ERR_ISP_REINVOKE_ISP_CONFIG			
Result	ne.			
Description	This command is used to invoke the boot loader in ISP mode. It maps boot vectors and configures the peripherals for ISP.			
	This command may be used when a valid user program is present in the internal flash memory and the ISP entry pin are not accessible to force the ISP mode.			
	If using USART ISP mode, enable the clocks to the default USART RXD and TXD pins before calling this command.			

Chapter 32: LPC5411x Flash API

#### 32.6.9 ReadUID

## Table 508. IAP ReadUID command

Command	Compare	
Input	Command code: 58 (decimal)	
Status code	CMD_SUCCESS	
Result	Result0: The first 32-bit word (at the lowest address). Result1: The second 32-bit word. Result2: The third 32-bit word. Result3: The fourth 32-bit word.	
Description	This command is used to read the unique ID.	

# **32.6.10** Erase page

## Table 509. IAP Erase page command

Command	Erase page				
Input	Command code: 59 (decimal)				
	Param0: Start page number.				
	Param1: End page number (should be greater than or equal to start page)				
	Param2: System Clock Frequency (CCLK) in kHz.				
Status code	CMD_SUCCESS   BUSY   SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION   INVALID_PAGE				
Result	None				
Description	This command is used to erase a page or multiple pages of on-chip flash memory. To erase a single page use the same "start" and "end" page numbers.				
	<b>Remark:</b> All user code must be written in such a way that no master accesses the flash while this command is executed and the flash is erased.				

# 32.6.11 Read Signature

# Table 510. IAP Read Signature command

Command	Read Signature			
Input	Command code: 70 (decimal)			
Status code	_SUCCESS			
Result	Result0: The 32-bit generated signature.			
Description	This command is used to obtain a 32-bit signature value of the entire flash memory. See Section 32.5.17 "Read flash signature" and Chapter 34 for more information.			

Chapter 32: LPC5411x Flash API

# 32.6.12 IAP Status Codes

Table 511. IAP Status codes Summary

Status code	Mnemonic	Description
0	CMD_SUCCESS	Command is executed successfully.
1	INVALID_COMMAND	Invalid command.
2	SRC_ADDR_ERROR	Source address is not on a word boundary.
3	DST_ADDR_ERROR	Destination address is not on a correct boundary.
4	SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken into consideration where applicable.
5	DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken into consideration where applicable.
6	COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
7	INVALID_SECTOR	Sector number is invalid.
8	SECTOR_NOT_BLANK	Sector is not blank.
9	SECTOR_NOT_PREPARED_ FOR_WRITE_OPERATION	Command to prepare sector for write operation was not executed.
10	COMPARE_ERROR	Source and destination data is not same.
11	BUSY	Flash programming hardware interface is busy.

Chapter 32: LPC5411x Flash API

# 32.7 I2C and SPI ISP commands

The LPC5411x I2C/SPI ISP allows programming and reprogramming internal flash via a set of commands on the I2C slave or SPI slave buses of the LPC5411x. These need to be connected to a host system that provides the I2C or SPI master connections to the LPC5411x.

For I2C and SPI ISP modes, the LPC541xx will enable both the I2C and SPI interfaces and select the first one that has a valid probe message.

# 32.7.1 Dual purpose of the ISP1/ISP1\_IRQ pin

The ISP1 pin is a special function pin that is switches function state once I2C/SPI ISP mode is entered and the host interface has been selected. Once the host interface has been selected, the ISP1 pin becomes an output pin used for indicating to the host system that a command can be serviced. During this phase, the pin is called ISP1\_IRQ. A low state on this pin indicates to the host that the LPC5411x needs servicing.

#### Notes on ISP1 input to ISP1 IRQ output switching

After reset, ISP1 is set to an input. The ISP1 pin switches to the output pin, ISP1\_IRQ, only when the host interface (either I2C or SPI) is selected. On entry to the I2C/SPI ISP mode from device reset, the interface is in auto-detection mode and the pin remains an input. Once the host interface sends the first probe command and it's accepted by the LPC5411x, the ISP1 pin switches to an output. When using the 'Reinvoke ISP' command, the host interface is selected as part of the IAP command, so the pin switches to an output right away without a probe message. When the pin switches to an output, it is driven high.

Care must be used that any external signal applied to the ISP1 pin to drive the ISP1 pin low should be done with a pull-down resistor and not tied to ground, so the ISP1\_IRQ output doesn't short directly to a low state when driving high. Host systems that drive this pin to selectively enable I2C/SPI ISP mode should drive this pin via a resistor.

## 32.7.2 Selection of I2C or SPI interface for ISP mode

Only 1 interface – either I2C or SPI – can be active for an I2C/SPI ISP session. The active interface is selected by 2 possible methods: Automatic detection or assigned via the 'Re-invoke ISP mode' IAP command.


Automatic detection is used when the I2C/SPI pin selection hasn't been defined and is used when the device is reset and enters I2C/SPI ISP mode. For automatic detection, the I2C and SPI pins listed in Section 6.2 are monitored for data from the host machine. The first interface to get data (in the form of a probe message) from a host system will become the active interface. Once the interface has been activated, the ISP1 pin will switch to an output (ISP1\_IRQ) driven high.

For the 'Re-invoke ISP mode' IAP command, the I2C or SPI interface is selected during the IAP function call. For the IAP call, auto-detection is not possible. The ISP1 pin will switch to an output (ISP1\_IRQ) driven high when the IAP call is made.

Chapter 32: LPC5411x Flash API

# 32.7.3 I2C/SPI ISP mode transaction protocol

This section explains the high-level protocol used with the I2C and SPI interfaces. A typical transaction starts with the host sending a command packet, the LPC5411x processing the command packet, the LPC5411x optionally asserting the ISP1\_IRQ line low when processing is complete, and then the host system getting the response packet. The LPC5411x will hold the ISP1\_IRQ pin asserted (low) until the host system requests the response packet. The process is shown in <a href="Figure 95">Figure 95</a>. Not all commands may follow this protocol – some commands may have no response or may not assert the ISP1\_IRQ pin.

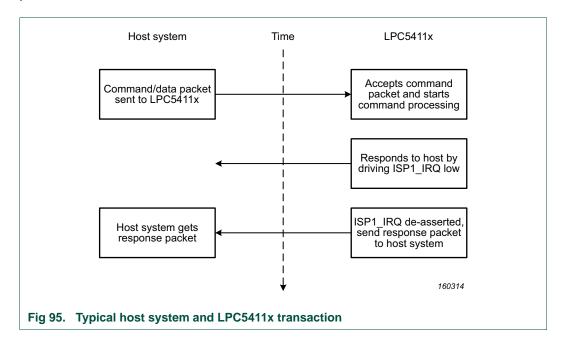

# 32.7.4 I2C ISP mode transaction protocol

The LPC5411x will respond to a host system on I2C addresses 0x18, 0x1C, 0x30, and 0x38. The host system's I2C master clock rate can be as high as 1MHz. The LPC5411x may extend the I2C clock to delay the I2C master if it needs more time to perform an operation.

When using I2C, the command is given to the LPC5411x by an I2C write transaction. The entire command packet is accepted by the LPC5411x and then processing starts. Once the LPC5411x has completed processing, it may drive the ISP1\_IRQ line low until the host system issues an I2C read transaction to get the response.

# 32.7.5 SPI ISP mode transaction protocol

The LPC5411x will respond to a host system on the configured SPI interface. A transfer is started once SSEL goes low on the LPC5411x. The SPI clock to the LPC5411x should not exceed 2MHz. SPI SSEL to first clock timing should not be less than 100uS. SPI transfer configuration should be SPI Mode 0 with 8 data bits.

Note SPI transactions are bi-directional. During the command packet phase, the host system should ignore the read data (send data from LPC5411x). During the response phase, the LPC5411x will ignore the read data (send data from host).

#### Chapter 32: LPC5411x Flash API

Although SPI is bi-directional, the command and response packet phases only send data one way for each phase. During the command packet phase, a single SPI transfer occurs where the command and data is sent from the host system. In this phase, SSEL is asserted low, the command packet is sent, and then SSEL is deasserted. The host system then waits for ISP1\_IRQ to go low from the LPC5411x. Once ISP1\_IRQ goes low, the host system then asserts SSEL low, the response packet is read, and then SSEL is deasserted. The LPC5411x will deassert ISP1\_IRQ at the start of the response packet prior to the response packet completing transfer.

# 32.7.6 I2C/SPI operations allowed for CRP systems

If an application has CRP enabled – CRP1, CRP2, or CRP3 – then the I2C/SPI commands may be limited in functionality. See <u>Table 512</u> for limitations of I2C/SPI ISP commands when CRP is enabled.

If NO\_ISP mode is used in the application, the I2C/SPI ISP mode cannot be started when the ISP0 pin is asserted. The only way to recover a system when this happens is to erase flash using the SWD interface or via the IAP commands. The application can also use the 'Re-invoke ISP' command to get back into the I2C/SPI ISP mode.

Table 512. ISP commands allowed for different CRP levels

ISP command	CRP1	CRP2	CRP3 (no entry in ISP mode allowed)
SH_CMD_GET_VERSION	yes	yes	n/a
SH_CMD_RESET	yes	yes	n/a
SH_CMD_BOOT	no	no	n/a
SH_CMD_CHECK_IMAGE	yes	yes	n/a
SH_CMD_PROBE	yes	yes	n/a
SH_CMD_WRITE_BLOCK	yes; not sector 0	yes; not sector 0	n/a
SH_CMD_READ_BLOCK	no	no	n/a
SH_CMD_SECTOR_ERASE	yes; not sector 0	yes; not sector 0	n/a
SH_CMD_PAGE_ERASE	yes; not sector 0	yes; not sector 0	n/a
SH_CMD_PAGE_WRITE	yes; not sector 0	yes; not sector 0	n/a
SH_CMD_PAGE_READ	no	no	n/a
SH_CMD_WRITE_SUBBLOCK	yes; not sector 0	yes; not sector 0	n/a
SH_CMD_READ_SUBBLOCK	no	no	n/a
SH_CMD_BULK_ERASE	yes; not sector 0	yes; full device only	n/a

Chapter 32: LPC5411x Flash API

# 32.8 I2C/SPI ISP mode commands, data, and responses

All of the supported commands, associated structures and data formats for those commands, and responses are explained in this section

Table 513. USART ISP command summary

ISP Command	Command #	Section
Get Version	0xA1	32.8.1
Reset device	0xA2	32.8.2
Boot image	0xA3	32.8.3
Check image	0xA4	32.8.4
Probe	0xA5	32.8.5
Write block	0xA6	32.8.6
Read block	0xA7	32.8.7
Sector erase	0xA8	32.8.8
Page erase	0xA9	32.8.9
Page write	0xAA	32.8.10
Page read	0xAB	32.8.11
Bulk erase	0xAC	32.8.12
Write sub-block	0xAD	32.8.13
Read sub-block	0xAE	32.8.14

# 32.8.1 SH\_CMD\_GET\_VERSION (0xA1) command

This command can be used to get the version number of the I2C/SPI ISP processor. This should not be confused with the 'Read Boot code version' included as part of the UART ISP and IAP.

Table 514. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA1	'Get Version' command identifier

Table 515. Response packet

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA1	Processed command identifier
length	0x2	0x2	0x2	Length of the response packet
major	0x4	0x1	Version	Major version
minor	0x5	0x1	Version	Minor version

## 32.8.2 SH\_CMD\_RESET (0xA2) command

This command can be used to reset the LPC5411x. This command has no response.

Table 516. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA2	'Reset' command identifier

**User manual** 

Chapter 32: LPC5411x Flash API

### 32.8.3 SH\_CMD\_BOOT (0xA3) command

This command can be used to boot the application currently programmed into flash. This command only has a response if it cannot boot the application due to CRP level.

Table 517. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA3	'Boot' command identifier
reserved	0x1	0x3	0x00	Reserved padding
imageAddress	0x4	0x4	Address	Boot address of image

#### Table 518. Response packet

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA3	Processed command identifier
length	0x2	0x2	0x4	Length of the response packet on an error
errorCode	0x4	0x4	Error code	0x00000013 for boot prevention due to CRP level

### 32.8.4 SH\_CMD\_CHECK\_IMAGE (0xA4) command

This command can be used to check if the application currently programmed into flash has a valid CRC value. The command will compute the CRC32 value of the image at the passed address using the crc\_len field in the application image header. If the checksum is valid, a response value of 0 is returned, otherwise the computed CRC32 value is returned.

Table 519. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA4	'Check image' command identifier
reserved	0x1	0x3	0x00	Reserved padding
imageAddress	0x4	0x4	Address	Boot address of image to check

#### Table 520. Response packet

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA4	Processed command identifier
length	0x2	0x2	0x04	Length of the response packet
errorCode	0x4	0x4	CRC32 value	0 – If checksum value present in image header matches the computed value.  0xYYYYYYYY = computed CRC32.  0xFFFFFFF = invalid flash address.

## 32.8.5 SH\_CMD\_PROBE (0xA5) command

The probe command is used to select either the I2C or SPI interface when in auto-detection mode. This command is required when booting into the I2C/SPI ISP mode from a reset condition. The probe command data will be accepted on the supported I2C or SPI ISP pins. Once the data has been checked, the ISP1\_IRQ line is driven low. The interface that was used for the probe command becomes the active interface and the other interface is disabled.

Chapter 32: LPC5411x Flash API

The probe command is optional when the I2C or SPI ISP mode is re-invoked from an application using the 'Re-invoke ISP' IAP command. Only the interface selected with the 'Re-invoke ISP' IAP command will be active for the optional probe command.

The host system should repeatedly send the probe command to the LCP5410x via one of the supported interfaces until the LPC5411x asserts the ISP1\_IRQ pin low. Once the ISP1\_IRQ has been asserted low by the LPC5411x, the probe message can stop. No response will be sent back to the host on the supported interface pins.

Note this command has no response. A low state on the ISP1\_IRQ line indicates the probe command was accepted and processed.

Table 521. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA4	'Probe' command identifier
ifSel	0x1	0x1		Host interface type and port. Must match selected interface used to the LPC541xx.  0 – I2C0 port  1 – SPI0 port
Reserved0	0x2	0x1		Set to 0x00
Reserved1	0x3	0x1		Set to 0x00
Reserved2	0x4	0x1		Set to 0x00
Reserved3	0x5	0x1		Set to 0x00
Reserved4	0x6	0x1		Set to 0x00
checksum	0x7	0x1		XOR of all the 7 bytes above.

## 32.8.6 SH\_CMD\_WRITE\_BLOCK (0xA6) command

The write block command is used to write a block of data to flash. A block of data is 512 bytes.

Table 522. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA6	'Write block' command identifier
crcCheck	0x1	0x1		<ul><li>0 – Do CRC check for this packet.</li><li>1 - Ignore CRC field for this packet.</li></ul>
blockNum	0x2	0x2		Flash block number in which the appended data to be programmed. For example to program flash block 0x8000, this parameter should be set to 64.
data	0x4	0x200		Data to be programmed in flash.
checksum	0x204	0x4	CRC32	CRC32 of the packet excluding this field. Set this field to 0 if crcCheck is set to 1.

#### Table 523. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA6	Processed command identifier
length	0x2	0x2	0x00	On success this field is set to 0.

Chapter 32: LPC5411x Flash API

Table 524. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA6	Processed command identifier
length	0x2	0x2	0x00	On error this field is set to 4.
errorCode	0x4	0x4	Error code	Error code specified in error.h

## 32.8.7 SH\_CMD\_READ\_BLOCK (0xA7) command

The read block command is used to read a block of data from flash. A block of data is 512 bytes.

#### Table 525. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA7	'Read block' command identifier
reserved	0x1	0x1		Should be zero.
blockNum	0x2	0x2		Flash block number to read. For example to read flash block 0x8000, this parameter should be set to 64.

#### Table 526. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA7	Processed command identifier
length	0x2	0x2	0x204	Length of the response packet. 0x204 = success
data	0x4	0x200		Flash block content.
checksum	0x204	0x4	CRC32	CRC32 of the packet excluding this field.

#### Table 527. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA7	Processed command identifier
length	0x2	0x2	0x4	Length of the response packet. 0x4 = failure
errorCode	0x4	0x4	Error code	Error code specified in error.h

## 32.8.8 SH\_CMD\_SECTOR\_ERASE (0xA8) command

The sector erase command is used to erase a sector in flash. A sector size is 32KBytes.

### Table 528. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA8	'Erase sector' command identifier
reserved	0x1	0x1		Should be zero.
sectorNum	0x2	0x2		Flash sector number to be erased. For example to erase flash sector at 0x8000, this parameter should be set to 1.

Chapter 32: LPC5411x Flash API

### Table 529. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA8	Processed command identifier
length	0x2	0x2	0x00	On Success this field is set to 0.

#### Table 530. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA8	Processed command identifier
length	0x2	0x2	0x4	On error this field is set to 4.
errorCode	0x4	0x4	Error code	Error code specified in error.h

### 32.8.9 SH\_CMD\_PAGE\_ERASE (0xA9) command

The page erase command is used to erase a page in flash. A page size is 256 bytes.

#### Table 531. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xA9	'Page erase' command identifier
reserved	0x1	0x1		Should be zero.
pageNum	0x2	0x2		Flash page number to be erased. For example to erase flash page at 0x8000, this parameter should be set to 128.

#### Table 532. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA9	Processed command identifier
length	0x2	0x2	0x00	Length of the response packet. 0x0 = success

#### Table 533. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xA9	Processed command identifier
length	0x2	0x2	0x4	Length of the response packet. 0x4 = failure
errorCode	0x4	0x4	Error code	Error code specified in error.h parameters

## 32.8.10 SH\_CMD\_PAGE\_WRITE (0xAA) command

The page write command is used to write a page in flash. A page size is 256 bytes.

### Chapter 32: LPC5411x Flash API

Table 534. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xAA	'Page write' command identifier
crcCheck	0x1	0x1		0 – Do CRC check for this packet.  1 - Ignore CRC field for this packet.
pageNum	0x2	0x2		Flash page number in which the appended data to be programmed. For example to program flash page at 0x8000, this parameter should be set to 128.
data	0x4	0x100		Data to be programmed in flash.
checkSum	0x104	0x4	CRC32	CRC32 of the packet excluding this field. Set this field to 0 if crcCheck is set to 1.

#### Table 535. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAA	Processed command identifier
length	0x2	0x2	0x00	On Success this field is set to 0.

#### Table 536. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAA	Processed command identifier
length	0x2	0x2	0x4	On error this field is set to 4.
errorCode	0x4	0x4	Error code	Error code specified in error.h parameters

## 32.8.11 SH\_CMD\_PAGE\_READ (0xAB) command

The page read command is used to read a page in flash. A page size is 256 bytes.

### Table 537. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xAB	'Page read' command identifier
crcCheck	0x1	0x3		<ul><li>0 – Do CRC check for this packet.</li><li>1 - Ignore CRC field for this packet.</li></ul>
pageNum	0x4	0x4		Flash page number from which the data to be read. For example to program flash page at 0x8000 this parameter should be set to 128.

#### Table 538. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAB	Processed command identifier
length	0x2	0x2	0x00	On Success this field is set to 0x104
data	0x4	0x100	0x104	Flash page content.
checkSum	0x104	0x4	CRC32	CRC32 of the packet excluding this field.

Chapter 32: LPC5411x Flash API

Table 539. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAB	Processed command identifier
length	0x2	0x2	0x4	On error this field is set to 4.
errorCode	0x4	0x4	Error code	Error code specified in error.h parameters

### 32.8.12 SH\_CMD\_BULK\_ERASE (0xAC) command

The bulk erase command is used to erase the entire flash.

#### Table 540. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xAC	'Bulk erase' command identifier
reserved	0x1	0x1		Reserved padding
startSec	0x2	0x1		Starting sector number to erase.  Must be >0 for CRP1.  Must be 0 for CRP2.
endsec	0x3	0x1		End sector number to erase. Must be last sector for CRP1 and CRP2.

### Table 541. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAC	Processed command identifier
length	0x2	0x2	0x00	On Success this field is set to 0.

#### Table 542. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAC	Processed command identifier
length	0x2	0x2	0x4	On error this field is set to 4
errorCode	0x4	0x4	Error code	Error code specified in error.h parameters

### 32.8.13 SH\_CMD\_WRITE\_SUBBLOCK (0xAD) command

The write sub-block command is used for queuing data for a full flash block write. It is used when the host system cannot send the entire data block to the LPC5411x in a single I2C transfer using the 'Write block' command. When using this command, multiple sub-blocks are sent to the LPC5411x in sequential order for the block. The LPC5411x will collect all the packets and perform the flash write once the last packet is received. If any other commands are sent between 'Write sub-block' commands, the collected buffers are discarded and the operations needs to restart. If a sub-block number crosses a block boundary, the LPC5411x will automatically erase the sector prior to the write operation.

Chapter 32: LPC5411x Flash API

Table 543. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xAD	'Write sub-block' command identifier
subBlock	0x1	0x1		Bit 0: If set, CRC check is not done for this packet.  Bits [5:1]: Specifies the sub-block number.  Bits [7:6]: Specifies the sub-block size.  00 – 32 bytes  01 – 64 bytes  10 – 128 bytes  11 – 256 bytes
blockNum	0x2	0x2		Flash block number in which the appended data to be programed. For example to program flash page at 0x8000 this parameter should be set to 64.
data	0x4	Sub-block size		Data to be programmed in flash.
checkSum	Sub-block size + 4	0x4		CRC32 of the packet excluding this field. Set this field to 0 if crcCheck is set to 1.

#### Table 544. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAD	Processed command identifier
length	0x2	0x2	0x00	On Success this field is set to 0.

#### Table 545. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAD	Processed command identifier
length	0x2	0x2	0x4	On error this field is set to 4
errorCode	0x4	0x4	Error code	Error code specified in error.h parameters

## 32.8.14 SH\_CMD\_ READ\_SUBBLOCK (0xAE) command

The read sub-block command is used for reading partial data from a full flash block write. It is used when the host system cannot receive the entire data block to the LPC5411x in a single I2C transfer using the 'Read block' command.

### Table 546. Command packet

Field	Offset	Size (bytes)	Value	Description
command	0x0	0x1	0xAE	'Read subblock' command identifier
subBlock	0x1	0x1		Bit 0: If set, CRC check is not done for this packet.  Bits [5:1]: Specifies the sub-block number.  Bits [7:6]: Specifies the sub-block size.  00 – 32 bytes  01 – 64 bytes  10 – 128 bytes  11 – 256 bytes
blockNum	0x2	0x2		Flash block number to read. For example to read flash page at 0x8000 this parameter should be set to 64.

Chapter 32: LPC5411x Flash API

Table 547. Response packet (success)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAD	Processed command identifier
length	0x2	0x2	Sub-block size + 4	On Success this field is set to (Sub-block size + 4).
data	0x4	0x2	Sub-block size	Flash data
checksum	Sub-block size + 4	0x4		CRC32 of the packet excluding this field.

#### Table 548. Response packet (error)

Field	Offset	Size (bytes)	Value	Description
sop	0x0	0x1	0x55	Start of packet identifier
command	0x1	0x1	0xAD	Processed command identifier
length	0x2	0x2	0x4	On error this field is set to 4
errorCode	0x4	0x4	Error code	Error code specified in error.h parameters

### 32.8.15 I2C/SPI ISP Error codes

These error codes are located in the error.h file.

### Table 549. USART ISP Error codes

Return Code	Error code	Description
0x0	ERR_ISP_CMD_SUCCESS	Command is executed successfully. Sent by ISP handler only when command given by the host has been completely and successfully executed.
0x1	ERR_ISP_INVALID_COMMAND	Invalid command.
0x2	ERR_ISP_SRC_ADDR_ERROR	Source address is not on word boundary.
0x3	ERR_ISP_DST_ADDR_ERROR	Destination address is not on a correct boundary.
0x4	ERR_ISP_SRC_ADDR_NOT_MAPPED	Source address is not mapped in the memory map. Count value is taken into consideration where applicable.
0x5	ERR_ISP_DST_ADDR_NOT_MAPPED	Destination address is not mapped in the memory map. Count value is taken into consideration where applicable.
0x6	ERR_ISP_COUNT_ERROR	Byte count is not multiple of 4 or is not a permitted value.
0x7	ERR_ISP_INVALID_SECTOR	Sector number is invalid or end sector number is greater than start sector number.
8x0	ERR_ISP_SECTOR_NOT_BLANK	Sector is not blank.
0x9	ERR_ISP_SECTOR_NOT_PREPARED_ FOR_WRITE_OPERATION	Command to prepare sector for write operation was not executed.
0xA	ERR_ISP_COMPARE_ERROR	Source and destination data not equal.
0xB	ERR_ISP_BUSY	Flash programming hardware interface is busy.
0xC	ERR_ISP_PARAM_ERROR	Insufficient number of parameters or invalid parameter.
0xD	ERR_ISP_ADDR_ERROR	Address is not on word boundary.
0xE	ERR_ISP_ADDR_NOT_MAPPED	Address is not mapped in the memory map. Count value is taken into consideration where applicable.
0xF	-	Reserved.
0x10	-	Reserved.
0x11	-	Reserved.

UM10914

Chapter 32: LPC5411x Flash API

Table 549. USART ISP Error codes

Return Code	Error code	Description
0x12	-	-
0x13	ERR_ISP_CODE_READ_ PROTECTION_ENABLED	Code read protection enabled.
0x14	-	Reserved.
0x15	-	Reserved.
0x16	-	Reserved.
0x17	ERR_ISP_FRO_NO_POWER	FRO not turned on in the PDRUNCFG register.
0x18	ERR_ISP_FLASH_NO_POWER	Flash not turned on in the PDRUNCFG register.
0x19	-	Reserved.
0x1A	-	Reserved.
0x1B	ERR_ISP_FLASH_NO_CLOCK	Flash clock disabled in the AHBCLKCTRL register.

## 32.8.16 I2C/SPI ISP mode protocol software support

This section includes predefined command definitions and software structures used for communication for the I2C/SPI ISP protocol. These may be used with a host application that talks to the I2C/SPI ISP interface via the supported I2C or SPI slave interfaces.

```
/* I2C/SPI IMSP mode protocol commands */
#define SH CMD GET VERSION 0xA1
#define SH_CMD_RESET 0xA2
#define SH_CMD_BOOT 0xA3
#define SH CMD CHECK IMAGE 0xA4
#define SH_CMD_PROBE 0xA5
#define SH_CMD_WRITE_BLOCK 0xA6
#define SH_CMD_READ_BLOCK 0xA7
#define SH_CMD_SECTOR_ERASE 0xA8
#define SH_CMD_PAGE_ERASE 0xA9
#define SH_CMD_PAGE_WRITE 0xAA
#define SH_CMD_PAGE_READ 0xAB
#define SH_CMD_WRITE_SUBBLOCK 0xAC
#define SH_CMD_READ_SUBBLOCK 0xAD
#define SH_CMD_BULK_ERASE 0xAE
/** Structure describing response packet format. */
typedef struct {
                   /*!< Start of packet = 0x55 for bootloader */</pre>
     uint8_t sop;
     uint8_t cmd;
                   /*! < Response to the Command ID. */
     uint16 t length; /*! < Response data length not including this header. */
} CmdResponse t;
/** Structure describing Read/Write block command packet format. */
typedef struct {
                      /*! < Command ID */
    uint8 t cmd;
    uint8_t crc_check; /*!< specifies if we need to do CRC check before processing */
    uint16_t block_nr; /*!< Block number.*/</pre>
    uint32 t data[SL FLASH BLOCK SZ/4];
                                            /*!< Data */
    uint32 t crc32;
                      /*!< CRC32 of command header and data */
```

#### Chapter 32: LPC5411x Flash API

```
} CmdRWBlockParam t;
                                . . .
/** Structure describing Read/Write page command packet format. */
typedef struct {
                      /*! < Command ID */
    uint8 t cmd;
    uint8_t crc_check; /*!< specifies if we need to do CRC check before processing */
    uint16 t page nr; /*!< page number.*/</pre>
    uint32_t data[SL_FLASH_PAGE_SZ/4];
                                          /*!< Data */
    uint32 t crc32; /*!< CRC32 of command header and data */</pre>
} CmdRWPageParam t;
/** Structure describing Read sub-block command packet format. */
typedef struct {
                         /*! < Command ID */
    uint8_t cmd;
    uint8_t sub_block_nr; /*!< specifies the sub-block number. Bits below:</pre>
                           0 - Skip crc;
                           5-1: sub block nr;
                           7-6: sub-block size. 0 - 32, 1 - 64, 2 - 128, 3 - 256 */
    uint16_t block_nr;
                         /*!< block number.*/
    uint32_t data[SL_FLASH_BLOCK_SZ/4]; /*!< Data */</pre>
} CmdReadSubBlockParam t;
/** Structure describing Sector erase command packet format. */
typedef struct {
                    /*!< Command ID */</pre>
    uint8 t cmd;
    uint8_t reserved; /*!< Should be zero. */</pre>
    uint16_t sec_nr; /*!< Sector number.*/</pre>
} CmdEraseSectorParam t;
/** Structure describing Bulk erase command packet format. */
typedef struct {
                         /*!< Command ID */</pre>
    uint8 t cmd;
    uint8_t reserved;
                         /*!< Should be zero. */
    uint8_t start_sec; /*!< Start Sector number.*/</pre>
                         /*!< End Sector number.*/</pre>
    uint8_t end_sec;
} CmdBulkEraseParam t;
/** Structure describing response packet with data. */
typedef struct {
    CmdResponse t hdr;
                                        /*! < Response header. */
    uint32_t data[SL_FLASH_BLOCK_SZ/4]; /*!< Data */</pre>
    uint32_t crc32;
                                        /*! < CRC32 of response packet. */
} CmdDataResp t;
typedef enum
ERR ISP BASE = 0 \times 000000000,
  /*0x0000001*/ ERR_ISP_INVALID_COMMAND = ERR_ISP_BASE + 1,
  /*0x0000002*/ ERR_ISP_SRC_ADDR_ERROR,
  /*0x0000003*/ ERR_ISP_DST_ADDR_ERROR,
  /*0x0000004*/ ERR ISP SRC ADDR NOT MAPPED,
```

#### Chapter 32: LPC5411x Flash API

```
/*0x0000005*/ ERR_ISP_DST_ADDR_NOT_MAPPED,
  /*0x0000006*/ ERR_ISP_COUNT_ERROR,
  /*0x00000007*/ ERR ISP INVALID SECTOR,
 /*0x0000008*/ ERR_ISP_SECTOR_NOT_BLANK,
  /*0x0000009*/ ERR_ISP_SECTOR_NOT_PREPARED_FOR_WRITE_OPERATION,
 /*0x000000A*/ ERR_ISP_COMPARE_ERROR,
  /*0x0000000B*/ ERR ISP BUSY, /* Flash programming hardware interface is busy */
  /*0x000000C*/ ERR_ISP_PARAM_ERROR, /* Insufficient number of parameters */
 /*0x000000D*/ ERR ISP ADDR ERROR,
                                       /* Address not on word boundary */
  /*0x000000E*/ ERR ISP ADDR NOT MAPPED,
  /*0x000000F*/ ERR_ISP_CMD_LOCKED,
                                      /* Command is locked */
 /*0x00000010*/ ERR_ISP_INVALID_CODE, /* Unlock code is invalid */
  /*0x00000011*/ ERR ISP INVALID BAUD RATE,
 /*0x0000012*/ ERR_ISP_INVALID_STOP_BIT,
 /*0x0000013*/ ERR_ISP_CODE_READ_PROTECTION_ENABLED,
  /*0x00000014*/ ERR_ISP_INVALID_FLASH_UNIT, /* reserved */
 /*0x0000015*/ ERR_ISP_USER_CODE_CHECKSUM,
                                                /* reserved */
 /*0x00000016*/ ERR_ISP_SETTING_ACTIVE_PARTITION, /* reserved */
 /*0x0000017*/ ERR_ISP_FRO_NO_POWER,
 /*0x0000018*/ ERR_ISP_FLASH_NO_POWER,
 /*0x00000019*/ ERR ISP EEPROM NO POWER,
                                                /* reserved */
 /*0x0000001A*/ ERR ISP EEPROM NO CLOCK,
                                                /* reserved */
 /*0x000001B*/ ERR_ISP_FLASH_NO_CLOCK,
  /*0x0000001C*/ ERR ISP REINVOKE ISP CONFIG
} ErrorCode t;
```

# **UM10914**

## Chapter 33: LPC5411x USB ROM API

Rev. 1.2 — 30 June 2016

**User manual** 

## 33.1 How to read this chapter


The USB ROM driver routines are available on all LPC5411x devices.

## 33.2 Features

- ROM-base USB drivers
- Communication Device Class (CDC) device class
- · Human Interface Device (HID) device class
- Mass storage device class

## 33.3 General description

The boot ROM contains a USB driver to simplify the USB application development. The USB driver implements the Communication Device Class (CDC), the Human Interface Device (HID), and the Mass Storage Device (MSC) device class. The USB on-chip drivers support composite device.

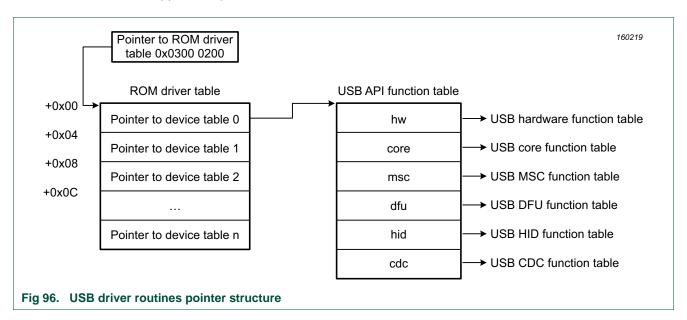

#### 33.3.1 USB driver functions

The USB device driver ROM API consists of the following modules:

Communication Device Class (CDC) function driver. This module contains an internal
implementation of the USB CDC Class. User applications can use this class driver
instead of implementing the CDC-ACM class manually via the low-level USBD\_HW
and USBD\_Core APIs. This module is designed to simplify the user code by exposing
only the required interface needed to interface with Devices using the USB CDC-ACM
Class.

#### Chapter 33: LPC5411x USB ROM API

- Communication Device Class function driver initialization parameter data structure (Table 577 "USBD\_CDC\_INIT\_PARAM class structure").
- CDC class API functions structure. This module exposes functions which interact directly with USB device controller hardware (<u>Table 576 "USBD\_CDC\_API class</u> structure").
- USB core layer
  - struct (Table 573 "\_WB\_T class structure")
  - union (Table 550 "\_\_WORD\_BYTE class structure")
  - struct (Table 551 "\_BM\_T class structure")
  - struct (<u>Table 564 "\_REQUEST\_TYPE class structure"</u>)
  - struct (Table 571 "\_USB\_SETUP\_PACKET class structure")
  - struct (Table 567 "\_USB\_DEVICE\_QUALIFIER\_DESCRIPTOR class structure")
  - struct USB device descriptor
  - struct (Table 567 "\_USB\_DEVICE\_QUALIFIER\_DESCRIPTOR class structure")
  - struct USB configuration descriptor
  - struct (Table 569 "\_USB\_INTERFACE\_DESCRIPTOR class structure")
  - struct USB endpoint descriptor
  - struct (Table 572 "\_USB\_STRING\_DESCRIPTOR class structure")
  - struct (Table 565 " USB COMMON DESCRIPTOR class structure")
  - struct (Table 570 "\_USB\_OTHER\_SPEED\_CONFIGURATION class structure")
  - USB descriptors data structure (<u>Table 566 "\_USB\_CORE\_DESCS\_T class structure</u>")
  - USB device stack initialization parameter data structure (<u>Table 575</u> "USBD\_API\_INIT\_PARAM class structure").
  - USB device stack core API functions structure (<u>Table 578 "USBD\_CORE\_API</u> class structure").
- Device Firmware Upgrade (DFU) class function driver
  - DFU descriptors data structure (<u>Table 580 "USBD\_DFU\_INIT\_PARAM class structure</u>").
  - DFU class API functions structure. This module exposes functions which interact directly with the USB device controller hardware (<u>Table 579 "USBD\_DFU\_API</u> class structure").
- · HID class function driver
  - struct (Table 559 " HID DESCRIPTOR class structure").
  - struct (Table 561 " HID REPORT T class structure").
  - USB descriptors data structure (<u>Table 582 "USBD\_HID\_INIT\_PARAM class structure</u>").
  - HID class API functions structure. This structure contains pointers to all the functions exposed by the HID function driver module (<u>Table 583 "USBD\_HW\_API</u> class structure").
- USB device controller driver

#### Chapter 33: LPC5411x USB ROM API

- Hardware API functions structure. This module exposes functions which interact directly with the USB device controller hardware (<u>Table 583 "USBD\_HW\_API class</u> structure").
- Mass Storage Class (MSC) function driver
  - Mass Storage Class function driver initialization parameter data structure (Table 585).
  - MSC class API functions structure. This module exposes functions which interact directly with the USB device controller hardware (Table 584).

## 33.3.2 Calling the USB device driver

A fixed location in ROM contains a pointer to the ROM driver table. The ROM driver table contains a pointer to the USB driver table. Pointers to the various USB driver functions are stored in this table. USB driver functions can be called by using a C structure. Figure 96 illustrates the pointer mechanism used to access the on-chip USB driver.

```
typedef struct USBD_API
{
  const USBD_HW_API_T* hw;
  const USBD_CORE_API_T* core;
  const USBD_MSC_API_T* msc;
  const USBD_DFU_API_T* dfu;
  const USBD_HID_API_T* hid;
  const USBD_CDC_API_T* cdc;
  const uint32_t* reserved6;
  const uint32_t version;
} USBD_API_T;
```

Chapter 33: LPC5411x USB ROM API

### **33.4 USB API**

### 33.4.1 \_\_WORD\_BYTE

#### Table 550. WORD BYTE class structure

Member	Description
W	uint16_tWORD_BYTE::W
	data member to do 16 bit access
WB	WB_TWB_TWORD_BYTE::WB
	data member to do 8 bit access

### 33.4.2 \_BM\_T

#### Table 551. \_BM\_T class structure

Member	Description
Recipient	uint8_t _BM_T::Recipient
	Recipient type.
Туре	uint8_t _BM_T::Type
	Request type.
Dir	uint8_t _BM_T::Dir
	Direction type.

## 33.4.3 \_CDC\_ABSTRACT\_CONTROL\_MANAGEMENT\_DESCRIPTOR

#### Table 552. \_CDC\_ABSTRACT\_CONTROL\_MANAGEMENT\_DESCRIPTOR class structure

Member	Description
bFunctionLength	uint8_t _CDC_ABSTRACT_CONTROL_MANAGEMENT_DESCRIPTOR::bFunctionLength
bDescriptorType	uint8_t _CDC_ABSTRACT_CONTROL_MANAGEMENT_DESCRIPTOR::bDescriptorType
bDescriptorSubtype	uint8_t _CDC_ABSTRACT_CONTROL_MANAGEMENT_DESCRIPTOR::bDescriptorSubtype
bmCapabilities	uint8_t _CDC_ABSTRACT_CONTROL_MANAGEMENT_DESCRIPTOR::bmCapabilities

### 33.4.4 \_CDC\_CALL\_MANAGEMENT\_DESCRIPTOR

### Table 553. \_CDC\_CALL\_MANAGEMENT\_DESCRIPTOR class structure

Member	Description
bFunctionLength	uint8_t _CDC_CALL_MANAGEMENT_DESCRIPTOR::bFunctionLength
bDescriptorType	uint8_t _CDC_CALL_MANAGEMENT_DESCRIPTOR::bDescriptorType
bDescriptorSubtype	uint8_t _CDC_CALL_MANAGEMENT_DESCRIPTOR::bDescriptorSubtype
bmCapabilities	uint8_t _CDC_CALL_MANAGEMENT_DESCRIPTOR::bmCapabilities
bDataInterface	uint8_t _CDC_CALL_MANAGEMENT_DESCRIPTOR::bDataInterface

Chapter 33: LPC5411x USB ROM API

### 33.4.5 \_CDC\_HEADER\_DESCRIPTOR

#### Table 554. \_CDC\_HEADER\_DESCRIPTOR class structure

Member	Description
bFunctionLength	uint8_t _CDC_HEADER_DESCRIPTOR::bFunctionLength
bDescriptorType	uint8_t _CDC_HEADER_DESCRIPTOR::bDescriptorType
bDescriptorSubtype	uint8_t _CDC_HEADER_DESCRIPTOR::bDescriptorSubtype
bcdCDC	uint16_t _CDC_HEADER_DESCRIPTOR::bcdCDC

## 33.4.6 \_CDC\_LINE\_CODING

#### Table 555. \_CDC\_LINE\_CODING class structure

Member	Description
dwDTERate	uint32_t _CDC_LINE_CODING::dwDTERate
bCharFormat	uint8_t _CDC_LINE_CODING::bCharFormat
bParityType	uint8_t _CDC_LINE_CODING::bParityType
bDataBits	uint8_t _CDC_LINE_CODING::bDataBits

### 33.4.7 \_CDC\_UNION\_1SLAVE\_DESCRIPTOR

#### Table 556. \_CDC\_UNION\_1SLAVE\_DESCRIPTOR class structure

Member	Description
sUnion	CDC_UNION_DESCRIPTORCDC_UNION_DESCRIPTOR _CDC_UNION_1SLAVE_DESCRIPTOR::sUnion
bSlaveInterfaces	uint8_t _CDC_UNION_1SLAVE_DESCRIPTOR::bSlaveInterfaces[1][1]

### 33.4.8 \_CDC\_UNION\_DESCRIPTOR

### Table 557. \_CDC\_UNION\_DESCRIPTOR class structure

Member	Description
bFunctionLength	uint8_t _CDC_UNION_DESCRIPTOR::bFunctionLength
bDescriptorType	uint8_t _CDC_UNION_DESCRIPTOR::bDescriptorType
bDescriptorSubtype	uint8_t _CDC_UNION_DESCRIPTOR::bDescriptorSubtype
bMasterInterface	uint8_t _CDC_UNION_DESCRIPTOR::bMasterInterface

### 33.4.9 **\_DFU\_STATUS**

#### Table 558. \_DFU\_STATUS class structure

Member	Description
bStatus	uint8_t _DFU_STATUS::bStatus
bwPollTimeout	uint8_t _DFU_STATUS::bwPollTimeout[3][3]
bState	uint8_t _DFU_STATUS::bState
iString	uint8_t _DFU_STATUS::iString

520 of 590

Chapter 33: LPC5411x USB ROM API

### 33.4.10 \_HID\_DESCRIPTOR

HID class-specific HID Descriptor.

### Table 559. \_HID\_DESCRIPTOR class structure

Member	Description
bLength	uint8_t _HID_DESCRIPTOR::bLength
	Size of the descriptor, in bytes.
bDescriptorType	uint8_t _HID_DESCRIPTOR::bDescriptorType
	Type of HID descriptor.
bcdHID	uint16_t _HID_DESCRIPTOR::bcdHID
	BCD encoded version that the HID descriptor and device complies to.
bCountryCode	uint8_t _HID_DESCRIPTOR::bCountryCode
	Country code of the localized device, or zero if universal.
bNumDescriptors	uint8_t _HID_DESCRIPTOR::bNumDescriptors
	Total number of HID report descriptors for the interface.
DescriptorList	PRE_PACK struct POST_PACK _HID_DESCRIPTOR::_HID_DESCRIPTOR_LISTPRE_PACK struct
	POST_PACK _HID_DESCRIPTOR::_HID_DESCRIPTOR_LIST
	_HID_DESCRIPTOR::DescriptorList[1][1]
	Array of one or more descriptors

### 33.4.11 \_HID\_DESCRIPTOR::\_HID\_DESCRIPTOR\_LIST

### Table 560. \_HID\_DESCRIPTOR::\_HID\_DESCRIPTOR\_LIST class structure

Member	Description
bDescriptorType	uint8_t _HID_DESCRIPTOR::_HID_DESCRIPTOR_LIST::bDescriptorType
	Type of HID report.
wDescriptorLength	uint16_t _HID_DESCRIPTOR::_HID_DESCRIPTOR_LIST::wDescriptorLength
	Length of the associated HID report descriptor, in bytes.

## 33.4.12 \_HID\_REPORT\_T

HID report descriptor data structure.

#### Table 561. \_HID\_REPORT\_T class structure

Member	Description
len	uint16_t _HID_REPORT_T::len
	Size of the report descriptor in bytes.
idle_time	uint8_t _HID_REPORT_T::idle_time
	This value is used by stack to respond to Set_Idle & GET_Idle requests for the specified report ID. The value of this field specified the rate at which duplicate reports are generated for the specified Report ID. For example, a device with two input reports could specify an idle rate of 20 milliseconds for report ID 1 and 500 milliseconds for report ID 2.
pad	uint8_t _HID_REPORT_T::pad
	Padding space.
desc	uint8_t * _HID_REPORT_T::desc
	Report descriptor.

Chapter 33: LPC5411x USB ROM API

### 33.4.13 \_MSC\_CBW

#### Table 562. \_MSC\_CBW class structure

Member	Description
dSignature	uint32_t _MSC_CBW::dSignature
dTag	uint32_t _MSC_CBW::dTag
dDataLength	uint32_t _MSC_CBW::dDataLength
bmFlags	uint8_t _MSC_CBW::bmFlags
bLUN	uint8_t _MSC_CBW::bLUN
bCBLength	uint8_t _MSC_CBW::bCBLength
СВ	uint8_t _MSC_CBW::CB[16][16]

## 33.4.14 \_MSC\_CSW

### Table 563. \_MSC\_CSW class structure

Member	Description
dSignature	uint32_t _MSC_CSW::dSignature
dTag	uint32_t _MSC_CSW::dTag
dDataResidue	uint32_t _MSC_CSW::dDataResidue
bStatus	uint8_t _MSC_CSW::bStatus

## 33.4.15 \_REQUEST\_TYPE

### Table 564. \_REQUEST\_TYPE class structure

Member	Description
В	uint8_t _REQUEST_TYPE::B
	byte wide access member
BM	BM_TBM_T _REQUEST_TYPE::BM
	bitfield structure access member

### 33.4.16 \_USB\_COMMON\_DESCRIPTOR

#### Table 565. \_USB\_COMMON\_DESCRIPTOR class structure

Member	Description
bLength	uint8_t _USB_COMMON_DESCRIPTOR::bLength
	Size of this descriptor in bytes
bDescriptorType	uint8_t _USB_COMMON_DESCRIPTOR::bDescriptorType
	Descriptor Type

522 of 590

Chapter 33: LPC5411x USB ROM API

## 33.4.17 \_USB\_CORE\_DESCS\_T

USB descriptors data structure.

Table 566. \_USB\_CORE\_DESCS\_T class structure

Member	Description
device_desc	uint8_t * _USB_CORE_DESCS_T::device_desc
	Pointer to USB device descriptor
string_desc	uint8_t * _USB_CORE_DESCS_T::string_desc
	Pointer to array of USB string descriptors
full_speed_desc	uint8_t * _USB_CORE_DESCS_T::full_speed_desc
	Pointer to USB device configuration descriptor when device is operating in full speed mode.
high_speed_desc	uint8_t * _USB_CORE_DESCS_T::high_speed_desc
	Pointer to USB device configuration descriptor when device is operating in high speed mode. For full-speed only implementation this pointer should be same as full_speed_desc.
device_qualifier	uint8_t * _USB_CORE_DESCS_T::device_qualifier
	Pointer to USB device qualifier descriptor. For full-speed only implementation this pointer should be set to null (0).

### 33.4.18 \_USB\_DEVICE\_QUALIFIER\_DESCRIPTOR

### Table 567. \_USB\_DEVICE\_QUALIFIER\_DESCRIPTOR class structure

Member	Description
bLength	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bLength
	Size of descriptor
bDescriptorType	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bDescriptorType
	Device Qualifier Type
bcdUSB	uint16_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bcdUSB
	USB specification version number (e.g., 0200H for V2.00)
bDeviceClass	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bDeviceClass
	Class Code
bDeviceSubClass	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bDeviceSubClass
	SubClass Code
bDeviceProtocol	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bDeviceProtocol
	Protocol Code
bMaxPacketSize0	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bMaxPacketSize0
	Maximum packet size for other speed
bNumConfigurations	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bNumConfigurations
	Number of Other-speed Configurations
bReserved	uint8_t _USB_DEVICE_QUALIFIER_DESCRIPTOR::bReserved
	Reserved for future use, must be zero

Chapter 33: LPC5411x USB ROM API

## 33.4.19 \_USB\_DFU\_FUNC\_DESCRIPTOR

### Table 568. \_USB\_DFU\_FUNC\_DESCRIPTOR class structure

Member	Description
bLength	uint8_t _USB_DFU_FUNC_DESCRIPTOR::bLength
bDescriptorType	uint8_t _USB_DFU_FUNC_DESCRIPTOR::bDescriptorType
bmAttributes	uint8_t _USB_DFU_FUNC_DESCRIPTOR::bmAttributes
wDetachTimeOut	uint16_t _USB_DFU_FUNC_DESCRIPTOR::wDetachTimeOut
wTransferSize	uint16_t _USB_DFU_FUNC_DESCRIPTOR::wTransferSize
bcdDFUVersion	uint16_t _USB_DFU_FUNC_DESCRIPTOR::bcdDFUVersion

## 33.4.20 \_USB\_INTERFACE\_DESCRIPTOR

## Table 569. \_USB\_INTERFACE\_DESCRIPTOR class structure

Member	Description
bLength	uint8_t _USB_INTERFACE_DESCRIPTOR::bLength
	Size of this descriptor in bytes
bDescriptorType	uint8_t _USB_INTERFACE_DESCRIPTOR::bDescriptorType
	INTERFACE Descriptor Type
bInterfaceNumber	uint8_t _USB_INTERFACE_DESCRIPTOR::bInterfaceNumber
	Number of this interface. Zero-based value identifying the index in the array of concurrent interfaces supported by this configuration.
bAlternateSetting	uint8_t _USB_INTERFACE_DESCRIPTOR::bAlternateSetting
	Value used to select this alternate setting for the interface identified in the prior field
bNumEndpoints	uint8_t _USB_INTERFACE_DESCRIPTOR::bNumEndpoints
	Number of endpoints used by this interface (excluding endpoint zero). If this value is zero, this interface only uses the Default Control Pipe.
bInterfaceClass	uint8_t _USB_INTERFACE_DESCRIPTOR::bInterfaceClass
	Class code (assigned by the USB-IF).
bInterfaceSubClass	uint8_t _USB_INTERFACE_DESCRIPTOR::bInterfaceSubClass
	Subclass code (assigned by the USB-IF).
bInterfaceProtocol	uint8_t _USB_INTERFACE_DESCRIPTOR::bInterfaceProtocol
	Protocol code (assigned by the USB).
ilnterface	uint8_t _USB_INTERFACE_DESCRIPTOR::iInterface
	Index of string descriptor describing this interface

Chapter 33: LPC5411x USB ROM API

## 33.4.21 \_USB\_OTHER\_SPEED\_CONFIGURATION

### Table 570. \_USB\_OTHER\_SPEED\_CONFIGURATION class structure

Member	Description
bLength	uint8_t _USB_OTHER_SPEED_CONFIGURATION::bLength
	Size of descriptor
bDescriptorType	uint8_t _USB_OTHER_SPEED_CONFIGURATION::bDescriptorType
	Other_speed_Configuration Type
wTotalLength	uint16_t _USB_OTHER_SPEED_CONFIGURATION::wTotalLength
	Total length of data returned
bNumInterfaces	uint8_t _USB_OTHER_SPEED_CONFIGURATION::bNumInterfaces
	Number of interfaces supported by this speed configuration
bConfigurationValue	uint8_t _USB_OTHER_SPEED_CONFIGURATION::bConfigurationValue
	Value to use to select configuration
IConfiguration	uint8_t _USB_OTHER_SPEED_CONFIGURATION::IConfiguration
	Index of string descriptor
bmAttributes	uint8_t _USB_OTHER_SPEED_CONFIGURATION::bmAttributes
	Same as Configuration descriptor
bMaxPower	uint8_t _USB_OTHER_SPEED_CONFIGURATION::bMaxPower
	Same as Configuration descriptor

## 33.4.22 \_USB\_SETUP\_PACKET

### Table 571. \_USB\_SETUP\_PACKET class structure

Member	Description
bmRequestType	REQUEST_TYPE _USB_SETUP_PACKET::bmRequestType
	This bit-mapped field identifies the characteristics of the specific request.
	_BM_T.
bRequest	uint8_t _USB_SETUP_PACKET::bRequest
	This field specifies the particular request. The Type bits in the bmRequestType field modify the meaning of this field.
	USBD_REQUEST.
wValue	WORD_BYTE _USB_SETUP_PACKET::wValue
	Used to pass a parameter to the device, specific to the request.
wIndex	WORD_BYTE _USB_SETUP_PACKET::wIndex
	Used to pass a parameter to the device, specific to the request. The wIndex field is often used in requests to specify an endpoint or an interface.
wLength	uint16_t _USB_SETUP_PACKET::wLength
	This field specifies the length of the data transferred during the second phase of the control transfer.

Chapter 33: LPC5411x USB ROM API

## 33.4.23 \_USB\_STRING\_DESCRIPTOR

### Table 572. \_USB\_STRING\_DESCRIPTOR class structure

Member	Description
bLength	uint8_t _USB_STRING_DESCRIPTOR::bLength
	Size of this descriptor in bytes
bDescriptorType	uint8_t _USB_STRING_DESCRIPTOR::bDescriptorType
	STRING Descriptor Type
bString	uint16_t _USB_STRING_DESCRIPTOR::bString
	UNICODE encoded string

### 33.4.24 \_WB\_T

#### Table 573. \_WB\_T class structure

Member	Description
L	uint8_t _WB_T::L
	lower byte
Н	uint8_t _WB_T::H
	upper byte

### 33.4.25 USBD\_API

Main USBD API functions structure. This structure contains pointer to various USB Device stack's sub-module function tables. This structure is used as main entry point to access various methods (grouped in sub-modules) exposed by ROM based USB device stack.

#### Table 574. USBD\_API class structure

Member	Description
hw	const USBD_HW_API_T* USBD_API::hw
	Pointer to function table which exposes functions which interact directly with USB device stack's core layer.
core	const USBD_CORE_API_T* USBD_API::core
	Pointer to function table which exposes functions which interact directly with USB device controller hardware.
msc	const USBD_MSC_API_T* USBD_API::msc
	Pointer to function table which exposes functions provided by MSC function driver module.
dfu	const USBD_DFU_API_T* USBD_API::dfu
	Pointer to function table which exposes functions provided by DFU function driver module.
hid	const USBD_HID_API_T* USBD_API::hid
	Pointer to function table which exposes functions provided by HID function driver module.

Chapter 33: LPC5411x USB ROM API

#### Table 574. USBD\_API class structure

Member	Description
cdc	const USBD_CDC_API_T* USBD_API::cdc
	Pointer to function table which exposes functions provided by CDC-ACM function driver module.
reserved6	const uint32_t* USBD_API::reserved6
	Reserved for future function driver module.
version	const uint32_t USBD_API::version
	Version identifier of USB ROM stack. The version is defined as 0x0CHDMhCC where each nibble represents version number of the corresponding component. CC - 7:0 - 8bit core version number h - 11:8 - 4bit hardware interface version number M - 15:12 - 4bit MSC class module version number D - 19:16 - 4bit DFU class module version number H - 23:20 - 4bit HID class module version number C - 27:24 - 4bit CDC class module version number H - 31:28 - 4bit reserved

## 33.4.26 USBD\_API\_INIT\_PARAM

USB device stack initialization parameter data structure.

### Table 575. USBD\_API\_INIT\_PARAM class structure

Member	Description
usb_reg_base	uint32_t USBD_API_INIT_PARAM::usb_reg_base
	USB device controller's base register address.
mem_base	uint32_t USBD_API_INIT_PARAM::mem_base
	Base memory location from where the stack can allocate data and buffers.
	<b>Remark:</b> The memory address set in this field should be accessible by USB DMA controller. Also this value should be aligned on 2048 byte boundary.
mem_size	uint32_t USBD_API_INIT_PARAM::mem_size
	The size of memory buffer which stack can use.
	Remark: The mem_size should be greater than the size returned by USBD_HW_API::GetMemSize() routine.
max_num_ep	uint8_t USBD_API_INIT_PARAM::max_num_ep
	max number of endpoints supported by the USB device controller instance (specified by
pad0	uint8_t USBD_API_INIT_PARAM::pad0[3][3]
USB_Reset_Event	USB_CB_T USBD_API_INIT_PARAM::USB_Reset_Event
	Event for USB interface reset. This event fires when the USB host requests that the device reset its interface. This event fires after the control endpoint has been automatically configured by the library.
	<b>Remark:</b> This event is called from USB_ISR context and hence is time-critical. Having delays in this callback will prevent the device from enumerating correctly or operate properly.
USB_Suspend_Event	USB_CB_T USBD_API_INIT_PARAM::USB_Suspend_Event
	Event for USB suspend. This event fires when the USB host suspends the device by halting its transmission of Start Of Frame pulses to the device. This is generally hooked in order to move the device over to a low power state until the host wakes up the device.
	<b>Remark:</b> This event is called from USB_ISR context and hence is time-critical. Having delays in this callback will cause other system issues.

Chapter 33: LPC5411x USB ROM API

#### Table 575. USBD\_API\_INIT\_PARAM class structure

Member	Description
USB_Resume_Event	USB_CB_T USBD_API_INIT_PARAM::USB_Resume_Event
	Event for USB wake up or resume. This event fires when a the USB device interface is suspended and the host wakes up the device by supplying Start Of Frame pulses. This is generally hooked to pull the user application out of a low power state and back into normal operating mode.
	<b>Remark:</b> This event is called from USB_ISR context and hence is time-critical. Having delays in this callback will cause other system issues.
reserved_sbz	USB_CB_T USBD_API_INIT_PARAM::reserved_sbz
	Reserved parameter should be set to zero.
USB_SOF_Event	USB_CB_T USBD_API_INIT_PARAM::USB_SOF_Event
	Event for USB Start Of Frame detection, when enabled. This event fires at the start of each USB frame, once per millisecond in full-speed mode or once per 125 microseconds in high-speed mode, and is synchronized to the USB bus.
	This event is time-critical; it is run once per millisecond (full-speed mode) and thus long handlers will significantly degrade device performance. This event should only be enabled when needed to reduce device wake-ups.
	This event is not normally active - it must be manually enabled and disabled via the USB interrupt register.
	<b>Remark:</b> This event is not normally active - it must be manually enabled and disabled via the USB interrupt register.
USB_WakeUpCfg	USB_PARAM_CB_T USBD_API_INIT_PARAM::USB_WakeUpCfg
	Event for remote wake-up configuration, when enabled. This event fires when the USB host request the device to configure itself for remote wake-up capability. The USB host sends this request to device which report remote wake-up capable in their device descriptors, before going to low-power state. The application layer should implement this callback if they have any special on board circuit to trigger remote wake up event. Also application can use this callback to differentiate the following SUSPEND event is caused by cable plug-out or host SUSPEND request. The device can wake-up host only after receiving this callback and remote wake-up feature is enabled by host. To signal remote wake-up the device has to generate resume signaling on bus by calling usapi.hw->WakeUp() routine.  Parameters:
	1. hUsb = Handle to the USB device stack.
	2. param1 = When 0 - Clear the wake-up configuration, 1 - Enable the wake-up configuration.
	Returns: the call back should return ErrorCode_t type to indicate success or error condition.
USB_Power_Event	USB_PARAM_CB_T USBD_API_INIT_PARAM::USB_Power_Event
	Reserved parameter should be set to zero.
USB_Error_Event	USB_PARAM_CB_T USBD_API_INIT_PARAM:USB_Error_Event
	Event for error condition. This event fires when USB device controller detect an error condition in the system.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. param1 = USB device interrupt status register.
	Returns: the call back should return ErrorCode_t type to indicate success or error condition.

Chapter 33: LPC5411x USB ROM API

Table 575. USBD\_API\_INIT\_PARAM class structure

Member	Description
USB_Configure_Event	USB_CB_T USBD_API_INIT_PARAM::USB_Configure_Event
	Event for USB configuration number changed. This event fires when a the USB host changes the selected configuration number. On receiving configuration change request from host, the stack enables/configures the endpoints needed by the new configuration before calling this callback function.
	<b>Remark:</b> This event is called from USB_ISR context and hence is time-critical. Having delays in this callback will prevent the device from enumerating correctly or operate properly.
USB_Interface_Event	USB_CB_T USBD_API_INIT_PARAM::USB_Interface_Event
	Event for USB interface setting changed. This event fires when a the USB host changes the interface setting to one of alternate interface settings. On receiving interface change request from host, the stack enables/configures the endpoints needed by the new alternate interface setting before calling this callback function.
	<b>Remark:</b> This event is called from USB_ISR context and hence is time-critical. Having delays in this callback will prevent the device from enumerating correctly or operate properly.
USB_Feature_Event	USB_CB_T USBD_API_INIT_PARAM::USB_Feature_Event
	Event for USB feature changed. This event fires when a the USB host send set/clear feature request. The stack handles this request for USB_FEATURE_REMOTE_WAKEUP, USB_FEATURE_TEST_MODE and USB_FEATURE_ENDPOINT_STALL features only. On receiving feature request from host, the stack handle the request appropriately and then calls this callback function.
	<b>Remark:</b> This event is called from USB_ISR context and hence is time-critical. Having delays in this callback will prevent the device from enumerating correctly or operate properly.
virt_to_phys	uint32_t(* USBD_API_INIT_PARAM::virt_to_phys)(void *vaddr)
	Reserved parameter for future use. should be set to zero.
cache_flush	void(* USBD_API_INIT_PARAM::cache_flush)(uint32_t *start_adr, uint32_t *end_adr)
	Reserved parameter for future use. should be set to zero.

## 33.4.27 USBD\_CDC\_API

CDC class API functions structure. This module exposes functions which interact directly with USB device controller hardware.

Table 576. USBD\_CDC\_API class structure

Member	Description
GetMemSize	uint32_t(*uint32_t USBD_CDC_API::GetMemSize)(USBD_CDC_INIT_PARAM_T *param)
	Function to determine the memory required by the CDC function driver module.
	This function is called by application layer before calling pUsbApi->CDC->Init(), to allocate memory used by CDC function driver module. The application should allocate the memory which is accessible by USB controller/DMA controller.
	Remark: Some memory areas are not accessible by all bus masters.
	Parameters:
	1. param = Structure containing CDC function driver module initialization parameters.
	Returns: the required memory size in bytes.

Chapter 33: LPC5411x USB ROM API

Table 576. USBD\_CDC\_API class structure

Member	Description
	<pre>ErrorCode_t(*ErrorCode_t USBD_CDC_API::init)(USBD_HANDLE_T hUsb, USBD_CDC_INIT_PARAM_T     *param, USBD_HANDLE_T *phCDC)</pre>
	Function to initialize CDC function driver module.
	This function is called by application layer to initialize CDC function driver module.
	hUsbHandle to the USB device stack. paramStructure containing CDC function driver module initialization parameters.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. param = Structure containing CDC function driver module initialization parameters.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	<ol><li>ERR_USBD_BAD_MEM_BUF = Memory buffer passed is not 4-byte aligned or smaller than required.</li></ol>
	3. ERR_API_INVALID_PARAM2 = Either CDC_Write() or CDC_Read() or CDC_Verify() callbacks are not defined.
	4. ERR_USBD_BAD_INTF_DESC = Wrong interface descriptor is passed.
	5. ERR_USBD_BAD_EP_DESC = Wrong endpoint descriptor is passed.
SendNotification	ErrorCode_t(*ErrorCode_t USBD_CDC_API::SendNotification)(USBD_HANDLE_T hCdc, uint8_t bNotification, uint16_t data)
	Function to send CDC class notifications to host.
	This function is called by application layer to send CDC class notifications to host. See usbcdc11.pdf, section 6.3, Table 67 for various notification types the CDC device can send.
	<b>Remark:</b> The current version of the driver only supports following notifications allowed by ACM subclass: CDC_NOTIFICATION_NETWORK_CONNECTION, CDC_RESPONSE_AVAILABLE, CDC_NOTIFICATION_SERIAL_STATE. For all other notifications application should construct the notification buffer appropriately and call hw->USB_WriteEP() for interrupt endpoint associated with the interface.
	Parameters:
	1. hCdc = Handle to CDC function driver.
	<ol> <li>bNotification = Notification type allowed by ACM subclass. Should be CDC_NOTIFICATION_NETWORK_CONNECTION, CDC_RESPONSE_AVAILABLE or CDC_NOTIFICATION_SERIAL_STATE. For all other types ERR_API_INVALID_PARAM2 is returned. See usbcdc11.pdf, section 3.6.2.1, table 5.</li> </ol>
	3. data = Data associated with notification. For CDC_NOTIFICATION_NETWORK_CONNECTION a non-zero data value is interpreted as connected state. For CDC_RESPONSE_AVAILABLE this parameter is ignored. For CDC_NOTIFICATION_SERIAL_STATE the data should use bitmap values defined in usbcdc11.pdf, section 6.3.5, Table 69.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	2. ERR_API_INVALID_PARAM2 = If unsupported notification type is passed.

### Chapter 33: LPC5411x USB ROM API

## 33.4.28 USBD\_CDC\_INIT\_PARAM

Communication Device Class function driver initialization parameter data structure.

Table 577. USBD\_CDC\_INIT\_PARAM class structure

Member	Description
mem_base	uint32_t USBD_CDC_INIT_PARAM::mem_base
	Base memory location from where the stack can allocate data and buffers.
	<b>Remark:</b> The memory address set in this field should be accessible by USB DMA controller. Also this value should be aligned on 4 byte boundary.
mem_size	uint32_t USBD_CDC_INIT_PARAM::mem_size
	The size of memory buffer which stack can use.
	<b>Remark:</b> The mem_size should be greater than the size returned by USBD_CDC_API::GetMemSize() routine.
cif_intf_desc	uint8_t * USBD_CDC_INIT_PARAM::cif_intf_desc
	Pointer to the control interface descriptor within the descriptor array
dif_intf_desc	uint8_t * USBD_CDC_INIT_PARAM::dif_intf_desc
	Pointer to the data interface descriptor within the descriptor array
CIC_GetRequest	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::CIC_GetRequest)(USBD_HANDLE_T hHid,</pre>
	Communication Interface Class specific get request call-back function.
	This function is provided by the application software. This function gets called when host sends CIC management element get requests.
	Remark: Applications implementing Abstract Control Model subclass can set this param to NULL. As the default driver parses ACM requests and calls the individual ACM call-back routines defined in this structure. For all other subclasses this routine should be provided by the application. The setup packet data (pSetup) is passed to the call-back so that application can extract the CIC request type and other associated data. By default the stack will assign pBuffer pointer to EP0Buff allocated at init. The application code can directly write data into this buffer as long as data is less than 64 byte. If more data has to be sent then application code should update pBuffer pointer and length accordingly.
	Parameters:
	1. hCdc = Handle to CDC function driver.
	2. pSetup = Pointer to setup packet received from host.
	3. pBuffer = Pointer to a pointer of data buffer containing request data. Pointer-to-pointer is used to implement zero-copy buffers. See USBD_ZeroCopy for more details on zero-copy concept.
	4. length = Amount of data to be sent back to host.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

Chapter 33: LPC5411x USB ROM API

Table 577. USBD\_CDC\_INIT\_PARAM class structure

Member	Description
CIC_SetRequest	ErrorCode_t(* USBD_CDC_INIT_PARAM::CIC_SetRequest)(USBD_HANDLE_T hCdc,
	Communication Interface Class specific set request call-back function.
	This function is provided by the application software. This function gets called when host sends a CIC management element requests.
	Remark: Applications implementing Abstract Control Model subclass can set this param to NULL. As the default driver parses ACM requests and calls the individual ACM call-back routines defined in this structure. For all other subclasses this routine should be provided by the application. The setup packet data (pSetup) is passed to the call-back so that application can extract the CIC request type and other associated data. If a set request has data associated, then this call-back is called twice. (1) First when setup request is received, at this time application code could update pBuffer pointer to point to the intended destination. The length param is set to 0 so that application code knows this is first time. By default the stack will assign pBuffer pointer to EP0Buff allocated at init. Note, if data length is greater than 64 bytes and application code doesn't update pBuffer pointer the stack will send STALL condition to host. (2) Second when the data is received from the host. This time the length param is set with number of data bytes received.
	Parameters:
	1. hCdc = Handle to CDC function driver.
	2. pSetup = Pointer to setup packet received from host.
	3. pBuffer = Pointer to a pointer of data buffer containing request data. Pointer-to-pointer is used to implement zero-copy buffers. See USBD_ZeroCopy for more details on zero-copy concept.
	4. length = Amount of data copied to destination buffer.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
CDC_BulkIN_Hdlr	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::CDC_BulkIN_Hdlr)(USBD_HANDLE_T hUsb, void *data,</pre>
	Communication Device Class specific BULK IN endpoint handler.
	The application software should provide the BULK IN endpoint handler. Applications should transfer data depending on the communication protocol type set in descriptors.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

Chapter 33: LPC5411x USB ROM API

Table 577. USBD\_CDC\_INIT\_PARAM class structure

Member	Description
CDC_BulkOUT_Hdlr	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::CDC_BulkOUT_Hdlr)(USBD_HANDLE_T hUsb, void *data,</pre>
	Communication Device Class specific BULK OUT endpoint handler.
	The application software should provide the BULK OUT endpoint handler. Applications should transfer data depending on the communication protocol type set in descriptors.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
SendEncpsCmd	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::SendEncpsCmd)(USBD_HANDLE_T hCDC, uint8_t *buffer,</pre>
	Abstract control model(ACM) subclass specific SEND_ENCAPSULATED_COMMAND request call-back function.
	This function is provided by the application software. This function gets called when host sends a SEND_ENCAPSULATED_COMMAND set request.
	Parameters:
	hCdc = Handle to CDC function driver.
	2. buffer = Pointer to the command buffer.
	3. len = Length of the command buffer.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
l	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
GetEncpsResp	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::GetEncpsResp)(USBD_HANDLE_T hCDC, uint8_t</pre>
	Abstract control model(ACM) subclass specific GET_ENCAPSULATED_RESPONSE request call-back function.
	This function is provided by the application software. This function gets called when host sends a GET_ENCAPSULATED_RESPONSE request.
	Parameters:
	hCdc = Handle to CDC function driver.
	2. buffer = Pointer to a pointer of data buffer containing response data. Pointer-to-pointer is used to implement zero-copy buffers. See USBD_ZeroCopy for more details on zero-copy concept.
	3. len = Amount of data to be sent back to host.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

## Chapter 33: LPC5411x USB ROM API

Table 577. USBD\_CDC\_INIT\_PARAM class structure

Member	Description
SetCommFeature	ErrorCode_t(* USBD_CDC_INIT_PARAM::SetCommFeature)(USBD_HANDLE_T hCDC, uint16_t
	<pre>feature, uint8_t *buffer, uint16_t len)</pre>
	Abstract control model(ACM) subclass specific SET_COMM_FEATURE request call-back function.
	This function is provided by the application software. This function gets called when host sends a SET_COMM_FEATURE set request.
	Parameters:
	1. hCdc = Handle to CDC function driver.
	2. feature = Communication feature type.
	3. buffer = Pointer to the settings buffer for the specified communication feature.
	4. len = Length of the request buffer.
	Returns:
	The call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
GetCommFeature	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::GetCommFeature)(USBD_HANDLE_T hCDC, uint16_t</pre>
	Abstract control model(ACM) subclass specific GET_COMM_FEATURE request call-back function.
	This function is provided by the application software. This function gets called when host sends a GET_ENCAPSULATED_RESPONSE request.
	Parameters:
	1. hCdc = Handle to CDC function driver.
	2. feature = Communication feature type.
	3. buffer = Pointer to a pointer of data buffer containing current settings for the communication feature. Pointer-to-pointer is used to implement zero-copy buffers.
	4. len = Amount of data to be sent back to host.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

534 of 590

Chapter 33: LPC5411x USB ROM API

Table 577. USBD CDC INIT PARAM class structure

Member	Description
CIrCommFeature	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::ClrCommFeature)(USBD_HANDLE_T hCDC, uint16_t</pre>
	Abstract control model(ACM) subclass specific CLEAR_COMM_FEATURE request call-back function.
	This function is provided by the application software. This function gets called when host sends a CLEAR_COMM_FEATURE request. In the call-back the application should Clears the settings for a particular communication feature.
	Parameters:
	1. hCdc = Handle to CDC function driver.
	2. feature = Communication feature type. See usbcdc11.pdf, section 6.2.4, Table 47.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.  Return values:
	1. LPC_OK = On success.
	<ol> <li>ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.</li> <li>ERR_USBD_xxx = For other error conditions.</li> </ol>
SetCtrlLineState	ErrorCode_t(* USBD_CDC_INIT_PARAM::SetCtrlLineState)(USBD_HANDLE_T hCDC, uint16_t
Selotificinestate	state)
	Abstract control model(ACM) subclass specific SET_CONTROL_LINE_STATE request call-back function.
	This function is provided by the application software. This function gets called when host sends a SET_CONTROL_LINE_STATE request. RS-232 signal used to tell the DCE device the DTE device is now present
	Parameters:
	1. hCdc = Handle to CDC function driver.
	<ol><li>state = The state value uses bitmap values defined the USB CDC class specification document published by usb.org.</li></ol>
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
SendBreak	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::SendBreak)(USBD_HANDLE_T hCDC, uint16_t mstime)</pre>
	Abstract control model(ACM) subclass specific SEND_BREAK request call-back function.
	This function is provided by the application software. This function gets called when host sends a SEND_BREAK request.
	Parameters:
	hCdc = Handle to CDC function driver.
	2. mstime = Duration of Break signal in milliseconds. If mstime is FFFFh, then the application should send break until another SendBreak request is received with the wValue of 0000h.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

## Chapter 33: LPC5411x USB ROM API

#### Table 577. USBD\_CDC\_INIT\_PARAM class structure

Member	Description
SetLineCode	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::SetLineCode)(USBD_HANDLE_T hCDC, CDC_LINE_CODING     *line_coding)</pre>
	Abstract control model(ACM) subclass specific SET_LINE_CODING request call-back function.
	This function is provided by the application software. This function gets called when host sends a SET_LINE_CODING request. The application should configure the device per DTE rate, stop-bits, parity, and number-of-character bits settings provided in command buffer.
	Parameters:
	hCdc = Handle to CDC function driver.
	line_coding = Pointer to the CDC_LINE_CODING command buffer.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
CDC_InterruptEP_Hdlr	<pre>ErrorCode_t(* USBD_CDC_INIT_PARAM::CDC_InterruptEP_Hdlr)(USBD_HANDLE_T hUsb, void     *data, uint32_t event)</pre>
	Optional Communication Device Class specific INTERRUPT IN endpoint handler.
	The application software should provide the INT IN endpoint handler. Applications should transfer data depending on the communication protocol type set in descriptors.
	Parameters:
	hUsb = Handle to the USB device stack.
	<ol> <li>data = Pointer to the data which will be passed when callback function is called by the stack.</li> <li>event = Type of endpoint event. See USBD_EVENT_T for more details.</li> </ol>
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.  Return values:
	1. LPC_OK = On success.
	<ol> <li>ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.</li> <li>ERR_USBD_xxx = For other error conditions.</li> </ol>
CDC_Ep0_Hdlr	ErrorCode_t(* USBD_CDC_INIT_PARAM::CDC_Ep0_Hdlr)(USBD_HANDLE_T hUsb, void *data, uint32_t event)
	Optional user override-able function to replace the default CDC class handler.
	The application software could override the default EP0 class handler with their own by providing the handler function address as this data member of the parameter structure. Application which like the default handler should set this data member to zero before calling the USBD_CDC_API::Init().
	Parameters:
	hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

Chapter 33: LPC5411x USB ROM API

## 33.4.29 USBD\_CORE\_API

USBD stack Core API functions structure.

Table 578. USBD\_CORE\_API class structure

Member	Description
	ErrorCode_t(*ErrorCode_t USBD_CORE_API::RegisterClassHandler)(USBD_HANDLE_T hUsb, USB_EP_HANDLER_T pfn, void *data)
	Function to register class specific EP0 event handler with USB device stack.
	The application layer uses this function when it has to register the custom class's EP0 handler. The stack calls all the registered class handlers on any EP0 event before going through default handling of the event. This gives the class handlers to implement class specific request handlers and also to override the default stack handling for a particular event targeted to the interface. Check USB_EP_HANDLER_T for more details on how the callback function should be implemented. Also application layer could use this function to register EP0 handler which responds to vendor specific requests.
	Parameters:
	hUsb = Handle to the USB device stack.
	pfn = Class specific EP0 handler function.
	3. data = Pointer to the data which will be passed when callback function is called by the stack.
	Returns:
	Returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	ERR_USBD_TOO_MANY_CLASS_HDLR(0x0004000c) = The number of class handlers registered is greater than the number of handlers allowed by the stack.
RegisterEpHandler	<pre>ErrorCode_t(*ErrorCode_t USBD_CORE_API::RegisterEpHandler)(USBD_HANDLE_T hUsb,</pre>
	Function to register interrupt/event handler for the requested endpoint with USB device stack.
	The application layer uses this function to register the custom class's EP0 handler. The stack calls all the registered class handlers on any EP0 event before going through default handling of the event. This gives the class handlers to implement class specific request handlers and also to override the default stack handling for a particular event targeted to the interface. Check USB_EP_HANDLER_T for more details on how the callback function should be implemented.
	Parameters:
	hUsb = Handle to the USB device stack.
	ep_index = Class specific EP0 handler function.
	3. pfn = Class specific EP0 handler function.
	4. data = Pointer to the data which will be passed when callback function is called by the stack.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	2. ERR_USBD_TOO_MANY_CLASS_HDLR(0x0004000c) = Too many endpoint handlers.

Chapter 33: LPC5411x USB ROM API

Table 578. USBD\_CORE\_API class structure

Member	Description
SetupStage	<pre>void(*void USBD_CORE_API::SetupStage)(USBD_HANDLE_T hUsb)</pre>
	Function to set EP0 state machine in setup state.
	This function is called by USB stack and the application layer to set the EP0 state machine in setup state. This function will read the setup packet received from USB host into stack's buffer.
	<b>Remark:</b> This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	Returns: nothing.
DataInStage	<pre>void(*void USBD_CORE_API::DataInStage)(USBD_HANDLE_T hUsb)</pre>
	Function to set EP0 state machine in data_in state.
	This function is called by USB stack and the application layer to set the EP0 state machine in data_in state. This function will write the data present in EP0Data buffer to EP0 FIFO for transmission to host.
	<b>Remark:</b> This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	Returns: nothing.
DataOutStage	<pre>void(*void USBD_CORE_API::DataOutStage)(USBD_HANDLE_T hUsb)</pre>
	Function to set EP0 state machine in data_out state.
	This function is called by USB stack and the application layer to set the EP0 state machine in data_out state. This function will read the control data (EP0 out packets) received from USB host into EP0Data buffer.
	<b>Remark:</b> This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	Returns: nothing.
StatusInStage	<pre>void(*void USBD_CORE_API::StatusInStage)(USBD_HANDLE_T hUsb)</pre>
	Function to set EP0 state machine in status_in state.
	This function is called by USB stack and the application layer to set the EP0 state machine in status_in state. This function will send zero length IN packet on EP0 to host, indicating positive status.
	<b>Remark:</b> This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	Returns: nothing.

### Chapter 33: LPC5411x USB ROM API

Table 578. USBD\_CORE\_API class structure

Member	Description
StatusOutStage	void(*void USBD_CORE_API::StatusOutStage)(USBD_HANDLE_T hUsb)
	Function to set EP0 state machine in status_out state.
	This function is called by USB stack and the application layer to set the EP0 state machine in status_out state. This function will read the zero length OUT packet received from USB host on EP0.
	<b>Remark:</b> This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	hUsb = Handle to the USB device stack.
	Returns: nothing.
StallEp0	void(*void USBD_CORE_API::StallEp0)(USBD_HANDLE_T hUsb)
	Function to set EP0 state machine in stall state.
	This function is called by USB stack and the application layer to generate STALL signalling on EP0 endpoint. This function will also reset the EP0Data buffer.
	<b>Remark:</b> This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	hUsb = Handle to the USB device stack.
	Returns: nothing.

## 33.4.30 USBD\_DFU\_API

DFU class API functions structure. This module exposes functions which interact directly with USB device controller hardware.

Table 579. USBD\_DFU\_API class structure

Member	Description
GetMemSize	uint32_t(*uint32_t USBD_DFU_API::GetMemSize)(USBD_DFU_INIT_PARAM_T *param)
	Function to determine the memory required by the DFU function driver module.
	This function is called by application layer before calling pUsbApi->dfu->Init(), to allocate memory used by DFU function driver module. The application should allocate the memory which is accessible by USB controller/DMA controller.
	Remark: Some memory areas are not accessible by all bus masters.
	Parameters:
	param = Structure containing DFU function driver module initialization parameters.
	Returns: the required memory size in bytes.

Chapter 33: LPC5411x USB ROM API

Table 579. USBD\_DFU\_API class structure

Member	Description
init	<pre>ErrorCode_t(*ErrorCode_t USBD_DFU_API::init)(USBD_HANDLE_T hUsb, USBD_DFU_INIT_PARAM_T</pre>
	Function to initialize DFU function driver module.
	This function is called by application layer to initialize DFU function driver module.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. param = Structure containing DFU function driver module initialization parameters.
	Returns:ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	2. ERR_USBD_BAD_MEM_BUF = Memory buffer passed is not 4-byte aligned or smaller than required.
	<ol><li>ERR_API_INVALID_PARAM2 = Either DFU_Write() or DFU_Done() or DFU_Read() callbacks are not defined.</li></ol>
	4. ERR_USBD_BAD_DESC = USB_DFU_DESCRIPTOR_TYPE is not defined immediately after interface descriptor.wTransferSize in descriptor doesn't match the value passed in param->wTransferSize.DFU_Detach() is not defined while USB_DFU_WILL_DETACH is set in DFU descriptor.
	5. ERR_USBD_BAD_INTF_DESC = Wrong interface descriptor is passed.

## 33.4.31 USBD\_DFU\_INIT\_PARAM

USB descriptors data structure.

### Table 580. USBD\_DFU\_INIT\_PARAM class structure

Member	Description
mem_base	uint32_t USBD_DFU_INIT_PARAM::mem_base
	Base memory location from where the stack can allocate data and buffers.
	<b>Remark:</b> The memory address set in this field should be accessible by USB DMA controller. Also this value should be aligned on 4 byte boundary.
mem_size	uint32_t USBD_DFU_INIT_PARAM::mem_size
	The size of memory buffer which stack can use.
	<b>Remark:</b> The mem_size should be greater than the size returned by USBD_DFU_API::GetMemSize() routine.
wTransferSize	uint16_t USBD_DFU_INIT_PARAM::wTransferSize
	DFU transfer block size in number of bytes. This value should match the value set in DFU descriptor provided as part of the descriptor array (
pad	uint16_t USBD_DFU_INIT_PARAM::pad
intf_desc	uint8_t * USBD_DFU_INIT_PARAM::intf_desc
	Pointer to the DFU interface descriptor within the descriptor array (

Chapter 33: LPC5411x USB ROM API

#### Table 580. USBD\_DFU\_INIT\_PARAM class structure

Member	Description
DFU_Write	<pre>uint8_t(*uint8_t(* USBD_DFU_INIT_PARAM::DFU_Write)(uint32_t block_num, uint8_t **src,</pre>
	DFU Write callback function.
	This function is provided by the application software. This function gets called when host sends a write command. For application using zero-copy buffer scheme this function is called for the first time with
	Parameters:
	block_num = Destination start address.
	<ol> <li>src = Pointer to a pointer to the source of data. Pointer-to-pointer is used to implement zero-copy buffers. See Zero-Copy Data Transfer model for more details on zero-copy concept.</li> </ol>
	<ol> <li>bwPollTimeout = Pointer to a 3 byte buffer which the callback implementer should fill with the amount of minimum time, in milliseconds, that the host should wait before sending a subsequent DFU_GETSTATUS request.</li> </ol>
	4. length = Number of bytes to be written.
	Returns: DFU_STATUS_ values defined in mw_usbd_dfu.h.
DFU_Read	uint32_t(*uint32_t(* USBD_DFU_INIT_PARAM::DFU_Read)(uint32_t block_num, uint8_t **dst, uint32_t length))(uint32_t block_num, uint8_t **dst, uint32_t length)
	DFU Read callback function.
	This function is provided by the application software. This function gets called when host sends a read command.
	Parameters:
	block_num = Destination start address.
	<ol> <li>dst = Pointer to a pointer to the source of data. Pointer-to-pointer is used to implement zero-copy buffers. See Zero-Copy Data Transfer model for more details on zero-copy concept.</li> </ol>
	3. length = Amount of data copied to destination buffer.
	Returns: DFU_STATUS_ values defined in mw_usbd_dfu.h.
DFU_Done	void(*USBD_DFU_INIT_PARAM::DFU_Done)(void)
	DFU done callback function.
	This function is provided by the application software. This function gets called after download is finished. Returns: nothing.
DFU_Detach	void(* USBD_DFU_INIT_PARAM::DFU_Detach)(USBD_HANDLE_T hUsb)
	DFU detach callback function.
	This function is provided by the application software. This function gets called after USB_REQ_DFU_DETACH is received. Applications which set USB_DFU_WILL_DETACH bit in DFU descriptor should define this function. As part of this function application can call Connect() routine to disconnect and then connect back with host. For application which rely on WinUSB based host application should use this feature since USB reset can be invoked only by kernel drivers on Windows host. By implementing this feature host doesn't have to issue reset instead the device has to do it automatically by disconnect and connect procedure.
	hUsbHandle DFU control structure.
	Parameters:
	hUsb = Handle DFU control structure.
	Returns: nothing.

#### Chapter 33: LPC5411x USB ROM API

Table 580. USBD\_DFU\_INIT\_PARAM class structure

Member	Description
DFU_Ep0_Hdlr	ErrorCode_t(* USBD_DFU_INIT_PARAM::DFU_Ep0_Hdlr)(USBD_HANDLE_T hUsb, void *data, uint32_t
	event)
	Optional user overridable function to replace the default DFU class handler.
	The application software could override the default EP0 class handler with their own by providing the handler function address as this data member of the parameter structure. Application which like the default handler should set this data member to zero before calling the USBD_DFU_API::Init().
	Parameters:
	hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

# 33.4.32 USBD\_HID\_API

HID class API functions structure. This structure contains pointers to all the function exposed by HID function driver module.

Table 581. USBD\_HID\_API class structure

Member	Description
GetMemSize	uint32_t(*uint32_t USBD_HID_API::GetMemSize)(USBD_HID_INIT_PARAM_T *param)
	Function to determine the memory required by the HID function driver module.
	This function is called by application layer before calling pUsbApi->hid->Init(), to allocate memory used by HID function driver module. The application should allocate the memory which is accessible by USB controller/DMA controller.
	Remark: Some memory areas are not accessible by all bus masters.
	Parameters:
	param = Structure containing HID function driver module initialization parameters.
	Returns: the required memory size in bytes.

Chapter 33: LPC5411x USB ROM API

Table 581. USBD\_HID\_API class structure

Member	Description
init	<pre>ErrorCode_t(*ErrorCode_t USBD_HID_API::init)(USBD_HANDLE_T hUsb, USBD_HID_INIT_PARAM_T</pre>
	Function to initialize HID function driver module.
	This function is called by application layer to initialize HID function driver module. On successful initialization the function returns a handle to HID function driver module in passed param structure.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. param = Structure containing HID function driver module initialization parameters.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	2. ERR_USBD_BAD_MEM_BUF = Memory buffer passed is not 4-byte aligned or smaller than required.
	3. ERR_API_INVALID_PARAM2 = Either HID_GetReport() or HID_SetReport() callback are not defined.
	<ol> <li>ERR_USBD_BAD_DESC = HID_HID_DESCRIPTOR_TYPE is not defined immediately after interface descriptor.</li> </ol>
	5. ERR_USBD_BAD_INTF_DESC = Wrong interface descriptor is passed.
	6. ERR_USBD_BAD_EP_DESC = Wrong endpoint descriptor is passed.

# 33.4.33 USBD\_HID\_INIT\_PARAM

USB descriptors data structure.

Table 582. USBD\_HID\_INIT\_PARAM class structure

Member	Description
mem_base	uint32_t USBD_HID_INIT_PARAM::mem_base
	Base memory location from where the stack can allocate data and buffers.
	<b>Remark:</b> The memory address set in this field should be accessible by USB DMA controller. Also this value should be aligned on 4 byte boundary.
mem_size	uint32_t USBD_HID_INIT_PARAM::mem_size
	The size of memory buffer which stack can use.
	<b>Remark:</b> The mem_size should be greater than the size returned by USBD_HID_API::GetMemSize() routine.
max_reports	uint8_t USBD_HID_INIT_PARAM::max_reports
	Number of HID reports supported by this instance of HID class driver.
pad	uint8_t USBD_HID_INIT_PARAM::pad[3][3]
intf_desc	uint8_t * USBD_HID_INIT_PARAM::intf_desc
	Pointer to the HID interface descriptor within the descriptor array (
report_data	USB_HID_REPORT_T *USB_HID_REPORT_T* USBD_HID_INIT_PARAM::report_data
	Pointer to an array of HID report descriptor data structure (
	Remark: This array should be of global scope.

# Chapter 33: LPC5411x USB ROM API

Table 582. USBD\_HID\_INIT\_PARAM class structure

Member	Description
HID_GetReport	ErrorCode_t(* USBD_HID_INIT_PARAM::HID_GetReport)(USBD_HANDLE_T hHid, USB_SETUP_PACKET
	*pSetup, uint8_t **pBuffer, uint16_t *length)
	HID get report callback function.
	This function is provided by the application software. This function gets called when host sends a HID_REQUEST_GET_REPORT request. The setup packet data (
	<b>Remark:</b> HID reports are sent via interrupt IN endpoint also. This function is called only when report request is received on control endpoint. Application should implement HID_EpIn_Hdlr to send reports to host via interrupt IN endpoint.
	Parameters:
	1. hHid = Handle to HID function driver.
	2. pSetup = Pointer to setup packet received from host.
	<ol> <li>pBuffer = Pointer to a pointer of data buffer containing report data. Pointer-to-pointer is used to implement zero-copy buffers. See Zero-Copy Data Transfer model for more details on zero-copy concept.</li> </ol>
	4. length = Amount of data copied to destination buffer.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
HID_SetReport	<pre>ErrorCode_t(* USBD_HID_INIT_PARAM::HID_SetReport)(USBD_HANDLE_T hHid, USB_SETUP_PACKET</pre>
	HID set report callback function.
	This function is provided by the application software. This function gets called when host sends a HID_REQUEST_SET_REPORT request. The setup packet data (
	Parameters:
	1. hHid = Handle to HID function driver.
	2. pSetup = Pointer to setup packet received from host.
	<ol> <li>pBuffer = Pointer to a pointer of data buffer containing report data. Pointer-to-pointer is used to implement zero-copy buffers. See Zero-Copy Data Transfer model for more details on zero-copy concept.</li> </ol>
	4. length = Amount of data copied to destination buffer.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

Chapter 33: LPC5411x USB ROM API

Table 582. USBD\_HID\_INIT\_PARAM class structure

Member	Description
HID_GetPhysDesc	<pre>ErrorCode_t(* USBD_HID_INIT_PARAM::HID_GetPhysDesc)(USBD_HANDLE_T hHid,</pre>
	Optional callback function to handle HID_GetPhysDesc request.
	The application software could provide this callback HID_GetPhysDesc handler to handle get physical descriptor requests sent by the host. When host requests Physical Descriptor set 0, application should return a special descriptor identifying the number of descriptor sets and their sizes. A Get_Descriptor request with the Physical Index equal to 1 should return the first Physical Descriptor set. A device could possibly have alternate uses for its items. These can be enumerated by issuing subsequent Get_Descriptor requests while incrementing the Descriptor Index. A device should return the last descriptor set to requests with an index greater than the last number defined in the HID descriptor.
	<b>Remark:</b> Applications which don't have physical descriptor should set this data member to zero before calling the USBD_HID_API::Init().
	Parameters:
	hHid = Handle to HID function driver.
	pSetup = Pointer to setup packet received from host.
	<ol> <li>pBuf = Pointer to a pointer of data buffer containing physical descriptor data. If the physical descriptor is in USB accessible memory area application could just update the pointer or else it should copy the descriptor to the address pointed by this pointer.</li> </ol>
	4. length = Amount of data copied to destination buffer or descriptor length.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
HID_SetIdle	<pre>ErrorCode_t(* USBD_HID_INIT_PARAM::HID_SetIdle)(USBD_HANDLE_T hHid, USB_SETUP_PACKET     *pSetup, uint8_t idleTime)</pre>
	Optional callback function to handle HID_REQUEST_SET_IDLE request.
	The application software could provide this callback to handle HID_REQUEST_SET_IDLE requests sent by the host. This callback is provided to applications to adjust timers associated with various reports, which are sent to host over interrupt endpoint. The setup packet data (
	<b>Remark:</b> Applications which don't send reports on Interrupt endpoint or don't have idle time between reports should set this data member to zero before calling the USBD_HID_API::Init(). Parameters:
	hHid = Handle to HID function driver.
	pSetup = Pointer to setup packet recived from host.
	3. idleTime = Idle time to be set for the specified report.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

# Chapter 33: LPC5411x USB ROM API

#### Table 582. USBD\_HID\_INIT\_PARAM class structure

Member	Description
HID_SetProtocol	ErrorCode_t(* USBD_HID_INIT_PARAM::HID_SetProtocol)(USBD_HANDLE_T hHid,
	USB_SETUP_PACKET *pSetup, uint8_t protocol)
	Optional callback function to handle HID_REQUEST_SET_PROTOCOL request.
	The application software could provide this callback to handle HID_REQUEST_SET_PROTOCOL requests sent by the host. This callback is provided to applications to adjust modes of their code between boot mode and report mode.
	<b>Remark:</b> Applications which don't support protocol modes should set this data member to zero before calling the USBD_HID_API::Init().
	Parameters:
	hHid = Handle to HID function driver.
	pSetup = Pointer to setup packet recived from host.
	3. protocol = Protocol mode. 0 = Boot Protocol 1 = Report Protocol
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
HID_EpIn_Hdlr	<pre>ErrorCode_t(* USBD_HID_INIT_PARAM::HID_EpIn_Hdlr)(USBD_HANDLE_T hUsb, void *data,</pre>
	Optional Interrupt IN endpoint event handler.
	The application software could provide Interrupt IN endpoint event handler. Application which send reports to host on interrupt endpoint should provide an endpoint event handler through this data member. This data member is ignored if the interface descriptor
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. data = Handle to HID function driver.
	event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

**UM10914 NXP Semiconductors** 

# Chapter 33: LPC5411x USB ROM API

Table 582. USBD\_HID\_INIT\_PARAM class structure

Member	Description
HID_EpOut_Hdlr	<pre>ErrorCode_t(* USBD_HID_INIT_PARAM::HID_EpOut_Hdlr)(USBD_HANDLE_T hUsb, void *data,</pre>
	Optional Interrupt OUT endpoint event handler.
	The application software could provide Interrupt OUT endpoint event handler. Application which receives reports from host on interrupt endpoint should provide an endpoint event handler through this data member. This data member is ignored if the interface descriptor
	Parameters:
	hUsb = Handle to the USB device stack.
	2. data = Handle to HID function driver.
	<ol><li>event = Type of endpoint event. See USBD_EVENT_T for more details.</li></ol>
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.
HID_GetReportDesc	ErrorCode_t(* USBD_HID_INIT_PARAM::HID_GetReportDesc)(USBD_HANDLE_T hHid,
	Optional user overridable function to replace the default HID_GetReportDesc handler.
	The application software could override the default HID_GetReportDesc handler with their own by providing the handler function address as this data member of the parameter structure. Application which like the default handler should set this data member to zero before calling the USBD_HID_API::Init() and also provide report data array
	Parameters:
	hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	<ol><li>event = Type of endpoint event. See USBD_EVENT_T for more details.</li></ol>
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	<ol> <li>ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.</li> <li>ERR_USBD_xxx = For other error conditions.</li> </ol>

#### Chapter 33: LPC5411x USB ROM API

Table 582. USBD\_HID\_INIT\_PARAM class structure

Member	Description
HID_Ep0_Hdlr	<pre>ErrorCode_t(* USBD_HID_INIT_PARAM::HID_Ep0_Hdlr)(USBD_HANDLE_T hUsb, void *data,</pre>
	Optional user overridable function to replace the default HID class handler.
	The application software could override the default EP0 class handler with their own by providing the handler function address as this data member of the parameter structure. Application which like the default handler should set this data member to zero before calling the USBD_HID_API::Init().
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

# 33.4.34 USBD\_HW\_API

Hardware API functions structure. This module exposes functions which interact directly with USB device controller hardware.

Table 583. USBD\_HW\_API class structure

Member	Description
GetMemSize	uint32_t(*uint32_t USBD_HW_API::GetMemSize)(USBD_API_INIT_PARAM_T *param)
	Function to determine the memory required by the USB device stack's DCD and core layers.
	This function is called by application layer before calling pUsbApi->hw->
	Remark: Some memory areas are not accessible by all bus masters.
	Parameters:
	param = Structure containing USB device stack initialization parameters.
	Returns: the required memory size in bytes.
Init	<pre>ErrorCode_t(*ErrorCode_t USBD_HW_API::Init)(USBD_HANDLE_T *phUsb, USB_CORE_DESCS_T *pDesc,</pre>
	Function to initialize USB device stack's DCD and core layers.
	This function is called by application layer to initialize USB hardware and core layers. On successful initialization the function returns a handle to USB device stack which should be passed to the rest of the functions.
	Parameters:
	phUsb = Pointer to the USB device stack handle of type USBD_HANDLE_T.
	2. param = Structure containing USB device stack initialization parameters.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK(0) = On success
	2. ERR_USBD_BAD_MEM_BUF(0x0004000b) = When insufficient memory buffer is passed or memory is not aligned on 2048 boundary.

**UM10914 NXP Semiconductors** 

Chapter 33: LPC5411x USB ROM API

Table 583. USBD\_HW\_API class structure

Member	Description
Connect	void(*void USBD_HW_API::Connect)(USBD_HANDLE_T hUsb, uint32_t con)
	Function to make USB device visible/invisible on the USB bus.
	This function is called after the USB initialization. This function uses the soft connect feature to make the device visible on the USB bus. This function is called only after the application is ready to handle the USB data. The enumeration process is started by the host after the device detection. The driver handles the enumeration process according to the USB descriptors passed in the USB initialization function.
	Parameters:
	hUsb = Handle to the USB device stack.
	2. con = States whether to connect (1) or to disconnect (0).
	Returns: nothing.
ISR	void(*void USBD_HW_API::ISR)(USBD_HANDLE_T hUsb)
	Function to USB device controller interrupt events.
	When the user application is active the interrupt handlers are mapped in the user flash space. The user application must provide an interrupt handler for the USB interrupt and call this function in the interrupt handler routine. The driver interrupt handler takes appropriate action according to the data received on the USB bus.
	Parameters:
	hUsb = Handle to the USB device stack.
	Returns: nothing.
Reset	void(*void USBD_HW_API::Reset)(USBD_HANDLE_T hUsb)
	Function to Reset USB device stack and hardware controller.
	Reset USB device stack and hardware controller. Disables all endpoints except EP0. Clears all pending interrupts and resets endpoint transfer queues. This function is called internally by pUsbApi->hw->init() and from reset event.
	Parameters:
	hUsb = Handle to the USB device stack.
	Returns: nothing.
ForceFullSpeed	void(*void USBD_HW_API::ForceFullSpeed)(USBD_HANDLE_T hUsb, uint32_t cfg)
	Function to force high speed USB device to operate in full speed mode.
	This function is useful for testing the behavior of current device when connected to a full speed only hosts. Parameters:
	hUsb = Handle to the USB device stack.
	<ol> <li>cfg = When 1 - set force full-speed or 0 - clear force full-speed.</li> <li>Returns: nothing.</li> </ol>

**UM10914 NXP Semiconductors** 

Chapter 33: LPC5411x USB ROM API

Table 583. USBD\_HW\_API class structure

Member	Description
WakeUpCfg	void(*void USBD_HW_API::WakeUpCfg)(USBD_HANDLE_T hUsb, uint32_t cfg)
	Function to configure USB device controller to walk-up host on remote events.
	This function is called by application layer to configure the USB device controller to wake up on remote events. It is recommended to call this function from users's USB_WakeUpCfg() callback routine registered with stack.
	<b>Remark:</b> User's USB_WakeUpCfg() is registered with stack by setting the USB_WakeUpCfg member of USBD_API_INIT_PARAM_T structure before calling pUsbApi->hw->Init() routine. Certain USB device controllers needed to keep some clocks always on to generate resume signaling through pUsbApi->hw->WakeUp(). This hook is provided to support such controllers. In most controllers cases this is an empty routine.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. cfg = When 1 - Configure controller to wake on remote events or 0 - Configure controller not to wake on remote events.
	Returns: nothing.
SetAddress	<pre>void(*void USBD_HW_API::SetAddress)(USBD_HANDLE_T hUsb, uint32_t adr)</pre>
	Function to set USB address assigned by host in device controller hardware.
	This function is called automatically when USB_REQUEST_SET_ADDRESS request is received by the stack from USB host. This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	adr = USB bus Address to which the device controller should respond. Usually assigned by the USB host.
	Returns: nothing.
Configure	void(*void USBD_HW_API::Configure)(USBD_HANDLE_T hUsb, uint32_t cfg)
	Function to configure device controller hardware with selected configuration.
	This function is called automatically when USB_REQUEST_SET_CONFIGURATION request is received by the stack from USB host. This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
İ	cfg = Configuration index.
l	
	Returns: nothing.

# Chapter 33: LPC5411x USB ROM API

Table 583. USBD\_HW\_API class structure

Member	Description
ConfigEP	void(*void USBD_HW_API::ConfigEP)(USBD_HANDLE_T hUsb, USB_ENDPOINT_DESCRIPTOR *pEPD)
	Function to configure USB Endpoint according to descriptor.
	This function is called automatically when USB_REQUEST_SET_CONFIGURATION request is received by the stack from USB host. All the endpoints associated with the selected configuration are configured. This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	<ol> <li>pEPD = Endpoint descriptor structure defined in USB 2.0 specification.</li> <li>Returns: nothing.</li> </ol>
DirCtrlEP	void(*void USBD_HW_API::DirCtrlEP)(USBD_HANDLE_T hUsb, uint32_t dir)
	Function to set direction for USB control endpoint EP0.
	This function is called automatically by the stack on need basis. This interface is provided to users to invoke this function in other scenarios which are not handle by current stack. In most user applications this function is not called directly. Also this function can be used by users who are selectively modifying the USB device stack's standard handlers through callback interface exposed by the stack.
	Parameters:
	<ol> <li>hUsb = Handle to the USB device stack.</li> <li>cfg = When 1 - Set EP0 in IN transfer mode 0 - Set EP0 in OUT transfer mode</li> </ol>
EnableEP	Returns: nothing.
EnableEP	void(*void USBD_HW_API::EnableEP)(USBD_HANDLE_T hUsb, uint32_t EPNum)
	Function to enable selected USB endpoint.  This function enables interrupts on selected endpoint.
	Parameters:
	hUsb = Handle to the USB device stack.
	EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	Returns: nothing.
	This function enables interrupts on selected endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number corresponding to the event as per USB specification. ie. An EP1_IN is represented by 0x81 number. For device events set this param to 0x0.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	4. enable = 1 - enable event, 0 - disable event.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK(0) = - On success
	2. ERR_USBD_INVALID_REQ(0x00040001) = - Invalid event type.

**UM10914 NXP Semiconductors** 

Chapter 33: LPC5411x USB ROM API

Table 583. USBD\_HW\_API class structure

Member	Description
DisableEP	void(*void USBD_HW_API::DisableEP)(USBD_HANDLE_T hUsb, uint32_t EPNum)
	Function to disable selected USB endpoint.
	This function disables interrupts on selected endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	Returns: nothing.
ResetEP	void(*void USBD_HW_API::ResetEP)(USBD_HANDLE_T hUsb, uint32_t EPNum)
	Function to reset selected USB endpoint.
	This function flushes the endpoint buffers and resets data toggle logic.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	Returns: nothing.
SetStallEP	<pre>void(*void USBD_HW_API::SetStallEP)(USBD_HANDLE_T hUsb, uint32_t EPNum)</pre>
	Function to STALL selected USB endpoint.
	Generates STALL signalling for requested endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	Returns: nothing.
CIrStallEP	void(*void USBD_HW_API::ClrStallEP)(USBD_HANDLE_T hUsb, uint32_t EPNum)
	Function to clear STALL state for the requested endpoint.
	This function clears STALL state for the requested endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	Returns: nothing.
SetTestMode	ErrorCode_t(*ErrorCode_t USBD_HW_API::SetTestMode)(USBD_HANDLE_T hUsb, uint8_t mode)
	Function to set high speed USB device controller in requested test mode.
	USB-IF requires the high speed device to be put in various test modes for electrical testing. This USB device stack calls this function whenever it receives USB_REQUEST_CLEAR_FEATURE request for USB_FEATURE_TEST_MODE. Users can put the device in test mode by directly calling this function. Returns ERR_USBD_INVALID_REQ when device controller is full-speed only.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. mode = Test mode defined in USB 2.0 electrical testing specification.
	Returns ErrorCode_t type to indicate success or error condition.:
	Return values:
	Return values:  1. LPC_OK(0) = - On success

Chapter 33: LPC5411x USB ROM API

Table 583. USBD\_HW\_API class structure

Member	Description
ReadEP	uint32_t(*uint32_t USBD_HW_API::ReadEP)(USBD_HANDLE_T hUsb, uint32_t EPNum, uint8_t *pData)
	Function to read data received on the requested endpoint.
	This function is called by USB stack and the application layer to read the data received on the requested endpoint.
	Parameters:
	hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	3. pData = Pointer to the data buffer where data is to be copied.
	Returns:
	Returns the number of bytes copied to the buffer.
ReadReqEP	<pre>uint32_t(*uint32_t USBD_HW_API::ReadReqEP)(USBD_HANDLE_T hUsb, uint32_t EPNum, uint8_t     *pData, uint32_t len)</pre>
	Function to queue read request on the specified endpoint.
	This function is called by USB stack and the application layer to queue a read request on the specified endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	<ol><li>pData = Pointer to the data buffer where data is to be copied. This buffer address should be accessible by USB DMA master.</li></ol>
	4. len = Length of the buffer passed.
	Returns: the length of the requested buffer.
ReadSetupPkt	<pre>uint32_t(*uint32_t USBD_HW_API::ReadSetupPkt)(USBD_HANDLE_T hUsb, uint32_t EPNum, uint32_t *pData)</pre>
	Function to read setup packet data received on the requested endpoint.
	This function is called by USB stack and the application layer to read setup packet data received on the requested endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP0_IN is represented by 0x80 number.
	3. pData = Pointer to the data buffer where data is to be copied.
	Returns: the number of bytes copied to the buffer.
WriteEP	<pre>uint32_t(*uint32_t USBD_HW_API::WriteEP)(USBD_HANDLE_T hUsb, uint32_t EPNum, uint8_t     *pData, uint32_t cnt)</pre>
	Function to write data to be sent on the requested endpoint.
	This function is called by USB stack and the application layer to send data on the requested endpoint.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. EPNum = Endpoint number as per USB specification. ie. An EP1_IN is represented by 0x81 number.
	3. pData = Pointer to the data buffer from where data is to be copied.
	4. cnt = Number of bytes to write.
	Returns: the number of bytes written.

#### Chapter 33: LPC5411x USB ROM API

Table 583. USBD\_HW\_API class structure

Member	Description
WakeUp	void(*void USBD_HW_API::WakeUp)(USBD_HANDLE_T hUsb)
	Function to generate resume signaling on bus for remote host wake-up.
	This function is called by application layer to remotely wake up host controller when system is in suspend state. Application should indicate this remote wake up capability by setting USB_CONFIG_REMOTE_WAKEUP in bmAttributes of Configuration Descriptor. Also this routine will generate resume signalling only if host enables USB_FEATURE_REMOTE_WAKEUP by sending SET_FEATURE request before suspending the bus.
	Parameters:
	hUsb = Handle to the USB device stack.
	Returns: nothing.
EnableEvent	<pre>ErrorCode_t(* USBD_HW_API::EnableEvent)(USBD_HANDLE_T hUsb, uint32_t EPNum, uint32_t</pre>

## 33.4.35 USBD\_MSC\_API

MSC class API functions structure. This module exposes functions which interact directly with USB device controller hardware.

Table 584. USBD\_MSC\_API class structure

Member	Description
GetMemSize	uint32_t(*uint32_t USBD_MSC_API::GetMemSize)(USBD_MSC_INIT_PARAM_T *param)
	Function to determine the memory required by the MSC function driver module.
	This function is called by application layer before calling pUsbApi->msc->Init(), to allocate memory used by MSC function driver module. The application should allocate the memory which is accessible by USB controller/DMA controller.
	Remark: Some memory areas are not accessible by all bus masters.
	Parameters:
	param = Structure containing MSC function driver module initialization parameters.
	Returns: the required memory size in bytes.
init	<pre>ErrorCode_t(*ErrorCode_t USBD_MSC_API::init)(USBD_HANDLE_T hUsb, USBD_MSC_INIT_PARAM_T</pre>
	Function to initialize MSC function driver module.
	This function is called by application layer to initialize MSC function driver module.
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. param = Structure containing MSC function driver module initialization parameters.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success
	2. ERR_USBD_BAD_MEM_BUF = Memory buffer passed is not 4-byte aligned or smaller than required.
	<ol> <li>ERR_API_INVALID_PARAM2 = Either MSC_Write() or MSC_Read() or MSC_Verify() callbacks are not defined.</li> </ol>
	4. ERR_USBD_BAD_INTF_DESC = Wrong interface descriptor is passed.
	5. ERR_USBD_BAD_EP_DESC = Wrong endpoint descriptor is passed.

Chapter 33: LPC5411x USB ROM API

### 33.4.36 USBD\_MSC\_INIT\_PARAM

Mass Storage class function driver initialization parameter data structure.

#### Table 585. USBD\_MSC\_INIT\_PARAM class structure

Member	Description
mem_base	uint32_t USBD_MSC_INIT_PARAM::mem_base
	Base memory location from where the stack can allocate data and buffers.
	<b>Remark:</b> The memory address set in this field should be accessible by USB DMA controller. Also this value should be aligned on 4 byte boundary.
mem_size	uint32_t USBD_MSC_INIT_PARAM::mem_size
	The size of memory buffer which stack can use.
	<b>Remark:</b> The mem_size should be greater than the size returned by USBD_MSC_API::GetMemSize() routine.
InquiryStr	uint8_t * USBD_MSC_INIT_PARAM::InquiryStr
	Pointer to the 28 character string. This string is sent in response to the SCSI Inquiry command.
	Remark: The data pointed by the pointer should be of global scope.
BlockCount	uint32_t USBD_MSC_INIT_PARAM::BlockCount
	Number of blocks present in the mass storage device
BlockSize	uint32_t USBD_MSC_INIT_PARAM::BlockSize
	Block size in number of bytes
MemorySize	uint32_t USBD_MSC_INIT_PARAM::MemorySize
	Memory size in number of bytes
intf_desc	uint8_t * USBD_MSC_INIT_PARAM::intf_desc
	Pointer to the interface descriptor within the descriptor array (
MSC_Write	<pre>void(*void(* USBD_MSC_INIT_PARAM::MSC_Write)(uint32_t offset, uint8_t **src, uint32_t length))(uint32_t offset, uint8_t **src, uint32_t length)</pre>
	MSC Write callback function.
	This function is provided by the application software. This function gets called when host sends a write command.
	Parameters:
	offset = Destination start address.
	2. src = Pointer to a pointer to the source of data. Pointer-to-pointer is used to implement zero-copy buffers. See Zero-Copy Data Transfer model for more details on zero-copy concept.
	3. length = Number of bytes to be written.
	Returns: nothing.

Chapter 33: LPC5411x USB ROM API

Table 585. USBD\_MSC\_INIT\_PARAM class structure

Member	Description
MSC_Read	<pre>void(*void(* USBD_MSC_INIT_PARAM::MSC_Read)(uint32_t offset, uint8_t **dst, uint32_t length))(uint32_t offset, uint8_t **dst, uint32_t length)</pre>
	MSC Read callback function.
	This function is provided by the application software. This function gets called when host sends a read command.
	Parameters:
	offset = Source start address.
	2. dst = Pointer to a pointer to the source of data. The MSC function drivers implemented in stack are written with zero-copy model. Meaning the stack doesn't make an extra copy of buffer before writing/reading data from USB hardware FIFO. Hence the parameter is pointer to a pointer containing address buffer (uint8_t** dst). So that the user application can update the buffer pointer instead of copying data to address pointed by the parameter. /note The updated buffer address should be access able by USB DMA master. If user doesn't want to use zero-copy model, then the user should copy data to the address pointed by the passed buffer pointer parameter and shouldn't change the address value. See Zero-Copy Data Transfer model for more details on zero-copy concept.
	3. length = Number of bytes to be read.
	Returns:
	Nothing.
MSC_Verify	<pre>ErrorCode_t(* USBD_MSC_INIT_PARAM::MSC_Verify)(uint32_t offset, uint8_t buf[], uint32_t length)</pre>
	MSC Verify callback function.
	This function is provided by the application software. This function gets called when host sends a verify command. The callback function should compare the buffer with the destination memory at the requested offset and
	Parameters:
	offset = Destination start address.
	2. buf = Buffer containing the data sent by the host.
	3. length = Number of bytes to verify.
	Returns: ErrorCode_t type to indicate success or error condition.
	Return values:
	LPC_OK = If data in the buffer matches the data at destination
	2. ERR_FAILED = At least one byte is different.
MSC_GetWriteBuf	<pre>void(*void(* USBD_MSC_INIT_PARAM::MSC_GetWriteBuf)(uint32_t offset, uint8_t **buff_adr,</pre>
	Optional callback function to optimize MSC_Write buffer transfer.
	This function is provided by the application software. This function gets called when host sends SCSI_WRITE10/SCSI_WRITE12 command. The callback function should update the
	Parameters:
	offset = Destination start address.
	2. buf = Buffer containing the data sent by the host.
	3. length = Number of bytes to write.
	Returns: nothing.

**UM10914 NXP Semiconductors** 

# Chapter 33: LPC5411x USB ROM API

#### Table 585. USBD\_MSC\_INIT\_PARAM class structure

Member	Description
MSC_Ep0_Hdlr	<pre>ErrorCode_t(* USBD_MSC_INIT_PARAM::MSC_Ep0_Hdlr)(USBD_HANDLE_T hUsb, void *data, uint32_t</pre>
	Optional user overridable function to replace the default MSC class handler.
	The application software could override the default EP0 class handler with their own by providing the handler function address as this data member of the parameter structure. Application which like the default handler should set this data member to zero before calling the USBD_MSC_API::Init().
	Parameters:
	1. hUsb = Handle to the USB device stack.
	2. data = Pointer to the data which will be passed when callback function is called by the stack.
	3. event = Type of endpoint event. See USBD_EVENT_T for more details.
	Returns: the call back should returns ErrorCode_t type to indicate success or error condition.
	Return values:
	1. LPC_OK = On success.
	2. ERR_USBD_UNHANDLED = Event is not handled hence pass the event to next in line.
	3. ERR_USBD_xxx = For other error conditions.

# **UM10914**

# Chapter 34: LPC5411x Flash signature generator

Rev. 1.2 — 30 June 2016

**User manual** 

# 34.1 How to read this chapter

The flash signature generator is present on all LPC5411x devices.

#### 34.2 Features

- Controls hardware flash signature generation.
- Signature generated for the entire flash or for a specified address range.

# 34.3 General description

The flash signature generator can generate a flash signature value for a specified address range under software control. It can also generate a flash signature value for the entire flash memory by using an IAP function call (see <u>Section 32.5.17</u> for details).

The flash module contains a built-in signature generator. This generator can produce a 128-bit signature from a range of flash memory. A typical usage is to verify the flashed contents against a calculated signature (e.g. during programming). The signature generator can also be accessed via an IAP function call (Section 32.6.11) or ISP command (Section 32.5.17).

The address range for generating a signature must be aligned on flash-word boundaries, i.e. 128-bit boundaries. Once started, signature generation completes independently. While signature generation is in progress, the flash memory cannot be accessed for other purposes, and an attempted read will cause a wait state to be asserted until signature generation is complete. Code outside of the flash (e.g. internal RAM) can be executed during signature generation. This can include interrupt services, if the interrupt vector table is re-mapped to memory other than the flash memory. The code that initiates signature generation should also be placed outside of the flash memory.

#### Chapter 34: LPC5411x Flash signature generator

# 34.4 Register description

**Remark:** To configure flash access times, use the FLASHCFG register in the SYSCON block. See Section 4.5.41.

Table 586. Register overview: FMC (base address 0x4003 4000)

Name	Access	Offset	Description	Reset value	Reference
FMSSTART	R/W	0x020	Signature start address register	0	34.4.1.1
FMSSTOP	R/W	0x024	Signature stop-address register	0	34.4.1.2
FMSW0	RO	0x02C	Word 0 of 128-bit signature word	-	34.4.2
FMSW1	RO	0x030	Word 1 of 128-bit signature word	-	34.4.2
FMSW2	RO	0x034	Word 2 of 128-bit signature word	-	34.4.2
FMSW3	RO	0x038	Word 3 of 128-bit signature word	-	34.4.2
FMSTAT	RO	0xFE0	Signature generation status register	0	34.4.3
FMSTATCLR	WO	0xFE8	Signature generation status clear register	-	34.4.4

#### 34.4.1 Signature generation address and control registers

These registers control automatic signature generation. A signature can be generated for any part of the flash memory contents. The address range to be used for generation is defined by writing the start address to the signature start address register (FMSSTART) and the stop address to the signature stop address register (FMSSTOP. The start and stop addresses must be aligned to 128-bit boundaries and can be derived by dividing the byte address by 16.

Signature generation is started by setting the SIG\_START bit in the FMSSTOP register. Setting the SIG\_START bit is typically combined with the signature stop address in a single write.

#### 34.4.1.1 Flash signature start address register

Table 587. Flash Module Signature Start register (FMSSTART, offset 0x020) bit description

Bit	Symbol	Description	Reset value
16:0	START	Signature generation start address (corresponds to AHB byte address bits[20:4]).	0
31:17	-	Reserved. Read value is undefined, only zero should be written.	NA

#### 34.4.1.2 Flash signature stop address register

Table 588. Flash Module Signature Stop register (FMSSTOP, offset 0x024) bit description

Bit	Symbol	Description	Reset value
16:0	STOP	Stop address for signature generation (the word specified by STOP is included in the address range). The address is in units of memory words, not bytes.	0
17	SIG_START	When this bit is written to 1, signature generation starts. At the end of signature generation, this bit is automatically cleared.	0
31:18	-	Reserved. Read value is undefined, only zero should be written.	NA

#### Chapter 34: LPC5411x Flash signature generator

#### 34.4.2 Signature generation result registers

The signature generation result registers return the flash signature produced by the embedded signature generator. The 128-bit signature is reflected by the four registers FMSW0, FMSW1, FMSW2 and FMSW3.

The generated flash signature can be used to verify the flash memory contents. The generated signature can be compared with an expected signature and thus saves time and code space. The method for generating the signature is described in Section 34.5.1.

#### Table 589. FMSW0 register bit description (FMSW0, offset 0x02C)

Bit	Symbol	Description	Reset value
31:0	SW0[31:0]	Word 0 of 128-bit signature (bits 31 to 0).	-

#### Table 590. FMSW1 register bit description (FMSW1, offset 0x030)

Bit	Symbol	Description	Reset value
31:0	SW0[63:32]	Word 1 of 128-bit signature (bits 63 to 32).	-

#### Table 591. FMSW2 register bit description (FMSW2, offset 0x034)

Bit	Symbol	Description	Reset value
31:0	SW0[95:64]	Word 2 of 128-bit signature (bits 95 to 64.	-

#### Table 592. FMSW3 register bit description (FMSW3, offset 0x038)

Bit	Symbol	Description	Reset value
31:0	SW0[127:96]	Word 3 of 128-bit signature (bits 127 to 96).	-

#### 34.4.3 Signature status register

The read-only FMSTAT register provides a means of determining when signature generation has completed. Completion of signature generation can be checked by polling the SIG\_DONE bit in FMSTAT. SIG\_DONE should be cleared via the FMSTATCLR register before starting a signature generation operation, otherwise the status might indicate completion of a previous operation.

Table 593. Signature status register (FMSTAT, offset 0x0FE0) bit description

Bit	Symbol	Description	Reset value
1:0	-	Reserved. Read value is undefined, only zero should be written.	NA
2	SIG_DONE	When 1, a previously started signature generation has completed. See FMSTATCLR register description for clearing this flag.	0
31:2	-	Reserved. Read value is undefined, only zero should be written.	NA

#### 34.4.4 Signature status clear register

The FMSTATCLR register is used to clear the signature generation completion flag.

#### Chapter 34: LPC5411x Flash signature generator

Table 594	Signature status clear re	egister (FMSTATCLR	offset 0x0FF8)	bit description
I able 337.	Oldinature Status Clear IV	edister trivioral cert.	OHISEL OVOL FOR	DIL GESCHDUICH

Bit	Symbol	Description	Reset value
1:0	-	Reserved. Read value is undefined, only zero should be written.	NA
2	SIG_DONE_CLR	Writing a 1 to this bits clears the signature generation completion flag (SIG_DONE) in the FMSTAT register.	0
31:2	-	Reserved. Read value is undefined, only zero should be written.	NA

# 34.5 Functional description

# 34.5.1 Algorithm and procedure for signature generation

#### 34.5.1.1 Signature generation

A signature can be generated for any part of the flash contents. The address range to be used for signature generation is defined by writing the start address to the FMSSTART register, and the stop address to the FMSSTOP register.

The signature generation is started by writing a 1 to the SIG\_START bit in the FMSSTOP register. Starting the signature generation is typically combined with defining the stop address, which is done in the STOP bits of the same register.

The time that the signature generation takes is proportional to the address range for which the signature is generated. A safe estimation for the duration of the signature generation is:

```
Duration = int((60 / tcy) + 3) \times (FMSSTOP - FMSSTART + 1)
```

When signature generation is triggered via software, the duration is in AHB clock cycles, and tcy is the time in ns for one AHB clock. The SIG\_DONE bit in FMSTAT can be polled by software to determine when signature generation is complete.

After signature generation, a 128-bit signature can be read from the FMSW0 to FMSW3 registers. The 128-bit signature reflects the corrected data read from the flash. The 128-bit signature reflects flash parity bits and check bit values.

#### 34.5.1.2 Content verification

The signature as it is read from the FMSW0 register must be equal to the reference signature. The following pseudo-code shows the algorithm to derive the reference signature:

```
sign = 0
FOR address = FMSSTART.START to FMSSTOP.STOP
{
    FOR i = 0 TO 126
    {
        nextSign[i] = f_Q[address][i] XOR sign[i + 1]
    }
    nextSign[127] = f_Q[address][127] XOR sign[0] XOR sign[2] XOR sign[27] XOR sign[29]
    sign = nextSign
}
signature128 = sign
```

UM10914

# **UM10914**

# **Chapter 35: ARM Cortex Appendix**

Rev. 1.2 — 30 June 2016

**User manual** 

#### 35.1 ARM Cortex-M4 Details

ARM Limited publishes the document "Cortex™-M4 Devices Generic User Guide", which is available on their website at:

- For the online manual, go to "infocenter.arm.com", then search for "cortex-m4 user guide". This will bring up links to chapters of the user guide.
- There are links at the bottom of user guide chapters to download a PDF file of the user guide.

This section of this manual describes the Cortex-M4 implementation options and other distinctions that apply for the LPC5411x devices.

## 35.1.1 Cortex-M4 implementation options

The Cortex<sup>™</sup>-M4 CPU provides a number of implementation options. These are given below for the LPC5411x.

- The MPU is included for the Cortex-M4. The MPU provides fine grain memory control, enabling applications to implement security privilege levels, separating code, data and stack on a task-by-task basis.
- The FPU is included for the Cortex-M4. The FPU supports single-precision floating-point computation functionality in compliance with the ANSI/IEEE Standard 754-2008. The FPU provides add, subtract, multiply, divide, multiply and accumulate, and square root operations. It also performs a variety of conversions between fixed-point, floating-point, and integer data formats.
- 40 interrupt slots are implemented for the Cortex-M4. Not all interrupts are available on all part numbers.
- 3 interrupt priority bits are implemented on the Cortex-M4, providing 8 priority levels.
- Sleep mode power-saving: NXP microcontrollers extend the number of reduced power modes beyond what is directly supported by the Cortex-M4. Details of reduced power modes and wake-up possibilities can be found in Chapter 31.
- Reset of the Cortex-M4 resets the CPU register bank.
- Memory features: The memory map for LPC5411x devices is shown in Section 2.1.2.
- Bit banding is included on the Cortex-M4. APB peripherals are located in bit-band space.

In addition, there are debug and trace options, see Chapter 30.

# 35.2 ARM Cortex-M0+ Details (present on selected devices)

ARM Limited publishes the document "Cortex™-M0+ Devices Generic User Guide", which is available on their website at:

• For the online manual, go to "infocenter.arm.com", then search for "cortex-mo+ user guide". This will bring up links to chapters of the user guide.

#### **Chapter 35: ARM Cortex Appendix**

 There are links at the bottom of user guide chapters to download a PDF file of the user guide.

This section of this manual describes the Cortex-M0+ implementation options and any other distinctions that apply for the LPC5411x devices.

#### 35.2.1 Cortex-M0+ implementation options

The Cortex<sup>™</sup>-M0+ provides a number of implementation options. These are given below for the LPC5411x.

- An MPU is not included for the Cortex-M0+.
- 32 interrupt slots are implemented for the Cortex-M0+. Not all interrupts are available on all part numbers.
- 2 interrupt priority bits are implemented on the Cortex-M0+, providing 4 priority levels.
- The vector table offset register is included.
- The multiplier configuration is the high speed, single-cycle version.
- Sleep mode power-saving: NXP microcontrollers extend the number of reduced power modes beyond what is directly supported by the Cortex-M0+. Details of reduced power modes and wake-up possibilities on the LPC5411x can be found in Chapter 31.
- Reset of the Cortex-M0+ resets the CPU register bank.
- Memory features: The memory map for LPC5411x devices is shown in Section 2.1.2.
- SysTick timer: The SysTick timer is included for the Cortex-M0+, for details see Section 18.5.

In addition, there are debug and trace options, see Chapter 30.

# **UM10914**

# Chapter 36: Supplementary information Rev. 1.2 — 30 June 2016

User manual

# 36.1 Abbreviations

#### Table 595. Abbreviations

Acronym	Description
ADC	Analog-to-Digital Converter
AHB	Advanced High-performance Bus
AMBA	Advanced Microcontroller Bus Architecture
APB	Advanced Peripheral Bus
API	Application Programming Interface
BOD	BrownOut Detection
Boot	At power-up or chip reset, any method of importing code from an external source to execute from on-chip SRAM, or code executed in place from the external memory.
BSDL	Boundary-Scan Description Language
CRC	Cyclic Redundancy Check
DCC	Debug Communication Channel
DMA	Direct Memory Access
FIFO	First-In-First-Out
FMC	Flash Memory Controller
FRO	Internal Free-Running Oscillator, tuned to the factory specified frequency.
GPIO	General Purpose Input/Output
I2C or IIC	Inter-Integrated Circuit bus
IAP	In-Application Programming
I2S	Inter-IC Sound or Integrated Interchip Sound. A serial audio data communication method.
ISP	In-System Programming. These are methods of programming any on-chip flash on a blank or previously programmed device.
ISR	Interrupt Service Routine
JTAG	Joint Test Action Group
LIN	Local Interconnect Network
NVIC	Nested Vectored Interrupt Controller
PDM	Pulse Density Modulation. This is the data format used by the digital microphone inputs.
PLL	Phase-Locked Loop
POR	Power-On Reset
PWM	Pulse Width Modulator
RAM	Random Access Memory
SPI	Serial Peripheral Interface
SRAM	Static Random Access Memory
SWD	Serial-Wire Debug
TAP	Test Access Port
USART	Universal Synchronous/Asynchronous Receiver/Transmitter

#### **Chapter 36: Supplementary information**

## 36.2 References

- [1] Cortex-M4 TRM ARM Cortex-M4 Processor Technical Reference Manual
- [2] Cortex-M0+ TRM ARM Cortex-M0+ Processor Technical Reference Manual
- [3] AN11538 AN11538 application note and code bundle (SCT cookbook)
- [4] UM10204 I<sup>2</sup>C-bus specification and user manual

#### **Chapter 36: Supplementary information**

# 36.3 Legal information

#### 36.3.1 Definitions

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

#### 36.3.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors accepts no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

**Export control** — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

**Evaluation products** — This product is provided on an "as is" and "with all faults" basis for evaluation purposes only. NXP Semiconductors, its affiliates and their suppliers expressly disclaim all warranties, whether express, implied or statutory, including but not limited to the implied warranties of non-infringement, merchantability and fitness for a particular purpose. The entire risk as to the quality, or arising out of the use or performance, of this product remains with customer.

In no event shall NXP Semiconductors, its affiliates or their suppliers be liable to customer for any special, indirect, consequential, punitive or incidental damages (including without limitation damages for loss of business, business interruption, loss of use, loss of data or information, and the like) arising out the use of or inability to use the product, whether or not based on tort (including negligence), strict liability, breach of contract, breach of warranty or any other theory, even if advised of the possibility of such damages.

Notwithstanding any damages that customer might incur for any reason whatsoever (including without limitation, all damages referenced above and all direct or general damages), the entire liability of NXP Semiconductors, its affiliates and their suppliers and customer's exclusive remedy for all of the foregoing shall be limited to actual damages incurred by customer based on reasonable reliance up to the greater of the amount actually paid by customer for the product or five dollars (US\$5.00). The foregoing limitations, exclusions and disclaimers shall apply to the maximum extent permitted by applicable law, even if any remedy fails of its essential purpose.

#### 36.3.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

I2C-bus - logo is a trademark of NXP B.V.

UM10914

# **Chapter 36: Supplementary information**

# 36.4 Tables

Table 1.	SRAM configuration		(PRESETCTRL0, main syscon: offset 0x100) bit
Table 2.	Connection of interrupt sources to the NVIC13	T-1-1- 00	description
Table 3.	Register overview: NVIC (base address	Table 39.	Peripheral reset control register 1
T-1-1- 4	0xE000 E000)		(PRESETCTRL1, main syscon: offset 0x104) bit
Table 4.	Interrupt Set-Enable Register 0 register 16	T 1 1 40	description
Table 5.	Interrupt Set-Enable Register 1 register 17	Table 40.	Peripheral reset control set register 0
Table 6.	Interrupt Clear-Enable Register 017		(PRESETCTRLSET0, main syscon: offset 0x120)
Table 7.	Interrupt Clear-Enable Register 1 register 17		bit description35
Table 8.	Interrupt Set-Pending Register 0 register 18	Table 41.	Peripheral reset control set register 1
Table 9.	Interrupt Set-Pending Register 1 register 18		(PRESETCTRLSET1, main syscon: offset 0x124)
	Interrupt Clear-Pending Register 0 register 18		bit description
	Interrupt Clear-Pending Register 1 register18	Table 42.	Peripheral reset control clear register 0
	Interrupt Active Bit Register 019		(PRESETCTRLCLR0, main syscon: offset 0x140)
	Interrupt Active Bit Register 119		bit description
	Interrupt Priority Register 019	Table 43.	Peripheral reset control clear register 1
	Interrupt Priority Register 1		(PRESETCTRLCLR1, main syscon: offset 0x144)
	Interrupt Priority Register 220		bit description36
	Interrupt Priority Register 320	Table 44.	System reset status register (SYSRSTSTAT, main
	Interrupt Priority Register 421		syscon: offset 0x01F0) bit description 36
	Interrupt Priority Register 5	Table 45.	AHB Clock Control register 0 (AHBCLKCTRL0,
	Interrupt Priority Register 6		main syscon: offset 0x200) bit description 38
Table 21.	Interrupt Priority Register 7	Table 46.	AHB Clock Control register 1 (AHBCLKCTRL1,
	Interrupt Priority Register 8		main syscon: offset 0x204) bit description 39
Table 23.	Interrupt Priority Register 9	Table 47.	Clock control set register 0 (AHBCLKCTRLSET0,
Table 24.	Software Trigger Interrupt Register (STIR)23		main syscon: offset 0x220) bit description 39
Table 25.	SYSCON pin description	Table 48.	Clock control set register 1 (AHBCLKCTRLSET1,
Table 26.	Clocking diagram signal name descriptions 26		main syscon: offset 0x224) bit description 40
Table 27.	Register overview: Main system configuration	Table 49.	Clock control clear register 0
	(base address 0x4000 0000)		(AHBCLKCTRLCLR0, main syscon: offset 0x240)
Table 28.	Register overview: Asynchronous system		bit description40
	configuration (base address 0x4004 0000) 30	Table 50.	Clock control clear register 1
Table 29.	Register overview: Other system configuration		(AHBCLKCTRLCLR1, main syscon: offset 0x244)
	(base address 0x4002 0000)		bit description40
Table 30.	AHB matrix priority register 0 (AHBMATPRIO,	Table 51.	Main clock source select register A
	main syscon: offset 0x010) bit description 31		(MAINCLKSELA, main syscon: offset 0x280) bit
Table 31.	System tick timer calibration register		description
	(SYSTCKCAL, main syscon: offset 0x040) bit	Table 52.	Main clock source select register B
	description		(MAINCLKSELB, main syscon: offset 0x284) bit
Table 32.	NMI source selection register (NMISRC, main		description
	syscon: offset 0x048) bit description 32	Table 53.	CLKOUT clock source select register
Table 33.	Asynchronous APB Control register		(CLKOUTSELA, main syscon: offset 0x288) bit
	(ASYNCAPBCTRL, main syscon: offset 0x04C)		description
	bit description	Table 54.	System PLL clock source select register
Table 34.	POR captured PIO status register 0		(SYSPLLCLKSEL, main syscon: offset 0x290) bit
	(PIOPORCAP0, main syscon: offset 0x0C0) bit		description
	description	Table 55.	ADC clock source select (ADCCLKSEL, main
Table 35.	POR captured PIO status register 1		syscon: offset 0x2A4) bit description 42
	(PIOPORCAP1, main syscon: offset 0x0C4) bit	Table 56.	USB clock source select register (USBCLKSEL,
	description32		main syscon: offset 0x2A8) bit description 43
Table 36.	Reset captured PIO status register 0	Table 57.	Flexcomm Interface clock source select registers
	(PIORESCAP0, main syscon: offset 0x0D0) bit		(FXCOMCLKSEL, main syscon: offsets 0x2B0
	description		through 2CC) bit description
Table 37	Reset captured PIO status register 1	Table 58	MCLK clock source select register
	(PIORESCAP1, main syscon: offset 0x0D4) bit		(MCLKCLKSEL, main syscon: offset 0x2E0) bit
	description		description
Table 38	Peripheral reset control register 0	Table 59	FRG clock source select register (FRGCLKSEL,
. 4210 00.		. 4510 00.	Glock Source Golder Togister (1 TOOLINGLE,

	main syscon: offset 0x2E8) bit description44		main syscon: offset 0x604) bit description 60
Table 60.	DMIC clock source select register (DMICCLKSEL,	Table 86.	Power Configuration register (PDRUNCFG0,
	main syscon: offset 0x2EC) bit description44		main syscon: offset 0x610) bit description 61
Table 61.	SYSTICK clock divider (SYSTICKCLKDIV, main	Table 87.	Flash power configurations 62
	syscon: offset 0x300) bit description 44	Table 88.	Power Configuration register (PDRUNCFG1,
Table 62.	Trace clock divider (TRACECLKDIV, main syscon:		main syscon: offset 0x614) bit description 62
	offset 0x304) bit description	Table 89.	Power configuration set registers
Table 63.	System clock divider register (AHBCLKDIV, main		(PDRUNCFGSET0 main syscon: offset 0x620) bit
	syscon: offset 0x380) bit description 45		description
Table 64.	CLKOUT clock divider register (CLKOUTDIV,	Table 90.	Power configuration set registers
	main syscon: offset 0x384) bit description46		(PDRUNCFGSET1 main syscon: offset 0x624) bit
Table 65.	ADC clock source divider (ADCCLKDIV, main		description
	syscon: offset 0x394) bit description 46	Table 91.	Power configuration clear registers
Table 66.	USB clock divider register (USBCLKDIV, main		(PDRUNCFGCLR0, main syscon: offset 0x630)
	syscon: offset 0x398) bit description 46		bit description
Table 67.	Fractional baud rate generator register	Table 92.	Power configuration clear registers
	(FRGCTRL, main syscon: offset 0x3A0) bit		(PDRUNCFGCLR1, main syscon: offset 0x634 bit
	description		description
Table 68.	Digital microphone interface clock divider register	Table 93.	Start enable register 0 (STARTER0, main syscon:
	(DMICCLKDIV, main syscon: offset 0x3A8) bit		offset 0x680) bit description
<b>-</b>	description	Table 94.	Start enable register 1 (STARTER1, main syscon:
Table 69.	MCLK clock divider register (MCLKDIV, main	T.I.I. 05	offset 0x684) bit description
T	syscon: offset 0x3AC) bit description	Table 95.	Start enable set register 0 (STARTERSET0, main
Table 70.	Flash configuration register (FLASHCFG, main	T-1-1- 00	syscon: offset 0x6A0) bit description
Table 74	syscon: offset 0x400) bit description	Table 96.	Start enable set register 1 (STARTERSET1, main
rable 71.	USB clock control register (USBCLKCTRL, main	Toble 07	syscon: offset 0x6A4) bit description
Toble 72	syscon: offset 0x40C) bit description 50	rable 97.	Start enable clear register 0 (STARTERCLR0,
Table 12.	USB clock status register (USBCLKSTAT, main syscon: offset 0x410) bit description50	Table 08	main syscon: offset 0x6C0) bit description 66 Start enable clear register 1 (STARTERCLR1,
Tahla 73	Frequency measure function control register	Table 30.	main syscon: offset 0x6C4) bit description 67
Table 13.	(FREQMECTRL, main syscon: offset 0x418) bit	Tahla 00	Hardware Wake-up control register (HWWAKE,
	description51	Table 33.	main syscon: offset 0x780) bit description 67
Table 74	MCLK input/output control register (MCLKIO,	Table 100	. CPU Control register (CPUCTRL, main syscon:
10010 7 11	main syscon: offset 0x420) bit description51	14510 100	offset 0x800) bit description
Table 75.	FRO control register (FROCTRL, main syscon:	Table 101	. Coprocessor Boot register (CPBOOT, main
	offset 0x500) bit description		syscon: offset 0x804) bit description 69
Table 76.	Watchdog oscillator control register	Table 102	. Coprocessor Stack register (CPSTACK, main
	(WDTOSCCTRL, main syscon: offset 0x508) bit		syscon: offset 0x808) bit description 69
	description	Table 103	. Coprocessor Status register (CPSTAT, main
Table 77.	RTC oscillator control register (RTCOSCCTRL,		syscon: offset 0x80C) bit description 69
	main syscon: offset 0x50C) bit description 54	Table 104	. Auto Clock-Gate Override Register
Table 78.	System PLL control register (SYSPLLCTRL, main		(AUTOCGOR, main syscon: offset 0xE04) bit
	syscon: offset 0x580 bit description 55		description
Table 79.	System PLL status register (SYSPLLSTAT, main	Table 105	. JTAG ID code register (JTAGIDCODE, main
	syscon: offset 0x584) bit description56		syscon: offset 0xFF4) bit description 70
Table 80.	System PLL N-divider register (SYSPLLNDEC,	Table 106	. Device ID0 register (DEVICE_ID0, main syscon:
	main syscon: offset 0x588) bit description57		offset 0xFF8) bit description70
Table 81.	System PLL P-divider register (SYSPLLPDEC,		. Device ID0 register values 70
	main syscon: offset 0x58C) bit description57	Table 108	. Device ID1 register (DEVICE_ID1, main syscon:
Table 82.	System PLL spread spectrum control register 0	T	offset 0xFFC) bit description
	(SYSPLLSSCTRL0, main syscon: offset 0x590)	Table 109	. Asynchronous peripheral reset control register
Table 00	bit description		(ASYNCPRESETCTRL, async syscon: offset
iadie 83.	System PLL spread spectrum control register 1 (SYSPIL SSCTPL1, main system) offset 0x504)	Toble 440	0x000) bit description
	(SYSPLLSSCTRL1, main syscon: offset 0x594) bit description	Table 110	. Asynchronous peripheral reset control set register
Table 04	Sleep configuration register (PDSLEEPCFG0,		(ASYNCPRESETCTRLSET, async syscon: offset 0x004) bit description71
14016 04.	main syscon: offset 0x600) bit description 60	Tahla 111	Asynchronous peripheral reset control clear
Table 85	Sleep configuration register (PDSLEEPCFG1,	IADIC III.	register (ASYNCPRESETCTRLCLR, async
	Sissp samigaration regioter (i Doller of OT,		rogioto, (no into integer io integer, abyllo

	syscon: offset 0x008) bit description	Table 142. Frequency measure function frequency clock
Table 112.	. Asynchronous APB clock control register	select register (FREQMEAS_REF, offset 0x180)
	(ASYNCAPBCLKCTRL, async syscon: offset	bit description
	0x010) bit description	Table 143. Frequency measure function target clock select
Tahla 113	Asynchronous APB clock control set register	register (FREQMEAS_TARGET, offset 0x184) bit
Table 115.		
	(ASYNCAPBCLKCTRLSET, async syscon: offset	description
	0x014) bit description	Table 144. Register overview: GPIO port (base address
Table 114.	Asynchronous APB clock control clear register	0x4008 C000)
	(ASYNCAPBCLKCTRLCLR, async syscon: offset	Table 145. GPIO port byte pin registers (B[0:49], offset
	0x018) bit description	[0x0000:0x0031]) bit description 126
Table 115.	. Asynchronous clock source select register A	Table 146. GPIO port word pin registers (W[0:49], offsets
	(ASYNCAPBCLKSELA, async syscon: offset	[0x1000:0x10C4]) bit description 126
	0x020) bit description	Table 147. GPIO direction port register (DIR[0:1], offset
Table 116	BOD control register (BODCTRL, other system	[0x2000:0x2004]) bit description 126
14510 110	registers: offset 0x044) bit description 73	Table 148. GPIO mask port register (MASK[0:1], offset
Table 117	PLL operating mode summary78	[0x2080:0x2084]) bit description 127
Table 110.	Values for different settings, directo <sub>PLL</sub> = 0, P <sub>PLL</sub> =	Table 149. GPIO port pin register (PIN[0:1], offset
<b>T</b>	181	[0x2100:0x2104]) bit description
	Summary of PLL related registers	Table 150. GPIO masked port pin register (MPIN[0:1], offset
Table 120	. Peripheral configuration in reduced power modes	[0x2180:0x2184]) bit description 127
	87	Table 151. GPIO set port register (SET[0:1], offset
Table 121	. Wake-up sources for reduced power modes87	[0x2200:0x2204]) bit description
Table 122	. ISP modes	Table 152. GPIO clear port register (CLR[0:1], offset
Table 123	. Image type considerations98	[0x2280:0x2284]) bit description 128
Table 124	. Image Header structure	Table 153. GPIO toggle port register (NOT[0:1], offset
	. Available pins and configuration registers 103	[0x2300:0x2304]) bit description 128
	. Register overview: I/O configuration (base	Table 154. GPIO port direction set register (DIRSET[0:1],
14510 120	address 0x4000 1000)	offset 0x2380:0x2384) bit description 128
Tahla 127	Type D IOCON registers (PIO0_[0:22], offsets	Table 155. GPIO port direction clear register (DIRCLR[0:1],
Table 121		
Toble 120	[0x000:0x058]) bit description	offset 0x2400:0x2404) bit description 128
Table 126	. Type D I/O Control registers: FUNC values and	Table 156. GPIO port direction toggle register (DIRNOT[0:1],
<b>T</b>     400	pin functions	offset 0x2480:0x2484) bit description 129
Table 129	. Type I IOCON registers (PIO0_[23:26], offsets	Table 157. Register overview: Pin interrupts/pattern match
	[0x05C:0x068]) bit description	engine (base address 0x4000 4000) 138
	. Suggested IOCON settings for I2C functions 110	Table 158. Pin interrupt mode register (ISEL, offset 0x000)
Table 131	. Type I I/O Control registers: FUNC values and pin	bit description139
	functions	Table 159. Pin interrupt level or rising edge interrupt enable
Table 132	. Type A IOCON registers(PIO0_[29:31], offsets	register (IENR, offset 0x004) bit description . 139
	[0x074:0x07C]) bit description	Table 160. Pin interrupt level or rising edge interrupt set
Table 133	Type A IOCON registers(PIO1_[0:8], offsets	register (SIENR, offset 0x008) bit description 139
	[0x080:0x0A0]) bit description	Table 161. Pin interrupt level or rising edge interrupt clear
Tahla 13/	. Type A I/O Control registers: FUNC values and	register (CIENR, offset 0x00C) bit description
Table 104	pin functions	140
Toblo 125	Type D IOCON registers (PIO1_[9:17], offsets	
Table 135		Table 162. Pin interrupt active level or falling edge interrupt
<b>T</b>     400	[0x0A4:0x0C4]) bit description	enable register (IENF, offset 0x010) bit
Table 136	. Type D I/O Control registers: FUNC values and	description
	pin functions	Table 163. Pin interrupt active level or falling edge interrupt
Table 137	. INPUT MUX pin description	set register (SIENF, offset 0x014) bit description
Table 138	. Register overview: Input multiplexing (base	141
	address 0x4000 5000)119	Table 164. Pin interrupt active level or falling edge interrupt
Table 139	. Pin interrupt select registers (PINTSEL[0:7],	clear register (CIENF, offset 0x018) bit
	offsets [0x0C0:0x0DC]) bit description120	description
Table 140	. DMA trigger Input mux registers	Table 165. Pin interrupt rising edge register (RISE, offset
	(DMA_ITRIG_INMUX[0:21], offsets	0x01C) bit description
	[0x0E0:0x134]) bit description	Table 166. Pin interrupt falling edge register (FALL, offset
Tahle 1/1	. DMA output trigger feedback mux registers	0x020) bit description142
141	(DMA_OTRIG_INMUX[0:3], offset	Table 167. Pin interrupt status register (IST, offset 0x024) bit
	[0x160:0x16C]) bit description	description

Table		Pattern match interrupt control register (PMCTRL, offset 0x028) bit description 143	Table 199. Abort 0 register (ABORT0, offset 0x078) bit description
Table	169.	Pattern match bit-slice source register (PMSRC,	Table 200. Channel configuration registers bit description
Table		offset 0x02C) bit description	177 Table 201. Trigger setting summary
		(PMCFG, offset 0x030) bit description 146	Table 202. Channel control and Status registers bit
Table		Pin interrupt registers for edge- and	description
		level-sensitive pins151	Table 203. Channel transfer configuration registers bit
Table		Register overview: GROUP0 interrupt (base	description
		address 0x4000 2000 (GINT0) and 0x4000 3000	Table 204. SCT0 pin description (inputs) 184
		(GINT1))156	Table 205. SCT0 pin description (outputs) 184
Table	173.	GPIO grouped interrupt control register (CTRL,	Table 206: Suggested SCT input pin settings 185
		offset 0x000) bit description	Table 207: Suggested SCT output pin settings 185
Table	174.	GPIO grouped interrupt port polarity registers	Table 208. Register overview: SCTimer/PWM (base address
		(PORT_POL[0:1], offset 0x020 for POL0; 0x024	0x4008 5000)
		for POL1) bit description157	Table 209. SCT configuration register (CONFIG, offset
Table		GPIO grouped interrupt port enable registers	0x000) bit description
		(PORT_ENA[0:1], offset 0x040 for PORT_ENA0;	Table 210. SCT control register (CTRL, offset 0x004) bit
		0x044 PORT_ENA1) bit description	description
		DMA requests & trigger muxes	Table 211. SCT limit event select register (LIMIT, offset
		DMA with the I <sup>2</sup> C Monitor function162	0x008) bit description
		DMA trigger sources	Table 212. SCT halt event select register (HALT, offset
		Channel descriptor	0x00C) bit description
		Reload descriptors	Table 213. SCT stop event select register (STOP, offset 0x010) bit description199
		Example descriptors for ping-pong operation:	Table 214. SCT start event select register (START, offset
Table		peripheral to buffer	0x014) bit description199
Table		Register overview: DMA controller (base address	Table 215. SCT counter register (COUNT, offset 0x040) bit
		0x4008 2000)	description
Table		Control register (CTRL, offset 0x000) bit	Table 216. SCT state register (STATE, offset 0x044) bit
		description	description
Table	185.	Interrupt Status register (INTSTAT, offset 0x004)	Table 217. SCT input register (INPUT, offset 0x048) bit
		bit description	description
Table		SRAM Base address register (SRAMBASE,	Table 218. SCT match/capture mode register (REGMODE,
		offset 0x008) bit description	offset 0x04C) bit description
		Channel descriptor map	Table 219. SCT output register (OUTPUT, offset 0x050) bit
lable		Enable read and Set register 0 (ENABLESET0,	description
Tabla		offset 0x020) bit description	Table 220. SCT bidirectional output control register
rable		Enable Clear register 0 (ENABLECLR0, offset	(OUTPUTDIRCTRL, offset 0x054) bit description 202
Tahla		0x028) bit description	Table 221. SCT conflict resolution register (RES, offset
Table		bit description	0x058) bit description
Table		Busy status register 0 (BUSY0, offset 0x038) bit	Table 222. SCT DMA 0 request register (DMAREQ0, offset
		description	0x05C) bit description
Table		Error Interrupt register 0 (ERRINT0, offset 0x040)	Table 223. SCT DMA 1 request register (DMAREQ1, offset
		bit description	0x060) bit description
Table	193.	Interrupt Enable read and Set register 0	Table 224. SCT event interrupt enable register (EVEN, offset
		(INTENSET0, offset 0x048) bit description174	0x0F0) bit description 205
Table		Interrupt Enable Clear register 0 (INTENCLR0,	Table 225. SCT event flag register (EVFLAG, offset 0x0F4)
		offset 0x050) bit description	bit description205
Table		Interrupt A register 0 (INTA0, offset 0x058) bit	Table 226. SCT conflict interrupt enable register (CONEN,
		description	offset 0x0F8) bit description
ıable		Interrupt B register 0 (INTB0, offset 0x060) bit	Table 227. SCT conflict flag register (CONFLAG, offset
Toble		description	0x0FC) bit description
iable		Set Valid 0 register (SETVALID0, offset 0x068) bit	Table 228. SCT match registers 0 to 9 (MATCH0:9), offset
Tahle		description	0x100 (MATCH0) to 0x124 (MATCH9)) bit description (REGMODEn bit = 0)206
Iable		bit description	Table 229. SCT capture registers 0 to 9 (CAP[0:9], offset

	0x100 (CAP0) to 0x124 (CAP9)) bit description	description
	(REGMODEn bit = 1)	Table 255. Watchdog operating modes selection 241
Table 230	. SCT match reload registers 0 to 9	Table 256. Watchdog Timer Constant register (TC, offset
	(MATCHREL[0:9], offset 0x200 (MATCHREL0) to	0x04) bit description
	0x224 (MATCHREL9)) bit description	Table 257. Watchdog Feed register (FEED, offset 0x08) bit
	(REGMODEn bit = 0)	description
Table 231	SCT capture control registers 0 to 9	Table 258. Watchdog Timer Value register (TV, offset 0x0C)
Table 201	(CAPCTRL[0:9], offset 0x200 (CAPCTRL0) to	bit description242
		Table 259. Watchdog Timer Warning Interrupt register
	0x224 (CAPCTRL9)) bit description (REGMODEn	
T-bl- 000	bit = 1)	(WARNINT, offset 0x14) bit description 243
Table 232	. SCT event state mask registers 0 to 9	Table 260. Watchdog Timer Window register (WINDOW,
	(EV[0:9]_STATE, offsets 0x300 (EV0_STATE) to	offset 0x18) bit description
T	0x348 (EV9_STATE)) bit description 208	Table 261. RTC pin description
Table 233	. SCT event control register 0 to 9 (EV[0:9]_CTRL,	Table 262. Register overview: RTC (base address
	offset 0x304 (EV0_CTRL) to 0x34C (EV9_CTRL))	0x4002 C000)248
	bit description	Table 263. RTC control register (CTRL, offset 0x000) bit
Table 234	. SCT output set register (OUT[0:9]_SET, offset	description
	0x500 (OUT0_SET) to 0x538 (OUT7_SET) bit	Table 264. RTC match register (MATCH, offset 0x04) bit
	description210	description
Table 235	. SCT output clear register (OUT[0:9]_CLR, offset	Table 265. RTC counter register (COUNT, offset 0x08) bit
	0x504 (OUT0_CLR) to 0x53C (OUT7_CLR)) bit	description
	description	Table 266. RTC high-resolution/wake-up register (WAKE,
Table 236	. Event conditions	offset 0x0C) bit description 250
Table 237	. SCT configuration example	Table 267. Register overview: MRT (base address
	. Timer/Counter pin description	0x4000 D000)
	: Suggested CTIMER timer pin settings 224	Table 268. Time interval register (INTVAL[0:3], offset 0x000
	. Register overview: CTIMER0/1/2/3 (register base	(INTVAL0) to 0x030 (INTVAL3)) bit description
	addresses 0x4000 8000 (CTIMER0),	255
	0x4000 9000 (CTIMER1), 0x4002 8000	Table 269. Timer register (TIMER[0:3], offset 0x004
	(CTIMER2), 0x4004 8000 (CTIMER3),	(TIMER0) to 0x034 (TIMER3)) bit description 255
	0x4004 9000 (CTIMER4))	Table 270. Control register (CTRL[0:3], offset 0x08 (CTRL0)
Table 241	Interrupt Register (IR, offset 0x000) bit	to 0x38 (CTRL3)) bit description
Table 2-1	description226	Table 271. Status register (STAT[0:3], offset 0x0C (STAT0) to
Table 242	. Timer Control Register (TCR, offset 0x004) bit	0x3C (STAT3)) bit description
Table 242	description226	Table 272. Module Configuration register (MODCFG, offset
Table 242	. Timer counter registers (TC, offset 0x08) bit	0xF0) bit description257
Table 243	description226	
Toble 244		Table 273. Idle channel register (IDLE_CH, offset 0xF4) bit description
Table 244	. Timer prescale registers (PR, offset 0x00C) bit	
Table 045	description	Table 274. Global interrupt flag register (IRQ_FLAG, offset
Table 245	. Timer prescale counter registers (PC, offset	0xF8) bit description
<b>T</b>     040	0x010) bit description	Table 275. Register overview: SysTick timer (base address
Table 246	. Match Control Register (MCR, offset 0x014) bit	0xE000 E000)
	description	Table 276. SysTick Timer Control and status register
Table 247	. Timer match registers (MR[0:3], offset	(SYST_CSR, offset 0x010) bit description261
	[0x018:0x024]) bit description	Table 277. System Timer Reload value register
Table 248	. Capture Control Register (CCR, offset 0x028) bit	(SYST_RVR, offset 0x014) bit description 262
	description	Table 278. System Timer Current value register
Table 249	. Timer capture registers (CR[0:3], offsets	(SYST_CVR, offset 0x018) bit description 262
	[0x02C:0x038]) bit description	Table 279. System Timer Calibration value register
Table 250	. Timer external match registers (EMR, offset	(SYST_CALIB, offset 0x01C) bit description . 262
	0x03C) bit description229	Table 280. Micro-tick Timer pin description 265
Table 251	. Count Control Register (CTCR, offset 0x070) bit	Table 281. Register overview: Micro-Tick Timer (base
	description	address 0x4000 E000) 266
Table 252	: PWM Control Register (PWMC, offset 0x074)) bit	Table 282. Control register (CTRL, offset 0x000) bit
	description	description
Table 253	. Register overview: Watchdog timer (base	Table 283. Status register (STAT, offset 0x004) bit description
	address 0x4000 C000)	266
Table 254	. Watchdog mode register (MOD, offset 0x000) bit	Table 284. Capture configuration register (CFG, offset
	5 , ,	

	0x008) bit description	offset 0x020) bit description 307
	Capture clear register (CAPCLR, offset 0x00C) bit description	Table 317. USART Interrupt Status register (INTSTAT, offset
	•	0x024) bit description
	Capture registers (CAP[0:3], offsets [0x010:0x01C]) bit description	Table 318. Oversample selection register (OSR, offset 0x028) bit description308
	Fixed endpoint configuration	Table 319. Address register (ADDR, offset 0x02C) bit
	USB device pin description	description
	Register overview: USB (base address 0x4008	Table 320. FIFO Configuration register (FIFOCFG - offset
	4000)	0xE00) bit description
	USB Device Command/Status register	Table 321. FIFO status register (FIFOSTAT - offset 0xE04)
	(DEVCMDSTAT, offset 0x00) bit description273	bit description
	USB Info register (INFO, offset 0x04) bit	Table 322. FIFO trigger level settings register (FIFOTRIG -
	description275	offset 0xE08) bit description
	USB EP Command/Status List start address	Table 323. FIFO interrupt enable set and read register
	(EPLISTSTART, offset 0x08) bit description276	(FIFOINTENSET - offset 0xE10) bit description .
	USB Data buffer start address (DATABUFSTART,	312
	·	Table 324. FIFO interrupt enable clear and read
	offset 0x0C) bit description	
	Link Power Management register (LPM, offset	(FIFOINTENCLR - offset 0xE14) bit description . 312
	0x10) bit description	
	USB Endpoint skip (EPSKIP, offset 0x14) bit	Table 325. FIFO interrupt status register (FIFOINTSTAT -
	description	offset 0xE18) bit description
	USB Endpoint Buffer in use (EPINUSE, offset	Table 326. FIFO write data register (FIFOWR - offset 0xE20)
	0x18) bit description	bit description
	USB Endpoint Buffer Configuration (EPBUFCFG,	Table 327. FIFO read data register (FIFORD - offset 0xE30)
	offset 0x1C) bit description	bit description
	USB interrupt status register (INTSTAT, offset	Table 328. FIFO data read with no FIFO pop
	0x20) bit description	(FIFORDNOPOP - offset 0xE40) bit description .
	USB interrupt enable register (INTEN, offset	313 Table 220 Module identification register (ID. effect 0vEEC)
	0x24) bit description	Table 329. Module identification register (ID - offset 0xFFC)
	USB set interrupt status register (INTSETSTAT,	bit description
	offset 0x28) bit description	Table 330: SPI Pin Description
	USB Endpoint toggle (EPTOGGLE, offset 0x34)	Table 331: Suggested SPI pin settings
	bit description	Table 332. SPI Configuration register (CFC affect 0x400) bit
	Endpoint commands	Table 333. SPI Configuration register (CFG, offset 0x400) bit
	Flexcomm Interface base addresses and	description
	functions	Table 334. SPI Delay register (DLY, offset 0x404) bit
		description
	Register map for the first channel pair within one	Table 335. SPI Status register (STAT, offset 0x408) bit description
	Flexcomm Interface	
		Table 336. SPI Interrupt Enable read and Set register
	register (PSELID - offset 0xFF8) bit description 292	(INTENSET, offset 0x40C) bit description 328
	Peripheral identification register (PID - offset	Table 337. SPI Interrupt Enable clear register (INTENCLR, offset 0x410) bit description
	0xFFC) bit description293	Table 338. SPI Divider register (DIV, offset 0x424) bit
		description
	USART pin description	
	USART register overview	Table 339. SPI Interrupt Status register (INTSTAT, offset
	USART Configuration register (CFG, offset	0x428) bit description329 Table 340. FIFO Configuration register (FIFOCFG - offset
	0x000) bit description301	0xE00) bit description330
	USART Control register (CTL, offset 0x004) bit	Table 341. FIFO status register (FIFOSTAT - offset 0xE04)
	description	bit description
	USART Status register (STAT, offset 0x008) bit	Table 342. FIFO trigger settings register (FIFOTRIG - offset 0xE08) bit description332
	description	Table 343. FIFO interrupt enable set and read register
		(FIFOINTENSET - offset 0xE10) bit description .
	(INTENSET, offset 0x00C) bit description305 USART Interrupt Enable clear register	333
	(INTENCLR, offset 0x010) bit description306	Table 344. FIFO interrupt enable clear and read
	USART Baud Rate Generator register (BRG,	(FIFOINTENCLR - offset 0xE14) bit description .
10016 310.	DOMINI Daud Nate Generator register (DNG,	(I II OHATENOLIX - OHSELOXE 14) bit description .

		333	Table 379:	I <sup>2</sup> S Pin Description
Table		FIFO interrupt status register (FIFOINTSTAT - offset 0xE18) bit description		Register overview for the I <sup>2</sup> S function of one Flexcomm Interface
Table		FIFO write data register (FIFOWR - offset 0xE20)		Configuration register 1 (CFG1 - offset 0xC00) bit
		bit description		description
Table		FIFO read data register (FIFORD - offset 0xE30)	Table 382.	Configuration register 2 (CFG2 - offset 0xC04) bit
Table		bit description		description
lable		(FIFORDNOPOP - offset 0xE40) bit description		description
		336		Clock Divider register (DIV - offset 0xC1C) bit
Table		Module identification register (ID - offset 0xFFC)		description
		bit description		FIFO Configuration register (FIFOCFG - offset
Table		SPI mode summary		0xE00) bit description
		I <sup>2</sup> C-bus pin description347		FIFO status register (FIFOSTAT - offset 0xE04)
		Suggested I <sup>2</sup> C pin settings348		bit description390
Table	353.	Code example		FIFO trigger settings register (FIFOTRIG - offset
Table	354.	Code example		0xE08) bit description
		Code example		FIFO interrupt enable set and read register
		Code example		(FIFOINTENSET - offset 0xE10) bit description .
		I <sup>2</sup> C register overview		392
lable		I <sup>2</sup> C Configuration register (CFG, offset 0x800) bit		FIFO interrupt enable clear and read
Toblo		description		(FIFOINTENCLR - offset 0xE14) bit description .
rable		I <sup>2</sup> C Status register (STAT, offset 0x804) bit description357		392 FIFO interrupt status register (FIFOINTSTAT -
Tahla		Master function state codes (MSTSTATE)360		offset 0xE18) bit description393
		Slave function state codes (SLVSTATE) 361		FIFO write data register (FIFOWR - offset 0xE20)
		Interrupt Enable Set and read register		bit description
Idolo		(INTENSET, offset 0x808) bit description 361		FIFO write data for upper data bits (FIFOWR48H
Table		Interrupt Enable Clear register (INTENCLR, offset		- offset 0xE24) bit description
		0x80C) bit description		FIFO read data register (FIFORD - offset 0xE30)
Table	364.	Time-out value register (TIMEOUT, offset 0x810)		bit description394
		bit description	Table 394.	FIFO read data for upper data bits (FIFORD48H -
Table		I <sup>2</sup> C Clock Divider register (CLKDIV, offset 0x814)		offset 0xE34) bit description
		bit description		FIFO data read with no FIFO pop
lable		I <sup>2</sup> C Interrupt Status register (INTSTAT, offset		(FIFORDNOPOP - offset 0xE40) bit description .
Tabla		0x818) bit description		394
rable		Master Control register (MSTCTL, offset 0x820)		FIFO data read for upper data bits with no FIFO
Tabla		bit description		pop (FIFORD48HNOPOP - offset 0xE44) bit description
Iable		description		Module identification register (ID - offset 0xFFC)
Table		Master Data register (MSTDAT, offset 0x828) bit		bit description
Idolo		description		DMIC subsystem PDM pin description 405
Table		Slave Control register (SLVCTL, offset 0x840) bit		Suggested PDM pin settings for the audio input.
		description		405
Table	371.	Slave Data register (SLVDAT, offset 0x844) bit	Table 400.	Register overview: DMIC subsystem (base
		description368		address 0x4009 0000)
Table		Slave Address 0 register (SLVADR[0], offset		Oversample Rate register (OSR[0:1], offset
		0x848) bit description		0x000 (OSR0) and 0x100 (OSR1)) bit description
lable		Slave Address registers (SLVADR[1:3], offset		409
T-1-1-		[0x84C:0x854]) bit description		DMIC Clock register (DIVHFCLK[0:1], offset
rabie		Slave address Qualifier 0 register (SLVQUAL0,		0x004 (DIVHFCLK0) to 0x104 (DIVHFCLK1)) bit
Table		offset 0x858) bit description		description
Iable		bit description		(PREAC2FSCOEF[0:1], offset 0x008
Table		Module identification register (ID - offset 0xFFC)		(PREAC2FSCOEF0) and 0x108
		bit description		(PREAC2FSCOEF1)) bit description 409
Table				Pre-Emphasis Filter Coefficient for 4 FS register
		380		(PREAC4FSCOEF[0:1], offset 0x00C

(PREAC4FSCOEF0) and 0x10C	offset [0x020:0x04C]) bit description 441
(PREAC4FSCOEF1)) bit description 410	Table 434. ADC Compare Low Threshold register 0
Decimator Gain Shift register (GAINSHFT[0:1],	(THR0_LOW, offset 0x50) bit description 443
offset 0x010 (GAINSHFT0) and 0x110	Table 435. ADC Compare Low Threshold register 1
(GAINSHFT1)) bit description 411	(THR1_LOW, offset 0x54) bit description 443
FIFO Control register (FIFOCTRL[0:1], offset	Table 436: Compare High Threshold register0 (THR0_HIGH,
0x080 (FIFOCTRL0) and 0x180 (FIFOCTRL1)) bit	offset 0x58) bit description 444
description	Table 437: Compare High Threshold register 1
FIFO Status register (FIFOSTAT[0:1], offset	(THR1_HIGH, offset 0x5C) bit description 444
0x084 (FIFOSTAT0) and 0x184 (FIFOSTAT1)) bit	Table 438: ADC Channel Threshold Select register
description	(CHAN_THRSEL, offset 0x60) bit description 445
FIFO Data register (FIFODATA[0:1], offset 0x088	Table 439: ADC Interrupt Enable register (INTEN,
(FIFODATA0) and 0x188 (FIFODATA1)) bit	offset 0x64) bit description 446
description	Table 440: ADC Flags register (FLAGS, offset 0x68) bit
PDM Source Configuration register	description
(PDMSRCCFG[0:1], offset 0x08C	Table 441: ADC Startup register (STARTUP, offset 0x6C) bit
(PDMSRCCFG0) to 0x18C (PDMSRCCFG1)) bit	description
description	Table 442: ADC Calibration register (CALIB, offset 0x70) bit
DC Control register (DCCTRL[0:1], offset 0x090	description
(DCCTRL0) and 0x190 (DCCTRL1)) bit	Table 443. ADC0 hardware trigger inputs455
description	Table 444. Minimum required sample times
Channel Enable register (CHANEN, offset 0xF00)	Table 445. Register overview: CRC engine (base address
bit description	0x4009 5000)
I/O Configuration register (IOCFG, offset 0xF0C)	Table 446. CRC mode register (MODE, offset 0x000) bit
bit description	description
Use 2FS register (USE2FS, offset 0xF10) bit	Table 447. CRC seed register (SEED, offset 0x004) bit
description	description
HWVAD input gain register (HWVADGAIN, offset	Table 448. CRC checksum register (SUM, offset 0x008) bit
0xF80) bit description	description
HWVAD filter control register (HWVADHPFS,	Table 449. CRC data register (WR_DATA, offset 0x008) bit
offset 0xF84) bit description	description
HWVAD control register (HWVADST10, offset	Table 450. Register overview: Mailbox (base address
0xF88) bit description	0x4008 B000)
HWVAD filter reset register (HWVADRSTT, offset	Table 451. M0+ interrupt register (IRQ0, offset 0x000) bit
0xF8C) bit description	description
HWVAD noise estimator gain register	Table 452. M0+ interrupt set register (IRQ0SET, offset
(HWVADTHGN, offset 0xF90) bit description .415 HWVAD signal estimator gain register	0x004) bit description465 Table 453. M0+ interrupt clear register (IRQ0CLR, offset
(HWVADTHGS, offset 0xF94) bit description .416	0x008) bit description465
HWVAD noise envelope estimator register	Table 454. M4 interrupt (IRQ1, offset 0x010) bit description.
(HWVADLOWZ, offset 0xF98) bit description.416	466
Table 1 Base clock sources for DMIC interface	Table 455. M4 interrupt set register (IRQ1SET, offset 0x014)
peripheral	bit description466
DMIC input and output clock rates	Table 456. M4 interrupt clear register (IRQ1CLR, offset
ADC common supply and reference pins 427	0x018) bit description466
ADC0 pin description	Table 457. Mutual Exclusion register (MUTEX, offset 0x0F8)
Suggested ADC input pin settings	bit description466
Register overview: ADC (base address	Table 458. Serial Wire Debug pin description
0x400A 0000)	Table 459. JTAG boundary scan pin description 468
ADC Control register (CTRL, offset 0x0) bit	Table 460. Register overview: ISP-AP (base address
description	0x4009 C000)
Input Select register (INSEL, offset 0x04) bit	Table 461. Command and Status Word register (CSW, offset
description433	0x000) bit description
ADC Sequence A Global Data register	Table 462. Request value register (REQUEST, offset 0x004)
(SEQA_GDAT, offset 0x10) bit description439	bit description
ADC Sequence B Global Data register	Table 463. Return value register (RETURN, offset 0x008) bit
(SEQB_GDAT, offset 0x14) bit description440	description
ADC Data registers (DAT[0:11],	Table 464. Identification register (ID, offset 0x0FC) bit
· · · · · · · · · · · · · · · · · · ·	÷ , , , , , , , , , , , , , , , , , , ,

	description	Table 515. Response packet 504
	ISP-AP commands	Table 516. Command packet
	Register overview: ISP-AP return codes 472	Table 517. Command packet
	Power API calls	Table 517. Command packet
	Chip_POWER_SetPLL routine	Table 519. Command packet
	Error codes	Table 520. Response packet
	Chip_POWER_SetVoltage routine	Table 521. Command packet
	Error codes	Table 522. Command packet
	Chip_POWER_EnterPowerMode routine 475	Table 523. Response packet (success) 506
	Chip_POWER_SetLowPowerVoltage routine 476	Table 524. Response packet (error) 507
	Chip_POWER_SetFROHFRate routine477	Table 525. Command packet 507
	LPC5411x flash configurations	Table 526. Response packet (success) 507
	Flash sectors and pages	Table 527. Response packet (error)
	Code Read Protection (CRP) options 480	Table 528. Command packet 507
	USART ISP command summary	Table 529. Response packet (success) 508
	ISP commands allowed for different CRP levels .	Table 530. Response packet (error) 508
	483	Table 531. Command packet 508
	USART ISP Unlock command	Table 532. Response packet (success) 508
	USART ISP Set Baud Rate command484	Table 533. Response packet (error) 508
	USART ISP Echo command	Table 534. Command packet 509
	USART ISP Write to RAM command485	Table 535. Response packet (success) 509
	USART ISP Read Memory command 485	Table 536. Response packet (error) 509
	USART ISP Prepare sectors for write operation	Table 537. Command packet 509
	command	Table 538. Response packet (success) 509
	USART ISP Copy command	Table 539. Response packet (error) 510
	USART ISP Go command	Table 540. Command packet510
Table 488.	USART ISP Erase sector command 488	Table 541. Response packet (success) 510
	USART ISP Erase page command 488	Table 542. Response packet (error) 510
	USART ISP Blank check sector command488	Table 543. Command packet 511
Table 491.	USART ISP Read Part Identification command	Table 544. Response packet (success) 511
	489	Table 545. Response packet (error) 511
	LPCA5411x device identification numbers489	Table 546. Command packet 511
	USART ISP Read Boot Code version number	Table 547. Response packet (success) 512
	command	Table 548. Response packet (error) 512
	USART ISP Compare command	Table 549. USART ISP Error codes 512
	USART ReadUID command	Table 550WORD_BYTE class structure 519
	USART ISP Read CRC checksum command 490	Table 551BM_T class structure 519
	USART ISP Read flash signature command .491	Table 552.
	USART ISP Error codes	_CDC_ABSTRACT_CONTROL_MANAGEMENT
	IAP Command Summary	_DESCRIPTOR class structure
	IAP Prepare sector(s) for write operation	Table 553CDC_CALL_MANAGEMENT_DESCRIPTOR
	command	class structure
	IAP Erase Sector(s) command	Table 554CDC_HEADER_DESCRIPTOR class structure 520
	IAP Blank check sector(s) command	Table 555CDC_LINE_CODING class structure 520
	IAP Read Part Identification command 497	Table 556CDC_UNION_1SLAVE_DESCRIPTOR class
	IAP Read Boot Code version number command.	structure
	498	Table 557CDC_UNION_DESCRIPTOR class structure
	IAP Compare command498	520
	Reinvoke ISP498	Table 558DFU_STATUS class structure520
	IAP ReadUID command	Table 559HID_DESCRIPTOR class structure 521
	IAP Erase page command	Table 560.
	IAP Read Signature command	_HID_DESCRIPTOR::_HID_DESCRIPTOR_LIS
	IAP Status codes Summary	T class structure521
	ISP commands allowed for different CRP levels .	Table 561HID_REPORT_T class structure521
	503	Table 562MSC_CBW class structure
	USART ISP command summary 504	Table 563MSC_CSW class structure
	Command packet504	Table 564REQUEST_TYPE class structure 522

# **Chapter 36: Supplementary information**

Table 565USB_COMMON_DESCRIPTOR class stru	cture
522 Table 566USB_CORE_DESCS_T class structure	523
Table 567USB_DEVICE_QUALIFIER_DESCRIPTOR	
class structure	
Table 568USB_DFU_FUNC_DESCRIPTOR class	
structure	.524
Table 569USB_INTERFACE_DESCRIPTOR class	
structure	
Table 570USB_OTHER_SPEED_CONFIGURATION	
class structure	
Table 571USB_SETUP_PACKET class structure	.525
Table 572USB_STRING_DESCRIPTOR class struct	ure .
526	
Table 573WB_T class structure	
Table 574. USBD_API class structure	
Table 575. USBD_API_INIT_PARAM class structure	
Table 576. USBD_CDC_API class structure	.528
Table 577. USBD_CDC_INIT_PARAM class structure . Table 578. USBD_CORE_API class structure	
Table 579. USBD_CORE_API class structure	
Table 579. USBD_DFU_API class structure	
Table 581. USBD_HID_API class structure	
Table 582. USBD_HID_INIT_PARAM class structure	
Table 583. USBD_HW_API class structure	
Table 584. USBD_MSC_API class structure	
Table 585. USBD_MSC_INIT_PARAM class structure .	
Table 586. Register overview: FMC (base address 0x40	
4000)	
Table 587. Flash Module Signature Start register	
(FMSSTART, offset 0x020) bit description	.559
Table 588. Flash Module Signature Stop register	
(FMSSTOP, offset 0x024) bit description	
Table 589. FMSW0 register bit description (FMSW0, of	
0x02C)	
Table 590. FMSW1 register bit description (FMSW1, of	
0x030)	
Table 591. FMSW2 register bit description (FMSW2, of	
0x034)	
Table 592. FMSW3 register bit description (FMSW3, of	
0x038)	.560
Table 593. Signature status register (FMSTAT, offset	EGG
0x0FE0) bit description	
offset 0x0FE8) bit description	
Table 595. Abbreviations	
Table 666. Apple viations	.004

## **Chapter 36: Supplementary information**

# 36.5 Figures

Fig 1.	Block diagram7	-	USB block diagram 269
Fig 2.	Main memory map		USB software interface
Fig 3.	APB memory map	Fig 49.	Endpoint command/status list (see also <u>Table 302</u> )
Fig 4.	Clock generation		281
Fig 5.	Simplified block diagram of the flash accelerator.75	•	Flowchart of control endpoint 0 - OUT direction 284
Fig 6.	PLL block diagram showing typical operation 76		Flowchart of control endpoint 0 - IN direction 285
Fig 7.	PLL block diagram showing spread spectrum and		Flexcomm Interface block diagram 290
	fractional divide operation		USART block diagram
Fig 8.	Frequency measure block diagram		Hardware flow control using RTS and CTS 317
Fig 9.	Simplified boot flow, figure 1		SPI block diagram323
Fig 10.	, ,		Basic SPI operating modes339
Fig 11.	Simplified boot flow, figure 3	-	Pre_delay and Post_delay340
	Pin configuration	•	Frame_delay
	Pin interrupt multiplexing		Transfer_delay342
	DMA trigger multiplexing		Examples of data stalls
Fig 15.	Pin interrupt connections		I <sup>2</sup> C block diagram
	Pattern match engine connections135		I <sup>2</sup> S block diagram
	Pattern match bit slice with detect logic136		Classic I <sup>2</sup> S mode397
Fig 18.	Pattern match engine examples: sticky edge detect	Fig 64.	DSP mode with 50% WS
	153	Fig 65.	DSP mode with 1 SCK pulsed WS 397
Fig 19.	Pattern match engine examples: Windowed	Fig 66.	DSP mode with 1 slot pulsed WS 397
	non-sticky edge detect evaluates as true153	Fig 67.	TDM in classic I <sup>2</sup> S mode398
Fig 20.	Pattern match engine examples: Windowed	Fig 68.	TDM and DSP modes with 50% WS 398
	non-sticky edge detect evaluates as false 154	Fig 69.	TDM and DSP modes with 1 SCK pulsed WS . 398
Fig 21.	DMA block diagram	Fig 70.	TDM and DSP modes with 1 slot pulsed WS 398
Fig 22.	Interleaved transfer in a single buffer 165		I <sup>2</sup> S mode, mono
	SCT clocking	Fig 72.	DSP mode, mono
-	SCT connections		TDM and DSP modes, mono, with WS pulsed for
-	SCTimer/PWM block diagram 187	Ū	one SCK time
	SCTimer/PWM counter and select logic 187	Fig 74.	Data at the start of a frame, shown with both SCK
	SCT event configuration and selection registers191	ŭ	and WS polarities
	Match logic212	Fig 75.	DMIC subsystem pin multiplexing 405
-	Capture logic	-	Typical connection to two independent microphones
	Event selection	ŭ	406
	Output slice i	Fig 77.	Typical connection to two microphones sharing a
	SCT interrupt generation	ŭ	data line
	SCT configuration example	Fig 78.	Typical connection to a stereo microphone406
-	32-bit counter/timer block diagram		Bypass mode with an external device taking over
	A timer cycle in which PR=2, MRx=6, and both	Ü	microphone access
3	interrupt and reset on match are enabled 234	Fig 80.	DMIC subsystem block diagram 407
Fia 36.	A timer cycle in which PR=2, MRx=6, and both		Pre-emphasis filter quantized response at 96 kHz.
3	interrupt and stop on match are enabled 234	3 -	410
Fia 37.	Sample PWM waveforms with a PWM cycle length	Fia 82.	HWVAD block diagram 417
J	of 100 (selected by MR3) and MAT3:0 enabled as		Use of ST10 and RSTT controls (in the
	PWM outputs by the PWCON register 235		HWVADST10 and HWVADRSTT registers) 417
Fia 38.	WWDT timing	Fia 84.	Complete HWVAD setup418
	Windowed Watchdog timer block diagram 238		DMIC channel block diagram 420
	Early watchdog feed with windowed mode enabled		DMIC interface clock domains 420
9 .0.	244	•	Principle structure of the PDM to PCM conversion.
Fig 41	Correct watchdog feed with windowed mode	1 19 07 .	422
g	enabled244	Fig 88	DMIC FIFO and DMA
Fig 42	Watchdog warning interrupt	-	ADC clocking
-	RTC clocking		ADC block diagram
	MRT block diagram		CRC block diagram
	System tick timer block diagram		Connecting the SWD pins to a standard SWD
	Micro-Tick Timer block diagram	1 19 02.	connector
y +0.	more non minor brook diagram200		403

## **Chapter 36: Supplementary information**

Fig 93.	Serial Wire Debug internal connections 46
Fig 94.	IAP parameter passing49
Fig 95.	Typical host system and LPC5411x transaction 50
Fig 96.	USB driver routines pointer structure51

## **Chapter 36: Supplementary information**

## 36.6 Contents

Chapt	er 1: LPC5411x Introductory information			
1.1	Introduction 3	1.4	Architectural overview	. 8
1.2	Features	1.5	ARM Cortex-M4 processor	. 8
1.3	Block diagram 7	1.6	ARM Cortex-M0+ processor (present on selected LPC5411x devices)	. 8
Chapt	er 2: LPC5411x Memory map			
2.1	General description9	2.1.1.3	Bit-band addressing	10
2.1.1	Main SRAM 9	2.1.2	Memory mapping	
2.1.1.1	SRAMX 9	2.1.3	AHB multilayer matrix	
2.1.1.2	SRAM usage notes 9	2.1.4	Memory Protection Unit (MPU)	12
Chapt	er 3: LPC5411x Nested Vectored Interrupt	Contro	ller (NVIC)	
3.1	How to read this chapter	3.4.9	Interrupt Active Bit Register 0	
3.2	Features	3.4.10	Interrupt Active Bit Register 1	
3.3	General description	3.4.11	Interrupt Priority Register 0	
3.3.1	Interrupt sources	3.4.12	Interrupt Priority Register 1	
3.4	Register description	3.4.13	Interrupt Priority Register 2	
3.4.1	Interrupt Set-Enable Register 0 register 16	3.4.14 3.4.15	Interrupt Priority Register 3	
3.4.2	Interrupt Set-Enable Register 1 register 17	3.4.15	Interrupt Priority Register 4	
3.4.3	Interrupt Clear-Enable Register 0 17	3.4.17	Interrupt Priority Register 6	
3.4.4	Interrupt Clear-Enable Register 1 register 17	3.4.18	Interrupt Priority Register 7	
3.4.5	Interrupt Set-Pending Register 0 register 17	3.4.19	Interrupt Priority Register 8	
3.4.6	Interrupt Set-Pending Register 1 register 18	3.4.20	Interrupt Priority Register 9	
3.4.7	Interrupt Clear-Pending Register 0 register 18	3.4.21	Software Trigger Interrupt Register	
3.4.8	Interrupt Clear-Pending Register 1 register 18			
Chapt	er 4: LPC5411x System configuration (SY	SCON)		
4.1	Features	4.5.15	System reset status register	
4.2	Basic configuration 24	4.5.16	AHB Clock Control register 0	
4.2.1	Set up the PLL 24	4.5.17	AHB Clock Control register 1	
4.2.2	Configure the main clock and system clock 24	4.5.18	AHB Clock Control Set register 0	
4.2.3	Measure the frequency of a clock signal 25	4.5.19 4.5.20	AHB Clock Control Set register 1AHB Clock Control Clear register 0	
4.3	Pin description	4.5.21	AHB Clock Control Clear register 1	
4.4	General description 26	4.5.22	Main clock source select register A	
4.4.1	Clock generation	4.5.23	Main clock source select register B	
4.5	Register description 28	4.5.24	CLKOUT clock source select register A	
4.5.1	AHB matrix priority register	4.5.25	System PLL clock source select register	
4.5.2	System tick counter calibration register 31	4.5.26	ADC clock source select register	
4.5.3	NMI source selection register	4.5.27	USB clock source select register	43
4.5.4	Asynchronous APB Control register 32	4.5.28	Flexcomm Interface clock source select	
4.5.5	POR captured value of port 0		registers	
4.5.6	POR captured value of port 1	4.5.29	MCLK clock source select register	
4.5.7	Reset captured value of port 0	4.5.30	FRG clock source select register	
4.5.8	Reset captured value of port 1	4.5.31	DMIC clock source select register	
4.5.9	Peripheral reset control register 0	4.5.32	SYSTICK clock divider register	
4.5.10	Peripheral reset control register 1	4.5.33	Trace clock divider register	
4.5.11	Peripheral reset control set register 0 35	4.5.34	AHB clock divider register	
4.5.12 4.5.13	Peripheral reset control set register 1 35 Peripheral reset control clear register 0 35	4.5.35 4.5.36	CLKOUT clock divider registerADC clock source divider register	
4.5.13	Peripheral reset control clear register 1 36	4.5.37	USB clock divider register	
	. Suprioral reset serial of cloud register 1	1.0.01	COD GOOK GIVING TOGISTOT	+0

## **Chapter 36: Supplementary information**

4.5.38	Fractional baud rate generator register	47	4.5.65.4	Coprocessor Status register	
4.5.39	Digital microphone interface clock divider		4.5.66	Auto Clock-Gate Override Register	
	register		4.5.67	JTAG ID code register	
4.5.40	MCLK clock divider register		4.5.68	Device ID0 register	
4.5.41	Flash configuration register		4.5.69	Device ID1 register	
4.5.42	USB clock control register	50	4.5.70	Asynchronous peripheral reset control register	71
4.5.43	USB clock status register	50	4.5.71	Asynchronous peripheral reset control set	
4.5.44	Frequency measure function control register.	51		register	71
4.5.45	MCLK input/output control register	51	4.5.72	Asynchronous peripheral reset control clear	
4.5.46	FRO Control register			register	71
	Notes on using USBCLKADJ		4.5.73	Asynchronous APB clock control register	72
4.5.47	Watchdog oscillator control register	53	4.5.74	Asynchronous APB clock control set register	72
4.5.48	RTC oscillator control register		4.5.75	Asynchronous APB clock control clear register	72
4.5.49	PLL registers	55	4.5.76	Asynchronous clock source select register A	72
4.5.49.1	System PLL control register	55	4.5.77	BOD control register	73
4.5.49.2	System PLL status register	56	4.6 F	Functional description	74
4.5.49.3	System PLL N-divider register		4.6.1	Reset	
4.5.49.4	System PLL P-divider register	57	4.6.2	Start-up behavior	
4.5.49.5	Spread spectrum control with PLL0	57	4.6.3	Brown-out detection	74
4.5.49.5	1 System PLL spread spectrum control		4.6.4	Flash accelerator functional description	
	register 0	58	4.6.4.1	Flash memory bank	
4.5.49.5	2 System PLL spread spectrum control		4.6.4.2	Flash programming constraints	
	register 1	59	4.6.5	PLL functional description	
4.5.50	Sleep configuration register 0		4.6.5.1	PLL Features	
4.5.51	Sleep configuration register 1	60	4.6.5.2	PLL description	
4.5.52	Power configuration register 0	61	4.6.5.2.1	Lock detector	
	Flash power configuration	.62		Power-down	
4.5.53	Power configuration register 1	62	4.6.5.3	PLL operating modes	
4.5.54	Power configuration set register 0	63	4.6.5.3.1	Normal modes	
4.5.55	Power configuration set register 1	63		Normal mode with optional pre-divide	
4.5.56	Power configuration clear register 0	63		Normal mode with post-divide and optional	. •
4.5.57	Power configuration clear register 1	63		pre-divide	79
4.5.58	Start enable register 0		4.6.5.3.2	Fractional divider mode	
4.5.59	Start enable register 1			Spread Spectrum mode	
4.5.60	Start enable set register 0			PLL power-down mode	
4.5.61	Start enable set register 1	66	4.6.5.4	PLL related registers	
4.5.62	Start enable clear register 0	66	4.6.5.5	PLL usage	
4.5.63	Start enable clear register 1			Procedure for determining PLL settings	
4.5.64	Hardware Wake-up control register	67		PLL setup sequence	
4.5.65	Dual-CPU related registers		4.6.6	Frequency measure function	
4.5.65.1	CPU Control register		4.6.6.1	•	
4.5.65.2	Coprocessor Boot register			,	
4.5.65.3	Coprocessor Stack register	69			
Chapte	er 5: LPC5411x Power management				
5.1	Introduction	86	5.3.4.1	Power configuration in deep-sleep mode	91
	General description		5.3.4.2	Programming deep-sleep mode	
5.2.1	Wake-up process		5.3.4.3	Wake-up from deep-sleep mode	
	Functional description		5.3.5	Deep power-down mode	91
	<del>-</del>		5.3.5.1	Power configuration in deep power-down	
5.3.1	Power management			• • • • • • • • • • • • • • • • • • • •	92
5.3.2	Active mode		5.3.5.2	Wake-up from deep power-down mode:	92
5.3.2.1	Power configuration in Active mode		5.3.5.3	Programming deep power-down mode	
5.3.3	Sleep mode			using the RTC for wake-up:	92
5.3.3.1	Power configuration in sleep mode		5.3.5.4	Wake-up from deep power-down mode	
5.3.3.2 5.3.3.3	Programming sleep mode			using the RTC:	92
5.3.3.3 5.3.4	Wake-up from sleep mode				
J.J.4	Deep-sleep mode	90			

## **Chapter 36: Supplementary information**

Chapter	<b>6</b> : l	LPC54112	( Boot	process
---------	--------------	----------	--------	---------

6.1 6.2 6.3 6.4 6.5 6.5.1 6.5.2 6.5.2.1 6.5.2.2 6.5.3 6.5.4	Pin description.  General description.  Boot process  Image boot support.  Legacy images Enhanced images. Single Enhanced (SE) images Dual Enhanced (DE) images When to use legacy, single enhanced or dual enhanced images. Default operations when image boot fails.  er 7: LPC5411x I/O pin configuration	93 94 95 97 97 97 97 97	6.5.5 6.5.6 6.5.7 6.5.7.1 6.5.7.2	Enhanced image boot failures
опарі	er 7. Er Co411X I/O pill collingulation	COOCI	111)	
7.1 7.2 7.3 7.4 7.4.1 7.4.2	How to read this chapter.  Features  Basic configuration  General description  Pin configuration  IOCON registers  Multiple connections	103 103 104 104 104	7.5.1	Analog/digital mode       105         Input filter       106         Output slew rate       106         I <sup>2</sup> C modes       106         Open-Drain Mode       106         Register description       107         Type D IOCON registers (PIO0)       108
7.4.2.1 7.4.2.2 7.4.2.3 7.4.2.4	Pin function. Pin mode Hysteresis. Invert pin.	105 105 105	7.5.2 7.5.3 7.5.4	Type I IOCON registers (PIO0)
Chapt	er 8: LPC5411x Input multiplexing (IN	NPUT N	MUX)	
8.1 8.2 8.3 8.4 8.5 8.5.1 8.5.2 8.6	How to read this chapter.  Features  Basic configuration.  Pin description.  General description.  Pin interrupt input multiplexing.  DMA trigger input multiplexing.  Register description.	117 117 117 117 118 118	8.6.1 8.6.2 8.6.3 8.6.4 8.6.5	Pin interrupt select registers
Chapt	er 9: LPC5411x General Purpose I/O	(GPIO	)	
9.1 9.2 9.3 9.4 9.5 9.5.1 9.5.2 9.5.3 9.5.4 9.5.5 9.5.6 9.5.7 9.5.8 9.5.9	How to read this chapter.  Basic configuration.  Features  General description.  Register description.  GPIO port byte pin registers. GPIO port word pin registers. GPIO port direction registers. GPIO port mask registers. GPIO port pin registers. GPIO port pin registers. GPIO masked port pin registers. GPIO port set registers. GPIO port clear registers. GPIO port toggle registers.	124 124 125 126 126 126 126 127 127 127 128	9.5.10 9.5.11 9.5.12 <b>9.6</b> 9.6.1 9.6.2 9.6.3 9.6.4 9.6.5	GPIO port direction set registers       128         GPIO port direction clear registers       128         GPIO port direction toggle registers       128         Functional description       130         Reading pin state       130         GPIO output       130         Masked I/O       131         GPIO direction       131         Recommended practices       131

#### **Chapter 36: Supplementary information**

# Chapter 10: LPC5411x Pin interrupt and pattern match (PINT)

10.1	How to read this chapter		10.6.5	Pin interrupt active level or falling edge interrupt enable register	140
10.2 10.3	Features  Basic configuration		10.6.6	Pin interrupt active level or falling edge	1-0
10.3.1	Configure pins as pin interrupts or as	100	4007	. 5	140
	inputs to the pattern match engine	133	10.6.7	Pin interrupt active level or falling edge interrupt clear register	141
10.4	Pin description		10.6.8	. •	141
10.5	General description	134	10.6.9		141
10.5.1	Pin interrupts		10.6.10		142
10.5.2	Pattern match engine		10.6.11	1 0	142
10.5.2.1			10.6.12	Pattern Match Interrupt Bit-Slice Source	4.40
10.6	Register description		10 6 12	•	143
10.6.1	Pin interrupt mode register	139	10.6.13	Pattern Match Interrupt Bit Slice Configuration register	145
10.6.2	Pin interrupt level or rising edge interrupt enable register	139	10.7	Functional description	
10.6.3	Pin interrupt level or rising edge interrupt	133	10.7.1	Pin interrupts	
10.0.0	set register	139	10.7.1	· · · · · · · · · · · · · · · · · · ·	151
10.6.4	Pin interrupt level or rising edge interrupt		10.7.3	Pattern match engine edge detect examples	
	clear register	140		3 3	
Chapt	er 11: LPC5411x Group GPIO input ir	nterrup	t (GIN	Γ0/1)	
11.1	Features	155	11.4.1	Grouped interrupt control register	157
11.2	Basic configuration	155	11.4.2	GPIO grouped interrupt port polarity registers	
11.3	General description			157	
11.4	Register description		11.4.3	GPIO grouped interrupt port enable registers	
	g		11.5	Functional description	158
Chapt	er 12: LPC5411x DMA controller				
12.1	How to read this chapter	159		DMA in deep-sleep mode	167
	Features	159	12.6	Register description	168
12.1		159	12.6.1	Register description	<b>168</b> 171
12.1 12.2	Features	159 159	12.6.1 12.6.2	Register description	<b>168</b> 171 171
12.1 12.2 12.3	Features	159 159 160	12.6.1 12.6.2 12.6.3	Register description	168 171 171 171
12.1 12.2 12.3 12.4	Features	159 159 160 160	12.6.1 12.6.2 12.6.3 12.6.4	Register description	168 171 171 171 172
12.1 12.2 12.3 12.4 12.5 12.5.1 12.5.1.1	Features	159 159 160 160 160 161	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5	Register description	168 171 171 171 172 172
12.1 12.2 12.3 12.4 12.5 12.5.1 12.5.1.1	Features Basic configuration Pin description General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode.	159 159 160 160 160 161 162	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6	Register description	168 171 171 171 172 172 173
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.1	Features Basic configuration Pin description General description  DMA requests and triggers  DMA requests 1 DMA with I2C monitor mode. Hardware triggers	159 159 160 160 160 161 162 162	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5	Register description	168 171 171 171 172 172 173 173
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3	Features Basic configuration Pin description General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode. Hardware triggers Trigger operation detail	159 159 160 160 160 161 162 162 163	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7	Register description	168 171 171 171 172 172 173 173
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4	Basic configuration Pin description  General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode Hardware triggers  Trigger operation detail Trigger output detail	159 159 160 160 160 161 162 162 163 163	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10	Register description	168 171 171 172 172 173 173 173 174 174
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4 12.5.2	Basic configuration Pin description  General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode Hardware triggers  Trigger operation detail Trigger output detail  DMA Modes	159 159 160 160 161 162 162 163 163 163	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11	Register description	168 171 171 172 172 173 173 173 174 174 174
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4 12.5.2 12.5.3	Basic configuration Pin description  General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode.  Hardware triggers  Trigger operation detail  Trigger output detail  DMA Modes  Single buffer	159 159 160 160 161 162 162 163 163 163 164	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable Clear register Interrupt Enable Clear register Interrupt A register Interrupt B register Interrupt B register	168 171 171 172 172 173 173 173 174 174 174
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4 12.5.2	Basic configuration Pin description  General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode Hardware triggers  Trigger operation detail Trigger output detail  DMA Modes	159 160 160 160 161 162 162 163 163 163 164 164	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable Clear register Interrupt Enable Clear register Interrupt A register Interrupt B register Set Valid register Set Valid register	168 171 171 172 172 173 173 173 174 174 174 175 175
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.3	Basic configuration Pin description General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode Hardware triggers  Trigger operation detail Trigger output detail DMA Modes Single buffer Ping-Pong	159 160 160 160 161 162 162 163 163 163 164 164 165	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register Interrupt Bregister Interrupt B register Set Valid register Set Trigger register	168 171 171 172 172 173 173 174 174 174 175 175
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.4 12.5.5	Basic configuration Pin description  General description  DMA requests and triggers  DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong Interleaved transfers Linked transfers (linked list) Address alignment for data transfers	159 160 160 160 161 162 162 163 163 163 164 164 165 166	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register Interrupt B register Interrupt B register Set Valid register Set Trigger register Abort register	168 171 171 172 172 173 173 174 174 175 175 175
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.3 12.5.4 12.5.5 12.5.6 12.5.7 12.5.7	Basic configuration Pin description  General description  DMA requests and triggers  DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong Interleaved transfers Linked transfers (linked list) Address alignment for data transfers Channel chaining	159 160 160 160 161 162 162 163 163 163 164 164 165 166	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15 12.6.16	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register. Interrupt B register Interrupt B register Set Valid register Set Trigger register Abort register Channel configuration registers	168 171 171 172 172 173 173 174 174 175 175 176 177
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.3 12.5.4 12.5.5 12.5.6 12.5.7	Basic configuration Pin description  General description  DMA requests and triggers  DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong Interleaved transfers Linked transfers (linked list) Address alignment for data transfers Channel chaining DMA in reduced power modes	159 160 160 160 161 162 162 163 163 163 164 164 165 166 166 166	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register Interrupt Brable Clear register Interrupt A register Interrupt B register Set Valid register Set Trigger register Abort register Channel configuration registers Channel control and status registers	168 171 171 172 172 173 173 174 174 175 175 175
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.4 12.5.5 12.5.6 12.5.7 12.5.8 12.5.9	Basic configuration Pin description  General description  DMA requests and triggers  DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong. Interleaved transfers Linked transfers (linked list) Address alignment for data transfers Channel chaining  DMA in reduced power modes  DMA in sleep mode	159 160 160 160 161 162 163 163 163 164 164 165 166 166 166 167	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15 12.6.16 12.6.17	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register Interrupt Bregister Interrupt A register Interrupt B register Set Valid register Set Trigger register Abort register Channel configuration registers Channel control and status registers	168 171 171 172 172 173 173 173 174 174 175 175 176 177
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.4 12.5.5 12.5.6 12.5.7 12.5.8 12.5.9	Basic configuration Pin description  General description  DMA requests and triggers  DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong Interleaved transfers Linked transfers (linked list) Address alignment for data transfers Channel chaining  DMA in reduced power modes  DMA in sleep mode  er 13: LPC5411x SCTimer/PWM (SCT	159 160 160 160 161 162 162 163 163 164 164 165 166 166 166 167	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15 12.6.16 12.6.17 12.6.18	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register Interrupt B register Interrupt B register Set Valid register Set Trigger register Abort register Channel configuration registers Channel transfer configuration registers	168 171 171 172 172 173 173 174 174 175 175 176 177 179 180
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.2 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.4 12.5.5 12.5.6 12.5.7 12.5.8 12.5.9	Basic configuration Pin description  General description  DMA requests and triggers  DMA requests  1 DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong. Interleaved transfers Linked transfers (linked list) Address alignment for data transfers Channel chaining  DMA in reduced power modes DMA in sleep mode  Part 13: LPC5411x SCTimer/PWM (SCT	159 160 160 160 161 162 162 163 163 163 164 164 165 166 166 167 .167	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15 12.6.16 12.6.17 12.6.18	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register. Interrupt B register Interrupt B register Set Valid register Set Trigger register Abort register Channel configuration registers Channel transfer configuration registers Channel transfer configuration registers Channel transfer configuration registers	168 171 171 172 172 173 173 173 174 174 175 175 176 177 179 180
12.1 12.2 12.3 12.4 12.5 12.5.1.1 12.5.1.1 12.5.1.3 12.5.1.4 12.5.2 12.5.3 12.5.4 12.5.5 12.5.6 12.5.7 12.5.8 12.5.9	Basic configuration Pin description  General description  DMA requests and triggers  DMA with I2C monitor mode. Hardware triggers  Trigger operation detail. Trigger output detail  DMA Modes Single buffer Ping-Pong Interleaved transfers Linked transfers (linked list) Address alignment for data transfers Channel chaining  DMA in reduced power modes  DMA in sleep mode  er 13: LPC5411x SCTimer/PWM (SCT	159 160 160 160 161 162 162 163 163 163 164 165 166 166 166 167 167	12.6.1 12.6.2 12.6.3 12.6.4 12.6.5 12.6.6 12.6.7 12.6.8 12.6.9 12.6.10 12.6.11 12.6.12 12.6.13 12.6.14 12.6.15 12.6.16 12.6.17 12.6.18	Register description  Control register Interrupt Status register SRAM Base address register. Enable read and Set registers Enable Clear register Active status register Busy status register Error Interrupt register Interrupt Enable read and Set register Interrupt Enable Clear register. Interrupt B register Interrupt B register Set Valid register Set Trigger register Abort register Channel configuration registers Channel transfer configuration registers Channel transfer configuration registers Channel transfer configuration registers	168 171 171 172 172 173 173 173 174 174 175 175 176 177 179 180

## **Chapter 36: Supplementary information**

13.6.1 13.6.1.1	Register functional grouping  Counter configuration and control registers.		13.6.20	SCT match registers 0 to 9 (REGMODEn bit = 0)	206
13.6.1.2			12 6 21	SCT capture registers 0 to 9	200
	č č		13.6.21	. •	200
13.6.1.3	1 3	192	40.0.00	(REGMODEn bit = 1)	206
13.6.1.4	<u> </u>	400	13.6.22	SCT match reload registers 0 to 9	
	operations	192		(REGMODEn bit = 0)	207
13.6.1.5	5 5		13.6.23	SCT capture control registers 0 to 9	
	the outputs	193		(REGMODEn bit = 1)	
13.6.1.6			13.6.24	SCT event enable registers 0 to 9	
	counter value	193	13.6.25	SCT event control registers 0 to 9	
13.6.1.7	Event select register for initiating DMA		13.6.26	SCT output set registers 0 to 7	
	transfers		13.6.27	SCT output clear registers 0 to 7	210
13.6.1.8	1 5 5	193	13.7 F	Functional description	212
13.6.1.9	0 1		13.7.1	Match logic	212
	outputs by software		13.7.2	Capture logic	212
13.6.2	SCT configuration register		13.7.3	Event selection	
13.6.3	SCT control register		13.7.4	Output generation	
13.6.4	SCT limit event select register	197	13.7.5	State logic	
13.6.5	SCT halt event select register	198	13.7.6	Interrupt generation	
13.6.6	SCT stop event select register	198	13.7.7	Clearing the prescaler	
13.6.7	SCT start event select register	199	13.7.8	Match vs. I/O events	
13.6.8	SCT counter register	199	13.7.9	SCT operation	
13.6.9	SCT state register	200	13.7.10	Configure the SCT	
13.6.10	SCT input register	200		Configure the counter	
13.6.11	SCT match/capture mode register	201		Configure the match and capture registers .	
13.6.12	SCT output register	202		Configure events and event responses	
13.6.13	SCT bi-directional output control register	202		Configure multiple states	
13.6.14	SCT conflict resolution register	203		Miscellaneous options	
13.6.15	SCT DMA request 0 and 1 registers	204	13.7.11	Run the SCT	
13.6.16	SCT event interrupt enable register	205	13.7.12	Configure the SCT without using states	
13.6.17	SCT event flag register	205	13.7.13	SCT PWM Example	
13.6.18	SCT conflict interrupt enable register	205	10.7.10	COTT VIII ZXampio	
13.6.19	SCT conflict flag register	205			
Chapte	er 14: LPC5411x Standard counter/ti	mers (0	CTIMER	0 - 4)	
14.1	How to read this chapter	221	14.7.3	Timer Counter registers	226
14.2	Basic configuration	221	14.7.4	Prescale register	227
14.3	Features		14.7.5	Prescale Counter register	227
			14.7.6	Match Control Register	
14.4	Applications		14.7.7	Match Registers	
14.5	General description	222	14.7.8	Capture Control Register	
14.5.1	Capture inputs	222	14.7.9	· · · · · · · · · · · · · · · · · · ·	229
14.5.2	Match outputs	222	14.7.10		229
14.5.3	Applications	222	14.7.11	<del>-</del>	231
14.5.4	Architecture	222	14.7.12		232
14.6	Pin description	224	14.8 F	Functional description	234
14.6.1	Multiple CAP and MAT pins		14.8.1	Rules for single edge controlled PWM outputs	
14.7	Register description		17.0.1	234	·
14.7.1			14.8.2		235
14.7.1	Interrupt Register		14.0.2	DIVIA Operation	233
	er 15: LPC5411x Windowed Watchdo		r (WWF	OT)	
-			•	•	00=
	How to read this chapter			•	237
15.2	Features	236	15.5.1	3	238
15.3	Basic configuration	237	15.5.2	<u> </u>	239
15.4	Pin description		15.5.3	9	239
			15.5.3.1	Disabling the WWDT clock source	239

## **Chapter 36: Supplementary information**

15.5.3.2 <b>15.6</b> 15.6.1 15.6.2 15.6.3	Changing the WWDT reload value	<b>240</b> 240 242	15.6.4 15.6.5 15.6.6 <b>15.7</b>	Watchdog Timer Value register	
Chapte	er 16: LPC5411x Real-Time Clock (R	TC)			
16.1	How to read this chapter	245	16.4.3	RTC power	247
16.2	Features	245	16.5	Pin description	247
16.3	Basic configuration	245	16.6	Register description	248
16.3.1	RTC timers	246	16.6.1	RTC CTRL register	248
16.4	General description	247	16.6.2	RTC match register	
16.4.1	Real-time clock	247	16.6.3	RTC counter register	
16.4.2	High-resolution/wake-up timer	247	16.6.4	RTC high-resolution/wake-up register	250
Chapte	er 17: LPC5411x Multi-Rate Timer (M	RT)			
17.1	How to read this chapter	251	17.6	Register description	254
17.2	Features	251	17.6.1	Time interval register	
17.3	Basic configuration	251	17.6.2	Timer register	
17.4	Pin description	251	17.6.3	Control register	
17.5	General description	251	17.6.4 17.6.5	Status register Module Configuration register	
17.5.1	Repeat interrupt mode		17.6.6	Idle channel register	
17.5.2	One-shot interrupt mode		17.6.7	Global interrupt flag register	
17.5.3	One-shot stall mode	253		, 5 5	
Chapte	er 18: LPC5411x CPU system tick tin	ner (SY	STICK	)	
18.1	How to read this chapter		18.5.3	System Timer Current value register	
18.2	Basic configuration		18.5.4	System Timer Calibration value register	
18.3	Features	259	18.6	Functional description	
18.4	General description	259	18.7	Example timer calculations	
18.5	Register description	261		System clock = 72 MHz	
18.5.1	System Timer Control and status register			System tick timer clock = 24 MHz	
18.5.2	System Timer Reload value register	261		System clock = 12 MHz	. 203
Chapte	er 19: LPC5411x Micro-tick Timer (U	TICK)			
	How to read this chapter	264			266
_	Features	-	19.6.1	CTRL register	
19.3	Basic configuration		19.6.2 19.6.3	Status register Capture configuration register	
19.4	General description	265	19.6.4	Capture clear register	
19.5	Pin description	265	19.6.5	Capture registers	
Chapte	er 20: LPC5411x USB 2.0 device con	troller			
20.1	How to read this chapter	268	20.4.6	Frame toggle output	271
20.2	Basic configuration	268	20.4.7	Clocking	271
20.3	Features	268	20.5	Pin description	272
20.4	General description		20.6	Register description	273
20.4.1	USB software interface		20.6.1	USB Device Command/Status register	273
20.4.2	Fixed endpoint configuration		20.6.2	USB Info register	275
20.4.3	SoftConnect		20.6.3	USB EP Command/Status List start address	
20.4.4	Interrupts		20.6.4	USB Data buffer start address	276
20.4.5	Suspend and resume	271	20.6.5	USB Link Power Management register	277

## **Chapter 36: Supplementary information**

20.6.6 20.6.7 20.6.8 20.6.9 20.6.10 20.6.11 20.6.12 <b>20.7</b> 20.7.1 20.7.2 20.7.3	USB Endpoint skip	277 278 278 279 280 280 <b>281</b> 281 284 285	20.7.4 20.7.5 20.7.5.1 20.7.5.2 20.7.5.3 20.7.5.4 20.7.6 20.7.6.1	Use of the Active bit	286 286 286 286 287 287 tivity
					004
21.1	How to read this chapter		21.5.4	DMA	
21.2	Introduction		21.5.5		291
21.3	Features			•	291
21.4	Basic configuration	289		3	292
21.5	Architecture	290	21.7.1	Peripheral Select and Flexcomm Interface	000
21.5.1	Function Summary		21.7.2	0	292 293
21.5.2	Choosing a peripheral function		21.7.2	Peripheral identification register	293
21.5.3	FIFO usage	290			
Chapt	er 22: LPC5411x USARTs				
22.1	How to read this chapter	20/	22.6.12	FIFO trigger level settings register	311
22.2	Features		22.6.13	FIFO interrupt enable set and read	
22.2			22.6.14		312
22.3.1	Basic configuration	294	22.6.15	•	312
22.3.1	Configure the Flexcomm Interface clock and USART baud rate	205	22.6.16		313
22.3.2	Configure the USART for wake-up		22.6.17	FIFO read data register	313
22.3.2.1	- · · · · · · · · · · · · · · · · · · ·		22.6.18		313
22.3.2.2		296	22.6.19	G	314
22.4	Pin description	297		Functional description	
22.5	General description		22.7.1		315
22.6	Register description		22.7.2	3	315
22.6.1	USART Configuration register		22.7.2.1 22.7.2.2	Fractional Rate Generator (FRG)	
22.6.2	USART Control register		22.7.2.2	Baud Rate Generator (BRG)	
22.6.3	USART Status register		22.7.3	DMA	
22.6.4	USART Interrupt Enable read and set		22.7.4	Synchronous mode	
	register	305	22.7.5		316
22.6.5	USART Interrupt Enable Clear register	306	22.7.5.1		316
22.6.6	USART Baud Rate Generator register	306	22.7.5.2		317
22.6.7	USART Interrupt Status register	307	22.7.6		317
22.6.8	Oversample selection register	308	22.7.7	• •	317
22.6.9 22.6.10	Address register	308	22.7.8	. •	318
22.6.10	FIFO configuration register		22.7.9 22.7.10	•	318 318
Chant	er 23: LPC5411x Serial Peripheral In	erface	-		0.0
	•		. ,	Dia de estados	000
23.1 23.2	How to read this chapter			•	322 323
23.3	Basic configuration	320		-	324
23.3.1	Configure the SPI for wake-up	321	23.6.1		325
23.3.1.1			23.6.2		326
23.3.1.2			23.6.3		327

## **Chapter 36: Supplementary information**

23.6.4	SPI Interrupt Enable read and Set register .	328	23.7	Functional description	338
23.6.5	SPI Interrupt Enable Clear register	328	23.7.1	AHB bus access	338
23.6.6	SPI Divider register	328	23.7.2	Operating modes: clock and phase selection	338
23.6.7	SPI Interrupt Status register	329	23.7.3	Frame delays	340
23.6.8	FIFO Configuration register		23.7.3.1	Pre_delay and Post_delay	340
23.6.9	FIFO status register		23.7.3.2	Frame_delay	341
23.6.10	FIFO trigger settings register	332	23.7.3.3	Transfer_delay	342
23.6.11	FIFO interrupt enable set and read	333	23.7.4	Clocking and data rates	343
23.6.12	FIFO interrupt enable clear and read	333	23.7.4.1	Data rate calculations	343
23.6.13	FIFO interrupt status register	334	23.7.5	Slave select	343
23.6.14	FIFO write data register		23.7.6	DMA operation	344
23.6.15	FIFO read data register		23.7.6.1	DMA master mode End-Of-Transfer	344
23.6.16	FIFO data read with no FIFO pop		23.7.7	Data lengths greater than 16 bits	345
23.6.17	Module identification register	337	23.7.8	Data stalls	345
	er 24: LPC5411x I <sup>2</sup> C-bus interfaces		20.7.0	Data state	010
		247	04.0.44	Clave Control register	207
24.1	How to read this chapter		24.6.11	Slave Control register	
24.2	Features	347	24.6.12	Slave Data register	
24.3	Pin description	347	24.6.13	Slave Address 0 register	368
24.4	Basic configuration	348	24.6.14	Slave Address 1, 2, and 3 registers	369
24.4.1	I <sup>2</sup> C transmit/receive in master mode		24.6.15	Slave address Qualifier 0 register	369
24.4.1.1			24.6.16	Monitor data register	
24.4.1.2			24.6.17	<b>G</b>	
24.4.2	_	351		Functional description	
24.4.2.1			24.7.1	AHB bus access	
24.4.2.2			24.7.2	Bus rates and timing considerations	
24.4.3	Configure the I <sup>2</sup> C for wake-up		24.7.2.1	Rate calculations	
24.4.3.1				Master timing	372
24.4.3.2	·			Slave timing	
24.5	General description		24.7.2.2	Bus rate support	
	-			1 High-speed mode support	
24.6	Register description			2 Clock stretching	
24.6.1	I2C Configuration register		24.7.3	Time-out	374
24.6.2	I2C Status register	357	24.7.4	Ten-bit addressing	374
24.6.3	Interrupt Enable Set and read register	361	24.7.5	Clocking and power considerations	
24.6.4	Interrupt Enable Clear register	362	24.7.6	Interrupt handling	
24.6.5	Time-out value register		24.7.7	DMA	
24.6.6	Clock Divider register		24.7.7.1	DMA as a Master transmitter	
24.6.7	Interrupt Status register		24.7.7.2	DMA as a Master receiver	376
24.6.8	Master Control register		24.7.7.3	DMA as a Slave transmitter	376
24.6.9	Master Time register		24.7.7.4	DMA as a Slave receiver	376
24.6.10	Master Data register	366	24.7.8	Automatic operation	377
Chapt	er 25: LPC5411x I <sup>2</sup> S interface				
25.1	How to read this chapter		25.7.6	FIFO status register	390
25.2	Basic configuration	378	25.7.7	FIFO interpret and black and and described in the second and the s	391
25.3	Features	379	25.7.8	FIFO interrupt enable set and read	392
25.4	Architecture	380	25.7.9	FIFO interrupt enable clear and read	392
25.5	Terminology		25.7.10	FIFO interrupt status register	393
			25.7.11	FIFO write data register	393
25.6	Pin description		25.7.12	FIFO write data for upper data bits	393
25.7	Register description	382	25.7.13	FIFO read data for up and data hits	394
25.7.1	Configuration register 1	383	25.7.14	FIFO read data for upper data bits	394
25.7.2	Configuration register 2	386	25.7.15	FIFO data read with no FIFO pop	394
25.7.3	Status register	387	25.7.16	FIFO data read for upper data bits with no	204
25.7.4	Clock Divider register	387	25 7 4 7	FIFO pop	394
25.7.5	FIFO Configuration register	388	25.7.17	Module identification register	395

## **Chapter 36: Supplementary information**

25.8 25.8.1 25.8.2 25.8.2.1 25.8.2.2 25.8.2.3 25.8.3	Formats and modes	396 396 396 397	25.8.3.1 25.8.3.2 25.8.4 25.8.5 25.8.6	Rate support Rate calculations  Example 1  Example 2  FIFO buffer configurations and usage  DMA  Clocking and power considerations	400 . 400 . 401 401 402
Chapt	er 26: LPC5411x DMIC subsystem				
<b>26.1 26.2 26.3 26.4 26.5 26.6</b> 26.6.1 26.6.2 26.6.3 26.6.4 26.6.5 26.6.6 26.6.7 26.6.8 26.6.9 26.6.10 26.6.11 26.6.12	Pre-Emphasis Filter Coefficient for 2 FS register Pre-Emphasis Filter Coefficient for 4 FS register Decimator Gain Shift register FIFO Control register FIFO Status register FIFO Data register PDM Source Configuration register DC Control register Channel Enable register I/O Configuration register	403 405 407 408 409 409 409 410 410 411 411 412 412 412 413 413	26.7.1. 26.7.1.1 26.7.1.2 26.7.1.2.1 26.7.1.2.2 26.7.1.2.3	HWVAD filter control register  HWVAD control register  HWVAD filter reset register  HWVAD noise estimator gain register  HWVAD signal estimator gain register  HWVAD noise envelope estimator register  HWVAD noise envelope estimator register  Functional description  HWVAD  Basic operations  Extended operation  Input gain setting  Filter result gain setting  Noise floor evaluation  DMIC  Clocking and DMIC data rates  PDM to PCM conversion  FIFO and DMA operation  PCM data output on I2S interface  Usage of the DMIC interface in power save modes	415 415 415 416 <b>417</b> 417 418 419 419 419 420 421 422
26.6.13 26.6.14 <b>Chant</b>	Use 2 FS register	414	~1		
27.1	How to read this chapter		27.6.15	ADC Startup register	450
27.2	Features		27.6.16	ADC Calibration register	
27.3	Basic configuration	425	27.7 F	unctional description	
27.4	Pin description	427	27.7.1	Conversion Sequences	
27.5	General description	429	27.7.2	Hardware-triggered conversion	
27.6	Register description		27.7.2.1	Avoiding spurious hardware triggers	
27.6.1	ADC Control register		27.7.3 27.7.4	Software-triggered conversion	
27.6.2	Input Select register		27.7.4.1	Interrupts	
27.6.3	ADC Conversion Sequence A Control register	r		interrupts	452
27.6.4	ADC Conversion Sequence B Control register		27.7.4.2 27.7.4.3 27.7.5	Threshold-Compare Out-of-Range Interrupt Data Overrun Interrupt Optional Operating Modes	453 453 453
27.6.5	ADC Global Data register A	439	27.7.6	Offset calibration and enabling the ADC	454
27.6.6	ADC Global Data register B	440	27.7.7	ADC vs. digital receiver	454
27.6.7	9	441	27.7.8	DMA control	
27.6.8		443	27.7.9	ADC hardware trigger inputs	
27.6.9	1 3	443	27.7.10	Sample time	
27.6.10	1 3	444	27.8 E	xamples	
27.6.11	ADC Compare High Threshold register 1		27.8.1	Perform a single ADC conversion	•
27.6.12	ADC Channel Threshold Select register			triggered by software	457
27.6.13	ADC Flags register			•	
27.6.14	ADC Flags register	<del>++</del> 0			

## **Chapter 36: Supplementary information**

27.8.2	Perform a sequence of conversions triggered by an external pin	458			
Chapt	er 28: LPC5411x CRC engine				
28.1	How to read this chapter	459	28.6.4	CRC data register	462
28.2	Features	459	28.7 F	Functional description	462
28.3	Basic configuration	459	28.7.1	•	
28.4	Pin description	459		A write followed by another write:	
28.5	General description	460	00.7.0	A write followed by a read:	
28.6	Register description	461	28.7.2	Setup	
28.6.1	CRC mode register			CRC-16 set-up	
28.6.2	CRC seed register	461		CRC-32 set-up.	
28.6.3	CRC checksum register	461			
Chapt	er 29: LPC5411x Mailbox				
29.1	How to read this chapter	464	29.6.1	1 3	
29.2	Features	464	29.6.2	Cortex M0+ interrupt set register	
29.3	Basic configuration	464	29.6.3	M0+ interrupt clear register	
29.4	Pin description	464	29.6.4 29.6.5	M4 interrupt register	466 466
29.5	General description	464	29.6.6	M4 interrupt clear register	
29.6	Register description	465	29.6.7	Mutual Exclusion register	
Chapt	er 30: LPC5411x Serial Wire Debug (	SWD)			
30.1	How to read this chapter	467	30.6.4.2	Acknowledgement of resynchronization	
30.2	Features	467		request	470
30.3	Basic configuration	467		Return phase	470
30.4	Pin description		30.6.4.4	3	
30.5	General description	468	30.6.4.5	Register description	470 471
30.6	Functional description			2 Request value register	471
30.6.1	Debug limitations			3 Return value register	471
30.6.2	Debug connections for SWD			4 Identification register	
30.6.3	Boundary scan		30.6.4.6	ISP-AP commands	472
30.6.4	In-System Programming Access Port		30.6.4.7		
00 0 4 4	(ISP-AP)		30.7	Debug configuration	
30.6.4.1	Resynchronization request	470	30.7.1 30.7.2	Cortex-M4	
Chapt	er 31: LPC5411x Power profiles/Pow	er con	trol API		
31.1	How to read this chapter	473	31.4.4	Chip_POWER_SetLowPowerVoltage	476
31.2	Features	473	31.4.4.1	Param0: frequency	476
31.3	General description	473	31.4.5	Chip_POWER_SetFROHFRate	476
31.4	API description	473	31.4.5.1	Param0: frequency	477
31.4.1	Chip_POWER_SetPLL	474		Functional description	
31.4.1.1			31.5.1 31.5.1.1	Example low power mode control Enter sleep mode	
31.4.1.2	. = .		31.5.1.2	Enter deep-sleep mode and set up WWDT	4//
31.4.1.3 31.4.2	Error or return codes		JJ	and BOD for wake-up	477
31.4.2.1	Param0: frequency			·	
31.4.2.2					
31.4.3	Chip_POWER_EnterPowerMode				
31.4.3.1	Param0: mode	476			
31.4.3.2	Param1: peripheral	476			

UM10914

588 of 590

## **Chapter 36: Supplementary information**

# Chapter 32: LPC5411x Flash API

32.1	How to read this chapter		32.6.4 32.6.5		497 497
32.2	Features		32.6.6		497 498
32.3	General description		32.6.7	Compare <address1> <address2></address2></address1>	+30
32.3.1	Boot loader		32.0.1	•	498
32.3.2	Memory map after any reset		32.6.8		498
32.3.3	Flash content protection mechanism		32.6.9	ReadUID	
32.3.4	Criteria for Valid User Code		32.6.10	Erase page	
32.3.5	Flash partitions		32.6.11	Read Signature	
32.3.6	Code Read Protection (CRP)		32.6.12	IAP Status Codes	
32.3.6.1	ISP entry protection			2C and SPI ISP commands	
32.3.7	ISP interrupt and SRAM use				
32.3.7.1	Interrupts during IAP		32.7.1	Dual purpose of the ISP1/ISP1_IRQ pin !	501
32.3.7.2				Notes on ISP1 input to ISP1_IRQ output	-04
32.3.7.3	RAM used by IAP command handler	481	20.7.0	switching	
32.4	<b>USART ISP communication protocol</b>		32.7.2	Selection of I2C or SPI interface for ISP mode 501	
32.4.1	USART ISP initialization		32.7.3		502
32.4.2	USART ISP command format		32.7.4	I2C ISP mode transaction protocol	
32.4.3	USART ISP response format		32.7.5		502 502
32.4.4	USART ISP data format	482	32.7.6	I2C/SPI operations allowed for CRP systems	
32.5	USART ISP commands	483			J0J
32.5.1	Unlock	484		2C/SPI ISP mode commands, data, and	504
32.5.2	Set Baud Rate	484		•	
32.5.3	Echo	485	32.8.1 32.8.2	SH_CMD_GET_VERSION (0xA1) command (	
32.5.4	Write to RAM	485		,	504
32.5.5	Read Memory	485	32.8.3	= = ,	505
32.5.6	Prepare sectors for write operation	486	32.8.4	SH_CMD_CHECK_IMAGE (0xA4) command	
32.5.7	Copy RAM to flash	486	32.8.5	SH_CMD_PROBE (0xA5) command	
32.5.8	Go		32.8.6	SH_CMD_WRITE_BLOCK (0xA6) command (	
32.5.9	Erase sectors	488	32.8.7	SH_CMD_READ_BLOCK (0xA7) command {	507
32.5.10	Erase pages	488	32.8.8	SH_CMD_SECTOR_ERASE (0xA8)	-07
32.5.11	Blank check sectors	488	00.00		507
32.5.12	Read Part Identification number	489	32.8.9	,	508
32.5.13	Read Boot code version number	489	32.8.10	= = = , ,	508
32.5.14	Compare	489	32.8.11	(- )	509
32.5.15	ReadUID	490	32.8.12		510
32.5.16	Read CRC checksum	490	32.8.13	SH_CMD_WRITE_SUBBLOCK (0xAD)	-40
32.5.17	Read flash signature	490	20.044	command	510
32.5.18	UART ISP Error codes	492	32.8.14	SH_CMD_ READ_SUBBLOCK (0xAE)	E 1 1
32.6	IAP commands	494	20.045	command	
32.6.1			32.8.15 32.8.16	I2C/SPI ISP Error codes	
32.6.2	Copy RAM to flash		32.0.10	I2C/SPI ISP mode protocol software support	313
32.6.3	Erase Sector(s)				
Chapt	er 33: LPC5411x USB ROM API				
33.1	How to read this chapter	516	33.4.4	_CDC_CALL_MANAGEMENT_	
33.2	Features	516			519
33.3	General description	516	33.4.5		520
33.3.1	USB driver functions		33.4.6		520
33.3.2	Calling the USB device driver		33.4.7		520
33.4	USB API		33.4.8		520
	WORD_BYTE		33.4.9		520
33.4.1 33.4.2			33.4.10		521
33.4.2 33.4.3	_BM_T _CDC_ABSTRACT_CONTROL_	318	33.4.11	_HID_DESCRIPTOR::_HID_	
JJ.4.J		E10		DESCRIPTOR_LIST	521
	MANAGEMENT_DESCRIPTOR	บาฮ			

#### **Chapter 36: Supplementary information**

33.4.12 33.4.13 33.4.15 33.4.16 33.4.17 33.4.18 33.4.19 33.4.20 33.4.21 33.4.22 33.4.23 33.4.24	_HID_REPORT_T _MSC_CBW _MSC_CSW _REQUEST_TYPEUSB_COMMON_DESCRIPTOR _USB_CORE_DESCS_T _USB_DEVICE_QUALIFIER_DESCRIPTOR _USB_INTERFACE_DESCRIPTOR _USB_INTERFACE_DESCRIPTOR _USB_OTHER_SPEED_CONFIGURATION _USB_SETUP_PACKET _USB_STRING_DESCRIPTOR _WB_T	522 522 522 522 523 523 524 524 525 525 526	33.4.25 33.4.27 33.4.28 33.4.29 33.4.30 33.4.31 33.4.32 33.4.33 33.4.34 33.4.35 33.4.36	USBD_API_INIT_PARAM USBD_CDC_API USBD_CDC_INIT_PARAM USBD_CORE_API. USBD_DFU_API USBD_DFU_INIT_PARAM USBD_HID_API. USBD_HID_INIT_PARAM USBD_HW_API USBD_MSC_API	526 527 529 531 537 540 542 543 548 554
Chapte	er 34: LPC5411x Flash signature ger				
34.1 34.2 34.3 34.4 34.4.1 34.4.1.1 34.4.1.2 Chapte		<b>558 558 559</b> 559 559	34.4.2 34.4.3 34.4.4 <b>34.5</b> 34.5.1 34.5.1.1 34.5.1.2	Signature status register Signature status clear register Functional description Algorithm and procedure for signature generation Signature generation	560 560 <b>561</b> 561 561 561
<b>35.1</b> 35.1.1	ARM Cortex-M4 Details			ARM Cortex-M0+ Details (present on selected devices)  Cortex-M0+ implementation options	562
Chapti	er 36: Supplementary information				
<b>36.1 36.2 36.3</b> 36.3.1 36.3.2	Abbreviations  References  Legal information  Definitions  Disclaimers	<b>565</b> <b>566</b> 566	36.5	Trademarks	567 577

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

© NXP B.V. 2016.

All rights reserved.

For more information, please visit: http://www.nxp.com For sales office addresses, please send an email to: salesaddresses@nxp.com

Date of release: 30 June 2016 Document identifier: UM10914