# Arm® Functional Fixed Hardware Specification Platform Design Document

**Non-Confidential** 

Version 1.2

#### **BETA**

This is an engineering draft of the specification. It is meant to obtain feedback from Arm partners and internally within Arm and should not be implemented in its current form. It is subject to change based on this feedback.



# **Contents**

RELE	EASE	FORMATION	3
ARM	NON-	ONFIDENTIAL DOCUMENT LICENCE ("LICENCE")	4
1	<b>ABO</b> 1.1 1.2 1.3	T THIS DOCUMENT References Ferms and abbreviations Feedback I.3.1 Feedback on this manual Progressive terminology commitment	6 6 6 6 7
2	INTR	DUCTION	8
3	3.1 3.2 3.3	dle management and Low Power Idle states 3.1.1 FFH Usage in LPI state entry methods 3.1.2 FFH Usage in LPI residency and usage counter registers 3.1.3 Save and restore flags Performance management and Collaborative Processor Performance Control 3.2.1 FFH Usage in _CPC object to monitor processor performance Departion Regions 3.3.1 FFH usage in Operation Region Space for Secure Monitor Calls (SVC) and Hypero Calls (HVC)	9 9 9 10 10 12 12 13 visor
APPI	ENDIX A.1 A.2	PSCI STATE COMPOSITION FROM LPI STATES  Driginal StateID power_state parameter format: PSCI0.2 or above  Extended StateID power_state parameter format: PSCI 1.0 or above	<b>15</b> 16 19
APP	ENDIX SYST B.1 B.2		22 24 24 24
APPE	ENDIX C.1	FFH OPERATION REGIONS Example of FFH Operation Regions which trigger SMC or HVC calls	<b>27</b> 27

Copyright © 2015 - 2022 Arm Limited. All rights reserved.

# **Release Information**

The Change History table lists the changes made to this document.

**Table 0-1 Change history** 

Date	Issue	Confidentiality	Change		
17 April 2015 A Non-Confidential		Non-Confidential	First release.		
17 June 2020	В	Non-Confidential	Support for Processor Performance Monitoring through CPPC.		
June 2022 C No		Non-Confidential	<ul><li>Support for Operation Regions.</li><li>Fix typographical mistake in Table 8 header.</li></ul>		



# Arm Non-Confidential Document Licence ("Licence")

This Licence is a legal agreement between you and Arm Limited ("Arm") for the use of Arm's intellectual property (including, without limitation, any copyright) embodied in the document accompanying this Licence ("Document"). Arm licenses its intellectual property in the Document to you on condition that you agree to the terms of this Licence. By using or copying the Document you indicate that you agree to be bound by the terms of this Licence.

"Subsidiary" means any company the majority of whose voting shares is now or hereafter owner or controlled, directly or indirectly, by you. A company shall be a Subsidiary only for the period during which such control exists.

This Document is **NON-CONFIDENTIAL** and any use by you and your Subsidiaries ("Licensee") is subject to the terms of this Licence between you and Arm.

Subject to the terms and conditions of this Licence, Arm hereby grants to Licensee under the intellectual property in the Document owned or controlled by Arm, a non-exclusive, non-transferable, non-sub-licensable, royalty-free, worldwide licence to:

- (i) use and copy the Document for the purpose of designing and having designed products that comply with the Document;
- (ii) manufacture and have manufactured products which have been created under the licence granted in (i) above; and
- (iii) sell, supply and distribute products which have been created under the licence granted in (i) above.

Licensee hereby agrees that the licences granted above shall not extend to any portion or function of a product that is not itself compliant with part of the Document.

Except as expressly licensed above, Licensee acquires no right, title or interest in any Arm technology or any intellectual property embodied therein.

THE DOCUMENT IS PROVIDED "AS IS". ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. Arm may make changes to the Document at any time and without notice. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, third party patents, copyrights, trade secrets, or other rights.

NOTWITHSTANING ANYTHING TO THE CONTRARY CONTAINED IN THIS LICENCE, TO THE FULLEST EXTENT PETMITTED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, IN CONTRACT, TORT OR OTHERWISE, IN CONNECTION WITH THE SUBJECT MATTER OF THIS LICENCE (INCLUDING WITHOUT LIMITATION) (I) LICENSEE'S USE OF THE DOCUMENT; AND (II) THE IMPLEMENTATION OF THE DOCUMENT IN ANY PRODUCT CREATED BY LICENSEE UNDER THIS LICENCE). THE EXISTENCE OF MORE THAN ONE CLAIM OR SUIT WILL NOT ENLARGE OR EXTEND THE LIMIT. LICENSEE RELEASES ARM FROM ALL OBLIGATIONS, LIABILITY, CLAIMS OR DEMANDS IN EXCESS OF THIS LIMITATION.

This Licence shall remain in force until terminated by Licensee or by Arm. Without prejudice to any of its other rights, if Licensee is in breach of any of the terms and conditions of this Licence then Arm may terminate this Licence immediately upon giving written notice to Licensee. Licensee may terminate this Licence at any time. Upon termination of this Licence by Licensee or by Arm, Licensee shall stop using the Document and destroy all copies of the Document in its possession. Upon termination of this Licence, all terms shall survive except for the licence grants.

Any breach of this Licence by a Subsidiary shall entitle Arm to terminate this Licence as if you were the party in breach. Any termination of this Licence shall be effective in respect of all Subsidiaries. Any rights granted to any Subsidiary hereunder shall automatically terminate upon such Subsidiary ceasing to be a Subsidiary.

The Document consists solely of commercial items. Licensee shall be responsible for ensuring that any use, duplication or disclosure of the Document complies fully with any relevant export laws and regulations to assure that the Document or any portion thereof is not exported, directly or indirectly, in violation of such export laws.

This Licence may be translated into other languages for convenience, and Licensee agrees that if there is any conflict between the English version of this Licence and any translation, the terms of the English version of this Licence shall prevail.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. No licence, express, implied or otherwise, is granted to Licensee under this Licence, to use the Arm trade marks in connection with the Document or any products based thereon. Visit Arm's website at <a href="https://www.arm.com/company/policies/trademarks">https://www.arm.com/company/policies/trademarks</a> for more information about Arm's trademarks.

The validity, construction and performance of this Licence shall be governed by English Law.

Copyright © 2017 - 2022 Arm Limited (or its affiliates). All rights reserved.

Arm Limited. Company 02557590 registered in England. 110 Fulbourn Road, Cambridge, England CB1 9NJ.

Arm document reference: LES-PRE-21585 version 4.0

# 1 About this Document

This document provides the specification for Arm reserved uses of Functional Fixed Hardware for ACPI-based systems.

## 1.1 References

This document refers to the following documents.

Reference	<b>Document Number</b>	Title
[ACPI6.0]	ACPI 6.0	Advanced Configuration and Power Interface Specification version 6.0
[ACPI6.3]	ACPI 6.3	Advanced Configuration and Power Interface Specification version 6.3
[ACPI6.4]	ACPI 6.4	Advanced Configuration and Power Interface Specification version 6.4.
[Arm ARM]	DDI0487	Arm Architecture Reference Manual ARMv8, for ARMv8-A architecture profile. See <a href="https://developer.arm.com/documentation/ddi0487/latest">https://developer.arm.com/documentation/ddi0487/latest</a>
[ECR]		See https://bugzilla.tianocore.org/show_bug.cgi?id=3598.
[FF-A]	DEN0077	Arm Firmware Framework for Arm A-profile. See <a href="https://developer.arm.com/documentation/den0077/latest/">https://developer.arm.com/documentation/den0077/latest/</a>
[PSCI]	DEN0028	Power State Coordination Interface. See <a href="https://developer.arm.com/documentation/den0022/latest/">https://developer.arm.com/documentation/den0022/latest/</a>
[SMCCC]	DEN0028	Arm SMC Calling Convention. See <a href="https://developer.arm.com/documentation/den0028/latest/">https://developer.arm.com/documentation/den0028/latest/</a>

## 1.2 Terms and abbreviations

This document uses the following terms and abbreviations.

Term	Meaning
AMU	Activity Monitor Unit
CPC	Continuous Performance Control
CPPC	Collaborative Processor Performance Control
FFH	Functional Fixed Hardware. This refers to <i>software</i> (SW) operations that replace a <i>hardware</i> (HW) function.
LPI	Low Power Idle
MRS	Move to Arm register from System Register Instruction
OSPM	Operating System-directed configuration and Power Management

## 1.3 Feedback

Arm welcomes feedback on its documentation.

#### 1.3.1 Feedback on this manual

If you have comments on the content of this manual, send an e-mail to errata@arm.com. Give:

- The title.
- The document and version number, DEN0048C.
- The page numbers to which your comments apply.
- A concise explanation of your comments.

Arm also welcomes general suggestions for additions and improvements.

# 1.4 Progressive terminology commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used terms that can be offensive. Arm strives to lead the industry and create change.

We believe that this document contains no offensive terms. If you find offensive terms in this document, please contact terms@arm.com.

# 2 Introduction

This document provides a specification for *Functional Fixed Hardware* (FFH) in Arm-based systems that use the *Advanced Configuration and Power Interface* (ACPI) specification.

At the time of writing, the three use cases are:

- Idle Management and Low Power Idle (LPI) states. See [ACPI6.0].
- Performance Management and Collaborative Processor Performance Control (CPPC). See Section 8.4.7 of [ACPI 6.3]
- Operation Regions. See [ACPI6.4] and [ECR].



# 3 Use Cases

# 3.1 Idle management and Low Power Idle states

ACPI 6.0 [ACPI6.0] introduces *Low Power Idle* (LPI) states, which allow an operating system to manage the power states of the processor power domain hierarchy. This section describes how FFH is used in Arm-based systems to allow the operating system to discover:

- The entry method into a low power state.
- How to collect power state residency, and usage count statistics.

This section also defines the flags used in an LPI state object to describe the architectural context that is lost when the LPI state is entered.

### 3.1.1 FFH Usage in LPI state entry methods

ACPI ASL uses the Register keyword to define HW register addresses, or SW functions, when using FFH. The Register keyword has the following format:

**Register** (AddressSpaceKeyword, RegisterBitWidth, RegisterBitOffset, RegisterAddress, AccessSize, DescriptorName)

For further information, see section 19.6.108 of [ACPI6.0]. Registers are used to specify one of the following two entry methods into an LPI state:

- A Wait For Interrupt (WFI) instruction.
- A PSCI CPU\_SUSPEND call. In this case, the entry method provides a way of describing the power state parameter of the CPU SUSPEND call as specified by [PSCI].

When using FFH to describe LPI entry methods, the register field entries must be set as follows:

- AddressSpaceKeyword must be set to 0x7f. This denotes usage of the FFH address space.
- RegisterBitWidth must be set to 32.
- RegisterBitOffset must be set to 0.
- AccessSize must be set to 3 (Dword).
- WFIs states must be represented in the \_LPI objects of processors. In the WFI case, the RegisterAddress
  in the entry method of the LPI state has the following format:

Bits[63:32]	Bits[31:0]
0x0000000	0xFFFFFFF

• A PSCI power state parameter is represented in the RegisterAddress field as follows:

Bits[63:32]	Bits[31:0]
0v $0$ 00000000	PSCI power_state parameter for CPU_SUSPEND call. See section 5.4 of [PSCI] for more details.

- For LPI entry methods, all other possible encodings of RegisterAddress, RegisterBitWidth,
   RegisterBitOffset, and AccessSize where 0x7f is used for the AddressSpaceKeyword are reserved for
   future use.
- DescriptorName is optional. See section 19.6.108 of [ACPI6.0] for further details.

When the OS is working in OS Initiated mode, as defined by both [PSCI] and [ACPI6.0], the OS must regard cores using the WFI state as being in a running state, for the purposes of last man tracking. To enter OS Initiated mode, the OS must use the PSCI SET SUSPEND MODE call described in sections 5.1.19 and 5.20 of [PSCI].

Appendix A provides a description and examples of how PSCI power states are composed from LPI entry methods and \_LPI LevelID. The examples cover platform coordinated and OS Initiated systems.

## 3.1.2 FFH Usage in LPI residency and usage counter registers

PSCI1.0 introduces the PSCI\_STAT\_RESIDENCY and PSCI\_STAT\_COUNT functions. For systems that implement these functions, ASL Registers in the FFH space can be used for the residency and usage counter register fields of LPI states. This allows matching those registers to a PSCI call. In this case, the format of the Register provided is as follows:

- AddressSpaceKeyword must be 0x7f. This denotes usage of the FFH address space.
- RegisterBitWidth must be 32.
- RegisterBitOffset must be 0.
- AccessSize must be 3 (Dword).
- For both the residency and usage counter registers, the *RegisterAddress* field must have the following encoding:

Bits[63:32]	Bits[31:0]
0x0000000	PSCI power_state parameter for PSCI_STAT_* functions.  See section 5.21.1 of [PSCI].

- For residency and usage counter registers of LPI entries, all other possible encodings of *RegisterAddress*, *RegisterBitWidth*, *RegisterBitOffset*, and *AccessSize* where 0x7f is used for the *AddressSpaceKeyword* are reserved for future use.
- DescriptorName is optional and can be omitted. See section 19.6.108 of [ACPI6.0] for further details.

In the case of the residency counter register, this encoding instructs the processor driver of the OS to issue a PSCI\_STAT\_RESIDENCY call. The residency counter frequency of the LPI must be set to 1000000, to indicate that the count is in microseconds.

In the case of the usage counter register, this encoding instructs the processor driver of the OS to issue a PSCI STAT COUNT call.

Note: The OSPM must use the PSCI\_FEATURES API to ensure that PSCI\_STAT\_RESIDENCY and PSCI\_STAT\_COUNT are provided by the PSCI implementation. See PSCI for more details.

#### 3.1.3 Save and restore flags

LPI states provide an architectural context loss flags field that can be used to describe the context that might be lost when an LPI state is entered. For Arm-based systems, the flags have the following format:

**Table 2 Arm Architecture context loss flags** 

Flag	Bit offset	Bit length	Description	
Core context Lost	0x0	0x1	All core context is lost. This includes:  • General purpose registers.	
			<ul><li>Floating point and SIMD registers.</li><li>System registers, include the System register based</li></ul>	

			generic timer for the core.		
			Debug register in the core power domain.		
			PMU registers in the core power domain.		
			Trace register in the core power domain.		
Trace context loss	0x1 0x1 Trace registers outside of the core power domain are lost.		Trace registers outside of the core power domain are lost.		
GICR 0x2 0x1		0x1	GIC Redistributor logic.		
GICD 0x3 0x1 G		0x1	GIC Distributor logic.		
Reserved 0x4 0x1c		0x1c	Reserved must be zero.		



# 3.2 Performance management and Collaborative Processor Performance Control

ACPI uses collaborative processor performance control (CPPC) to define an abstracted and flexible mechanism for Operating System-directed configuration and Power Management (OSPM) to collaborate with an entity in the platform to manage the performance of a logical processor. In this scheme, the platform entity is responsible for creating and maintaining a performance definition that backs a continuous, abstract, unit-less performance scale. During runtime, OSPM requests desired performance on this abstract scale and the platform entity is responsible for translating the OSPM performance requests into actual hardware performance states. The control mechanisms are abstracted by the Continuous Performance Control (\_CPC) object method, which describes how to control and monitor processor performance in a generic manner.

This section describes how FFH is used in Arm-based systems to monitor the performance of a logical processor using the Activity Monitor Unit (AMU).

### 3.2.1 FFH Usage in \_CPC object to monitor processor performance

ACPI ASL uses the Register keyword to define HW register addresses, or SW functions, when using FFH. The Register keyword has the following format:

**Register** (AddressSpaceKeyword, RegisterBitWidth, RegisterBitOffset, RegisterAddress, AccessSize, DescriptorName)

For further information, see section 19.6.114 of [ACPI6.3].

Arm cores which implement the Activity Monitor Unit (AMU), can use ASL Registers in the FFH space to specify the following two fields of the CPC package to monitor the performance of a logical processor:

- DeliveredPerformanceCounterRegister
- ReferencePerformanceCounterRegister

ASL registers in the FFH space allow to map:

- a read from the *DeliveredPerformanceCounterRegister* to a corresponding read from the AMU event counter that counts cycles at core frequency (AMEVCNTR0\_EL0[0]).
- a read from the *ReferencePerformanceCounterRegister* to a corresponding read from the AMU event counter that counts cycles at constant frequency (AMEVCNTR0\_EL0[1]).

The AMU Event Counters can be read through a system register read using the MRS instruction. Details on AMU event counters can be found in the [Arm ARM].

When FFH is used to describe the *DeliveredPerformanceCounterRegister* and the *ReferencePerformanceCounterRegister* fields of the \_CPC package, the register field entries must be set as follows:

- AddressSpaceKeyword must be set to 0x7f. This denotes usage of the FFH address space.
- RegisterBitWidth must be set to 64.
- RegisterBitOffset must be set to 0.
- AccessSize must be set to 4 (Qword).
- RegisterAddress must be set to
  - o 0x0 for DeliveredPerformanceCounterRegister.
  - o 0x1 for ReferencePerformanceCounterRegister.
- DescriptorName is optional. See section 19.6.114 of [ACPI6.3] for further details.

All other possible encodings of *RegisterAddress*, *RegisterBitWidth*, *RegisterBitOffset*, and *AccessSize* where 0x7f is used for the *AddressSpaceKeyword* are reserved for future use.

Appendix B describes the fields of the \_CPC package that should be provided to monitor and control processor performance through CPPC for Arm-based systems.

#### 3.3 **Operation Regions**

ACPI Control Methods can read and write data to locations in address spaces by using the Field operator to declare a data element within an entity known as an "Operation Region". Control methods must have exclusive access to any address accessed via fields declared in Operation Regions. FFH can be used to describe an Operation Region space. For more details on Operation Regions, see [ACPI6.4] and [ECR].

This section describes how FFH can be used in Arm-based systems to describe Operation Region spaces and the expected behavior when reading or writing FFH Operation Region fields.

## 3.3.1 FFH usage in Operation Region Space for Secure Monitor Calls (SVC) and **Hypervisor Calls (HVC)**

FFH Operation Region space can be used to trigger SMC or HVC calls, using the Arm SMC Calling Convention (SMCCC). For more details see [SMCCC]. The choice of conduit (SMC or HVC) is implementation defined and outside the scope of the FFH Operation Region definition.

The syntax of the *OperationRegion* term is described below:

```
OperationRegion (
       RegionName,
                    //NameString
       RegionSpace, //RegionSpacekeyword
                      //Integer
       Offset.
       Length
                      //Integer
Where:
```

- - RegionName specifies a name for this Operation Region (for example, "AFFH").
  - RegionSpace must be set to 0x7F (FFixedHW). This denotes usage of the FFH address space.
  - Offset is used to identify the functionality offered by this FFH address space. It must be set to one of the following values:
    - 0x0 to indicate usage of 32-bit calling convention.
    - 0x1 to indicate usage of 64-bit calling convention.
    - All other values are reserved.
  - Length specifies the higher of either the number of argument bytes, or the number of result bytes, exchanged over the SMC/HVC call. It is used to interpret the number of registers to use for the call. The registers are listed sequentially, beginning from, and including, the Function Identifier (W0/R0). For example, when Length is 12, registers W0, W1, W2 are used in a SMC32 call.

Length must be set to one of the following values, where 'N' denotes the higher of either the number of argument registers or the number of result registers used for the call:

- If Offset is 0 (32 bit calling convention):
  - Length must be 4\*N, where  $1 \le N \le 8$ .
- If Offset is 1 (64 bit calling convention):
  - Length must be 8\*N, where  $1 \le N \le 18$ .
- All other values of Length are reserved.

FFH operation regions are only accessible via the Field term. The syntax of the Field term is described below:

```
Field (
       RegionName,
                      //NameString
       AccessType,
                      //AccessTypeKeyword
       LockRule.
                      //LockRuleKeyword
       UpdateRule
                      //UpdateRuleKeyword
) {FieldUnitList}
```

#### Where:

- RegionName specifies the operation region name previously defined for this FFH Operation Region.
- Accesstype must be set to BufferAcc. This denotes usage of the FFH address space.
- *LockRule* indicates if access to this Operation Region requires acquisition of the Global Lock for synchronization. This field must be set to NoLock, as required for HW-reduced ACPI platforms.
- *UpdateRule* is not applicable for FFH Operation Regions since each virtual register is accessed in its entirety.
- FieldUnitList comprises of a single element representing the entire Operation Region and the total data
  exchanged over the SMC or HVC call. Writing to this field element triggers the call.
  This means that each argument register cannot be broken down within the field definition. Access to
  argument registers can be done only outside of the field definition. This limitation is imposed both to
  simplify the interface and to maintain consistency with the model defined by the Arm SMC Calling
  Convention [SMCCC].

An example Operation Region and Field definition is shown below. Here we declare 5 argument registers used for a SMC32 call.

```
OperationRegion(AFFH, FFixedHW, 0, 20)

Field (AFFH, BufferAcc, NoLock, Preserve) { SMCC, 160 }
```

Appendix C describes detailed examples of FFH Operation Region Usage in various calling modes.

#### 3.3.1.1 Restrictions

The usage of FFH Operation Region space for SMC or HVC calls is subject to the following restrictions:

- All calls must be compliant with the Arm SMC Calling Convention.
- Function Identifiers from only the following ranges are allowed:
  - SMCCC SiP Service call range.
  - SMCCC OEM Service call range.
  - FF-A specific Function Identifiers. For more details see [FF-A].
- It is recommended to use Fast Service Calls to simplify the usage model. The call appears to be atomic from the perspective of the calling PE and returns when the requested operation has completed. If Yielding Service Calls are used, then it is the responsibility of the caller to safely resume the operation post pre-emption.

#### 3.3.1.2 Error handling

There might be circumstances where the SMC or HVC call cannot be triggered when the Operation Region field element is written to. Examples could be when the Function Identifier (R0/W0) of the SMC call is malformed, or when the restrictions specified in Section 3.3.1.1 are violated. In such cases, an appropriate negative integer return code from the Arm SMC Calling Convention [SMCCC] can be used to specify the error condition in:

- The first 32 bits (W0) of the Operation Region field element when 32-bit calling convention is used.
- The first 64 bits (X0) of the Operation Region field element when 64-bit calling convention is used.

# Appendix A PSCI state composition from LPI states

Section 8.4.4.3.4 of [ACPI6.0] describes how entry methods of local LPI states are composed to produce the final command that is issued to platform firmware to enter a composite power state. This appendix describes how this composition takes place in Arm systems that provide a PSCI implementation. In such systems, the composition results in the value of the <code>power\_state</code> parameter that is passed to a <code>CPU\_SUSPEND</code> call to enter the composite state.

Each LPI state provides an entry method field that is used to determine the PSCI power\_state parameter to be used with a CPU SUSPEND call. The parameter is composed through the following steps:

- 1. The OS extracts an initial base power\_state parameter from the lower 32 bits of the *RegisterAddress* field of the entry method of a processor LPI. For processors, entry methods must be a register that adheres to the definition provided in section see 3.1.1.
- 2. If the composite power state selected by an OS affects power levels above the processor, the OS must walk the LPI states defined in processor containers above the processor. For the LPI states in those containers, the entry method can be an integer or a register:
  - a. If the entry method is an integer value, then the base power\_state parameter obtained in step 1 must have this integer value added to it.
  - b. If the entry method defined is a register, then the lower 32 bits of the *RegisterAddress* field becomes the new base power state parameter

This process is repeated across the LPIs that form the target power state. For OS and PSCI firmware working in platform coordinated mode, the base <code>power\_state</code> parameter obtained in steps 1 and 2 forms the final <code>power\_state</code> parameter that is passed to a <code>CPU\_SUSPEND</code> call.

3. For OS and PSCI firmware working in OS Initiated mode, the OS must indicate the power level in which it observes that the calling processor is the last to go idle. To do so, the OS adds the value of the LevelID field of the \_LPI object [ACPI6.0], defined at the appropriate power level, to the base power\_state parameter, to form the final power state argument for the CPU SUSPEND call.

#### The steps are described in the following pseudocode:

```
If IdleMode == OS Initiated
      LastProc = ProcessorContainerWhereCallingIsLastToIdle()
      LastProcLPI = LastProc.LPI
      power state = power state+LastProcLPI.LevelID
doCPU SUSPEND (power state)
return
```

The following sections provide examples of how power states can be represented in systems using the original StateID power state parameter format, and the extended StateID power state parameter format. The first example applies to PSCI 0.2 or PSCI 1.0, while the second applies only to PSCI 1.0.

#### Original StateID power state parameter format: PSCI0.2 or above **A.1**

PSCI 0.2 supports only the original power state parameter format with a 16-bit StateID field. See [PSCI] for further details. Figure 1 shows an example system.

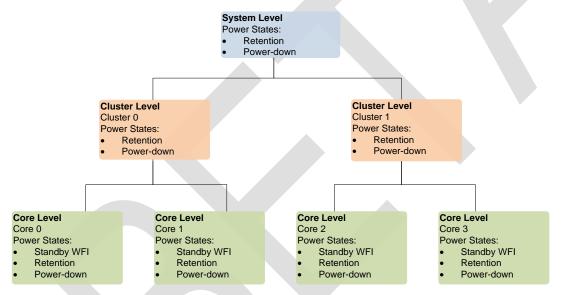


Figure 1 Example system

Figure 1 shows an example system composed of three power levels, core, cluster, and system. For each power level, the local power states are shown. Our example system PSCI supports the composite power states shown in Table 3.

Table 3 Supported power states in the example system and PSCI power state parameter encoding in original StateID format

Composite power			
Core local state	Cluster local state	System local state	PCI power_state parameter
Retention	Run	Run	0x00000001
Power-down	Run	Run	0x00010002
Retention	Retention	Run	0x01000011

Power-down	Retention	Run	0x01010012
Power-down	Power-down	Run	0x01010022
Retention	Retention	Retention	0x02000111
Power-down	Retention	Retention	0x02010112
Power-down	Power-down	Retention	0x02010122
Power-down	Power-down	Power-down	0x02010222

Note: Standby WFI is not listed as this state is entered via a WFI instruction and not via PSCI.

Table 3 shows the supported power states and their PSCI encoding. The example uses the following encoding:

- The power state StateID field, bits[15:0], is broken into sections that indicate the local power state of the core, cluster, and system. The possible values for each level are:
  - 0: The entity is in the Run state.
  - 1: The entity is in the Retention state.
  - 2: The entity is in is the Power-down state.

The bit fields of the StateID field are as follows:

- o Bits[1:0] indicate the local power state at the core level.
- Bits[5:4] indicate the local power state at the cluster level.
- o Bits[9:8] indicate the local power state at the system level.
- Bits[13:12] are used by an OS working in OS Initiated mode to indicate the level in which the calling core is the last man. The OS might write:
  - 0x0 if the core is not the last man at cluster or system level.
  - 0x1 if the core is the last man at cluster level.
  - 0x2 if the core is the last man in the system.
- o All other bits are set to zero.
- As indicated in [PSCI], the PowerLevel field, bits[25:24], of the power\_state parameter reflects the highest power level affected by the state.
- As indicated in [PSCI], the StateType bit, bit 16, of the power\_state parameter is set whenever the
  local state of the core is Power-down.

Table 4 shows how this PSCI encoding for power states can be represented in LPI entry methods.

**Table 4 LPI States** 

Core Level – LevelID 0						
State	Description	Entry Method	Entry method value	Enabled Parent State		
LPI1	Standby WFI	Register	RegisterAddress 0xffffffff	0 // Does not enable states in cluster or system levels.		
LPI2	Retention	Register	RegisterAddress 0x00000001	1 // Enables cluster retention.		
LPI3	Power-down	Register	RegisterAddress 0x00010002	2 // Enables cluster retention and power-down.		

Cluster Level – LevelID 0x1000				
LPI1	Retention	Integer	0x01000010	1 // Enables system retention.
LPI2	Power-down	Integer	0x01000020	2 // Enables system retention and power-down.
System Level – LevelID 0x2000				
LPI1	Retention	Integer	0x01000100	0 // N/A.
LPI2	Power-down	Integer	0x01000200	0 // N/A.

Table 5 demonstrates how the entry methods for the LPI states are combined to produce the correct PSCI power-state parameters.

Table 5 PSCI power\_state composition from LPI states

Composite power state			
Core local state	Cluster local state	System local state	PCI power_state parameter
LPI2: Retention	+ LPI0: Rûn	+ LPI0: Run	
0x00000001	+ 0	+ 0	= 0x00000001
LPI3: Power-down	+ LPI0: Run	+ LPI0: Run	
0x00010002	+0	+0	= 0x00010002
LPI2: Retention	+ LPI1: Retention	+ LPI0: Run	
0x00000001	+ 0x01000010	+ 0	= 0x01000011
LPI3: Power-down	+ LPI1: Retention	+ LPI0: Run	
0x00010002	+ 0x01000010	+ 0	= 0x01010012
LPI3: Power-down	+LPI2: Power-down	+ LPI0: Run	
0x00010002	+0x01000020	+ 0	= 0x01010022
LPI2: Retention	+ LPI1: Retention	+ LPI1: Retention	
0x00000001	+ 0x01000010	+0x01000100	= 0x02000111
LPI3: Power-down	+ LPI1: Retention	+ LPI1: Retention	
0x00010002	+ 0x01000010	+0x01000100	= 0x02010112
LPI3: Power-down	+LPI2: Power-down	+ LPI1: Retention	
0x00010002	+ 0x01000020	+0x01000100	= 0x02010122
LPI3: Power-down	+LPI2: Power-down	+LPI2: Power-down	
0x00010002	+0x01000020	+0x01000200	= 0x02010222

A system using OS Initiated mode adds the LevelID field value to the  $power\_state$  parameter obtained by combining the LPI state entry methods:

- If a core is not the last man in the cluster or system, no addition is required.
- If a core is the last man in the cluster, the LevelID value of 0x1000 must be added to the power\_state parameter.
- If a core is the last man in the system, the LevelID value of 0x2000 must be added to the power\_state parameter.

# A.2 Extended StateID power state parameter format: PSCI 1.0 or above

PSCI 1.0 introduces an optional new format for the power\_state parameter with an extended StateID field. This provides more flexibility to PSCI implementers on how to encode power states. Referring to the example system from Figure 1, Table 6 shows a possible PSCI 1.0 encoding using the extended ID format.

Table 6 Supported power states in the example system and PSCI power\_state parameter encoding in the extended StateID format

Composite power			
Core local state	Cluster local state	System local state	PCI power_state parameter
Retention	Run	Run	0x00000001
Power-down	Run	Run	0x40000002
Retention	Retention	Run	0x00000011
Power-down	Retention	Run	0x40000012
Power-down	Power-down	Run	0x40000022
Retention	Retention	Retention	0x00000111
Power-down	Retention	Retention	0x40000112
Power-down	Power-down	Retention	0x40000122
Power-down	Power-down	Power-down	0x40000222

Note: Standby WFI is not listed as this state is entered via a WFI instruction and not via PSCI.

Table 6 shows the supported power states and their PSCI encoding. The example uses the following encoding:

#### StateID:

- Bits[1:0] represent the power state of the core power level, where 0 represents the Run state, 1 the Retention state, and 2 the Power-down state.
- Bits[5:4] represent the power state of the cluster power level. 0 represents the Run state, 1 the Retention state, and 2 the Power-down state.
- Bits[9:8] represent the power state of the system power level. 0 represents the Run state, 1 the Retention state, and 2 the Power-down state.
- o Bits[25:24] are used by an OS working in OS Initiated mode to indicate the level in which the calling core is the last man. The OS might write:
  - 0x0 if the core is not the last man at cluster or system level.
  - 0x1 if the core is the last man at cluster level.
  - 0x2 if the core is the last man in the system.
- o All other bits are set to zero

• As indicated in [PSCI] the StateType bit, bit 30, of the power\_state parameter is set whenever the local state of the core is Power-down.

Table 7 shows how this PSCI encoding for power states can be represented in LPI entry methods.

**Table 7 LPI States** 

Core Level – LevelID 0					
State	Description	Entry Method	Entry method value	Enables Parent State	
LPI1	Standby WFI	Register	RegisterAddress 0xffffffff	0 // Does not enable states in cluster or system levels.	
LPI2	Retention	Register	RegisterAddress 0x00000001	1 // Enables cluster retention.	
LPI3	Power-down	Register	RegisterAddress 0x40000002	2 // Enables cluster retention and power-down.	
Cluster Level – LevelID 0x01000000					
LPI1	Retention	Integer	0x0000010	1 // Enables system retention.	
LPI2	Power-down	Integer	0x00000020	2 // Enables system retention and power-down.	
System Level – LevelID 0x02000000					
LPI1	Retention	Integer	0x00000100	0 // N/A.	
LPI2	Power-down	Integer	0x00000200	0 // N/A.	

Table 8 demonstrates how the entry methods for the LPI states are combined to produce the correct PSCI power-state parameters:

Table 8 PSCI power state composition from LPI states

Composite power star			
Core local state	Cluster local state	System local state	PSCI power_state parameter
LPI2: Retention	+ LPI0: Run	+ LPI0: Run	
0x0000001	+ 0	+ 0	= 0x00000001
LPI3: Power-down	+ LPI0: Run	+ LPI0: Run	
0x40000002	+0	+0	= 0x40000002
LPI2: Retention	+ LPI1: Retention	+ LPI0: Run	
0x00000001	+ 0x0000010	+ 0	= 0x00000011
LPI3: Power-down	+ LPI1: Retention	+ LPI0: Run	

0x40000002	+ 0x0000010	+ 0	= 0x40000012
LPI3: Power-down	+LPI2: Power-down	+ LPI0: Run	
0x40000002	+ 0x00000020	+ 0	= 0x40000022
LPI2: Retention	+ LPI1: Retention	+ LPI1: Retention	
0x00000001	+ 0x00000010	+ 0x00000100	= 0x00000111
LPI3: Power-down	+ LPI1: Retention	+ LPI1: Retention	
0x40000002	+ 0x00000010	+ 0x00000100	= 0x40000112
LPI3: Power-down	+LPI2: Power-down	+ LPI1: Retention	
0x40000002	+ 0x00000020	+ 0x00000100	= 0x40000122
LPI3: Power-down	+LPI2: Power-down	+LPI2: Power-down	
0x40000002	+ 0x00000020	+ 0x00000200	= 0x40000222

A system using OS Initiated mode also adds the value of the LevelID field to the <code>power\_state</code> parameter that is obtained by combining the LPI state entry methods:

- If a core is not the last man in the cluster or system, no addition is required.
- If a core is the last man in the cluster, the LevelID value of 0x01000000 must be added to the power state parameter.
- If a core is the last man in the system, the LevelID value of 0x02000000 must be added to the power\_state parameter.

# Appendix B Processor performance monitoring and control in heterogenous systems

To implement processor performance management through CPPC, the platform needs to specify the fields of the CPC package as outlined in Section B.1 and B.2.

# **B.1 Monitoring Processor Performance through CPPC**

To monitor processor performance through CPPC, the platform should specify the following fields of the \_CPC package:

- DeliveredPerformanceCounterRegister
- ReferencePerformanceCounterRegister
- ReferencePerformance
- PerformanceLimitedRegister This Register returns zero when read if the hardware does not support signaling performance limited events.

The platform must use the same performance scale for all processors in the system such that any two processors running the same workload at the same performance level will complete in approximately the same time. OSPM reads the set of performance counters from the Reference Performance Counter Register and the Delivered Performance Counter Register to determine the actual performance level delivered over time (refer Section 8.4.7.1.3.1 of [ACPIv6.3]). OSPM calculates the delivered performance over a given time period by taking a beginning and ending snapshot of both the reference and delivered performance counters, and calculating:

$$\begin{tabular}{lll} $\Delta delivered\ performance = reference\ performance & X \\ \hline $\Delta reference\ performance\ counter \\ \hline \end{tabular}$$

ReferencePerformance indicates the performance level at which the Reference Performance Counter accumulates. When the reference performance counter and the delivered performance counter are incrementing at the same rate, the processor is running at ReferencePerformance.

When *DeliveredPerformanceCounterRegister* and *ReferencePerformanceCounterRegister* are mapped to AMU event counters (refer Section 3.2.1), *ReferencePerformance* can be mathematically derived as follows:

 $ReferencePerformance = Rconst \times Ruarch \times k$ , where

- Rconst is the fixed rate at which the AMU event counter that counts cycles at constant frequency (AMEVCNTR0\_EL0[1]) accumulates. This is equal to the rate at which the system counter accumulates.
- Ruarch is a micro-architectural multiplier. It is a first-order approximation of the relative performance of the logical processor.
  - On platforms where performance characteristics of all the logical processors are identical at the same processor frequency, *Ruarch* is set to 1.
  - On platforms with heterogeneous processors, the performance characteristics of all logical processors are not always identical at the same processor frequency. Such heterogeneity can be the result of micro-architectural differences, like in Arm big.LITTLE systems. In this case, as mandated by Section 8.4.7 of [ACPIv6.3], the platform must synthesize a performance scale that adjusts for differences in processors, such that any two processors running the same workload at the same performance level will complete in approximately the same time. *Ruarch* is the multiplier that normalizes for differences in performance between logical processors running at identical processor frequency. It is a first order approximation. *Ruarch*

can be measured by running a representative benchmark on each logical processor. An example of *Ruarch* can be the DMIPS/MHz of the logical processor.

• *k* is the multiplier that normalizes *Rconst X Ruarch* to the performance scale synthesized by the platform. *k* should be the same across all logical processors in the system.

An example of a performance scale in a simplified big.LITTLE system is shown in Figure 2. In this example, the platform synthesizes a performance scale between 0 and 100. For simplicity we assume that the performance of the cores scale linearly with core frequency. The AMU event counter which counts cycles at constant frequency is running at 1000 MHz (=Rconst). The LITTLE cores can run at frequencies ranging between 250 MHz to 1250 MHz with Ruarch = 1. The big cores can run at frequencies ranging between 500 MHz to 2000 MHz with Ruarch = 2. Ruarch of 2 signifies that the performance of the big cores is 2x the performance of the LITTLE cores at the same core frequency. k is chosen to be 0.025 to synthesize a performance scale between 0 and 100. When k is 0.025, ReferencePerformance is 25 for the LITTLE core and 50 for the big core.

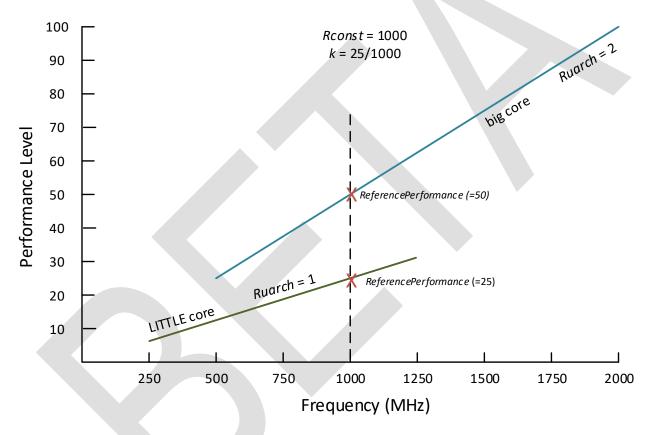


Figure 2: Example performance scale setup in a big.LITTLE system.

# **B.2 Controlling Processor Performance through CPPC**

To control processor performance through CPPC, the platform should report the performance capabilities/thresholds and performance controls as specified in the sections below.

## **B.2.1 Performance Capabilities/Thresholds**

Platforms should specify the following performance capabilities/threshold fields of the \_CPC package as a *Register* (refer Section 8.4.7.1.1 of [ACPIv6.3]):

- HighestPerformance
- NominalPerformance
- LowestNonlinearPerformance
- LowestPerformance

Platforms should also provide the following optional fields of the \_CPC package as a *Register* or *DWORD*, when they must work with Operating Systems which need to report CPU frequency, and there is no alternate mechanism to discover this information. For more details, refer Section 8.4.7.1.1.7 of [ACPIv6.3].

- LowestFrequency
- NominalFrequency

Figure 3 shows the performance thresholds of the same big.LITTLE system as referred in Figure 2.



Figure 3: Example performance thresholds in a big.LITTLE system with same characteristics as Figure 2.

#### **B.2.2 Performance Controls**

Platforms should specify the following performance control field of the \_CPC package as a *Register* (refer Section 8.4.7.1.2 of [ACPIv6.3]):

DesiredPerformanceRegister

All other fields of the CPC package can be optionally implemented by the platform depending on its capabilities.

An example implementation of CPC for the system corresponding to Figure 3 is shown below.

```
DefinitionBlock("DsdtTable.aml", "DSDT", 1, "ARMLTD", "ARM-Example", 1) {
  Scope(_SB) {
    Device(CPU1) {
         Name ( HID, "ACPI0007")
         Name(_UID, 1)
         Name(_CPC, Package()
                   23,
                                      // NumEntries
                                      // Revision
                   3,
                   32,
                                      // Highest Performance
                   20,
                                      // Nominal Performance
                    6.
                                      // Lowest Nonlinear Performance
                                      // Lowest Performance
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Guaranteed Performance Register
                   ResourceTemplate(){Register(SystemMemory, 0x20, 0, 0xA0051000, 0x3)}, // Desired Perf Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Minimum Performance Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Maximum Performance Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Performance Red. Tolerance Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Time Window Register
                   \texttt{ResourceTemplate()} \\ \{ \texttt{Register(SystemMemory, 0, 0, 0, 0)} \}, \\ \text{$/$$} \\ \texttt{Counter Wraparound Time Particles} \\ \text{$/$} \\ 
                   ResourceTemplate(){Register(FFixedHW, 0x40, 0, 1, 0x4)},// Reference Performance Counter Register
                   ResourceTemplate(){Register(FFixedHW, 0x40, 0, 0, 0x4)},// Delivered Performance Counter Register
                   ResourceTemplate(){Register(SystemMemory, 0x20, 0, 0xA0051004, 0x3)}, // Performance Ltd Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // CPPC Enable Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Autonomous Selection Enable
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Autonomous Activity Window Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Energy Performance Preference Register
                                   // Reference Performance
                   120,
                                   // Lowest Frequency
                                  // Nominal Frequency
                   800.
          })
     } // CPU1
     Device(CPU2) {
         Name ( HID, "ACPI0007")
          Name ( UID, 2)
          Name ( CPC, Package ()
                   23.
                                      // NumEntries
                   3,
                                     // Revision
                   100.
                                     // Highest Performance
                   75,
                                      // Nominal Performance
                   25.
                                      // Lowest Nonlinear Performance
                                      // Lowest Performance
                   \texttt{ResourceTemplate()} \\ \{ \texttt{Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x3)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA0051010, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA005100, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA005100, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA005100, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0, 0xA005100, 0x30)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0x300, 0x300)} \}, \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x20, 0x300, 0x300)} \}, \\ \ // \\ \ // \\ \ \texttt{Desired Perf. Register(SystemMemory, 0x200, 0x300, 0x300)} \}, \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ // \\ \ 
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Minimum Performance Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Maximum Performance Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Performance Red. Tolerance Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Time Window Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Counter Wraparound Time
                   ResourceTemplate(){Register(FFixedHW, 0x40, 0, 1, 0x4)},// Reference Performance Counter Register
                   ResourceTemplate(){Register(FFixedHW, 0x40, 0, 0, 0x4)},// Delivered Performance Counter Register
                   ResourceTemplate(){Register(SystemMemory, 0x20, 0, 0xA0051014, 0x3)}, // Performance Ltd Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // CPPC Enable Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Autonomous Selection Enable
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Autonomous Activity Window Register
                   ResourceTemplate(){Register(SystemMemory, 0, 0, 0, 0)}, // Energy Performance Preference Register
                                     // Reference Performance
```

```
240, // Lowest Frequency
       1500, // Nominal Frequency
   })
 } //CPU2
} //SCOPE
} //DefinitionBlock
```



# Appendix C FFH Operation Regions

# C.1 Example of FFH Operation Regions which trigger SMC or HVC calls

The following ASL code shows the use of FFH Operation Region to trigger SMC32 calls using 5 registers.

```
// FFH operation region for using SMC32 calls using 5 registers (FID + 4 args)
OperationRegion(AFFH, FFixedHW, 0, 20)
Field (AFFH, BufferAcc, NoLock, Preserve) { SMCC, 160 }
// Create the command buffer (20 bytes)
Name(BUFF, Buffer(20){}) // Create SMCCC command buffer. Must match the field length.
CreateDWordField(BUFF, 0x00, BFW0) // W0 (FID)
CreateDWordField(BUFF, 0x04, BFW1) // W1
CreateDWordField(BUFF, 0x8, BFW2) // W2
CreateDWordField(BUFF, 0xC, BFW3) // W3
CreateDWordField(BUFF, 0x10, BFW4) // W4
BFW0 = 0x8200FFFF // Set FID. The OS validates that this field is within ranges.
BFW1 = 0xdeadbeef // Some param
. . .
BUFF = (SMCC = BUFF) // Invoke SMC32 and get return values.
If (BFW0 == 0x0) {
// Success
```

The following ASL code shows the use of FFH Operation Region to trigger SMC64 calls using 18 registers.

```
// FFH operation region for using SMC64 calls using 18 registers (FID + 17 args)
OperationRegion(AFFH, FFixedHW, 1, 144)

Field (AFFH, BufferAcc, NoLock, Preserve) { SMCC, 1152 }

// Create the command buffer (144 bytes)
Name(BUFF, Buffer(140){}) // Create SMCCC command buffer. Must match the field length.
CreateQWordField(BUFF, 0x00, BFX0) // X0 (FID)
CreateQWordField(BUFF, 0x08, BFX1) // X1
CreateQWordField(BUFF, 0x10, BFX2) // X2
CreateQWordField(BUFF, 0x18, BFX2) // X3
...
CreateQWordField(BUFF, 0x88, BFX17) // X17

BFX0 = 0xC200FFFF // Set FID. The OS validates that this field is within ranges.
BFX1 = 0xdeaddeadbeef // Some param
...
BUFF = (SMCC = BUFF) // Invoke SMC64 and get return values.
If (BFX0 == 0x0) {
// Success
}
```