# Lab 5: Processor Design

## 1 Introduction

A processor is a digital circuit that executes instructions that are stored in memory. In previous labs (and courses), you have had experience using the Nios II processor, both in terms of writing code to execute on it as well as integrating the processor into a larger system with memory and peripherals.

In this lab, you will design and build your own processor. You will be provided with a specification of its instruction set and external signal interface. Your task will be to implement the processor as a set of Verilog/SystemVerilog modules according to these specifications. You will not be required to synthesize your processor with Quartus Prime on the DE1-SoC board in this lab. Instead, you will simulate it in a provided ModelSim testbench, which will contain a (simulated) memory block holding the program code for the processor to execute. The source code for several small programs will be available, which you can use to test your processor, along with an assembler that can compile these and other programs.

## 2 Processor Architecture

## 2.1 Registers

Unlike the Nios II, which has a 32-bit architecture, the processor you are building has registers, instructions, and a datapath that are only 16 bits wide. Figure 1 shows an overview of the set of programmer-visible registers. There are eight general-purpose 16-bit registers named RO-R7 that can be directly manipulated by instructions.

The Program Counter (PC) register contains the *byte address* of the currently executing instruction to fetch from memory, and is always an even number (the lowest bit is 0). The PC should automatically increment by 2 after each executed instruction, and certain instructions (jumps and calls) can further modify its value indirectly.

There are also two 1-bit *flags* registers, N and Z. These stand for **N**egative and **Z**ero. The flags are updated after every arithmetic instruction (addition, subtraction, or comparison) and are used by conditional jump instructions, discussed later.

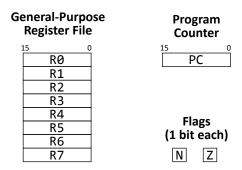


Figure 1: The processor's programmer-visible registers

Instruction		Operation Performed	Encoding				
			15 11	10 8	7 5	4	3 0
mv	Rx,Ry	[Rx] ← [Ry]	(unused)	Ry	Rx	0	0000
add	Rx,Ry	$[Rx] \leftarrow [Rx] + [Ry]$		Ry	Rx	0	0001
		update N,Z					
sub	Rx,Ry	[Rx] ← [Rx] - [Ry]		Ry	Rx	0	0010
		update N,Z					
cmp	Rx,Ry	evaluate [Rx] - [Ry]		Ry	Rx	0	0011
		update N,Z					
ld	Rx,Ry	[Rx] ← mem[[Ry]]		Ry	Rx	0	0100
st	Rx,Ry	mem[[Ry]] ← [Rx]		Ry	Rx	0	0101
mvi	Rx,imm8	$[\texttt{Rx}] \leftarrow \texttt{s\_ext(imm8)}$	imm8		Rx	1	0000
addi	Rx,imm8	$[Rx] \leftarrow [Rx] + s_ext(imm8)$	imm8		Rx	1	0001
<u></u>		update N,Z					
subi	Rx,imm8	$[Rx] \leftarrow [Rx] - s_{ext(imm8)}$	imm8		Rx	1	0010
		update N,Z					
cmpi	Rx,imm8	evaluate [Rx] - s_ext(imm8)	imm8		Rx	1	0011
		update N,Z					
mvhi	Rx,imm8	[Rx][15:8] ← imm8	imm8		Rx	1	0110
jr	Rx	PC ← [Rx]	(unused)		Rx	0	1000
jzr	Rx	PC ← [Rx] if Z==1			Rx	0	1001
jnr	Rx	PC ← [Rx] if N==1			Rx	0	1010
callr	Rx	R7 ← PC			Rx	0	1100
		PC ← [Rx]					
j	imm11	$PC \leftarrow PC + 2*s_ext(imm11)$	imm11			1	1000
jz	imm11	$PC \leftarrow PC + 2*s_ext(imm11) if Z==1$	imm11		1	1001	
jn	imm11	$PC \leftarrow PC + 2*s_ext(imm11) if N==1$	imm11 1		1010		
call	imm11	R7 ← PC	imm11 1 1100		1100		
		$PC \leftarrow PC + 2*s_ext(imm11)$					

Table 1: The processor's instruction set

## 2.2 Instruction Set

Table 1 lists the 19 instructions that the processor can understand and execute. Each instruction is encoded as a 16-bit word. The first column gives each instruction's name and operands. Operands Rx or Ry are placeholders for the names of one of the eight general-purpose registers (eg. if Ry is 100 then it refers to register R4). Some instructions take their inputs not from the contents of registers, but from *immediate operands*, which are numbers stored within the instruction word itself. These come in two sizes: 8-bit (imm8) or 11-bit (imm11), and are sometimes sign-extended to 16 bits before use.

The second column describes the operations performed by the instruction. [Rx] refers to the contents of the register named by the 3-bit index Rx in the general-purpose register file, and this is the convention used throughout this document. For example, the instruction 'mv R3,R5', according to Table 1, copies the contents of R5 into R3. s\_ext() refers to sign-extending an 8-bit or 11-bit immediate value to a full 16 bits.

Finally, the right-hand side of the table gives the encoding of the instruction. The least-significant 5 bits specify the *opcode* that identifies the type of the instruction, with the remaining 11 bits encoding the operands, which are some combination of register names and/or immediate values. As an example, the word 1111001011010000 (hex 0xF2D0) decodes to 'mvi R6,0xF2', and would store the value 0xFFF2 (-14 decimal) in register R6 due to sign extension. The rest of this section describes the instructions in more detail.

#### 2.2.1 Arithmetic Instructions

The six arithmetic instructions (add sub cmp addi subi cmpi) perform either addition or subtraction, and are the only instructions that update the flags registers N and Z based on the result of the arithmetic operation. The comparison instructions cmp and cmpi are equivalent to sub and subi except they do not write the result back to the register file – they just update the flags.

- N is set to bit 15 of the result of the arithmetic operation, which signifies that the result is Negative when interpreted as a twos-complement signed number.
- Z is set to 1 only if the entire 16-bit arithmetic result is **Z**ero.

#### 2.2.2 Loads and Stores

The 1d and st instructions are the only ones that directly access memory. Both take two register operands Rx and Ry, and use [Ry] as a byte address into memory. To simplify the processor design, all loads and stores are forced word-aligned, meaning bit 0 of the address used to access memory is always set to 0 regardless of the value of bit 0 of [Ry]. For example, both of the store instructions in the code below store the value 0x0012 into memory location 0x006c:

```
mvi R0, 0x12
mvi R1, 0x6c
st R0, R1
mvi R1, 0x6d
st R0, R1
```

#### 2.2.3 Control Flow Instructions

The last eight instructions in Table 1 use either a single register operand Rx or an 11-bit immediate operand imm11 to change the value of the PC and thus alter the control flow of the program. When the operand is Rx, then PC is simply set to [Rx]. When the operand is imm11, the 16-bit sign-extended value of imm11 is treated as a signed relative offset (in units of 16-bit instructions, not bytes) so the PC is incremented by twice this value. The imm11 mode gives your processor the ability to jump up to 1024 instructions forwards or backwards relative to the current PC without having to load a jump address into a register first.

Important: the signed offset shall be applied <u>after</u> the PC has already been incremented by 2, which is the PC's common behavior for all instructions. This will simplify the design of your processor. Here is an example of a jump instruction that creates an infinite loop:

```
j 0x7FF
```

This is because the 11-bit immediate value (0x7FF), sign-extended to 16 bits, is 0xFFFF or -1. When the instruction executes, PC first advances by 2 (as it does for every instruction) and then changes to PC + 2\*(-1) = PC-2 by adding twice the -1 jump offset to PC. PC is now back to what it originally was.

## Conditional Jumps

The conditional jumps jz/jzr and jn/jnr behave just like j/jr except that they only change the PC if the corresponding flag (Z or N respectively) is set to 1. Otherwise, the PC advances by 2 to the next instruction.

#### Calls and Subroutines

The call and callr functions are similar to the unconditional jump instructions j and jr, but in addition to changing the PC, they first store the current value of PC (after it has been incremented by 2) into register R7. This effectively remembers the address of the next instruction after the call, allowing a return to that location later by performing a 'jr R7'. This provides a mechanism to implement subroutines.

## 2.3 Operation

Upon reset, the contents of registers PC, RO-R7, N, and Z shall be set to 0. After coming out of reset, the processor will continue to execute instructions forever. This involves:

- 1. Fetching the 16-bit word from memory at address = PC.
- 2. Incrementing PC by 2.
- 3. Based on the encoding of the fetched 16-bit word, performing the corresponding operation(s) in Table 1.
- 4. Going back to step 1.

The number of cycles required to perform each step is an implementation detail, and up to you to decide. Some instructions, such as 1d, may require additional clock cycles to complete. For this lab, it is recommended to only perform one step at a time, and to have only one instruction being executed at a time. A simple design can execute one instruction every 3 or 4 clock cycles. To simplify the processor's design, the behavior is *undefined* when trying to execute an instruction that does not exist in Table 1. You can do as you wish.

## 2.4 Signal Interface

Your processor can not work in isolation – it must be connected to a memory bus in order to fetch instructions and to access data (and in the next lab, I/O devices) via loads and stores. Table 2 lists the required signals.

Signal	Direction	Width	Description
clk	input	1	Clock
reset	input	1	Active-high reset
o_mem_addr	output	16	Address (in bytes)
o_mem_rd	output	1	Read enable
i_mem_rddata	input	16	Read data
o_mem_wr	output	1	Write enable
o_mem_wrdata	output	16	Write data

Table 2: Processor signal interface

Your processor writes to memory by asserting address, writedata, and the write enable. For reads, read data will be returned to you one cycle after you assert address and the read enable. Take this timing into account when fetching instructions or performing loads. Figure 2 illustrates the timing for reads and writes.

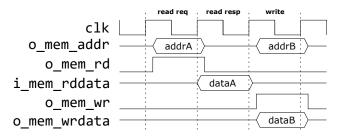


Figure 2: Memory read and write timing

## 3 Testing Your Processor

#### 3.1 Testbench

Included with the starter kit is a SystemVerilog testbench (tb.sv) that instantiates your processor and connects it to a memory block. The memory block is initialized with a .hex file containing the machine code and data for a compiled program. Three programs are included but you can compile your own too. Change the HEX\_FILE parameter at the top of the testbench to change the program.

The testbench treats writes to certain memory addresses in a special way. When the program writes a value to address 0x1000, the testbench will print out this number in the ModelSim console and then terminate the simulation. When the program writes a value to address 0x1002, the value is treated as a pointer to a null-terminated string, and the string is printed out, also terminating the simulation afterwards. Unlike strings in C, each character of a string is 16 bits, with the upper 8 bits unused.

## 3.2 Included Programs

Three programs are included to help you test all of the instructions of your processor. Each has source code in a .s file, and an assembled version ready to be used by the testbench in a corresponding .hex file.

- sum10: Calculates the sum of the integers from 1 to 10. It should display the result 55 (0x37 hex) when it finishes. Try this one first.
- capital: Takes the string stored in the data section of the program, converts it to uppercase, and prints it out using the "write to address 0x1002" functionality of the testbench. This tests the ability to call and return from subroutines using the call and jr instructions.
- regjump: This is a more abstract test that exercises the jnr and jnz conditional register jump instructions. It simply prints out "Success" or "Fail".

### 3.3 Writing Your Own Programs

We provide an assembler with the starter kit that can compile programs for your processor, written with the instruction set from Table 1. It outputs a .hex memory initialization file that can be used by Quartus Prime or ModelSim to initialize the contents of a Verilog memory block. It also outputs a .mif version of the same program, which is required for Lab 6.

The assembler is called <code>asm.exe</code> and can run in Windows. The source code, and a Makefile, are provided for compilation on other platforms like Linux. Ideally, you would run <code>asm.exe</code> from a Windows Command Prompt, so that you can see it report any syntax errors in your code. You can also drag and drop a <code>.s</code> file onto the executable, but you won't be able to see any messages from the assembler.

# 4 Lab Instructions and Marking Scheme

This is a two-week lab and the following items will all be marked during the second week. You are encouraged to also attend the first week lab session to receive design assistance from your TA.

- Preparation: Draw the datapath for your processor. Include the names of all control signals (2 marks)
- **Preparation:** Write a Verilog/SystemVerilog implementation of your processor and name the top-level module cpu. Its input/output signals should be the ones from Table 2 (4 marks)
- In-Lab: Demonstrate that your processor functions correctly by showing your TA the simulated execution of the three included test programs in ModelSim, or your own program(s) that exercise all the processor's instructions (6 marks)