Ethernet IP Core Specification

Author: Igor Mohor

IgorM@opencores.org

Rev. 1.19

November 27, 2002

TI ·		
Ihis	page has been intentionally left blank.	

Revision History

Rev.	Date	Author	Description
0.1	13/03/01	Igor Mohor	First Draft
0.2	17/03/01	Igor Mohor	MDC clock divider changed. Instead of the clock select bits CLKS[2:0] the clock divider bits CLKDIV[7:0] are used.
1.0	21/03/01	Igor Mohor	MII module completed. Revision changed to 1.0 due to cvs demands.
1.1	16/04/01	IM	DMA support and buffer descriptors added.
1.2	24/05/01	IM	Registers revised.
1.3	05/06/01	IM	Status is written to the status registers. DMA channels 2 and 3 are not used any more. Figures that are implementation specific removed from the document.
1.4	03/07/01	IM	COLLCONF register changed bit width. BCKPRESS and BCKPNBEN bit removed from MODER. LOOPBCK added.
1.5	21/07/01	IM	Signal RD0_O (Restart Descriptor for channel 0) added. Per packet CRC, BD changed.
1.6	03/12/01	IM	BD section rewritten.
1.7	05/12/01	IM	TX_BD_NUM register used instead of RX_BD_BASE_ADDR register.
1.8	07/01/02	IM	Minor typos fixed
1.9	30/01/02	IM	RST bit in MODER register is 1 after reset, initial collision window changed.
1.10	18/02/02	IM	Address recognition system added. Buffer Descriptors changed. DMA section changed. Ports changed.
1.11	02/03/02	IM	Typos fixed, INT_SOURCE and INT_MASK registers changed.
1.12	15/03/02	IM	TX_BD_NUM, MAC_ADDR0 and MAC_ADDR1 register description changed.
1.13	15/04/02	Jeanne Wiegelmann	Document revised.
1.14	14/05/02	IM	Minor typos fixed.
1.15	14/08/02	IM	LINKFAIL and NVALID bit description changed in the MIISTATUS register. TX_BD_NUM changed. External DMA support removed from the document.
1.16	04/09/02	IM	RX_BD_NUM changed to TX_BD_NUM in the register table. MIIRX_DATA bits changed to read only. MIIMRST bit in MIIMODER register moved from bit[10] to bit[9]. Description of the RXEN and TXEN bits in

Rev.	Date	Author	Description
			MODER register is modified. Description of the CTRLMODER and INT_SOURCE register changed.
1.17	14/11/02	IM	Few minor changes in the Tx BD, Rx BD and Host Interface sections. Bit description in the INT_SOURCE register improved. Frame reception section fixed. Minimum tx and rx length defined in the Frame Transmission and Frame Reception sections. RST bit in MODER removed.
1.18	22/11/02	IM	MIIMRST (Reset of the MIIM module) not used any more in the MIIMODER register. Control Frame bit (CF) added to the RX buffer descriptor. Control frame detection section updated.
1.19	27/11/02	IM	Control frame detection section improved.

List of Contents

1	
INTRODUCTION	1
	I
2	2
IO PORTS	
2.1 ETHERNET CORE IO PORTS	
2.1.1 Host Interface Ports	
2.1.2 PHY Interface ports	
3	6
REGISTERS	6
3.1 MODER (MODE REGISTER)	
3.2 INT_SOURCE (INTERRUPT SOURCE REGISTER)	
3.3 INT_MASK (INTERRUPT MASK REGISTER)	
3.4 IPGT (BACK TO BACK INTER PACKET GAP REGISTER)	
3.5 IPGR1 (NON BACK TO BACK INTER PACKET GAP REGISTER 1)	
3.6 IPGR2 (NON BACK TO BACK INTER PACKET GAP REGISTER 2)	
3.7 PACKETLEN (PACKET LENGTH REGISTER)	
3.8 COLLCONF (COLLISION AND RETRY CONFIGURATION REGISTER)	
3.9 TX_BD_NUM (TRANSMIT BD NUMBER REG.)	
3.11 MIIMODER (MII MODE REGISTER)	
3.13 MIIADDRESS (MII ADDRESS REGISTER)	
3.14 MIITX DATA (MII TRANSMIT DATA)	
3.15 MIIRX_DATA (MII RECEIVE DATA)	
3.16 MIISTATUS (MII STATUS REGISTER)	
3.17 MAC_ADDR0 (MAC ADDRESS REGISTER 0)	
3.18 MAC_ADDR1 (MAC ADDRESS REGISTER 1)	
3.19 HASH0 (HASH REGISTER 0)	
3.20 HASH1 (HASH REGISTER 1)	
3.21 TXCTRL (TX CONTROL REGISTER)	20
4	
OPERATION	21
4.1 RESETTING ETHERNET CORE	
4.2 HOST INTERFACE OPERATION	
4.2.1 Configuration Registers	
4.2.2 Buffer Descriptors (BD)	
4.2.3 Frame Transmission	
4.2.4 Frame Reception	
4.3 TX ETHERNET MAC	30

4.4 RX ETHERNET MAC	30
4.5 MAC CONTROL MODULE	31
4.5.1 Control Frame Detection	31
4.5.2 Control Frame Generation	32
4.5.3 TX/RX MAC Interface	
4.5.4 PAUSE Timer	
4.5.5 Slot Timer	
4.6 MII MANAGEMENT MODULE	34
4.6.1 Operation Controller	
4.6.2 Shift Registers Operation	36
4.6.3 Output Control Module Operation	37
4.6.4 Clock Generator Operation	37
•	00
5	38
ARCHITECTURE	38
E 4 LIGOT INTERFACE	40
5.1 HOST INTERFACE 5.2 TX ETHERNET MAC	
5.3 RX ETHERNET MAC	
5.4 MAC CONTROL MODULE	
5.4.1 Control Frame Detector	
5.4.2 Control Frame Generator	
5.4.3 TX/RX Ethernet MAC Interface	
5.4.4 PAUSE Timer	
5.4.5 Slot Timer	
5.5 MII MANAGEMENT MODULE	
5.5.1 Operation Control Module	
5.5.2 Output Control Module	
5.5.3 Shift Register	
5.5.4 Clock Generator	
J.J.# CIUCK UTITE ALUI	

List of Tables

Table 1: Host Interface Ports	4
Table 2: PHY Interface Ports	5
Table 3: Register List	7
Table 4: MODER Register	9
Table 5: INT_SOURCE Register	10
Table 6: INT_MASK Register	11
Table 7: IPGT Register	12
Table 8: IPGR1 Register	12
Table 9: IPGR2 Register	13
Table 10: PACKETLEN Register	13
Table 11: COLLCONF Register	14
Table 12: TX_BD_NUM Register	14
Table 13: CTRLMODER Register	15
Table 14: PASSALL and RXFLOW operation	15
Table 15: MIIMODER Register	16
Table 16: MIICOMMAND Register	16
Table 17: MIIADDRESS Register	17
Table 18: MIITX_DATA Register	17
Table 19: MIIRX_DATA Register	17
Table 20: MIISTATUS Register	18
Table 21: MAC_ADDR0 Register	18
Table 22: MAC_ADDR1 Register	19
Table 23: HASH0 Register	19
Table 24: HASH1 Register	19
Table 25: HASH1 Register	20
Table 26: Tx Buffer Descriptor	25
Table 27: Tx Buffer Pointer	25

Table 28: Rx Buffer Descriptor	27
Table 29: Rx Buffer pointer	27

List of Figures

Figure 1: Tx Buffer Descriptor	24
Figure 2: Rx Buffer Descriptor	26
Figure 3: Structure of the PAUSE control frame	32
Figure 4: Architecture Overview	39

1

Introduction

The Ethernet IP Core consists of five modules:

- ✓ The MAC (Media Access Control) module, formed by transmit, receive, and control module
- ✓ The MII (Media Independent Interface) Management module
- ✓ The Host Interface

The Ethernet IP Core is capable of operating at 10 or 100 Mbps for Ethernet and Fast Ethernet applications. An external PHY is needed for the complete Ethernet solution.

2

IO Ports

2.1 Ethernet Core IO ports

The Ethernet IP Core uses three types of signals to connect to media:

- ✓ WISHBONE signals to connect to the Host Interface.
- ✓ MII Management signals to connect to the PHY
- ✓ Reset signals (for resetting different parts of the Ethernet IP Core

2.1.1 Host Interface Ports

The table below contains the common ports connecting the Ethernet IP Core to the Host Interface. The Host Interface is WISHBONE Rev. B compliant.



All signals listed below are active HIGH, unless otherwise noted. Signal direction is with respect to the Ethernet IP Core.

Port	Width	Directi on	Description
CLK_I	1	I	Clock Input
RST_I	1	1	Reset Input
ADDR_I	32	1	Address Input
DATA_I	32	I	Data Input
DATA_O	32	0	Data Output
SEL_I	4	I	Select Input Array
			Indicates which bytes are valid on the data bus. Whenever this signal is not 1111b during a valid access, the ERR_O is asserted.
WE_I	1	1	Write Input
			Indicates a Write Cycle when asserted high or a Read Cycle when asserted low.
STB_I	1	1	Strobe Input
			Indicates the beginning of a valid transfer cycle.
CYC_I	1	I	Cycle Input
			Indicates that a valid bus cycle is in progress.
ACK_O	1	0	Acknowledgment Output
			Indicates a normal Cycle termination.
ERR_O	1	0	Error Acknowledgment Output
			Indicates an abnormal cycle termination.
INTA_O	1	0	Interrupt Output A.
M_ADDR_O	32	0	Address Output
M_DATA_I	32	1	Data Input
M_DATA_O	32	0	Data Output
M_SEL_O	4	1	Select Output Array
			Indicates which bytes are valid on the data bus. Whenever this signal is not 1111b during a valid access, the ERR_I is asserted.
M_WE_O	1	0	Write Output
			Indicates a Write Cycle when asserted high or a Read Cycle when asserted low.
M_STB_O	1	0	Strobe Output
			Indicates the beginning of a valid transfer cycle.
M_CYC_O	1	0	Cycle Output
			Indicates that a valid bus cycle is in progress.
M_ACK_I	1	I	Acknowledgment Input
			Indicates a normal cycle termination.

Port	Width	Directi on	Description
M_ERR_I	1	1	Error Acknowledgment Input
			Indicates an abnormal cycle termination.

Table 1: Host Interface Ports

2.1.2 PHY Interface ports

The table below contains the ports connecting the Ethernet IP Core to the PHY Interface. All signals listed below are active HIGH, unless otherwise noted. Signal direction is with respect to the Ethernet IP Core.

Port	Width	Direction	Description
MTxClk	1	I	Transmit Nibble or Symbol Clock. The PHY provides the MTxClk signal. It operates at a frequency of 25 MHz (100 Mbps) or 2.5 MHz (10 Mbps). The clock is used as a timing reference for the transfer of MTxD[3:0], MtxEn, and MTxErr.
MTxD[3:0]	4	0	Transmit Data Nibble. Signals are the transmit data nibbles. They are synchronized to the rising edge of MTxClk. When MTxEn is asserted, PHY accepts the MTxD.
MTxEn	1	0	Transmit Enable. When asserted, this signal indicates to the PHY that the data MTxD[3:0] is valid and the transmission can start. The transmission starts with the first nibble of the preamble. The signal remains asserted until all nibbles to be transmitted are presented to the PHY. It is deasserted prior to the first MTxClk, following the final nibble of a frame.
MTxErr	1	0	Transmit Coding Error. When asserted for one MTxClk clock period while MTxEn is also asserted, this signal causes the PHY to transmit one or more symbols that are not part of the valid data or delimiter set somewhere in the frame being transmitted to indicate that there has been a transmit coding error.
MRxClk	1	I	Receive Nibble or Symbol Clock. The PHY provides the MRxClk signal. It operates at a frequency of 25 MHz (100 Mbps) or 2.5 MHz (10 Mbps). The clock is used as a timing reference for the reception of MRxD[3:0], MRxDV, and MRxErr.
MRxDV	1	I	Receive Data Valid. The PHY asserts this signal to indicate to the Rx MAC that it is presenting the valid

Port	Width	Direction	Description
			nibbles on the MRxD[3:0] signals. The signal is asserted synchronously to the MRxClk. MRxDV is asserted from the first recovered nibble of the frame to the final recovered nibble. It is then deasserted prior to the first MRxClk that follows the final nibble.
MRxD [3:0]	4	I	Receive Data Nibble. These signals are the receive data nibble. They are synchronized to the rising edge of MRxClk. When MRxDV is asserted, the PHY sends a data nibble to the Rx MAC. For a correctly interpreted frame, seven bytes of a preamble and a completely formed SFD must be passed across the interface.
MRxErr	1	I	Receive Error. The PHY asserts this signal to indicate to the Rx MAC that a media error was detected during the transmission of the current frame. MRxErr is synchronous to the MRxClk and is asserted for one or more MRxClk clock periods and then deasserted.
MColl	1	I	Collision Detected. The PHY asynchronously asserts the collision signal MColl after the collision has been detected on the media. When deasserted, no collision is detected on the media.
MCrS	1	I	Carrier Sense. The PHY asynchronously asserts the carrier sense MCrS signal after the medium is detected in a non-idle state. When deasserted, this signal indicates that the media is in an idle state (and the transmission can start).
MDC	1	0	Management Data Clock. This is a clock for the MDIO serial data channel.
MDIO	1	I/O	Management Data Input/Output. Bi-directional serial data channel for PHY/STA communication.

Table 2: PHY Interface Ports

3

Registers

This section describes all base, control, and status registers inside the Ethernet IP Core. The Address field indicates a relative address in hexadecimal. Width specifies the number of bits in the register, and Access specifies the valid access types to that register. RW stands for read and write access, R for read-only access.

Name	Address	Width	Access	Description
MODER	0x00	32	RW	Mode Register
INT_SOURCE	0x04	32	RW	Interrupt Source Register
INT_MASK	0x08	32	RW	Interrupt Mask Register
IPGT	0x0C	32	RW	Back to Back Inter Packet Gap Register
IPGR1	0x10	32	RW	Non Back to Back Inter Packet Gap Register 1
IPGR2	0x14	32	RW	Non Back to Back Inter Packet Gap Register 2
PACKETLEN	0x18	32	RW	Packet Length (minimum and maximum) Register
COLLCONF	0x1C	32	RW	Collision and Retry Configuration
TX_BD_NUM	0x20	32	RW	Transmit Buffer Descriptor Number
CTRLMODER	0x24	32	RW	Control Module Mode Register
MIIMODER	0x28	32	RW	MII Mode Register
MIICOMMAND	0x2C	32	RW	MII Commend Register
MIIADDRESS	0x30	32	RW	MII Address Register Contains the PHY address and the register within the PHY address

Name	Address	Width	Access	Description
MUTY DATA	0x34	32	RW	MII Transmit Data
MIITX_DATA	0334	32	KVV	The data to be transmitted to the PHY
MIIRX_DATA	0x38	32	RW	MII Receive Data
	UX30	32	INVV	The data received from the PHY
MIISTATUS	0x3C	32	RW	MII Status Register
MAC_ADDR0				MAC Individual Address0
	0x40	32	RW	The LSB four bytes of the individual address are written to this register.
MAC_ADDR1				MAC Individual Address1
	0x44	32	RW	The MSB two bytes of the individual address are written to this register.
ETH_HASH0_ADR	0x48	32	RW	HASH0 Register
ETH_HASH1_ADR	0x4C	32	RW	HASH1 Register
ETH_TXCTRL	0x50	32	RW	Transmit Control Register

Table 3: Register List

3.1 MODER (Mode Register)

Bit #	Access	Description
31- 17		Reserved
16	RW	RECSMALL – Receive Small Packets
		0 = Packets smaller than MINFL are ignored.
		1 = Packets smaller than MINFL are accepted.
15	RW	PAD – Padding enabled
.0		0 = Do not add pads to short frames.
		1 = Add pads to short frames (until the minimum frame length is equal to MINFL).
14	RW	HUGEN – Huge Packets Enable
		0 = The maximum frame length is MAXFL. All additional bytes are discarded.
		1 = Frames up 64 KB are transmitted.
13	RW	CRCEN – CRC Enable
		0 = Tx MAC does not append the CRC (passed frames already contain the CRC.
		1 = Tx MAC appends the CRC to every frame.
12	RW	DLYCRCEN – Delayed CRC Enabled
		0 = Normal operation (CRC calculation starts immediately after the SFD).
		1 = CRC calculation starts 4 bytes after the SFD.
11		Reserved
10	RW	FULLD – Full Duplex
		0 = Half duplex mode.
		1 = Full duplex mode.
9	RW	EXDFREN – Excess Defer Enabled
		0 = When the excessive deferral limit is reached, a packet is aborted.
		1 = MAC waits for the carrier indefinitely.
8	RW	NOBCKOF – No Backoff
		0 = Normal operation (a binary exponential backoff algorithm is used).
		1 = Tx MAC starts retransmitting immediately after the collision.
7	RW	LOOPBCK – Loop Back
		0 = Normal operation.
		1 = TX is looped back to the RX.
6	RW	IFG – Interframe Gap for Incoming frames

Bit #	Access	Description
		0 = Normal operation (minimum IFG is required for a frame to be accepted).
		1 = All frames are accepted regardless to the IFG.
5	RW	PRO – Promiscuous
		0 = Check the destination address of the incoming frames.
		1 = Receive the frame regardless of its address.
4	RW	IAM – Individual Address Mode
		0 = Normal operation (physical address is checked when the frame is received.
		1 = The individual hash table is used to check all individual addresses received.
3	RW	BRO – Broadcast Address
		0 = Receive all frames containing the broadcast address.
		1 = Reject all frames containing the broadcast address unless the PRO bit = 1.
2	RW	NOPRE – No Preamble
		0 = Normal operation (7-byte preamble).
		1 = No preamble is sent.
1	RW	TXEN – Transmit Enable
		0 = Transmit is disabled.
		1 = Transmit is enabled.
		If the value, written to the TX_BD_NUM register, is equal to 0x0 (zero buffer descriptors are used), then the transmitter is automatically disabled regardless of the TXEN bit.
0	RW	RXEN – Receive Enable
		0 = Receive is disabled.
		1 = Receive is enabled.
		If the value, written to the TX_BD_NUM register, is equal to 0x80 (all buffer descriptors are used for transmit buffer descriptors, so there is no receive BD), then receiver is automatically disabled regardless of the RXEN bit.

Table 4: MODER Register

Reset Value:

MODER: 0000A000h

NOTE: Registers should not be changed after the TXEN or RXEN bits is set.

3.2 INT_SOURCE (Interrupt Source Register)

Bit#	Access	Description
31-7		Reserved
6	RW	RXC – Receive Control Frame
		This bit indicates that the control frame was received. It is cleared by writing 1 to it. Bit RXFLOW (CTRLMODER register) must be set to 1 in order to get the RXC bit set.
5	RW	TXC – Transmit Control Frame
		This bit indicates that a control frame was transmitted. It is cleared by writing 1 to it. Bit TXFLOW (CTRLMODER register) must be set to 1 in order to get the TXC bit set.
4	RW	BUSY – Busy
		This bit indicates that a buffer was received and discarded due to a lack of buffers. It is cleared by writing 1 to it. This bit appears regardless to the IRQ bits in the Receive or Transmit Buffer Descriptors.
3	RW	RXE - Receive Error
		This bit indicates that an error occurred while receiving data. It is cleared by writing 1 to it. This bit appears only when IRQ bit is set in the Receive Buffer Descriptor.
2	RW	RXB - Receive Frame
		This bit indicates that a frame was received. It is cleared by writing 1 to it. This bit appears only when IRQ bit is set in the Receive Buffer Descriptor. If a control frame is received, then RXC bit is set instead of the RXB bit. (See 3.10 CTRLMODER (Control Module Mode Register) description for more details.)
1	RW	TXE - Transmit Error
		This bit indicates that a buffer was not transmitted due to a transmit error. It is cleared by writing 1 to it. This bit appears only when IRQ bit is set in the Receive Buffer Descriptor. This bit appears only when IRQ bit is set in the Transmit Buffer Descriptor.
0	RW	TXB – Transmit Buffer
		This bit indicates that a buffer has been transmitted. It is cleared by writing 1 to it. This bit appears only when IRQ bit is set in the Transmit Buffer Descriptor.

Table 5: INT_SOURCE Register

Reset Value:

INT_SOURCE: 00000000h

3.3 INT_MASK (Interrupt Mask Register)

Bit#	Access	Description
31-7		Reserved
6	RW	RXC_M – Receive Control Frame Mask
		0 = Event masked
		1 = Event causes an interrupt
5	RW	TXC_M – Transmit Control Frame Mask
		0 = Event masked
		1 = Event causes an interrupt
4	RW	BUSY_M – Busy Mask
		0 = Event masked
		1 = Event causes an interrupt
3	RW	RXE_M – Receive Error Mask
		0 = Event masked
		1 = Event causes an interrupt
2	RW	RXF_M – Receive Frame Mask
		0 = Event masked
		1 = Event causes an interrupt
1	RW	TXE_M – Transmit Error Mask
		0 = Event masked
		1 = Event causes an interrupt
0	RW	TXB_M - Transmit Buffer Mask
		0 = Event masked
		1 = Event causes an interrupt

Table 6: INT_MASK Register

Reset Value:

INT_MASK: 00000000h

3.4 IPGT (Back to Back Inter Packet Gap Register)

Bit#	Access	Description
31-7		Reserved
6-0	RW	IPGT – Back to Back Inter Packet Gap
		Full Duplex: The recommended value is 0x15, which equals 0.96 μ s IPG (100 Mbps) or 9.6 μ s (10 Mbps). The desired period in nibble times minus 6 should be written to the register.
		Half Duplex: The recommended value and default is 0x12, which equals 0.96 μs IPG (100 Mbps) or 9.6 μs (10 Mbps). The desired period in nibble times minus 3 should be written to the register.

Table 7: IPGT Register

Reset Value:

IPGT: 00000012h

3.5 IPGR1 (Non Back to Back Inter Packet Gap Register 1)

Bit#	Access	Description
31-7		Reserved
6-0	RW	IPGR1 – Non Back to Back Inter Packet Gap 1
		When a carrier sense appears within the IPGR1 window, Tx MAC defers and the IPGR counter is reset.
		When a carrier sense appears later than the IPGR1 window, the IPGR counter continues counting. The recommended and default value for this register is 0xC. It must be within the range [0,IPGR2].

Table 8: IPGR1 Register

Reset Value:

IPGR1: 0000000Ch

3.6 IPGR2 (Non Back to Back Inter Packet Gap Register 2)

Bit#	Access	Description
31-7		Reserved
6-0	RW	IPGR2 – Non Back to Back Inter Packet Gap 2
		The recommended and default value is 0x12, which equals to 0.96 μs IPG (100 Mbit/s) or 9.6 μs (10 Mbit/s).

Table 9: IPGR2 Register

Reset Value:

IPGR2: 00000012h

3.7 PACKETLEN (Packet Length Register)

Bit#	Access	Description
31-	RW	MINFL – Minimum Frame Length
16		The minimum Ethernet packet is 64 bytes long. If a reception of smaller frames is needed, assert the RECSMALL bit (in the mode register MODER) or change the value of this register.
		To transmit small packets, assert the PAD bit or the MINFL value (see the PAD bit description in the MODER register).
15-0	RW	MAXFL – Maximum Frame Length
		The maximum Ethernet packet is 1518 bytes long. To support this and to leave some additional space for the tags, a default maximum packet length equals 1536 bytes (0x0600). If there is a need to support bigger packets, you can assert the HUGEN bit or increase the value of the MAXFL field (see the HUGEN bit description in the MODER).

Table 10: PACKETLEN Register

Reset Value:

PACKETLEN: 00400600h

3.8 COLLCONF (Collision and Retry Configuration Register)

Bit#	Access	Description
31- 20		Reserved
19-	RW	MAXRET – Maximum Retry
16		This field specifies the maximum number of consequential retransmission attempts after the collision is detected. When the maximum number has been reached, the Tx MAC reports an error and stops transmitting the current packet. According to the Ethernet standard, the MAXRET default value is set to 0xf (15).
15-6		Reserved
5-0	RW	COLLVALID – Collision Valid
		This field specifies a collision time window. A collision that occurs later than the time window is reported as a »Late Collisions« and transmission of the current packet is aborted. The default value equals 0x3f (by default, a late collision is every collision that occurs 64 bytes (63 + 1) from the preamble).

Table 11: COLLCONF Register

Reset Value:

COLLCONF: 000F003fh

3.9 TX_BD_NUM (Transmit BD Number Reg.)

Bit#	Access	Description
31:8		Reserved
7:0	RW	Transmit Buffer Descriptor (Tx BD) Number
		Number of the Tx BD. Number of the Rx BD equals to the (0x80 – Tx BD number). Maximum number of the Tx BD is 0x80. Values greater then 0x80 cannot be written to this register (ignored).

Table 12: TX_BD_NUM Register

Reset Value:

TX_BD_NUM: 0000040h

3.10 CTRLMODER (Control Module Mode Register)

Bit#	Access	Description
31-3		Reserved
2	RW	TXFLOW – Transmit Flow Control
		0 = PAUSE control frames are blocked.
		1 = PAUSE control frames are allowed to be sent. This bit enables the TXC bit in the INT_SOURCE register.
1	RW	RXFLOW – Receive Flow Control
		0 = Received PAUSE control frames are ignored.
		1 = The transmit function (Tx MAC) is blocked when a PAUSE control frame is received. This bit enables the RXC bit in the INT_SOURCE register.
0	RW	PASSALL – Pass All Receive Frames
		0 = Control frames are not passed to the host. RXFLOW must be set to 1 in order to use PAUSE control frames.
		1 = All received frames are passed to the host.

Table 13: CTRLMODER Register

Reset Value:

CTRLMODER: 0000000h

PASSALL	RXFLOW	Description
0	0	When a PAUSE control frame is received, nothing happens. The control frame is not stored to the memory.
0	1	When a PAUSE control frame is received, RXC interrupt is set and pause timer is updated. The control frame is not stored to the memory.
1	0	When a PAUSE control frame is received, it is stored to the memory as a normal data frame. RXB interrupt is set (if the related buffer descriptor has an IRQ bit set to 1). RXC interrupt is not set and pause timer is not updated.
1	1	When a PAUSE control frame is received, RXC interrupt is set and pause timer is updated. Besides that the control frame is also stored to the memory as a normal data frame.

Table 14: PASSALL and RXFLOW operation

3.11 MIIMODER (MII Mode Register)

Bit#	Access	Description
31-9		Reserved
8	RW	MIINOPRE – No Preamble
		0 = 32-bit preamble sent
		1 = No preamble send
7-0	RW	CLKDIV – Clock Divider
		The field is a host clock divider factor. The host clock can be divided by an even number, greater then 1. The default value is 0x64 (100).

Table 15: MIIMODER Register

Reset Value:

MIIMODER: 00000064h

3.12 MIICOMMAND (MII Command Register)

Bit #	Access	Description
31-3		Reserved
2	RW	WCTRLDATA – Write Control Data
1	RW	RSTAT – Read Status
0	RW	SCANSTAT – Scan Status

Table 16: MIICOMMAND Register

Reset Value:

MIICOMMAND: 00000000h

NOTE: While one operation is in progress, BUSY signal (3.16 MIISTATUS

(MII Status Register) register) is set. Next operation can be started after the previous one is finished (and BUSY signal cleared to zero).

3.13 MIIADDRESS (MII Address Register)

Bit#	Access	Description
31- 13		Reserved
12-8	RW	RGAD – Register Address (within the PHY selected by the FIAD[4:0])
7-5		Reserved
4-0	RW	FIAD – PHY Address

Table 17: MIIADDRESS Register

Reset Value:

MIIADDRESS: 00000000h

3.14 MIITX_DATA (MII Transmit Data)

Bit #	Access	Description
31- 16		Reserved
15-0	RW	CTRLDATA – Control Data (data to be written to the PHY)

Table 18: MIITX_DATA Register

Reset Value:

MIITX_DATA: 00000000h

3.15 MIIRX_DATA (MII Receive Data)

Bit#	Access	Description
31- 16		Reserved
15-0	R	PRSD – Received Data (data read from the PHY)

Table 19: MIIRX_DATA Register

Reset Value:

MIIRX DATA: 00000000h

3.16 MIISTATUS (MII Status Register)

Bit#	Access	Description
31-3		Reserved
2	R	NVALID – Invalid
		0 = The data in the MSTATUS register is valid.
		1 = The data in the MSTATUS register is invalid.
		This bit is only valid when the scan status operation is active.
1	R	BUSY
		0 = The MII is ready.
		1 = The MII is busy (operation in progress).
0	R	LINKFAIL:
		0 = The link is OK.
		1 = The link failed.
		The Link fail condition occurred (now the link might be OK). Another status read gets a new status.

Table 20: MIISTATUS Register

Reset Value:

MIISTATUS: 00000000h

3.17 MAC_ADDR0 (MAC Address Register 0)

Bit #	Access	Description
31- 24	RW	Byte 2 of the Ethernet MAC address (individual address)
23- 16	RW	Byte 3 of the Ethernet MAC address (individual address)
15-8	RW	Byte 4 of the Ethernet MAC address (individual address)
7-0	RW	Byte 5 of the Ethernet MAC address (individual address)

Table 21: MAC_ADDR0 Register

Reset Value:

MAC_ADDR0: 00000000h

Note: When an address is transmitted, byte 0 is sent first and byte 5 last.

3.18 MAC_ADDR1 (MAC Address Register 1)

Bit#	Access	Description
31- 16		Reserved
15-8	RW	Byte 0 of the Ethernet MAC address (individual address)
7-0	RW	Byte 1 of the Ethernet MAC address (individual address)

Table 22: MAC_ADDR1 Register

Reset Value:

MAC ADDR1: 00000000h

Note: When an address is transmitted, byte 0 is sent first and byte 5 last.

3.19 HASH0 (HASH Register 0)

Bit#	Access	Description
31-0	RW	Hash0 value

Table 23: HASH0 Register

Reset Value:

HASH0: 00000000h

3.20 HASH1 (HASH Register 1)

Bit #	Access	Description
31-0	RW	Hash1 value

Table 24: HASH1 Register

Reset Value:

HASH1: 00000000h

3.21 TXCTRL (Tx Control Register)

Bit #	Access	Description
31-17		Reserved
16	RW	TXPAUSERQ – Tx Pause Request
		Writing 1 to this bit starts sending control frame procedure. Bit is automatically cleared to zero.
15:0	RW	TXPAUSETV – Tx Pause Timer Value
		The value that is send in the pause control frame.

Table 25: HASH1 Register

Reset Value:

TXCTRL: 00000000h

4

Operation

This section describes the Ethernet IP Core operation.

The core consists of five modules:

- ✓ The host interface connects the Ethernet Core to the rest of the system via the WISHBONE (using DMA transfers). Registers are also part of the host interface.
- ✓ The TX Ethernet MAC performs transmit functions.
- ✓ The RX Ethernet MAC performs receive functions.
- ✓ The MAC Control Module performs full duplex flow control functions.
- ✓ The MII Management Module performs PHY control and gathers the status information from it.

All modules combined deliver full-function 10/100 Mbps Media Access Control. The Ethernet IP Core can operate in half- or full-duplex mode and is based on the CSMA/CD (Carrier Sense Multiple Access / Collision Detection) protocol..

When a station wants to transmit in half-duplex mode, it must observe the activity on the media (Carrier Sense). As soon as the media is idle (no transmission), any station can start transmitting (Multiple Access). If two or more stations are transmitting at the same time, a collision on the media is detected. All stations stop transmitting and back off for some random time. After the back-off time, the station checks the activity on the media again. If the media is idle, it starts transmitting. All other stations wait for the current transmission to end.

In full-duplex mode, the Carrier Sense and the Collision Detect signals are ignored. The MAC Control module takes care of sending and receiving the PAUSE control frame to achieve Flow control (see the TXFLOW and RXFLOW bit description in the CTRLMODER register for more information).

The MII Management module provides a media independent interface (MII) to the external PHY. This way, the configuration and status registers of the PHY can be read from/written to.

4.1 Resetting Ethernet Core

The RST_I signal is used for resetting all sub-modules except the MIIM module. Setting the MIIMRST bit in the MIIMODER register to 1 resets the MIIM module. To reset the PHY, assert its RESET signal either through the boars system control register or by writing an appropriate bit in the PHY register.

4.2 Host Interface Operation

The host interface connects the Ethernet IP Core to the rest of the system (RISC, memory) via the WISHBONE bus. The WISHBONE serves to access the configuration registers and the memory. Currently, only DMA transfers are supported for transferring the data from/to the memory.

4.2.1 Configuration Registers

The function of the configuration registers is transparent and can be easily understood by reading the Registers section (Chapter 3).

4.2.2 Buffer Descriptors (BD)

The transmission and the reception processes are based on the descriptors. The Transmit Descriptors (TxD) are used for transmission while the Receive Descriptors (RxD) are used for reception.

The buffer descriptors are 64 bits long. The first 32 bits are reserved for length and status while the last 32 bits contain the pointer to the associated buffer (where data is stored). The Ethernet MAC core has an internal RAM that can store up to 128 BDs (for both Rx and Tx).

The internal memory saves all descriptors at addresses from 0x400 to 0x7ff (128 64bit descriptors). The transmit descriptors are located between the start address (0x400) and

the address that equals the value written in the TX_BD_NUM register (page 14) multiplied by 8. This register holds the number of the used Tx buffer descriptors. The receive descriptors are located between the start address (0x400), plus the address number written in the TX_BD_NUM multiplied by 8, and the descriptor end address (0x7ff).

The transmit and receive status of the packet is written to the associated buffer descriptor once its transmission/reception is finished.

4.2.2.1 Tx Buffer Descriptors

The transmit descriptors contain information about associated buffers (length, status) and pointers to the buffers holding the relevant data.

ADDR = Offset + 0

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
LEN															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RD	IRQ	WR	PAD	CRC	Rese	rved	UR	RTR'	Y[3:0]			RL	LC	DF	CS

ADDR = Offset + 4

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
TXP	TXPNT														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
TXP	NT														

Figure 1: Tx Buffer Descriptor

Bit#	Access	Description						
31-	RW	LEN – Length						
16		Number of bytes associated with the BD to be transmitted.						
15	RW	RD – Tx BD Ready						
		0 = The buffer associated with this buffer descriptor is not ready, and you are free to manipulate it. After the data from the associated buffer has been transmitted or after an error condition occurred, this bit is cleared to 0.						
		1 = The data buffer is ready for transmission or is currently being transmitted. You are not allowed to manipulate this descriptor once this bit is set.						
14	RW	IRQ – Interrupt Request Enable						
		0 = No interrupt is generated after the transmission.						
		1 = When data associated with this buffer descriptor is sent, a TXB or TXE interrupt will be asserted (see 3.2 INT_SOURCE (Interrupt Source Register) for more details).						
13	RW	WR – Wrap						
		0 = This buffer descriptor is not the last descriptor in the buffer descriptor table.						
		1 = This buffer descriptor is the last descriptor in the buffer descriptor table.						

Bit#	Access	Description
		After this buffer descriptor was used, the first buffer descriptor in the table will be used again.
12	RW	PAD – Pad Enable
		0 = No pads will be add at the end of short packets.
		1 = Pads will be added to the end of short packets.
11	RW	CRC – CRC Enable
		0 = CRC won't be added at the end of the packet.
		1 = CRC will be added at the end of the packet.
10:9		Reserved
8	RW	UR – Underrun
		Underrun occurred while sending this buffer.
7:4	RW	RTRY – Retry Count
		This bit indicates the number of retries before the frame was successfully sent.
3	RW	RL – Retransmission Limit
		This bit is set when the transmitter fails. (Retry Limit + 1) attempts to successfully transmit a message due to repeated collisions on the medium. The Retry Limit is set in the COLLCONF register on page 14.
2	RW	LC – Late Collision
		Late collision occurred while sending this buffer. The transmission is stopped and this bit is written. Late collision is defined in the COLLCONF register on page 14.
1	RW	DF – Defer Indication
		The frame was deferred before being sent successfully, i.e. the transmitter had to wait for Carrier Sense before sending because the line was busy. This is not a collision indication. Collisions are indicated in RTRY.
0	RW	CS – Carrier Sense Lost
		This bit is set when Carrier Sense is lost during a frame transmission. The Ethernet controller writes CS after it finishes sending the buffer.

Table 26: Tx Buffer Descriptor

Bit#	Access	Description
31-0	RW	TXPNT – Transmit Pointer
		This is the buffer pointer when the associated frame is stored.

Table 27: Tx Buffer Pointer

4.2.2.2 Rx Buffer Descriptors

The receive BDs contain information about the received frames (length, status) and pointers to the buffers holding the relevant data.

ADDR = Offset + 0

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
LEN															
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Е	IRQ	WR	Reser	ved			CF	М	OR	IS	DN	TL	SF	CRC	LC

ADDR = Offset + 4

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
RXP	RXPNT														
15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
RXP	NT														

Figure 2: Rx Buffer Descriptor

Bit#	Access	Description
31- 16	RW	LEN – Number of the received bytes associated with this BD.
15	RW	E – Empty
		0 = The data buffer associated with this buffer descriptor has been filled with data or has stopped because an error occurred. The core can read or write this BD. As long as this bit is zero, this buffer descriptor won't be used.
		1 = The data buffer is empty (and ready for receiving data) or currently receiving data.
14	RW	IRQ – Interrupt Request Enable
		0 = No interrupt is generated after the reception.
		1 = When data is received (or error occurs), an RXF interrupt will be asserted (See 3.2 INT_SOURCE (Interrupt Source Register) for more details).
13	RW	WRAP
		0 = This buffer descriptor is not the last descriptor in the buffer descriptor table.
		1 = This buffer descriptor is the last descriptor in the buffer descriptor table. After this buffer descriptor is used, the first Rx buffer descriptor in the table will be used again.

Bit#	Access	Description
12:9		Reserved.
8	RW	CF – Control Frame
		0 = Normal data frame received
		1 = Control frame received
7	RW	M – Miss
		0 = The frame is received because of an address recognition hit.
		1 = The frame is received because of promiscuous mode.
		The Ethernet controller sets M for frames that are accepted in promiscuous mode but are tagged as a miss by internal address recognition. Thus, in promiscuous mode, M determines whether a frame is destined for this station.
6	RW	OR – Overrun
		This bit is set when a receiver overrun occurs during frame reception.
5	RW	IS – Invalid Symbol
		This bit is set when the reception of an invalid symbol is detected by the PHY.
4	RW	DN – Dribble Nibble
		This bit is set when a received frame cannot de divided by 8 (one extra nibble has been received).
3	RW	TL – Too Long
		This bit is set when a received frame is too long (bigger than the value set in the PACKETLEN register (page 13).
2	RW	SF – Short Frame
		This bit is set when a frame that is smaller than the minimum length is received (minimum length is set in the PACKETLEN register (page 13)).
1	RW	CRC – Rx CRC Error
		This bit is set when a received frame contains a CRC error.
0	RW	LC – Late Collision
		This bit is set when a late collision occurred while receiving a frame.

Table 28: Rx Buffer Descriptor

Bit #	Access	Description
31-0	RW	RXPNT – Receive Pointer
		This is the pointer to the buffer storing the associated frame.

Table 29: Rx Buffer pointer

4.2.3 Frame Transmission

To transmit the first frame, the RISC must do several things, namely:

- ✓ Store the frame to the memory.
- ✓ Associate the Tx BD in the Ethernet MAC core with the packet written to the memory (length, pad, crc, etc.). See section 4.2.2 Buffer Descriptors (BD) for more information
- ✓ Enable the TX part of the Ethernet Core by setting the TXEN bit to 1.

As soon as the Ethernet IP Core is enabled, it continuously reads the first BD. Immediately when the descriptor is marked as ready, the core reads the pointer to the memory storing the associated data and starts then reading data to the internal FIFO. At the moment the FIFO is full, transmission begins.

At the end of the transmission, the transmit status is written to the buffer descriptor and an interrupt might be generated (when enabled). Next, two events might occur (according to the WR bit (wrap) in the descriptor):

- ✓ If the WR bit has not been set, the BD address is incremented, the next descriptor is loaded, and the process starts all over again (if next BD is marked as ready).
- ✓ If the WR bit has been set, the first BD address (base) is loaded again. As soon as the BD is marked as ready, transmission will start.

NOTE: Only frames with length greater than 4 bytes are transmitted. Even if the BD is marked as ready, the frame is not transmitted if the length is too small.

4.2.4 Frame Reception

To receive the first frame, the RISC must do several things, namely:

- ✓ Set the receive buffer descriptor to be associated with the received packet and mark it as empty.
- ✓ Enable the Ethernet receive function by setting the RECEN bit to 1.

The Ethernet IP Core reads the Rx BD. If it is marked as empty, it starts receiving frames. The Ethernet receive function receives an incoming frame nibble per nibble. After the whole frame has been received and stored to the memory, the receive status is written to the BD. An interrupt might be generated (if enabled). Then the BD address is incremented and the next BD loaded. If the new BD is marked as empty, another frame can be received; otherwise the operation stops.

NOTE: Only frames with length greater than 4 bytes are received without an error. Smaller frames are received with a CRC error (CRC is 4-bytes long).

4.3 TX Ethernet MAC

The TX Ethernet MAC generates 10BASE-T/100BASE-TX transmit MII nibble data streams in response to the byte streams the transmit logic (host) supplies. It performs the required deferral and back-off algorithms, takes care of the inter-packet gap (IPG), computes the checksum (FCS), and monitors the physical media (by monitoring Carrier Sense and collision signals). The TX Ethernet MAC is divided into several modules that provide the following functionality:

- ✓ Generation of the signals connected to the Ethernet PHY during the transmission process
- ✓ Generation of the status signals the host uses to track the transmission process
- ✓ Random time generation used in the back-off process after a collision has been detected
- ✓ CRC generation and checking
- ✓ Pad generation
- ✓ Data nibble generation

4.4 RX Ethernet MAC

The RX Ethernet MAC transmits the data streams to the host in response to the 10BASE-T or 100BASE-TX received MII nibbles. The module is divided into several sub-modules providing the following functionality:

- ✓ Preamble removal
- ✓ Data assembly (from input nibble to output byte)
- ✓ CRC checking for all incoming packets
- ✓ Generation of the signal that can be used for address recognition (in the hash table)
- ✓ Generation of the status signals the host uses to track the reception process

4.5 MAC Control Module

The MAC Control Module performs a real-time flow control function for the full-duplex operation. The control opcode PAUSE is used for stopping the station transmitting the packets. The receive buffer (FIFO) starts filling up when the upper layer cannot continue accepting the incoming packets. Before an overflow happens, the upper layer sends a PAUSE control frame to the transmitting station. This control frame inhibits the transmission of the data frames for a specified period of time.

When the MAC Control module receives a PAUSE control frame, it loads the pause timer with the received value into the pause timer value field. The Tx MAC is stopped (paused) from transmitting the data frames for the "pause timer value" slot times. The pause timer decrements by one each time a slot time passes by. When the pause time number equals zero, the MAC transmitter resumes the transmit operation.

The MAC Control Module has the following functionality:


- ✓ Control frame detection
- ✓ Control frame generation
- ✓ TX/RX MAC Interface
- ✓ PAUSE Timer
- ✓ Slot Timer

4.5.1 Control Frame Detection

The incoming data packets are passed from the receiver via the MAC Control Module to the upper layers while the control frames are usually dropped.

The RXFLOW bit in the CTRLMODER register defines whether the pause control frame causes the transmitter to break the transmission or not. If RXFLOW bit is set then the RXC interrupt is set in the INT_SOURCE register. The PASSALL bit in the CTRLMODER register defines whether the control frames are stored to the memory or not (regardless to the RXFLOW bit). If the PASSALL bit is set then the control frame is stored to the memory and related buffer descriptor has the control frame bit (CF) set to 1. RXB interrupt in the INT_SOURCE register is set to 1.

Note: If both RXFLOW and PASSALL bits are set to 1, then only RXC interrupt is set in the INT SOURCE register when a control frame is received.

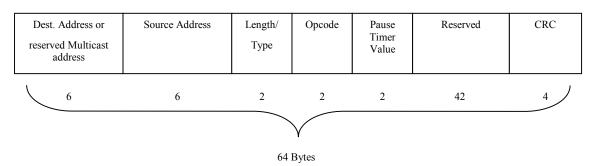

A valid PAUSE control frame has the frame structure described in Figure 3:

Figure 3: Structure of the PAUSE control frame

The destination address must be a reserved multicast address (01-80-c2-00-00-01) or a destination address equal to the Ethernet IP Core MAC address. The Length/Type field must be equal to 8808 and the opcode to 0001 for a PAUSE control frame.

When the receive flow control and the MAC Control Module are enabled (RXFLOW asserted and PASSALL deasserted), a PAUSE Timer Value from the PAUSE control frame is passed to the PAUSE timer.

4.5.2 Control Frame Generation

When the host wants to send a PAUSE control frame, it asserts the Transmit Pause Request (TPAUSERQ). When a request is detected, the control module waits for the current transmission to end. It then starts transmitting the PAUSE control frame by asserting the Transmit Packet Start Frame (TxStartFrm) and providing the appropriate control data. Sending CtrlFrm is used to instruct the Transmit function (TX Ethernet MAC) to pad and append the FCS. The transmit Pause Frame End (TxEndFrm) is asserted at the end to inform the host that a Pause request was sent.

Asserting the TXFLOW bit in the CTRLMODER register enables the transmission of the PAUSE control frame.

When the control frame needs to be sent, the request is issued by writing the appropriate value to the TXCTRL register. The Transmit Pause Timer Value TPAUSETV[15:0] contains the value to be sent as a Pause Timer Value in the pause control frame (Figure 3). The TPAUSERQ signal (request) is latched internally in the MAC Control Generator and reset after the PAUSE control frame has been transmitted. This prevents issuing a new PAUSE request until the current request is sent.

4.5.3 TX/RX MAC Interface

The MAC Control Module is connected between the host and the Tx and Rx modules. When enabled, the its logic takes over the control of the following signals: TxData[7:0], TxStartFrm, TxEndFrm, TxUsedData, TxDone, and TxAbort. These signals are connected directly between the host and the MAC transmit and receive functions when data frames (not control frames) are transmitted or received.

On the other hand, when a host wants to send a PAUSE control frame, it asserts a TPauseRQ request signal. It is then up to the MAC Control Module to initiate the transmission. In this case, the above signals are not connected to the host any more. The MAC Control Module drives the appropriate control data signals and instructs the Tx module to transmit.

When a PAUSE control frame is received, the frame can be dropped or passed to the host, depending on the state of the PASSALL and RXFLOW bits (See section 3.10 CTRLMODER (Control Module Mode Register) for more details). Again TxData[7:0], TxStartFrm, TxEndFrm, TxUsedData, TxDone, and TxAbort are not connected directly.

4.5.4 PAUSE Timer

The 16bit PAUSE timer is loaded with a pause timer value when a PAUSE control frame is received. The timer inhibits the data frame transmissions for the timer value time slots. This is done by:

- ✓ Preventing the Tx MAC module from seeing the signal TxStartFrm from the host
- ✓ Preventing the host from seeing the signal TxUsedData from the Tx module

The timer decrements by one each time a time slot passes by. A Slot Timer is used for counting the slot time.

4.5.5 Slot Timer

The Slot Timer is activated when a PAUSE Timer is preloaded. It counts slot times and generates pulses to the PAUSE Timer for every slot time passed. Slot time is time, needed for transmission of the 64 bytes.

4.6 MII Management Module

The MII Management Module is a simple two-wire interface between the host and an external PHY device. It is used for configuration and status read of the physical device. The physical interface consists of a management data line MDIO (Management Data Input/Output) and a clock line MDC (Management Data Clock). During the read/write operation, the most significant bit is shifted in/out first from/to the MDIO data signal. On each rising edge of the MDC, a Shift register is shifted to the left and a new value appears on the MDIO.

Internally the interface consists of four signals:

- ✓ MDC
- ✓ MDI
- ✓ MDO
- ✓ MDOEN (Management Data Output Enable)

The unidirectional lines MDI, MDO, and MDOEN are combined to make a bi-directional signal MDIO that is connected to the PHY.

The configuration and status data is written/read to/from the PHY via the MDIO signal.

The MDC is a low frequency clock derived from dividing the host clock.

Three commands are supported for controlling the PHY:

- ✓ Write Control Data (writes the control data to the PHY Configuration registers)
- ✓ Read Status (reads the PHY Control and Status register)
- ✓ Scan Status (continuously reads the PHY Status register of one or more PHYs [link fail status]).

The MII Management Module consists of four sub modules:

- ✓ Operation Controller
- ✓ Shift Registers
- ✓ Output Control Module
- ✓ Clock Generator

4.6.1 Operation Controller

The Operation Controller's task is to perform all supported commands: Write Control Data, Read Status, and Scan Status.

4.6.1.1 Write Control Data

A host initiates a write operation by asserting the WCTRLDATA signal. This signal also indicates that the host data CTLD[15:0], the PHY address FIAD[4:0], and the PHY register address RGAD[4:0] are valid. As soon as the host asserts the WCTRLDATA signal, the MIIM module asserts the BUSY signal to inform the host that the write operation is in process. MDOEN is asserted to enable the output line MDO (MDIO) to the PHY. The MIIM module then clocks out the MIIM frame to the PHY on each rising edge of the MDC. The MIIM frame write format conforms to the *IEEE 803.2u Specification*:

- ✓ 32-bit long preamble (all ones) if the MIINOPRE bit is not asserted
- ✓ 2-bit long Start of frame pattern ST (zero followed by one)
- ✓ 2-bit Operation definition (zero-one for write or one-zero for read)
- ✓ 5-bit PHY address (FIAD[4:0])
- ✓ 5-bit PHY register address RGAD[4:0]
- ✓ 2-bit turnaround field TA (one-zero)
- ✓ 16-bit data

At the end of the write operation, the BUSY signal is deasserted.

4.6.1.2 Read Status

A host initiates a write operation by asserting the RSTAT signal. This signal also indicates that the PHY address FIAD[4:0] and the PHY register address RGAD[4:0] are valid. As soon as the host asserts the RSTAT signal, the MIIM module asserts the BUSY signal to inform the host that the read operation is in process. MDOEN is asserted to enable the output line MDO (MDIO) to the PHY. The MIIM module then clocks out the MIIM frame to the PHY on each rising edge of the MDC and afterwards clocks in the requested data (status). The MIIM read frame format conforms to the *IEEE 803.2u Specification*:

✓ 32-bit long preamble (all ones) if the MIINOPRE bit is not asserted

- ✓ 2-bit long Start of frame pattern ST (zero followed by one)
- ✓ 2-bit Operation definition (zero-one for write or one-zero for read)
- ✓ 5-bit PHY address (FIAD[4:0])
- ✓ 5-bit PHY register address RGAD[4:0]
- ✓ 2-bit turnaround field TA (one-bit period in which the PHY stays in the high-Z state followed by a one-bit period during which the PHY drives a zero on the MDO)
- ✓ MIIM deasserts the MDOEN signal that enables the MDI (MDIO works as an input)
- ✓ PHY sends the data (status) back to the MIIM Module on the data lines PRSD[15:0]

At the end of the read operation, the MIIM deasserts the BUSY signal to indicate to the host that valid data is on the PRSD[15:0] lines.

4.6.1.3 Scan Status

A host initiates the Scan Status Operation by asserting the SCANSTAT signal. The MIIM performs a continuous read operation of the PHY Status register. The PHY is selected by the FIAD[4:0] signals. The link status LinkFail signal is asserted/deasserted by the MIIM module and reflects the link status bit of the PHY Status register. The signal NVALID is used for qualifying the validity of the LinkFail signals and the status data PRSD[15:0]. These signals are invalid until the first scan status operation ends.

During the scan status operation, the BUSY signal is asserted until the last read is performed (the scan status operation is stopped).

4.6.2 Shift Registers Operation

There are two shift registers in the MII Management Module. The Data Shift register is used for:

- ✓ Shifting out the data to the PHY during the Write Data Control operation
- ✓ Shifting in the data during the Read Status operation
- ✓ Shifting out the FIAD[4:0] and RGAD[4:0] addresses during all operations

The Status Shift register contains the data latched during the last Read Status Operation. Two additional status signals (LinkFail Status and Status Invalid NVALID) are latched separately from the Status Shift register.

When a Scan Operation is requested, the state of the PRSD[15:0] and a MIILF is constantly updated from the selected PHY register. NVALID is used to qualify the

validity of the PRSD[15:0] and MIILS signals. These signals are invalid until the first Scan Status Operation ends.

4.6.3 Output Control Module Operation

The Output Control Module combines the MDI, MDO, and MDOEN signals into a bidirectional MDIO signal that is connected to the external MII PHY. During the Write Control Data Operation, the MDIO operates as an output from the MIIM module. The signal is used for transferring data from the MIIM Module to the PHY. During the Read Status Operation, the MDIO first operates as an output (addressing the PHY and the PHY Internal register) and then as an input to the MIIM Module (reading the status data). In both cases the most significant bit of the data is shifted first. When no operation is performed, the MDIO is tri-stated.

4.6.4 Clock Generator Operation


The Management Data Clock MDC is a divided host clock. The division factor is set in the MIIMODER register by setting the CLKDIV[7:0] field (MDC depends on the PHY and can be 2.5 MHz or 12.5 MHz.

5

Architecture

The Ethernet IP Core consists of 5 modules:

- ✓ Host Interface and the BD structure
- ✓ TX Ethernet MAC (transmit function)
- ✓ RX Ethernet MAC (receive function)
- ✓ MAC Control Module
- ✓ MII Management Module

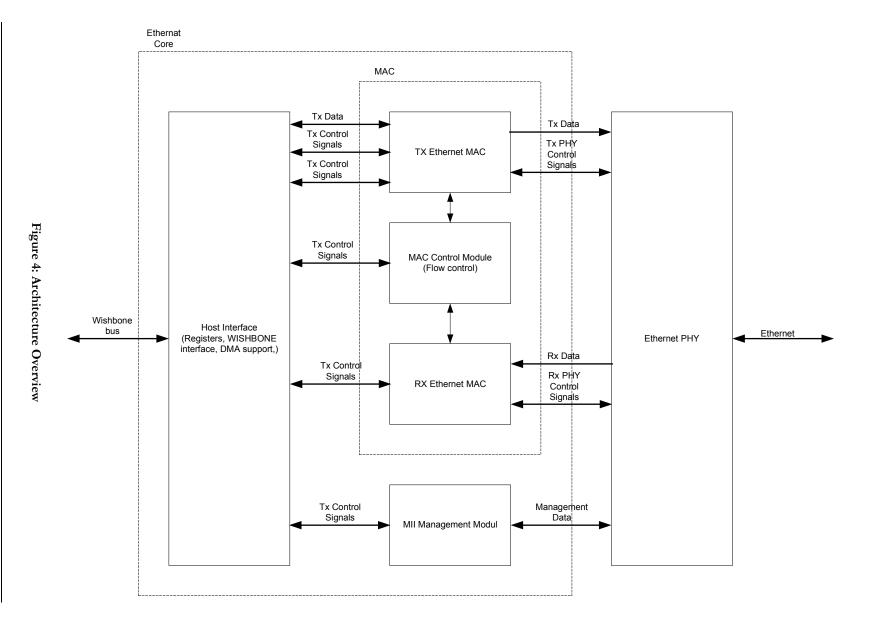

November 27, 2002

Ethernet IP Core Specification

5.1 Host Interface

The host interface is connected to the RISC and the memory through the two Wishbone interfaces. The RISC writes the data for the configuration registers directly while the data frames are written to the memory. For writing data to configuration registers, Wishbone slave interface is used. Data in the memory is accesses through the Wishbone master interface.

5.2 TX Ethernet MAC

The TX Ethernet MAC generates 10BASE-T/100BASE-TX transmit MII nibble data streams in response to the byte streams supplied by the transmit logic (host). It performs the required deferral and back-off algorithms, takes care of the IPG, computes the checksum (FCS) and monitors the physical media (by monitoring Carrier Sense and collision signals).

5.3 RX Ethernet MAC

The RX Ethernet MAC interprets 10BASE-T/100BASE-TX MII receive data nibble streams and supplies correctly formed packet-byte streams to the host. It searches for the SFD (start frame delimiter) at the beginning of the packet, verifies the FCS, and detects any dribble nibbles or receive code violations.

5.4 MAC Control Module

The function of this module is to implement the full-duplex flow control.

The MAC Control Module consists of three sub-modules that provide the following functionality:

- ✓ Control frame detection
- ✓ Control frame generation
- ✓ TX/RX Ethernet MAC Interface

- ✓ PAUSE Timer
- ✓ Slot Timer

5.4.1 Control Frame Detector

The control frame detector checks the incoming frames for the control frames. Control frames can be discarded or passed to the host. When a PAUSE control frame is detected, it can stop the Tx module from transmitting for a certain period of time.

5.4.2 Control Frame Generator

If the need arises to stop the transmitting station from transmitting (flow control in full-duplex mode), a PAUSE control frame can be sent.

5.4.3 TX/RX Ethernet MAC Interface

The MAC Control Module is connected between the host interface, the Tx, and the Rx MAC modules. Signals from the host are passed to the Tx MAC in certain occasions and vice versa.

5.4.4 PAUSE Timer

When a PAUSE control frame is received, the pause timer value is written to the PAUSE timer. This prevents the Tx module from transmitting for a »pause timer value« period of slot time.

5.4.5 Slot Timer

The slot timer measures time slots and generate a pulse to the PAUSE timer for every slot time passed by.

5.5 MII Management Module

The function of the MII Management Module is to control the PHY and to gather information from it (status).

It consists of four sub modules:

- ✓ Operation Control Module
- ✓ Output Control Module
- ✓ Shift Register
- ✓ Clock Generator

5.5.1 Operation Control Module

The function of the Operation Control Module is to perform the following commands:

- ✓ Write control data
- ✓ Read status
- ✓ Scan status

5.5.2 Output Control Module

The Output Control Module controls the signal appearance on the MDO, MCK, and MDOEN pins.

5.5.3 Shift Register

The shift registers hold the status read from an external PHY.

5.5.4 Clock Generator

The clock generator generates an appropriate output clock MCK according to the input host clock and the clock divider bits (CLKDIV[7:0] in the MIIMODER register).