

# **QSpice C-Block Components**

### The Absolute Basics

Document Revision: 2023.10.12

### **Overview**

For those relatively new to C/C++ coding and unfamiliar with DLLs, getting started writing QSpice C-Block components may be a bit intimidating. That's a shame – the ability to write DLL code is pretty powerful stuff. Once you understand what's going on, it's really not that hard. So, let's see if we can get over the conceptual hurdles.

To be clear, this document is intended to explain the bits and pieces of C-Block code. I'll use a small demonstration (EvilAmp) but it is merely to get code in front of us to discuss, not to develop anything particularly useful.

### **Caveats & Cautions**

First and foremost: Do not assume that anything I say is true until you test it yourself. In particular, I have no insider information about QSpice. I've not seen the source code, don't pretend to understand all of the intricacies of the simulator, or, well, anything. Trust me at your own risk.

If I'm wrong, please let me know. If you think this is valuable information, let me know. (As Dave Plummer, ex-Microsoft developer and YouTube celebrity says, "I'm just in this for the likes and subs.")

### **Code Templates**

Qspice makes generating a basic component code template super-simple. See the QSpice tutorial videos [links] for step-by-step instructions.

For demonstration purposes, I've already:

- Created a schematic containing the hierarchical block is named EvilAmp.qsch.
- Set to Symbol Type (in the Symbol Properties) to " $\phi$ (.dll)."
- Added input and output ports of data type double.
- Added an attribute, Gain, of type integer and value of 666.
- Added a voltage source and connected it to the input port on the EvilAmp block.

If you've not already done so, get the associated demo files. Take a few minutes to look at the schematic and generated code before we step through it bit by excruciating bit.

### **The Simplest Version**

Generate a code template and select none of the checkboxes.

We get this:

```
// Automatically generated C++ file on Tue Oct 10 14:02:20 2023
// To build with Digital Mars C++ Compiler:
//
//
      dmc -mn -WD evilamp.cpp kernel32.lib
union uData {
                         b;
 bool
 char
 unsigned char
                         uc;
  short
 unsigned short
                         us;
 int
 unsigned int
                         ui;
                         f;
 float
  double
 long long int
                         i64;
 unsigned long long int ui64;
 char
                        *str;
 unsigned char
                        *bytes;
// int DllMain() must exist and return 1 for a process to load the .DLL
// See https://docs.microsoft.com/en-us/windows/win32/dlls/dllmain for more
// information.
int __stdcall DllMain(void *module, unsigned int reason, void *reserved) {
 return 1;
// #undef pin names lest they collide with names in any header file(s) you might
// include.
#undef In
#undef Out
extern "C" __declspec(dllexport) void evilamp(
    void **opaque, double t, union uData *data) {
                             // input
// input parameter
  double In = data[0].d;
 int Gain = data[1].i;
 double &Out = data[2].d;
                              // output
  // Implement module evaluation code here:
```

We can ignore the DllMain() function. Don't change it, don't delete it.

The magical incantation preceding some functions — extern "C" \_\_declspec(dllexport) — simply tells the compiler/linker to make the function callable from QSpice. Again, don't worry about it.

That leaves the evilamp() function. This is the "evaluation function" called by QSpice whenever it reaches a simulation point and needs our code to do whatever it does. Note that the name of this function must match the DLL name (without the ".dll") and is in lower case. It also matches the name in the schematic hierarchical block although the case may be different.

The parameters to the evaluation function are:

- void \*\*opaque A pointer to a pointer. We'll discuss this later.
- double t The simulation time in seconds.
- union uData \*data A pointer an array of port and attribute parameters passed from QSpice.

The uData array elements are defined in the template as:

```
double In = data[0].d;  // input
int    Gain = data[1].i;  // input parameter
double &Out = data[2].d;  // output
```

These are the ports and attributes passed from QSpice. The order (and types) of these values may change if you alter the hierarchical block. If you do make changes, regenerate the C-Block code to get the proper offsets (and data types).

Because the first two are inputs, they are copied to local variables. That is, you aren't supposed to change the values directly in the uData array.

The third parameter is the value on the output port of the component. We will change this value so the out variable is declared as a reference.

Now we can make our amp component evil. We add the following line:


```
Out = In * Gain;
```

Whatever voltage is applied at the component's In port will be multiplied by the Gain attribute and appear on the Out port.

#### **Per-Instance Data**

OK, what if we need to save some data between QSpice evaluation function calls? A common case is an input port being driven by a clock signal; we want to save the clock state (high/low) and, at the next call, compare the last and current state to determine if there was a rising/falling clock edge.

We could add a "lastClock" variable above the evaluation function (i.e., global scope). We'd then compare In to lastClock. If lastClock != In, we had an edge.

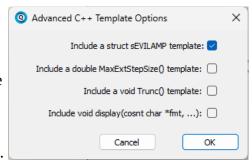

This would work but there's a problem: There is one DLL with one copy of the lastclock variable. If we place a second copy of our component on the schematic, both component "*instances*" would share the same lastclock variable. That might be undesirable. It would be better if each instance of the component had its own copy of the lastclock variable (i.e., "*per-instance data*").

To solve this, let's generate a new C-Block and enable the "Include a struct..." option.

After we generate the file, we get some additional code:

```
// declare the structure here
 double lastClock;
extern "C" __declspec(dllexport) void evilamp(struct sEVILAMP **opaque, double t, union uData
*data)
   double In = data[0].d; // input
   double &Out = data[1].d; // output
   if(!*opaque)
      *opaque = (struct sEVILAMP *) malloc(sizeof(struct sEVILAMP));
      bzero(*opaque, sizeof(struct sEVILAMP));
   struct sEVILAMP *inst = *opaque;
// Implement module evaluation code here:
   if (inst->lastClock != t) {
      /* do stuff... */
      inst->lastClock = t;
}
extern "C" __declspec(dllexport) void Destroy(struct sEVILAMP *inst)
   free(inst);
```

(Code in bold italics added to template after generation.)

The template now declares a structure, sEVILAMP, and we can add our "per-instance" lastclock variable there. Note that this is only a declaration — no storage for this data has been allocated.

The evaluation function signature has changed:

```
void evilamp(struct sEVILAMP **opaque, double t, union uData *data)
```

The first parameter, opaque, changed from a void\*\* to a struct sevilamp\*\*. That is, the passed parameter is *the address of a pointer* to an sevilamp structure.

Looking at the next few lines of code, we see how this works:

- If opaque points to a null pointer, memory for an sevilamp structure is allocated.
- The address of the allocated structure is stored in QSpice at the address pointed to by \*opaque. (Now opaque no longer points to a null pointer.)
- The bzero() function is called to fill the newly allocated sevilamp structure with zero bytes.

Note that QSpice doesn't know anything at all about the sevilamp structure or the data that we put there. All QSpice does is give us a place to store a pointer to a block of data (the structure) that we allocate.

Now, each time that the evaluation function is called, the pointer to the sevilamp structure is saved in the inst variable simply for convenience. We'll use inst-> to access the per-instance data. The added code demonstrated using the lastClock per-instance data.

Note: Pointer stuff is tough for beginning C/C++ programmers so, if the above wasn't clear, well, blame me for explaining it poorly. But do take time to get a handle on it (sorry, bad pun) because it will get worse when we get to the Trunc() function.

The last thing of note is the new Destroy() method. QSpice calls this at the end of the simulation and we free the allocated per-instance data here.

# The display() Template Option

When generating the code template, checking this option adds a display() function. It's simply a wrapper for printf() and writes the data to stdout which the GUI displays in the Output window.

This is particularly useful for debugging C-Block code. However, each call adds a 60ms delay to the simulation execution. That's *clock time*, not simulation time, so don't put display() calls where they will get executed on every evaluation function call unless you need a coffee break.

# The MaxExtStepSize() Template Option

If we enable the MaxExtStepSize() option when generating the code template, we get this additional code:

```
extern "C" __declspec(dllexport) double MaxExtStepSize(struct sEVILAMP *inst)
{
    return 1e308; // implement a good choice of max timestep size that depends on struct sEVILAMP
}
```

And we now reach the limits of my confidence. "Implement a good choice of max timestep size that depends on [the per-instance data]" is frustratingly vague.

I do know a couple of things:

- This function is called between the evaluation function calls (after several initial evaluation function calls).
- We get a pointer to our per-instance data.
- And 1e308 seconds is longer than the heat-death of the universe. The default return value is clearly "I'm in no hurry."

I've used it where I'm trying to create a component that internally clocks at a certain frequency. For example, if I have a component with a "clock frequency" attribute of 1KHz, I might return 0.00100. It seemed to help when the simulation points weren't hitting on my clock frequency reliably.

Do let me know if you have better information.

# The Trunc() Template Option

If we enable the Trunc() option, we get the following Trunc() function:

```
if(*timestep > ttol)
{
    double &Out = data[1].d; // output

    // Save output vector
    const double _Out = Out;

    struct sEVILAMP tmp = *inst;
    evilamp(&(&tmp), t, data);

    // if(tmp != *inst) // implement a meaningful way to detect if the state has changed
    // *timestep = ttol;

    // Restore output vector
    Out = _Out;
}
```

Again, we've reached the limits of my knowledge. "Implement a meaningful way..." isn't very, uh, meaningful because I don't know exactly how QSpice works. The PracticalSMPS example didn't help me much.

But I do know some things. Or can, at least, explain what's happening if not why.

Here's the breakdown of the above template:

- The function receives a proposed next sample time in the t parameter along with the port/attribute data in the uData\* data parameter.
- Then, a *copy* of the passed per-instance data (inst) is made (tmp).
- A copy of the uData output port is saved (\_out).
- The evaluation function is called. The temporary copy of the per-instance data (tmp) is passed along with the uData data. Note that the evaluation function is allowed to change the passed per-instance data (tmp) and output port values (in uData).
- After the call returns, the commented out code does a simple compare of the original perinstance data (\*inst) to the temporary data (tmp) to determine if the evaluation function changed the data any of it. (I suppose that a more nuanced case would compare individual per-instance data elements.) If anything changed, the timestep value is set to a "reasonably small" value to tell QSpice to make the next call to the evaluation function "soon."
- The original incoming per-instance data wasn't changed remember, we passed a temporary copy. However, the uData output port was passed directly to the evaluation function and may have been changed. So, the original out value is restored from \_out.

Now, you might wonder why all of the sleight-of-hand, the call to the evaluation function from Trunc()? Here's my best guess: It's best to have a single place in the code that does the calculations. Calling the evaluation function ensures that you don't duplicate (or fail to faithfully duplicate) the actual functional state code.

Me? I'd have a function that's called from both places and does the heavy lifting. But that's my theory.

So, before explaining how I've used this, here's what I'm assuming (all of which might be wrong):

- QSpice isn't simulating at constant intervals. That is, it intelligently (magically?) decides that, after a simulation at time T, it doesn't need to simulate again until time T + [some time]. That [some time] part isn't a constant.
- The Trunc() function is called with the predicted values for T + [some time] passed in the uData parameter and the prior T per-instance data. Our code is simply supposed to decide if T + [some time] is too long, that our component's state would change.
- If so, we return a smaller [some time] increment and QSpice resets the next simulation timepoint.

So much for guessing. Here's how I've used it:

- My component is supposed to "clock" at a frequency passed as a component attribute. Let's say that's 1KHz. The clock period is 0.001 seconds.
- Each time that the evaluation function is called, the next desired simulation clock tick is calculated and stored in the per-instance data.
- If the simulation time in Trunc() (the t parameter) is past the desired tick time, return a small value in timestep. Otherwise, return the difference between the desired and proposed (Trunc() t parameter) times.

This seems to have worked so far. But I'm in deep water here and, as mentioned several times, I may be very, very wrong.

----

I'm stopping here. Let me know where I've gone far afield.

--robert