

The Memory Hierarchy

COMP400727: Introduction to Computer Systems

Danfeng Shan Xi'an Jiaotong University



- The memory abstraction
- RAM: main memory building block
- Locality of reference
- The memory hierarchy
- Storage technologies and trends



Reading Memory

■ Write

```
Transfer data from CPU to memory movq %rax, 8 (%rsp)

"Store" operation
```

Read


```
Transfer data from memory to CPU movq 8 (%rsp), %rax

"Load" operation
```



Connection between CPU and Memory

- A bus is a collection of parallel wires that carry address, data, and control signals.
- Buses are typically shared by multiple devices.

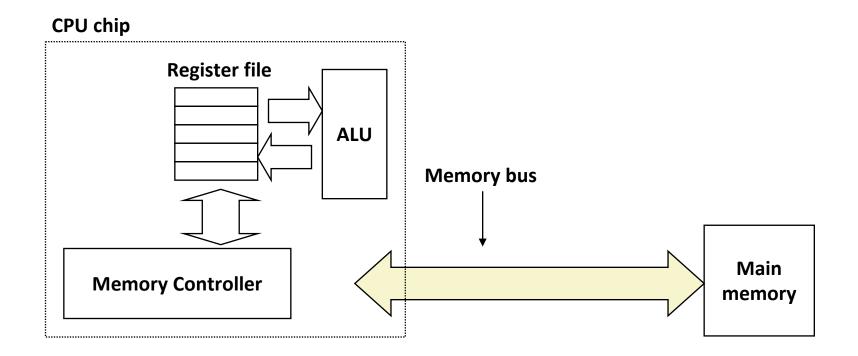




Read Transaction (1)

CPU places address A on the memory bus.


16个通用寄存器 => 其中 %rsp 不能用 %rip 是 专用寄存器

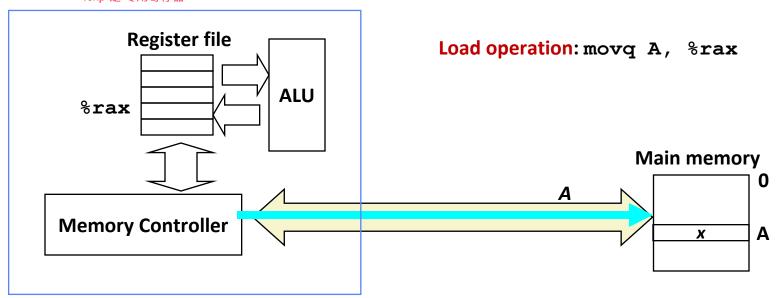



Read Transaction (2)


Main memory reads A from the memory bus, retrieves word x, and places it on the bus.

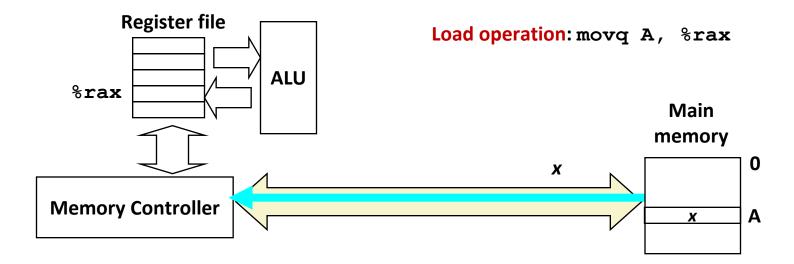



Read Transaction (3)


CPU reads word x from the bus and copies it into register %rax.

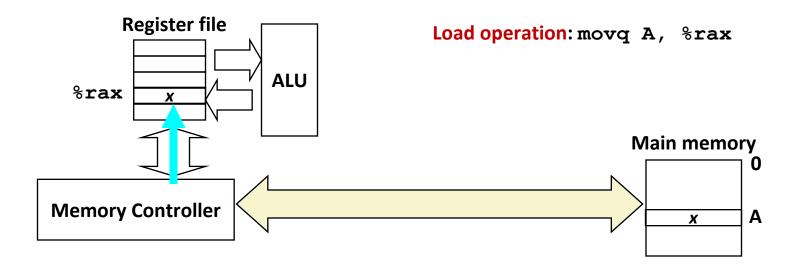



Wyweller Write Transaction (1)


CPU places address A on bus. Main memory reads it and waits for the corresponding data word to arrive.

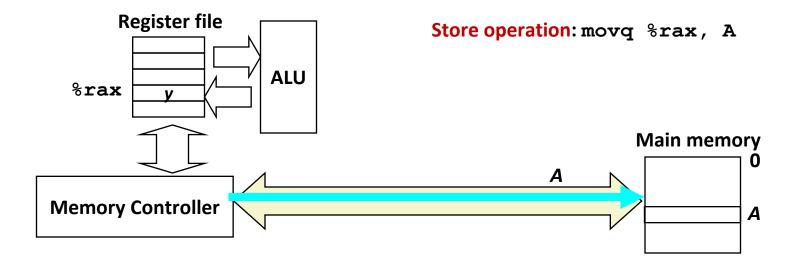



Wille Transaction (2)


CPU places data word y on the bus.

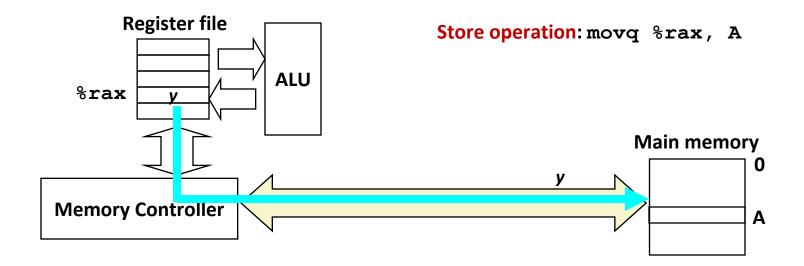



WWW.upprocess Write Transaction (3)

Main memory reads data word y from the bus and stores it at address A.

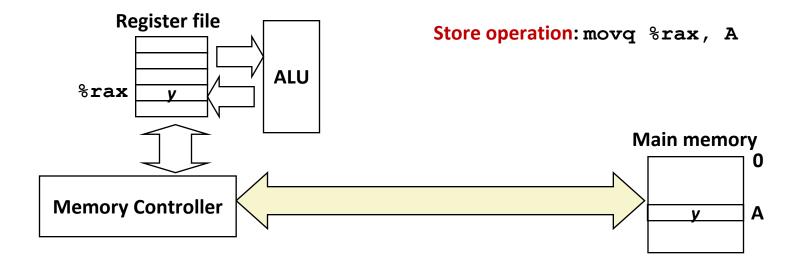



- The memory abstraction
- RAM: main memory building block
- Locality of reference
- The memory hierarchy
- Storage technologies and trends



-Access Memory (RAM)

Key features

RAM is traditionally packaged as a chip.

or embedded as part of processor chip

Basic storage unit is normally a cell (one bit per cell).

Multiple RAM chips form a memory.

1 word = 16 cells


RAM comes in two varieties:

SRAM (Static RAM)

DRAM (Dynamic RAM)




■ DRAM memory

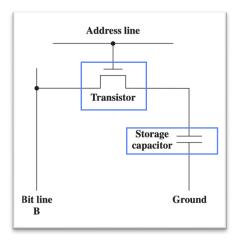

- 1 Transistor + 1 capacitor / bit
- Must refresh state periodicallyMeaning of *dynamic*

SRAM cache

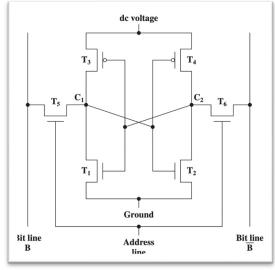

- 6 transistors / bit ^{成本巨高}
- Holds state indefinitely

电容存储不稳定

- => 需要经常进行自主刷新
- => dynamic



DRAM Summary

	Trans. Per bit	Access Time	Needs Fresh?	Needs EDC?	Cost[2023]	Applicatio ns
SRAM	6 or 8	1x	No	Maybe	100x	Cache memory
DRAM	1	10x	Yes	Yes	1x	Main memory

EDC: Error detection and correction



Ms (Hidden Slide, Extra Detail for Modern

- Operation of DRAM cell has not changed since its invention Commercialized by Intel in 1970.
- DRAM cores with better interface logic and faster I/O :

Synchronous DRAM (SDRAM)

Uses a conventional clock signal instead of asynchronous control

Double data-rate synchronous DRAM (DDR SDRAM)

Double edge clocking sends two bits per cycle per pin

Different types distinguished by size of small prefetch buffer:

DDR (2 bits), DDR2 (4 bits), DDR3 (8 bits), DDR4 (8 bits), DDR5 (16bits)

By 2010, standard for most server and desktop systems

Intel Core i7 supports DDR3, and DDR4 SDRAM

Intel Core i7 12th Gen supports DDR5 SDRAM (2021)




- **■** The memory Abstraction
- DRAM : main memory building block
- Locality of reference
- The memory hierarchy
- Storage technologies and trends



-Memory Gap

The gap widens between DRAM, disk, and CPU speeds.

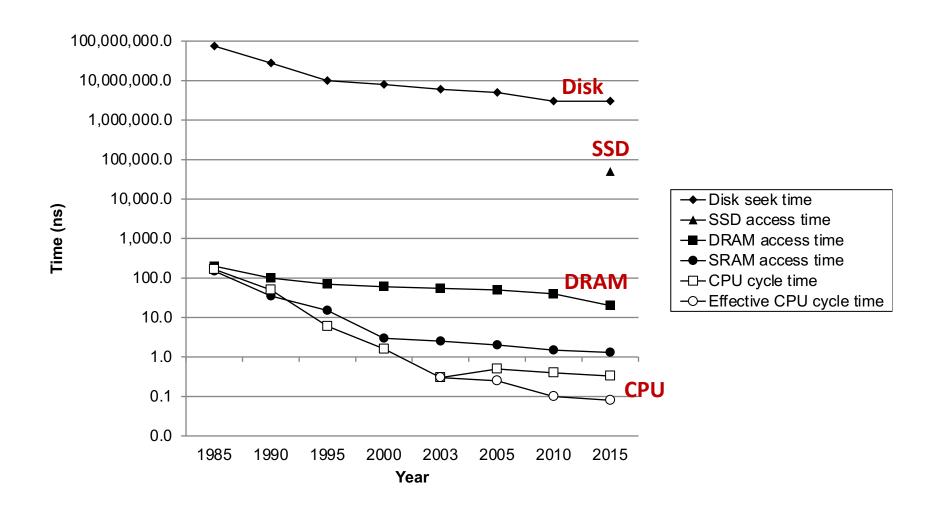



局部性原理


The key to bridging this CPU-Memory gap is an important property of computer programs known as locality.



Principle of Locality: Many Programs tend to use data and instructions with addresses near or equal to those they have used recently.



Recently referenced items are likely to be referenced again in the near future



■ Spatial locality: 空间局部性

Items with <u>nearby addresses</u> tend to be referenced close together in time





```
sum = 0;
for (i = 0; i < n; i++)
sum += a[i];空间
return sum;
```

Data references

Reference <u>array elements</u> in succession (stride-1 reference pattern).

Reference variable **sum** each iteration.

Instruction references

Reference instructions in sequence.

Cycle through loop repeatedly.

Spatial or Temporal Locality?

spatial

temporal

spatial temporal



ve Estimates of Locality

- Claim: Being able to look at code and get a qualitative sense of its locality is a key skill for a professional programmer.
- Question: Does this function have good locality with

respect to array a?

Hint: array layout is row-major order

Answer: yes

```
int sum_array_rows(int a[M][N])
{
   int i, j, sum = 0;

   for (i = 0; i < M; i++)
        for (j = 0; j < N; j++)
            sum += a[i][j];
   return sum;
}</pre>
```

```
    a
    [0]
    a
    a

    [0]
    [0]
    [1]

    [0]
    [N-1]

a

[M-1]

[N-1]
```



Example

Question: Does this function have good locality with respect to array a?

```
int sum_array_cols(int a[M][N])
{
   int i, j, sum = 0;

   for (j = 0; j < N; j++)
        for (i = 0; i < M; i++)
            sum += a[i][j];
   return sum;
}</pre>
```

Answer: no, unless...

M is very small

a [0]	a [0]		 a [1]	 a [M-1]	 a [M-1]
[0]	[N-1]	[0]	[N-1]	[0]	[N-1]



Example

Question: Can you permute the loops so that the function scans the 3-d array a with a stride-1 reference pattern (and thus has good spatial locality)?

```
int sum_array_3d(int a[M][N][N])
{
   int i, j, k, sum = 0;

   for (i = 0; i < N; i++)
        for (j = 0; j < N; j++)
        for (k = 0; k < M; k++)
            sum += a[k][i][j];
   return sum;
}</pre>
```

Answer: make j the inner loop




- The memory abstraction
- RAM: main memory building block
- Locality of reference
- The memory hierarchy
- Storage technologies and trends



Hierarchies

- Some fundamental and enduring properties of hardware and software:
 - Fast storage technologies cost more per byte, have less capacity, and require more power (heat!).
 - The gap between CPU and main memory speed is widening.
 - Well-written programs tend to exhibit good locality.
- These properties complement each other well for many types of programs.
- They suggest an approach for organizing memory and storage systems known as a memory hierarchy.

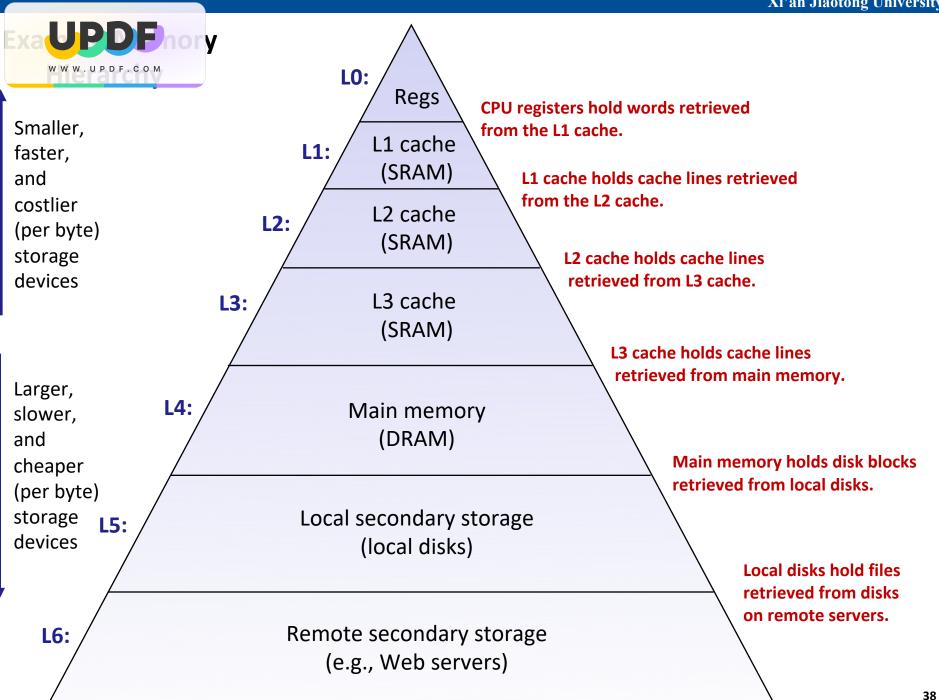



- Cache: A smaller, faster storage device that acts as a staging area for a subset of the data in a larger, slower device.
- Fundamental idea of a memory hierarchy:

For each k, the faster, smaller device at level k serves as a cache for the larger, slower device at level k+1.

Why do memory hierarchies work?


Because of locality: programs tend to access the data at level k more often than they access the data at level k+1.

Thus, the storage at level k+1 can be slower, and thus larger and cheaper per bit.

Big Idea (Ideal): The memory hierarchy creates a large pool of storage that costs as much as the cheap storage near the bottom, but that serves data to programs at the rate of the fast storage near the top.




Cache Concepts

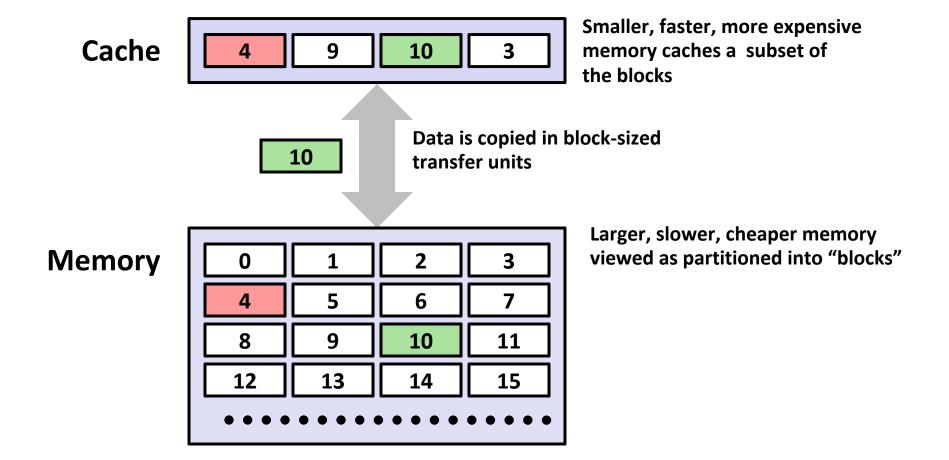




Cache Concepts: Hit

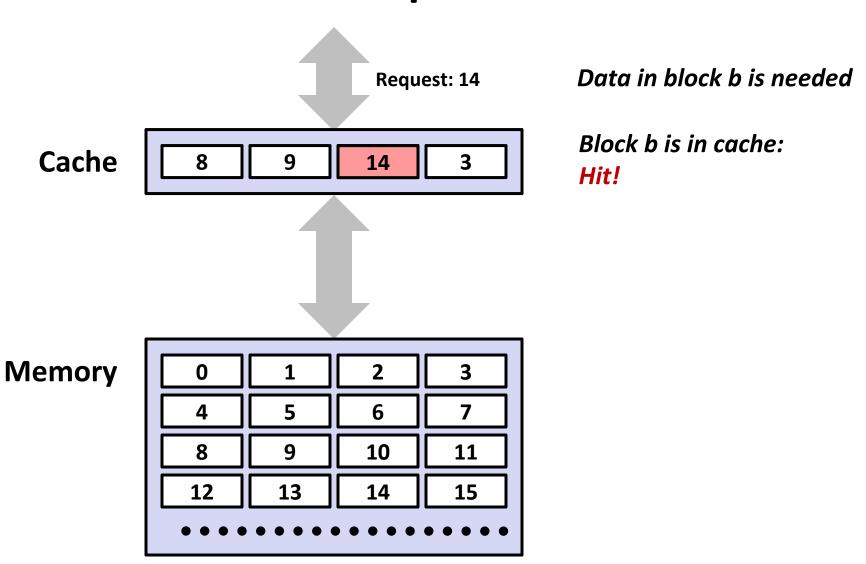



Cache Concepts: Miss

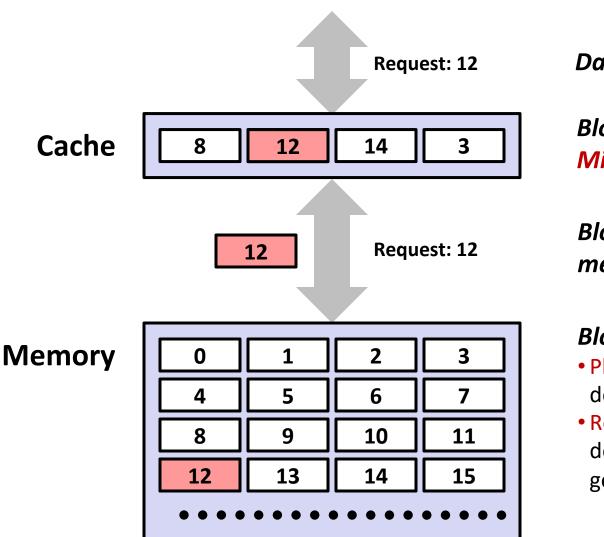

Data in block b is needed

Block b is not in cache: Miss!

Block b is fetched from memory

Block b is stored in cache

- Placement policy: determines where b goes
- Replacement policy: determines which block gets evicted (victim)



Caching Concepts:

3 Types of Cache Misses

Cold (compulsory) miss

Cold misses occur because the cache starts empty and this is the first reference to the block.

Capacity miss

Occurs when the set of active cache blocks (working set) is larger than the cache.

Conflict miss

Most caches limit blocks at level k+1 to a small subset (sometimes a singleton) of the block positions at level k.

E.g. Block i at level k+1 must be placed in block (i mod 4) at level k.

Conflict misses occur when the level k cache is large enough, but multiple data objects all map to the same level k block.

E.g. Referencing blocks 0, 8, 0, 8, ... would miss every time.



Les of Caching in the Mem. Hierarchy

Cache Type	What is Cached?	Where is it Cached?	Latency (cycles)	Managed By
Registers	4-8 byte words	CPU core	0	Compiler
TLB	Address translations	On-Chip TLB	0	Hardware MMU
L1 cache	64-byte blocks	On-Chip L1	4	Hardware
L2 cache	64-byte blocks	On-Chip L2	10	Hardware
Virtual Memory	4-KB pages	Main memory	100	Hardware + OS
Buffer cache	Parts of files	Main memory	100	OS
Disk cache	Disk sectors	Disk controller	100,000	Disk firmware
Network buffer cache	Parts of files	Local disk	10,000,000	NFS client
Browser cache	Web pages	Local disk	10,000,000	Web browser
Web cache	Web pages	Remote server disks	1,000,000,000	Web proxy server



- The memory abstraction
- RAM: main memory building block
- Locality of reference
- The memory hierarchy
- Storage technologies and trends



- DRAM and SRAM are volatile memories

 Lose information if powered off.
- Nonvolatile memories retain value even if powered off

Read-only memory (ROM): programmed during production Electrically eraseable PROM (EEPROM): electronic erase capability Flash memory: EEPROMs, with partial (block-level) erase capability

Wears out after about 100,000 erasings

3D XPoint (Intel Optane)

New materials

Discontinued in 2022

Uses for Nonvolatile Memories

Firmware programs stored in a ROM (BIOS, controllers for disks, network cards, graphics accelerators, security subsystems,...)
Solid state disks (replacing rotating disks)
Disk caches




Technologies

Magnetic Disks



- Store on magnetic medium
- Electromechanical access

Nonvolatile (Flash) Memory

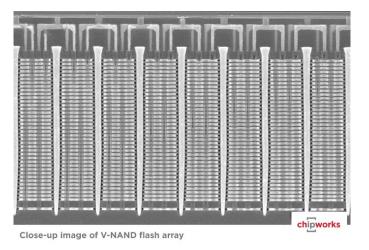

charge
Implemented with 3-D
structure

100+ levels of cells

3-4 bits data per cell



Inside A Disk Drive?

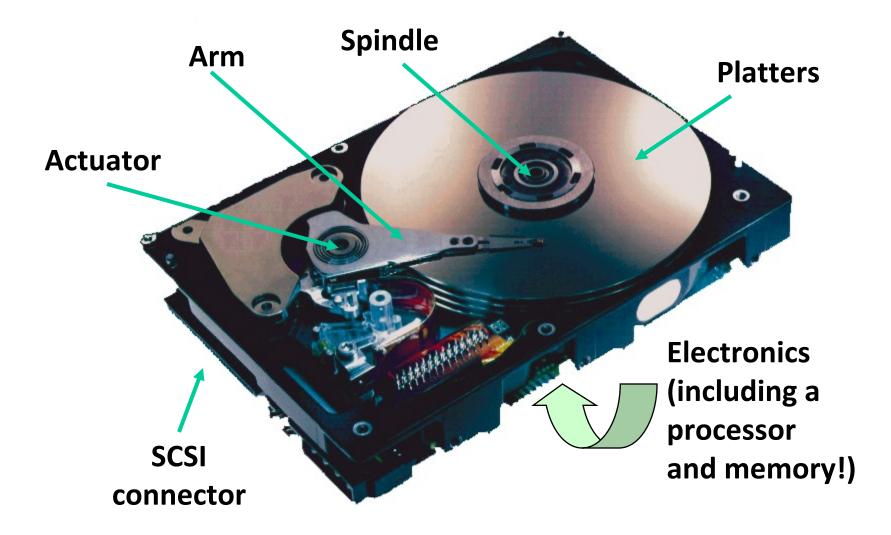



Image courtesy of Seagate Technology



啃芝士ЫіЫі		



- Disks consist of platters, each with two surfaces.
- Each surface consists of concentric rings called tracks.
- Each track consists of sectors separated by gaps.

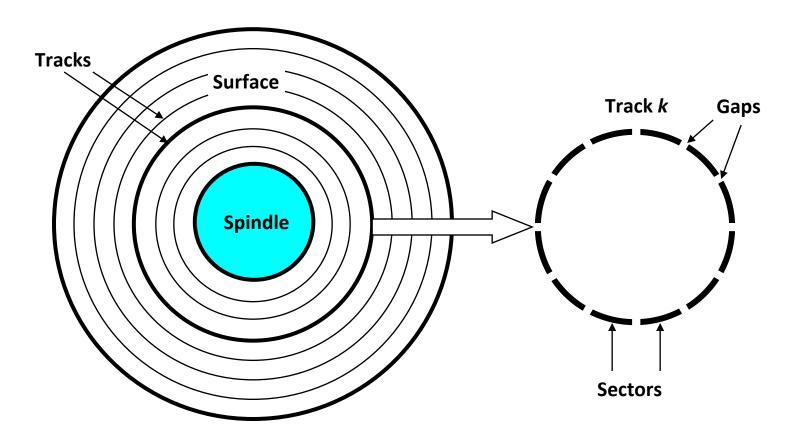



Capacity: maximum number of bits that can be stored.


Vendors express capacity in units of gigabytes (GB) or terabytes (TB), where 1 GB = 10^9 Bytes and 1 TB = 10^{12} Bytes

Capacity is determined by these technology factors:

Recording density (bits/in): number of bits that can be squeezed into a 1 inch segment of a track.


Track density (tracks/in): number of tracks that can be squeezed into a 1 inch radial segment.

Areal density (bits/in²): product of recording and track density.

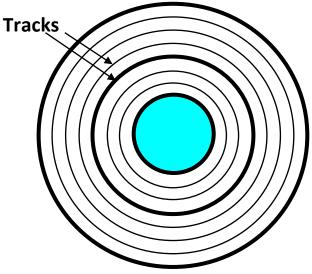


UPDFWww.peration (Single-Platter View)

The disk surface spins at a fixed rotational rate

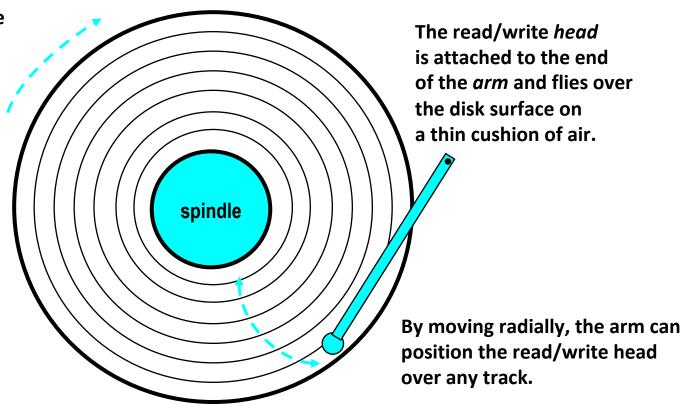




Multi-Platter View)

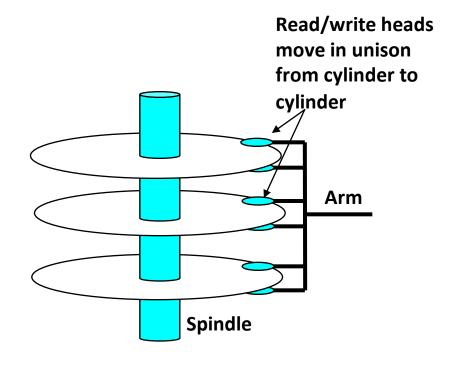




Service Time Components

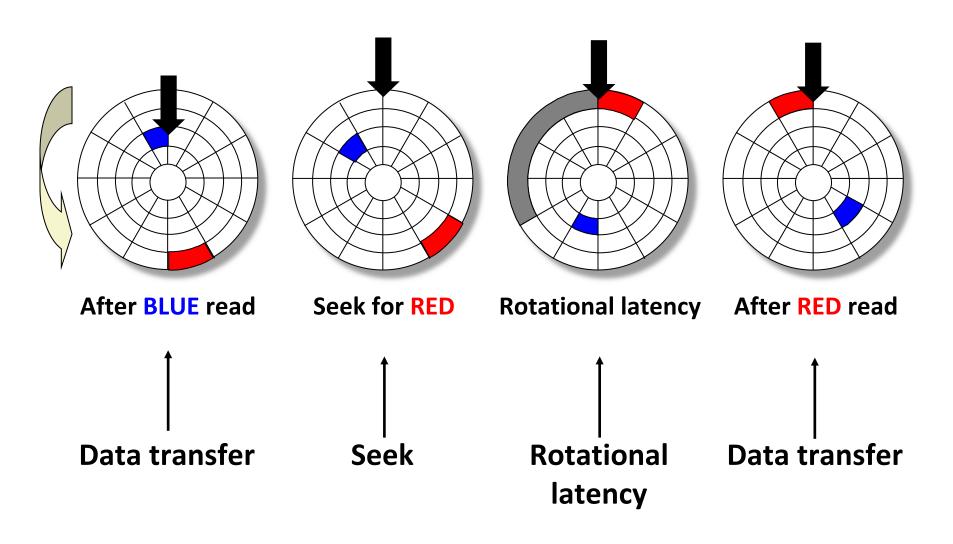




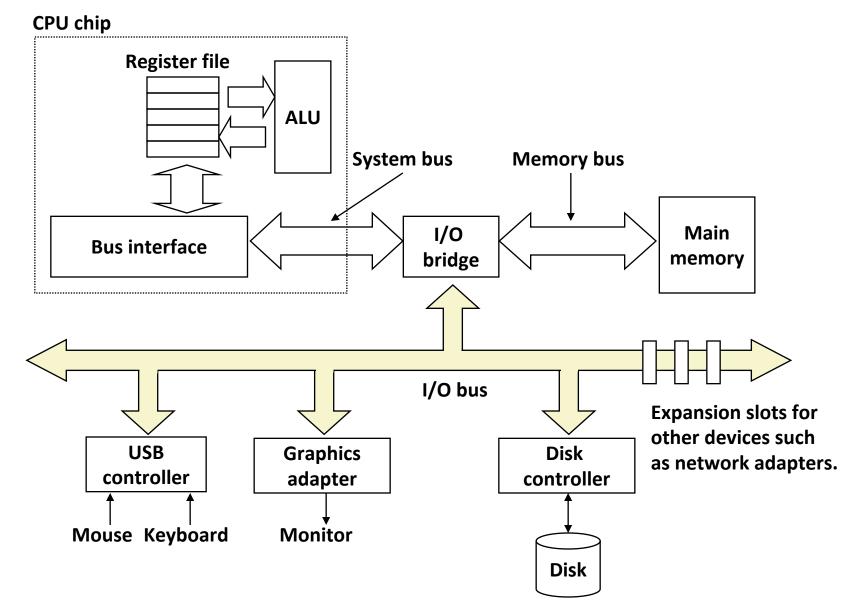




a Disk Sector (1)

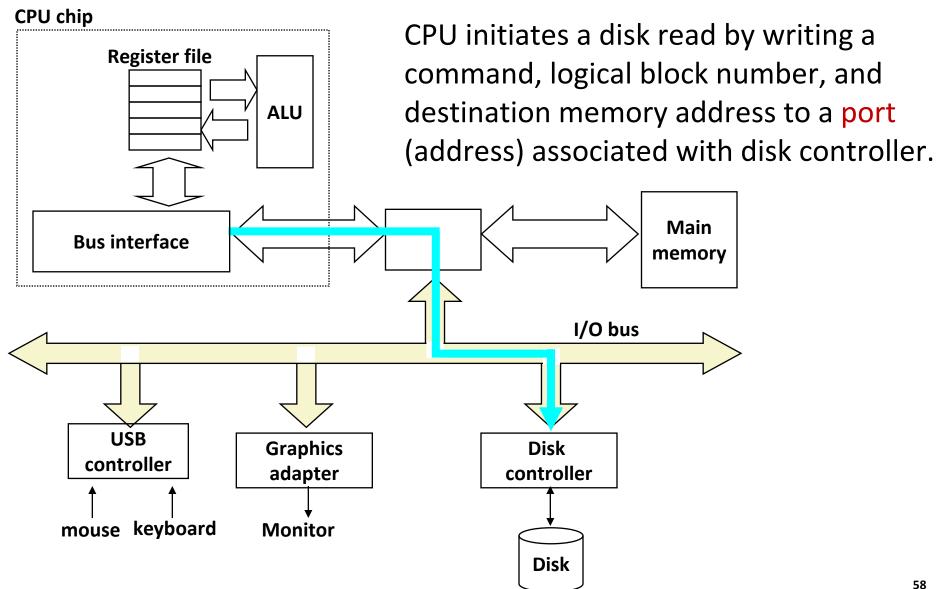




a Disk Sector (2)

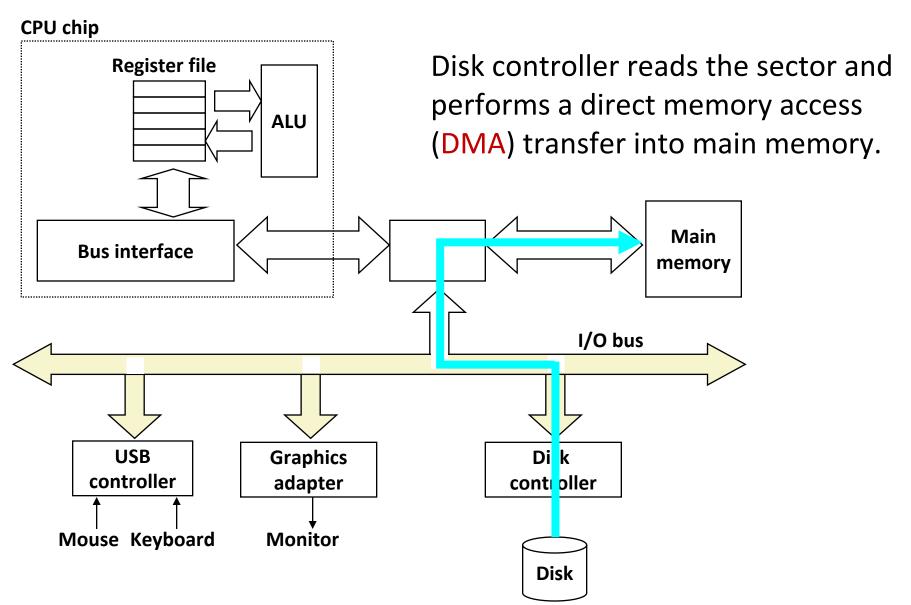




a Disk Sector (3)

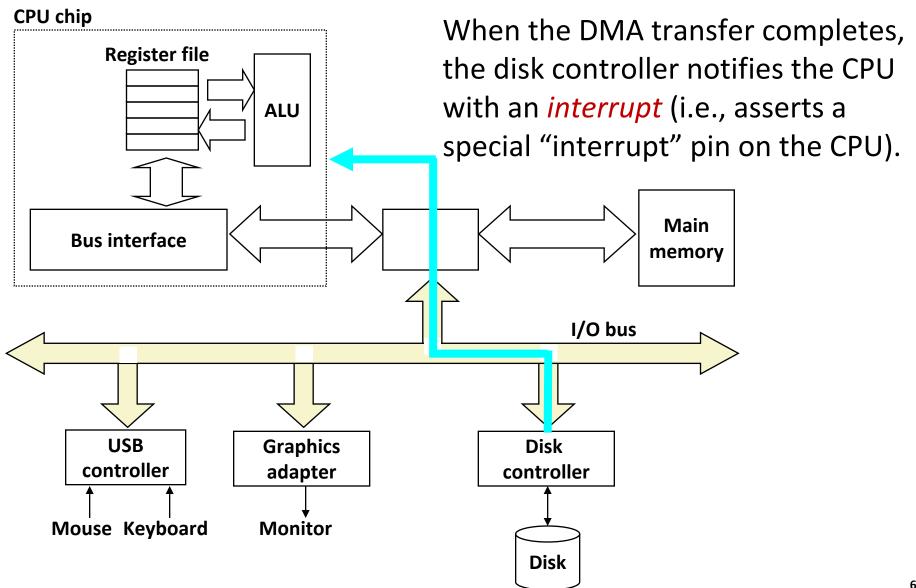


Service State Disks (SSDs)

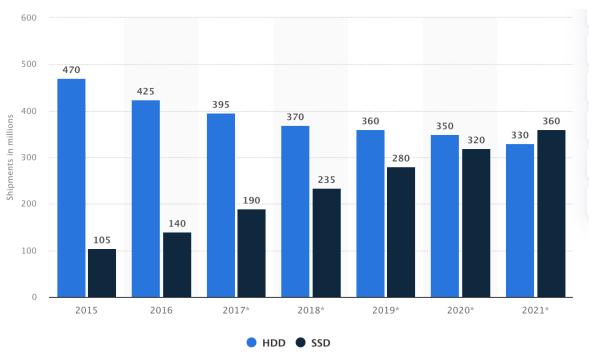

Shipments of hard and solid state disk (HDD/SSD) drives worldwide from 2015 to 2021




■ Memory Unit: Floating-gate MOSFET

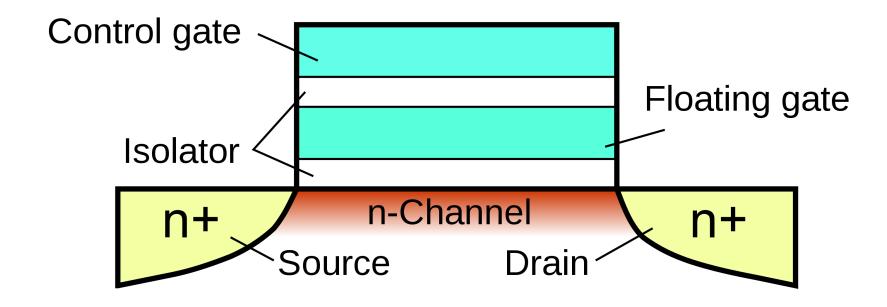




Memory Unit: Floating-gate MOSFET

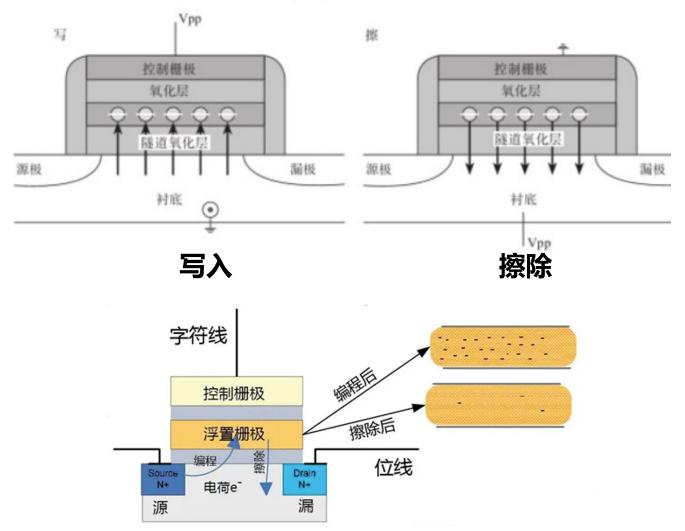




Memory Unit: Floating-gate MOSFET

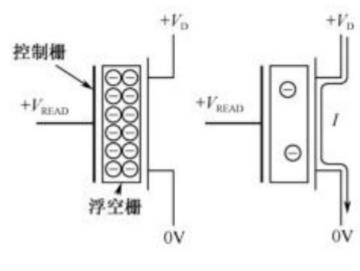

读取



te Disks (SSDs)

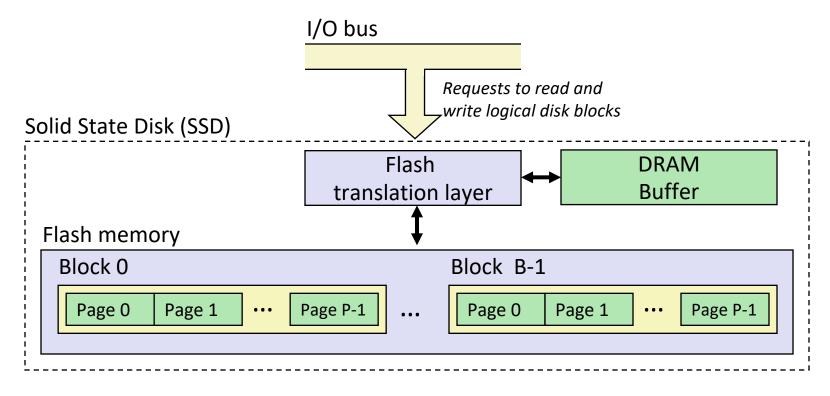

- Pages: 512KB to 4KB, Blocks: 32 to 128 pages
- Data read/written in units of pages.
- Page can be written only after its block has been erased.
- A block wears out after about 10,000 repeated writes.



Benchmark of Samsung 970 EVO Plus

https://ssd.userbenchmark.com/SpeedTest/711305/Samsung-SSD-970-EVO-Plus-250GB

Sequential read throughput	2,221 MB/s	Sequential write tput	1,912 MB/s
Random read throughput	61.7 MB/s	Random write tput	165 MB/s
Random DQ throughput	947 MB/s	Random DQ write	1028 MB/s

Common theme in the memory hierarchy

DQ = deep queue, issuing many concurrent reads (latency hurts!)

Random writes are tricky

Erasing a block takes a long time (~1 ms), but the SSD has a pool of preerased blocks

Modifying a block page requires all other pages to be copied to new block.

But the SSD has a write cache that it accumulates writes into...



eoffs vs Rotating Disks

Advantages

No moving parts → faster, less power, more rugged

Disadvantages

Have the potential to wear out

Mitigated by "wear leveling logic" in flash translation layer

E.g. Samsung 940 EVO Plus guarantees 600 writes/byte of writes before they wear out

Controller migrates data to minimize wear level

In 2023, about 1.67 times more expensive per byte (1 TB drive)

And, relative cost will keep dropping (2015: 30 times, 2022: 4-5 times)

Where are are rotating disks still used?

Bulk storage – video, huge datasets / databases, etc.

Cheap storage – desktops.



- The speed gap between CPU, memory and mass storage continues to widen.
- Well-written programs exhibit a property called locality.
- Memory hierarchies based on caching close the gap by exploiting locality.
- Flash memory progress outpacing all other memory and storage technologies (DRAM, SRAM, magnetic disk)

Able to stack cells in three dimensions



SRAM

Metric	1985	1990	1995	2000	2005	2010	2015	2015:1985
\$/MB	2,900	320	256	100	75	60	320	116
access (ns)	150	35	15	3	2	1.5	200	115

DRAM

Metric	1985	1990	1995	2000	2005	2010	2015	2015:1985
¢/MD	000	400	20	4	0.4	0.06	0.02	44.000
\$/MB	880	100	30		0.1	0.06	0.02	44,000
access (ns)	200	100	70	60	50	40	20	10
typical size (MB)	0.256	4	16	64	2,000	8,000	16.000	62,500

Disk

Metric	1985	1990	1995	2000	2005	2010	2015	2015:1985
\$/GB access (ms)	100,000 75	8,000 28	300 10	10 8	5 5	0.3 3	0.03 3	3,333,333 25
typical size (GB)	0.01	0.16	1	20	160	1,500	3,000	300,000



Inflection point in computer history when designers hit the "Power Wall"

	1985	1990	1995	2003	2005	2010	2015	2015:1985
СРИ	80286	80386	Pentium	P-4	Core 2	Core i7(r) Core i7(h)
Clock rate (MHz) 6	20	150	3,300	2,000	2,500	3,000	500
Cycle time (ns)	166	50	6	0.30	0.50	0.4	0.33	500
Cores	1	1	1	1	2	4	4	4
Effective cycle	166	50	6	0.30	0.25	0.10	0.08	2,075

(n) Nehalem processor(h) Haswell processor