Central Processing Unit

CENTRAL PROCESSING UNIT

- Introduction
- General Register Organization
- Stack Organization
- Instruction Formats
- Addressing Modes
- Data Transfer and Manipulation
- Program Control
- Reduced Instruction Set Computer (RISC)

MAJOR COMPONENTS OF CPU

Storage Components:

Registers Flip-flops

Execution (Processing) Components:

Arithmetic Logic Unit (ALU):


Arithmetic calculations, Logical computations, Shifts/Rotates

Transfer Components:


Bus

Control Components:

Control Unit

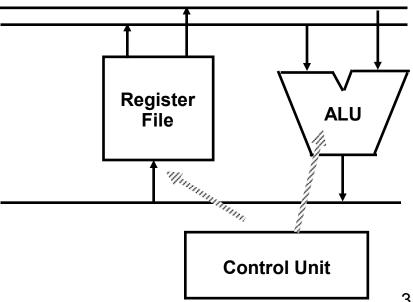

GENERAL REGISTER ORGANIZATION

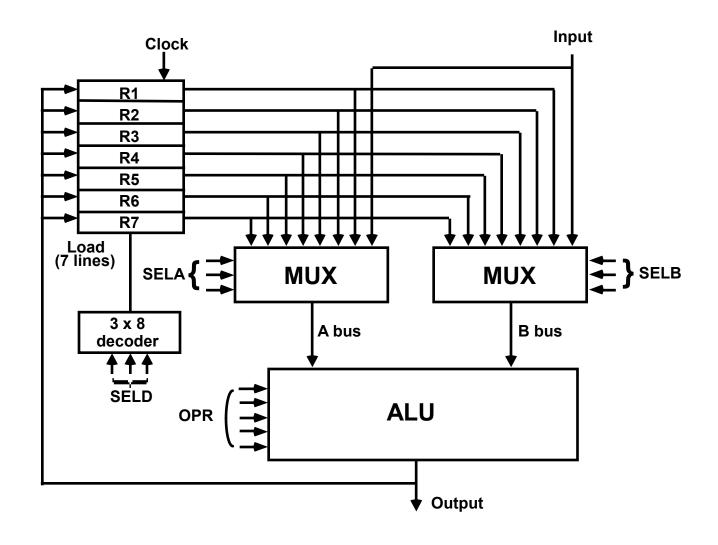

OPERATION OF CONTROL UNIT

The control unit directs the information flow through ALU by:

- Selecting various Components in the system
- Selecting the Function of ALU

Example: R1 <- R2 + R3

[1] MUX A selector (SELA): BUS A ← R2

[2] MUX B selector (SELB): BUS B ← R3

[3] ALU operation selector (OPR): ALU to ADD

[4] Decoder destination selector (SELD): R1 ← Out Bus

Control Word

3	3	3	5
SELA	SELB	SELD	OPR

Encoding of register selection fields

<u> </u>			
Binary Code	SELA	SELB	SELD
000	Input	Input	None
001	Ř1	Ř1	R1
010	R2	R2	R2
011	R3	R3	R3
100	R4	R4	R4
101	R5	R5	R5
110	R6	R6	R6
111	R7	R7	R7

ALU CONTROL

Encoding of ALU operations

OPR		
Select	Operation	Symbol
00000	Transfer A	TSFA
00001	Increment A	INCA
00010	ADD A + B	ADD
00101	Subtract A - B	SUB
00110	Decrement A	DECA
01000	AND A and B	AND
01010	OR A and B	OR
01100	XOR A and B	XOR
01110	Complement A	COMA
10000	Shift right A	SHRA
11000	Shift left A	SHLA

Examples of ALU Microoperations


	Symbolic Designation				
Microoperation	SELA	SELB	SELD	OPR	Control Word
R1 ← R2 - R3	R2	R3	R1	SUB	010 011 001 00101
$R4 \leftarrow R4 \lor R5$	R4	R5	R4	OR	100 101 100 01010
R6 ← R6 + 1	R6	-	R6	INCA	110 000 110 00001
R7 ← R1	R1	-	R7	TSFA	001 000 111 00000
Output ← R2	R2	-	None	TSFA	010 000 000 00000
Output ← Input	Input	-	None	TSFA	000 000 000 00000
R4 ← shl R4	R4	-	R4	SHLA	100 000 100 11000
R5 ← 0	R5	R5	R5	XOR	101 101 101 01100

REGISTER STACK ORGANIZATION

Stack

- Very useful feature for nested subroutines, nested loops control
- Also efficient for arithmetic expression evaluation
- Storage which can be accessed in LIFO
- Pointer: SP
- Only PUSH and POP operations are applicable

Register Stack

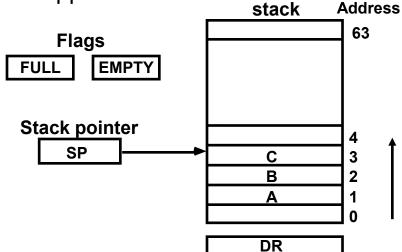


Push, Pop operations

/* Initially, SP = 0, EMPTY = 1, FULL = 0 */

<u>PUSH</u>	<u>POP</u>
$SP \leftarrow SP + 1$	$DR \leftarrow M[SP]$
M[SP] ← DR	SP ← SP - 1
If (SP = 0) then (FULL \leftarrow 1)	If (SP = 0) then (EMPTY \leftarrow 1)
EMPTY ← 0	FULL ← 0

MEMORY STACK ORGANIZATION

Memory with Program, Data, and Stack Segments

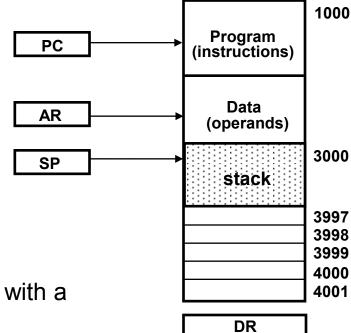

 A portion of memory is used as a stack with a processor register as a stack pointer

- PUSH: SP ← SP - 1

 $M[SP] \leftarrow DR$

- POP: $DR \leftarrow M[SP]$

 $SP \leftarrow SP + 1$

- Most computers do not provide hardware to check stack overflow (full stack) or underflow(empty stack)

REVERSE POLISH NOTATION

Arithmetic Expressions: A + B

A + B Infix notation


+ A B Prefix or Polish notation

AB + Postfix or reverse Polish notation

 The reverse Polish notation is very suitable for stack manipulation

Evaluation of Arithmetic Expressions

Any arithmetic expression can be expressed in parenthesis-free Polish notation, including reverse Polish notation

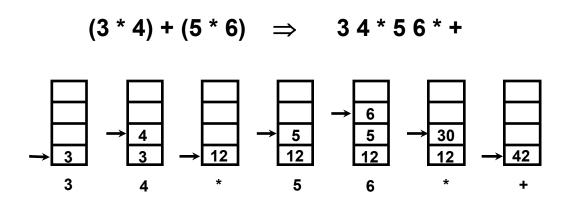

INSTRUCTION FORMAT

Instruction Fields

OP-code field - specifies the operation to be performed

Address field - designates memory address(s) or a processor register(s)

Mode field - specifies the way the operand or the effective address is determined

The number of address fields in the instruction format depends on the internal organization of CPU

- The three most common CPU organizations:

Single accumulator organization:

```
ADD X /* AC \leftarrow AC + M[X] */
```

General register organization:

Stack organization:

PUSH X /* TOS
$$\leftarrow$$
 M[X] */ ADD

THREE, and TWO-ADDRESS INSTRUCTIONS

Three-Address Instructions:

- Results in short programs
- Instruction becomes long (many bits)

Two-Address Instructions:

Program to evaluate X = (A + B) * (C + D):

ONE, and ZERO-ADDRESS INSTRUCTIONS

One-Address Instructions:

- Use an implied AC register for all data manipulation
- Program to evaluate X = (A + B) * (C + D):

```
LOAD
                           /* AC \leftarrow M[A]
ADD
                            /* AC \leftarrow AC + M[B]
                                                      */
STORE
                            /* M[T] \leftarrow AC
                            /* AC \leftarrow M[C]
LOAD
ADD
                            /* AC \leftarrow AC + M[D]
MUL
                            /* AC \leftarrow AC * M[T]
                                                      */
STORE
                            /* M[X] \leftarrow AC
```

Zero-Address Instructions:

- Can be found in a stack-organized computer
- Program to evaluate $X = (\tilde{A} + B) * (C + D)$:

PUSH	Α	/* TOS ← A */
PUSH	В	/* TOS ← B */
ADD		/* TOS ← (A + B) */
PUSH	С	/* TOS ← C $*/$
PUSH	D	/* TOS ← D */
ADD		/* TOS ← (C + D) $*$ /
MUL		/* TOS \leftarrow (C + D) * (A + B) */
POP	X	/* M[X] ← TOS

ADDRESSING MODES

Addressing Modes:

- * Specifies a rule for interpreting or modifying the address field of the instruction (before the operand is actually referenced)
- * Variety of addressing modes
 - to give programming flexibility to the user
 - to use the bits in the address field of the instruction efficiently

Implied Mode

Address of the operands are specified implicitly in the definition of the instruction

- No need to specify address in the instruction
- EA = AC, or EA = Stack[SP], EA: Effective Address.

Immediate Mode

Instead of specifying the address of the operand, operand itself is specified

- No need to specify address in the instruction
 - However, operand itself needs to be specified
 - Sometimes, require more bits than the address
 - Fast to acquire an operand

Register Mode

Address specified in the instruction is the register address

- Designated operand need to be in a register
- Shorter address than the memory address
- Saving address field in the instruction
- Faster to acquire an operand than the memory addressing
- EA = IR(R) (IR(R): Register field of IR)

Register Indirect Mode

Instruction specifies a register which contains the memory address of the operand

- Saving instruction bits since register address is shorter than the memory address
- Slower to acquire an operand than both the register addressing or memory addressing
- EA = [IR(R)] ([x]: Content of x)

Auto-increment or Auto-decrement features:

Same as the Register Indirect, but:

- When the address in the register is used to access memory, the value in the register is incremented or decremented by 1 (after or before the execution of the instruction)

Direct Address Mode

Instruction specifies the memory address which can be used directly to the physical memory

- Faster than the other memory addressing modes
- Too many bits are needed to specify the address for a large physical memory space
- EA = IR(address), (IR(address): address field of IR)

Indirect Addressing Mode

The address field of an instruction specifies the address of a memory location that contains the address of the operand

- When the abbreviated address is used, large physical memory can be addressed with a relatively small number of bits
- Slow to acquire an operand because of an additional memory access
- EA = M[IR(address)]

Relative Addressing Modes

The Address fields of an instruction specifies the part of the address (abbreviated address) which can be used along with a designated register to calculate the address of the operand

```
PC Relative Addressing Mode(R = PC)
- EA = PC + IR(address)
```

- Address field of the instruction is short
- Large physical memory can be accessed with a small number of address bits

Indexed Addressing Mode

XR: Index Register:

- EA = XR + IR(address)

Base Register Addressing Mode

BAR: Base Address Register:

- EA = BAR + IR(address)

ADDRESSING MODES - EXAMPLES



R1 = 400

XR = 100

AC

Addressing Mode	Effective Address			Content of AC
Direct address	500	/* AC ← (500)	*/	800
Immediate operan	d -	/* AC ← 500	*/	500
Indirect address	800	$/* AC \leftarrow ((500))$	*/	300
Relative address	702	/* AC ← (PC+500)	*/	325
Indexed address	600	/* AC ← (XR+500)	*/	900
Register	-	/* AC ← R1	*/	400
Register indirect	400	/* AC ← (R1)	*/	700
Autoincrement	400	/* AC ← (R1)+	*/	700
Autodecrement	399	/* AC ← -(R)	*/	450

Addres	ss Memory
200	Load to AC Mode
201	Address = 500
202	Next instruction
399	450
400	700
500	800
600	900
702	325
800	300

DATA TRANSFER INSTRUCTIONS

Typical Data Transfer Instructions

Name	Mnemonic
Load	LD
Store	ST
Move	MOV
Exchange	XCH
Input	IN
Output	OUT
Push	PUSH
Pop	POP

Data Transfer Instructions with Different Addressing Modes

Mode	Assembly Convention	Register Transfer
Direct address	LD ADR	$AC \leftarrow M[ADR]$
Indirect address	LD @ADR	$AC \leftarrow M[M[ADR]]$
Relative address	LD \$ADR	$AC \leftarrow M[PC + ADR]$
Immediate operand	LD #NBR	AC ← NBR
Index addressing	LD ADR(X)	$AC \leftarrow M[ADR + XR]$
Register	LD R1	AC ← R1
Register indirect	LD (R1)	AC ← M[R1]
Autoincrement	LD (R1)+	$AC \leftarrow M[R1], R1 \leftarrow R1 + 1$
Autodecrement	LD -(R1)	$R1 \leftarrow R1 - 1$, $AC \leftarrow M[R1]$

DATA MANIPULATION INSTRUCTIONS

Three Basic Types: Arithmetic instructions

Logical and bit manipulation instructions

Shift instructions

Arithmetic Instructions

Name	Mnemonic
Increment	INC
Decrement	DEC
Add	ADD
Subtract	SUB
Multiply	MUL
Divide	DIV
Add with Carry	ADDC
Subtract with Borrow	SUBB
Negate(2's Complement)	NEG


Logical and Bit Manipulation Instructions

Name	Mnemonic
Clear	CLR
Complement	COM
AND	AND
OR	OR
Exclusive-OR	XOR
Clear carry	CLRC
Set carry	SETC
Complement carry	y COMC
Enable interrupt	EI
Disable interrupt	DI

Shift Instructions

Name	Mnemonic
Logical shift right	SHR
Logical shift left	SHL
Arithmetic shift right	SHRA
Arithmetic shift left	SHLA
Rotate right	ROR
Rotate left	ROL
Rotate right thru carry	RORC
Rotate left thru carry	ROLC

PROGRAM CONTROL INSTRUCTIONS




In-Line Sequencing
(Next instruction is fetched from the next adjacent location in the memory)

Address from other source; Current Instruction, Stack, etc Branch, Conditional Branch, Subroutine, etc

Program Control Instructions

Name	Mnemonic
Branch	BR
Jump	JMP
Skip	SKP
Cali	CALL
Return	RTN
Compare(by -)	CMP
Test (by AND)	TST

* CMP and TST instructions do not retain their results of operations(- and AND, respectively). They only set or clear certain Flags.

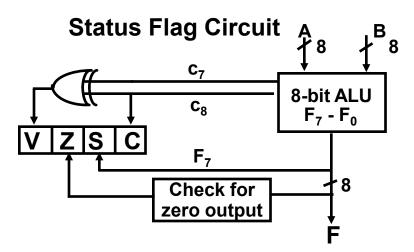

CONDITIONAL BRANCH INSTRUCTIONS

Mnemonic	Branch condition	Tested condition
BZ	Branch if zero	Z = 1
BNZ	Branch if not zero	Z = 0
ВС	Branch if carry	C = 1
BNC	Branch if no carry	C = 0
BP	Branch if plus	S = 0
ВМ	Branch if minus	S = 1
BV	Branch if overflow	V = 1
BNV	Branch if no overflow	V = 0
Unsigned compare conditions (A - B)		
ВНІ	Branch if higher	A > B
BHE	Branch if higher or eq	ual A≥B
BLO	Branch if lower	A < B
BLOE	Branch if lower or equ	ıal A≤B
BE	Branch if equal	A = B
BNE	Branch if not equal	A ≠ B
Signed compare conditions (A - B)		
BGT	Branch if greater than	A > B
BGE	Branch if greater or ed	
BLT	Branch if less than	A < B
BLE	Branch if less or equa	I A≤B
BE	Branch if equal	A = B
BNE	Branch if not equal	A≠B

SUBROUTINE CALL AND RETURN

SUBROUTINE CALL

Call subroutine
Jump to subroutine
Branch to subroutine
Branch and save return address

Two Most Important Operations are Implied;

- * Branch to the beginning of the Subroutine
 - Same as the Branch or Conditional Branch
- * Save the Return Address to get the address of the location in the Calling Program upon exit from the Subroutine
 - Locations for storing Return Address:
 - Fixed Location in the subroutine(Memory)
 - Fixed Location in memory
 - In a processor Register
 - In a memory stack
 - most efficient way

```
CALL
SP \leftarrow SP - 1
M[SP] \leftarrow PC
PC \leftarrow EA
RTN
PC \leftarrow M[SP]
SP \leftarrow SP + 1
```

PROGRAM INTERRUPT

Types of Interrupts:

External interrupts

External Interrupts initiated from the outside of CPU and Memory

- I/O Device -> Data transfer request or Data transfer complete
- Timing Device -> Timeout
- Power Failure

Internal interrupts (Traps)

Internal Interrupts are caused by the currently running program

- Register, Stack Overflow
- Divide by zero
- OP-code Violation
- Protection Violation

Software Interrupts

Both External and Internal Interrupts are initiated by the computer Hardware. Software Interrupts are initiated by executing an instruction.

- Supervisor Call -> Switching from a user mode to the supervisor mode

-> Allows to execute a certain class of operations which are not allowed in the user mode

INTERRUPT PROCEDURE

Interrupt Procedure and Subroutine Call

- The interrupt is usually initiated by an internal or an external signal rather than from the execution of an instruction (except for the software interrupt)
- The address of the interrupt service program is determined by the hardware rather than from the address field of an instruction
- An interrupt procedure usually stores all the information necessary to define the state of CPU rather than storing only the PC.

The state of the CPU is determined from;

Content of the PC

Content of all processor registers

Content of status bits


Many ways of saving the CPU state depending on the CPU architectures

CISC: COMPLEX INSTRUCTION SET

Historical Background

IBM System/360, 1964

- The real beginning of modern computer architecture
- Distinction between Architecture and Implementation
- Architecture: The abstract structure of a computer seen by an assembly-language programmer



Continuing growth in semiconductor memory and microprogramming

- -> A much richer and complicated instruction sets => CISC(Complex Instruction Set Computer)
- Arguments advanced at that time

Richer instruction sets would simplify compilers
Richer instruction sets would alleviate the software crisis

- move as much functions to the hardware as possible
- close Semantic Gap between machine language and the high-level language

Richer instruction sets would improve the architecture quality

COMPLEX INSTRUCTION SET COMPUTERS: CISC

High Performance General Purpose Instructions

Characteristics of CISC:

- 1. A large number of instructions (from 100-250 usually)
- 2. Some instructions that performs a certain tasks are not used frequently.
- 3. Many addressing modes are used (5 to 20)
- 4. Variáble length instruction format.
- 5. Instructions that manipulate operands in memory.

PHYLOSOPHY OF RISC

Reduce the semantic gap between machine instruction and microinstruction

1-Cycle instruction

Most of the instructions complete their execution in 1 CPU clock cycle - like a microoperation

- * Functions of the instruction (contrast to CISC)
 - Very simple functions
 - Very simple instruction format
 - Similar to microinstructions
 - => No need for microprogrammed control
- * Register-Register Instructions
 - Avoid memory reference instructions except **Load and Store instructions**
 - Most of the operands can be found in the registers instead of main memory => Shorter instructions

 - => Uniform instruction cycle
 - => Requirement of large number of registers

^{*} Employ instruction pipeline

CHARACTERISTICS OF RISC

Common RISC Characteristics

- Operations are register-to-register, with only LOAD and STORE accessing memory
- The operations and addressing modes are reduced Instruction formats are simple

CHARACTERISTICS OF RISC

RISC Characteristics

- Relatively few instructions
- Relatively few addressing modes
- Memory access limited to load and store instructions
- All operations done within the registers of the CPU
- Fixed-length, easily decoded instruction format
- Single-cycle instruction format
- Hardwired rather than microprogrammed control

More RISC Characteristics

- -A relatively large numbers of registers in the processor unit.
- -Efficient instruction pipeline
- -Compiler support: provides efficient translation of high-level language programs into machine language programs.

Advantages of RISC

- VLSI Realization
- Computing Speed
- Design Costs and Reliability
- High Level Language Support