Chapter 5:

Basic Computer Organization and Design Topics to be covered:

- Instruction Codes
- Addressing modes
- Computer Registers
- Instruction Set
- Timing and Control
- Instruction Cycle
- Memory Reference Instructions
- Input –output devices
- Design of Basic Computer

5-1 Instruction Codes


- An **instruction** is a binary **code** that specifies a sequence of micro-operations.
- Instructions are encoded as binary instruction codes.
- Instruction codes and data are stored in memory
- An Instruction code is a group of bits that instructs the computer to perform a specific operation (sequence of microoperations such as add, subtract, shift, and complement).
- The computer reads each instruction from memory and places it in a control register
- The control unit interprets the binary code of the instruction and proceeds to execute it by issuing a sequence of micro-operations
- An instruction is divided into parts (basic part is the operation part)
 - The operation code (op code) of an instruction is a group of bits that define operations such as add, subtract, multiply, shift and compliment.

2

5-1 Instruction Codes cont.

- The number of bits required for the operation code depends on the total number of operations available in the computer
- n bit operation code \rightarrow 2ⁿ (or little less) distinct operations


• It must consist of at least **n** bits for a given 2ⁿ distinct operations

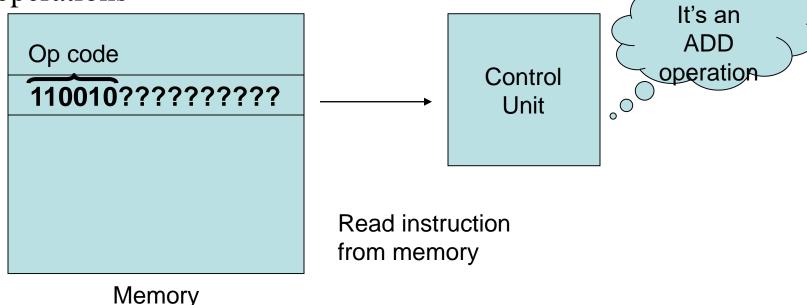

- Suppose we are having **64 operation** then the length of OpCode will be 6. (since 2^6 =64)
- The **control unit** decode the OpCode and determines the **operations**

5-1 Instruction Codes cont.

- An operation must be performed on some data stored in processor registers or in memory
- An instruction code must therefore specify not only the operation, but also the location of the operands (in registers or in the memory), and where the result will be stored (registers/memory)
- Memory words can be specified in instruction codes by their address

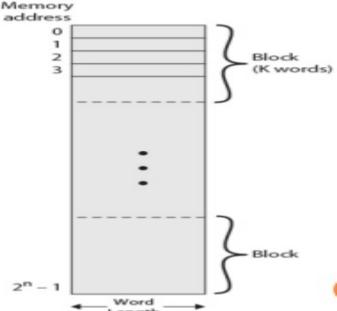

5-1 Instruction Codes cont.

- Every Computer has its own particular instruction code format.
 - Instruction code formats are conceived by computer designers who specify the architecture of the computer
- The simplest way to organize a computer is to have **Processor Register** and **instruction code with two parts**.
- The first part specifies the operation to be performed and the second specifies an address




What to do: Opcode
Where: memory address

Instruction Format

- The first part specifies the operation to be performed and second specifies an address.
- The memory address tells where the operand in memory will be found.


5-1 Instruction Codes

- 2¹²=4096 word of RAM, 12 bits are required for addressing
- 16 bit RAM (word length)

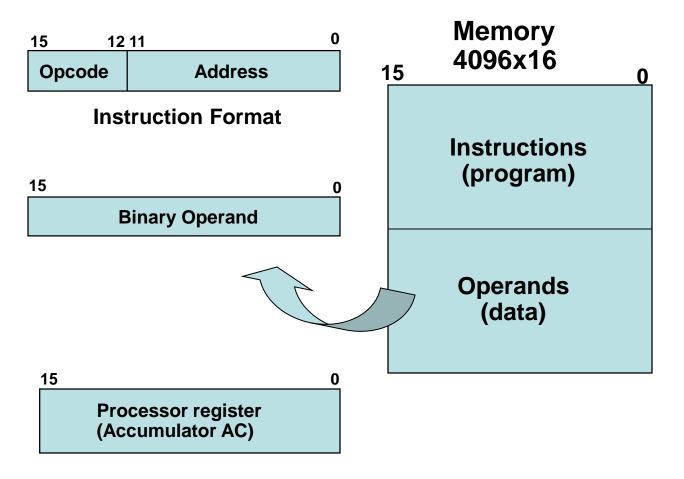


- The operation field of an instruction specifies the operation to be performed.
- This operation will be executed on some data which is stored in computer registers or the main memory.
- The way any operand is selected during the program execution is dependent on the addressing mode of the instruction.
 - Addressing mode refers to the way in which the operand of an instruction is specified.
- There are different **Addressing Modes** used for address portion of the instruction code. Some of these addressing modes are
 - Immediate addressing mode
 - Direct addressing mode
 - Indirect addressing mode


- Immediate: the operand is given in the address portion (constant)
 - For example: ADD 7
 - which says Add 7 to contents of accumulator. 7 is the operand here.
- **Direct**: the address points to the operand stored in the memory
 - effective address of operand is present in instruction itself.
 - Single memory reference to access data.
 - No additional calculations to find the effective address of the operand.

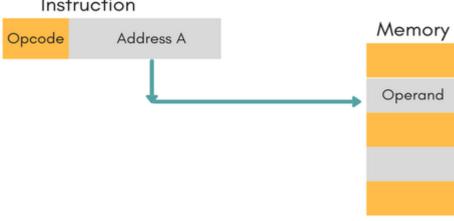

- Indirect: the address points to the pointer (another address) stored in the memory that references the operand in memory
 - This slows down the execution, as this includes multiple memory lookups to find the operand.
- One bit of the instruction code can be used to distinguish between direct & indirect addresses

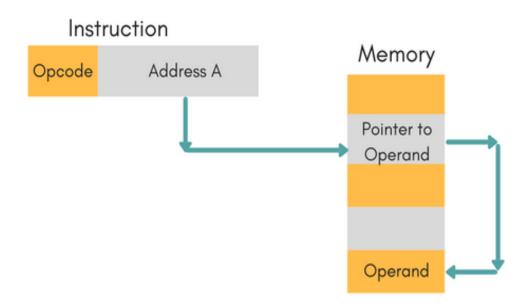

• The addressing mod (I) is 0 for direct addressing and 1 for indirect mode in the following instruction format.

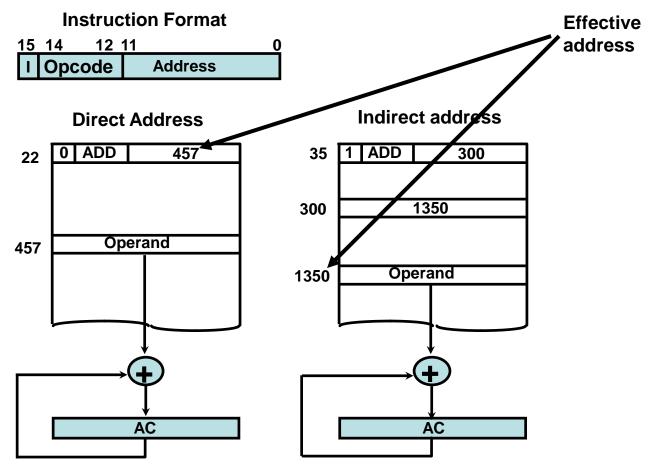

Effective address: the address of the operand


In order to cover the basic concepts behind designing a computer, a model (an imaginary system) will be presented to you throughout this chapter. This model will be called the "Basic Computer"

- The basic computer has 8 registers, a memory unit and a control unit.
- A Common Bus System is used for transferring data in a system.
- The basic computer has three instruction code formats.

5-3 Computer Registers


- Computer instructions are normally stored in consecutive memory locations and executed sequentially one at a time
- The control reads an instruction from a specific address in memory and executes it, and so on
- This type of sequencing needs a counter to calculate the address of the next instruction after execution of the current instruction is completed
- It is also necessary to provide a register in the control unit for storing the instruction code after it is read from memory
- The computer needs processor registers for manipulating data and a register for holding a memory address

Registers in the Basic Computer

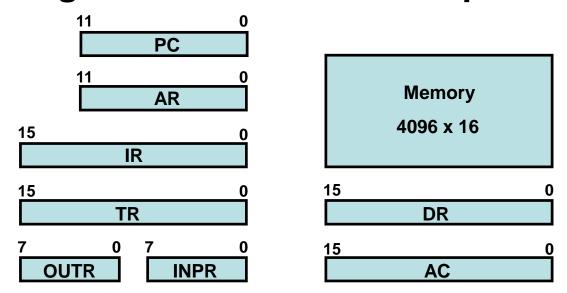

List of BC Registers

DR	16	Data Register	Holds memory operand
AR	12	Address Register	Holds address for memory
AC	16	Accumulator	Processor register
IR	16	Instruction Register	Holds instruction code
PC	12	Program Counter	Holds address of instruction
TR	16	Temporary Register	Holds temporary data
INPR	8	Input Register	Holds input character
OUTR	8	Output Register	Holds output character

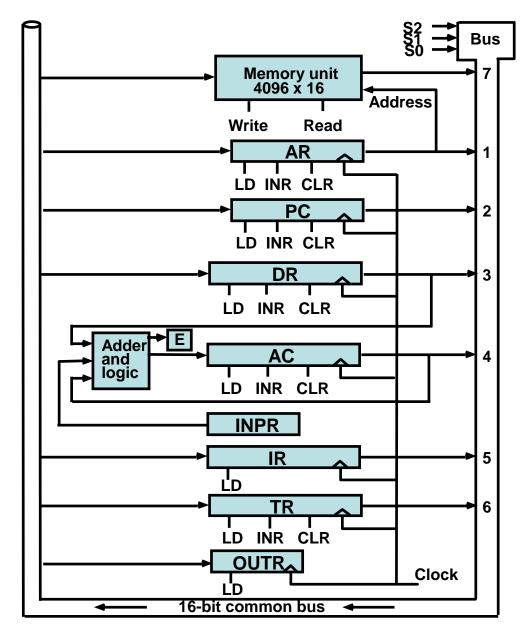

Computer Registers Common Bus System

Bus is a set of <u>wires</u> in a computer along which information can be sent to and from other parts of the computer

Register → Memory: Write operation

 $M[AR] \leftarrow DR$

Memory → Register: Read operation

 $DR \leftarrow M[AR]$

 $IR \leftarrow M[AR]$

(note that AC cannot directly read from memory!!)

5-3 Computer Registers Common Bus System cont.

- $S_2S_1S_0$: Selects the register/memory that would use the bus
- LD (load): When enabled, the particular register receives the data from the bus during the next clock pulse transition
- E (extended AC bit): flip-flop holds the carry
- **DR**, **AC**, **IR**, and **TR**: have 16 bits each
- AR and PC: have 12 bits each since they hold a memory address
- When the contents of AR or PC are applied to the 16-bit common bus, the four most significant bits are set to zeros
- When AR or PC receives information from the bus, only the 12 least significant bits are transferred into the register
- **INPR and OUTR**: communicate with the eight least significant bits in the bus

5-3 Computer Registers Common Bus System cont.

- INPR: Receives a character from the input device (keyboard,...etc) which is then transferred to AC
- OUTR: Receives a character from AC and delivers it to an output device (say a Monitor)
- Five registers have three control inputs: LD (load), INR (increment), and CLR (clear)
- The input data and output data of the memory are connected to the common bus
- But the memory address is connected to AR
- Therefore, AR must always be used to specify a memory address

5-3 Computer Registers cont.

- The transition at the end of the cycle transfers the content of the bus into the destination register, and the output of the adder and logic circuit into the AC
- For example, the two microoperations: DR←AC and AC←DR (Exchange) can be executed at the same time
- This is done by:
 - 1- place the contents of AC on the bus $(S_2S_1S_0=100)$
 - 2- enabling the LD (load) input of DR
 - 3- Transferring the contents of the DR through the adder and logic circuit into AC
 - 4- enabling the LD (load) input of AC
- All during the same clock cycle
- The two transfers occur upon the arrival of the clock pulse transition at the end of the clock cycle

5-4 Instruction Set

- Computer instructions are a set of machine language instructions that a particular processor understands and executes.
- A computer performs tasks on the basis of the instruction provided.
- What is **instruction set**?
 - An instruction set is a list of commands ready to be executed directly by CPU.
 - The entire group of instructions that a microprocessor supports is called *Instruction Set*.
 - It is the complete set of all the instructions in machine code that can be recognized and executed by a central processing unit.
- NB: Each computer has its unique instruction set
 - Eg., Intel Microprocessor 8085 has 246 instructions

5-4 Instruction Set

Instruction Set Completeness

- The set of instructions are said to be complete if the computer includes a sufficient number of instructions in each of the following categories:
 - Arithmetic, logical, and shift instructions
 - Instructions for moving information to and from memory and processor registers
 - Program control instructions together with instructions that check status conditions
 - Input & output instructions

5.4 Instruction Classification

- Computer provides an extensive set of instructions to give the user the flexibility to carryout various computational task.
- Most computer instruction can be classified into three categories.
 - 1. Data transfer instruction
 - 2. Data manipulation instruction
 - 3. Program control instruction

1. Data Transfer Instruction

- used to move data from one place in the computer to another without changing the data content.
- The most common transfers are: between memory and processes registers, between processes register & input or output, and between processes register themselves

5.4. Instruction Classification

Typical Data Transfer Instructions

Name	Mnemonic
Load	LD
Store	ST
Move	MOV
Exchange	XCH
Input	IN
Output	OUT
Pusĥ	PUSH
Pop	POP

2. Data Manipulation Instruction

- It performs operations on data and provides the computational capabilities for the computer.
- The data manipulation instructions in a typical computer are usually divided into three basic types.
 - Arithmetic Instruction
 - Logical bit manipulation Instruction
 - Shift Instruction.

5.4 Instruction Classification

Arithmetic Instructions

Name	Mnemonic
Increment	INC
Decrement	DEC
Add	ADD
Subtract	SUB
Multiply	MUL
Divide	DIV
Add with Carry	ADDC
Subtract with Borrow	SUBB
Negate(2's Complement)	NEG

Logical and Bit Manipulation Instructions

Name	Mnemonic
Clear	CLR
Complement	COM
AND	AND
OR	OR
Exclusive-OR	XOR
Clear carry	CLRC
Set carry	SETC
Complement carry	/ COMC
Enable interrupt	EI
Disable interrupt	DI

Shift Instructions

Name	Mnemonic
Logical shift right	SHR
Logical shift left	SHL
Arithmetic shift right	SHRA
Arithmetic shift left	SHLA
Rotate right	ROR
Rotate left	ROL
Rotate right thru carry	RORC
Rotate left thru carry	ROLC

5.4 Instruction Classification

3. Program Control Instructions


Name	Mnemonic
Branch	BR
Jump	JMP
Skip	SKP
Call	CALL
Return	RTN
Compare(by -)	CMP
Test (by AND)	TST

Examples of Program Control Instructions

• Program control instructions specify conditions for altering the content of the program counter, while data transfer and manipulation instructions specify conditions for data processing operations.

5-5 Basic Computer Instructions

- The basic computer has three Instruction code formats
- Each format has 16 bits

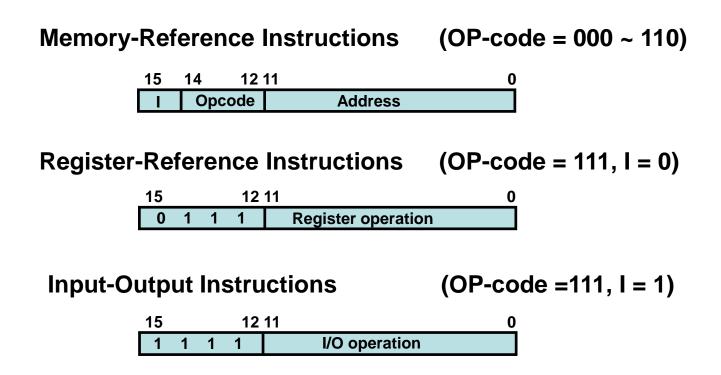

BASIC COMPUTER INSTRUCTIONS

Hex Code

Memory-Reference	се
Instructions	

	Thex dode		Ouc		
	Symbol	<i>I</i> = 0	<i>I</i> = 1	Description	
Memory-Reference	AND	0xxx	8xxx	AND memory word to AC	
	ADD	1xxx	9xxx	Add memory word to AC	
Instructions	LDA	2xxx	Axxx	Load AC from memory	
mon donono	STA	3xxx	Bxxx	Store content of AC into memory	
	BUN	4xxx	Cxxx	Branch unconditionally	
	BSA	5xxx	Dxxx	Branch and save return address	
	ISZ	6xxx	Exxx	Increment and skip if zero	
	CLA	780	00	Clear AC	
	CLE	7400		Clear E	
	CMA	7200		Complement AC	
	CME	7100		Complement E	
Register -Reference	CIR	7080		Circulate right AC and E	
Instructions	CIL	7040		Circulate left AC and E	
	INC	7020		Increment AC	
	SPA	7010		Skip next instr. if AC is positive	
	SNA	7008		Skip next instr. if AC is negative	
	SZA	7004		Skip next instr. if AC is zero	
	SZE	700		Skip next instr. if E is zero	
	HLT	700	01	Halt computer	
	INP	F8	00	Input character to AC	
I/O	OUT	F4	00	Output character from AC	

I/O **Instructions**


5.6 Timing & Control

- The timing for all registers in the basic computer is controlled by a master clock generator
- The clock pulses are applied to all flip-flops and registers in the system, including the flip-flops and registers in the control unit
- The clock pulses do not change the state of a register unless the register is enabled by a control signal (i.e., Load)
- The control signals are generated in the control unit and provide control inputs for the multiplexers in the common bus, control inputs in processor registers, and microoperations for the accumulator

5.6 Timing & Control cont.

- There are two major types of control organization:
 - Hardwired control
 - Microprogrammed control
- In the hardwired organization, the control logic is implemented with gates, flip-flops, decoders, and other digital circuits.
- In the microprogrammed organization, the control information is stored in a control memory (if the design is modified, the microprogram in control memory has to be updated)
- Microprogrammed control unit
 - Is less complex and simpler to implement than hardwired control unit
 - Hence, it is cheaper and less error prone than hardwired control unit
 - But it is slower than hardwired control unit


The Control Unit for the basic computer

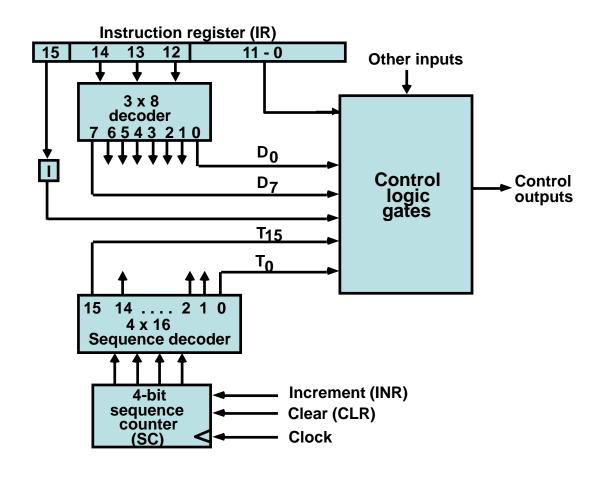

Hardwired Control Organization

- Timing signals Generated by 4-bit sequence counter and 4x16 decoder
- The SC can be incremented or cleared.
- Example: $T_0, T_1, T_2, T_3, T_4, T_0, T_1, \dots$

Assume: At time T₄, SC is cleared to 0 if decoder output D3 is active.

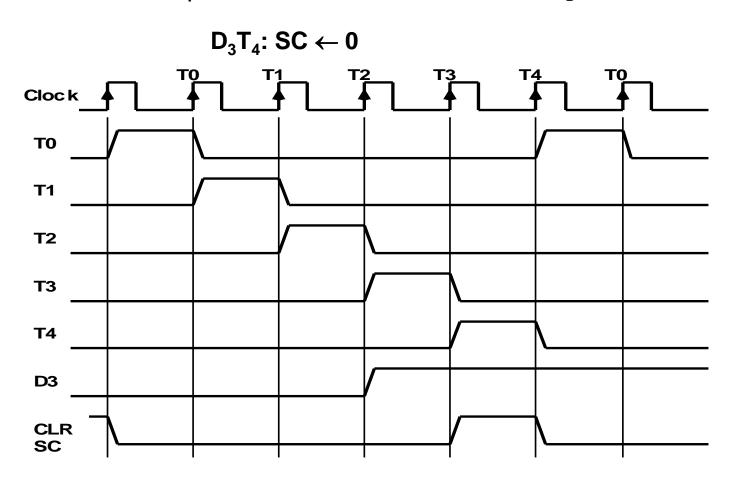

5.6 Timing & Control cont.

- T_0 : AR \leftarrow PC
 - Transfers the content of PC into AR if timing signal T₀ is active
 - T_0 is active during an entire clock cycle interval
 - During this time, the content of PC is placed onto the bus (with $S_2S_1S_0$ =010) and the LD (load) input of AR is enabled
 - The actual transfer does not occur until the end of the clock cycle when the clock goes through a positive transition
 - This same positive clock transition increments the sequence counter SC from 0000 to 0001
 - The next clock cycle has T_1 active and T_0 inactive

5.7 Instruction Cycle

- A program is a sequence of instructions stored in memory
- The program is executed in the computer by going through a cycle for each instruction (in most cases)
- Each instruction in turn is subdivided into a sequence of subcycles or phases
- Instruction Cycle Phases:
 - 1- Fetch an instruction from memory
 - 2- Decode the instruction
 - 3- Read the effective address from memory if the instruction has an indirect address
 - 4- Execute the instruction
- This cycle repeats indefinitely unless a HALT instruction is encountered

5.7 Instruction Cycle: Fetch and Decode

- Initially, the Program Counter (PC) is loaded with the address of the first instruction in the program
- The sequence counter SC is cleared to 0, providing a decoded timing signal T₀
- After each clock pulse, SC is incremented by one, so that the timing signals go through a sequence T_0 , T_1 , T_2 , and so on
 - T_0 : AR←PC (this is essential!!)


The address of the instruction is moved to AR.

- T₁: IR \leftarrow M[AR], PC \leftarrow PC+1

The instruction is fetched from the memory to IR, and the PC is incremented.

- T_2 : D_0 ,..., D_7 \leftarrow Decode IR(12-14), AR \leftarrow IR(0-11), I \leftarrow IR(15)

DETERMINE THE TYPE OF INSTRUCTION

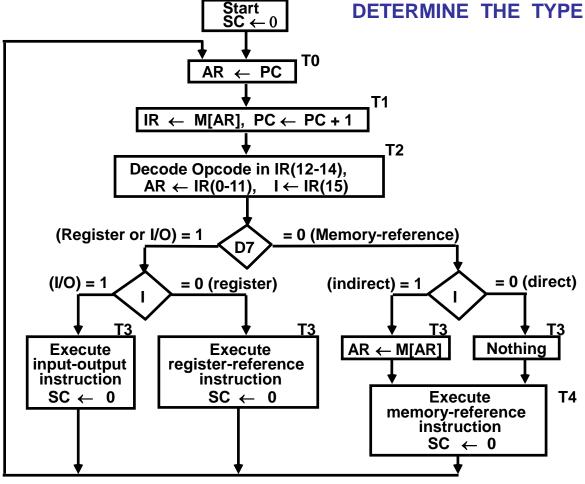

D'7IT3: $AR \leftarrow M[AR]$

Nothing D'7l'T3:

D7l'T3: Execute a register-reference instr.

D7IT3: **Execute an input-output instr.**

MEMORY REFERENCE INSTRUCTIONS

Symbol	Operation Decoder	Symbolic Description	
AND	D_0	$AC \leftarrow AC \land M[AR]$	
ADD	D_1	$AC \leftarrow AC + M[AR], E \leftarrow C_{out}$	
LDA	D_2	AC ← M[AR]	
STA	D_3	M[AR] ← AC	
BUN	$D_\mathtt{4}^{o}$	PC ← AR	
BSA	D_{5}^{T}	$M[AR] \leftarrow PC, PC \leftarrow AR + 1$	
ISZ	D_6°	$M[AR] \leftarrow M[AR] + 1$, if $M[AR] + 1 = 0$ then $PC \leftarrow PC+1$	

- The effective address of the instruction is in AR and was placed there during timing signal T_2 when I = 0, or during timing signal T_3 when I = 1
- The execution of MR Instruction starts with T₄

AND to AC

 D_0T_4 : DR \leftarrow M[AR] Read operand

 D_0T_5 : AC \leftarrow AC \land DR, SC \leftarrow 0 AND with AC

ADD to AC

 D_1T_4 : DR \leftarrow M[AR] Read operand


 D_1T_5 : AC \leftarrow AC + DR, E \leftarrow C_{out}, SC \leftarrow 0 Add to AC and store carry in E

5.8 Input-Output Devices

- Instructions and data stored in memory must come from some input devices
- Computational results must be transmitted to the user through some output device
- For the system to communicate with an input device, serial information is shifted into the input register INPR
- To output information, it is stored in the output register OUTR

5.8 Input-Output Devices

• INPR and OUTR communicate with a communication interface serially and with the AC in parallel. They hold an 8-bit alphanumeric information

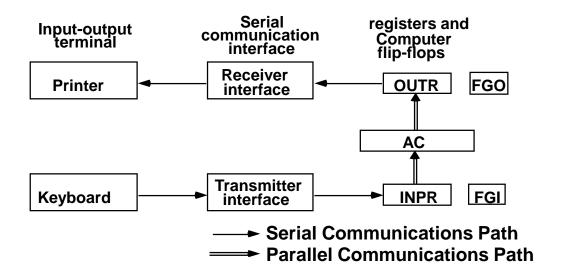

5.8 Input-Output Devices cont.

- I/O devices are slower than a computer system → we need to synchronize the timing rate difference between the input/output device and the computer.
- FGI: 1-bit input flag (Flip-Flop) aimed to control the input operation
- FGI is set to 1 when a new information is available in the input device and is cleared to 0 when the information is accepted by the computer
- FGO: 1-bit output flag used as a control flip-flop to control the output operation
- If FGO is set to 1, then this means that the computer can send out the information from AC. If it is 0, then the output device is busy and the computer has to wait!

5.9 Design of Basic Computer

- 1. A memory unit: 4096 x 16.
- 2. Registers: AR, PC, DR, AC, IR, TR, OUTR, INPR, and SC
- 3. Flip-Flops (Status): I, E, FGI, and FGO
- 4. Decoders:
 - 1. a 3x8 Opcode decoder
 - 2. a 4x16 timing decoder
- 5. Common bus: 16 bits
- 6. Control logic gates
- 7. Adder and Logic circuit: Connected to AC
- The control logic gates are used to control:
 - Inputs of the nine registers
 - Read and Write inputs of memory
 - Set, Clear, or Complement inputs of the flip-flops
 - S2, S1, S0 that select a register for the bus
 - AC Adder and Logic circuit