
Magnetic units of measurement

This worksheet and all related files are licensed under the Creative Commons Attribution License, version 1.0. To view a copy of this license, visit http://creativecommons.org/licenses/by/1.0/, or send a letter to Creative Commons, 559 Nathan Abbott Way, Stanford, California 94305, USA. The terms and conditions of this license allow for free copying, distribution, and/or modification of all licensed works by the general public.

Resources and methods for learning about these subjects (list a few here, in preparation for your research):


In electric circuits, the three basic quantities are voltage (E or V), current (I), and resistance (R), corresponding to the general concepts of cause, effect, and opposition, respectively.

$$I = \frac{E}{R}$$
 effect =
$$\frac{\text{cause}}{\text{opposition}}$$




Magnetic "circuits" also have quantities corresponding to "cause," "effect," and "opposition." Identify these quantities, along with their respective symbols, and write an "Ohm's Law" equation relating them mathematically. Also, identify the units of measurement associated with each, in three systems of measurement: CGS ("old" metric), SI ("new" metric), and English.


Magnetic "circuit"

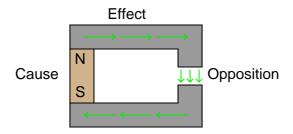

If we were to graph the "response" of a resistor to various levels of applied voltage, we would obtain a plot that looks like this:

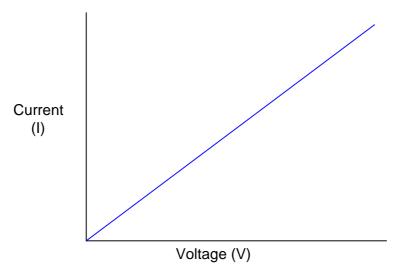


If we were to graph the "response" of a ferromagnetic sample to various levels of applied magnetomotive force, we would obtain a plot that looks something like this:

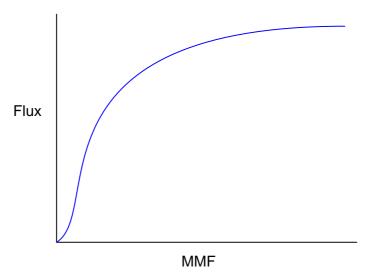

What does this graph indicate to you, as compared to the graph for a resistor's characteristics? What is the significance of this with regard to magnetic "circuit" analysis?

Suppose that a length of electrical wire is wrapped around a section of an iron torus, and electric current conducted through the wire:

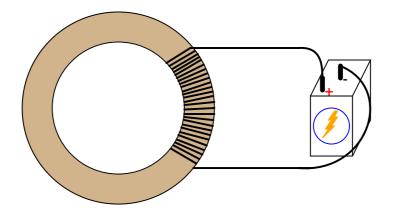

What factors influence the amount of MMF, flux, and reluctance in this magnetic "circuit"? file 00679

Question 4

Calculate the reluctance (\Re) for a magnetic circuit where the MMF (\mathcal{F}) is 8.9 amp-turns and the flux (Φ) is 0.24 webers.

file 03494

Question 5

Calculate the amount of magnetic flux (Φ) in a piece of iron with a reluctance (\Re) of 55 amp-turns per weber and an applied MMF (\mathcal{F}) of 2.2 amp-turns.

file 03495

Question 6

Calculate the amount of magnetomotive force (MMF, or \mathcal{F}) required to establish a magnetic flux (Φ) of 30 μ Wb in a piece of iron having a reluctance (\Re) of 14 At/Wb.

file 03496

Question 7

Calculate the amount of MMF (\mathcal{F}) generated by a coil of wire having 1300 turns and carrying 3.5 milliamperes of current.

file 03491

Question 8

Calculate the number of "turns" (wraps) a wire coil would need in order to produce an MMF (\mathcal{F}) of 5.7 amp-turns with an electric current of 12 mA.

<u>file 03493</u>

Question 9

Calculate the amount of electric current that would have to pass through a coil of wire having 850 turns to produce an MMF (\mathcal{F}) of 2.1 amp-turns.

The formula for calculating the reluctance (\Re) of an air-core wire coil ("solenoid") is as follows:

$$\Re = \frac{l}{\mu_0 A}$$


Where,

l = linear length of coil in meters (m)

A =cross-sectional area of coil "throat" in square meters (m²)

 μ_0 = permeability of free space = $4\pi \times 10^{-7}$ (T·m/A)

Using this formula and the Rowland's Law formula, calculate the amount of magnetic flux (Φ) produced in the throat of an air-core solenoid with 250 turns of wire, a length of 0.2 meters, a cross-sectional area of 6.5×10^{-4} square meters, and a coil current of 5 amps:

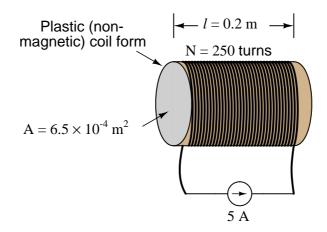

file 03497

Question 11

Electrically conductive materials may be rated according to their relative resistance by a quantity we call specific resistance (ρ). The formula relating resistance to specific resistance looks like this:

$$R = \rho \frac{l}{A}$$

Where,

R = Electrical resistance, in ohms

 $\rho = \text{Specific resistance}$, in ohm-cmil/ft, or some other combination of units

l = Length of conductor, in feet or cm (depending on units for ρ)

A = Cross-sectional area of conductor, in cmil or cm² (depending on units for ρ)

Magnetic materials may also be rated according to their relative reluctance by a quantity we call permeability (μ) . Write the formula relating reluctance to permeability of a magnetic substance, and note whatever differences and similarities you see between it and the specific resistance formula for electrical circuits.

Explain the difference between relative permeability (μ_r) and absolute permeability (μ) . How do the units of measurement differ between these two quantities?

file 00684


Question 13

Two important variables in magnetic circuit analysis are B and H. Explain what these two variables represent, in terms of the more fundamental magnetic quantities of MMF (\mathcal{F}) and flux (Φ), and relate them, if possible, to electrical quantities. Also, determine the units of measurement for these two variables, in the CGS, SI, and English measurement systems.

file 00681

Question 14

When a steel manufacturer publishes the magnetic characteristics of their latest alloy, they do so in the form of a "B/H" graph, where flux density (B) is plotted as a function of magnetizing force (H):

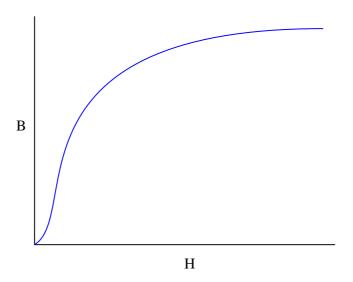

Rarely will you see a plot of flux (Φ) shown as as a function of MMF (\mathcal{F}) , even though such a plot would appear very similar to the "B/H curve" for that same material. Why is this? Why would a "B/H" curve be preferable to an engineer rather than a "Flux/MMF" curve?

Hint: if a copper manufacturer were to publish the electrical characteristics of their latest alloy, they would specify its resistivity in terms of specific resistance (ρ) , rather than plain resistance (R), for the exact same reason!

Given the following equations, derive a single equation expressing permeability (μ) in terms of flux density (B) and field intensity (H), otherwise known as magnetizing force):

$$\Re = \frac{\mathcal{F}}{\Phi}$$

$$\Re = \frac{l}{\mu A}$$


$$H = \frac{\mathcal{F}}{l}$$

$$B = \frac{\Phi}{A}$$

file 00685

Question 16

Using a B-H curve obtained from a reference book, determine the amount of magnetizing force (H) required to establish a magnetic flux density of 0.2 T in a cast iron torus with a cross-sectional area of 7×10^{-4} square meters.

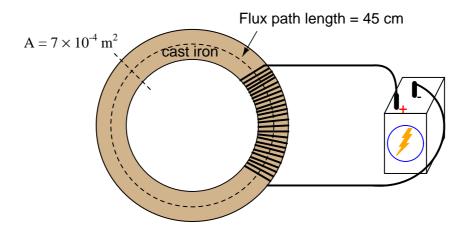

Calculate the amount of current necessary in the wire coil to establish this amount of flux, if the coil has 250 turns, and the torus has an average flux path length of 45 cm. Also, calculate the amount of magnetic flux (Φ) inside the torus.

Answer 1

"Cause" = Magnetomotive force (MMF) = \mathcal{F}

"Effect" = Magnetic flux = Φ

"Opposition" = Reluctance = \Re

This relationship is known as *Rowland's Law*, and it bears striking similarity to Ohm's Law in electric circuits:

$$\Phi = \frac{\mathcal{F}}{\Re}$$

Quantity	Symbol	Unit of Measurement and abbreviation		
		CGS	SI	English
Field Force	F	Gilbert (Gb)	Amp-turn	Amp-turn
Field Flux	Φ	Maxwell (Mx)	Weber (Wb)	Line
Reluctance	R	Gilberts per Maxwell	Amp-turns per Weber	Amp-turns per line

Follow-up question: algebraically manipulate the Rowland's Law equation shown above to solve for \mathcal{F} and to solve for \Re .

Answer 2

The MMF/flux plot for a ferromagnetic material is quite *nonlinear*, unlike the plot for an electrical resistor.

Answer 3

MMF is determined by the amount of current through the wire coil, and the number of turns in the coil ($\mathcal{F} = IN$). Reluctance is determined by the cross-sectional area of the magnetic flux path, the length of that path, the type of material the torus is made of, and the amount of flux present in the torus. Magnetic flux is determined by the MMF and reluctance.

Follow-up question: how similar are these relationships to voltage, resistance, and current in an electrical circuit? Note any similarities as well as any differences.

Answer 4

 $\Re = 37.08$ amp-turns per weber (At/Wb)

Answer 5

 $\Phi = 40 \text{ mWb}$

Answer 6

$$\mathcal{F} = 420 \ \mu At$$

Answer 7

 $\mathcal{F} = 4.55 \text{ amp-turns}$

Answer 8

N = 475 turns

Answer 9

I = 2.471 mA

Answer 10

 $\Phi = 5.105 \; \mu \mathrm{Wb}$

Answer 11

$$\Re = \frac{l}{\mu A}$$

Answer 12

$$\mu_r = \frac{\mu}{\mu_0}$$

Absolute permeability is measured in units of Webers per Amp-meter (Wb/Am), while relative permeability has no unit at all.

Answer 13

Quantity	Symbol	Unit of Measurement and abbreviation		
		CGS	SI	English
Field Intensity	Н	Oersted (Oe)	Amp-turns per meter	Amp-turns per inch
Flux Density	В	Gauss (G)	Tesla (T)	Lines per square inch

Field intensity (H) is also known as "magnetizing force," and is the amount of MMF per unit length of the magnetic flux path. Flux density (B) is the amount of magnetic flux per unit area.

Answer 14

A "B/H curve" is independent of the specimen's physical dimensions, communicating the magnetic characteristics of the substance itself, rather than the characteristics of any one particular piece of that substance.

Answer 15

$$\mu = \frac{B}{H}$$

Answer 16

H = 400 At/m

I = 720 mA

 $\Phi = 0.14 \text{ mWb}$

Notes 1

Magnetism, while commonly experienced in the form of permanent magnets and magnetic compasses, is just as "strange" a concept as electricity for the new student. At this point in their education, however, they should be familiar enough with voltage, current, and resistance to reflect upon them as analogous quantities to these new magnetic quantities of MMF, flux, and reluctance. Emphasize the analogical similarities of basic electrical quantities in your discussion with students. Not only will this help students understand magnetism better, but it will also reinforce their comprehension of electrical quantities.

Notes 2

Ask your students to identify resistance on the V/I graph shown in the question. Where on that graph is resistance represented? Your more mathematically astute students will recognize (or perhaps recall from earlier discussions) that the slope of the plot indicates the resistance of the circuit. The less resistance, the steeper the plot (at least in this case, where current is on the vertical axis and voltage on the horizontal). At any point on the plot, the slope is the same, indicating that resistance does not change over a wide range of voltage and current.

Now, direct their attention to the MMF/flux graph. Where is *reluctance* indicated on the graph? What conclusion may we form regarding reluctance in a magnetic circuit, from analyzing the shape of the MMF/flux curve shown? At what point is reluctance the greatest? At what point is it the least?

Notes 3

Perhaps the most interesting part of the answer to this question is that magnetic reluctance (\Re) changes with the amount of flux (Φ) in the "circuit". At first, this may seem quite different from electrical circuits, where resistance (R) is constant regardless of current (I).

However, the constancy of electrical resistance is something easily taken for granted. Ask your students to think of electrical devices (or phenomena) where resistance is not stable over a wide range of currents. After some discussion, you should find that the phenomenon of constant resistance is not as common as one might think!

After students have grasped this concept, ask them what it means with regard to magnetic flux (Φ) versus MMF (\mathcal{F}) . In other words, what happens to flux in a magnetic circuit as MMF is increased?

Notes 4

Nothing special here, just a simple calculation. One of the points of this question is to have students research Rowland's Law and learn how to use it as they would Ohm's Law.

Notes 5

Nothing special here, just a simple calculation. One of the points of this question is to have students research Rowland's Law and learn how to use it as they would Ohm's Law.

Note that the unit abbreviation for "webers" contains two letters, not just one as is the case for most unit abbreviations!

Notes 6

Nothing special here, just a simple calculation. One of the points of this question is to have students research Rowland's Law and learn how to use it as they would Ohm's Law.

Note that the unit abbreviation for "webers" contains two letters, not just one as is the case for most unit abbreviations!

Notes 7

Nothing special here, just a simple calculation. One of the points of this question is to have students research the formula for calculating \mathcal{F} , as simple as it is.

Notes 8

Nothing special here, just a simple calculation. One of the points of this question is to have students research the formula for calculating \mathcal{F} , as simple as it is.

Notes 9

Nothing special here, just a simple calculation. One of the points of this question is to have students research the formula for calculating \mathcal{F} , as simple as it is.

Notes 10

With all the information given, this is nothing more than an exercise in calculation. However, it is nice for students to have the air-core solenoid reluctance formula handy for other calculations, which is the main point of this question.

Notes 11

Ask your students to describe the effects on magnetic reluctance resulting from increases and decreases in all three independent variables (μ , l, and A). It is important for them to qualitatively grasp this equation, just as it is important for them to qualitatively understand Ohm's Law and the specific resistance formula.

Notes 12

Ask your students to explain why relative permeability (μ_r) is unitless. Are there any other variables they've encountered in their science studies that are similarly unitless?

Did any of your students research the value of absolute permeability of free space (μ_0) ? If so, what figure did they obtain?

Notes 13

Although the equivalent electrical variables to field intensity and flux density are not commonly used in electronics, they do exist! Ask your students if anyone was able to determine what these variables are. Also, ask them where they were able to obtain the information on magnetic quantities and units of measurement.

You should mention to your students that the SI units are considered to be the most "modern" of those shown here, the SI system being the international standard for metric units in all applications.

Notes 14

This concept may confuse some students, so discussion on it is helpful. Ask your students what "flux density" and "magnetizing force" really mean: they are expressions of flux and MMF per unit dimension. So, if a manufacturer states that their new steel alloy will permit a flux density of 0.6 Tesla for an applied magnetizing force of 100 amp-turns/meter, this figure holds true for any size chunk of that alloy.

To prove this concept via the rhetorical technique of *reductio ad absurdum*, ask your students what it would be like if copper manufacturers specified the resistivity of their copper alloys in ohms: "Alloy 123XYZ has a resistivity of 17 ohms." Of what usefulness is this statement? What does it mean to us? How is the statement, "Alloy 123XYZ has a resistivity of 10.5 ohm-cmil per foot," superior?

Notes 15

This question is an exercise in algebraic substitution and manipulation. It might be a good idea to point out that the following equation is valid only for a "solenoid" (a coil of wire).

$$\Re = \frac{l}{\mu A}$$

In the case of an air-core solenoid, the formula is as follows:

$$\Re = \frac{l}{\mu_0 A}$$

Where,

l = linear length of coil in meters (m)

A = cross-sectional area of coil "throat" in square meters (m²)

 μ_0 = permeability of free space = $4\pi \times 10^{-7} (\text{T} \cdot \text{m/A})$

Notes 16

I obtained the magnetizing force figure of 400 At/m for 0.2 T of flux density, from Robert L. Boylestad's 9th edition of <u>Introductory Circuit Analysis</u>, page 437.