
# Safety grounding

This worksheet and all related files are licensed under the Creative Commons Attribution License, version 1.0. To view a copy of this license, visit http://creativecommons.org/licenses/by/1.0/, or send a letter to Creative Commons, 559 Nathan Abbott Way, Stanford, California 94305, USA. The terms and conditions of this license allow for free copying, distribution, and/or modification of all licensed works by the general public.

Resources and methods for learning about these subjects (list a few here, in preparation for your research):

In simple AC power systems, one of the two conductors is typically called the *hot*, while the other conductor is typically called the *neutral*. What distinguishes the "hot" conductor from the "neutral" conductor in such a system? In other words, what exactly determines whether a conductor will be called either "hot" or "neutral"?



file 00312


# Question 2

Explain why most electrical power systems have one of their current-carrying conductors connected to earth ground ("grounded"). Why not just leave all power conductors ungrounded? Would this not reduce electric shock hazard?

file 00318


### Question 3

Is there any shock hazard posed to a person touching the metal case of this appliance? Explain your answer.

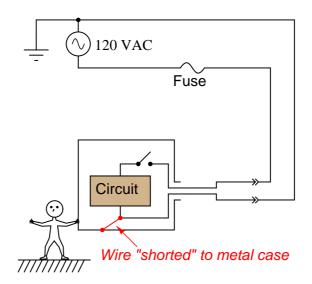

file 00313


Is there any shock hazard posed to a person touching the metal case of this appliance? Explain your answer.

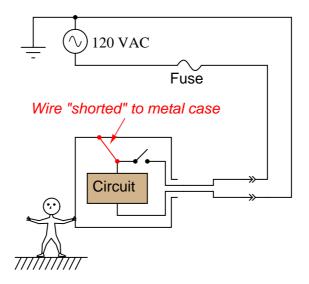

# file 00314

# Question 5

The metal case of this appliance is *grounded* by means of a third conductor:

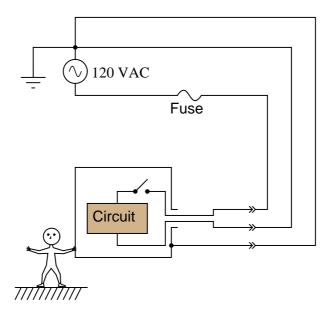


Explain how this grounding connection makes the appliance safer for any one touching its metal case.  $\underline{{\rm file}~00315}$ 


# Question 6

What is a polarized power plug, and what does this have to do with electrical safety?  $\underline{{\rm file}~00321}$ 

The presence of a "ground" wire increases the degree of electrical safety for anyone using an electrical appliance. It entails having a third "prong" on the power plug, connecting with a third hole on the power receptacle, which connects to a separate wire running all the way back to the power system's grounding point:

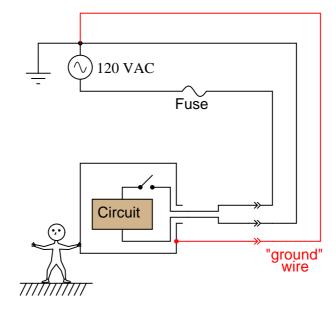

But why not eliminate all that extra wiring, and simply connect the third hole on the power receptacle to the "neutral" wire?

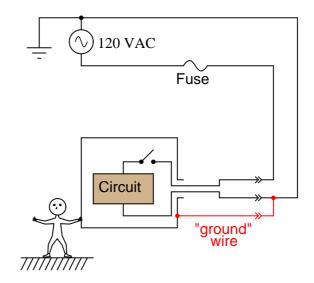


Why would this idea be unwise?  $\underline{\text{file }00317}$ 

In the United States of America, the National Electrical Code (NEC) specifies certain color codes to be used for designation of grounded, grounding, and ungrounded wires in AC power systems. First, relate the terms "hot," "neutral," and "ground" to the terms "grounded," "grounding," and "ungrounded". Then, describe the acceptable color codes for each conductor. Also, note the article and section of the National Electrical Code under which these specifications are found.

file 00316

### Question 9

Explain how you would use a voltmeter to identify the "hot," "neutral," and "ground" conductors on a three-prong power receptacle:



### file 00323

### Question 10

Special safety devices called *Ground Fault Current Interrupters*, or *GFCI's*, reduce the risk of shock hazard in electrical systems even where there is no ground conductor. Explain the operating principle of a GFCI. How are they able to sense a "ground fault" condition, so as to automatically turn off power to a receptacle?

file 00319

### Question 11

Suppose a GFCI is rated to "trip" with a ground fault current of 5 mA. Given a source voltage of 115 volts, calculate the ground fault resistance range required to trip.

file 00337


### Question 12

I once watched a television advertisement for an electric drill, in which one of the people selling this product claimed it was "double-insulated," to which the other person replied, "So it doesn't get hot in your hand, right?"

What do you think of this comment? Is this what "double-insulated" means?  $\underline{{\rm file}~00320}$ 

### Answer 1

The "neutral" conductor in an AC power system is always made electrically common with the earth, while the non-grounded conductor in an AC power system is called the "hot" conductor:

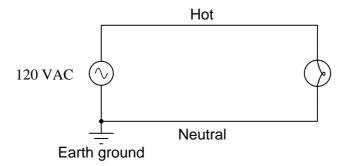

Follow-up question #1: in a power circuit such as this, there is typically a single fuse or circuit breaker for overcurrent protection. Identify the *best* location to place this fuse or circuit breaker in the circuit.

Follow-up question #2: explain how to use a multimeter to identify the "hot" and "neutral" conductors of a power system such as this.

### Answer 2

An ungrounded power system is *unpredictable* from the perspective of safety.

### Answer 3

No.

Follow-up question: what do the double-chevron symbols represent in a schematic diagram?

???

# Answer 4

Yes, if the power switch is turned "on".

#### Answer 5

The ground wire connection makes the metal case of the appliance electrically common with earth ground.

## Answer 6

A "polarized" power plug is one that is designed to plug into a power receptacle one way only (i.e. it cannot be reversed). Usually this is accomplished by the use of one "prong" on the plug being wider than the other, with matching-width holes in the receptacle.

#### Answer 7

Using the neutral conductor as a safety ground is a bad idea, in the event the neutral wire were to ever fail "open" between the receptacle and the system ground point.

## Answer 8

Grounded = White or natural grey.

Grounding = Bare (uninsulated), green, or green with a yellow stripe.

Ungrounded = Colors other than white, natural grey, or green.

## Answer 9

I'll give you this hint: no more than two voltage measurements are necessary to identify all three jacks in a properly connected three-prong power receptacle!

#### Answer 10

"GFCI" devices work on the principle of  $differential\ current\ measurement$  as a means to sense ground faults.

## Answer 11

Any resistance value between 0  $\Omega$  to 23 k $\Omega$ 

### Answer 12

While this advertisement was amusing, it was not very informative. No, the term "double-insulated" does *not* refer to thermal insulation, but rather electrical insulation.

### Notes

### Notes 1

Ask your students what safety issues surround the "hot" and "neutral" conductors, respectively. What do the names imply about relative hazard, and why is this? Ask them to explain how these safety considerations impact the placement of the overcurrent protection device.

#### Notes 2

Be sure to discuss with your students the benefits and drawbacks of power system grounding. There are some instances where systems are left intentionally ungrounded because the safety benefit of grounding them is negligible (high-voltage power distribution systems may often be ungrounded for this reason). In low-voltage (120 volt) domestic power systems, though, grounding is required by law.

#### Notes 3

Even though no shock hazard presently exists in the circuit, ask your students to identify a condition where the "shorted" wire inside the appliance *would* pose a shock hazard. What would have to change in order for this wiring fault to pose a hazard?

#### Notes 4

Aside from removing the "short" connecting the power conductor to the metal case of the appliance, what else could be done to eliminate the shock hazard in this scenario? Discuss this with your students.

#### Notes 5

Ask your students to explain why the case's electrical commonality with earth makes it safer to touch. What do they know about "electrically common points" in a circuit, and voltage between those points?

#### Notes 6

Discuss with your students the relative merits of polarized plugs versus three-wire plugs that provide a hard ground connection with the frame of the electrical device. Which plug type provides a greater level of safety? Why?

## Notes 7

Discuss this particular failure scenario with your students, drawing a schematic diagram if necessary. Not only does this illustrate the importance of having a separate ground conductor, but it also shows how the neutral wire can potentially be unsafe to touch!

# Notes 8

It is important to note that even though these color codes have been standardized for many years, it is unwise to rely on color coding as an indication of hazard. In other words, just because a wire has green insulation does not mean it is necessarily safe to touch! There will always be mistakes made from time to time in wire installation, and in older systems where someone might have re-connected wires in incorrect ways. When in doubt, always use a voltmeter to check for the presence of hazardous voltage!

# Notes 9

Knowing how to check for proper wiring in power receptacles is a very practical skill for homeowners. Sure, there are simple neon-lamp testers available that you can simply plug in to a receptacle to test it, but using a voltmeter requires knowledge.

Incidentally, this test is very easy to perform during class discussion time, as multiple power receptacles should be available in any classroom. Be sure to review certain basic safety rules (use one hand only, etc.) when performing this test!

## Notes 10

Be sure to discuss with your students what "differential current measurement" means, rather than assume they all researched the answer in greater detail than what is provided here. This really is a clever way to detect the presence of a ground fault!

You should point out to your students that GFCI power receptacles are commonly installed in "wet" areas of residences, such as in the bathroom and outside, where the hazard of ground-fault electric shock is maximized by the presence of water.

This question also provides an opportunity to discuss why the presence of water at a point of bodily contact increases the severity of electric shock.

## Notes 11

This question requires the use of Ohm's Law, but to calculate a range of resistance values and not just a singular value. All students should be able to obtain the figure of  $23 \text{ k}\Omega$ , but some may be confused as to whether this is a minimum or a maximum resistance value needed to trip the GFCI. Discuss this with your students, asking them to explain how we know  $23 \text{ k}\Omega$  is a maximum figure and not a minimum figure.

# Notes 12

One fact of interest here is that double-insulated tools usually do not have three-prong power plugs. In other words, they do not need a "ground" wire to ensure operator safety.