SignalTransmission

December 9, 2021

1 Analog vs Digital Transmission

In this notebook we will explore the potential advantages of digital transmission over analog transmission. We will consider the case of transmission over a long (e.g. transoceanic) cable in which several repeaters are used to compensate for the attenuation introduced by the transmission.

Remember that if each cable segment introduces an attenuation of 1/G, we can recover the original amplitude by boosting the signal with a repeater with gain G. However, if the signal has accumulated additive noise, the noise will be amplified as well so that, after N repeaters, the noise will have been amplified N times:


$$\hat{x}_N(t) = x(t) + NG\sigma(t)$$

If we use a digital signal, on the other hand, we can threshold the signal after each repeater and virtually eliminate the noise at each stage, so that even after several repeaters the trasmission is still noise-free.

Let's start with the standard initial bookkeeping...

```
In [1]: %matplotlib inline
        import matplotlib
      import matplotlib.pyplot as plt
      import numpy as np
      import IPython
      from scipy.io import wavfile
In [2]: plt.rcParams["figure.figsize"] = (14,4)
```

Now we can read in an audio file from disk; we can plot it and play it back. The wavfile.read() function returns the audio data and the playback rate, which we will need to pass to the playback functions.

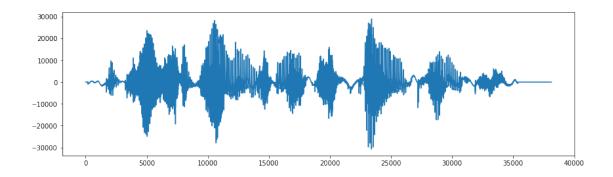

```
In [4]: rate
    w = (200.0 / rate) * 2 * np.pi
    c = np.cos(w * np.arange(0,len(s)))
    IPython.display.Audio(np.multiply(s, c) , rate=rate)
```

1.1 The "Analog" and "Digital" Signals

Out[4]: <IPython.lib.display.Audio object>

We will now create two version of the audio signal, an "analog" version and a "digital" version. Obviously the analog version is just a simulation, since we're using a digital computer; we will assume that, by using floating point values, we're in fact close enough to infinite precision. In the digital version of the signal, on the other hand, the audio samples will only take integer values between -100 and +100 (i.e. we will use approximately 8 bits per audio sample).

Remember that there is no free lunch and quantization implies a loss of quality; this initial loss (that we can minimize by using more bits per sample) is the price to pay for digital transmission. We can plot the error and compute the Signal to Noise Ratio (SNR) of the quantized signal

```
In []: plt.plot(sA-sD);
```

as expected, the error is between -0.5 and +0.5, since in the "analog" signal the values are real-valued, whereas in the "digital" version they can only take integer values. As for the SNR,

```
# power of the signal
sig = np.linalg.norm(original)
# SNR in dBs
return 10 * np.log10(sig/err)

print ('SNR = %f dB' % SNR(sD, sA))
Can we hear the 17dB difference? A bit...
In []: IPython.display.Audio(sA, rate=rate)
In []: IPython.display.Audio(sD, rate=rate)
```

1.2 Transmission

Let's now define a function that represents the net effect of transmitting audio over a cable segment terminated by a repeater: * the signal is attenuated * the signal is accumulates additive noise as it propagates through the cable * the signal is amplified to the original amplitude by the repeater

```
In []: def repeater(x, noise_amplitude, attenuation):
    # first, create the noise
    noise = np.random.uniform(-noise_amplitude, noise_amplitude, len(x))
    # attenuation
    x = x * attenuation
    # noise
    x = x + noise
    # gain compensation
    return x / attenuation
```

we can use the repeater for both analog and digital signals. Transmission of the analog signal is simply a sequence of repeaters:

For digital signals, however, we can rectify the signal after each repeater, because we know that values should only be integer-valued:

Let's compare transmission schemes

```
In []: NUM_REPEATERS = 70
     NOISE_AMPLITUDE = 0.2
     ATTENUATION = 0.5

yA = analog_tx(sA, NUM_REPEATERS, NOISE_AMPLITUDE, ATTENUATION)
     print ('Analog trasmission: SNR = %f dB' % SNR(yA, sA))

yD = digital_tx(sD, NUM_REPEATERS, NOISE_AMPLITUDE, ATTENUATION)
     print ('Digital trasmission: SNR = %f dB' % SNR(yD, sA))
```

As you can see, the SNR after digital transmission has not changed! Now the difference between audio clips should be easy to hear:

```
In [ ]: IPython.display.Audio(yA, rate=rate)
In [ ]: IPython.display.Audio(yD, rate=rate)
```

Note however that, if the noise amplitude exceeds a certain value, digital transmission degrades even less gracefully than analog transmission:

```
In []: NOISE_AMPLITUDE = 0.3

yA = analog_tx(sA, NUM_REPEATERS, NOISE_AMPLITUDE, ATTENUATION)
print ('Analog trasmission: SNR = %f dB' % SNR(yA, sA))

yD = digital_tx(sD, NUM_REPEATERS, NOISE_AMPLITUDE, ATTENUATION)
print ('Digital trasmission: SNR = %f dB' % SNR(yD, sA))

In []:
```