HDL®

# Datasheet | Leading Edge TRIAC Dimmer HDL-MD0206.432

## Parameters

| | |
|---|---|
| **Electrical Parameters:** | |
| AC power input | AC110V/AC220V, 50-60Hz |
| Working power | DC15~30V |
| Power consumption | 28mA/DC24V |
| Output channel | 2CH/6A |
| Maximum output channel current in total | 10A |
| Fuse | 10A |
| TRIAC | 25A TRIAC, Minimum Load 40w |
| Dimming curves | Linear, 1.5 exponent, 2.0 exponent, 3.0 exponent |
| **Environmental Conditions:** | |
| Working temperature | -5℃~45℃ |
| Working relative humidity | Up to 90% |
| Storage temperature | -20℃~+60℃ |
| Storage relative humidity | Up to 93% |
| **Approved** | |
| CE | |
| RoHS | |
| **Product Information:** | |
| Dimensions | 144×90×66 (mm) |
| Weight | 602.5(g) |
| Housing material | Nylon, PC |
| Installation | 35mm DIN rail installation |
| Protection degree | IP20 |
| Cable | Power cable: 2.5mm² ~4mm²(AC in) |
| | Load cable:1.5mm² ~2.5mm² |
| Installation Position | Distribution box (DB ) |

## Important Notes

- Buspro cable - HDL Buspro/KNX cable, 0.8mm single-core copper cable
- Buspro Connection - Series connection (hand-in-hand)
- AC power - Make sure input AC voltage match with setting in dimmer module
- Connect checking – Check all connection after installation
- Output Channel – Current of each channel can not exceed the prescribed current
- Fuse - The fuse to replace the broken one must be of the same type ( aR type )
- Load type – Incandescent light, halogen, etc
- The load must be suitable for leading edge dimming
- Make sure the working temperature of the Dimmer does not exceed 50 ℃

## Overview



HDL-MD0206.432 2-channel 6A Dimmer, supports AC220V and AC110V power input. It has 2 output channels, each channel has a bypass button for manual control. There is fuse protection for each channel, the Dimmer will be protected in case of short circuit. LED indicator will show you which channel has short circuit

## Functions

- Up to 2 separate areas; Max 12 scenes for each area
- Up to 6 sequences and each sequence has 12 steps
- 4 Dimming curves, the dimming accuracy is 512 step
- Low, high, max threshold for each channel
- Bypass button for manual control available for each channel
- You can select specified scene or scene before power off when the device restarts
- Short circuit and over heat protection
- Max 6A of each channel, 12A fuse of each channel for protection (aR type)
- Support HDL Buspro online upgrading


## Installation Steps

- 35mm DIN rail installation, inside DB box
- Mark up each output connection cable
- Connect the load and HDL Buspro
- Check if there is any short circuit in output connection cable
- Check the HDL Buspro connection, avoid any mistakes
- Isolate the high voltage and low voltage cable


## HDL Buspro Cable Guide

| CAT5/CAT5E | HDL Buspro | HDL Buspro/KNX |
|---|---|---|
| Brown/Orange | DC24V | Red |
| Brown white/Orange white | COM | Black |
| Blue white/Green white | DATA- | White |
| Blue/Green | DATA+ | Yellow |


## Dimensions and Wirings (Unit: mm)

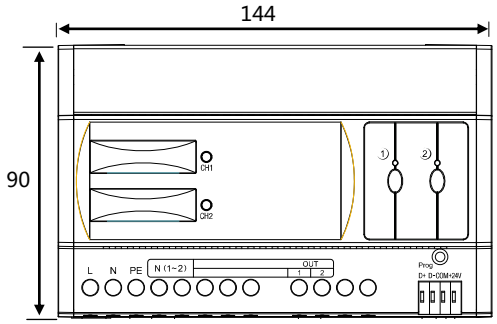


Front view

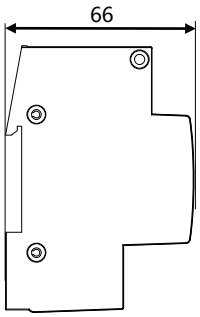


Side view

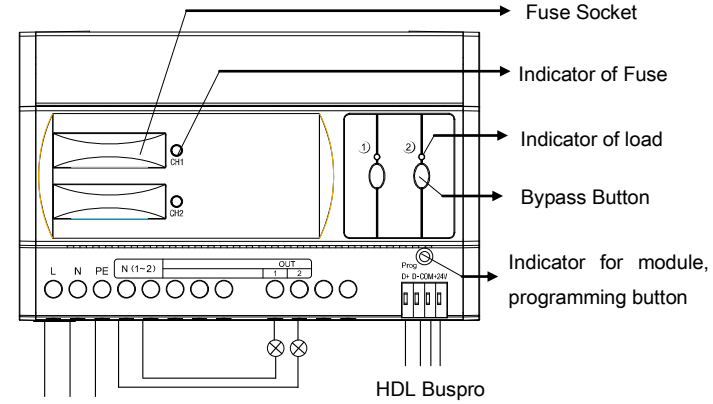


**Indicator for module**

**Indicator:** Flickers when the module is working properly. Keep pressing the indicator for 3 seconds, it turns to red , then user can read and modify the address of the module in the HDL Buspro Pro set up software.

ЧТУП "ОллВижн"
г. Минск, ул. Богдановича, 11
Техническая поддержка
+375 29 7 511 611
E-mail: info@allvision.by
Website: https://hdl.by

©Copyright by HDL Automation Co., Ltd. All rights reserved.
Specifications subject to change without notice.

## Safety Precautions

WARNING

- Fuse must be aR type, and current of each channel can not exceed the prescribed current
- **Turn off the power of Dimmer when replace Fuse**
- ( PE ) should be connected
- Make sure the working temperature of the Dimmer does not exceed 50 ℃
- Current in each channel should not exceed 6A
- The screw down strength should not exceed 0.4Nm
- Installation: Inside DB box
- Do not make wrong connection on Buspro interface, it will damage the Buspro interface of this module
- Do not get AC220V voltage into Buspro wire , it will damage all devices in the system
- Ensure good ventilation
- Avoid contact with the liquids and aggressive gases

## Package Contents

| | |
|---|---|
| Datasheet | ×1 |
| Leading Edge TRIAC Dimmer (HDL-MD0206.432) | ×1 |
| Bus terminal | ×1 |