

# AN4650 Application note

LSM6DS3: always-on 3D accelerometer and 3D gyroscope

#### Introduction

This document is intended to provide usage information and application hints related to ST's LSM6DS3 iNEMO inertial module.

The LSM6DS3 is a 3D digital accelerometer and 3D digital gyroscope system-in-package with a digital I<sup>2</sup>C/SPI serial interface standard output, performing at 0.9 mA in combo Normal mode and 1.25 mA (up to 1.6 kHz) in combo High-Performance mode. Thanks to the ultra-low noise performance of both the gyroscope and the accelerometer, the device combines always-on low-power features with superior sensing precision for an optimal motion experience for the consumer. Furthermore, the accelerometer features smart sleep-to-wake-up (Activity) and return-to-sleep (Inactivity) functions that allow advanced power saving.

The device has a dynamic user-selectable full-scale acceleration range of  $\pm 2/\pm 4/\pm 8/\pm 16~g$  and an angular rate range of  $\pm 125/\pm 245/\pm 500/\pm 1000/\pm 2000$  dps.

The LSM6DS3 can be configured to generate interrupt signals by using hardware recognition of free-fall events, 6D orientation, tap and double-tap sensing, activity or inactivity, wake-up events.

The availability of a dedicated connection mode to external sensors allows the implementation of the sensor hub functionality.

The LSM6DS3 is compatible with the requirements of Android KitKat, Android L and the leading OSs, offering real, virtual and batch-mode sensors. It has been designed to implement in hardware significant motion, tilt, pedometer functions, timestamp and to support the data acquisition of an external magnetometer with ironing correction (hard, soft).

The LSM6DS3 has an integrated smart first-in first-out (FIFO) buffer of up to 8 kbyte size, allowing dynamic batching of significant data (i.e. external sensors, step counter, timestamp and temperature).

The LSM6DS3 is available in a small plastic land grid array package (LGA-14L) and it is guaranteed to operate over an extended temperature range from -40 °C to +85 °C.

The ultra-small size and weight of the SMD package make it an ideal choice for handheld portable applications such as smartphones, IoT connected devices, and wearables or any other application where reduced package size and weight are required.

February 2016 DocID027415 Rev 2 1/113

Contents AN4650

### **Contents**

1	Regi	Registers						
	1.1	Embedded functions registers	4					
2	Ope	rating modes	7					
	2.1	Power-Down mode	9					
	2.2	High-Performance mode	9					
	2.3	Normal mode	9					
	2.4	Low-Power mode	9					
	2.5	Gyroscope Sleep mode	9					
	2.6	Accelerometer bandwidth	0					
		2.6.1 Accelerometer slope filter	5					
	2.7	Gyroscope bandwidth	6					
	2.8	Accelerometer and gyroscope turn-on/off time	8					
3	Read	ling output data	1					
	3.1	Startup sequence						
	3.2	Using the status register						
	3.3	Using the data-ready signal	2					
		3.3.1 DRDY mask functionality	2					
	3.4	Using the block data update (BDU) feature	3					
	3.5	Understanding output data	3					
		3.5.1 Big-little endian selection	3					
		3.5.2 Examples of output data	4					
	3.6	Rounding functions	5					
		3.6.1 Rounding of FIFO output registers	5					
		3.6.2 Rounding of source registers	5					
		3.6.3 Rounding of sensor output registers	5					
	3.7	Gyroscope edge-sensitive/level-sensitive/impulse-sensitive data enable (DEN)						
		3.7.1 Edge-sensitive trigger	6					
		3.7.2 Level-sensitive trigger stamping	8					
		3.7.3 Impulse-sensitive trigger stamping	8					
	3.8	Gyroscope axes orientation	8					



AN4650 Contents

4	Inter	rupt gei	neration	. 40				
	4.1	Interru	ot pin configuration	. 40				
	4.2	Free-fall interrupt						
	4.3	Wake-ı	up interrupt	. 44				
	4.4	6D/4D	orientation detection	. 46				
		4.4.1	6D orientation detection	46				
		4.4.2	4D orientation detection	48				
	4.5	Single-	tap and double-tap recognition	. 48				
		4.5.1	Single tap	48				
		4.5.2	Double tap	49				
		4.5.3	Single-tap and double-tap recognition configuration	50				
		4.5.4	Single-tap example	52				
		4.5.5	Double-tap example	53				
	4.6	Activity	/Inactivity recognition	. 53				
	4.7	Boot st	ratus	. 55				
5	And	roid emb	pedded functions	. 57				
	5.1	Pedom	eter functions: step detector and step counter	. 57				
	5.2	Signific	cant motion	. 60				
	5.3	Tilt		. 62				
	5.4	Timesta	amp	. 63				
6	Mod	e 2 - ser	nsor hub mode	. 65				
	6.1	Sensor	hub mode description	. 65				
	6.2	Sensor	hub mode registers	. 66				
		6.2.1	CTRL10_C (19h)	66				
		6.2.2	MASTER_CONFIG (1Ah)	66				
		6.2.3	FUNC_SRC (53h)	67				
		6.2.4	SLV0_ADD (02h), SLV0_SUBADD (03h), SLAVE0_CONFIG (04h) .	68				
		6.2.5	SLV1_ADD (05h), SLV1_SUBADD (06h), SLAVE1_CONFIG (07h) .	69				
		6.2.6	SLV2_ADD (08h), SLV2_SUBADD (09h), SLAVE2_CONFIG (0Ah) .	70				
		6.2.7	SLV3_ADD (0Bh), SLV3_SUBADD (0Ch), SLAVE3_CONFIG (0Dh)	71				
		6.2.8	DATAWRITE_SRC_MODE_SUB_SLV0 (0Eh)	72				
		6.2.9	SENSORHUBx_REG registers	72				
	6.3	Sensor	hub pass-through feature	. 73				



		6.3.1	Pass-through feature enable	74
		6.3.2	Pass-through feature disable	74
	6.4	Sensor	hub mode example	74
	6.5	Magne	tometer hard-iron / soft-iron correction	75
		6.5.1	Hard-iron correction	76
		6.5.2	Soft-iron correction	77
		6.5.3	Getting compensated magnetometer data	77
		6.5.4	Ironing example	78
7	First	-in first-	-out (FIFO) buffer	82
	7.1	FIFO re	egisters	83
		7.1.1	FIFO_CTRL1 (06h)	
		7.1.2	FIFO_CTRL2 (07h)	84
		7.1.3	FIFO_CTRL3 (08h)	84
		7.1.4	FIFO_CTRL4 (09h)	85
		7.1.5	FIFO_CTRL5 (0Ah)	86
		7.1.6	FIFO_STATUS1 (3Ah)	87
		7.1.7	FIFO_STATUS2 (3Bh)	87
		7.1.8	FIFO_STATUS3 (3Ch)	88
		7.1.9	FIFO_STATUS4 (3Dh)	89
		7.1.10	FIFO_DATA_OUT_L (3Eh)	89
		7.1.11	FIFO_DATA_OUT_H (3Fh)	89
	7.2	FIFO n	nodes	89
		7.2.1	Bypass mode	90
		7.2.2	FIFO mode	90
		7.2.3	Continuous mode	91
		7.2.4	Continuous-to-FIFO mode	93
		7.2.5	Bypass-to-Continuous mode	95
	7.3	Setting	the FIFO trigger, FIFO ODR and decimation factors	97
		7.3.1	Procedure for ODR changes when using FIFO	98
	7.4	Retriev	ring data from the FIFO	99
	7.5	FIFO p	attern	99
		7.5.1	Example 1	100
		7.5.2	Example 2	100
		7.5.3	Example 3	101
	7.6	FIFO th	nreshold	102

AN4650		Contents
	7.7	High part of gyroscope and accelerometer data
	7.8	Step counter and timestamp data in FIFO
	7.9	Temperature data in FIFO
8	Tem	perature sensor107
	8.1	Example of temperature data calculation
9	Self	-test
	9.1	Accelerometer self-test
	9.2	Gyroscope self-test
10	Rev	ision history



List of tables AN4650

### List of tables

Table 1.	Registers	9
Table 2.	Embedded functions registers	
Table 3.	Accelerometer ODR and power mode selection	17
Table 4.	Gyroscope ODR and power mode selection	
Table 5.	Power consumption	
Table 6.	Accelerometer anti-aliasing filter bandwidth selection (XL_BW_SCAL_ODR=1)	20
Table 7.	Accelerometer anti-aliasing bandwidth options (High-Performance mode)	
Table 8.	Accelerometer LPF1 cutoff frequency	
Table 9.	Accelerometer anti-aliasing + LPF1 overall cutoff frequency	21
Table 10.	Accelerometer slope and high-pass filter selection and cutoff frequency	24
Table 11.	Accelerometer LPF2 cutoff frequency	
Table 12.	Gyroscope digital low-pass filter cutoff in Low-Power / Normal mode	26
Table 13.	Gyroscope digital low-pass filter cutoff in High-Performance mode	26
Table 14.	Gyroscope high-pass filter cutoff frequency [Hz]	27
Table 15.	Accelerometer/gyroscope turn-on/off time	28
Table 16.	Accelerometer number of samples to be discarded	30
Table 17.	Gyroscope number of samples to be discarded	30
Table 18.	Output data registers content vs. acceleration (FS_XL = 2 g)	34
Table 19.	Output data registers content vs. angular rate (FS_G = 245 dps)	34
Table 20.	Output registers rounding pattern	
Table 21.	DEN configurations	36
Table 22.	ORIENT_CFG_G register	39
Table 23.	Settings for gyroscope axes orientation	39
Table 24.	INT1_CTRL register	41
Table 25.	MD1_CFG register	41
Table 26.	INT2_CTRL register	41
Table 27.	MD2_CFG register	42
Table 28.	Free-fall threshold LSB value	43
Table 29.	D6D_SRC register	46
Table 30.	Threshold for 4D/6D function	46
Table 31.	D6D_SRC register in 6D positions	47
Table 32.	TAP_SRC register	52
Table 33.	CTRL10_C register	66
Table 34.	MASTER_CONFIG register	66
Table 35.	FUNC_SRC register	67
Table 36.	SLV0_ADD register	68
Table 37.	SLV0_SUBADD register	
Table 38.	SLAVE0_CONFIG register	68
Table 39.	SLV1_ADD register	69
Table 40.	SLV1_SUBADD register	69
Table 41.	SLAVE1_CONFIG register	69
Table 42.	SLV2_ADD register	
Table 43.	SLV2_SUBADD register	70
Table 44.	SLAVE2_CONFIG register	
Table 45.	SLV3_ADD register	
Table 46.	SLV3_SUBADD register	
Table 47.	SLAVE3_CONFIG register	71
Table 48	DATAWRITE SRC MODE SUB SLV0 register	72



AN4650 List of tables

Table 49.	Ironing configuration	76
	Ironing configuration	
Table 50.	Hard-iron register values	
Table 51.	Soft-iron register values	
Table 52.	FIFO_CTRL1 register	
Table 53.	FIFO_CTRL2 register	
Table 54.	FIFO_CTRL3 register	
Table 55.	Gyroscope FIFO decimation setting	
Table 56.	Accelerometer FIFO decimation setting	85
Table 57.	FIFO_CTRL4 register	85
Table 58.	3 <sup>rd</sup> FIFO data set decimation setting	85
Table 59.	4 <sup>th</sup> FIFO data set decimation setting	86
Table 60.	FIFO_CTRL5 register	86
Table 61.	FIFO ODR selection setting	86
Table 62.	FIFO mode selection	87
Table 63.	FIFO_STATUS1 register	87
Table 64.	FIFO_STATUS2 register	87
Table 65.	FIFO_STATUS2 behavior (case with one sensor in FIFO, STOP_ON_FTH = 0)	88
Table 66.	FIFO_STATUS3 register	88
Table 67.	FIFO_STATUS4 register	89
Table 68.	FIFO_DATA_OUT_L register	89
Table 69.	FIFO_DATA_OUT_H register	89
Table 70.	Example 1: FIFO_PATTERN_[9:0] bits and next reading	100
Table 71.	Example 2: FIFO_PATTERN_[9:0] bits and next reading	101
Table 72.	Example 3: FIFO_PATTERN_[9:0] bits and next reading	
Table 73.	High part of gyroscope and accelerometer data in FIFO	
Table 74.	Timestamp and pedometer data in FIFO	105
Table 75.	Temperature data in FIFO	
Table 76.	Output data registers content vs. temperature	
Table 77.	Document revision history	



List of figures AN4650

### List of figures

Accelerometer sampling chain diagram	. 20
Accelerometer composite digital filter	. 23
Accelerometer slope filter	. 25
Gyroscope sampling chain diagram	. 26
Gyroscope high-pass filter reset	. 27
Data-ready signal	. 32
Storing synchronized data in FIFO	
Data synchronization: level-sensitive	. 38
Gyroscope axes orientation and sign configuration	. 38
Gyroscope axes orientation and sign example	
Free-fall interrupt	. 42
Wake-up interrupt (using the slope filter)	. 44
6D recognized orientations	
Single-tap event recognition	. 49
Double-tap event recognition (LIR bit = 0)	. 50
Single and double-tap recognition (LIR bit = 0)	. 51
Activity/Inactivity recognition (using the slope filter)	. 54
Pedometer debounce	. 58
Pedometer minimum threshold	. 59
Tilt example	. 62
External sensor connections in Mode 2	. 65
SENSORHUBx_REG allocation example	. 72
Pass-through feature	. 73
Hard-iron effect (X-Y 2D scatter plot)	. 76
Soft-iron effect (X-Y 2D scatter plot)	. 77
Hard-iron / soft-iron correction block scheme	. 78
FIFO mode (STOP_ON_FTH=0)	. 91
Continuous mode	. 92
Continuous-to-FIFO mode	. 94
Bypass-to-Continuous mode	. 96
FIFO trigger signal selection	
FIFO threshold (STOP_ON_FTH = 0)	
FIFO threshold (STOP_ON_FTH = 1) in Continuous mode	104
Accelerometer self-test procedure	110
Gyroscope self-test procedure	111
	Accelerometer composite digital filter. Accelerometer slope filter Gyroscope sampling chain diagram Gyroscope high-pass filter reset Data-ready signal Data synchronization: edge-sensitive Storing synchronization: level-sensitive Gyroscope axes orientation and sign configuration Gyroscope axes orientation and sign example. Free-fall interrupt. Wake-up interrupt (using the slope filter) 6D recognized orientations Single-tap event recognition Double-tap event recognition (LIR bit = 0) Single and double-tap recognition (LIR bit = 0) Activity/Inactivity recognition (using the slope filter) Pedometer debounce Pedometer minimum threshold Tilt example. External sensor connections in Mode 2 SENSORHUBx_REG allocation example. Pass-through feature Hard-iron effect (X-Y 2D scatter plot) Soft-iron effect (X-Y 2D scatter plot) Hard-iron of soft-iron correction block scheme FIFO mode (STOP_ON_FTH=0) Continuous mode Continuous-to-FIFO mode Bypass-to-Continuous mode. FIFO threshold (STOP_ON_FTH = 0) FIFO threshold (STOP_ON_FTH = 1) in Continuous mode Accelerometer self-test procedure



### Registers

Table 1. Registers

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
FUNC_CFG_ACCESS	01h	FUNC_CFG _EN	0	0	0	0	0	0	0
SENSOR_SYNC_ TIME_FRAME	04h	TPH_7	TPH_6	TPH_5	TPH_4	TPH_3	TPH_2	TPH_1	TPH_0
FIFO_CTRL1	06h	FTH_7	FTH_6	FTH_5	FTH_4	FTH_3	FTH_2	FTH_1	FTH_0
FIFO_CTRL2	07h	TIMER_PEDO _FIFO_EN	TIMER_PEDO _FIFO_DRDY	0	0	FTH_11	FTH_10	FTH_9	FTH_8
FIFO_CTRL3	08h	0	0	DEC_FIFO _GYRO2	DEC_FIFO _GYRO1	DEC_FIFO _GYRO0	DEC_FIFO _XL2	DEC_FIFO _XL1	DEC_FIFO _XL0
FIFO_CTRL4	09h	0	ONLY_HIGH _DATA	DEC_DS4 _FIFO2	DEC_DS4 _FIFO1	DEC_DS4 _FIFO0	DEC_DS3 _FIFO2	DEC_DS3 _FIFO1	DEC_DS3 _FIFO0
FIFO_CTRL5	0Ah	0	ODR_FIFO _3	ODR_FIFO _2	ODR_FIFO _1	ODR_FIFO _0	FIFO_MODE _2	FIFO_MODE _1	FIFO_MODE _0
ORIENT_CFG_G	0Bh	0	0	SignX_G	SignY_G	SignZ_G	Orient_2	Orient_1	Orient_0
INT1_CTRL	0Dh	INT1_STEP _DETECTOR	INT1_SIG _MOT	INT1_FULL_ FLAG	INT1_FIFO_ OVR	INT1_FTH	INT1_BOOT	INT1_DRDY _G	INT1_DRDY _XL
INT2_CTRL	0Eh	IINT2_STEP _DELTA	INT2_STEP _COUNT_OV	INT2_FULL_ FLAG	INT2_FIFO_ OVR	INT2_FTH	INT2_DRDY _TEMP	INT2_DRDY _G	INT2_DRDY _XL
WHO_AM_I	0Fh	0	1	1	0	1	0	0	1
CTRL1_XL	10h	ODR_XL3	ODR_XL2	ODR_XL1	ODR_XL0	FS_XL1	FS_XL0	BW_XL1	BW_XL0
CTRL2_G	11h	ODR_G3	ODR_G2	ODR_G1	ODR_G0	FS_G1	FS_G0	FS_125	0
CTRL3_C	12h	воот	BDU	H_LACTIVE	PP_OD	SIM	IF_INC	BLE	SW_RESET
CTRL4_C	13h	XL_BW_ SCAL_ODR	SLEEP_G	INT2_on _INT1	FIFO_TEMP _EN	DRDY _MASK	I2C_disable	0	STOP_ON _FTH
CTRL5_C	14h	ROUNDING2	ROUNDING1	ROUNDING0	0	ST1_G	ST0_G	ST1_XL	ST0_XL

	XII
I	

Table 1. Registers (continued)

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
CTRL6_C	15h	TRIG_EN	LVLen	LVL2_EN	XL_HM _MODE	0	0	0	0
CTRL7_G	16h	G_HM_MODE	HP_G_EN	HPCF_G1	HPCF_G0	HP_G_RST	ROUNDING _STATUS	0	0
CTRL8_XL	17h	LPF2_XL_EN	HPCF_XL1	HPCF_XL0	0	0	HP_SLOPE_ XL_EN	0	LOW_PASS _ON_6D
CTRL9_XL	18h	0	0	Zen_XL	Yen_XL	Xen_XL	SOFT_EN	0	0
CTRL10_C	19h	0	0	Zen_G	Yen_G	Xen_G	FUNC_EN	PEDO_RST _STEP	SIGN_MOTI ON_EN
MASTER_CONFIG	1Ah	DRDY_ON _INT1	DATA_VALID _SEL_FIFO	0	START _CONFIG	PULL_UP _EN	PASS _THROUGH _MODE	IRON_EN	MASTER _ON
WAKE_UP_SRC	1Bh	0	0	FF_IA	SLEEP _STATE_IA	WU_IA	X_WU	Y_WU	Z_WU
TAP_SRC	1Ch	0	TAP_IA	SINGLE _TAP	DOUBLE _TAP	TAP_SIGN	X_TAP	Y_TAP	Z_TAP
D6D_SRC	1Dh	0	D6D_IA	ZH	ZL	YH	YL	XH	XL
STATUS_REG	1Eh	-	-	-	-	EV_BOOT	TDA	GDA	XLDA
OUT_TEMP_L	20h	Temp7	Temp6	Temp5	Temp4	Temp3	Temp2	Temp1	Temp0
OUT_TEMP_H	21h	Temp15	Temp14	Temp13	Temp12	Temp11	Temp10	Temp9	Temp8
OUTX_L_G	22h	D7	D6	D5	D4	D3	D2	D1	D0
OUTX_H_G	23h	D15	D14	D13	D12	D11	D10	D9	D8
OUTY_L_G	24h	D7	D6	D5	D4	D3	D2	D1	D0
OUTY_H_G	25h	D15	D14	D13	D12	D11	D10	D9	D8
OUTZ_L_G	26h	D7	D6	D5	D4	D3	D2	D1	D0
OUTZ_H_G	27h	D15	D14	D13	D12	D11	D10	D9	D8
OUTX_L_XL	28h	D7	D6	D5	D4	D3	D2	D1	D0

ı	3
ı	_

Table 1. Registers (continued)										
Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0	
OUTX_H_XL	29h	D15	D14	D13	D12	D11	D10	D9	D8	
OUTY_L_XL	2Ah	D7	D6	D5	D4	D3	D2	D1	D0	
OUTY_H_XL	2Bh	D15	D14	D13	D12	D11	D10	D9	D8	
OUTZ_L_XL	2Ch	D7	D6	D5	D4	D3	D2	D1	D0	
OUTZ_H_XL	2Dh	D15	D14	D13	D12	D11	D10	D9	D8	
SENSORHUB1_REG	2Eh	SHub1_7	SHub1_6	SHub1_5	SHub1_4	SHub1_3	SHub1_2	SHub1_1	SHub1_0	
SENSORHUB2_REG	2Fh	SHub2_7	SHub2_6	SHub2_5	SHub2_4	SHub2_3	SHub2_2	SHub2_1	SHub2_0	
SENSORHUB3_REG	30h	SHub3_7	SHub3_6	SHub3_5	SHub3_4	SHub3_3	SHub3_2	SHub3_1	SHub3_0	
SENSORHUB4_REG	31h	SHub4_7	SHub4_6	SHub4_5	SHub4_4	SHub4_3	SHub4_2	SHub4_1	SHub4_0	
SENSORHUB5_REG	32h	SHub5_7	SHub5_6	SHub5_5	SHub5_4	SHub5_3	SHub5_2	SHub5_1	SHub5_0	
SENSORHUB6_REG	33h	SHub6_7	SHub6_6	SHub6_5	SHub6_4	SHub6_3	SHub6_2	SHub6_1	SHub6_0	
SENSORHUB7_REG	34h	SHub7_7	SHub7_6	SHub7_5	SHub7_4	SHub7_3	SHub7_2	SHub7_1	SHub7_0	
SENSORHUB8_REG	35h	SHub8_7	SHub8_6	SHub8_5	SHub8_4	SHub8_3	SHub8_2	SHub8_1	SHub8_0	
SENSORHUB9_REG	36h	SHub9_7	SHub9_6	SHub9_5	SHub9_4	SHub9_3	SHub9_2	SHub9_1	SHub9_0	
SENSORHUB10_REG	37h	SHub10_7	SHub10_6	SHub10_5	SHub10_4	SHub10_3	SHub10_2	SHub10_1	SHub10_0	
SENSORHUB11_REG	38h	SHub11_7	SHub11_6	SHub11_5	SHub11_4	SHub11_3	SHub11_2	SHub11_1	SHub11_0	
SENSORHUB12_REG	39h	SHub12_7	SHub12_6	SHub12_5	SHub12_4	SHub12_3	SHub12_2	SHub12_1	SHub12_0	
FIFO_STATUS1	3Ah	DIFF_FIFO _7	DIFF_FIFO _6	DIFF_FIFO _5	DIFF_FIFO _4	DIFF_FIFO _3	DIFF_FIFO _2	DIFF_FIFO _1	DIFF_FIFO _0	
FIFO_STATUS2	3Bh	FTH	FIFO_OVER_ RUN	FIFO_FULL	FIFO _EMPTY	DIFF_FIFO _11	DIFF_FIFO _10	DIFF_FIFO _9	DIFF_FIFO _8	
FIFO_STATUS3	3Ch	FIFO_ PATTERN_7	FIFO_ PATTERN_6	FIFO_ PATTERN_5	FIFO_ PATTERN_4	FIFO_ PATTERN_3	FIFO_ PATTERN_2	FIFO_ PATTERN_1	FIFO_ PATTERN_0	
FIFO_STATUS4	3Dh	0	0	0	0	0	0	FIFO_ PATTERN_9	FIFO_ PATTERN_8	



Table 1. Registers (continued)

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
FIFO_DATA_OUT_L	3Eh	DATA_OUT _FIFO_L_7	DATA_OUT _FIFO_L_6	DATA_OUT _FIFO_L_5	DATA_OUT _FIFO_L_4	DATA_OUT _FIFO_L_3	DATA_OUT _FIFO_L_2	DATA_OUT _FIFO_L_1	DATA_OUT _FIFO_L_0
FIFO_DATA_OUT_H	3Fh	DATA_OUT _FIFO_H_7	DATA_OUT _FIFO_H_6	DATA_OUT _FIFO_H_5	DATA_OUT _FIFO_H_4	DATA_OUT _FIFO_H_3	DATA_OUT _FIFO_H_2	DATA_OUT _FIFO_H_1	DATA_OUT _FIFO_H_0
TIMESTAMP0_REG	40h	TIMESTAMP 0_7	TIMESTAMP 0_6	TIMESTAMP 0_5	TIMESTAMP 0_4	TIMESTAMP 0_3	TIMESTAMP 0_2	TIMESTAMP 0_1	TIMESTAMP 0_0
TIMESTAMP1_REG	41h	TIMESTAMP 1_7	TIMESTAMP 1_6	TIMESTAMP 1_5	TIMESTAMP 1_4	TIMESTAMP 1_3	TIMESTAMP 1_2	TIMESTAMP 1_1	TIMESTAMP 1_0
TIMESTAMP2_REG	42h	TIMESTAMP 2_7	TIMESTAMP 2_6	TIMESTAMP 2_5	TIMESTAMP 2_4	TIMESTAMP 2_3	TIMESTAMP 2_2	TIMESTAMP 2_1	TIMESTAMP 2_0
STEP_TIMESTAMP_L	49h	STEP_TIMES TAMP_L_7	STEP_TIMES TAMP_L_6	STEP_TIMES TAMP_L_5	STEP_TIME STAMP_L_4	STEP_TIME STAMP_L_3	STEP_TIME STAMP_L_2	STEP_TIME STAMP_L_1	STEP_TIME STAMP_L_0
STEP_TIMESTAMP_H	4Ah	STEP_TIMES TAMP_L_7	STEP_TIMES TAMP_L_6	STEP_TIMES TAMP_L_5	STEP_TIME STAMP_L_4	STEP_TIME STAMP_L_3	STEP_TIME STAMP_L_2	STEP_TIME STAMP_L_1	STEP_TIME STAMP_L_0
STEP_COUNTER_L	4Bh	STEP_COUN TER_L_7	STEP_COUNT ER_L_6	STEP_COUN TER_L_5	STEP_COU NTER_L_4	STEP_COU NTER_L_3	STEP_COU NTER_L_2	STEP_COU NTER_L_1	STEP_COU NTER_L_0
STEP_COUNTER_H	4Ch	STEP_COUN TER_H_7	STEP_COUNT ER_H_6	STEP_COUN TER_H_5	STEP_COU NTER_H_4	STEP_COU NTER_H_3	STEP_COU NTER_H_2	STEP_COU NTER_H_1	STEP_COU NTER_H_0
SENSORHUB13_REG	4Dh	SHub13_7	SHub13_6	SHub13_5	SHub13_4	SHub13_3	SHub13_2	SHub13_1	SHub13_0
SENSORHUB14_REG	4Eh	SHub14_7	SHub14_6	SHub14_5	SHub14_4	SHub14_3	SHub14_2	SHub14_1	SHub14_0
SENSORHUB15_REG	4Fh	SHub15_7	SHub15_6	SHub15_5	SHub15_4	SHub15_3	SHub15_2	SHub15_1	SHub15_0
SENSORHUB16_REG	50h	SHub16_7	SHub16_6	SHub16_5	SHub16_4	SHub16_3	SHub16_2	SHub16_1	SHub16_0
SENSORHUB17_REG	51h	SHub17_7	SHub17_6	SHub17_5	SHub17_4	SHub17_3	SHub17_2	SHub17_1	SHub17_0
SENSORHUB18_REG	52h	SHub18_7	SHub18_6	SHub18_5	SHub18_4	SHub18_3	SHub18_2	SHub18_1	SHub18_0
FUNC_SRC	53h	STEP_COUN T_DELTA_IA	SIGN_ MOTION_IA	TILT_IA	STEP_ DETECTED	STEP_OVE RFLOW	0	SI_END_OP	SENSORHU B_END_OP
TAP_CFG	58h	TIMER_EN	PEDO_EN	TILT_EN	SLOPE _FDS	TAP_X_EN	TAP_Y_EN	TAP_Z_EN	LIR



**Table 1. Registers (continued)** 

rable 1. Registers (continues)									
Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
TAP_THS_6D	59h	D4D_EN	SIXD_THS1	SIXD_THS0	TAP_THS4	TAP_THS3	TAP_THS2	TAP_THS1	TAP_THS0
INT_DUR2	5Ah	DUR3	DUR2	DUR1	DUR0	QUIET1	QUIET0	SHOCK1	SHOCK0
WAKE_UP_THS	5Bh	SINGLE_DOU BLE_TAP	INACTIVITY	WK_THS5	WK_THS4	WK_THS3	WK_THS2	WK_THS1	WK_THS0
WAKE_UP_DUR	5Ch	FF_DUR5	WAKE _DUR1	WAKE _DUR0	TIMER_HR	SLEEP _DUR3	SLEEP _DUR2	SLEEP _DUR1	SLEEP _DUR0
FREE_FALL	5Dh	FF_DUR4	FF_DUR3	FF_DUR2	FF_DUR1	FF_DUR0	FF_THS2	FF_THS1	FF_THS0
MD1_CFG	5Eh	INT1_INACT _STATE	INT1_SINGLE _TAP	INT1_WU	INT1_FF	INT1_DOUB LE_TAP	INT1_6D	INT1_TILT	INT1 _TIMER
MD2_CFG	5Fh	INT2_INACT _STATE	INT2_SINGLE _TAP	INT2_WU	INT2_FF	INT2_DOUB LE_TAP	INT2_6D	INT2_TILT	INT2_IRON
OUT_MAG_RAW_X_L	66h	D7	D6	D5	D4	D3	D2	D1	D0
OUT_MAG_RAW_X_H	67h	D15	D14	D13	D12	D11	D10	D9	D8
OUT_MAG_RAW_Y_L	68h	D7	D6	D5	D4	D3	D2	D1	D0
OUT_MAG_RAW_Y_H	69h	D15	D14	D13	D12	D11	D10	D9	D8
OUT_MAG_RAW_Z_L	6Ah	D7	D6	D5	D4	D3	D2	D1	D0
OUT_MAG_RAW_Z_H	6Bh	D15	D14	D13	D12	D11	D10	D9	D8



### 1.1 Embedded functions registers

The list of the registers for embedded functions available in the device is given in *Table 2*.

Embedded functions registers are accessible when the FUNC\_CFG\_EN bit is set to '1' in the FUNC\_CFG\_ACCESS register.

Note: All modifications to the content of the embedded functions registers have to be performed with both the accelerometer and the

gyroscope sensor in Power-Down mode.

Table 2. Embedded functions registers

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
SLV0_ADD	02h	Slave0 _add6	Slave0 _add5	Slave0 _add4	Slave0 _add3	Slave0 _add2	Slave0 _add1	Slave0 _add0	rw_0
SLV0_SUBADD	03h	Slave0 _reg7	Slave0 _reg6	Slave0 _reg5	Slave0 _reg4	Slave0 _reg3	Slave0 _reg2	Slave0 _reg1	Slave0 _reg0
SLAVE0_CONFIG	04h	Slave0 _rate1	Slave0 _rate0	Aux_sens _on1	Aux_sens _on0	Src_mode	Slave0 _numop2	Slave0 _numop1	Slave0 _numop0
SLV1_ADD	05h	Slave1 _add6	Slave1 _add5	Slave1 _add4	Slave1 _add3	Slave1 _add2	Slave1 _add1	Slave1 _add0	r_1
SLV1_SUBADD	06h	Slave1 _reg7	Slave1 _reg6	Slave1 _reg5	Slave1 _reg4	Slave1 _reg3	Slave1 _reg2	Slave1 _reg1	Slave1 _reg0
SLAVE1_CONFIG	07h	Slave1 _rate1	Slave1 _rate0	0	0	0	Slave1 _numop2	Slave1 _numop1	Slave1 _numop0
SLV2_ADD	08h	Slave2 _add6	Slave2 _add5	Slave2 _add4	Slave2 _add3	Slave2 _add2	Slave2 _add1	Slave2 _add0	r_2
SLV2_SUBADD	09h	Slave2 _reg7	Slave2 _reg6	Slave2 _reg5	Slave2 _reg4	Slave2 _reg3	Slave2 _reg2	Slave2 _reg1	Slave2 _reg0
SLAVE2_CONFIG	0Ah	Slave2 _rate1	Slave2 _rate0	0	0	0	Slave2 _numop2	Slave2 _numop1	Slave2 _numop0
SLV3_ADD	0Bh	Slave3 _add6	Slave3 _add5	Slave3 _add4	Slave3 _add3	Slave3 _add2	Slave3 _add1	Slave3 _add0	r_3

l	
•	M
	21
ı	

Table 2. Embedded functions registers (continued)

Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
SLV3 SUBADD	0Ch	Slave3	Slave3	Slave3	Slave3	Slave3	Slave3	Slave3	Slave3
SLV3_SUBADD	UCII	_reg7	_reg6	_reg5	_reg4	_reg3	_reg2	_reg1	_reg0
SLAVE3_CONFIG	0Dh	Slave3 _rate1	Slave3 _rate0	0	0	0	Slave3 _numop2	Slave3 _numop1	Slave3 _numop0
DATAWRITE_SRC _MODE_SUB_SLV0	0Eh	Slave_dataw 7	Slave_dataw 6	Slave_dataw 5	Slave_dataw 4	Slave_dataw 3	Slave_dataw 2	Slave_dataw 1	Slave_dataw 0
PEDO_THS_REG	0Fh	PEDO_4G	-	-	THS_MIN_4	THS_MIN_3	THS_MIN_2	THS_MIN_1	THS_MIN_0
SM_THS	13h	SM_THS_7	SM_THS_6	SM_THS_5	SM_THS_4	SM_THS_3	SM_THS_2	SM_THS_1	SM_THS_0
PEDO_DEB_REG	14h	DEB _TIME_4	DEB _TIME_3	DEB _TIME_2	DEB _TIME_1	DEB _TIME_0	DEB _STEP_2	DEB _STEP_1	DEB _STEP_0
STEP_COUNT_DELTA	15h	SC_DELTA _7	SC_DELTA _6	SC_DELTA _5	SC_DELTA _4	SC_DELTA	SC_DELTA _2	SC_DELTA _1	SC_DELTA _0
MAG_SI_XX	24h	MAG_SI _XX_7	MAG_SI _XX_6	MAG_SI _XX_5	MAG_SI _XX_4	MAG_SI _XX_3	MAG_SI _XX_2	MAG_SI _XX_1	MAG_SI _XX_0
MAG_SI_XY	25h	MAG_SI _XY_7	MAG_SI _XY_6	MAG_SI _XY_5	MAG_SI _XY_4	MAG_SI _XY_3	MAG_SI _XY_2	MAG_SI _XY_1	MAG_SI _XY_0
MAG_SI_XZ	26h	MAG_SI _XZ_7	MAG_SI _XZ_6	MAG_SI _XZ_5	MAG_SI _XZ_4	MAG_SI _XZ_3	MAG_SI _XZ_2	MAG_SI _XZ_1	MAG_SI _XZ_0
MAG_SI_YX	27h	MAG_SI _YX_7	MAG_SI _YX_6	MAG_SI _YX_5	MAG_SI _YX_4	MAG_SI _YX_3	MAG_SI _YX_2	MAG_SI _YX_1	MAG_SI _YX_0
MAG_SI_YZ	28h	MAG_SI _YZ_7	MAG_SI _YZ_6	MAG_SI _YZ_5	MAG_SI _YZ_4	MAG_SI _YZ_3	MAG_SI _YZ_2	MAG_SI _YZ_1	MAG_SI _YZ_0
MAG_SI_YX	29h	MAG_SI _YX_7	MAG_SI _YX_6	MAG_SI _YX_5	MAG_SI _YX_4	MAG_SI _YX_3	MAG_SI _YX_2	MAG_SI _YX_1	MAG_SI _YX_0
MAG_SI_ZX	2Ah	MAG_SI _ZX_7	MAG_SI _ZX_6	MAG_SI _ZX_5	MAG_SI _ZX_4	MAG_SI _ZX_3	MAG_SI _ZX_2	MAG_SI _ZX_1	MAG_SI _ZX_0
MAG_SI_ZY	2Bh	MAG_SI _ZY_7	MAG_SI _ZY_6	MAG_SI _ZY_5	MAG_SI _ZY_4	MAG_SI _ZY_3	MAG_SI _ZY_2	MAG_SI _ZY_1	MAG_SI _ZY_0



Table 2. Embedded functions registers (continued)

	140.0 2.1 2.110.044.04 141.04.00 (0.011.114.04)								
Register name	Address	Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
MAG_SI_ZZ	2Ch	MAG_SI _ZZ_7	MAG_SI _ZZ_6	MAG_SI _ZZ_5	MAG_SI _ZZ_4	MAG_SI _ZZ_3	MAG_SI _ZZ_2	MAG_SI _ZZ_1	MAG_SI _ZZ_0
MAG_OFFX_L	2Dh	MAG_OFFX _L_7	MAG_OFFX _L_6	MAG_OFFX _L_5	MAG_OFFX _L_4	MAG_OFFX _L_3	MAG_OFFX _L_2	MAG_OFFX _L_1	MAG_OFFX _L_0
MAG_OFFX_H	2Eh	MAG_OFFX _H_7	MAG_OFFX _H_6	MAG_OFFX _H_5	MAG_OFFX _H_4	MAG_OFFX _H_3	MAG_OFFX _H_2	MAG_OFFX _H_1	MAG_OFFX _H_0
MAG_OFFY_L	2Fh	MAG_OFFY _L_7	MAG_OFFY _L_6	MAG_OFFY _L_5	MAG_OFFY _L_4	MAG_OFFY _L_3	MAG_OFFY _L_2	MAG_OFFY _L_1	MAG_OFFY _L_0
MAG_OFFY_H	30h	MAG_OFFY _H_7	MAG_OFFY _H_6	MAG_OFFY _H_5	MAG_OFFY _H_4	MAG_OFFY _H_3	MAG_OFFY _H_2	MAG_OFFY _H_1	MAG_OFFY _H_0
MAG_OFFZ_L	31h	MAG_OFFZ _L_7	MAG_OFFZ _L_6	MAG_OFFZ _L_5	MAG_OFFZ _L_4	MAG_OFFZ _L_3	MAG_OFFZ _L_2	MAG_OFFZ _L_1	MAG_OFFZ _L_0
MAG_OFFZ_H	32h	MAG_OFFZ _H_7	MAG_OFFZ _H_6	MAG_OFFZ _H_5	MAG_OFFZ _H_4	MAG_OFFZ _H_3	MAG_OFFZ _H_2	MAG_OFFZ _H_1	MAG_OFFZ _H_0

#### 2 Operating modes

The LSM6DS3 provides three possible operating configurations:

- only accelerometer active and gyroscope in Power-Down;
- only gyroscope active and accelerometer in Power-Down;
- both accelerometer and gyroscope active with independent ODR.

After the power supply is applied, the LSM6DS3 performs a 20 ms boot procedure to load the trimming parameters. After the boot is completed, both the accelerometer and the gyroscope are automatically configured in Power-Down mode.

The accelerometer and the gyroscope can be independently configured in four different power modes: Power-Down, Low-Power, Normal and High-Performance mode. They are allowed to have different data rates without any limit. The gyroscope sensor can also be set in Sleep mode to reduce its power consumption.

When both the accelerometer and gyroscope are on, the accelerometer is synchronized with the gyroscope and the data rates of the two sensors are integer multiples of each other. If the accelerometer and the gyroscope have been configured with the same output data rate, the gyroscope data-ready signal (DRDY\_G) is always subsequent to the accelerometer data-ready signal (DRDY\_XL); in this case, for synchronous reading of the two sensors, it is convenient to use the gyroscope data-ready signal.

Referring to the LSM6DS3 datasheet, the output data rate (ODR\_XL) bits of CTRL1\_XL register and the High-Performance disable (XL\_HM\_MODE) bit of CTRL6\_C register are used to select the power mode and the output data rate of the accelerometer sensor (*Table 3*).

Note:

When the LSM6DS3 is configured in accelerometer-only mode (the gyroscope is in Power-Down mode) and the accelerometer is set in Low-Power mode, the FUNC\_EN bit of the CTRL10\_C register must be set to 1.

Table 3. Accelerometer ODR and power mode selection

ODR_XL [3:0]	ODR [Hz] when XL_HM_MODE = 1	ODR [Hz] when XL_HM_MODE = 0
0000	Power Down	Power Down
0001	12.5 Hz (Low Power)	12.5 Hz (High Performance)
0010	26 Hz (Low Power)	26 Hz (High Performance)
0011	52 Hz (Low Power)	52 Hz (High Performance)
0100	104 Hz (Normal mode)	104 Hz (High Performance)
0101	208 Hz (Normal mode)	208 Hz (High Performance)
0110	416 Hz (High Performance)	416 Hz (High Performance)
0111	833 Hz (High Performance)	833 Hz (High Performance)
1000	1.66 kHz (High Performance)	1.66 kHz (High Performance)
1001	3.33 kHz (High Performance)	3.33 kHz (High Performance)
1010	6.66 kHz (High Performance)	6.66 kHz (High Performance)

The output data rate (ODR\_G) bits of CTRL2\_G register and the High-Performance disable (G\_HM\_MODE) bit of CTRL7\_G register are used to select the power mode and output data rate of the gyroscope sensor (*Table 4*).

Table 4. Gyroscope ODR and power mode selection

ODR_G [3:0]	ODR [Hz] when G_HM_MODE = 1	ODR [Hz] when G_HM_MODE = 0
0000	Power Down	Power Down
0001	12.5 Hz (Low Power)	12.5 Hz (High Performance)
0010	26 Hz (Low Power)	26 Hz (High Performance)
0011	52 Hz (Low Power)	52 Hz (High Performance)
0100	104 Hz (Normal mode)	104 Hz (High Performance)
0101	208 Hz (Normal mode)	208 Hz (High Performance)
0110	416 Hz (High Performance)	416 Hz (High Performance)
0111	833 Hz (High Performance)	833 Hz (High Performance)
1000	1.66 kHz (High Performance)	1.66 kHz (High Performance)

*Table 5* shows the typical values of power consumption for the different operating modes.

**Table 5. Power consumption** 

ODR [Hz]	Accelerometer only (at Vdd = 1.8 V)	Gyroscope only (at Vdd = 1.8 V)	Combo [Acc + Gyro] (at Vdd = 1.8 V)
Power Down	-	-	6 μΑ
12.5 Hz (Low Power)	24 μΑ	470 μΑ	425 μΑ
26 Hz (Low Power)	31 μΑ	500 μΑ	450 μΑ
52 Hz (Low Power)	45 μΑ	540 μΑ	500 μΑ
104 Hz (Normal mode)	70 μΑ	625 μΑ	600 μΑ
208 Hz (Normal mode)	120 μΑ	880 μΑ	900 μΑ
12.5 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
26 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
52 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
104 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
208 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
416 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
833 Hz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
1.66 kHz (High Perf.)	240 μΑ	1.15 mA	1.25 mA
3.33 kHz (High Perf.)	325 μΑ	N.A.	N.A.
6.66 kHz (High Perf.)	325 μΑ	N.A.	N.A.



#### 2.1 Power-Down mode

When the accelerometer/gyroscope is in Power-Down mode, almost all internal blocks of the device are switched off to minimize power consumption. Digital interfaces (I<sup>2</sup>C and SPI) are still active to allow communication with the device. The content of the configuration registers is preserved and the output data registers are not updated, keeping the last data sampled in memory before going into Power-Down mode.

#### 2.2 High-Performance mode

In High-Performance mode, all accelerometer/gyroscope circuitry is always on and data are generated at the data rate selected through the ODR\_XL/ODR\_G bits.

Data interrupt generation is active.

#### 2.3 Normal mode

While High-Performance mode guarantees the best performance in terms of noise, Normal mode further reduces the current consumption. The accelerometer/gyroscope data reading chain is automatically turned on and off to save power. In the gyroscope device, only the driving circuitry is always on.

Data interrupt generation is active.

#### 2.4 Low-Power mode

Low-Power mode differs from Normal mode in the available output data rates. In Low-Power mode low-speed ODRs are enabled; three low-speed ODRs can be chosen through the ODR\_XL/ODR\_G bits: 12.5 Hz, 26 Hz and 52 Hz.

Data interrupt generation is active.

Note:

When the LSM6DS3 is configured in accelerometer-only mode (the gyroscope is in Power-Down mode) and the accelerometer is set in Low-Power mode, the FUNC\_EN bit of the CTRL10\_C register must be set to 1.

#### 2.5 Gyroscope Sleep mode


While the gyroscope is in Sleep mode the circuitry that drives the oscillation of the gyroscope mass is kept active. Compared to gyroscope Power-Down, turn-on time from Sleep mode to Low-Power/Normal/High-Performance mode is drastically reduced.

If the gyroscope is not configured in Power-Down mode, it enters in Sleep mode when the Sleep mode enable (SLEEP\_G) bit of CTRL4\_C register is set to 1, regardless of the selected gyroscope ODR.

#### 2.6 Accelerometer bandwidth

The accelerometer sampling chain (*Figure 1*) is represented by a cascade of four blocks: an analog low-pass filter, an ADC converter, a digital low-pass filter and the composite group of digital filters described in *Figure 2*.

Figure 1. Accelerometer sampling chain diagram

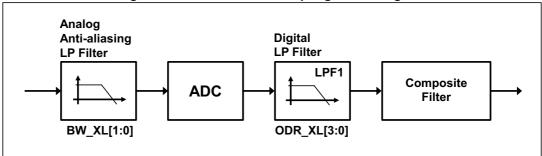

The analog signal coming from the mechanical parts is filtered by a low-pass anti-aliasing filter before being converted by the ADC. The anti-aliasing filter is enabled in High-Performance mode only.

If the XL\_BW\_SCAL\_ODR bit in CTRL4\_C register is set to 1, the bandwidth of this analog filter is determined by setting the BW\_XL bits of CTRL1\_XL register; relative filter cutoff frequency values are given in *Table 6*. If the XL\_BW\_SCAL\_ODR bit is set to 0, the bandwidth of the analog filter is determined by the ODR\_XL selection (*Table 7*).

Table 6. Accelerometer anti-aliasing filter bandwidth selection (XL\_BW\_SCAL\_ODR=1)

BW_XL[1:0]	Bandwidth [Hz]
00	400
01	200
10	100
11	50

 Table 7. Accelerometer anti-aliasing bandwidth options (High-Performance mode)

Accelerometer	Analog filter cutoff [Hz]	Analog filter cutoff [Hz]
ODR [Hz]	XL_BW_SCAL_ODR = 0	XL_BW_SCAL_ODR = 1
12.5 Hz (High Performance)	50	BW_XL[1:0]
26 Hz (High Performance)	50	BW_XL[1:0]
52 Hz (High Performance)	50	BW_XL[1:0]
104 Hz (High Performance)	50	BW_XL[1:0]
208 Hz (High Performance)	100	BW_XL[1:0]
416 Hz (High Performance)	200	BW_XL[1:0]
833 Hz (High Performance)	400	BW_XL[1:0]
1.66 kHz (High Performance)	400	BW_XL[1:0]
3.33 kHz (High Performance)	FILTER NOT USED	BW_XL[1:0]
6.66 kHz (High Performance)	FILTER NOT USED	BW_XL[1:0]

20/113 DocID027415 Rev 2

The digital signal is then filtered by a low-pass digital filter (LPF1) whose cutoff frequency depends on the selected accelerometer ODR, as shown in *Table 8*.

Table 8. Accelerometer LPF1 cutoff frequency

Accelerometer ODR [Hz]	LPF1 digital Filter cutoff frequency [Hz]
12.5 Hz (Low Power)	742
26 Hz (Low Power)	742
52 Hz (Low Power)	742
104 Hz (Normal mode)	742
208 Hz (Normal mode)	742
12.5 Hz (High Performance)	23
26 Hz (High Performance)	46
52 Hz (High Performance)	92
104 Hz (High Performance)	184
208 Hz (High Performance)	369
416 Hz (High Performance)	742
833 Hz (High Performance)	1517
1.66 kHz (High Performance)	3320
3.33 kHz (High Performance)	1517
6.66 kHz (High Performance)	3320


The total cutoff frequency resulting from the combination of the anti-aliasing filter and digital LPF1 filter is indicated in *Table 9*: it's basically determined by the lowest cutoff frequency of these two filters.

Table 9. Accelerometer anti-aliasing + LPF1 overall cutoff frequency

Accelerometer ODR [Hz]	Analog filter BW [Hz]	Digital filter BW [Hz]	Total BW [Hz]
12.5 Hz to 208 Hz (Low Power / Normal mode)	-	742	740
12.5 Hz (High Performance)	400	23	23
	200	23	23
	100	23	22
	50	23	20
26 Hz (High Performance)	400	46	45.5
	200	46	44.5
	100	46	41
	50	46	32.5

Table 9. Accelerometer anti-aliasing + LPF1 overall cutoff frequency (continued)

Accelerometer ODR [Hz]	Analog filter BW [Hz]	Digital filter BW [Hz]	Total BW [Hz]	
	400	92	89	
	200	92	82	
52 Hz (High Performance)	100	92	65	
	50	92	43	
	400	184	165	
104 Hz (High Borformana)	200	184	131	
104 Hz (High Performance)	100	184	86	
	50	184	48	
	400	369	265	
208 Hz (High Performance)	200	369	172	
200 Hz (High Fellonhance)	100	369	96	
	50	369	49	
	400	742	350	
416 Hz (High Performance)	200	742	192	
14 TO FIZ (Flight Feriormanice)	100	742	99	
	50	742	50	
	400	1517	395	
833 Hz (High Performance)	200	1517	199	
1000 Fiz (Flight Chomiance)	100	1517	100	
	50	1517	50	
	400	3320	400	
1.66 kHz (High Performance)	200	3320	200	
1.00 ki iz (riigir i eriormance)	100	3320	100	
	50	3320	50	
	-	1517	1500	
	400	1517	390	
3.33 kHz (High Performance)	200	1517	198	
	100	1517	100	
	50	1517	50	
	-	3320	3160	
	400	3320	400	
6.66 kHz (High Performance)	200	3320	200	
	100	3320	100	
	50	3320	50	



Finally, the digital signal is processed by the composite group of filters composed of a low-pass digital filter (LPF2), a high-pass digital filter and a slope filter. As shown in *Figure 2*, it is possible to independently apply these filters to the accelerometer output data (and to the FIFO data) and/or to the interrupt generators.

The enable signal of these high-pass and low-pass digital filters is the logic "OR" of the SLOPE\_FDS bit of the TAP\_CFG register and the FUNC\_EN bit of the CTRL10\_C register.

The SLOPE\_FDS bit is also used to select the filter (high-pass or slope) used for the wake-up interrupt functionality. For this reason, if the wake-up functionality is implemented using the slope filter and also the LPF2 filter is required, the latter has to be enabled by setting the FUNC\_EN bit to 1.

In all other cases, to enable the high-pass and low-pass digital filters it's recommended to set to 1 the SLOPE\_FDS bit and set to 0 the FUNC\_EN bit (if the embedded functions, such as the Android functions and the sensor hub, are not used).

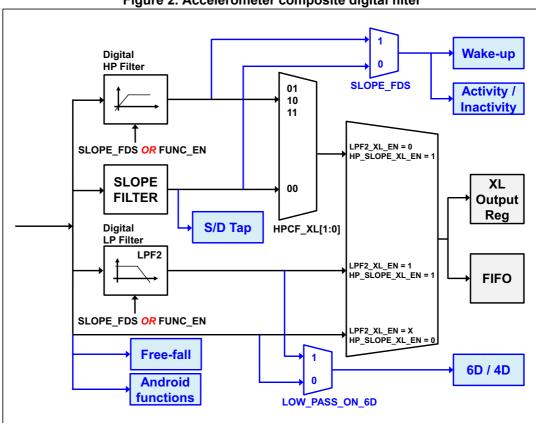


Figure 2. Accelerometer composite digital filter

The bits LPF2\_XL\_EN, HP\_SLOPE\_XL\_EN and HPCF\_XL [1:0] of CTRL8\_XL are used to select the filter applied to the accelerometer output data and to the FIFO data:

- if the HP\_SLOPE\_XL\_EN bit is set to 0, no filter is applied, regardless of the LPF2\_XL\_EN bit configuration;
- if both the LPF2\_XL\_EN bit and the HP\_SLOPE\_XL\_EN bit are set to 1, the LP digital filter (LPF2) is applied;
- if the LPF2\_XL\_EN bit is set to 0 and the HP\_SLOPE\_XL\_EN bit is set to 1, the applied filter depends on the configuration of the HPCF\_XL [1:0] bits, as shown in *Table 10*.

Table 10. Accelerometer slope and high-pass filter selection and cutoff frequency

HPCF_XL[1:0]	Applied filter	HP digital filter cutoff frequency [Hz]
00	Slope	ODR_XL / 4
01	High-Pass	ODR_XL / 100
10	High-Pass	ODR_XL / 9
11	High-Pass	ODR_XL / 400

The HPCF\_XL [1:0] bits of CTRL8\_XL are also used to select the cutoff frequency of the LPF2 filter, as shown in *Table 11*. This low-pass filter can also be used in the 6D/4D functionality by setting the LOW\_PASS\_ON\_6D bit of CTRL8\_XL register to 1.

Table 11. Accelerometer LPF2 cutoff frequency

HPCF_XL[1:0]	LPF2 digital filter cutoff frequency [Hz]
00	ODR_XL / 50
01	ODR_XL / 100
10	ODR_XL/9
11	ODR_XL / 400

#### 2.6.1 Accelerometer slope filter


As shown in *Figure 2*, the LSM6DS3 device embeds a digital slope filter which is used for single/double-tap features; it can also be used for wake-up detection and for activity/inactivity functionality when the SLOPE\_FDS bit of the TAP\_CFG register is set to 0.

The slope filter output data is computed using the following formula:

$$slope(t_n) = [acc(t_n) - acc(t_{n-1})] / 2$$

An example of a slope data signal is illustrated in Figure 3.


Figure 3. Accelerometer slope filter

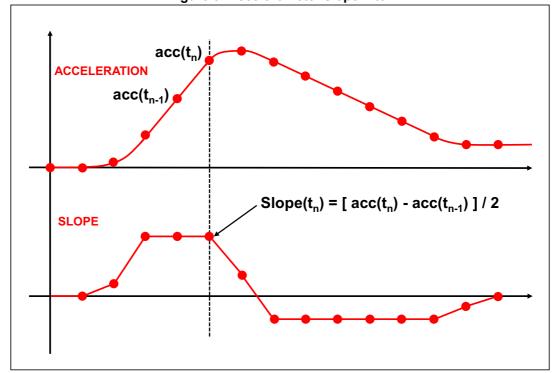

#### 2.7 Gyroscope bandwidth

The gyroscope sampling chain is represented by a cascade of four blocks: analog low-pass anti-aliasing filter, ADC converter, digital low-pass filter and a selectable high-pass filter (*Figure 4*).

Figure 4. Gyroscope sampling chain diagram

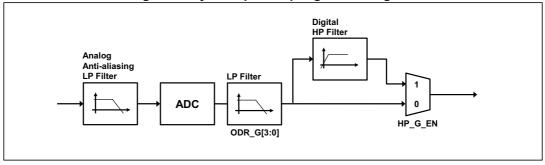

The analog signal coming from the mechanical parts is filtered by a low-pass anti-aliasing filter (having a constant bandwidth) before being converted by the ADC. The digital signal is then filtered by a low-pass digital filter whose cutoff frequency depends on the selected gyroscope ODR: the cutoff values in Low-Power and Normal mode are shown in *Table 12*; the cutoff values related to High-Performance mode are indicated in *Table 13*.

Table 12. Gyroscope digital low-pass filter cutoff in Low-Power / Normal mode

Gyroscope ODR [Hz]	Cutoff [Hz]
12.5 Hz (Low Power)	3.9
26 Hz (Low Power)	7.9
52 Hz (Low Power)	15.8
104 Hz (Normal mode)	31.4
208 Hz (Normal mode)	60.2

Table 13. Gyroscope digital low-pass filter cutoff in High-Performance mode

Gyroscope ODR [Hz]	Cutoff [Hz]
12.5 Hz (High Perf.)	4.2
26 Hz (High Perf.)	8.3
52 Hz (High Perf.)	16.6
104 Hz (High Perf.)	33.4
208 Hz (High Perf.)	66.7
416 Hz (High Perf.)	135.9
833 Hz (High Perf.)	295.4
1.66 kHz (High Perf.)	1057.0

26/113 DocID027415 Rev 2

The LSM6DS3 gyroscope provides embedded high-pass filtering capability to easily delete the DC component of the measured angular rate. As shown in *Figure 4*, through the HP\_G\_EN bit of the CTRL7\_G register, it is possible to apply the filter on the gyroscope output data and on FIFO stored data.

Note:

The embedded high-pass filter is available in High-Performance mode only. If the gyroscope is configured in Low-Power / Normal mode, the high-pass filter is bypassed regardless of the configuration of the HP G EN bit in the CTRL7 G register.

The bandwidth of the high-pass filter depends on the settings of the HPCF\_G[1:0] bits of the CTRL7\_G register. The high-pass filter cutoff frequencies are shown in *Table 14*.

HPCF_G1	HPCF_G0	High-pass filter cutoff frequency [Hz]
0	0	0.0081
0	1	0.0324
1	0	2.07
1	1	16.32

Table 14. Gyroscope high-pass filter cutoff frequency [Hz]

The High-Pass filter can be reset by setting the HP\_G\_RST bit of the CTRL7\_G register to 1. The reset operation instantly deletes the DC component of the angular rate from the next generated X, Y, Z output value (*Figure 5*).

After the filter resets, the HP\_G\_RST bit is automatically set back to 0.

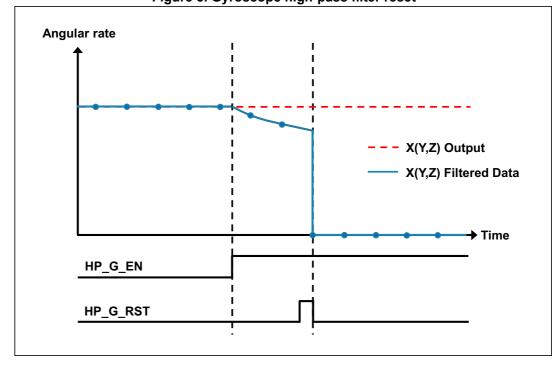


Figure 5. Gyroscope high-pass filter reset

#### 2.8 Accelerometer and gyroscope turn-on/off time

The accelerometer reading chain contains low-pass filtering to improve signal-to-noise performance and to reduce aliasing effects. For this reason, it is needed to take into account the settling time of the filter when the accelerometer / gyroscope power mode is switched or when the accelerometer / gyroscope ODR is changed.

Turn-on/off time has to be considered also for the gyroscope sensor when switching its modes or when the accelerometer / gyroscope ODR is changed.

The list of expected accelerometer / gyroscope turn-on/off times when the operating modes are changed is indicated in *Table 15*; the starting condition must be stable for at least 200 ms.

*Table 16* clarifies how many accelerometer samples have to be discarded in High-Performance mode depending on the internal filter bandwidth and output data rate selection. Bandwidth value selection is described in *Table 7*.

*Table 17* shows how many gyroscope samples have to be discarded when switching from gyroscope Sleep mode to Low-Power / Normal / High-Performance mode or when the accelerometer / gyroscope ODR is changed, depending on the output data rate selection.

Setting the DRDY\_MASK bit of the CTRL4\_C register to 1, the accelerometer and gyroscope data-ready signals are masked until the settling of the sensor filters is completed: this feature allows automatically ignoring the samples to be discarded.

Note:

The DRDY\_MASK bit masks the samples to be discarded only when switching from Power-Down to an active mode, it doesn't mask them on ODR changes.

Table 15. Accelerometer/gyroscope turn-on/off time

Starting mode	Operating mode change	Accelerometer Max turn-on/off time	Gyroscope Max turn-on/off time
Acc: Power Down Gyro: Power Down	Acc: Low Power / Normal mode	First sample correct	-
Acc: Power Down Gyro: Power Down	Acc: High Performance mode	see Table 16	-
Acc: Power Down Gyro: Power Down	Gyro: Sleep / Low Power / Normal / High Performance mode	-	80 ms
Acc: LP / NM / HP mode Gyro: Power Down	Gyro: Sleep / Low Power / Normal / High Performance mode	Acc in LP/NM mode: 20ms+1/ODR Acc in HP mode: max(20ms+1/ODR, number of sample to be discarded from Table 16)	80 ms
Acc: Power Down Gyro: LP / NM / HP mode	Acc: Low Power / Normal mode	First sample correct	see Table 17
Acc: Power Down Gyro: LP / NM / HP mode	Acc: High Performance mode	see Table 16	see Table 17



28/113 DocID027415 Rev 2

Table 15. Accelerometer/gyroscope turn-on/off time (continued)

Starting mode	Operating mode change Accelerometer  Max turn-on/off time		Gyroscope Max turn-on/off time
Acc: Power Down Gyro: Sleep mode	Acc: Low Power / Normal mode	First sample correct	No impact on current Sleep mode
Acc: Power Down Gyro: Sleep mode	Acc: High Performance mode	see Table 16	No impact on current Sleep mode
Acc: LP / NM / HP mode Gyro: LP / NM / HP mode	Acc: Power Down	1us	First sample correct
Acc: LP / NM / HP mode Gyro: Sleep mode	Acc: Power Down	1us	No impact on current Sleep mode
Acc: LP / NM / HP mode Gyro: LP / NM / HP mode	Gyro: Power Down / Sleep mode	First sample correct	1us
Acc: LP / NM / HP mode Gyro: LP / NM / HP mode	Acc: change ODR	Acc in LP/NM mode: first sample correct Acc in HP mode: see <i>Table 16</i>	see Table 17
Acc: LP / NM / HP mode Gyro: Sleep mode	Acc: change ODR	Acc in LP/NM mode: first sample correct Acc in HP mode: see <i>Table 16</i>	No impact on current Sleep mode
Acc: LP / NM / HP mode Gyro: Sleep mode	Gyro: Low Power / Normal / High Performance mode	Acc in LP/NM mode: first sample correct Acc in HP mode: see <i>Table 16</i>	see Table 17
Acc: LP / NM / HP mode Gyro: LP / NM / HP mode	Gyro: change ODR	Acc in LP/NM mode: first sample correct Acc in HP mode: see <i>Table 16</i>	see Table 17
Acc: LP / NM / HP mode Gyro: LP / NM / HP mode	Acc: change Analog Anti-aliasing filter BW through BW_XL bits of CTRL1_XL (with XL_BW_SCAL_ODR =1 in CTRL4_C register)	Acc in LP/NM mode: first sample correct Acc in HP mode: see <i>Table 16</i>	First sample correct

Table 16. Accelerometer number of samples to be discarded

Accelerometer ODR [Hz]	BW = 400 Hz	BW = 200 Hz	BW = 100 Hz	BW = 50 Hz	No filter
12.5 Hz (High Perf.)	1	1	1	1	N.A.
26 Hz (High Perf.)	1	1	1	1	N.A.
52 Hz (High Perf.)	1	1	1	1	N.A.
104 Hz (High Perf.)	1	1	1	2	N.A.
208 Hz (High Perf.)	1	1	2	4	N.A.
416 Hz (High Perf.)	1	2	3	7	N.A.
833 Hz (High Perf.)	2	4	7	14	N.A.
1.66 kHz (High Perf.)	4	8	14	28	N.A.
3.33 kHz (High Perf.)	8	16	28	56	2
6.66 kHz (High Perf.)	16	32	56	112	4

Table 17. Gyroscope number of samples to be discarded

Gyroscope ODR [Hz]	Number of samples
12.5 Hz	2
26 Hz	2
52 Hz	2
104 Hz	2
208 Hz	2
416 Hz	2
833 Hz	3
1.66 kHz	4

AN4650 Reading output data

#### 3 Reading output data

#### 3.1 Startup sequence

Once the device is powered up, it automatically downloads the calibration coefficients from the embedded flash to the internal registers. When the boot procedure is completed, i.e. after approximately 20 milliseconds, the accelerometer and gyroscope automatically enter Power-Down mode.

To turn on the accelerometer and gather acceleration data, it is necessary to select one of the operating modes through the CTRL1\_XL register and to enable at least one of the axes through CTRL9 XL.

The following general-purpose sequence can be used to configure the accelerometer:

```
    Write CTRL9_XL = 38h
    Write CTRL1_XL = 60h
    Write INT1_CTRL = 01h
    Write INT1_CTRL = 01h

// Acc X, Y, Z axes enabled
// Acc = 416Hz (High-Performance mode)
```

To turn on the gyroscope and gather angular rate data, it is necessary to select one of the operating modes through the CTRL2\_G register and to enable at least one of the axes through CTRL10\_C.

The following general-purpose sequence can be used to configure the gyroscope:

```
    Write CTRL10_C = 38h
    Write CTRL2_G = 60h
    Write INT1_CTRL = 02h
    Write INT1_CTRL = 02h
    Write INT1_CTRL = 02h
```

#### 3.2 Using the status register

The device is provided with a STATUS\_REG register which should be polled to check when a new set of data is available. The XLDA bit is set to 1 when a new set of data is available at accelerometer output; the GDA bit is set to 1 when a new set of data is available at gyroscope output.

For the accelerometer (the gyroscope is similar), the reads should be performed as follows:

- 1 Read STATUS
- 2 If XLDA = 0, then go to 1
- 3 Read OUTX L XL
- 4 Read OUTX\_H\_XL
- 5 Read OUTY\_L\_XL
- 6 Read OUTY H XL
- 7 Read OUTZ\_L\_XL
- 8 Read OUTZ H XL
- 9 Data processing
- 10 Go to 1



Reading output data AN4650

#### 3.3 Using the data-ready signal

The device can be configured to have one HW signal to determine when a new set of measurement data is available for reading.

For the accelerometer sensor, the data-ready signal is represented by the XLDA bit of the STATUS\_REG register. The signal can be driven to the INT1 pin by setting to 1 the INT1\_DRDY\_XL bit of the INT1\_CTRL register and to the INT2 pin by setting to 1 the INT2\_DRDY\_XL bit of the INT2\_CTRL register.

For the gyroscope sensor, the data-ready signal is represented by the GDA bit of the STATUS\_REG register. The signal can be driven to the INT1 pin by setting to 1 the INT1\_DRDY\_G bit of the INT1\_CTRL register and to the INT2 pin by setting to 1 the INT2\_DRDY\_G bit of the INT2\_CTRL register.

The data-ready signal rises to 1 when a new set of data has been generated and it is available for reading. The interrupt is reset when the higher part of one of the enabled channels has been read (29h, 2Bh, 2Dh for the accelerometer; 23h, 25h, 27h for the gyroscope).

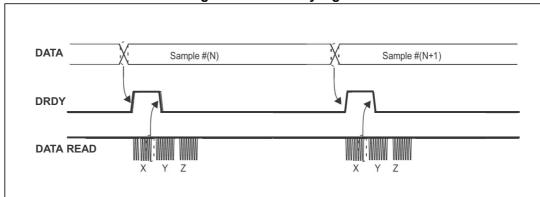


Figure 6. Data-ready signal

#### 3.3.1 DRDY mask functionality

Setting the DRDY\_MASK bit of the CTRL4\_C register to 1, the accelerometer and gyroscope data-ready signals are masked until the settling of the sensor filters is completed.

The DRDY\_MASK bit masks the samples to be discarded only when switching from Power-Down to an active mode, it doesn't mask them on ODR changes. Furthermore, only the data-ready signals are masked, whereas the output registers are continuously updated also during the settling period of the sensor filters.

When FIFO is active and the DRDY\_MASK bit is set to 1, accelerometer invalid samples stored in FIFO are always equal to 7FFFh; gyroscope invalid samples stored in FIFO can be equal to 7FFFh, 7FFEh or 7FFDh. In this way, a tag is applied to the invalid samples stored in the FIFO buffer, so that they can be easily identified and discarded during data post-processing.

32/113 DocID027415 Rev 2

AN4650 Reading output data

#### 3.4 Using the block data update (BDU) feature

If reading the accelerometer/gyroscope data is particularly slow and cannot be synchronized (or it is not required) with either the XLDA/GDA bits in the STATUS\_REG register or with the DRDY signal driven to the INT1/INT2 pins, it is strongly recommended to set the BDU (block data update) bit to 1 in the CTRL3\_C register.

This feature avoids reading values (most significant and least significant parts of output data) related to different samples. In particular, when the BDU is activated, the data registers related to each channel always contain the most recent output data produced by the device, but, in case the read of a given pair (i.e. OUTX\_H\_XL(G) and OUTX\_L\_XL(G), OUTY\_H\_XL(G) and OUTY\_L\_XL(G), OUTZ\_H\_XL(G) and OUTZ\_L\_XL(G)) is initiated, the refresh for that pair is blocked until both MSB and LSB parts of the data are read.

Note:

BDU only guarantees that the LSB part and MSB part have been sampled at the same moment. For example, if the reading speed is too slow, X and Y can be read at T1 and Z sampled at T2.

#### 3.5 Understanding output data

The measured acceleration data are sent to the OUTX\_H\_XL, OUTX\_L\_XL, OUTY\_H\_XL, OUTY\_L\_XL, OUTZ\_H\_XL, and OUTZ\_L\_XL registers. These registers contain, respectively, the most significant part and the least significant part of the acceleration signals acting on the X, Y, and Z axes.

The measured angular rate data are sent to the OUTX\_H\_G, OUTX\_L\_G, OUTY\_H\_G, OUTY\_L\_G, OUTZ\_H\_G, and OUTZ\_L\_G registers. These registers contain, respectively, the most significant part and the least significant part of the angular rate signals acting on the X, Y, and Z axes.

The complete output data for the X, Y, Z channels is given by the concatenation OUTX\_H\_XL(G) & OUTX\_L\_XL(G), OUTY\_H\_XL(G) & OUTY\_L\_XL(G), OUTY\_H\_XL(G) & OUTY\_L\_XL(G), OUTZ\_H\_XL(G) & OUTZ\_L XL(G) and it is expressed as a two's complement number.

Both acceleration data and angular rate data are represented as 16-bit numbers.

#### 3.5.1 Big-little endian selection

The LSM6DS3 allows swapping the content of the lower and the upper part of the output data registers (i.e. OUTX\_H\_XL(G) with OUTX\_L\_XL(G), and OUT\_TEMP\_H with OUT\_TEMP\_L) in order to be compliant with both little-endian and big-endian data representations.

"Little Endian" means that the low-order byte of the number is stored in memory at the lowest address, and the high-order byte at the highest address. This mode corresponds to the BLE bit of the CTRL3 C register set to 0 (default configuration).

On the contrary, "Big Endian" means that the high-order byte of the number is stored in memory at the lowest address, and the low-order byte at the highest address. This mode corresponds to the BLE bit of the CTRL3 C register set to 1.

Reading output data AN4650

#### 3.5.2 Examples of output data

*Table 18* provides a few basic examples of the accelerometer data that is read in the data registers when the device is subject to a given acceleration.

*Table 19* provides a few basic examples of the gyroscope data that is read in the data registers when the device is subject to a given angular rate.

The values listed in the following tables are given under the hypothesis of perfect device calibration (i.e. no offset, no gain error,....) and practically show the effect of the BLE bit.

Table 18. Output data registers content vs. acceleration (FS\_XL = 2 g)

BLE = 0		BLE = 1			
Acceleration values	Register address				
	OUTX_H_XL (29h)	OUTX_L_XL (28h)	OUTX_H_XL (29h)	OUTX_L_XL (28h)	
0 g	00h	00h	00h	00h	
350 mg	16h	69h	69h	16h	
1 g	40h	09h	09h	40h	
-350 mg	E9h	97h	97h	E9h	
-1 g	BFh	F7h	F7h	BFh	

Table 19. Output data registers content vs. angular rate (FS\_G = 245 dps)

Angular rate values	BLE = 0		BLE = 1		
	Register address				
	OUTX_H_G (23h)	OUTX_L_G (22h)	OUTX_H_G (23h)	OUTX_L_G (22h)	
0 dps	00h	00h	00h	00h	
100 dps	2Ch	A4h	A4h	2Ch	
200 dps	59h	49h	49h	59h	
-100 dps	D3h	5Ch	5Ch	D3h	
-200 dps	A6h	B7h	B7h	A6h	

AN4650 Reading output data

#### 3.6 Rounding functions

The rounding function can be used to auto address the LSM6DS3 registers for a circular burst-mode read. Basically, with a multiple read operation the address of the register that is being read goes automatically from the first register to the last register of the pattern and then goes back to the first one.

#### 3.6.1 Rounding of FIFO output registers

The rounding function is automatically enabled when performing a multiple read operation of the FIFO output registers FIFO DATA OUT L (3Eh) and FIFO DATA OUT H (3Fh).

#### 3.6.2 Rounding of source registers

It's possible to apply the rounding function also to the source registers of the LSM6DS3 device, in order to verify with one multiple read whether new data was generated or a new interrupt event was detected.

The rounding function on the source registers can be enabled by setting to 1 the ROUNDING\_STATUS bit of the CTRL7\_G register: when this function is enabled, with a multiple read operation the address of the register that is being read goes automatically from STATUS REG (1Eh) to FUNC SRC (53h) and goes back to WAKE UP SRC (1Bh).

#### 3.6.3 Rounding of sensor output registers

The rounding function can also be enabled for the following groups of output registers:

- Gyroscope output registers, from OUTX\_L\_G (22h) to OUTZ\_H\_G (27h);
- Accelerometer output registers, from OUTX\_L\_XL (28h) to OUTZ\_H\_XL (2Dh);
- First group of sensor hub output registers, from SENSORHUB1\_REG (2Eh) to SENSORHUB6\_REG (33h);
- Second group of sensor hub output registers, from SENSORHUB7\_REG (34h) to SENSORHUB12\_REG (39h).

The output registers rounding pattern can be configured using the bits ROUNDING[2:0] of the CTRL5 C register, as indicated in *Table 20*.

ROUNDING[2:0] Rounding pattern 000 No rounding 001 Accelerometer only 010 Gyroscope only 011 Gyroscope + Accelerometer 1st group of Sensor Hub only 100 Accelerometer + 1st group of Sensor Hub 101 Gyroscope + Accelerometer + 110 1<sup>st</sup> group of Sensor Hub + 2<sup>nd</sup> group of Sensor Hub Gyroscope + Accelerometer + 1<sup>st</sup> group of Sensor Hub 111

Table 20. Output registers rounding pattern

Reading output data AN4650

## 3.7 Gyroscope edge-sensitive/level-sensitive/impulse-sensitive data enable (DEN)

The LSM6DS3 allows external trigger level recognition by configuring the TRIG\_EN, LVLen and LVL2\_EN bits of the CTRL6\_C register (*Table 21*). The default value for these three bits is 0 (external trigger is disabled). Three different trigger modes can be used: edge-, level-, or impulse-sensitive trigger; the Data Enable (DEN) input signal is driven on the INT2 pin, which is configured as an input pin when one of the gyroscope trigger modes is enabled.

<u> </u>					
TRIG_EN	LVLen	LVL2_EN	Function		
1	0	0	Edge-sensitive		
0	1	0	Level-sensitive		
0	1	1	Impulse-sensitive		

Table 21. DEN configurations

Edge-sensitive and impulse-sensitive triggers need both accelerometer and gyroscope sensors to be active (not in Power-Down mode) and configured with the same output data rate value. The level-sensitive trigger can also work with only the gyroscope in active mode, regardless of the selected gyroscope ODR.

#### 3.7.1 Edge-sensitive trigger

The edge-sensitive trigger is enabled when the TRIG\_EN bit of CTRL6\_C register is set to 1 and the LVLen and LVL2\_EN bits are set to 0. If the FIFO is not used, both accelerometer and gyroscope sensors have to be in active mode and configured with the same ODR value.

Once enabled, the gyroscope output registers are updated with the next generated X, Y, Z gyroscope data at the rising edge of the DEN (INT2 pin) input signal. If no rising edge occurs, the gyroscope output registers are not updated.

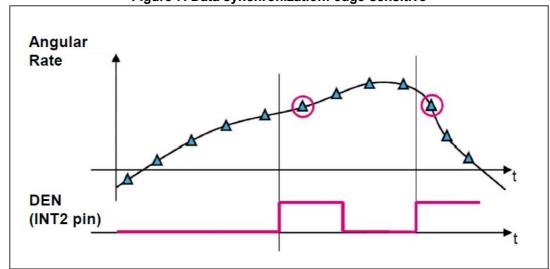


Figure 7. Data synchronization: edge-sensitive

577

AN4650 Reading output data

If both the edge-sensitive trigger and FIFO (see Section 7: First-in first-out (FIFO) buffer) are enabled, the DEN (INT2 pin) signal works as trigger signal for writing data in the FIFO buffer: FIFO patterns are stored in the FIFO on the rising edge of the DEN signal. In order to have this feature enabled, both the DATA\_VALID\_SEL\_FIFO bit of the MASTER\_CONFIG register and the TIMER\_PEDO\_FIFO\_DRDY bit of the FIFO\_CTRL2 register have to be set to 0. Furthermore, both accelerometer and gyroscope sensors have to be in active mode and the accelerometer ODR value has to be half of the gyroscope ODR value.

Note:

Each pattern is stored in the FIFO buffer twice, so the second stored pattern has to be discarded.

This features allows, for example, the synchronization of the camera frames with the samples coming from the gyroscope for Electrical Image Stabilization (EIS) applications. The synchronization signal from the camera module must be connected to the INT2 pin.

In the example shown in *Figure 8* the FIFO has been configured to store in the FIFO buffer both the gyroscope data and the timestamp data; when the DEN signal toggles, the data are written to FIFO twice on the rising edge. The second set of data must be discarded.

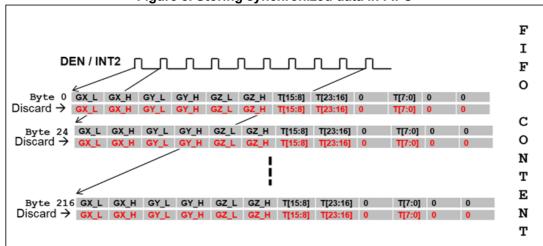


Figure 8. Storing synchronized data in FIFO

The settings required for this example are as follows:

Write 08h into FIFO CTRL3 // Enable gyroscope data in FIFO (no decimation) // Enable step counter and timestamp data as 4th FIFO Write 80h into FIFO CTRL2 data set // Enable step counter and timestamp in FIFO (no Write 08h into FIFO CTRL4 3 decimation) Write 26h into FIFO CTRL5 // Set FIFO in Continuous mode, FIFO ODR = 104Hz // Enable the edge-sensitive trigger 5 Write 80h into CTRL6\_G // INT2 pin is switched to input mode (DEN signal) // Turn on the accelerometer: ODR\_XL = 52Hz, FS\_XL = 2g 6 Write 30h into CTRL1\_XL // Turn on the gyroscope 7 Write 4Ch into CTRL2 G // ODR\_G = 104Hz, FS\_G = 2000dps Write 80h into TAP\_CFG // Enable timestamp counter

Reading output data AN4650

#### 3.7.2 Level-sensitive trigger stamping

The level-sensitive trigger is enabled when the LVLen bit of the CTRL6\_C register is set to 1 and the TRIG\_EN and LVL2\_EN bits are set to 0.

Once enabled, the LSB of the generated gyroscope X, Y, Z output data is replaced with the current DEN (INT2 pin) level. This replacement applies also to the data stored in FIFO.

Figure 9. Data synchronization: level-sensitive

### 3.7.3 Impulse-sensitive trigger stamping

The impulse-sensitive trigger is enabled when the LVLen and LVL2\_EN bits of the CTRL6\_C register are set to 1 and the TRIG\_EN bit is set to 0. Furthermore, both accelerometer and gyroscope sensors have to be in active mode and configured with the same ODR value.

The impulse-sensitive trigger is similar to the level-sensitive trigger and has to be used if the duration of the DEN positive pulse is shorter than the selected gyroscope ODR. Once enabled, the LSB bit of the gyroscope X, Y, Z output data generated after the pulse is set to 1. If no pulse occurs, the LSB bit of the next generated gyroscope X, Y, Z output data is set to 0. If the pulse occurs during the update of the data, it could happen that two consecutive gyroscope data are tagged instead of just the first one, and it's also possible that the tag of the LSB bit to 1 is not applied to all three axes of each X, Y, Z output data: in this case, one of the two consecutively tagged data has to be discarded at sw level.

# 3.8 Gyroscope axes orientation

Axes orientation and sign of the gyroscope sensor can be changed by software using the ORIENT\_CFG\_G register, as illustrated in *Figure 10*.

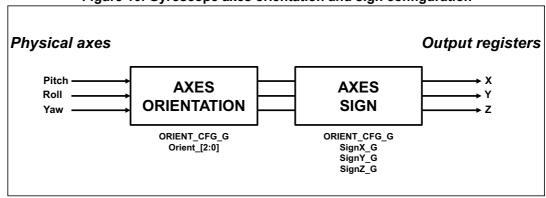


Figure 10. Gyroscope axes orientation and sign configuration

AN4650 Reading output data

> The Orient\_[2:0] bits of the ORIENT\_CFG\_G register allows driving the pitch, roll and yaw physical axes to the X, Y and Z output registers as indicated in Table 23.

Table 22. ORIENT\_CFG\_G register

b7	b6	b5	b4	b3	b2	b1	b0
0	0	SignX_G	SignY_G	SignZ_G	Orient_2	Orient_1	Orient_0

Table 23. Settings for gyroscope axes orientation

Orient_[2:0]	Pitch	Roll	Yaw
000	Х	Y	Z
001	X	Z	Y
010	Y	Х	Z
011	Y	Z	Х
100	Z	Х	Y
101	Z	Y	Х

The SignX\_G, SignY\_G and SignZ\_G bits of the ORIENT\_CFG\_G register allow respectively changing (setting the bit to 1) the sign of the X, Y and Z output registers data.

Case (a) of example in Figure 11 corresponds to the default case for axes orientation and sign, with all Orient\_[2:0], SignX\_G, SignY\_G and SignZ\_G bits of the ORIENT\_CFG\_G register set to 0.

In case (b) the Orient [2:0] bits have been set to 010b, driving Pitch and Roll data on different axes than the default case; furthermore the sign on X and Z data has been changed by setting the SignX\_G and SignZ\_G bits to 1.

ORIENT\_CFG\_G = 00h ORIENT\_CFG\_G = 2Ah (a) (b)

Figure 11. Gyroscope axes orientation and sign example

# 4 Interrupt generation

In the LSM6DS3 device the interrupt generation is based on accelerometer data only, so, for interrupt generation purposes, the accelerometer sensor has to be set in an active operating mode (not in Power-Down); the gyroscope sensor can be configured in Power-Down mode since it's not involved in interrupt generation.

The interrupt generator can be configured to detect:

- Free-fall;
- Wake-up;
- 6D/4D orientation detection;
- Single-tap and double-tap sensing;
- Activity/Inactivity recognition.

In addition, the LSM6DS3 can efficiently run the sensor-related features specified in Android, saving power and enabling faster reaction time. In particular, it has been designed to implement in hardware:

- Significant motion;
- Tilt;
- Pedometer functions;
- Timestamp.

All these interrupt signals, together with FIFO interrupt signals, can be independently driven to the INT1 and INT2 interrupt pins or checked by reading the dedicated source register bits.

The H\_LACTIVE bit of the CTRL3\_C register must be used to select the polarity of the interrupt pins. If this bit is set to 0 (default value), the interrupt pins are active high and they change from low to high level when the related interrupt condition is verified. Otherwise, if the H\_LACTIVE bit is set to 1 (active low), the interrupt pins are normally at high level and they change from high to low when interrupt condition is reached.

The PP\_OD bit of CTR3\_C allows changing the behavior of the interrupt pins from push-pull to open drain. If the PP\_OD bit is set to 0, the interrupt pins are in push-pull configuration (low-impedance output for both high and low level). When the PP\_OD bit is set to 1, only the interrupt active state is a low-impedance output.

The LIR bit of TAP\_CFG allows applying the latched mode to the interrupt signals. When the LIR bit is set to 1, once the interrupt pin is asserted, it must be reset by reading the related interrupt source register. If the LIR bit is set to 0, the interrupt signal is automatically reset when the interrupt condition is no longer verified or after a certain amount of time.

# 4.1 Interrupt pin configuration

The device is provided with two pins that can be activated to generate either Data Ready or interrupt signals. The functionality of these pins is selected through the MD1\_CFG and INT1\_CTRL registers for the INT1 pin, and through the MD2\_CFG and INT2\_CTRL registers for the INT2 pin.

A brief description of these interrupt control registers is given in the following summary; the default value of their bits is equal to 0, which corresponds to 'disable'. In order to enable the routing of a specific interrupt signal on the pin, the related bit has to be set to 1.



Table 24	. INT1	<b>CTRL</b>	register
----------	--------	-------------	----------

b7	b6	b5	b4	b3	b2	b1	b0
INT1_STEP_	INT1_	INT1_	INT1_	INT1_	INT1_	INT1_	INT1_
DETECTOR	SIGN_MOT	FULL_FLAG	FIFO_OVR	FTH	BOOT	DRDY_G	DRDY_XL

- INT1\_STEP\_DETECTOR: Pedometer step recognition interrupt on INT1.
- INT1\_SIGN\_MOT: Significant motion interrupt on INT1.
- INT1\_FULL\_FLAG: FIFO full flag interrupt on INT1.
- INT1\_FIFO\_OVR: FIFO overrun flag interrupt on INT1.
- INT1 FTH: FIFO threshold interrupt on INT1.
- INT1\_BOOT: Boot interrupt on INT1.
- INT1\_DRDY\_G: Gyroscope Data-Ready on INT1.
- INT1\_DRDY\_XL: Accelerometer Data-Ready on INT1.

#### Table 25. MD1\_CFG register

b7	b6	b5	b4	b3	b2	b1	b0
INT1_ INACT_ STATE	INT1_ SINGLE_ TAP	INT1_ WU	INT1_ FF	INT1_ DOUBLE_ TAP	INT1_ 6D	INT1_ TILT	INT1_ TIMER

- INT1\_INACT\_STATE: Inactivity interrupt on INT1.
- INT1\_SINGLE\_TAP: Single-tap interrupt on INT1.
- INT1\_WU: Wake-up interrupt on INT1.
- INT1 FF: Free-fall interrupt on INT1.
- INT1\_DOUBLE\_TAP: Double-tap interrupt on INT1.
- INT1\_6D: 6D detection interrupt on INT1.
- INT1\_TILT: Tilt interrupt on INT1.
- INT1\_TIMER: Timer interrupt on INT1.

#### Table 26. INT2\_CTRL register

b7	b6	b5	b4	b3	b2	b1	b0
INT2_STEP_ DELTA	INT2_STEP_ COUNT_OV			INT2_ FTH	INT2_DRD Y_TEMP	_	INT2_ DRDY_XL

- INT2 STEP DELTA: Pedometer step recognition on delta time interrupt on INT2.
- INT2\_STEP\_COUNT\_OV: Step counter overflow interrupt on INT2.
- INT2 FULL FLAG: FIFO full flag interrupt on INT2.
- INT2 FIFO OVR: FIFO overrun flag interrupt on INT2.
- INT2\_FTH: FIFO threshold interrupt on INT2.
- INT2\_DRDY\_TEMP: Temperature Data-Ready on INT2.
- INT2\_DRDY\_G: Gyroscope Data-Ready on INT2.
- INT2\_DRDY\_XL: Accelerometer Data-Ready on INT2.



	145.5 2.1 m21_51 & register										
b7	b6	b5	b4	b3	b2	b1	b0				
INT2_ INACT_ STATE	INT2_ SINGLE_ TAP	INT2_ WU	INT2_ FF	INT2_ DOUBLE_ TAP	INT2_ 6D	INT2_ TILT	INT2_ IRON				

Table 27, MD2 CFG register

- INT2 INACT STATE: Inactivity interrupt on INT2.
- INT2 SINGLE TAP: Single-tap interrupt on INT2.
- INT2 WU: Wake-up interrupt on INT2.
- INT2 FF: Free-fall interrupt on INT2.
- INT2 DOUBLE TAP: Double-tap interrupt on INT2.
- INT2 6D: 6D detection interrupt on INT2.
- INT2 TILT: Tilt interrupt on INT2.
- INT2 IRON: Soft-iron / hard-iron interrupt on INT2.

If multiple interrupt signals are routed on the same pin (INTx), the logic level of this pin is the "OR" combination of the selected interrupt signals. In order to know which event has generated the interrupt condition, the related source registers have to be read: WAKE UP SRC, D6D SRC, TAP SRC and FUNC SRC.

The INT2 on INT1 pin of CTRL4 C register allows driving all the enabled interrupt signals in logic "OR" on the INT1 pin (by setting this bit to 1). When this bit is set to 0, the interrupt signals are divided between the INT1 and INT2 pins.

#### 4.2 Free-fall interrupt

Free-fall detection refers to a specific register configuration that allows recognizing when the device is in free-fall: the acceleration measured along all the axes goes to zero. In a real case a "free-fall zone" is defined around the zero-g level where all the accelerations are small enough to generate the interrupt. Configurable threshold and duration parameters are associated to free-fall event detection: the threshold parameter defines the free-fall zone amplitude; the duration parameter defines the minimum duration of the free-fall interrupt event to be recognized (Figure 12).

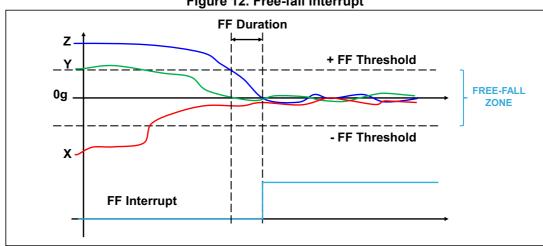


Figure 12. Free-fall interrupt

The free-fall interrupt signal can be driven to the two interrupt pins by setting to 1 the INT1\_FF bit of the MD1\_CFG register or the INT2\_FF bit of the MD2\_CFG register; it can also be checked by reading the FF\_IA bit of the WAKE\_UP\_SRC register.

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal is automatically reset when the free-fall condition is no longer verified. If latch mode is enabled and the free-fall interrupt signal is driven to the interrupt pins, once a free-fall event has occurred and the interrupt pin is asserted, it must be reset by reading the WAKE\_UP\_SRC register. If the latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

The register used to configure the threshold parameter is named FREE\_FALL; the unsigned threshold value is related to the value of the FF\_THS[2:0] field value as indicated in *Table 28*. The values given in this table are valid for each accelerometer full-scale value.

FREE_FALL - FF_THS[2:0]	Threshold LSB value [mg]
000	156
001	219
010	250
011	312
100	344
101	406
110	469
111	500

Table 28. Free-fall threshold LSB value

Duration time is measured in N/ODR\_XL, where N is the content of the FF\_DUR[5:0] field of the FREE\_FALL / WAKE\_UP\_DUR registers and ODR\_XL is the accelerometer data rate.

A basic SW routine for the free-fall event recognition is given below.

The sample code exploits a threshold set to 312 mg for free-fall recognition and the event is notified by hardware through the INT1 pin. The FF\_DUR[5:0] field of FREE\_FALL / WAKE\_UP\_DUR registers is configured like this to ignore events that are shorter than 6/ODR XL = 6/412 Hz  $\sim$ = 15 msec in order to avoid false detections.



### 4.3 Wake-up interrupt

In the LSM6DS3 device the wake-up feature can be implemented using either the slope filter (see *Section 2.6.1* for more details) or the high-pass digital filter, as illustrated in *Figure 2*. The filter to be applied can be selected using the SLOPE\_FDS bit of the TAP\_CFG register: if this bit is set to 0 (default value), the slope filter is used; if it's set to 1, the high-pass digital filter is used.

The wake-up interrupt signal is generated if a certain number of consecutive filtered data exceed the configured threshold (*Figure 13*).

The unsigned threshold value is defined using the WK\_THS[5:0] bits of the WAKE\_UP\_THS register; the value of 1 LSB of these 6 bits depends on the selected accelerometer full scale:  $1 LSB = (FS_XL)/(2^6)$ . The threshold is applied to both positive and negative data: for a wake-up interrupt generation, the module of the filtered data must be bigger than the threshold.

The duration parameter defines the minimum duration of the wake-up event to be recognized; its value is set using the WAKE\_DUR[1:0] bits of the WAKE\_UP\_DUR register: 1 LSB corresponds to 1\*ODR\_XL time, where ODR\_XL is the accelerometer output data rate. It is important to appropriately define the duration parameter to avoid unwanted wake-up interrupts due to spurious spikes of the input signal.

This interrupt signal can be driven to the two interrupt pins setting to 1 the INT1\_WU bit of the MD1\_CFG register or the INT2\_WU bit of the MD2\_CFG register; it can also be checked by reading the WU\_IA bit of the WAKE\_UP\_SRC register. The X\_WU, Y\_WU, Z\_WU bits of the WAKE\_UP\_SRC register indicate which axis has triggered the wake-up event.

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal is automatically reset when the filtered data falls below the threshold. If latch mode is enabled and the wake-up interrupt signal is driven to the interrupt pins, once a wake-up event has occurred and the interrupt pin is asserted, it must be reset by reading the WAKE\_UP\_SRC register. If the latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

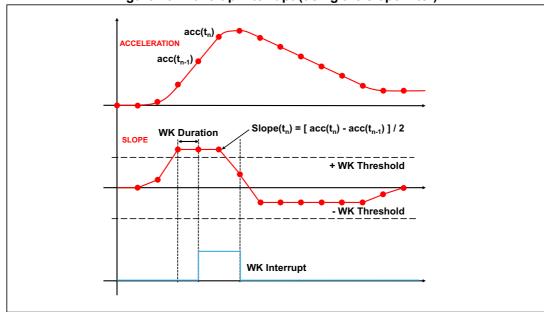


Figure 13. Wake-up interrupt (using the slope filter)

4

The example code which implements the SW routine for the wake-up event recognition using the high-pass digital filter is given below.

```
// Turn on the accelerometer
1
    Write 60h into CTRL1 XL
                                      // ODR XL = 416Hz, FS XL = 2g
2
    Write 10h into TAP CFG
                                      // Apply high-pass digital filter; latch mode disabled
3
    Write 00h into WAKE UP DUR
                                      // No duration
4
    Write 02h into WAKE_UP_THS
                                      // Set wake-up threshold
5
    Write 20h into MD1 CFG
                                      // Wake-up interrupt driven to INT1 pin
```

Since the duration time is set to zero, the wake-up interrupt signal is generated for each X,Y,Z filtered data exceeding the configured threshold. The WK\_THS field of the WAKE\_UP\_THS register is set to 000010b, therefore the wake-up threshold is 62.5 mg (=  $2 * FS \times L / 2^6$ ).

Since the wake-up functionality is implemented using the slope/high-pass digital filter, it's necessary to consider the settling time of the filter just after this functionality is enabled. For example, when using the slope filter (but a similar consideration can be done for the high-pass digital filter usage) the wake-up functionality is based on the comparison of the threshold value with half of the difference of the acceleration of the current (x,y,z) sample and the previous one (refer to Section 2.6.1: Accelerometer slope filter).

At the very first sample, the slope filter output is calculated as half of the difference of the current sample [e.g. (x,y,z) = (0,0,1g)] with the previous one which is (x,y,z)=(0,0,0) since it doesn't exist. For this reason, on the z-axis the first output value of the slope filter is (1g - 0)/2=500mg and it could be higher than the threshold value in which case a spurious interrupt event is generated. The interrupt signal is kept high for 1 ODR then it goes low.

In order to avoid this spurious interrupt generation, multiple solutions are possible. Hereafter three alternative solutions (for slope filter case):

- a) Ignore the first generated wake-up signal;
- b) Add a wait time higher than 1 ODR before driving the interrupt signal to the INT1/2 pin;
- c) Initially set a higher ODR (833 Hz) so the first 2 samples are generated in a shorter period of time, reducing the slope filter latency time, then set the desired ODR (e.g. 12.5 Hz) and drive the interrupt signal on the pin:

```
1
    Write 00h into WAKE_UP_DUR
                                      // No duration
    Write 02h into WAKE UP THS
2
                                      // Set wake-up threshold
    Write 00h into TAP_CFG
                                      // Apply slope filter; latch mode disabled
                                      // Turn on the accelerometer
    Write 70h into CTRL1 XL
                                      // ODR_XL = 833Hz, FS_XL = 2g
5
    Wait 4ms
                                      // Insert (reduced) wait time
    Write 10h into CTRL1 XL
                                      // ODR XL = 12.5Hz
6
    Write 20h into MD1 CFG
                                      // Wake-up interrupt driven to INT1 pin
```



#### 4.4 6D/4D orientation detection

The LSM6DS3 device provides the capability to detect the orientation of the device in space, enabling easy implementation of energy-saving procedures and automatic image rotation for mobile devices.

#### 4.4.1 6D orientation detection

Six orientations of the device in space can be detected; the interrupt signal is asserted when the device switches from one orientation to another. The interrupt is not re-asserted as long as the position is maintained.

6D interrupt is generated when, for two consecutive samples, only one axis exceeds a selected threshold and the acceleration values measured from the other two axes are lower than the threshold: the ZH, ZL, YH, YL, XH, XL bits of the D6D\_SRC (1Dh) register indicate which axis has triggered the 6D event.

In more detail:

Table 29. D6D\_SRC register

b7	7	b6	b5	b4	b3	b2	b1	b0
0		D6D_IA	ZH	ZL	YH	YL	XH	XL

- D6D\_IA is set high when the device switches from one orientation to another.
- ZH (YH, XH) is set high when the face perpendicular to the Z(Y,X) axis is almost flat
  and the acceleration measured on the Z(Y,X) axis is positive and in the module bigger
  than the threshold.
- ZL (YL, XL) is set high when the face perpendicular to the Z(Y,X) axis is almost flat and the acceleration measured on the Z(Y,X) axis is negative and in the module bigger than the threshold.

The SIXD\_THS[1:0] bits of the TAP\_THS\_6D register are used to select the threshold value used to detect the change in device orientation. The threshold values given in *Table 30* are valid for each accelerometer full-scale value.

 SIXD\_THS[1:0]
 Threshold value [degrees]

 00
 80

 01
 70

 10
 60

 11
 50

Table 30. Threshold for 4D/6D function

The low-pass filter LPF2 can also be used in 6D functionality by setting the LOW\_PASS\_ON\_6D bit of the CTRL8\_XL register to 1. The LPF2 filter has to be enabled as described in *Section 2.6*.

This interrupt signal can be driven to the two interrupt pins by setting to 1 the INT1\_6D bit of the MD1\_CFG register or the INT2\_6D bit of the MD2\_CFG register; it can also be checked by reading the D6D\_IA bit of the D6D\_SRC register.

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal is active only for 1/ODR\_XL[s] then it is automatically deasserted (ODR\_XL is the accelerometer output data rate). If latch mode is enabled and the 6D interrupt signal is driven to the interrupt pins, once an orientation change has occurred and the interrupt pin is asserted, a reading of the D6D\_SRC register clears the request and the device is ready to recognize a different orientation. If the latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

Referring to the six possible cases illustrated in *Figure 14*, the content of the D6D\_SRC register for each position is shown in *Table 31*.

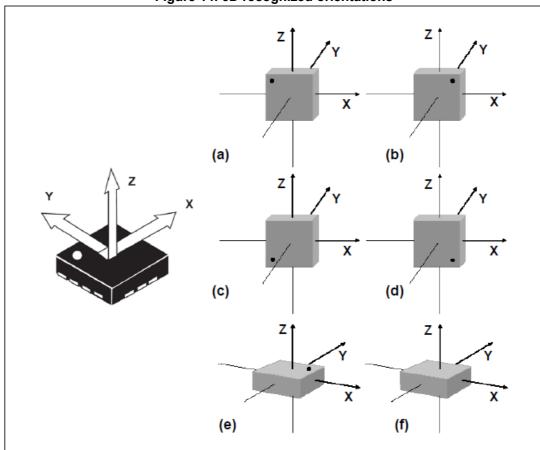


Figure 14. 6D recognized orientations

Table 31. D6D\_SRC register in 6D positions

Case	D6D_IA	ZH	ZH	YH	YL	хн	XL
(a)	1	0	0	1	0	0	0
(b)	1	0	0	0	0	0	1
(c)	1	0	0	0	0	1	0
(d)	1	0	0	0	1	0	0
(e)	1	1	0	0	0	0	0
(f)	1	0	1	0	0	0	0

Hereafter an example which implements the SW routine for 6D orientation detection.

```
    Write 60h into CTRL1_XL  // Turn on the accelerometer  // ODR_XL = 416 Hz, FS_XL = 2g
    Write 40h into TAP_THS_6D  // Set 6D threshold (SIXD_THS[1:0] = 10b = 60 degrees)
    Write 10h into TAP_CFG  // Enable LPF2 filter
    Write 01h into CTRL8_XL  // Apply LPF2 filter to 6D functionality
    Write 04h into MD1_CFG  // 6D interrupt driven to INT1 pin
```

#### 4.4.2 4D orientation detection

The 4D direction function is a subset of the 6D function especially defined to be implemented in mobile devices for portrait and landscape computation. It can be enabled by setting the D4D\_EN bit of the TAP\_THS\_6D register to 1. In this configuration, the Z-axis position detection is disabled, therefore reducing position recognition to cases (a), (b), (c), and (d) of *Table 31*.

## 4.5 Single-tap and double-tap recognition

The single-tap and double-tap recognition functions featured in the LSM6DS3 help to create a man-machine interface with little software loading. The device can be configured to output an interrupt signal on a dedicated pin when tapped in any direction.

If the sensor is exposed to a single input stimulus, it generates an interrupt request on the inertial interrupt pin INT1 and/or INT2. A more advanced feature allows the generation of an interrupt request when a double input stimulus with programmable time between the two events is recognized, enabling a mouse button-like function.

In the LSM6DS3 device the single-tap and double-tap recognition functions use the slope between two consecutive acceleration samples to detect the tap events; the slope data is computed using the following formula:

$$slope(t_n) = [acc(t_n) - acc(t_{n-1})] / 2$$

This function can be fully programmed by the user in terms of expected amplitude and timing of the slope data by means of a dedicated set of registers.

Single and double-tap recognition work independently of the selected output data rate. Recommended accelerometer ODRs for these functions are 416 Hz and 833 Hz.

#### 4.5.1 Single tap

If the device is configured for single-tap event detection, an interrupt is generated when the slope data of the selected channel exceeds the programmed threshold, and returns below it within the Shock time window.

In the single-tap case, if the LIR bit of the TAP\_CFG register is set to 0, the interrupt is kept high for the duration of the Quiet window.

In order to enable the latch feature on the single-tap interrupt signal, both the LIR bit and the INT1\_DOUBLE\_TAP (or INT2\_DOUBLE\_TAP) bit of MD1\_CFG (MD2\_CFG) have to be set to 1: the interrupt is kept high until the TAP\_SRC register is read.



The SINGLE\_DOUBLE\_TAP bit of WAKE\_UP\_THS has to be set to 0 in order to enable single-tap recognition only.

In case (a) of *Figure 15* the single-tap event has been recognized, while in case (b) the tap has not been recognized because the slope data falls below the threshold after the Shock time window has expired.

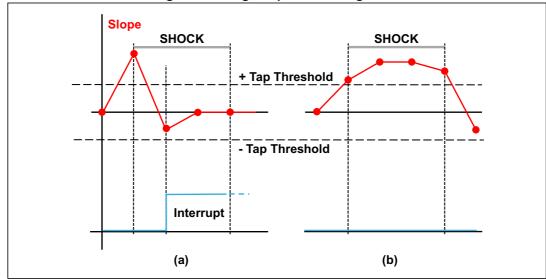


Figure 15. Single-tap event recognition

#### 4.5.2 Double tap

If the device is configured for double-tap event detection, an interrupt is generated when, after a first tap, a second tap is recognized. The recognition of the second tap occurs only if the event satisfies the rules defined by the Shock, the Latency and the Duration time windows.

In particular, after the first tap has been recognized, the second tap detection procedure is delayed for an interval defined by the Quiet time. This means that after the first tap has been recognized, the second tap detection procedure starts only if the slope data exceed the threshold after the Quiet window but before the Duration window has expired. In case (a) of *Figure 16*, a double-tap event has been correctly recognized, while in case (b) the interrupt has not been generated because the slope data exceeds the threshold after the window interval has expired.

Once the second tap detection procedure is initiated, the second tap is recognized with the same rule as the first: the slope data must return below the threshold before the Shock window has expired.

It is important to appropriately define the Quiet window to avoid unwanted taps due to spurious bouncing of the input signal.

In the double-tap case, if the LIR bit of the TAP\_CFG register is set to 0, the interrupt is kept high for the duration of the Quiet window. If the LIR bit is set to 1, the interrupt is kept high until the TAP\_SRC register is read.

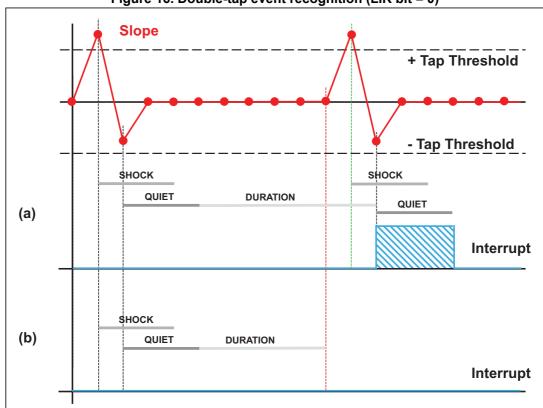


Figure 16. Double-tap event recognition (LIR bit = 0)

#### 4.5.3 Single-tap and double-tap recognition configuration

The LSM6DS3 device can be configured to output an interrupt signal when tapped (once or twice) in any direction: the TAP\_X\_EN, TAP\_Y\_EN and TAP\_Z\_EN bits of the TAP\_CFG register must be set to 1 to enable the tap recognition on X, Y, Z directions, respectively.

Configurable parameters for tap recognition functionality are the tap threshold and the Shock, Quiet and Duration time windows.

The TAP\_THS[4:0] bits of the TAP\_THS\_6D register are used to select the unsigned threshold value used to detect the tap event. The value of 1 LSB of these 5 bits depends on the selected accelerometer full scale: 1 LSB =  $(FS_XL)/(2^5)$ . The unsigned threshold is applied to both positive and negative slope data.

The Shock time window defines the maximum duration of the overthreshold event: the acceleration must return below the threshold before the Shock window has expired, otherwise the tap event is not detected. The SHOCK[1:0] bits of the INT\_DUR2 register are used to set the Shock time window value: the default value of these bits is 00b and corresponds to 4\*ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the SHOCK[1:0] bits are set to a different value, 1 LSB corresponds to 8\*ODR\_XL time.

In the double-tap case, the Quiet time window defines the time after the first tap recognition in which there must not be any overthreshold. When the latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the Quiet time also defines the length of the interrupt pulse (in both single and double-tap case). The QUIET[1:0] bits of the INT\_DUR2 register are used to set the Quiet time window value: the default value of these bits is 00b and corresponds to



2\*ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the QUIET[1:0] bits are set to a different value, 1 LSB corresponds to 4\*ODR\_XL time.

In the double-tap case, the Duration time window defines the maximum time between two consecutive detected taps. The Duration time period starts just after the completion of the Quiet time of the first tap. The DUR[3:0] bits of the INT\_DUR2 register are used to set the Duration time window value: the default value of these bits is 0000b and corresponds to 16\*ODR\_XL time, where ODR\_XL is the accelerometer output data rate. If the DUR[3:0] bits are set to a different value, 1 LSB corresponds to 32\*ODR XL time.

Figure 17 illustrates a single-tap event (a) and a double-tap event (b). These interrupt signals can be driven to the two interrupt pins by setting to 1 the INT1\_SINGLE\_TAP bit of the MD1\_CFG register or the INT2\_SINGLE\_TAP bit of the MD2\_CFG register for the single-tap case, and setting to 1 the INT1\_DOUBLE\_TAP bit of the MD1\_CFG register or the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register for the double-tap case.

No single/double tap interrupt is generated if the accelerometer is in Inactivity status (see *Section 4.6* for more details).

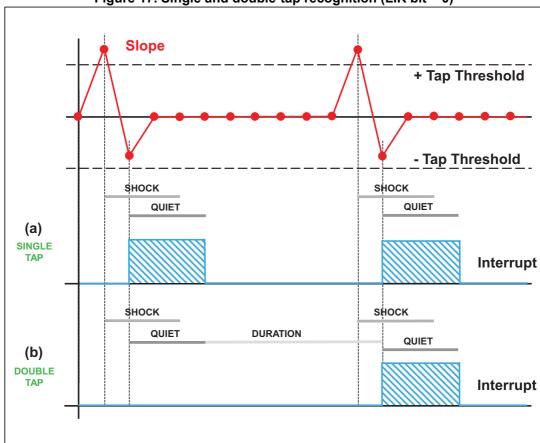


Figure 17. Single and double-tap recognition (LIR bit = 0)

Tap interrupt signals can also be checked by reading the TAP\_SRC (1Ch) register, described in *Table 32*.

b7	b6	b5	b4	b3	b2	b1	b0
0	TAP_IA	SINGLE TAP	DOUBLE TAP	TAP_SIGN	X_TAP	Y_TAP	Z_TAP

Table 32. TAP SRC register

- TAP\_IA is set high when a single-tap or double-tap event has been detected.
- SINGLE TAP is set high when a single tap has been detected.
- DOUBLE\_TAP is set high when a double tap has been detected.
- TAP\_SIGN indicates the acceleration sign when the tap event is detected. It is set low in case of positive sign and it is set high in case of negative sign.
- X\_TAP (Y\_TAP, Z\_TAP) is set high when the tap event has been detected on the X (Y, Z) axis.

Single and double-tap recognition works independently. Setting the SINGLE\_DOUBLE\_TAP bit of WAKE\_UP\_THS to 0, only the single-tap recognition is enabled: double-tap recognition is disabled and cannot be detected. When the SINGLE\_DOUBLE\_TAP is set to 1, both single and double-tap recognition are enabled.

If the latch mode is enabled and the interrupt signal is driven to the interrupt pins, the value assigned to SINGLE\_DOUBLE\_TAP also affects the behavior of the interrupt signal: when it is set to 0, the latch mode is applied to the single-tap interrupt signal; when it is set to 1, the latch mode is applied to the double-tap interrupt signal only. The latched interrupt signal is kept high until the TAP\_SRC register is read. If the latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the latch feature does not take effect.

#### 4.5.4 Single-tap example

Hereafter an example code which implements the SW routine for single-tap detection.

```
// Turn on the accelerometer
1
    Write 60h into CTRL1_XL
                                    // ODR XL = 416 Hz, FS XL = 2g
2
    Write 0Eh into TAP_CFG
                                    // Enable tap detection on X, Y, Z axis
    Write 09h into TAP THS 6D
3
                                    // Set tap threshold
    Write 06h into INT DUR2
                                    // Set Quiet and Shock time windows
4
                                   // Only single tap enabled (SINGLE_DOUBLE_TAP = 0)
    Write 00h into WAKE UP THS
5
    Write 40h into MD1 CFG
                                    // Single tap interrupt driven to INT1 pin
```

In this example the TAP\_THS field of the TAP\_THS\_6D register is set to 01001b, therefore the tap threshold is 562.5 mg (=  $9 * \text{FS}_XL / 2^5$ ).

The SHOCK field of the INT\_DUR2 register is set to 10b: an interrupt is generated when the slope data exceeds the programmed threshold, and returns below it within 38.5 ms (= 2 \* 8 / ODR\_XL) corresponding to the Shock time window.

The QUIET field of the INT\_DUR2 register is set to 01b: since the latch mode is disabled, the interrupt is kept high for the duration of the Quiet window, therefore 9.6 ms (= 1 \* 8 / ODR\_XL.)

#### 4.5.5 Double-tap example

The example code which implements the SW routine for single-tap detection is given below.

```
// Turn on the accelerometer
    Write 60h into CTRL1_XL
1
                                     // ODR XL = 416 Hz, FS XL = 2g
    Write 0Eh into TAP CFG
                                    // Enable tap detection on X, Y, Z axis
2
3
    Write 0Ch into TAP THS 6D
                                    // Set tap threshold
    Write 7Fh into INT DUR2
                                    // Set Duration, Quiet and Shock time windows
5
    Write 80h into WAKE UP THS
                                    // Single & Double tap enabled (SINGLE DOUBLE TAP = 1)
    Write 08h into MD1 CFG
                                    // Double tap interrupt driven to INT1 pin
```

In this example the TAP\_THS field of the TAP\_THS\_6D register is set to 01100b, therefore the tap threshold is 750 mg (=  $12 * FS \times L / 2^5$ ).

For interrupt generation, during the first and the second tap the slope data must return below the threshold before the Shock window has expired. The SHOCK field of the INT DUR2 register is set to 11b, therefore the Shock time is 57.7 ms (= 3 \* 8 / ODR XL).

For interrupt generation, after the first tap recognition there must not be any slope data overthreshold during the Quiet time window. Furthermore, since the latch mode is disabled, the interrupt is kept high for the duration of the Quiet window. The QUIET field of the INT DUR2 register is set to 11b, therefore the Quiet time is 28.8 ms (= 3 \* 4/ ODR XL).

For the maximum time between two consecutive detected taps, the DUR field of the INT\_DUR2 register is set to 0111b, therefore the Duration time is 538.5 ms (= 7 \* 32 / ODR\_XL).

# 4.6 Activity/Inactivity recognition

The Activity/Inactivity recognition function allows reducing system power consumption and developing new smart applications.

When the Activity/Inactivity recognition function is activated, the LSM6DS3 device is able to automatically decrease the accelerometer sampling rate to 12.5 Hz, increasing the accelerometer ODR and bandwidth as soon as the wake-up interrupt event has been detected. This feature is applied to the accelerometer sensor only, regardless of the selected gyroscope power mode and ODR.

With this feature the system may be efficiently switched from low-power consumption to full performance and vice-versa depending on user-selectable acceleration events, thus ensuring power saving and flexibility.

The Activity/Inactivity recognition function is enabled by setting to 1 the INACTIVITY bit of the WAKE\_UP\_THS register.

In the LSM6DS3 device the Activity/Inactivity recognition function can be implemented using either the slope filter (see Section 2.6.1 for more details) or the high-pass digital filter, as illustrated in Figure 2. The filter to be applied can be selected using the SLOPE\_FDS bit of the TAP\_CFG register: if this bit is set to 0 (default value), the slope filter is used; if it's set to 1, the high-pass digital filter is used.



This function can be fully programmed by the user in terms of expected amplitude and timing of the slope data by means of a dedicated set of registers (*Figure 18*).

The unsigned threshold value is defined using the WK\_THS[5:0] bits of dedicated set of registers WAKE\_UP\_THS register; the value of 1 LSB of these 6 bits depends on the selected accelerometer full scale:  $1 LSB = (FS_XL)/(2^6)$ . The threshold is applied to both positive and negative slope data.

When a certain number of consecutive X,Y,Z slope data is smaller than the configured threshold, the ODR\_XL [3:0] bits of the CTRL1\_XL register are bypassed (Inactivity) and the accelerometer is internally set to 12.5 Hz although the content of CTRL1\_XL is left untouched. The duration of the Inactivity status to be recognized is defined by the SLEEP\_DUR[3:0] bits of the WAKE\_UP\_DUR register: 1 LSB corresponds to 512\*ODR\_XL time, where ODR\_XL is the accelerometer output data rate.

When the Inactivity status is detected, the interrupt is set high for 1/ODR\_XL[s] period then it is automatically deasserted.

When a certain number of consecutive slope data on one axis become bigger than the threshold, the CTRL1\_XL register settings are immediately restored (Activity). The duration of the Activity status to be recognized is defined by the WAKE\_DUR[1:0] bits of the WAKE\_UP\_DUR register: 1 LSB corresponds to 1\*ODR\_XL time, where ODR\_XL is the accelerometer output data rate.

When the Activity status is detected, the interrupt is set high for 1/ODR\_XL[s] period then it is automatically deasserted.

Once the Activity/Inactivity detection function is enabled, the status can be driven to the two interrupt pins by setting to 1 the INT1\_INACT\_STATE bit of the MD1\_CFG register or the INT1\_INACT\_STATE bit of the MD2\_CFG register; it can also be checked by reading the SLEEP STATE IA bit of the WAKE UP SRC register.

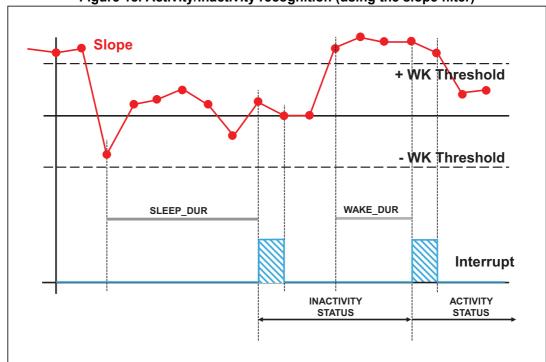


Figure 18. Activity/Inactivity recognition (using the slope filter)

57

The code provided below is a basic routine for Activity/Inactivity detection implementation.

```
    Write 50h into CTRL1_XL  // Turn on the accelerometer  // ODR_XL = 208 Hz, FS_XL = 2g
    Write 42h into WAKE_UP_DUR  // Set duration for Inactivity detection  // Set duration for Activity detection  // Set Activity/Inactivity threshold  // Enable Activity/Inactivity detection
    Write 42h into WAKE_UP_THS  // Set Activity/Inactivity threshold  // Enable Activity/Inactivity detection
    Write 80h into MD1 CFG  // Activity/Inactivity interrupt driven to INT1 pin
```

In this example the WK\_THS field of the WAKE\_UP\_THS register is set to 000010b, therefore the Activity/Inactivity threshold is 62.5 mg (=  $2 * FS_XL / 2^6$ ).

Before Inactivity detection, the X,Y,Z slope data must be smaller than the configured threshold for a period of time defined by the SLEEP\_DUR field of the WAKE\_UP\_DUR register: this field is set to 0010b, corresponding to 4.92 s (= 2 \* 512 / ODR\_XL). After this period of time has elapsed, the accelerometer ODR is internally set to 12.5 Hz.

The Activity status is detected and the CTRL1\_XL register settings immediately restored if the slope data of (at least) one axis are bigger than the threshold for a period of time defined by the WAKE\_DUR field of the WAKE\_UP\_DUR register: this field is set to 10b, corresponding to 9.62 ms (= 2 \* 1 / ODR\_XL).

#### 4.7 Boot status

After the device is powered up, the LSM6DS3 performs a 20 ms boot procedure to load the trimming parameters. After the boot is completed, both the accelerometer and the gyroscope are automatically configured in Power-Down mode. During the boot time the registers are not accessible.

After power up, the trimming parameters can be re-loaded by setting to 1 the BOOT bit of the CTRL3 C register.

No toggle of the device power lines is required and the content of the device control registers is not modified, so the device operating mode doesn't change after boot. If the reset to the default value of the control registers is required, it can be performed by setting to 1 the SW\_RESET bit of the CTRL3\_C register. The SW\_RESET procedure can take 50 µs; the status of reset is signaled by the status of SW\_RESET bit of the CTRL3\_C register: once the reset is completed, this bit is automatically set low.

While the boot is running, the EV\_BOOT bit of the STATUS\_REG register is set high; at the end of the boot procedure, this bit is set low again. The boot status signal can also be driven to the INT1 interrupt pin by setting to 1 the INT1 BOOT bit of the INT1 CTRL register.

Reboot flow is as follows:

- Set the Gyroscope in Power-Down mode;
- 2. Set the Accelerometer in High-Performance mode;
- 3. Set to 1 the BOOT bit of the CTRL3\_C register;
- 4. Wait 20 ms.



Reset flow is as follows:

- 1. Set the Gyroscope in Power-Down mode;
- 2. Set the Accelerometer in High-Performance mode;
- 3. Set to 1 the SW\_RESET bit of the CTRL3\_C register;
- 4. Wait 50 μs (or wait until the SW\_RESET bit of the CTRL3\_C register returns to 0).

In order to avoid conflicts, the reboot and the sw reset must not be executed at the same time (do not set to 0 at the same time both the BOOT bit and SW\_RESET bit of CTRL3\_C register). The above flows must be performed serially.

### 5 Android embedded functions

The LSM6DS3 device implements in hardware the sensor-related functions specified in Android L; specific IP blocks with negligible power consumption and high-level performance implement the following functions using only the accelerometer:

- Pedometer functions (step detector and step counter);
- Significant motion;
- Tilt;
- Timestamp.

All these functions work at 26 Hz, so the accelerometer ODR must be set at 26 Hz or higher values.

### 5.1 Pedometer functions: step detector and step counter

A specific IP block of the LSM6DS3 device is dedicated to pedometer functions: the step detector and the step counter.

Pedometer functions work at 26 Hz, so the accelerometer ODR must be set at 26 Hz or higher values.

In order to enable the pedometer functions it is necessary to set to 1 both the FUNC\_EN bit of the CTRL10\_C register and the PEDO\_EN bit of the TAP\_CFG register.

The step counter indicates the number of steps detected by the step detector algorithm after the pedometer function has been enabled. The step count is given by the concatenation of the STEP\_COUNTER\_H and STEP\_COUNTER\_L registers and it is represented as a 16-bit unsigned number.

The step count is not reset to zero when the accelerometer is configured in Power-Down or the pedometer is disabled; it can be reset to zero by setting the PEDO\_RST\_STEP bit of the CTRL10\_C register to 1. After the counter resets, the PEDO\_RST\_STEP bit is not automatically set back to 0.

The step detector functionality generates an interrupt every time a step is recognized. In case of interspersed step sessions, 7 consecutive steps (debounce steps) have to be detected before the first interrupt generation in order to avoid false step detections (debounce functionality).

The number of debounce steps can be modified through the DEB\_STEP field of the PEDO\_DEB\_REG register: basically, it corresponds to the minimum number of steps to be detected before the first step counter increment. 1 LSB of this field corresponds to 1 step, the default value is 6 steps.

The debounce functionality restarts after around 1 second of device inactivity. This period of time (debouncing time) can be modified through the DEB\_TIME field of the PEDO\_DEB\_REG register. 1LSB corresponds to 80 ms, the default value is 13 (13 \*80ms = 1040 ms). This value must be greater than 0.

The example in *Figure 19* explains how the step counter behavior changes by changing the debounce time. In this example, the pedometer algorithm detects 7 steps close to each other and then two more isolated steps after a certain period of time; assuming that the value of DEB\_STEP field of the PEDO\_DEB\_REG register is set to 6 LSB (= 6 debounce



steps, default value) and the initial step counter value in STEP\_COUNTER\_H/L registers is zero (no steps previously detected):

- a) in case (a), the step count starts increasing after the seventh step and after the first eight detected steps, the value of STEP\_COUNTER\_H/L registers will be 8. Since the debounce time set in the DEB\_TIME field of the PEDO\_DEB\_REG register is greater than the period of time between the step #8 and the step #9, also the steps #9 and #10 will cause the step counter to increase: the final step count value in STEP\_COUNTER\_H/L registers will be 10.
- b) also in case (b) the step count starts increasing after the seventh step and after the first eight detected steps, the value of STEP\_COUNTER\_H/L registers will be 8, but since the debounce time set in the DEB\_TIME field of the PEDO\_DEB\_REG register is lower than the period of time between the step #8 and the step #9, the steps #9 and #10 will not cause the step counter to increase: the final step count value in STEP\_COUNTER\_H/L registers will be 8. Furthermore, if between the step #10 and the following step elapses a period of time greater than the debounce time, the detected steps #9 and #10 will be definitively discarded and no longer considered.

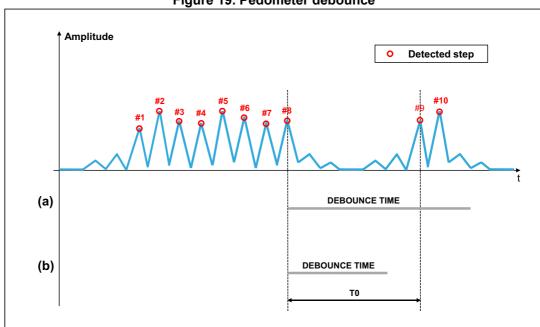


Figure 19. Pedometer debounce

By default, the step counter works at 2g full scale, independently of the configured device full scale, but it can be configured to work at 4g full scale which can help to avoid acceleration saturation (e.g. in fast walk). In order to set the 4g full scale for the step counter, the PEDO\_4G bit of the PEDO\_THS\_REG register has to be set to 1 and the accelerometer full scale configured in CTRL1\_XL register must be  $\geq 4g$ .

It is also possible to set the "Minimum Threshold", that is the value at which the threshold for step recognition asymptotically tends if no steps are detected and below which it cannot descend (see *Figure 20*). This configuration is available in the THS\_MIN field of the PEDO\_THS\_REG register. The value of 1 LSB of these 6 bits depends on the selected step counter full scale: 1 LSB = 16 mg if the PEDO\_4G bit is 0; 1 LSB = 32 mg if the PEDO\_4G bit is 1.

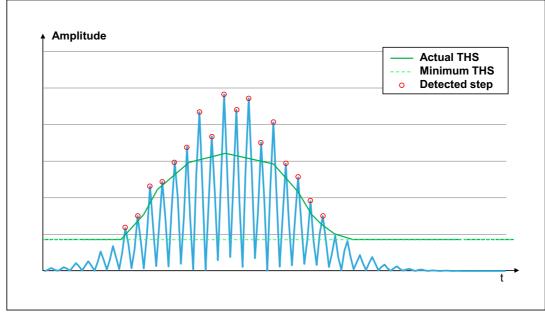


Figure 20. Pedometer minimum threshold

The step detector interrupt signal can be driven to the INT1 interrupt pin by setting to 1 the INT1\_STEP\_DETECTOR bit of the INT1\_CTRL register; it can also be checked by reading the STEP\_DETECTED bit of the FUNC\_SRC register.

Instead of generating an interrupt every time a step is recognized, it is possible to generate it if at least one step is detected within a certain time period. This time period is defined by setting a value higher than 00h in the STEP\_COUNT\_DELTA register. It is necessary to set the TIMER\_EN bit of the TAP\_CFG register to 1 (to enable the timer) and the TIMER\_HR bit of the WAKE\_UP\_DUR register to 0 when using this feature: in this case, 1 LSB of the value of the STEP\_COUNT\_DELTA register corresponds to 1.6384 seconds. This interrupt signal can be driven to the INT2 interrupt pin by setting to 1 the INT2\_STEP\_DELTA bit of the INT2\_CTRL register; it can also be checked by reading the STEP\_COUNT\_DELTA\_IA bit of the FUNC\_SRC register.

The Step Counter overflow signal can be driven to the INT2 interrupt pin by setting to 1 the INT2\_STEP\_COUNT\_OV bit of the INT2\_CTRL register: in this case, when the step count reaches the 2<sup>16</sup> value, an interrupt signal is generated on the INT2 pin and the step count is automatically reset to zero, no need to reset it by setting to 1 the PEDO\_RST\_STEP bit.

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal generated by the pedometer functions is pulsed: the duration of the pulse observed on the interrupt pins is about 60  $\mu$ s; the duration of the pulse observed on the bits STEP\_COUNT\_DELTA\_IA, STEP\_DETECTED\_IA and STEP\_OVERFLOW of the FUNC\_SRC register is 1/26 Hz.

If latch mode is enabled (LIR bit of TAP\_CFG is set to 1) and the interrupt signal is driven to the interrupt pins, once a step has occurred, a reading of the FUNC\_SRC register clears the request on both the pins and the STEP\_COUNT\_DELTA\_IA, STEP\_DETECTED\_IA and STEP\_OVERFLOW bits of the FUNC\_SRC register, and the device is ready to recognize the next step. If latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the interrupt signal observed on the bits of the FUNC\_SRC register is pulsed, with a fixed duration of 1/26 Hz.

Step counter timestamp information is available in the STEP\_TIMESTAMP\_H and STEP\_TIMESTAMP\_L registers: when a step is detected, the value of the



TIMESTAMP\_REG2 register is copied in STEP\_TIMESTAMP\_H, and the value of the TIMESTAMP\_REG1 register is copied in STEP\_TIMESTAMP\_L, providing the timestamp information of this step. For more details about LSM6DS3 timestamp counter and TIMESTAMP\_REG2/TIMESTAMP\_REG1, see Section 5.4.

The step counter timestamp resolution depends on the value of the TIMER\_HR bit of the WAKE\_UP\_DUR register: when this bit is set to 0, 1 LSB of the time step count corresponds to 1638.4 ms; when this bit is set to 1, 1 LSB of the time step count corresponds to 6.4 ms.

Step counter data can be stored in FIFO as a fourth data set along with timestamp data (see *Section 7.8* for more details).

Hereafter a basic SW routine which shows how to enable the pedometer functions:

```
    Write 20h into CTRL1_XL // Turn on the accelerometer // ODR_XL = 26 Hz, FS_XL = 2g
    Write 3Ch into CTRL10_C // Enable embedded functions
    Write 40h into TAP_CFG // Enable pedometer algorithm
    Write 80h into INT1_CTRL // Step Detector interrupt driven to INT1 pin
```

The interrupt signal is generated when a step is recognized and the step count is available by reading the STEP\_COUNTER\_H / STEP\_COUNTER\_L registers.

## 5.2 Significant motion

The Significant Motion function generates an interrupt when a 'significant motion', that could be due to a change in user location, is detected: in the LSM6DS3 device this function has been implemented in hardware using only the accelerometer.

Significant Motion functionality can be used in location-based applications in order to receive a notification indicating when the user is changing location.

The Significant Motion function works at 26 Hz, so the accelerometer ODR must be set at a value of 26 Hz or higher.

In order to enable Significant Motion detection it is necessary to set to 1 both the FUNC\_EN bit and the SIGN\_MOTION\_EN bit of the CTRL10\_C register.

Note:

In order to ensure that the Significant Motion function works properly, the step detector/step counter has to be on.

The Significant Motion interrupt signal can be driven to the INT1 interrupt pin by setting to 1 both the INT1\_SIGN\_MOTION bit and the INT1\_STEP\_DETECTOR bit of the INT1\_CTRL register; it can also be checked by reading the SIGN\_MOTION\_IA bit of the FUNC\_SRC register.

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal generated by the Significant Motion function is pulsed: the duration of the pulse observed on the interrupt pins is about 60  $\mu$ s; the duration of the pulse observed on the SIGN\_MOTION\_IA bit of the FUNC\_SRC register is 1/26 Hz.

If latch mode is enabled (LIR bit of TAP\_CFG is set to 1) and the interrupt signal is driven to the interrupt pins, once a 'significant motion' is detected, a reading of the FUNC\_SRC register clears the request on both the pins and the SIGN MOTION IA bit of the

57

FUNC\_SRC register, and the device is ready to recognize the next event. If latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the interrupt signal observed on the SIGN\_MOTION\_IA bit of the FUNC\_SRC register is pulsed, with a fixed duration of 1/26 Hz.

The embedded function register (accessible by setting to 1 the FUNC\_CFG\_EN bit of FUNC\_CFG\_ACCESS) used to configure the Significant Motion threshold parameter is the SM\_THS register. The SM\_THS\_[7:0] bits of this register define the threshold value: it corresponds to the number of steps to be performed by the user upon a change of location before the Significant Motion interrupt is generated. It is expressed as an 8-bit unsigned value: the default value of this field is equal to 6 (= 00000110b).

When the debounce functionality of the pedometer is active (see *Section 5.1* for details), the Significant Motion threshold is effective only if its value, corresponding to the value of the SM\_THS\_[7:0] bits of the SM\_THS register, is equal to or greater than the pedometer debounce threshold (corresponding to the value of the DEB\_STEP[2:0] bits of the PEDO\_DEB\_REG (2Bh) register).

Basically, three different scenarios are possible for the Significant Motion threshold value:

- a) If the pedometer debounce functionality is not active, the Significant Motion threshold value is defined by the SM\_THS\_[7:0] bits;
- b) if the pedometer debounce functionality is active and the Significant Motion threshold value is equal to or greater than the pedometer debounce value, the effective Significant Motion threshold value is defined by the SM THS [7:0] bits;
- c) if the pedometer debounce functionality is active and the Significant Motion threshold value is lower than the pedometer debounce value, the effective Significant Motion threshold value is defined by the DEB STEP[2:0] bits.

Note:

In case c), if the desired Significant Motion threshold is lower than the default value, the value of the DEB\_STEP[2:0] bits of the PEDO\_DEB\_REG (2Bh) register has to be decreased accordingly. Note that an excessive reduction of the pedometer debounce threshold can cause the Pedometer to report false step detections!

Hereafter a basic SW routine which shows how to enable the significant motion detection function:

```
1
    Write 80h into FUNC CFG ADDRESS
                                               // Enable access to embedded functions registers
2
    Write 08h into SM THS
                                               // Set Significant Motion threshold
3
    Write 00h into FUNC_CFG_ADDRESS
                                               // Disable access to embedded functions registers
                                               // Turn on the accelerometer
    Write 20h into CTRL1 XL
                                               // ODR_XL = 26 Hz, FS_XL = 2g
5
    Write 00h into TAP CFG
                                               // Disable pedometer
                                               // Enable embedded functions
6
    Write 3Dh into CTRL10 C
                                               // Enable Significant Motion detection
7
    Write 40h into TAP CFG
                                               // Enable pedometer algorithm
    Write C0h into INT1 CTRL
                                               // Significant motion interrupt driven to INT1 pin
```

In this example the SM\_THS\_[7:0] bits of the SM\_THS register are set to 00001000b, therefore the Significant Motion threshold is equal to 8.



#### 5.3 Tilt

The Tilt function allows detecting when an activity change occurs (e.g. when phone is in a front pocket and the user goes from sitting to standing or standing to sitting): in the LSM6DS3 device it has been implemented in hardware using only the accelerometer.

In order to enable the tilt detector it is necessary to set to 1 both the FUNC EN bit of the CTRL10 C register and the TILT EN bit of the TAP CFG register.

If the device is configured for tilt event detection, an interrupt is generated when the device is tilted by an angle greater than 35 degrees from the start position. The start position is defined as the position of the device when the tilt detection is enabled or the position of the device when the last Tilt interrupt was generated.

After this function is enabled, for the generation of the first Tilt interrupt the device should be continuously tilted by an angle greater than 35 degrees since start position for a period of time of 2 seconds. After the first Tilt interrupt is generated, the Tilt interrupt signal is set high as soon as the device is tilted by an angle greater than 35 degrees from the position of the device corresponding to the last interrupt detection (no need to wait 2 seconds).

In the example shown in Figure 21 tilt detection is enabled when the device orientation corresponds to "start position #0": the first interrupt is generated if the device is rotated by an angle greater than 35 degrees from the start position and remains in the blue zone for a period of time of at least 2 seconds. After the first tilt detection interrupt is generated, the new start position (#1) corresponds to the position of the device when the previous interrupt was generated (final position #0), and the next interrupt signal will be generated as soon as the device is tilted by an angle greater than 35 degrees, entering the blue zone surrounding the start position #1.

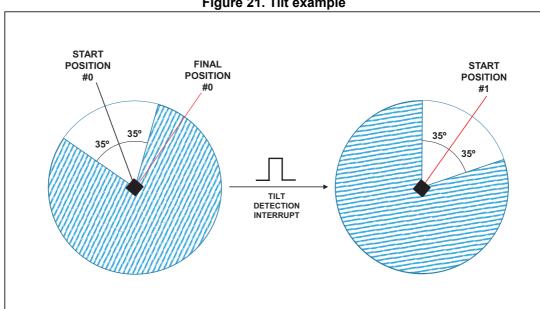


Figure 21. Tilt example

This interrupt signal can be driven to the two interrupt pins by setting to 1 the INT1\_TILT bit of the MD1\_CFG register or the INT2\_TILT bit of the MD2\_CFG register; it can also be checked by reading the TILT IA bit of the FUNC SRC register.

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the interrupt signal generated by the Tilt function is pulsed: the duration of the pulse observed on the interrupt pins is about  $60 \mu s$ ; the duration of the pulse observed on the TILT\_IA bit of FUNC\_SRC register is  $1/26 \ Hz$ .

If latch mode is enabled (LIR bit of TAP\_CFG is set to 1) and the interrupt signal is driven to the interrupt pins, once a tilt is detected, a reading of the FUNC\_SRC register clears the request on both the pins and the TILT\_IA bit of FUNC\_SRC register, and the device is ready to recognize the next tilt event. If latch mode is enabled but the interrupt signal is not driven to the interrupt pins, the interrupt signal observed on the TILT\_IA bit of the FUNC\_SRC register is pulsed, with a fixed duration of 1/26 Hz.

The tilt function works at 26 Hz, so the accelerometer ODR must be set at 26 Hz or higher values.

Hereafter a basic SW routine which shows how to enable the tilt detection function:

```
    Write 20h into CTRL1_XL  // Turn on the accelerometer  // ODR_XL = 26 Hz, FS_XL = 2g
    Write 3Ch into CTRL10_C  // Enable embedded functions
    Write 20h into TAP_CFG  // Enable tilt detection
    Write 02h into MD1 CFG  // Tilt detector interrupt driven to INT1 pin
```

### 5.4 Timestamp

Together with sensor data the LSM6DS3 device can provide timestamp information.

If both the accelerometer and the gyroscope are in Power-Down mode, the timestamp counter doesn't work.

To enable this functionality the TIMER\_EN bit of the TAP\_CFG register has to be set to 1: the time step count is given by the concatenation of the TIMESTAMP\_REG2 & TIMESTAMP\_REG1 & TIMESTAMP\_REG0 registers and is represented as a 24-bit unsigned number.

The timestamp resolution can be configured using the TIMER\_HR bit of the WAKE\_UP\_DUR register: when this bit is set to 0, 1 LSB of time step count corresponds to 6.4 ms; when this bit is set to 1, 1 LSB of time step count corresponds to 25  $\mu$ s.

When the maximum value 16777215 LSB (corresponding to FFFFFFh) is reached and low resolution (TIMER\_HR = 0) is used, the counter is automatically reset to 000000h and continues to count. When the maximum value is reached and high resolution (TIMER\_HR = 1) is used, the counter is not automatically reset to 0 and freezes at FFFFFh. In any case, the timer count can be reset to zero at any time by writing the reset value AAh in the TIMESTAMP REG2 register.

An interrupt signal is generated when the timer step count reaches the value of 16776960 LSB (corresponding to FFFF00h). This interrupt signal can be driven to the INT1 pin by setting to 1 the INT1\_TIMER bit of the MD1\_CFG register. Once the interrupt pin is asserted, it must be reset to zero by writing AAh in the TIMESTAMP REG2 register.

The timestamp count can be stored in FIFO as a fourth data set along with the step counter data (see *Section 7.8* for details).



The timestamp resolution has to be set before enabling the timestamp functionality; a basic SW routine is as follows:

```
    Write 50h into CTRL1_XL  // Turn on the accelerometer  // ODR_XL = 208 Hz, FS_XL = 2g
    Write 10h into WAKE_UP_DUR  // Timestamp resolution = 25μs
    Write 80h into TAP_CFG  // Enable timestamp count
    Write 01h into MD1 CFG  // End counter interrupt driven to INT1 pin
```

When switching from a low timestamp resolution to a high resolution the timer count must be reset, as indicated in the example below:

```
Write 50h into CTRL1_XL  // Turn on the accelerometer
// ODR_XL = 208 Hz, FS_XL = 2g
Write 00h into WAKE_UP_DUR  // Timestamp resolution = 6.4ms
Write 80h into TAP_CFG  // Enable timestamp count
...

Write 10h into WAKE_UP_DUR  // Timestamp resolution = 25μs
N+1 Write AAh into TIMESTAMP_REG2  // Reset timer counter
```



#### 6 Mode 2 - sensor hub mode

The hardware flexibility of the LSM6DS3 allows connecting the pins to external sensors to expand functionalities such as adding a sensor hub.

Two different mode connections are available:

- Mode 1 Slave-only mode: I<sup>2</sup>C/SPI (3- and 4-wire) slave interface is available;
- **Mode 2 Sensor Hub mode**: I<sup>2</sup>C/SPI (3- and 4-wire) slave interface and I<sup>2</sup>C master interface for the connection of external sensors are available.

The pin connections and function for each mode are described in the LSM6DS3 datasheet; Mode 2 connection mode is described in detail in the following paragraphs.

# 6.1 Sensor hub mode description

In sensor hub mode (Mode 2) up to 4 external sensors can be connected to the I<sup>2</sup>C master interface of LSM6DS3 device.

External sensor data can also be stored in FIFO with a configurable decimation factor (see Section 7: First-in first-out (FIFO) buffer for details).

If both the accelerometer and the gyroscope are in Power-Down mode, the sensor hub doesn't work.

All external sensors have to be connected in parallel to the SDx/SCx pins of the device, as illustrated in *Figure 22* for a single external sensor. External pull-up resistors and the external trigger signal connection are optional and depend on the configuration of the registers.

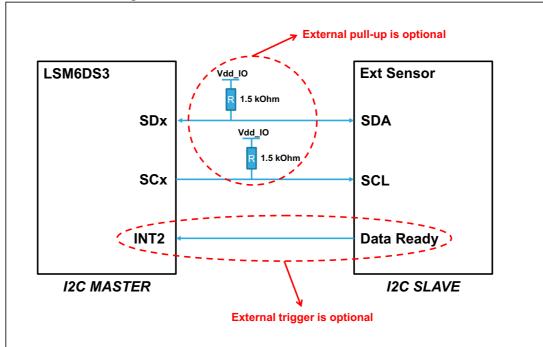


Figure 22. External sensor connections in Mode 2

## 6.2 Sensor hub mode registers

In order to enable the embedded functionalities of registers LSM6DS3, the FUNC\_EN bit of the CTRL10\_C register has to be set to 1; after enabling the sensor hub functionality, the MASTER CONFIG register has to be used for the configuration of the I<sup>2</sup>C master interface.

A set of registers SLVx\_ADD, SLVx\_SUBADD, SLAVEx\_CONFIG is dedicated to the configuration of the 4 slave interfaces associated to the 4 connectable external sensors. An additional register, DATAWRITE\_SRC\_MODE\_SUB\_SLV0, is associated to slave #0 only: it can be used to implement the writing and the source mode conditioned reading of the registers of the external sensor associated to slave #0.

Finally, 18 registers (from SENSORHUB1\_REG to SENSORHUB18\_REG) are available to store the data read from the external sensors.

### 6.2.1 CTRL10\_C (19h)

Table 33. CTRL10\_C register

b7	b6	b5	b4	b3	b2	b1	b0
0	0	Х	Х	Х	FUNC_EN	Х	Х

• FUNC\_EN must be set to 1 in order to enable the embedded functionalities of the LSM6DS3 (pedometer, tilt, significant motion, ironing).

#### 6.2.2 MASTER CONFIG (1Ah)

This register is used to configure the I<sup>2</sup>C master interface.

Table 34. MASTER\_CONFIG register

b7	b6	b5	b4	b3	b2	b1	b0
DRDY_ON _INT1	Х	0	START _CONFIG	PULL_UP _EN	PASS_TH ROUGH_ MODE	Х	MASTER _ON

- DRDY\_ON\_INT1 bit has to be set to 1 to drive on the INT1 pin the I<sup>2</sup>C master Data-Ready signal (corresponding to the behavior of the SENSORHUB\_END\_OP bit of FUNC\_SRC register). The I<sup>2</sup>C master Data-Ready signal indicates when the sensor hub routine is complete and the external sensor data are available to be read on the SENSORHUBx\_REG registers (depending on the configuration of the SLVx\_ADD, SLVx\_SUBADD, SLAVEx\_CONFIG registers).
- START CONFIG bit selects the sensor hub trigger signal.
  - When this bit is set to 0, the accelerometer sensor has to be active (not in Power Down mode) and the sensor hub trigger signal is the accelerometer data-ready signal, with a frequency corresponding to the accelerometer ODR up to 100 Hz.
  - When this bit is set to 1, at least one sensor between the accelerometer and the gyroscope has to be active and the sensor hub trigger signal is the INT2 pin; in fact, when both the MASTER\_ON bit and START\_CONFIG bit are set to 1, the INT2 pin is configured as an input signal. In this case, the INT2 pin has to be connected to the Data-Ready pin of the external sensor (*Figure 22*) in order to trigger the reading/writing operations on the external sensor registers.



Note:

In case of external trigger signal usage (START\_CONFIG=1), if the INT2 pin is connected to the Data-Ready pin of the external sensor (Figure 22) and the latter is in Power-Down mode, then no Data-Ready signal can be generated by the external sensor. For this reason, the initial configuration of the external sensor's register has to be performed using the internal trigger signal (START\_CONFIG=0). After the external sensor is activated and the Data-Ready signal is available, the external trigger signal can be used by switching the START\_CONFIG bit to 1.

- PULL\_UP\_EN bit enables/disables the internal pull-up on the auxiliary I<sup>2</sup>C line. When this bit is set to 0, the internal pull-up is disabled and the external pull-up resistors on the SDx/SCx pins are required, as shown in *Figure 22*. When this bit is set to 1, the internal pull-up is enabled and the external pull-up resistors on the SDx/SCx pins are not required.
- PASS\_THROUGH\_MODE bit is used to enable/disable the I<sup>2</sup>C interface pass-through.
  When this bit is set to 1, the main I<sup>2</sup>C line (e.g. connected to an external
  microcontroller) is short-circuited with the auxiliary one, in order to implement a direct
  access to the external sensor registers. See Section 6.3 for details.
- MASTER\_ON bit has to be set to 1 to enable the auxiliary I<sup>2</sup>C master of the LSM6DS3 device (sensor hub mode).

#### 6.2.3 FUNC\_SRC (53h)

Table 35. FUNC\_SRC register

b7	b6	b5	b4	b3	b2	b1	b0
0	Х	Х	Х	0	0	Х	SENSOR HUB _END_OP

SENSORHUB\_END\_OP bit is set high when the sensor hub routine is completed and
the external sensor data are available to be read from the SENSORHUBx\_REG
registers (depending on the configuration of the SLVx\_ADD, SLVx\_SUBADD,
SLAVEx\_CONFIG registers). This signal can be driven to the INT1 interrupt pin by
setting to 1 the DRDY\_ON\_INT1 bit of the MASTER\_CONFIG register. The
SENSORHUB\_END\_OP bit is cleared by reading the FUNC\_SRC register.

#### 6.2.4 SLV0\_ADD (02h), SLV0\_SUBADD (03h), SLAVE0\_CONFIG (04h)

The embedded function registers (accessible when the FUNC\_CFG\_EN bit of the FUNC\_CFG\_ACCESS register is set to 1) used to configure the I<sup>2</sup>C slave interface associated to the first external sensor are described hereafter.

Table 36. SLV0\_ADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave0 _add6	Slave0 _add5	Slave0 _add4	Slave0 _add3	Slave0 _add2	Slave0 _add1	Slave0 _add0	rw_0

- Slave0\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the first external sensor.
- rw\_0 bit configures the read/write operation to be performed on the first external sensor (0: write operation; 1: read operation). The read/write operation is executed when the next sensor hub trigger event occurs.

Table 37. SLV0\_SUBADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave0							
_reg7	_reg6	_reg5	_reg4	_reg3	_reg2	_reg1	_reg0

• Slave0\_reg[7:0] bits are used to indicate the address of the register of the first external sensor to be written (if the rw\_0 bit of the SLV0\_ADD register is set to 0) or the address of the first register to be read (if the rw\_0 bit of the SLV0\_ADD register is set to 1).

Table 38. SLAVE0\_CONFIG register

b7	b6	b5	b4	b3	b2	b1	b0
Slave0 _rate1	Slave0 _rate0	Aux_sens_ on1	Aux_sens_ on0	Src_mode	Slave0 _numop2	Slave0 _numop1	Slave0 _numop0

- Slave0\_rate[1:0] bits are used to define the decimation factor applied to read operations on the first external sensor starting from the sensor hub trigger:
  - 00: no decimation
  - 01: update every 2 sensor hub trigger events
  - 10: update every 4 sensor hub trigger events
  - 11: update every 8 sensor hub trigger events
- Aux\_sens\_on[1:0] bits have to be used to indicate the number of external sensors to be managed by the sensor hub:
  - 00: one external sensor
  - 01: two external sensors
  - 10: three external sensors
  - 11: four external sensors
- Src\_mode bit enables/disabled Source Mode conditioned reading. When this bit is set
  to 1, Source Mode conditioned reading is enabled; before proceeding with the reading
  of the register address indicated in the SLV0\_SUBADD register, the content of the



- register at the address specified in DATAWRITE\_SRC\_MODE\_SUB\_SLV0 is checked: if the content is non-zero the operation continues, else the reading operation is interrupted. Source Mode conditioned reading is available on slave 0 only.
- Slave0\_numop[2:0] bits are dedicated to define the number of consecutive read operations to be performed on the first external sensor starting from the register address indicated in the SLV0\_SUBADD register.

#### 6.2.5 SLV1\_ADD (05h), SLV1\_SUBADD (06h), SLAVE1\_CONFIG (07h)

The embedded function registers (accessible when the FUNC\_CFG\_EN bit of the FUNC\_CFG\_ACCESS register is set to 1) used to configure the I<sup>2</sup>C slave interface associated to the second external sensor are described hereafter.

Table 39. SLV1\_ADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave1 _add6	Slave1 _add5	Slave1 _add4	Slave1 _add3	Slave1 _add2	Slave1 _add1	Slave1 _add0	r_1

- Slave1\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the second external sensor.
- r\_1 bit enables/disables the read operation to be performed on the second external sensor (0: read operation disabled; 1: read operation enabled). The read operation is executed when the next sensor hub trigger event occurs.

Table 40. SLV1\_SUBADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave1							
_reg7	_reg6	_reg5	_reg4	_reg3	_reg2	_reg1	_reg0

• Slave1\_reg[7:0] bits are used to indicate the address of the register of the second external sensor to be read when the r\_1 bit of SLV1\_ADD register is set to 1.

Table 41. SLAVE1 CONFIG register

b7	b6	b5	b4	b3	b2	b1	b0
Slave1 _rate1	Slave1 _rate0	0	0	0	Slave1 _numop2	Slave1 _numop1	Slave1 _numop0

- Slave1\_rate[1:0] bits are used to define the decimation factor applied to read operations on the second external sensor starting from the sensor hub trigger:
  - 00: no decimation
  - 01: update every 2 sensor hub trigger events
  - 10: update every 4 sensor hub trigger events
  - 11: update every 8 sensor hub trigger events
- Slave1\_numop[2:0] bits are dedicated to define the number of consecutive read operations to be performed on the second external sensor starting from the register address indicated in SLV1\_SUBADD register.



### 6.2.6 SLV2\_ADD (08h), SLV2\_SUBADD (09h), SLAVE2\_CONFIG (0Ah)

The embedded function registers (accessible when the FUNC\_CFG\_EN bit of the FUNC\_CFG\_ACCESS register is set to 1) used to configure the I<sup>2</sup>C slave interface associated to the third external sensor are described hereafter.

Table 42. SLV2\_ADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave2 _add6	Slave2 _add5	Slave2 _add4	Slave2 _add3	Slave2 _add2	Slave2 _add1	Slave2 _add0	r_2

- Slave2\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the third external sensor.
- r\_2 bit enables/disables the read operation to be performed on the third external sensor (0: read operation disabled; 1: read operation enabled). The read operation is executed when the next sensor hub trigger event occurs.

Table 43. SLV2\_SUBADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave2							
_reg7	_reg6	_reg5	_reg4	_reg3	_reg2	_reg1	_reg0

• Slave2\_reg[7:0] bits are used to indicate the address of the register of the third external sensor to be read when the r 2 bit of SLV2 ADD register is set to 1.

Table 44. SLAVE2\_CONFIG register

b7	b6	b5	b4	b3	b2	b1	b0
Slave2 _rate1	Slave2 _rate0	0	0	0	Slave2 _numop2	Slave2 _numop1	Slave2 _numop0

- Slave2\_rate[1:0] bits are used to define the decimation factor applied to read operations on the third external sensor starting from the sensor hub trigger:
  - 00: no decimation
  - 01: update every 2 sensor hub trigger events
  - 10: update every 4 sensor hub trigger events
  - 11: update every 8 sensor hub trigger events
- Slave2\_numop[2:0] bits are dedicated to define the number of consecutive read operations to be performed on the third external sensor starting from the register address indicated in the SLV2\_SUBADD register.



#### 6.2.7 SLV3\_ADD (0Bh), SLV3\_SUBADD (0Ch), SLAVE3\_CONFIG (0Dh)

The embedded function registers (accessible when the FUNC\_CFG\_EN bit of FUNC\_CFG\_ACCESS register is set to 1) used to configure the I<sup>2</sup>C slave interface associated to the fourth external sensor are described hereafter.

Table 45. SLV3\_ADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave3 _add6	Slave3 _add5	Slave3 _add4	Slave3 _add3	Slave3 _add2	Slave3 _add1	Slave3 _add0	r_3

- Slave3\_add[6:0] bits are used to indicate the I<sup>2</sup>C slave address of the fourth external sensor.
- r\_3 bit enables/disables the read operation to be performed on the fourth external sensor (0: read operation disabled; 1: read operation enabled). The read operation is executed when the next sensor hub trigger event occurs.

Table 46. SLV3\_SUBADD register

b7	b6	b5	b4	b3	b2	b1	b0
Slave3							
_reg7	_reg6	_reg5	_reg4	_reg3	_reg2	_reg1	_reg0

• Slave3\_reg[7:0] bits are used to indicate the address of the register of the fourth external sensor to be read when the r 3 bit of the SLV3 ADD register is set to 1.

Table 47. SLAVE3\_CONFIG register

b7	b6	b5	b4	b3	b2	b1	b0
Slave3 _rate1	Slave3 _rate0	0	0	0	Slave3 _numop2	Slave3 _numop1	Slave3 _numop0

- Slave3\_rate[1:0] bits are used to define the decimation factor applied to read operations on the fourth external sensor starting from the sensor hub trigger:
  - 00: no decimation
  - 01: update every 2 sensor hub trigger events
  - 10: update every 4 sensor hub trigger events
  - 11: update every 8 sensor hub trigger events
- Slave3\_numop[2:0] bits are dedicated to define the number of consecutive read operations to be performed on the fourth external sensor starting from the register address indicated in the SLV3\_SUBADD register.

#### 6.2.8 DATAWRITE\_SRC\_MODE\_SUB\_SLV0 (0Eh)

Table 48. DATAWRITE\_SRC\_MODE\_SUB\_SLV0 register

b7	b6	b5	b4	b3	b2	b1	b0
Slave							
_dataw7	_dataw6	_dataw5	_dataw4	_dataw3	_dataw2	_dataw1	_dataw0

Slave\_dataw[7:0] bits are dedicated, when the rw\_0 bit of SLV0\_ADD register is set to 0 (write operation), to indicate the data to be written to the first external sensor at the address specified in the SLV0\_SUBADD register. During read operations (rw\_0 = 1), this register is used if the Source Mode conditioned reading is enabled (Src\_mode bit = 1 in the SLAVE0\_CONFIG register) and it indicates the address of the external sensor register to be checked before proceeding with the reading operation.

### 6.2.9 SENSORHUBx\_REG registers

Once the auxiliary  $I^2C$  master is enabled, for each of the external sensors it reads a number of registers equal to the value of the Slavex\_numop (x = 0, 1, 2, 3) field, starting from the register address specified in SLVx\_SUBADD (x = 0, 1, 2, 3) register. The number of external sensors to be managed is specified in the Aux\_sens\_on bits of the SLAVE0\_CONFIG register.

Read data are consecutively stored (in the same order they are read) in the LSM6DS3 registers starting from the SENSORHUB1\_REG register, as in the example in *Figure 23*; 18 registers, from SENSORHUB1\_REG to SENSORHUB18\_REG, are available to store the data read from the external sensors.

The values of the registers from SENSORHUB1\_REG to SENSORHUB6\_REG can be saved in the FIFO buffer as a third data set; the values of the registers from SENSORHUB7\_REG to SENSORHUB12\_REG can be saved in the FIFO buffer as a fourth data set (see *Chapter 7* for details).

SENSORHUB1\_REG Value of reg 28h SENSORHUB2 REG Value of reg 29h Sensor #1 SENSORHUB3\_REG Value of reg 2Ah SLV0 SUBADD(03h) = 28h SENSORHUB4 REG Value of reg 00h Sensor #1 SENSORHUB5\_REG Value of reg 01h SLAVE0\_CONFIG(04h) - Slave0\_numop[2:0] = 3 SENSORHUB6 REG Value of reg 02h Sensor #2 SENSORHUB7\_REG Value of reg 03h SLV1\_SUBADD(06h) = 00h Sensor #2 SENSORHUB8\_REG Value of reg 04h SLAVE1\_CONFIG(07h) - Slave1\_numop[2:0] = 6 SENSORHUB9 REG Value of reg 05h SENSORHUB10\_REG Value of reg 20h SLV2\_SUBADD(09h) = 20h SENSORHUB11 REG Value of reg 21h Sensor #3 Sensor #3 SLAVE2 CONFIG(0Ah) - Slave2 numop[2:0] = 4 SENSORHUB12\_REG Value of reg 22h Value of reg 23h SENSORHUB13 REG SENSORHUB14\_REG Value of reg 40h SLV3\_SUBADD(0Ch) = 40h Sensor #4 SLAVE3\_CONFIG(0Dh) - Slave3\_numop[2:0] = 5 SENSORHUB15\_REG Value of reg 41h SENSORHUB16 REG Value of reg 42h Sensor #4 SENSORHUB17 REG Value of reg 43h SENSORHUB18\_REG Value of reg 44h

Figure 23. SENSORHUBx\_REG allocation example

## 6.3 Sensor hub pass-through feature

The PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register is used to enable/disable the I<sup>2</sup>C interface pass-through: when it is set to 1, the main I<sup>2</sup>C line (e.g. connected to an external microcontroller) is short-circuited with the auxiliary one, in order to implement a direct access to the external sensor registers. It is recommended to use this feature when configuring the external sensors.

**MCU** Vdd\_IO Vdd\_IO LSM6DS3 **Ext Sensor** 10 kOhm 1.5 kOhm **SDA SDx SDA SDA** Vdd\_IO Vdd\_IO 1.5 kOhm 10 kOhm SCL SCx SCL SCL PASS\_THROUGH\_MODE bit INT2

Figure 24. Pass-through feature

Some limitations must be considered when using the sensor hub and the pass-through feature. Three different scenarios are possible:

- 1. The sensor hub is used with the START\_CONFIG bit of the MASTER\_CONFIG register set to 0 (internal trigger) and the pass-through feature is not used: there is no limitation on INT2 pin usage.
- 2. The sensor hub is used with the START\_CONFIG bit of the MASTER\_CONFIG register set to 0 (internal trigger) and the pass-through feature is used: the INT2 pin must be connected to GND; it's not possible to switch to external trigger config. (by setting the START\_CONFIG bit to 1) and the INT2 pin cannot be used for the digital interrupts. Specific procedures have to be applied to enable/disable the pass-through feature: they are described in Section 6.3.1 and in Section 6.3.2.
- 3. The sensor hub is used with the START\_CONFIG bit of the MASTER\_CONFIG register set to 1 (external trigger): the pass-through feature cannot be used; the INT2 pin has to be connected to the data-ready pin of the external sensor (trigger signal) and the procedure below has to be executed to avoid conflicts with the INT2 line:
  - a) Set the LVLen bit of CTRL6 C register to 1 (to configure the INT2 pin as input pin);
  - b) Configure the external sensors (do not use the pass-through);
  - c) Configure the sensor hub SLAVEx registers;
  - d) Set the START\_CONFIG bit of the MASTER\_CONFIG register to 1;
  - e) Set the MASTER ON bit of the MASTER CONFIG register to 1;
  - f) Set the LVLen bit of CTRL6\_C register to 0.

Examples of external sensors configuration without using the pass-through are given in Section 6.4 and Section 6.5.4.



### 6.3.1 Pass-through feature enable

When the embedded sensor hub functionality is disabled, the pass-through feature can be enabled at any time by setting the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 1.

When the embedded sensor hub functionality is enabled, a specific procedure has to be followed to enable the pass-through feature in order to prevent I<sup>2</sup>C bus arbitration loss:

- a) Set the START\_CONFIG bit of the MASTER\_CONFIG register to 1 in order to disable the sensor hub trigger (external trigger is enabled, but no trigger can be received on the INT2 pin since it's connected to GND);
- b) Wait at least 5 ms (running I<sup>2</sup>C operations will be completed);
- c) Set the MASTER\_ON bit of the MASTER\_CONFIG register to 0 in order to disable the embedded sensor hub;
- Set the START\_CONFIG bit of the MASTER\_CONFIG register to 0 in order to restore the sensor hub trigger;
- e) Set the PULL\_UP\_EN bit of the MASTER\_CONFIG register to 0 in order to disable the I<sup>2</sup>C master pull-up;
- f) Set the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 1 in order to enable the pass-through feature.

### 6.3.2 Pass-through feature disable

The procedure below has to be used in order to disable the pass-through:

- a) Wait for the external microcontroller connected to the main I<sup>2</sup>C line to complete all running I<sup>2</sup>C operations. The pass-through must not be disabled in the middle of an I<sup>2</sup>C transaction;
- b) Set the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 0.

At this point the internal I<sup>2</sup>C master pull-up can be restored by setting to 1 the PULL\_UP\_EN bit of the MASTER\_CONFIG register, and the auxiliary I<sup>2</sup>C master can be enabled by setting to 1 the MASTER\_ON bit of the MASTER\_CONFIG register.

## 6.4 Sensor hub mode example

74/113

The configuration of the external sensors should be performed using the pass-through feature: this feature can be enabled by setting the PASS\_THROUGH\_MODE bit of the MASTER\_CONFIG register to 1 and implements a direct access to the external sensor registers, allowing quick configuration.

The code provided below gives a basic routine to configure the LSM6DS3 in sensor hub mode. Furthermore, this sequence configures the LIS3MDL external magnetometer sensor (refer to the datasheet for additional details) in continuous-conversion mode and reads the magnetometer output registers, saving their values in the SENSORHUB1\_REG to SENSORHUB6\_REG registers. The pass-through feature is not used in this example.

```
    Write 80h into FUNC_CFG_ADDRESS  // Enable access to embedded functions registers
    Write 38h into SLV0_ADD  // Enable write operation (rw_0=0)
```

DocID027415 Rev 2

3	Write 22h into SLV0_SUBADD	// 22h is the LIS3MDL register to be written
4	Write 00h into DATAWRITE_SRC_MODE_SUB_SLV0	// 00h is the value to be written in register 22h of // LIS3MDL to configure it in continuous // conversion mode
5	Write 00h into FUNC_CFG_ADDRESS	// Disable access to embedded functions registers
6	Write 3Ch into CTRL10_C	// Enable embedded functions
7	Write 09h into MASTER_CONFIG	// Enable internal pull-up on SDx/SCx lines // Sensor hub trigger signal is XL Data Ready // Enable auxiliary I <sup>2</sup> C master
8	Write 80h into CTRL1_XL	// Turn on the accelerometer (for trigger signal)
9	Write 38h into CTRL10_C	// Disable embedded functions
10	Write 00h into MASTER_CONFIG	// Disable auxiliary I <sup>2</sup> C master
11	Write 00h into CTRL1_XL	// Turn off the accelerometer
12	Write 80h into FUNC_CFG_ADDRESS	// Enable access to embedded functions registers
13	Write 39h into SLV0_ADD	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1)
14	Write 28h into SLV0_SUBADD	// 28h is the first LIS3MDL output register to be // read
15	Write 06h into SLAVE0_CONFIG	// No decimation // 1 external sensor connected // Number of registers to read = 6
16	Write 00h into FUNC_CFG_ADDRESS	// Disable access to embedded functions registers
17	Write 3Ch into CTRL10_C	// Enable embedded functions
18	Write 09h into MASTER_CONFIG	// Enable internal pull-up on SDx/SCx lines // Sensor hub trigger signal is XL Data Ready // Enable auxiliary I <sup>2</sup> C master
19	Write 80h into CTRL1_XL	// Turn on the accelerometer (for trigger signal)

## 6.5 Magnetometer hard-iron / soft-iron correction

The LSM6DS3 device supports the data acquisition of an external magnetometer with soft-iron and hard-iron correction features. For this purpose, it is required to set the MASTER\_ON bit of the MASTER\_CONFIG register to 1 to enable the sensor hub mode, to associate the external magnetometer to slave 0 registers (SLV0\_ADD, SLV0\_SUBADD and SLAVE0\_CONFIG) and to set the Slave0\_numop field of SLAVE0\_CONFIG to 6.

The FUNC\_EN bit of CTRL10\_C register has to be set to 1 in order to enable the embedded ironing functionalities. Then, distortion correction algorithms can be enabled as described in *Table 49*: the IRON\_EN bit of MASTER\_CONFIG and the SOFT\_EN bit of CTRL9\_XL are used to enable hard-iron correction only or both hard-iron and soft-iron corrections. In the latter case, both calibrated (hard-iron & soft-iron) and uncalibrated (soft-iron only) magnetometer data are available.



CTRL9_XL SOFT bit	MASTER_CONFIG IRON_EN bit	Ironing configuration
0	0	No correction applied
0	1	Hard-iron only
1	1	Hard-iron + soft-iron corrections

Table 49. Ironing configuration

### 6.5.1 Hard-iron correction

Hard-iron distortion is normally generated by ferromagnetic material with permanent magnetic fields that are part of the object (e.g. a tablet) in use; these materials could be permanent magnets or magnetized iron or steel. They are time invariant and deform the local geomagnetic field with different offset on different directions.

Generally, if the user performs many 3D rotations of the object in an ideal environment (no hard-iron/soft-iron distortion) and plots the collected magnetic sensor raw data, the result will be a perfect sphere with no offset. The hard-iron distortion effect is to offset the sphere along the x, y and z axes; in the x-y plane, the hard-iron distortion is identified by an offset of the origin of the ideal circle from (0, 0), as shown in *Figure 25*.

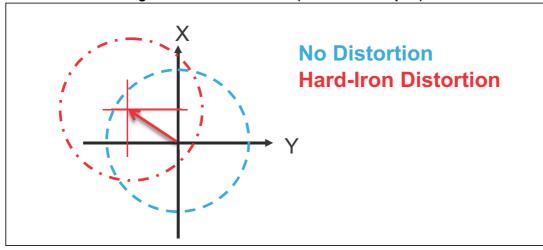


Figure 25. Hard-iron effect (X-Y 2D scatter plot)

In the LSM6DS3 device, the 3x1 hard-iron vector containing the X, Y, Z magnetic offset values calculated by the user have to be indicated in dedicated registers: the MAG\_OFFX\_L and MAG\_OFFX\_H registers are dedicated to the X-axis offset, the MAG\_OFFY\_L and MAG\_OFFY\_H registers are dedicated to the Y-axis offset, the MAG\_OFFZ\_L and MAG\_OFFZ\_H registers are dedicated to the Z-axis offset. These registers values are expressed as a 16-bit word in two's complement; the sensitivity [LSB/Gauss] to be applied to calculate the hard-iron register values corresponds to that of the external magnetometer.

The hard-iron registers are accessible when the FUNC\_CFG\_EN bit of the FUNC\_CFG\_ACCESS register is set to 1. In order to enable the hard-iron correction algorithm, it is necessary to set to 1 both the FUNC\_EN bit of the CTRL10\_C register and the IRON\_EN bit of the MASTER\_CONFIG register (*Table 49*).



#### 6.5.2 Soft-iron correction

Soft-iron distortion is generated by magnetically soft materials or current carrying PCB traces. While the hard-iron distortion is constant regardless of the orientation, the soft-iron distortion changes with the orientation of the object in the Earth's field. Basically, the local geomagnetic field is deformed with different gain on different directions.

The effect of the soft-iron distortion is to make the ideal full round sphere become a tilted ellipsoid; in the x-y plane, the soft-iron distortion is identified by a tilted ellipse with the origin in (0, 0), as shown in *Figure 26*.

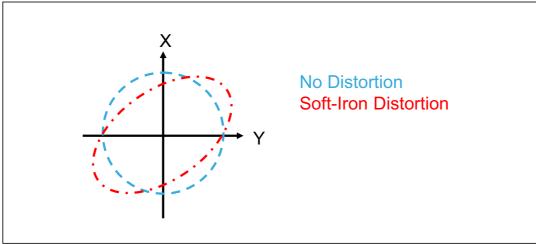


Figure 26. Soft-iron effect (X-Y 2D scatter plot)

In the LSM6DS3 device, the 3x3 soft-iron rotation matrix calculated by the user has to be indicated in 9 dedicated registers: MAG\_SI\_XX, MAG\_SI\_XY, MAG\_SI\_XZ, MAG\_SI\_YX, MAG\_SI\_YY, MAG\_SI\_YZ, MAG\_SI\_ZX, MAG\_SI\_ZY, MAG\_SI\_ZZ. These register values are expressed as an 8-bit word in sign-module format; for these registers 1 LSB corresponds to 1/8, so the matrix parameters calculated by the user must be multiplied by 8 before writing them in the soft-iron registers.

The soft-iron registers are accessible when the FUNC\_CFG\_EN bit of the FUNC\_CFG\_ACCESS register is set to 1. In order to enable the soft-iron correction algorithm it is necessary to set to 1 the FUNC\_EN bit of the CTRL10\_C register, the IRON\_EN bit of the MASTER\_CONFIG register and the SOFT\_EN bit of the CTRL9\_XL register (*Table 49*).

### 6.5.3 Getting compensated magnetometer data

The status of magnetometer data acquisition and hard-iron/soft correction can be checked using the FUNC\_SRC register:

- SENSORHUB\_END\_OP bit is set high when the sensor hub routine is completed. The
  acquired magnetometer raw data are available in registers from address 66h
  (OUT\_MAG\_RAW\_X\_L) to 6Bh (OUT\_MAG\_RAW\_Z\_H).
- SI\_END\_OP bit is set high when the execution of the enabled hard-iron and soft-iron algorithms has completed. If the soft-iron correction is enabled, the magnetometer uncalibrated data (with soft-iron only applied) are available in registers from address 4Dh (SENSORHUB13\_REG) to 52h (SENSORHUB18\_REG). The magnetometer calibrated data, with both hard-iron (if enabled) and soft-iron (if enabled) correction are



available in registers from address 2Eh (SENSORHUB1\_REG) to 33h (SENSORHUB6\_REG).

If latch mode is disabled (LIR bit of TAP\_CFG is set to 0), the SENSORHUB\_END\_OP and SI\_END\_OP bits are active only for 1/100 Hz, then they are automatically deasserted. If latch mode is enabled, these two bits are cleared by reading the FUNC SRC register.

The SENSORHUB\_END\_OP signal can be driven to the INT1 interrupt pin by setting to 1 the DRDY\_ON\_INT1 bit of the MASTER\_CONFIG register. The SI\_END\_OP signal can be driven to the INT2 interrupt pin by setting to 1 the INT2\_IRON bit of the MD2\_CFG register.

A schematic representation of hard-iron and soft-iron correction feature is illustrated in *Figure 27* below.

If the soft-iron correction is enabled and the soft-iron registers still have the default zero value, then the magnetometer calibrated data and the magnetometer uncalibrated data will be equal to zero too. As a consequence, when the soft-iron correction is enabled, the soft-iron rotation matrix must be at least initialized to the identity matrix multiplied by 8, setting the value of the MAG\_SI\_XX, MAG\_SI\_YY and MAG\_SI\_ZZ registers to 08h.

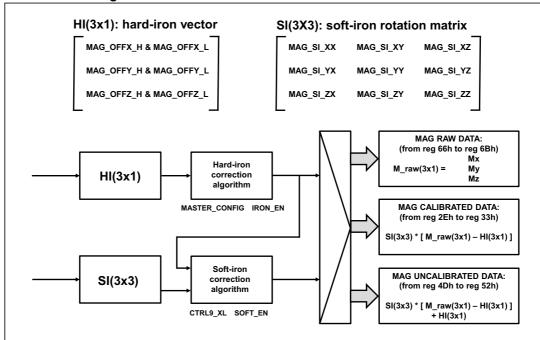


Figure 27. Hard-iron / soft-iron correction block scheme

#### 6.5.4 Ironing example

The following example demonstrates how to define the values to be assigned to hard-iron and soft-iron correction registers starting from the calculated hard-iron vector and soft-iron rotation matrix. This example refers to the usage of the LIS3MDL magnetometer sensor with 4 gauss of configured full-scale (sensitivity = 6842 LSB/gauss).

• Hard-iron (X,Y,Z) offset values vector (gauss):

**577** 

$$HI(3x1) = \begin{bmatrix} -0.335605 \\ 0.126487 \\ -0.114722 \end{bmatrix}$$

These three offset values must be multiplied by the LIS3MDL sensitivity value (6842 LSB/gauss for full-scale = 4 gauss) in order the get the LSB values to be written in the hard-iron correction registers (*Table 50*).

	Offset values [LSB]	Register values				
Х	-2296 (F708h)	MAG_OFFX_H = F7h MAG_OFFX_L = 08h				
Y	+865 (0361h)	MAG_OFFY_H = 03h MAG_OFFY_L = 61h				
Z	-785 (FCEFh)	MAG_OFFZ_H = FCh MAG_OFFZ_L = EFh				

Table 50. Hard-iron register values

• Soft-iron rotation matrix:

$$SI(3x3) = \begin{bmatrix} 1.229006 & 0.173917 & 0.052327 \\ 0.173917 & 1.033307 & -0.130089 \\ 0.052327 & -0.130089 & 1.243645 \end{bmatrix}$$

These soft-iron matrix elements must be multiplied by 8 in order to get the LSB values to be written in the soft-iron correction registers (*Table 51*).

Table 51. Soft-iron register values

	Soft-iron matrix elements	Register values				
XX	+1.229006	MAG_SI_XX = 0Ah				
XY	+0.173917	MAG_SI_XY = 01h				
XZ	+0.052327	MAG_SI_XZ = 00h				
YX	+0.173917	MAG_SI_YX = 01h				
YY	+1.033307	MAG_SI_YY = 08h				
YZ	-0.130089	MAG_SI_YZ = 81h				
ZX	+0.052327	MAG_SI_ZX = 00h				
ZY	-0.130089	MAG_SI_ZY = 81h				
ZZ	+1.243645	MAG_SI_ZZ = 0Ah				



The code provided below gives a basic routine to configure the LIS3MDL external magnetometer sensor (refer to the datasheet for additional details) in continuous-conversion mode, initialize the hard-iron and soft-iron correction registers and read the magnetometer output registers. In this case, the pass-through feature is not used for the magnetometer configuration.

1	Write 80h into FUNC_CFG_ADDRESS	// Enable access to embedded functions registers
2	Write 38h into SLV0_ADD	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable write operation (rw_0=0)
3	Write 22h into SLV0_SUBADD	// 22h is the LIS3MDL register to be written
4	Write 00h into DATAWRITE_SRC_MODE_SUB_SLV0	// 00h is the value to be written in register 22h of // LIS3MDL to configure it in continuous // conversion mode
5	Write 00h into FUNC_CFG_ADDRESS	// Disable access to embedded functions registers
6	Write 3Ch into CTRL10_C	// Enable embedded functions
7	Write 09h into MASTER_CONFIG	// Enable internal pull-up on SDx/SCx lines // Sensor hub trigger signal is XL Data Ready // Enable auxiliary I <sup>2</sup> C master
8	Write 80h into CTRL1_XL	// Turn on the accelerometer (for trigger signal)
9	Write 38h into CTRL10_C	// Disable embedded functions
10	Write 00h into MASTER_CONFIG	// Disable auxiliary I <sup>2</sup> C master
11	Write 00h into CTRL1_XL	// Turn off the accelerometer
12	Write 80h into FUNC_CFG_ADDRESS	// Enable access to embedded functions registers
	Write 80h into FUNC_CFG_ADDRESS Write 39h into SLV0_ADD	// Enable access to embedded functions registers // LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1)
13		// LIS3MDL slave address = 0011100b (if SDO=0)
13 14	Write 39h into SLV0_ADD	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be
13 14 15	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected
13 14 15 16	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6
13 14 15 16 17	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG  Write F7h into MAG_OFFX_H	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6 // X offset value initialization
13 14 15 16 17 18	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG  Write F7h into MAG_OFFX_H  Write 08h into MAG_OFFX_L	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6 // X offset value initialization // X offset value initialization
13 14 15 16 17 18	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG  Write F7h into MAG_OFFX_H Write 08h into MAG_OFFX_L Write 03h into MAG_OFFY_H	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6 // X offset value initialization // Y offset value initialization
13 14 15 16 17 18 19	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG  Write F7h into MAG_OFFX_H  Write 08h into MAG_OFFX_L  Write 03h into MAG_OFFY_H  Write 61h into MAG_OFFY_L	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6 // X offset value initialization // X offset value initialization // Y offset value initialization // Y offset value initialization
13 14 15 16 17 18 19 20	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG  Write F7h into MAG_OFFX_H Write 08h into MAG_OFFX_L Write 03h into MAG_OFFY_H Write 61h into MAG_OFFY_L Write FCh into MAG_OFFZ_H	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6 // X offset value initialization // X offset value initialization // Y offset value initialization // Y offset value initialization // Z offset value initialization
13 14 15 16 17 18 19 20 21	Write 39h into SLV0_ADD  Write 28h into SLV0_SUBADD  Write 06h into SLAVE0_CONFIG  Write F7h into MAG_OFFX_H Write 08h into MAG_OFFX_L Write 03h into MAG_OFFY_H Write 61h into MAG_OFFY_L Write FCh into MAG_OFFZ_L Write FCh into MAG_OFFZ_L	// LIS3MDL slave address = 0011100b (if SDO=0) // Enable read operation (rw_0=1) // 28h is the first LIS3MDL output register to be // read // No decimation // 1 external sensor connected // Number of registers to read = 6 // X offset value initialization // Y offset value initialization // Y offset value initialization // Y offset value initialization // Z offset value initialization // Z offset value initialization

```
25 Write 01h into MAG_SI_YX
                                              // YX soft-iron element
26 Write 08h into MAG SI YY
                                              // YY soft-iron element
27 Write 81h into MAG SI YZ
                                              // YZ soft-iron element
28 Write 00h into MAG SI ZX
                                              // ZX soft-iron element
29 Write 81h into MAG SI ZY
                                              // ZY soft-iron element
30 Write 0Ah into MAG SI ZZ
                                              // ZZ soft-iron element
31 Write 00h into FUNC_CFG_ADDRESS
                                              // Disable access to embedded functions registers
32 Write 3Ch into CTRL10 C
                                              // Enable embedded functions
                                              // Enable internal pull-up on SDx/SCx lines
                                              // Sensor hub trigger signal is XL data-ready
33 Write 0Bh into MASTER_CONFIG
                                              // Enable hard-iron correction
                                              // Enable auxiliary I<sup>2</sup>C master
34 Write 3Ch into CTRL9 XL
                                              // Enable soft-iron correction
                                              // Turn on the accelerometer (for trigger signal)
35 Write 80h into CTRL1_XL
```

The acquired magnetometer raw data are available in registers from address 66h (OUT\_MAG\_RAW\_X\_L) to 6Bh (OUT\_MAG\_RAW\_Z\_L).

The magnetometer uncalibrated data (with soft-iron only applied) are available in registers from address 4Dh (SENSORHUB13\_REG) to 52h (SENSORHUB18\_REG).

The magnetometer calibrated data, with both hard-iron and soft-iron correction are available in registers from address 2Eh (SENSORHUB1\_REG) to 33h (SENSORHUB6\_REG).

## 7 First-in first-out (FIFO) buffer

In order to limit intervention by the host processor and facilitate post-processing data for event recognition, the LSM6DS3 embeds an 8 kbyte first-in first-out buffer (FIFO).

The FIFO can be configured to store the following data:

- gyroscope sensor data;
- accelerometer sensor data;
- external sensors (connected to sensor hub interface) data;
- step counter and timestamp data;
- temperature sensor data.

Saving data in the FIFO buffer is based on four 'FIFO data set' consisting of 6 bytes each:

- The 1<sup>st</sup> FIFO data set is reserved for gyroscope data;
- The 2<sup>nd</sup> FIFO data set is reserved for accelerometer data;
- The 3<sup>rd</sup> FIFO data set is reserved for the external sensor data stored in the registers from SENSORHUB1\_REG to SENSORHUB6\_REG (see Section 6.2.9 for details on the SENSORHUBx\_REG);
- The 4<sup>th</sup> FIFO data set can be alternately associated to the external sensor data stored in the registers from SENSORHUB7\_REG to SENSORHUB12\_REG, to the step counter and timestamp info, or to the temperature sensor data.

All these data sets can be stored in FIFO at different ODRs, by setting the decimation factors in the FIFO\_CTRL3 and FIFO\_CTRL4 registers. Decimation factors are also used to select which FIFO data sets have to be stored in FIFO.

Five different FIFO operating modes can be chosen through the FIFO\_MODE\_[2:0] bits of the FIFO CTRL5 register:

- · Bypass mode;
- FIFO mode:
- Continuous mode;
- Continuous-to-FIFO mode;
- Bypass-to-Continuous mode.

Note: When the FIFO is used, the IF\_INC bit of the CTRL3\_C register must be equal to 1.

Data are retrieved from the FIFO through two dedicated registers: FIFO\_DATA\_OUT\_L and FIFO\_DATA\_OUT\_H. In this way, data can be read either from the FIFO (at a slower ODR) or from the device output registers (at the normal ODR).

To monitor the FIFO status (full, empty, number of sample stored, etc), four dedicated registers are available: FIFO\_STATUS1, FIFO\_STATUS2, FIFO\_STATUS3, FIFO\_STATUS4.

Programmable FIFO thresholds can be set in FIFO\_CTRL1 and FIFO\_CTRL2 using the FTH [11:0] bits.

FIFO full, FIFO threshold and FIFO overrun events can be enabled to generate dedicated interrupts on the two interrupt pins (INT1 and INT2) through the INT1\_FULL\_FLAG, INT1\_FTH and INT1\_OVR bits of the INT1\_CTRL register, and through the INT2\_FULL\_FLAG, INT2\_FTH and INT2\_OVR bits of the INT2\_CTRL register.



In order to increase the number of samples which can be stored in the FIFO, it is also possible to store (as 1<sup>st</sup> FIFO data set) only the 8 most significant bits of the accelerometer and gyroscope data by setting the bit ONLY HIGH DATA in the FIFO CTRL4 register.

Writing data in the FIFO can be triggered by the accelerometer/gyroscope data-ready; it can also be triggered by the sensor hub data-ready (corresponding to the behavior of the SENSORHUB\_END\_OP bit of FUNC\_SRC register): in this case the DATA\_VALID\_SEL\_FIFO bit of the MASTER\_CONFIG register must be set to 1. Moreover, if DATA\_VALID\_SEL\_FIFO is set to 0 and the TIMER\_PEDO\_FIFO\_DRDY bit of the FIFO CTRL2 register is set to 1, the data are stored in FIFO every time a step is detected.

### 7.1 FIFO registers

The FIFO buffer is managed by:

- five control registers (from FIFO\_CTRL1 to FIFO\_CTRL5);
- four status registers (from FIFO\_STATUS1 to FIFO\_STATUS4);
- two data output registers (FIFO DATA OUT L and FIFO DATA OUT H);
- some additional bits to enable threshold usage (STOP\_ON\_FTH) and route FIFO full, threshold or overrun events to the two interrupt lines (bits: INT1\_FULL\_FLAG, INT2\_FULL\_FLAG, INT1\_FTH, INT2\_FTH, INT1\_FIFO\_OVR, INT2\_FIFO\_OVR).

### 7.1.1 FIFO CTRL1 (06h)

The FIFO\_CTRL1 register contains the lower part of the 12-bit FIFO threshold level. For the complete threshold level configuration, consider also the FTH\_[11:8] bits of the FIFO\_CTRL2 register. The value of the FIFO threshold level is referred to data having 16-bit format.

The FIFO watermark flag (FTH bit in FIFO\_STATUS2 register) rises when the number of bytes stored in the FIFO is equal to or higher than the threshold level.

In order to limit the FIFO depth to the watermark level, the STOP\_ON\_FTH bit must be set to 1 in the CTRL4 C register.

Table 52. FIFO\_CTRL1 register

b7	b6	b5	b4	b3	b2	b1	b0
FTH_7	FTH_6	FTH_5	FTH_4	FTH_3	FTH_2	FTH_1	FTH_0

### 7.1.2 FIFO\_CTRL2 (07h)

Table 53. FIFO\_CTRL2 register

b7	b6	b5	b4	b3	b2	b1	b0
MER_PE )_FIFO_ EN	TIMER_PE DO_FIFO_ DRDY	0	0	FTH_11	FTH_10	FTH_9	FTH_8

 TIMER\_PEDO\_FIFO\_EN enables step counter and timestamp data to be stored as the 4<sup>th</sup> FIFO data set. The content of the 6 bytes stored in the FIFO when this bit is set to 1



is described in Section 7.8.

- TIMER\_PEDO\_FIFO\_DRDY. When this bit is set to 1 and the DATA\_VALID\_SEL\_FIFO bit in the MASTER\_CONFIG register is set to 0, all the data are stored in the FIFO every time a new step has been detected by the step counter. See Section 7.3 for details.
- FTH\_[11:8] contains the upper part of the FIFO threshold level. For the complete threshold level configuration, consider also the FTH\_[7:0] bits in the FIFO\_CTRL1 register.

### 7.1.3 FIFO\_CTRL3 (08h)

The FIFO\_CTRL3 register contains the accelerometer and gyroscope FIFO decimation factors, used to choose if the data of these sensors have to be stored in the FIFO and at which rate they are stored.

When the DEC\_FIFO\_GYRO[2:0] bits are set to 000b, the 1<sup>st</sup> FIFO data set (reserved for gyroscope data) is not stored in the FIFO. When the DEC\_FIFO\_XL[2:0] bits are set to 000b, the 2<sup>nd</sup> FIFO data set (reserved for accelerometer data) is not stored in the FIFO.

Note: It's required to set at least one of the four decimation factors to 1 (no decimation).

Table 54. FIFO\_CTRL3 register

b7	b6	b5	b4	b3	b2	b1	b0
0	0	DEC_FIFO _GYRO2	DEC_FIFO _GYRO1	DEC_FIFO _GYRO0	DEC_FIFO _XL2	DEC_FIFO _XL1	DEC_FIFO _XL0

Table 55. Gyroscope FIFO decimation setting

DEC_FIFO_GYRO [2:0]	Configuration
000	Gyroscope sensor not in FIFO
001	No decimation
010	Decimation with factor 2
011	Decimation with factor 3
100	Decimation with factor 4
101	Decimation with factor 8
110	Decimation with factor 16
111	Decimation with factor 32

DEC\_FIFO\_XL [2:0] Configuration 000 Accelerometer sensor not in FIFO 001 No decimation 010 Decimation with factor 2 011 Decimation with factor 3 100 Decimation with factor 4 101 Decimation with factor 8 110 Decimation with factor 16 111 Decimation with factor 32

Table 56. Accelerometer FIFO decimation setting

### 7.1.4 FIFO\_CTRL4 (09h)

The FIFO\_CTRL4 register contains the decimation factors used to define at which data rate the data associated to the 3<sup>rd</sup> FIFO and the 4<sup>th</sup> FIFO data sets are stored in the FIFO.

When the DEC\_DS3\_FIFO[2:0] bits are set to 000b, the 3<sup>rd</sup> FIFO data set is not stored in the FIFO. When the DEC\_DS4\_FIFO[2:0] bits are set to 000b, the 4<sup>th</sup> FIFO data set is not stored in the FIFO.

Note: It's required to set at least one of the four decimation factors to 1 (no decimation).

The FIFO\_CTRL4 register also contains the bit ONLY\_HIGH\_DATA, which allows storing in the FIFO only the upper part (Most Significant Byte) of accelerometer and gyroscope data, in order to increase the maximum number of accelerometer and gyroscope samples in the FIFO. See *Section 7.7* for more details about this functionality.

Table 57. FIFO\_CTRL4 register

b7	b6	b5	b4	b3	b2	b1	b0
0	ONLY_HIGH _DATA	DEC_DS4 _FIFO2	DEC_DS4 _FIFO1	DEC_DS4 _FIFO0	DEC_DS3 _FIFO2	DEC_DS3 _FIFO1	DEC_DS3 _FIFO0

Table 58. 3<sup>rd</sup> FIFO data set decimation setting

DEC_DS3_FIFO [2:0]	Configuration
000	3 <sup>rd</sup> FIFO data set not in FIFO
001	No decimation
010	Decimation with factor 2
011	Decimation with factor 3
100	Decimation with factor 4
101	Decimation with factor 8
110	Decimation with factor 16
111	Decimation with factor 32



DEC\_DS4\_FIFO [2:0] Configuration 4<sup>th</sup> FIFO data set not in FIFO 000 001 No decimation 010 Decimation with factor 2 011 Decimation with factor 3 100 Decimation with factor 4 101 Decimation with factor 8 110 Decimation with factor 16 111 Decimation with factor 32

Table 59. 4<sup>th</sup> FIFO data set decimation setting

### 7.1.5 FIFO\_CTRL5 (0Ah)

The FIFO\_CTRL5 register contains the FIFO operating mode bits (FIFO\_MODE\_[2:0]) and the FIFO output data rate bits (ODR\_FIFO\_[3:0]).

FIFO operating modes (Table 62) are described in Section 7.2.

When the internal trigger (accelerometer/gyroscope data-ready) is used, the ODR\_FIFO\_[3:0] bits define the maximum data rate at which data are stored in FIFO. Data can be stored in FIFO at a lower data rate using the FIFO decimation factors. For more information about FIFO trigger and FIFO ODR configuration see *Section 7.3*.

Note: When the FIFO is used, the IF\_INC bit of the CTRL3\_C register must be equal to 1.

Table 60. FIFO\_CTRL5 register

b7	b6	b5	b4	b3	b2	b1	b0
0	ODR	ODR	ODR	ODR	FIFO	FIFO	FIFO
	_FIFO_3	_FIFO_2	_FIFO_1	_FIFO_0	_MODE_2	_MODE_1	_MODE_0

Table 61. FIFO ODR selection setting

ODR_FIFO [3:0]	Configuration
0000	FIFO disabled
0001	FIFO ODR is set to 12.5 Hz
0010	FIFO ODR is set to 26 Hz
0011	FIFO ODR is set to 52 Hz
0100	FIFO ODR is set to 104 Hz
0101	FIFO ODR is set to 208 Hz
0110	FIFO ODR is set to 416 Hz
0111	FIFO ODR is set to 833 Hz
1000	FIFO ODR is set to 1.66 kHz
1001	FIFO ODR is set to 3.33 kHz
1010	FIFO ODR is set to 6.66 kHz



FIFO_MODE [2:0]	Configuration
000	Bypass mode. FIFO disabled.
001	FIFO mode. Stops collecting data when FIFO is full.
010	Reserved
011	Continuous mode until trigger is deasserted, then FIFO mode.
100	Bypass mode until trigger is deasserted, then Continuous mode.
101	Reserved
110	Continuous mode. If the FIFO is full, the new sample overwrites the older one.
111	Reserved

Table 62. FIFO mode selection

### 7.1.6 FIFO\_STATUS1 (3Ah)

The FIFO\_STATUS1 register, together with the FIFO\_STATUS2 register, provides information about the number of samples stored in the FIFO. Each sample is represented as 16-bit data.

Table 63. FIFO\_STATUS1 register

b7	b6	b5	b4	b3	b2	b1	b0
DIFF_							
FIFO_7	FIFO_6	FIFO_5	FIFO_4	FIFO_3	FIFO_2	FIFO_1	FIFO_0

### 7.1.7 FIFO\_STATUS2 (3Bh)

The FIFO\_STATUS2 register, together with the FIFO\_STATUS1 register, provides information about the number of samples stored in the FIFO and about the current status (threshold, overrun, full, empty) of the FIFO buffer.

Table 64. FIFO\_STATUS2 register

b7	b6	b5	b4	b3	b2	b1	b0
FTH	FIFO_ OVER_RUN	FIFO_ FULL	FIFO_ EMPTY	DIFF_ FIFO_11	DIFF_ FIFO_10	DIFF_ FIFO_9	DIFF_ FIFO_8

- FTH represents the watermark status. This bit is set high when the number of bytes already stored in the FIFO is equal to or higher than the watermark level (each sample is represented as 16-bit data). The watermark status can be driven to the two interrupt pins by setting to 1 the INT1\_FTH bit of the INT1\_CTRL register or the INT2\_FTH bit of the INT2\_CTRL register.
- FIFO\_OVER\_RUN is set high when the FIFO is completely filled and at least one sample has already been overwritten to store the new data. This signal can be driven to the two interrupt pins by setting to 1 the INT1\_FIFO\_OVR bit of the INT1\_CTRL register or the INT2\_FIFO\_OVR bit of the INT2\_CTRL register.
- FIFO\_FULL is set high when the next set of data that will be stored in FIFO will make the FIFO full. This signal can be driven to the two interrupt pins by setting to 1 the



INT1\_FULL\_FLAG bit of the INT1\_CTRL register or the INT2\_FULL\_FLAG bit of the INT2\_CTRL register.

- FIFO\_EMPTY is set high when the FIFO is empty.
- DIFF\_FIFO\_[11:8] contains the upper part of the number of unread words (16-bit data) stored in the FIFO. The lower part is represented by the DIFF\_FIFO\_[7:0] bits in FIFO\_STATUS1. The value of DIFF\_FIFO\_[11:0] field corresponds to the number of samples in the FIFO (each sample is represented as 16-bit data). When a FIFO overrun event occurs (FIFO\_OVER\_RUN bit is set high), the value of the DIFF\_FIFO\_[11:0] field is set to 0.

Register content is updated synchronously to the FIFO write and read operation, as illustrated in *Table 65*.

Table 65. FIFO\_STATUS2 behavior (case with one sensor in FIFO, STOP\_ON\_FTH = 0)


FIFO_OVER_ RUN	FIFO_FULL	FIFO_EMPTY	DIFF_FIFO_ [11:0]	Number of FIFO samples	FIFO trigger timing
0	0	1	0	0	t0
0	0	0	3	3	t1
0	0	0	6	6	t2
0	0	0	4092	4092	t_full - 2
0	1	0	4095	4095	t_full - 1
1	1	0	0	4096 (old sample overwritten)	t_full

### 7.1.8 FIFO\_STATUS3 (3Ch)

The FIFO\_STATUS3 register, together with FIFO\_STATUS4 register, specifies which axis of which sensor data will be read at the next reading. For more information on how to retrieve data from the FIFO see Section 7.5.

Table 66. FIFO\_STATUS3 register

b7	b6	b5	b4	b3	b2	b1	b0
FIFO_ PATTERN							
_7	_6	_5	_4	_3	_2	_1	_0



### 7.1.9 FIFO\_STATUS4 (3Dh)

The FIFO\_STATUS4 register, together with the FIFO\_STATUS3 register, specifies which axis of which sensor data will be read at the next reading. For more information on how to retrieve data from the FIFO see *Section 7.5*.

Table 67. FIFO\_STATUS4 register

b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	FIFO_ PATTERN_9	FIFO_ PATTERN_8

### 7.1.10 FIFO\_DATA\_OUT\_L (3Eh)

The FIFO\_DATA\_OUT\_L register is the least significant byte of the FIFO output data. The most significant byte is stored in the FIFO\_DATA\_OUT\_H register. For more information on how to retrieve data from the FIFO, see Section 7.4.

Table 68. FIFO\_DATA\_OUT\_L register

b7	b6	b5	b4	b3	b2	b1	b0
DATA_							
OUT_FIFC	OUT_FIFO						
_L_7	_L_6	_L_5	_L_4	_L_3	_L_2	_L_1	_L_0

### 7.1.11 FIFO\_DATA\_OUT\_H (3Fh)

The FIFO\_DATA\_OUT\_H register is the most significant byte of the FIFO output data. The least significant byte is stored in the FIFO\_DATA\_OUT\_L register. For more information on how to retrieve data from the FIFO, see *Section 7.4*.

Table 69. FIFO\_DATA\_OUT\_H register

b7	b6	b5	b4	b3	b2	b1	b0
DATA_							
OUT_FIFO							
_H_7	_H_6	_H_5	_H_4	_H_3	_H_2	_H_1	_H_0

### 7.2 FIFO modes

The LSM6DS3 FIFO buffer can be configured to operate in five different modes selectable through the FIFO\_MODE\_[2:0] field of the FIFO\_CTRL5 register. The available configurations ensure a high level of flexibility and extend the number of functions usable in application development.

Bypass, FIFO, Continuous, Continuous-to-FIFO and Bypass-to-Continuous modes are described in the following paragraphs.

Note: When the FIFO is used, the IF\_INC bit of the CTRL3\_C register must be equal to 1.



#### 7.2.1 Bypass mode

When Bypass mode is enabled, the FIFO is not used, the buffer content is cleared, and it remains empty until another mode is selected.

Bypass mode is selected when the FIFO\_MODE\_[2:0] bits are set to 000b. When this mode is enabled, the FIFO\_STATUS2 register contains the value 10h (FIFO empty).

Bypass mode must be used in order to stop and reset the FIFO buffer when a different mode is operating. Note that placing the FIFO buffer into Bypass mode, the whole buffer content is cleared.

After Bypass mode is set, it's necessary to wait at least 30 µs before setting a different FIFO operating mode.

#### 7.2.2 FIFO mode

90/113

In FIFO mode, the buffer continues filling until it becomes full. Then it stops collecting data and the FIFO content remains unchanged until a different mode is selected.

Follow these steps for FIFO mode configuration (if accelerometer/gyroscope data-ready is used as FIFO trigger):

- Choose the decimation factor for each sensor through the decimation bits in the FIFO CTRL3 and FIFO CTRL4 registers (see Section 7.3 for details);
- Choose the FIFO ODR through the ODR FIFO [3:0] bits in the FIFO CTRL5 register;
- Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL5 register to 001b to enable the FIFO mode.

When this mode is selected, the FIFO starts collecting data. The FIFO STATUS1 and FIFO\_STATUS2 registers are updated according to the number of samples stored.

When the next stored set of data will make the FIFO full, the FIFO FULL bit of the FIFO STATUS2 register is set to 1 and no more data are stored in the FIFO buffer. Data can be retrieved after the FIFO\_FULL event, by reading the FIFO\_DATA\_OUT\_L and FIFO\_DATA\_OUT\_H registers for the number of times specified by the DIFF\_FIFO\_[11:0] bits of the FIFO\_STATUS1 and FIFO\_STATUS2 registers.

Using the FTH bit of the FIFO STATUS2 register, data can also be retrieved when a threshold level (FTH\_[11:0] in FIFO\_CTRL1 and FIFO\_CTRL2 registers) is reached, if the application requires a lower number of samples in the FIFO.

If the STOP\_ON\_FTH bit of the CTRL4\_C register is set to 1, the FIFO size is limited to the value of the FTH\_[11:0] bits in the FIFO\_CTRL1 and FIFO\_CTRL2 registers: in this case, the FIFO\_FULL bit of the FIFO\_STATUS2 register is set high when the number of samples in FIFO will reach or exceed the FTH [11:0] value on the next FIFO write operation.

In case the FIFO is read before the FIFO\_FULL event, it must not be completely emptied in order to avoid the misalignment of the data read from it. At least one complete FIFO pattern has to be left in the FIFO buffer (do not read it); it will be the first data read in the next read operation.

In case FIFO gets emptied after the FIFO OUT registers are read, a FIFO reset (through Bypass mode setting) is needed.

Communication speed is not very important in FIFO mode because the data collection is stopped and there is no risk of overwriting data already acquired. Before restarting the FIFO

DocID027415 Rev 2



mode, it is necessary to set to Bypass mode first, in order to completely clear the FIFO content.

Figure 28 shows an example of FIFO mode usage. In the example X-Y-Z data (green cells indicate the sample number) from just one sensor are stored in the FIFO. In these conditions, the number of samples that can be stored in the FIFO buffer is 4095: when the FIFO buffer is completely filled, the FIFO\_FULL bit of the FIFO\_STATUS2 register is set high.

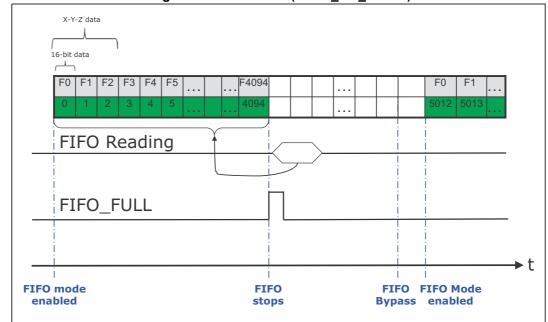


Figure 28. FIFO mode (STOP\_ON\_FTH=0)

#### 7.2.3 Continuous mode

In Continuous mode, the FIFO continues filling. When the buffer is full, the FIFO index restarts from the beginning, and older data are replaced by the new data. The oldest values continue to be overwritten until a read operation frees FIFO slots. The host processor's reading speed is important in order to free slots faster than new data is made available. To stop this configuration, the Bypass mode must be selected.

Follow these steps for Continuous mode configuration (if accelerometer/gyroscope data-ready is used as FIFO trigger):

- 1. Choose the decimation factor for each sensor through the decimation bits in the FIFO CTRL3 and FIFO CTRL4 registers (see *Section 7.3* for details);
- 2. Choose the FIFO ODR through the ODR\_FIFO\_[3:0] bits in the FIFO\_CTRL5 register;
- Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL5 register to 110b to enable FIFO
  Continuous mode.

When this mode is selected, the FIFO collects data continuously. The FIFO\_STATUS1 and FIFO\_STATUS2 registers are updated according to the number of samples stored.

When the next stored set of data will make the FIFO full, the FIFO\_FULL bit of the FIFO\_STATUS2 register is set to 1. The FIFO\_OVER\_RUN bit in the FIFO\_STATUS2 register indicates when at least one sample has been overwritten to store the new data.



Data can be retrieved after the FIFO\_FULL event, by reading the FIFO\_DATA\_OUT\_L and FIFO\_DATA\_OUT\_H registers for a number of times specified by the DIFF\_FIFO\_[11:0] bits in the FIFO\_STATUS1 and FIFO\_STATUS2 registers.

Using the FTH bit of the FIFO\_STATUS2 register, data can also be retrieved when a threshold level (FTH [11:0] in FIFO CTRL1 and FIFO CTRL2 registers) is reached.

If the STOP\_ON\_FTH bit of CTRL4\_C register is set to 1, the FIFO size is limited to the value of the FTH\_[11:0] bits in the FIFO\_CTRL1 and FIFO\_CTRL2 registers: in this case, the FIFO\_FULL bit of the FIFO\_STATUS2 register is set high when the number of samples in FIFO will reach the FTH [11:0] value on the next FIFO write operation.

In case the FIFO is read before the FIFO\_FULL event, it must not be completely emptied in order to avoid the misalignment of the data read from it. At least one complete FIFO pattern has to be left in the FIFO buffer (do not read it); it will be the first data read in the next read operation.

In case FIFO gets emptied after the FIFO\_OUT registers are read, a FIFO reset (through Bypass mode setting) is needed.

It is recommended to read faster than 1\*ODR at least three times the number of the enabled FIFO data set, in order to free FIFO slots for the new data: this allows avoiding loss of data.

Figure 29 shows an example of the Continuous mode usage. In the example, X-Y-Z data (green cells indicate the sample number) from just one sensor are stored in the FIFO and the FIFO samples are read faster than 1 \* ODR, so that no data is lost. In these conditions, the number of samples stored is 4095.

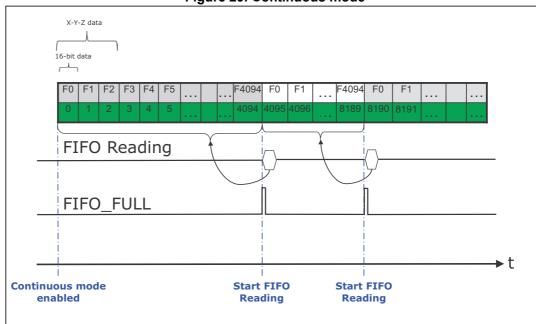


Figure 29. Continuous mode

#### 7.2.4 Continuous-to-FIFO mode

This mode is a combination of the Continuous and FIFO modes previously described. In Continuous-to-FIFO mode, the FIFO buffer starts operating in Continuous mode and switches to FIFO mode when an event condition occurs.

The event condition can be one of the following:

- Significant Motion: event detection has to be configured and the INT1\_SIG\_MOT bit of the INT1\_CTRL register has to be set to 1;
- Tilt: event detection has to be configured and the INT2\_TILT bit of the MD2\_CFG register has to be set to 1;
- Step detection: event detection has to be configured and the INT1\_STEP\_DETECTOR bit of the INT1\_CTRL register has to be set to 1;
- Single tap: event detection has to be configured and the INT2\_SINGLE\_TAP bit of the MD2\_CFG register has to be set to 1;
- Double tap: event detection has to be configured and the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register has to be set to 1;
- Free-fall: event detection has to be configured and the INT2\_FF bit of the MD2\_CFG register has to be set to 1;
- Wake-up: event detection has to be configured and the INT2\_WU bit of the MD2\_CFG register has to be set to 1;
- 6D: event detection has to be configured and the INT2\_6D bit of the MD2\_CFG register has to be set to 1.

Continuous-to-FIFO mode is sensitive to the level of the interrupt signal and not to the edge, which means that if Continuous-to-FIFO is in FIFO mode and the interrupt condition disappears, the FIFO buffer returns to Continuous mode. It is recommended to latch the interrupt signal used as the FIFO event in order to avoid losing interrupt events (the interrupt signal has to be driven to the interrupt pin so that the latch function takes effect).

In case the FIFO is read before the FIFO\_FULL event, it must not be completely emptied in order to avoid the misalignment of the data read from it. At least one complete FIFO pattern has to be left in the FIFO buffer (do not read it); it will be the first data read in next read operation.

In case FIFO gets emptied after FIFO\_OUT registers are read, a FIFO reset (through Bypass mode setting) is needed.



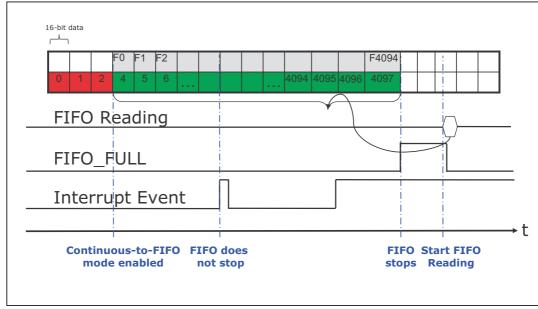


Figure 30. Continuous-to-FIFO mode

Follow these steps for Continuous-to-FIFO mode configuration (if the accelerometer/gyroscope data-ready is used as the FIFO trigger):

- Configure one of the events as previously described;
- 2. Choose the decimation factor for each sensor through the decimation bits in the FIFO\_CTRL3 and FIFO\_CTRL4 registers (see Section 7.3 for details);
- 3. Choose the FIFO ODR through the ODR FIFO [3:0] bits in the FIFO CTRL5 register;
- 4. Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL5 register to 011b to enable FIFO Continuous-to-FIFO mode.

In Continuous-to-FIFO mode the FIFO buffer continues filling; when the next stored set of data will make the FIFO full, the FIFO\_FULL bit is set high.

If the STOP\_ON\_FTH bit of the CTRL4\_C register is set to 1, the FIFO size is limited to the value of the FTH\_[11:0] bits in the FIFO\_CTRL1 and FIFO\_CTRL2 registers: in this case, the FIFO\_FULL bit of the FIFO\_STATUS2 register is set high when the number of samples in FIFO will reach or exceed the FTH [11:0] value on the next FIFO write operation.

When the trigger event occurs, two different cases can be observed:

- 1. If the FIFO buffer is already full (FIFO\_FULL = 1), it stops collecting data at the first sample after the event trigger. The FIFO content is composed of the samples collected before the event.
- 2. If FIFO buffer is not full yet (initial transient), it continues filling until it becomes full (FIFO FULL = 1) and then, if the trigger is still present, it stops collecting data.

Continuous-to-FIFO can be used in order to analyze the history of the samples which have generated an interrupt; the standard operation is to read the FIFO content when the FIFO mode is triggered and the FIFO buffer is full and stopped.

477

### 7.2.5 Bypass-to-Continuous mode

This mode is a combination of the Bypass and Continuous modes previously described. In Bypass-to-Continuous mode, the FIFO buffer starts operating in Bypass mode and switches to Continuous mode when a trigger condition occurs.

The event condition can be one of the following:

- Significant Motion: event detection has to be configured and the INT1\_SIG\_MOT bit of the INT1\_CTRL register has to be set to 1;
- Tilt: event detection has to be configured and the INT2\_TILT bit of the MD2\_CFG register has to be set to 1;
- Step detection: event detection has to be configured and the INT1\_STEP\_DETECTOR bit of the INT1\_CTRL register has to be set to 1;
- Single tap: event detection has to be configured and the INT2\_SINGLE\_TAP bit of MD2 CFG register has to be set to 1;
- Double tap: event detection has to be configured and the INT2\_DOUBLE\_TAP bit of the MD2\_CFG register has to be set to 1;
- Free-fall: event detection has to be configured and the INT2\_FF bit of the MD2\_CFG register has to be set to 1;
- Wake-up: event detection has to be configured and the INT2\_WU bit of the MD2\_CFG register has to be set to 1;
- 6D: event detection has to be configured and the INT2\_6D bit of the MD2\_CFG register has to be set to 1.

Bypass-to-Continuous mode is sensitive to the level of the interrupt signal and not to the edge, which means that if Bypass-to-Continuous is in Continuous mode and the interrupt condition disappears, the FIFO buffer returns to Bypass mode. It is recommended to latch the interrupt signal used as the FIFO event in order to avoid losing data (the interrupt signal has to be driven to the interrupt pin so that the latch function takes effect).

Follow these steps for Bypass-to-Continuous mode configuration (if the accelerometer / gyroscope data-ready is used as the FIFO trigger):

- 1. Configure one of the events as previously described;
- 2. Choose the decimation factor for each sensor through the decimation bits in the FIFO CTRL3 and FIFO CTRL4 registers (see Section 7.3 for details);
- 3. Choose the FIFO ODR through the ODR\_FIFO\_[3:0] bits in the FIFO\_CTRL5 register.
- 4. Set the FIFO\_MODE\_[2:0] bits in the FIFO\_CTRL5 register to 100b to enable FIFO Bypass-to-Continuous mode.



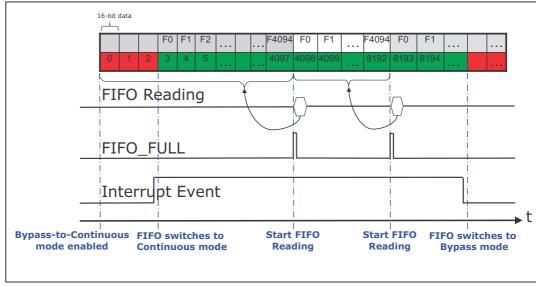


Figure 31. Bypass-to-Continuous mode

Once the trigger condition appears and the buffer switches to Continuous mode, the FIFO buffer continues filling. When the next stored set of data will make the FIFO full, the FIFO\_FULL bit is set high.

In case the FIFO is read before the FIFO\_FULL event, it must not be completely emptied in order the avoid the misalignment of the data read from it. At least one complete FIFO pattern has to be left in the FIFO buffer (do not read it); it will be the first data read in the next read operation.

In case FIFO gets emptied after the FIFO\_OUT registers are read, a FIFO reset (through Bypass mode setting) is needed.

Bypass-to-Continuous can be used in order to start the acquisition when the configured interrupt is generated.



### 7.3 Setting the FIFO trigger, FIFO ODR and decimation factors

Writing data in the FIFO can be configured to be triggered by three different sources.

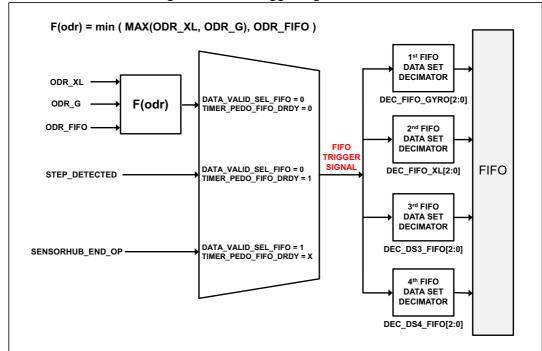


Figure 32. FIFO trigger signal selection

As described in *Figure 32*, the DATA\_VALID\_SEL\_FIFO bit of the MASTER\_CONFIG register and the TIMER\_PEDO\_FIFO\_DRDY bit of the FIFO\_CTRL2 register are used for this purpose:

- if both the DATA\_VALID\_SEL\_FIFO bit and the TIMER\_PEDO\_FIFO\_DRDY bit are set to 0, writing data in the FIFO is triggered by the accelerometer/gyroscope data-ready. The ODR\_FIFO\_[3:0] bits of FIFO\_CTRL5 define the maximum data rate at which data are stored in FIFO; the latter is limited to the maximum value between the accelerometer ODR (defined by the ODR\_XL[3:0] bits of the CTRL1\_XL register) and the gyroscope ODR (defined by the ODR\_G[3:0] bits of the CTRL2\_G register);
- if the DATA\_VALID\_SEL\_FIFO bit is set to 0 and the TIMER\_PEDO\_FIFO\_DRDY bit is set to 1, writing data in the FIFO is triggered by step detection (corresponding to the behavior of the STEP\_DETECTED bit of the FUNC\_SRC register): the data are stored in FIFO every time a step is detected;
- if the DATA\_VALID\_SEL\_FIFO bit is set to 1, writing data in the FIFO is triggered by the sensor hub (corresponding to the behavior of the SENSORHUB\_END\_OP bit of the FUNC\_SRC register), regardless of the configuration of the TIMER\_PEDO\_FIFO\_DRDY bit: the data are stored in FIFO when the sensor hub routine is complete.



Using the FIFO decimation factors, data can be stored in FIFO at a rate lower than the rate of the FIFO trigger signal. Four decimation factors can be configured, one for each FIFO data set:

- the DEC\_FIFO\_G[2:0] bits of the FIFO\_CTRL3 register define if the gyroscope data (associated to the 1<sup>st</sup> FIFO data set) are stored in FIFO and the relative rate;
- the DEC\_FIFO\_XL[2:0] bits of the FIFO\_CTRL3 register define if the accelerometer data (associated to the 2<sup>nd</sup> FIFO data set) are stored in FIFO and the relative rate;
- the DEC\_DS3\_FIFO[2:0] bits of the FIFO\_CTRL4 register define if the data associated to the 3<sup>rd</sup> FIFO data set are stored in FIFO and the relative rate;
- the DEC\_DS4\_FIFO[2:0] bits of the FIFO\_CTRL4 register define if the data associated to the 4<sup>th</sup> FIFO data set are stored in FIFO and the relative rate.

Note: It's required to set at least one of the four decimation factors to 1 (no decimation).

When using the internal trigger (accelerometer/gyroscope data-ready), the recommended procedure to configure the FIFO trigger is the following:

- 1. Set the ODR\_FIFO bits of the FIFO\_CTRL5 register to the value corresponding to the maximum ODR between the gyroscope and accelerometer;
- Set to 1 the decimation factor of the FIFO data set associated to the sensor having the maximum ODR.

### 7.3.1 Procedure for ODR changes when using FIFO

In case of combo mode configuration and if the application under development expects to store the data of at least one sensor (accelerometer, gyroscope or both) in the FIFO buffer and to modify the accelerometer/gyroscope output data rate, the following rules have to be respected:

- 1. Both the accelerometer data and the gyroscope data must be stored in the FIFO;
- 2. Set the ODR\_FIFO bits of the FIFO\_CTRL5 register to 1010b (FIFO ODR is set to 6.66 kHz);
- 3. Apply the following procedure when an accelerometer/gyroscope ODR change has to be performed:
  - a) read all the data stored in the FIFO to empty it (see Section 7.4 for details);
  - b) set the FIFO in Bypass mode (set the FIFO\_MODE bits of the FIFO\_CTRL5 register to 000b);
  - Set the target ODR for the accelerometer and gyroscope through the ODR\_XL bits
    of the CTRL1\_XL register and the ODR\_G bits of the CTRL2\_G register
    respectively;
  - d) Set the gyroscope decimation factor in the DEC\_FIFO\_G[2:0] bits of the FIFO\_CTRL3 register and the accelerometer decimation factor in the DEC\_FIFO\_XL[2:0] bits of the FIFO\_CTRL3 register as follows:
  - Accelerometer decimation factor = max(ODR\_XL[Hz], ODR\_G[Hz])/ODR\_XL[Hz]
  - Gyroscope decimation factor = max(ODR\_XL[Hz], ODR\_G[Hz])/ODR\_G[Hz]
     See *Table 55* and *Table 56* for the values to be set in the DEC\_FIFO\_G[2:0] bits and the DEC\_FIFO\_XL[2:0] bits of FIFO\_CTRL3. One of the two decimation factors will be equal to 1, as required.
  - e) Set the desired FIFO operating mode (see Section 7.3 for details).

If fixed ODR settings are used in the application, no need to follow the above rules.

577

### 7.4 Retrieving data from the FIFO

Note:

When data are stored in the FIFO, the configuration must not be changed in order to be able to retrieve data correctly.

When FIFO is enabled and the mode is different from Bypass, reading the FIFO output registers (FIFO\_DATA\_OUT\_L and FIFO\_DATA\_OUT\_H) returns the oldest FIFO sample set. Whenever these registers are read, their content is moved to the SPI/I<sup>2</sup>C output buffer. FIFO slots are ideally shifted up one level in order to release room for a new sample, and the FIFO output registers load the current oldest value stored in the FIFO buffer.

The recommended way to retrieve data from the FIFO is the following:

- Read the FIFO\_STATUS1 and FIFO\_STATUS2 registers to check how many words (16-bit data) are stored in the FIFO. This information is contained in the DIFF\_FIFO\_[11:0] bits.
- 2. Read the FIFO\_STATUS3 and FIFO\_STATUS4 registers. The FIFO\_PATTERN\_[9:0] bits allows understanding which sensor and which couple of bytes is being read (see *Section 7.5* for more details).
- 3. Read the FIFO\_DATA\_OUT\_L and FIFO\_DATA\_OUT\_H registers to retrieve the oldest sample (16-bits format) in the FIFO. They are respectively the lower and the upper part of the oldest sample.

The entire FIFO content is retrieved by performing a certain number of read operations from the FIFO output registers until the buffer becomes empty (FIFO\_EMPTY bit of FIFO\_STATUS2 register is set high). Once the FIFO is empty, every other read operation returns the same value (the latest sample).

It is recommended to read faster than 1\*ODR at least three times the number of the enabled FIFO data set, in order to free FIFO slots for the new data: this allows avoiding loss of data.

The rounding function (see *Section 3.6* for details) is automatically enabled when applying a multiple read operation to the FIFO output registers FIFO\_DATA\_OUT\_L and FIFO\_DATA\_OUT\_H.

## 7.5 FIFO pattern

Data are stored in the FIFO without any tag in order to maximize the number of samples stored. To understand which couple of data and which FIFO data set is going to be read, it is necessary to check the content of the FIFO\_PATTERN\_[9:0] bits in the FIFO\_STATUS3 and FIFO\_STATUS4 registers.

Data are written to the FIFO with a specific pattern (for example GyroX, GyroY, GyroZ, AccX, AccY, AccZ). This pattern changes depending on the ODRs and decimation factors assigned to the four FIFO data sets. The FIFO\_PATTERN\_[9:0] bits contain a number from 0 to the index of the last sample of the pattern, then the pattern is repeated in all FIFO content.

The first sequence of data stored in FIFO buffer contains the data of all the enabled FIFO data sets, from the first one to the fourth one. Then, data are repeated depending on the value of the decimation factor set for each FIFO data set.

The examples in the next sections explain how to use the information contained in the FIFO\_PATTERN\_[9:0] bits.



### 7.5.1 Example 1

Supposing the FIFO is storing data from the gyroscope and accelerometer at the same ODR:

Gyroscope ODR = 104 Hz, Accelerometer ODR = 104 Hz.

If the internal trigger (accelerometer/gyroscope data-ready) is used, it's recommended to set the ODR\_FIFO\_[3:0] bits of the FIFO\_CTRL5 register to 0100b in order to set the FIFO trigger ODR to 104 Hz.

Both the DEC\_FIFO\_GYRO[2:0] and the DEC\_FIFO\_XL[2:0] fields of the FIFO\_CTRL3 register have to be set to 001b (no decimation).

The following data pattern is repeated every 6 samples (each sample is represented as 16-bit data):

• Gx Gy Gz XLx XLy XLz (Gyroscope and Accelerometer data)

The FIFO\_PATTERN\_[9:0] bits will contain a number from 0 to 5, as shown in *Table 70*.

Time	FIFO_PATTERN_[9:0]	Next reading from FIFO output registers
t0	0	Gx
t0	1	Gy
t0	2	Gz
t0	3	XLx
t0	4	XLy
t0	5	XLz

Table 70. Example 1: FIFO\_PATTERN\_[9:0] bits and next reading

#### 7.5.2 Example 2

Supposing the FIFO is storing data from the gyroscope and accelerometer at different ODRs:

• Gyroscope ODR = 208 Hz, Accelerometer ODR = 104 Hz.

If the internal trigger (accelerometer/gyroscope data-ready) is used, it's recommended to set the ODR\_FIFO\_[3:0] bits of the FIFO\_CTRL5 register to 0101b in order to set the FIFO trigger ODR to 208 Hz.

The DEC\_FIFO\_GYRO[2:0] field of the FIFO\_CTRL3 register has to be set to 001b (no decimation applied to gyroscope data) and the DEC\_FIFO\_XL[2:0] field has to be set to 010b (decimation with factor 2 applied to accelerometer data).

Since the gyroscope ODR is twice the accelerometer ODR, the following data pattern is repeated every 9 samples (each sample is represented as 16-bit data):

• Gx Gy Gz XLx XLy XLz Gx Gy Gz

The FIFO\_PATTERN\_[9:0] bits will contain a number from 0 to 8, as shown in *Table 71*.

Time	FIFO_PATTERN_[9:0]	Next reading from FIFO output registers		
t0	0	Gx		
t0	1	Gy		
t0	2	Gz		
t0	3	XLx		
t0	4	XLy		
t0	5	XLz		
t1	6	Gx		
t1	7	Gy		
t1	8	Gz		

Table 71. Example 2: FIFO\_PATTERN\_[9:0] bits and next reading

#### 7.5.3 **Example 3**

Supposing the FIFO is storing data from the gyroscope, accelerometer and magnetometer at different ODRs:

Gyroscope ODR = 104 Hz, Accelerometer ODR = 208 Hz, Magnetometer ODR = 52 Hz.

If the internal trigger (accelerometer/gyroscope data-ready) is used, it's recommended to set the ODR\_FIFO\_[3:0] bits of the FIFO\_CTRL5 register to 0101b in order to set the FIFO trigger ODR to 208 Hz.

The DEC\_FIFO\_GYRO[2:0] field of FIFO\_CTRL3 register has to be set to 010b (decimation with factor 2 applied to gyroscope data) and the DEC\_FIFO\_XL[2:0] field has to be set to 001b (no decimation applied to accelerometer data). Assuming that the magnetometer is associated to the 3<sup>rd</sup> FIFO data set, the DEC\_DS3\_FIFO[2:0] field of theFIFO\_CTRL4 register has to be set to 100b (decimation with factor 4 applied to magnetometer data).

The following data pattern is repeated every 21 samples:

- Gx Gy Gz XLx XLy XLz Mx My Mz (gyroscope, accelerometer, magnetometer data 9 samples)
- XLx XLy XLz (accelerometer data 3 samples)
- Gx Gy Gz XLx XLy XLz (gyroscope and accelerometer data 6 samples)
- XLx XLy XLz (accelerometer data 3 samples)

The FIFO PATTERN [9:0] bits will contain a number from 0 to 20, as shown in Table 72.



Time FIFO\_PATTERN\_[9:0] Next reading from FIFO output registers t0 0 Gx 1 t0 Gy t0 2 Gz t0 3 XLx 4 t0 XLy t0 5 XLz t0 6 Mx 7 t0 My t0 8 Mz 9 XLx t1 10 XLy t1 t1 11 XLz Gx t2 12 t2 13 Gy t2 14 Gz t2 15 XLxt2 16 XLy t2 17 XLz t3 18 XLx t3 19 XLy t3 20 XLz

Table 72. Example 3: FIFO\_PATTERN\_[9:0] bits and next reading

#### 7.6 FIFO threshold

The FIFO threshold is a functionality of the LSM6DS3 FIFO which can be used to check when the number of samples in the FIFO reaches a defined threshold level.

The bits FTH\_[11:0] in the FIFO\_CTRL1 and FIFO\_CTRL2 registers contain the threshold level. The resolution of the FTH\_[11:0] field is two bytes (1 LSB = 2 Bytes, each sample is represented as 16-bit data). So, the user can select the desired level in a range between 0 and 4095.

The bit FTH in the FIFO\_STATUS2 register represents the watermark status. This bit is set high if the number of samples in the FIFO reaches or exceeds the watermark level (each sample is represented as 16-bit data).

FIFO size can be limited to the threshold level by setting the STOP\_ON\_FTH bit in the CTRL4 C register to 1.



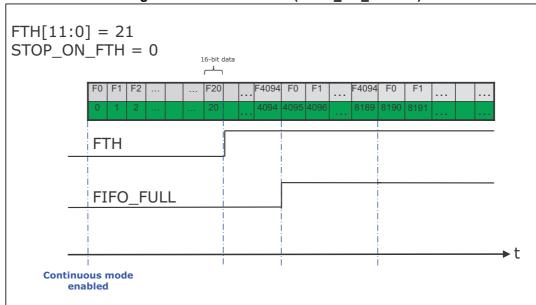


Figure 33. FIFO threshold (STOP\_ON\_FTH = 0)

Figure 33 shows an example of FIFO threshold level usage when just accelerometer (or gyroscope) data are stored. The STOP\_ON\_FTH bit set to 0 in the CTRL4\_C register. The threshold level is set to 21 through the FTH[11:0] bits. The FTH bit of the FIFO\_STATUS2 register rises after the level 21 has been reached (21 samples in the FIFO). Since, the STOP ON FTH bit is set to 0, the FIFO will not stop at the 21st sample, but will keep storing data until the FIFO\_FULL flag is set high.

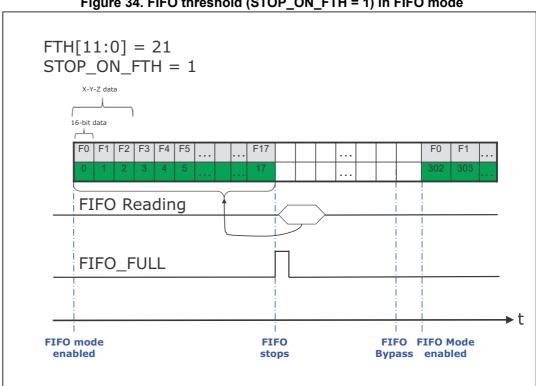


Figure 34. FIFO threshold (STOP\_ON\_FTH = 1) in FIFO mode

Figure 34 shows an example of FIFO threshold level usage in FIFO mode with the STOP\_ON\_FTH bit set to 1 in the CTRL4\_C register; just accelerometer (or gyroscope) data are stored in this example. The threshold level is set to 21 through the FTH[11:0] bits and defines the current FIFO size. In FIFO mode, data are stored in the FIFO buffer until the FIFO\_FULL signal rises; the FIFO\_FULL bit of the FIFO\_STATUS2 register rises when the next data stored in the FIFO will make the FIFO full, so in this example it rises after the first 18 data (16-bit each) are stored in FIFO. The FTH bit of the FIFO\_STATUS2 register cannot go to 1 since the FTH threshold level is never reached (data are no longer stored in FIFO after the FIFO is full).

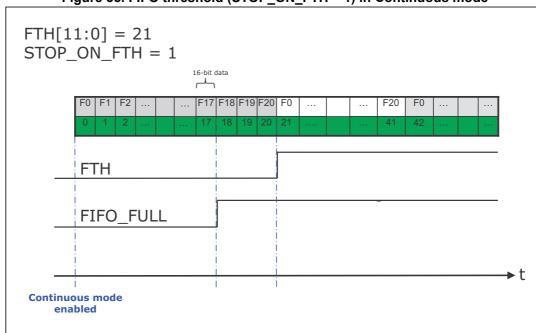


Figure 35. FIFO threshold (STOP ON FTH = 1) in Continuous mode

Figure 35 shows an example of FIFO threshold level usage in Continuous mode with the STOP\_ON\_FTH bit set to 1 in the CTRL4\_C register; just accelerometer (or gyroscope) data are stored in this example. The threshold level is set to 21 through the FTH[11:0] bits. The FIFO\_FULL bit of the FIFO\_STATUS2 register rises when the next data stored in the FIFO will make the FIFO full, so in this example it rises after the first 18 data (16-bit each) are stored in FIFO. The FTH bit of the FIFO\_STATUS2 register rises after the level 21 has been reached (21 samples in the FIFO).

## 7.7 High part of gyroscope and accelerometer data

It is possible to increase the number of samples stored in the FIFO by storing just the high part (8 bits) of gyroscope and accelerometer data. This feature is not valid for the other (external) sensors.

To the enable this feature, the bit ONLY\_HIGH\_DATA must be set to 1 in the FIFO\_CTRL4 register. Gyroscope and accelerometer data will be written in the FIFO at the same ODR, in the order shown in *Table 73*.

Table 73. High part of gyroscope and accelerometer data in FIFO

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
Accel_X_H	Gyro_X_H	Accel_Y_H	Gyro_Y_H	Accel_Z_H	Gyro_Z_H

When this feature is enabled, the 6 bytes containing the high part (8 bits) of gyroscope and accelerometer data are associated to the 1<sup>st</sup> FIFO data set and the 2<sup>nd</sup> FIFO data set is not used.

The DEC\_FIFO\_G[2:0] field of the FIFO\_CTRL3 register has to be set to a value different from 000b (1st FIFO data set stored in FIFO).

The DEC\_FIFO\_XL[2:0] field of FIFO\_CTRL3 register has to be set to 000b (2<sup>nd</sup> FIFO data set not in FIFO).

### 7.8 Step counter and timestamp data in FIFO

It is possible to store timestamp and step counter data in the FIFO. These data are stored as a 4<sup>th</sup> FIFO data set in the 6-byte data format shown in *Table 74*.

- 3 bytes for the timestamp;
- 1 byte is not used;
- 2 bytes for the number of steps.

Table 74. Timestamp and pedometer data in FIFO

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
TIMESTAMP	TIMESTAMP		TIMESTAMP	STEPS	STEPS
[15:8]	[23:16]	-	[7:0]	[7:0]	[15:8]

To enable this feature, the bit TIMER\_PEDO\_FIFO\_EN must be set to 1 in the FIFO\_CTRL2 register.

When this feature is enabled, the 6 bytes containing the timestamp and step counter data are associated to the 4<sup>th</sup> FIFO data set: the DEC\_DS4\_FIFO[2:0] field of FIFO\_CTRL4 register has to be used to define the decimation factor.

When this feature is enabled and the DATA\_VALID\_SEL\_FIFO bit of the MASTER\_CONFIG register is set to 0, data can be stored in the FIFO in two ways, depending on the configuration of the TIMER\_PEDO\_FIFO\_DRDY bit in FIFO\_CTRL2:

- When the TIMER\_PEDO\_FIFO\_DRDY bit is set to 0, data are written to the FIFO at the ODR\_FIFO rate set in the FIFO\_CTRL5 register.
- When the TIMER\_PEDO\_FIFO\_DRDY bit is set to 1, data are stored in the FIFO every time a new step is detected.



Follow these steps to store timestamp and pedometer data in the FIFO using either the internal trigger (accelerometer/gyroscope data ready) or the 'step detected' method:

- Turn on the accelerometer;
- 2. Enable the timestamp and pedometer (see Section 5.1 and Section 5.4);
- Choose the decimation factor for the 4<sup>th</sup> FIFO data set through the DEC\_DS4\_FIFO[2:0] bits of the FIFO\_CTRL4 register;
- 4. Set to 1 the TIMER\_PEDO\_FIFO\_EN bit in the FIFO\_CTRL2 register;
- 5. Configure the bit TIMER\_PEDO\_FIFO\_DRDY in the FIFO\_CTRL2 register, in order to choose the method of storing data in the FIFO (internal trigger or every step detected);
- 6. If an internal trigger is used, choose the FIFO ODR through the ODR\_FIFO\_[3:0] bits of the FIFO\_CTRL5 register. If 'step detected' trigger is used, no need to set the ODR\_FIFO\_[3:0] bits;
- 7. Configure the FIFO operating mode through the FIFO\_MODE\_[2:0] field of the FIFO\_CTRL5 register.

### 7.9 Temperature data in FIFO

It is possible to store only temperature data as the 4<sup>th</sup> FIFO data set.

To enable this feature:

- the bit TIMER\_PEDO\_FIFO\_EN of the FIFO\_CTRL2 register has to be set to 0;
- the bit FIFO\_TEMP\_EN of the CTRL4\_C register has to be set to 1.

Temperature samples (16-bit) are stored in FIFO in the 6-byte data format shown in *Table 75*.

Table 75. Temperature data in FIFO

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
-	-	TEMP [7:0]	TEMP [15:8]	-	-

Follow these steps to store 16-bit temperature data in the FIFO using the internal trigger (accelerometer/gyroscope data ready):

- 1. Turn on the accelerometer or the gyroscope;
- 2. Choose the decimation factor (different from 000b) for the 4<sup>th</sup> FIFO data set through the DEC DS4 FIFO[2:0] bits in the FIFO CTRL4 register;
- 3. Set to 1 the FIFO\_TEMP\_EN bit in the CTRL4\_C register and to 0 the bit TIMER\_PEDO\_FIFO\_EN of the FIFO\_CTRL2 register;
- 4. Choose the FIFO ODR through the ODR\_FIFO\_[3:0] bits of the FIFO\_CTRL5 register;
- 5. Configure the FIFO operating mode through the FIFO\_MODE\_[2:0] field of the FIFO\_CTRL5 register.



AN4650 Temperature sensor

## 8 Temperature sensor

The LSM6DS3 is provided with an internal temperature sensor that is suitable for ambient temperature measurement.

If both the accelerometer and the gyroscope sensors are in Power-Down mode, the temperature sensor is off.

The maximum output data rate of temperature sensor is 52 Hz and its value depends on how the accelerometer and gyroscope sensors are configured:

- If the gyroscope is in Power-Down mode:
  - the temperature data rate is equal to 12.5 Hz if the accelerometer ODR is equal to 12.5 Hz (in both Low-Power and High-Performance mode);
  - the temperature data rate is equal to 26 Hz if the accelerometer configuration is 26 Hz Low-Power mode;
  - the temperature data rate is equal to 52H z for all other accelerometer configurations.
- If the accelerometer is in Power-Down mode:
  - the temperature data rate is equal to 12.5 Hz if the gyroscope configuration is 12.5 Hz Low-Power mode;
  - the temperature data rate is equal to 26 Hz if the gyroscope configuration is 26 Hz Low-Power mode;
  - the temperature data rate is equal to 52 Hz for all other gyroscope configurations.
- In combo mode:
  - if the gyroscope is configured in High-Performance mode, the temperature data rate is equal to 52 Hz regardless of the gyroscope ODR and the accelerometer configuration;
  - if the gyroscope is configured in Low-Power / Normal mode, the temperature data rate is equal to the maximum value between the accelerometer ODR and gyroscope ODR, while remaining below the 52 Hz value.

For the temperature sensor, the data-ready signal is represented by the TDA bit of the STATUS\_REG register. The signal can be driven to the INT2 pin by setting to 1 the INT2 DRDY TEMP bit of the INT2 CTRL register.

The temperature data is given by the concatenation of the OUT\_TEMP\_H and OUT\_TEMP\_L registers and it is represented as a number of 16 bits in two's complement format, with a sensitivity of +16 LSB/°C. The output zero level corresponds to 25 °C.

The LSM6DS3 allows swapping, by setting the BLE bit of the CTRL3\_C register set to 1, the content of the lower and the upper part of the temperature output data registers (i.e. OUT\_TEMP\_H with OUT\_TEMP\_L).

Temperature sensor data can also be stored in FIFO with a configurable decimation factor (see *Section 7.9* for details).

Temperature sensor AN4650

# 8.1 Example of temperature data calculation

*Table 76* provides a few basic examples of the data that is read in the temperature data registers at different ambient temperature values. The values listed in this table are given under the hypothesis of perfect device calibration (i.e. no offset, no gain error,....).

Table 76. Output data registers content vs. temperature

	BLE = 0		BLE = 1		
Temperature values	Register address				
, , , , , , , , , , , , , , , , , , ,	OUT_TEMP_H (21h)	OUT_TEMP_L (20h)	OUT_TEMP_H (21h)	OUT_TEMP_L (20h)	
0°C	FEh	70h	70h	FEh	
25°C	00h	00h	00h	00h	
50°C	01h	90h	90h	01h	

AN4650 Self-test

## 9 Self-test

The embedded self-test functions allows checking the device functionality without moving it.

### 9.1 Accelerometer self-test

When the accelerometer self-test is enabled, an actuation force is applied to the sensor, simulating a definite input acceleration. In this case the sensor outputs exhibit a change in their DC levels which are related to the selected full scale through the sensitivity value.

The accelerometer self-test function is off when the ST\_XL[1:0] bits of the CTRL5\_C register are programmed to 00b; it is enabled when the ST\_XL bits are set to 01b (positive sign self-test) or 10b (negative sign self-test).

When the accelerometer self-test is activated, the sensor output level is given by the algebraic sum of the signals produced by the acceleration acting on the sensor and by the electrostatic test-force. The complete accelerometer self-test procedure is indicated in *Figure 36*.

## 9.2 Gyroscope self-test


The gyroscope self-test allows testing of the mechanical and electrical part of the gyroscope sensor: when it is activated, an actuation force is applied to the sensor, emulating a definite Coriolis force, and the seismic mass is moved by means of this electrostatic test-force. In this case the sensor output exhibits an output change.

The gyroscope self-test function is off when the ST\_G[1:0] bits of the CTRL5\_C register are programmed to 00b; it is enabled when the ST\_G bits are set to 01b (positive sign self-test) or 11b (negative sign self-test).

When the gyroscope self-test is active, the sensor output level is given by the algebraic sum of the signals produced by the velocity acting on the sensor and by the electrostatic test-force. The complete gyroscope self-test procedure is indicated in *Figure 37*.


Self-test

Figure 36. Accelerometer self-test procedure

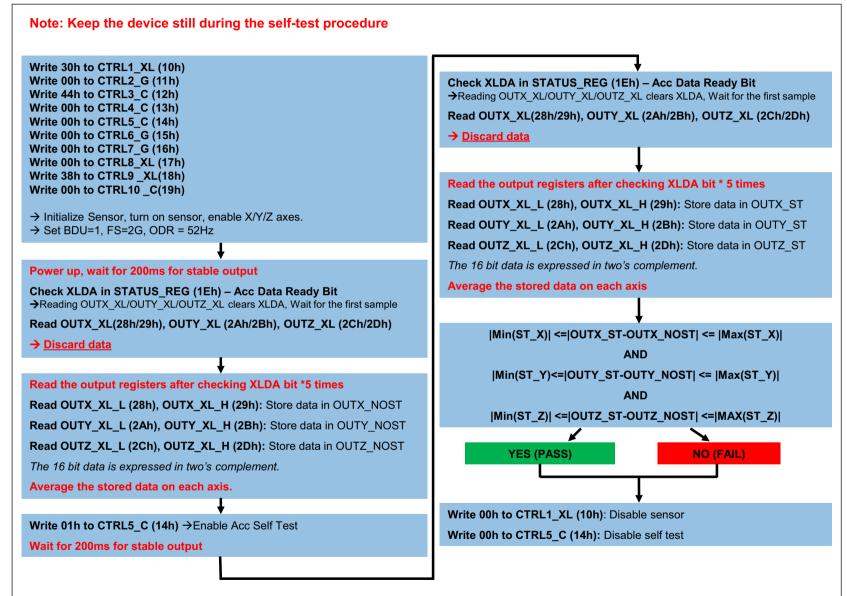

Self-test

Figure 37. Gyroscope self-test procedure

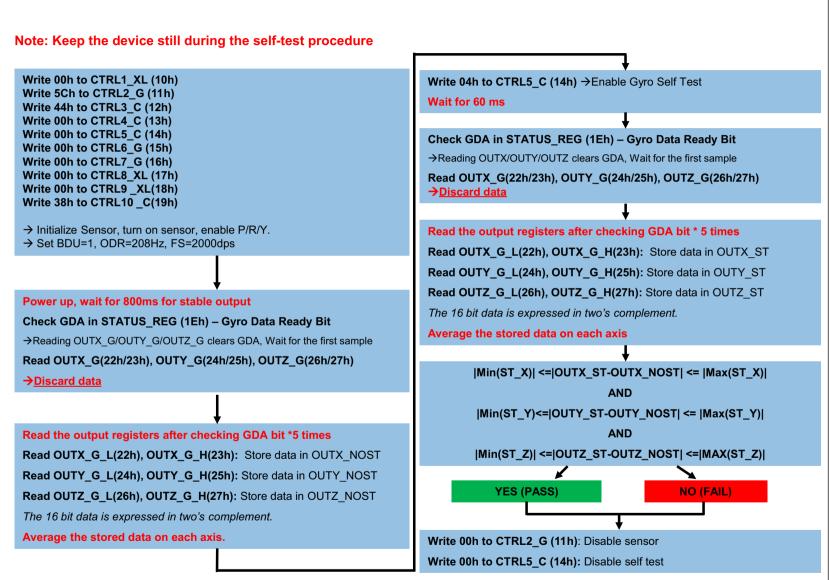


Revision history AN4650

# 10 Revision history

Table 77. Document revision history

Date	Revision	Changes
13-Feb-2015	1	Initial release.
10-Feb-2016	2	Updated Introduction, Section 1.1: Embedded functions registers, Added Table 9: Accelerometer anti-aliasing + LPF1 overall cutoff frequency Updated Figure 2: Accelerometer composite digital filter Added Section 2.8: Accelerometer and gyroscope turn-on/off time Updated Figure 11: Gyroscope axes orientation and sign example Updated Section 4.3: Wake-up interrupt Updated Section 4.7: Boot status Added Figure 19: Pedometer debounce and Figure 20: Pedometer minimum threshold Updated Section 5.2: Significant motion Added Figure 21: Tilt example Updated Section 5.4: Timestamp Added Section 6.3: Sensor hub pass-through feature, Figure 24 Added Section 7.3.1: Procedure for ODR changes when using FIFO Updated Table 73: High part of gyroscope and accelerometer data in FIFO



#### **IMPORTANT NOTICE - PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2016 STMicroelectronics – All rights reserved

