

Computer Organization and Design The Hardware/Software Interface



Chapter 2

Instructions: Language of the Computer

Instruction Set

- The repertoire of instructions of a computer
- Different computers have different instruction sets
 - But with many aspects in common
- Early computers had very simple instruction sets
 - Simplified implementation
- Many modern computers also have simple instruction sets

The MIPS Instruction Set

- Used as the example throughout the book
- Stanford MIPS commercialized by MIPS Technologies (<u>www.mips.com</u>)
- Large share of embedded core market
 - Applications in consumer electronics, network/storage equipment, cameras, printers, ...
- Typical of many modern ISAs
 - See MIPS Reference Data tear-out card, and Appendixes B and E

Arithmetic Operations

- Add and subtract, three operands
 - Two sources and one destination
 - add a, b, c # a gets b + c
- All arithmetic operations have this form
- Design Principle 1: Simplicity favours regularity
 - Regularity makes implementation simpler
 - Simplicity enables higher performance at lower cost

Arithmetic Example

C code:

```
f = (g + h) - (i + j);
```

Compiled MIPS code:

```
add t0, g, h # temp t0 = g + h add t1, i, j # temp t1 = i + j sub f, t0, t1 # f = t0 - t1
```

Register Operands

- Arithmetic instructions use register operands
- MIPS has a 32 × 32-bit register file
 - Use for frequently accessed data
 - Numbered 0 to 31
 - 32-bit data called a "word"
- Assembler names
 - \$t0, \$t1, ..., \$t9 for temporary values
 - \$s0, \$s1, ..., \$s7 for saved variables
- Design Principle 2: Smaller is faster
 - c.f. main memory: millions of locations

Register Operand Example

C code:

```
f = (g + h) - (i + j);

• f, ..., j in $s0, ..., $s4
```

Compiled MIPS code:

```
add $t0, $s1, $s2
add $t1, $s3, $s4
sub $s0, $t0, $t1
```

Memory Operands

- Main memory used for composite data
 - Arrays, structures, dynamic data
- To apply arithmetic operations
 - Load values from memory into registers
 - Store result from register to memory
- Memory is byte addressed
 - Each address identifies an 8-bit byte
- Words are aligned in memory
 - Address must be a multiple of 4
- MIPS is Big Endian
 - Most-significant byte at least address of a word
 - c.f. Little Endian: least-significant byte at least address

Memory Operand Example 1

C code:

```
g = h + A[8];
```

- g in \$s1, h in \$s2, base address of A in \$s3
- Compiled MIPS code:
 - Index 8 requires offset of 32
 - 4 bytes per word

Memory Operand Example 2

C code:

```
A[12] = h + A[8];
```

- h in \$s2, base address of A in \$s3
- Compiled MIPS code:
 - Index 8 requires offset of 32

```
lw $t0, 32($s3)  # load word
add $t0, $s2, $t0
sw $t0, 48($s3)  # store word
```

Registers vs. Memory

- Registers are faster to access than memory
- Operating on memory data requires loads and stores
 - More instructions to be executed
- Compiler must use registers for variables as much as possible
 - Only spill to memory for less frequently used variables
 - Register optimization is important!

Immediate Operands

- Constant data specified in an instruction addi \$s3, \$s3, 4
- No subtract immediate instruction
 - Just use a negative constant addi \$s2, \$s1, -1
- Design Principle 3: Make the common case fast
 - Small constants are common
 - Immediate operand avoids a load instruction

The Constant Zero

- MIPS register 0 (\$zero) is the constant 0
 - Cannot be overwritten
- Useful for common operations
 - E.g., move between registers add \$t2, \$s1, \$zero

Unsigned Binary Integers

Given an n-bit number

$$x = x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + ? + x_12^1 + x_02^0$$

- Range: 0 to +2ⁿ 1
- Example
 - $0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 1011_2$ $= 0 + ... + 1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$ $= 0 + ... + 8 + 0 + 2 + 1 = 11_{10}$
- Using 32 bits
 - 0 to +4,294,967,295

2s-Complement Signed Integers

Given an n-bit number

$$x = -x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + ? + x_12^1 + x_02^0$$

- Range: −2ⁿ⁻¹ to +2ⁿ⁻¹ − 1
- Example
- Using 32 bits
 - -2,147,483,648 to +2,147,483,647

2s-Complement Signed Integers

- Bit 31 is sign bit
 - 1 for negative numbers
 - 0 for non-negative numbers
- $-(-2^{n-1})$ can't be represented
- Non-negative numbers have the same unsigned and 2s-complement representation
- Some specific numbers
 - 0: 0000 0000 ... 0000
 - **-**1: 1111 1111 ... 1111
 - Most-negative: 1000 0000 ... 0000
 - Most-positive: 0111 1111 ... 1111

Signed Negation

- Complement and add 1
 - Complement means $1 \rightarrow 0$, $0 \rightarrow 1$

$$x + \overline{x} = 1111...111_2 = -1$$

 $\overline{x} + 1 = -x$

Example: negate +2

•
$$+2 = 0000 \ 0000 \ \dots \ 0010_2$$

• $-2 = 1111 \ 1111 \ \dots \ 1101_2 + 1$
= $1111 \ 1111 \ \dots \ 1110_2$

Sign Extension

- Representing a number using more bits
 - Preserve the numeric value
- In MIPS instruction set
 - addi: extend immediate value
 - 1b, 1h: extend loaded byte/halfword
 - beq, bne: extend the displacement
- Replicate the sign bit to the left
 - c.f. unsigned values: extend with 0s
- Examples: 8-bit to 16-bit
 - +2: 0000 0010 => 0000 0000 0000 0010
 - **-** -2: 1111 1110 => 1111 1111 1111 1110

MIPS simulator

- Instruction simulator
 - https://hyunokoh.000webhostapp.com/function al.html
- Pipelined simulator
 - https://hyunokoh.000webhostapp.com/pipeline. html

Exercise: Basic

- E1
 - \$1 ← 4
 - **■** \$2 ← 5
 - **■** \$3 **←** \$1+\$2
- E2
 - **■** \$1←7
 - **\$1++**
- **E**3
 - \$1←1
 - $\$2 \leftarrow \$1 << 28 \quad (sll \$2, \$1, 28)$
 - sll : shift left logically

Load/Store

```
E4
```

```
■ $1 \leftarrow (1<<28)

■ $2 \leftarrow 11

■ $2 \rightarrow 0($1) (sw $2,0($1))
```

E5

- store 4 and 5 to address 0x10000000 and 0x10000004.
- **■** \$1 **←**(1<<28)
- \$2 (0(\$1)
- \$3 (4(\$1)
- \$4 ← `\$2´-\$3
- $-\$4 \rightarrow 8(\$1)$

Shift

- E6
 - **■** \$1 ← -1
 - \$2←\$1<<1</p>
 - **■** \$3**←**\$1<<2
 - $\$4 \leftarrow \$1 >> 1 \text{ (srl } \$4,\$1,1)$
 - srl : shift right logically
 - **■** \$5**←**\$1>>2

Shift

E7

- **■** \$1 ←15, \$2←-15
- \$3 ←\$1 * 2, \$4 ← \$1 << 1
- **\$5 ← \$2*4, \$6 ← \$2 <<2**
- \$7 ← \$1/4, \$8 → \$1 >> 2
- **.** \$9 ← \$2 /4
- \$10 ← \$2 >> 1
 - Try srl \$10, \$2, 1 and sra \$11,\$2, 1
 - srl : shift right logically
 - sra : shift right arithmetically

C to MIPS assembly (Logic)

E8

```
int a=14,b=13,c,d,e,f;
c = a & b; (and)
d = a | b; (or)
e = a ^ b; (xor)
f = ~a; (not)
nor = not or
a nor b = not (a or b)
a nor 0 = not (a or 0) = not a
```

C to MIPS assembly

- int *a, *b,*c;
- **a**=(1<<28);
- b=a+1;
- c=a+2;
- b = 3;
- *c=-5;
- *a = *b+*c;

C to MIPS assembly

int s=0, i=1; s+= j; i++; s+= i; _ j++; s+= i; • j++; s+= i; i++;

Representing Instructions

- Instructions are encoded in binary
 - Called machine code
- MIPS instructions
 - Encoded as 32-bit instruction words
 - Small number of formats encoding operation code (opcode), register numbers, ...
 - Regularity!
- Register numbers
 - \$t0 − \$t7 are reg's 8 − 15
 - \$t8 \$t9 are reg's 24 25
 - \$s0 \$s7 are reg's 16 23

MIPS R-format Instructions

ор	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

Instruction fields

- op: operation code (opcode)
- rs: first source register number
- rt: second source register number
- rd: destination register number
- shamt: shift amount (00000 for now)
- funct: function code (extends opcode)

R-format Example

op	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

add \$t0, \$s1, \$s2

special	\$s1	\$s2	\$t0	0	add
0	17	18	8	0	32
	17	10		0	J2
000000	10001	10010	01000	00000	100000

 $0000001000110010010000000100000_2 = 02324020_{16}$

Hexadecimal

- Base 16
 - Compact representation of bit strings
 - 4 bits per hex digit

0	0000	4	0100	8	1000	С	1100
1	0001	5	0101	9	1001	d	1101
2	0010	6	0110	а	1010	е	1110
3	0011	7	0111	b	1011	f	1111

- Example: eca8 6420
 - 1110 1100 1010 1000 0110 0100 0010 0000


MIPS I-format Instructions


op	rs	rt	constant or address
6 bits	5 bits	5 bits	16 bits

- Immediate arithmetic and load/store instructions
 - rt: destination or source register number
 - Constant: -2^{15} to $+2^{15} 1$
 - Address: offset added to base address in rs
- Design Principle 4: Good design demands good compromises
 - Different formats complicate decoding, but allow 32-bit instructions uniformly
 - Keep formats as similar as possible

Stored Program Computers

The BIG Picture

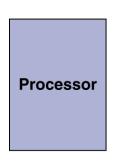

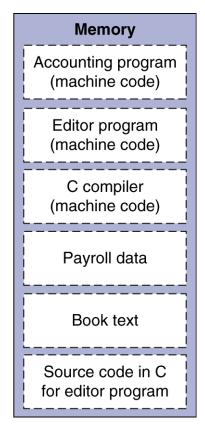

- Instructions represented in binary, just like data
- Instructions and data stored in memory
- Programs can operate on programs
 - e.g., compilers, linkers, ...
- Binary compatibility allows compiled programs to work on different computers
 - Standardized ISAs

Logical Operations

Instructions for bitwise manipulation

Operation	С	Java	MIPS
Shift left	<<	<<	sll
Shift right	>>	>>>	srl
Bitwise AND	&	&	and, andi
Bitwise OR	I	I	or, ori
Bitwise NOT	~	~	nor

 Useful for extracting and inserting groups of bits in a word

Shift Operations



- shamt: how many positions to shift
- Shift left logical
 - Shift left and fill with 0 bits
 - s11 by i bits multiplies by 2i
- Shift right logical
 - Shift right and fill with 0 bits
 - srl by i bits divides by 2ⁱ (unsigned only)

AND Operations

- Useful to mask bits in a word
 - Select some bits, clear others to 0

```
and $t0, $t1, $t2
```

OR Operations

- Useful to include bits in a word
 - Set some bits to 1, leave others unchanged

```
or $t0, $t1, $t2
```

NOT Operations

- Useful to invert bits in a word
 - Change 0 to 1, and 1 to 0
- MIPS has NOR 3-operand instruction
 - a NOR b == NOT (a OR b)

```
nor $t0, $t1, $zero
```

Register 0: always read as zero

```
$t1 | 0000 0000 0000 0001 1100 0000 0000
```

\$t0 | 1111 1111 1111 1100 0011 1111 11


Conditional Operations

- Branch to a labeled instruction if a condition is true
 - Otherwise, continue sequentially
- beq rs, rt, L1
 - if (rs == rt) branch to instruction labeled L1;
- bne rs, rt, L1
 - if (rs != rt) branch to instruction labeled L1;
- j ∟1
 - unconditional jump to instruction labeled L1

Compiling If Statements

C code:

```
if (i==j) f = g+h;
else f = g-h;
f, g, ... in $s0, $s1, ...
```

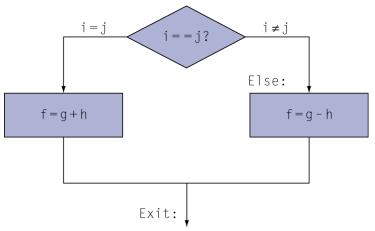

Compiled MIPS code:

```
bne $s3, $s4, Else
add $s0, $s1, $s2
j Exit
Else: sub $s0, $s1, $s2
Exit: ...
```

Assembler calculates addresses

Convert Loop to beq/bne

```
Loop code
   • while (\$1 < 5) \$2++;
 L: if(!($1<5)) goto EXIT;
    $2++
    goto L;
  EXIT:
L: slti $3, $1,5
     beq $3,$0,EXIT
    nop
    addi $2,$2,1
     j L
     nop
  EXIT:
```

Exercise 1

Loop code 1 while(\$1>=0) \$1--; Loop code 2 for(\$1=0; \$1<10; \$1++)</pre> \$2+=\$1; Loop code 3 do { \$2 += \$1; **\$1++**; } while (\$1 <10);</p>

- Loop 1
- L: stli \$2,\$1,0
- beq \$2,\$0, EXIT
- nop
- addi \$1,\$1,-1
- j L
- nop
- EXIT:

- for(\$1=0; \$1<10; \$1++)
 \$2+=\$1;</pre>
- addi \$1,\$0,0
- L:stli \$3,\$1,10
- beq \$3,\$0,EXIT
- nop
- add \$2,\$2,\$1
- addi \$1,\$1,1
- j L
- nop
- EXIT:

```
do {
$2 += $1;
$1++;
} while ($1 <10);</li>
```

- L: Add \$2,\$2,\$1
- Addi \$1,\$1,1
- Stli \$3,\$1,10
- Bne \$3,\$0, L
- Nop

Exercise 2 (Fibonacci)

```
int i,f1=1,f2=1,t;
for(i=0; i<10; i++) {</li>
t = f1+f2;
f1=f2;
f2=t;
}
```

```
int i,f1=1,f2=1,t;
 for(i=0; i<10; i++) {
  t = f1+f2;f1=f2;
  • f2=t:
 Addi $2,$0,1
                              Addi $2,$0,1
 Addi $3,$0,1
                              Addi $3,$0,1
 Addi $1,$0,0
                              Addi $1,$0,0
L: Stli $5,$1,10
                              L: Stli $5,$1,10
 Beq $5,$0,EXIT
                              Beq $5,$0,EXIT
 nop
                              nop
Add $4,$2,$3
                              Add $4,$2,$3
Add $2, $3,$0
                             Add $2, $3,$0
Add $3,$4,$0
                              Add $3,$4,$0
Add $1,$1,1
                              JL
 JL
                              Add $1,$1,1
Nop
                              EXIT:
 EXIT:
```

Exercise 3 (Nested Loop)

```
int i, j,s=0;
for(i=0; i<100; i++)</li>
for(j=0; j<i; j++) {</li>
If(j%4 == 3) continue;
s+=j;
if(s>1024) break;
}
```

```
Addi $3,$0,0
int i, j,s=0;
                                                          Addi $1,$0,0
for(i=0; i<100; i++)
    for(j=0; j<i; j++) {
    If( j%4 == 3)
                                              LOOP I:
                                                         Stli $4,$1,100
                                                          Beq $4,$0, EXIT I
          continue;
                                                          Nop
         if(s>1024) break;
                                                          Addi $2,$0,0
                                              LOOP J: Stl $4,$2,$1
                                                          Beq $4,$0, EXIT J
                                                          Nop
                                                          Andi $4,$2,3
                                                          Addi $4,$4,-3
                                                          Beq LOOP END J
                                                          Nop
                                                          Add $3,$3,$2
                                                          Stli $4,$3,1025
                                                          Beq $4,$0,EXIT J
                                                          Nop
                                              LOOP_END_J: Addi $2,$2,1
                                                          JLOOP J
                                                          Nop
                                              EXIT_J:
                                                          addi $1,$1,1
                                                          J LOOP I
                                                          Nop
                                              EXIT I:
```

Compiling Loop Statements

C code:


```
while (save[i] == k) i += 1;
• i in $s3, k in $s5, address of save in $s6
```

Compiled MIPS code:

```
Loop: sll $t1, $s3, 2
add $t1, $t1, $s6
lw $t0, 0($t1)
bne $t0, $s5, Exit
addi $s3, $s3, 1
j Loop
Exit: ...
```

Basic Blocks

- A basic block is a sequence of instructions with
 - No embedded branches (except at end)
 - No branch targets (except at beginning)

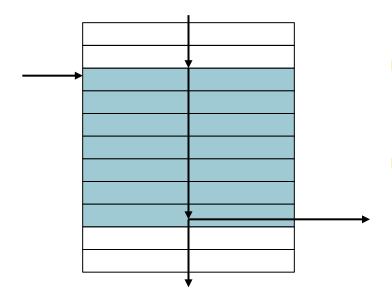

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks

More Conditional Operations

- Set result to 1 if a condition is true
 - Otherwise, set to 0
- slt rd, rs, rt
 - if (rs < rt) rd = 1; else rd = 0;
- slti rt, rs, constant
 - if (rs < constant) rt = 1; else rt = 0;</p>
- Use in combination with beq, bne slt \$t0, \$s1, \$s2 # if (\$s1 < \$s2) bne \$t0, \$zero, L # branch to L

Branch Instruction Design

- Why not blt, bge, etc?
- Hardware for <, ≥, ... slower than =, ≠</p>
 - Combining with branch involves more work per instruction, requiring a slower clock
 - All instructions penalized!
- beq and bne are the common case
- This is a good design compromise

Signed vs. Unsigned

- Signed comparison: slt, slti
- Unsigned comparison: sltu, sltui
- Example

 - \$1 = 0000 0000 0000 0000 0000 0000 0001
 - slt \$t0, \$s0, \$s1 # signed
 -1 < +1 ⇒ \$t0 = 1</pre>
 - sltu \$t0, \$s0, \$s1 # unsigned • +4,294,967,295 > +1 ⇒ \$t0 = 0

Procedure Call

```
int f(int a,int b)
{ return a+b; }

int main()
{
    c = f(2,3);
}
```

Procedure Calling

- Steps required
 - 1. Place parameters in registers
 - 2. Transfer control to procedure
 - 3. Acquire storage for procedure
 - 4. Perform procedure's operations
 - 5. Place result in register for caller
 - 6. Return to place of call

Register Usage

```
a0 - a3: arguments (reg's 4 - 7)
$v0, $v1: result values (reg's 2 and 3)
                                            int f(int a,int b)
$t0 – $t9: temporaries
                                            { return a+b; }
 Can be overwritten by callee
                                            int main()
$s0 - $s7: saved
                                             c = f(2,3);
  Must be saved/restored by callee
$gp: global pointer for static data (reg 28)
$sp: stack pointer (reg 29)
$fp: frame pointer (reg 30)
$ra: return address (reg 31)
```

Procedure Call Instructions


- Procedure call: jump and link jal ProcedureLabel
 - Address of following instruction put in \$ra
 - Jumps to target address
- Procedure return: jump register jr \$ra
 - Copies \$ra to program counter
 - Can also be used for computed jumps
 - e.g., for case/switch statements

Procedure Call

```
main: addi $a0, $0, 2
addi $a1, $0, 3
{ return a+b; }
int main()
{
    c = f(2,3);
}
main: addi $a0, $0, 2
addi $a1, $0, 3
jal f
nop
break
f: add $v0, $a0, $a1
jr $ra
nop
```

Memory Layout

- Text: program code
- Static data: global variables
 - e.g., static variables in C, constant arrays and strings
 - \$gp initialized to address allowing ±offsets into this segment
- Dynamic data: heap
 - E.g., malloc in C, new in Java
- Stack: automatic storage

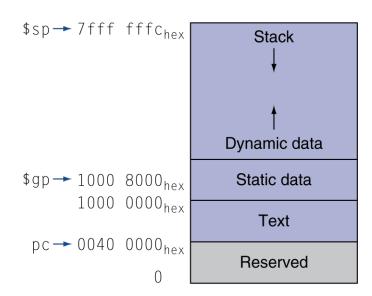

Leaf Procedure Example

C code:

```
int leaf_example (int g, h, i, j)
{ int f;
  f = (g + h) - (i + j);
  return f;
Arguments g, ..., j in $a0, ..., $a3
f in $s0 (hence, need to save $s0 on stack)
Result in $v0
```

Leaf Procedure Example

MIPS code:

leaf_ex			
addi	\$sp,	\$sp,	-4
SW	\$s0,	0(\$sp	o)
add	\$t0,	\$a0,	\$a1
add	\$t1,	\$a2,	\$a3
sub	\$s0,	\$t0,	\$t1
add	\$v0,	\$s0,	\$zero
lw	\$s0,	0(\$sp	o)
addi	\$sp,	\$sp,	4
jr	\$ra		

Save \$s0 on stack

Procedure body

Result

Restore \$s0

Return

Non-Leaf Procedures

- Procedures that call other procedures
- For nested call, caller needs to save on the stack:
 - Its return address
 - Any arguments and temporaries needed after the call
- Restore from the stack after the call

Non-Leaf Procedure Example

C code: int fact (int n) if (n < 1) return f; else return n * fact(n - 1); Argument n in \$a0 Result in \$v0

Non-Leaf Procedure Example

MIPS code:

```
fact:
   addi $sp, $sp, -8
                         # adjust stack for 2 items
   sw $ra, 4($sp)
                         # save return address
   sw $a0, 0($sp)
                         # save argument
   slti $t0, $a0, 1
                         # test for n < 1
   beq $t0, $zero, L1
   addi $v0, $zero, 1
                         # if so, result is 1
   addi $sp, $sp, 8
                         # pop 2 items from stack
   jr $ra
                         # and return
L1: addi $a0, $a0, -1
                         # else decrement n
        fact
                         # recursive call
   jal
        $a0, 0($sp)
                         # restore original n
    1w
   lw $ra, 4($sp)
                         # and return address
                         # pop 2 items from stack
   addi $sp, $sp, 8
        $v0, $a0, $v0
                         # multiply to get result
   mul
                         # and return
   jr
        $ra
```


Exercise

```
int f(int a, int b)
{
    return a < b;
}
int main()
{
    return f(3,4);
}</pre>
```

```
int g(int a)
   return a+8;
int f(int a, int b)
   return g(a)<b;
int main()
   return f(3,4);
```

```
int f(int a)
{
    if(a>=0) return f(a-1)+a;
    else return 0;
}
int main()
{
    return f(3);
}
```

Local Data on the Stack

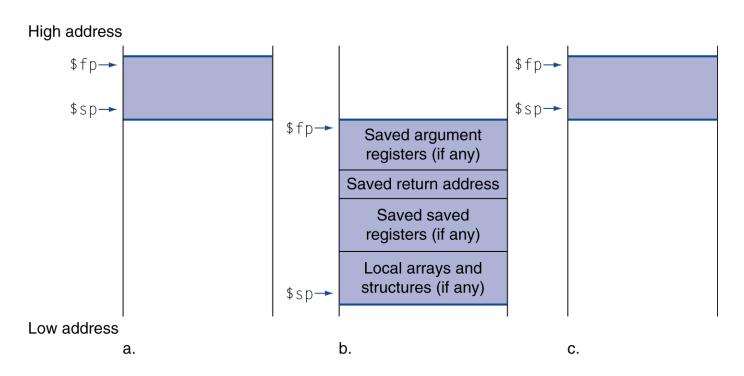

- Local data allocated by callee
 - e.g., C automatic variables
- Procedure frame (activation record)
 - Used by some compilers to manage stack storage

Character Data

- Byte-encoded character sets
 - ASCII: 128 characters
 - 95 graphic, 33 control
 - Latin-1: 256 characters
 - ASCII, +96 more graphic characters
- Unicode: 32-bit character set
 - Used in Java, C++ wide characters, ...
 - Most of the world's alphabets, plus symbols
 - UTF-8, UTF-16: variable-length encodings

Byte/Halfword Operations

- Could use bitwise operations
- MIPS byte/halfword load/store
 - String processing is a common case

```
lb rt, offset(rs) lh rt, offset(rs)
```

Sign extend to 32 bits in rt

```
lbu rt, offset(rs) lhu rt, offset(rs)
```

Zero extend to 32 bits in rt

```
sb rt, offset(rs) sh rt, offset(rs)
```

Store just rightmost byte/halfword

String Copy Example

C code (naïve): Null-terminated string void strcpy (char x[], char y[]) { int i; i = 0: while $((x[i]=y[i])!='\setminus 0')$ i += 1;Addresses of x, y in \$a0, \$a1 i in \$s0

String Copy Example

MIPS code:

```
strcpy:
                         # adjust stack for 1 item
   addi $sp, $sp, -4
   sw $s0, 0($sp)
                         # save $s0
   add $s0, $zero, $zero # i = 0
L1: add $t1, $s0, $a1
                         # addr of y[i] in $t1
   1bu $t2, 0($t1)
                         # $t2 = y[i]
                         # addr of x[i] in $t3
   add $t3, $s0, $a0
   sb $t2, 0($t3)
                         \# x[i] = y[i]
                         # exit loop if y[i] == 0
   beq $t2, $zero, L2
   addi $s0, $s0, 1
                         \# i = i + 1
                         # next iteration of loop
        L1
L2: lw $s0, 0($sp)
                         # restore saved $s0
   addi $sp, $sp, 4
                         # pop 1 item from stack
        $ra
                         # and return
   jr
```

32-bit Constants

- Most constants are small
 - 16-bit immediate is sufficient
- For the occasional 32-bit constant lui rt, constant
 - Copies 16-bit constant to left 16 bits of rt
 - Clears right 16 bits of rt to 0

Branch Addressing

- Branch instructions specify
 - Opcode, two registers, target address
- Most branch targets are near branch
 - Forward or backward

op	rs	rt	constant or address
6 bits	5 bits	5 bits	16 bits

- PC-relative addressing
 - Target address = PC + offset × 4
 - PC already incremented by 4 by this time

Jump Addressing

- Jump (j and jal) targets could be anywhere in text segment
 - Encode full address in instruction

ор	address
6 bits	26 bits

- (Pseudo)Direct jump addressing
 - Target address = PC_{31...28}: (address × 4)

Target Addressing Example

- Loop code from earlier example
 - Assume Loop at location 80000


Loop:	s11	\$t1,	\$s3,	2	80000	0	0	19	9	4	0
	add	\$t1,	\$t1,	\$ s6	80004	0	9	22	9	0	32
	٦w	\$t0,	0(\$t	1)	80008	35	9	8		0	
	bne	\$t0,	\$s5,	Exit	80012	5	8.	21	****	2	
	addi	\$s3,	\$s3,	1	80016	8	19	19	R R R R	1	
	j	Loop			80020	2	*****		20000		
Exit:					80024	-					

Branching Far Away

- If branch target is too far to encode with 16bit offset, assembler rewrites the code
- Example

```
beq $s0,$s1, L1
↓
bne $s0,$s1, L2
j L1
L2: ...
```

Addressing Mode Summary

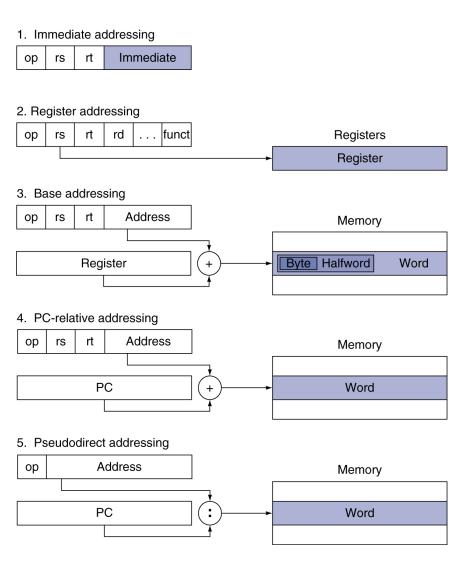

Synchronization


- Two processors sharing an area of memory
 - P1 writes, then P2 reads
 - Data race if P1 and P2 don't synchronize
 - Result depends of order of accesses
- Hardware support required
 - Atomic read/write memory operation
 - No other access to the location allowed between the read and write
- Could be a single instruction
 - E.g., atomic swap of register → memory
 - Or an atomic pair of instructions

Synchronization in MIPS

- Load linked: 11 rt, offset(rs)
- Store conditional: sc rt, offset(rs)
 - Succeeds if location not changed since the 11
 - Returns 1 in rt
 - Fails if location is changed
 - Returns 0 in rt
- Example: atomic swap (to test/set lock variable)

```
try: add $t0,$zero,$s4 ;copy exchange value 11 $t1,0($s1) ;load linked sc $t0,0($s1) ;store conditional beq $t0,$zero,try ;branch store fails add $s4,$zero,$t1 ;put load value in $s4
```

Translation and Startup

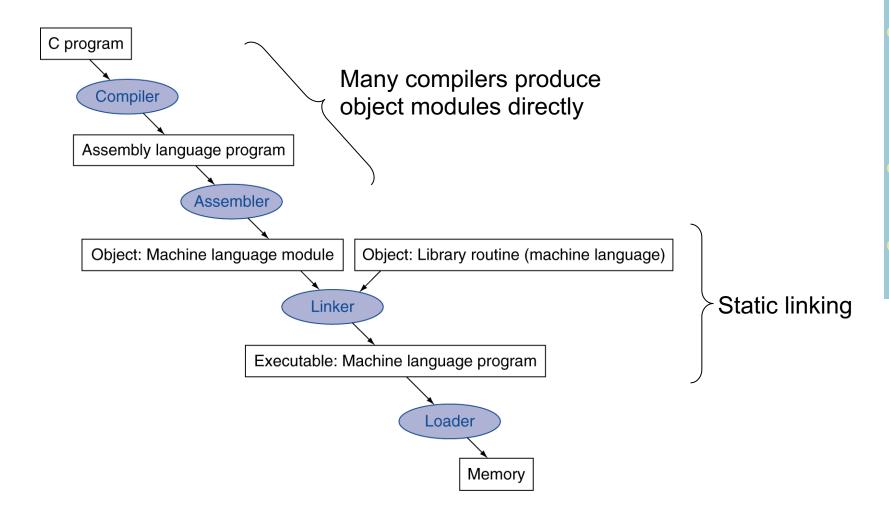

Assembler Pseudoinstructions

- Most assembler instructions represent machine instructions one-to-one
- Pseudoinstructions: figments of the assembler's imagination

```
move $t0, $t1 \rightarrow add $t0, $zero, $t1 blt $t0, $t1, L \rightarrow slt $at, $t0, $t1 bne $at, $zero, L
```

\$at (register 1): assembler temporary

Producing an Object Module

- Assembler (or compiler) translates program into machine instructions
- Provides information for building a complete program from the pieces
 - Header: described contents of object module
 - Text segment: translated instructions
 - Static data segment: data allocated for the life of the program
 - Relocation info: for contents that depend on absolute location of loaded program
 - Symbol table: global definitions and external refs
 - Debug info: for associating with source code

Linking Object Modules

- Produces an executable image
 - 1. Merges segments
 - 2. Resolve labels (determine their addresses)
 - 3. Patch location-dependent and external refs
- Could leave location dependencies for fixing by a relocating loader
 - But with virtual memory, no need to do this
 - Program can be loaded into absolute location in virtual memory space

Loading a Program

- Load from image file on disk into memory
 - 1. Read header to determine segment sizes
 - 2. Create virtual address space
 - 3. Copy text and initialized data into memory
 - Or set page table entries so they can be faulted in
 - 4. Set up arguments on stack
 - 5. Initialize registers (including \$sp, \$fp, \$gp)
 - 6. Jump to startup routine
 - Copies arguments to \$a0, ... and calls main
 - When main returns, do exit syscall

Dynamic Linking

- Only link/load library procedure when it is called
 - Requires procedure code to be relocatable
 - Avoids image bloat caused by static linking of all (transitively) referenced libraries
 - Automatically picks up new library versions


Lazy Linkage

Indirection table


Stub: Loads routine ID, Jump to linker/loader

Linker/loader code

Dynamically mapped code

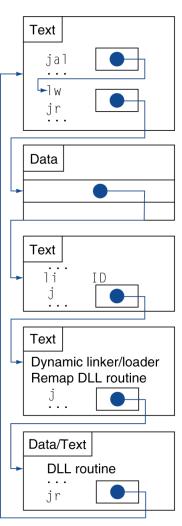




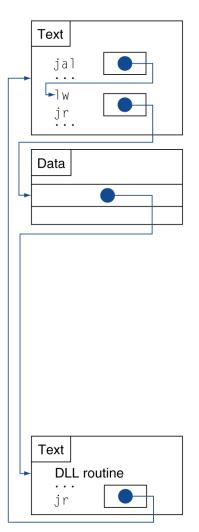

b. Subsequent calls to DLL routine

Starting Java Applications

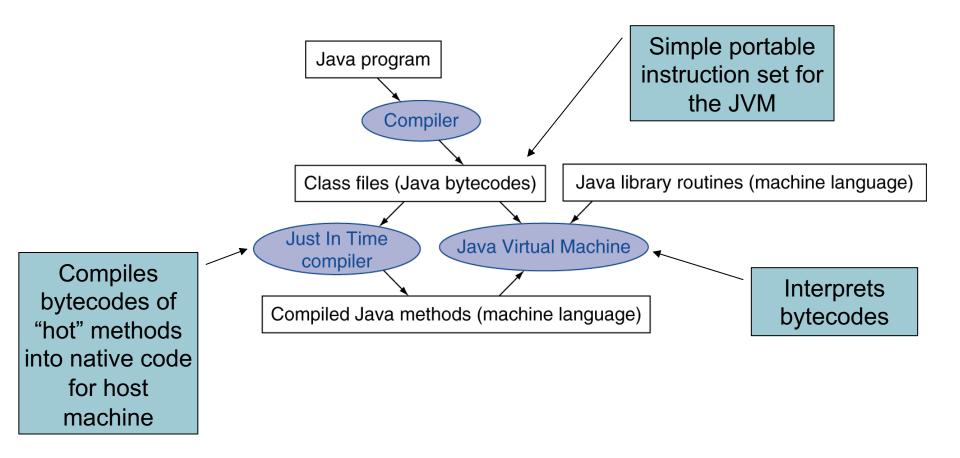

C Sort Example

 Illustrates use of assembly instructions for a C bubble sort function

```
Swap procedure (leaf)
    void swap(int v[], int k)
   int temp;
   temp = v[k];
   v[k] = v[k+1];
   v[k+1] = temp;
  v in $a0, k in $a1, temp in $t0
```

The Procedure Swap

The Sort Procedure in C

```
Non-leaf (calls swap)
  void sort (int v[], int n)
   swap(v,j);
v in $a0, k in $a1, i in $s0, j in $s1
```

The Procedure Body


```
move $s2, $a0
                          # save $a0 into $s2
                                                              Move
       move $s3, $a1  # save $a1 into $s3
                                                              params
       move $s0, $zero # i = 0
                                                              Outer loop
for1tst: slt $t0, $s0, $s3 # $t0 = 0 if $s0 \ge $s3 (i \ge n)
       beg t0, zero, exit1 # go to exit1 if s0 \ge s3 (i \ge n)
       addi \$\$1, \$\$0, -1 # j = i - 1
for2tst: slti t0, s1, 0 # t0 = 1 if s1 < 0 (j < 0)
       bne t0, zero, exit2 # go to exit2 if s1 < 0 (j < 0)
       sll $t1, $s1, 2 # $t1 = j * 4
                                                              Inner loop
       add $t2, $s2, $t1 # $t2 = v + (j * 4)
       1w $t3, 0($t2) # $t3 = v[j]
       1w $t4, 4($t2) # $t4 = v[j + 1]
       \$1t \$t0, \$t4, \$t3  # \$t0 = 0 if \$t4 \ge \$t3
       beg $t0, $zero, exit2 # go to exit2 if t4 \ge t3
       move $a0, $s2  # 1st param of swap is v (old $a0)
       move $a1, $s1  # 2nd param of swap is j
                                                              Pass
                                                              params
                       # call swap procedure
       jal swap
                                                              & call
       addi $s1, $s1, -1 # j -= 1
       j for2tst  # jump to test of inner loop
                                                              Inner loop
exit2: addi $s0, $s0, 1  # i += 1
       i for1tst
                    # jump to test of outer loop
                                                              Outer loop
```

The Full Procedure


```
# make room on stack for 5 registers
        addi $sp,$sp, -20
sort:
                              # save $ra on stack
        sw $ra, 16($sp)
        sw $s3,12($sp)
                              # save $s3 on stack
        sw $s2, 8($sp)
                          # save $s2 on stack
                            # save $s1 on stack
        sw $s1, 4($sp)
        sw $s0, 0(\$sp)
                              # save $s0 on stack
                              # procedure body
        exit1: lw $s0, 0($sp)
                              # restore $s0 from stack
        lw $s1, 4($sp)
                              # restore $s1 from stack
        lw $s2, 8($sp) # restore $s2 from stack
        lw $s3,12($sp) # restore $s3 from stack
        lw $ra,16($sp)
                           # restore $ra from stack
        addi $sp,$sp, 20
                              # restore stack pointer
        <del>jr $ra</del>
                              # return to calling routine
```

Effect of Compiler Optimization

Compiled with gcc for Pentium 4 under Linux

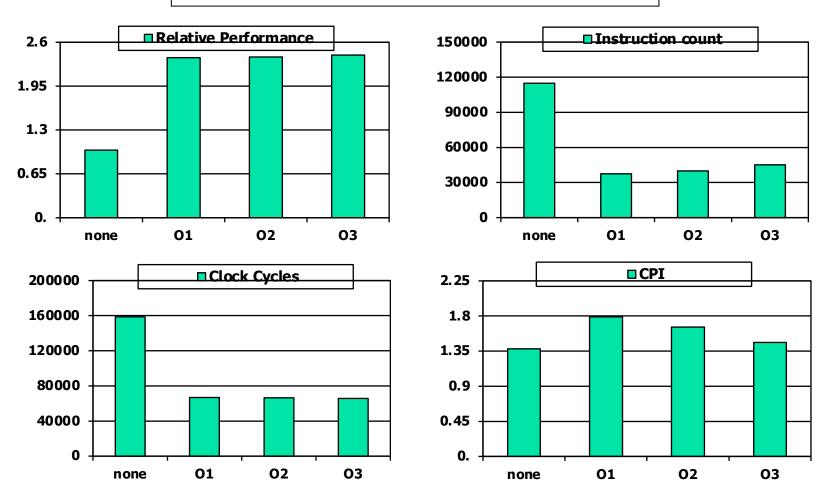

Effect of Language and Algorithm

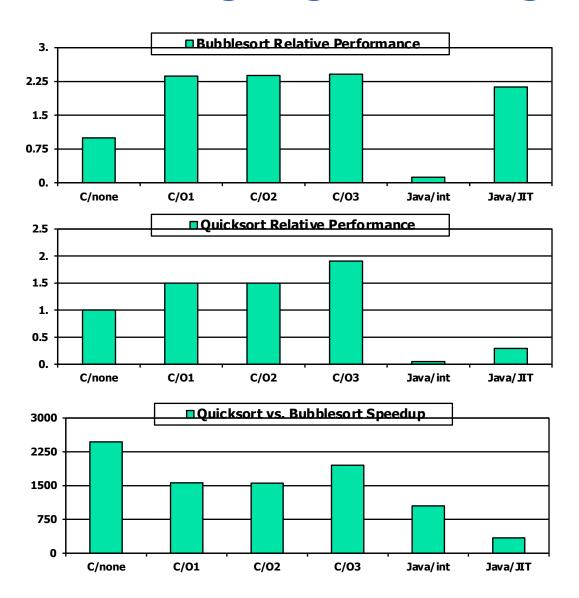

Lessons Learnt

- Instruction count and CPI are not good performance indicators in isolation
- Compiler optimizations are sensitive to the algorithm
- Java/JIT compiled code is significantly faster than JVM interpreted
 - Comparable to optimized C in some cases
- Nothing can fix a dumb algorithm!

Arrays vs. Pointers

- Array indexing involves
 - Multiplying index by element size
 - Adding to array base address
- Pointers correspond directly to memory addresses
 - Can avoid indexing complexity

Example: Clearing and Array

```
clear1(int array[], int size) {
                                         clear2(int *array, int size) {
 int i;
                                           int *p;
 for (i = 0; i < size; i += 1)
                                           for (p = \&array[0]; p < \&array[size];
   array[i] = 0;
                                               p = p + 1
                                             *p = 0:
                       # i = 0
      move $t0,$zero
                                                move t0,a0 # p = & array[0]
loop1: sll $t1,$t0,2
                       # $t1 = i * 4
                                                sll $t1,$a1,2 # $t1 = size * 4
      add $t2,$a0,$t1 # $t2 =
                                                add t2,a0,t1 # t2 =
                           &array[i]
                                                                #
                                                                   &array[size]
      sw zero, 0(t2) # array[i] = 0
                                         loop2: sw zero,0(t0) \# Memory[p] = 0
      addi t0,t0,1 # i = i + 1
                                                addi t0,t0,4 \# p = p + 4
      slt $t3,$t0,$a1 # $t3 =
                                                s1t $t3.$t0.$t2 # $t3 =
                       # (i < size)
                                                               #(p<&array[size])</pre>
      bne $t3,$zero,loop1 # if (...)
                                                bne $t3,$zero,loop2 # if (...)
                          # goto loop1
                                                                    # goto loop2
```

Comparison of Array vs. Ptr

- Multiply "strength reduced" to shift
- Array version requires shift to be inside loop
 - Part of index calculation for incremented i
 - c.f. incrementing pointer
- Compiler can achieve same effect as manual use of pointers
 - Induction variable elimination
 - Better to make program clearer and safer

ARM & MIPS Similarities


- ARM: the most popular embedded core
- Similar basic set of instructions to MIPS

	ARM	MIPS
Date announced	1985	1985
Instruction size	32 bits	32 bits
Address space	32-bit flat	32-bit flat
Data alignment	Aligned	Aligned
Data addressing modes	9	3
Registers	15 × 32-bit	31 × 32-bit
Input/output	Memory mapped	Memory mapped

Compare and Branch in ARM

- Uses condition codes for result of an arithmetic/logical instruction
 - Negative, zero, carry, overflow
 - Compare instructions to set condition codes without keeping the result
- Each instruction can be conditional
 - Top 4 bits of instruction word: condition value
 - Can avoid branches over single instructions

Instruction Encoding

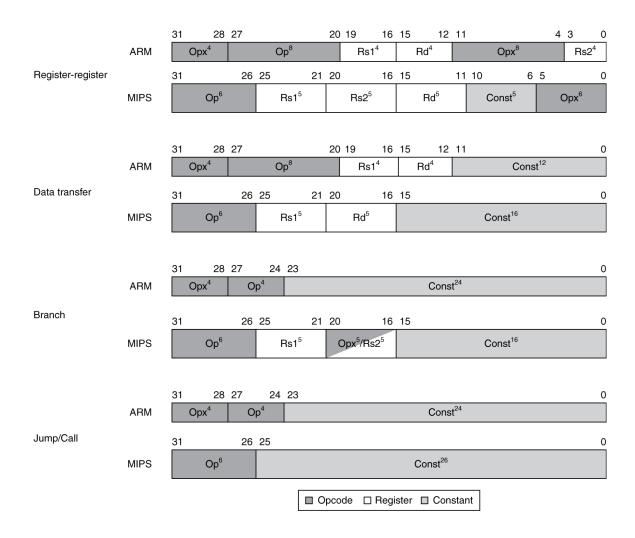

The Intel x86 ISA

- Evolution with backward compatibility
 - 8080 (1974): 8-bit microprocessor
 - Accumulator, plus 3 index-register pairs
 - 8086 (1978): 16-bit extension to 8080
 - Complex instruction set (CISC)
 - 8087 (1980): floating-point coprocessor
 - Adds FP instructions and register stack
 - 80286 (1982): 24-bit addresses, MMU
 - Segmented memory mapping and protection
 - 80386 (1985): 32-bit extension (now IA-32)
 - Additional addressing modes and operations
 - Paged memory mapping as well as segments


The Intel x86 ISA

- Further evolution...
 - i486 (1989): pipelined, on-chip caches and FPU
 Compatible competitors: AMD, Cyrix, ...
 - Pentium (1993): superscalar, 64-bit datapath
 - Later versions added MMX (Multi-Media eXtension) instructions
 - The infamous FDIV bug
 - Pentium Pro (1995), Pentium II (1997)
 - New microarchitecture (see Colwell, The Pentium Chronicles)
 - Pentium III (1999)
 - Added SSE (Streaming SIMD Extensions) and associated registers
 - Pentium 4 (2001)
 - New micròarchitécture
 - Added SSE2 instructions

The Intel x86 ISA

- And further...
 - AMD64 (2003): extended architecture to 64 bits
 - EM64T Extended Memory 64 Technology (2004)
 - AMD64 adopted by Intel (with refinements)Added SSE3 instructions
 - Intel Core (2006)
 - Added SSE4 instructions, virtual machine support
 - AMD64 (announced 2007): SSE5 instructions Intel declined to follow, instéad...
 - Advanced Vector Extension (announced 2008)
 - Longer SSE registers, more instructions
- If Intel didn't extend with compatibility, its competitors would!
 - Technical elegance ≠ market success

Basic x86 Registers

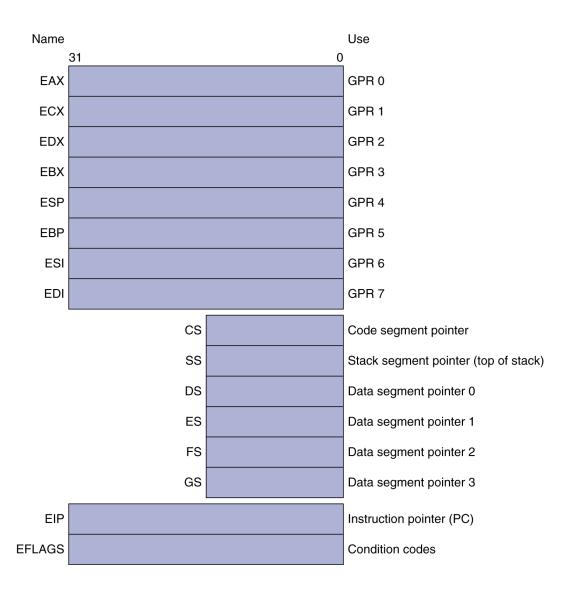

Basic x86 Addressing Modes


Two operands per instruction

Source/dest operand	Second source operand	
Register	Register	
Register	Immediate	
Register	Memory	
Memory	Register	
Memory	Immediate	

Memory addressing modes

- Address in register
- Address = R_{base} + displacement
- Address = R_{base} + 2^{scale} × R_{index} (scale = 0, 1, 2, or 3)
- Address = R_{base} + 2^{scale} × R_{index} + displacement

x86 Instruction Encoding

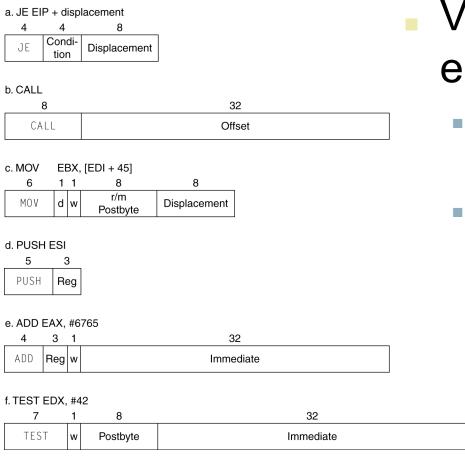

- Variable length encoding
 - Postfix bytes specify addressing mode
 - Prefix bytes modify operation
 - Operand length, repetition, locking, ...

Implementing IA-32

- Complex instruction set makes implementation difficult
 - Hardware translates instructions to simpler microoperations
 - Simple instructions: 1–1
 - Complex instructions: 1–many
 - Microengine similar to RISC
 - Market share makes this economically viable
- Comparable performance to RISC
 - Compilers avoid complex instructions

ARM v8 Instructions


- In moving to 64-bit, ARM did a complete overhaul
- ARM v8 resembles MIPS
 - Changes from v7:
 - No conditional execution field
 - Immediate field is 12-bit constant
 - Dropped load/store multiple
 - PC is no longer a GPR
 - GPR set expanded to 32
 - Addressing modes work for all word sizes
 - Divide instruction
 - Branch if equal/branch if not equal instructions

Fallacies

- Powerful instruction ⇒ higher performance
 - Fewer instructions required
 - But complex instructions are hard to implement
 - May slow down all instructions, including simple ones
 - Compilers are good at making fast code from simple instructions
- Use assembly code for high performance
 - But modern compilers are better at dealing with modern processors
 - More lines of code ⇒ more errors and less productivity

Fallacies

- Backward compatibility ⇒ instruction set doesn't change
 - But they do accrete more instructions

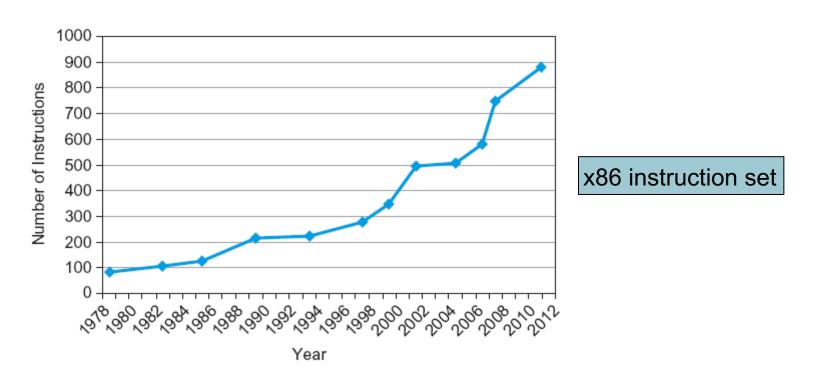

Pitfalls

- Sequential words are not at sequential addresses
 - Increment by 4, not by 1!
- Keeping a pointer to an automatic variable after procedure returns
 - e.g., passing pointer back via an argument
 - Pointer becomes invalid when stack popped

Concluding Remarks

- Design principles
 - 1. Simplicity favors regularity
 - 2. Smaller is faster
 - 3. Make the common case fast
 - 4. Good design demands good compromises
- Layers of software/hardware
 - Compiler, assembler, hardware
- MIPS: typical of RISC ISAs
 - . c.f. x86

Concluding Remarks

- Measure MIPS instruction executions in benchmark programs
 - Consider making the common case fast
 - Consider compromises

Instruction class	MIPS examples	SPEC2006 Int	SPEC2006 FP
Arithmetic	add, sub, addi	16%	48%
Data transfer	lw, sw, lb, lbu, lh, lhu, sb, lui	35%	36%
Logical	and, or, nor, andi, ori, sll, srl	12%	4%
Cond. Branch	beq, bne, slt, slti, sltiu	34%	8%
Jump	j, jr, jal	2%	0%