

TOPST D3-G Hardware

User Guide

Rev. 1. [G] 2025-01-

** The information in this document is subject to change without notice and should not be construed as a commitment by Telechips, Inc.

Kindly visit www.telechips.com for more information.

© 2025. Telechips, Inc. All rights reserved.

TABLE OF CONTENTS

Contents

TAE		F CONTENTS	
1	Int	roduction	4
2	Blo	ck Diagram	5
	.1	System Block Diagram	
_	<u>.2</u>	Features of TOPST D3-G Board	
<u>3</u>		<u>erview</u>	
3	.1	TOPST D3-G Board	7
4	Sne	ecifications	
	<u>.1</u>	LPDDR4X	
	<u>.2</u>	<u>eMMC</u>	
	<u>.3</u>	Serial NOR Flash Memory (Optional)	8
4	.4	Power Connector (J11)	8
	.5	JTAG Connector (J12)	
	.6	Boot Mode	
=			
	<u>4.6.</u>		
	<u>4.6.</u>	2 SNOR and eMMC Boot Mode	.12
4	.7	PCIe Connector	.13
_	.8	MIPI-CSI Connector	
_			
	<u>.9</u>	Micro SD Card Socket	
_	<u>.10</u>	<u>DP Connector</u>	
4	.11	Debug UART Pin Header Male(J8S1)	.18
_	.12	Ethernet Connector	.19
_	.13	USB Connectors.	
-			
	4.13		
	4.13		
	4.13	3.3 USB2.0 FWDN Connector (JC6)	.20
4	.14	CAN Pin Header Male(J5S1)	.21
_	.15	General Purpose I/O Pin Header Male	
_		ferences	
<u>5</u> 6			
		vision History	
		<u>.00: 2025-01-13</u>	
- 0	0.4 1		24
	ev. 1	.1: 2025-01-20	. 2 4
<u> </u>	ev. 1	<u>.1: 2025-01-20</u>	.24
_			.24
_	ures		.24
_			
_			
_		Figure 2.1 System Block Diagram	5
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View)	5 7
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply.	5 7 8
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11)	5 7 8
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12)	5 7 8 9
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors	5 7 8 9 9
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors	5 7 8 9 9
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode	5 7 8 9 9
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode	5 7 8 9 10 .10
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode	5 7 8 9 10 .10
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode	5 7 8 9 10 .10
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode	5 7 8 9 10 .10 .11 .12
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors	5 7 8 9 9 10 .11 .12 .13
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket	5 7 8 9 .10 .10 .11 .12 .13 .14
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector	5 7 8 9 .10 .11 .12 .13 .14 .16
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header	5 7 8 9 10 .11 .12 .13 .14 .16 .17
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45)	5 7 8 9 10 11 12 13 14 16 17 18
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45)	5 7 8 9 10 11 12 13 14 16 17 18
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7)	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7)	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20
_		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20
Fig		Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.11 MIPI-CSI Connectors Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View). Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors. Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.10 PCIE Express Standard Connector Figure 4.14 Micro SD Socket Figure 4.16 DP Connectors Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.20 Ethernet Connector (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail Figure 4.25 General Purpose I/O Pin Header Male	5 7 8 9 10 11 12 13 14 16 17 18 20 21
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.25 General Purpose I/O Pin Header Male	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .20 .21 .22
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.20 Ethernet Connectors (JC3, JC6, and JC7) Figure 4.21 CAN Pin Header Mail Figure 4.25 General Purpose I/O Pin Header Male Table 2.1 Features Table 3.1 Description of TOPST D3-G Board (Top View)	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20 .21 .22
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC SV Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail Figure 4.25 General Purpose I/O Pin Header Male Table 2.1 Features Table 3.1 Description of TOPST D3-G Board (Top View) Table 4.1 J12 Pin Description	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20 .21 .22
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC 5V Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.20 Ethernet Connectors (JC3, JC6, and JC7) Figure 4.21 CAN Pin Header Mail Figure 4.25 General Purpose I/O Pin Header Male Table 2.1 Features Table 3.1 Description of TOPST D3-G Board (Top View)	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20 .21 .22
Fig	ures	Figure 2.1 System Block Diagram Figure 3.1 TOPST D3-G Board (Top View) Figure 4.1 Plug Size for DC SV Power Supply Figure 4.2 Power Connector (J11) Figure 4.3 JTAG Connector (J12) Figure 4.5 Boot Mode related resistors Figure 4.7 Boot switch and Reset switch for using FWDN Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.8 Steps to use USB Boot Mode Figure 4.9 Change points for using SNOR and EMMC Boot Mode Figure 4.10 PCIe Express Standard Connector Figure 4.12 MIPI-CSI Connectors Figure 4.14 Micro SD Socket Figure 4.16 DP Connector Figure 4.18 Debug UART Pin Header Figure 4.20 Ethernet Connector (RJ45) Figure 4.22 USB Connectors (JC3, JC6, and JC7) Figure 4.23 CAN Pin Header Mail Figure 4.25 General Purpose I/O Pin Header Male Table 2.1 Features Table 3.1 Description of TOPST D3-G Board (Top View) Table 4.1 J12 Pin Description	5 7 8 9 .10 .11 .12 .13 .14 .16 .17 .18 .19 .20 .21 .22

Table 4.4 CONN2 Pin Description	15
Table 4.5 J1 Pin Description	
Table 4.6 J8S1 Pin Description	8
<u>Fable 4.7 Description of USB Connectors</u> 2	20
Fable 4.8 J5D1Pin Description	21
Table 4.9 JH1 Pin Description2	22

1 Introduction

This document is a hardware user guide for the TOPST D3-G Board based on the TCC8050. This document describes system installation, debugging, and detailed information on the overall design and usage of the TOPST D3-G Board.

1.1 Terminology

Terminology	Definition	
CPU	Central Processing Unit	
D3	Dolphin3	
FWDN	Firmware Download	
GPIO	General Purpose Input Output	
GPU	Graphic Processing Unit	
MCU	Micro-Controller Unit	
TOPST	Total Open-Platform for System development and Training	

2 BLOCK DIAGRAM

2.1 System Block Diagram

Figure 2.1 shows the system block diagram of the TOPST D3-G Board.

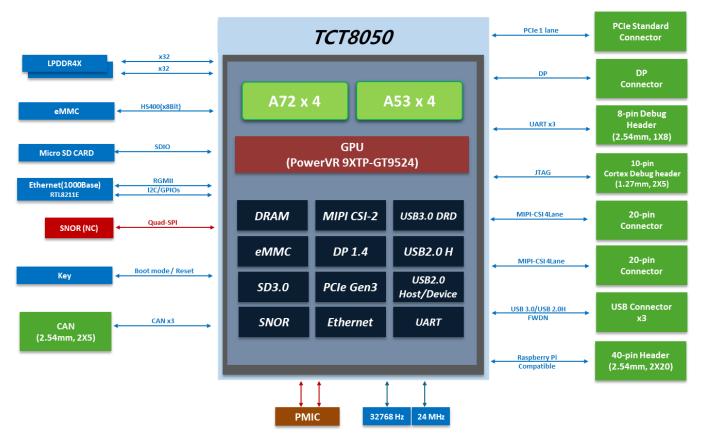


Figure 2.1 System Block Diagram

2.2 Features of TOPST D3-G Board

Table 2.1 describes the features of the TOPST D3-G Board.

Table 2.1 Features

-		Table 2.1 reatures	NI - I -
Function		Description	Note
Application TCT8050 Processor		TCT8050 Main core: Cortex-A72 Quad Sub-core: Cortex-A53 Quad	
MCU	Built-in TCT8050	Cortex-R5: 600 MHz @ 0.8V	
GPU	Built-in TCT8050	PowerVR 9XTP-GT9524	
	еММС	eMMC5.1 Speed: HS400 Density: 32 GB / 64 GB	
Memory	LPDDR4X	32-bit x 2 Ch Density: 4 GB Maximum Clock: 2133 MHz	
	Serial NOR Flash	Quad I/O Density: 256 Mb	Default: NC Option: Mount
	SD Card	SD Card socket	
Video Out	DP	DP 1.4, 4-lane (8.1 Gbps/lane) Up to 4-Display – Daisy Chain	
Video In	MIPI CSI	2-channel MIPI CSI2 2-lane	Option: 2-channel MIPI CSI2 4-lane
	USB	USB 3.0 Host – USB A-type USB 2.0 Host – USB A-type FWDN – USB C-type	
Peripheral	PCIe	1 Ch x PCIe 3.0 (1-lane)	
	CAN	3-channel	Requires SNOR to support CAN
	Ethernet	Ethernet PHY 1000Base-T / Legacy	
\/ T AI	Main	24 MHz	
X-TAL	Sub	32768 Hz	
	General Function Interface	Standard 40-pin/2.54 mm Pin Header Male Raspberry Pi Compatibility	
Pin Header Male	CAN	Standard 10-pin/2.54 mm Pin Header Male	
	UART	Standard 8-pin/2.54 mm Pin Header Male ■ Debug A72, A53, MC	
	USB3.0 Host	Type-A 9-pin	
	USB2.0 Host	Type-A 4-pin	
	USB2.0 FWDN	Type-C 12-pin	
	DP	DP Connector	
	SD Card	Micro SD Card Slot	
Connector	MIPI-CSI	1 mm pitch 15-pin	Option: 20-pin for 4-lane
	Peripheral Component Interconnect Express (PCIe)	PCI Express Standard	
	Ethernet	RJ45	
	JTAG	Standard 10-pin/1.27 mm	
Switch	Boot mode	System Boot mode switch	
SVVICCII	Reset	System RESET switch	

Note: For inquiries about the TOPST D3-G Board, contact Telechips. [1]

3 OVERVIEW

3.1 TOPST D3-G Board

Figure 3.1 shows the top view of the TOPST D3-G board.

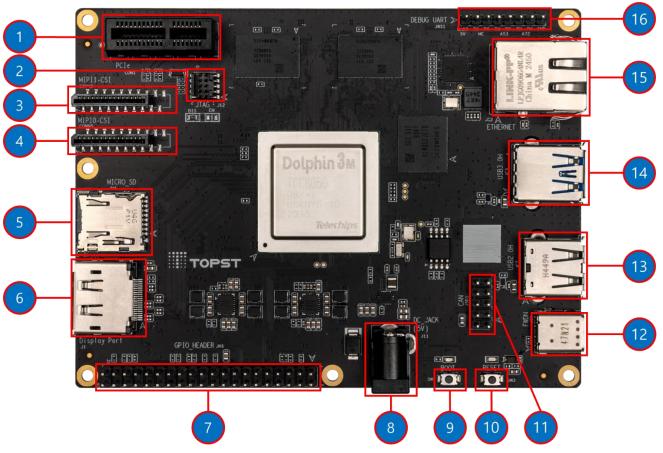


Figure 3.1 TOPST D3-G Board (Top View)

Table 3.1 describes the connectors of TOPST D3-G Board (top view).

Table 3.1 Description of TOPST D3-G Board (Top View)

Number	Reference Number	Name .	Description
1	CON1	PCI Express Standard Connector	Connect to the PCIe Device
2	J12	JTAG Connector	JTAG connector for system debugging
3	CONN2	MIPI-CSI Connector	Connect to the Camera module
4	CONN5	MIPI-CSI Connector	Connect to the Camera module
5	JM1	MICRO SD Socket	SD memory card socket
6	J1	DP Connector	Connect to the DP interface module
7	JH1	GPIO Header Male	General Function Interface Header
8	J11	DC_JACK Connector	5V Power Input Jack
9	SW1	Boot Mode Switch	Switch for changing boot mode
10	SW3	RESET Switch	Switch for system reset
11	J5D1	10-pin Pin Header Male	CAN Header
12	JC6	USB Type-C Connector	USB2.0 FWDN connector
13	JC7	USB Type-A Connector	USB2.0 High speed Host connector
14	JC3	USB Type-A Connector	USB3.0 Super speed connector
15	JC2	RJ45 Connector	Legacy Ethernet port
16	J8S1	8-pin Pin Header Male	UART debug Header

4 SPECIFICATIONS

4.1 LPDDR4X

The LPDDR4X memory is located on the TOPST D3-G board and the information is as follows:

- 32-bit x 2-channel
- Density: 4 GB
- Maximum Clock: 2133 MHz

4.2 eMMC

The eMMC memory is located on the TOPST D3-G board and the information is as follows:

- eMMC 5.1
- Density: 32 GB or 64 GB
- Supports up to HS400

4.3 Serial NOR Flash Memory (Optional)

SNOR (Quad SPI type) is located on the TOPST D3-G board and the information is as follows:

- Quad I/O
- Density: 256 Mb
- -
- Optional by Custom made Upon Order

4.4 Power Connector (J11)

J11 is a DC 5V external power supply connector with a $2.5 \text{ mm} \times 5.5 \text{ mm}$ plug. It is used to supply power to the TOPST D3-G board. The power supply current should be at least 5A.

Figure 4.1 shows the power plug size for DC 5V power supply.



Figure 4.1 Plug Size for DC 5V Power Supply

Note: The plug size must be compatible with 2.1 mm to 2.5 mm



Figure 4.2 Power Connector (J11)

4.5 JTAG Connector (J12)

J12 is a standard 10-pin/1.27 mm connector for the JTAG emulator.

Figure 4.3 shows the location of J12 on the TOPST D3-G board.



Figure 4.3 JTAG Connector (J12)

Table 4.1 describes the pins of J12.

Table 4.1 J12 Pin Description

Din Number	Colomotic Not Name	DIR	Passwinkian	
Pin Number	Schematic Net Name	CPU ∢▶ J12	Description	
1	SYS_3P3	-	Power 3.3V	
2	TMS	◀	Test Mode State	
3	DGND	-	Ground	
4	TCK	◀	Test Clock	
5	DGND	-	Ground	
6	TDO	>	Test Data Output	
7	NC	-	Not Connected	
8	TDI	◀	Test Data In	
9	DGND	-	Ground	
10	RESET#	-	System Reset	

4.6 Boot Mode

TOPST D3-G board supports three boot modes:

- USB Boot Mode (FWDN)
- eMMC Boot Mode (GPIO_SD0 Group)
- SNOR and eMMC Boot Mode (Option)

Figure 4.4 shows the location of Boot Mode resistors on the TOPST D3-G board. The resistors are located on the bottom of the board. The TOPST D3-G board is fixed to **eMMC Boot Mode by default**. If there is no boot image in the eMMC device, the Boot Mode is automatically switched to USB Boot Mode.

Figure 4.4 Boot Mode-related Resistors

4.6.1 USB Boot Mode (FWDN)

Figure 4.5 shows the Boot Mode switch and RESET switch. USB Boot Mode is used for firmware updates. To enter FWDN mode, both Boot mode switch and RESET switch are required.

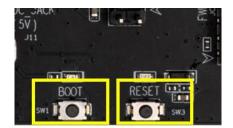


Figure 4.5 Boot Mode Switch and RESET Switch for Entering FWDN Boot Mode

USB Mode Switch Operation Sequence

The following steps describes the switch operation for entering USB Boot Mode.

- 1. When power is supplied, the LED above the RESET switch turns on.
- 2. Press and hold the Boot Mode switch. When you press the Boot Mode switch, you can see the RED Light above switch. Keep pressing the switch to keep the LED on.
- 3. The RESET switch LED is green by default. Press the RESET switch once, then the green LED turns off and then turns on again.
- 4. Release the Boot Mode switch.

Figure 4.6 shows the operation sequence of the Boot Mode and RESET switches for entering USB Boot Mode (FWDN).

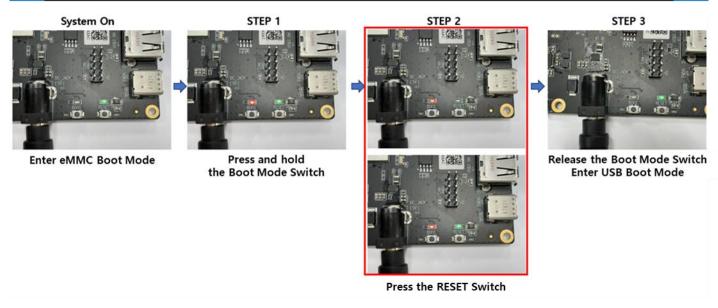


Figure 4.6 Sequence of Entering USB Boot Mode (FWDN)

4.6.2 SNOR and eMMC Boot Mode

SNOR and eMMC Boot Mode is optional. To use this boot mode, the SNOR IC must be mounted on the board, and the SMT of boot mode resistors must be changed.

Figure 4.7 shows the required changes for using SNOR and eMMC Boot Mode.

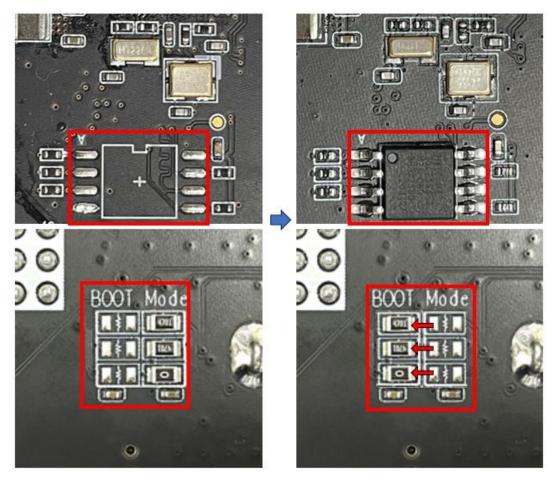


Figure 4.7 Required Changes for Using SNOR and eMMC Boot Mode

4.7 PCIe Connector

Figure 4.8 shows the PCIe connector on the TOPST D3-G board. The TOPST D3-G board supports PCIe-gen3 x 1-lane. This connector allows the use of PCIe interface devices.



Figure 4.10 PCIe Express Standard Connector Table 4.2 describes the pins of CON1.

Table 4.2 CON1 Pin Description

Table 4.2 CON1 PIN Description				
Pin Number	Schematic Net Name	DIR CPU ∢ ▶ CON1	Description	
A1	PCIe DET#	<u> </u>	PCIe Card Detection	
B1	12V TP	-	Power 12V Test Point	
A2	12V_TP	-	Power 12V Test Point	
B2	12V_TP	-	Power 12V Test Point	
A3	12V_TP	-	Power 12V Test Point	
B3	12V_TP	-	Power 12V Test Point	
A4	DGND	-	Ground	
B 4	DGND	-	Ground	
A5	NC	-	Not Connected	
B5	NC	-	Not Connected	
A6	NC	-	Not Connected	
B6	NC	-	Not Connected	
A7	NC	-	Not Connected	
B7	DGND	-	Ground	
A8	NC	-	Not Connected	
B8	PCIe_3P3	-	Power 3.3V	
A9	PCIe_3P3	-	Power 3.3V	
B9	NC	-	Not Connected	
A10	PCIe_3P3	-	Power 3.3V	
B10	PCIe_3P3	-	Power 3.3V	
A11	PCIe_RST#	>	PCIe Reset	
B11	PCIe_WAKE#	◀	PCIe Wake	
A12	DGND	-	Ground	
B12	PCIe_CLKREQ#	◀	PCIe Clock Request	
A13	PCIe_REFCLKOUT_P	>	PCIe Positive Clock	
B13	DGND	-	Ground	
A14	PCIe_REFCLKOUT_N	>	PCIe Negative Clock	
B14	PCIe_TXP	>	PCIe Transmit Positive Data	
A15	DGND	-	Ground	
B15	PCIe_TXN	>	PCIe Transmit Negative Data	
A16	PCIe_RXP	◀	PCIe Receive Positive Data	
B16	DGND	-	Ground	
A17	PCIe_RXN	•	PCIe Receive Negative Data	
B17	PCIe_DET#	•	PCIe Card Detection	
A18	DGND	-	Ground	
B18	DGND	-	Ground	

4.8 MIPI-CSI Connector (CONN2 and CONN5)

Figure 4.9 shows the MIPI-CSI connectors on the TOPST D3-G board. The TOPST D3-G board supports 2 channels of MIPI-CSI, each configured with a 2-lane interface. A 4-lane interface is optional and requires a 20-pin connector instead of a 15-pin connector.

Figure 4.12 MIPI-CSI Connectors

Table 4.3 describes the pins of CONN5.

Table 4.3 CONN5 Pin Description

Din Namahan	Cabamatia Nat Nama	DIR	Describbles
Pin Number	Schematic Net Name	CPU ∢ ▶ CONN5	Description
1	RPI_CAM_3P3	-	Power 3.3V
2	MIPIO_SDA	◆ ▶	MIPIO_I2C Data
3	MIPI0_SCL	•	MIPIO_I2C Clock
4	MIPI0_GPIO1	•	General Purpose I/O
5	MIPIO_PD	•	General Purpose I/O
6	GND	-	Ground
7	MIPIO_S_CLKP	•	MIPIO CSI2 Positive Clock
8	MIPIO_S_CLKN	•	MIPIO CSI2 Negative Clock
9	GND	-	Ground
10	MIPIO_S_D1P	•	MIPIO CSI2 Positive Data 1
11	MIPIO_S_D1N	•	MIPIO CSI2 Negative Data 1
12	GND	-	Ground
13	MIPIO_S_D0P	•	MIPIO CSI2 Positive Data 0
14	MIPIO_S_DON	•	MIPIO CSI2 Negative Data 0
15	GND	-	Ground
16	MIPIO_S_D3P	◄	MIPIO CSI2 Positive Data 3
17	MIPIO_S_D3N	▼	MIPIO CSI2 Negative Data 3
18	GND	-	Ground
19	MIPIO_S_D2P	◀	MIPIO CSI2 Positive Data 2
20	MIPIO_S_D2N	•	MIPIO CSI2 Negative Data 2

Table 4.4 describes the pins of CONN2.

Table 4.4 CONN2 Pin Description

Pin Number	Schematic Net Name	DIR	Description
Pin Number		CPU ∢ ▶ CONN2	Description
1	RPI_CAM_3P3	-	Power 3.3V
2	MIPI1_SDA	◆ ▶	MIPI1_I2C Data
3	MIPI1_SCL	•	MIPI1_I2C Clock
4	MIPI1_GPIO1	▼	General Purpose I/O
5	MIPI1_PD	>	General Purpose I/O
6	GND	-	Ground
7	MIPI1_S_CLKP	▼	MIPI1 CSI2 Positive Clock
8	MIPI1_S_CLKN	▼	MIPI1 CSI2 Negative Clock
9	GND	-	Ground
10	MIPI1_S_D1P	▼	MIPI1 CSI2 Positive Data 1
11	MIPI1_S_D1N	▼	MIPI1 CSI2 Negative Data 1
12	GND	-	Ground
13	MIPI1_S_D0P	▼	MIPI1 CSI2 Positive Data 0
14	MIPI1_S_D0N	▼	MIPI1 CSI2 Negative Data 0
15	GND	-	Ground
16	MIPI1_S_D3P	▼	MIPI1 CSI2 Positive Data 3
17	MIPI1_S_D3N		MIPI1 CSI2 Negative Data 3
18	GND	-	Ground
19	MIPI1_S_D2P	■	MIPI1 CSI2 Positive Data 2
20	MIPI1_S_D2N	4	MIPI1 CSI2 Negative Data 2

4.9 Micro SD Card Socket

Figure 4.10 shows the micro SD socket. The TOPST D3-G board supports SD3.0.



Figure 4.10 Micro SD Socket

4.10 DP Connector

Figure 4.11 shows the DP connector on the TOPST D3-G board.

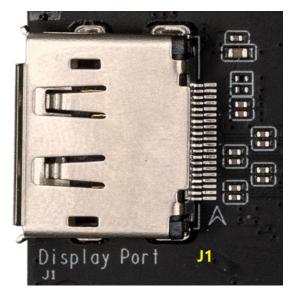


Figure 4.11 DP Connector

Table 4.5 describes the pins of J1.

Table 4.5 J1 Pin Description

		DIR	
Pin Number	Schematic Net Name	CPU ∢ ▶ J1	Description
1	DP_PHY_TX0_P	•	DP output data 0+
2	DGND		Ground
3	DP_PHY_TX0_M	>	DP output data 0-
4	DP_PHY_TXRX1_P	>	DP output data 1+
5	DGND		Ground
6	DP_PHY_TXRX1_M	>	DP output data 1-
7	DP_PHY_TXRX2_P	>	DP output data 2+
8	DGND		Ground
9	DP_PHY_TXRX2_M	>	DP output data 2-
10	DP_PHY_TX3_P	>	DP output data 3+
11	DGND		Ground
12	DP_PHY_TX3_M	>	DP output data 3-
13	DP_CFG1		Not Connected
14	DP_CFG2		Not Connected
15	DP_AUX_P	◆ ▶	DP AUX+
16	DGND		Ground
17	DP_AUX_N	◆ ▶	DP AUX-
18	DP_HPD_CON	•	Hot Plug Detection for DP
19	TP		Test Point
20	DP_CON_3P3		DP Power 3.3V
21	DGND		Ground
22	DGND		Ground
23	DGND		Ground
24	DGND		Ground

4.11 Debug UART Pin Header Male(J8S1)

Figure 4.12 shows the debug UART header pin. It consists of 3 UART channels for debugging of each CPU core. Pin 1 (UART 5V) is a dummy pin and does not provide an output.



Figure 4.12 Debug UART Pin Header

Table 4.6 describes the pins of J8S1.

Table 4.6 J8S1 Pin Description

Pin Number	Schematic Net Name	DIR	Description
Pin Number	Schematic Net Name	CPU ∢ ▶ J8S1	Description
1	UART_5P0	•	Dummy Pin
2	MC_DBG_UT_TXD	•	UART Transmit Data of MCU core (Cortex-R5)
3	MC_DBG_UT_RXD	•	UART Receive Data of MCU core (Cortex-R5)
4	A53_DBG_UT_TXD	•	UART Transmit Data of sub-core (Cortex-A53)
5	A53_DBG_UT_RXD	•	UART Receive Data of sub-core (Cortex-A53)
6	A72_DBG_UT_TXD	•	UART Transmit Data of main core (Cortex-A72)
7	A72_DBG_UT_RXD	•	UART Receive Data of main core (Cortex-A72)
8	DGND	-	Ground

4.12 Ethernet Connector (JC2)

Figure 4.13 shows the Ethernet connector on the TOPST D3-G board. The TOPST D3-G board have one Ethernet MAC controller. JC2 is an RJ45 connector that supports 10 Mbps, 100 Mbps, and 1000 Mbps Ethernet connections.



Figure 4.20 Ethernet Connector (RJ45)

4.13 USB Connectors

TOPST D3-G board support three types of USB:

- 1 channel for USB3.0 Host
- 1 channel for USB2.0 Host
- 1 channel for USB2.0 FWDN

Figure 4.22 shows the USB Connectors of the TOPST D3-G board.



Figure 4.14 USB Connectors (JC3, JC6, and JC7)

Table 4.7 describes connector for each USB.

Table 4.7 Description of USB Connectors

Reference Number	Function	Description
JC3	USB3.0 Host	USB3.0 Type-A Connector
JC7	USB2.0 Host	USB2.0 Type-A Connector
JC6	USB2.0 FWDN	USB2.0 Type-C Connector

4.13.1 USB3.0 Host Connector (JC3)

JC3 is a USB3.0 Type-A connector for the host port.

USB3.0 supports backward compatibility, so this port can be used for both USB SuperSpeed and USB High-Speed devices.

4.13.2 USB2.0 Host Connector (JC7)

JC7 is a USB2.0 Type-A connector for USB High-Speed host port.

4.13.3 USB2.0 FWDN Connector (JC6)

JC6 only supports USB2.0 FWDN. This connector is used to update software in USB Boot Mode.

4.14 CAN Pin Header Male (J5S1)

Figure 4.15 shows the CAN pin header on the TOPST D3-G board. The TOPST D3-G board supports 3-channel CAN.



Figure 4.15 CAN Pin Header Mail

Table 4.8 describes the pins of J5D1.

Table 4.8 J5D1Pin Description

Pin Number	Schematic Net Name	DIR	Description
		CPU ∢ ▶ J5D1	
1	CAN_3P3	•	Power 3.3V
2	CAN_3P3		Power 3.3V
3	CAN0_TX	•	Transmit Data of CANO channel
4	CAN0_RX	•	Receive Data of CANO channel
5	CAN1_TX	•	Transmit Data of CAN1 channel
6	CAN1_RX	•	Receive Data of CAN1 channel
7	CAN2_TX	•	Transmit Data of CAN2 channel
8	CAN2_RX	•	Receive Data of CAN2 channel
9	DGND	•	Ground
10	DGND	-	Ground

4.15 General Purpose I/O Pin Header Male (JH1)

Figure 4.16 shows the GPIO pin header on the TOPST D3-G board. The GPIO pin header can be used to connect the HAT, which is a Raspberry Pi accessory.

Figure 4.16 General Purpose I/O Pin Header Male

Table 4.9 describes the pins of JH1.

Table 4.9 JH1 Pin Description

Table 4.9 JH1 Pin Description				
Pin Number	Schematic Net Name	DIR CPU∢▶ JH1	Description	
1	RPI 3P3	-	Power 3.3V	
2	RPI_5P0	-	Power 5.0V	
3	RPI_GPIO_C21/I2C_SDA	4 >	General Purpose I/O or I2C Data	
4	RPI_5P0	-	Power 5.0V	
5	RPI_GPIO_C20/I2C_SCL	◆ ▶	General Purpose I/O or I2C Clock	
6	GND	-	Ground	
7	RPI_GPIO_C22	◆ ▶		
8	RPI_GPIO_C26/ TX	◆ ►	General Purpose I/O or UART TX	
9	GND	-	Ground	
10	RPI_GPIO_C27/ RX	4 >	General Purpose I/O or UART RX	
11	RPI_GPIO_C23	◆ ▶	General Purpose I/O	
12	RPI_GPIO_C28/PWM	◆ ▶	General Purpose I/O or PWM	
13	RPI_GPIO_C24	4 >	General Purpose I/O	
14	GND	-	Ground	
15	RPI_GPIO_C25	4 >	General Purpose I/O	
16	RPI_GPIO_C29	4 >	General Purpose I/O	
17	RPI_3P3	-	Power 3.3V	
18	RPI_GPIO_C04	◆ ▶	General Purpose I/O	
19	RPI_GPIO_C02/SPI0_MOSI	∢ ▶	General Purpose I/O or SPI MOSI	
20	GND	-	Ground	
21	RPI_GPIO_C03/SPI0_MISO	∢ ▶	General Purpose I/O or SPI MISO	
22	RPI_GPIO_C05		General Purpose I/O	
23	RPI_GPIO_C00/SPI0_SCLK	∢ ▶	General Purpose I/O or SPI SCLK	
24	RPI_GPIO_C01/SPI0_CS0	∢ ▶	General Purpose I/O or SPI CS	
25	GND	-	Ground	
26	RPI_GPIO_C06/SPI0_CS1	◆ ▶	General Purpose I/O or SPI CS	
27	RESERVED0(NC)	-	Not Connection	
28	RESERVED1(NC)	-	Not Connection	
29	RPI_GPIO_G01	∢ ▶	General Purpose I/O	
30	GND	-	Ground	
31	RPI_GPIO_G02	∢ ▶	General Purpose I/O	
32	RPI_GPIO_G04/PWM	∢ ►	General Purpose I/O or PWM	
33	RPI_GPIO_G03/PWM	∢ ▶	General Purpose I/O or PWM	
34	GND	-	Ground	
35	RPI_GPIO_G10/SPI1_MISO	∢ ►	General Purpose I/O or SPI MISO	
36	RPI_GPIO_G08/SPI1_CS0	∢ ▶	General Purpose I/O or SPI CS	
37	RPI_GPIO_G06	∢ ▶	General Purpose I/O	
38	RPI_GPIO_G09/SPI1_MOSI	∢ ▶	General Purpose I/O or SPI MOSI	
39	GND	-	Ground	
40	RPI_GPIO_G07/SPI1_SCLK	◆ ▶	General Purpose I/O or SPI SCLK	

5 REFERENCES

[1] Contact TOPST for more details: topst@topst.ai

Note: Reference documents can be provided whenever available, depending on the terms of a contract. If the reference documents are unavailable, the contents directly related to your development can be guided.

6 REVISION HISTORY

Rev. 1.00: 2025-01-13

■ First version release

DISCLAIMER

This material is being made available solely for your internal use with its products and service offerings of Telechips, Inc ("Telechips"). and/or licensors and shall not be used for any other purposes. This material may not be altered, edited, or modified in any way without Telechips' prior written approval. Unauthorized use or disclosure of this material or the information contained herein is strictly prohibited, and you agree to indemnify Telechips and licensors for any damages or losses suffered by Telechips and/or licensors for any unauthorized uses or disclosures of this material, in whole or part. Further, Telechips, Inc. reserves the right to revise this material and to make changes to its content, at any time, without obligation to notify any person or entity of such revisions or changes.

THIS MATERIAL IS BEING PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, WHETHER EXPRESSED, IMPLIED, STATUTORY OR OTHERWISE. TO THE MAXIMUM EXTENT PERMITTED BY LAW, TELECHIPS AND/OR LICENSORS SPECIFICALLY DISCLAIM ALL WARRANTIES OF TITLE, MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, COMPLETENESS OR ACCURACY, AND ALL WARRANTIES ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. MOREOVER, NEITHER TELECHIPS, INC. NOR LICENSORS, SHALL BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY EXPENSES, LOSSES, USE, OR ACTIONS HOWSOEVER INCURRED OR UNDERTAKEN BY YOU IN RELIANCE ON THIS MATERIAL.

THIS MATERIAL IS DESIGNED FOR GENERAL PURPOSE, AND ACCORDINGLY YOU ARE RESPONSIBLE FOR ALL OR ANY OF INTELLECTUAL PROPERTY LICENSES REQUIRED FOR ACTUAL APPLICATION. TELECHIPS, INC. DOES NOT PROVIDE ANY INDEMNIFICATION FOR ANY INTELLECTUAL PROPERTIES OWNED BY THIRD PARTY.

COPYRIGHT STATEMENT

Copyright in this material provided by Telechips, Inc. is owned by Telechips unless otherwise noted. For reproduction or use of Telechips' copyright material, prior written consent should be obtained from Telechips. That prior written consent, if given, will be subject to conditions that Telechips' name should be included and interest in the material should be acknowledged when the material is reproduced or quoted, either in whole or in part. You must not copy, adapt, publish, distribute, or commercialize any contents contained in the material in any manner without the written permission of Telechips. Trademarks used in Telechips' copyright material are the property of Telechips.

For customers who use Google technology:

"Copyright © 2013 Google Inc. All rights reserved."