

Vivado Design Suite Tutorial

High-Level Synthesis

UG871 (v2018.3) December 5, 2018



See all versions of this document

 XILINX®

Revision History

The following table shows the revision history for this document.

Section	Revision Summary
12/05/2018 Version 2018.3	
Locating the Tutorial Design Files	Updated links.
06/06/2018 Version 2018.2	
Overview	Updated the Overview section.
Block Level I/O Protocol ap_ctrl_hs	Updated the Block Level I/O protocol ap_ctrl_hs table.
Port Level I/O Protocol Options for Lab 2	Updated the Port Level I/O Protocol Options for Lab 2 table.

Table of Contents

Revision History	2
Chapter 1: Tutorial Description	
Overview	6
Software Requirements.....	7
Hardware Requirements	8
Locating the Tutorial Design Files.....	8
Preparing the Tutorial Design Files.....	8
Chapter 2: High-Level Synthesis Introduction	
Overview	10
Tutorial Design Description.....	10
Lab 1: Creating a High-Level Synthesis Project	11
Lab 2: Using the Tcl Command Interface	28
Lab 3: Using Solutions for Design Optimization.....	32
Conclusion	45
Chapter 3: C Validation	
Overview	46
Tutorial Design Description.....	46
Lab 1: C Validation and Debug	47
Lab 2: C Validation with ANSI C Arbitrary Precision Types	55
Lab 3: C Validation with C++ Arbitrary Precision Types.....	59
Conclusion	62
Chapter 4: Interface Synthesis	
Overview	63
Tutorial Design Description.....	63
Lab 1: Block-Level I/O Protocols	64
Lab 2: Port I/O Protocols	72
Lab 3: Implementing Arrays as RTL Interfaces.....	76
Lab 4: Implementing AXI4 Interfaces	90

Conclusion	97
------------------	----

Chapter 5: Arbitrary Precision Types

Overview	98
Tutorial Design Description	99
Lab 1: Arbitrary Precision	99
Lab 2: Arbitrary Precision	104
Conclusion	109

Chapter 6: Design Analysis

Overview	110
Tutorial Design Description	111
Lab 1: Design Optimization	111
Conclusion	144

Chapter 7: Design Optimization

Overview	145
Tutorial Design Description	146
Lab 1: Optimizing a Matrix Multiplier	146
Lab 2: C Code Optimized for I/O Accesses	165
Conclusion	167

Chapter 8: RTL Verification

Overview	168
Tutorial Design Description	168
Lab 1: RTL Verification and the C Test Bench	169
Lab 2: Viewing Trace Files in Vivado	176
Lab 3: Viewing Trace Files in ModelSim	181
Conclusion	186

Chapter 9: Using HLS IP in IP Integrator

Overview	187
Tutorial Design Description	187
Lab 1: Integrate HLS IP with a Xilinx IP Block	188
Conclusion	215

Chapter 10: Using HLS IP in a Zynq SoC Design

Overview	216
Tutorial Design Description	216
Lab 1: Implement Vivado HLS IP on a Zynq Device	217

Lab 2: Streaming Data Between the Zynq CPU and HLS Accelerator Blocks	244
Conclusion	270

Chapter 11: Using HLS IP in System Generator for DSP

Overview.....	271
Tutorial Design Description.....	271
Lab 1: Package HLS IP for System Generator	271
Conclusion	277

Appendix A: Additional Resources and Legal Notices

Xilinx Resources	278
Solution Centers.....	278
Documentation Navigator and Design Hubs	278
References	279
Training Resources.....	279
Please Read: Important Legal Notices	279

Tutorial Description

Overview

This Vivado® tutorial is a collection of smaller tutorials that explain and demonstrate all steps in the process of transforming C, C++ and SystemC code to an RTL implementation using High-Level Synthesis. The tutorial shows how you create an initial RTL implementation and then you transform it into both a low-area and high-throughput implementation by using optimization directives without changing the C code. The following sections describe a summary of each tutorial.

High-Level Synthesis Introduction

This tutorial introduces Vivado High-Level Synthesis (HLS). You can learn the primary tasks for performing High-Level Synthesis using both the Graphical User Interface (GUI) and Tcl environments.

C Validation

This tutorial reviews the aspects of a good C test bench and demonstrates the basic operations of the Vivado High-Level Synthesis C debug environment. The tutorial also shows how to debug arbitrary precision data types.

Interface Synthesis

This interface synthesis tutorial reviews all aspects of creating ports for the RTL design. You can learn how to control block-level I/O port protocols and port I/O protocols, how arrays in the C function can be implemented as multiple ports and types of interface protocol (RAM, FIFO, AXI4-Stream), and how AXI4 bus interfaces are implemented.

To create an optimal implementation of the design the tutorial concludes with a design example where I/O accesses and logic are optimized together.

Arbitrary Precision Types

The lab exercises in this tutorial contrast a C design written in native C types with the same design written with Vivado High-Level Synthesis arbitrary precision types, showing how the latter improves the quality of the hardware results without sacrificing accuracy.

Design Analysis

This tutorial uses a DCT function to explain the features of the interactive design analysis features in Vivado High-Level Synthesis. The initial design takes you through a number of analysis and optimization stages that highlight all the features of the analysis perspective and provide the basis for a design optimization methodology.

Design Optimization

Using a matrix multiplier example, this tutorial reviews two-design optimization techniques. The Design Optimization lab explains how a design can be pipelined, contrasting the approach of pipelining the loops versus pipelining the functions.

The tutorial shows you how to use the insights learned from analyzing to update the initial C code and create a more optimal implementation of the design.

RTL Verification

This tutorial shows how you can use the RTL cosimulation feature to automatically verify the RTL created by synthesis. The tutorial demonstrates the importance of the C test bench and shows you how to use the output from RTL verification to view the waveform diagrams in the Vivado and Mentor Graphics ModelSim simulators.

Using HLS IP in IP Integrator

This tutorial shows how RTL designs created by High-Level Synthesis are packaged as IP, added to the Vivado IP Catalog, and used inside the Vivado Design Suite.

Using HLS IP in a Zynq SoC Design

In addition to using an HLS IP block in a Zynq®-7000 SoC design, this tutorial shows how the C driver files created by High-Level Synthesis are incorporated into the software on the Zynq Processing System (PS).

Using HLS IP in System Generator for DSP

This tutorial shows how RTL designs created by High-Level Synthesis can be packaged as IP and used inside System Generator for DSP.

Software Requirements

This tutorial requires that the Vivado Design Suite 2017.1 release or later is installed.

Hardware Requirements

Xilinx recommends a minimum of 2 GB of RAM when using the Vivado tools.

Locating the Tutorial Design Files

As shown in [Figure 1-1](#), designs for the tutorial exercises are available as a zipped archive on the Xilinx Website, tutorial documentation page.



IMPORTANT: All the tutorial examples for Vivado High-Level Synthesis are available at: [Reference Design Files](#)

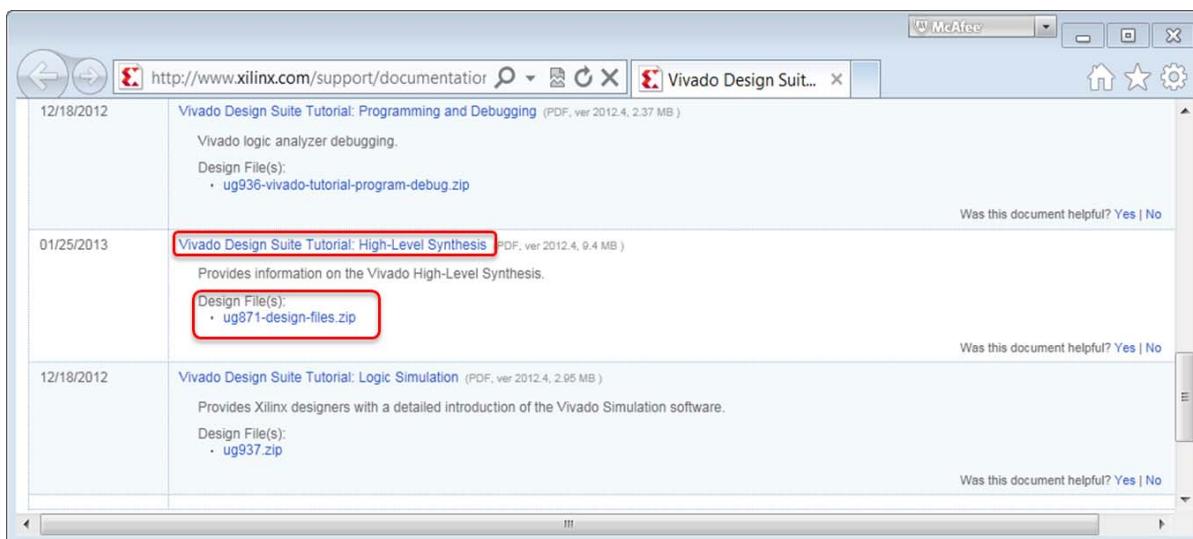


Figure 1-1: High-Level Synthesis Tutorial Design Files

Preparing the Tutorial Design Files

Extract the zip file contents into any write-accessible location.

This tutorial assumes that you have placed the unzipped design files in the location C:\Vivado_HLS_Tutorial.



IMPORTANT: If the Vivado_HLS_Tutorial directory is unzipped to a different location, or if it resides on Linux, adjust the pathnames to the location at which you have placed the Vivado_HLS_Tutorial directory.

High-Level Synthesis Introduction

Overview

This tutorial introduces Vivado® High-Level Synthesis (HLS). You can learn the primary tasks for performing High-Level Synthesis using both the Graphical User Interface (GUI) and Tcl environments.

The tutorial shows how use of optimization directives transforms an initial RTL implementation into both a low-area and high-throughput implementation.

Lab 1 Description

Explains how to set up a High-Level Synthesis (HLS) project and perform all the major steps in the HLS design flow:

- Validate the C code.
- Create and synthesize a solution.
- Verify the RTL and package the IP.

Lab 2 Description

Demonstrates how to use the Tcl interface.

Lab 3 Description

Shows you how to optimize the design using optimization directives. This lab creates multiple versions of the RTL implementation and compares the different solutions.

Tutorial Design Description

To obtain the tutorial design file, see [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory.
`Vivado_HLS_Tutorial\Introduction`.

The sample design used in this tutorial is a FIR filter. The hardware goal for this FIR design project is:

- Create a version of this design with the highest throughput.

The final design must process data supplied with an input valid signal and produce output data accompanied by an output valid signal. The filter coefficients are to be stored externally to the FIR design, in a single port RAM.

Lab 1: Creating a High-Level Synthesis Project

Introduction

This lab shows how to create a High-Level Synthesis project, validate the C code, synthesize the design to RTL, and verify the RTL.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory `Vivado_HLS_Tutorial` files are unzipped and placed in the location `C:\Vivado_HLS_Tutorial`.*

Step 1: Creating a New Project

1. Open the Vivado® HLS Graphical User Interface (GUI):
 - On Windows systems, open Vivado HLS by double-clicking the **Vivado HLS 2018.3** desktop icon.



Figure 2-1: The Vivado HLS Desktop Icon

- On Linux systems, type `vivado_hls` at the command prompt.

TIP: You can also open Vivado HLS using the Windows menu **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3**.

Vivado HLS opens with the Welcome Screen as shown below. If any projects were previously opened, they are shown in the Recent Project pane, otherwise this window is not shown in the Welcome screen.

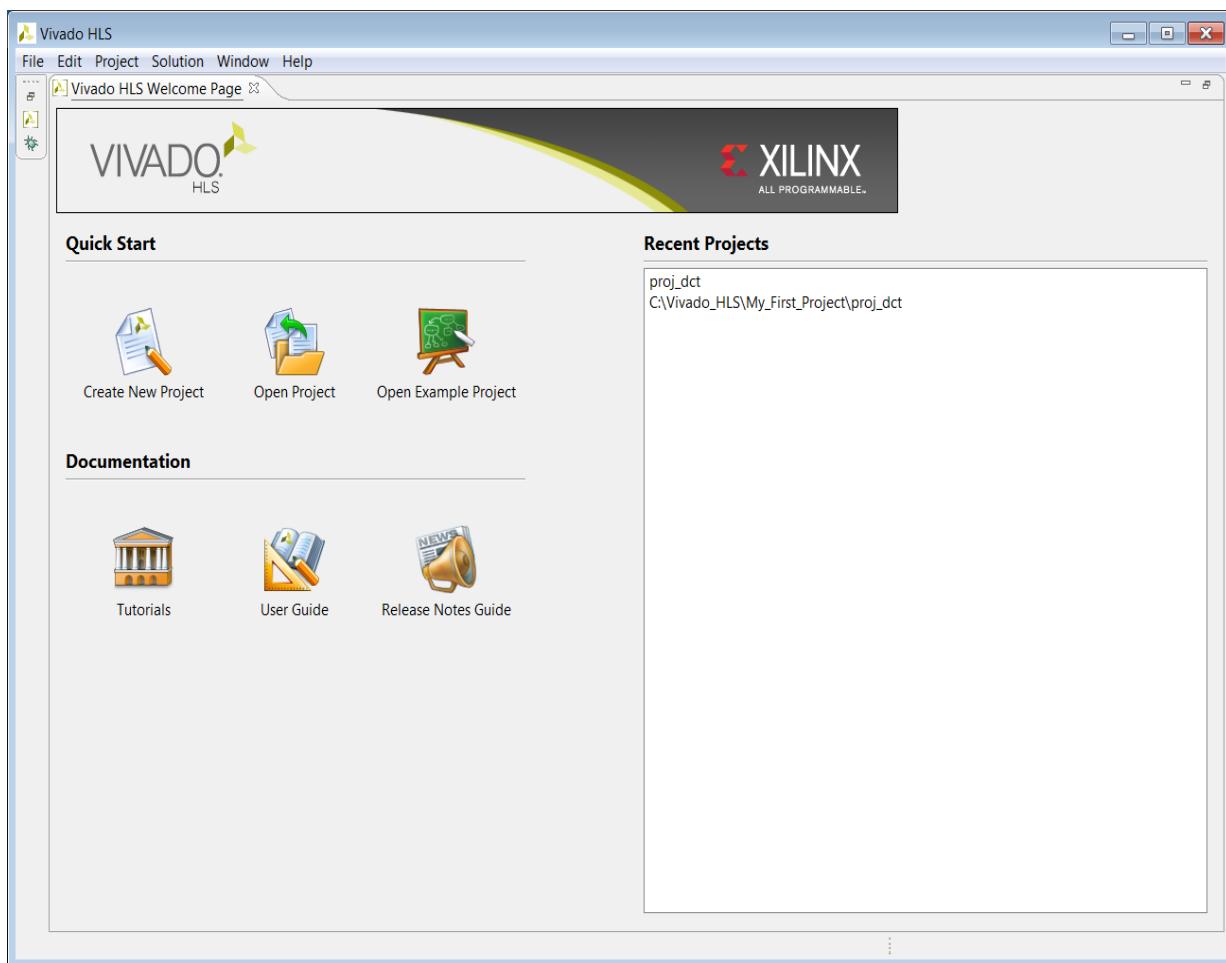


Figure 2-2: The Vivado HLS Welcome Page

2. In the Welcome Page, select **Create New Project** to open the Project wizard.
3. As shown in [Figure 2-3](#):
 - a. Enter the project name `fir_prj`.
 - b. Click **Browse** to navigate to the location of the `lab1` (Introduction) directory.
 - c. Select the `lab1` directory and click **OK**.
 - d. Click **Next**.

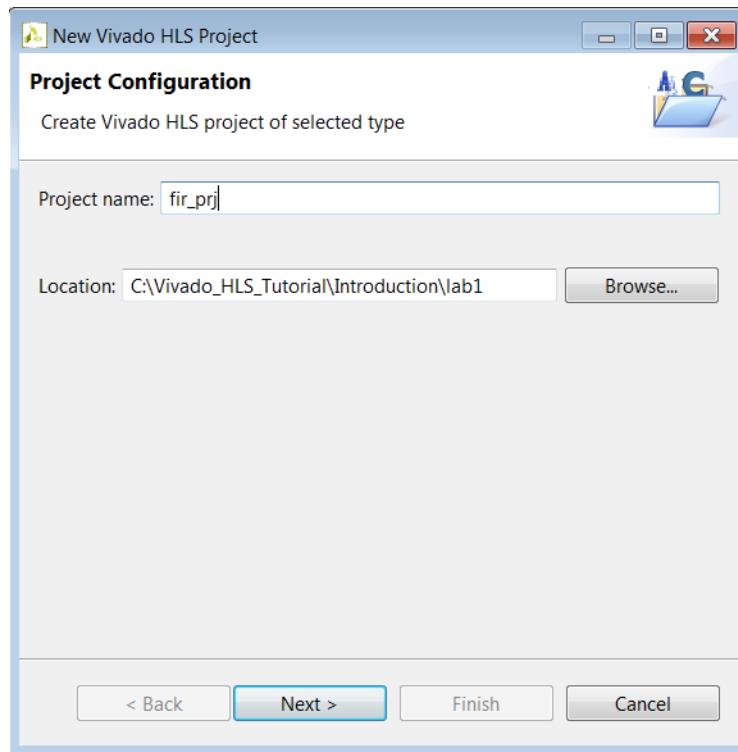


Figure 2-3: Project Configuration

This information defines the name and location of the Vivado HLS project directory. In this case, the project directory is `fir_prj` and it resides in the `lab1` folder.

4. Enter the following information to specify the C design files:
 - a. Click **Add Files**.
 - b. Select `fir.c` and click **Open**.
 - c. Use **Browse** button to specify `fir` as the top-level function.
 - d. Click **Next**.

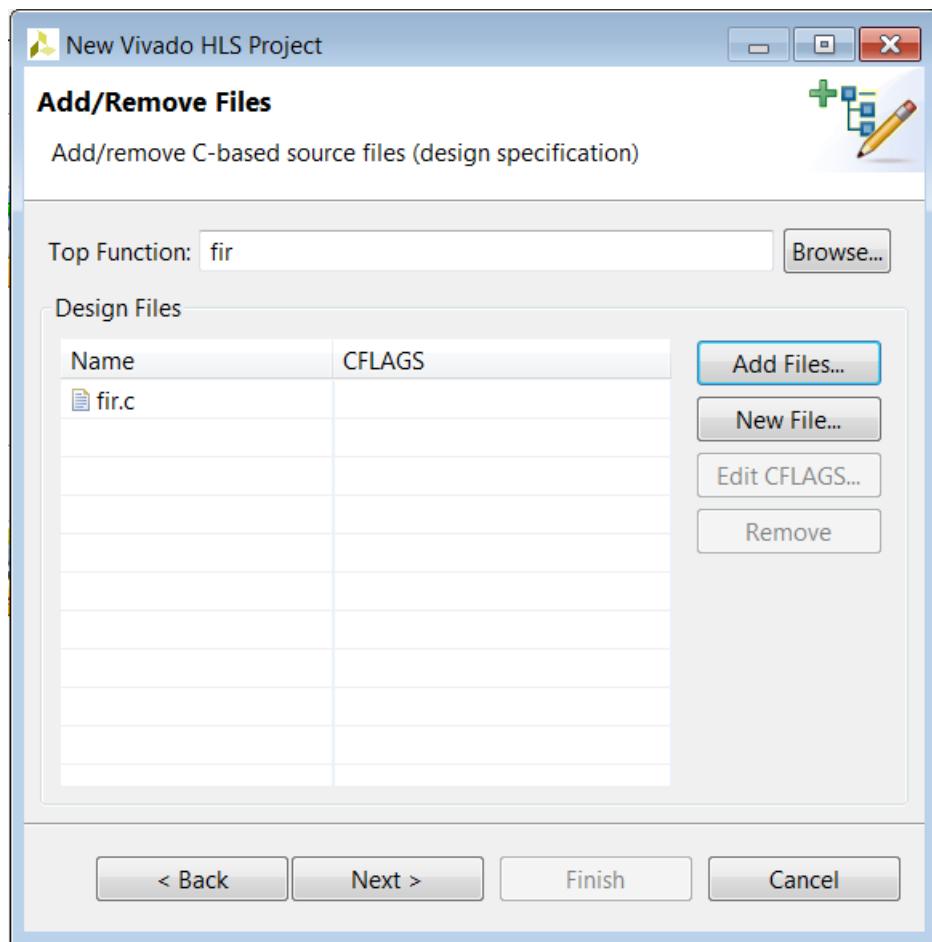


Figure 2-4: Project Design Files



IMPORTANT: In this lab there is only one C design file. When there are multiple C files to be synthesized, you must add all of them to the project at this stage. Any header files that exist in the local directory `lab1` are automatically included in the project. If the header resides in a different location, use the **Edit CFLAGS** button to add the standard gcc/g++ search path information (for example, `-I<path_to_header_file_dir>`).

Figure 2-5 shows the input window for specifying the test bench files. The test bench and all files used by the test bench (except header files) must be included. You can add files one at a time, or select multiple files to add using the **Ctrl** and **Shift** keys.

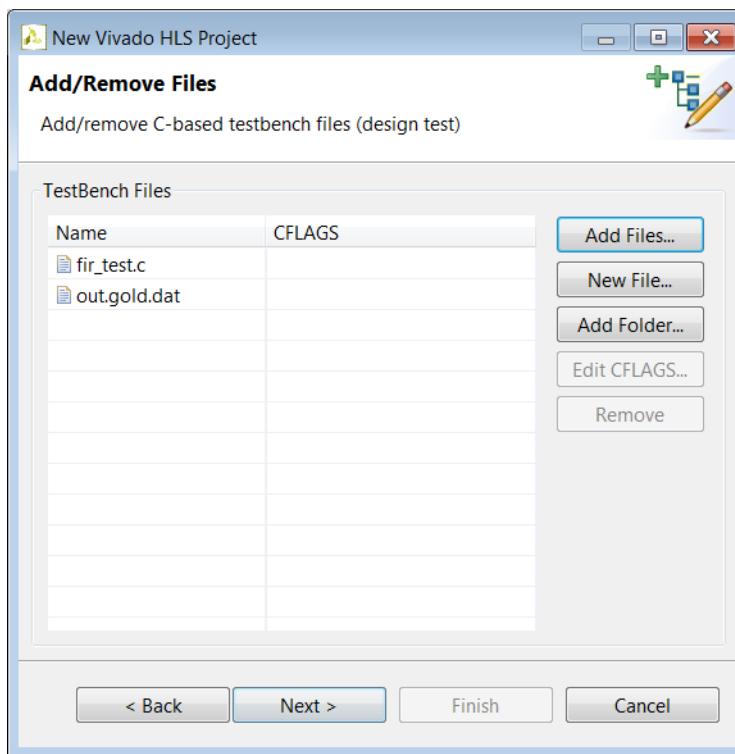


Figure 2-5: Test Bench Files

5. Click the **Add Files** button to include both test bench files: `fir_test.c` and `out.gold.dat`.
6. Click **Next**.

Both C simulation (and RTL cosimulation) execute in subdirectories of the solution.

If you do not include all the files used by the test bench (for example, data files read by the test bench, such as `out.gold.dat`), C and RTL simulation might fail due to an inability to find the data files.

The Solution Configuration window (shown in [Figure 2-6](#)) specifies the technical specifications of the first solution.

A project can have multiple solutions, each using a different target technology, package, constraints, and/or synthesis directives.

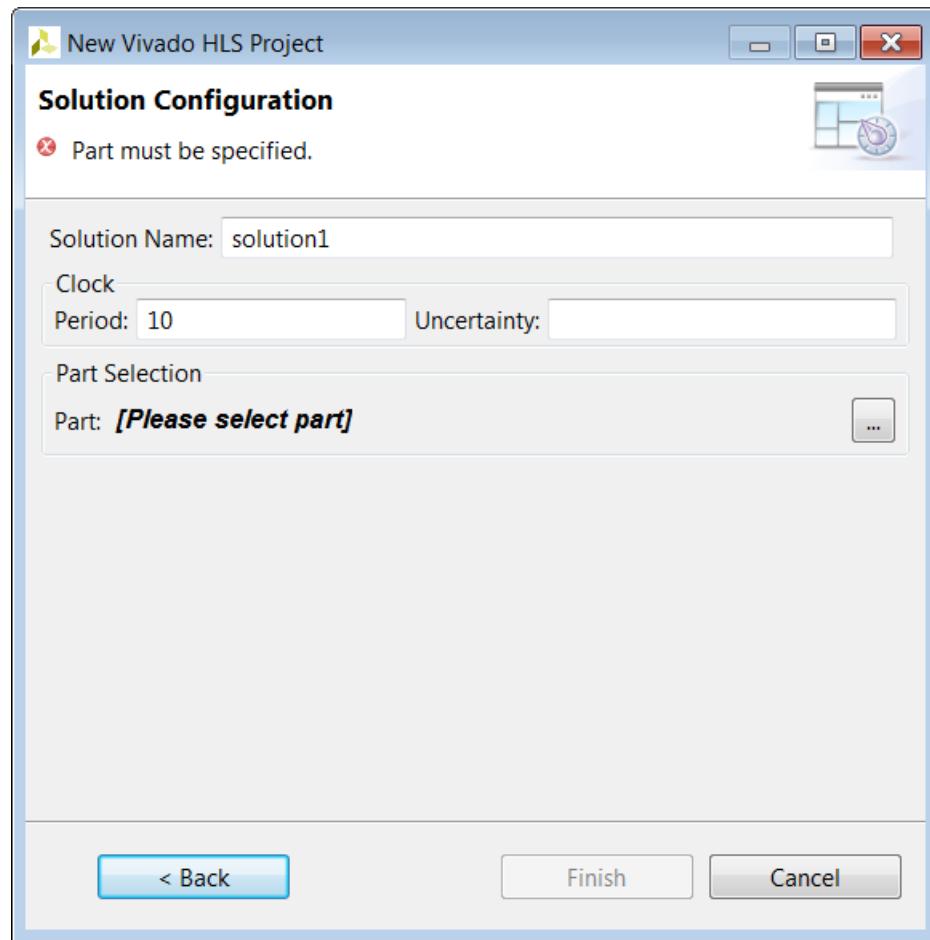


Figure 2-6: Solution Configuration

7. Accept the default solution name (**solution1**), clock period (**10 ns**), and clock uncertainty (defaults to 12.5% of the clock period, when left blank/undefined).
8. Click the part selection button to open the part selection window.
9. Select **Device xc7k160tfg484-2** from the list of available devices. Select the following from the drop-down filters to help refine the parts list:
 - a. Product Category: General Purpose
 - b. Family: Kintex®-7
 - c. Sub-Family: Kintex-7
 - d. Package: fbg484
 - e. Speed Grade: -2
 - f. Temp Grade: All
10. Select **xc7k160tfg484-2**.
11. Click **OK**.

In the Solution Configuration dialog box (shown in [Figure 2-6](#), above), the selected part name now appears under the Part Selection heading.

12. Click **Finish** to open the Vivado HLS project, as shown in [Figure 2-7](#).

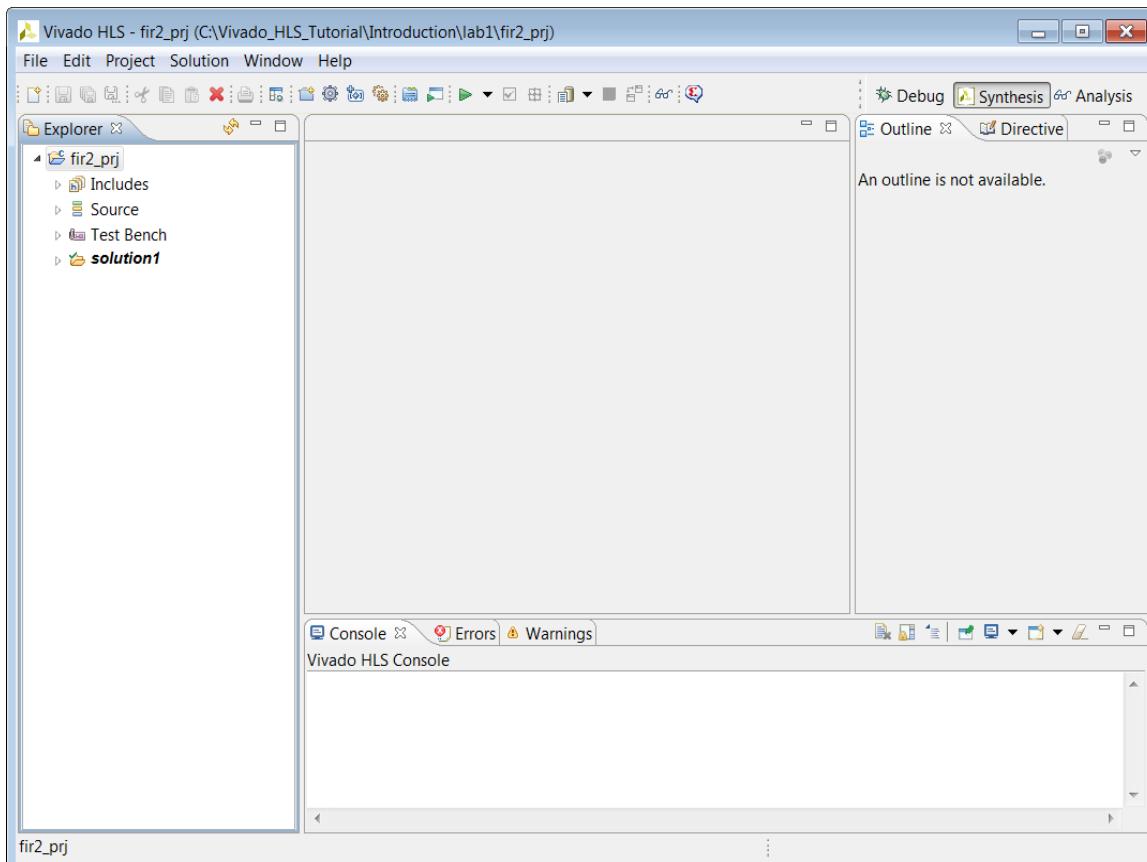


Figure 2-7: Vivado HLS Project

- The project name appears on the top line of the Explorer window.
- A Vivado HLS project arranges information in a hierarchical form.
- The project holds information on the design source, test bench, and solutions.
- The solution holds information on the target technology, design directives, and results.
- There can be multiple solutions within a project, and each solution is an implementation of the same source code.



TIP: At any time, you can change project or solution settings using the corresponding Project Settings and/or Solution Settings buttons in the toolbar.

Understanding the Graphical User Interface (GUI)

Before proceeding, review the regions in the Graphical User Interface (GUI) and their functions. [Figure 2-8](#) shows an overview of the regions, and describes each below.

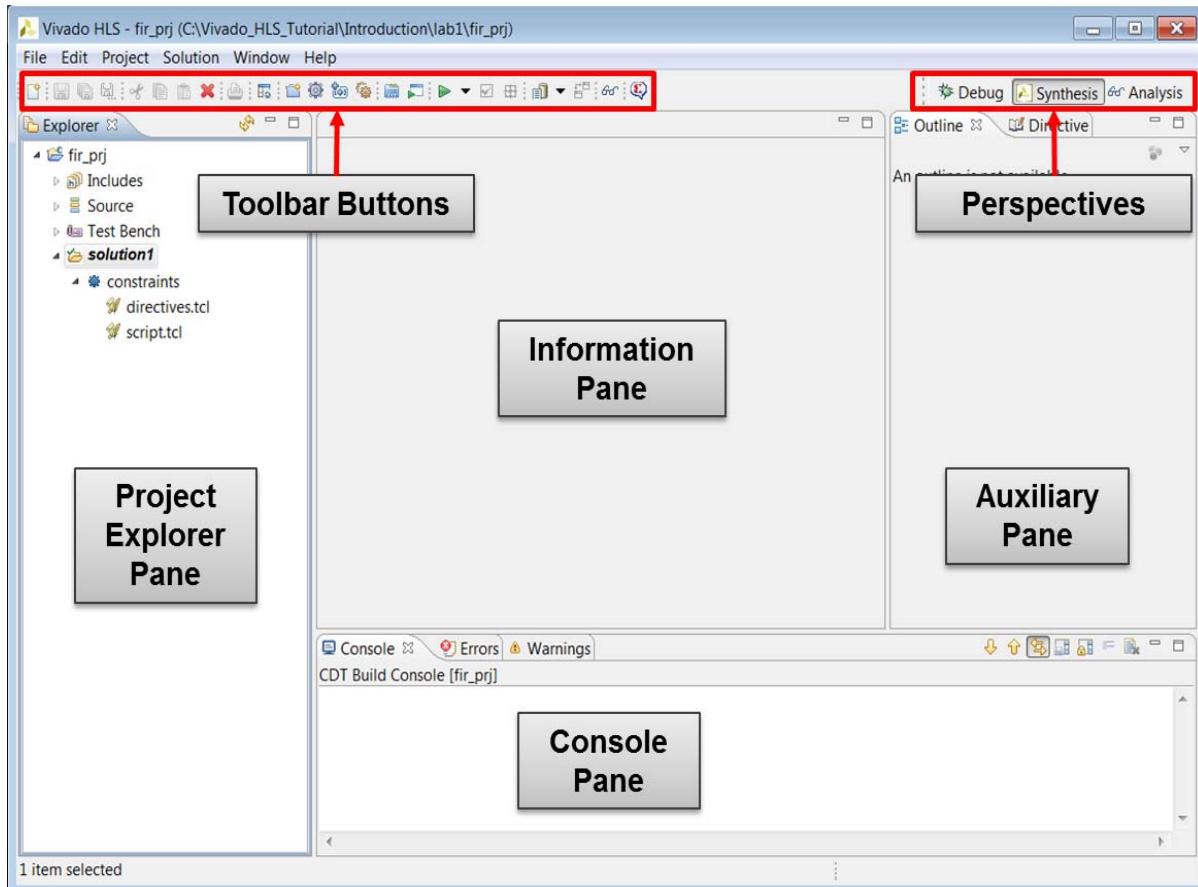


Figure 2-8: Vivado HLS Graphical User Interface

Explorer Pane

Shows the project hierarchy. As you proceed through the validation, synthesis, verification, and IP packaging steps, sub-folders with the results of each step are created automatically inside the solution directory (named `csim`, `syn`, `sim`, and `impl` respectively).

When you create new solutions, they appear inside the project hierarchy alongside `solution1`.

Information Pane

Shows the contents of any files opened from the Explorer pane. When operations complete, the report file opens automatically in this pane.

Auxiliary Pane

Cross-links with the Information pane. The information shown in this pane dynamically adjusts, depending on the file open in the Information pane.

Console Pane

Shows the messages produced when Vivado HLS runs. Errors and warnings appear in Console pane tabs.

Toolbar Buttons

You can perform the most common operations using the Toolbar buttons.

When you hold the cursor over the button, a popup tool tip opens, explaining the function. Each button also has an associated menu item available from the pull-down menus.

Perspectives

The perspectives provide convenient ways to adjust the windows within the Vivado HLS GUI.

- **Synthesis Perspective**

The default perspective allows you to synthesize designs, run simulations, and package the IP.

- **Debug Perspective**

Includes panes associated with debugging the C code. You can open the Debug Perspective after the C code compiles (unless you use the Optimizing Compile mode as this disables debug information).

- **Analysis Perspective**

Windows in this perspective are configured to support analysis of synthesis results. You can use the Analysis Perspective only after synthesis completes.

Step 2: Validate the C Source Code

The first step in an HLS project is to confirm that the C code is correct. This process is called *C Validation* or *C Simulation*.

In this project, the test bench compares the output data from the `fir` function with known good values.

1. Expand the `Test Bench` folder in the Explorer pane.
2. Double-click the file `fir_test.c` to view it in the Information pane.

- In the Auxiliary pane, select `main()` in the Outline tab to jump directly to the `main()` function.

Figure 2-9 shows the result of these actions

```

50 int main () {
51     const int SAMPLES=600;
52     FILE *fp;
53
54     data_t signal, output;
55     coef_t taps[N] = {0,-10,-9,23,56,63,56,23,-9,-10,0,};
56
57     int i, ramp_up;
58     signal = 0;
59     ramp_up = 1;
60
61     fp=fopen("out.dat","w");
62     for (i=0;i<SAMPLES;i++) {
63         if (ramp_up == 1)
64             signal = signal + 1;
65         else
66             signal = signal - 1;
67
68         // Execute the function with latest input
69         fir(&output,taps,signal);
70
71         if ((ramp_up == 1) && (signal >= 75))
72             ramp_up = 0;
}

```

Figure 2-9: Reviewing the Test Bench Code

The test bench file, `fir_test.c`, contains the top-level C function `main()`, which in turn calls the function to be synthesized (`fir`). A useful characteristic of this test bench is that it is self-checking:

- The test bench saves the output from the `fir` function into the output file, `out.dat`.
- The output file is compared with the golden results, stored in file `out.gold.dat`.
- If the output matches the golden data, a message confirms that the results are correct, and the return value of the test bench `main()` function is set to 0.
- If the output is different from the golden results, a message indicates this, and the return value of `main()` is set to 1.

The Vivado HLS tool can reuse the C test bench to perform verification of the RTL.

If the test bench has the previously described self-checking characteristics, the RTL results are automatically checked during RTL verification. Vivado HLS re-uses the test bench during RTL verification and confirms the successful verification of the RTL if the test bench returns a value of 0. If any other value is returned by `main()`, including no return value, it indicates that the RTL verification failed. There is no requirement to create an RTL test bench. This provides a robust and productive verification methodology.

4. Click the **Run C Simulation** button, or use menu **Project > Run C Simulation**, to compile and execute the C design.
5. In the C Simulation dialog box, click **OK**.

The Console pane (Figure 2-10) confirms the simulation executed successfully.

```

Vivado HLS - fir_prj (C:\Vivado_HLS_Tutorial\Introduction\ab1\fir.prj)
File Edit Project Solution Window Help
Explorer fir_test.c _csim.log Debug Synthesis Analysis
fir.prj Includes Source Test Bench fir_test.c out.gold.dat solution1
1 Compiling(apcc) ../../../../fir_test.c in debug mode
2 INFO: [HLS 200-10] Running 'c:/Xilinx/Vivado_HLS/2016.1/bin/unwrappe
3 INFO: [HLS 200-10] For user 'duncann' on host 'xsjduncann31' (Window
4 INFO: [HLS 200-10] In directory 'C:/Vivado_HLS_Tutorial/Introduction
5 INFO: [APCC 202-3] Tmp directory is apcc_db
6 INFO: [APCC 202-1] APCC is done.
7 Compiling(apcc) ../../../../fir.c in debug mode
8 INFO: [HLS 200-10] Running 'c:/Xilinx/Vivado_HLS/2016.1/bin/unwrappe
9 INFO: [HLS 200-10] For user 'duncann' on host 'xsjduncann31' (Window
10 INFO: [HLS 200-10] In directory 'C:/Vivado_HLS_Tutorial/Introduction
11 INFO: [APCC 202-3] Tmp directory is apcc_db
12 INFO: [APCC 202-1] APCC is done.
13 Generating csim.exe
14 Comparing against output data
15 ****
16 PASS: The output matches the golden output!
17 ****
18 INFO: [SIM 1] CSim done with 0 errors.
19

```

Vivado HLS Console

```

INFO: [APCC 202-3] Tmp directory is apcc_db
INFO: [APCC 202-1] APCC is done.
Generating csim.exe
Comparing against output data
*****
PASS: The output matches the golden output!
*****
INFO: [SIM 211-1] CSim done with 0 errors.
Finished C simulation.

```

Figure 2-10: Results of C Simulation



TIP: If the C simulation ever fails, select the **Launch Debugger** option in the C Simulation dialog box, compile the design, and automatically switch to the Debug perspective. There you can use a C debugger to fix any problems.

The C Validation tutorial module provides more details on using the Debug environment.

The design is now ready for synthesis.

Step 3: High-Level Synthesis

In this step, you synthesize the C design into an RTL design and review the synthesis report

1. Click the **Run C Synthesis** toolbar button or use the menu **Solution > Run C Synthesis > Active Solution**.

When synthesis completes, the report file opens automatically. Because the synthesis report is open in the Information pane, the Outline tab in the Auxiliary pane automatically updates to reflect the report information.

2. Click **Performance Estimates** in the Outline tab (Figure 2-11).
3. In the Detail section of the Performance Estimates, expand the **Loop** view.

The screenshot shows the 'Performance Estimates' pane in Vivado HLS. It includes sections for 'Timing (ns)', 'Latency (clock cycles)', and 'Detail'. The 'Detail' section is expanded to show 'Instance' and 'Loop' details. The 'Loop' table shows the following data:

Loop Name	min	max	Iteration Latency	achieved	target	Trip Count	Pipelined
- Shift_Accum_Loop	44	44	4	-	-	11	no

Figure 2-11: Performance Estimates

In the Performance Estimates pane, shown in Figure 2-11, you can see that the clock period is set to 10 ns. Vivado HLS targets a clock period of Clock Target minus Clock Uncertainty ($10.00 - 1.25 = 8.75$ ns in this example).

The clock uncertainty ensures there is some timing margin available for the (at this stage) unknown net delays due to place and routing.

The estimated clock period (worst-case delay) is 7.71 ns, which meets the 8.75 ns timing requirement.

In the Summary section, you can see:

- The design has a latency of 45-clock cycles: it takes 45 clocks to output the results.
- The interval is 46 clock cycles: the next set of inputs is read after 46 clocks. This is one cycle after the final output is written. This indicates the design is not pipelined. The next execution of this function (or next transaction) can only start when the current transaction completes.

The Detail section shows:

- There are no sub-blocks in this design. Expanding the Instance section shows no submodules in the hierarchy.
- All the latency delay is due to the RTL logic synthesized from the loop named Shift_Accum_Loop. This logic executes 11 times (Trip Count). Each execution requires 4 clock cycles (Iteration Latency), for a total of 44 clock cycles, to execute all iterations of the logic synthesized from this loop (Latency).
- The total latency is one clock cycle greater than the loop latency. It requires one clock cycle to enter and exit the loop (in this case, the design finishes when the loop finishes, so there is no exit cycle).

4. In the Outline tab, click **Utilization Estimates** (Figure 2-12).

- The design uses a single memory implemented as LUTRAM (since it contains less than 1024 elements), 4 DSP48s, and approximately 200 flip-flops and LUTs. At this stage, the device resource numbers are estimates.
- The resource utilization numbers are estimates because RTL synthesis might be able to perform additional optimizations, and these figures might change after RTL synthesis.

Utilization Estimates				
Summary				
Name	BRAM_18K	DSP48E	FF	LUT
DSP	-	-	-	-
Expression	-	4	121	97
FIFO	-	-	-	-
Instance	-	-	-	-
Memory	0	-	64	6
Multiplexer	-	-	-	111
Register	-	-	144	-
Total	0	4	329	214
Available	650	600	202800	101400
Utilization (%)	0	~0	~0	~0

Figure 2-12: Utilization Estimates

5. In the **Detail** section of the Utilization Estimates, expand the **Instance** view.

- The number of DSP48s seems larger than expected for a FIR filter. This is because the data is a C integer type, which is 32-bit. It requires more than one DSP48 to multiply 32-bit data values.
- The multiplier instance shown in the Instance view accounts for all the DSP48s.

- The multiplier is a pipelined multiplier. It appears in the Instance section indicating it is a sub-block. Standard combinational multipliers have no hierarchy and are listed in the Expressions section (indicating a component at this level of hierarchy).

In: [Lab 3: Using Solutions for Design Optimization](#), you optimize this design.

6. In the Outline tab, click **Interface** (Figure 2-13).

RTL Ports	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_hs	fir	return value
ap_rst	in	1	ap_ctrl_hs	fir	return value
ap_start	in	1	ap_ctrl_hs	fir	return value
ap_done	out	1	ap_ctrl_hs	fir	return value
ap_idle	out	1	ap_ctrl_hs	fir	return value
ap_ready	out	1	ap_ctrl_hs	fir	return value
y	out	32	ap_vld	y	pointer
y_ap_vld	out	1	ap_vld	y	pointer
c_address0	out	4	ap_memory	c	array
c_ce0	out	1	ap_memory	c	array
c_q0	in	32	ap_memory	c	array
x	in	32	ap_none	x	scalar

Figure 2-13: Interface Report

The Interface section shows the ports and I/O protocols created by interface synthesis:

- The design has a clock and reset port (`ap_clk` and `ap_reset`). These are associated with the Source Object `fir`: the design itself.
- There are additional ports associated with the design as indicated by Source Object `fir`. Synthesis has automatically added some block level control ports: `ap_start`, `ap_done`, `ap_idle`, and `ap_ready`.
- The *Interface Synthesis* tutorial provides more information about these ports.
- The function output `y` is now a 32-bit data port with an associated output valid signal indicator `y_ap_vld`.
- Function input argument `c` (an array) has been implemented as a block RAM interface with a 4-bit output address port, an output CE port and a 32-bit input data port.
- Finally, scalar input argument `x` is implemented as a data port with no I/O protocol (`ap_none`).

Later in this tutorial: [Lab 3: Using Solutions for Design Optimization](#) explains how to optimize the I/O protocol for port x.

Step 4: RTL Verification


High-Level Synthesis can re-use the C test bench to verify the RTL using simulation.

1. Click the **Run C/RTL Cosimulation** toolbar button or use the menu **Solution > Run C/RTL Cosimulation**.
2. Click **OK** in the C/RTL Co-simulation dialog box to execute the RTL simulation.

The default option for RTL co-simulation is to perform the simulation using the Vivado simulator and Verilog RTL. To perform the verification using a different simulator, VHDL, or SystemC RTL use the options in the C/RTL Co-simulation dialog box.

When RTL co-simulation completes, the report opens automatically in the Information pane, and the Console displays the message shown in [Figure 2-14](#). This is the same message produced at the end of C simulation.

- The C test bench generates input vectors for the RTL design.
- The RTL design is simulated.
- The output vectors from the RTL are applied back into the C test bench and the results-checking in the test bench verify whether or not the results are correct.
- The Vivado HLS indicates that simulation passes if the test bench returns a value of 0. It is the value of the return variable in the test bench, and this alone, which indicates if the simulation was successful. It is important that the test bench returns a value of 0 only if the results are correct.

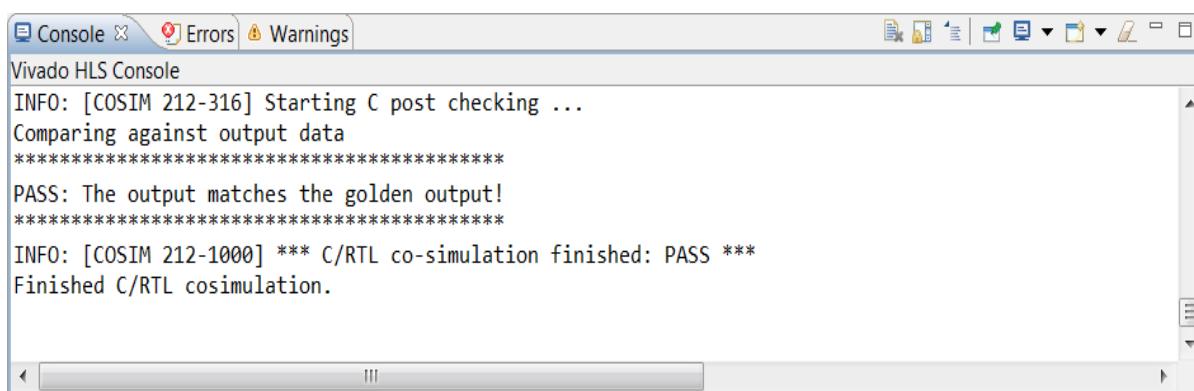

The screenshot shows the Vivado HLS Console window. The title bar includes tabs for 'Console' (selected), 'Errors', and 'Warnings'. The main area displays the following text:

```
Vivado HLS Console
INFO: [COSIM 212-316] Starting C post checking ...
Comparing against output data
*****
PASS: The output matches the golden output!
*****
INFO: [COSIM 212-1000] *** C/RTL co-simulation finished: PASS ***
Finished C/RTL cosimulation.
```

Figure 2-14: RTL Verification Results

The [Chapter 8, RTL Verification](#) tutorial provides additional information.

Step 5: IP Creation

The final step in the High-Level Synthesis flow is to package the design as an IP block for use with other tools in the Vivado Design Suite.

1. Click the **Export RTL** toolbar button or use the menu **Solution > Export RTL**.
2. Ensure the Format Selection drop-down menu shows **IP Catalog**.
3. Click **OK**.

The IP packager creates a package for the Vivado IP Catalog. (Other options available from the drop-down menu allow you to create IP packages for System Generator for DSP, a Synthesized Checkpoint format for Vivado, or a Pcore for Xilinx Platform Studio.)

4. Expand **Solution1** in the Explorer.
5. Expand the **impl** folder created by the Export RTL command.
6. Expand the **ip** folder and find the IP packaged as a zip file, ready for adding to the Vivado IP Catalog ([Figure 2-15](#)).

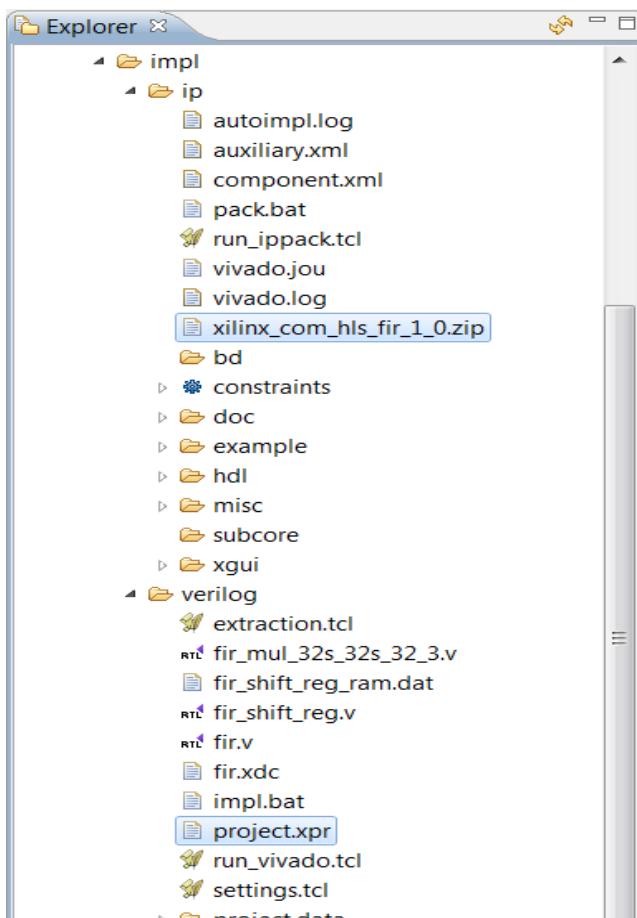


Figure 2-15: RTL Verification Results

Note: In [Figure 2-15](#), if you expand the Verilog or VHDL folders inside the `impl` folder, there is a Vivado project ready for opening in the Vivado Design Suite.



RECOMMENDED: *This Vivado project is provided only as a convenient way to analyze the design inside the Vivado IDE. This project should not be used to implement your design: there are no top-level IO buffers in this project. The recommended methodology for using the output of Vivado HLS in your own design is to incorporate the IP package, or one of the other output formats, into your own Vivado project. Additional tutorials in this guide demonstrate how to use the Vivado HLS output as IP in your project.*

Note: There is no project file created for devices synthesized by ISE (6 series or earlier devices).

At this stage, leave the Vivado HLS GUI open. You will return to this in the next lab exercise.

Lab 2: Using the Tcl Command Interface

Introduction

This lab exercise shows how to create a Tcl command file based on an existing Vivado HLS project and use the Tcl interface.

Step 1: Create a Tcl file

1. Open the Vivado HLS Command Prompt.
 - On Windows, use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** ([Figure 2-16](#)).
 - On Linux, open a new shell.



Figure 2-16: The Vivado HLS Command Prompt

When you create a Vivado HLS project, Tcl files are automatically saved in the project hierarchy. In the GUI still open from Lab 1, a review of the project shows two Tcl files in the project hierarchy ([Figure 2-17](#)).

2. In the GUI, still open from Lab 1, expand the Constraints folder in solution1 and double-click the file script.tcl to view it in the Information pane.

The screenshot shows the Vivado HLS Project Explorer window. On the left, the project structure for 'fir_prj' is displayed, including 'Includes', 'Source' (with 'fir.c'), 'Test Bench', 'solution1' (containing 'constraints', 'directives.tcl', 'script.tcl', 'csim', 'impl', 'sim', and 'syn' subfolders), and 'fir_csim.log'. On the right, the 'Synthesis(solution1)' tab is selected, showing the contents of 'script.tcl'. The code in 'script.tcl' is as follows:


```
1 #####  
2 ## This file is generated automatically by Vi  
3 ## Please DO NOT edit it.  
4 ## Copyright (C) 2015 Xilinx Inc. All rights  
5 #####  
6 open_project fir_prj  
7 set_top fir  
8 add_files fir.c  
9 add_files -tb fir_test.c  
10 add_files -tb out.gold.dat  
11 open_solution "solution1"  
12 set_part {xc7k160tfgb484-2}  
13 create_clock -period 10 -name default  
14 #source "./fir_prj/solution1/directives.tcl"  
15 csim_design  
16 csynth_design  
17 cosim_design  
18 export_design -format ip_catalog  
19
```

Figure 2-17: The Vivado HLS Project Tcl Files

- The file `script.tcl` contains the Tcl commands to create a project with the files specified during the project setup and run all stages of the HLS flow.
- The file `directives.tcl` contains any optimizations applied to the design solution. No optimization directives were used in Lab 1 so this file is empty.

In this lab exercise, you use the `script.tcl` from Lab 1 to create a Tcl file for the Lab 2 project.


3. Close the Vivado HLS GUI from Lab 1. This is project no longer needed.
4. In the Vivado HLS Command Prompt, use the following commands (also shown in [Figure 2-18](#)) to create a new Tcl file for Lab 2.
 - a. Change directory to the Introduction tutorial directory
`C:\Vivado_HLS_Tutorial\Introduction`.
 - b. Use the command `cp lab1\fir_prj\solution1\script.tcl lab2\run_hls.tcl` to copy the existing Tcl file to Lab 2. (The Windows command prompt supports auto-completion using the Tab key: press the tab key repeatedly to see new selections).
 - c. Use the command `cd lab2` to change into the `lab2` directory.

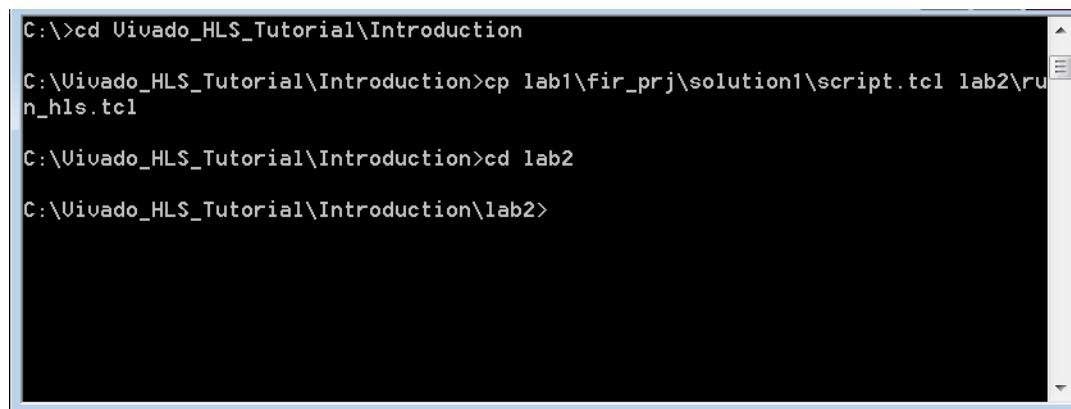

```
C:\>cd Vivado_HLS_Tutorial\Introduction  
C:\Vivado_HLS_Tutorial\Introduction>cp lab1\fir_prj\solution1\script.tcl lab2\run_hls.tcl  
C:\Vivado_HLS_Tutorial\Introduction>cd lab2  
C:\Vivado_HLS_Tutorial\Introduction\lab2>
```

Figure 2-18: Copying the Lab 1 Tcl file to Lab 2

5. Using any text editor, perform the following edits to the file `run_hls.tcl` in the `lab2` directory. The final edits are shown in [Figure 2-19](#).
 - a. Add a `-reset` option to the `open_project` command. Because you typically run Tcl files repeatedly on the same project, it is best to overwrite any existing project information.
 - b. Add a `-reset` option to the `open_solution` command. This removes any existing solution information when the Tcl file is re-run on the same solution.
 - c. Leave the `source` command commented. If the previous project contains any directives you wish to re-use, you can copy the directives directly into this file.
 - d. Add the `exit` command to the last line of the Tcl file.
 - e. Save and exit.

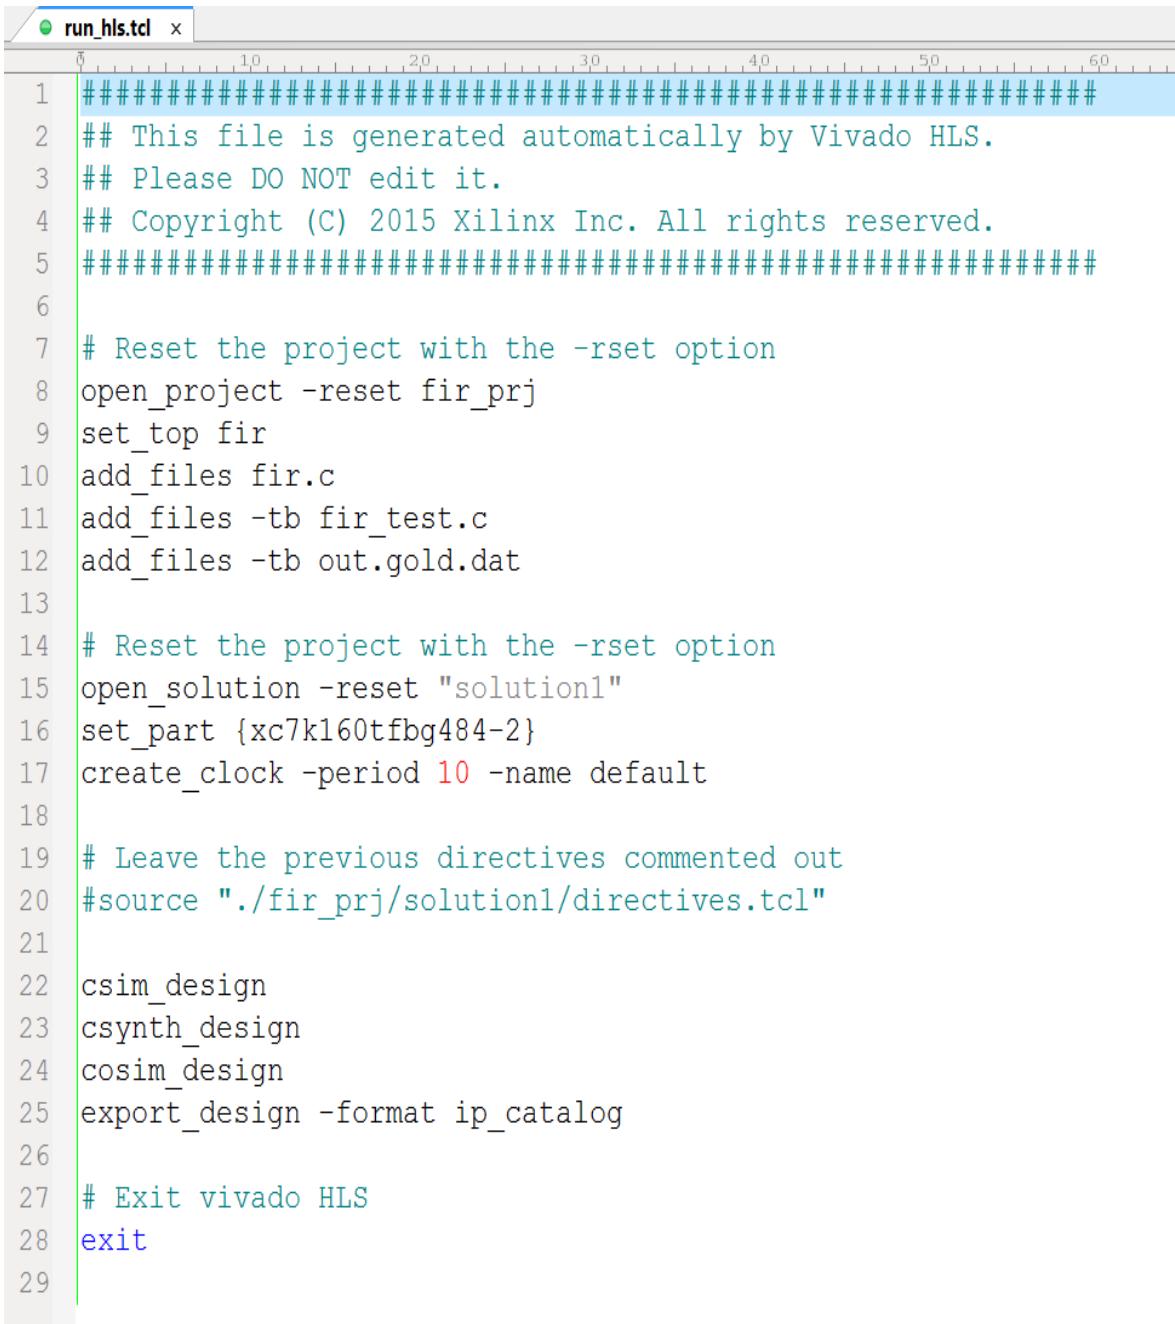

The screenshot shows a text editor window titled "run_hls.tcl". The code in the editor is a Tcl script used to run Vivado HLS. It includes comments at the top, project setup commands like "open_project", "set_top", and "add_files", synthesis commands like "csim_design", "csynth_design", and "cosim_design", and export commands like "export_design". It also includes a "# Exit vivado HLS" command and an "exit" command at the end. The code is numbered from 1 to 29 on the left.

```
1 #####  
2 ## This file is generated automatically by Vivado HLS.  
3 ## Please DO NOT edit it.  
4 ## Copyright (C) 2015 Xilinx Inc. All rights reserved.  
5 #####  
6  
7 # Reset the project with the -rset option  
8 open_project -reset fir_prj  
9 set_top fir  
10 add_files fir.c  
11 add_files -tb fir_test.c  
12 add_files -tb out.gold.dat  
13  
14 # Reset the project with the -rset option  
15 open_solution -reset "solution1"  
16 set_part {xc7k160tfg484-2}  
17 create_clock -period 10 -name default  
18  
19 # Leave the previous directives commented out  
20 #source "./fir_prj/solution1/directives.tcl"  
21  
22 csim_design  
23 csynth_design  
24 cosim_design  
25 export_design -format ip_catalog  
26  
27 # Exit vivado HLS  
28 exit  
29
```

Figure 2-19: Updated run_hls.tcl file for Lab 2

You can run the Vivado HLS in batch mode using this Tcl file.

6. In the Vivado HLS Command Prompt window, type `vivado_hls -f run_hls.tcl`.

Vivado HLS executes all the steps covered in lab1. When finished, the results are available inside the project directory `fir_prj`.

- The synthesis report is available in `fir_prj\solution1\syn\report`.

- The simulation results are available in `fir_prj\solution\sim\report`.
- The output package is available in `fir_prj\solution1\impl\ip`.
- The final output RTL is available in `fir_prj\solution1\impl` and then Verilog or VHDL.



CAUTION! When copying the RTL results from a Vivado HLS project, you must use the RTL from the `impl` directory. Additional processing is performed by Vivado HLS during `export_design` before you can use this RTL in other design tools.

Lab 3: Using Solutions for Design Optimization

Introduction

This lab exercise uses the design from Lab 1 and optimizes it.

Step 1: Creating a New Project

1. Open the Vivado HLS Command Prompt.
 - On Windows, use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt**.
 - On Linux, open a new shell.
2. Change to the Lab 3 directory:
`cd C:\Vivado_HLS_Tutorial\Introduction\lab3`.
3. In the command prompt window, type: `vivado_hls -f run_hls.tcl`

This sets up the project.

4. In the command prompt window, type `vivado_hls -p fir_prj` to open the project in the Vivado HLS GUI.

Vivado HLS opens, as shown in [Figure 2-20](#), with the synthesis for solution1 already complete.

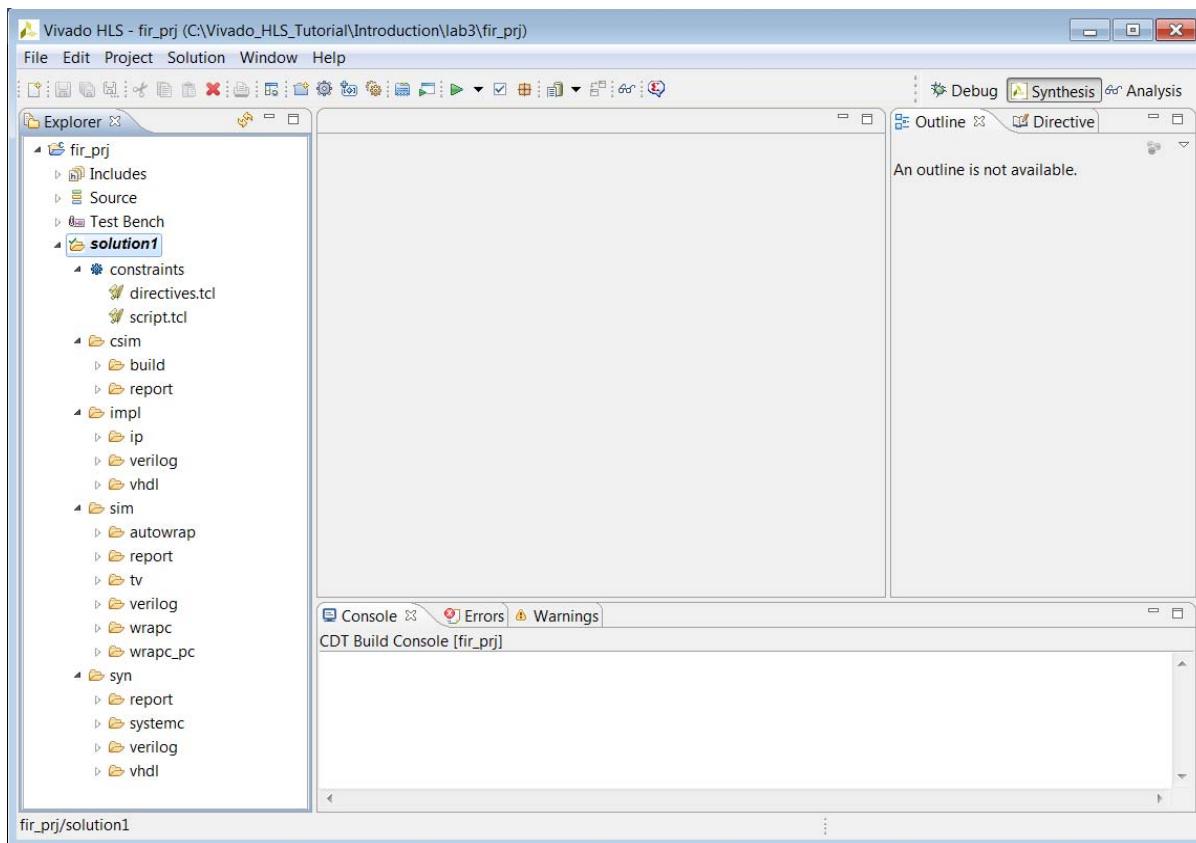


Figure 2-20: Introduction Lab 3 Initial Solution

As stated earlier, the design goals for this design are:

- Create a version of this design with the highest throughput.
- The final design should be able to process data supplied with an input valid signal.
- Produce output data accompanied by an output valid signal.
- The filter coefficients are to be stored externally to the FIR design, in a single port RAM.

Step 2: Optimize the I/O Interfaces

Because the design specification includes I/O protocols, the first optimization you perform creates the correct I/O protocol and ports. The type of I/O protocol you select might affect what design optimizations are possible. If there is an I/O protocol requirement, you should set the I/O protocol as early as possible in the design cycle.

You reviewed the I/O protocol for this design in Lab 1 ([Figure 2-13](#)), and you can review the synthesis report again by navigating to the report folder inside the solution1\syn folder. The I/O requirements are:

- Port C must have a single port RAM access.

- Port X must have an input data valid signal.
- Port Y must have an output data valid signal.

Port C already is a single-port RAM access. However, if you do not explicitly specify the RAM access type, High-Level Synthesis might use a dual-port interface. HLS takes this action if doing so creates a design with a higher throughput. If a single-port is required, you should explicitly add to the design the I/O protocol requirement to use a single-port RAM.

Input Port X is by default a simple 32-bit data port. You can implement it as an input data port with an associated data valid signal by specifying the I/O protocol `ap_vld`.

Output Port Y already has an associated output valid signal. This is the default for pointer arguments. You do not have to specify an explicit port protocol for this port, because the default implementation is what is required, but if it is a requirement, it is a good practice to specify it.

To preserve the existing results, create a new solution, `solution2`.

1. Click **Project > New Solution** toolbar button to create a new solution.
2. Leave the default solution name as `solution2`. Do not change any of the technology or clock settings.
3. Click **Finish**.

This creates `solution2` and sets it as the default solution. To confirm you can verify that the current active `solution2` is highlighted in bold in the Explorer pane.

To add optimization directives to define the desired I/O interfaces to the solution, perform the following steps.

4. In the Explorer pane, expand the **Source** container (as shown in [Figure 2-21](#)).
5. Double-click `fir.c` to open the file in the Information pane.
6. Activate the **Directive** tab in the Auxiliary pane and select the top-level function `fir` to jump to the top of the `fir` function in the source code view.

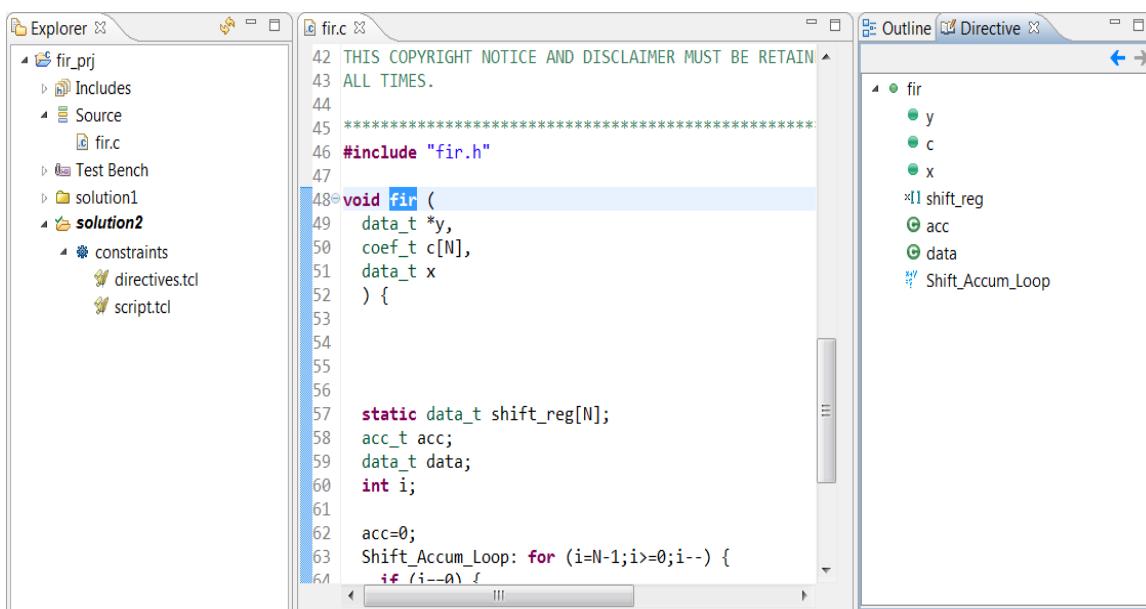


Figure 2-21: Opening the Directives Tab

The Directives tab, shown on the right side of Figure 2-21, lists all of the objects in the design that can be optimized. In the Directive tab, you can add optimization directives to the design. You can view the Directives tab only when the source code is open in the Information pane.

Apply the optimization directives to the design.

7. In the Directive tab, select the **c** argument/port (green dot).
8. Right-click and select **Insert Directive**.
9. Implement the single-port RAM interface by performing the following:
 - a. Select **RESOURCE** from the Directive drop-down menu.
 - b. Click the **core** box.
 - c. Select **RAM_1P_BRAM**, as shown in Figure 2-22. Then select **OK**.

The steps above specify that array **c** be implemented using a single-port block RAM resource. Because array **c** is in the function argument list, and hence is outside the function, a set of data ports are automatically created to access a single-port block RAM outside the RTL implementation.

Because I/O protocols are unlikely to change, you can add these optimization directives to the source code as pragmas to ensure that the correct I/O protocols are embedded in the design.

10. In the **Destination** section of the **Directive Editor**, select **Source File**.
11. To apply the directive, click **OK**.

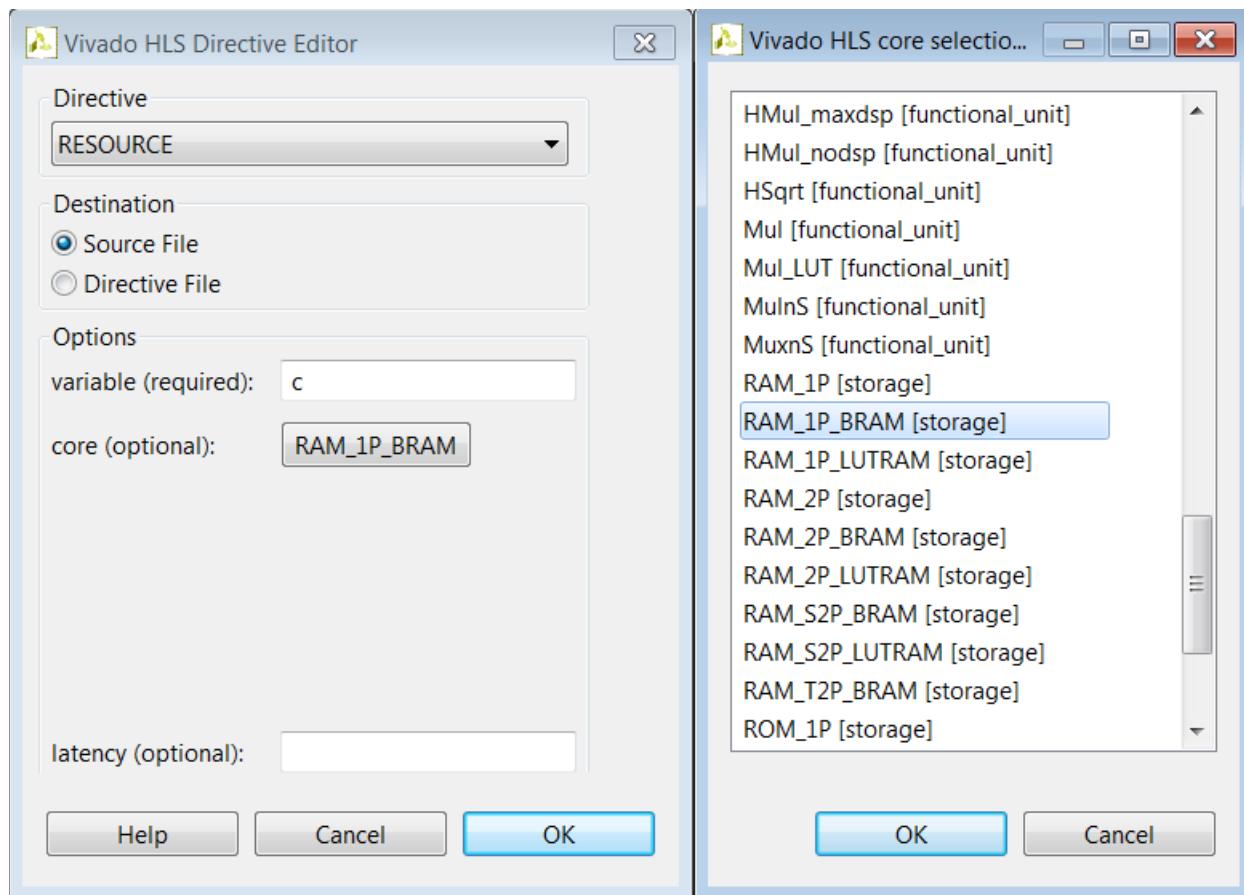


Figure 2-22: Adding a Resource Directive



TIP: If you wish to change the destination of any directive, double-click on the directive In the Directive tab and modify the destination.

12. Next, specify port x to have an associated valid signal/port.
 - a. In the **Directive** tab, select input port **x** (green dot).
 - b. Right-click and select **Insert Directive**.
 - c. Select **Interface** from the Directive drop-down menu.
 - d. Select **Source File** from the **Destination** section of the dialog box.
 - e. Select **ap_vld** as the mode.
 - f. Click **OK** to apply the directive.
13. Finally, explicitly specify port y to have an associated valid signal/port.
 - a. In the **Directive** tab, select input port **y** (green dot).
 - b. Right-click and select **Insert Directive**.
 - c. Select **Source File** from the **Destination** section of the dialog box

- d. Select **Interface** from the Directive drop-down menu.
- e. Select **ap_vld** for the mode.
- f. Click **OK** to apply the directive

When complete, verify that the source code and the Directive tab are correct as shown in [Figure 2-23](#). Right-click on any incorrect directive to modify it.

The screenshot shows the Vivado IDE interface. On the left is the C source code editor for 'fir.c' containing a FIR filter implementation. On the right is the 'Directive' tab of the 'Outline' panel, which displays the HLS analysis results for the 'fir' component. Key entries include 'shift_reg' (ap_vld port=y), 'y' (ap_vld port=y), 'c' (variable=c core=RAM_1P_BRAM), 'x' (variable=x core=RAM_1P_BRAM), and 'Shift_Accum_Loop' (ap_vld port=x).

```
46 #include "fir.h"
47
48 void fir (
49     data_t *y,
50     coef_t c[N],
51     data_t x
52 ) {
53 #pragma HLS INTERFACE ap_vld port=y
54 #pragma HLS INTERFACE ap_vld port=x
55 #pragma HLS RESOURCE variable=c core=RAM_1P_BRAM
56
57 static data_t shift_reg[N];
58 acc_t acc;
59 int i;
60
61 acc=0;
62 Shift_Accum_Loop: for (i=N-1;i>=0;i--) {
```

Figure 2-23: I/O Directives for solution2

14. Click the **Run C Synthesis** toolbar button to synthesize the design.
15. When prompted, click **Yes** to save the contents of the C source file. Adding the directives as pragmas modified the source code.

When synthesis completes, the report file opens automatically.

16. Click the **Outline** tab to view the Interface results, or simply scroll down to the bottom of the report file.

[Figure 2-24](#) shows that the ports now have the correct I/O protocols.

	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_hs	fir	return value
ap_rst	in	1	ap_ctrl_hs	fir	return value
ap_start	in	1	ap_ctrl_hs	fir	return value
ap_done	out	1	ap_ctrl_hs	fir	return value
ap_idle	out	1	ap_ctrl_hs	fir	return value
ap_ready	out	1	ap_ctrl_hs	fir	return value
y	out	32	ap_vld	y	pointer
y_ap_vld	out	1	ap_vld	y	pointer
c_address0	out	4	ap_memory	c	array
c_ce0	out	1	ap_memory	c	array
c_q0	in	32	ap_memory	c	array
x	in	32	ap_vld	x	scalar
x_ap_vld	in	1	ap_vld	x	scalar

Figure 2-24: I/O Protocols for solution2

Step 3: Analyze the Results

Before optimizing the design, it is important to understand the current design. It was shown in Lab 1 how the synthesis report can be used to understand the implementation. However, the Analysis perspective provides greater detail in an interactive manner.

Follow the steps below to show the Analysis perspective as shown in [Figure 2-25](#).

1. Click the **Analysis** perspective button.
2. Click the **Shift_Accum_Loop** in the **Performance** window to expand it.
 - The [Chapter 6, Design Analysis](#) tutorial provides a more complete understanding of the Analysis perspective, but the following explains what is required to create the smallest and fastest RTL design from this source code.
 - The left column of the Performance pane view shows the operations in this module of the RTL hierarchy.
 - The top row lists the control states in the design. Control states are the internal states High-Level Synthesis uses to schedule operations into clock cycles. There is a close correlation between the control states and the final states in the RTL Finite State Machine (FSM), but there is no one-to-one mapping.

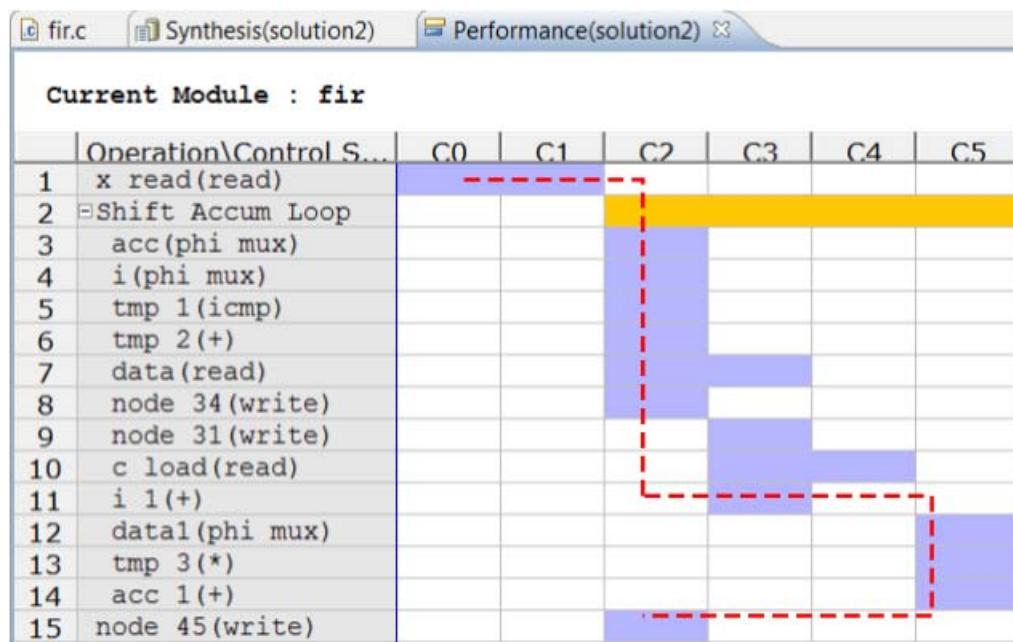


Figure 2-25: Solution2 Analysis Perspective: Performance

Some of the objects here correlate directly with the C source code. Right-click the object to cross-reference with the C code.

- The design starts in the first state with a read operation on port x.
- In the next state, it starts to execute the logic created by the for-loop Shift_Accum_Loop. Loops are shown in yellow, and you can expand or collapse them. Holding the cursor over the yellow loop body in this view shows the loop details: 4 cycles, 11 iterations for a total latency of 44.
- In the first state, the loop iteration counter is checked: addition, comparison, and a potential loop exit.
- There is a two-cycle memory read operation on the block RAM synthesized from array data (one cycle to generate the address, one cycle to read the data).
- There is a memory read on the c port.
- The multiplication operation takes 1 cycles to complete.
- The for-loop is executed 11 times.
- At the end of the final iteration, the loop exits in state c1 and the write to port y occurs.

You can also use the Analysis perspective to analyze the resources used in the design.

3. Click the **Resource** view, as shown in [Figure 2-26](#).
4. Expand all the resource groups.

Current Module : fir		C0	C1	C2	C3	C4	C5
1	I/O Ports						
2	x	read					
3	y		write				
4	c(p0)				read		
5	Memory Ports						
6	shift reg(p0)			write	write		
7	c(p0)					read	
8	Expressions						
9	acc phi fu 105			phi_mux			
10	i phi fu 118			phi_mux			
11	grp fu 135		+	+			
12	tmp 1 fu 154			icmp			
13	data1 phi fu 129						phi_mux
14	acc 1 fu 170						+
15	tmp 3 fu 165						*

Figure 2-26: Solution2 Analysis Perspective: Resource

Figure 2-26 shows:

- There is a read on port x and a write to port y. Port c is reported in the memory section because this is also a memory access (the memory is outside the design).
- There is a single pipelined multiplier used in this design.
- One of the adders is being shared: there are two instances of the adder on one row.

With the insight gained through analysis, you can proceed to optimize the design.

Before concluding the analysis, it is worth commenting on the multicycle multiplication operations, which require multiple DSP48s to implement. The source code uses an int data-type. This is a 32-bit data-type that results in large multipliers. A DSP48 multiplier is 18-bit and it requires multiple DSP48s to implement a multiplication for data widths greater than 18-bit.

The [Arbitrary Precision Types](#) tutorial shows how you can create designs with more suitable data types for hardware. Use of arbitrary precision types allows you to define data types of any arbitrary bit size (more than the standard C/C++ 8-, 16-, 32- or 64-bit types).

Step 4: Optimize for the Highest Throughput (Lowest Interval)

The two issues that limit the throughput in this design are:

- The `for` loop. By default loops are kept rolled: one copy of the loop body is synthesized and re-used for each iteration. This ensures each iteration of the loop is executed sequentially. You can unroll the `for` loop to allow all operations to occur in parallel.

- The block RAM used for `shift_reg`. Because the variable `shift_reg` is an array in the C source code, it is implemented as a block RAM by default. However, this prevents its implementation as a shift-register. You should therefore partition this block RAM into individual registers.

Begin by creating a new solution.

- Click the **Synthesis** perspective button.
- Click the **New Solution** button.
- Leave the solution name as `solution3`.
- Click **Finish** to create the new solution.
- In the Project menu, select **Close Inactive Solution Tabs** to close any existing tabs from previous solutions.

The following steps, summarized in [Figure 2-27](#) explain how to unroll the loop.

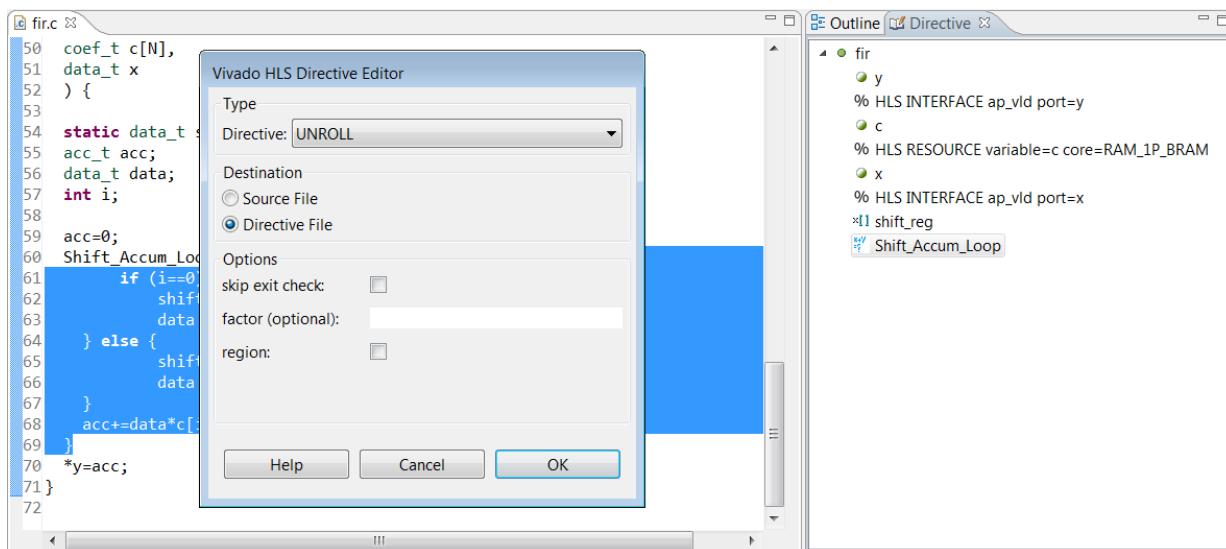


Figure 2-27: Unrolling FOR Loop

- Click in the `fir.c` file, then in the Directive tab, select loop **Shift_Accum_Loop**.



IMPORTANT: *Reminder: the source code must be open in the Information pane to see any code objects in the Directive tab.*

- Right-click and select **Insert Directive**.
- From the Directive drop-down menu, select **Unroll**.

Leave the Destination as the **Directive File**.

When optimizing a design, you must often perform multiple iterations of optimizations to determine what the final optimization should be. By adding the optimizations to the

directive file, you can ensure they are not automatically carried forward to the next solution. Storing the optimizations in the solution directive file allows different solutions to have different optimizations. Had you added the optimizations as pragmas in the code, they would be automatically carried forward to new solutions, and you would have to modify the code to go back and re-run a previous solution.

Leave the other options in the Directives window unchecked and blank to ensure that the loop is fully unrolled.

9. Click **OK** to apply the directive.
10. Apply the directive to partition the array into individual elements.
 - a. In the Directive tab, select array **shift_reg**.
 - b. Right-click and select **Insert Directive**.
 - c. Select **Array_Partition** from the Directive drop-down menu.
 - d. Specify the type as **complete**.
 - e. Select **OK** to apply the directive.

With the directives embedded in the code from `solution2` and the two new directives just added, the directive pane for `solution3` appears as shown in [Figure 2-28](#).

```
fir
  shift_reg
    % HLS ARRAY_PARTITION variable=shift_reg complete dim=1
  y
  c
  x
  Shift_Accum_Loop
  % HLS UNROLL
```

Figure 2-28: Solution3 Directives

In [Figure 2-28](#), notice the directives applied in `solution2` as pragmas have a different annotation (#HLS) than those just applied and saved to the directive file (%HLS). You can view the newly added directives in the Tcl file, as shown next.

11. In the Explorer pane, expand the **Constraint** folder in `Solution3` as shown in [Figure 2-29](#).
12. Double-click the `solution3_directives.tcl` file to open it in the Information pane.

```
1 #####  
2 ## This file is generated automatically by Vivado HLS.  
3 ## Please DO NOT edit it.  
4 ## Copyright (C) 2013 Xilinx Inc. All rights reserved.  
5 #####  
6 set_directive_unroll "fir/Shift_Accum_Loop"  
7 set_directive_array_partition -type complete -dim 1 "fir" shift_reg  
8
```

Figure 2-29: Solution3 Directives.tcl File

13. Click the **Synthesis** toolbar button to synthesize the design.

When synthesis completes, the synthesis report automatically opens.

14. Compare the results of the different solutions. Click the **Compare Reports** toolbar button.

Alternatively, use **Project > Compare Reports**.

15. Add `solution1`, `solution2`, and `solution3` to the comparison.

16. Click **OK**.

Figure 2-30 shows the comparison of the reports. `solution3` has the smallest initiation interval and can process data much faster. As the interval is only 16, it starts to process a new set of inputs every 16 clock cycles.

Performance Estimates				
□ Timing (ns)				
Clock		solution1	solution2	solution3
ap_clk	Target	10.00	10.00	10.00
	Estimated	7.71	8.10	8.10
□ Latency (clock cycles)				
		solution1	solution2	solution3
Latency	min	45	46	13
	max	45	46	13
Interval	min	46	47	14
	max	46	47	14
Utilization Estimates				
		solution1	solution2	solution3
BRAM_18K	0	0	0	
DSP48E	4	4	44	
FF	329	363	985	
LUT	214	227	1009	

Figure 2-30: Comparison of Lab3 Solutions

It is possible to perform additional optimizations on this design. For example, you could use pipelining to further improve the throughput and lower the interval. The [Chapter 7, Design Optimization](#) tutorial provides details on using pipelining to improve the interval.

As mentioned earlier, you could modify the code itself to use arbitrary precision types. For example, if the data types are not required to be 32-bit int types, you could use bit accurate types (for example, 6-bit, 14-bit, or 22-bit types), provided that they satisfy the required accuracy. For more details on using arbitrary precision type see the [Chapter 5, Arbitrary Precision Types](#) tutorial.

Conclusion

In this tutorial, you learned how to:

- Create a Vivado High-Level Synthesis project in the GUI and Tcl environments.
- Execute the major steps in the HLS design flow.
- Create and use a Tcl file to run Vivado HLS.
- Create new solutions, add optimization directives, and compare the results of different solutions.

C Validation

Overview

Validation of the C algorithm is an important part of the High-Level Synthesis (HLS) process. The time spent ensuring the C algorithm is performing the correct operation and creating a C test bench, which confirms the results are correct, reduces the time spent analyzing designs that are incorrect “by design” and ensures the RTL verification can be performed automatically.

This tutorial consists of three lab exercises.

Lab 1 Description

Reviews the aspects of a good C test bench, the basic operations for C validation and the C debugger.

Lab 2 Description

Validates and debugs a C design using arbitrary precision C types.

Lab 3 Description

Validates and debugs a design using arbitrary precision C++ types.

Tutorial Design Description

You can download the tutorial design file from the Xilinx website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory
Vivado_HLS_Tutorial\C_Validation.

The sample design used in this tutorial is a Hamming Window FIR. There are three versions of this design:

- Using native C data types.
- Using ANSI C arbitrary precision data types.
- Using C++ arbitrary precision data types.

This tutorial explains the operation and methodology for C validation using High-Level Synthesis. There are no design goals for this tutorial.

Lab 1: C Validation and Debug

Overview

This exercise reviews the aspects of a good C test bench and explains the basic operations of the High-Level Synthesis C debug environment.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory*

Vivado_HLS_Tutorial is unzipped and placed in the location C:\Vivado_HLS_Tutorial. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the Vivado_HLS_Tutorial directory.

Step 1: Create and Open the Project

1. Open the Vivado HLS Command Prompt.
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** (Figure 3-1).
 - On Linux, open a new shell.


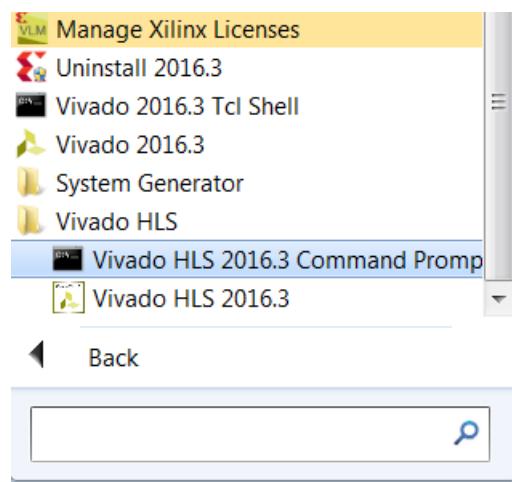


Figure 3-1: Vivado HLS Command Prompt


2. Using the command prompt window ([Figure 3-2](#)), change the directory to the C Validation tutorial, lab1.
3. Execute the Tcl script to setup the Vivado HLS project, using the command `vivado_hls -f run_hls.tcl` as shown in [Figure 3-2](#).

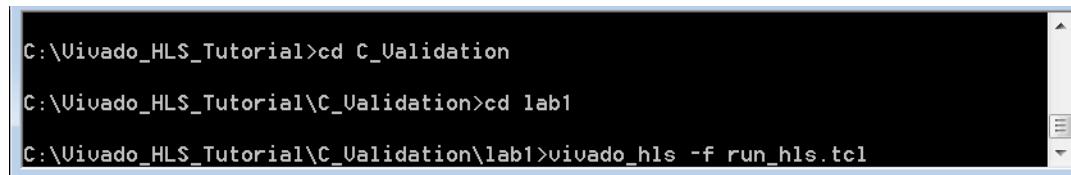

```
C:\Vivado_HLS_Tutorial>cd C_Validation  
C:\Vivado_HLS_Tutorial\C_Validation>cd lab1  
C:\Vivado_HLS_Tutorial\C_Validation\lab1>vivado_hls -f run_hls.tcl
```

Figure 3-2: Setup the Tutorial Project

4. When Vivado HLS completes, open the project in the Vivado HLS GUI using the command `vivado_hls -p hamming_window_prj` as shown in [Figure 3-3](#).

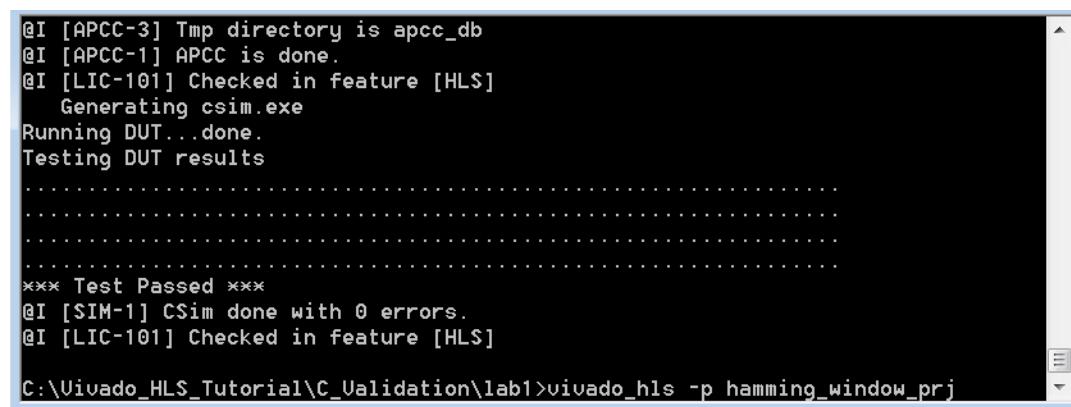

```
@I [APCC-3] Tmp directory is apcc_db  
@I [APCC-1] APCC is done.  
@I [LIC-101] Checked in feature [HLS]  
Generating csim.exe  
Running DUT...done.  
Testing DUT results  
.....  
.....  
.....  
*** Test Passed ***  
@I [SIM-1] CSim done with 0 errors.  
@I [LIC-101] Checked in feature [HLS]  
C:\Vivado_HLS_Tutorial\C_Validation\lab1>vivado_hls -p hamming_window_prj
```

Figure 3-3: Initial Project for C Validation Lab 1

Step 2: Review Test Bench and Run C Simulation

1. Open the C test bench for review by double-clicking `hamming_window_test.c` in the Test Bench folder ([Figure 3-4](#)).

```

73 // Check the results returned by DUT against expected va
74 fp=fopen("result.dat","w");
75 printf("Testing DUT results");
76 for (i = 0; i < WINDOW_LEN; i++) {
77     fprintf(fp, "%d %d \n", hw_result[i], sw_result[i]);
78     if (hw_result[i] != sw_result[i]) {
79         err_cnt++;
80         check_dots = 0;
81         printf("\n!!! ERROR at i = %4d - expected: %10d\tg
82               i, sw_result[i], hw_result[i]);
83     } else { // indicate progress on console
84         if (check_dots == 0)
85             printf("\n");
86         printf(".");
87         if (++check_dots == 64)
88             check_dots = 0;
89     }
90 }
fclose(fp);
printf("\n");

94 // Print final status message
95 if (err_cnt) {
96     printf("!!! TEST FAILED - %d errors detected !!!\n",
97 } else
98     printf("*** Test Passed ***\n");
99
100 // Only return 0 on success
101 return err_cnt;
102}

```

Figure 3-4: C Test Bench for C Validation Lab 1

A review of the test bench source code shows the following good practices:

- The test bench:
 - Creates a set of expected results that confirm the function is correct.
 - Stores the results in array `sw_result`.
- The Design Under Test (DUT) is called to generate results, which are stored in array `hw_result`. Because the synthesized functions use the `hw_result` array, it is this array that holds the RTL-generated results later in the design flow.
- The actual and expected results are compared. If the comparison fails, the value of variable `err_cnt` is set to a non-zero value.
- The test bench issues a message to the console if the comparison failed, but more importantly returns the results of the comparison. If the return value is zero the test bench validates the results are good.

This process of checking the results and returning a value of zero if they are correct automates RTL verification.

You can execute the C code and test bench to confirm that the code is working as expected.

2. Click the **Run C Simulation** toolbar button to open the C Simulation Dialog box, shown in [Figure 3-5](#).

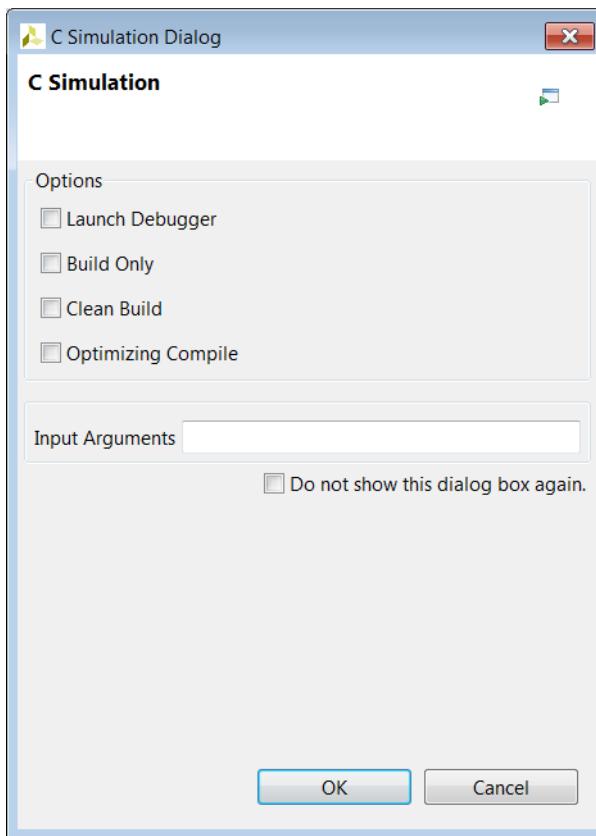


Figure 3-5: Run C Simulation Dialog Box

3. Select **OK** to run the C simulation.

As shown in [Figure 3-6](#), the following actions occur when C simulation executes:

- The simulation output is shown in the Console window.
- Any print statements in the C code are echoed in the Console window. This example shows the simulation passed correctly.
- The C simulation executes in the solution subdirectory `csim`. You can find any output from the C simulation in the build folder, which is the location at which you can see the output file `result.dat` written by the `fprintf` command highlighted in [Figure 3-6](#).

Because the C simulation is not executed in the project directory, you must add any data files to the project as C test bench files (so they can be copied to the `csim/build` directory when the simulation runs). Such files would include, for example, input data read by the test bench.

The screenshot shows the Vivado HLS IDE interface. On the left is the Explorer pane displaying the project structure for 'hamming_window_prj'. The 'Test Bench' folder contains 'hamming_window_test.c' and 'solution1'. 'solution1' includes 'constraints', 'directives.tcl', 'script.tcl', 'csim', 'build', and 'report' sub-folders. Inside 'build' are files like 'apcc.log', 'csim.exe', 'csim.mk', 'Makefile.rules', 'result.dat', 'run_sim.tcl', 'sim.bat', 'apcc_db', 'obj'. The main workspace shows the code for 'hamming_window_test.c'. The code prints comparison results between hardware and software results, handles errors, and prints final status messages. Below the code editor is the 'Console' pane, which shows the output of the simulation: 'Testing DUT results' followed by several dotted lines, and finally '** Test Passed ***'.

Figure 3-6: C Simulation Results

Step 3: Run the C Debugger

A C debugger is included as part of High-Level Synthesis.

1. Click the **Run C Simulation** toolbar button to open the C Simulation Dialog box.
2. Select the **Launch Debugger** option as shown in [Figure 3-7](#).
3. Click **OK** to run the simulation.

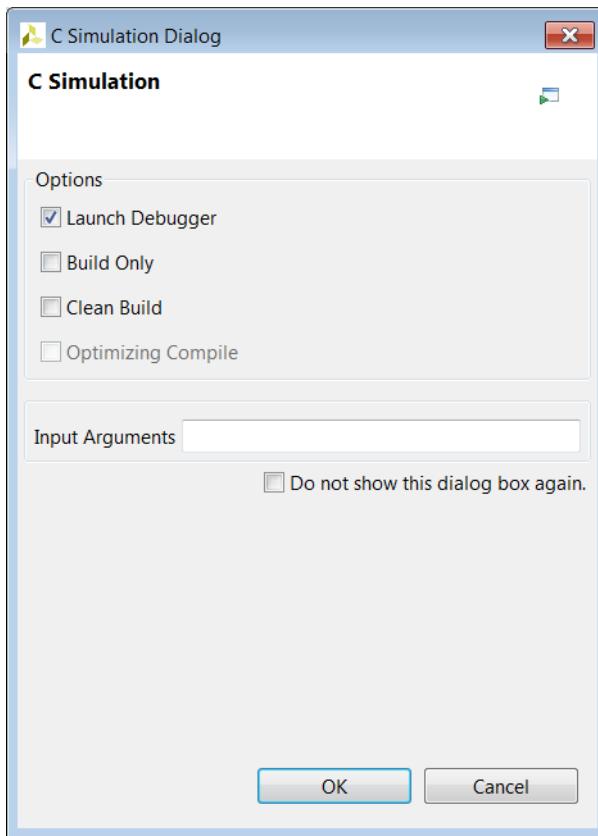


Figure 3-7: C Simulation Dialog Box

The Launch Debugger option compiles the C code and then opens the Debug environment, as shown in [Figure 3-8](#). Before proceeding, note the following:

- Highlighted at the top-right in [Figure 3-8](#), you can see that the perspective has changed from Synthesis to Debug. Click the perspective buttons to return to the synthesis environment at any time.
- By default, the code compiles in debug mode. The Launch Debugger option automatically opens the debug perspective at time 0, ready for debug to begin. To compile the code without debug information, select the **Optimizing Compile** option in the C Simulation dialog box.

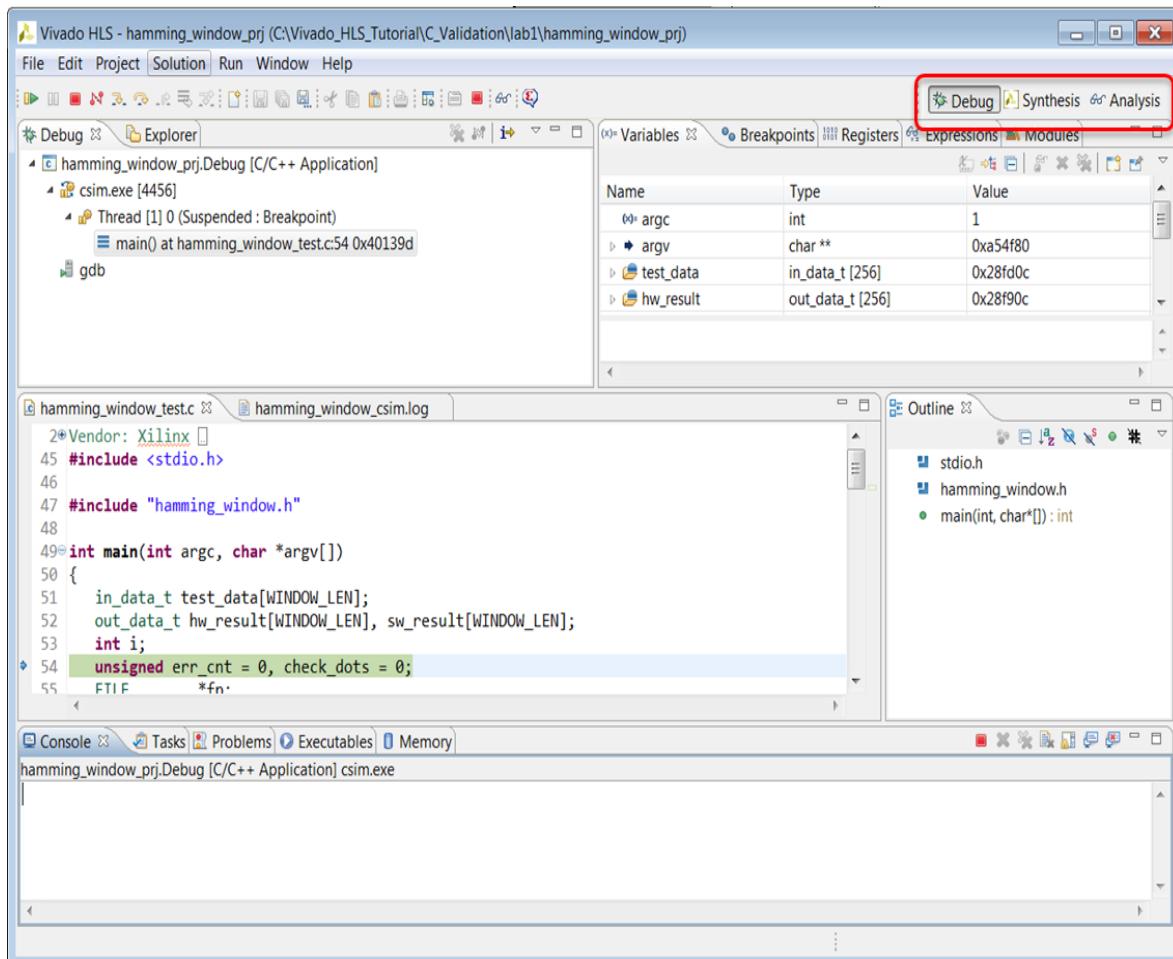


Figure 3-8: The HLS Debug Perspective

You can use the **Step Into** button (Figure 3-9) to step through the code line-by-line.



Figure 3-9: The Debug Step Into Button

4. Expand the Variables window to see the `sw_result` array.
5. Expand the `sw_result` array to the view shown in Figure 3-10.
6. Click the **Step Into** button (or key F5) repeatedly until you see the values being updated in the Variables window.

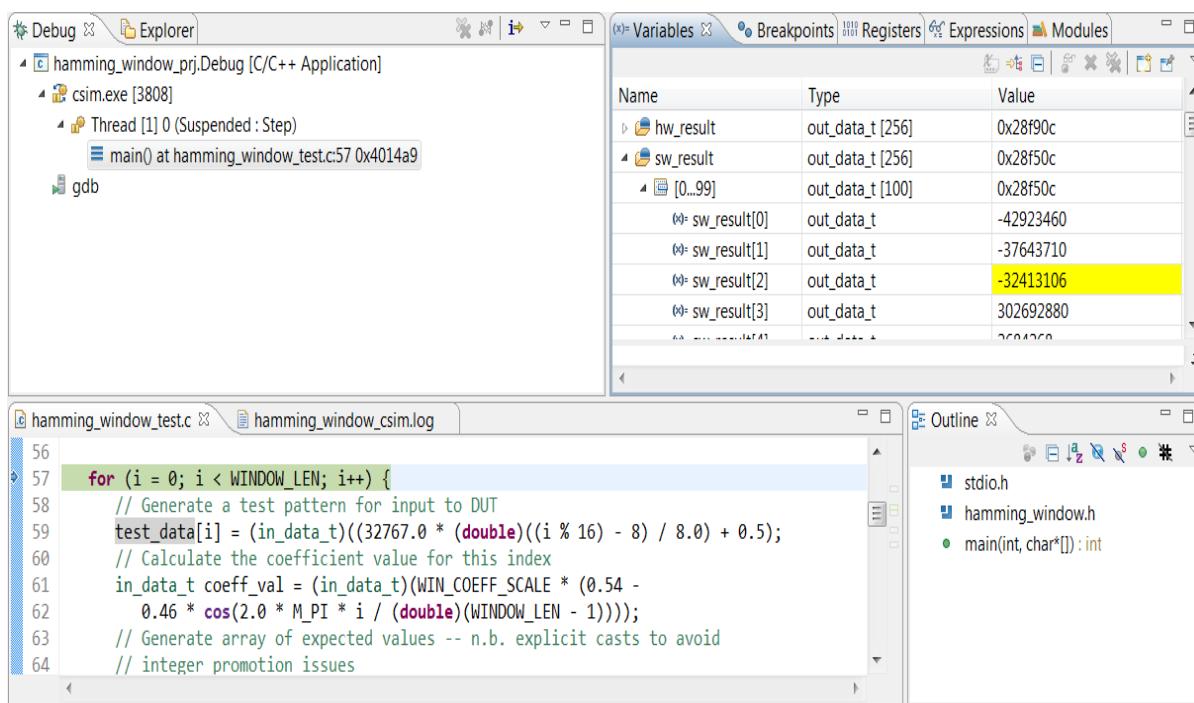


Figure 3-10: Analysis of C Variables

In this manner, you can analyze the C code and debug it if the behavior is incorrect.

For more detailed analysis, to the right of the Step Into button are the Step Over (F6), Step Return (F7) and the Resume (F8) buttons.

7. Scroll to line 69 in the `hamming_window_test.c` file.
8. Place the cursor in the left-hand margin on line 69, right-click with the mouse button and select Toggle Breakpoint. A breakpoint (blue dot) is indicated in the margin, as shown in [Figure 3-11](#).
9. Activate the Breakpoints tab, also shown in [Figure 3-11](#), to confirm there is a breakpoint set at line 69.
10. Click the **Resume** button (highlighted in [Figure 3-11](#)) or the F8 key to execute up to the breakpoint.

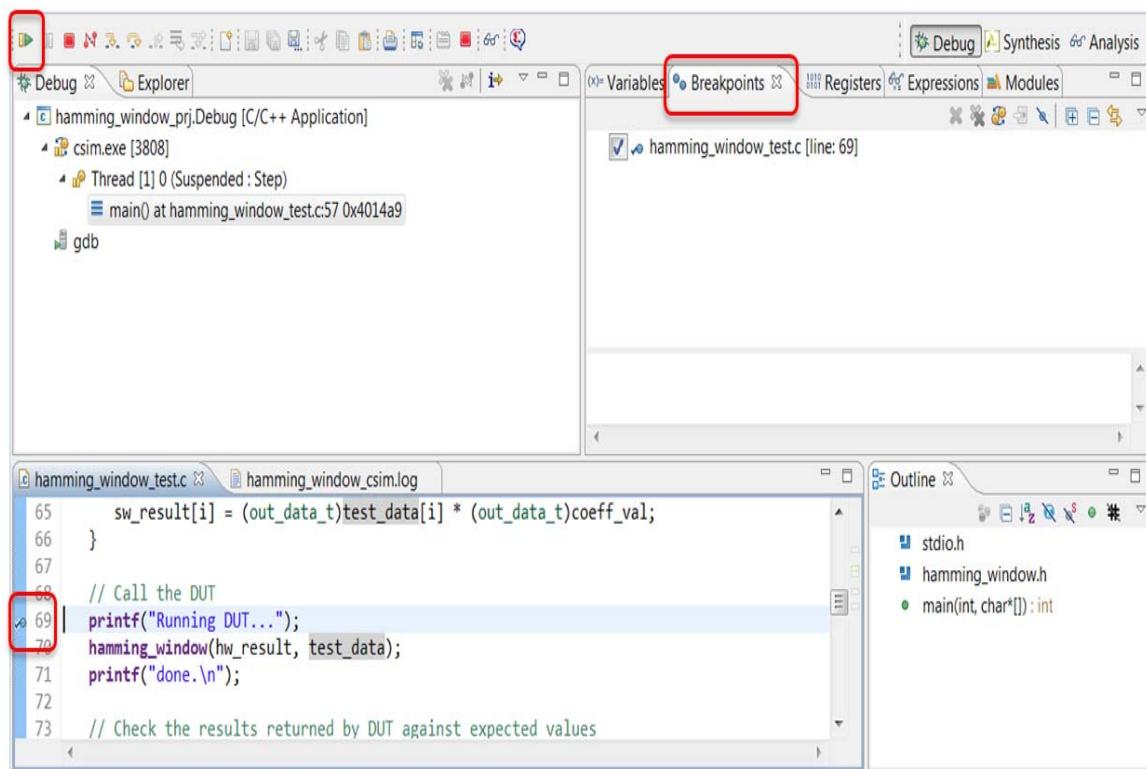


Figure 3-11: Using Breakpoints

11. Click the **Step Into** button (or key F5) multiple times to step into the `hamming_window` function.
 12. Click the **Step Return** button (or key F7) to return to the main function.
 13. Click the red **Terminate** button to end the debug session.
- You can use the Run C simulation button to restart the debug session from within the Debug perspective.
14. Exit the Vivado HLS GUI and return to the command prompt.

Lab 2: C Validation with ANSI C Arbitrary Precision Types

Introduction

This exercise uses a design with arbitrary precision C types. You will review and debug the design in the GUI.

Step 1: Create and Open the Project

1. From the Vivado HLS command prompt used in Lab 1, change to the lab2 directory, as shown in [Figure 3-12](#).
2. To create a new **Vivado HLS** project, type `vivado_hls -f run_hls.tcl`.

```
C:\Vivado_HLS_Tutorial\C_Validation\lab1>cd ..  
C:\Vivado_HLS_Tutorial\C_Validation>cd lab2  
C:\Vivado_HLS_Tutorial\C_Validation\lab2>vivado_hls -f run_hls.tcl
```

Figure 3-12: C Validation for Arbitrary Precision Types Lab

3. To open the Vivado HLS GUI project, type `vivado_hls -p hamming_window_prj`.
4. Open the Source folder in the Explorer pane and double-click `hamming_window.c` to open the code, as shown in [Figure 3-13](#).


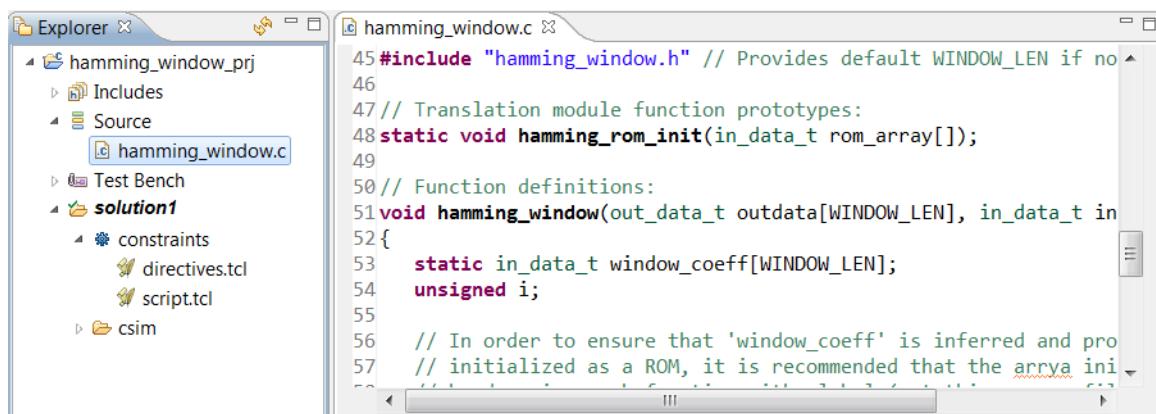


Figure 3-13: C Code for C Validation Lab 2

5. Hold down the **Ctrl** key and click `hamming_window.h` on line 45 to open this header file.
6. Scroll down to view the type definitions ([Figure 3-14](#)).

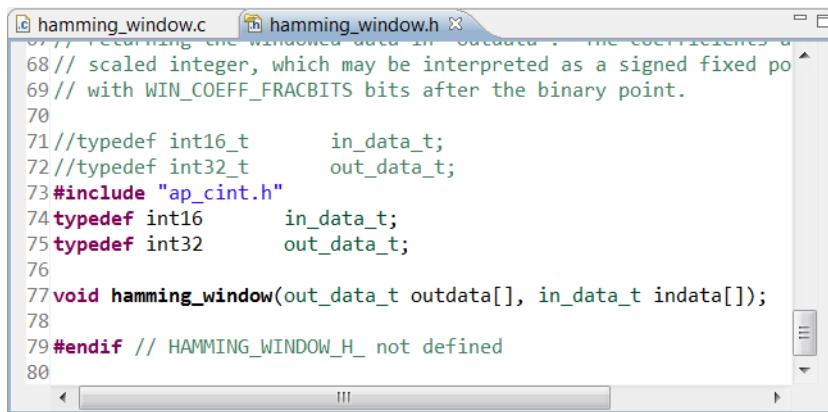

```
67 // Recalculating the windowed data in updated . The coefficients are
68 // scaled integer, which may be interpreted as a signed fixed point
69 // with WIN_COEFF_FRACBITS bits after the binary point.
70
71 //typedef int16_t      in_data_t;
72 //typedef int32_t      out_data_t;
73 #include "ap_cint.h"
74 typedef int16      in_data_t;
75 typedef int32      out_data_t;
76
77 void hamming_window(out_data_t outdata[], in_data_t indata[]);
78
79 #endif // HAMMING_WINDOW_H_ not defined
80
```

Figure 3-14: Type Definitions for C Validation Lab 2

In this lab, the design is the same as Lab 1, however, the types have been updated from the standard C data types (int16_t and int32_t) to the arbitrary precision types provided by Vivado High-Level Synthesis and defined in header file ap_cint.h.

More details for using arbitrary precision types are discussed in the [Chapter 5, Arbitrary Precision Types](#) tutorial. An example of using arbitrary precision types would be to change this file to use 12-bit input data types: standard C types only support data widths on 8-bit boundaries.

This exercise demonstrates how such types can be debugged.

Step 2: Run the C Debugger

1. Click the **Run C Simulation** toolbar button to open the C Simulation Dialog box.
2. Select the **Launch Debugger** option.
3. Click **OK** to run the simulation.

The warning and error message shown in [Figure 3-15](#) appears.

The message in the console pane and log file indicate you cannot debug the arbitrary precision types used for ANSI C designs in the debug environment.



IMPORTANT: When working with arbitrary precision types you can use the Vivado HLS debug environment only with C++ or SystemC. When using arbitrary precision types with ANSI C, the debug environment cannot be used. With ANSI C, you must instead use printf or fprintf statements for debugging.

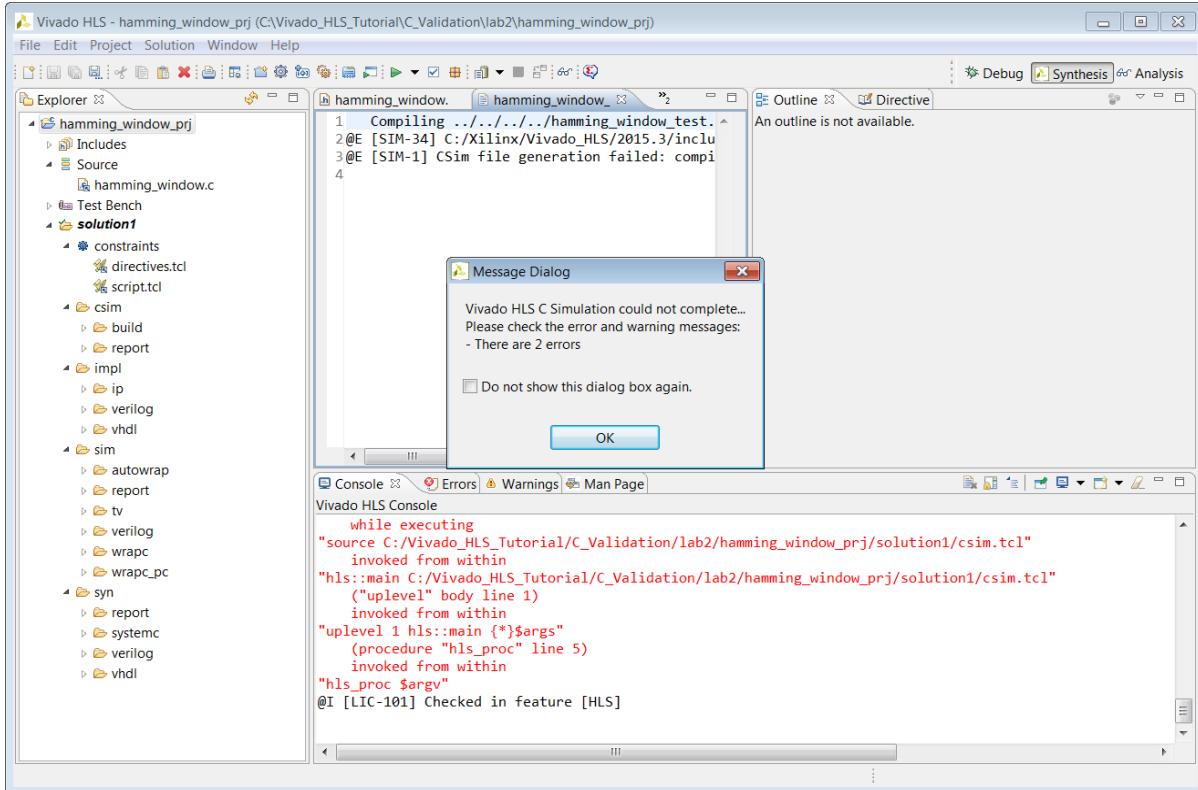


Figure 3-15: C Simulation Dialog Box

4. Select the **Explorer** pane.
5. Expand the Test Bench folder in the Explorer pane.
6. Double-click the file `hamming_window_test.c`.


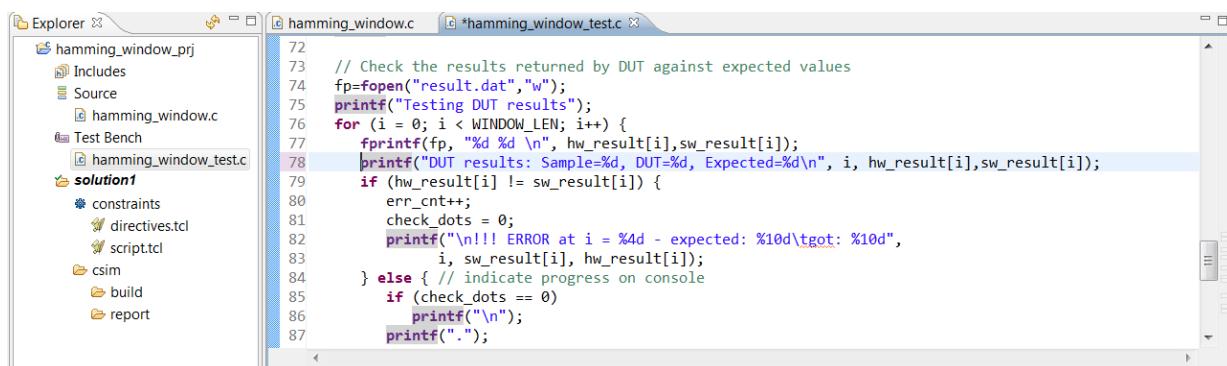


Figure 3-16: Enable Printing of the Results

7. Save the file.
8. Select the **Synthesis** button.
9. Click the **Run C Simulation** toolbar button or the menu **Project > Run C Simulation** to open the C Simulation Dialog box.

10. Ensure the **Launch Debugger** option is not selected.
11. Click **OK** to run the simulation.

The results appear in the console window ([Figure 3-17](#)).

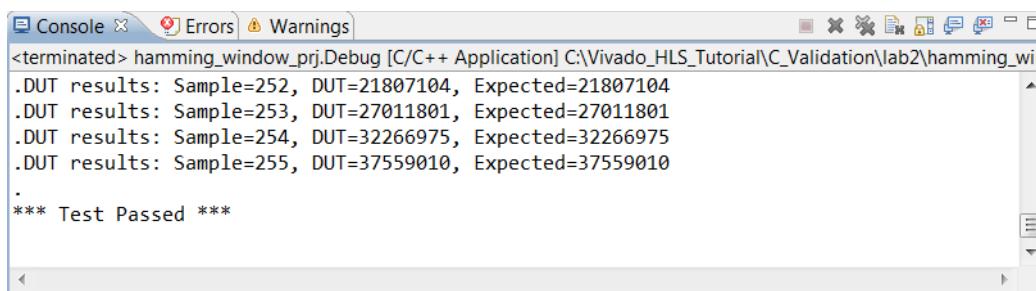

A screenshot of the Vivado HLS GUI showing the 'Console' tab. The output window displays simulation results for a Hamming window project. It shows multiple DUT results being compared against expected values, followed by a success message. The text in the console is as follows:

```
<terminated> hamming_window_prj.Debug [C/C++ Application] C:\Vivado_HLS_Tutorial\C_Validation\lab2\hamming_win
.DUT results: Sample=252, DUT=21807104, Expected=21807104
.DUT results: Sample=253, DUT=27011801, Expected=27011801
.DUT results: Sample=254, DUT=32266975, Expected=32266975
.DUT results: Sample=255, DUT=37559010, Expected=37559010
.
*** Test Passed ***
```

Figure 3-17: C Validation Lab 2 Results

12. Exit the Vivado HLS GUI and return to the command prompt.

Lab 3: C Validation with C++ Arbitrary Precision Types

Overview

This exercise uses a design with arbitrary precision C++ types. You will review and debug the design in the GUI.

Step 1: Create and Open the Project

1. From the Vivado HLS command prompt used in Lab 2, change to the lab3 directory.
2. Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.
3. Open the Vivado HLS GUI project by typing `vivado_hls -p hamming_window_prj`.
4. Open the **Source** folder in the Explorer pane and double-click `hamming_window.cpp` to open the code, as shown in [Figure 3-18](#).

```

45 #include "hamming_window.h" // Provides default WINDOW_LEN if none is specified
46
47 // Translation module function prototypes:
48 static void hamming_rom_init(in_data_t rom_array[]);
49
50 // Function definitions:
51 void hamming_window(out_data_t outdata[WINDOW_LEN], in_data_t indata[])
52 {
53     static in_data_t window_coeff[WINDOW_LEN];
54     unsigned i;
55
56     // In order to ensure that 'window_coeff' is inferred and properly initialized as a ROM, it is recommended that the array is initialized in a sub-function with global control this source file.
57     // This will ensure that the array is properly initialized before it is used.
58 }

```

Figure 3-18: C++ Code for C Validation Lab 3

5. Hold down the **Ctrl** key down and click `hamming_window.h` on line 45 to open this header file.
6. Scroll down to view the type definitions (Figure 3-19).

```

70 // This function applies an Hamming window function to the 'indata' array,
71 // returning the windowed data in 'outdata'. The coefficients are scaled
72 // integer, which may be interpreted as a signed fixed point number with
73 // WIN_COEFF_FRACBITS bits after the binary point.
74
75 //typedef int16_t          in_data_t;
76 //typedef int32_t          out_data_t;
77 #include "ap_int.h"
78 typedef ap_int<16>      in_data_t;
79 typedef ap_int<32>      out_data_t;
80
81 void hamming_window(out_data_t outdata[], in_data_t indata[]);
82
83 #ifndef HAMMING_WINDOW_H // HAMMING_WINDOW_H not defined

```

Figure 3-19: Type Definitions for C Validation Lab 3

Note: In this lab, the design is the same as in Lab 1 and Lab 2, with one exception. The design is now C++ and the types have been updated to use the C++ arbitrary precision types, `ap_int<#N>`, provided by Vivado HLS and defined in header file `ap_int.h`.

Step 2: Run the C Debugger

1. Click the **Run C Simulation** toolbar button to open the C Simulation Dialog box.
2. Select the **Launch Debugger** option.
3. Click **OK**.

The debug environment opens.

4. Select the `hamming_window.cpp` code tab.

5. Set a breakpoint at line 61 in the `hamming_window.cpp` file as shown in [Figure 3-20](#).
6. Click the **Resume** button (or press the **F8** key) to execute the code up to the breakpoint.

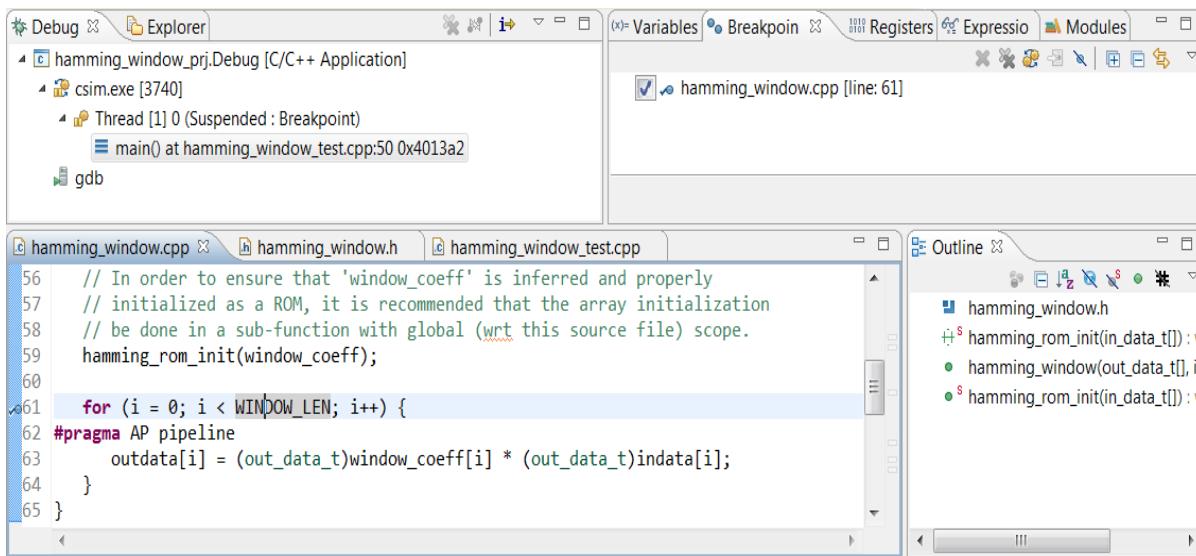


Figure 3-20: Debug Environment for C Validation Lab 3

7. Click the **Step Into** button (or press the **F5** key) twice to see the view in [Figure 3-21](#).

The variables in the design are now C++ arbitrary precision types. These types are defined in header file `ap_int.h`. When the debugger encounters these types, it follows the definition into the header file.

As you continue stepping through the code, you have the opportunity to observe in greater detail how the results for arbitrary precision types are calculated.

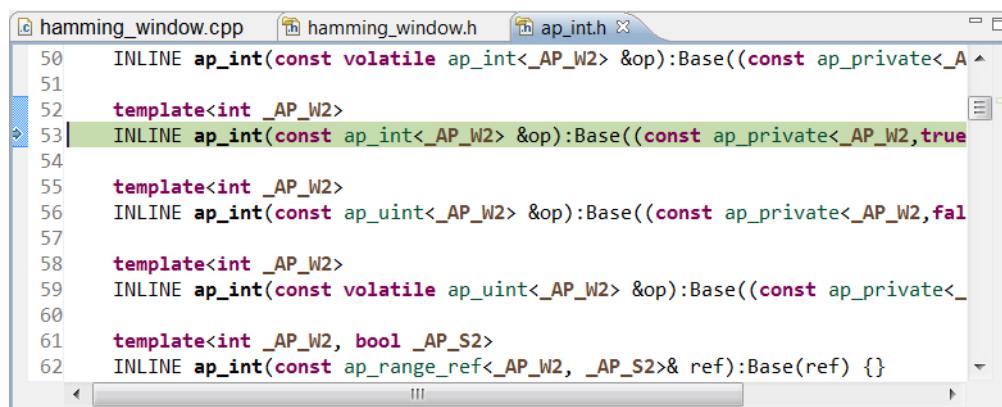


Figure 3-21: Arbitrary Precision Header File

A more productive methodology is to exit the `ap_int.h` header file and return to view the results.

8. Click the **Step Return** button (or press the **F7** key) to return to the calling function.

9. Select the **Variables** tab and expand the `ap_private` variable.
10. Expand the `outdata` variable, as shown in [Figure 3-22](#) to see the value of the variable shown in the `VAL` parameter.

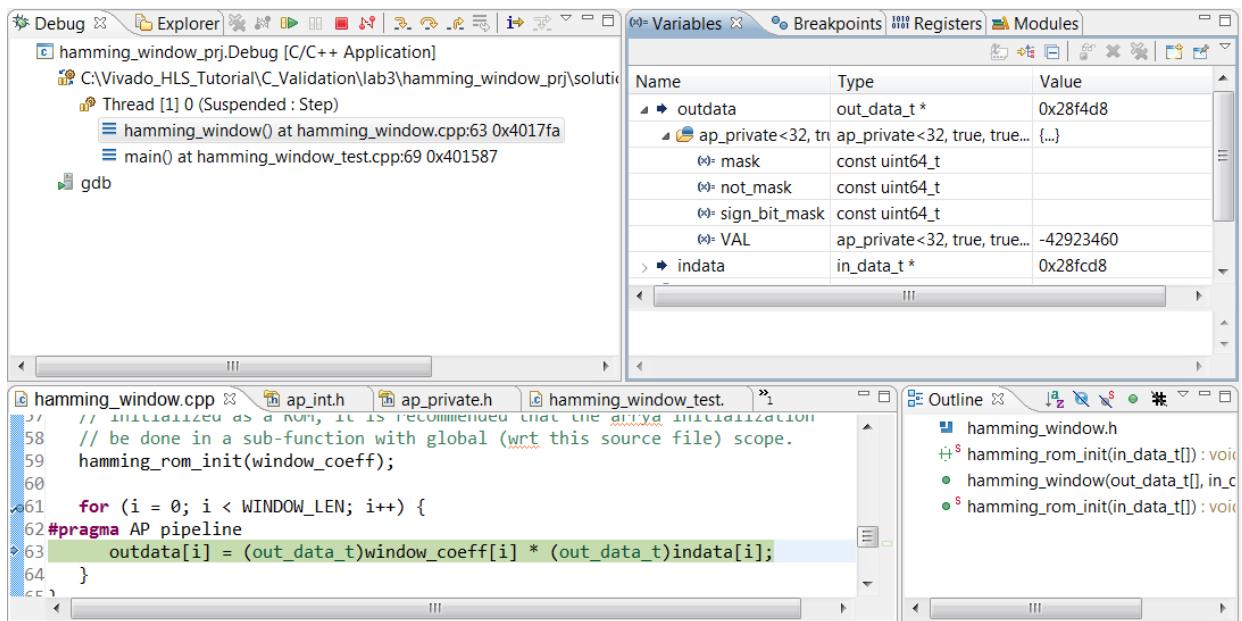


Figure 3-22: Arbitrary Precision Variables

Arbitrary precision types are a powerful means to create high-performance, bit accurate hardware designs. However, in a debug environment, your productivity can be reduced by stepping through the header file definitions. Use breakpoints and the step return feature to skip over the low-level calculations and view the value of variables in the Variables tab.

Conclusion

In this tutorial, you learned:

- The importance of the C test bench in the simulation process.
- How to use the C debug environment, set breakpoints and step through the code.
- How to debug C and C++ arbitrary precision types.

Interface Synthesis

Overview

Interface synthesis is the process of adding RTL ports to the C design. In addition to adding the physical ports to the RTL design, interface synthesis includes an associated I/O protocol, allowing the data transfer through the port to be synchronized automatically and optimally with the internal logic.

This tutorial consists of four lab exercises that cover the primary features and capabilities of interface synthesis.

Lab 1 Description

Review the function return and block-level protocols.

Lab 2 Description

Understand the default I/O protocol for ports and learn how to select an I/O protocol.

Lab 3 Description

Review how array ports are implemented and can be partitioned.

Lab 4 Description

Create an optimized implementation of the design and add AXI4 interfaces.

Tutorial Design Description

Download tutorial design file from the Xilinx website. See [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory
Vivado_HLS_Tutorial\Interface_Synthesis.

About the Labs

- The sample design used in the first two labs in this tutorial is a simple one, which helps the focus to remain on the interfaces.
- The final two lab exercises use a multichannel accumulator.
- This tutorial explains how to implement I/O ports and protocols using High-Level Synthesis.
- In Lab 4, you create an optimal implementation of the design used in Lab3.

Lab 1: Block-Level I/O Protocols

Overview

This lab explains what block-level I/O protocols are and how to control them.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory Vivado_HLS_Tutorial is unzipped and placed in the location C:\Vivado_HLS_Tutorial. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the Vivado_HLS_Tutorial directory.*

Step 1: Create and Open the Project

1. Open the Vivado HLS Command Prompt.
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** (Figure 4-1).


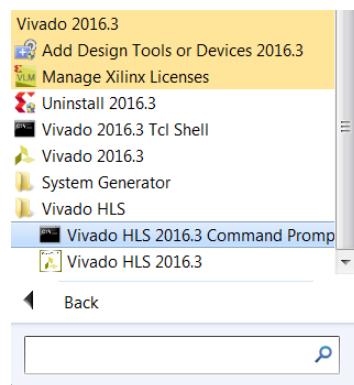


Figure 4-1: Vivado HLS Command Prompt

- In Linux, open a new shell.


2. Using the command prompt window ([Figure 4-2](#)), change directory to the Interface Synthesis tutorial, lab1.
3. Execute the Tcl script to setup the Vivado HLS project, using the command `vivado_hls -f run_hls.tcl`, as shown in [Figure 4-2](#).

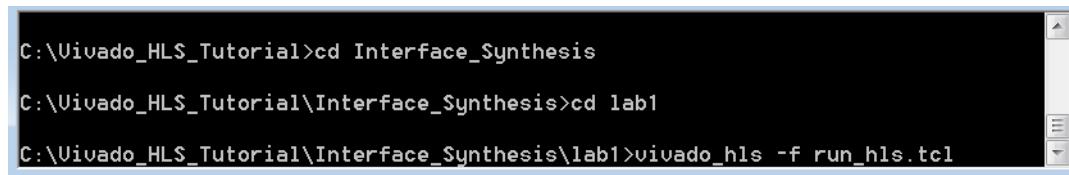

```
C:\Vivado_HLS_Tutorial>cd Interface_Synthesis  
C:\Vivado_HLS_Tutorial\Interface_Synthesis>cd lab1  
C:\Vivado_HLS_Tutorial\Interface_Synthesis\lab1>vivado_hls -f run_hls.tcl
```

Figure 4-2: Setup the Tutorial Project

4. When Vivado HLS completes, open the project in the Vivado HLS GUI using the command `vivado_hls -p adders_prj`, as shown in [Figure 4-3](#).

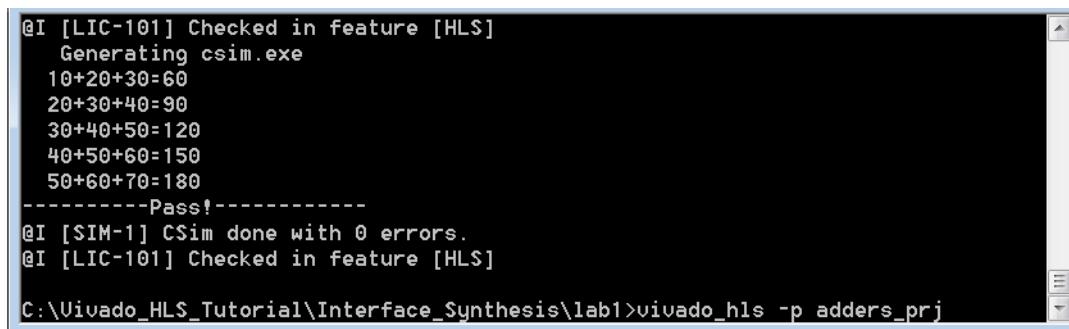

```
@I [LIC-101] Checked in feature [HLS]  
Generating csim.exe  
10+20+30=60  
20+30+40=90  
30+40+50=120  
40+50+60=150  
50+60+70=180  
-----Pass!-----  
@I [SIM-1] CSim done with 0 errors.  
@I [LIC-101] Checked in feature [HLS]  
C:\Vivado_HLS_Tutorial\Interface_Synthesis\lab1>vivado_hls -p adders_prj
```

Figure 4-3: Initial Project for Interface Synthesis Lab 1

Step 2: Create and Review the Default Block-Level I/O Protocol

1. Double-click `adders.c` in the **Source** folder to open the source code for review ([Figure 4-4](#)).

This example uses a simple design to focus on the I/O implementation (and not the logic in the design). The important points to take from this code are:

- Directives in the form of pragmas have been added to the source code to prevent any I/O protocol being synthesized for any of the data ports (`inA`, `inB` and `inC`). I/O port protocols are reviewed in the next lab exercise.
- This function returns a value and this is the only output from the function. As seen in later exercises, not all functions return a value. The port created for the function return is discussed in this lab exercise.

```

48 int adders(int in1, int in2, int in3) {
49
50
51 // Prevent IO protocols on all input ports
52 #pragma HLS INTERFACE ap_none port=in3
53 #pragma HLS INTERFACE ap_none port=in2
54 #pragma HLS INTERFACE ap_none port=in1
55
56
57     int sum;
58
59     sum = in1 + in2 + in3;
60
61     return sum;
62 }
63
64

```

Figure 4-4: C Code for Interface Synthesis Lab 1

2. Execute the **Run C Synthesis** command using the dedicated toolbar button or the **Solution** menu.

When synthesis completes, the synthesis report opens automatically.

3. To review the RTL interfaces scroll to the Interface summary at the end of the synthesis report.

The Interface summary and Outline tab are shown in [Figure 4-5](#).

Interface					
Summary					
RTL Ports	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_none	adders	return value
ap_rst	in	1	ap_ctrl_none	adders	return value
ap_return	out	32	ap_ctrl_none	adders	return value
in1	in	32	ap_none	in1	scalar
in2	in	32	ap_none	in2	scalar
in3	in	32	ap_none	in3	scalar

Figure 4-5: Interface Summary

There are four types of ports to review:

- The design takes more than one clock cycle to complete, so a clock and reset have been added to the design: `ap_clk` and `ap_rst`. Both are single-bit inputs.
- A block-level I/O protocol has been added to control the RTL design: ports `ap_start`, `ap_done`, `ap_idle` and `ap_ready`. These ports will be discussed shortly.
- The design has four data ports.
 - Input ports `In1`, `In2`, and `In3` are 32-bit inputs and have the I/O protocol `ap_none` (as specified by the directives in [Figure 4-5](#)).

- The design also has a 32-bit output port for the function return, ap_return.

The block-level I/O protocol allows the RTL design to be controlled by additional ports independently of the data I/O ports. This I/O protocol is associated with the function itself, not with any of the data ports. The default block-level I/O protocol is called ap_ctrl_hs. [Figure 4-6](#) shows this protocol is associated with the function return value (this is true even if the function has no return value specified in the code).

[Table 4-1](#) summarizes the behavior of the signals for block-level I/O protocol ap_ctrl_hs.

Note: The explanation here uses the term “transaction”. In the context of high-level synthesis, a transaction is equivalent to one execution of the C function (or the equivalent operation in the synthesized RTL design).

Table 4-1: Block Level I/O Protocol ap_ctrl_hs

Signals	Description
ap_start	<p>This signal controls the block execution and must be asserted to logic 1 for the design to begin operation.</p> <p>It should be held at logic 1 until the associated output handshake ap_ready is asserted. When ap_ready goes high, the decision can be made on whether to keep ap_start asserted and perform another transaction or set ap_start to logic 0 and allow the design to halt at the end of the current transaction.</p> <p>If ap_start is asserted low before ap_ready is high, the design might not have read all input ports and might stall operation on the next input read.</p>
ap_ready	<p>This output signal indicates when the design is ready for new inputs.</p> <p>The ap_ready signal is set to logic 1 when the design is ready to accept new inputs, indicating that all input reads for this transaction have been completed.</p> <p>If the design has no pipelined operations, new reads are not performed until the next transaction starts.</p> <p>This signal is used to make a decision on when to apply new values to the inputs ports and whether to start a new transaction should using the ap_start input signal.</p> <p>If the ap_start signal is not asserted high, this signal goes low when the design completes all operations in the current transaction.</p>
ap_done	<p>This signal indicates when the design has completed all operations in the current transaction.</p> <p>A logic 1 on this output indicates the design has completed all operations in this transaction. Because this is the end of the transaction, a logic 1 on this signal also indicates the data on the ap_return port is valid.</p> <p>Not all functions have a function return argument and hence not all RTL designs have an ap_return port.</p>
ap_idle	<p>This signal indicates if the design is operating or idle (no operation).</p> <p>The idle state is indicated by logic 1 on this output port. This signal is asserted low once the design starts operating.</p> <p>This signal is asserted high when the design completes operation and no further operations are performed.</p>

You can observe the behavior of these signals by viewing the trace file produced by RTL cosimulation. This is discussed in [Chapter 8, RTL Verification](#) tutorial, but [Figure 4-6](#) shows the waveforms for the current synthesis results.

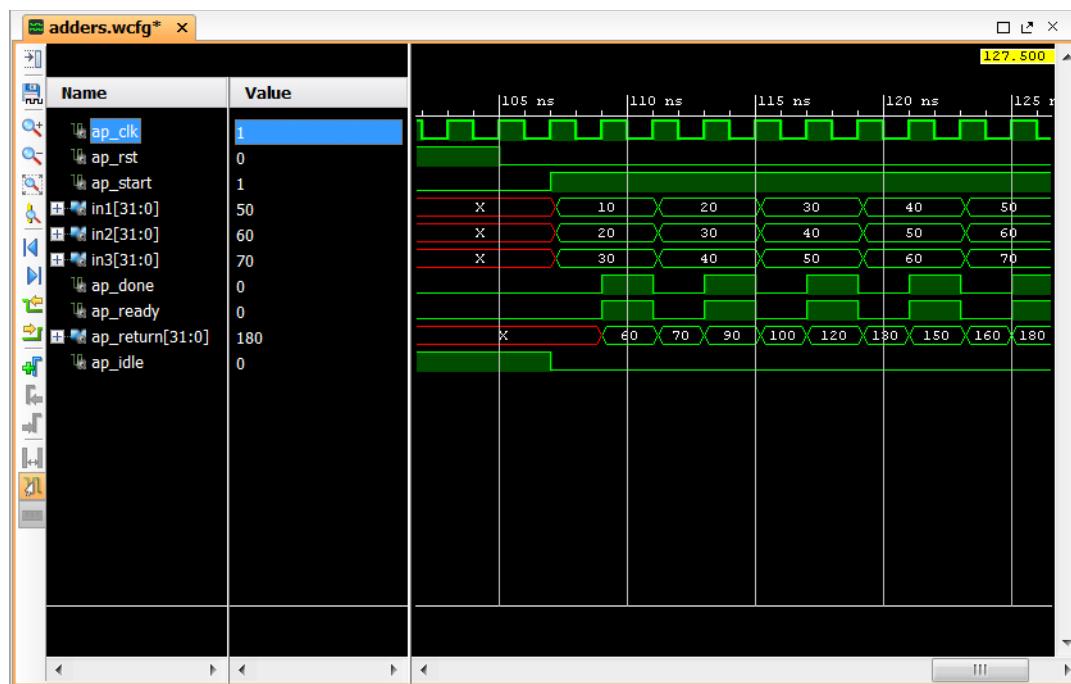


Figure 4-6: RTL Waveforms for Block Protocol Signals

The waveforms in [Figure 4-6](#) show the behavior of the block-level I/O signals.

- The design does not start operation until `ap_start` is set to logic 1.
- The design indicates it is no longer idle by setting port `ap_idle` low.
- Five transactions are shown. The first three input values (10, 20, and 30) are applied to input ports In1, In2, and In3 respectively.
- Output signal `ap_ready` goes high to indicate the design is ready for new inputs on the next clock.
- Output signal `ap_done` indicates when the design is finished and that the value on output port `ap_return` is valid (the first output value, 60, is the sum of all three inputs).
- Because `ap_start` is held high, the next transaction starts on the next clock cycle.


Note: In RTL cosimulation, all design and port input control signals are always enabled. For example, in [Figure 4-6](#) signal `ap_start` is always high.

In the 2nd transaction, notice on port `ap_return`, the first output has the value 70. The result on this port is not valid until the `ap_done` signal is asserted high.

Step 3: Modify the Block-Level I/O protocol

The default block-level I/O protocol is the ap_ctrl_hs protocol (the Control Handshake protocol). In this step, you create a new solution and modify this protocol.

1. Select **New Solution** from the toolbar or Project menu to create a new solution.
2. Leave all settings in the new solution dialog box at their default setting and click **Finish**.
3. Select the C source code tab (adders.c) in the Information pane (or re-open the C source code if it was closed).
4. Activate the Directives tab and select the top-level function adders, as shown in [Figure 4-7](#).

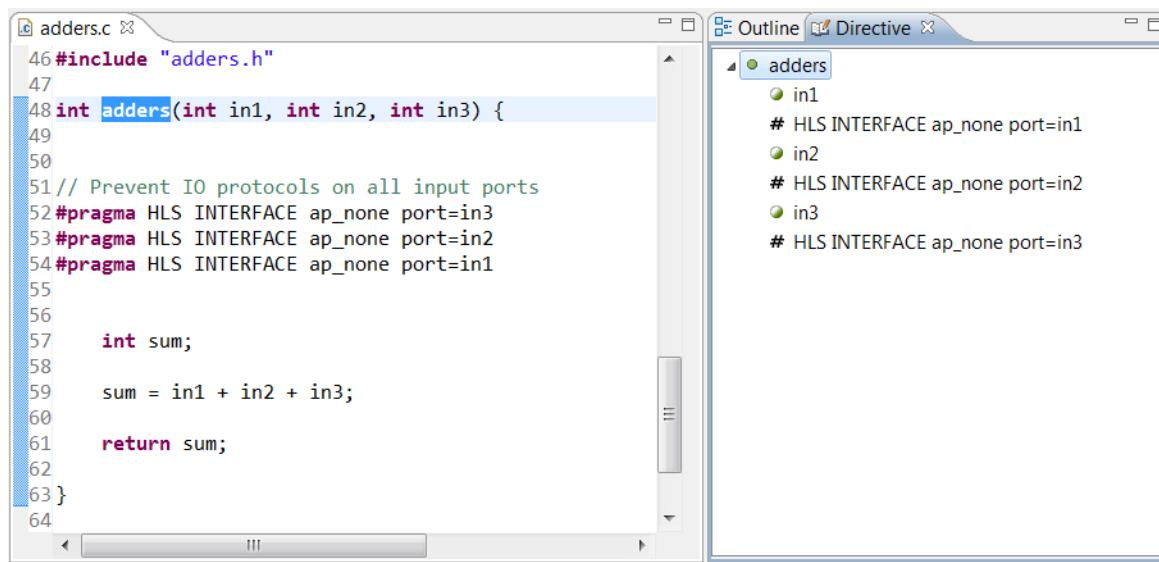

The screenshot shows the Xilinx IDE interface. On the left, the code editor displays the C source file 'adders.c' with the following content:

```
46 #include "adders.h"
47
48 int adders(int in1, int in2, int in3) {
49
50
51 // Prevent IO protocols on all input ports
52 #pragma HLS INTERFACE ap_none port=in1
53 #pragma HLS INTERFACE ap_none port=in2
54 #pragma HLS INTERFACE ap_none port=in3
55
56
57     int sum;
58
59     sum = in1 + in2 + in3;
60
61     return sum;
62
63 }
64
```

On the right, the 'Directive' tab of the 'Outline' panel is active, showing the selected top-level function 'adders' and its associated I/O ports:

- in1: # HLS INTERFACE ap_none port=in1
- in2: # HLS INTERFACE ap_none port=in2
- in3: # HLS INTERFACE ap_none port=in3

Figure 4-7: Top-Level Function Selected

Because the block-level I/O protocols are associated with the function, you must specify them by selecting the top-level function.

5. In the Directives tab, mouse over the top-level function adders, right-click, and select **Insert Directive**.

The Directives Editor dialog box opens. Select the INTERFACE option from the **Directive** pull-down list.

[Figure 4-8](#) shows this dialog box with the drop-down menu for the interface mode activated.

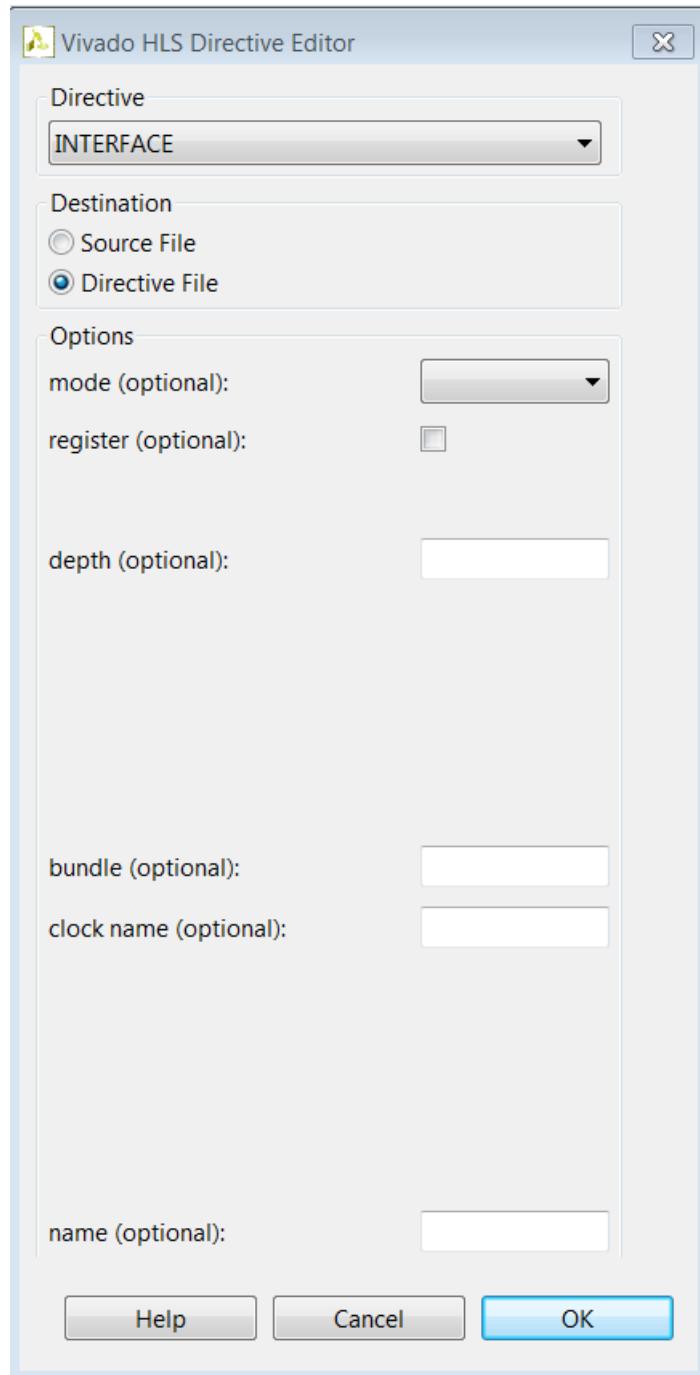


Figure 4-8: Directive Dialog Box for ap_ctrl_none

The drop-down menu shows there are four options for the block-level interface protocol:

- ap_ctrl_none: No block-level I/O control protocol.
- ap_ctrl_hs: The block-level I/O control handshake protocol we have reviewed.

- **ap_ctrl_chain**: The block-level I/O protocol for control chaining. This I/O protocol is primarily used for chaining pipelined blocks together.
- **s_axilite**: May be applied in addition to **ap_ctrl_hs** or **ap_ctrl_chain** to implement the block-level I/O protocol as an AXI Slave Lite interface in place of separate discrete I/O ports.

The block-level I/O protocol **ap_ctrl_chain** is not covered in this tutorial. This protocol is similar to **ap_ctrl_hs** protocol but with an additional input signal, **ap_continue**, which must be high when **ap_done** is asserted for the next transaction to proceed. This allows downstream blocks to apply back-pressure on the system and halt further processing when they are unable to continue accepting new data.

6. In the Destination section of the Directives Editor dialog box, select **Source File**.

By default, directives are placed in the **directives.tcl** file. In this example, the directive is placed in the source file with the existing I/O directives.

7. From the **mode** options, select **ap_ctrl_none** from the drop-down menu.

8. Click **OK**.

The source file now has a new directive, highlighted in both the source code and directives tab in [Figure 4-9](#).

The new directive shows the associated function argument/port called **return**. All interface directives are attached to a function argument. For block-level I/O protocols, the **return** argument is used to specify the block-level interface. This is true even if the function has no **return** argument in the source code.

```
*adders.c
46 #include "adders.h"
47
48 int adders(int in1, int in2, int in3) {
49 #pragma HLS INTERFACE ap_ctrl_none port=return
50
51
52 // Prevent IO protocols on all input ports
53 #pragma HLS INTERFACE ap_none port=in3
54 #pragma HLS INTERFACE ap_none port=in2
55 #pragma HLS INTERFACE ap_none port=in1
56
57
58     int sum;
59
60     sum = in1 + in2 + in3;
61
62     return sum;
63
64 }
```

The 'Directive' tab in the Outline panel shows the following:

- adders
 - # HLS INTERFACE ap_ctrl_none port=return
 - in1
 - # HLS INTERFACE ap_none port=in1
 - in2
 - # HLS INTERFACE ap_none port=in2
 - in3
 - # HLS INTERFACE ap_none port=in3

*Figure 4-9: Block-Level Interface Directive **ap_ctrl_none***

- Click the **Run C Synthesis** toolbar button or use the menu **Solution > Run C Synthesis** to synthesize the design.

Adding the directive to the source file modified the source file. Figure 4-9 shows the source file name as `*adders.c`. The asterisk indicates that the file is modified but not saved.

- Click **Yes** to accept the changes to the source file.

When the report opens, the Interface summary appears, as shown in Figure 4-10.

RTL Ports	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_none	adders	return value
ap_RST	in	1	ap_ctrl_none	adders	return value
ap_return	out	32	ap_ctrl_none	adders	return value
in1	in	32	ap_none	in1	scalar
in2	in	32	ap_none	in2	scalar
in3	in	32	ap_none	in3	scalar

Figure 4-10: Interface Summary for ap_ctrl_none

When the interface protocol `ap_ctrl_none` is used, no block-level I/O protocols are added to the design. The only ports are those for the clock, reset and the data ports.

Note that without the `ap_done` signal, the consumer block that accepts data from the `ap_return` port now has no indication when the data is valid.

In addition, the RTL cosimulation feature requires a block-level I/O protocol to sequence the test bench and RTL design for cosimulation automatically. Any attempt to use RTL cosimulation results in the following error message and RTL cosimulation with halt:

```
@E [SIM-345] Cosim only supports the following 'ap_ctrl_none' designs: (1)
combinational designs; (2) pipelined design with task interval of 1; (3) designs with
array streaming or hls_stream ports.
@E [SIM-4] *** C/RTL co-simulation finished: FAIL ***
```

Exit the Vivado HLS GUI and return to the command prompt.

Lab 2: Port I/O Protocols

Overview

This exercise explains how to specify port I/O protocols.

Step 1: Create and Open the Project

1. From the Vivado HLS command prompt used in Lab 1, change to the lab2 directory as shown in [Figure 4-11](#).
2. Type `vivado_hls -f run_hls.tcl` to create a new Vivado HLS project.

```
C:\Vivado_HLS_Tutorial\Interface_Synthesis\lab1>cd ..  
C:\Vivado_HLS_Tutorial\Interface_Synthesis>cd lab2  
C:\Vivado_HLS_Tutorial\Interface_Synthesis\lab2>vivado_hls -f run_hls.tcl
```

Figure 4-11: Setup for Interface Synthesis Lab 2

3. Type `vivado_hls -p adders_io_prj` to open the Vivado HLS GUI project.
4. Open the source code as shown in [Figure 4-12](#).

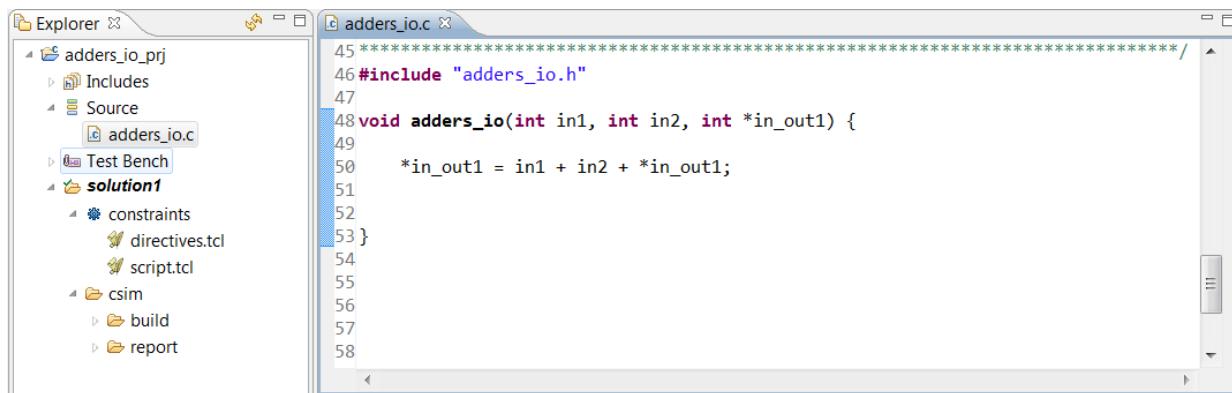


Figure 4-12: C Code for Interface Synthesis Lab 2

The source code (`adders_io.c`) for this exercise is similar to the simple code used in Lab 1. For similar reasons, it helps focus on the interface behavior and not the core logic.

This time, the code does not have a function return, but instead passes the output of the function through the pointer argument `*in_out1`. This also provides the opportunity to explore the interface options for bidirectional (input and output) ports.

The types of I/O protocol that you can add to C function arguments by interface synthesis depends on the argument type. These options are fully described in the *Vivado Design Suite User Guide: High-Level Synthesis* (UG902) [\[Ref 2\]](#).

The pointer argument in this example is both an input and output to the function. In the RTL design, this argument is implemented as separate input and output ports.

For the code shown in [Figure 4-12](#), the possible options for each function argument are described in [Table 4-2](#).

Table 4-2: Port Level I/O Protocol Options for Lab 2

Function Argument	I/O Protocol Options
In1 and In2	<p>These are pass-by-value arguments that can be implemented with the following I/O protocols:</p> <ul style="list-style-type: none">• ap_none: No I/O protocol. This is the default for inputs.• ap_stable: No I/O protocol.• ap_ack: Implemented with an associated output acknowledge port.• ap_vld: Implemented with an associated input valid port.• ap_hs: Implemented with both input valid and output acknowledge ports.
in_out1	<p>This is a pass-by-reference output that can be implemented with the following I/O protocols:</p> <ul style="list-style-type: none">• ap_none: No I/O protocol. This is the default for inputs.• ap_stable: No I/O protocol.• ap_ack: Implemented with an associated input acknowledge port.• ap_vld: Implemented with an associated output valid port. This is the default for outputs.• ap_ovld: Implemented with an associated output valid port (no valid port for the input part of any inout ports).• ap_hs: Implemented with both input valid port and output acknowledge ports.• ap_fifo: A FIFO interface with associated output write and input FIFO full ports.• ap_bus: A Vivado HLS bus interface protocol.

Note: The port directives applied in Lab 1 were not actually necessary because ap_none is the default I/O protocol for these C arguments. The directives were provided to avoid addressing any I/O port protocol behavior in that exercise, default behavior or not.

In this exercise, you implement a selection of I/O protocols.

Step 2: Specify the I/O Protocol for Ports

1. Ensure that you can see the C source code in the Information pane.
2. Activate the **Directives** tab and select input **in1**, as shown in [Figure 4-13](#).

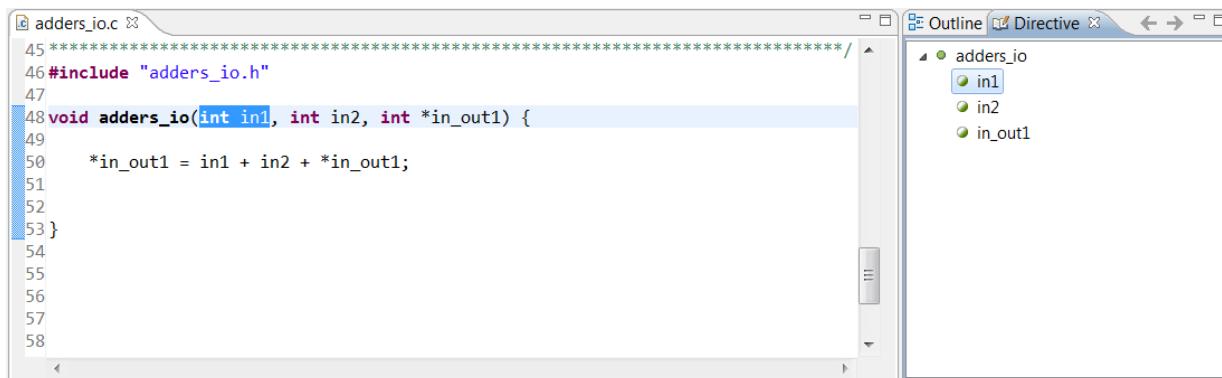


Figure 4-13: Adding Port I/O Protocols

3. Right-click and select **Insert Directive**.
4. When the Directives Editor opens leave the Directive drop-down menu as **INTERFACE**.
 - a. Leave the destination at the default value. This time, the directives are stored in the `directives.tcl` file.
 - b. Select **ap_vld** from the mode drop-down menu
 - c. Click **OK**.
5. Select argument `in2` and add an interface directive to specify the I/O protocol `ap_ack`.
6. Select argument `in_out1` and add an interface directive to specify the I/O protocol `ap_hs`.
7. In the Explorer pane, expand the Constraints folder and double-click the `directives.tcl` file to open it, as shown in [Figure 4-14](#).

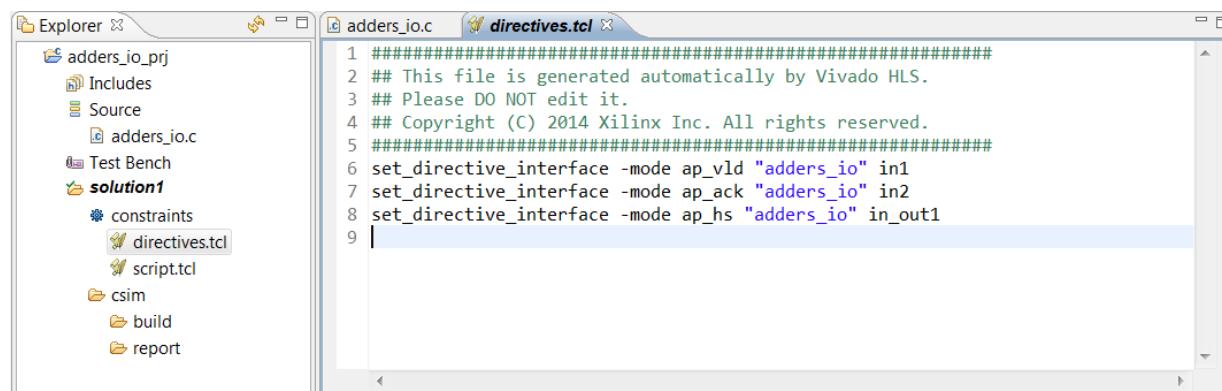


Figure 4-14: Directives for Lab 2

8. Synthesize the design.
9. Review the Interface summary when the report file opens ([Figure 4-15](#)).

	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_hs	adders_io	return value
ap_rst	in	1	ap_ctrl_hs	adders_io	return value
ap_start	in	1	ap_ctrl_hs	adders_io	return value
ap_done	out	1	ap_ctrl_hs	adders_io	return value
ap_idle	out	1	ap_ctrl_hs	adders_io	return value
ap_ready	out	1	ap_ctrl_hs	adders_io	return value
in1	in	32	ap_vld	in1	scalar
in1_ap_vld	in	1	ap_vld	in1	scalar
in2	in	32	ap_ack	in2	scalar
in2_ap_ack	out	1	ap_ack	in2	scalar
in_out1_i	in	32	ap_hs	in_out1	pointer
in_out1_i_ap_vld	in	1	ap_hs	in_out1	pointer
in_out1_i_ap_ack	out	1	ap_hs	in_out1	pointer
in_out1_o	out	32	ap_hs	in_out1	pointer
in_out1_o_ap_vld	out	1	ap_hs	in_out1	pointer
in_out1_o_ap_ack	in	1	ap_hs	in_out1	pointer

Figure 4-15: Interface Summary for Lab 2

- The design has a clock and reset.
 - The default block-level I/O protocol signals are present.
 - Port in1 is implemented with a data port and an associated input valid signal.
 - The data on port in1 is only read when port in1_ap_vld is active-High.
 - Port in2 is implemented with a data port and an associated output acknowledge signal.
 - Port in2_ap_ack will be active-High when data port in2 is read.
 - The inout_i identifies the input part of argument inout1. This has associated input valid port inout1_i_ap_vld and output acknowledge port inout1_i_ap_ack.
 - The output part of argument inout1 is identified as inout_o. This has associated output valid port inout1_o_ap_vld and input acknowledge port inout1_o_ap_ack.
10. Exit the Vivado HLS GUI and return to the command prompt.

Lab 3: Implementing Arrays as RTL Interfaces


Introduction

This exercise shows how array arguments on the top-level function interface can be implemented as a number of different types of RTL port.

Step 1: Create and Open the Project

- From the Vivado HLS command prompt window used in the previous lab, change to the lab3 directory.
- Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.
- Open the Vivado HLS GUI project by typing `vivado_hls -p array_io_prj`.
- Open the source code (`array_io.c`) as shown in [Figure 4-16](#).

This design has an input array and an output array. The comments in the C source explain how the data in the input array is ordered as channels and how the channels are accumulated. To understand the design, you can also review the test bench and the input and output data in file `result.golden.dat`.

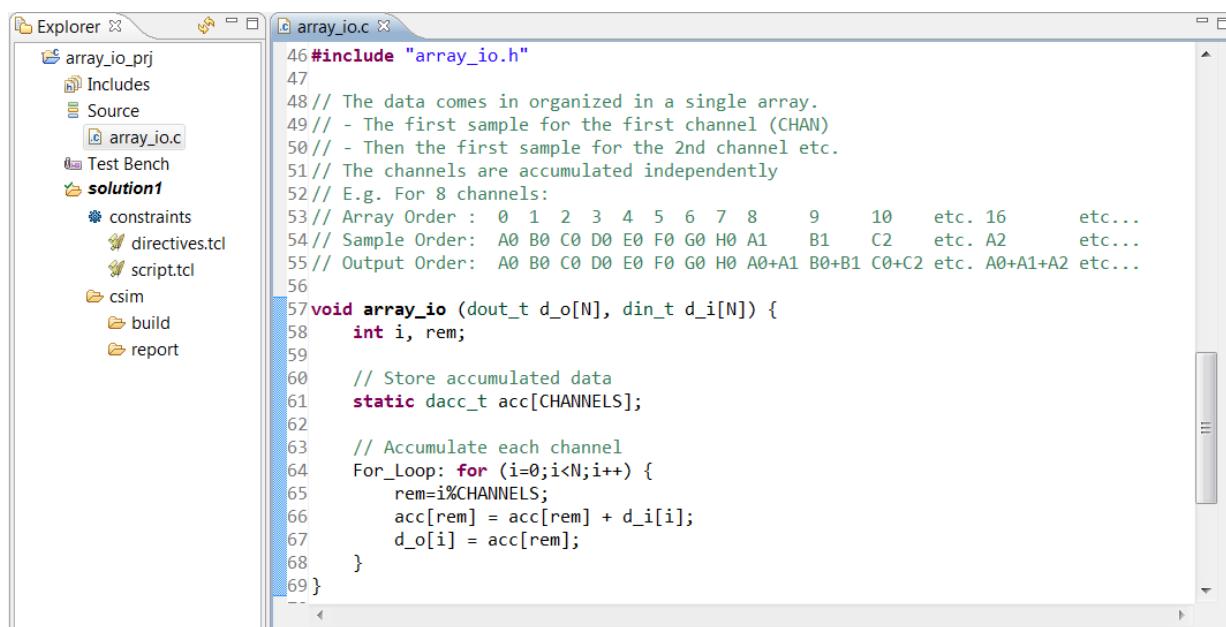

The screenshot shows the Vivado HLS IDE interface. On the left, the 'Explorer' window displays the project structure for 'array_io.prj', including 'Includes', 'Source' (containing 'array_io.c'), 'Test Bench', and a 'solution1' folder with files like 'constraints', 'directives.tcl', 'script.tcl', 'csim', 'build', and 'report'. On the right, the 'array_io.c' code editor window shows the following C code:

```

46 #include "array_io.h"
47
48 // The data comes in organized in a single array.
49 // - The first sample for the first channel (CHAN)
50 // - Then the first sample for the 2nd channel etc.
51 // The channels are accumulated independently
52 // E.g. For 8 channels:
53 // Array Order : 0 1 2 3 4 5 6 7 8      9      10      etc. 16      etc...
54 // Sample Order: A0 B0 C0 D0 E0 F0 G0 H0 A1      B1      C2      etc. A2      etc...
55 // Output Order: A0 B0 C0 D0 E0 F0 G0 H0 A0+A1 B0+B1 C0+C2 etc. A0+A1+A2 etc...
56
57 void array_io (dout_t d_o[N], din_t d_i[N]) {
58     int i, rem;
59
60     // Store accumulated data
61     static dacc_t acc[CHANNELS];
62
63     // Accumulate each channel
64     For_Loop: for (i=0;i<N;i++) {
65         rem=i%CHANNELS;
66         acc[rem] = acc[rem] + d_i[i];
67         d_o[i] = acc[rem];
68     }
69 }

```

Figure 4-16: C Code for Interface Synthesis Lab 3

Step 2: Synthesize Array Function Arguments to RAM Ports

In this step, you review how array ports are synthesized to RAM ports.

- Run C Synthesis button in the toolbar and review the Interface summary when the report opens ([Figure 4-17](#)).

The interface summary shows how array arguments in the C source are by default synthesized into RTL RAM ports.

- The design has a clock, reset, and the default block-level I/O protocol `ap_ctrl_hs` (noted on the clock in the report).
- The `d_o` argument has been synthesized to a RAM port (I/O protocol `ap_memory`).

- A data port (`d_o_d0`).
- An address port (`d_o_address0`).
- Control ports for a chip-enable (`d_o_ce0`) and a write-enable port (`do_we0`).
- The `d_i` argument has been synthesized to a similar RAM interface, but has an input data port (`d_i_q0`) and no write-enable port because this interface only reads data.

In both cases, the data port is the width of the data values in the C source (16-bit integers in this case) and the width of the address port has been automatically sized to match the number of addresses that must be accessed (5-bit for 32 addresses).

	Dir	Bits	Protocol	Source Object	C Type
<code>ap_clk</code>	in	1	<code>ap_ctrl_hs</code>	<code>array_io</code>	return value
<code>ap_rst</code>	in	1	<code>ap_ctrl_hs</code>	<code>array_io</code>	return value
<code>ap_start</code>	in	1	<code>ap_ctrl_hs</code>	<code>array_io</code>	return value
<code>ap_done</code>	out	1	<code>ap_ctrl_hs</code>	<code>array_io</code>	return value
<code>ap_idle</code>	out	1	<code>ap_ctrl_hs</code>	<code>array_io</code>	return value
<code>ap_ready</code>	out	1	<code>ap_ctrl_hs</code>	<code>array_io</code>	return value
<code>d_o_address0</code>	out	5	<code>ap_memory</code>	<code>d_o</code>	array
<code>d_o_ce0</code>	out	1	<code>ap_memory</code>	<code>d_o</code>	array
<code>d_o_we0</code>	out	1	<code>ap_memory</code>	<code>d_o</code>	array
<code>d_o_d0</code>	out	16	<code>ap_memory</code>	<code>d_o</code>	array
<code>d_i_address0</code>	out	5	<code>ap_memory</code>	<code>d_i</code>	array
<code>d_i_ce0</code>	out	1	<code>ap_memory</code>	<code>d_i</code>	array
<code>d_i_q0</code>	in	16	<code>ap_memory</code>	<code>d_i</code>	array

Figure 4-17: Interface Summary for Initial Lab 3 Design

Synthesizing array arguments to RAM ports is the default. You can control how these ports are implemented using a number of other options. The remaining steps in Lab 3 demonstrate these options:

- Using a single-port or dual-port RAM interface.
- Using FIFO interfaces.
- Partitioning into discrete ports.

Step 3: Using Dual-Port RAM and FIFO Interfaces

High-Level Synthesis allows you to specify a RAM interface as a single-port or dual-port. If you do not make such a selection, Vivado HLS automatically analyzes the design and selects the number of ports to maximize the data rate.

Step 2 used a single-port RAM interface because the for-loop in the source code is by default left rolled: each iteration of the loop is executed in turn:

- Read the input port.
- Read the accumulated result from the internal RAM.
- Sum the accumulated and new data and write into the internal RAM.
- Write the result to the output port.
- Repeat for the next iteration of the loop.

This ensures only a single input read and output write is ever required. Even if multiple input and outputs are made available, the internal logic cannot take advantage of any additional ports.

Note: If you specify a dual-port RAM and Vivado HLS can determine only a single port is required, it uses a single-port and over-ride the dual-port specification.

In this design, if you want to implement an array argument using multiple RTL ports, the first thing you must do is unroll the for-loop and allow all internal operations to happen in parallel, otherwise there is no benefit in multiple ports: the rolled for-loop ensure only one data sample can be read (or written) at a time.

1. Select **New Solution** from the toolbar or Project menu to create a new solution.
2. Accept the defaults, and click **Finish**.
3. Ensure the C source code is visible in the Information pane.
4. In the Directive tab select **For_Loop**, and right-click and select Insert Directive to open the **Directives Editor** dialog box.
 - a. In the Directives Editor dialog box activate the Directive drop-down menu at the top and select **UNROLL**.
 - b. With the Directives Editor as shown in [Figure 4-18](#), click **OK**.

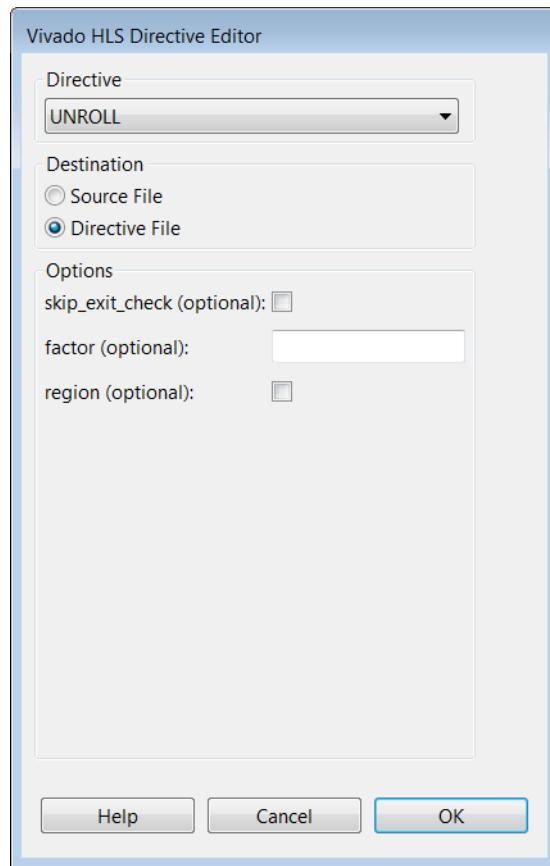


Figure 4-18: Directives Editor to Unroll For_Loop

5. Next, specify a dual-port RAM for input reads. The Resource directive indicates the type of RAM connected to an interface.
 - a. In the Directive tab, select port d_i and right-click and select Insert Directive to open the **Directives Editor** dialog box.
 - b. In the Directives Editor activate the Directive drop-down menu at the top and select **RESOURCE**.
 - c. Click the **core options** box and select **RAM_2P_BRAM**.
 - d. Verify that the settings in the Directives Editor dialog box are as shown in [Figure 4-19](#) and click **OK**.

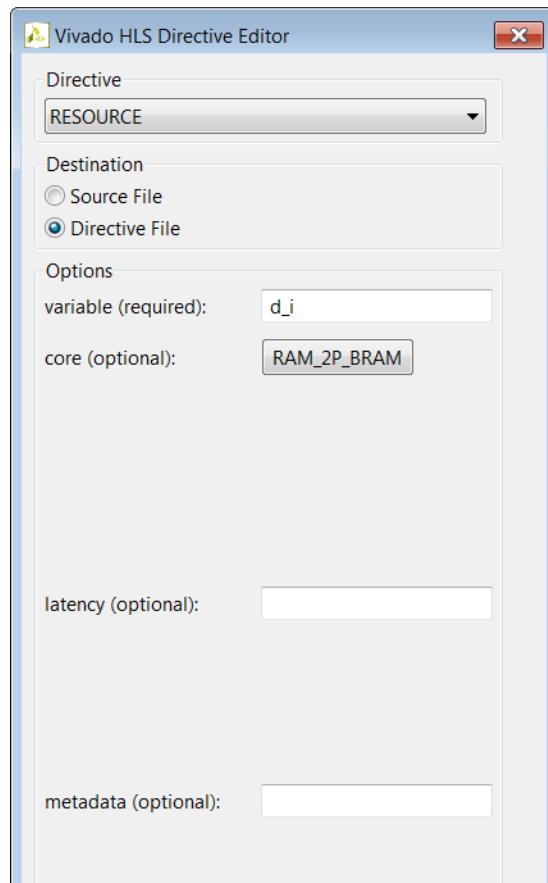


Figure 4-19: Directives Editor for Specifying a Dual-port RAM

6. Implement the output port using a FIFO interface.
 - a. In the Directive tab, select port **d_o** and right-click and select Insert Directive to open the **Directives Editor** dialog box.
 - b. In the Directives Editor, ensure the directive is **Interface**.
 - c. From the **Mode** drop-down menu, select **ap_fifo**.
 - d. Click **OK**.

The **Directive** tab shows the directives now applied to the design (Figure 4-20).

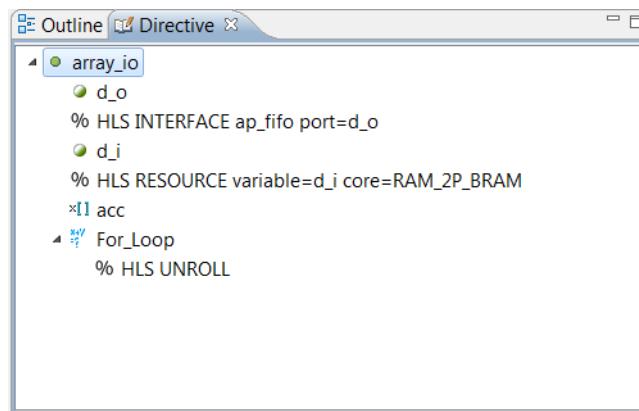


Figure 4-20: Directives Summary for Lab 2 Solution

- Run C Synthesis from the toolbar to synthesize the design.

When the report opens in the Information pane, the Interface summary is as shown in Figure 4-21.

- The design has the standard clock, reset, and block-level I/O ports.
- Array argument `d_o` has been implemented as a FIFO interface with a 16-bit data port (`d_o_din`) and associated output write (`d_o_write`) and input FIFO full (`d_o_full_n`) ports.
- Argument `d_i` has been implemented as a dual-port RAM interface.

array_io_csynth.rpt					
Interface					
Summary					
RTL Ports	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_hs	array_io	return value
ap_rst	in	1	ap_ctrl_hs	array_io	return value
ap_start	in	1	ap_ctrl_hs	array_io	return value
ap_done	out	1	ap_ctrl_hs	array_io	return value
ap_idle	out	1	ap_ctrl_hs	array_io	return value
ap_ready	out	1	ap_ctrl_hs	array_io	return value
d_o_din	out	16	ap_fifo	d_o	pointer
d_o_full_n	in	1	ap_fifo	d_o	pointer
d_o_write	out	1	ap_fifo	d_o	pointer
d_i_address0	out	5	ap_memory	d_i	array
d_i_ce0	out	1	ap_memory	d_i	array
d_i_q0	in	16	ap_memory	d_i	array
d_i_address1	out	5	ap_memory	d_i	array
d_i_ce1	out	1	ap_memory	d_i	array
d_i_q1	in	16	ap_memory	d_i	array

Figure 4-21: Dual-Port BRAM and FIFO Interfaces

By using a dual-port RAM interface, this design can accept input data at twice the rate of the previous design. Because the for-loop was unrolled, the logic in the loop is able to consume data at this rate. By default, each loop iteration is executed in turn. This implementation code limits the logic to one read on `d_i` in each iteration. Unrolling the loops allows more reads to be performed (but creates N copies of the logic). However, by using a single-port FIFO interface on the output the output data rate is the same as before.

Step 4: Partitioned RAM and FIFO Array interfaces

In this step, you learn how to partition an array interface into any arbitrary number of ports.

1. Select **New Solution** from the toolbar or the Project menu and create a new solution.
2. Accept the defaults, and click **Finish**. This includes copying existing directives from `solution2`.
3. Ensure the C source code is visible in the Information pane.
4. In the Directive tab, select `d_o` and right-click and select Insert Directive to open the **Directive Editor** dialog box.
 - a. In the Directives Editor dialog box activate the Directive drop-down menu at the top and select **ARRAY_PARTITION**.
 - b. Activate the type drop down to partition the array into blocks. Set **type** to **block**.
 - c. In the Vivado HLS Directive Editor dialog box, set the **factor (optional)** to 4.
 - d. With the Vivado HLS Directive Editor as shown in [Figure 4-22](#), click **OK**.

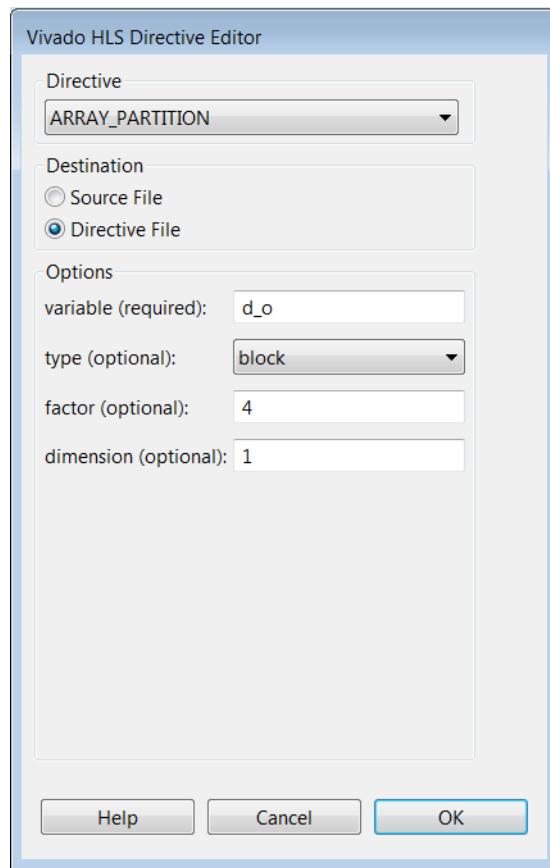


Figure 4-22: Directives Editor for Partitioning Array d_o

Now, partition the input array into two blocks (not four).

5. In the Directive tab, select d_i and repeat the previous step, but this time partition the port with a factor of 2.

The directives tab shows the directives now applied to the design (Figure 4-23).

```
array_io
d_o
% HLS ARRAY_PARTITION partition variable=d_o block factor=4 dim=
% HLS INTERFACE ap_fifo port=d_o
d_i
% HLS ARRAY_PARTITION variable=d_i block factor=2 dim=1
% HLS RESOURCE variable=d_i core=RAM_2P_BRAM
acc
For_Loop
% HLS UNROLL
```

A screenshot of the Vivado HLS Directive tab. The interface has tabs for "Outline" and "Directive". The "Directive" tab is active. It displays a hierarchical list of directives. At the top level, there is an entry for "array_io". Below it are entries for "d_o" and "d_i". For "d_o", there are comments indicating an "ARRAY_PARTITION" directive with "partition variable=d_o block factor=4 dim=". For "d_i", there is another "ARRAY_PARTITION" directive with "block factor=2 dim=1". There are also other directives like "acc" and "For_Loop" with their own comments.

Figure 4-23: Directives Summary for Lab 2 Solution3

6. Run C Synthesis from the toolbar to synthesize the design.

When the report opens in the Information pane, the Interface summary is as shown in Figure 4-24.

- The design has the standard clock, reset, and block-level I/O ports.
- Array argument `d_o` has been implemented as a four separate FIFO interfaces.
- Argument `d_i` has been implemented as a two separate RAM interfaces, each of which uses a dual-port interface. (If you see four separate RAM interfaces, confirm a partition factor for `d_i` is two and not four).

RTL Ports	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_hs	array_io	return value
ap_rst	in	1	ap_ctrl_hs	array_io	return value
ap_start	in	1	ap_ctrl_hs	array_io	return value
ap_done	out	1	ap_ctrl_hs	array_io	return value
ap_idle	out	1	ap_ctrl_hs	array_io	return value
ap_ready	out	1	ap_ctrl_hs	array_io	return value
d_o_0_din	out	16	ap_fifo	d_o_0	pointer
d_o_0_full_n	in	1	ap_fifo	d_o_0	pointer
d_o_0_write	out	1	ap_fifo	d_o_0	pointer
d_o_1_din	out	16	ap_fifo	d_o_1	pointer
d_o_1_full_n	in	1	ap_fifo	d_o_1	pointer
d_o_1_write	out	1	ap_fifo	d_o_1	pointer
d_o_2_din	out	16	ap_fifo	d_o_2	pointer
d_o_2_full_n	in	1	ap_fifo	d_o_2	pointer
d_o_2_write	out	1	ap_fifo	d_o_2	pointer
d_o_3_din	out	16	ap_fifo	d_o_3	pointer
d_o_3_full_n	in	1	ap_fifo	d_o_3	pointer
d_o_3_write	out	1	ap_fifo	d_o_3	pointer
d_i_0_address0	out	4	ap_memory	d_i_0	array
d_i_0_ce0	out	1	ap_memory	d_i_0	array
d_i_0_q0	in	16	ap_memory	d_i_0	array
d_i_0_address1	out	4	ap_memory	d_i_0	array
d_i_0_ce1	out	1	ap_memory	d_i_0	array
d_i_0_q1	in	16	ap_memory	d_i_0	array
d_i_1_address0	out	4	ap_memory	d_i_1	array
d_i_1_ce0	out	1	ap_memory	d_i_1	array
d_i_1_q0	in	16	ap_memory	d_i_1	array
d_i_1_address1	out	4	ap_memory	d_i_1	array
d_i_1_ce1	out	1	ap_memory	d_i_1	array
d_i_1_q1	in	16	ap_memory	d_i_1	array

Figure 4-24: Interface Report for Partitioned Interfaces

If input port `d_i` was partitioned into four, only a single-port RAM interface would be required for each port. Because the output port can only output four values at once, there would be no benefit in reading eight inputs at once.

The final step in this tutorial is to partition the arrays completely.

Step 5: Fully Partitioned Array Interfaces

This step shows you how to partition an array interface into individual ports.

1. Select **New Solution** from the toolbar and create a new solution.
2. Click **Finish** and accept the defaults. This includes copying existing directives from solution3.
3. Ensure the C source code is visible in the Information pane.
4. In the Directive tab, select the existing partition directive for `d_o` as shown in [Figure 4-25](#).
5. Right-click and select **Modify Directive**.

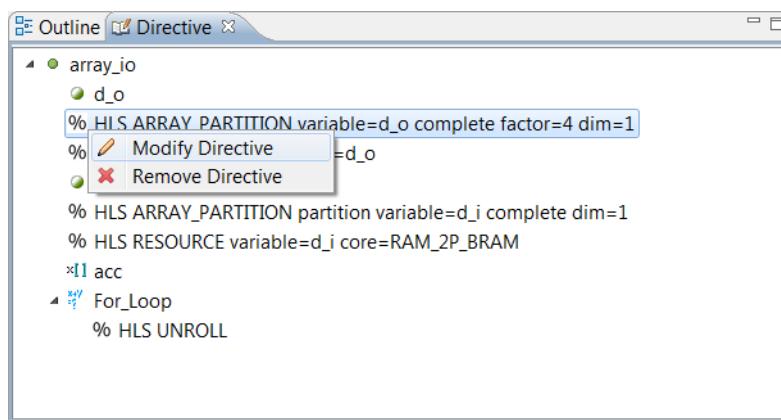


Figure 4-25: Modifying the Directive for `d_o`

6. In the Vivado HLS Directive Editor dialog box:
 - a. In the Vivado HLS Directive Editor dialog box, delete the value 4. Since this array will be completely partitioned into registers, the partitioning factor is no longer relevant. (If you leave it there, it will be ignored).
 - b. Activate the type (optional) drop down and modify the partitioning **type** to **Complete**.
 - c. With the Directives Editor as shown in [Figure 4-26](#), click **OK**.

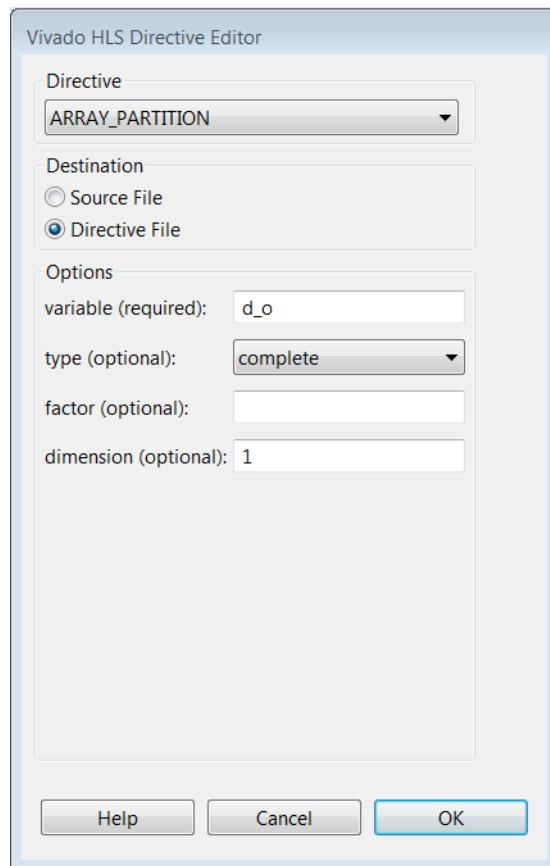


Figure 4-26: Directives Editor for Partitioning Array d_o

7. In the Directive tab, select d_i and repeat the previous step to completely partition the d_i array.
8. In the Directive tab, select the **RESOURCE** directive on d_i, right-click with the mouse and select **Remove Directive**. If the array is partitioned into individual elements, it cannot be assigned to a block RAM.

The Directives tab shows the directives now applied to the design ([Figure 4-27](#)).

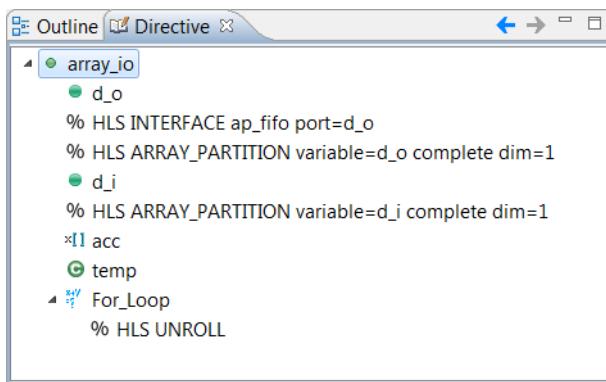


Figure 4-27: Directives Summary for Lab 2 Solution4

9. Run C Synthesis from the toolbar to synthesize the design.
10. When the report opens in the Information pane, review the interface summary. Note the following:
 - The design has the standard clock, reset, and block-level I/O ports.
 - Array argument `d_o` has been implemented as 32 separate FIFO interfaces.
 - Argument `d_i` has been implemented as 32 separate scalar ports. Because the default interface for input scalars is not in the I/O protocol, they have the I/O protocol `ap_none`.

Although this tutorial has focused exclusively on the I/O interfaces, at this point it is worth examining the differences in performance across all four solutions.

11. Select **Compare Reports** from the toolbar or the Project menu to open a comparison of the solutions.
12. In the Solution Selection dialog box, add each of the four solutions to the Selected Solutions pane (Figure 4-28).
13. Click **OK**.

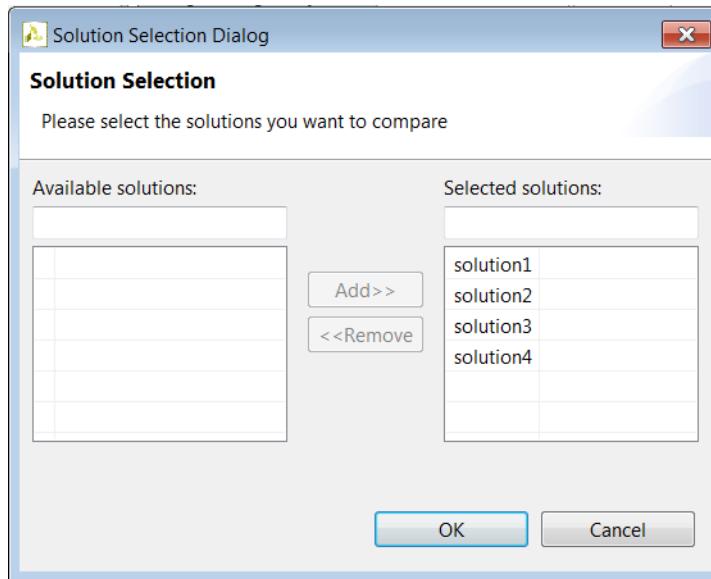


Figure 4-28: Compare All Solutions for Lab 3

When the solutions comparison report opens (Figure 4-29), it shows that solution4, using a unique port for each array element, is much faster than the previous solutions. The internal logic can access the data as soon as it is required. (There is no performance bottleneck due to port accesses.)

Performance Estimates					
Timing (ns)					
Clock		solution1	solution2	solution3	solution4
ap_clk	Target	4.00	4.00	4.00	4.00
	Estimated	3.15	3.36	3.36	3.36
Latency (clock cycles)					
		solution1	solution2	solution3	solution4
Latency	min	97	33	18	2
	max	97	33	18	2
Interval	min	98	34	19	3
	max	98	34	19	3

Figure 4-29: Performance Comparisons for All Lab 3 Solutions

Scroll further down the comparison report (Figure 4-30) and note that solutions with more I/O ports (solutions 2, 3, and 4), allows more parallel processing, but also use considerably more resources.

Utilization Estimates				
	solution1	solution2	solution3	solution4
BRAM_18K	0	0	0	0
DSP48E	0	0	0	0
FF	314	3962	3863	3395
LUT	128	2021	2097	1855

Figure 4-30: Resource Comparisons for All Lab 3 Solutions

In the next exercise, you implement this same design with an optimum balance between the ports and resources. In addition to this more optimal implementation, the next exercise shows how to add AXI4 interfaces to the design.

14. Exit the Vivado HLS GUI and return to the command prompt.


Lab 4: Implementing AXI4 Interfaces

Introduction

This exercise explains how to specify AXI4 bus interfaces for the I/O ports. In addition to adding AXI4 interfaces this exercise also shows how to create an optimal design by using interface and logic directives together.

Step 1: Create and Open the Project

1. From the Vivado HLS command prompt window used in the previous lab, change to the **lab4** directory.
2. Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.
3. Open the Vivado HLS GUI project by typing `vivado_hls -p axi_interfaces_prj`.
4. Open the source code as shown in [Figure 4-31](#).

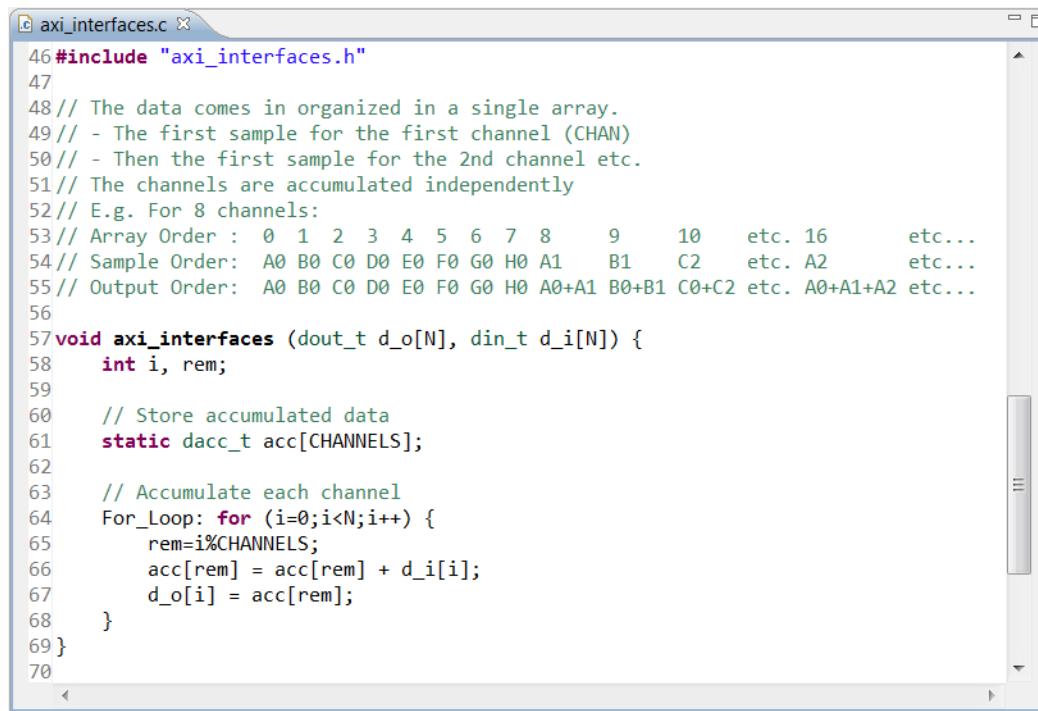

The screenshot shows a code editor window titled "axi_interfaces.c". The code is a C function named "axi_interfaces" that takes two parameters: "dout_t d_o[N]" and "din_t d_i[N]". The function uses a static variable "dacc_t acc[CHANNELS]" to store accumulated data. It iterates through each element of the input array "d_i" using a for-loop. Inside the loop, it calculates the remainder of the index "i" divided by "CHANNELS" to determine the channel index "rem". It then adds the current input sample "d_i[i]" to the accumulated value "acc[rem]" and stores the result back into "d_o[i]". The code also includes several comments explaining the data organization and array indices.

```
46 #include "axi_interfaces.h"
47
48 // The data comes in organized in a single array.
49 // - The first sample for the first channel (CHAN)
50 // - Then the first sample for the 2nd channel etc.
51 // The channels are accumulated independently
52 // E.g. For 8 channels:
53 // Array Order : 0 1 2 3 4 5 6 7 8 9 10 etc. 16 etc...
54 // Sample Order: A0 B0 C0 D0 E0 F0 G0 H0 A1 B1 C2 etc. A2 etc...
55 // Output Order: A0 B0 C0 D0 E0 F0 G0 H0 A0+A1 B0+B1 C0+C2 etc. A0+A1+A2 etc...
56
57 void axi_interfaces (dout_t d_o[N], din_t d_i[N]) {
58     int i, rem;
59
60     // Store accumulated data
61     static dacc_t acc[CHANNELS];
62
63     // Accumulate each channel
64     For_Loop: for (i=0;i<N;i++) {
65         rem=i%CHANNELS;
66         acc[rem] = acc[rem] + d_i[i];
67         d_o[i] = acc[rem];
68     }
69 }
70
```

Figure 4-31: Source Code for Lab 4

This design uses similar source C code as Lab 3: with the design renamed to `axi_interfaces`.

Step 2: Create an Optimal Design with AXI4-Stream Interfaces

To reach optimal performance implementation of this design, the data for each channel is processed in parallel, with dedicated hardware for each channel.

The key to understanding how best to perform this optimization is to recognize that the channels in the input and output arrays lend themselves to cyclic partitioning. Cyclic partitioning is fully explained in the *Vivado Design Suite User Guide: High-Level Synthesis* (UG902) [Ref 2], but basically means each array element is, in turn, sorted into a different partition.

In this exercise, you specify the array arguments to be implemented as AXI4-Stream interfaces. If the arrays are partitioned into channels, you can stream the samples for each channel through the design in parallel.

Finally, if the I/O ports are configured to supply and consume individual streams of channel data, partial unrolling of the for-loop can ensure dedicated hardware processes each channel.

First, partition the arrays:

1. Ensure the C source code is visible in the Information pane.

2. In the Directive tab, select **d_o** and right-click and select **Insert Directive** to open the type dialog box.
 - a. Select the **type (optional)** drop-down menu at the top and select **ARRAY_PARTITION**.
 - b. Click the **Directive** drop-down menu to specify **cyclic** partitioning.
 - c. In the **factor (optional)** box, enter the value **8**, to create eight separate partitions. (This results in eight ports.)
 - d. With the Directives Editor dialog box filled in as shown in [Figure 4-32](#), click **OK**.

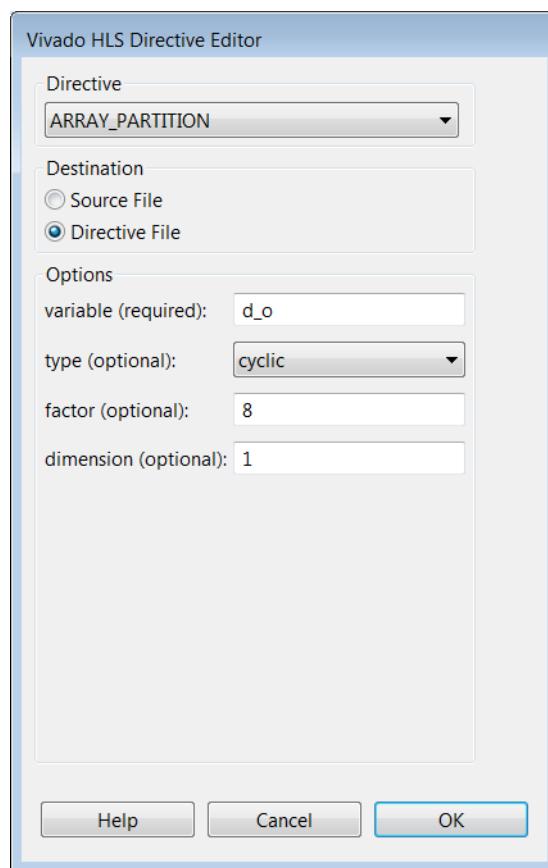


Figure 4-32: Directives Editor for Cyclic Partitioning

3. In the Directive tab, select **d_o** again and right-click and select **Insert Directive** to open the Insert Directives Editor dialog box.
 - a. Activate the **Directive** drop-down menu at the top and select **INTERFACE**.
 - b. Click the **Mode** drop-down menu to specify an **axis** interface.
 - c. Click **OK**.
4. In the Directive tab, select **d_i** and repeat steps 2 and 3 above.
 - a. Apply **ARRAY_PARTITION**.

- b. Apply **Cyclic** with a factor of **8**.
 - c. Apply **Interface**.
 - d. Apply an **axis** interface.
5. Next, partially unroll and pipeline the for-loop:
- a. In the Directive tab, select **For_Loop** and right-click and select **Insert Directive** to open Vivado HLS Directive Editor dialog box.
 - b. Select the **Directive** drop-down menu at the top and select **UNROLL**.

Select a factor of **8** to partially unroll the for-loop. This is equivalent to re-writing the C code to execute eight copies of the loop-body in each iteration of the loop (where the new loop only executes for four iterations in total, not 32).

Click **OK**.

- c. In the Directive tab, select **For_Loop** again and right-click and select **Insert Directive** to open Vivado HLS Directive Editor dialog box.

Activate the **Directive** drop-down menu at the top and select **PIPELINE**. Leave the interval (II) blank and let it default to 1.

- d. Select **enable loop rewinding**.
- e. Click **OK**.

When the top-level of the design is a loop, you can use the pipeline rewind option. This informs Vivado HLS that when implemented in RTL, this loop runs continuously (with no end of function and function re-start cycles).

After performing the above steps, the Directives tab should be as shown in [Figure 4-33](#). Be sure to check all options are correctly applied. If not, double-click the directive to re-open the **Directives Editor**.

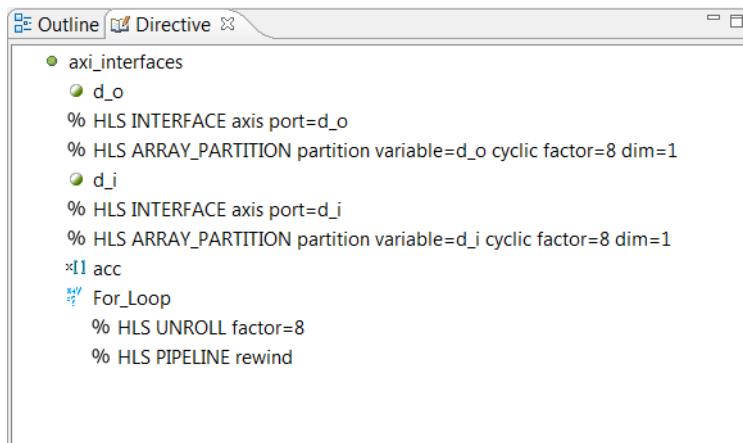


Figure 4-33: Directives Tab for Lab 4 Solution1

- Run C Synthesis from the toolbar.

When the report opens in the information pane, confirm both d_i and d_o are implemented as eight separate AXI4-Stream ports.

- In the performance section of the report, confirm that the for-loop processes one sample every clock cycle (Interval 1) with a latency of 3 (and max 5), and that the design has less area than solutions 2, 3, or 4 in Lab 3 (Figure 4-30).

Cyclic partitioning of the array interfaces and partial for-loop unrolling has allowed implementation of this C code as eight separate channels in the hardware.

Pipelining the for-loop allows the logic in each channel to process 1 sample per clock. Varying the partitioning and loop unrolling allows you to create a design which is the optimal balance of area and performance to satisfy your particular requirements.

Step 3: Implementing an AXI4-Lite Interfaces


In this exercise, you group block-level I/O protocol ports into a single AXI4-Lite interface, which allows these block-level control signals to be controlled and accessed from a CPU.

- Select **New Solution** from the toolbar or the **Project** menu to create a new solution.
- Accept the defaults and click **Finish**. This includes copying existing directives from solution1.
- Ensure the C source code is visible in the Information pane.
- In the Directive tab, select the top-level function **axi_interfaces** and right-click and select Insert Directive to open the **Insert Directives Editor** dialog box.
 - Select the **Directive** drop-down menu at the top and select **INTERFACE**.

- b. Select the **mode** drop-down menu and select **s_axilite**. This specifies that the ports associated with the function return (the block-level I/O ports) are implemented as an AXI4-Lite interface. Since the default mode for the function return is **ap_ctrl_hs**, there is no requirement to specify this I/O protocol.

- c. Click **OK**.

The **Directives** tab appears, as shown in [Figure 4-34](#).

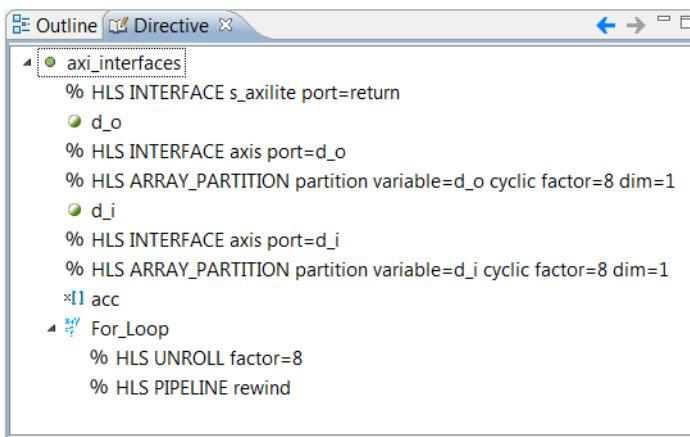

[Figure 4-34: Directives for Specifying AXI4-Lite Interfaces](#)

5. Run C Synthesis from the toolbar.

When the report opens, review the interface summary to confirm the block-level I/O protocol ports (`ap_start`, `ap_done`, etc.) have been replaced with an AXI4Lite interface and that the output interrupt signal has been added to the design. The source of the interrupt can be selected through the AXI-Lite interface.

6. Select **Export RTL** from the toolbar or the Solution menu to create an IP package.
7. Leave the Format Selection as **IP Catalog** and click **OK**.

You can see the IP package in the `solution2/impl` folder. Because you used the Vivado IP Catalog format, the package is in the `ip` folder.

The `ip` folder includes the `drivers` subfolder, as shown in [Figure 4-35](#).

When you add an AXI4-Lite interface to the design, the IP packaging process also creates software driver files to enable an external block, typically a CPU, to control this block (start it, stop it, set port values, review the interrupt status).

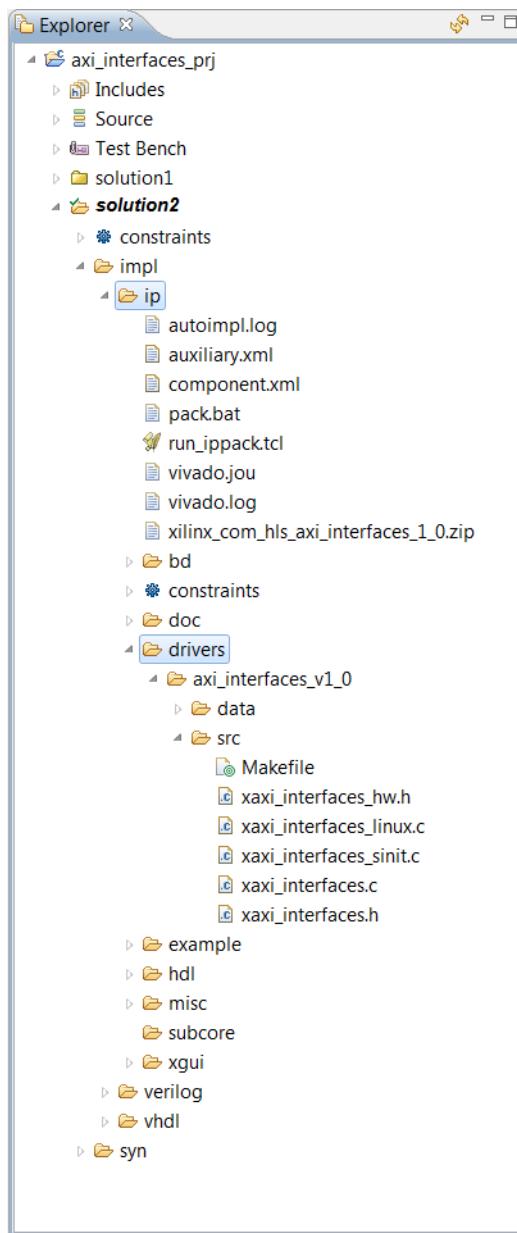


Figure 4-35: IP Package with AXI4 Interfaces

- Double-click the `xaxi_interfaces_hw.h` file to open it in the Information pane.

This shows the addresses to access and control the block-level interface signals. For example, setting control register 0x0 bit 0 to the value 1 will enable the ap_start port, or alternatively, setting bit 7 will enable the auto-restart and the design will re-start automatically at the end of each transaction.

The remaining C driver files are used to integrate control of the AXI4 Slave Lite interface into the code running on a CPU or microcontroller and are included in the packaged IP.

The screenshot shows the Vivado IP Integrator interface. On the left, the 'Explorer' panel displays a project structure for 'axi_interfaces_prj'. It includes a 'solution2' folder containing 'constraints', 'impl', 'ip' (with 'autoimpl.log', 'auxiliary.xml', 'component.xml', 'packbat', 'run_ippack.tcl', 'vivado.jou', 'vivado.log', and 'xilinx_com_hls_axi_interfaces_1_0.zip'), 'bd', 'constraints', 'doc', 'drivers' (with 'axi_interfaces_v1_0' and 'src' subfolders), 'example', 'hdl', 'misc', and 'subcore'. The 'src' folder contains a 'Makefile' and several C/C++ source files: 'xaxi_interfaces_hw.h', 'xaxi_interfaces_linux.c', 'xaxi_interfaces_sinitc.c', 'xaxi_interfaces.c', and 'xaxi_interfaces.h'. On the right, the 'xaxi_interfaces_hw.h' file is open in the code editor, showing its content. The code is a generated header file for the XAXI_INTERFACE IP, defining memory-mapped registers and macros for AXILITES control signals.

```

1 // =====
2 // File generated by Vivado(TM) HLS - High-Level Synthesis from C, C++ and SystemC
3 // Version: 2014.1
4 // Copyright (C) 2014 Xilinx Inc. All rights reserved.
5 //
6 // -----
7
8 // AXILITES
9 // 0x0 : Control signals
10 //    bit 0 - ap_start (Read/Write/COH)
11 //    bit 1 - ap_done (Read/COR)
12 //    bit 2 - ap_idle (Read)
13 //    bit 3 - ap_ready (Read)
14 //    bit 7 - auto_restart (Read/Write)
15 //    others - reserved
16 // 0x4 : Global Interrupt Enable Register
17 //    bit 0 - Global Interrupt Enable (Read/Write)
18 //    others - reserved
19 // 0x8 : IP Interrupt Enable Register (Read/Write)
20 //    bit 0 - Channel 0 (ap_done)
21 //    bit 1 - Channel 1 (ap_ready)
22 //    others - reserved
23 // 0xc : IP Interrupt Status Register (Read/TOW)
24 //    bit 0 - Channel 0 (ap_done)
25 //    bit 1 - Channel 1 (ap_ready)
26 //    others - reserved
27 // (SC = Self Clear, COR = Clear on Read, TOW = Toggle on Write, COH = Clear on Handshake)
28
29 #define XAXI_INTERFACES_AXILITES_ADDR_AP_CTRL 0x0
30 #define XAXI_INTERFACES_AXILITES_ADDR_GIE 0x4
31 #define XAXI_INTERFACES_AXILITES_ADDR_IER 0x8
32 #define XAXI_INTERFACES_AXILITES_ADDR_ISR 0xc
33
34

```

Figure 4-36: IP Software Driver Files

Conclusion

In this tutorial, you learned:

- What block-level I/O protocols are and how to control them.
- How to specify and apply port-level I/O protocols.
- How to specify array ports as RAM and FIFO interfaces.
- How to partition RAM and FIFO interfaces into sub-ports.
- How to use both I/O directives and optimization directives to create an optimal design with AXI4 interfaces.

Arbitrary Precision Types

Overview

C/C++ provided data types are fixed to 8-bit boundaries:

- char (8-bit)
- short (16-bit)
- int (32-bit)
- long long (64-bit)
- float (32-bit)
- double (64-bit)
- Exact width integer types such as int16_t (16-bit) and int32_t (32-bit)

When creating hardware, it is often the case that more accurate bits-widths are required. Consider, for example, a case in which the input to a filter is 12-bit and the accumulation of the results only requires a maximum range of 27 bits. Using standard C data types for hardware design results in unnecessary hardware costs. Operations can use more LUTs and registers than needed for the required accuracy, and delays might even exceed the clock cycle, requiring more cycles to compute the result.

Vivado High-Level Synthesis (HLS) provides a number of bit accurate or arbitrary precision data-types, allowing you to model variables using any (arbitrary) width.

This tutorial consists of a two lab exercises:

Lab 1 Description

Synthesize a design using floating-point types and review the results. The design uses standard C++ floating-point types.

Lab 2 Description

Synthesize the same function used in Lab 1 using arbitrary precision fixed-types highlighting the benefits in accuracy and results. This exercise shows how this same design

can be converted to the Vivado HLS ap_fixed types, retaining the required accuracy but creating a more optimal hardware implementation.

Tutorial Design Description

Download the tutorial design file from the Xilinx website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory
Vivado_HLS_Tutorial\Arbitrary_Precision.

Lab 1: Arbitrary Precision

Arbitrary Precision Lab 1: Review a Design using Standard C/C++ types.

In this lab, you synthesize a design using standard C types. You use this design as a reference for the design using arbitrary precision types, which is the basis for Lab 2.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory Vivado_HLS_Tutorial is unzipped and placed in the location C:\Vivado_HLS_Tutorial. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the Vivado_HLS_Tutorial directory.*

Step 1: Create and Open the Project

1. Open the Vivado HLS Command Prompt.
 - a. On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** ([Figure 5-1](#)).
 - b. On Linux, open a new shell.

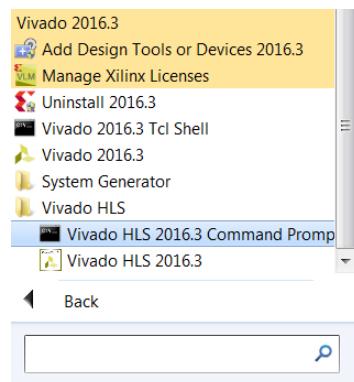


Figure 5-1: Vivado HLS Command Prompt

2. In the command prompt window (Figure 5-2), change the directory to the Arbitrary Precision tutorial, lab1.
3. Execute the Tcl script to setup the Vivado HLS project, using the command as shown in Figure 5-2:

```
vivado_hls -f run_hls.tcl
```

```
C:\Vivado_HLS_Tutorial>cd Arbitrary_Precision  
C:\Vivado_HLS_Tutorial\Arbitrary_Precision>cd lab1  
C:\Vivado_HLS_Tutorial\Arbitrary_Precision\lab1>vivado_hls -f run_hls.tcl
```

Figure 5-2: Setup the Tutorial Project

4. When Vivado HLS completes, open the project in the Vivado HLS GUI using the command `vivado_hls -p window_fn_prj` as shown in Figure 5-3.

```
i = 23 hw_result = 38.24289      sw_result = 38.24289  
i = 24 hw_result = 32.00000      sw_result = 32.00000  
i = 25 hw_result = 25.75711      sw_result = 25.75711  
i = 26 hw_result = 19.75413      sw_result = 19.75413  
i = 27 hw_result = 14.22175      sw_result = 14.22175  
i = 28 hw_result = 9.37258       sw_result = 9.37258  
i = 29 hw_result = 5.39297       sw_result = 5.39297  
i = 30 hw_result = 2.43585       sw_result = 2.43585  
i = 31 hw_result = 0.61487       sw_result = 0.61487  
  
Test Passed  
@I [SIM-1] CSim done with 0 errors.  
@I [LIC-101] Checked in Feature [HLS]  
C:\Vivado_HLS_Tutorial\Arbitrary_Precision\lab1>vivado_hls -p window_fn_prj
```

Figure 5-3: Initial Project for Arbitrary Precision Lab1

Step 2: Review Test Bench and Run C Simulation

1. Open the **Source** folder in the Explorer pane and double-click **window_fn_top.cpp** to open the code as shown in [Figure 5-4](#).

The screenshot shows the Vivado IDE interface. On the left, the Explorer pane displays a project structure with a 'window_fn_prj' folder containing 'Includes', 'Source' (which contains 'window_fn_top.cpp'), 'Test Bench', and a 'solution1' folder with 'constraints', 'directives.tcl', 'script.tcl', and 'csim' sub-folders. On the right, the code editor window is titled 'window_fn_top.cpp' and shows the following C code:

```

45 #include "window_fn_top.h" // Provides typedefs and params
46
47 // Include the entire xhls_window_fn namespace so that scope reso
48 // i.e. prepending xhls_window_fn:: to everything -- is not needed
49 using namespace xhls_window_fn;
50
51 // Vivado HLS requires a top-level function definition that wraps
52 // instantiations and method calls to be synthesized as well as
53 // the top-level I/O (function arguments) into/out of the method
54 void window_fn_top(
55     win_fn_out_t outdata[WIN_LEN],
56     win_fn_in_t indata[WIN_LEN])
57 {
58     // Instantiate a window_fn object - types and params defined
59     ...
60 }

```

[Figure 5-4: C Code for Arbitrary Precision Types Lab 1](#)

2. Hold down the **Control** key and click the **window_fn_top.h** on line 45 to open this header file.
3. Scroll down to view the type definitions ([Figure 5-5](#)).

The screenshot shows the Vivado IDE interface with two tabs open: 'window_fn_top.cpp' and 'window_fn_top.h'. The code editor window is titled 'window_fn_top.h' and displays the following C code:

```

50 // Test parameters
51 #define FLOAT_DATA // Used to select error tolerance in test p
52 #define WIN_TYPE xhls_window_fn::HANN
53 #define WIN_LEN 32
54
55 // Define floating point types for input, output and window co
56 typedef float win_fn_in_t;
57 typedef float win_fn_out_t;
58 typedef float win_fn_coef_t;
59
60 // Top level function prototype - wraps all object, method and
61 void window_fn_top(win_fn_out_t outdata[WIN_LEN], win_fn_in_t :
62
63 #endif // WINDOW_FN_TOP_H_
64

```

[Figure 5-5: Type Definitions for C Validation Lab 3](#)

This design uses standard C/C++ floating-point types for all data operations. Vivado High-Level Synthesis can synthesize floating-point types directly into hardware, provided the operations are standard arithmetic operations (+, -, *, %).

When using math functions from math.h or cmath.h, see the *Vivado Design Suite User Guide: High-Level Synthesis* (UG902) [\[Ref 2\]](#) for details on which math functions are supported for synthesis.

4. Click the **Run C Simulation** toolbar button to open the C Simulation Dialog box.
5. Accept the default setting (no options selected) and click **OK**.

The Console pane shows that the design simulates with the expected results.

Step 3: Synthesize the Design and Review Results

1. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.

When synthesis completes, the synthesis report opens automatically. [Figure 5-6](#) shows the synthesis report.

The screenshot shows the Xilinx Synthesis Report window titled "Synthesis(solution1)". The window is divided into two main sections: "Performance Estimates" and "Utilization Estimates".

Performance Estimates

- Timing (ns)**:
 - Summary**: Shows clock timing with columns: Clock, Target, Estimated, Uncertainty. Data: ap_clk, 5.00, 3.75, 0.63.
- Latency (clock cycles)**:
 - Summary**: Shows latency intervals with columns: Latency, Interval, min, max, min, max, Type. Data: 257, 257, 258, 258, none.
- Detail**:
 - Instance**
 - Loop**

Utilization Estimates

- Summary**: A table showing resource utilization for various components:

Name	BRAM_18K	DSP48E	FF	LUT
DSP	-	-	-	-
Expression	-	-	0	9
FIFO	-	-	-	-
Instance	-	3	151	148
Memory	1	-	0	0
Multiplexer	-	-	-	10
Register	-	-	123	-
Total	1	3	274	167
Available	650	600	202800	101400
Utilization (%)	~0	~0	~0	~0

Figure 5-6: Synthesis Report for Floating Point Design

Instances in the top-level design account for most of the area used.

2. Scroll down the report and expand the Instances in the Details section of the Utilization Estimates ([Figure 5-7](#)).

The screenshot shows the Utilization Estimates window in the Vivado interface. It displays resource usage across various components and provides detailed breakdowns for specific instances.

Name	BRAM_18K	DSP48E	FF	LUT
DSP	-	-	-	-
Expression	-	-	0	9
FIFO	-	-	-	-
Instance	-	3	151	148
Memory	1	-	0	0
Multiplexer	-	-	-	10
Register	-	-	123	-
Total	1	3	274	167
Available	650	600	202800	101400
Utilization (%)	~0	~0	~0	~0

Detail

Instance

Instance	Module	BRAM_18K	DSP48E	FF	LUT	
window_fn_top_fmul_32ns_32ns_32_5_max_dsp_U0	window_fn_top_fmul_32ns_32ns_32_5_max_dsp	0	3	151	148	
Total		1	0	3	151	148

DSP48

Memory

Figure 5-7: Area Details for Floating Point Design

The details show this is a floating-point multiplier (fmul). Floating-point operations are costly in terms of area and clock cycles. The Analysis perspective ([Figure 5-8](#)) shows this operator is also responsible for most of the clock cycles (It takes five of the eight states to execute the logic created by loop `wifn`).

More details on using the Analysis perspective are available in the [Chapter 6, Design Analysis](#) tutorial. For the purposes of understanding this design, two of the operations in the first state are two-cycle read-from-memory operations, and the operation in the final state is a write-to-memory operation.

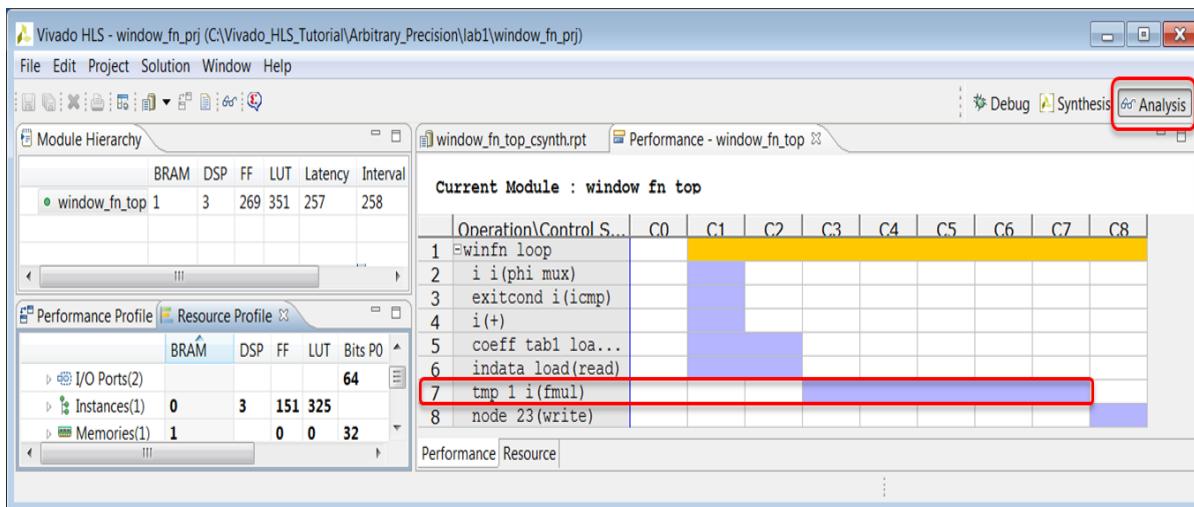


Figure 5-8: Performance Details for Floating Point Design

3. Exit the Vivado HLS GUI and return to the command prompt.

Lab 2: Arbitrary Precision

Review a Design using Arbitrary Precision types.

Introduction

This lab exercise uses the same design as Lab 1, however, the data types are now arbitrary precision types. You first review the design and then examine the synthesis results.

Step 1: Create and Simulate the Project

1. From the Vivado HLS command prompt used in Lab 1, change to the lab2 directory as shown in [Figure 5-9](#).
2. Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.

```
C:\Vivado_HLS_Tutorial>cd Arbitrary_Precision\lab1
C:\Vivado_HLS_Tutorial\Arbitrary_Precision\lab1>cd ..
C:\Vivado_HLS_Tutorial\Arbitrary_Precision>cd lab2
C:\Vivado_HLS_Tutorial\Arbitrary_Precision\lab2>vivado_hls -f run_hls.tcl
```

Figure 5-9: Setup for Interface Synthesis Lab 2

3. Open the Vivado HLS GUI project by typing `vivado_hls -p window_fn_prj`.

4. Open the **Source** folder in the Explorer pane and double-click **window_fn_top.cpp** to open the code as shown in [Figure 5-10](#).

The screenshot shows the Vivado IDE interface. On the left, the Explorer pane displays a project structure for 'window_fn_prj'. It includes a 'Source' folder containing 'window_fn_top.cpp', which is currently selected and highlighted in blue. Other items in the Source folder include 'Includes', 'Test Bench', and 'solution1' (which contains 'constraints', 'directives.tcl', 'script.tcl', 'csim', 'build', and 'report'). To the right of the Explorer is the code editor window titled 'window_fn_top.cpp'. The code is written in C++ and defines a top-level function 'window_fn_top' that takes two arrays of type 'win_fn_out_t' and 'win_fn_in_t' as parameters. The code also includes comments explaining the inclusion of the 'xhls_window_fn' namespace and the requirement for a top-level function definition.

```

44 ****
45 #include "window_fn_top.h" // Provides typedefs and params
46
47 // Include the entire xhls_window_fn namespace so that scope resolution -
48 // i.e. prepending xhls_window_fn:: to everything -- is not necessary
49 using namespace xhls_window_fn;
50
51 // Vivado HLS requires a top-level function definition that wraps all object
52 // instantiations and method calls to be synthesized as well as mapping
53 // the top-level I/O (function arguments) into/out of the methods/functions
54 void window_fn_top(
55     win_fn_out_t outdata[WIN_LEN],
56     win_fn_in_t indata[WIN_LEN])
57 {
58     // Instantiate a window_fn object - types and params defined in header

```

[Figure 5-10: C Code for Arbitrary Precision Lab 2](#)

5. Hold the Control key down and click **window_fn_top.h** on line 45 to open this header file.
 6. Scroll down to view the type definitions ([Figure 5-11](#)).

The screenshot shows the Vivado IDE code editor with two tabs: 'window_fn_top.cpp' and 'window_fn_top.h'. The 'window_fn_top.h' tab is active. The code defines several fixed-point types using the 'ap_fixed' template. It includes the 'ap_int.h' header and defines widths for input ('W_IN', 'IW_IN'), output ('W_OUT', 'IW_OUT'), and coefficients ('W_COEF', 'IW_COEF'). It also defines three types: 'win_fn_in_t', 'win_fn_out_t', and 'win_fn_coef_t' using these fixed-point templates.

```

54 // Types and top-level function prototype
55 #include <ap_int.h>
56 // Define widths of fixed point fields
57 #define W_IN    8
58 #define IW_IN   8
59 #define W_OUT   24
60 #define IW_OUT  8
61 #define W_COEF  18
62 #define IW_COEF 2
63
64 // Define fixed point types for input, output and coefficients
65 typedef ap_fixed<W_IN,IW_IN> win_fn_in_t;
66 typedef ap_fixed<W_OUT,IW_OUT> win_fn_out_t;
67 typedef ap_fixed<W_COEF,IW_COEF> win_fn_coef_t;
68

```

[Figure 5-11: Type Definitions for Arbitrary Precision Lab 2](#)

This header file, `window_fn_top.h`, is the only file that is different from Lab 1. The data types have been changed to `ap_fixed` point types, which are similar to float and double types in that they support integer and fractional bit representations. These data types are defined in the header file `ap_fixed.h`. The definitions in the header file define sizes of the data types:

- The first term defines the total word length.


- The second term defines the number of integer bits.
- The number of fractional bits is therefore the first term minus the second.

When you revise C code to use arbitrary precision types instead of standard C types, one of the most common changes you must make is to reduce the size of the data types. In this case, you change the design to use 8-bit, 24-bit, and 18-bit words instead of 32-bit float types. This results in smaller operators, reduced area, and fewer clock cycles to complete.

Similar optimizations help when you change more common C types such as int, short, and char. For example, changing a data type that only needs to be 18-bit from int (32-bit) ensures that only a single DSP48 is required to perform any multiplications.

In both cases, you must confirm that the design still performs the correct operation and that it does so with the required accuracy. The benefit of the arbitrary precision types provided with Vivado High-Level Synthesis is that you can simulate the updated C code to confirm its function and accuracy.

7. Open the Test Bench folder in the Explorer pane and double-click **window_fn_test.cpp** to open the code.
8. Scroll down to see the view shown in [Figure 5-12](#).

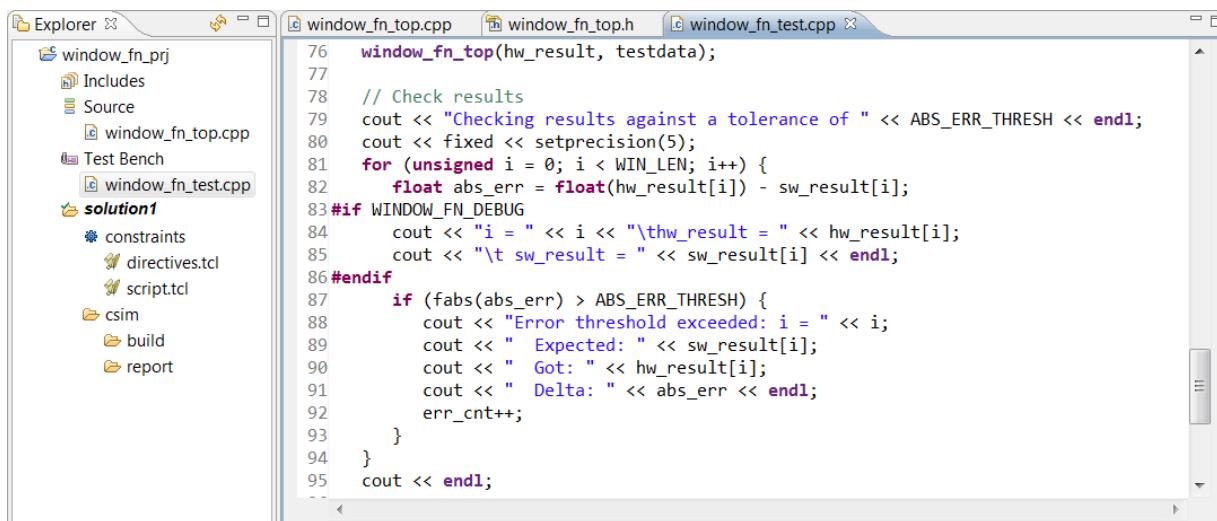

```

76     window_fn_top(hw_result, testdata);
77
78     // Check results
79     cout << "Checking results against a tolerance of " << ABS_ERR_THRESH << endl;
80     cout << fixed << setprecision(5);
81     for (unsigned i = 0; i < WIN_LEN; i++) {
82         float abs_err = float(hw_result[i]) - sw_result[i];
83 #if WINDOW_FN_DEBUG
84         cout << "i = " << i << "\thw_result = " << hw_result[i];
85         cout << "\tsw_result = " << sw_result[i] << endl;
86 #endif
87         if (fabs(abs_err) > ABS_ERR_THRESH) {
88             cout << "Error threshold exceeded: i = " << i;
89             cout << " Expected: " << sw_result[i];
90             cout << " Got: " << hw_result[i];
91             cout << " Delta: " << abs_err << endl;
92             err_cnt++;
93         }
94     }
95     cout << endl;

```

Figure 5-12: Test Bench for Arbitrary Precision Lab 2


The test bench for this design contains code to check the accuracy of the results. The expected results are still generated using float types. The result checking verifies that the results are within a specified range of accuracy (in this case, within 0.001 of the expected result).

This allows the updated design to be validated quickly and efficiently in C, with fast compile and run times.

9. Click the **Run C Simulation** toolbar button to open the C Simulation dialog box.

10. Accept the default setting (no options selected) and click **OK**.

The Console pane shows the results of the C simulation. With the updated data types, the results are no longer identical to the expected results. However, they are within tolerance.

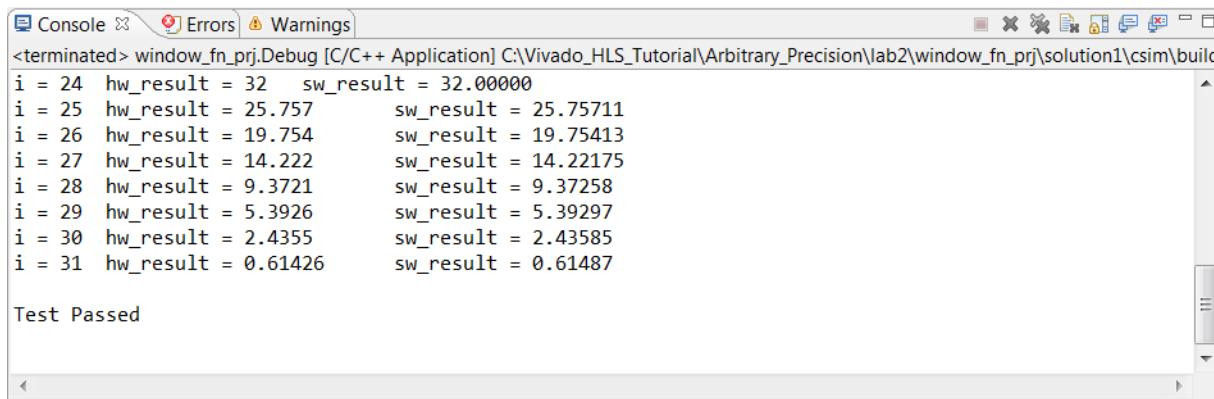

The screenshot shows the Vivado HLS interface with the 'Console' tab selected. The output window displays the results of a C simulation for a window function. The results are listed in pairs: hardware result (hw_result) and software result (sw_result). The hw_result values are floating-point numbers, while the sw_result values are fixed-point numbers. The results are as follows:

i	hw_result	sw_result
24	32	32.00000
25	25.757	25.75711
26	19.754	19.75413
27	14.222	14.22175
28	9.3721	9.37258
29	5.3926	5.39297
30	2.4355	2.43585
31	0.61426	0.61487

Below the results, the message 'Test Passed' is displayed.

Figure 5-13: C Simulation Results for Fixed Point Types

Step 2: Synthesize the Design and Review Results

1. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.

When synthesis completes, the synthesis report opens automatically. [Figure 5-14](#) shows the synthesis report.

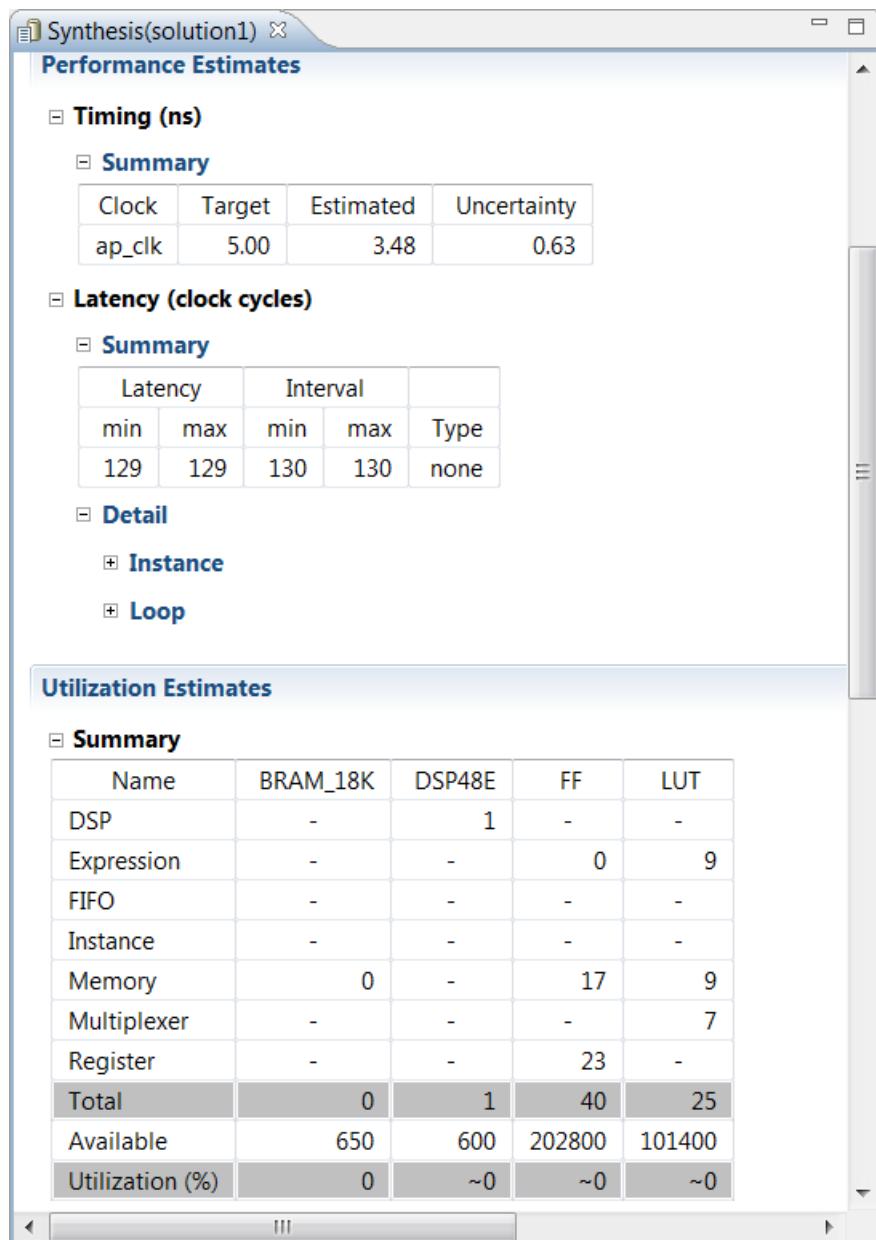


Figure 5-14: Synthesis Report for Fixed Point Design

Note that through use of arbitrary precision types, you have reduced both the latency and the area (by 50% and 80% respectively), and the operations in the RTL hardware are no larger than necessary. Since the total number of bits in the memory is now less than 1024-bit, it is now automatically implemented with LUTs and FFs rather than with a block RAM.

2. Scroll down the report to the Interface summary ([Figure 5-15](#)).

[Figure 5-15](#) shows the data ports are now 8-bit and 24-bit.

RTL Ports	Dir	Bits	Protocol	Source Object	C Type
ap_clk	in	1	ap_ctrl_hs	window_fn_top	return value
ap_rst	in	1	ap_ctrl_hs	window_fn_top	return value
ap_start	in	1	ap_ctrl_hs	window_fn_top	return value
ap_done	out	1	ap_ctrl_hs	window_fn_top	return value
ap_idle	out	1	ap_ctrl_hs	window_fn_top	return value
ap_ready	out	1	ap_ctrl_hs	window_fn_top	return value
outdata_V_address0	out	5	ap_memory	outdata_V	array
outdata_V_ce0	out	1	ap_memory	outdata_V	array
outdata_V_we0	out	1	ap_memory	outdata_V	array
outdata_V_d0	out	24	ap_memory	outdata_V	array
indata_V_address0	out	5	ap_memory	indata_V	array
indata_V_ce0	out	1	ap_memory	indata_V	array
indata_V_q0	in	8	ap_memory	indata_V	array

Figure 5-15: Fixed Point Interface Summary

3. **Exit** the Vivado HLS GUI and return to the command prompt.

Conclusion

In this tutorial, you learned:

- How to update the existing standard C types to Vivado High-Level Synthesis arbitrary precision types.
- The advantages in terms of hardware performance and area of using bit accurate data-types.

Design Analysis

Overview

The general design methodology for creating an RTL implementation from C, C++, or SystemC includes the following tasks:

- Synthesizing the design.
- Reviewing the results of the initial implementation.
- Applying optimization directives to improve performance.

You can repeat the steps above until the required performance is achieved. Subsequently, you can revisit the design to improve area.

A key part of this process is the analysis of the results. This tutorial explains how to use the reports and the GUI Analysis perspective to analyze the design and determine which optimizations to apply.

This tutorial consists of a single lab exercise that:

- Demonstrates the HLS interactive analysis feature.
- Takes you through one design from the initial implementation through six steps and multiple optimizations to produce the final optimized design.

As demonstrated throughout the tutorial, performing these steps in a single project gives you the ability to compare the different solutions.

Lab 1 Description

Synthesize and analyze a DCT design. Use the insights from the design analysis to apply optimizations and judge the effectiveness of the optimization.

Tutorial Design Description

You can download the tutorial design file from the Xilinx Website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory
Vivado_HLS_Tutorial\Design_Analysis.

The sample designs used in the lab exercise is a 2-D DCT function. To highlight the design analysis feature, your goal is to have this design operate with an interval of 125 or less. The design should be able to process a new set of input data at least every 125 clock cycles.

Lab 1: Design Optimization

This exercise explains the basic operations of the GUI Analysis perspective and how you can use it to drive design optimization.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory Vivado_HLS_Tutorial is unzipped and placed in the location C:\Vivado_HLS_Tutorial. If the tutorial data directory is unzipped to a different location, or if it is on a Linux system, adjust the few pathnames referenced to the location at which you placed the Vivado_HLS_Tutorial directory.*

Step 1: Create and Open the Project

1. Open the Vivado HLS Command Prompt.
 - On Windows click **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** (Figure 6-1).
 - On Linux, open a new shell.


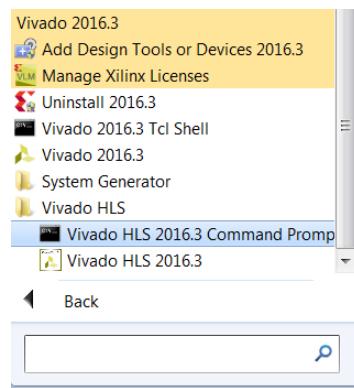


Figure 6-1: Vivado HLS Command Prompt


2. Using the command prompt window ([Figure 6-2](#)), change the directory to the Design Analysis tutorial, lab1.
3. Execute the Tcl script to setup the Vivado HLS project, using the command `vivado_hls -f run_hls.tcl`, as shown in [Figure 6-2](#).

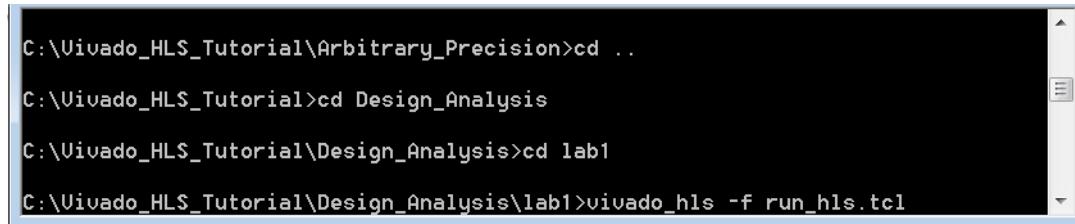

```
C:\Vivado_HLS_Tutorial\Arbitrary_Precision>cd ..  
C:\Vivado_HLS_Tutorial>cd Design_Analysis  
C:\Vivado_HLS_Tutorial\Design_Analysis>cd lab1  
C:\Vivado_HLS_Tutorial\Design_Analysis\lab1>vivado_hls -f run_hls.tcl
```

Figure 6-2: Setup the Design Analysis Tutorial Project

4. When Vivado HLS completes, open the project in the Vivado HLS GUI using the command `vivado_hls -p dct_prj` as shown in [Figure 6-3](#).

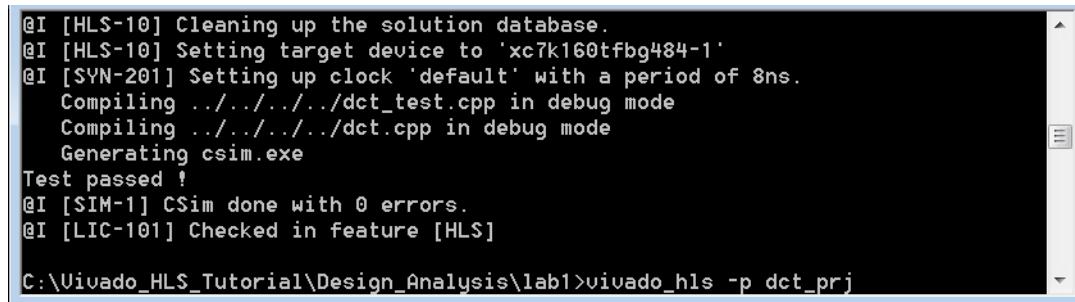

```
@I [HLS-10] Cleaning up the solution database.  
@I [HLS-10] Setting target device to 'xc7k160tfg484-1'  
@I [SYN-201] Setting up clock 'default' with a period of 8ns.  
Compiling ../../dct_test.cpp in debug mode  
Compiling ../../dct.cpp in debug mode  
Generating csim.exe  
Test passed !  
@I [SIM-1] CSim done with 0 errors.  
@I [LIC-101] Checked in feature [HLS]  
C:\Vivado_HLS_Tutorial\Design_Analysis\lab1>vivado_hls -p dct_prj
```

Figure 6-3: Open Design Analysis Project for Lab 1

Step 2: Review the Source Code and Create the Initial Design

1. Double-click the file `dct.cpp` in the Source folder to open the source code for review.

This example uses a DCT function. [Figure 6-4](#) shows an overview of this code.

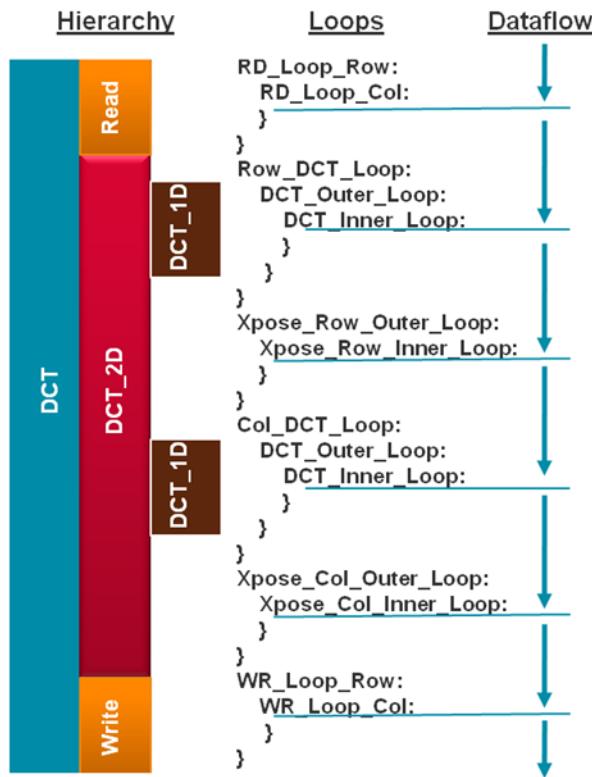


Figure 6-4: Overview of the DCT Design

- The left side of Figure 6-4 shows the code hierarchy.
 - Top-level function `dct` has three sub-functions: `read_data`, `dct_2d` and `write_data`.
 - Function `dct_2d` has a single sub-function `dct_1d`.
- The center of Figure 6-4 shows loops inside each of the functions.
- The right side of Figure 6-4 shows the how the data is processed through the functions and loops.
 - The `read_data` function executes, and the data is processed through loop `RD_Loop_Row`, which has a sub-loop `RD_Loop_Col`.
 - After the `read_data` function completes, function `dct_2d` executes.
 - In function `dct_2d`, `Row_DCT_Loop` processes the data. `Row_DCT_Loop` has two nested loops inside it: `DCT_output_loop` and `DCT_inner_loop`.
 - `DCT_inner_loop` calls function `dct_1d`.

And so on, until the function `write_data` processes the data.

- Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.

Step 3: Review the Performance Using the Synthesis Report

When synthesis completes, the synthesis report opens automatically. [Figure 6-5](#) shows the performance section of the report.

The screenshot shows the 'Performance Estimates' section of the synthesis report. It includes tables for Timing (ns) and Latency (clock cycles), and details for Instances and Loops.

Clock	Target	Estimated	Uncertainty
default	8.00	5.79	1.00

Latency	Interval			
min	max	min	max	Type
3959	3959	3960	3960	none

Instance	Module	min	max	min	max	Type
grp_dct_2d_fu_152	dct_2d	3668	3668	3668	3668	none

Loop Name	min	max	Iteration Latency	Initiation Interval	achieved	target	Trip Count	Pipelined
- RD_Loop_Row	144	144	18		-	-	8	no
+ RD_Loop_Col	16	16	2		-	-	8	no
- WR_Loop_Row	144	144	18		-	-	8	no
+ WR_Loop_Col	16	16	2		-	-	8	no

Figure 6-5: Report for Initial DCT Design

[Figure 6-5](#) highlights the following information.

- The clock frequency of 8 ns has been met.
- The top-level design takes 3959 clock cycles to write all the outputs.
- You can apply new inputs after 3960 clock cycles. This is one clock cycle after the output data has been written. This immediately reveals that the design is not pipelined, but this fact is also noted in the report: type is set to none and not pipelined.
- The top level has a single instance, which has a latency and initiation interval of 3668.
 - This block also has no pipelining and accounts for most of the clock cycles.
- Notice that the functions `read_data` and `write_data` are not noted here as instances of the top level.
 - [Figure 6-6](#) shows that, during synthesis, these blocks were automatically inlined (the hierarchy was removed).

- High-level synthesis might automatically inline small functions to improve the quality of results (QoR). You can prevent this by adding the `Inline` directive with the `-off` option to any function being automatically inlined.

```
Vivado HLS Console
@I [HLS-10] Starting code transformations ...
@I [HLS-10] Checking synthesizability ...
@I [XFORM-602] Inlining function 'read_data' into 'dct' (dct.cpp:128) automatically.
@I [XFORM-602] Inlining function 'write_data' into 'dct' (dct.cpp:133) automatically.
@I [HLS-111] Elapsed time: 7.476 seconds; current memory usage: 70.6 MB.
@I [HLS-10] Starting hardware synthesis ...
@I [HLS-10] Synthesizing 'dct' ...
```

Figure 6-6: Automatic Optimization Reporting

- The loops in the `read_data` and `write_data` functions are therefore implemented at the top level and are reported as loops in the top-level function (Figure 6-5).
- Each loop has a latency of 144 clock cycles. (Because the loops are not pipelined, there is no initiation interval.)
- Using `RD_Loop_Row` as an example, you can see why the loop latency is 144.
 - `RD_Loop_Col` has a latency of 2 cycles for each iteration of the loop (iteration latency) and a tripcount of 8: $2 \times 8 = 16$ clock cycles total latency for the loop.
 - From `RD_Loop_Row`, it takes 1 clock to enter loop `RD_Loop_Col` and 1 clock cycle to return to `RD_Loop_Row`. The iteration latency for `RD_Loop_Row` is therefore $(1 + 16 + 1)$ 18 clock cycles.
 - `RD_Loop_Row` has a tripcount of 8 so the total loop latency is $8 \times 18 = 144$ clock cycles.
- The total latency for the `dct` block is therefore:
 - 144 clocks for `RD_Loop_Row`.
 - Plus 3668 clock cycles for `dct_2d`.
 - Plus 144 clock cycles for `WR_Loop_Row`.
 - Plus a clock cycle to enter each block.

To review the details of the instantiated sub-blocks `dct_2d` and `dct_1d`, open their respective reports from the `syn/report` folder under `solution1` in the Explorer pane.

You can also use the design analysis perspective to review these details in a more interactive manner.

Step 4: Review the Performance Using the Analysis Perspective

Invoke the Analysis perspective any time after synthesis completes.

1. Click the **Analysis** perspective button (Figure 6-7) to begin interactive design analysis.

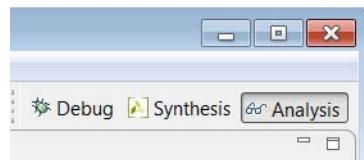


Figure 6-7: Opening the Analysis Perspective

The Analysis perspective consists of five panes, each of which is highlighted in Figure 6-8. You use all of these in the tutorial. The module and loops hierarchies are shown expanded (by default, they are shown collapsed).

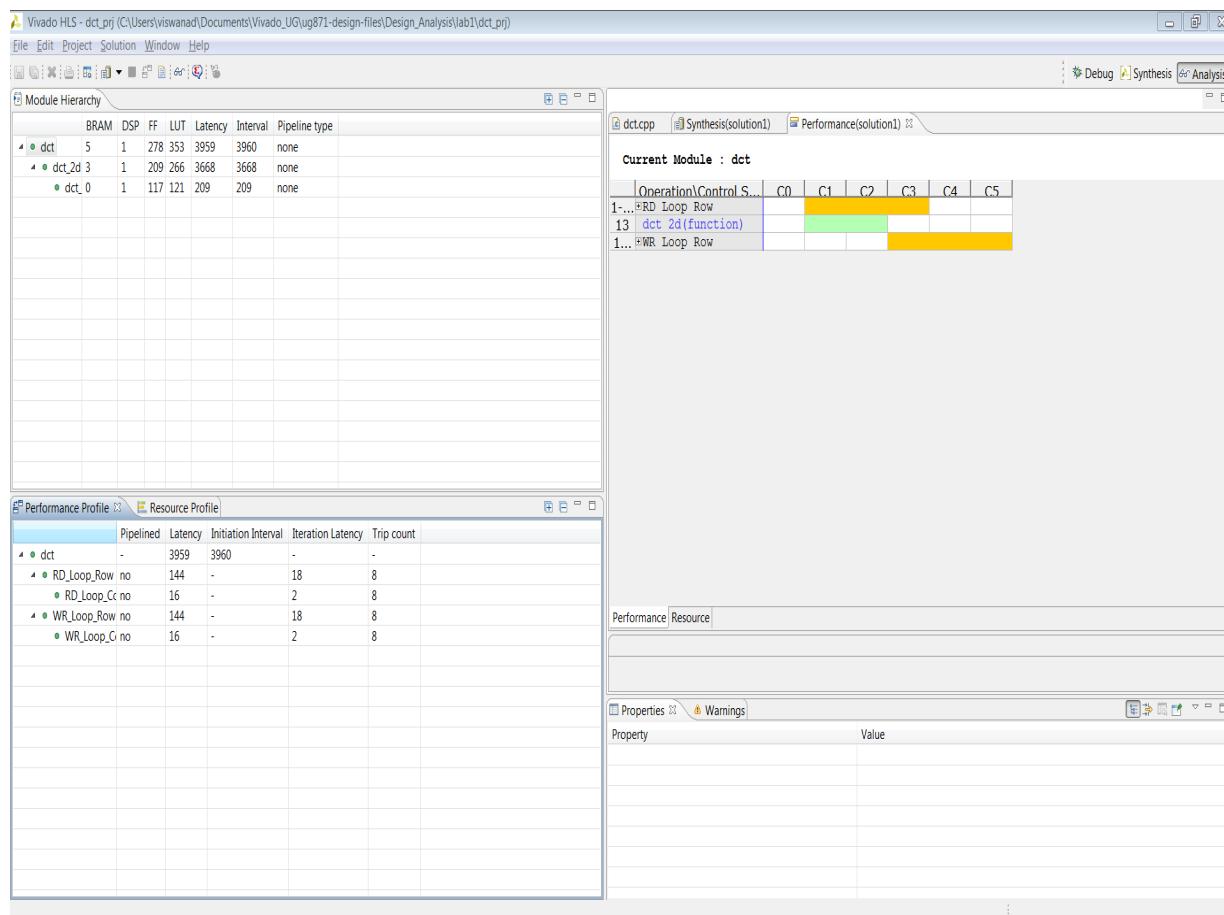


Figure 6-8: Overview of the Analysis Perspective

Use the Module Hierarchy pane to navigate through the hierarchy. The Module Hierarchy pane shows both the performance and area information for the entire design. The Performance Profile pane shows the performance details for this level of hierarchy. The information in these two panes is similar to the information you reviewed earlier in the report (for the top-level dct block).

The Performance view is also shown (on the right side of [Figure 6-9](#)). This view shows how the operations in this particular block are scheduled into clock cycles.

- The left column lists the resources.
 - Sub-blocks are green.
 - Operations resulting from loops in the source code are yellow.
 - Standard operations are purple.
- Notice that the dct has three main resources:
 - A loop called RD_Loop_Row. The plus symbol (+) indicates that the loop has hierarchy and that you can expand the loop to view it.
 - A sub-block called dct_2d.
 - A loop called WR_Loop_Row.

The top row lists the control states in the design. Control states are the internal states High-Level Synthesis uses to schedule operations into clock cycles. There is a close correlation between the control states and the final states in the RTL Finite State Machine (FSM), but there is no one-to-one mapping.

2. Click loop **RD_Loop_Row** and sub-loop **RD_Loop_Col** to fully expand the loop hierarchy ([Figure 6-9](#)).

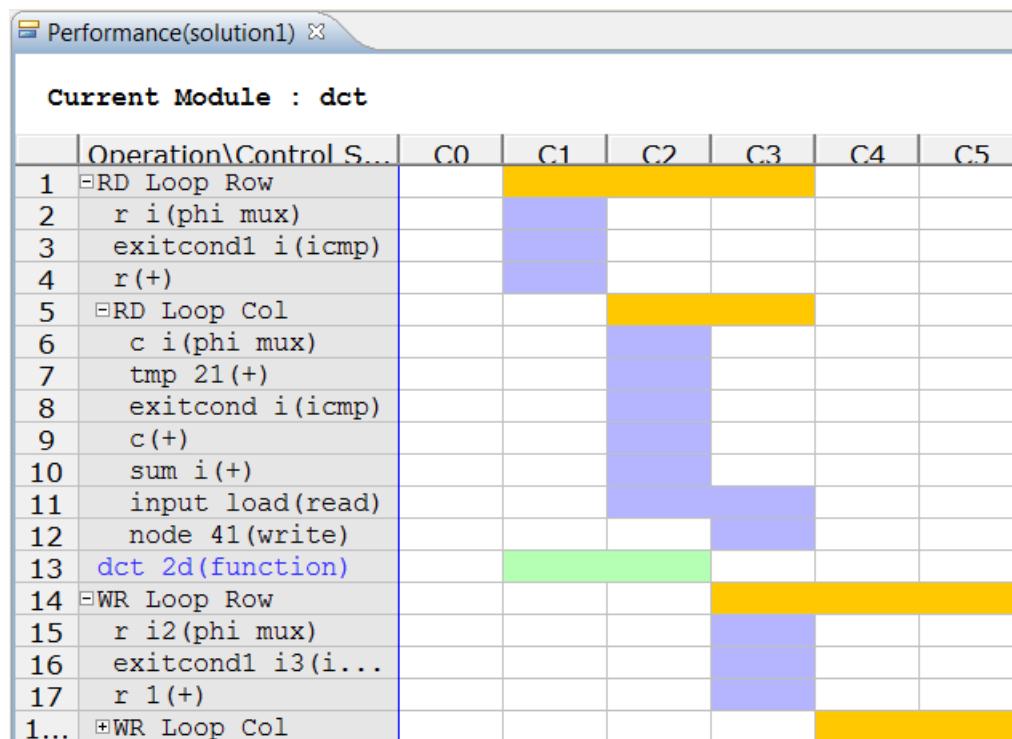


Figure 6-9: Expanded View of RD_Loop_Row

From this, you can see that in the first state (C1) of the RD_Loop_Row, the loop exit condition is checked and an add operation performed. This addition is likely the counter for the loop iterations, and we can confirm this.

3. Select the adder in state C1, right-click and select **Go to Source** (Figure 6-10).

- a. When the dialog box opens, press OK to select item 0.

This opens the C source code to highlight the operation in the C source that created this adder. From the details on screen (also shown in Figure 6-10), you can determine it is indeed the loop counter. It is the only addition on this line, and the variable is named "r".

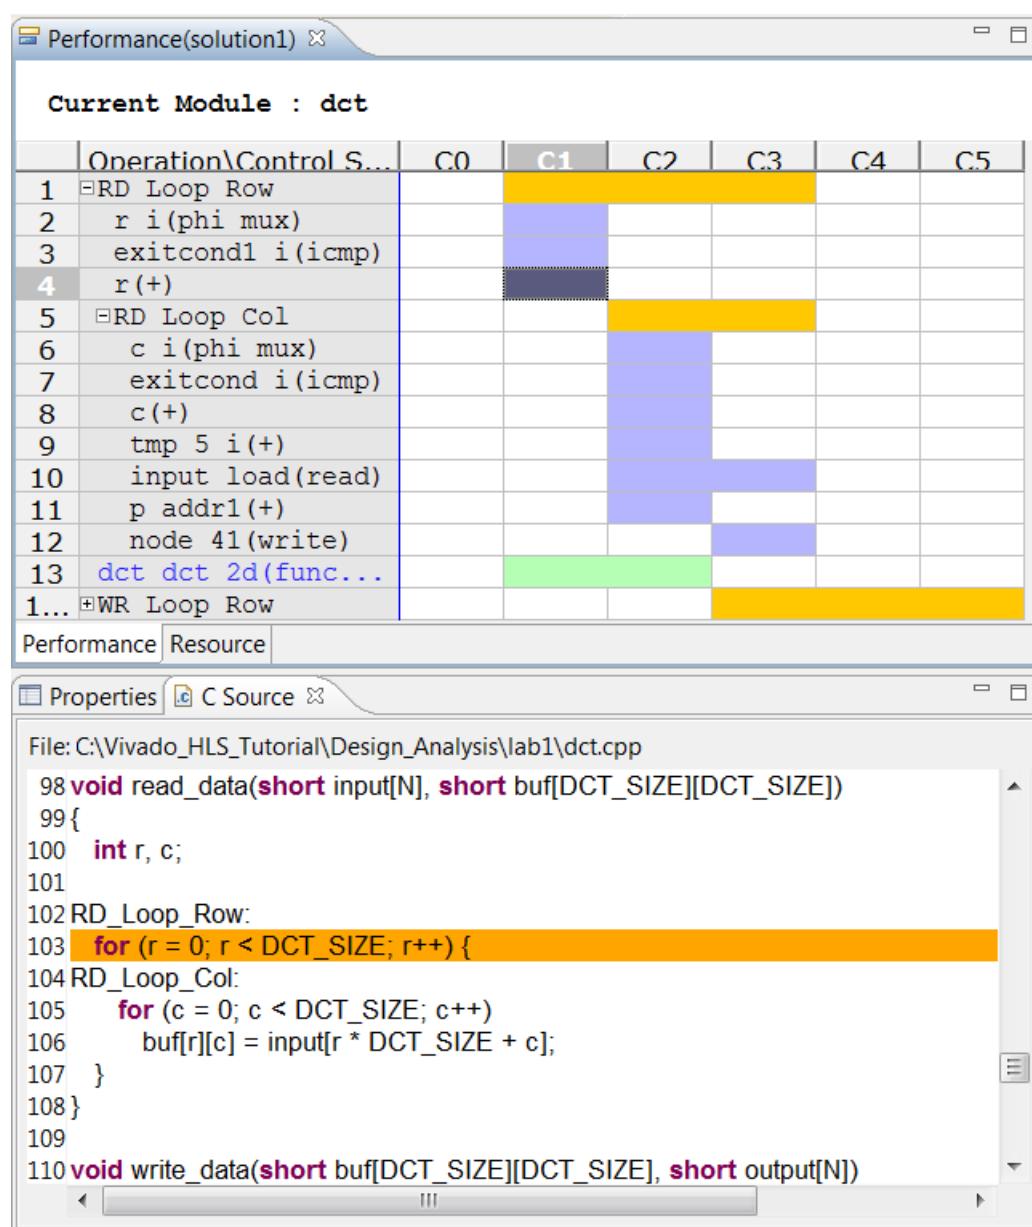


Figure 6-10: C Source Code View

In the next state of loop RD_Loop_Row (state C2), loop RD_Loop_Col starts to execute.

- Click any of the operations in the RD_Loop_Col to see the source code highlighting update.

This should help confirm your understanding of how the operations in the C source code are implemented in the RTL.

- The loop exit condition is checked.
- This is an adder for loop count variable "c".
- A read from a RAM performed (one cycle to generate the address, one cycle to read the data).
- A write operation is performed to a RAM.

Loops in the Performance view mean that the design iterates around these states multiple times. The number of iterations is noted as the loop tripcount and shown in the Performance Profile.

To improve performance, these loops should be pipelined. You can review the rest of the design for other performance optimization opportunities.

- Click the **X** in the C Source pane tab to close this window.
- In the Module Hierarchy pane, click the function **dct_2d** to navigate into the view for this function ([Figure 6-11](#)).

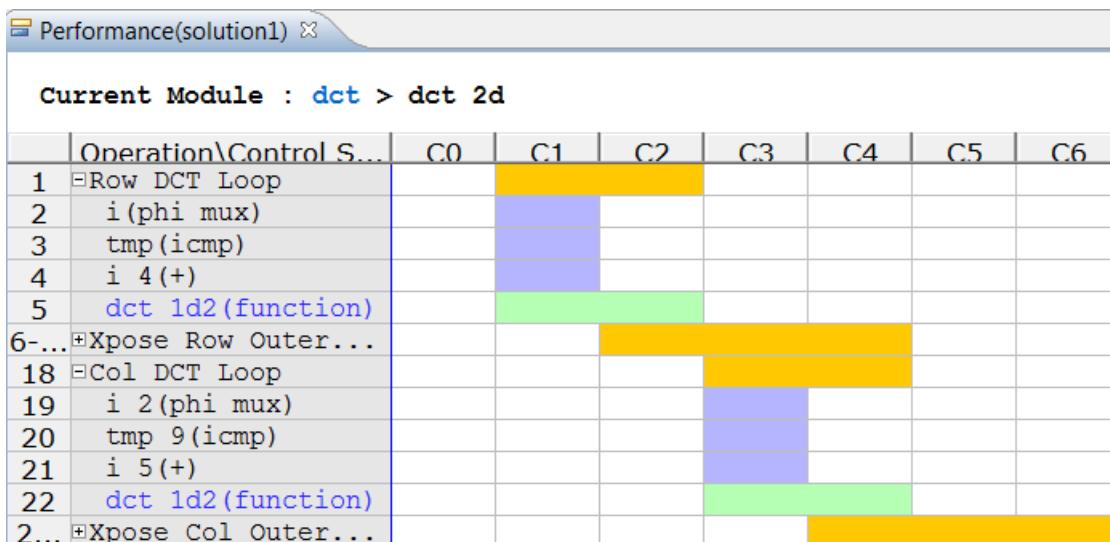


Figure 6-11: DCT_2D Performance View

Again, you can see a number of loops (shown in yellow in [Figure 6-12](#)). Loops ensure the design will have small area but the design will take multiple iterative states to complete: each iteration of the loop will complete before the next iteration starts.

You can pipeline the loops to improve the performance. The details in the Performance Profile show that most of the latency is caused by loops Row_DCT_Loop and Col_DCT_Loop.

7. Click loops **Row_DCT_Loop** and **Col_DCT_Loop** in the performance viewer to fully expand them, as shown in [Figure 6-12](#).

Expanding these loops in Performance view shows both loops call function `dct_dct_1d2`. Unless this function itself is pipelined, there is no benefit in pipelining the loop. The Module Hierarchy shows the interval for `dct_1d` is 210 clock cycles, which means it can only accept a new input every 210 clock cycles.

8. In the **Module Hierarchy**, click function `dct_1d2` to navigate into the view for this function.
9. Expand the loops in the **Performance Profile** and **Performance** view to see the view shown in [Figure 6-12](#).

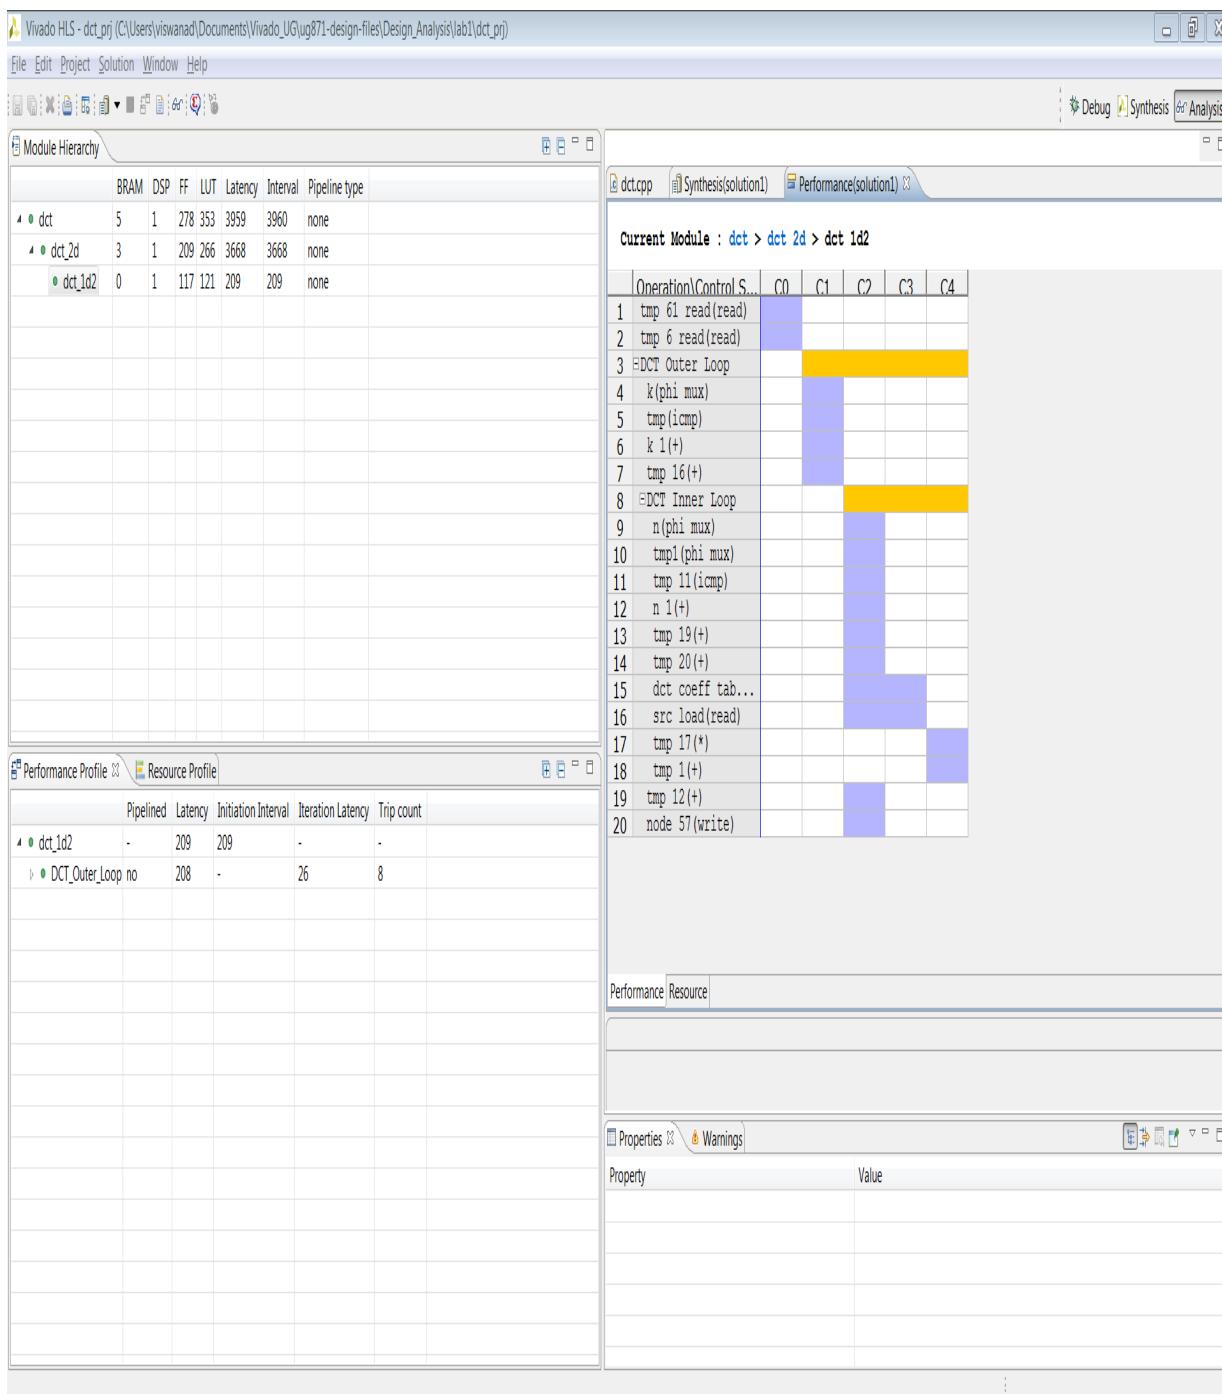


Figure 6-12: DCT_1D Performance View

In [Figure 6-12](#) you can see a series of nested loops that can be pipelined.

You can choose to do one of the following:

- You can pipeline the function and then pipeline the loop that calls it. (Because the function is pipelined, the loop can take advantage of using a pipelined part.)

- You can pipeline the loops within this function and simply make this function execute faster.

Pipelining the function unrolls all the loops within it, and thus greatly increases the area. If the objective is to get the highest possible performance with no regard for area, this may be the best optimization to perform.

You can find more details on pipelining loops and functions in the [Chapter 7, Design Optimization](#) tutorial. For this case, the approach is to optimize the loops and keep the area at a minimum.

10. Click the **Synthesis** perspective button to return to the main synthesis view.

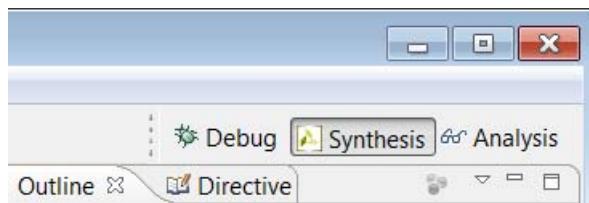


Figure 6-13: Re-Opening the Synthesis Perspective

Step 5: Apply Loop Pipelining and Review for Loop Optimization

In this step, you create a new solution and add pipelining directives to the loops.

When pipelining nested loops, it is generally best to pipeline the inner-most loop. Typically, High-Level Synthesis can generally flatten the loop nest automatically (allowing the outer loop to simply feed the inner loop). For more information on why it is better to perform certain loop optimizations rather than others, see the [Chapter 7, Design Optimization](#) tutorial.

1. Select the **New Solution** toolbar button or use the menu **Project > New Solution** to create a new solution.
2. Click **Finish** and accept the defaults.
3. Ensure that you can see the C source code in the Information pane.
4. In the Directive tab, add a pipeline directive to loop DCT_Inner_Loop in function dct_1d.
 - a. Right-click **DCT_Inner_Loop** in the Directive pane and select **Insert Directive**.
 - b. In the Directives Editor dialog box activate the Directive drop-down menu at the top and select **PIPELINE**.
 - c. Click **OK** to select the default maximum pipeline rate (II=1).
5. Repeat step 4 for the following loops:
 - a. In function `dct_2d` loop `Xpose_Row_Inner_Loop`
 - b. In function `dct_2d` loop `Xpose_Col_Inner_Loop`

- c. In function `read_data` loop `RD_Loop_Col`
- d. In function `write_data` loop `WR_Loop_Col`

The Directive pane shows the following (highlighted) optimization directives applied.

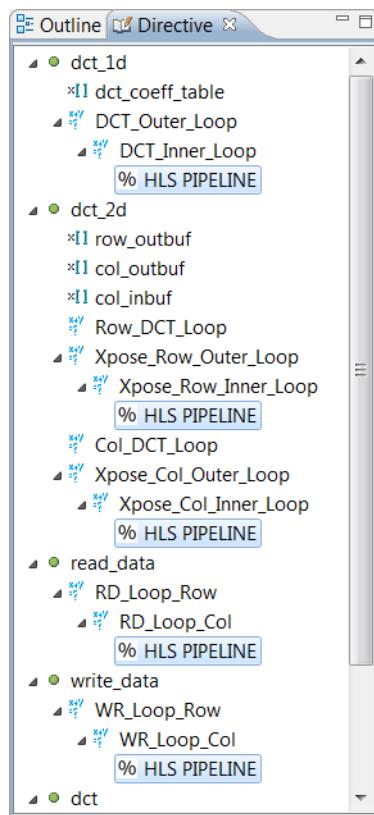


Figure 6-14: Optimization Directive for DCT Loop Pipelines

6. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL. If a file was modified, please select **YES**.
7. When synthesis completes, use the **Compare Reports** toolbar button or the menu **Project > Compare Reports** to compare solutions 1 and 2.

Figure 6-15 shows the results of comparing solution1 and solution2. Pipelining the loops has improved the latency of the design with an almost 50% reduction in solution2.

Performance Estimates			
Timing (ns)			
Clock		solution1	solution2
ap_clk	Target	8.00	8.00
	Estimated	5.79	5.79
Latency (clock cycles)			
		solution1	solution2
Latency	min	3959	1855
	max	3959	1855
Interval	min	3960	1856
	max	3960	1856

Figure 6-15: DCT Solution1 and Solution2 Comparison

Next, you once again open the **Analysis** perspective, analyze the results, and determine whether or not there are more opportunities to for optimization.

- Click the **Analysis** perspective button to begin interactive design analysis.

When the Analysis perspective opens, you can see that the majority of the latency is still due to block `dct_2d`. Before proceeding to analyze further, you can review how the loops at this level have been optimized.

The Performance Profile (Figure 6-16) shows that the latency of both loops has been reduced from 144 clock cycles in solution1 to only 65 clock cycles.

		Pipelined	Latency	Initiation Interval	Iteration Latency	Trip count
▲	● dct	-	1855	1856	-	-
● RD_Loop_Row_RD_Loop_Col	yes	65	1	3	64	64
● WR_Loop_Row_WR_Loop_Col	yes	65	1	3	64	64

Figure 6-16: DCT Solution2 Performance of Top-Level Loops


Pipelining loops transforms the latency from

$$\text{Latency} = \text{iteration latency} * (\text{tripcount} * \text{interval})$$

to

$$\text{Latency} = \text{iteration latency} + (\text{tripcount} * \text{interval})$$

Vivado HLS also made this possible by automatically performing loop flattening (there is no longer any loop hierarchy). You can see this by reviewing the Console pane, or log file, for solution2. Figure 6-17 shows the loops that have been automatically optimized.

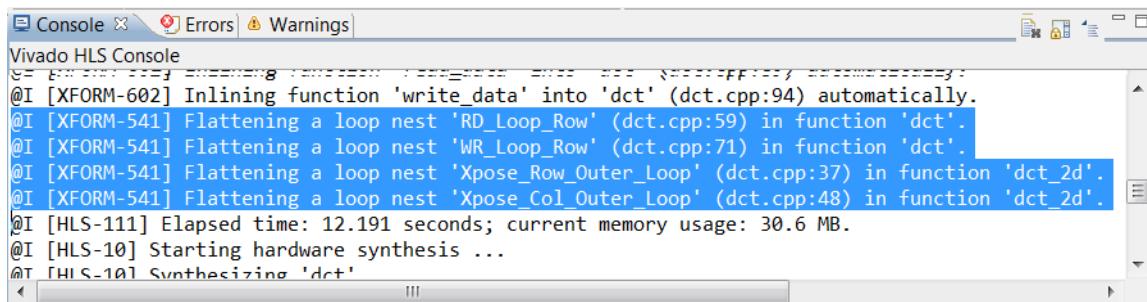

The screenshot shows the Vivado HLS Console window with the following log output:

```

Vivado HLS Console
@I [XFORM-602] Inlining function 'write_data' into 'dct' (dct.cpp:94) automatically.
@I [XFORM-541] Flattening a loop nest 'RD_Loop_Row' (dct.cpp:59) in function 'dct'.
@I [XFORM-541] Flattening a loop nest 'WR_Loop_Row' (dct.cpp:71) in function 'dct'.
@I [XFORM-541] Flattening a loop nest 'Xpose_Row_Outer_Loop' (dct.cpp:37) in function 'dct_2d'.
@I [XFORM-541] Flattening a loop nest 'Xpose_Col_Outer_Loop' (dct.cpp:48) in function 'dct_2d'.
@I [HLS-111] Elapsed time: 12.191 seconds; current memory usage: 30.6 MB.
@I [HLS-10] Starting hardware synthesis ...
@T [HLS-10] Synthesizing 'dct'

```


Figure 6-17: DCT Solution2 Loop Flattening

- In the Module Hierarchy, click function `dct_2d` to navigate into the view for this function.

In the Performance Profile you can see that the latency of all the loops has been substantially reduced (Row_DCT_Loop and Col_DCT_Loop have been approximately halved from the earlier report in [Figure 6-11](#)). However, the majority of the latency is still due to these two loops, each of which calls the `dct_1d` block.

- In the Module Hierarchy, click function `dct_1d2` to navigate into the view for this function.

The Performance Profile ([Figure 6-18](#)) shows the loop latencies have been reduced, but there is still a loop hierarchy here. (There is still loop `DCT_Outer_Loop`, shown in [Figure 6-18](#), so no loop flattening occurred).

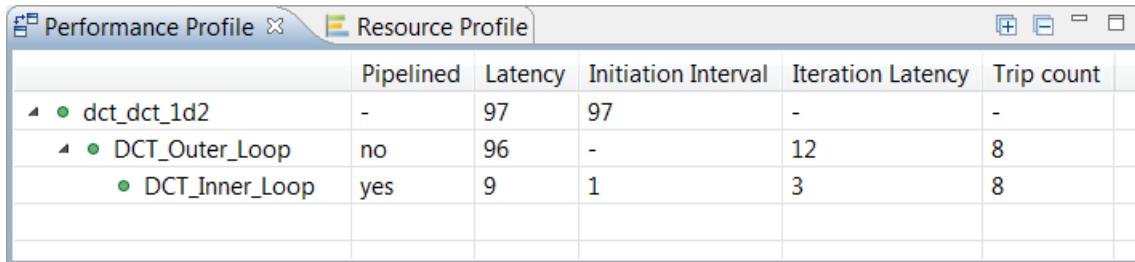

	Pipelined	Latency	Initiation Interval	Iteration Latency	Trip count
• dct_dct_1d2	-	97	97	-	-
• DCT_Outer_Loop	no	96	-	12	8
• DCT_Inner_Loop	yes	9	1	3	8

Figure 6-18: DCT Solution2 Performance of `dct_1d` Loops

Viewing these loops in Performance view shows why this loop was not optimized further.

- In the Performance view, click loops `DCT_Outer_Loop` and `DCT_Inner_Loop` to view the loop hierarchy ([Figure 6-19](#)).
- Select the **write operation in state C3**.
- Right-click and select **Go to Source**.

[Figure 6-19](#) shows that this loop was not flattened because additional operations outside of `DCT_Inner_Loop`, at the level of `DCT_Outer_Loop`, prevented loop flattening. One of the operations that prevented loop flattening is highlighted in [Figure 6-19](#), below.

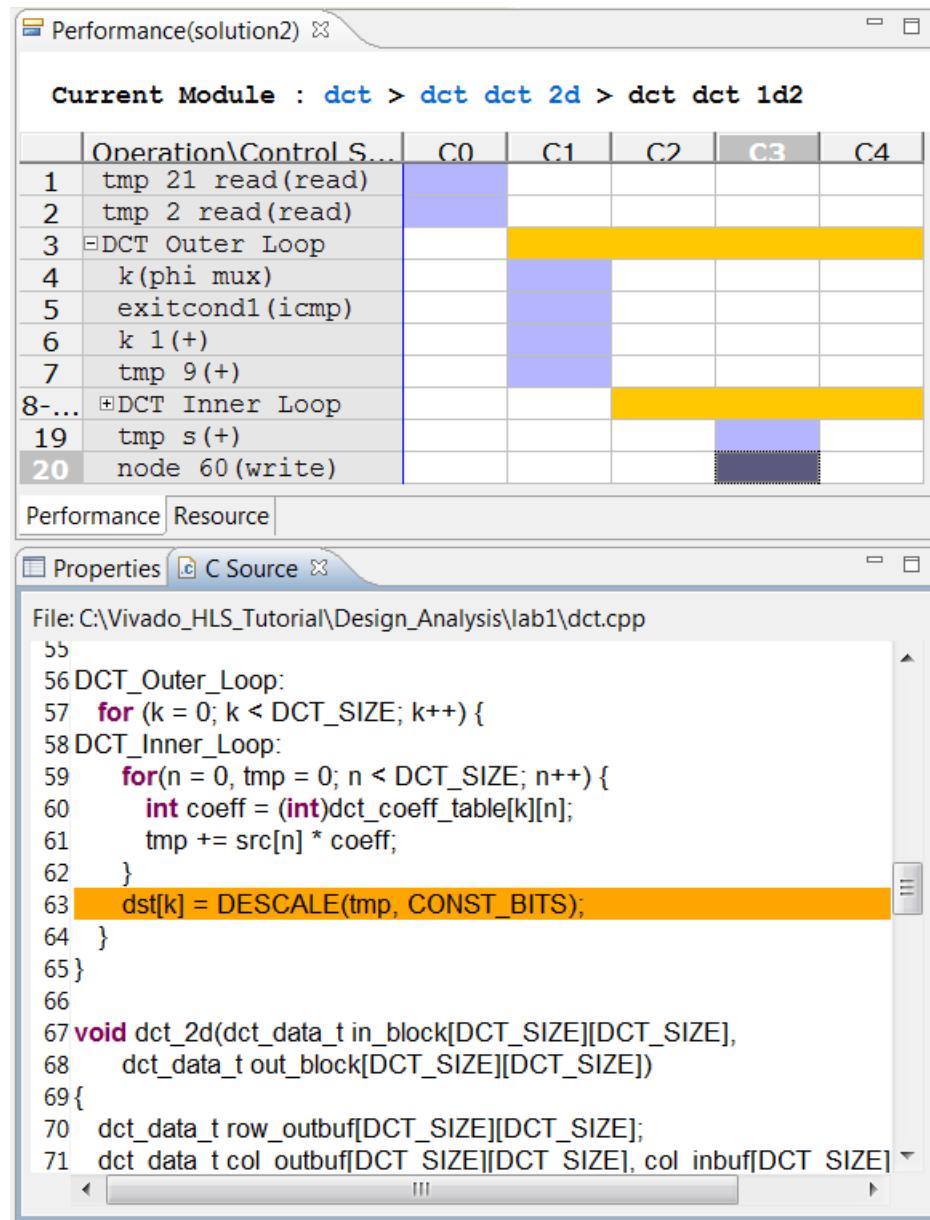


Figure 6-19: DCT Solution2 dct_1d Performance View

The write to the array cannot be flattened into the inner loop. To achieve an interval of 1 on DCT Outer Loop you will need to pipeline the output loop - there is no benefit in simply pipelining the inner loop itself.

You should pipeline the outer loop instead. This causes the inner loop to be completely unrolled. An increase in area results, but you are still far from the throughput goal of 125 and not yet ready to pipeline the entire function (and see an even greater area increase, as the outer loop is also completely unrolled).

14. Click the **Synthesis** perspective button to return to the main synthesis view.

Step 6: Apply Loop Optimization and Review for Bottlenecks

1. Select the **New Solution** toolbar button or use the menu **Project > New Solution** to create a new solution.
2. Click **Finish** and accept the defaults to create solution3.
3. Ensure the C source code is visible in the Information pane.
4. In the **Directive** tab
 - a. In function **dct_1d**, select the pipeline directive on loop DCT_Inner_Loop.
 - b. Right-Click and select **Remove Directive**.
 - c. Still in function **dct_1d**, select loop **DCT_Outer_Loop**.
 - d. Right-click and select **Insert Directive**.
 - e. In the **Directives Editor** dialog box activate the **Directive** drop-down menu at the top and select **PIPELINE**.
 - f. Click **OK** to select the default maximum pipeline rate ($II=1$).

The Directive pane should show the following (highlighted) optimization directives applied.

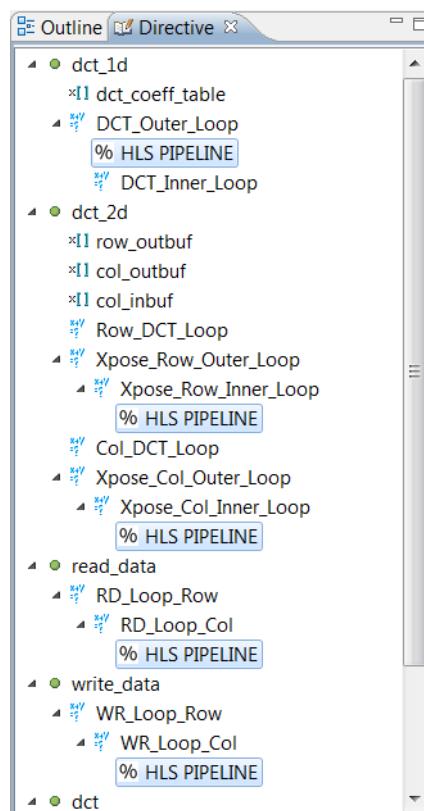


Figure 6-20: Updated Optimization Directives for DCT Loop Pipelines

5. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
6. When synthesis completes, click the **Compare Reports** toolbar button to compare solutions 2 and 3.

Figure 6-21 shows the results of comparing solution2 and solution3. Pipelining the outer-loop has in fact resulted in an increase to the performance and the area.

The significant latency benefit is achieved because multiple loops in the design call the `dct_1d` function multiple times. Saving latency in this block is multiplied because this function is used inside many loops.

The screenshot shows two tables side-by-side. The left table is titled 'Performance Estimates' and contains two sections: 'Timing (ns)' and 'Latency (clock cycles)'. The right table is titled 'Utilization Estimates' and contains resource usage data.

		solution2	solution3
Clock			
ap_clk	Target	8.00	8.00
	Estimated	5.79	8.74

		solution2	solution3
Latency	min	1855	879
	max	1855	879
Interval	min	1856	880
	max	1856	880

		solution2	solution3
BRAM_18K	5	5	
DSP48E	1	8	
FF	1005	1352	
LUT	1050	1216	

Figure 6-21: DCT Solution2 and Solution3 Comparison

In this case, the report indicates the clock period for solution3 cannot be achieved. Vivado HLS will sometimes create a design in which the estimated clock period fails to meet the required clock period. Typically, the design will meet timing after RTL synthesis - in this case, you can confirm this by using the Export RTL feature and selecting **Evaluate**. In the event you encounter a case where the design fails to meet timing after RTL synthesis, use `LATENCY` directive in conjunction with regions in the C code to force Vivado HLS to register intermediate points on the failing RTL path.

Now that all the loops are pipelined, it is worthwhile to review the design to see if there are performance-limiting "bottlenecks." Bottlenecks are limitations in the flow of data that can prevent the logic blocks from working at their maximum data rate.

Such limitations in the data flow can come from a number of sources, for example, I/O ports and arrays implemented as block RAM. In both cases, the finite number of ports (on the I/O or block RAM) limits the rate at which data can be read or written.

Another source of bottlenecks is data dependencies in the original source code. In some cases, these data dependencies are inherent in how the algorithm operates, as when a calculation cannot be performed until an earlier calculation has completed. Sometimes, however, the use of an optimization directive or a minor change to the C code can remove them.

The first task is to identify such issues in the RTL design. There are a number of approaches you can take:

- Start with the largest latency of interval in the Module Hierarchy report and navigate down the hierarchy to find the source of any large latency or interval.
- Click the **Resource Profile** to examine I/O and memory usage.
- Use the power of the graphical viewer and look for patterns in the **Performance** view which indicate a limitation in data flow.

In this case, you will use the latter approach. You can use the Analysis perspective to identify such places in the design quickly.

7. Click the **Analysis** perspective button to begin interactive design analysis.
8. In the **Module Hierarchy**, ensure module **dct** is selected.
9. In the **Performance** view, expand the first loop in the design as shown in [Figure 6-22](#), `RD_Loop_Row_RD_Loop_Col` (these loops were flattened and the name is now a concatenation of both loops).

This loop is implemented in two states. The red arrow in [Figure 6-22](#) shows the path from the start of the loop to the end of the loop: the arrow is almost vertical (everything happens in two clock cycles) and this loop is well implemented in terms of latency.



Figure 6-22: Analysis of DCT RD_Loop_Row

10. In the Performance view, expand the **WR_Loop_Row_WR_Loop_Col** and perform similar analysis. It is similarly well optimized for latency.

11. Double-click function `dct_2d` and navigate into the `dct_2d` function.

You can use same analysis process down through the hierarchy. If you perform this analysis you will discover that all the function blocks and loops have a similar optimal (few cycles) implementation, until the `dct_1d` block is examined.

12. In the **Performance** view, double-click function `dct_1d2` and navigate into the `dct_1d2` function.

13. Expand the `DCT_Outer_Loop` to see the view shown in [Figure 6-23](#).

[Figure 6-23](#) shows a very different view from the earlier loop schedules (which had only a few cycles of latency). The schedule shows a long drift from input to output (as shown by the red arrow).

[Figure 6-23](#) shows the analysis of `dct_1d RD_Loop_Row`.

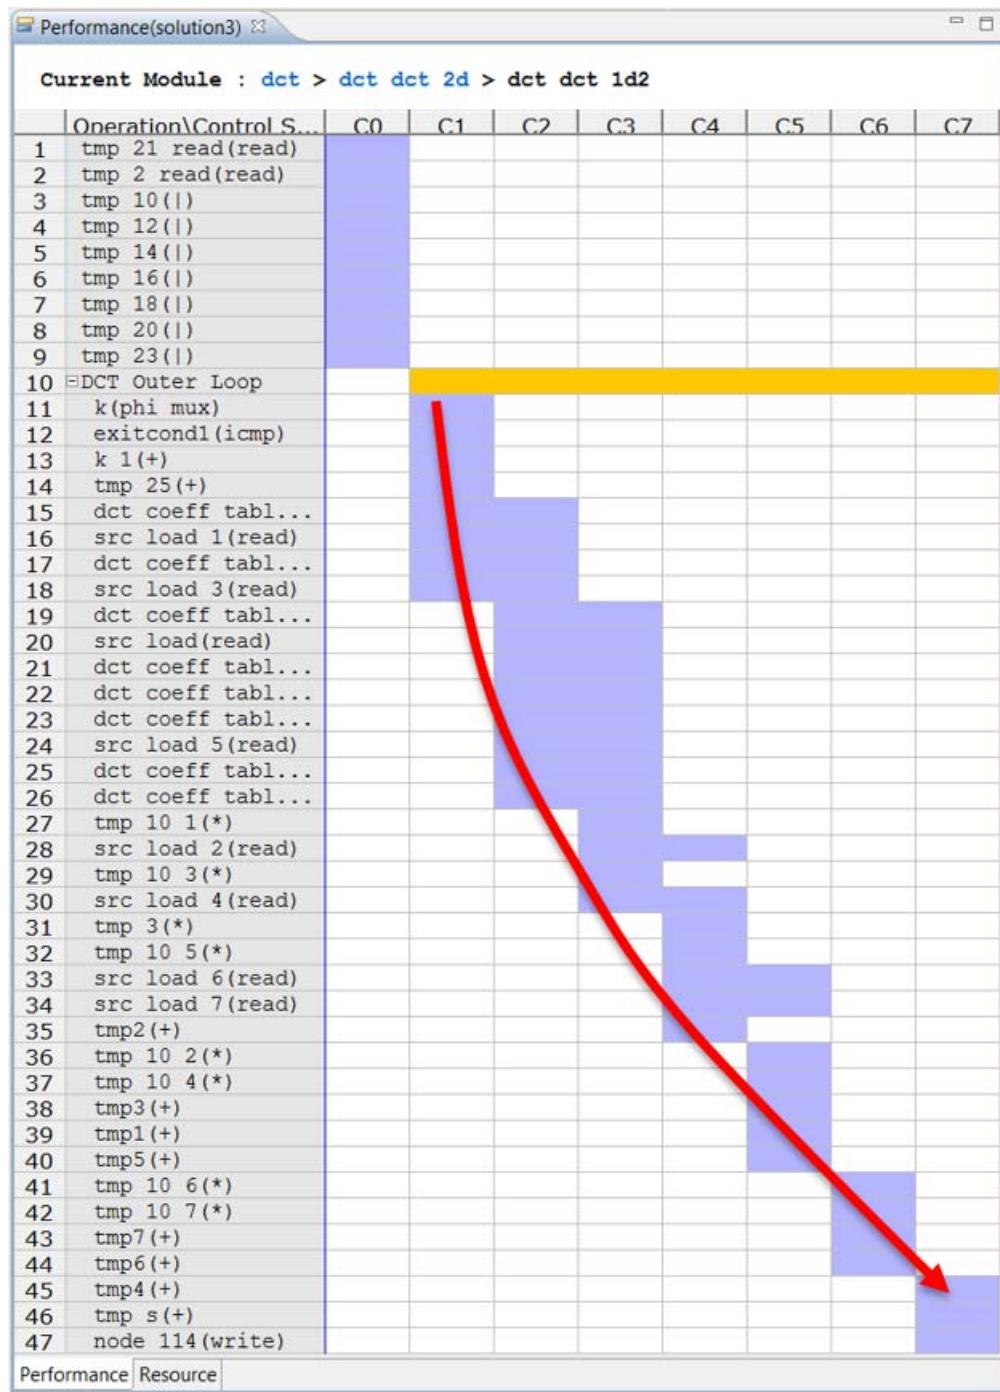


Figure 6-23: Analysis of dct_1d RD_Loop_Row

There are typically two things that cause this type of schedule: data dependencies in the source code and limitations due to I/O or block RAM. You will now examine the resources sharing in this block.

14. In the **Performance** view, click the **Resource** tab at the bottom of the window.

15. Expand the Memory Ports, as shown in [Figure 6-24](#).

Resource\Control Step	C0	C1	C2	C3	C4	C5	C6	C7
1 -I/O Ports								
2 i 21	read							
3 i 2	read							
4 src(p0)		read	read	read	read			
5 src(p1)		read	read	read	read			
6 dst(p0)								write
7 -Memory Ports								
8 dct coeff tabl...		read						
9 src(p0)		read	read	read	read			
10 src(p1)		read	read	read	read			
11 dct coeff tabl...		read						
12 dct coeff tabl...			read					
13 dct coeff tabl...			read					
14 dct coeff tabl...				read				
15 dct coeff tabl...					read			
16 dct coeff tabl...					read			
17 dct coeff tabl...					read			
18 dst(p0)								write
1... *Expressions								

[Figure 6-24: Resource Sharing of Memory Ports in DCT_1d](#)

The Resource view shows how the resources in the design are used in different control states.

The rows list the resources in the design. In [Figure 6-24](#), the memory resources are expanded.

The columns show the control states in which the resource is used. If a resource is active in multiple states, the resource is being re-used in different clock cycles.

[Figure 6-24](#) shows the memory accesses on block RAM `src` are being used to the maximum in every clock cycle. (At most, a block RAM can be dual-port and both ports are being used). This is a good indication the design may be bandwidth-limited by the memory resource. To determine if this really is the case, you can examine further.

16. Select one of the read operations for the `src` block RAM.

17. Right-click and select **Goto Source** to see the view shown in [Figure 6-25](#).

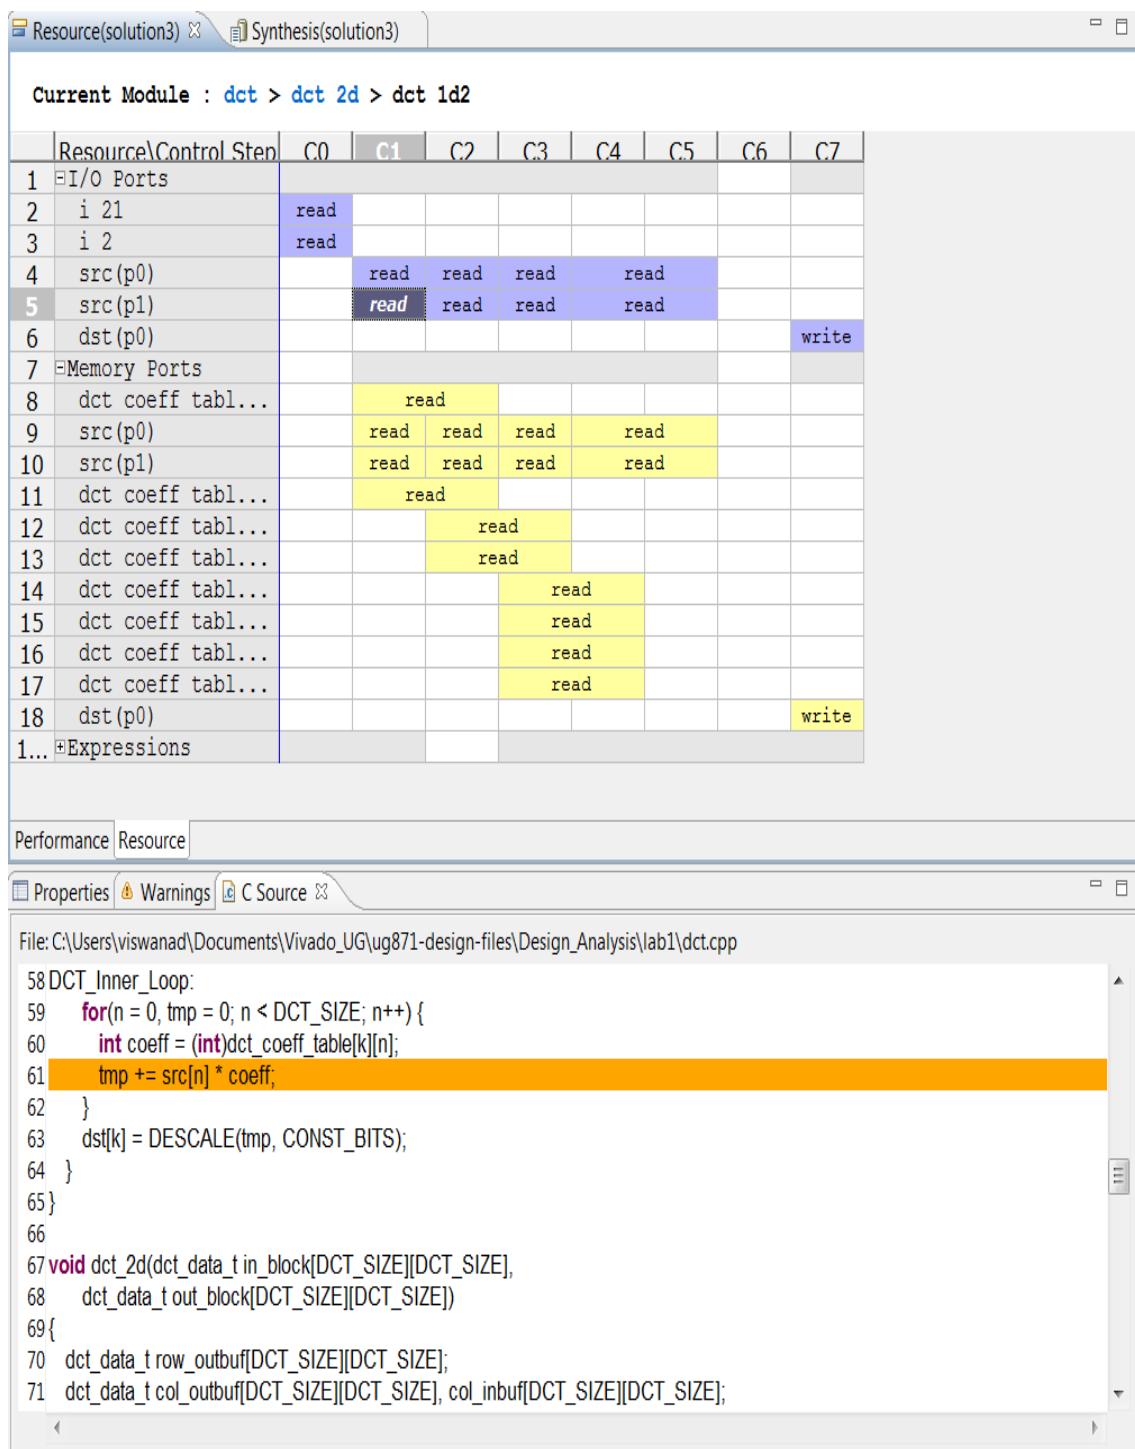


Figure 6-25: Memory Resource SRC and Source Code

Figure 6-25 shows this read on the `src` variable is from the read operation inside loop `DCT_Inner_Loop`. This loop was automatically unrolled when `DCT_Outer_Loop` was pipelined and all operations in this loop can occur in parallel (if data dependencies allow).

The eight reads are being forced to occur over multiple cycles because the array `src` is implemented as a block RAM in the RTL and a block RAM can only allow two reads (maximum) in any one clock cycle. In [Figure 6-25](#), the read operations take 2 clock cycles: a cycle to generate the address for the block RAM and a cycle to read the data. Only the launch (address generation cycle) is shown because it overlaps with the operation in the next clock cycle.

You can optimize the block RAM accesses using optimization directives to partition the block RAM. The array that function `dct_1d` accesses is defined as an input argument to the function and therefore resides outside this block.

- The input array to the first instance of `dct_1d` is `buf_2d_in` in function `dct`.
- The input array to the second instance of `dct_1d` is `col_inbuf` in function `dct_2d`.

In both cases, the arrays are 2-dimensional of size `DCT_SIZE` by `DCT_SIZE` (8x8). By default, this results in a single block RAM with 64 elements. Because the arrays are configured in the code in the form of Row by Column, we can partition the second dimension and create eight separate Block RAMs: one for each row, allowing the row data to be accessed in parallel.

18. Click the **Synthesis** perspective button to return to the main synthesis view.

Step 7: Partition Block RAMs and Analyze Concurrency

1. Select the **New Solution** toolbar button or use the menu **Project > New Solution** to create a new solution, `solution4`.
2. Click **Finish** and accept the defaults to create `solution4`.
3. Ensure the C source code is visible in the Information pane.
4. In the Directive tab:
 - a. In function `dct`, select array `buf_2d_in`.
 - b. Right-click and select **Insert Directive**.
 - c. In the **Directives Editor** dialog box, activate the **Directive** drop-down menu at the top and select **ARRAY_PARTITION**.
 - d. Set the type to **Complete**.
 - e. Change the **dimension** setting to 2 to partition the array along the second dimension.
 - f. Click **OK**.
5. Repeat this process for array `col_inbuf` in function `dct_2d`.

The **Directive** pane displays optimization directives, as shown in [Figure 6-26](#) (the two new directives are highlighted).

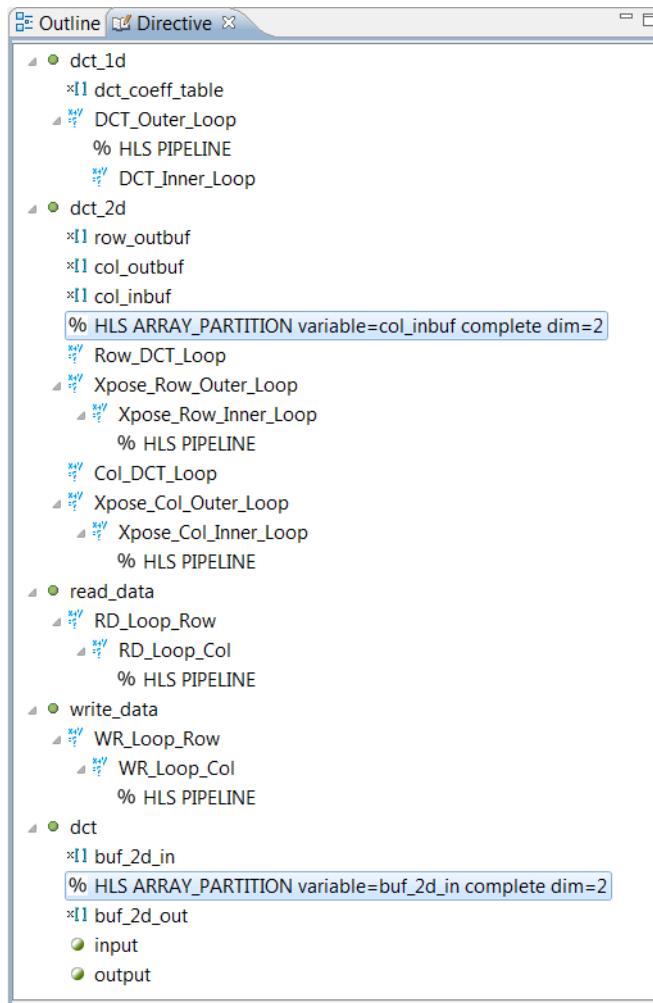


Figure 6-26: Optimization Directives for Array Partitioning

6. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
7. When synthesis completes, use the **Compare Reports** toolbar button to compare solutions 3 and 4.

Figure 6-27 shows the results of comparing solution3 and solution4. Improving access to the data in the src block RAM in the dct_1d block has improved the overall performance because the dct_1d block executes frequently.

Performance Estimates			
Timing (ns)			
Clock		solution3	solution4
ap_clk	Target	8.00	8.00
Estimated		8.74	8.85
Latency (clock cycles)			
		solution3	solution4
Latency	min	879	513
	max	879	513
Interval	min	880	514
	max	880	514

Figure 6-27: DCT Solution3 and Solution4 Comparison

You can review the impact of the partitioning directive on the device resource.

8. Click the **Analysis** perspective button to begin interactive design analysis.
9. In the **Module Hierarchy**, ensure module **dct** is selected.
10. Select the **Resource Profile** tab in the lower-left.
11. Expand the **Memories** and **Expressions** see the view in [Figure 6-28](#).

	BRAM	DSP	FF	LUT	Bits P0	Bits P1	Bits P2	Banks/Depth	Words	W*Bits*Banks
Instances(2)	2	8	1538	1268						
↳ Instances(2)	2	8	1538	1268						
↳ Memories(9)	1		256	16	144			9	128	2048
↳ buf_2d_out_U_1			0	0	16			1	64	1024
↳ buf_2d_in_6_L_0			32	2	16			1	8	128
↳ buf_2d_in_5_L_0			32	2	16			1	8	128
↳ buf_2d_in_4_L_0			32	2	16			1	8	128
↳ buf_2d_in_3_L_0			32	2	16			1	8	128
↳ buf_2d_in_7_L_0			32	2	16			1	8	128
↳ buf_2d_in_2_L_0			32	2	16			1	8	128
↳ buf_2d_in_1_L_0			32	2	16			1	8	128
↳ buf_2d_in_0_L_0			32	2	16			1	8	128
↳ Expressions(11)	0	0	112	72	38	45	8			
↳ +	0	0	112	54	23	23	0			
↳ icmp	0	0	0	6	11	13	0			
↳ select	0	0	0	8	2	5	8			
↳ xor	0	0	0	4	2	4	0			

Figure 6-28: DCT Resource Profile

The Resource Profile shows the resources being used at the current level of hierarchy (the block selected in the Module Hierarchy pane). [Figure 6-28](#) shows:

- This block has two I/O ports.
- Most of the area is due to instances (sub-blocks) within this block.
- There are nine memories, eight of which are the partitioned buf_2d_in block RAM. Since they are less than 1024 bits they are automatically implemented as LUTRAM.
- Most of the logic (expressions) at this level of hierarchy is due to adders, with some due to comparators and selectors.

The important point from the previous optimization is that you can see there are now additional memories due to the array partitioning optimization.

You still have a goal to ensure that the design can accept a new set of samples every 125 clock cycles. [Figure 6-28](#), however, shows that you can only accept new data every 525 clocks. This is much better than the original, pre-optimized design (approx. 3700 clock cycles), but further optimization is required.

Up to this point, you have focused on improving the latency and interval of each of the individual loops and functions in the design. You must now apply the dataflow optimization, which enables the individual loops and functions to execute in parallel, thus improving the overall design interval.

12. Click the **Synthesis** perspective button to return to the main synthesis view.

Step 8: Partition Block RAMs and Apply Dataflow optimization

1. Select the **New Solution** toolbar button or use the menu **Project > New Solution** to create a new solution, solution5.
2. Click **Finish** and accept the defaults to create solution5.
3. Ensure the C source code is visible in the Information pane.
4. In the **Directive** tab
 - a. Select the top-level function `dct`.
 - b. Right-click and select **Insert Directive**.
 - c. In the **Directives Editor** dialog box activate the **Directive** drop-down menu and select **DATAFLOW**.
 - d. Click **OK**.

The Directive pane now displays the following optimization directives (the new directive is highlighted).

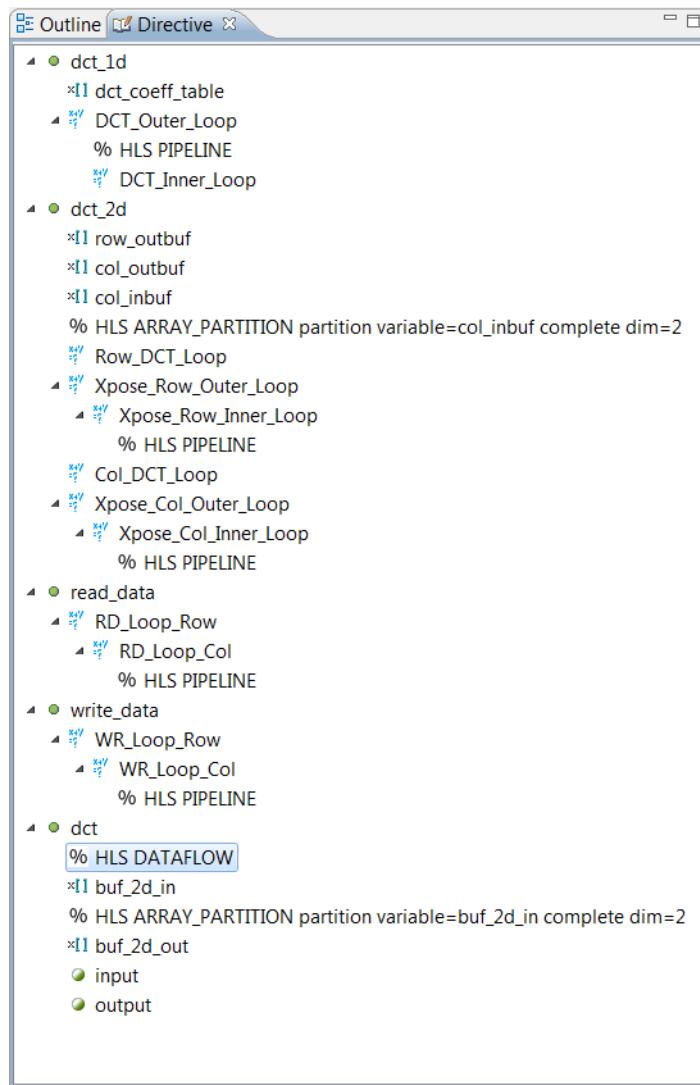


Figure 6-29: Dataflow Optimization for the DCT Design

5. Click the Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
6. When synthesis completes, use the **Compare Reports** toolbar button or the menu **Project > Compare Reports** to compare solutions 4 and 5.


Figure 6-30 shows the results of comparing solution4 and solution5, and you can see the interval has improved. The design takes 525 clocks cycles to produce the outputs but can now accept new inputs every 374 clocks.

Performance Estimates			
Timing (ns)			
Clock		solution4	solution5
ap_clk	Target	8.00	8.00
	Estimated	8.85	8.85
Latency (clock cycles)			
		solution4	solution5
Latency	min	513	512
	max	513	512
Interval	min	514	377
	max	514	377

Figure 6-30: DCT Solution4 and Solution5 Comparison

This is still greater than the 125 cycles required, so you must analyze the current performance.

- Click the **Analysis** perspective button to begin interactive design analysis.
- In the **Module Hierarchy**, you can see `dct_dct_2d` accounts for most of the interval. Ensure module `dct_2d` is selected to see the view in Figure 6-31.

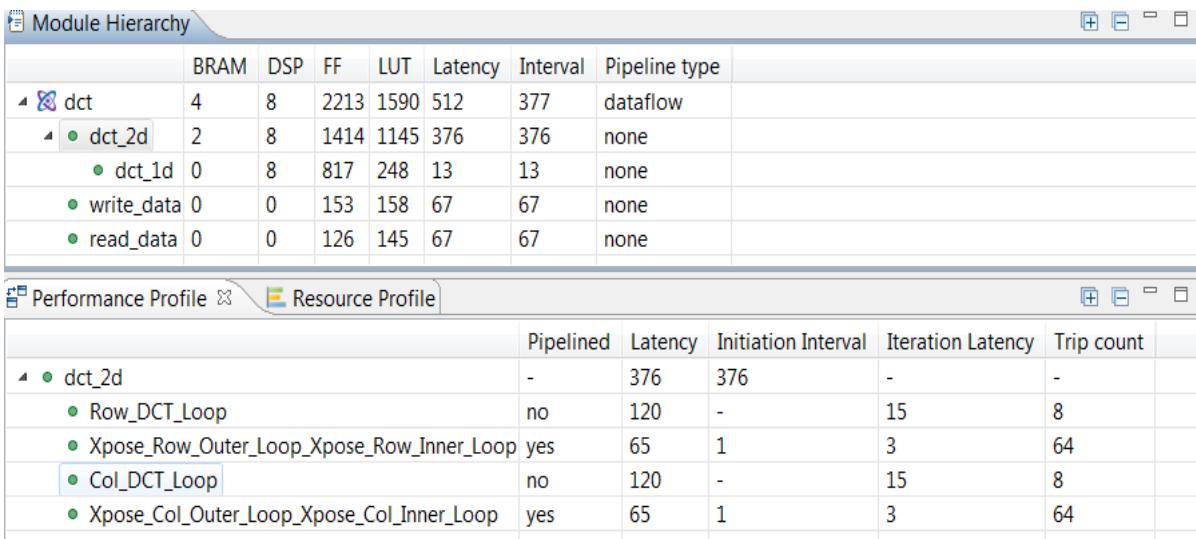

The screenshot displays two windows from the Xilinx Vivado IDE:

- Module Hierarchy:** A table showing resource usage (BRAM, DSP, FF, LUT) and latency for different modules. The `dct_2d` module is expanded to show its internal components: `dct_1d`, `write_data`, and `read_data`. The `dct` module itself has a latency of 377.
- Performance Profile:** A table showing latency and iteration latency for various loops. The `dct_2d` loop has a latency of 376 and an iteration latency of 376. Other loops like `Row_DCT_Loop`, `Xpose_Row_Outer_Loop_Xpose_Row_Inner_Loop`, `Col_DCT_Loop`, and `Xpose_Col_Outer_Loop_Xpose_Col_Inner_Loop` have lower latencies and iteration latencies.

Figure 6-31: DCT Analysis View after Dataflow Optimization

Here, you can see two things:

- The interval of the `dct` block is less than the sum of the individual latencies (for `read_data`, `dct_2d` and `write_data`). This means the blocks are operating in parallel.

- The interval of `dct` is the same as the interval for sub-block `dct_2d`. The `dct_2d` block is therefore the limiting factor.

Because the `dct_2d` block is selected in the Module Hierarchy and the Performance Profile shows the details for this block. [Figure 6-32](#) shows the interval is the same as the latency, so none of these blocks operate in parallel.

One way to have the blocks in `dct_2d` operate in parallel would be to pipeline the entire function. This, however, would unroll all the loops, which can sometimes lead to a large area increase. An alternative is use dataflow optimization on function `dct_2d`.

Another alternative is to use a less obvious technique: raise these loops up to the top-level of hierarchy, where they will be included in the dataflow optimization already applied to the top-level. This can be achieved by using an optimization directive to remove the `dct_2d` hierarchy: inline the `dct_2d` function.

Before performing this optimization, review the area increase caused by using dataflow optimization.

9. In the **Module Hierarchy**, ensure module `dct` is selected.
10. Activate the **Resource Profile** view.
11. Expand the memories to see the view in [Figure 6-32](#).

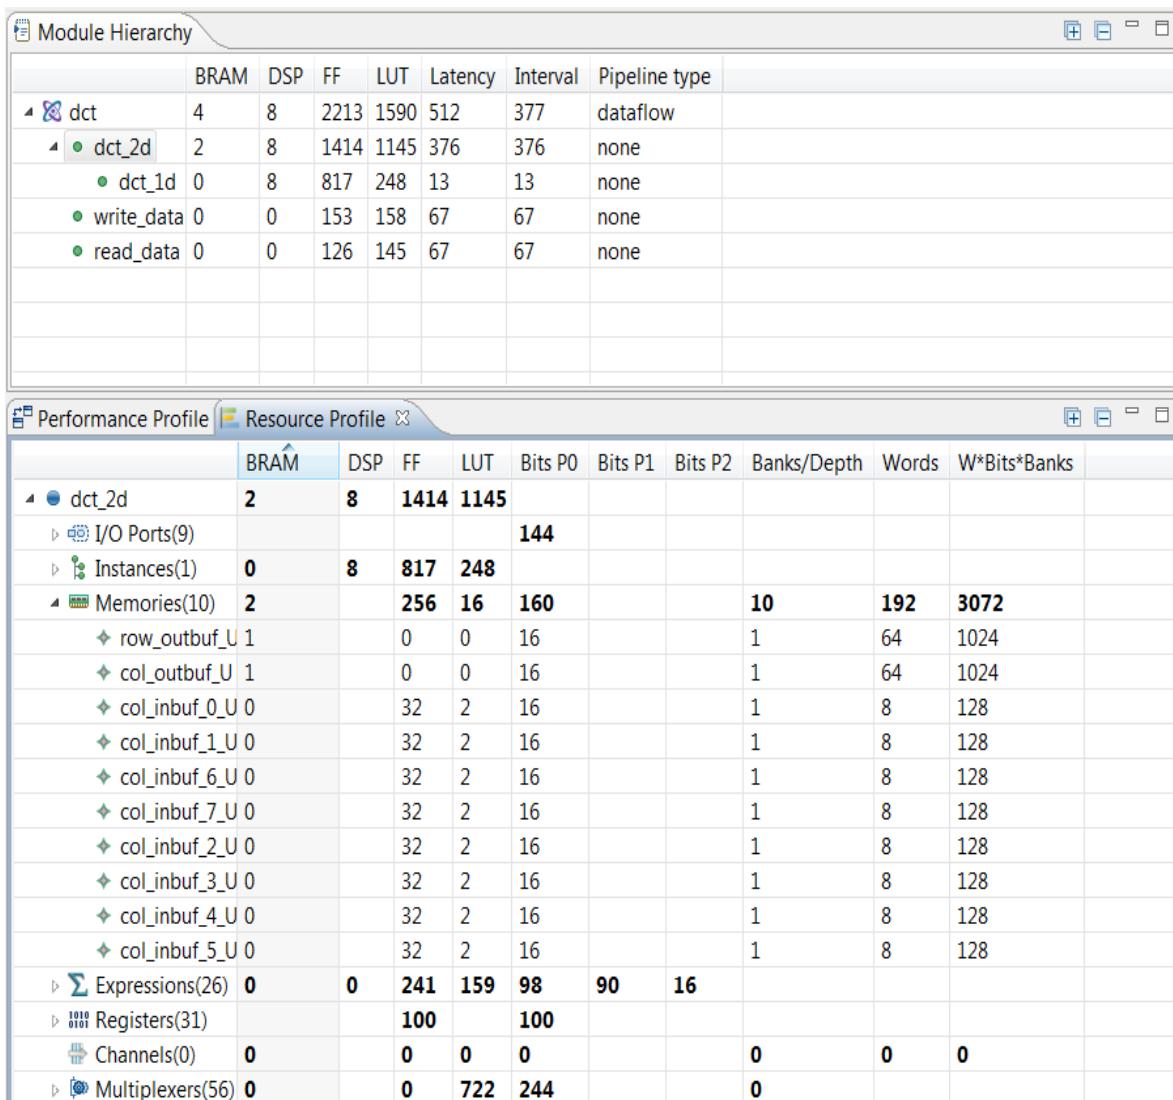


Figure 6-32: DCT Resource Profile

12. Click the **Synthesis** perspective button to return to the main synthesis view.

Step 9: Optimize the Hierarchy for Dataflow

- Select the **New Solution** toolbar button to create a new solution, solution6.
- Click **Finish** and accept the defaults to create solution6.
- Ensure the C source code is visible in the Information pane.
- In the **Directive** tab:
 - Select function `dct_2d`.
 - Right-click and select **Insert Directive**.

- c. In the **Directives Editor** dialog box activate the **Directive** drop-down menu at the top and select **INLINE**.
- d. Click **OK**.

The Directive pane now shows the following optimization directives (the new directive is highlighted).

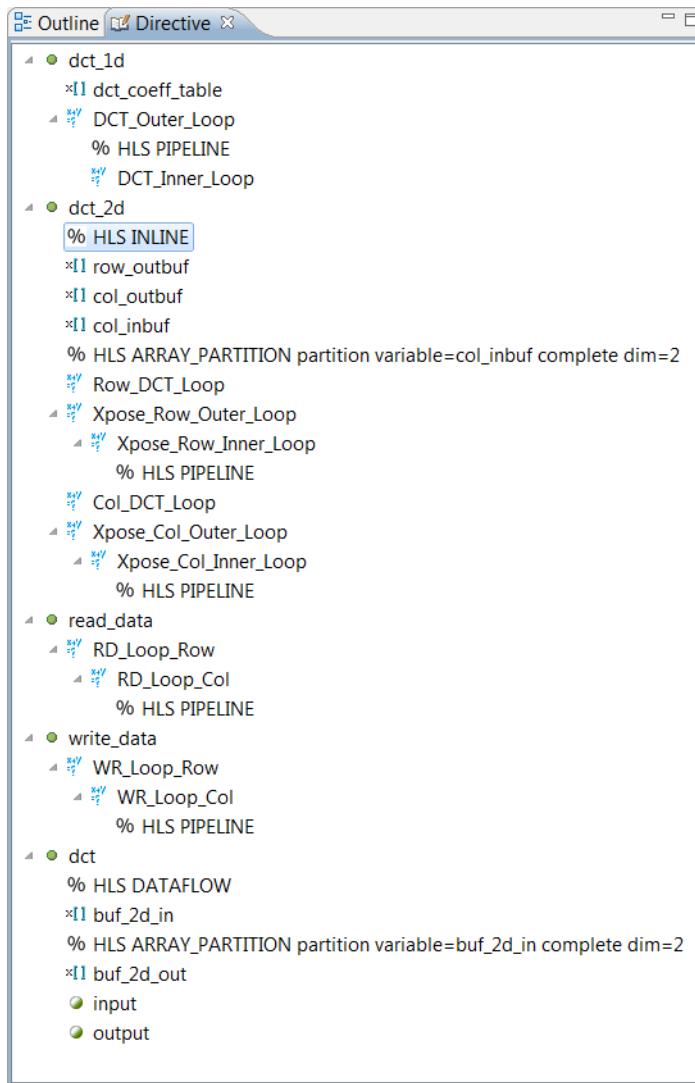


Figure 6-33: Dataflow Optimization for the DCT Design

5. Click the **Run C Synthesis** toolbar button to synthesizes the design to RTL.
6. When synthesis completes, use the **Compare Reports** toolbar button or the menu **Project > Compare Reports** to compare solutions 5 and 6.

Figure 6-34 shows the results of comparing solution5 and solution6. You can see the interval has improved substantially.

Performance Estimates			
Timing (ns)			
Clock		solution5	solution6
ap_clk	Target	8.00	8.00
	Estimated	8.85	8.85
Latency (clock cycles)			
		solution5	solution6
Latency	min	512	499
	max	512	499
Interval	min	377	114
	max	377	114

Figure 6-34: DCT Solution5 and Solution6 Comparison

The interval is now below the 125 clock target. This design can accept a new set of inputs data every 106 clock cycles.

Module Hierarchy							
	BRAM	DSP	FF	LUT	Latency	Interval	Pipeline type
dct	6	16	3295	1462	499	114	dataflow
Loop_Row_DCT_Loop_pr	0	8	844	285	113	113	none
Loop_Col_DCT_Loop_pr	0	8	844	285	113	113	none
write_data	0	0	153	158	67	67	none
Loop_Xpose_Col_Outer	0	0	158	160	67	67	none
Loop_Xpose_Row_Outer	0	0	130	147	67	67	none
read_data	0	0	126	145	67	67	none

Figure 6-35: DCT Solution6 Module Hierarchy

Conclusion

In this tutorial, you learned:

- How to analyze a design using the analysis perspective.
- How to cross-link operations in the views with the C code.
- How to apply and judge optimizations.
- A methodology for taking the initial design results and creating an implementation which satisfies the design goals.

Design Optimization

Overview

A crucial part of creating high quality RTL designs using High-Level Synthesis is having the ability to apply optimizations to the C code. High-Level Synthesis always tries to minimize the latency of loops and functions. To achieve this, within the loops and functions, it tries to execute as many operations as possible in parallel. At the level of functions, High-Level Synthesis always tries to execute functions in parallel.

In addition to these automatic optimizations, directives are used to:

- Execute multiple tasks in parallel, for example, multiple executions of the same function or multiple iterations of the same loop. This is pipelining.
- Restructure the physical implementation of arrays (block RAMs), functions, loops and ports to improve the availability of data and help data flow through the design faster.
- Provide information on data dependencies, or lack of them, allowing more optimizations to be performed.

The final optimization technique is to modify the C source code to remove unintended dependencies in the code that may limit the performance of the hardware.

This tutorial consists of two lab exercises. You may perform the analysis in these lab exercises using the Analysis perspective. A prerequisite for this tutorial is completion of the [Chapter 6, Design Analysis](#) tutorial.

Lab 1 Description

Contrast the uses of loop and function pipelining to create a design that can process one sample per clock. This lab includes examples that give you the opportunity to analyze the two most common causes for designs failing to meet performance requirements: loop dependencies and data flow limitations or bottlenecks.

Lab 2 Description

This lab shows how modifications to the code from Lab 1 can help overcome some performance limitations inherent, but unintended, in the code.

Tutorial Design Description

You can download the tutorial design file from the Xilinx Website. See the information in [Locating the Tutorial Design Files](#).

For this tutorial you use the design files in the tutorial directory `Vivado_HLS_Tutorial\Design_Optimization`.

The sample design you use in the lab exercise is a matrix multiplier function. The design goal is to process a new sample every clock period and implement the interfaces as streaming data interfaces.

Lab 1: Optimizing a Matrix Multiplier

This exercise uses a matrix multiplier design to show how you can fully optimize a design heavily based on loops. The design goal is to read one sample per clock cycle using a FIFO interface, while minimizing the area.

The analysis includes a comparison of a methodology that optimizes at the loop level with one that optimizes at the function level.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory `Vivado_HLS_Tutorial` is unzipped and placed in the location `C:\Vivado_HLS_Tutorial`. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the `Vivado_HLS_Tutorial` directory.*

Step 1: Create and Open the Project

1. Open the Vivado HLS Command Prompt.
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** ([Figure 7-1](#)).
 - On Linux, open a new shell.

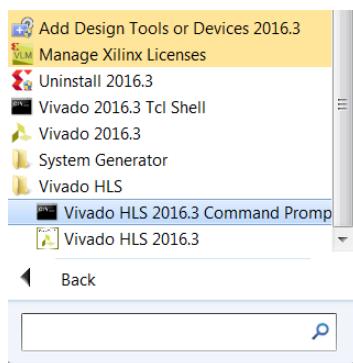


Figure 7-1: Vivado HLS Command Prompt

2. Using the command prompt window (Figure 7-2), change directory to the **Design Optimization** tutorial, lab1.
3. Execute the Tcl script to set up the Vivado HLS project, using the command `vivado_hls -f run_hls.tcl`, as shown in Figure 7-2.

```
C:\Vivado_HLS_Tutorial>cd Design_Optimization
C:\Vivado_HLS_Tutorial\Design_Optimization>cd lab1
C:\Vivado_HLS_Tutorial\Design_Optimization\lab1>vivado_hls -f run_hls.tcl
```

Figure 7-2: Setup the Design Optimization Tutorial Project

4. When Vivado HLS completes, open the project in the Vivado HLS GUI using the command `vivado_hls -p matrixmul_prj`, as shown in Figure 7-3.

```
@I [HLS-10] Creating and opening solution 'C:/Vivado_HLS_Tutorial/Design_Optimization/lab1/matrixmul_prj/solution1'.
@I [HLS-10] Cleaning up the solution database.
@I [HLS-10] Setting target device to 'xc7k160tfg484-1'.
@I [SYN-201] Setting up clock 'default' with a period of 13.3333ns.
  Compiling ../../../../matrixmul_test.cpp in debug mode
  Compiling ../../../../../../matrixmul.cpp in debug mode
    Generating csim.exe
Test passes.
@I [SIM-1] CSim done with 0 errors.
@I [LIC-101] Checked in feature [HLS]

C:\Vivado_HLS_Tutorial\Design_Optimization\lab1>vivado_hls -p matrixmul_prj
```

Figure 7-3: Open Design Optimization Project for Lab 1

5. Expand the **Sources** folder in the **Explorer** pane and double-click `matrixmul.cpp` to view the source code (Figure 7-4).

Scroll down the file to see that the source code has two input arrays, `a` and `b`, and output array `res`. Hold the mouse over the macros (as shown in Figure 7-4) to see that each is three-by-three for a total of nine elements.

```

46 #include "matrixmul.h"
47
48 void matrixmul(
49     mat_a_t a[MAT_A_ROWS][MAT_A_COLS],
50     mat_b_t b[MAT_B_ROWS][MAT_B_COLS],
51     result_t res[MAT_A_ROWS][MAT_B_COLS])
52{
53     // Iterate over the rows of the A matrix
54     Row: for(int i = 0; i < MAT_A_ROWS; i++) {
55         // Iterate over the columns of the B matrix
56         Col: for(int j = 0; j < MAT_B_COLS; j++) {
57             res[i][j] = 0;
58             // Do the inner product of a row of A and col of B
    }
}

```

Figure 7-4: Source Code for the Matrix Multiplier

Step 2: Synthesize and Analyze the Design

- Click the **Run C Synthesis** toolbar button to synthesize the design to **RTL**.

When synthesis completes, the synthesis report opens (Figure 7-5), and the **Performance Estimates** appears:

- The interval is 80 clock cycles. Because there are nine elements in each input array, the design takes approximately nine cycles per input read.
- The interval is one cycle longer than the latency, so there is no parallelism in the hardware at this point.
- The latency/interval is due to nested loops.
 - The inner loop called Product:
 - Has a latency of 2 clock cycles.
 - Has 6 clock cycles total for all iterations.
 - The Col loop:
 - It requires 1 clock to enter loop Product and 1 clock to exit.
 - It takes 8 clock cycles for each iteration ($1+6+1$).
 - Has 24 cycles for all iterations to complete.
 - The top-level loop has a latency of 26 clock cycles per iteration, for a total of 78 clock cycles for all iterations of the loop.

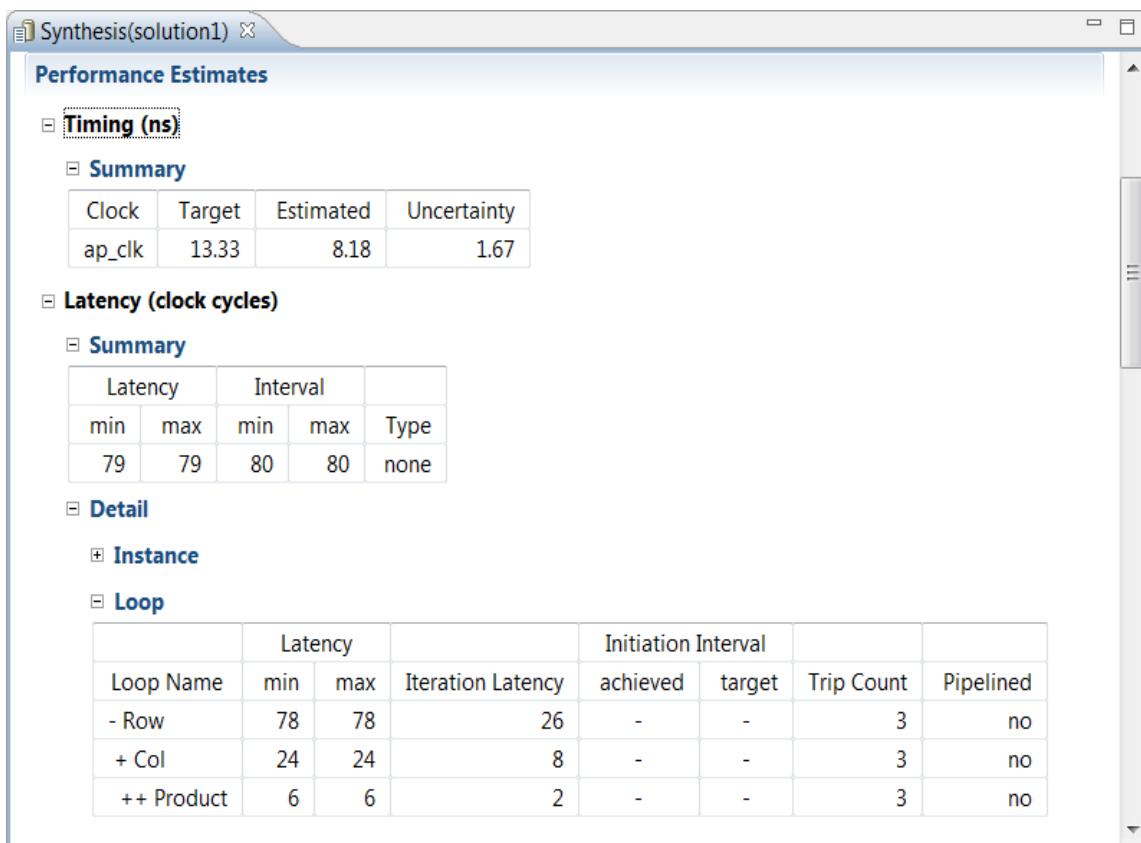


Figure 7-5: Synthesis Report for the Matrix Multiplier

You can do one of two things to improve the initiation interval: Pipeline the loops or pipeline the entire function. You begin by pipelining the loops and then compare those results to pipelining the entire function.

When pipelining loops, the initiation interval of the loops is the important metric to monitor. As seen in this exercise, even when the design reaches the stage at which the loop can process a sample every clock cycle, the initiation interval of the function is still reported as the time it takes for the loops contained within the function to finish processing all data for the function.

Step 3: Pipeline the Product Loop

1. Select the **New Solution** toolbar button or use the menu **Project > New Solution** to create a new solution, `solution2`.
2. Click **Finish** and accept the defaults to create `solution2`.
3. Ensure the C source code is visible in the Information pane.

When pipelining nested loops, you realize the greatest benefit by pipelining the inner-most loop, which processes a sample of data. High-Level Synthesis automatically applies loop

flattening, collapsing the nested loops, removing the loop transitions (essentially creating a single loop with more iterations but overall fewer clock cycles).

4. In the **Directive** tab:
 - a. Select loop **Product**.
 - b. Right-click and select **Insert Directive**.
 - c. In the **Directives Editor** dialog box, activate the **Directive** drop-down menu at the top and select **PIPELINE**.
 - d. Click **OK**. With the default options, an initiation interval (II) of 1 (one new loop iteration per clock) will be the default.

The Directive pane should show the following optimization directives. (The new directive is highlighted.)

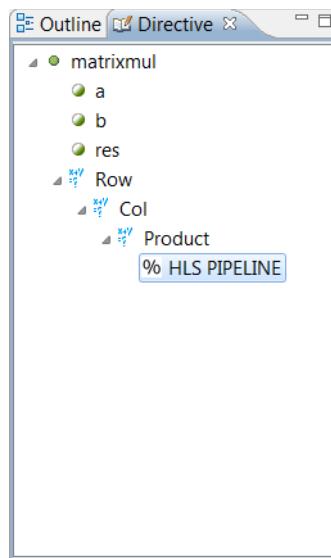


Figure 7-6: Initial Pipeline Directive

5. Click the **Run C Synthesis** toolbar button to synthesize the design to **RTL**.

During synthesis, the information reported in the Console pane shows loop flattening was performed on loop Row and that the default initiation internal target of 1 could not be achieved on loop Product due to a dependency.

```
INFO: [XFORM 203-541] Flattening a loop nest 'Row' (matrixmul.cpp:54:37) in function 'matrixmul'.
...
INFO: [SCHED 204-61] Pipelining loop 'Product'.
WARNING: [SCHED 204-68] Unable to enforce a carried dependency constraint (II = 1,
distance = 1)
      between 'store' operation (matrixmul.cpp:60) of variable 'tmp_8', matrixmul.cpp:60
      on array 'res' and 'load' operation ('res_load', matrixmul.cpp:60) on array 'res'.
INFO: [SCHED 204-61] Pipelining result: Target II: 1, Final II: 2, Depth: 2.
```

The synthesis report (Figure 7-7) shows that although the Product loop is pipelined with an interval of 2, the interval of top-level loop is not pipelined.

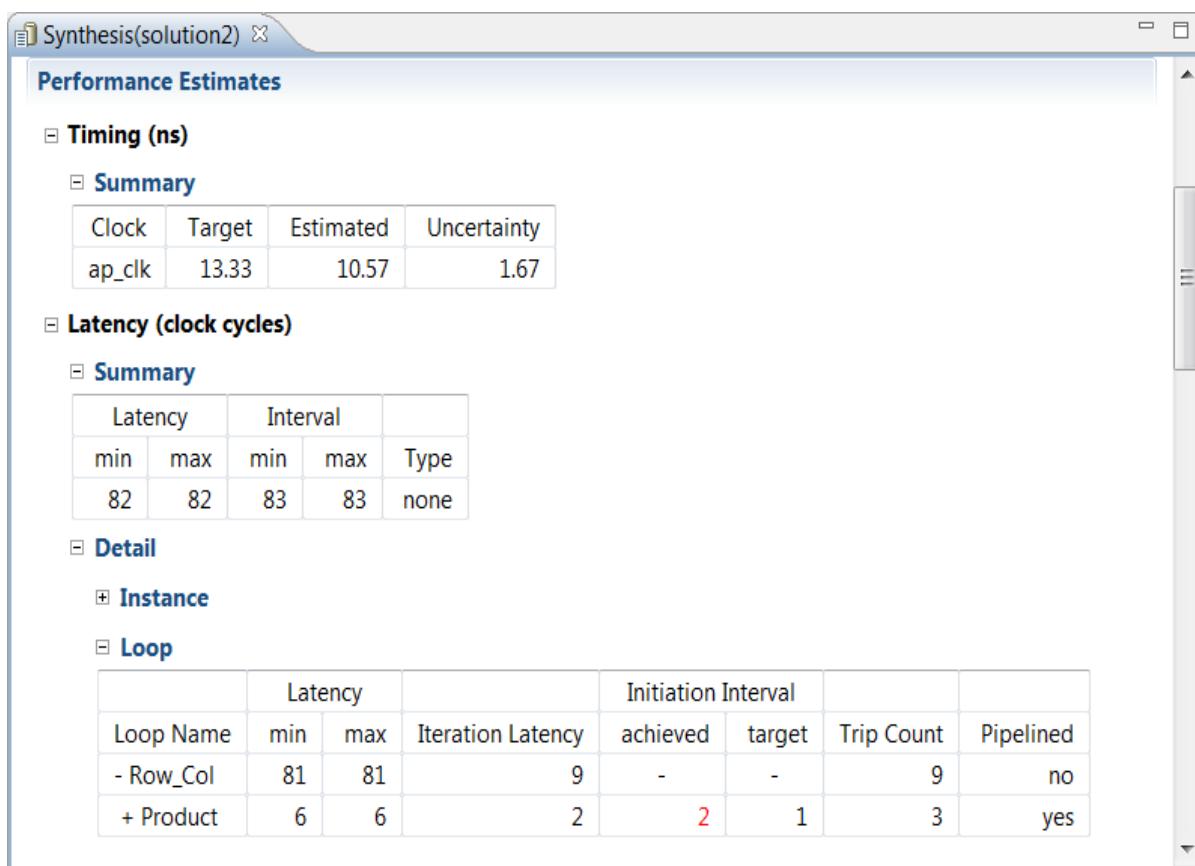


Figure 7-7: Matrixmul Initial Pipeline Report

The reason the top-level loop is not pipelined is that loop flattening only occurred on loop Row_Col. There was no loop flattening of loop Col into the Product loop. To understand why loop flattening was unable to flatten all nested loops, use the Analysis perspective.

6. Open the **Analysis** perspective.
7. In the **Performance View**, expand loops **Row_Col** and **Product**.
8. Select the write operation in state C1.
9. Right-click and select **Goto Source** to see the view in Figure 7-8.

The write operation in state C1 is due to the code that sets res to zero before the Product loop. Because res is a top-level function argument, it is a write to a port in the RTL: This operation must happen before the operations in loop Product are executed. Because it is not an internal operation but has an impact on the I/O behavior, this operation cannot be moved or optimized. This prevents the Product loop from being flattened into the Row_Col loop.

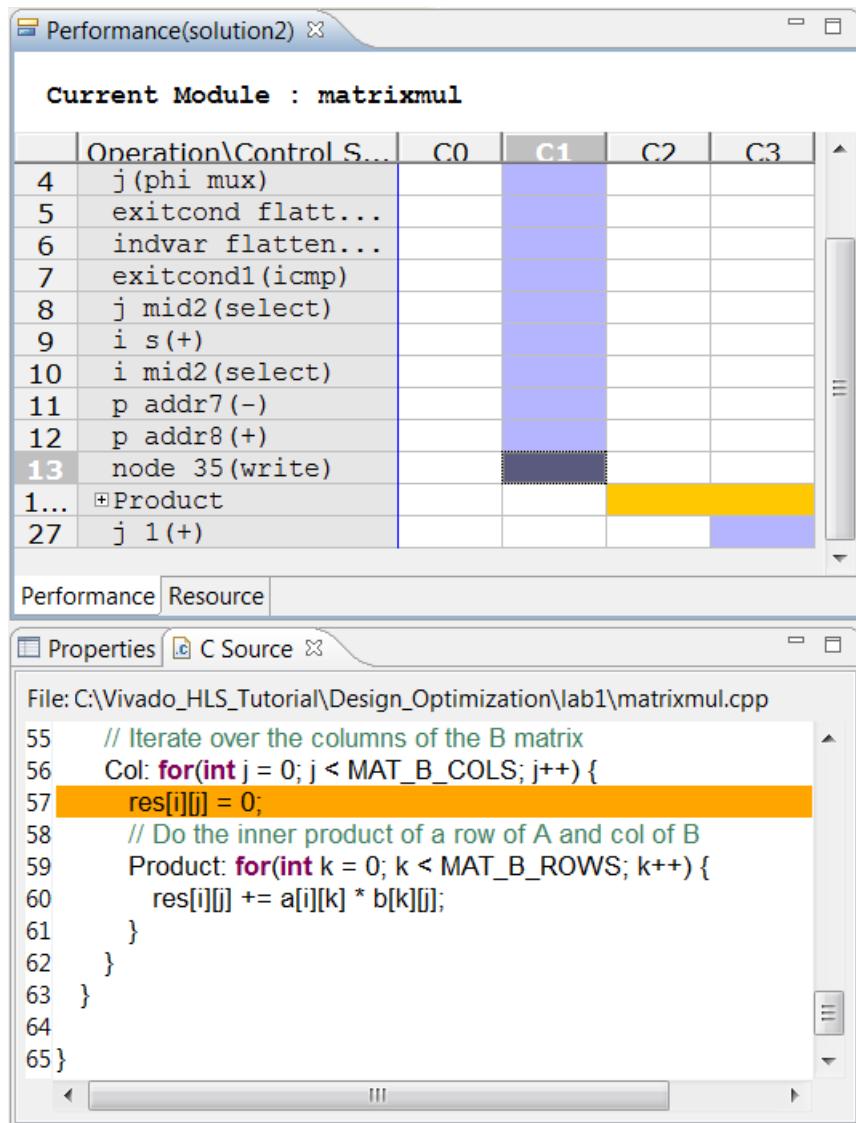


Figure 7-8: Matrixmul Initial Performance View

More importantly, it is worth addressing why only an initiation interval (II) of 2 was possible for the Product loop (as shown in [Figure 7-7](#)).

The message SCHED-68 in the console pane (and file `vivado_hls.log`) tells you:

```
WARNING: [SCHED 204-68] Unable to enforce a carried dependency constraint (II = 1,
distance = 1)
      between 'store' operation (matrixmul.cpp:60) of variable 'tmp_8', matrixmul.cpp:60
      on array 'res' and 'load' operation ('res_load', matrixmul.cpp:60) on array 'res'.
```

- The issue is a carried dependency. This is a dependency between an operation in one iteration of a loop and an operation in a different iteration of the same loop. For example, an operation when k=1 and when k=2 (where k is the loop index).
- The first operation is a load (memory read operation) on array res on line 60.

- The second operation is a store (memory write operation) on array res on line 60.

From [Figure 7-9](#) you can see line 60 is a read from array res (due to the `+=` operator) and a write to array res. An array is mapped into a block RAM by default and the details in the Performance View can show why this conflict occurred.

The Performance view shows in which states the operations are scheduled. [Figure 7-9](#) shows that two of the operations are shown in red. These are the operations which have a dependency between loop iterations. If you double-click on any of these red operations, the Critical Pipeline Dependence windows opens, showing two iterations of the loop over multiple clock cycles.

The first iteration of the loop shows the states in which the operations occur. The read in states 2 and 3, and the write in state 3. The operation in the next iteration must start 1 cycle after this, because the 2nd read cannot occur until the 1st write has finished: the operations in each iteration of the loop are to a different address and only 1 address can be applied at the same time.

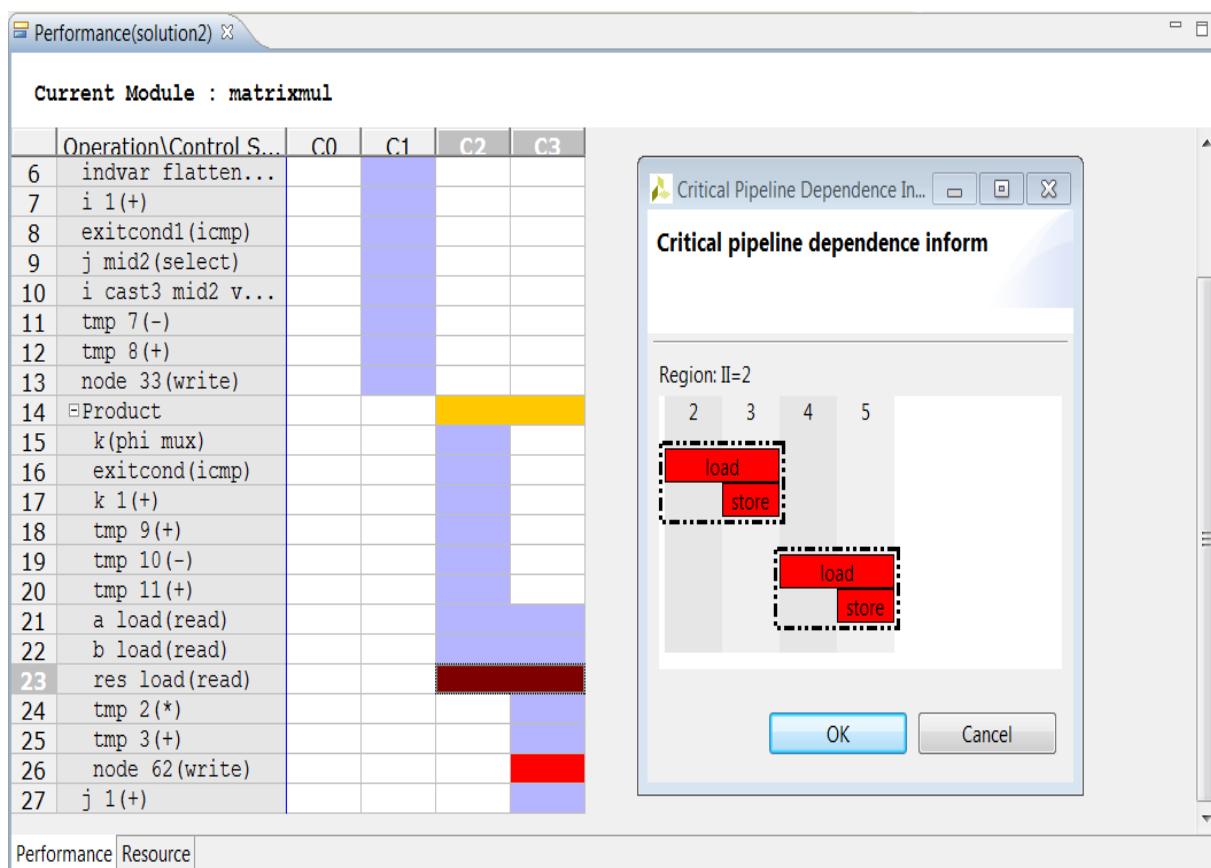


Figure 7-9: Carried Dependency Analysis

You cannot pipeline the Product loop with an initiation interval of 1. The next lab exercise shows how re-writing the code can remove this limitation. In this lab exercise you will continue to optimize the code as it is.

The next step is to pipeline the loop above, the Col loop. This automatically unrolls the Product loop and creates more operators and hence more hardware resources, but it ensures there is no dependency between different iterations of the Product loop.

10. Return to the **Synthesis** perspective.

Step 4: Pipeline the Col Loop

1. Select the **New Solution** toolbar button to create a new solution, **solution3**.
2. Because solution2 already has a directive added, use the drop-down menu to select **solution1** as the source for existing directives and constraints (solution1 has none).
3. Click **Finish** and accept the default solution name, solution3.
4. Open the C source code `matrixmul.cpp` to make it visible in the Information pane.
5. In the **Directive** tab:
 - a. Select loop **Col**.
 - b. Right-click and select **Insert Directive**.
 - c. In the **Directives Editor** dialog box activate the **Directive** drop-down menu at the top and select **PIPELINE**.
 - d. Click **OK**. With the default options, an initiation interval (II) of 1 (one new loop iteration per clock) becomes the default.

The Directive pane, shown below, displays the following optimization directives (the new directive is highlighted).

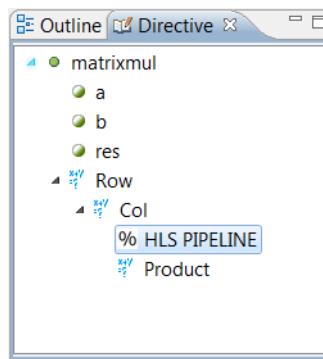


Figure 7-10: Col Pipeline Directive

6. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.

During synthesis, the information reported in the Console pane shows that loop Product was unrolled, loop flattening was performed on loop Row, and the default initiation internal target of 1 could not be achieved on loop Row_Col due resource limitations on the memory for array a.

```
INFO: [XFORM 203-502] Unrolling all sub-loops inside loop 'Col' (matrixmul.cpp:56) in
function 'matrixmul' for pipelining.
INFO: [XFORM 203-501] Unrolling loop 'Product' (matrixmul.cpp:59) in function
'matrixmul' completely.
INFO: [XFORM 203-541] Flattening a loop nest 'Row' (matrixmul.cpp:54:37) in function
'matrixmul'.
...
...
INFO: [SCHED 204-61] Pipelining loop 'Row_Col'.
WARNING: [SCHED 204-69] Unable to schedule 'load' operation ('a_load_1',
matrixmul.cpp:60) on array 'a' due to limited memory ports.
INFO: [SCHED 204-61] Pipelining result: Target II: 1, Final II: 2, Depth: 3.
```

Reviewing the synthesis report shows, as noted above, that the interval for loop Row_Col is only two: the target is to process one sample every cycle. Once again, you can use the Analysis perspective to highlight why the initiation target was not achieved.

7. Open the **Analysis** perspective.
8. In the **Performance View**, expand the Row_Col loop

The operations on array a (mentioned in the SCHED-69 message above) are highlighted in [Figure 7-11](#). There are three read operations on array a. Two operations start in state C1 and a third read operation starts in state C2.

Arrays are implemented as block RAMs and arrays which are arguments to the function are implemented as block RAM ports. In both cases a block RAM can only have a maximum of two ports (for dual-port block RAM). By accessing array a through a single block RAM interface, there are not enough ports to be able to read all three values in one clock cycle.

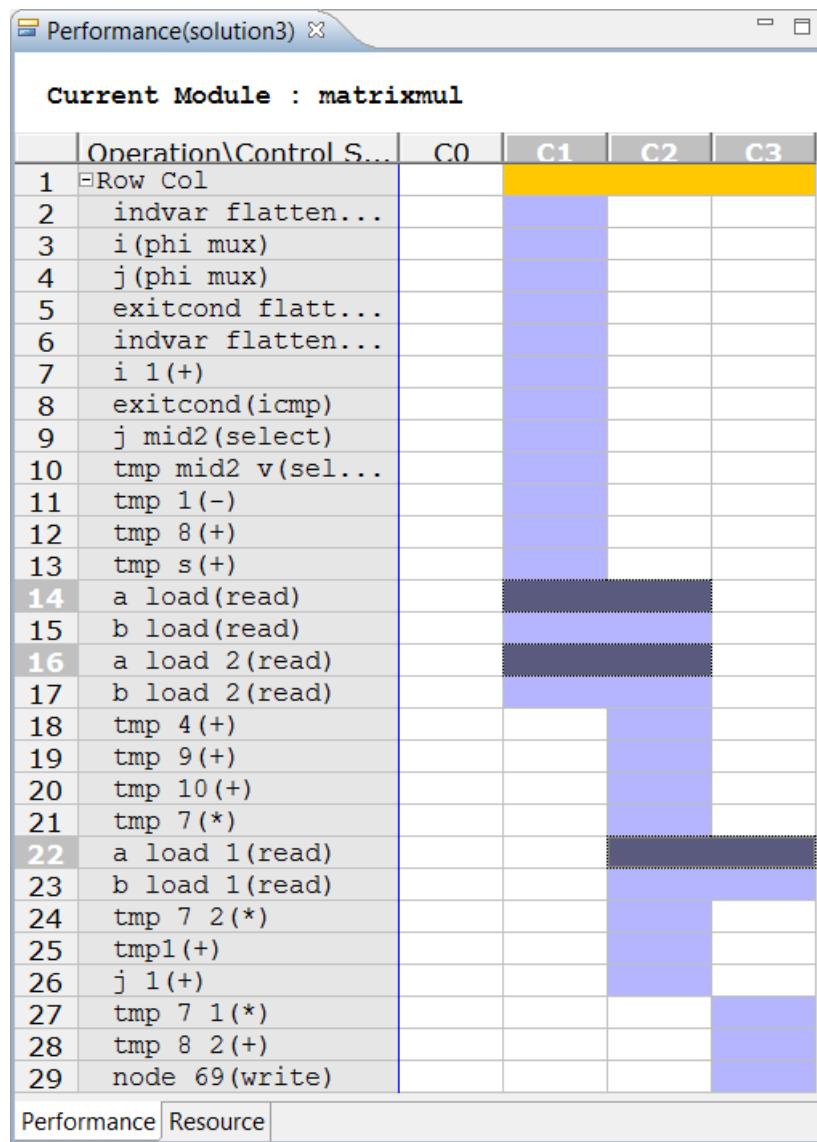


Figure 7-11: Matrixmul Pipeline Col Performance View

Another way to view this resource limitation is to use the Resource pane.

9. Click the **Resource** tab.
10. Expand the **Memory Ports** to see the view shown in Figure 7-12.

In Figure 7-12 the 2-cycle read operations in state C1 overlap with those starting in state C2 and so only a single cycle is visible; however, it is clear that this resource is used in multiple states.

In looking at this view, it is clear that even when the issue with port a is resolved, the same issue occurs with port b: it also has to perform 3 reads.

High-Level Synthesis can only report one schedule error or warning at a time, because, as soon as the first issue occurs, the actions to create an achievable schedule invalidates any other infeasible schedules.

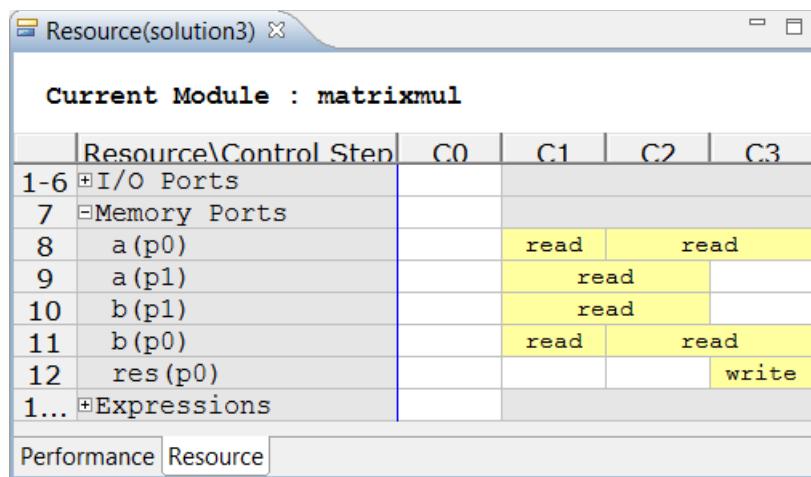


Figure 7-12: Matrixmul Pipeline Col Resource View

High-Level Synthesis allows arrays to be partitioned, mapped together and re-shaped. These techniques allow the access to array to be modified without changing the source code.

11. Return to the **Synthesis** perspective.

Step 5: Reshape the Arrays

1. Select the **New Solution** toolbar button or use the menu **Project > New Solution** to create a new solution, solution4.
2. Click **Finish** and accept the default solution name solution4.

Because the loop index for the Product loop is k, both arrays should be partitioned along their respective k dimension: the design needs to access more than two values of k in each clock cycle.

For array a, this is dimension 2 because its access pattern is a [i] [k]; for array b, this is dimension 1 because its access pattern is b [k] [j].

Partitioning these arrays creates MAT_A_COLS arrays - in this case, MAT_A_COLS number ports. Alternatively, we can use re-shape instead of partition allowing one wide array (port) to be created instead of k ports.

After this transformation, the data in the block RAM outside this block must be reshaped in an identical manner: if this process is not done by HLS, the data must be arranged as:

- For array a: MAT_A_ROWS elements, each of width data_word_size times MAT_A_COLS.

- For array b: MAT_B_COLS elements, each of width data_word_size times MAT_B_COLS.
3. Open the C source code `matrixmul.cpp` to make it visible in the Information pane.
 4. In the **Directive** tab, do the following:
 - a. Select variable **a**.
 - b. Right-click and select **Insert Directive**.
 - c. In the **Directives Editor** dialog box activate the **Directive** drop-down menu at the top and select **ARRAY_reshape**.
 - d. Set the dimension to **2**.
 - e. Click **OK**.
 5. Repeat this process for variable **b**, but set the **dimension** to **1**.

The Directive pane should show the following optimization directives.

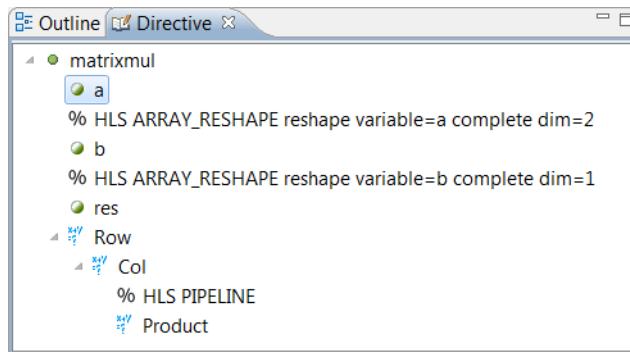


Figure 7-13: Array Reshape Directive

6. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.

The synthesis report shows the top-level loop Row_Col is now processing data at 1 sample per clock period ([Figure 7-14](#)).

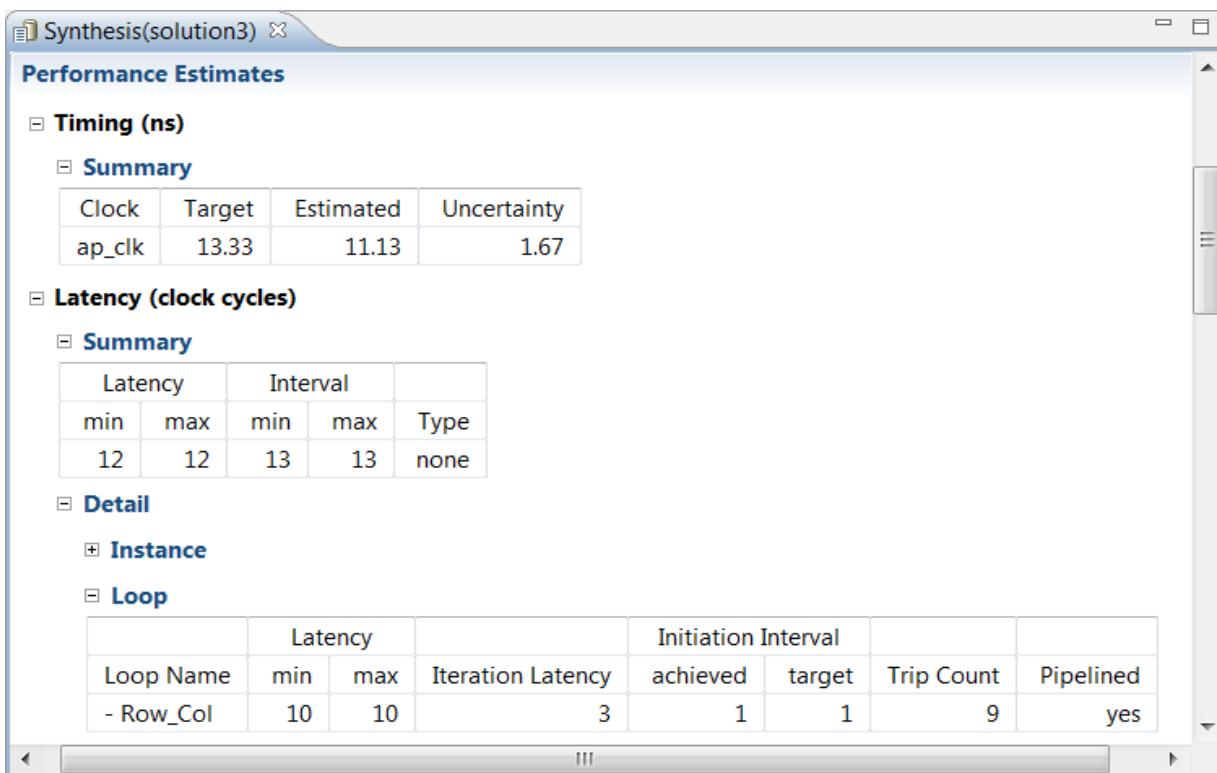


Figure 7-14: Optimized Loop Processing Report

- The top-level module takes 12 clock cycles to complete.
- The Row_Col loop outputs a sample after 3 cycles (iteration latency).
- It then reads 1 sample every cycle (Initiation Interval).
- After 9 iterations/samples (Trip count) it completes all samples.
- $3 + 9 = 12$ clock cycles

The function can then complete and return to start to process the next set of data.

Now, change the block RAM interfaces to FIFO interfaces to allow for streaming data.

Step 6: Apply FIFO Interfaces

1. Select the **New Solution** toolbar button to create a new solution.
2. Click **Finish** and accept the default solution name, solution5.
3. Open the C source code `matrixmul.cpp` to make it visible in the Information pane.
4. In the **Directive** tab, do the following:
 - a. Select variable **a**.
 - b. Right-click and select **Insert Directive**.

- c. In the **Directives Editor** dialog box activate the **Directive** drop-down menu at the top and select **INTERFACE**.
- d. Click the **mode** drop-down menu to select `ap_fifo`.
- e. Click **OK**.
5. Repeat this process for variables `b` and variable `res`.

The Directive pane displays the following optimization directives. (The new directives are highlighted).

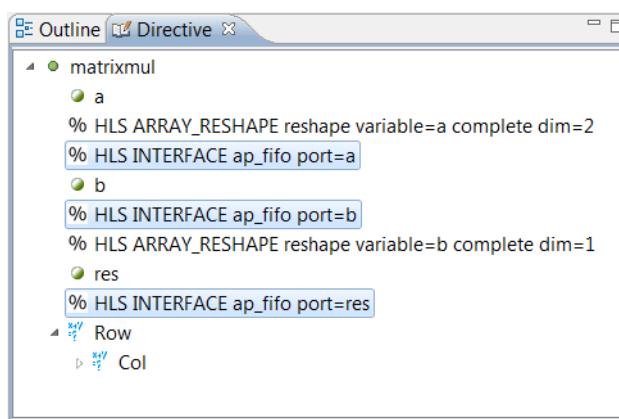


Figure 7-15: Matrixmul FIFO Directives

6. Click the **Run C Synthesis** toolbar button to synthesizes the design to RTL.

Figure 7-16 shows the **Console** display after synthesis runs.

```

Vivado HLS Console
@I [HLS-10] Opening project 'C:/Vivado_HLS_Tutorial/Design_Optimization/lab1/matrixmul_prj'.
@I [HLS-10] Adding design file 'matrixmul.cpp' to the project.
@I [HLS-10] Adding test bench file 'matrixmul_test.cpp' to the project.
@I [HLS-10] Opening solution 'C:/Vivado_HLS_Tutorial/Design_Optimization/lab1/matrixmul_prj/solution5'.
@I [SYN-201] Setting up clock with a period of 13.3333ns.
@I [HLS-10] Setting target device to 'xc7k160tfg484-1'.
@I [HLS-10] Importing test bench file 'matrixmul_test.cpp' ...
@I [HLS-10] Analyzing design file 'matrixmul.cpp' ...
@I [HLS-10] Validating synthesis directives ...
@I [HLS-10] Checking synthesizability ...
@E [SYNCHK-91] Port 'res' (matrixmul.cpp:51) of function 'matrixmul' cannot be set to a FIFO as it has
@I [SYNCHK-10] 1 error(s), 0 warning(s).

```


Figure 7-16: FIFO Synthesis Warning

From the code shown in Figure 7-17, array `res` performs writes in the following sequence (`MAT_B_COLS = MAT_B_ROWS = 3`):

- Write to `[0][0]` on line57.

- Then a write to [0][0] on line 60.
- Then a write to [0][0] on line 60.
- Then a write to [0][0] on line 60.
- Write to [0][1] on line 57 (after index J increments).
- Then a write to [0][1] on line 60.

Four consecutive writes to address [0][0] does not constitute a streaming access pattern; this is random access.

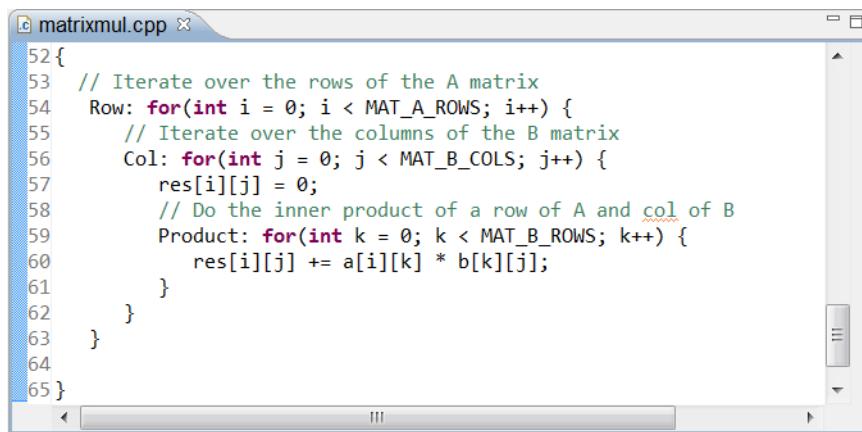

```
matrixmul.cpp
52 {
53     // Iterate over the rows of the A matrix
54     Row: for(int i = 0; i < MAT_A_ROWS; i++) {
55         // Iterate over the columns of the B matrix
56         Col: for(int j = 0; j < MAT_B_COLS; j++) {
57             res[i][j] = 0;
58             // Do the inner product of a row of A and col of B
59             Product: for(int k = 0; k < MAT_B_ROWS; k++) {
60                 res[i][j] += a[i][k] * b[k][j];
61             }
62         }
63     }
64 }
65 }
```

Figure 7-17: Matrixmul Code

Examining the code in Figure 7-17 reveals that there are similar issues reading arrays a and b. It is impossible to use a FIFO interface for data access with the code as written. To use a FIFO interface, the optimization directives available in Vivado High-Level Synthesis are inadequate because the code currently enforces a certain order of reads and writes. Further optimization requires a re-write of the code, which you accomplish in Lab 2.

Before modifying the code, however, it is worth pipelining the function instead of pipelining the loops to contrast the difference in the two approaches.

Step 7: Pipeline the Function

1. Select the **New Solution** toolbar button to create a new solution, solution6.



IMPORTANT: In this step, copy the directives from solution4 as this solution does not have FIFO interfaces specified.

2. Select **solution4** from both the drop down menus in the **Options** section. The Solution Wizard appears as shown in Figure 7-18.

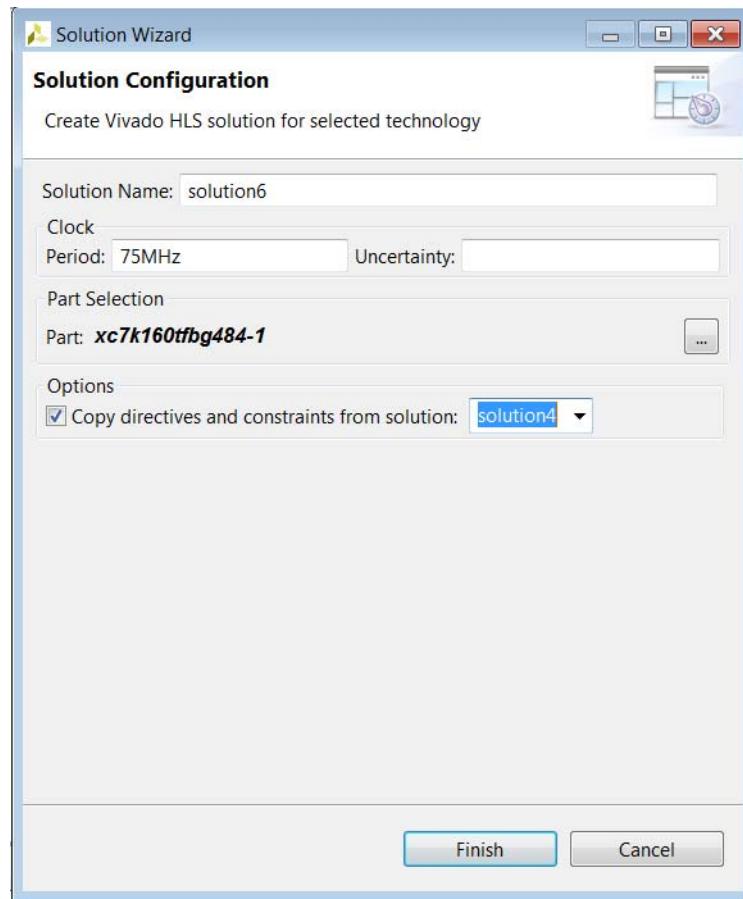


Figure 7-18: New Solution Based on Solution4 Directives

3. Click **Finish** and accept the default solution name, solution6.
4. Open the C source code `matrixmul.cpp` to make it visible in the Information pane.
5. In the **Directive** tab:
 - a. Select the pipeline directive on loop **Col**.
 - b. Right-click and select **Remove Directive**.
 - c. Select the top-level function **matrixmul**.
 - d. Right-click and select **Insert Directive**.
 - e. In the **Directives Editor** dialog box activate the **Directive** drop-down menu at the top and select **PIPELINE**.
 - f. Click **OK**.

The **Directives** tab should appear as [Figure 7-19](#).

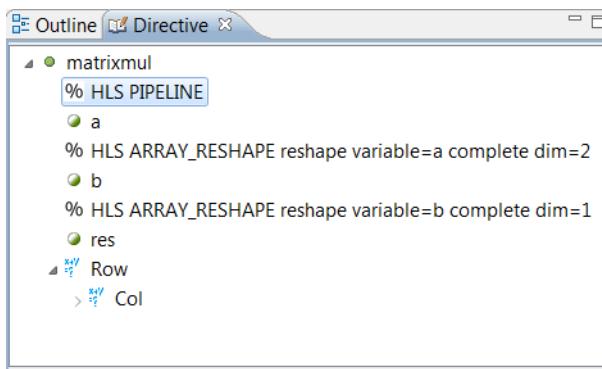


Figure 7-19: Directives for Solution6

6. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
7. Click the **Compare Reports** toolbar button.
 - a. Add solution4.
 - b. Add solution6.
 - c. Click **OK**.

The comparison of solutions 4 and 6 is shown in [Figure 7-20](#).

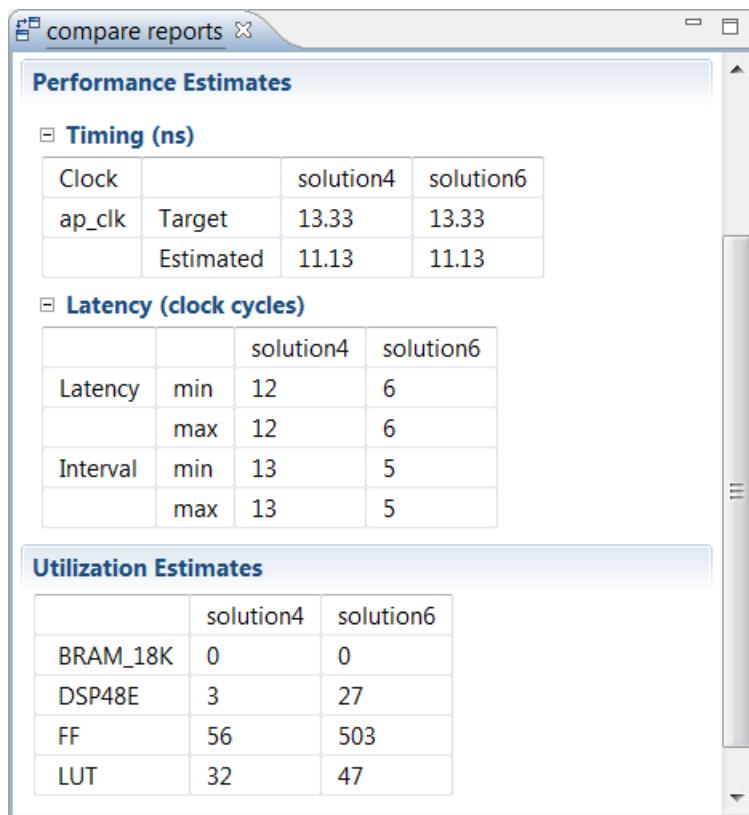


Figure 7-20: Loop Versus Function Pipelining

The design now completes in fewer clocks and can start a new transaction every 5 clock cycles. However, the area and resources have increased substantially because all the loops in the design were unrolled.

```

INFO: [XFORM 203-502] Unrolling all sub-loops inside loop 'Col' (matrixmul.cpp:56) in
function 'matrixmul' for pipelining.
INFO: [XFORM 203-501] Unrolling loop 'Product' (matrixmul.cpp:59) in function
'matrixmul' completely.
INFO: [XFORM 203-541] Flattening a loop nest 'Row' (matrixmul.cpp:54:37) in function
'matrixmul'.

```

Pipelining loops allows the loops to remain rolled, thus providing a good means of controlling the area. When pipelining a function, all loops contained in the function are unrolled, which is a requirement for pipelining. The pipelined function design can process a new set of 9 samples every 5 clock cycles. This exceeds the requirement of 1 sample per clock because the default behavior of High-Level Synthesis is to produce a design with the highest performance.

The pipelined function results in the best performance. However, if it exceeds the required performance, it might take multiple additional directives to slow the design down. Pipelining loops gives you an easy way to control resources, with the option of partially unrolling the design to meet performance.

Lab 2: C Code Optimized for I/O Accesses

In Lab 1, you were unable to use streaming interfaces. The nature of the C code, which specified multiple accesses to the same addresses, prevented streaming interfaces being applied.

- In a streaming interface, the values must be accessed in sequential order.
- In the code, the accesses were also port accesses, which High-Level Synthesis is unable to move around and optimize. The C code specified writing the value zero to port `res` at the start of every product loop. This may be part of the intended behavior. HLS cannot simply decide to change the specification of the algorithm.

The code intuitively captured the behavior of a matrix multiplication, but it prevented a required behavior in the hardware: streaming accesses.

This lab exercise uses an updated version of the C code you worked with in Lab 1. The following explains how the C code was updated.

[Figure 7-21](#) shows the I/O access pattern for the code in Lab 1. Out of necessity the address values are shown in a small font.

As variables `i`, `j` and `k` iterate from 0 to 3, the lower part of [Figure 7-21](#) shows the addresses generated to read `a`, `b` and write to `res`. In addition, at the start of each Product loop, `res` is set to the value zero.

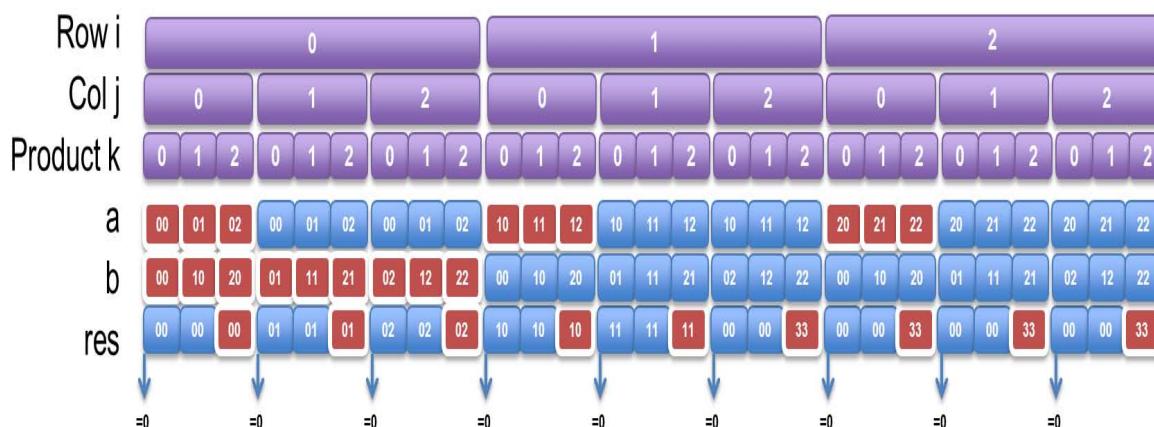



Figure 7-21: Matrix Multiplier Address Accesses

To have a hardware design with sequential streaming accesses, the ports accesses can only be those shown highlighted in red. For the read ports, the data must be cached internally to ensure the design does not have to re-read the port. For the write port `res`, the data must be saved into a temporary variable and only written to the port in the cycles shown in red.

The C code in this lab reflects this behavior.

Step 1: Create and Open the Project


1. From the Vivado HLS command prompt used in Lab 1, change to the lab2 directory as shown in [Figure 7-22](#).
2. Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.

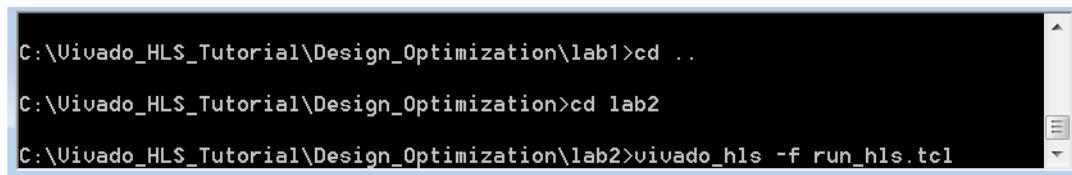

```
C:\Vivado_HLS_Tutorial\Design_Optimization\lab1>cd ..  
C:\Vivado_HLS_Tutorial\Design_Optimization>cd lab2  
C:\Vivado_HLS_Tutorial\Design_Optimization\lab2>vivado_hls -f run_hls.tcl
```

Figure 7-22: Setup for Interface Synthesis Lab 2

3. Open the Vivado HLS GUI project by typing `vivado_hls -p matrixmul_prj`.
4. Open the **Source** folder in the Explorer pane and double-click `matrixmul.cpp` to open the code as shown in [Figure 7-23](#).

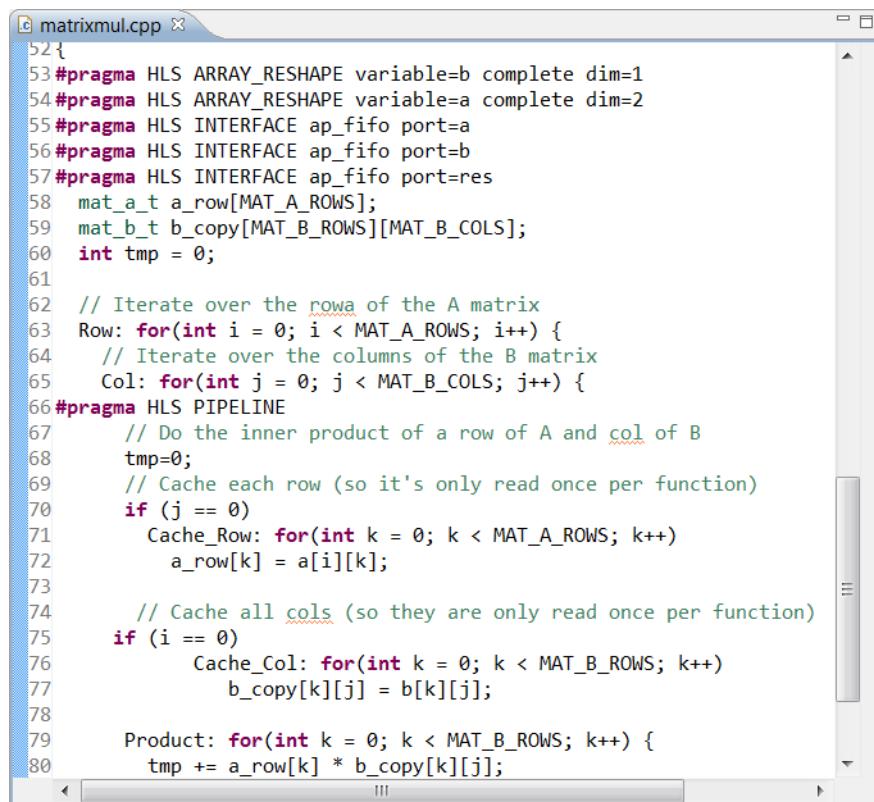

```
matrixmul.cpp x  
52{  
53 #pragma HLS ARRAY_RESHAPE variable=b complete dim=1  
54 #pragma HLS ARRAY_RESHAPE variable=a complete dim=2  
55 #pragma HLS INTERFACE ap_fifo port=a  
56 #pragma HLS INTERFACE ap_fifo port=b  
57 #pragma HLS INTERFACE ap_fifo port=res  
58 mat_a_t a_row[MAT_A_ROWS];  
59 mat_b_t b_copy[MAT_B_ROWS][MAT_B_COLS];  
60 int tmp = 0;  
61  
62 // Iterate over the rows of the A matrix  
63 Row: for(int i = 0; i < MAT_A_ROWS; i++) {  
64     // Iterate over the columns of the B matrix  
65     Col: for(int j = 0; j < MAT_B_COLS; j++) {  
66 #pragma HLS PIPELINE  
67     // Do the inner product of a row of A and col of B  
68     tmp=0;  
69     // Cache each row (so it's only read once per function)  
70     if (j == 0)  
71         Cache_Row: for(int k = 0; k < MAT_A_ROWS; k++)  
72             a_row[k] = a[i][k];  
73  
74     // Cache all cols (so they are only read once per function)  
75     if (i == 0)  
76         Cache_Col: for(int k = 0; k < MAT_B_ROWS; k++)  
77             b_copy[k][j] = b[k][j];  
78  
79     Product: for(int k = 0; k < MAT_B_ROWS; k++) {  
80         tmp += a_row[k] * b_copy[k][j];  
81     }  
82 }
```

Figure 7-23: C Code with Updated I/O Accesses

Review the code and confirm the following:

- The directives from Lab 1, including the FIFO interfaces, are specified in the code as pragmas.
- For-loops have been added to cache the row and column reads.
- A temporary variable is used for the accumulation and port res is only written to when the final result is computed for each value.
- Because the for-loops to cache the row and column would require multiple cycles to perform the reads, the pipeline directive has been applied to the Col for-loop, ensuring these cache for-loops are automatically unrolled.

Synthesize the design and verify the RTL using co-simulation.

5. Click the **Run C Synthesis** toolbar button to synthesize the design to **RTL**.
6. When synthesis completes, use the **Run C/RTL Cosimulation** toolbar button to launch the **Cosimulation Dialog** box.
7. Click **OK** to start RTL verification.

The design has been now been fully synthesized to read one sample every clock cycle using streaming FIFO interfaces.

Conclusion

In this tutorial, you learned:

- How to analyze pipelined loops and understand exactly which limitations prevent optimizations targets from being achieved.
- The advantages and disadvantages of function versus loop pipelining.
- How unintended dependencies in the code can prevent hardware design goals from being realized and how they can be overcome by modifications to the source code.

RTL Verification

Overview

The High Level Synthesis tool automates the process of RTL verification and allows you to use RTL verification to generate trace files that show the activity of the waveforms in the RTL design. You can use these waveforms to analyze and understand the RTL output. This tutorial covers all aspects of the RTL verification process.

To perform RTL verification, you use both the RTL output from High-Level Synthesis (Verilog, VHDL or SystemC) and the C test bench. RTL verification is often called *cosimulation* or *C/RTL cosimulation*; because both C and RTL are used in the verification.

This tutorial consists of three lab exercises.

Lab 1 Description

Perform RTL verification steps and understand the importance of the C test bench in verifying the RTL.

Lab 2 Description

Create RTL trace files and analyze them using the Vivado Design Suite.

Lab 3 Description

Create RTL trace files and analyze them using a third-party RTL simulator. This lab requires a license for Mentor Graphics ModelSim simulator. (You can use an alternative, third-party simulator with minor modifications to the steps).

Tutorial Design Description

You can download the tutorial design file from the Xilinx website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory `Vivado_HLS_Tutorial\RTL_Verification`.

The sample design used in the lab exercise is a DUC (digital up converter) function. The purpose of this lab is to demonstrate and explain the features of RTL verification. There are no design goals for these lab exercises.

Lab 1: RTL Verification and the C Test Bench

This exercise explains the basic operations for RTL verification and highlights the importance of the C test bench.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory `Vivado_HLS_Tutorial` is unzipped and placed in the location `C:\Vivado_HLS_Tutorial`. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the `Vivado_HLS_Tutorial` directory.*

Step 1: Create and Open the Project

1. Open the Vivado HLS Command Prompt.
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** ([Figure 8-1](#)).
 - On Linux, open a new shell.

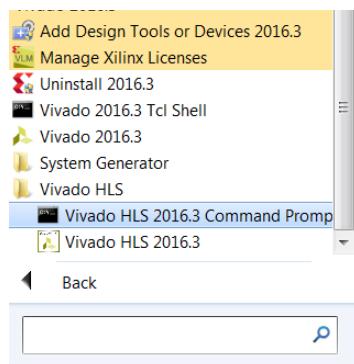


Figure 8-1: Vivado HLS Command Prompt

2. Using the command prompt window ([Figure 8-2](#)), change directory to the `RTL_Verification` tutorial, `lab1`.
3. Execute the Tcl script to setup the Vivado HLS project, using the command `vivado_hls -f run_hls.tcl`, as shown in [Figure 8-2](#).

```
C:\Vivado_HLS_Tutorial>cd RTL_Verification  
C:\Vivado_HLS_Tutorial\RTL_Verification>cd lab1  
C:\Vivado_HLS_Tutorial\RTL_Verification\lab1>vivado_hls -f run_hls.tcl
```

Figure 8-2: Setup the RTL Verification Tutorial Project

- When Vivado HLS completes, open the project in the Vivado HLS GUI using the command `vivado_hls -p duc_prj`, as shown in [Figure 8-3](#).

```
@I [LIC-101] Checked in feature [HLS]  
Generating csim.exe  
  
*** DUC hardware test PASSED ! ***  
  
@I [SIM-1] CSim done with 0 errors.  
@I [LIC-101] Checked in feature [HLS]  
  
C:\Vivado_HLS_Tutorial\RTL_Verification\lab1>vivado_hls -p duc_prj
```

Figure 8-3: Open RTL Verification Project for Lab 1

Step 2: Perform RTL Verification

- Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
- When synthesis completes, use the **Run C/RTL Cosimulation** toolbar button ([Figure 8-4](#)) to launch the Cosimulation dialog box.



Figure 8-4: Run C/RTL Cosimulation Toolbar Button

The Cosimulation Dialog box opens, as shown in [Figure 8-5](#).

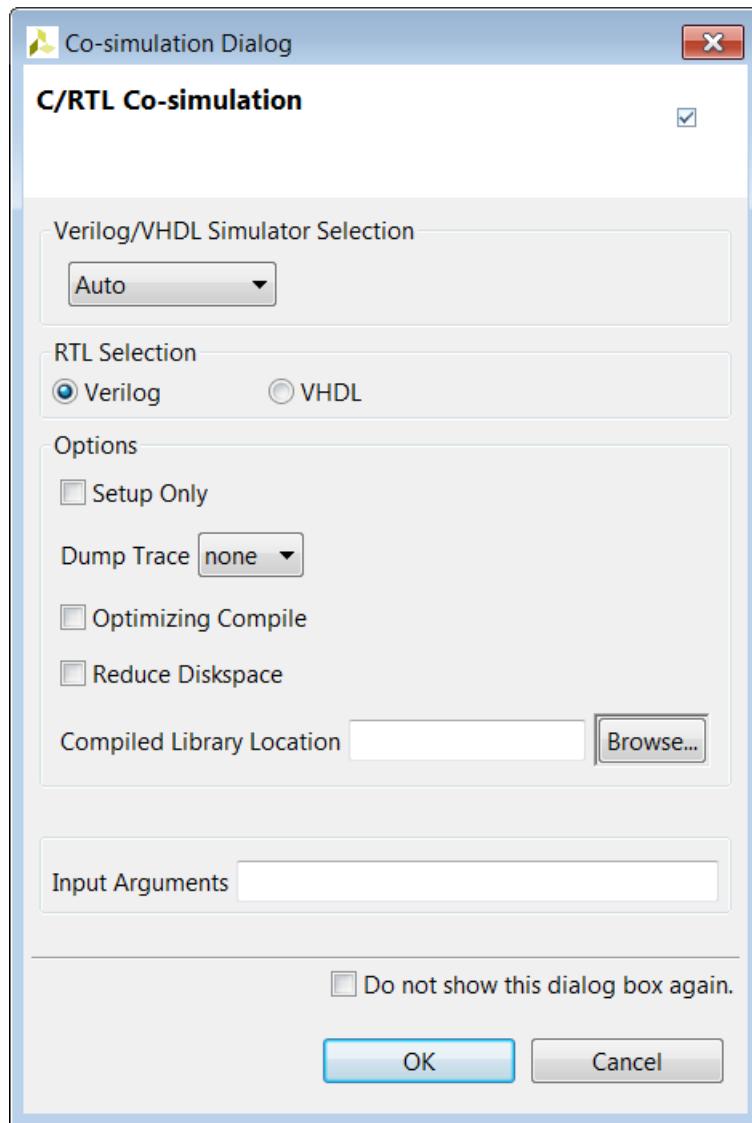


Figure 8-5: Cosimulation Dialog Box

The drop-down menu allows you to select the RTL simulator for HDL simulation. For this exercise, you use the default Auto selection (Auto selects the Vivado Simulator) with Verilog RTL for cosimulation.

3. Click **OK** to start RTL verification.

When RTL Verification completes, the simulation report opens automatically (Figure 8-6). The report indicates if the simulation passed or failed. In addition, the report indicates the measured latency and interval.

Cosimulation Report for 'duc'

Result

RTL	Status	Latency			Interval		
		min	avg	max	min	avg	max
VHDL	NA	NA	NA	NA	NA	NA	NA
Verilog	Pass	36	37	44	37	38	45

Figure 8-6: Cosimulation Report

RTL simulation completes in three steps. To better understand how the RTL verification process is performed, scroll up in the console window to confirm that the messages described below were issued.

First, the C test bench is executed to generate input stimuli for the RTL design.

```
INFO: [COSIM 212-14] Instrumenting C test bench ...
< C simulation executes to generate input stimuli >
```

At the end of this phase, the simulation shows any messages generated by the C test bench. The output from the C function is not used in the C test bench at this stage, but any messages output by the test bench can be seen in the console.

```
INFO: [COSIM 212-302] Starting C TB testing ...
*** DUC hardware test PASSED ! ***
```

An RTL test bench with newly generated input stimuli is created and the RTL simulation is then performed.

```
INFO: [COSIM 212-333] Generating C post check test bench ...
INFO: [COSIM 212-12] Generating RTL test bench ...
```


Finally, the output from the RTL simulation is re-applied to the C test bench to check the results. Once again, you can see any message output by the C test bench in the console. Finally, RTL verification issues message SIM-1000 if the RTL verification passed.

```
INFO: [COSIM 212-316] Starting C post checking ...
*** DUC hardware test PASSED ! ***
INFO: [COSIM 212-1000] *** C/RTL co-simulation finished: PASS ***
```

To fully understand why the C test bench should check the results and how message SIM-1000 is generated, you will modify the C test bench.

Step 3: Modify the C test bench

1. Expand the **Test Bench** folder in the Explorer pane (Figure 8-7).
2. Double-click `duc_test.c` to open the C test bench in the Information pane.

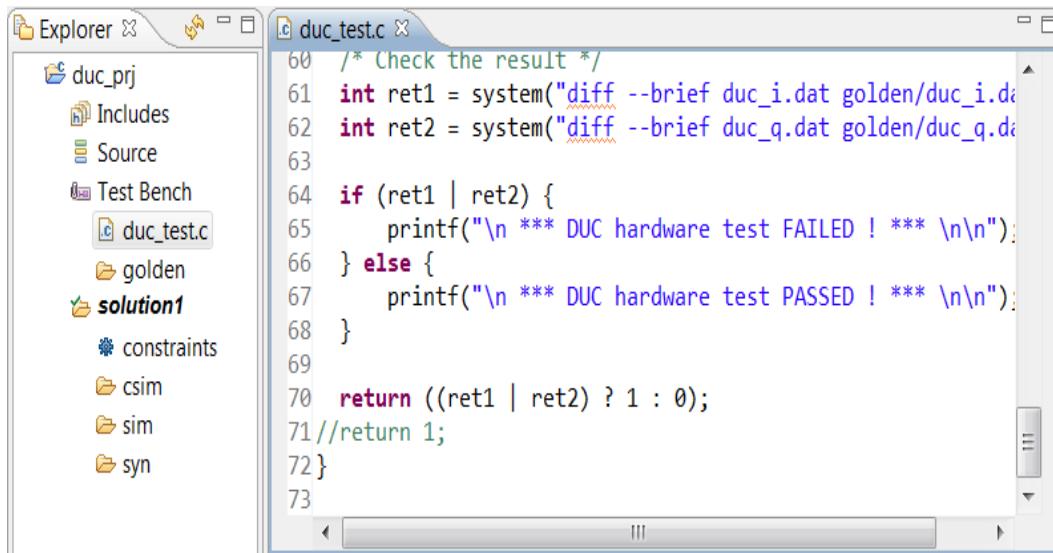


The screenshot shows the Xilinx IDE interface. The Explorer pane on the left displays a project structure for "duc_prj" containing "Includes", "Source", "Test Bench" (which contains "duc_test.c"), "golden", "solution1" (with "constraints"), and "csim", "sim", "syn" folders. The "duc_test.c" file is selected in the Explorer pane. The Information pane on the right shows the code for "duc_test.c". The code checks for differences between "duc_i.dat" and "golden/duc_i.dat" and "duc_q.dat" and "golden/duc_q.dat" using the "diff" command. It prints "DUC hardware test FAILED!" if either comparison fails, and "DUC hardware test PASSED!" if both comparisons pass. The code then returns 1 if either comparison failed, or 0 if both passed. The code is as follows:

```
60  /* Check the result */
61  int ret1 = system("diff --brief duc_i.dat golden/duc_i.dat");
62  int ret2 = system("diff --brief duc_q.dat golden/duc_q.dat");
63
64  if (ret1 | ret2) {
65      printf("\n *** DUC hardware test FAILED ! *** \n\n");
66  } else {
67      printf("\n *** DUC hardware test PASSED ! *** \n\n");
68  }
69
70 return ((ret1 | ret2) ? 1 : 0);
71//return 1;
72}
73
```

Figure 8-7: RTL Test Bench

3. Scroll to the end of the file to see the code shown in Figure 8-8.
4. Edit the return statement to match Figure 8-8 and ensure the test bench always returns the value 1.

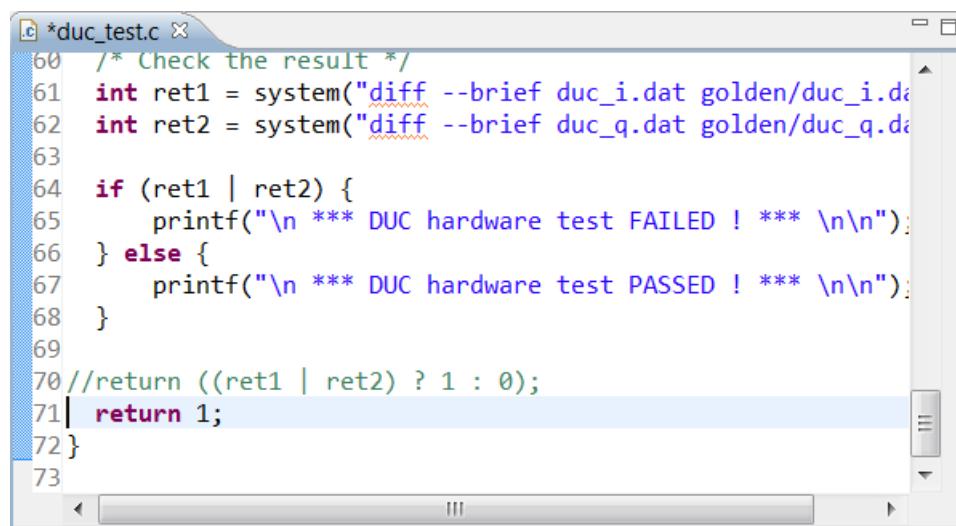

The screenshot shows the Xilinx IDE interface with the "duc_test.c" file open in the Information pane. The code is identical to Figure 8-7, except for the return statement at line 71, which has been modified to "return 1;" instead of the original "return ((ret1 | ret2) ? 1 : 0);". The rest of the code remains the same, including the logic for comparing files and printing results.

```
60  /* Check the result */
61  int ret1 = system("diff --brief duc_i.dat golden/duc_i.dat");
62  int ret2 = system("diff --brief duc_q.dat golden/duc_q.dat");
63
64  if (ret1 | ret2) {
65      printf("\n *** DUC hardware test FAILED ! *** \n\n");
66  } else {
67      printf("\n *** DUC hardware test PASSED ! *** \n\n");
68  }
69
70//return ((ret1 | ret2) ? 1 : 0);
71| return 1;
72}
73
```

Figure 8-8: Modified RTL Test Bench

5. Save the file.
6. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.

7. Click the **Run C/RTL Cosimulation** toolbar button to launch the Cosimulation Dialog box.
8. Leave the Cosimulation options at their default value and click **OK** to execute the RTL cosimulation.

When RTL cosimulation completes, the cosimulation report opens and says the verification has failed (Figure 8-9).

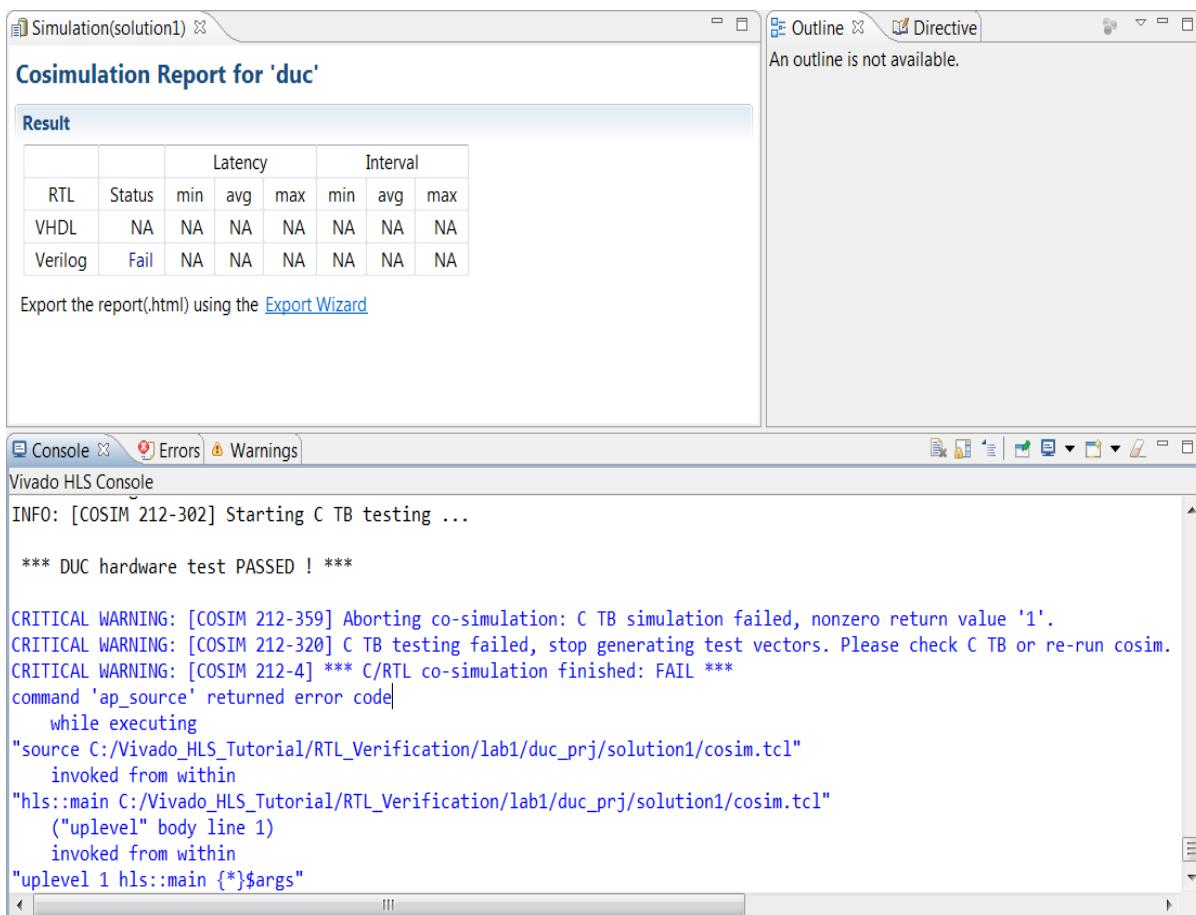


Figure 8-9: Cosimulation Report Failure

In Figure 8-9, you can see from the message printed to the console (DUC hardware test PASSED) that the results are correct, however, the verification report says the RTL verification failed.

If required, you can confirm the results are correct. To do this, compare the output files created by the RTL simulation with the golden results. The RTL simulation is executed in the simulation directory wrapc, which is inside the solution directory. Figure 8-10 shows the solution directory, with the output files highlighted.

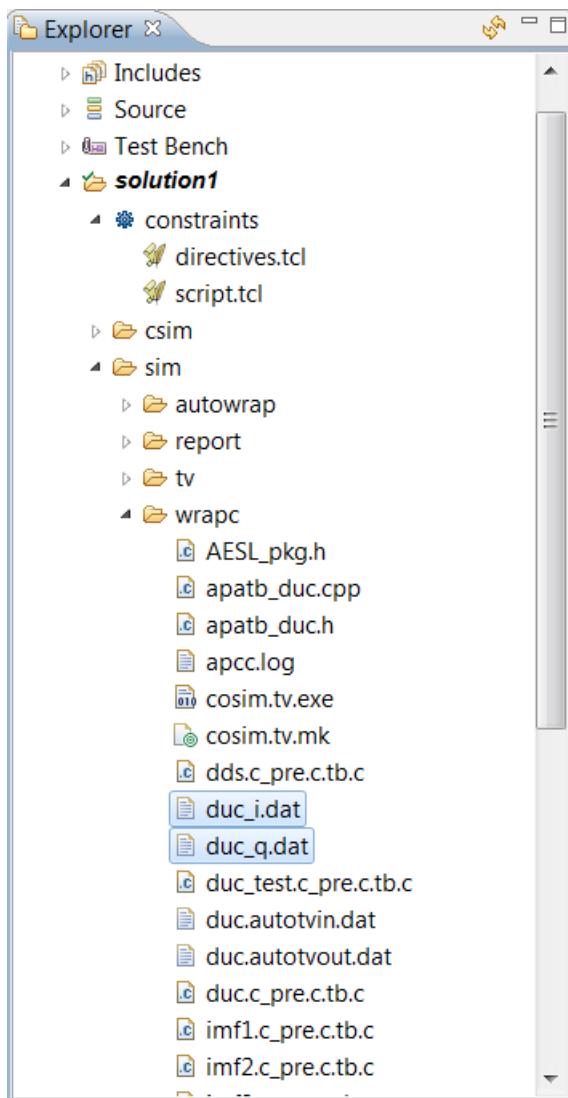


Figure 8-10: Cosimulation Output Files

RTL Cosimulation only reports a successful verification when the test bench returns a value of 0 (zero). Modifying the test bench to return a non-zero value ensures RTL verification (and C simulation if it was performed) would always report a failure.

To ensure that the RTL results are automatically verified: the C test bench must always check the output from the C function to be synthesized and return a 0 (zero) if the results are correct OR return any other value if they are not correct.

When RTL Verification is performed, the same testing occurs in the test bench, and the output from the RTL block is automatically checked. This is why it is important for the C test bench to check the results and return a zero value only if they are correct (or return a non-zero value if they are incorrect).


9. Exit the Vivado HLS GUI and return to the command prompt.

Lab 2: Viewing Trace Files in Vivado

This exercise explains how to generate RTL trace files and how to view them using the Vivado Design Suite tools.

Step 1: Create an RTL Trace File using Vivado Simulator

1. From the Vivado HLS command prompt you used in Lab 1, change to the lab2 directory as shown in [Figure 8-11](#).
2. Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.

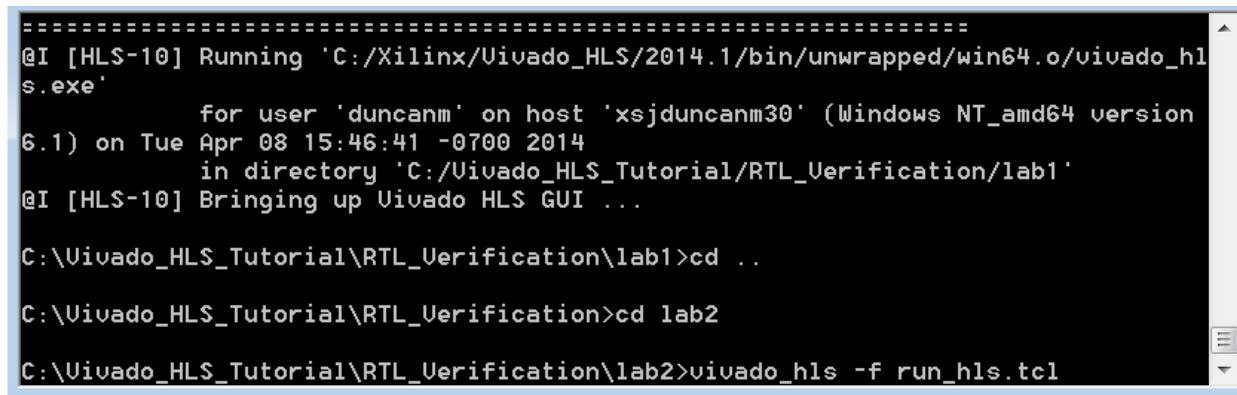

```
=====
@I [HLS-10] Running 'C:/Xilinx/Vivado_HLS/2014.1/bin/unwrapped/win64.o/vivado_hls.exe'
      For user 'duncanm' on host 'xsjduncanm30' (Windows NT_amd64 version
6.1) on Tue Apr 08 15:46:41 -0700 2014
      in directory 'C:/Vivado_HLS_Tutorial/RTL_Verification/lab1'
@I [HLS-10] Bringing up Vivado HLS GUI ...
C:\Vivado_HLS_Tutorial\RTL_Verification\lab1>cd ..

C:\Vivado_HLS_Tutorial\RTL_Verification>cd lab2

C:\Vivado_HLS_Tutorial\RTL_Verification\lab2>vivado_hls -f run_hls.tcl
```

Figure 8-11: Setup for RTL Verification Lab 2

3. Open the Vivado HLS GUI project by typing `vivado_hls -p duc_prj`.
4. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
5. Click the **Run C/RTL Cosimulation** toolbar button to launch the Cosimulation Dialog box.

In this case, you will produce a trace file you can open using the Vivado Simulator.

6. In the Co-simulation Dialog box:
 - a. Leave the default auto selection (using Vivado Simulator and Verilog).
 - b. Activate the **Dump Trace** drop-down menu and select the **all** option, to have the options shown in [Figure 8-12](#).
 - c. Click **OK** to execute RTL cosimulation.

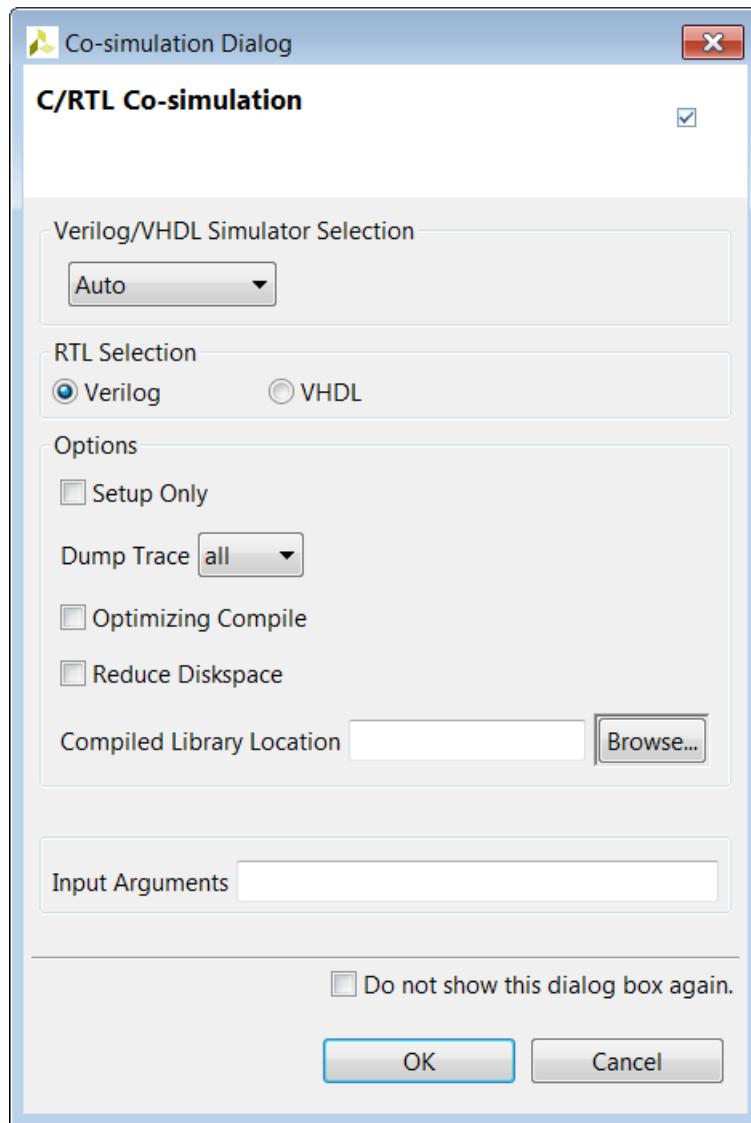


Figure 8-12: Cosimulation Dialog Box for Lab 2

When RTL verification completes, the cosimulation report automatically opens. The report shows that the Verilog simulation has passed (and the measured latency and interval). In addition, because the Dump Trace option was used with the Vivado Simulator simulator option and because Verilog was selected, two trace files are now present in the Verilog simulation directory. These are shown highlighted in [Figure 8-13](#).

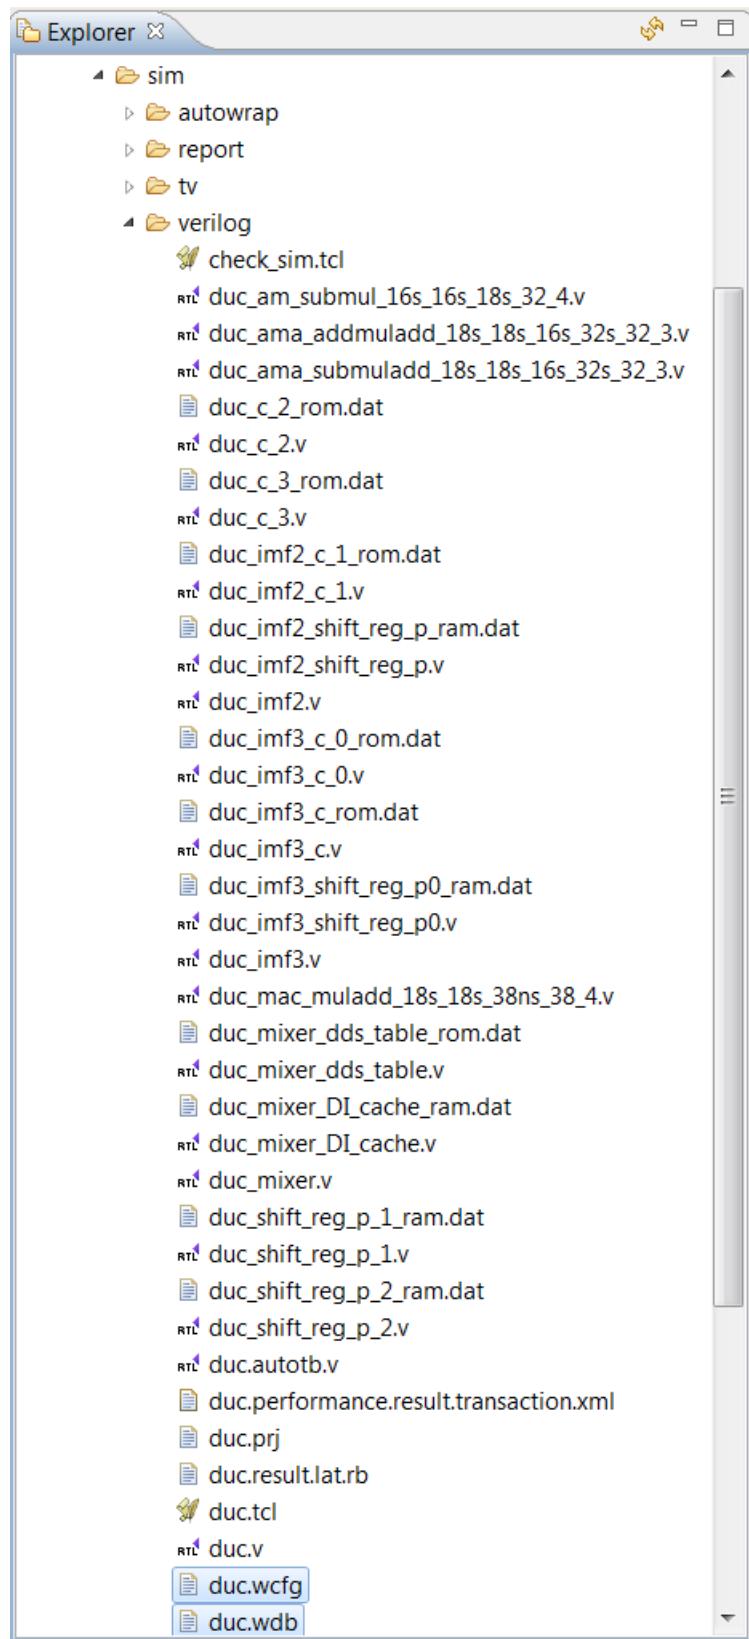


Figure 8-13: Verilog Vivado Simulator Cosimulation Results

The next step is to view the trace files inside the Vivado Design Suite.

Since waveform trace data has been generated for the Vivado Simulator, the **Open Wave Viewer** toolbar button is now highlighted, as shown in [Figure 8-14](#).

Note: The **Open Wave Viewer** toolbar button can only be used when Vivado Simulator is selected as the Verilog/VHDL Simulator.

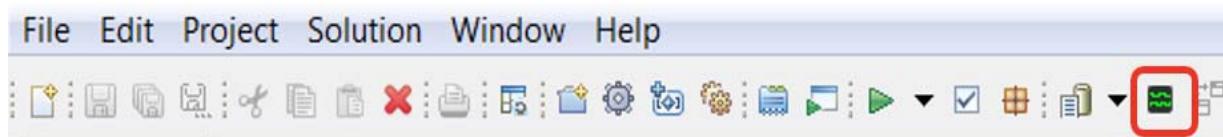


Figure 8-14: Opening the Trace File in Vivado

7. Click on the **Open Wave Viewer** toolbar button to open the Vivado IDE with the RTL waveforms traces.

Note: The only functionality provided by the Vivado IDE by this action is the viewing and analysis of RTL waveforms.

You can then view the waveforms in the waveform viewer. [Figure 8-15](#) shows the zoomed waveforms where the output data ports and their associated I/O protocol signals (output valid signals) are expanded to view.

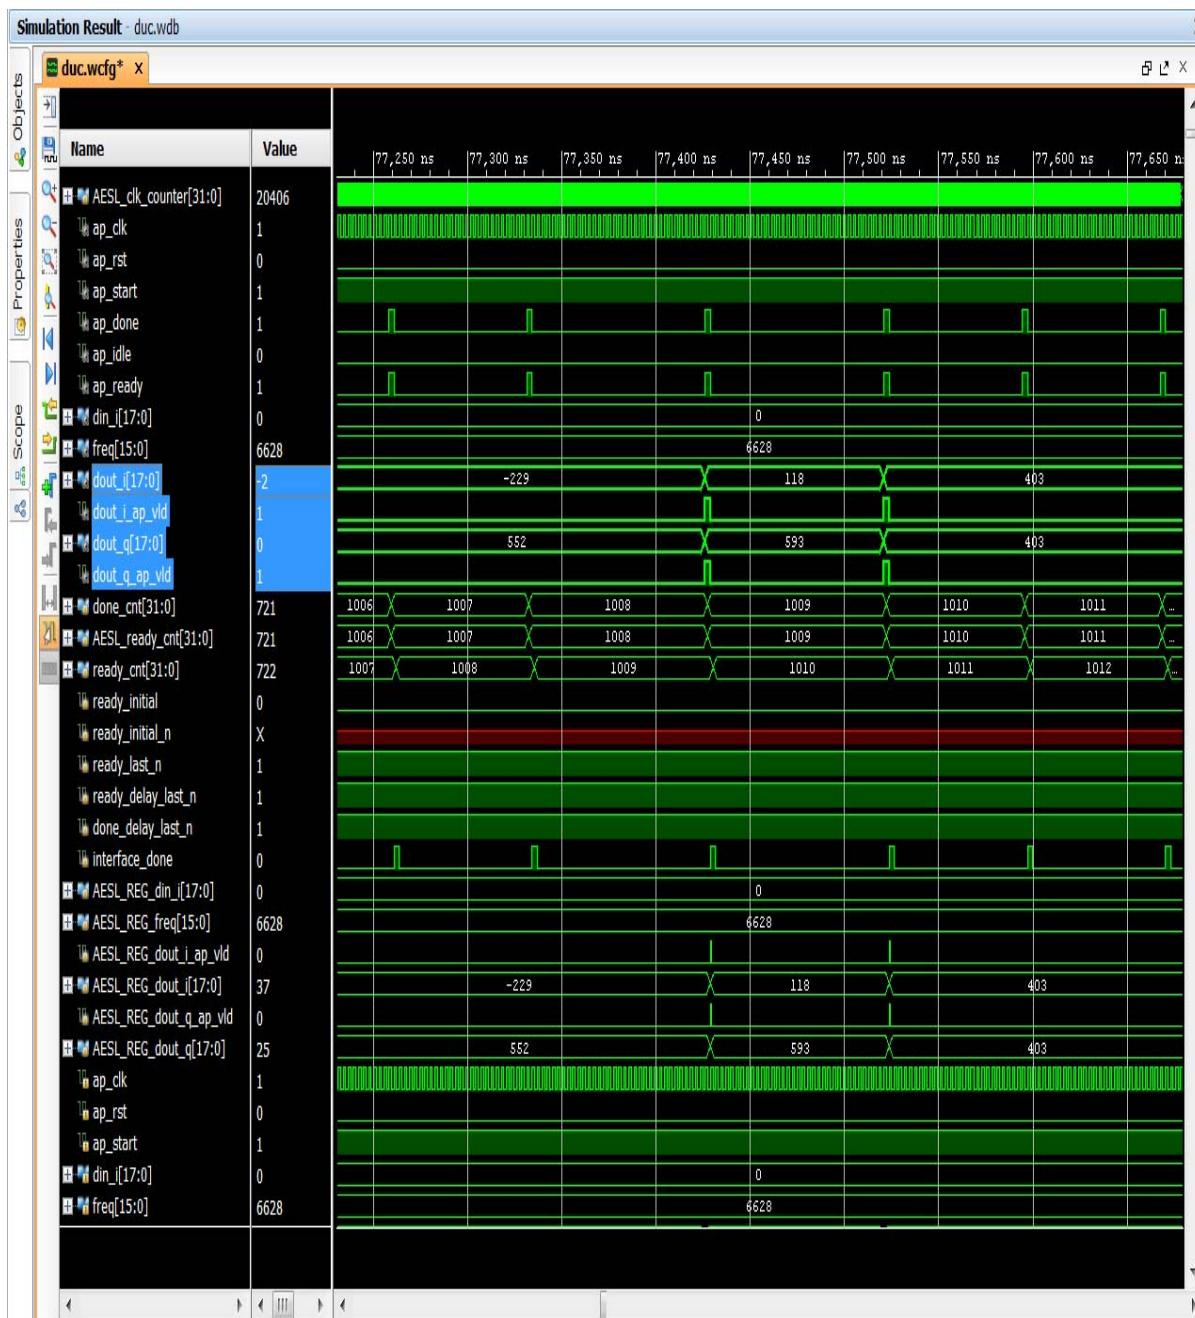


Figure 8-15: Analyzing the RTL Trace File

8. Exit the Vivado IDE.
9. Exit and close the Vivado GUI.
10. Type exit to close the Vivado Tcl command prompt.

Lab 3: Viewing Trace Files in ModelSim

This exercise explains how you can generate and view RTL trace files and using the Mentor Graphics ModelSim RTL simulator. Other third-party simulators are supported, and similar process can be used if another RTL simulator is selected.



CAUTION! This lab exercise requires that the executable for ModelSim is defined in the system search path and that the required license to perform HDL simulation is available on the system.

Step 1: Create an RTL Trace File using ModelSim

1. From the Vivado HLS command prompt you used in Lab 2, change to the lab3 directory.
2. Create a new Vivado HLS project by typing `vivado_hls -f run_hls.tcl`.
3. Open the Vivado HLS GUI project by typing `vivado_hls -p duc_prj`.
4. Click the **Run C Synthesis** toolbar button to synthesize the design to RTL.
5. Click the **Run C/RTL Cosimulation** toolbar button to launch the Cosimulation Dialog box.

This exercise uses the Mentor Graphics ModelSim RTL simulator. The path to the simulator executable must be set in your system search path.

6. In the Co-simulation Dialog box:
 - a. Select **ModelSim** from the Verilog/VHDL Simulator Selector.
 - b. Select **VHDL**.
 - c. Activate the **Dump Trace** drop-down menu and select the **all** option, to have the options shown in [Figure 8-16](#).
 - d. Click **OK** to execute RTL cosimulation.

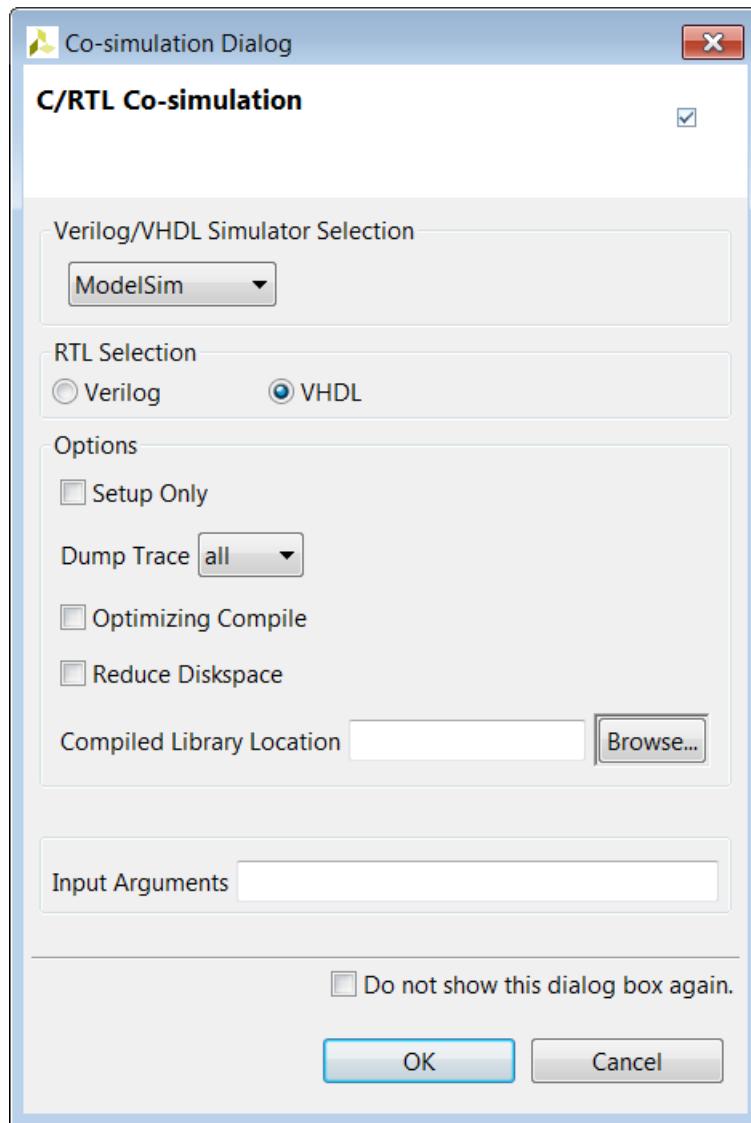


Figure 8-16: Cosimulation Dialog Box for Lab 3

When RTL verification completes, the cosimulation report automatically opens, showing the VHDL simulation has passed (and the measured latency and interval). In addition, because the Dump Trace option was used with the ModelSim simulator option and because VHDL was selected, a trace file is now present in the VHDL simulation directory. The trace file is shown highlighted in [Figure 8-17](#).

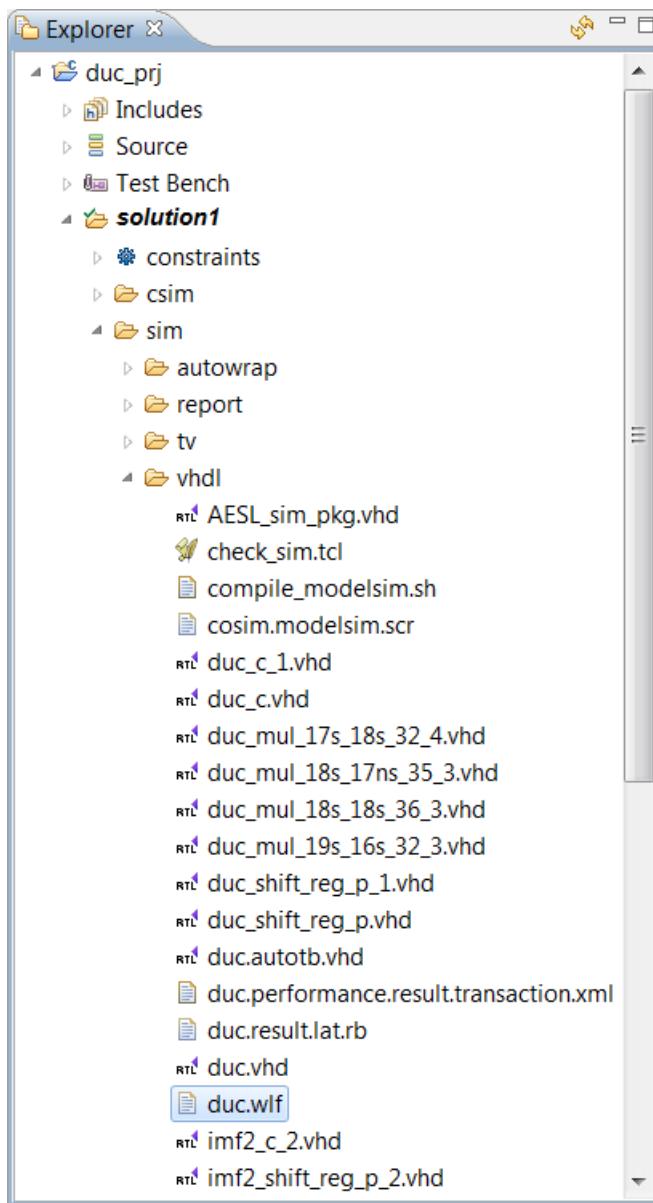


Figure 8-17: VHDL ModelSim Trace File

The next step is to view the trace files inside ModelSim.

7. Exit the Vivado HLS GUI and return to the command prompt.

Step 2: View the RTL Trace File in ModelSim

1. Launch the Mentor Graphics ModelSim RTL Simulator.
2. Click the menu **File > Open**.
3. Select **Log Files** as the file type (Figure 8-18).

4. Navigate to the VHDL simulation directory and select `duc.wlf`.
5. Click **Open**.

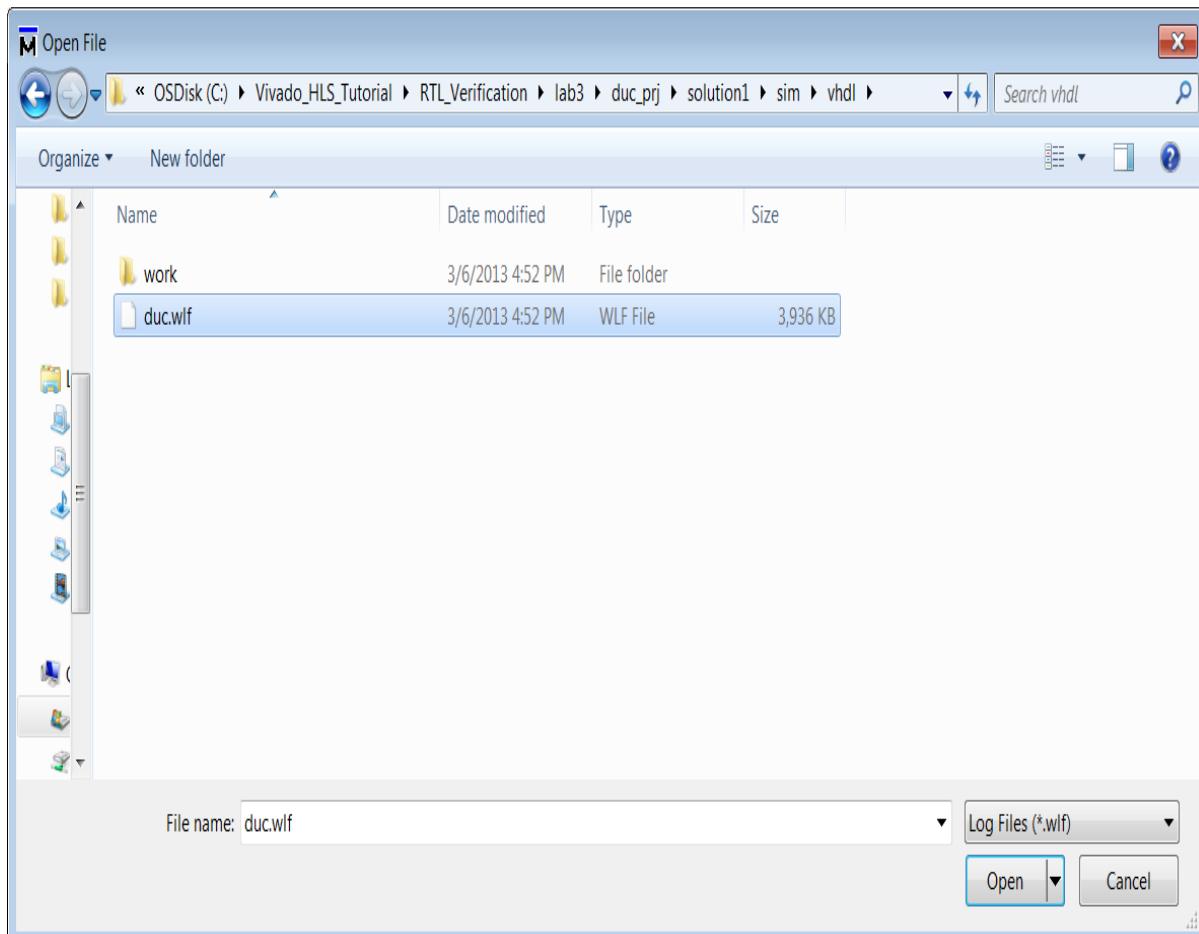


Figure 8-18: ModelSim Open File WLF

6. Add the signals to the trace window and adjust to see a view similar to [Figure 8-19](#).

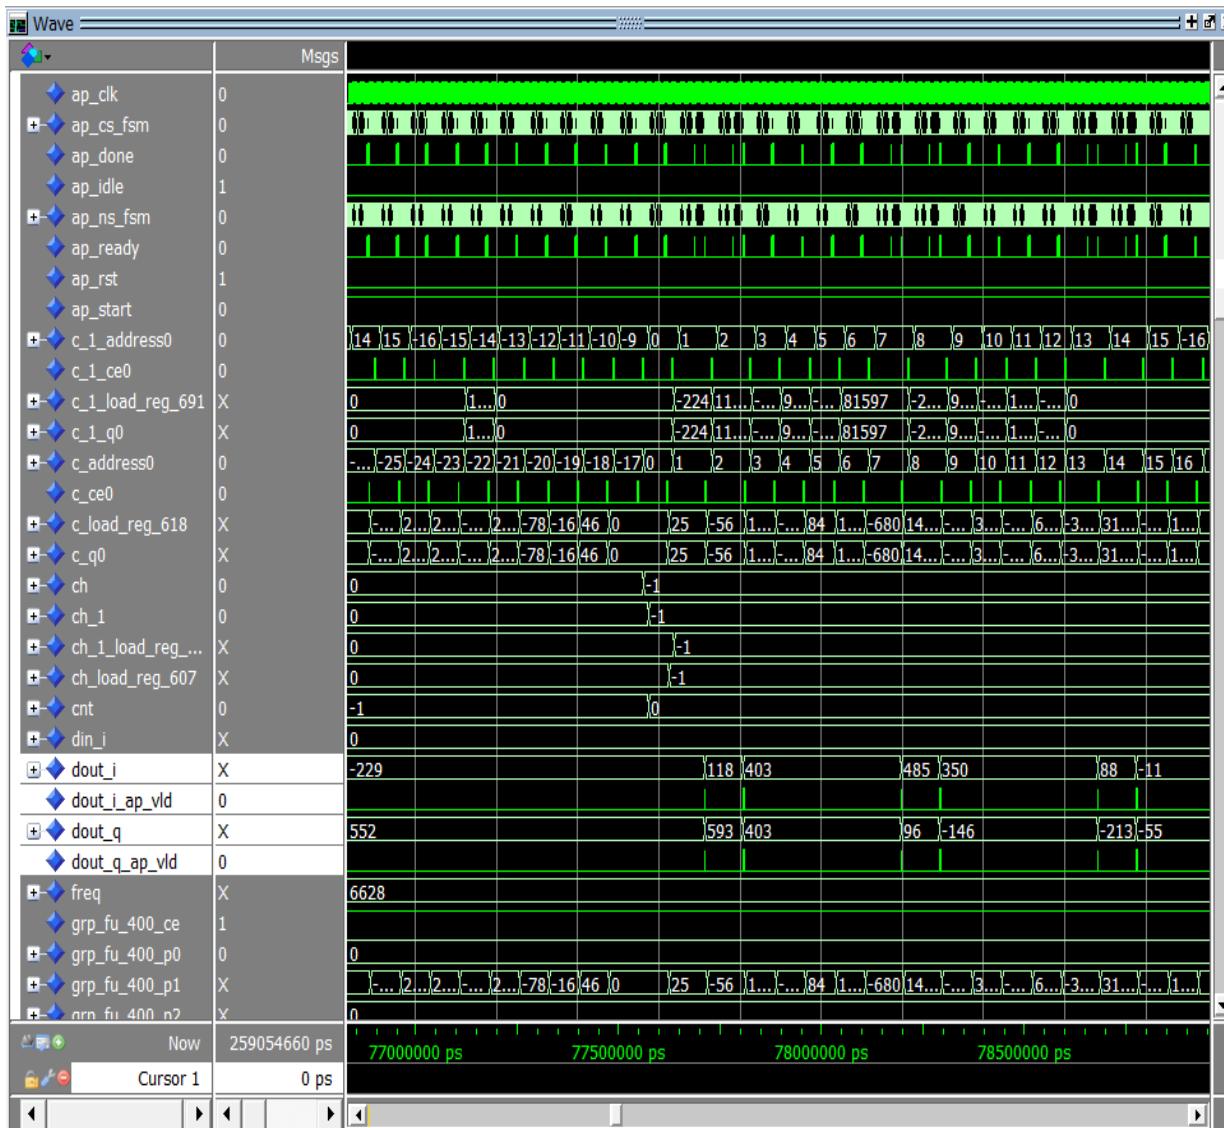


Figure 8-19: Viewing the Trace File in ModelSim

7. Exit and close the ModelSim RTL simulator.

Conclusion

In this tutorial, you learned how to:

- Perform RTL verification on a design synthesized from C and the importance of the test bench in this process.
- Create and open waveform trace files using the Vivado Design Suite.
- Create and open waveform trace files using a third-party HDL simulator (ModelSim) and view the trace file created by RTL verification.

Using HLS IP in IP Integrator

Overview

You can package the RTL from High-Level Synthesis and use it inside IP Integrator. This tutorial demonstrates how to take HLS IP and use it in IP Integrator as part of a larger design.

This tutorial consists of a single lab exercise.

Lab 1 Description

Complete the steps to generate two HLS blocks for the IP catalog and use them in a design with Xilinx IP, an FFT. You validate and verify the final design using an RTL test bench.

Tutorial Design Description

You can download the tutorial design file from the Xilinx Website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory `Vivado_HLS_Tutorial\Using_IP_with_IPI`.

The design blocks in this tutorial process the data for a complex FFT.

- The Xilinx FFT IP block only operates on complex data. Although you can perform an FFT of real data on a complex data set with all imaginary components set to zero, it can be done more efficiently by pre-processing the data.
- The front-end HLS block in this lab applies a Hamming windowing function to the 1024 (N) real data samples and sends even/odd pairs to an N/2-point XFFT as though they are complex data.
- The back-end HLS block takes bit-reverse ordered data, puts it in natural order and applies an O(N) transformation to FFT output to extract the spectral data for the N-point real data set. Note, the first output pair packs the 0th and 512th (purely real) spectral data point into the real and imaginary parts, respectively.

- The designs are fully pipelined, streaming designs for high throughput; intended for continuous processing of data, but with throttling capability (stalls if input stalls).
- AXI4-Stream interfaces are used to connect all blocks in IP Integrator.

Lab 1: Integrate HLS IP with a Xilinx IP Block

This lab exercise shows how two HLS IP blocks are combined with a Xilinx IP FFT in IP Integrator and the design verified in the Vivado Design Suite.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory Vivado_HLS_Tutorial is unzipped and placed in the location C:\Vivado_HLS_Tutorial. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the Vivado_HLS_Tutorial directory.*

Step 1: Create Vivado HLS IP Blocks

Create two HLS blocks for the Vivado IP Catalog using the provided Tcl script. The script runs HLS C-synthesis, RTL co-simulation and packages the IP for the two HLS designs (hls_real2xfft and hls_xfft2real).

1. Open the Vivado HLS Command Prompt.
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt**.
 - On Linux, open a new shell.


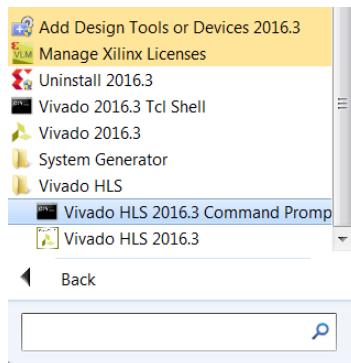


Figure 9-1: Vivado HLS Command Prompt

2. Using the command prompt window, change the directory to Vivado_HLS_Tutorial\Using_IP_with_IPI\lab1\hls_designs (Figure 9-2).
3. Type `vivado_hls -f run_hls.tcl` to create the HLS IP (Figure 9-2).

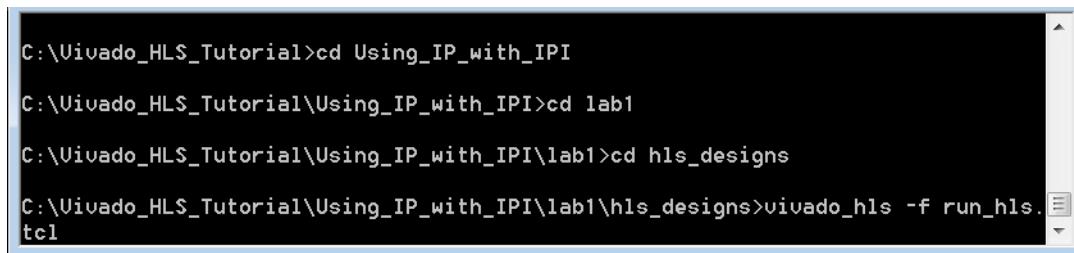

```
C:\Vivado_HLS_Tutorial>cd Using_IP_with_IPI
C:\Vivado_HLS_Tutorial\Using_IP_With_IPI>cd lab1
C:\Vivado_HLS_Tutorial\Using_IP_With_IPI\lab1>cd hls_designs
C:\Vivado_HLS_Tutorial\Using_IP_With_IPI\lab1\hls_designs>vivado_hls -f run_hls.tcl
```

Figure 9-2: Create the HLS Design for IP Integrator

When the script completes, there are two Vivado HLS project directories, `fe_vhls_prj` and `be_vhls_prj`, which contain the HLS IP, including the Vivado IP Catalog archives for use in Vivado designs.

- The “front-end” IP archive is located at `fe_vhls_prj/IPXACTExport/impl/ip/`
- The “back-end” IP archive is located at `be_vhls_prj/IPXACTExport/impl/ip/`

The remainder of this tutorial shows how the Vivado HLS IP blocks can be integrated into a design (in IP Integrator) and verified.

Step 2: Create a Vivado Design Suite Project

1. Launch the Vivado Design Suite (not Vivado HLS):
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado 2018.3**.
 - On Linux, type `vivado` in the shell.
2. From the Welcome screen, click **Create Project** (Figure 9-3).

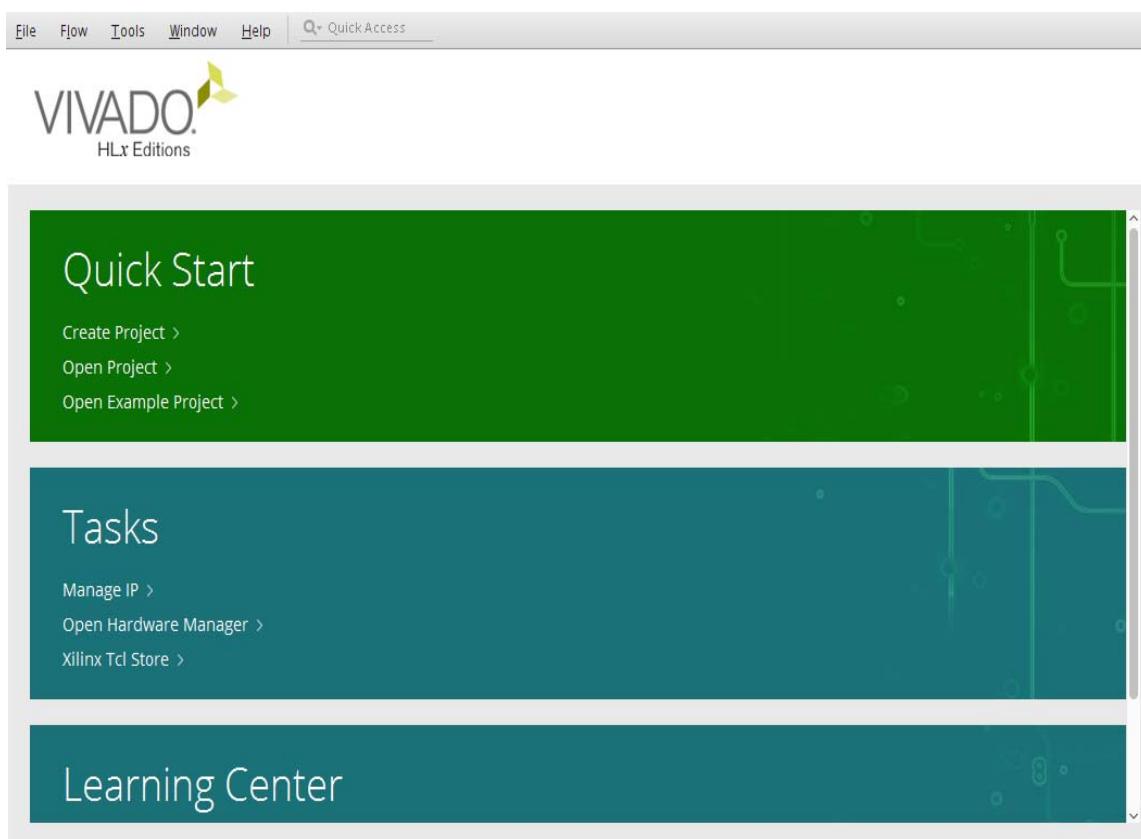


Figure 9-3: Create a Vivado Project

3. Click **Next** on the first page of the Create a New Vivado Project wizard.
4. Click the ellipsis button to the right of the Project location text entry box and browse to and select the tutorial directory ([Figure 9-4](#)).

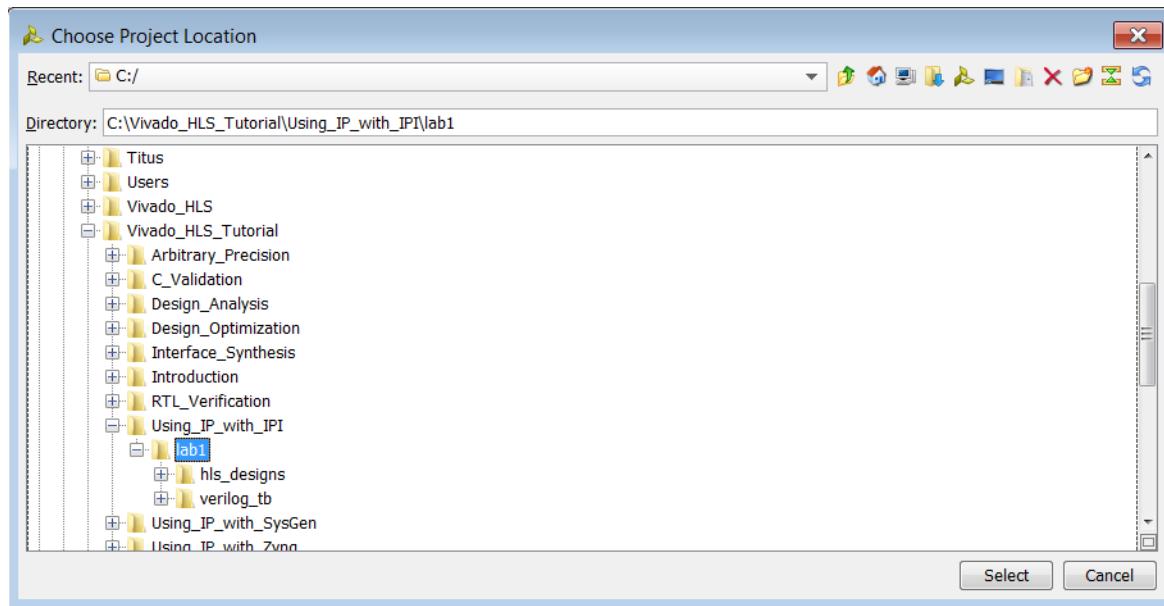


Figure 9-4: Path to the Vivado Design Suite Project

5. Click **Next** to move to the Project Type page of the wizard.
 - a. Select **RTL Project**.
 - b. Select **Do not specify sources at this time** (if not the default).
 - c. Click **Next**.
6. On the Default Part page, under Specify, click **Boards** and select the **ZYNQ-7 ZC702 Evaluation Board**, as shown in [Figure 9-5](#) and press Next.

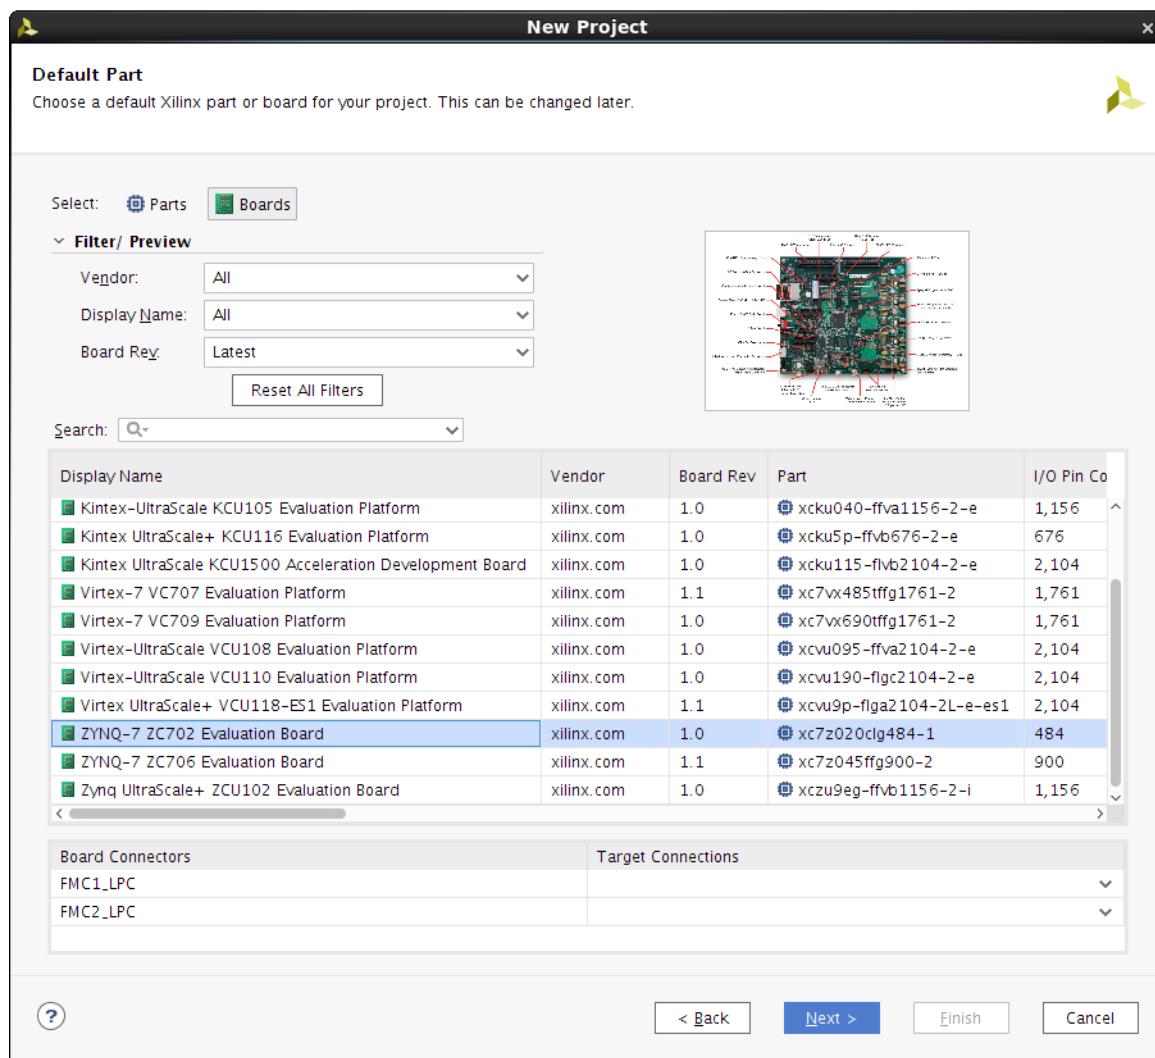


Figure 9-5: Vivado Project Specification

7. On the New Project Summary Page, click **Finish** to complete the new project setup.

The Vivado workspace populates and appears as shown in [Figure 9-6](#).

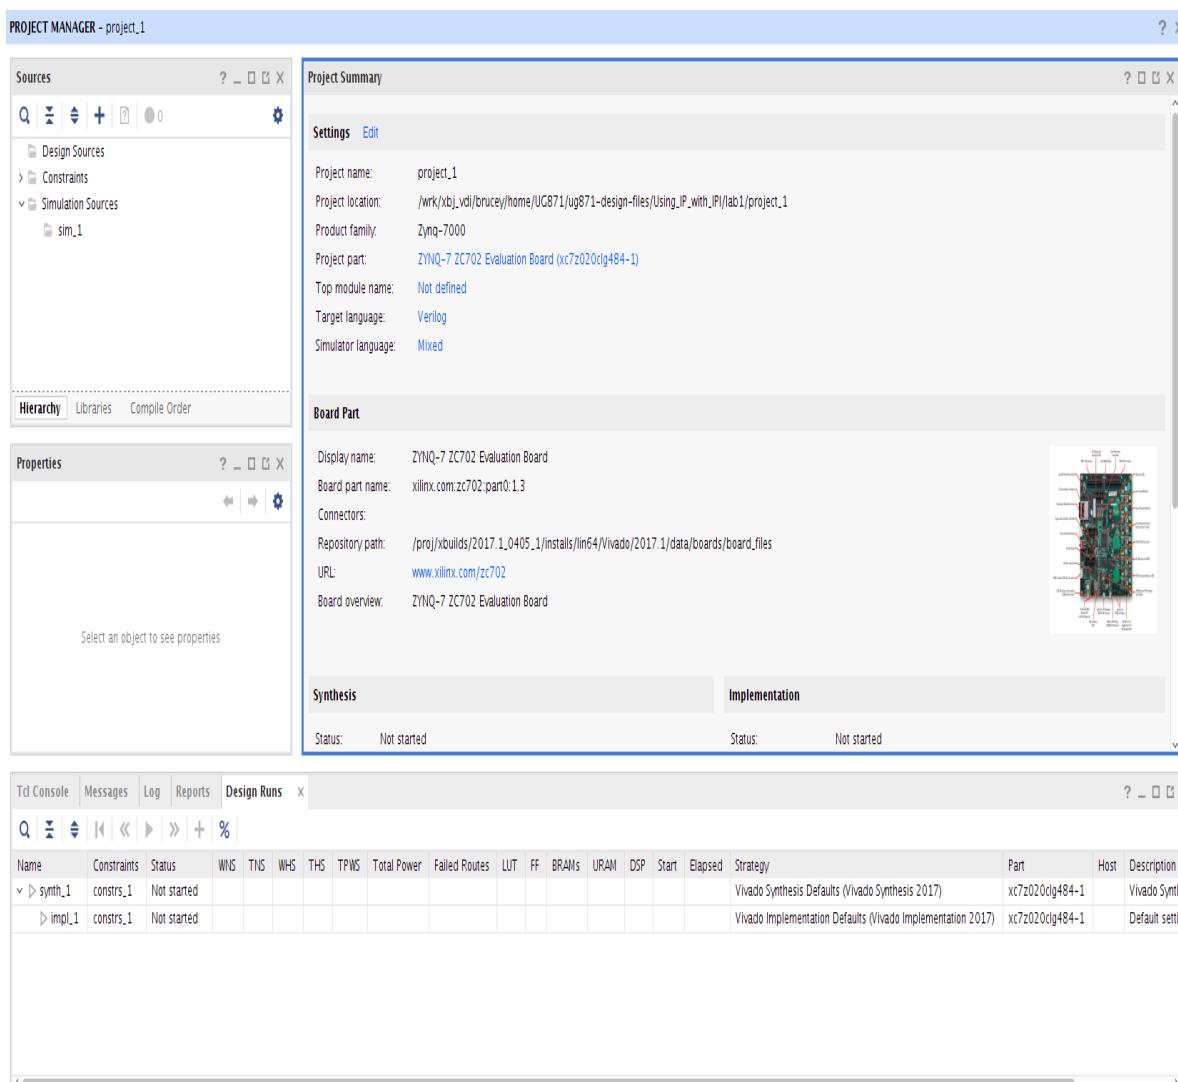


Figure 9-6: Vivado Project

Step 3: Add HLS IP to an IP Repository

1. In the Project Manager area of the Flow Navigator pane, click **IP Catalog**.

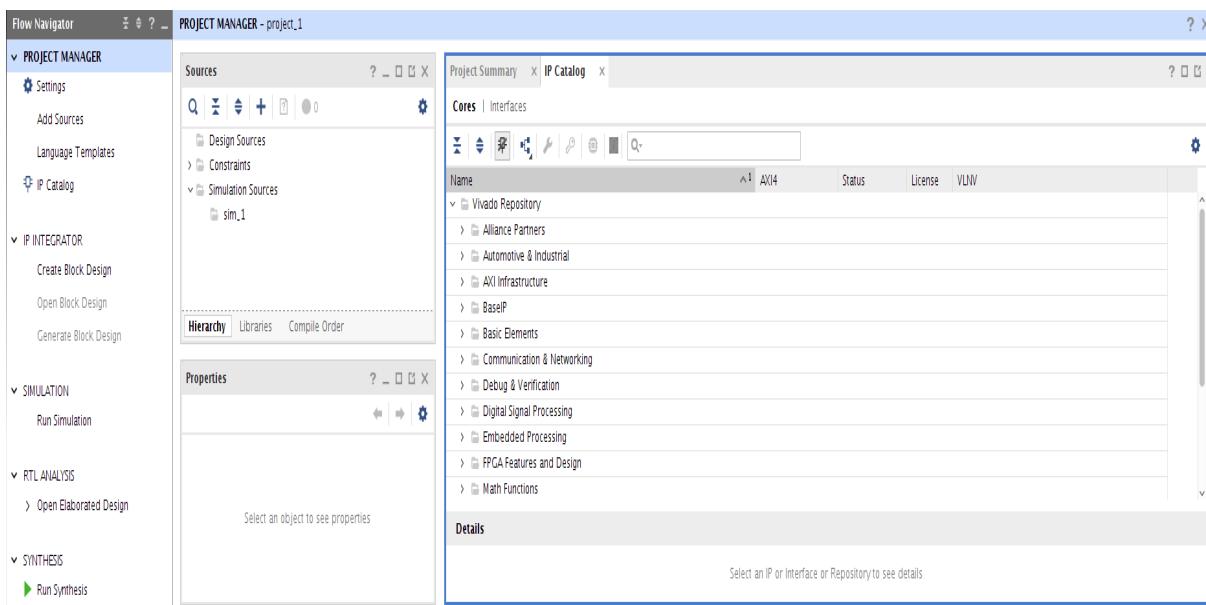


Figure 9-7: Open the IP Catalog

2. The IP Catalog appears in the main pane of the workspace. Click the **IP Settings** icon.

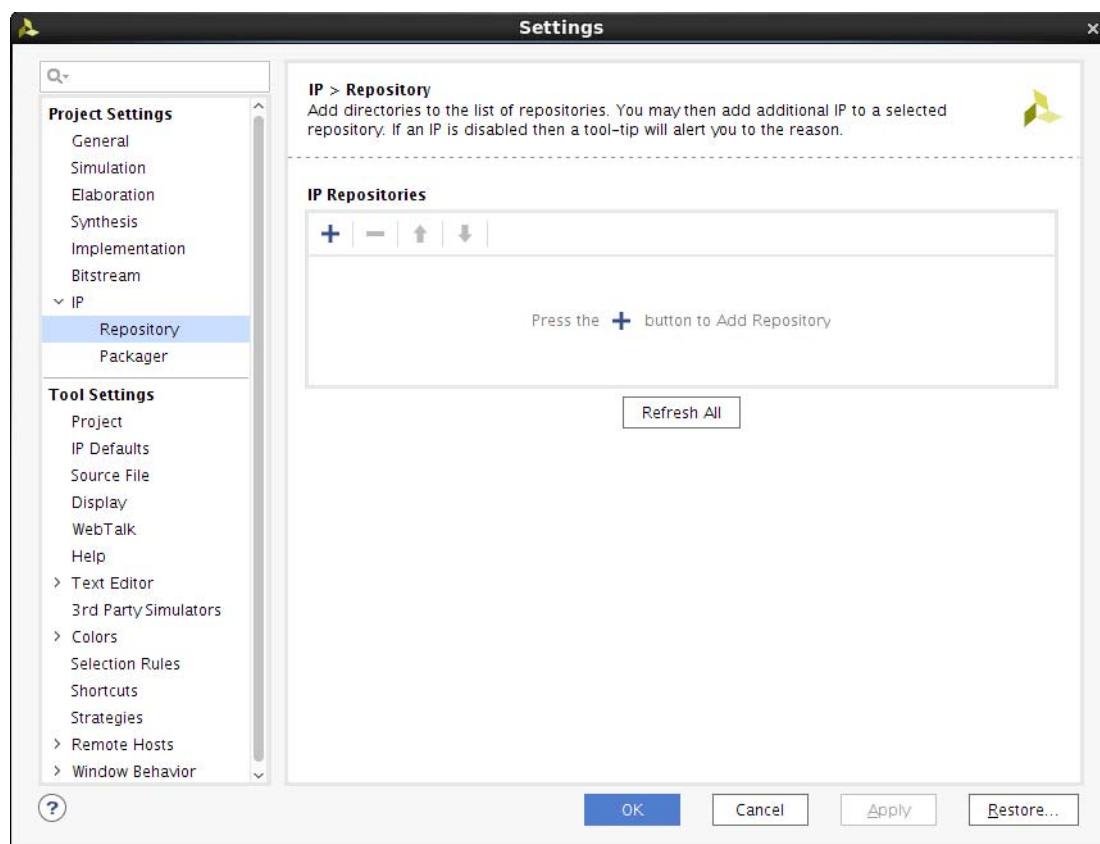


Figure 9-8: Open the IP Catalog Settings

3. Right click and select **Add Repository**.
4. In the IP Repositories dialog:
 - a. Browse to the tutorial directory,
Using_IP_with_IPI\lab1\hls_designs\fe_vhls_prj\IPXACTExport\impl\ip as shown in [Figure 9-9](#).
 - b. Click **Select** to close the IP Repositories window.

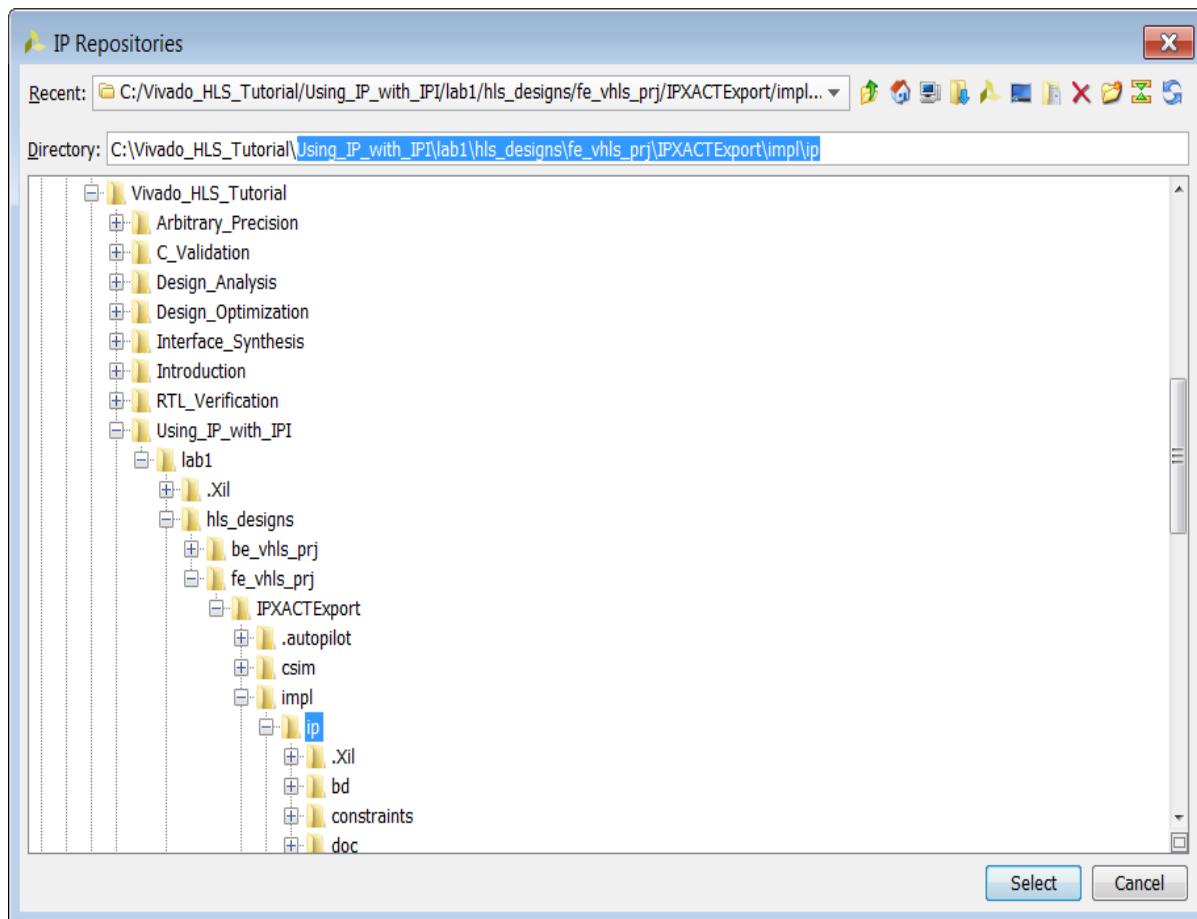


Figure 9-9: Create a New IP Repository

5. Press **Select** to accept the new repository, then select **OK** on the added repository.
6. Follow the same procedure to add the second HLS IP package:
lab1/hls_designs/be_vhls_prj/IPXACTExport/impl/ip/.
7. Click **OK** to exit the dialog box.

A Vivado HLS IP category now appears in the IP Catalog as HLS IP ([Figure 9-10](#)).

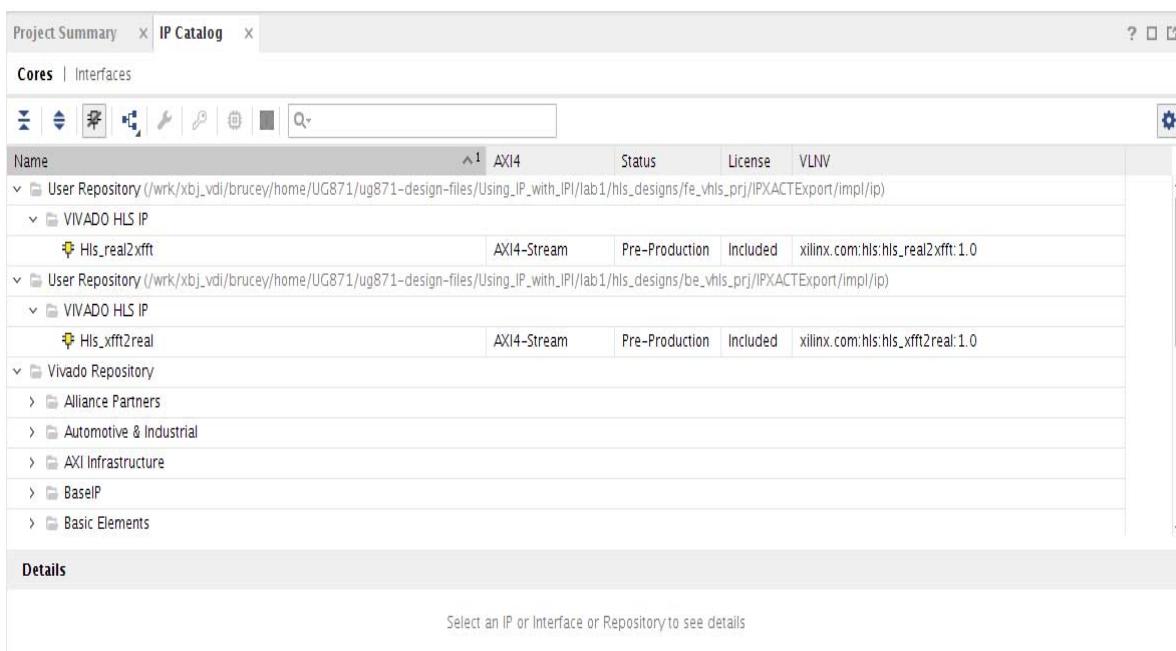


Figure 9-10: IP Catalog with HLS IP

Step 4: Create a Block Design for RealFFT

1. Click **Create Block Design** under IP Integrator in the Flow Navigator.
 - a. In the resulting dialog box, name the design RealFFT.
 - b. Click **OK**.

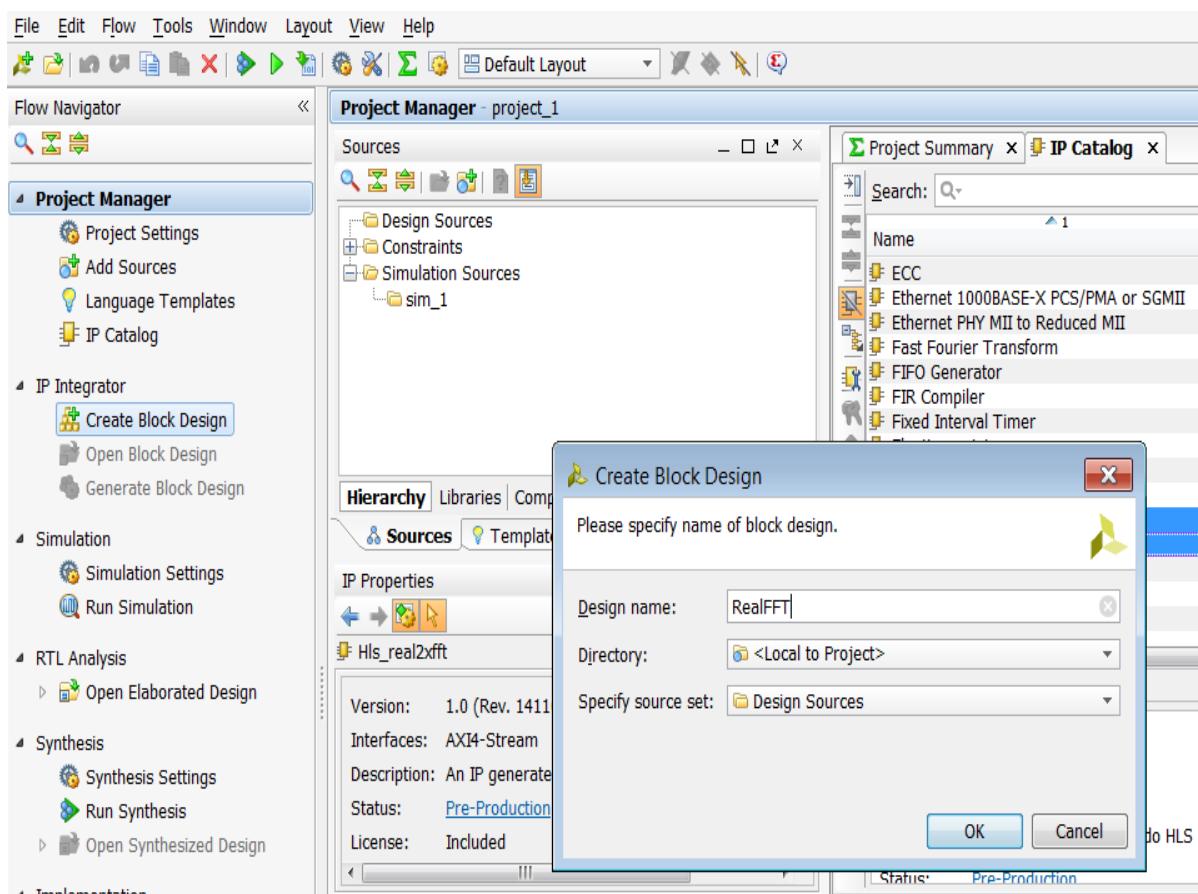


Figure 9-11: Create Block Design

The upper-right pane now has a Diagram tab. Add a Xilinx FFT IP block to the design and customize it.

2. In the Diagram tab click the **Add IP** link (Figure 9-12).
 - a. In the Search box type `fourier`.
 - b. Select **Fast Fourier Transform**.
 - c. Press **Enter**.

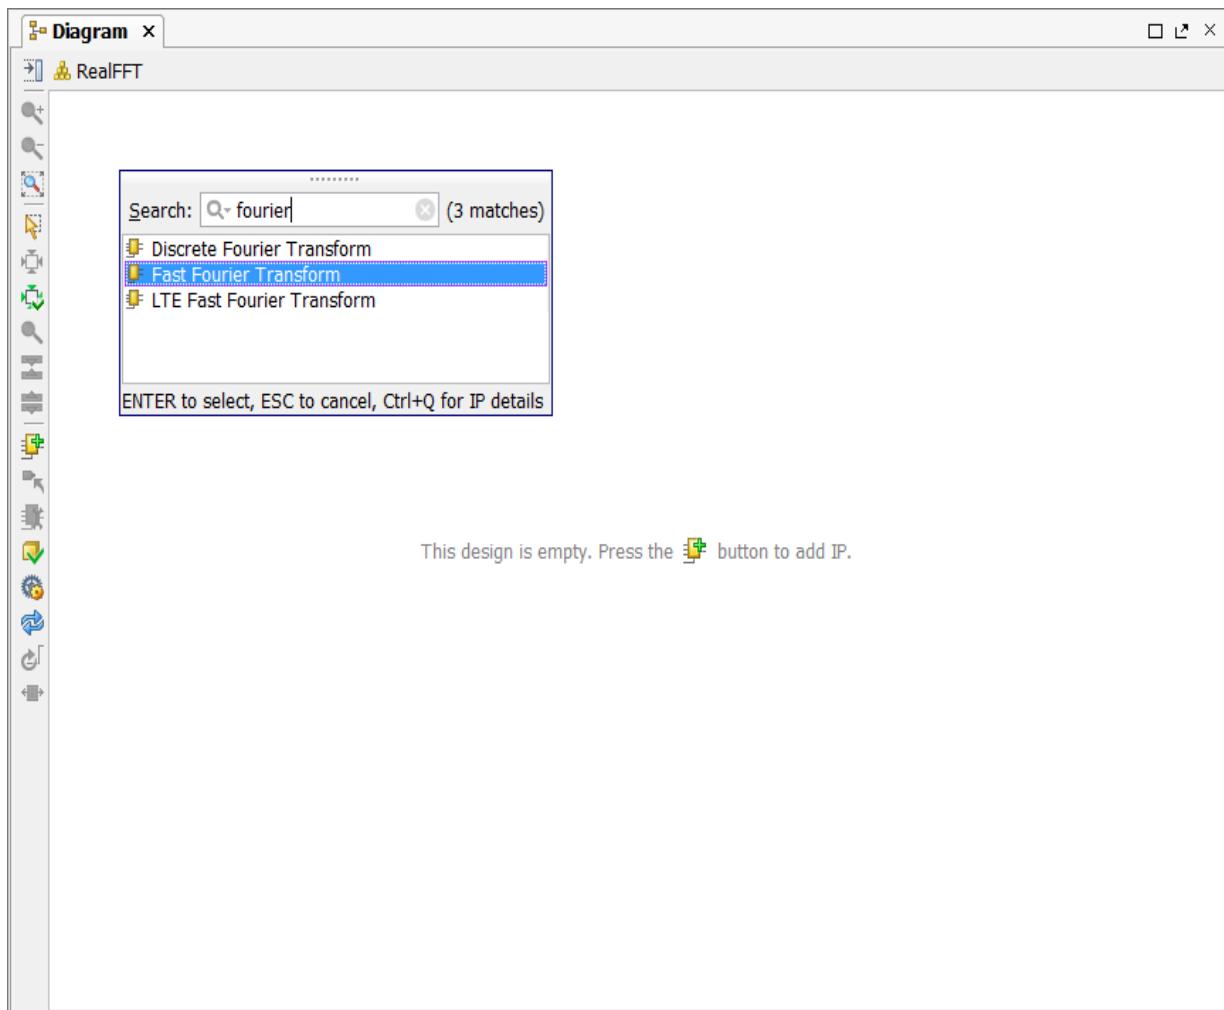


Figure 9-12: Add the Xilinx FFT IP

The Xilinx IP block FFT is now instantiated in the design, as shown in [Figure 9-13](#).

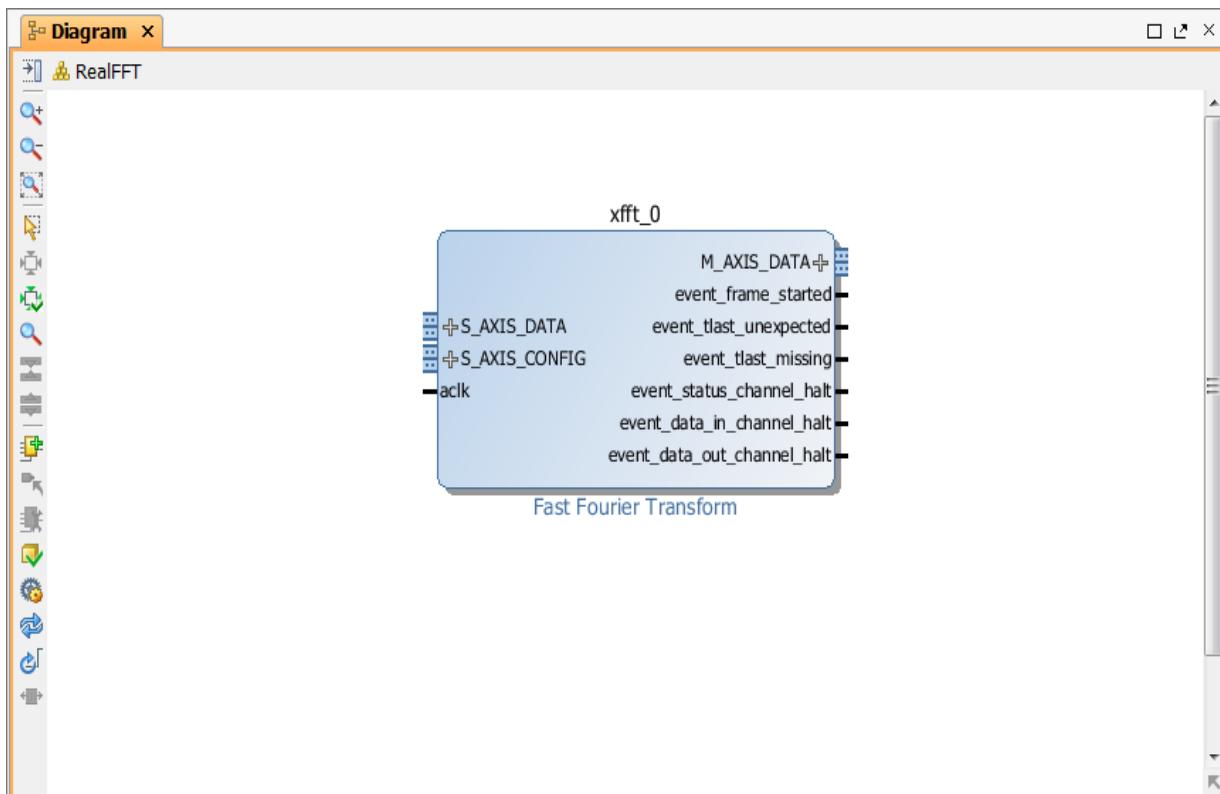


Figure 9-13: Xilinx FFT IP

3. Double-click the new Fast Fourier Transform IP symbol to open the Re-customize IP dialog box.
4. On the **Configuration** tab (Figure 9-14):
 - a. Change the **Transform Length** to 512.
 - b. Select **Pipelined, Streaming I/O** in the Architecture Choice section.

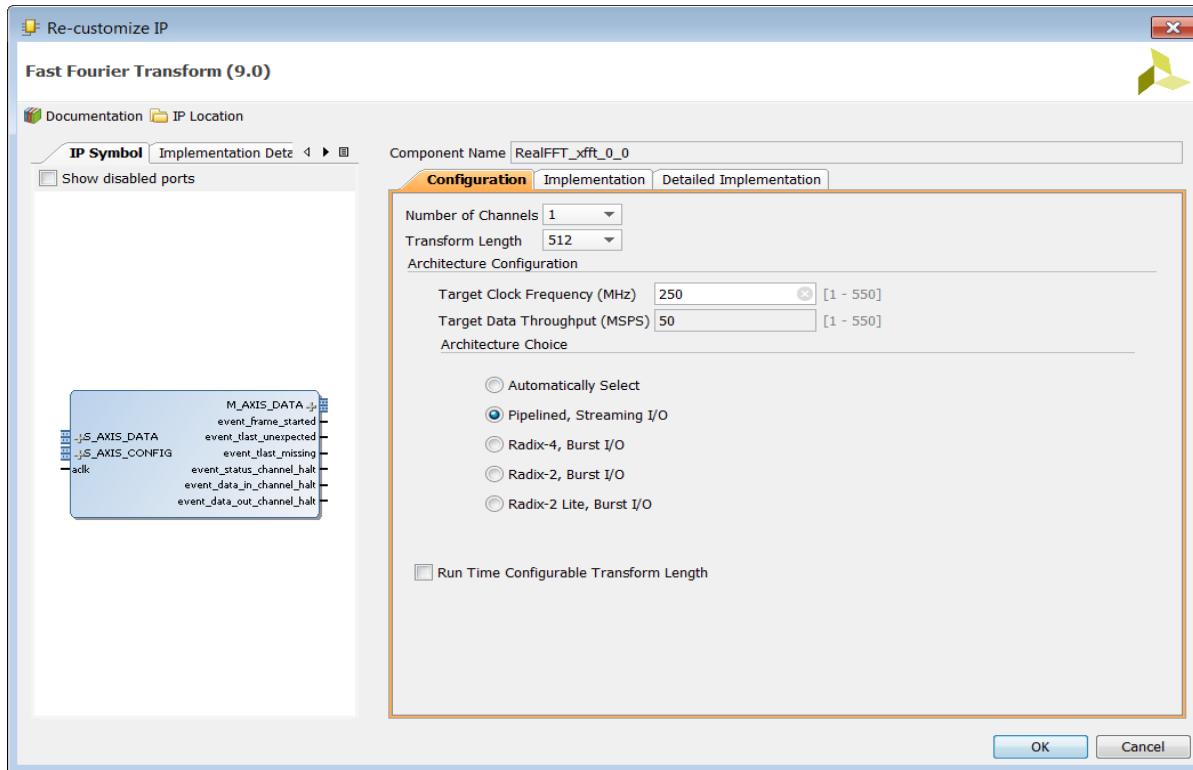


Figure 9-14: Xilinx FFT Configuration

5. Select the **Implementation** tab (Figure 9-15):
 - a. Select **ARESETN** (active low) in the Control Signals group.
 - b. Verify that **Non Real Time** is selected as Throttle Scheme.
 - c. Click **OK** to exit the Re-customize IP dialog box.

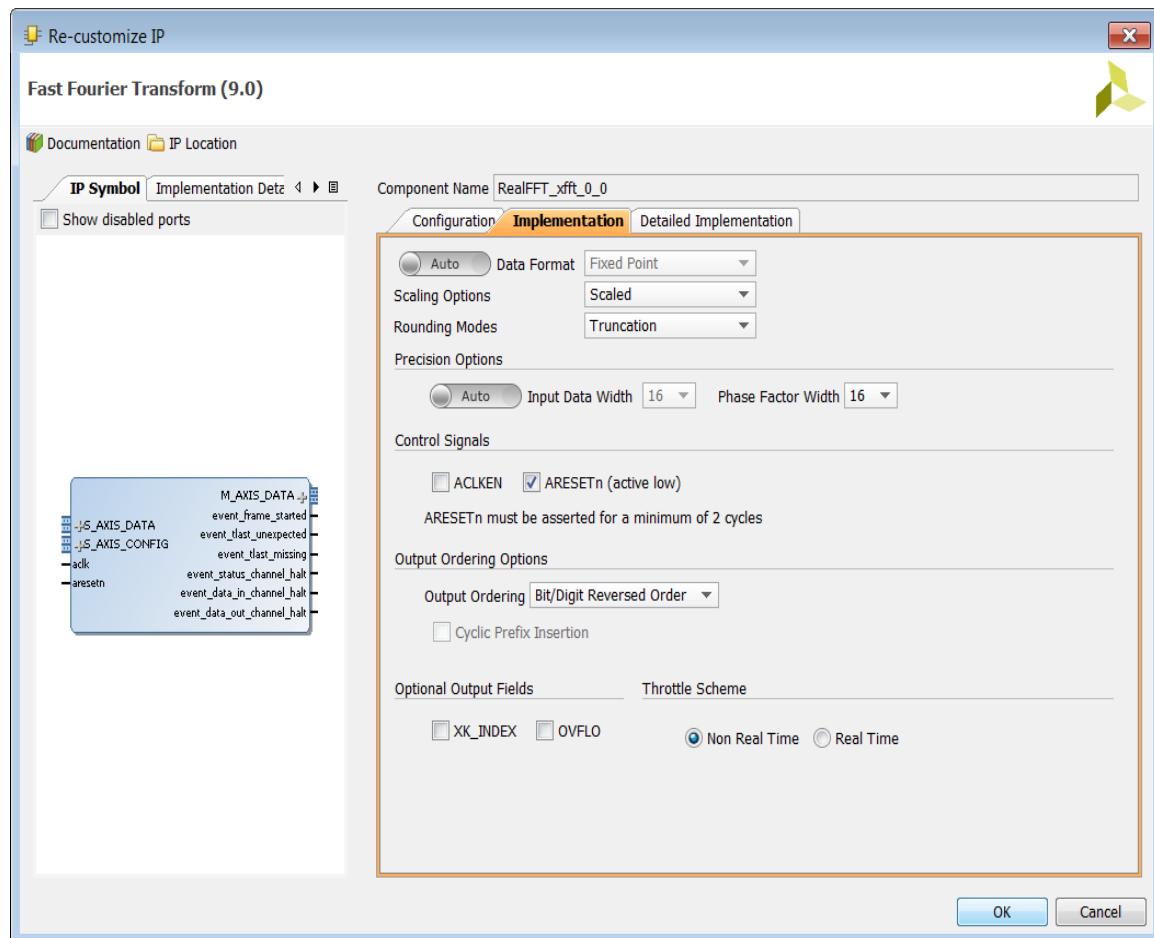


Figure 9-15: Xilinx FFT Implementation

Add one instance of each of the HLS generated blocks to the design.

6. Right-click in any space in the canvas and select **Add IP** (Figure 9-16).

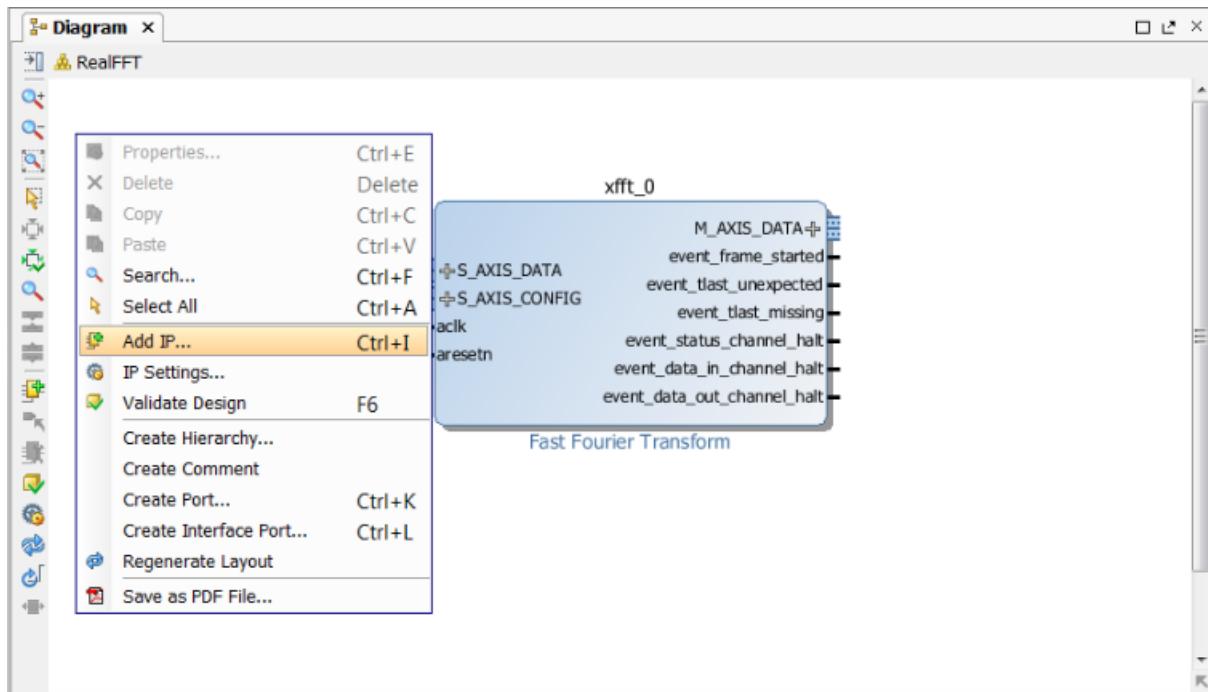


Figure 9-16: Add IP Blocks

7. Type "hls" into the Search text entry box.
 - a. Highlight both IPs. (Click the control key and select both.)
 - b. Press **Enter**.

The design block now has three IP blocks, as shown in [Figure 9-17](#).

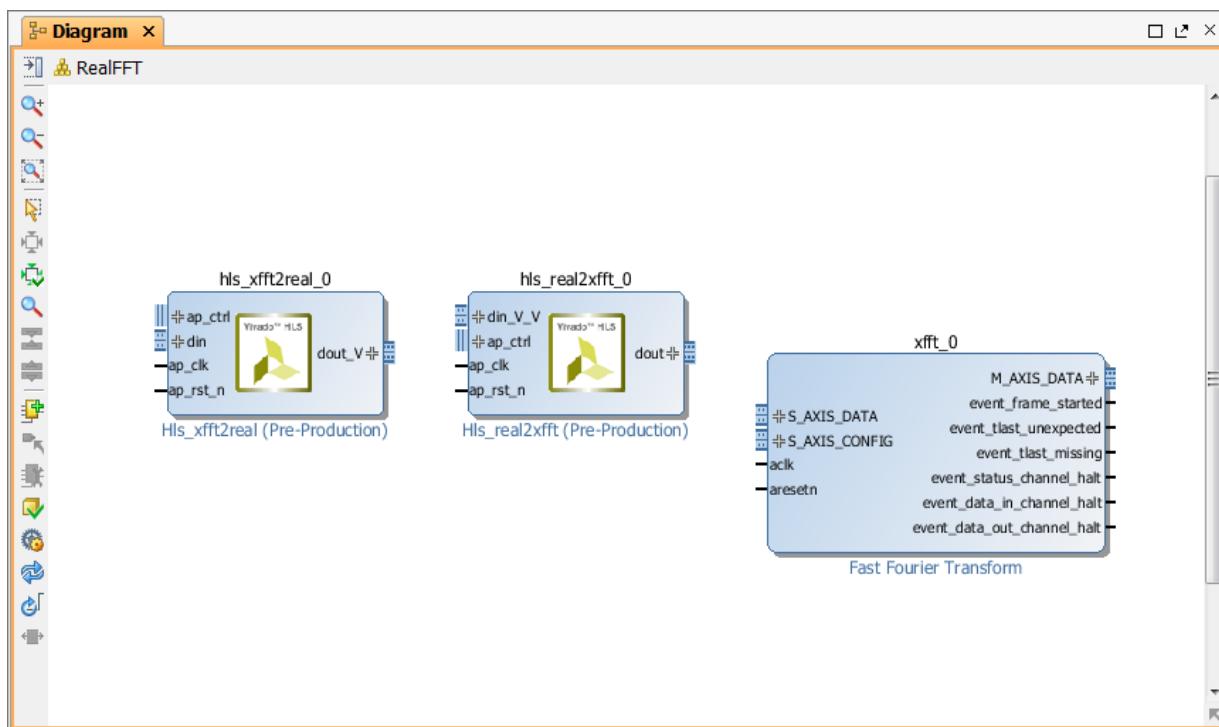


Figure 9-17: RealFFT IP Blocks

The next step is to connect HLS blocks to the FFT block and ports.

8. Hover the cursor over the **dout** interface connector of the **Hls_real2xfft** block until pencil cursor appears.
 - a. Left-click and hold down the mouse button to start a connection.
 - b. Drag the connection line to the **S_AXIS_DATA** port connector of FFT block and release (when green check mark appears next to it).
9. In a similar fashion, connect the FFT's **M_AXIS_DATA** interface to the **din** interface of the **Hls_xfft2real** block.

The two connections are shown in [Figure 9-18](#).

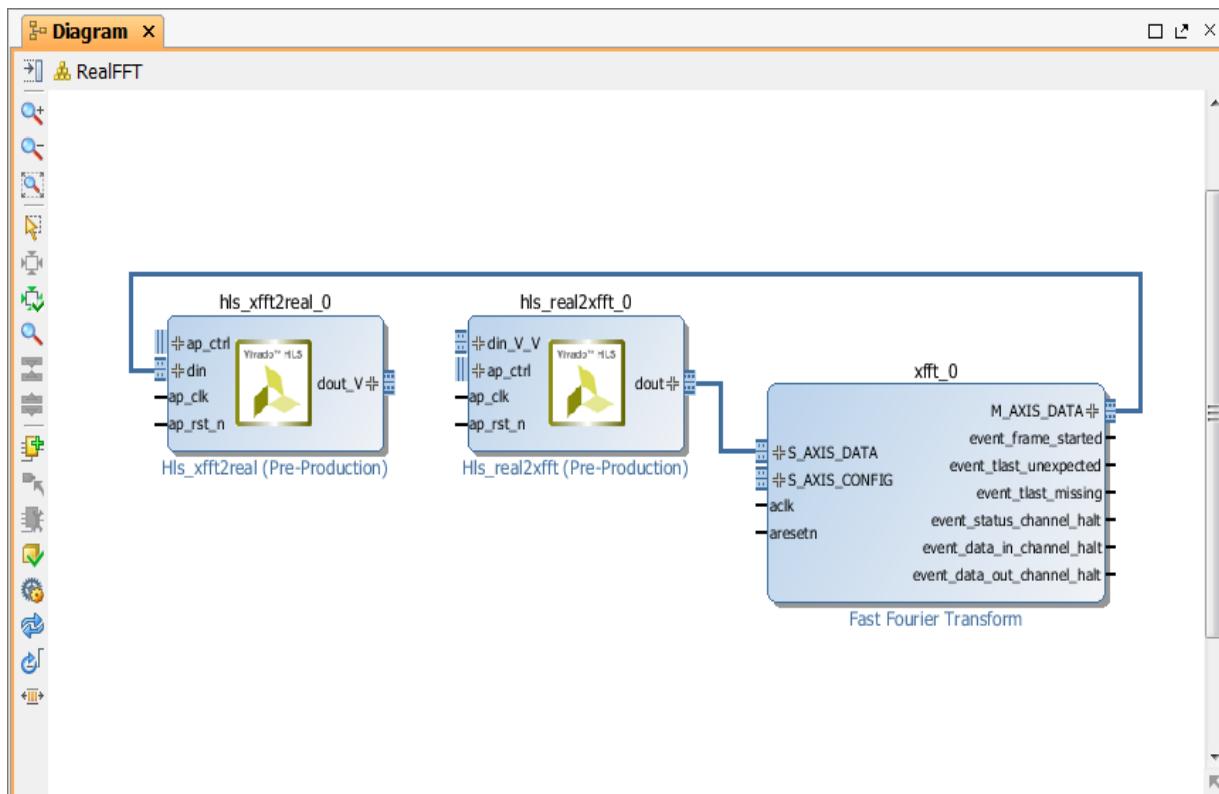


Figure 9-18: Connecting Ports on the IP Blocks

To create I/O ports for the design, make some external connections.

10. Right-click the **din_V_V** interface connector on the **hls_real2xfft** block and select **Make External** (Figure 9-19).

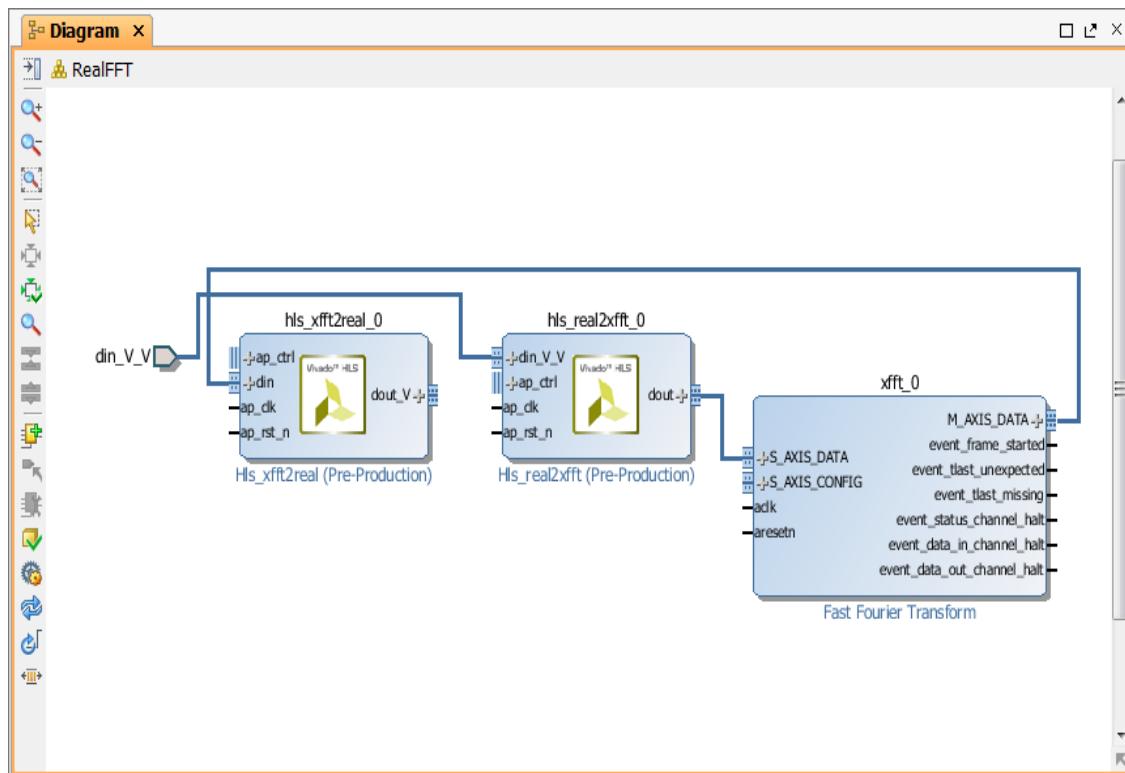


Figure 9-19: Make External Connections

11. Give the new interface port a clearly unique name.
 - a. Click the port symbol to highlight it.
 - b. In the External Interface Properties pane (Figure 9-20), click in the Name text entry box to highlight **din_V_V**.
 - c. Type `real2xfft_din` and press **Enter**.



IMPORTANT: Property changes might not take effect if this re-naming step is not done.

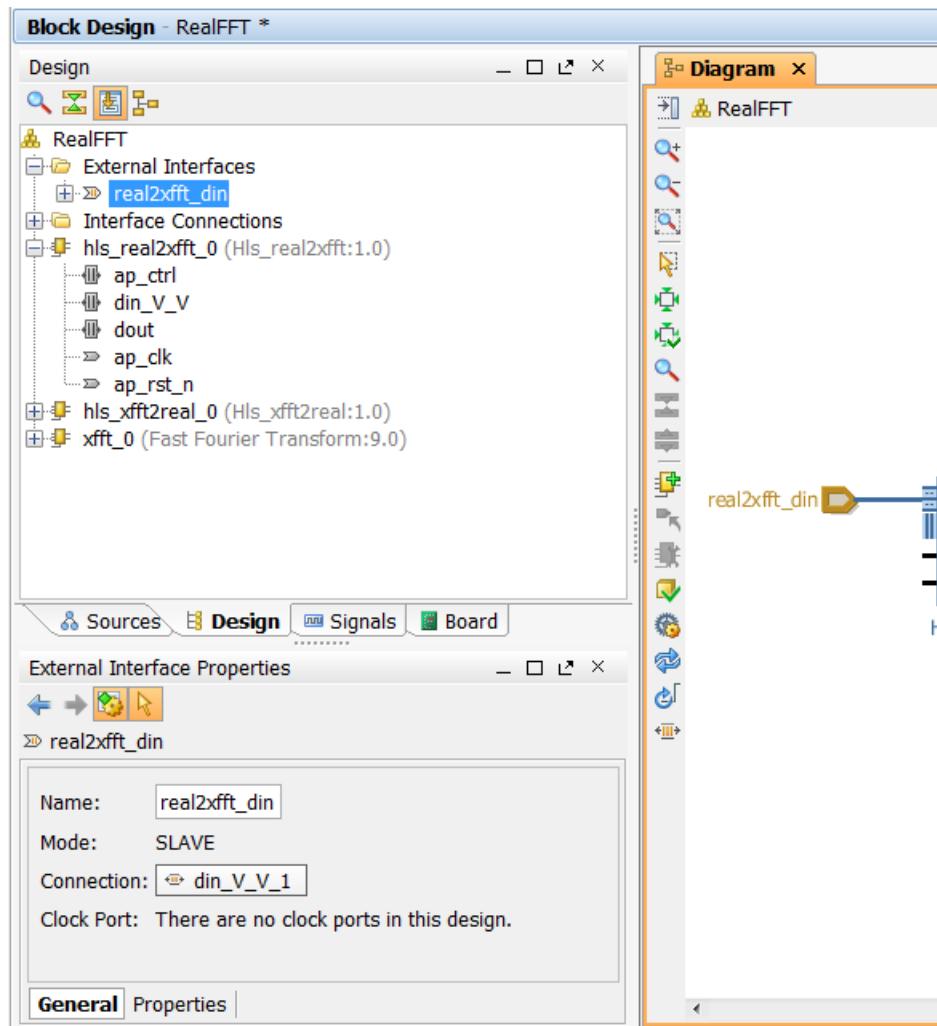


Figure 9-20: Port Naming

12. In a similar manner to the previous step:
 - a. Make the dout_v interface of the Hls_xfft2real block external and rename it **xfft2real_dout**.
13. Right-click the aclk connector of FFT block and select **Make External**.
14. Right-click the aresetn connector of the FFT block and select **Make External**.
15. Tie the ap_start ports of both HLS blocks High.
 - a. Right-click the canvas and select **Add IP**.
 - b. Type **const** into the **Search** text entry box.
 - c. Select **Constant IP**.
 - d. Double-click the Constant IP symbol (Figure 9-21) and verify that **Const Width** and **Const Val** are set to 1.

- e. Click **OK** to close Re-customize IP dialog box.

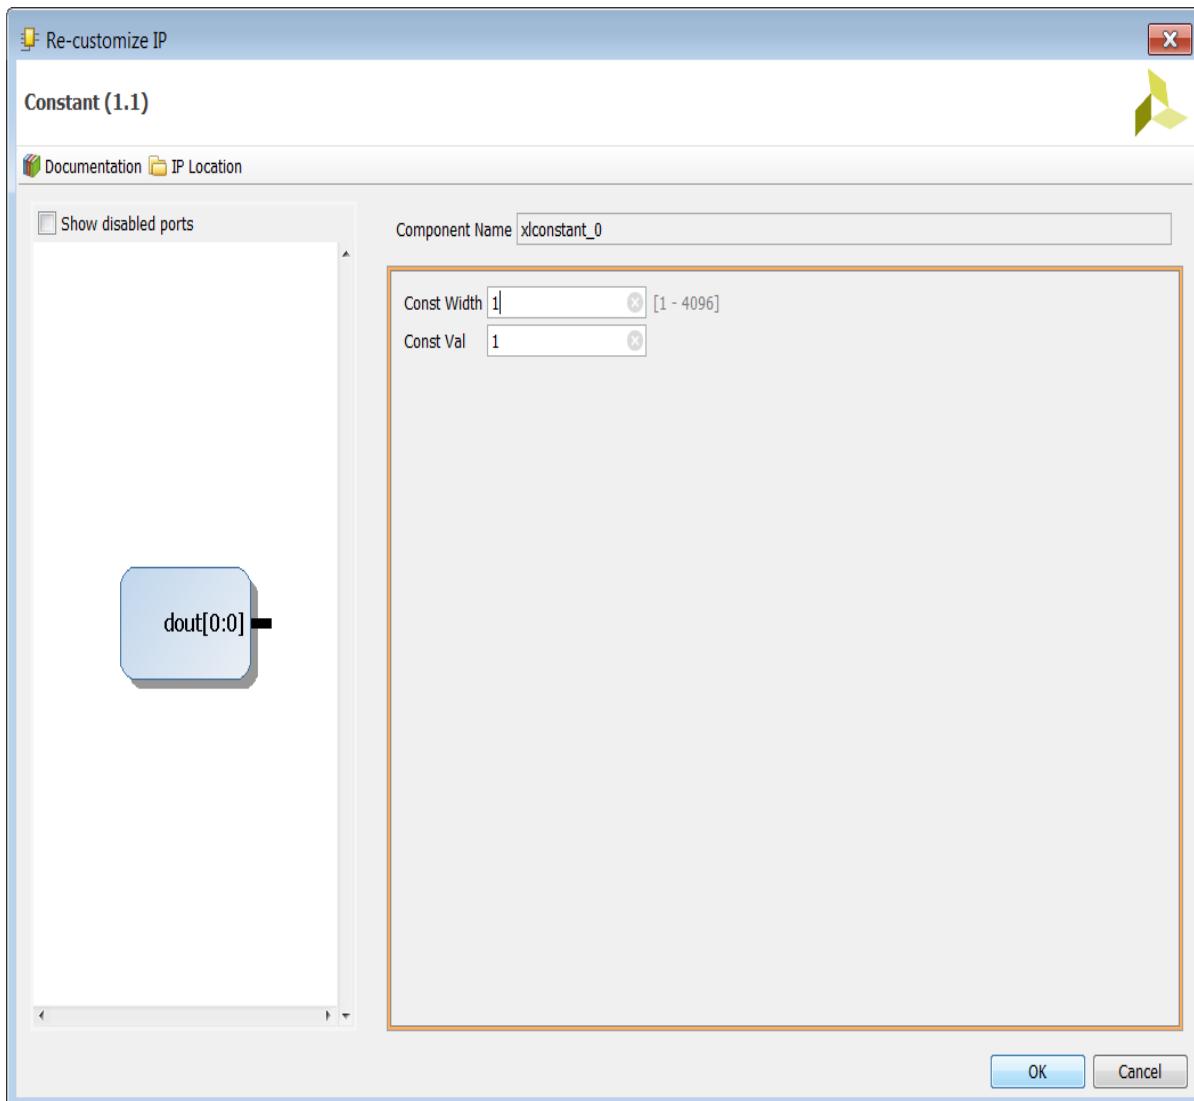


Figure 9-21: Constant IP Properties

- f. Expand the `ap_ctrl` bus port on both `hls_xfft2real` and `hls_real2xfft` (click the plus symbol associated with each port).
- g. Connect `ap_start` in both HLS blocks to the Constant block (Figure 9-22).

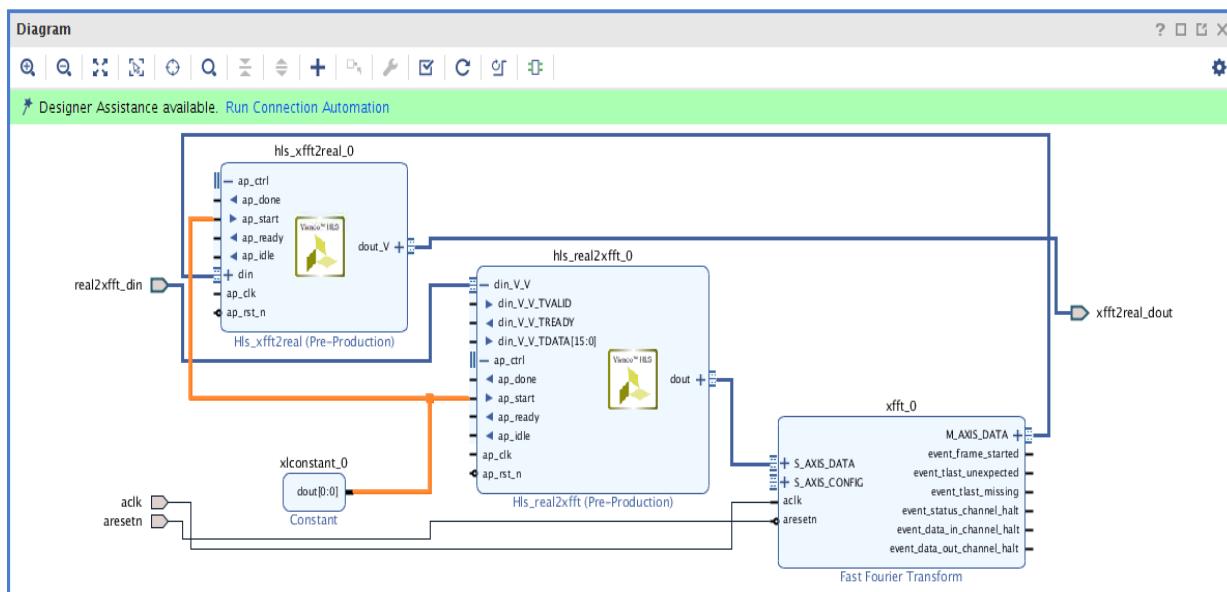


Figure 9-22: Connect AP_START to Constant

16. Make the remaining connections.

- Click and drag from the **aclk** connector of **hls_real2xfft** and **hls_xfft2real** blocks to the **aclk** external port (or **aclk** connector on FFT block or anywhere on "wire" connecting them).
- Connect **ap_rst_n** of the **hls_real2xfft** and **hls_xfft2real** blocks to the **aresetn** network.

17. Click the **Regenerate Layout** icon to clean up and reorganize the Block Design.

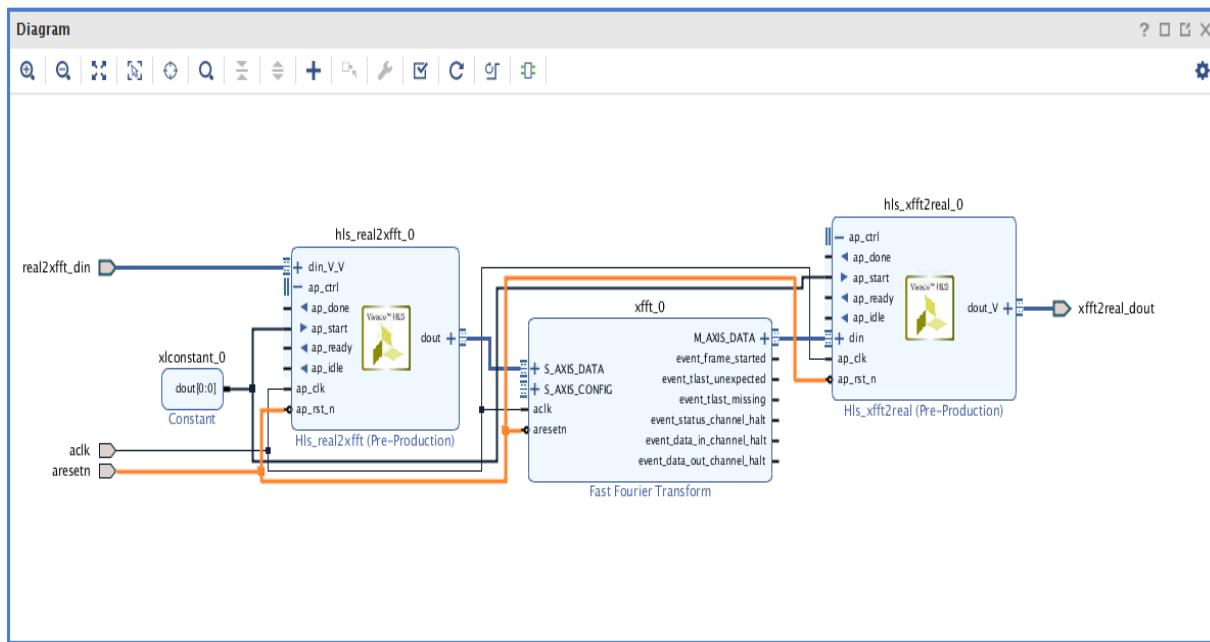


Figure 9-23: Re-generated Design Diagram

18. Click the Validate Design button to validate the design is correct.

The validate design will show some warnings. These are related to the **s_axis_config** pin of the FFT.

- The XFFT configuration interface is left unconnected because this design always operates in the default mode of the core.
- Click **OK** to close the messages..

19. Click **File > Save Block Design**.

20. Close the Block Design.

21. The next step is to generate output products.

- In the Sources tab of Project Manager pane (Figure 9-24), right-click **RealFFT.bd** and select Generate Output Products.
- Click **Generate** in the resulting dialog to initiate the generation of all output products.
- Select **OK** to ignore the warnings discussed above.

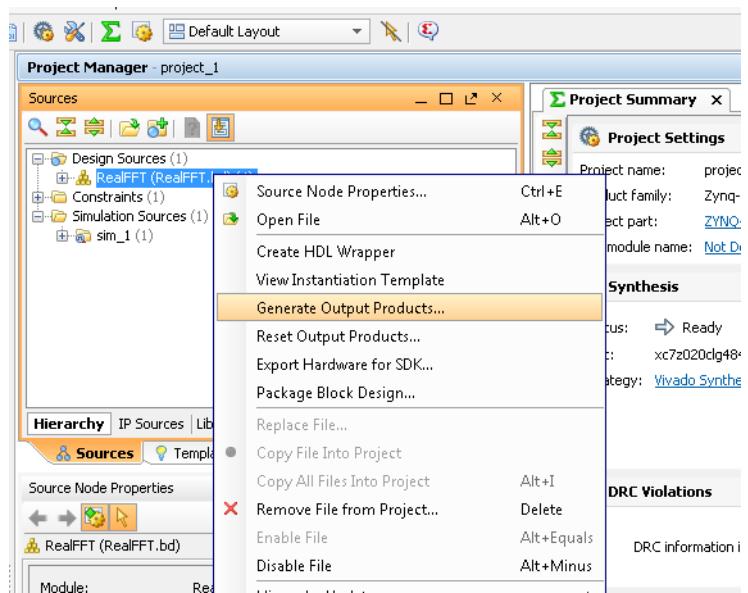


Figure 9-24: Generating Output Products

22. Create an HDL Wrapper.

- In the Sources tab of the Project Manager pane, right-click `RealFFT.bd` and select **Create HDL Wrapper**. This is the same procedure and menu as described in the previous step.
- Click **OK** and let Vivado manage the wrapper.

Step 5: Verify the Design

The next step in creating the final design is to verify design with the HDL test bench provided in the lab exercise: `realfft_rtl_tb.v`.

- Right-click **Simulation Sources** in the Sources tab of the Project Manager pane (Figure 9-25).
- Select **Add Sources**.

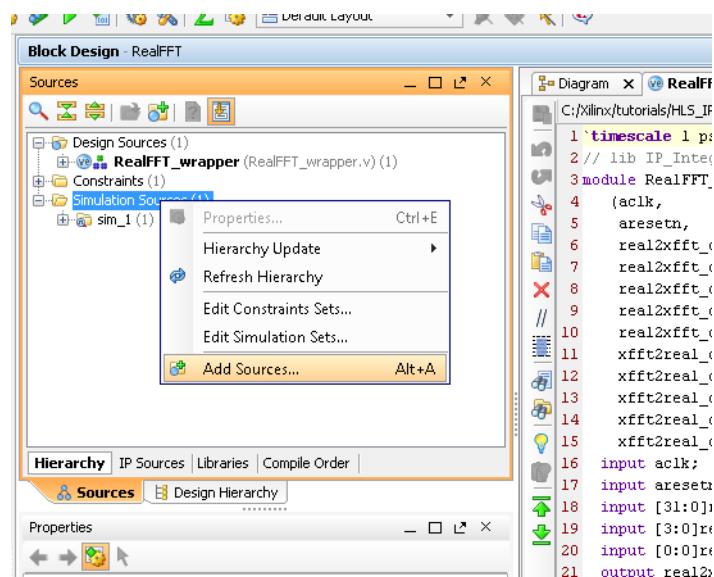


Figure 9-25: Adding Simulation Sources

3. Select **Add or Create Simulation Sources** in the Add Sources dialog box.
4. Click **Next**.
5. In the Add Sources dialog box, click the "+" symbol [Figure 9-26](#) and select **Add Files**.

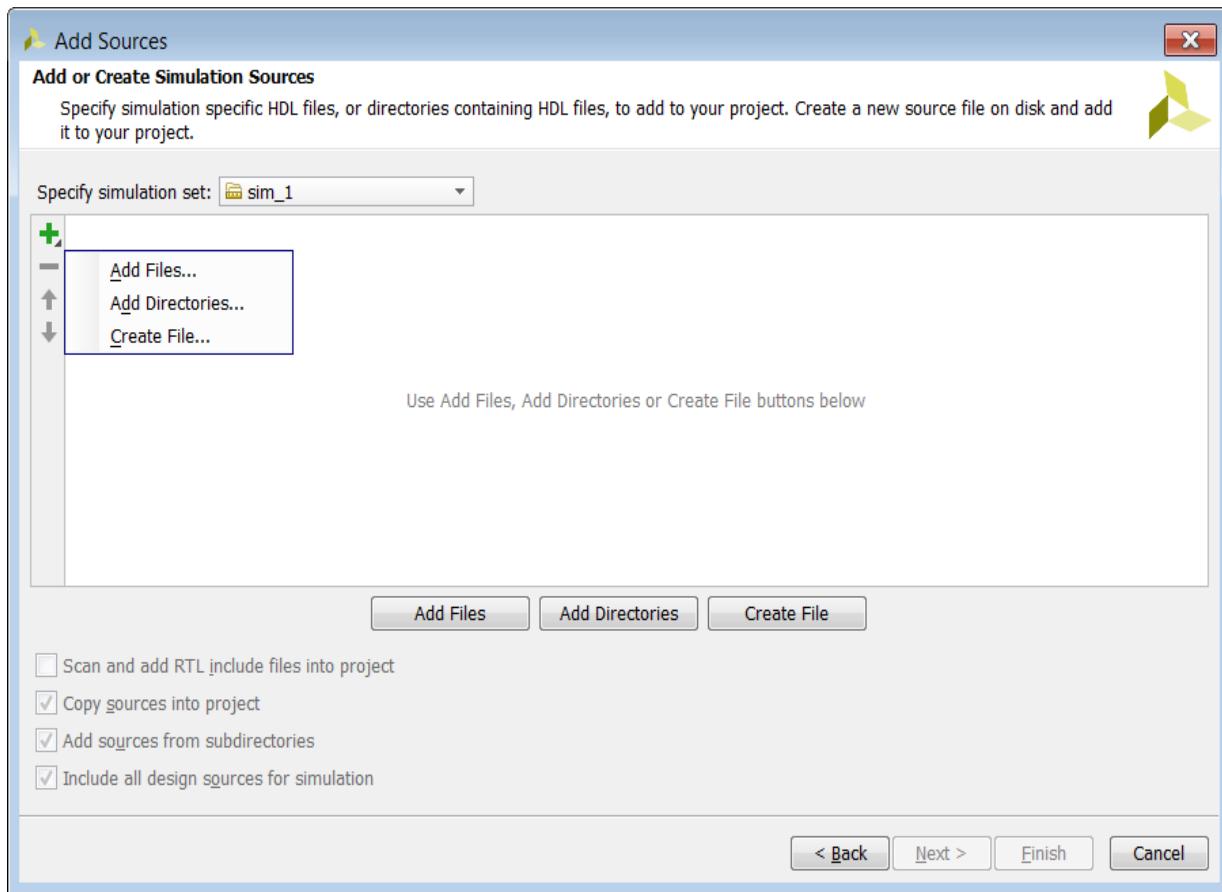


Figure 9-26: Add Source Dialog Window

6. Browse to the file `realfft_rtl_tb.v` in the tutorial directory `Using_IP_with_IPI\lab1\verilog_tb`.
7. Select it and click **OK**.
8. Select the checkbox **Copy sources into the project** (Figure 9-27).

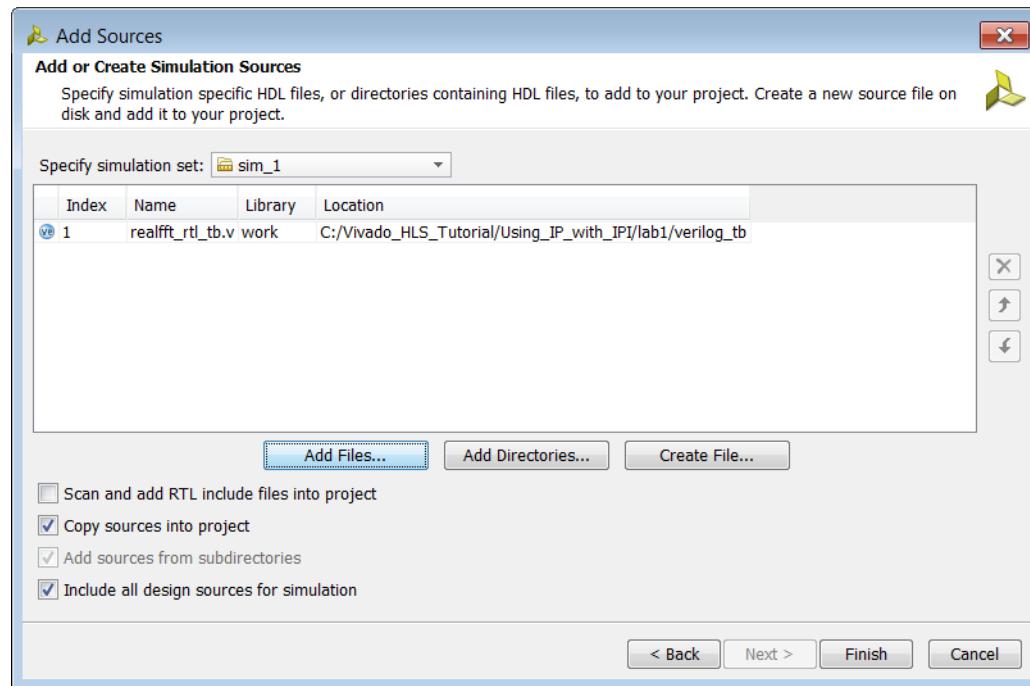


Figure 9-27: Copy Design Sources

Note: When you copy the design source files into the project, edits to the file(s) are not automatically propagated to the original source file.

9. Click **Finish**.

10. Click **Run Simulation** in the Flow Navigator (Figure 9-28) and select **Run Behavioral Simulation**.

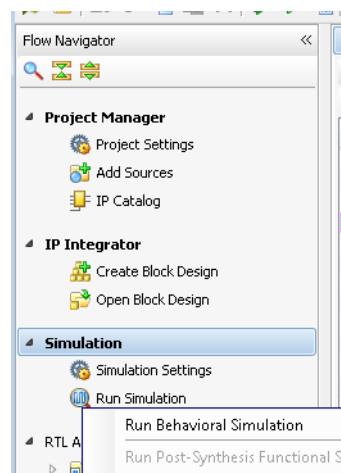


Figure 9-28: Execute Simulation

11. Once the simulation has started, click the **Run All** icon to complete simulation.

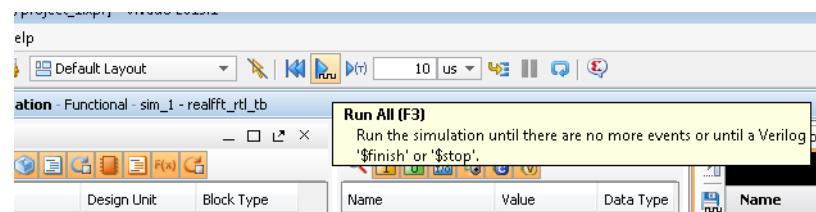


Figure 9-29: Run the Simulation to Conclusion

Conclusion

In this tutorial, you learned:

- How to create Vivado HLS IP using a Tcl script.
- How to import a created design using IP integrator and include both Xilinx IP and the Vivado IP blocks.
- How to verify the design in IPI.

Using HLS IP in a Zynq SoC Design

Overview

A common use of High-Level Synthesis design is to create an accelerator for a CPU – to move code that executes on the CPU into the FPGA programmable logic to improve performance. This tutorial shows how you can incorporate a design created with High-Level Synthesis into a Zynq device.

This tutorial consists of two lab exercises:

Lab 1 Description

You create and configure a simple HLS design to work with the CPU on a Zynq device. The HLS design used in this lab is simple to allow the focus of the tutorial to be on explaining the connections to the CPU and how to configure the software drivers created by High-Level Synthesis to control the device and manage interrupts.

Lab 2 Description

This lab illustrates a common high performance connection scheme for connecting hardware accelerator blocks that consume data originating in the CPU memory and/or producing data destined for it in a streaming manner. The lab highlights the software requirements to avoid cache coherency issues.

Tutorial Design Description

You can download the tutorial design file can be downloaded from the Xilinx Website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory
Vivado_HLS_Tutorial\Using_IP_with_Zynq.

The sample design is a simple multiple accumulate block. The focus of this tutorial exercise is the methodology, connections and integration of the software drivers. (The tutorial does not focus on the logic in the design itself.)

Lab 1: Implement Vivado HLS IP on a Zynq Device

This lab exercise integrates both the High-Level Synthesis IP and the software drivers created by HLS to control the IP in a design implemented on a Zynq device.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory Vivado_HLS_Tutorial is unzipped and placed in the location C:\Vivado_HLS_Tutorial. If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the Vivado_HLS_Tutorial directory.*

Step 1: Create a Vivado HLS IP Block

1. Open the Vivado HLS Command Prompt.
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt** ([Figure 10-1](#)).
 - On Linux, open a new shell.

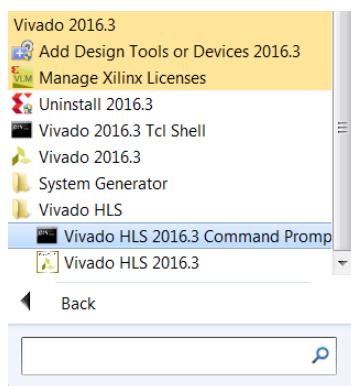


Figure 10-1: Vivado HLS Command Prompt

2. Using the command prompt window, change the directory to Vivado_HLS_Tutorial\Using_IP_with_Zynq\lab1\hls_macc ([Figure 10-2](#)).
3. Type `vivado_hls -f run_hls.tcl` to create the HLS IP ([Figure 10-2](#)).

```
C:\Vivado_HLS_Tutorial>cd Using_IP_with_Zynq
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq>cd lab1
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq\lab1>cd hls_macc
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq\lab1\hls_macc>vivado_hls -f run_hls.tcl
```

Figure 10-2: Create the HLS Design

When the script completes, there is a Vivado HLS project directory `vhls_prj`, which contains the HLS IP, including the Vivado IP Catalog archive for use in Vivado designs.

The remainder of this tutorial exercise shows how the Vivado HLS IP blocks can be integrated into a Zynq design using IP Integrator.

Step 2: Create a Vivado Zynq Project

1. Launch the Vivado Design Suite (not Vivado HLS):
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado 2018.3**.
 - On Linux, type `vivado` in the shell.
2. From the Welcome screen, click **Create New Project** ([Figure 10-3](#)).

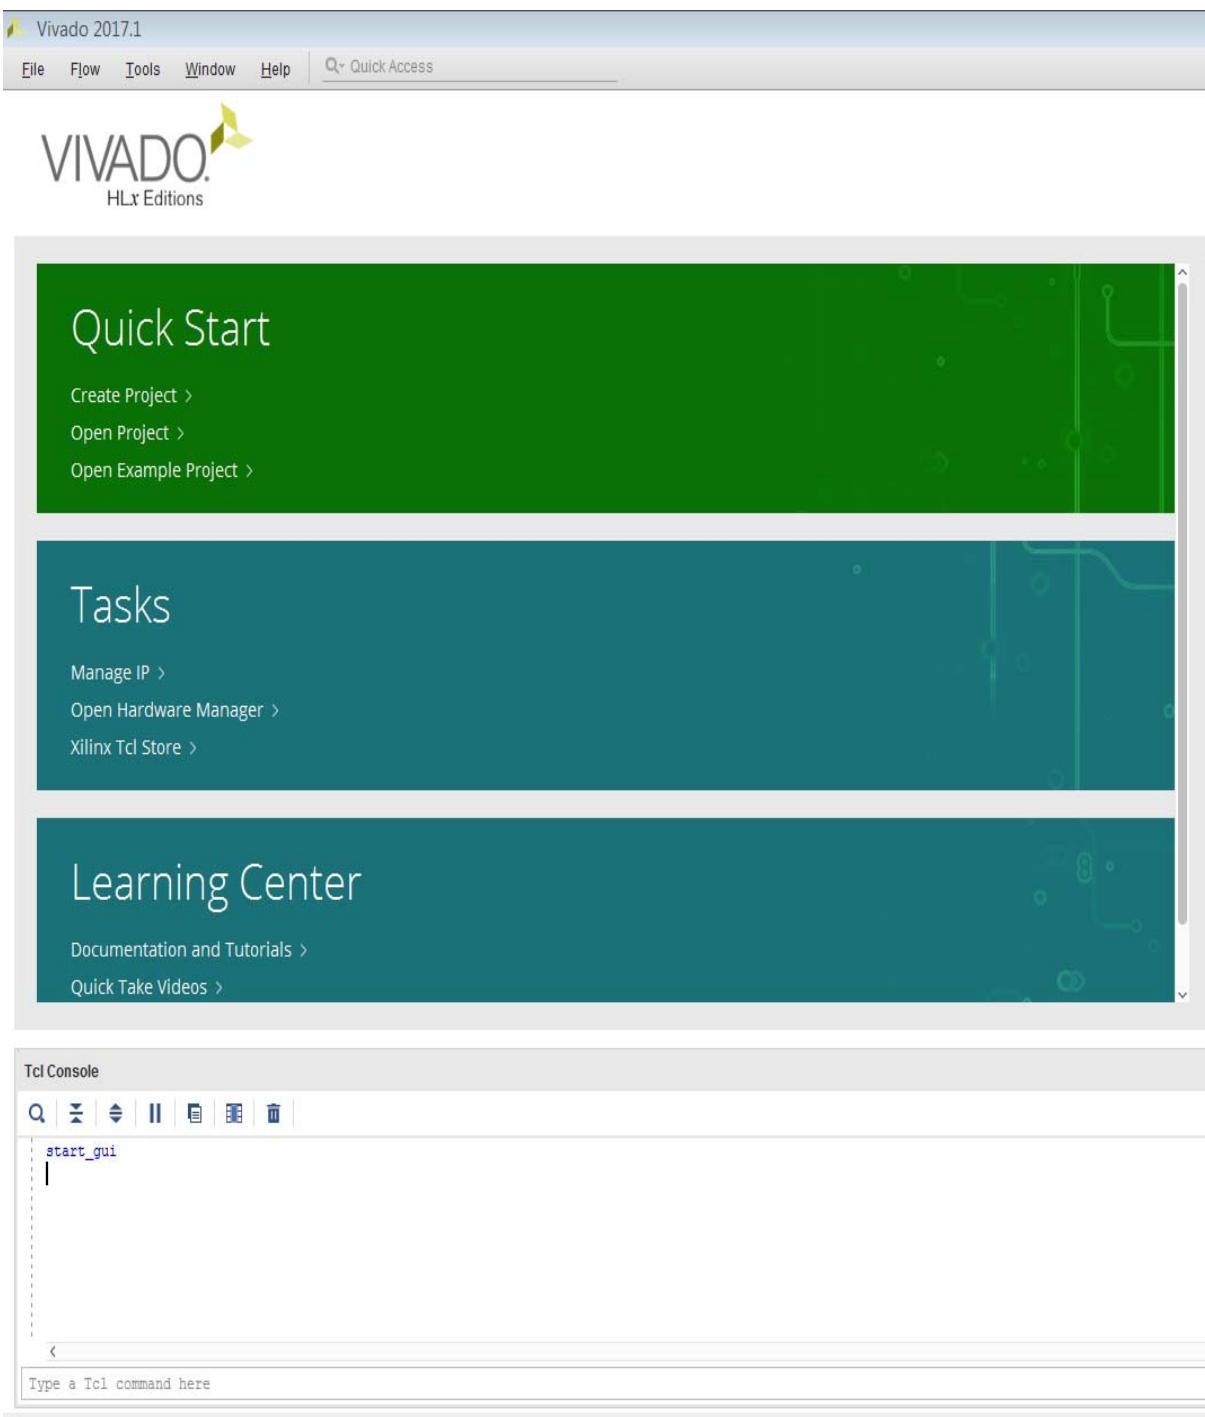


Figure 10-3: Vivado Welcome Screen

3. In the New Project wizard:
 - a. Click **Next**.
 - b. In the Project Location text entry box, browse to the location of the tutorial file directory `Using_IP_with_Zynq\lab1` and click **Next** (Figure 10-4).

- c. On the Project Type page, select RTL Project and **Do not specify sources at this time** (if it is not the default).
- d. Click **Next**.

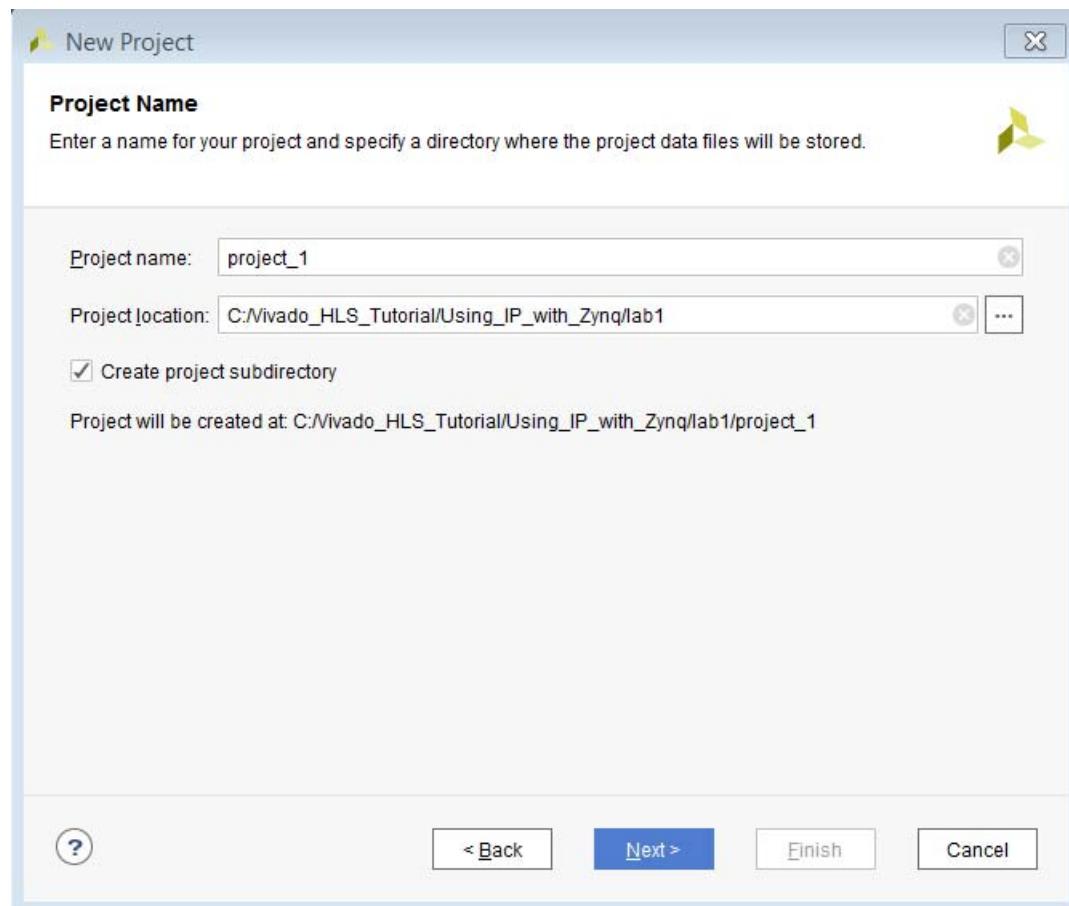


Figure 10-4: Specify the Vivado Project Directory

4. On the Default Part page:
 - a. Click **Boards**.
 - b. Select the **ZYNQ-7 ZC702 Evaluation Board** (Figure 10-5).

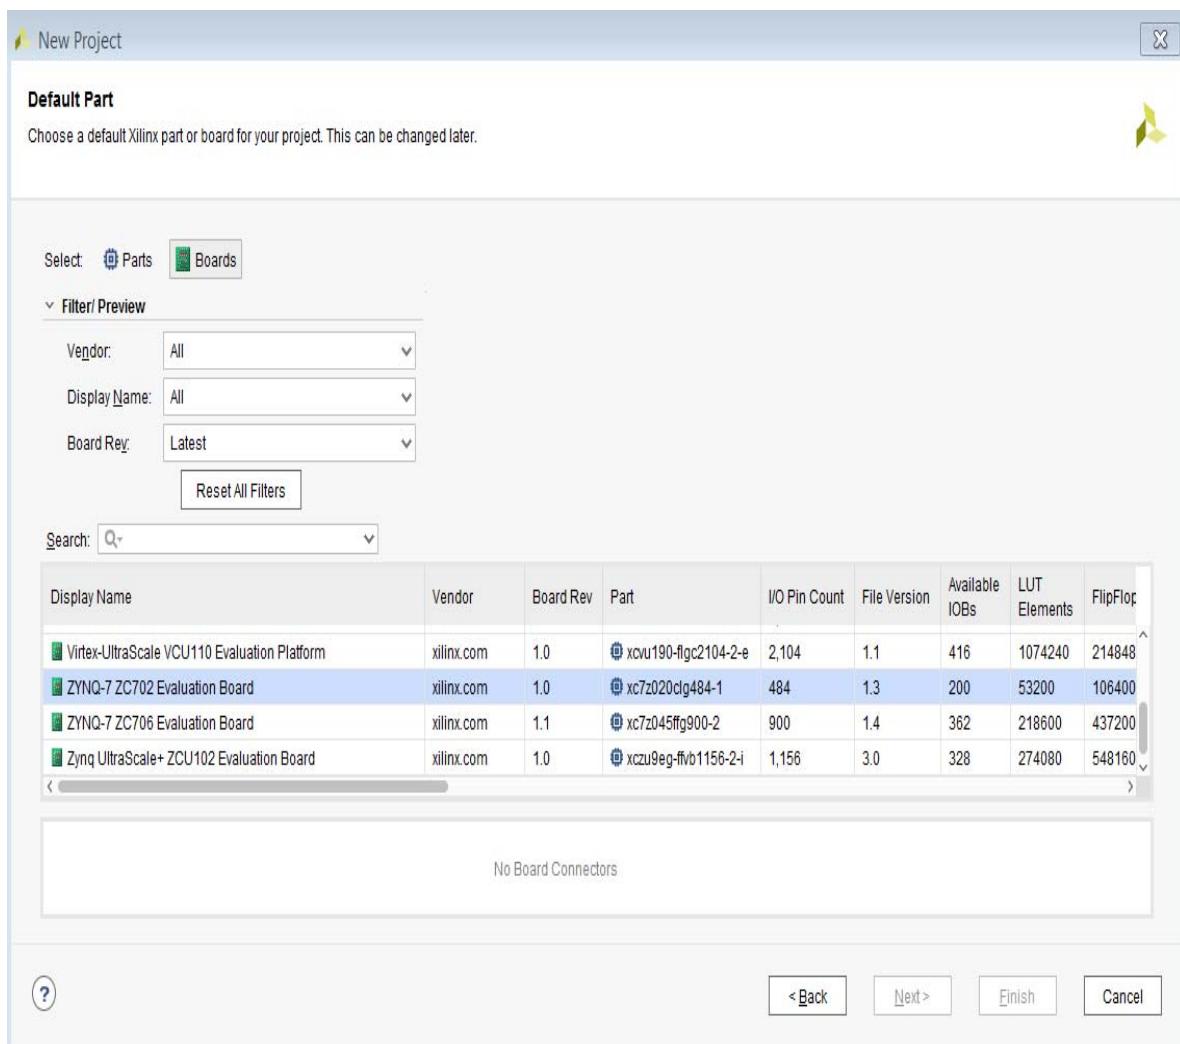


Figure 10-5: Specify the Vivado Project Details

- Click **Next**.
- Click **Finish** on the New Project Summary Page.

The project workspace opens as shown in [Figure 10-6](#).

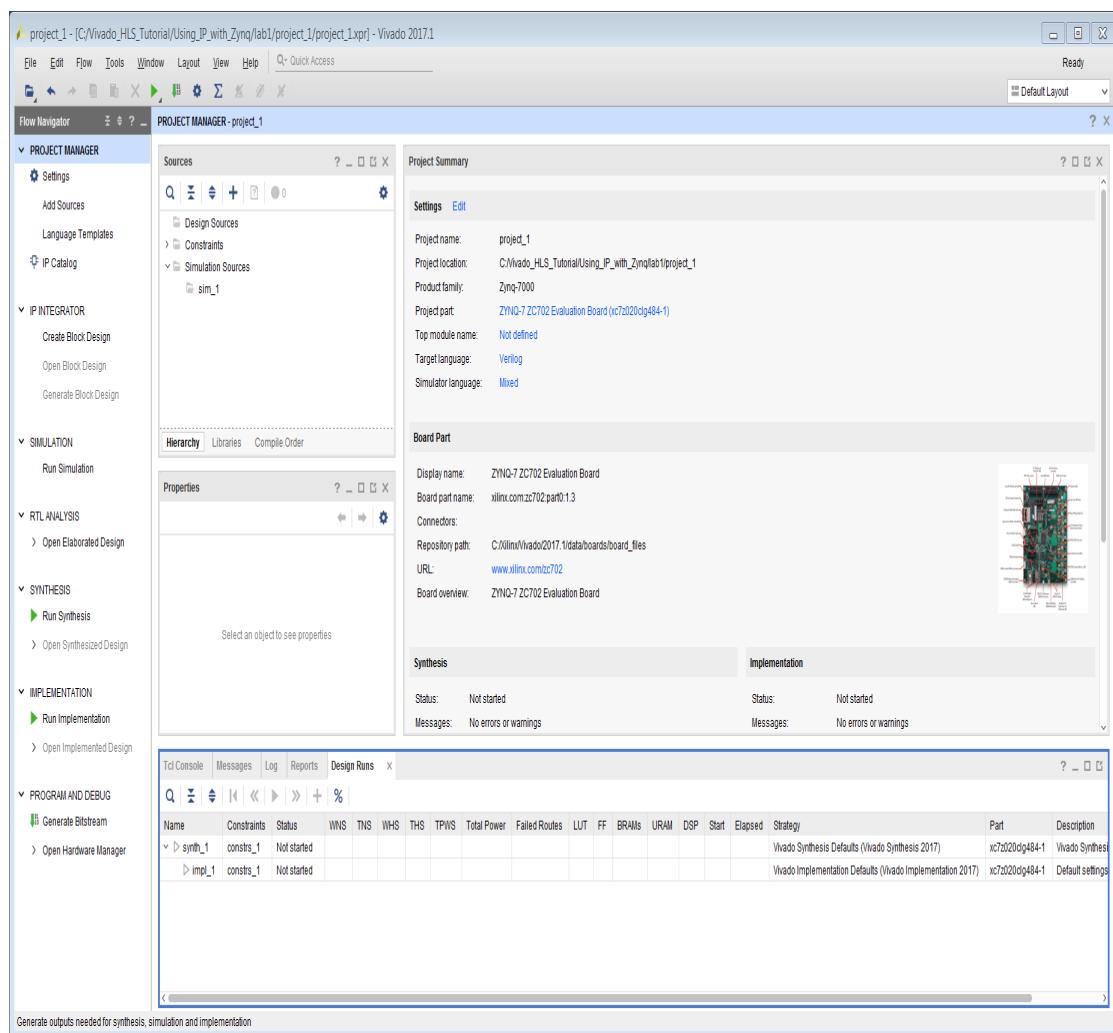


Figure 10-6: Initial Vivado Zynq Project

Step 3: Add HLS IP to the IP Catalog

- In the Project Manager area of the Flow Navigator pane, click **IP Catalog**.

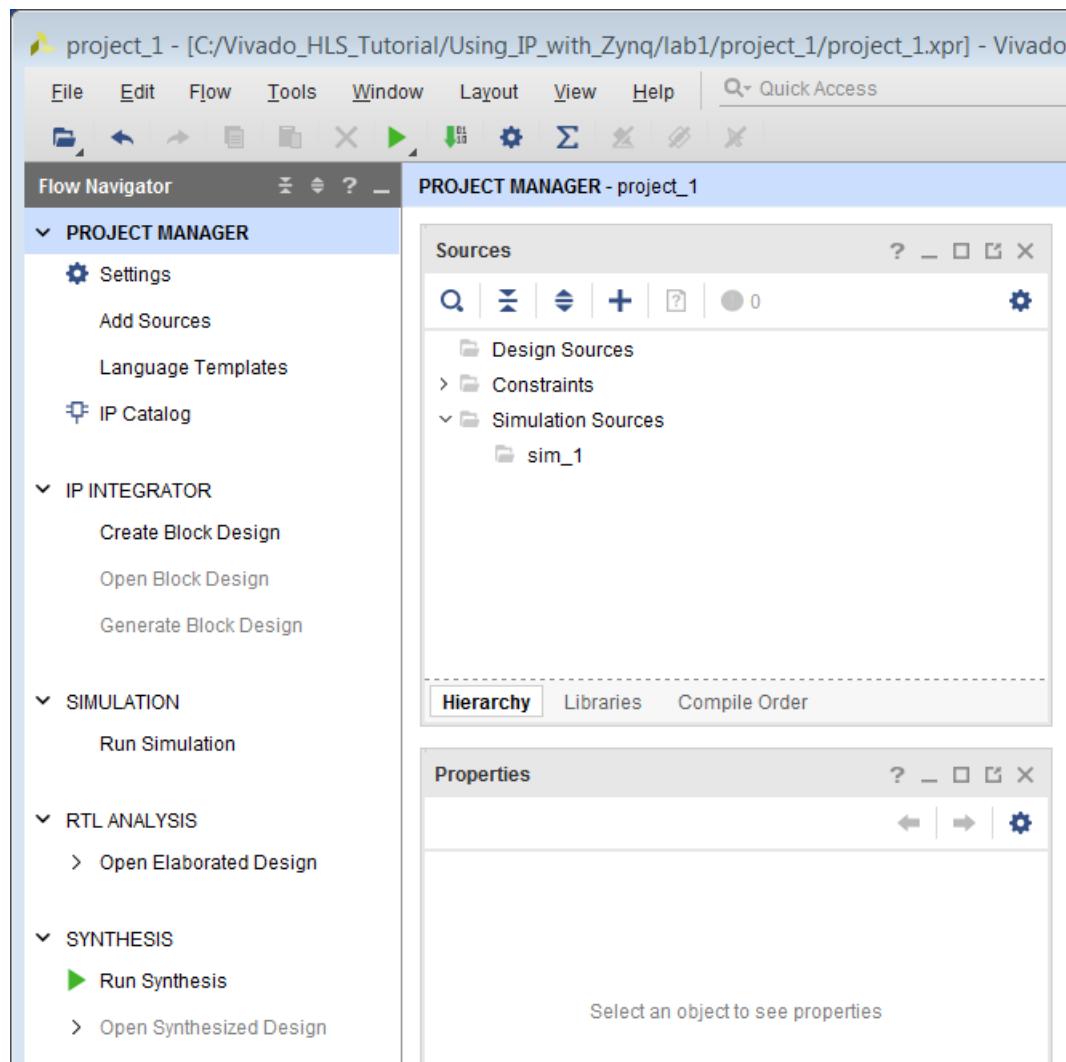


Figure 10-7: Open the IP Catalog

The IP Catalog appears in the main pane of the workspace.

2. Right click in an open space, and select **Add Repository**.



Figure 10-8: Open the IP Catalog Settings

3. Right click on IP Catalog Canvas and select **Add Repository**.
4. In the IP Repositories dialog box:
 - a. Browse to the location of the IP created by Vivado HLS,
Using_IP_with_Zynq\lab1\hls_macc\vhls_prj\solution1\impl\ip and click **Select**.

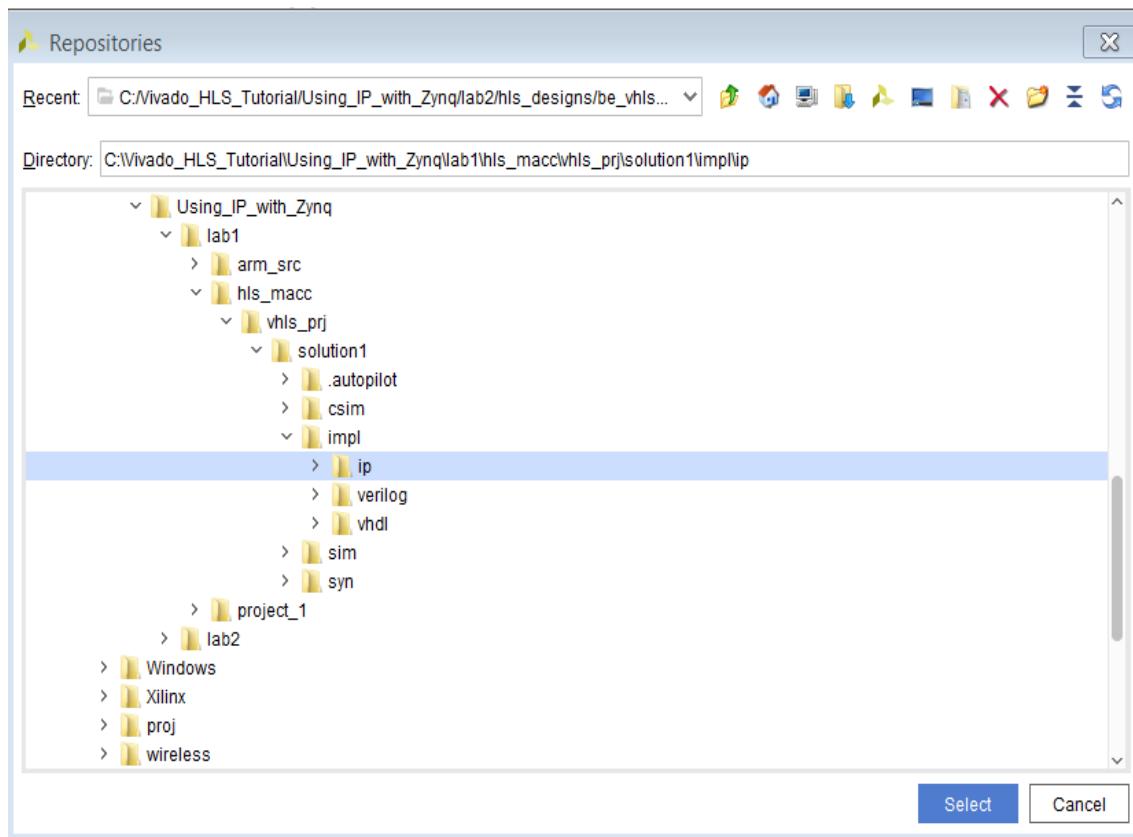


Figure 10-9: IP Repository

5. Click **OK** to close the IP repository manager.

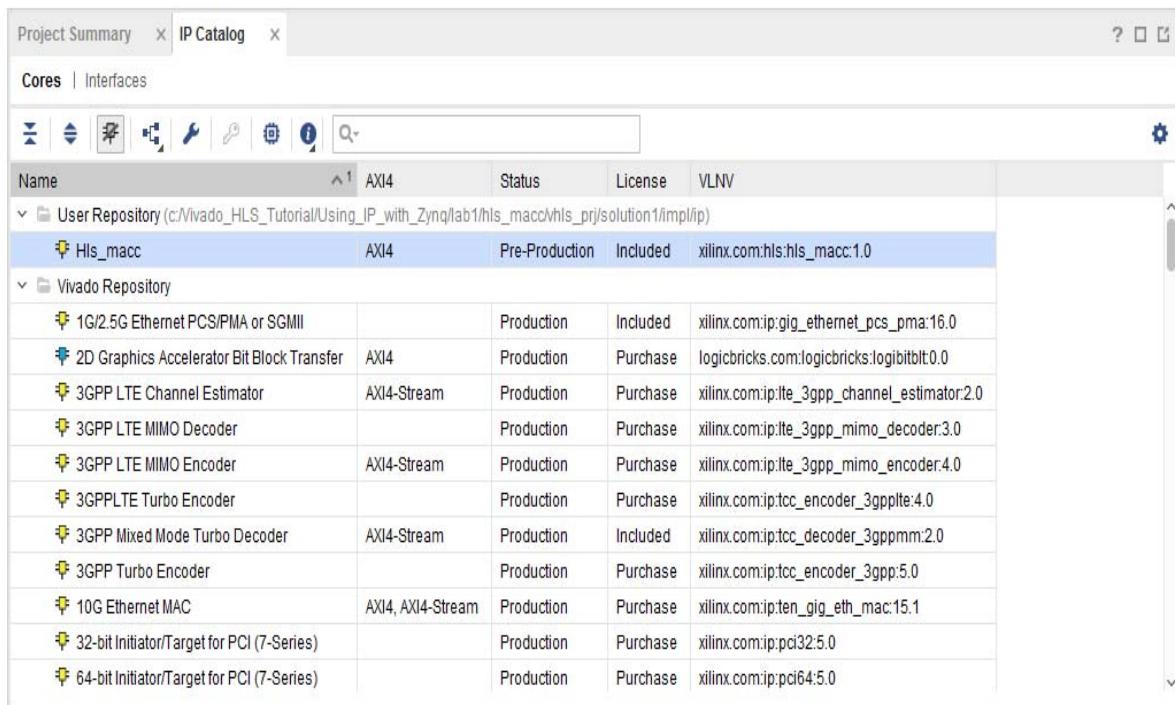


Figure 10-10: HLS IP in the Repository

6. There is now an HLS IP in the IP Catalog, `Hls_macc`.

Step 4: Creating an IP Integrator Block Design of the System

1. In the IP Integrator area of the Flow Navigator, click Create Block Design and type `Zynq_Design` in the dialog box.

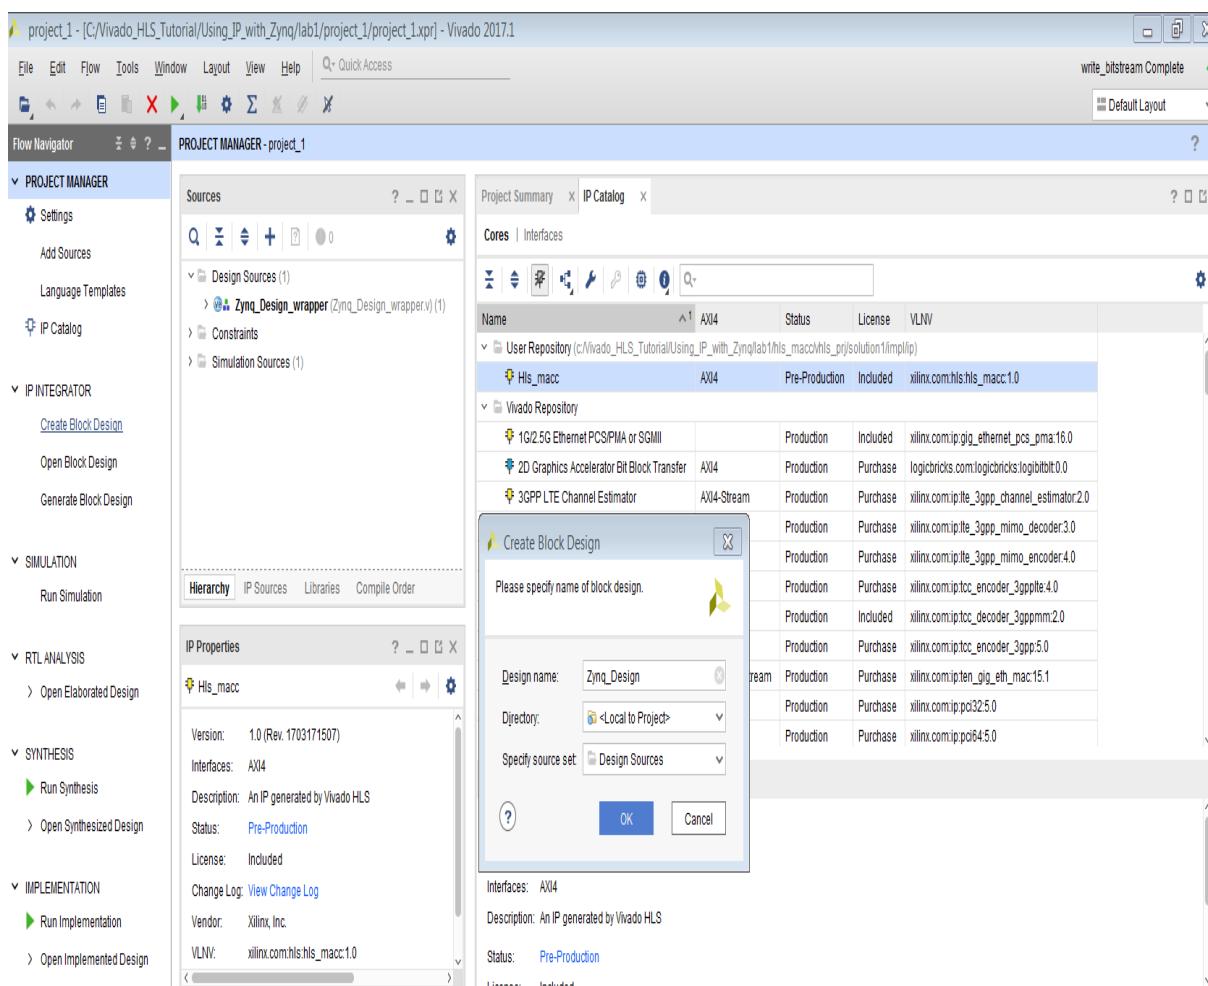


Figure 10-11: Create the Zynq Design

The Block Design view opens in the main pane, with a new Diagram tab, containing a blank Block Design canvas.

2. Press the **Add IP** button on the main screen open the IP search dialog.
 - a. Type **zynq** into the Search text entry box.
 - b. Select **ZYNQ7 Processing System** and press **Enter**.

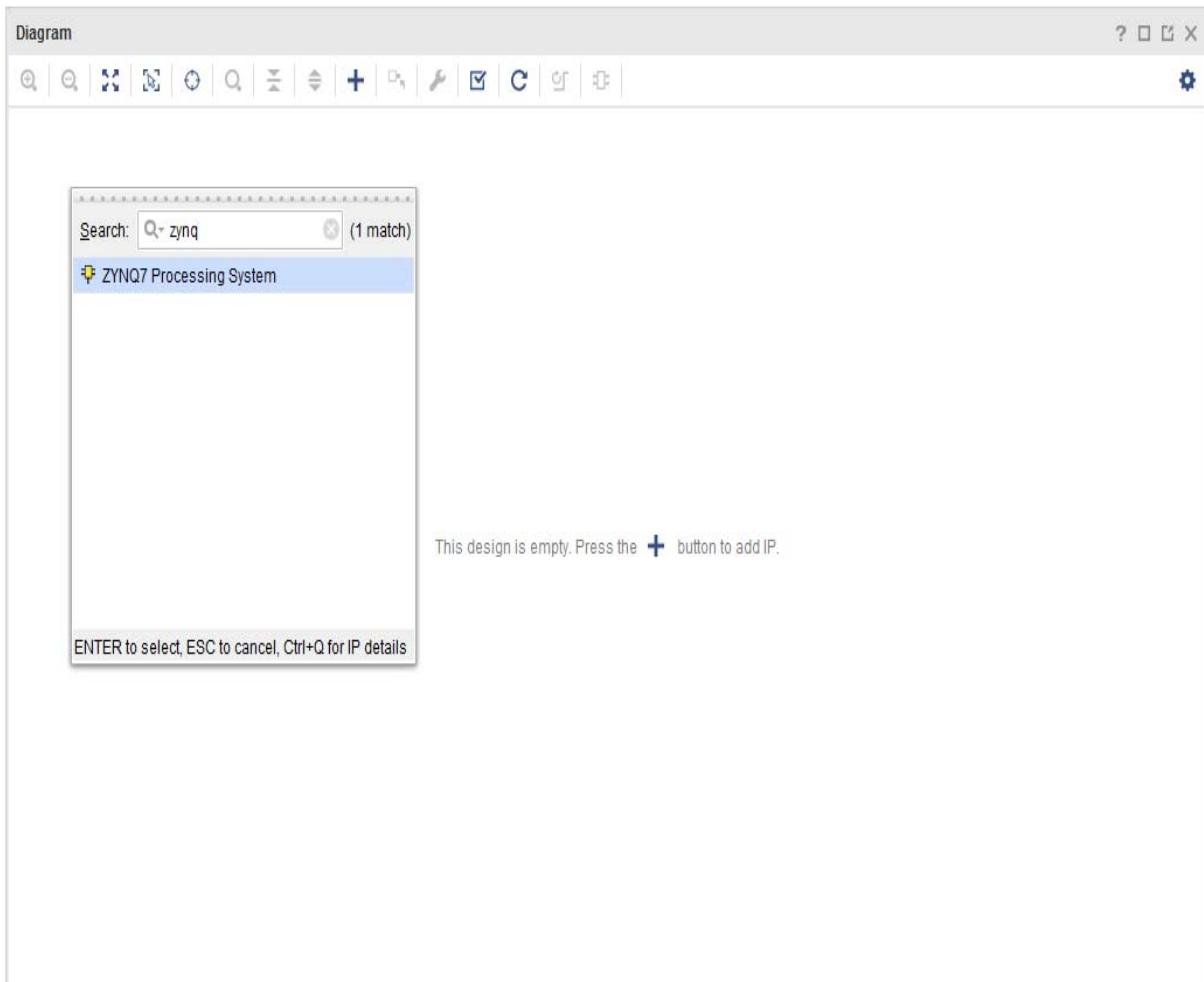


Figure 10-12: Add a CPU Processor to the Design

An IP symbol for the ZYNQ7 Processing System appears on the canvas.

3. Double-click the **ZYNQ IP** symbol to open the associated Re-customize IP dialog box.
 - a. Click the **Presets** icon and select **ZC702** (Figure 10-13).

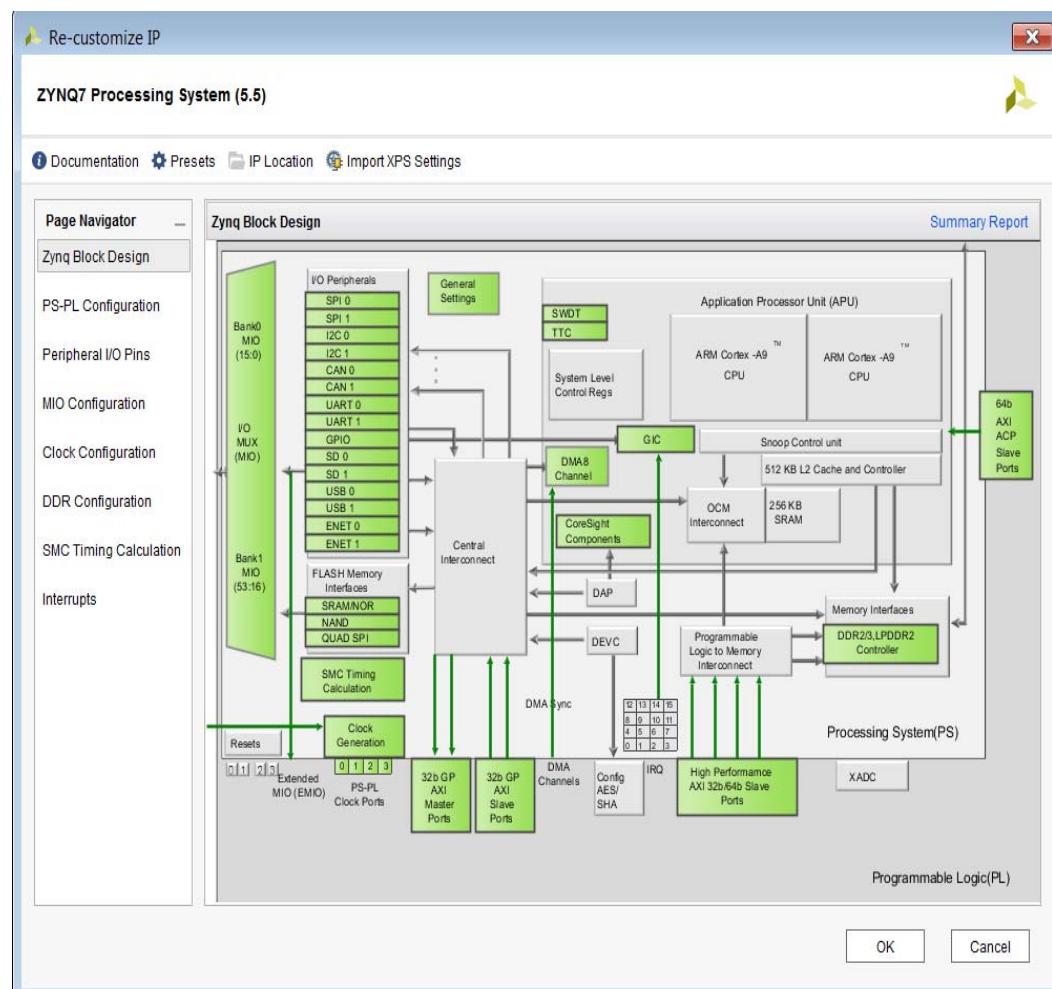


Figure 10-13: Configure the Zynq SoC

4. Click **MIO Configuration** in the Page Navigator pane.
 - a. Expand the **Application Processor Unit** tree view.
 - b. Deselect **Timer 0** (or any other timers if they are selected).

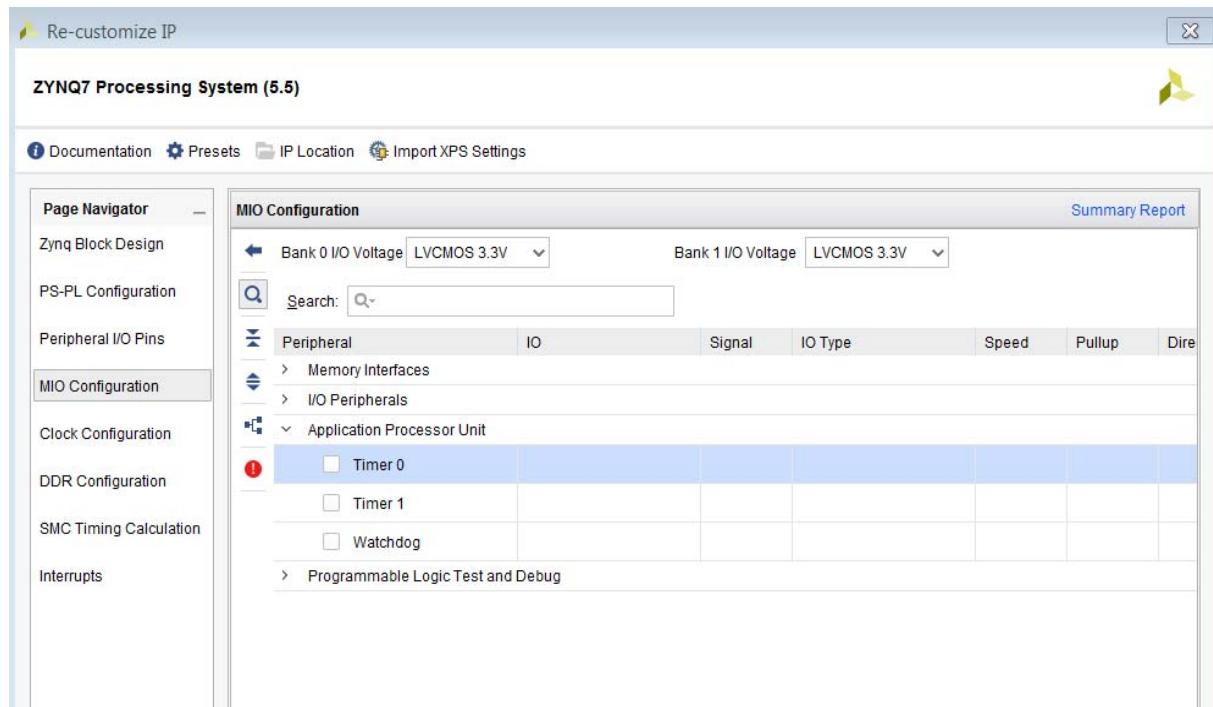


Figure 10-14: Zynq SoC MIO Configuration

5. Click **Interrupts** in the Page Navigator pane.
 - a. Select **Fabric Interrupts** and expand its tree view and expand the PL-PS Interrupt Ports.
 - b. Select **IRQ_F2P[15:0]** and click **OK** to close the Re-customize IP dialog box.

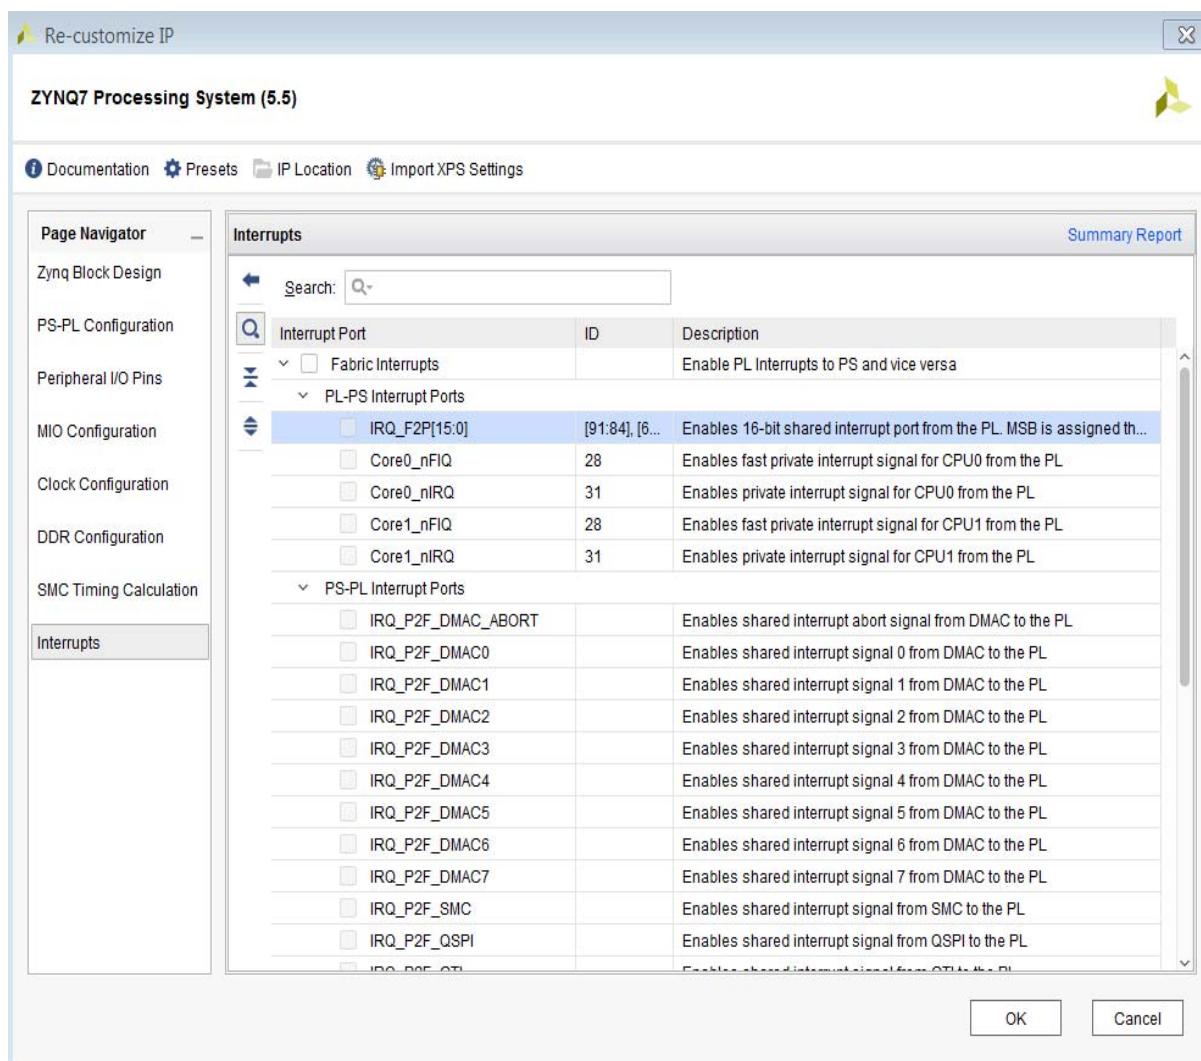


Figure 10-15: Zynq SoC Interrupt Configuration

IPI provides Designer Assistance to automate certain tasks, such as making the correct external connections to DDR memory and Fixed I/O for the ZYNQ PS7.

6. Click the **Run Block Automation** link under the title bar ([Figure 10-16](#)).
 - a. Ensure **processing_system7_0** is selected.
 - b. Ensure **Apply Board Presets** is deselected. If this remains selected it re-applies the timers that were disabled in step 4 and results in additional ports on the Zynq block in [Figure 10-16](#).
 - c. Click **OK** to complete in the resulting dialog box.

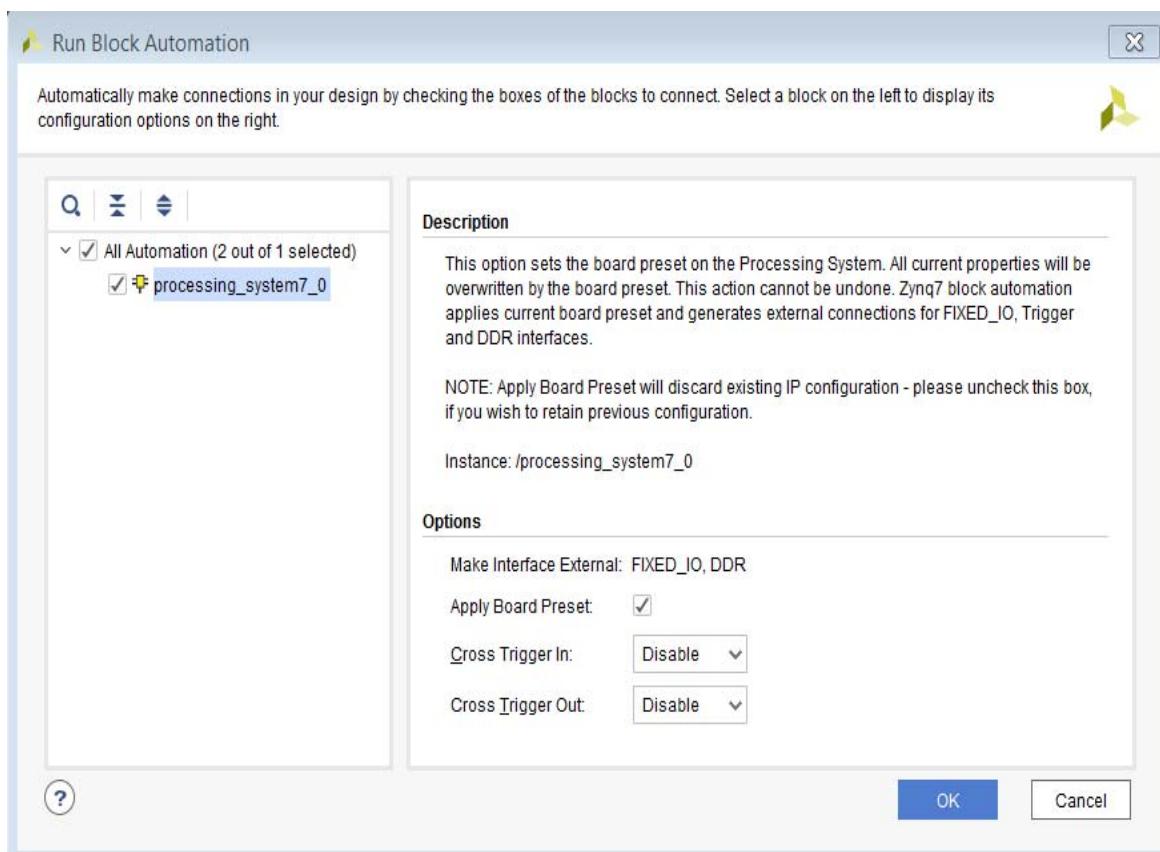


Figure 10-16: Run Automation

7. To add HLS IP to the design:
 - a. right-click in an open space of canvas and select **Add IP** from the context menu.
 - b. Type `hls` in the Search text entry box and press **Enter** to add it to design (Figure 10-17).

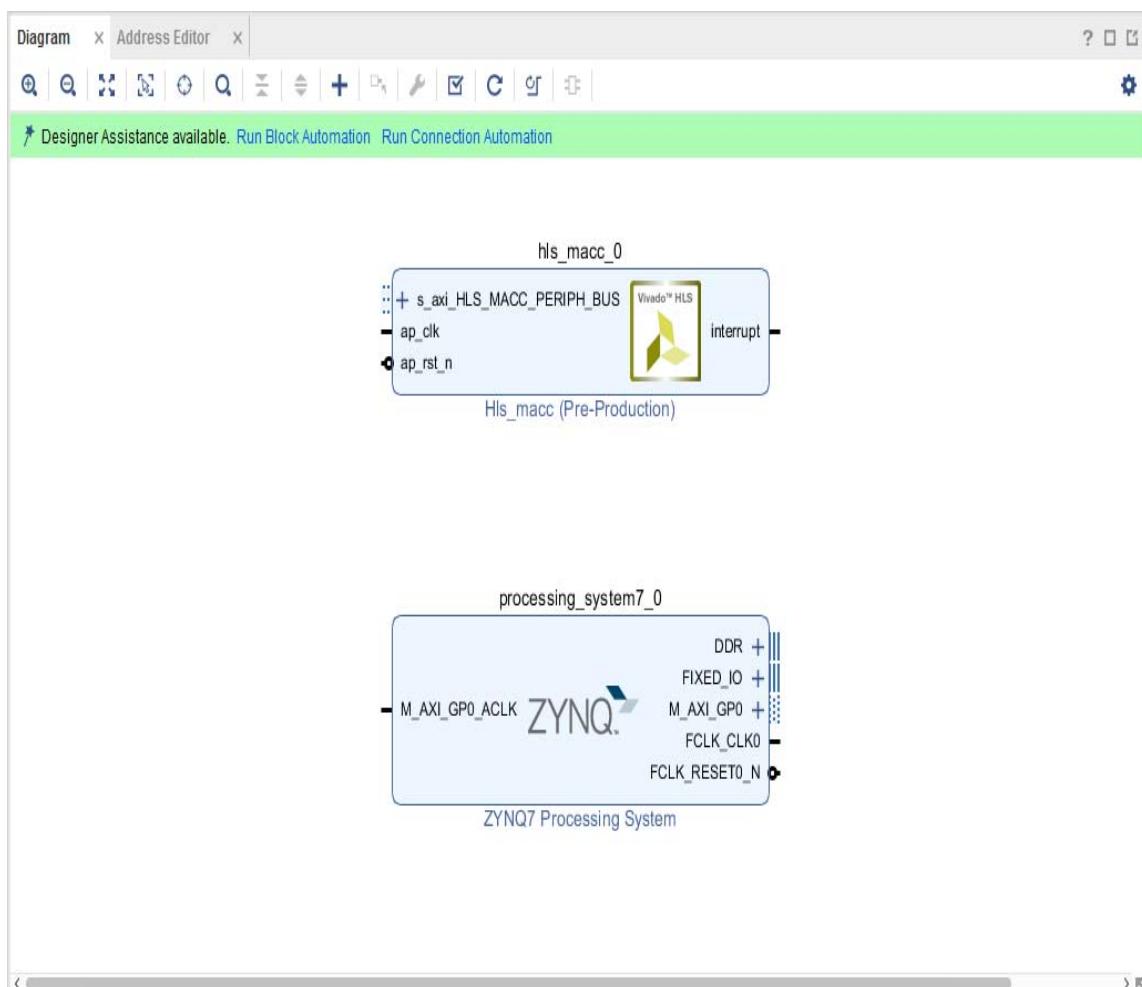


Figure 10-17: Processor and HLS IP

Designer assistance is also available to automate the interconnection of IP blocks.

8. Click the **Run Connection Automation** link at the top of the canvas.
9. Select `/hls_macc_0/S_AXI_HLS_MACC_PERIPH_BUS` and click **OK** in the resulting dialog box to automatically connect the HLS IP to the `M_AXI_GPO` interface of the Zynq Processor.

This adds an AXI Interconnect (block instance: `processing_system7_0`), a Proc Sys Reset block and makes all necessary AXI related connections to create the design shown in [Figure 10-18](#).

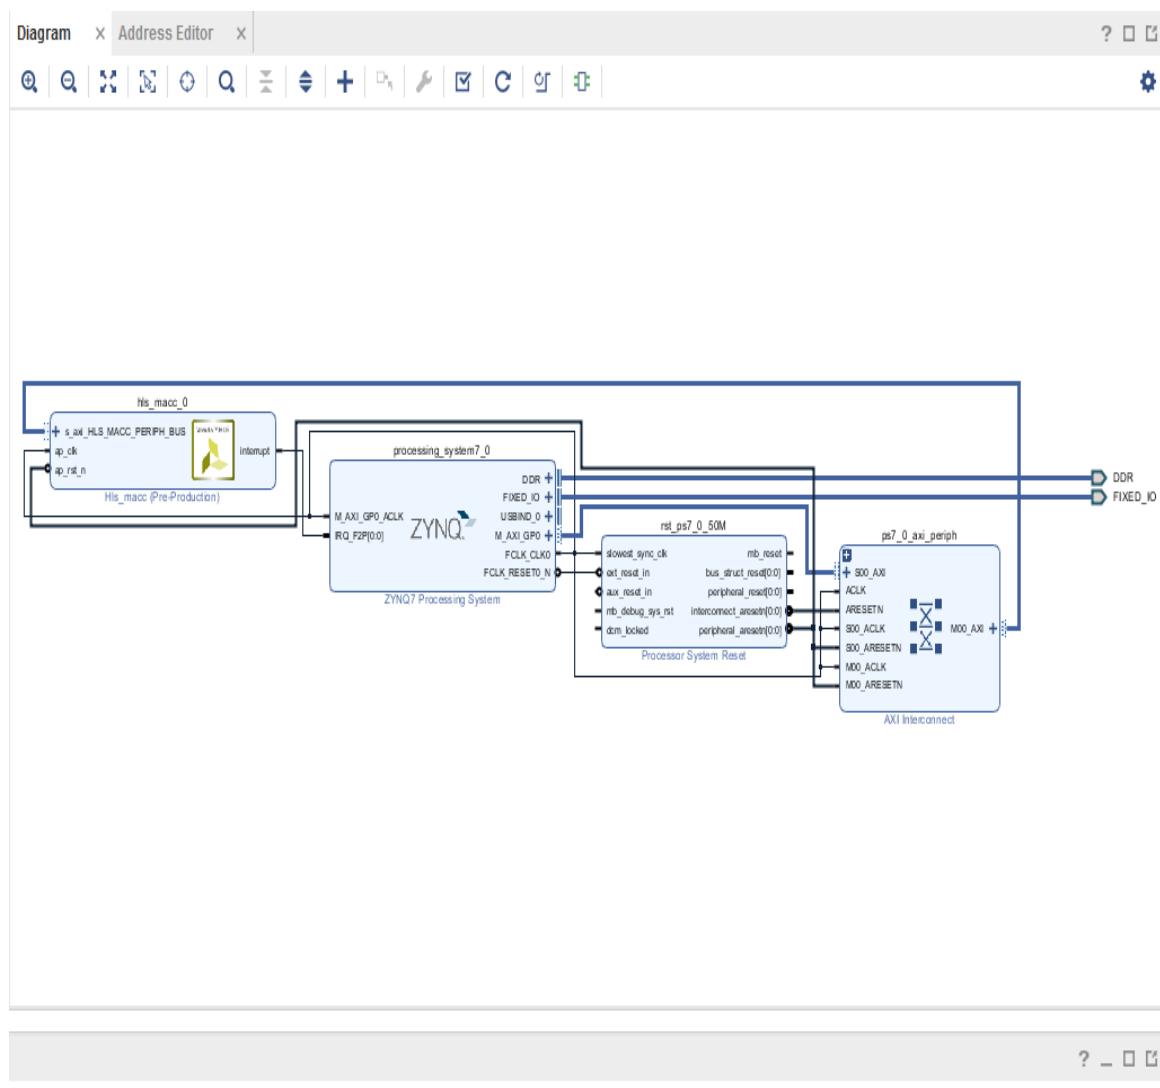


Figure 10-18: Design with AXI4 Interconnect

The only remaining connection necessary is from the HLS interrupt port to the PS7 IRQ_F2P port.

10. Mouse over the interrupt pin on the hls_macc_0 IP symbol. When the cursor changes to pencil shape, click and drag to the IRQ_F2P[0:0] port of the PS7 and release, completing the connection.
11. Select the **Address Editor** tab and confirm that the hls_macc_0 peripheral has been assigned a master address range. If it has not, click the **Auto Assign Address** icon.



Figure 10-19: Address Editor

The final step in the Block Diagram design entry process is to validate the design.

12. Click the **Validate Design** icon in the toolbar.
13. Upon successful validation, save the Block Design.

Step 5: Implementing the System

Before proceeding with the system design, you must generate implementation sources and create an HDL wrapper as the top-level module for synthesis and implementation.

1. Return to the Project Manager view by clicking on **Project Manager** in the Flow Navigator.
2. In the Sources browser in the main workspace pane, a Block Diagram object called `Zynq_Design` is at the top of the Design Sources tree view (Figure 10-20). Right-click this object and select **Generate Output Products**.
3. In the resulting dialog box, click **Generate** to start the process of generating the necessary source files.

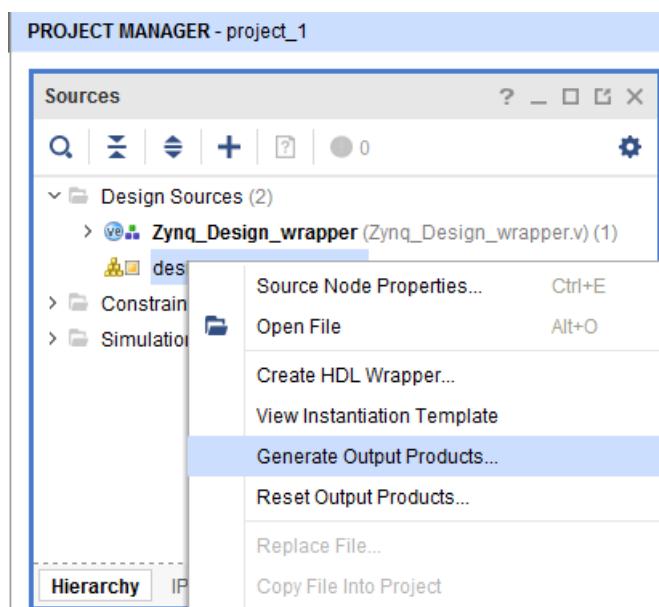


Figure 10-20: Generate Output Products

4. Right-click the `Zynq_Design` object again, select **Create HDL Wrapper**, and click **OK** to exit the resulting dialog box.

The top-level of the Design Sources tree becomes the `Zynq_Design_wrapper.v` file. The design is now ready to be synthesized, implemented and to have an FPGA programming bitstream generated.

5. Click **Generate Bitstream** to initiate the remainder of the flow.
 - a. Click **Yes** to implement the design.
6. In the dialog that appears after bitstream generation has completed, select **Open Implemented Design** and click **OK**.

Step 6: Developing Software and Running it on the ZYNQ System

You are now ready to export the design to Xilinx SDK. In SDK, you create software that runs on a ZC702 board (if available). A driver for the HLS block was generated during HLS export of the Vivado IP Catalog package. This driver must be made available in SDK so that the PS7 software can communicate with the block.

1. From the Vivado File menu select **Export > Export Hardware**.

Note: Both the IPI Block Design and the Implemented Design must be open in the Vivado workspace for this step to complete successfully.

2. In the Export Hardware dialog box (Figure 10-21), ensure that the **Include Bitstream** is enabled and click **OK**.

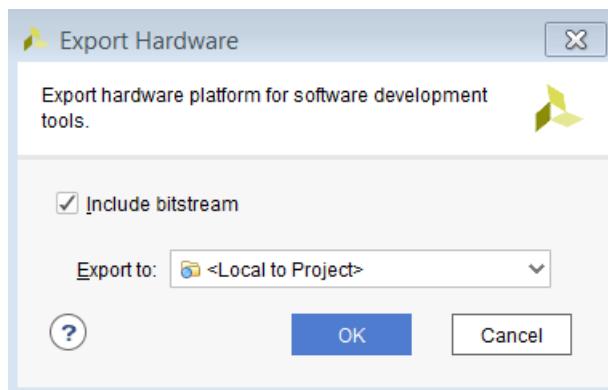


Figure 10-21: Export Hardware Dialog Box

3. From the Vivado **File** menu, select **Launch SDK**.
4. Click **OK** to open SDK.
5. From the SDK File menu, select **New > Application Project**.
 - a. In the New Project dialog enter the project name `Zynq_Design_Test`.
 - b. Click **Next**.
 - c. Select the **Hello World** template.
 - d. Click **Finish**.

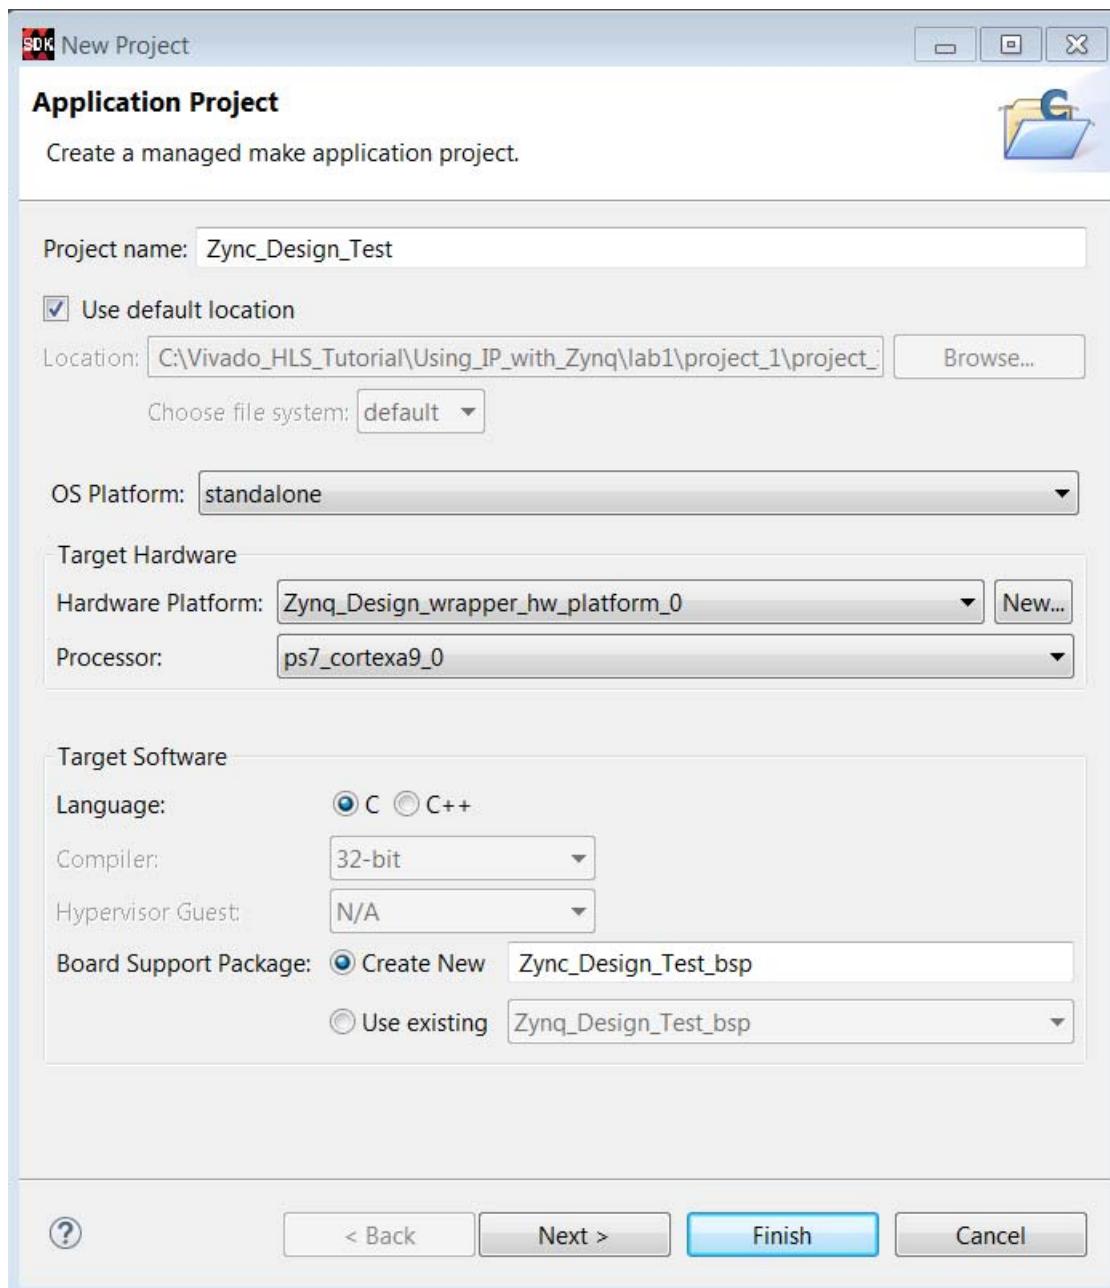


Figure 10-22: Application Project

6. Power up the ZC702 board and test the Hello World application. Ensure the board has all the connections to allow you to download the bitstream on the FPGA device. See the documentation that accompanies the ZC702 development board.
7. Click **Xilinx Tools > Program FPGA** (or toolbar icon).

Notice that the Done LED (DS3) is now on.

8. Click on SDK Terminal and click on add button to add a port to the terminal.

- a. Click the **Connect** icon (Figure 10-23).

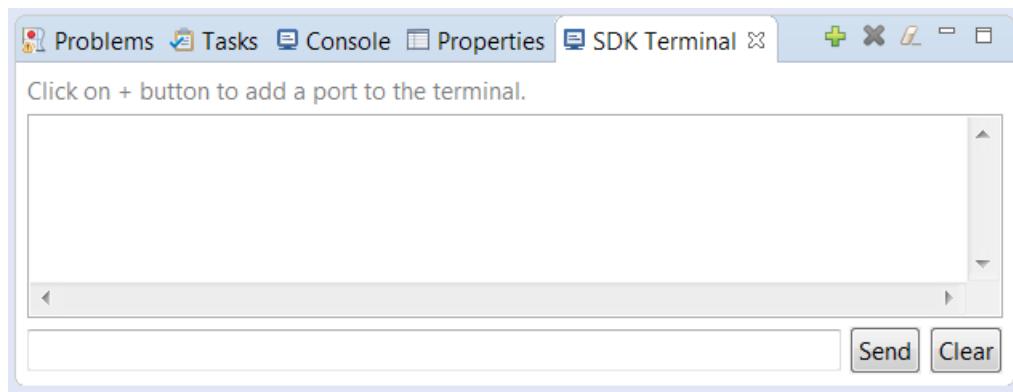


Figure 10-23: The Connect Icon

- b. Select **Connection Type > Serial**.
- c. Select the COM port to which the USB UART cable is connected (generally not COM1 or COM3). On Windows, if you are not sure, open the Device Manager and identify the port with the Silicon Labs driver under Ports (COM & LPT).
- d. Change the Baud Rate to 115200 (Figure 10-24).
- e. Click **OK** to exit the Terminal Settings dialog box.

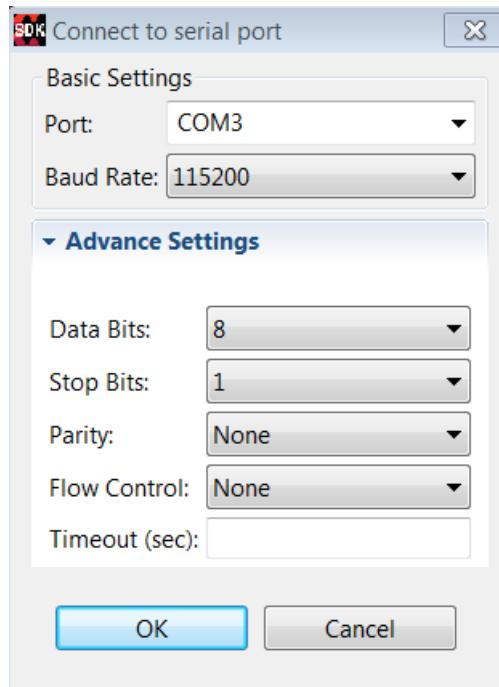


Figure 10-24: Terminal Settings

9. Right-click the application project **Zynq_Design_Test** in the Explorer pane (Figure 10-25).

a. Click **Run As > Launch on Hardware.**

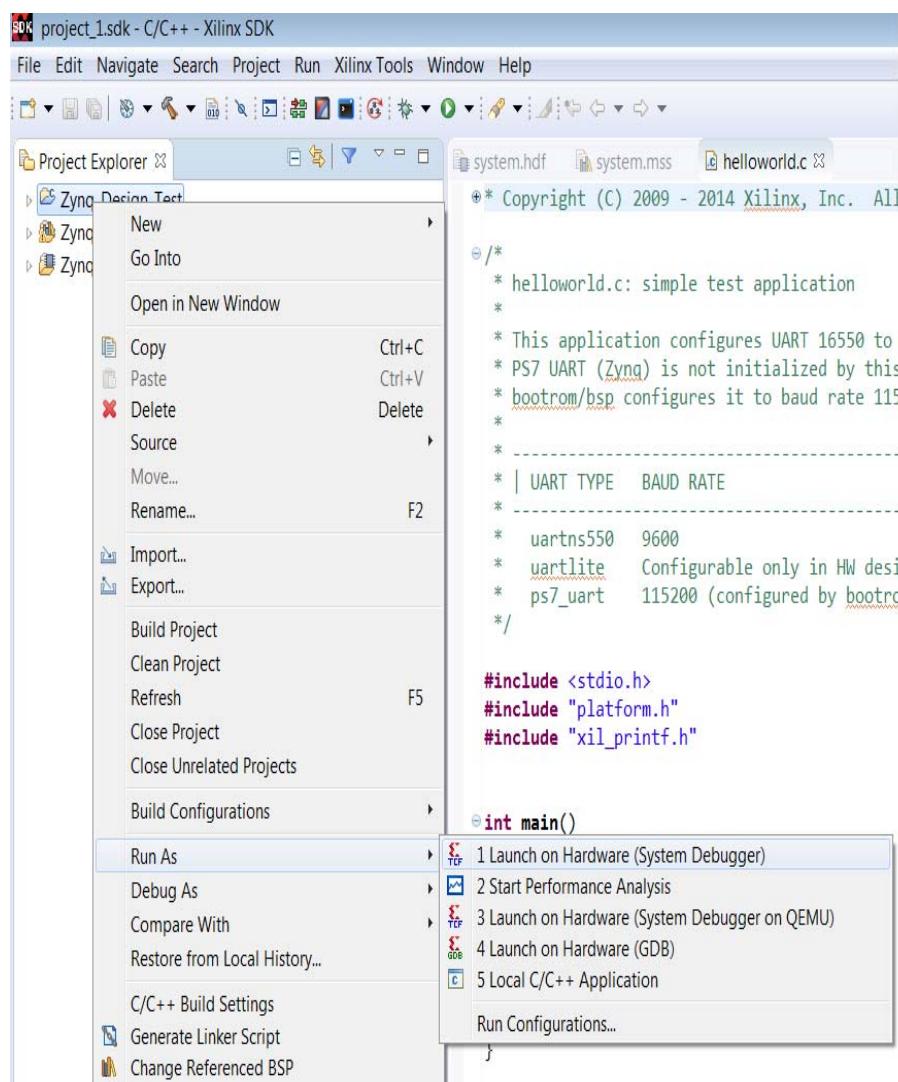


Figure 10-25: Run the Application Project

10. Switch to the Terminal tab and confirm that Hello World was received.



Figure 10-26: Console Output

Step 7: Modify software to communicate with HLS block

The completely modified source file is available in the `arm_code` directory of the tutorial file set. The modifications are discussed in detail below.

1. Open the `helloworld.c` source file.
2. Several BSP (and standard C) header files need to be included:

```
#include <stdlib.h> // Standard C functions, e.g. exit()
#include <stdbool.h> // Provides a Boolean data type for ANSI/ISO-C
#include "xparameters.h" // Parameter definitions for processor peripherals
#include "xscugic.h" // Processor interrupt controller device driver
#include "xHls_macc.h" // Device driver for HLS HW block
```

3. Define variables for the HLS block and interrupt controller instance data. The variables will be passed to driver API calls as handles in the respective hardware.

```
// HLS macc HW instance
XHls_macc HlsMacc;
//Interrupt Controller Instance
XScuGic ScuGic;
```

4. Define global variables to interface with the interrupt service routine (ISR).

```
volatile static int RunHlsMacc = 0;
volatile static int ResultAvailHlsMacc = 0;
```

5. Define a function to wrap all run-once API initialization function calls for the HLS block.

```
int hls_macc_init(XHls_macc *hls_maccPtr)
{
    XHls_macc_Config *cfgPtr;
    int status;

    cfgPtr = XHls_macc_LookupConfig(XPAR_XHLS_MACC_0_DEVICE_ID);
    if (!cfgPtr) {
        print("ERROR: Lookup of accelerator configuration failed.\n\r");
        return XST_FAILURE;
    }
    status = XHls_macc_CfgInitialize(hls_maccPtr, cfgPtr);
    if (status != XST_SUCCESS) {
```

```

        print("ERROR: Could not initialize accelerator.\n\r");
        return XST_FAILURE;
    }
    return status;
}

```

6. Define a helper function to wrap the HLS block API calls required to enable its interrupt and start the block.

```

void hls_macc_start(void *InstancePtr){
    XHls_macc *pAccelerator = (XHls_macc *) InstancePtr;
    XHls_macc_InterruptEnable(pAccelerator, 1);
    XHls_macc_InterruptGlobalEnable(pAccelerator);
    XHls_macc_Start(pAccelerator);
}

```

An interrupt service routine is required in order for the processor to respond to an interrupt generated by a peripheral.

Each peripheral with an interrupt attached to the PS must have an ISR defined and registered with the PS's interrupt handler.

The ISR is responsible for clearing the peripheral's interrupt and, in this example, setting a flag that indicates that a result is available for retrieval from the peripheral. In general, ISRs should be designed to be lightweight and as fast as possible, essentially doing the minimum necessary to service the interrupt. Tasks such as retrieving the data should be left to the main application code.

```

void hls_macc_isr(void *InstancePtr){
    XHls_macc *pAccelerator = (XHls_macc *) InstancePtr;

    //Disable the global interrupt
    XHls_macc_InterruptGlobalDisable(pAccelerator);
    //Disable the local interrupt
    XHls_macc_InterruptDisable(pAccelerator, 0xffffffff);

    // clear the local interrupt
    XHls_macc_InterruptClear(pAccelerator, 1);

    ResultAvailHlsMacc = 1;
    // restart the core if it should run again
    if(RunHlsMacc){
        hls_macc_start(pAccelerator);
    }
}

```

7. Define a routine to setup the PS interrupt handler and register the HLS peripheral's ISR.

```

int setup_interrupt()
{
    //This functions sets up the interrupt on the Arm
    int result;
    XScuGic_Config *pCfg = XScuGic_LookupConfig(XPAR_SCUGIC_SINGLE_DEVICE_ID);
    if (pCfg == NULL){
        print("Interrupt Configuration Lookup Failed\n\r");
        return XST_FAILURE;
    }
}

```

```

result = XScuGic_CfgInitialize(&ScuGic, pCfg, pCfg->CpuBaseAddress) ;
if(result != XST_SUCCESS){
    return result;
}
// self-test
result = XScuGic_SelfTest(&ScuGic) ;
if(result != XST_SUCCESS){
    return result;
}
// Initialize the exception handler
Xil_ExceptionInit();
// Register the exception handler
//print("Register the exception handler\n\r");
Xil_ExceptionRegisterHandler(XIL_EXCEPTION_ID_INT,
    (Xil_ExceptionHandler)XScuGic_InterruptHandler,&ScuGic);
//Enable the exception handler
Xil_ExceptionEnable();
// Connect the Adder ISR to the exception table
//print("Connect the Adder ISR to the Exception handler table\n\r");
result = XScuGic_Connect(&ScuGic, XPAR_FABRIC_HLS_MACC_0_INTERRUPT_INTR,
    (Xil_InterruptHandler)hls_macc_isr,&HlsMacc);
if(result != XST_SUCCESS){
    return result;
}
//print("Enable the Adder ISR\n\r");
XScuGic_Enable(&ScuGic,XPAR_FABRIC_HLS_MACC_0_INTERRUPT_INTR);
return XST_SUCCESS;
}

```

- Define a software model of the HLS hardware functionality with which you can compare reference results.

```

void sw_macc(int a, int b, int *accum, bool accum_clr)
{
    static int accum_reg = 0;
    if (accum_clr)
        accum_reg = 0;
    accum_reg += a * b;
    *accum = accum_reg;
}

```

- Modify main() to use the HLS device driver API and the functions defined above to test the HLS peripheral hardware.

```

int main()
{
    print("Program to test communication with HLS MACC peripheral in PL\n\r");
    int a = 2, b = 21;
    int res_hw;
    int res_sw;
    int i;
    int status;

    //Setup the matrix mult
    status = hls_macc_init(&HlsMacc);
    if(status != XST_SUCCESS){
        print("HLS peripheral setup failed\n\r");
        exit(-1);
    }
}

```

```

    }
    //Setup the interrupt
    status = setup_interrupt();
    if(status != XST_SUCCESS){
        print("Interrupt setup failed\n\r");
        exit(-1);
    }

    //set the input parameters of the HLS block
    XHls_macc_SetA(&HlsMacc, a);
    XHls_macc_SetB(&HlsMacc, b);
    XHls_macc_SetAccum_clr(&HlsMacc, 1);

    if (XHls_macc_IsReady(&HlsMacc))
        print("HLS peripheral is ready. Starting... ");
    else {
        print("!!! HLS peripheral is not ready! Exiting...\n\r");
        exit(-1);
    }

    if (0) { // use interrupt
        hls_macc_start(&HlsMacc);
        while(!ResultAvailHlsMacc)
            ; // spin
        res_hw = XHls_macc_GetAccum(&HlsMacc);
        print("Interrupt received from HLS HW.\n\r");
    } else { // Simple non-interrupt driven test
        XHls_macc_Start(&HlsMacc);
        do {
            res_hw = XHls_macc_GetAccum(&HlsMacc);
        } while (!XHls_macc_IsReady(&HlsMacc));
        print("Detected HLS peripheral complete. Result received.\n\r");
    }

    //call the software version of the function
    sw_macc(a, b, &res_sw, false);

    printf("Result from HW: %d; Result from SW: %d\n\r", res_hw, res_sw);
    if (res_hw == res_sw) {
        print("*** Results match ***\n\r");
        status = 0;
    }
    else {
        print("!!! MISMATCH !!!\n\r");
        status = -1;
    }

    cleanup_platform();
    return status;
}


```

10. Save the modified source file. When you save the file, SDK automatically attempts to re-build the application executable. If the build fails, fix any outstanding issues.

Run the new application on the hardware and verify that it works as expected. Ensure that a TCF hardware server is running, that the FPGA is programmed and a terminal session is

connected to the UART. Then Launch on Hardware, as you did for the previous Hello World application code.

Upon success, the Terminal session looks similar to [Figure 10-27](#).

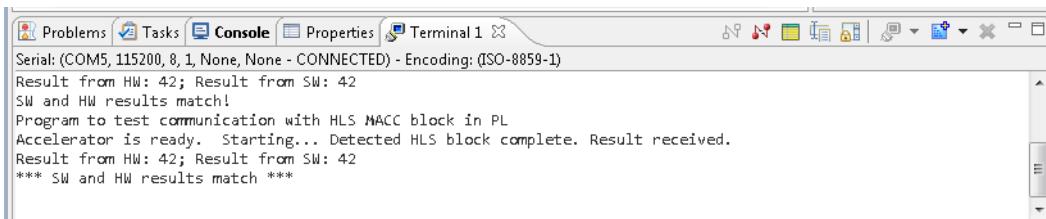

```
Serial: (COM5, 115200, 8, 1, None, None - CONNECTED) - Encoding: (ISO-8859-1)
Result from HW: 42; Result from SW: 42
SW and HW results match!
Program to test communication with HLS MACC block in PL
Accelerator is ready. Starting... Detected HLS block complete. Result received.
Result from HW: 42; Result from SW: 42
*** SW and HW results match ***
```

Figure 10-27: Console Output with Updated C Program


Lab 2: Streaming Data Between the Zynq CPU and HLS Accelerator Blocks

This lab illustrates a common high-performance connection scheme for connecting hardware accelerator blocks that consume data originating in the CPU memory and/or producing data destined for it, in a streaming manner.

- This tutorial uses the same Vivado HLS and XFFT IP blocks created in Lab 1 of the tutorial “Using HLS IP in IP Integrator”. In this lab exercise these blocks are connected to the HP0 Slave AXI4 port on a Zynq7 processing system via an AXI DMA IP core.
- The hardware accelerator blocks are free-running and do not require drivers; as long as data is pushed in and pulled out by the CPU (often simply referred to as the Processing System or PS).
- The lab highlights the software requirements to avoid cache coherency issues.

Step 1: Generate the HLS IP

1. From the Vivado HLS command prompt used in Lab 1, change to the lab2 directory as shown in [Figure 10-27](#).
2. Run Vivado HLS to create two HLS IP blocks by typing `vivado_hls -f run_hls.tcl`.

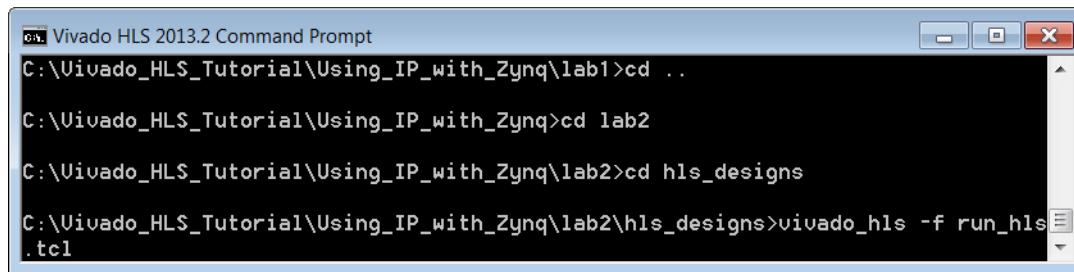

```
Vivado HLS 2013.2 Command Prompt
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq\lab1>cd ..
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq>cd lab2
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq\lab2>cd hls_designs
C:\Vivado_HLS_Tutorial\Using_IP_with_Zynq\lab2\hls_designs>vivado_hls -f run_hls.tcl
```

Figure 10-28: Setup for Zynq Lab 2

When the script completes, there are two Vivado HLS project directories, `fe_vhls_prj` and `be_vhls_prj`, which contain the HLS IP, including the Vivado IP Catalog archives for use in Vivado designs.

- The “front-end” IP archive is located at `fe_vhls_prj/IPXACTExport/impl/ip/`
- The “back-end” IP archive is located at `be_vhls_prj/IPXACTExport/impl/ip/`

Step 2: Create a Vivado Design Suite Project

1. Launch the Vivado Design Suite (not Vivado HLS):
 - On Windows use **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado 2018.3**.
 - On Linux, type `vivado` in the shell.
2. From the Welcome screen, select **Create New Project**.
3. Click **Next** on the first page of the Create a New Vivado Project wizard.
4. Click the ellipsis button to the right of the Project location text entry box and browse to the `lab2` tutorial directory.
5. Set the project name to **project_1**, if it is not already specified.
6. Click **Next** to move to the Project Type page of the wizard.
 - a. Select **RTL Project**.
 - b. Select do not specify sources at this time (if not the default); just click **Next**.
7. On the Default Part page, under Specify, click **Boards** and select the **ZYNQ-7 ZC702 Evaluation Board**. Click **Next**.
8. On the New Project Summary Page, click **Finish** to complete the new project setup.

Step 3: Add HLS IP to an IP Repository

1. In the Project Manager area of the Flow Navigator pane, click **IP Catalog**.
2. Click the **IP Catalog** pane, right-click and select **Add Repository**.

3. In the IP Repositories dialog box:
 - a. Browse to the lab2 tutorial directory .
 - b. Click the **Create New Folder** icon.
 - c. Enter `vivado_ip_repo` in the resulting dialog box.
 - d. Click **OK**.
 - e. Click **Select** to close the IP Repository window.
4. On returning to the IP Setting dialog box:
 - a. Click the "+" symbol to **Add IP**.
 - b. In the IP Repositories dialog box, browse to the location of the HLS IP `lab2/hls_designs/fe_vhls_prj/IPXACTExport/impl/ip/` or, if using IP created in previous tutorial, browse to the corresponding path.
 - c. Select the `xilinx_com_hls_hls_real2xfft_1_00_a.zip` file.
 - d. Click **OK**.
5. Follow the same procedure to add the second HLS IP package, in directory `lab2/hls_designs/be_vhls_prj/IPXACTExport/impl/ip/`, to the repository: `xilinx_com_hls_xfft2real_1_00_a.zip`.
6. The new HLS IP now appears in the IP Setting dialog box.
7. Click **OK** to exit the dialog box.
8. There is now HLS IP in the IP Catalog (Hls_real2xfft and Hls_xfft2real).

Step 4: Create a Top-level Block Design

1. Click **Create Block Diagram** under IP Integrator in the Flow Navigator.
 - a. In the resulting dialog box, name the design `Zynq_RealFFT`.
 - b. Click **OK**.
2. In the Diagram tab, click the **Add IP** button to add IP
 - a. In the Search box, type `fourier`.
 - b. Select the Fast Fourier Transform and double-click with the mouse.
3. Double-click the new **Fast Fourier Transform IP** symbol to open the Re-customize IP dialog box. On the Configuration tab:
 - a. Change the **Transform Length** to 512.
 - b. Change the **Target Clock Frequency** to 100 MHz.
 - c. In the Architecture Choice section, select **Pipelined, Streaming I/O**.
4. Select the **Implementation** tab:

- a. Select **ARESETN** (active-Low) in the Control Signals group.
 - b. Verify that **Bit/Digit Reversed Order** is selected under Output Ordering Options.
 - c. Verify that **Non Real Time** is selected as Throttle Scheme.
 - d. Click **OK** to exit Re-customize IP dialog
5. Add one instance of each of the HLS generated blocks to the design.
 - a. Right-click in any space in the canvas and select Add IP.
 - b. Type `hls` into the Search text entry box.
 - c. Highlight both IPs. (Click the control key and select both.)
 - d. Press **Enter**.
 6. Connect the HLS blocks to the FFT block.
 - a. Mouse over the `dout` interface connector of the `hls_real2xfft` block until a pencil cursor appears.
 - b. Left-click and hold down the mouse button to start a connection.
 - c. Drag the connection line to the `S_AXIS_DATA` input port connector of the FFT block and release when a green check mark appears next to it.
 7. In a similar fashion:
 - a. Connect the FFT's `M_AXIS_DATA` interface to the `din` input interface of the `hls_xfft2real` block.
 8. Put the data processing blocks into their own level of hierarchy.
 - a. Select everything in the current diagram by pressing **Ctrl+A**.
 - b. Right-click the canvas and select **Create Hierarchy** from the context menu.

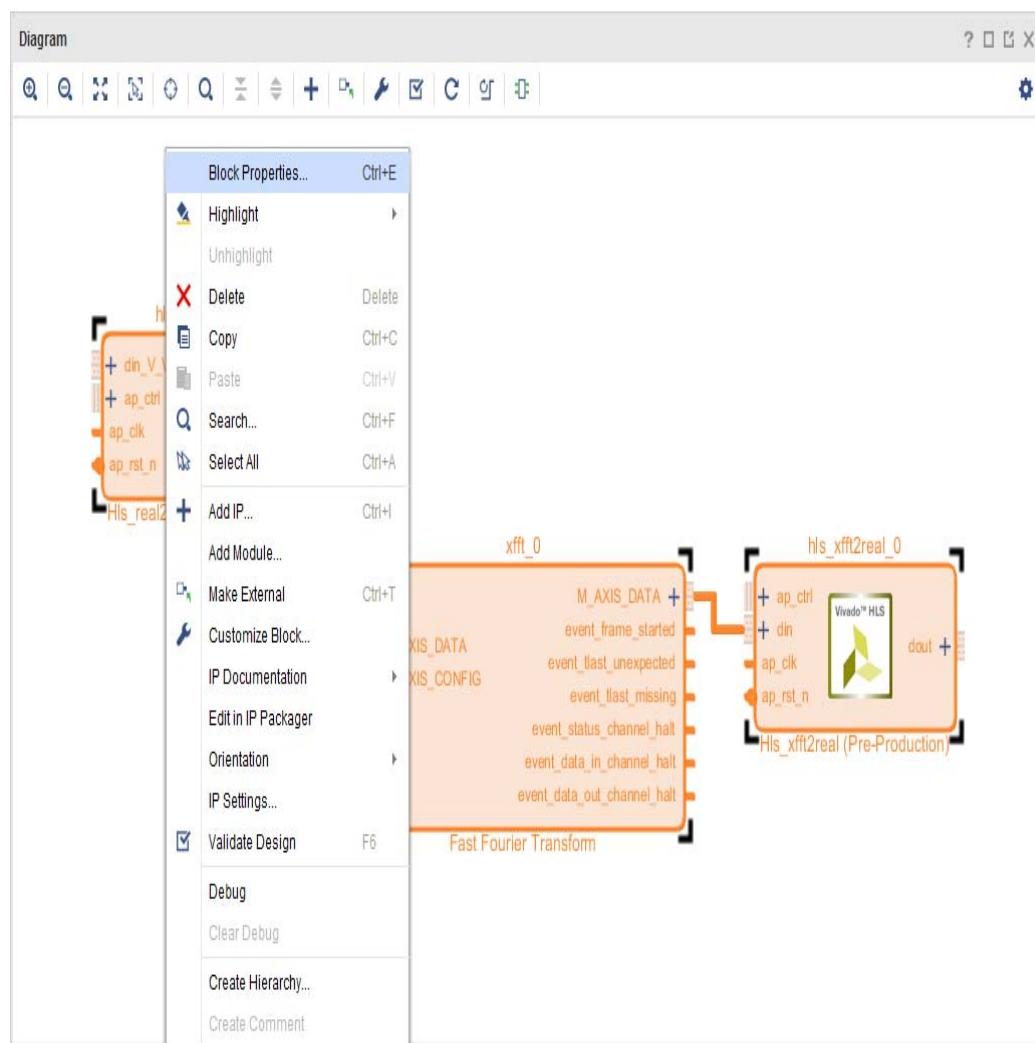


Figure 10-29: Create a Hierarchy Block

- c. In the Create Hierarchy dialog box, enter RealFFT as the Cell name.
- d. Ensure that the **Move '3' selected blocks to new hierarchy** option is checked, as shown in [Figure 10-30](#).

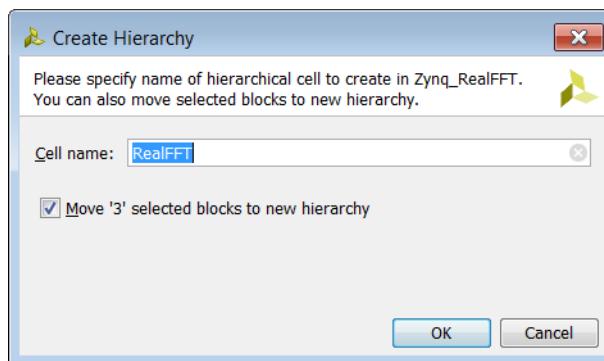


Figure 10-30: Name Hierarchy Block

e. Click **OK**.

The diagram will appear as shown in [Figure 10-31](#).

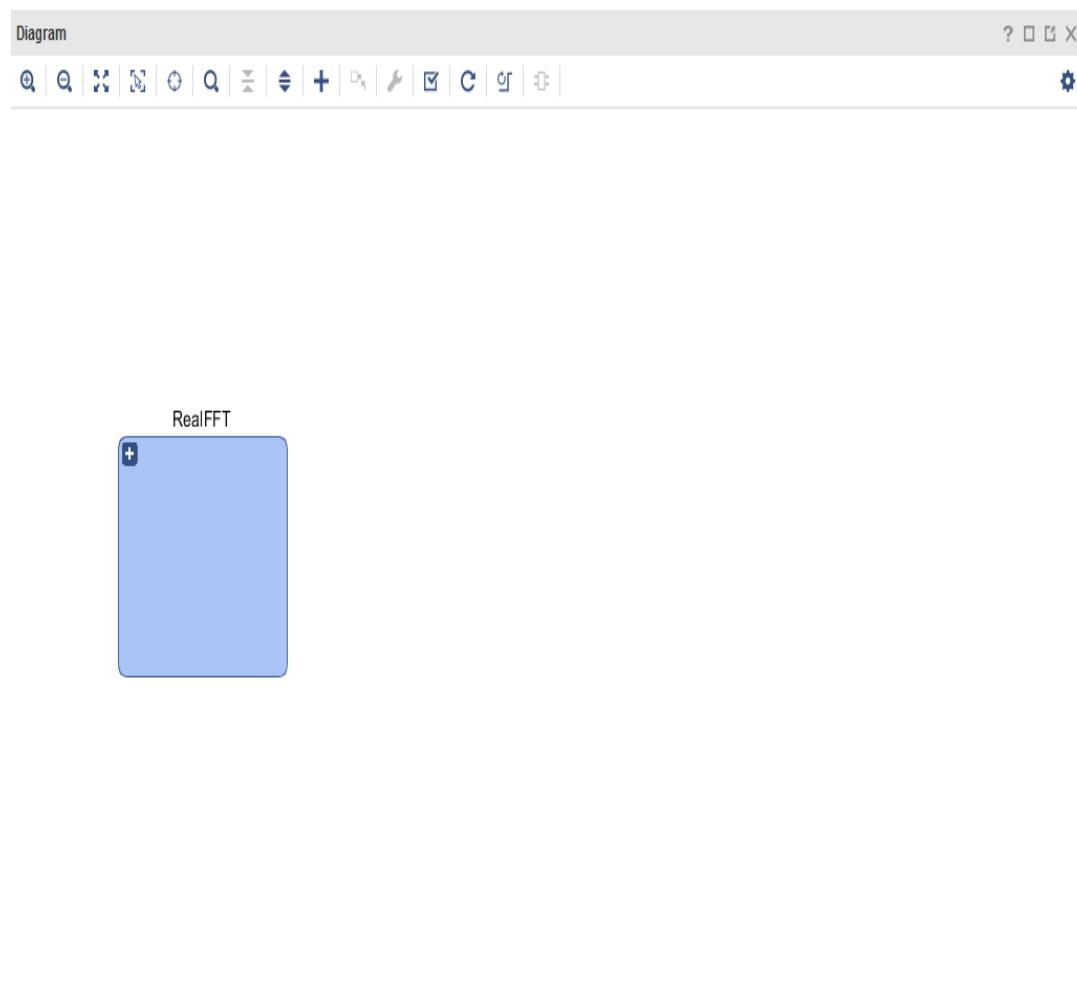


Figure 10-31: New Hierarchy Block

Add pins to the RealFFT hierarchical block so that you can connect it at the top-level.

9. Double-click the RealFFT block to open its diagram.

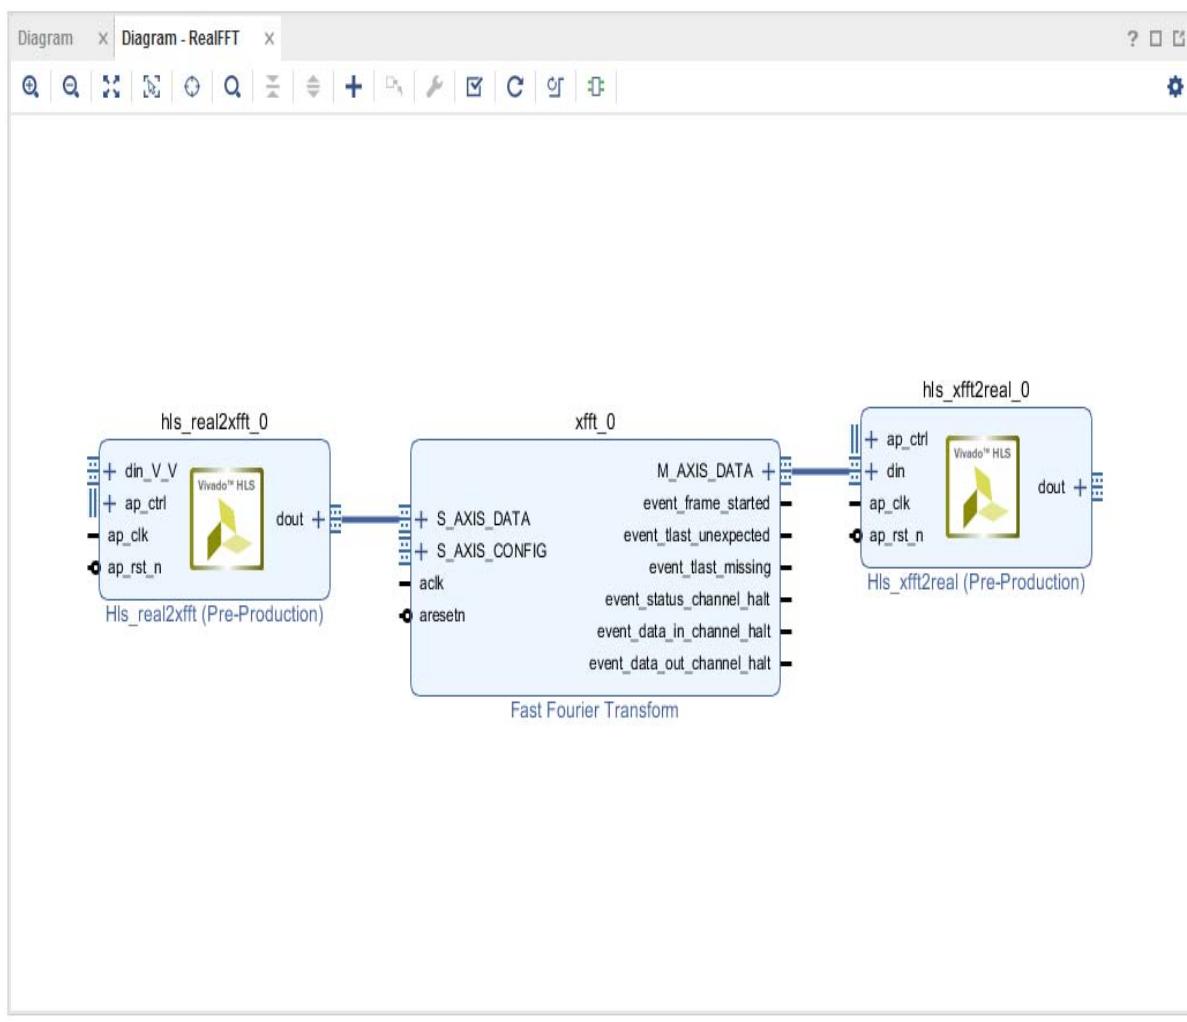


Figure 10-32: RealFFT Diagram

10. Right-click the `din_V_V` pin of the `hls_real2xfft_0` block and select **Create Interface Pin** from the context menu.

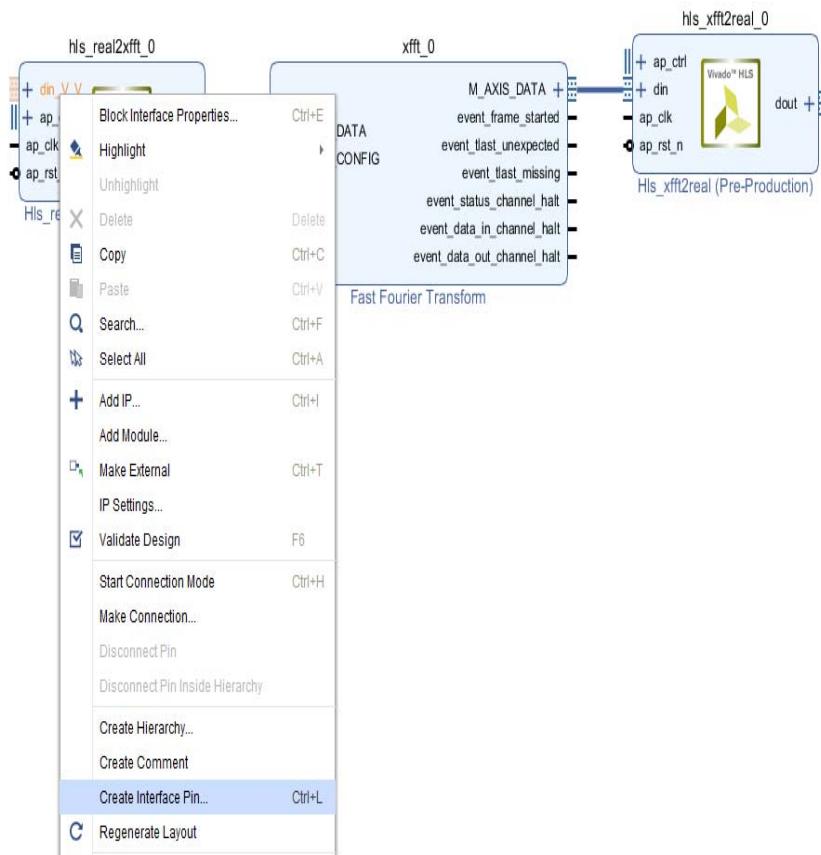


Figure 10-33: Creating an Interface Pin

11. In the Create Interface Pin dialog box, change the Interface name to `realfft_s_axis_din`.
 - a. Accept all other defaults and click **OK**.

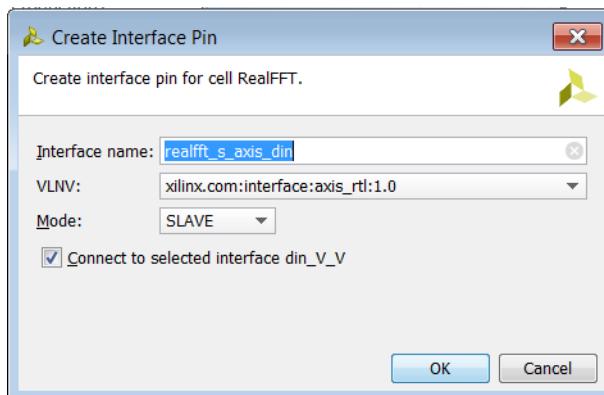


Figure 10-34: Naming an Interface Pin

12. Right-click the `ap_clk` pin of the `hls_real2xfft_1` block and select **Create Pin** from the context menu.
 - a. Change the name to `aclk` and click **OK**.

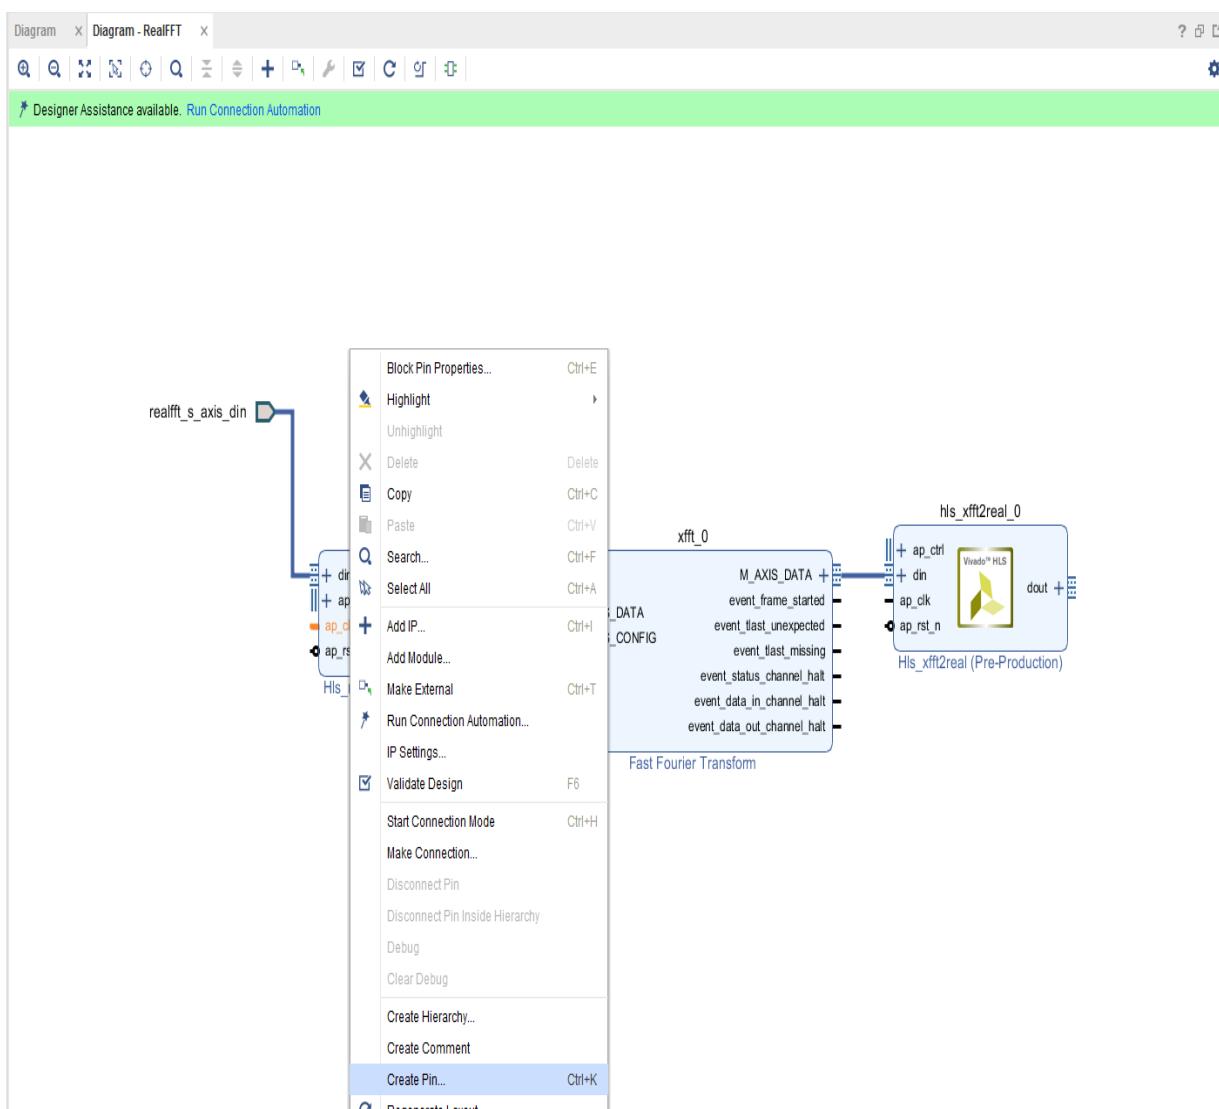


Figure 10-35: Create a Clock Pin

After you create this clock pin, the RealFFT diagram appears as shown in [Figure 10-36](#).

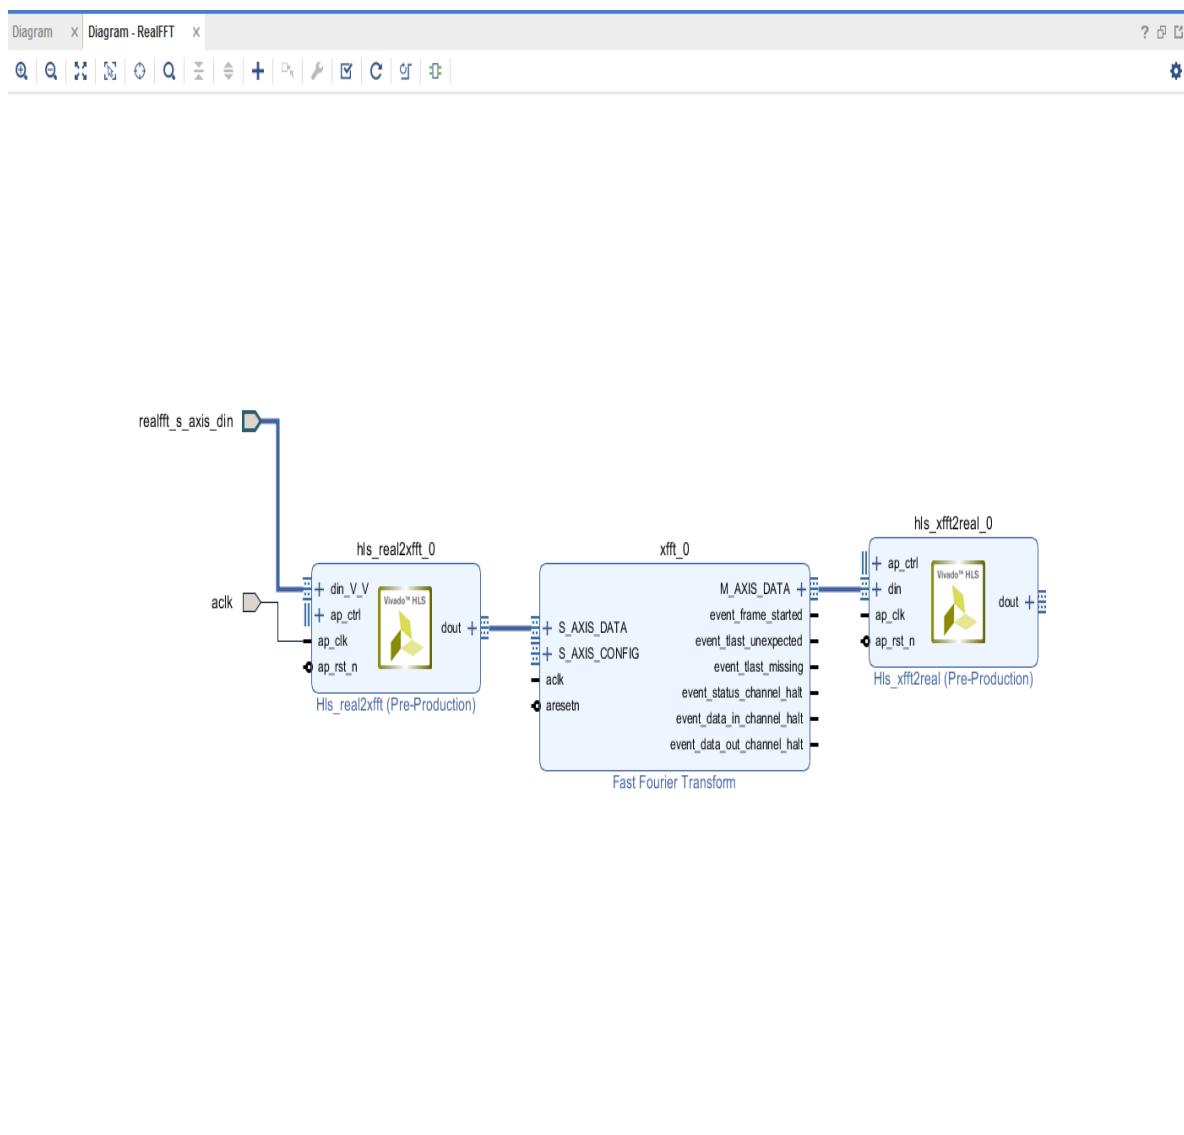


Figure 10-36: RealFFT Diagram with Interface Pin and Clock Pin

13. Following the procedures in steps 10 to 12:

- Create an interface pin called `realfft_m_axis_dout` connected to the `dout_V` pin of the `hls_xfft2real` component.
- Create a pin for `aresetn` (from any one of the blocks).

After this step, the RealFFT diagram appears as shown in [Figure 10-37](#).

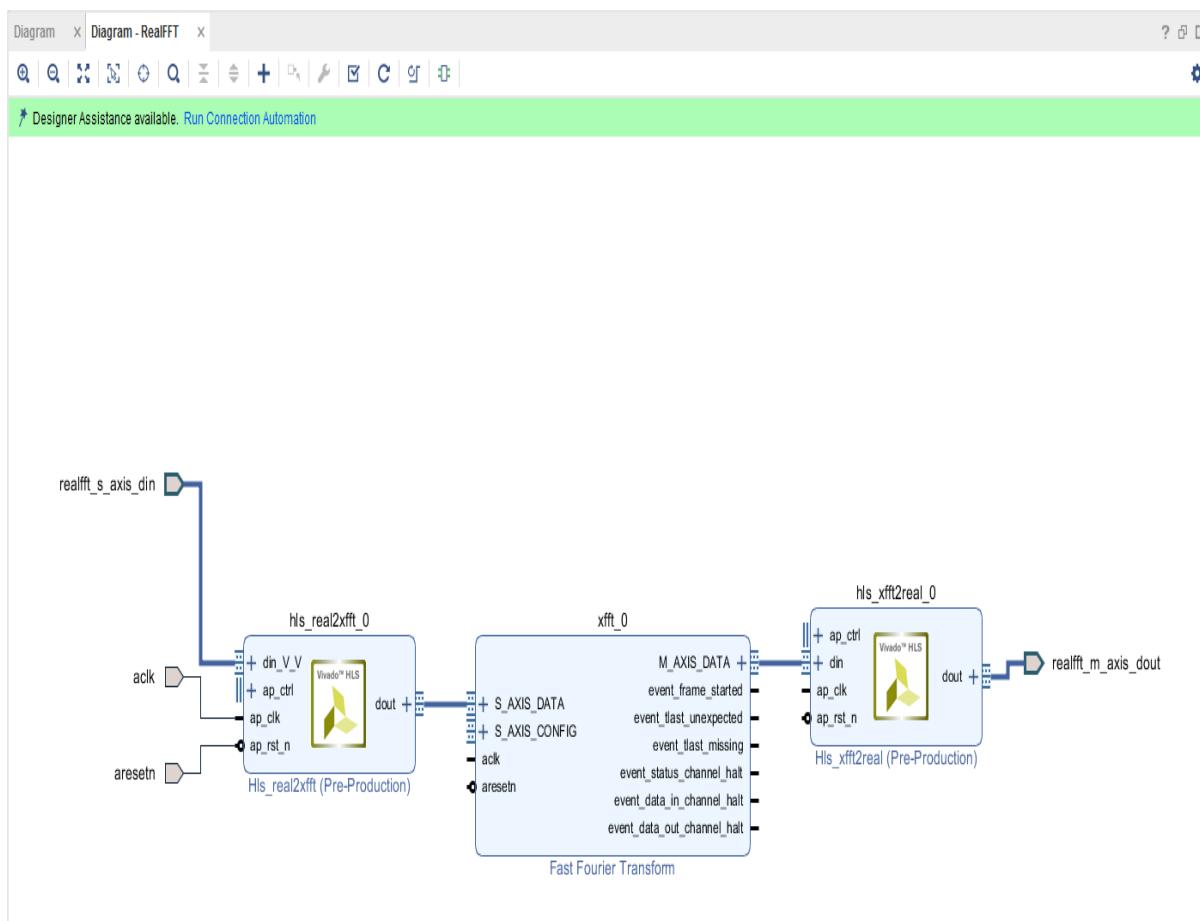


Figure 10-37: RealFFT Diagram with All Pins

Finalize RealFFT block internal connections. The **ap_start** pins for the HLS blocks are tied HIGH, and the **clk** and **aresetn** pins on all blocks are tied together.

14. Right-click the canvas and select **Add IP** from the context menu.
 - a. Type **const** into the search box and press **Enter**.
 - b. Double-click the **xlconstant_0** component and verify that the **Const Val** field in the Customize IP dialog is set to 1.

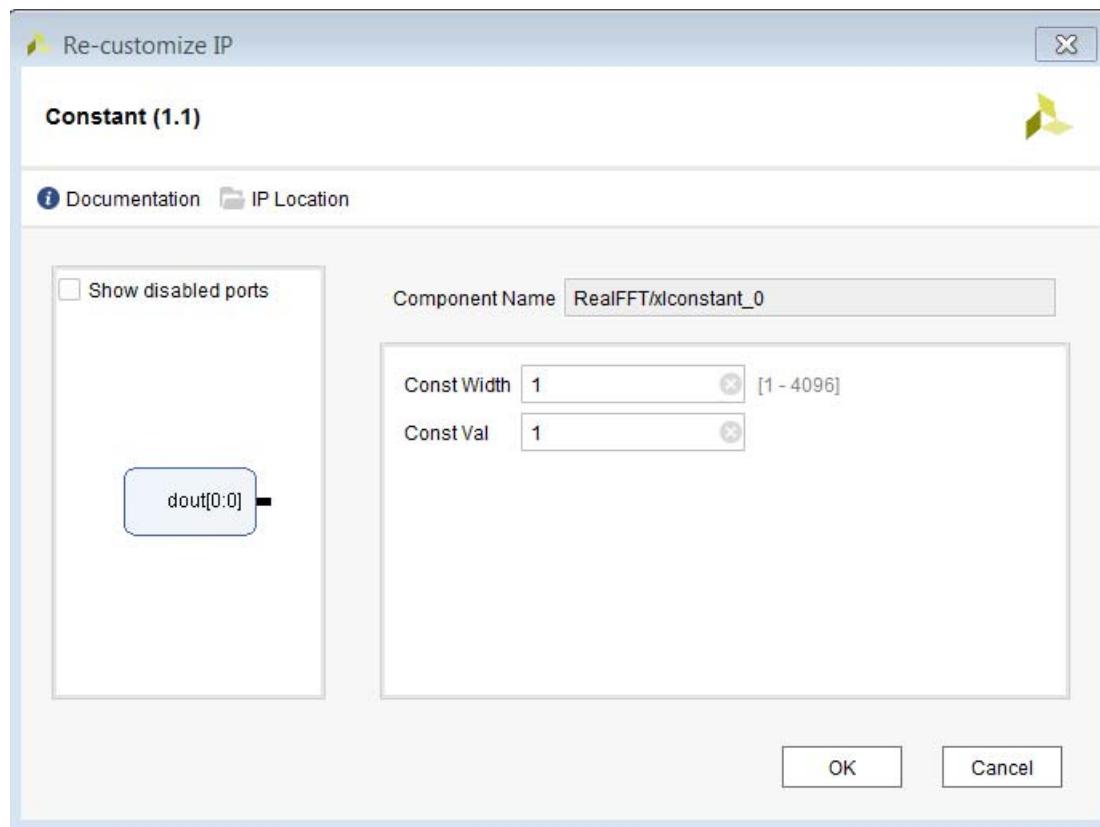


Figure 10-38: Create a Constant 1 Tie-Off

15. Expand the `ap_ctrl` interface by clicking the + sign next to it on the `hls_real2xfft` and `hls_xfft2real` block symbols and:
 - a. Connect the output pin of `xlconstant_0` to the `ap_start` pin of `hls_real2xfft_0`.
 - b. Connect the output pin of `xlconstant_0` to the `ap_start` pin of `hls_xfft2real_0`.
16. Similarly, connect all remaining component `dout_v` and `reset` pins to the RealFFT block diagram `aclk` and `aresetn` pins respectively.
17. Add another `xlconstant` block and configure it with a Const Width of 16 and Const Val of 0.
18. Expand the `S_AXIS_CONFIG` interface of the FFT block and connect `s_axis_config_tdata` and `s_axis_config_tvalid` to the new constant block.

Leave all other output pins of the components disconnected. The final RealFFT diagram appears with the connections shown in [Figure 10-39](#).

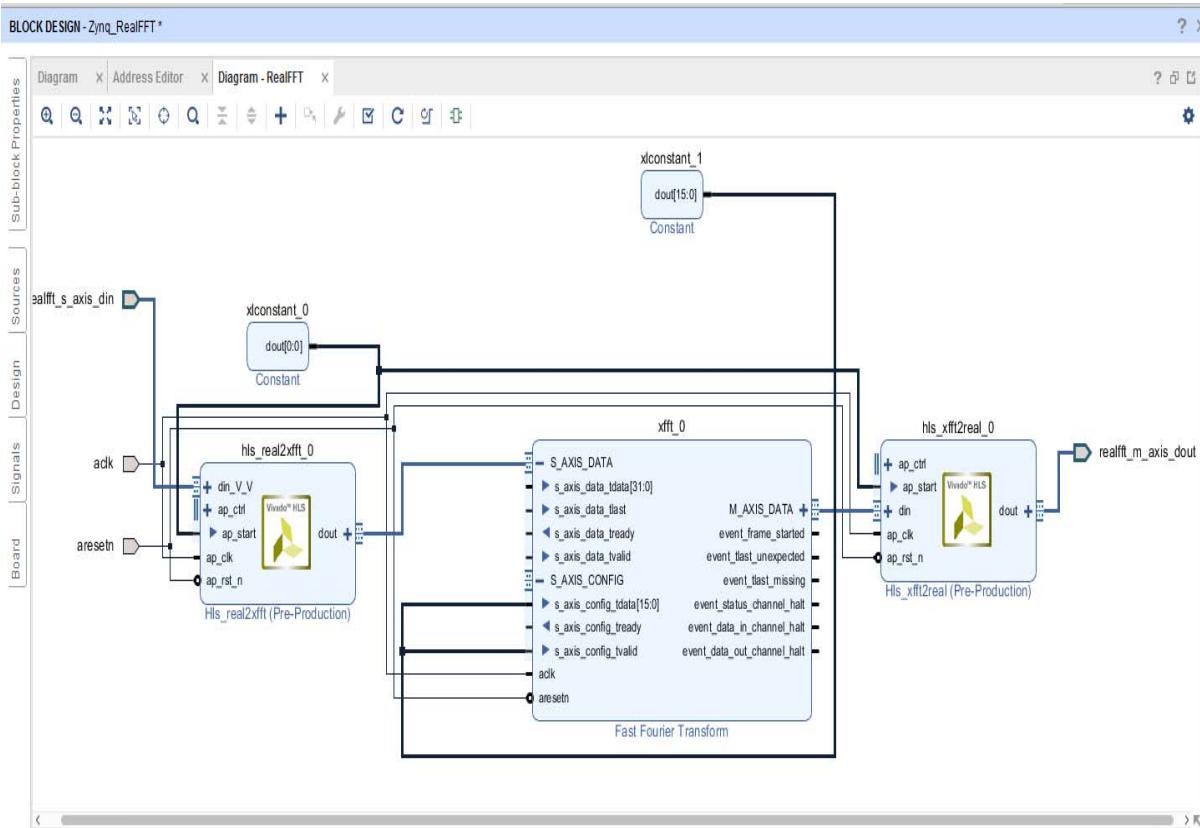


Figure 10-39: Final RealFFT Diagram

19. Close the RealFFT diagram tab and return to the top-level Zynq_RealFFT diagram.
20. Create the Zynq system.
 - a. Right-click the canvas of the top-level diagram and select **Add IP** from the context menu.
 - b. Type `zynq` in the search box, select **ZYNQ7 Processing System** and press **Enter**.
 - c. Notice that designer assistance is available and click the **Run Block Automation** link. Accept the defaults in the dialog by clicking **OK**.
 - d. Double-click the **processing_system7_0** component to enter the Re-customize IP wizard for the ZYNQ7.
 - e. Click the **Presets** button near the top of the wizard screen, select the **ZC702 Development Board Template**, and click **OK**.
 - f. Click **PS-PL Configuration** in the Page Navigator pane on the left of the wizard.
 - g. Expand the HP Slave AXI Interface category and check the box for the S AXI HP0 interface, leaving the S AXI HP0 DATA WIDTH at 64.

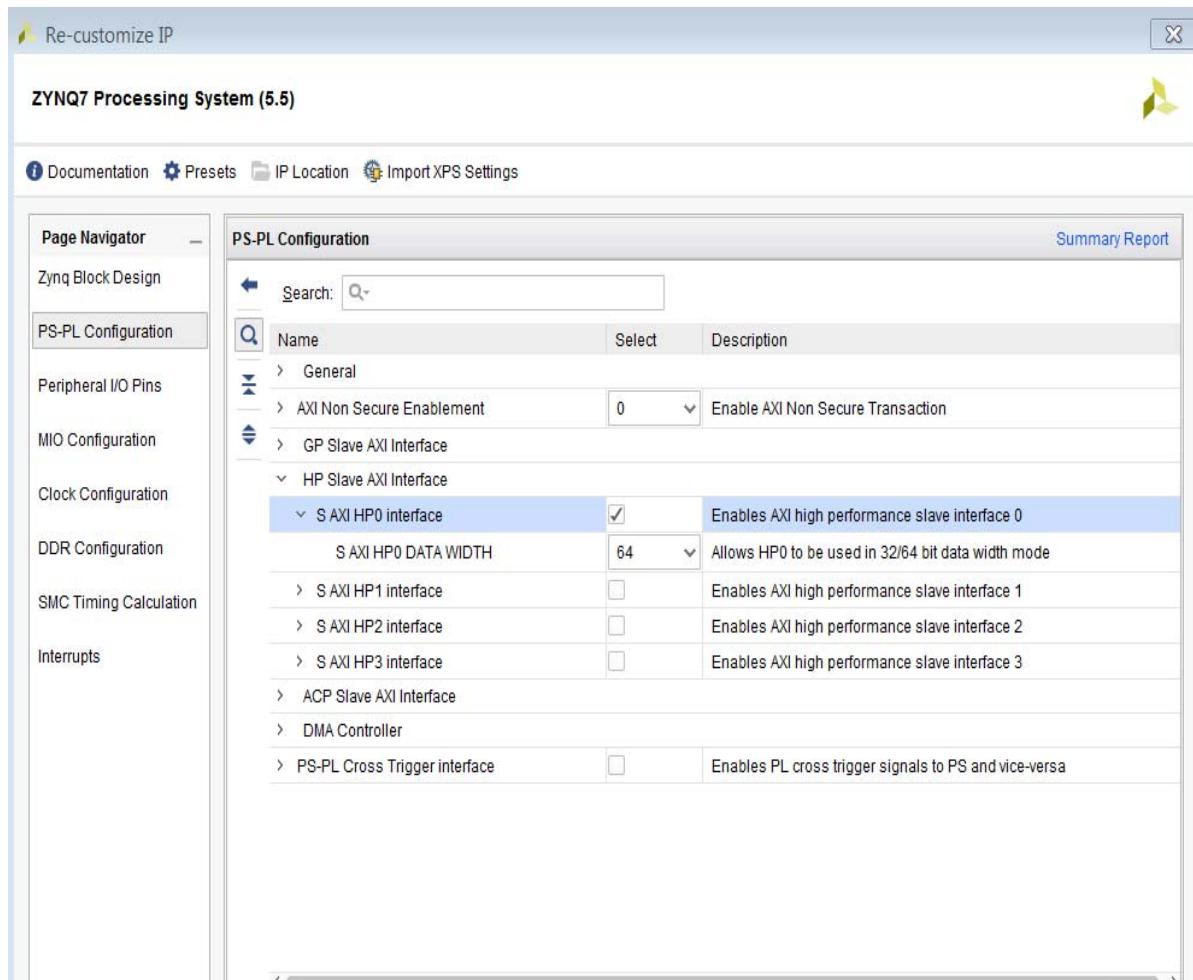


Figure 10-40: Configuring Port HPO

- h. Select **Clock Configuration** in the Page Navigator, expand PL Fabric Clocks, and change the requested frequency to 100 (MHz).

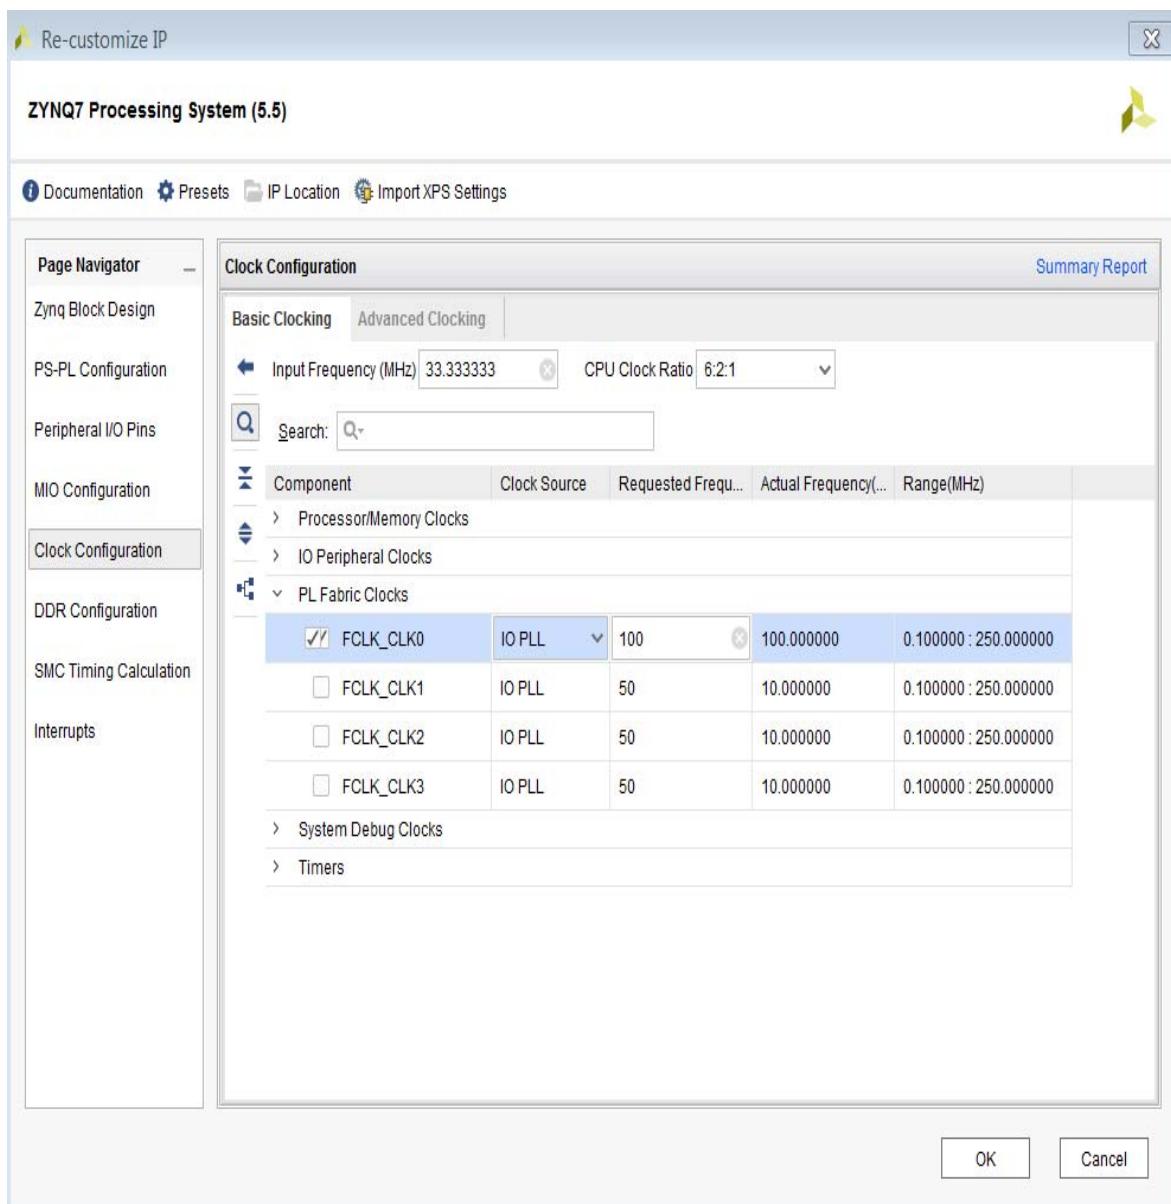


Figure 10-41: Configuring the Clock

- i. Leave all other settings at their defaults; click **OK** to apply customizations.
21. Make a connection from RealFFT block's realfft_s_axis_din to Zynq SoC's S_AXI_HP0, accept the defaults in the Make Connection dialog and click OK.
- IPI will place several new blocks require to complete the connection automatically, including an AXI DMA core, an AXI Interconnect and a Processor System Reset block.
22. Make a connection from the RealFFT block's realfft_m_axis_dout to the Zynq's S_AXI_HP0 interface. Accepting the defaults in the Make Connection dialog will cause IPI to use the existing AXI DMA (which has an unused write channel) and AXI Interconnect to make the 'S2MM' connection.

23. Note that Designer Assistance is again available. Run Connection Automation on /axi_dma/S_AXI_LITE and click **OK** in the resulting dialog box.
24. Connect the `aclk` and `aresetn` ports of the RealFFT hierarchical block to nets `processing_system7_0` pin `FCLK_CLK0` and `rst_processing_system7_0_100M` pin `peripheral_aresetn` respectively.
25. To complete the design, run Validate Design. When validation completes successfully, the block diagram should look like [Figure 10-42](#).

Step 5: Implementing the System

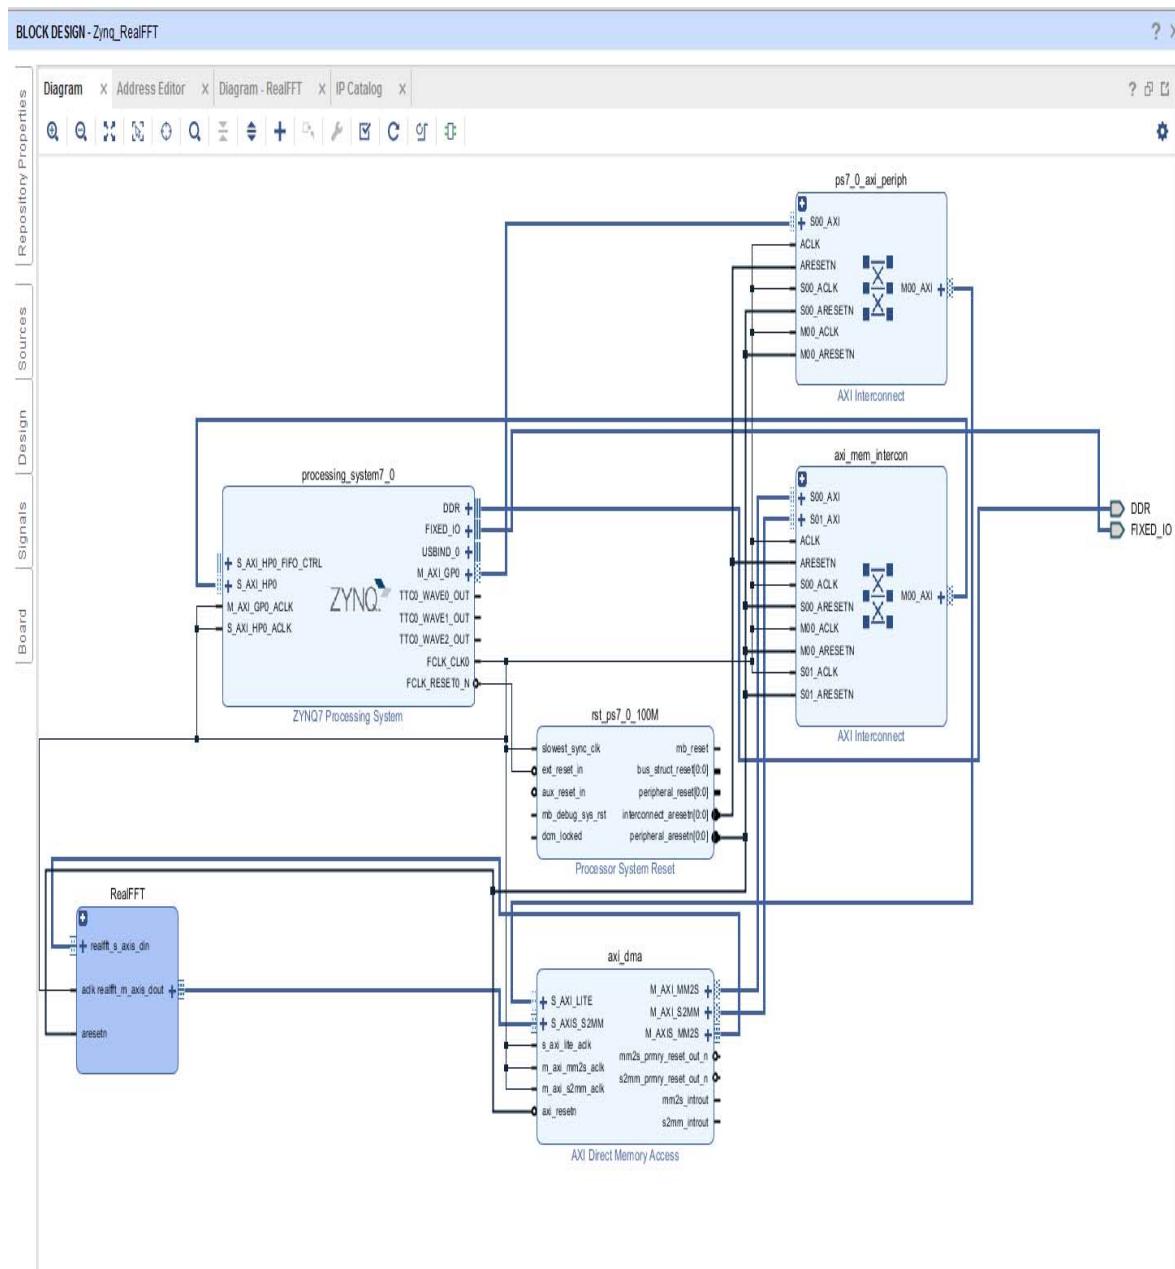


Figure 10-42: Zynq Diagram with Internal Connections

Before proceeding with the system design, you must generate implementation sources and create an HDL wrapper as the top-level module for synthesis and implementation.

1. Return to the Project Manager view by clicking **Project Manager** in the Flow Navigator.
2. In the Sources browser in the main workspace pane, a Block Diagram object called **Zynq_ RealFFT** appears at the top of the Design Sources tree view. Right-click this object and select **Generate Output Products**.

3. In the resulting dialog box, click **OK** to start the process of generating the necessary source files.
4. Right-click the `Zynq_RealFFT` object again, select **Create HDL Wrapper**, and click **OK** to exit the resulting dialog box.

The top-level of the Design Sources tree becomes the `Zynq_RealFFT_wrapper.v` file. You are now ready to synthesize, implement, and generate an FPGA programming bitstream for the design.

5. Click **Generate Bitstream** to initiate the remainder of the flow.
6. In the dialog that appears after bitstream generation has completed, select **Open Implemented Design** and click **OK**.

Step 6: Setup SDK and Test the ZYNQ System

You are now ready to export the design to Xilinx SDK. In SDK, you create software to run on a ZC702 board (if available). A driver for the HLS block was generated during HLS export of the Vivado IP Catalog package and must be made available in SDK for the PS7 software to communicate with the block.

1. From the Vivado File menu select **Export > Export Hardware for SDK**.

Note: Both the IPI Block Design and the Implemented Design must be open in the Vivado workspace for this step to complete successfully.

2. In the Export Hardware for SDK dialog box, ensure that the **Include Bitstream** option is checked, and click **OK**.
3. From the Vivado **File** menu, select **Launch SDK**.
4. Click **OK** to launch SDK.
5. Create a `Hello World` application (also creates BSP).
 - a. Select **File > New > Application Project**.
 - b. Enter the project name `Zynq_RealFFT_Test`.
 - c. Click **Next**.
 - d. Select **Hello World** (if it is not the default).
 - e. Click **Finish**.
6. Power up the ZC702 board and program the FPGA.

Ensure the board has all the connections to allow you to download the bitstream on the FPGA device. Refer to the documentation that accompanies the ZC702 development board.

7. Click **XilinxTools > Program FPGA**. The Done LED (DS3) goes on.

8. Set up a Terminal in the tab at bottom of workspace:
 - a. Click the **Connect** icon.
 - b. Select **Connection Type > Serial**.
 - c. Select the COM port to which the USB UART cable is connected (generally not COM1 or COM3). On Windows, if you are not sure, open the Device Manager and identify the port with the Silicon Labs driver under Ports (COM & LPT).
 - d. Change the Baud Rate to 115200.
 - e. Click **OK** to exit Terminal Settings dialog box.
 - f. Check that terminal is connected by message in tab title bar.
9. Right-click application project `Zynq_Design_Test` in the Explorer pane.
 - a. Select **Run As > Launch on Hardware**.
10. Switch to the **Terminal** tab and confirm that `Hello World` was received.
11. This project uses the C math library (`libm`), so you must adjust the build settings to link to it.
 - a. Right-click the `zynq_realfft_test` project in the Project Explorer pane and select **C/C+ Build Settings** (Figure 10-43).

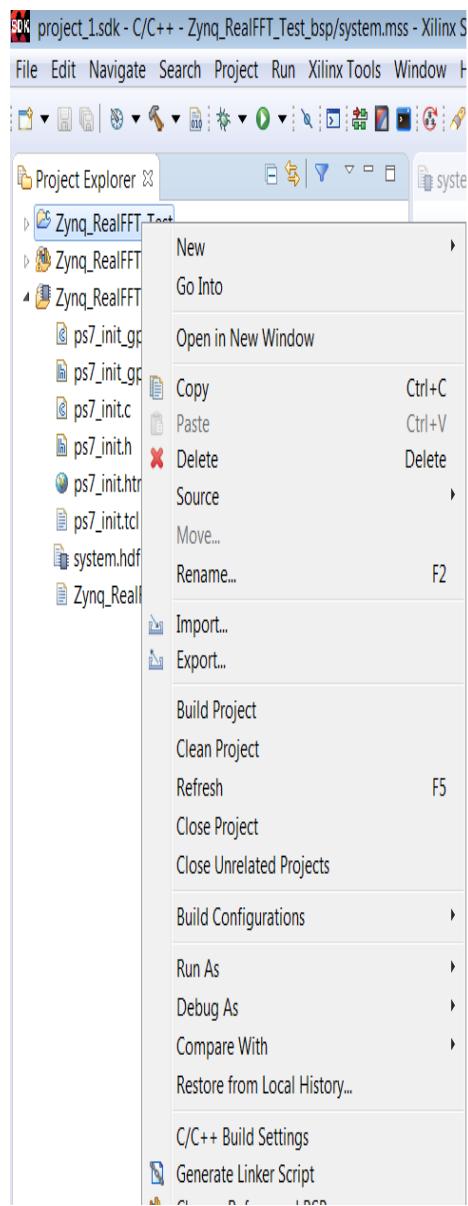


Figure 10-43: Specify C/C++ Build Settings

- b. Add the Arm gcc linker libraries.
 - i. In the Tool Settings tab, select '**Arm gcc linker**' > **Libraries**.
 - ii. Click the **Add** icon.

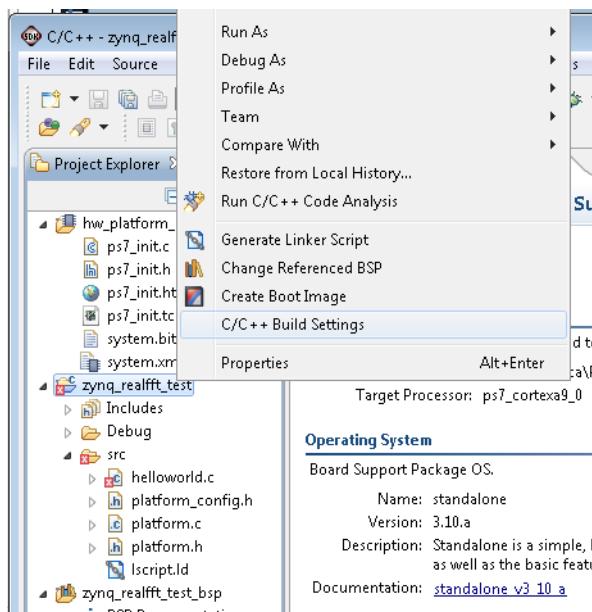


Figure 10-44: C/C++ Build Settings

- c. Enter `m` in the text field in the Enter Value dialog box and click **OK**.

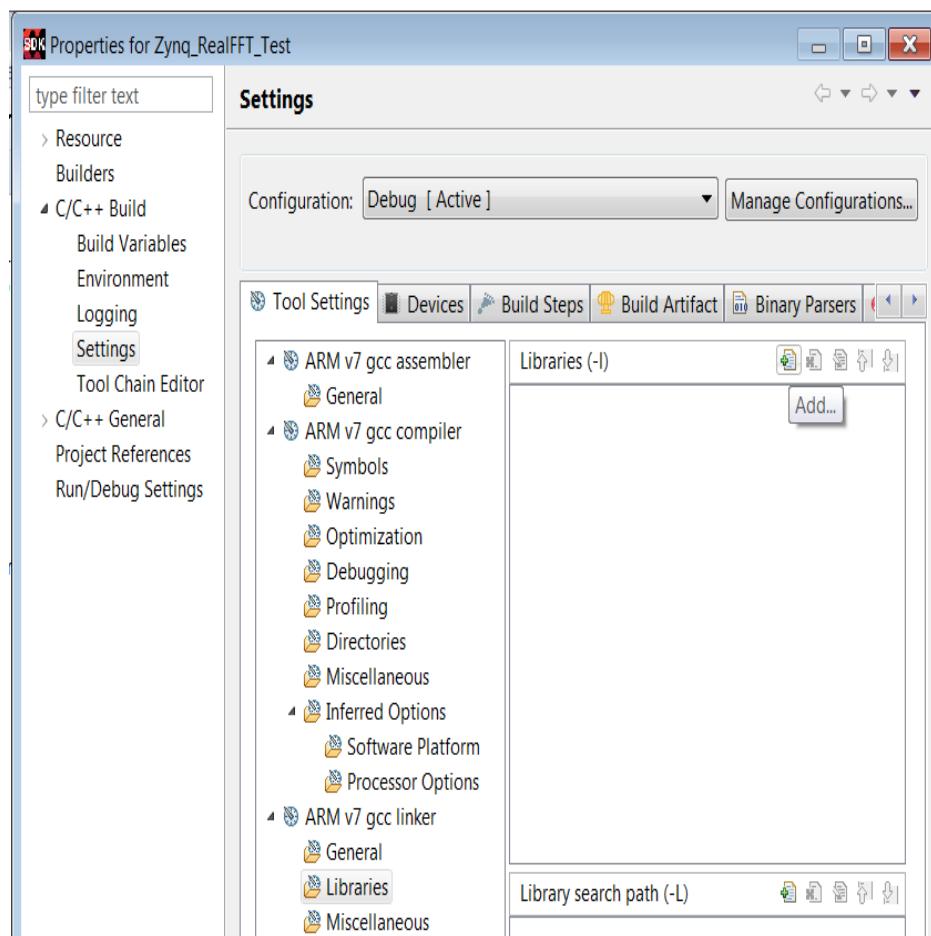


Figure 10-45: Library Setting

- Click **OK** to exit the Properties for the `zynq_realfft_test` dialog box.

Step 7: Modify software to communicate with HLS block

The completely modified source file is available in the `arm_code` directory of the tutorial file set. The modifications are discussed in detail below.

- Open the `helloworld.c` source file.
- Several BSP (and standard C) header files must be included:

```
#include <stdlib.h> // Std C functions, e.g. exit()
#include <math.h>   // libm header: sqrt(), cos(), etc
#include "xparameters.h" // System parameter definitions
#include "xaxidma.h" // Device driver API for AXI DMA
```

- Define the (real data) transform length of the FFT:

```
#define REAL_FFT_LEN 1024
```

- Define a custom complex data type with 16-bit real and imaginary members:

```
typedef struct {
    short re;
    short im;
} complex16;
```

5. Declare helper functions before the definition of `main()`; they will be defined later.

Note: The `init_dma()` function wraps up all run-once, initialization AXI DMA driver API calls and checks that hardware initialization is successful before returning or exiting on an error condition. The `generate_waveform()` function fills an array with a simple, periodic waveform to be used as input stimulus for the RealFFT accelerator.

```
int init_dma(XAxiDma *axiDma);
void generate_waveform(short *signal_buf, int num_samples);
```

6. Modify `main()` to generate and send input data to the RealFFT accelerator and receive the spectral data from it via the AXI DMA engine. Sections of particular importance will be discussed in detail.

```
// Program entry point
int main()
{
```

- a. Declare an XAxiDma instance to use as a handle to the AXI DMA hardware:

```
// Declare a XAxiDma object instance
XAxiDma axiDma;
```

- b. Declare variable for local data storage:

```
// Local variables
int i, j;
int status;
static short realdata[4*REAL_FFT_LEN];
volatile static complex16 realspectrum[REAL_FFT_LEN/2];
```

- c. Run platform and DMA initialization functions:

```
// Initialize the platform
init_platform();
print("-----\n\r");
print("- RealFFT PL accelerator test program -\n\r");
print("-----\n\r");

// Initialize the (simple) DMA engine
status = init_dma(&axiDma);
if (status != XST_SUCCESS) {
    exit(-1);
}
```

- d. Generate a stimulus waveform:

```
// Generate a waveform to be input to FFT
for (i = 0; i < 4; i++)
    generate_waveform(realdata + i * REAL_FFT_LEN, REAL_FFT_LEN);
```

- e. Before making the DMA transfer request, the buffer containing the data must be flushed from the processor's data cache. Without this step, the DMA might pull stale data from the DRAM.

```
// *IMPORTANT* - flush contents of 'realdata' from data cache to memory
// before DMA. Otherwise DMA is likely to get stale or uninitialized data
Xil_DCacheFlushRange((unsigned)realdata, 4 * REAL_FFT_LEN * sizeof(short));
```

- f. Request DMA transfer from PS to PL. Enough data to fill the front-end block and the FFT processing pipelines must be sent in order for spectral data to be ready when the PL to PS transfer is requested. Therefore, four data sets are sent before the first output set is requested:

```
// DMA enough data to push out first result data set completely
status = XAxiDma_SimpleTransfer(&axiDma, (u32)realdata,
    4 * REAL_FFT_LEN * sizeof(short), XAXIDMA_DMA_TO_DEVICE);

// Do multiple DMA xfers from the RealFFT core's output stream and
// display data for bins with significant energy. After the first frame,
// there should only be energy in bins around the frequencies specified
// in the generate_waveform() function - currently bins 191~193 only
for (i = 0; i < 8; i++) {
```

- g. Request DMA transfer of a frame of FFT spectral data from PL to PS then poll for completion of the transfer before proceeding.

```
// Setup DMA from PL to PS memory using
// AXI DMA's 'simple' transfer mode
status = XAxiDma_SimpleTransfer(&axiDma, (u32)realspectrum,
REAL_FFT_LEN / 2 * sizeof(complex16), XAXIDMA_DEVICE_TO_DMA);
// Poll the AXI DMA core
do {
    status = XAxiDma_Busy(&axiDma, XAXIDMA_DEVICE_TO_DMA);
} while(status);
```

- h. Before attempting to use the spectral data, the processor's data cache copy of the buffer must be invalidated to avoid use of stale data.

```
// Data cache must be invalidated for 'realspectrum' buffer after DMA
Xil_DCacheInvalidateRange((unsigned)realspectrum,
REAL_FFT_LEN / 2 * sizeof(complex16));
```

- i. Push another set of stimulus data to the PL in order to start the accelerator processing the next frame:

```
// DMA another frame of data to PL
if (!XAxiDma_Busy(&axiDma, XAXIDMA_DEVICE_TO_DMA))
    status = XAxiDma_SimpleTransfer(&axiDma, (u32)realdata,
        REAL_FFT_LEN * sizeof(short), XAXIDMA_DEVICE_TO_DMA);
printf("\n\rFrame %d received:\n\r");
```

- j. Do something to verify that the accelerator is functioning. In this case, the spectral data is scanned for bins that contain significant energy. The expectation is to detect only energy in bins around the single tone (192) generated by the generate_waveform() function.

```
// Detect energy in spectral data above a set threshold
for (j = 0; j < REAL_FFT_LEN / 2; j++) {
```

```

// Convert the fixed point (s.15) values into floating point values
float real = (float)realspectrum[j].re / 32767.0f;
float imag = (float)realspectrum[j].im / 32767.0f;
float mag = sqrtf(real * real + imag * imag);
if (mag > 0.00390625f) {
    printf("Energy detected in bin %3d - ",j);
    printf("{%8.5f, %8.5f}; mag = %8.5f\n\r", real, imag, mag);
}
printf("End of frame.\n\r");
}
printf("*****\n\r");
printf("* End of test *\n\r");
printf("*****\n\r\n\r");
return 0;
}

```

7. Define the helper function that generates the waveform data sets. This version simply fills a buffer with a single tone with 192 cycles per num_samples data window with values in a S.15 fixed point format.

```

void generate_waveform(short *signal_buf, int num_samples)
{
    const float cycles_per_win = 192.0f;
    const float phase = 0.0f;
    const float ampl = 0.9f;
    int i;
    for (i = 0; i < num_samples; i++) {
        float sample = ampl *
            cosf((i * 2 * M_PI * cycles_per_win / (float)num_samples) + phase);
        signal_buf[i] = (short)(32767.0f * sample);
    }
}

```

8. Define a routine to set up the and initialize the AXI DMA engine, wrapping all driver API calls that only need to be run once at startup.

```

int init_dma(XAxiDma *axiDmaPtr){
    XAxiDma_Config *CfgPtr;
    int status;
    // Get pointer to DMA configuration
    CfgPtr = XAxiDma_LookupConfig(XPAR_AXIDMA_0_DEVICE_ID);
    if(!CfgPtr){
        print("Error looking for AXI DMA config\n\r");
        return XST_FAILURE;
    }
    // Initialize the DMA handle
    status = XAxiDma_CfgInitialize(axiDmaPtr,CfgPtr);
    if(status != XST_SUCCESS){
        print("Error initializing DMA\n\r");
        return XST_FAILURE;
    }
    //check for scatter gather mode - this example must have simple mode only
    if(XAxiDma_HasSg(axiDmaPtr)){
        print("Error DMA configured in SG mode\n\r");
        return XST_FAILURE;
    }
    //disable the interrupts
}

```

```
XAxidma_IntrDisable(axiDmaPtr, XAXIDMA_IRQ_ALL_MASK,XAXIDMA_DEVICE_TO_DMA) ;  
XAxidma_IntrDisable(axiDmaPtr, XAXIDMA_IRQ_ALL_MASK,XAXIDMA_DMA_TO_DEVICE) ;  
  
    return XST_SUCCESS;  
}
```

9. Save the modified source file. As soon as you save the file, SDK automatically attempts to re-build the application executable. If the build fails, fix any outstanding issues.
 10. Run the new application on the hardware and verify that it works as expected. Ensure that the FPGA is programmed and a terminal session is connected to the UART. Then Launch on Hardware, as done for the previous Hello World application code.
-

Conclusion

In this tutorial, you learned:

- How to create Vivado HLS IP using a Tcl script.
- How to import an HLS design as IP into IP Integrator.
- How to connect HLS IP to a Zynq SoC using AXI4-Lite interfaces and AXI4-Stream interfaces.
- How to configure HLS IP with AXI4-Lite in software.
- How to control DMAs using AXI4-Stream in software.

Using HLS IP in System Generator for DSP

Overview

The RTL created by High-Level Synthesis can be packaged as IP and used inside System Generator for DSP (Vivado). This tutorial shows how this process is performed and demonstrates how the design can be used inside System Generator for DSP.

This tutorial consists of a single lab exercise.

Lab 1 Description

Generates a design using Vivado HLS and package the design for use with System Generator for DSP. Then include the HLS IP into a System Generator for DSP design and execute an RTL simulation.

Tutorial Design Description

You can download the tutorial design file from the Xilinx Website. See the information in [Locating the Tutorial Design Files](#).

This tutorial uses the design files in the tutorial directory
`Vivado_HLS_Tutorial\Using_IP_with_SysGen`.

The sample design is a FIR filter that uses streaming interfaces modeled with the High-Level Synthesis `hls::stream` class. The design is fully pipelined at the function level. The optimization directives are embedded into the C code as pragmas.

Lab 1: Package HLS IP for System Generator

This lab exercise integrates the High-Level Synthesis IP into System Generator for DSP.



IMPORTANT: *The figures and commands in this tutorial assume the tutorial data directory `Vivado_HLS_Tutorial` is unzipped and placed in the location `C:\Vivado_HLS_Tutorial`.*

If the tutorial data directory is unzipped to a different location, or on Linux systems, adjust the few pathnames referenced, to the location you have chosen to place the Vivado_HLS_Tutorial directory.

Step 1: Create a Vivado HLS IP Block

Create two HLS blocks for the Vivado IP Catalog using the provided Tcl script. The script runs HLS C-synthesis, runs RTL co-simulation, and package the IP.

1. Open the Vivado HLS Command Prompt.

- On Windows, go to **Start > All Programs > Xilinx Design Tools > Vivado 2018.3 > Vivado HLS > Vivado HLS 2018.3 Command Prompt**.
- On Linux, open a new shell.

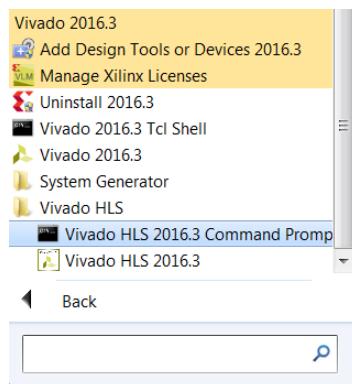


Figure 11-1: Vivado HLS Command Prompt

2. Using the command prompt window, change the directory to Vivado_HLS_Tutorial\Using_IP_with_SysGen\lab1.
3. Type `vivado_hls -f run_hls.tcl` to create the HLS IP.

A screenshot of a terminal window titled "Vivado HLS 2013.2 Command Prompt". The window has a black background and white text. It shows the following command sequence:

```
C:\Vivado_HLS_Tutorial>cd Using_IP_with_SysGen
C:\Vivado_HLS_Tutorial\Using_IP_with_SysGen>cd lab1
C:\Vivado_HLS_Tutorial\Using_IP_with_SysGen\lab1>vivado_hls -f run_hls.tcl
```

The window has standard operating system window controls at the top right.

Figure 11-2: Create the HLS Design

A key aspect of the Tcl script used to create this IP is the command `export_design -format sysgen`. This command creates an IP package for System Generator. When the script completes there is a Vivado HLS project directories `fir_prj`, which contains the HLS IP, including the IP package for use in a System Generator for DSP design.

The remainder of this tutorial exercise shows how to integrate the Vivado HLS IP block into a System Generator design.

Step 2: Open the System Generator Project

1. Open System Generator for DSP.
 - On Windows use the desktop icon.
 - On Linux, open a new shell and type **sysgen**.



Figure 11-3: System Generator Icon

2. When Matlab invokes, click the **Open** toolbar button. As shown in Figure 11-4.

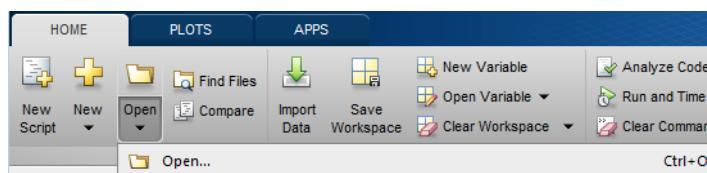


Figure 11-4: Open the System Generator Design

3. Navigate to the tutorial directory
Vivado_HLS_Tutorial\Using_IP_with_SysGen\lab1 and select the file `fir_sysgen.slx`, as shown in Figure 11-5.

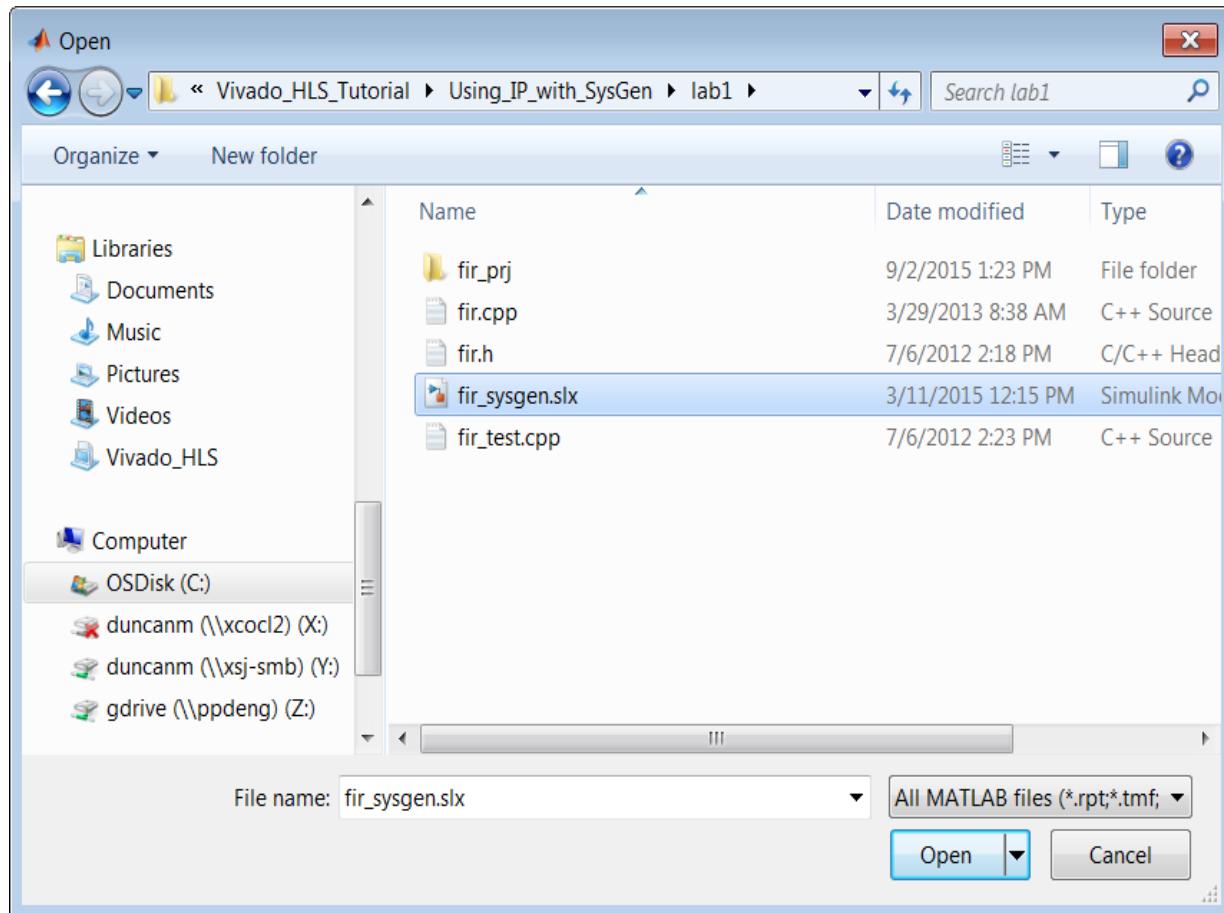


Figure 11-5: Select File fir_sysgen.slx

When System Generator invokes, all blocks and ports except the HLS IP are already instantiated in the design.

4. Right-click in the canvas and select **Xilinx BlockAdd**, as shown in Figure 11-6.

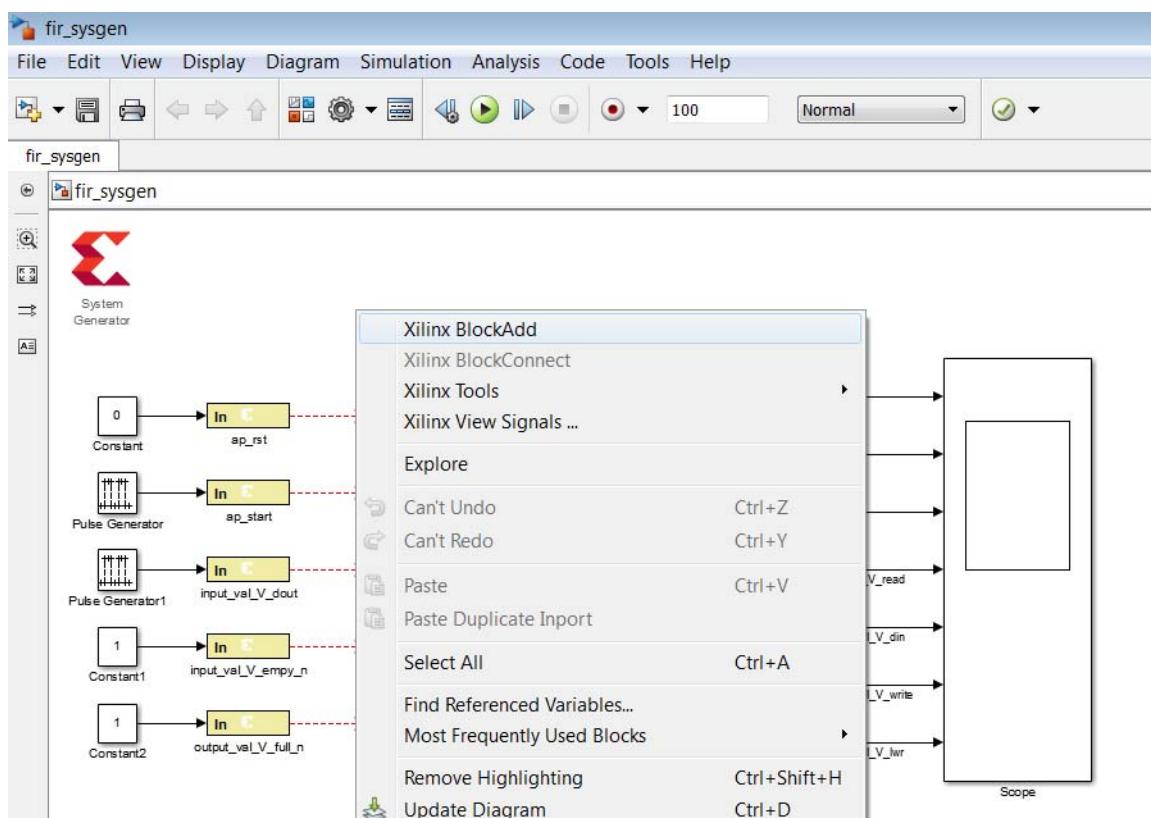


Figure 11-6: Adding a New Block

5. Type `hls` in the Add Block field.
6. Select **Vivado HLS**.

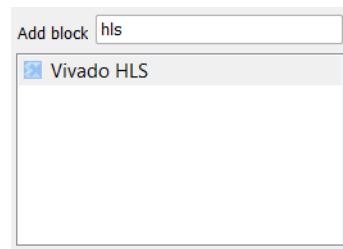


Figure 11-7: Selecting a Vivado HLS IP Block

7. Double-click the **Vivado HLS** block to open the Vivado HLS dialog box.
8. Navigate to the `fir_prj` project and click **Choose** to select the `solution1` folder.



IMPORTANT: System Generator for DSP uses the location of the solution folder to identify the IP.

9. Click **OK** to load the IP block, as shown in Figure 11-8.

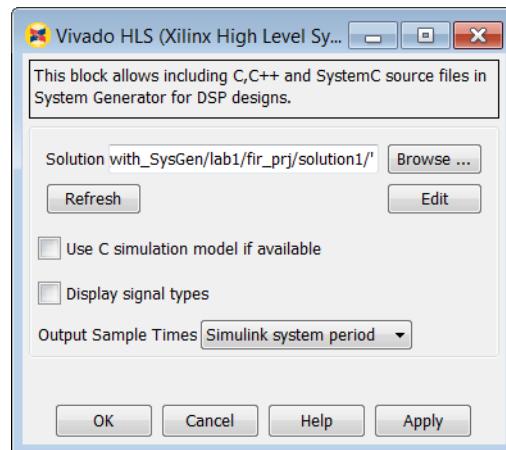


Figure 11-8: Selecting the FIR IP Block

The FIR IP block is instantiated into the design.

10. Connect the design I/O ports to the ports on the FIR IP block, as shown in Figure 11-9.

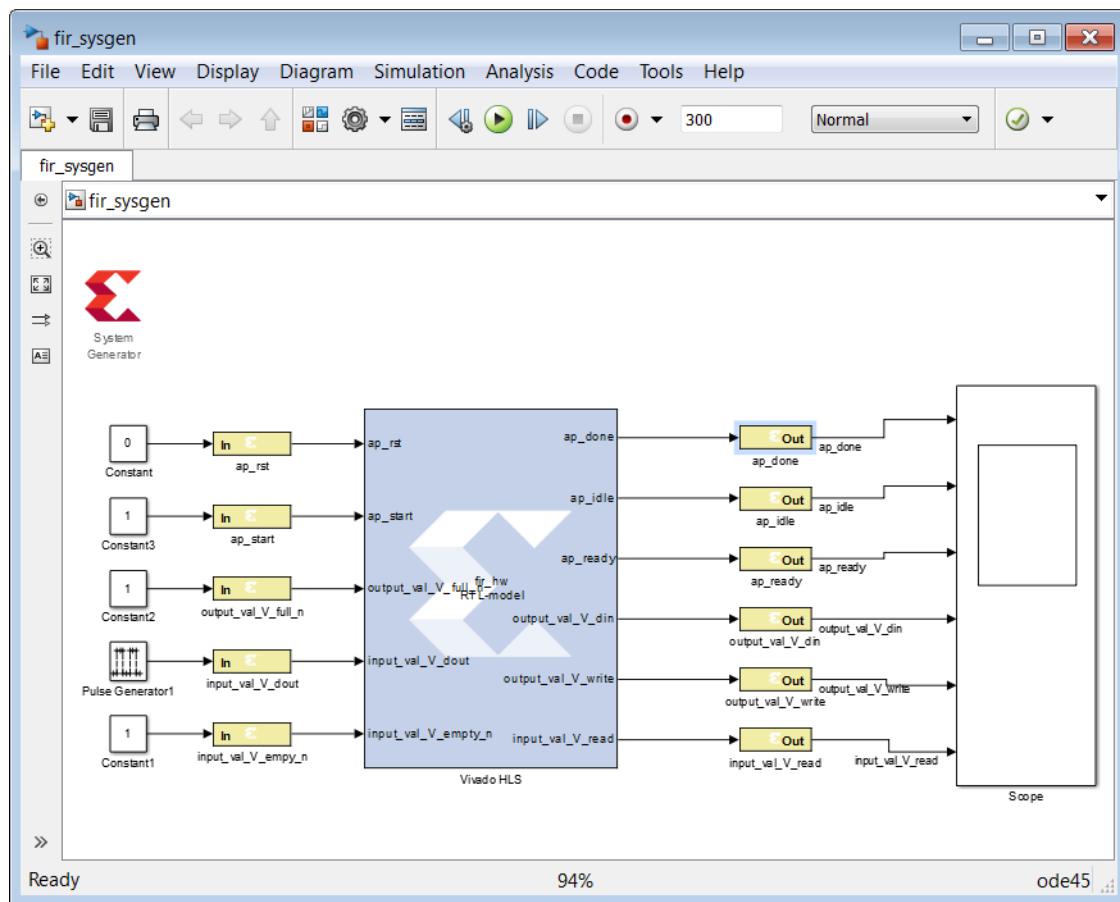


Figure 11-9: Design with All Connections

11. Ensure the simulation stop time says 300.

12. Click the **Run** button on the toolbar to execute simulation.
 13. Double-click the **Scope** block to view the simulation waveforms.
-

Conclusion

In this tutorial, you learned:

- How to create Vivado HLS IP using a Tcl script.
- How to import an HLS design as IP into System Generator for DSP.

Additional Resources and Legal Notices

Xilinx Resources

For support resources such as Answers, Documentation, Downloads, and Forums, see [Xilinx Support](#).

Solution Centers

See the [Xilinx Solution Centers](#) for support on devices, software tools, and intellectual property at all stages of the design cycle. Topics include design assistance, advisories, and troubleshooting tips.

Documentation Navigator and Design Hubs

Xilinx Documentation Navigator provides access to Xilinx documents, videos, and support resources, which you can filter and search to find information. To open the Xilinx Documentation Navigator (DocNav):

- From the Vivado IDE, select **Help > Documentation and Tutorials**.
- On Windows, select **Start > All Programs > Xilinx Design Tools > DocNav**.
- At the Linux command prompt, enter docnav.

Xilinx Design Hubs provide links to documentation organized by design tasks and other topics, which you can use to learn key concepts and address frequently asked questions. To access the Design Hubs:

- In the Xilinx Documentation Navigator, click the **Design Hubs View** tab.
- On the Xilinx website, see the [Design Hubs](#) page.

Note: For more information on Documentation Navigator, see the [Documentation Navigator](#) page on the Xilinx website.

References

1. *Introduction to FPGA Design with Vivado High-Level Synthesis* ([UG998](#))
 2. *Vivado® Design Suite User Guide: High-Level Synthesis* ([UG902](#))
 3. *Vivado Design Suite User Guide: Release Notes, Installation, and Licensing* ([UG973](#))
 4. [Vivado Design Suite Documentation](#)
-

Training Resources

Xilinx provides a variety of training courses and QuickTake videos to help you learn more about the concepts presented in this document. Use these links to explore related training resources:

1. [C-based Design: High-Level Synthesis with the Vivado HLS Tool Training Course](#)
 2. [C-based HLS Coding for Hardware Designers Training Course](#)
 3. [C-based HLS Coding for Software Designers Training Course](#)
 4. [Vivado Design Suite QuickTake Video Tutorials](#)
 5. [Vivado Design Suite QuickTake Video Tutorials: Vivado High-Level Synthesis](#)
 6. [Vivado Design Suite QuickTake Video: Getting Started with High-Level Synthesis](#)
 7. [Vivado Design Suite QuickTake Video: Verifying your Vivado HLS Design](#)
 8. [Vivado Design Suite QuickTake Video: Creating Different Types of Projects](#)
-

Please Read: Important Legal Notices

The information disclosed to you hereunder (the "Materials") is provided solely for the selection and use of Xilinx products. To the maximum extent permitted by applicable law: (1) Materials are made available "AS IS" and with all faults, Xilinx hereby DISCLAIMS ALL WARRANTIES AND CONDITIONS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING BUT NOT LIMITED TO WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, OR FITNESS FOR ANY PARTICULAR PURPOSE; and (2) Xilinx shall not be liable (whether in contract or tort, including negligence, or under any other theory of liability) for any loss or damage of any kind or nature related to, arising under, or in connection with, the Materials (including your use of the Materials), including for any direct, indirect, special, incidental, or consequential loss or damage (including loss of data, profits, goodwill, or any type of loss or damage suffered as a result of any action brought by a third party) even if such damage or loss was reasonably foreseeable or Xilinx had been advised of the possibility of the same. Xilinx assumes no obligation to correct any errors contained in the Materials or to notify you of updates to the Materials or to product specifications. You may not reproduce, modify, distribute, or publicly display the Materials without prior written consent. Certain products are subject to the terms and conditions of Xilinx's limited warranty, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>; IP cores may be subject to warranty and support terms contained in a license issued to you by Xilinx. Xilinx products are not designed or intended to be fail-safe or for use in any application requiring fail-safe performance; you assume sole risk and liability for use of Xilinx products in such critical applications, please refer to Xilinx's Terms of Sale which can be viewed at <https://www.xilinx.com/legal.htm#tos>.

AUTOMOTIVE APPLICATIONS DISCLAIMER

AUTOMOTIVE PRODUCTS (IDENTIFIED AS "XA" IN THE PART NUMBER) ARE NOT WARRANTED FOR USE IN THE DEPLOYMENT OF AIRBAGS OR FOR USE IN APPLICATIONS THAT AFFECT CONTROL OF A VEHICLE ("SAFETY APPLICATION") UNLESS THERE IS A SAFETY CONCEPT OR REDUNDANCY FEATURE CONSISTENT WITH THE ISO 26262 AUTOMOTIVE SAFETY STANDARD ("SAFETY DESIGN"). CUSTOMER SHALL, PRIOR TO USING OR DISTRIBUTING ANY SYSTEMS THAT INCORPORATE PRODUCTS, THOROUGHLY TEST SUCH SYSTEMS FOR SAFETY PURPOSES. USE OF PRODUCTS IN A SAFETY APPLICATION WITHOUT A SAFETY DESIGN IS FULLY AT THE RISK OF CUSTOMER, SUBJECT ONLY TO APPLICABLE LAWS AND REGULATIONS GOVERNING LIMITATIONS ON PRODUCT LIABILITY.

© Copyright 2012-2018 Xilinx, Inc. Xilinx, the Xilinx logo, Artix, ISE, Kintex, Spartan, Virtex, Vivado, Zynq, and other designated brands included herein are trademarks of Xilinx in the United States and other countries. All other trademarks are the property of their respective owners.