

digital

processor handbook

pdpt1 / 05
10
35
40

digital

pdp11 / 05
10
35
40

**processor
handbook**

digital equipment corporation

Copyright© 1973, by Digital Equipment Corporation


DEC, PDP, UNIBUS are registered trademarks of Digital Equipment Corporation.

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION	1-1
1.1 THE PDP-11 CONCEPT	1-1
1.2 COMPUTERS	1-2
1.2.1 PDP-11/05 & PDP-11/10	1-2
1.2.2 PDP-11/35 & PDP-11/40	1-3
1.3 PERIPHERALS/OPTIONS	1-4
1.3.1 I/O Devices	1-4
1.3.2 Storage Devices	1-4
1.4 SOFTWARE	1-6
1.4.1 Paper Tape Software	1-6
1.4.2 Disk Operating System Software	1-6
1.4.3 Higher Level Languages	1-6
1.5 NUMBER SYSTEMS	1-6
CHAPTER 2 SYSTEM ARCHITECTURE	2-1
2.1 UNIBUS	2-1
2.1.1 Bidirectional Lines	2-1
2.1.2 Master-Slave Relation	2-1
2.1.3 Interlocked Communication	2-2
2.2 CENTRAL PROCESSOR	2-2
2.2.1 General Registers	2-2
2.2.2 Instruction Set	2-3
2.2.3 Processor Status Word	2-4
2.2.4 Stacks	2-5
2.3 PDP-11/05 & 11/10 INTERNAL CPU EQUIPMENT	2-5
2.4 PDP-11/35 & 11/40 EQUIPMENT	2-6
2.5 MEMORY	2-7
2.6 AUTOMATIC PRIORITY INTERRUPTS	2-9
2.6.1 Using the Interrupts	2-11
2.6.2 Interrupt Procedure	2-11
2.6.3 Interrupt Servicing	2-12
CHAPTER 3 ADDRESSING MODES	3-1
3.1 SINGLE OPERAND ADDRESSING	3-2
3.2 DOUBLE OPERAND ADDRESSING	3-2
3.3 DIRECT ADDRESSING	3-4
3.3.1 Register Mode	3-4
3.3.2 Auto-increment Mode	3-5
3.3.3 Auto-decrement Mode	3-7
3.3.4 Index Mode	3-8
3.4 DEFERRED (INDIRECT) ADDRESSING	3-10
3.5 USE OF THE PC AS A GENERAL REGISTER	3-12
3.5.1 Immediate Mode	3-13
3.5.2 Absolute Addressing	3-13
3.5.3 Relative Addressing	3-14
3.5.4 Relative Deferred Addressing	3-15

3.6	USE OF STACK POINTER AS GENERAL REGISTER	3-16
3.7	SUMMARY OF ADDRESSING MODES	3-16
3.7.1	General Register Addressing	3-16
3.7.2	Program Counter Addressing	3-18
CHAPTER 4 INSTRUCTION SET		4-1
4.1	INTRODUCTION	4-1
4.2	INSTRUCTION FORMATS	4-2
4.3	LIST OF INSTRUCTIONS	4-4
4.4	SINGLE OPERAND INSTRUCTIONS	4-6
4.5	DOUBLE OPERAND INSTRUCTIONS	4-22
4.6	PROGRAM CONTROL INSTRUCTIONS	4-32
4.7	MISCELLANEOUS	4-70
CHAPTER 5 PROGRAMMING TECHNIQUES		5-1
5.1	THE STACK	5-1
5.2	SUBROUTINE LINKAGE	5-5
5.2.1	Subroutine Calls	5-5
5.2.2	Argument Transmission	5-6
5.2.3	Subroutine Return	5-9
5.2.4	PDP-11 Subroutine Advantage	5-9
5.3	INTERRUPTS	5-9
5.3.1	General Principles	5-9
5.3.2	Nesting	5-10
5.4	REENTRANCY	5-13
5.5	POSITION INDEPENDENT CODE	5-15
5.6	CO-ROUTINES	5-16
5.7	PROCESSOR TRAPS	5-17
5.7.1	Power Failure	5-17
5.7.2	Odd Addressing Errors	5-17
5.7.3	Time-Out Errors	5-17
5.7.4	Reserved Instructions	5-17
5.7.5	Trap Handling	5-17
CHAPTER 6 MEMORY MANAGEMENT (FOR THE 11/35 & 11/40)		6-1
6.1	GENERAL	6-1
6.1.1	Options	6-1
6.1.2	Programming	6-1
6.1.3	Basic Addressing	6-2
6.1.4	Active Page Registers	6-2
6.1.5	Capabilities Provided by Memory Management	6-3
6.2	RELOCATION	6-3
6.2.1	Virtual Addressing	6-3
6.2.2	Program Relocation	6-4
6.3	PROTECTION	6-6
6.3.1	Inaccessible Memory	6-6
6.3.2	Read-Only Memory	6-6
6.3.3	Multiple Address Space	6-7
6.4	ACTIVE PAGE REGISTERS	6-7

6.4.1	Page Address Registers	6-8
6.4.2	Page Descriptor Registers	6-8
6.5	VIRTUAL & PHYSICAL ADDRESSES	6-13
6.5.1	Construction of a Physical Address	6-13
6.5.2	Determining the Program Physical Address	6-14
6.6	STATUS REGISTERS	6-15
6.6.1	Status Register 0	6-15
6.6.2	Status Register 2	6-17
6.7	INSTRUCTIONS	6-17
6.8	STACK LIMIT OPTION	6-23
CHAPTER 7	ARITHMETIC OPTIONS (FOR THE 11/35 & 11/40)	7-1
7.1	GENERAL	7-1
7.2	EIS OPTION	7-1
7.3	FLOATING POINT OPTION	7-6
CHAPTER 8	CONSOLE OPERATION	8-1
8.1	PDP-11/05 & 11/10 CONSOLE	8-1
8.1.1	Console Elements	8-1
8.1.2	Console Switches	8-1
8.1.3	Indicators	8-3
8.2	PDP-11/35 & 11/40 CONSOLE	8-6
8.2.1	Console Elements	8-6
8.2.2	Status Indicators	8-6
8.2.3	Console Switches	8-7
8.2.4	Displays	8-8
CHAPTER 9	SPECIFICATIONS	9-1
9.1	CPU OPERATING SPECIFICATIONS	9-1
9.2	PACKAGING	9-1
9.3	MOUNTING INFORMATION	9-7
9.4	TABLE OF SPECIFICATIONS	9-9
9.5	PDP-11 FAMILY OF COMPUTERS	9-10
Appendix A	Programming Differences Between PDP-11 CPU's	A-1
Appendix B	Memory Map	B-1
Appendix C	Instruction Timing	C-1
Appendix D	Instruction Index and Numerical Op Code List	D-1
Appendix E	Summary of PDP-11 Instructions	E-1

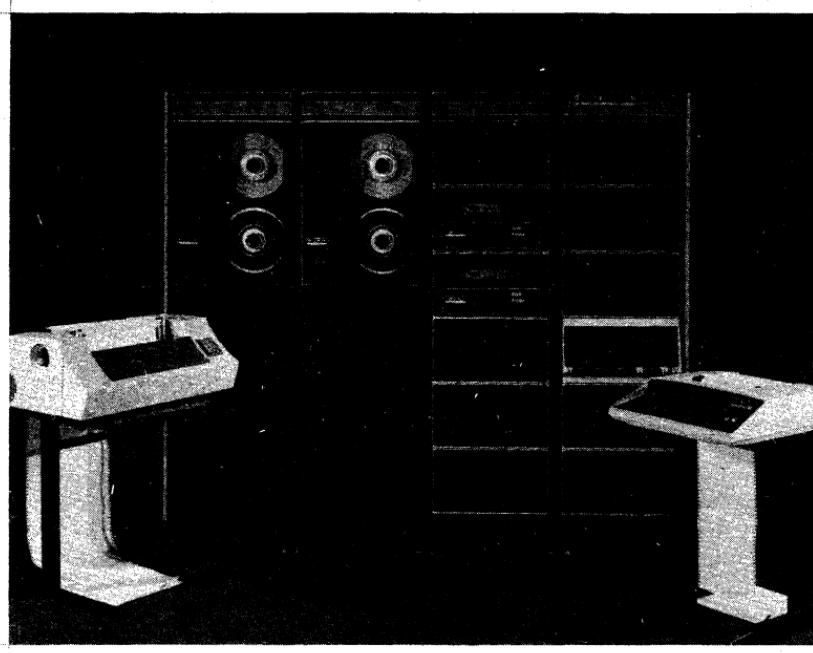

CHAPTER 1

INTRODUCTION

1.1 THE PDP-11 CONCEPT

In 1970, the first PDP-11 was introduced, marking a break with traditional small computers. To achieve a superior product, an extensive study was made on how small computers are used and what type of programming was needed. Typically, an installation has a wide variety of peripherals and customer designed interfaces. To handle this situation, the PDP-11 uses a single communications path called a UNIBUS, that allows easy data transfer and control with fast or slow, simple or complex devices. This unique bus design eliminates system obsolescence! Any particular component may be replaced by a faster or more sophisticated one, including the central processor, since timing is asynchronous. This means a PDP-11 system can take advantage of new technological breakthroughs.

The programming aspect of the investigation turned up several significant facts. Most programs operate on structured data; arrays, lists, matrices, and characters, as opposed to isolated data elements. The PDP-11 addressing architecture has eight different modes for efficient manipulation of the data structures. Input/output programming is accomplished in an innovative manner resulting in low overhead and easy implementation. The unique concepts in the PDP-11 resulted in the award of three patents.

The PDP-11 family includes several central processor units (CPU's), a large number of peripheral devices and options, and extensive software. New equipment will be compatible with existing family members. The user can choose the system which is most suitable for his application, but as needs change, he can easily add or change hardware.

All PDP-11 computers have the following features:

- 16-bit word (two 8-bit bytes)
direct addressing of 32K 16-bit words or 64K 8-bit bytes ($K = 1024$)
- Word or byte processing
very efficient handling of 8-bit characters without the need to rotate, swap, or mask
- Asynchronous operation
system components run at their highest possible speed, replacement with faster devices means faster operation without other hardware or software changes

- Modular component design
extreme ease and flexibility in configuring systems
- Stack processing
hardware sequential memory manipulation makes it easy to handle structured data, subroutines, and interrupts
- Direct Memory Access (DMA)
inherent in the architecture is direct memory access for multiple devices
- 8 general-purpose registers
fast integrated circuits used for accumulators or address generation
- Automatic Priority Interrupt
four-line, multi-level system permits grouping of interrupt lines according to response requirements
- Vectored interrupts
fast interrupt response without device polling
- Single & double operand instructions
powerful and convenient set of programming instructions
- Power Fail & Automatic Restart
hardware detection and software protection for fluctuations in the AC power

1.2 COMPUTERS

This Handbook describes two central processors. They are offered in several packaging arrangements, and with different services and software to fill the diverse needs of the End User and the Original Equipment Manufacturer (OEM). Four basic models will be described: PDP-11/05, PDP-11/10, PDP-11/35, and PDP-11/40. Another processor, the PDP-11/45, is described in a separate handbook.

A PDP-11 processor is a 16-bit general-purpose, parallel logic computer using 2's complement arithmetic. The processor can directly address 32,768 16-bit words or 65,536 8-bit bytes. The CPU performs all arithmetic and logical operations required in the system.

1.2.1 PDP-11/05 & PDP-11/10

The PDP-11/05 and the PDP-11/10 central processors are electrically the same. Digital Equipment Corporation (DEC) offers the PDP-11/05 for the Original Equipment Manufacturer (OEM). As such it is sold in those configurations and with those services that are convenient for the OEM. The PDP-11/10 is offered for the End User, and is sold in configurations that optimize its use with our small system software. More services and software are included with the PDP-11/10 for the End User.

Both central processors are housed in a 5 $\frac{1}{4}$ " or 10 $\frac{1}{2}$ " high assembly unit that mounts in a standard 19" rack. The PDP-11/05 can accept between 4K and 28K words of memory; the PDP-11/10 comes standard with 8K of core memory.

The PDP-11/05 and 11/10 are full-fledged computers that can execute all the basic PDP-11 instructions. They are the small, economical central processors with the large capability. They enjoy all the advantages of being a true member of the PDP-11 family and being able to use all the extensive developed software and peripheral equipment. If there is ever a need to upgrade to a faster or more powerful central processor, the PDP-11/05 (or 11/10) can simply be replaced by a different PDP-11 CPU, and software and peripherals remain the same in the system.

The PDP-11/05 and 11/10 include as standard item, hardware equipment that would be either necessary or very desirable in a usable configuration, such as:

- Input/Output computer terminal interface control
The serial line interface can be used to operate a Teletype, a DEC-writer (LA30, 30 character/sec printer and input keyboard), or an Alphanumeric CRT Terminal (VT05, 240 character/sec display and input keyboard).
- Programmer's Console
Switches and display for entering and verifying data as well as controlling basic computer operations. There is a Power/Panel Lock switch with a removable key.
- Line Frequency Clock
An internal timing signal derived from the power source for keeping track of when events happen. (Equivalent to the KW11-L clock option)
- Pre-wired Connector Slots
The PDP-11/05 & PDP-11/10 are prewired to accept extra memory, communication interfaces, and standard peripheral device controllers. The included CPU power supply has sufficient excess capacity to handle optional internal equipment.

1.2.2 PDP-11/35 & PDP-11/40

The PDP-11/35 and the PDP-11/40 central processors are functionally identical. The 11/40 is packaged in a 21" high front panel slide chassis, which in turn is mounted in a standard DEC 72" cabinet, allowing convenient access and expansion. The 11/35 is mounted in a 10½" high slide mounted chassis for compactness. The computers were designed to fit a broad range of applications, from simple situations where the computer consists of only 8K of memory and an I/O device, to large multi-user, multi-task environments requiring up to 124K of core memory. The machines provide a balance between high-speed processing and economy coupled with expandability. The processor assembly is pre-wired to accept a Floating Point option, and a Memory Management option for addressing over 28K of core memory. Memory Management also provides relocation and protection, especially useful in a multi-user operation.

Included with the basic 11/35 & 11/40 are:

- 8K of 900 nsec core memory
- Programmer Console with LED display and removable key for Power/Panel Lock
- Power supply with excess capacity to drive internal optional equipment

- Prewired to accept Floating Point and Memory Management hardware options

Table 1-1 highlights some of the significant differences and similarities of the computers.

DEC References

PDP-11 Peripherals and Interfacing Handbook

Introduction to Programming

Small Computer Handbook

PDP-11 Computer Manuals

1.3 PERIPHERALS/OPTIONS

Digital Equipment Corporation (DEC) designs and manufactures many of the peripheral devices offered with PDP-11's. As a designer and manufacturer of peripherals, DEC can offer extremely reliable equipment, lower prices, more choice and quantity discounts.

1.3.1 I/O Devices

All PDP-11 systems can use a Teletype as the basis I/O device. However, I/O capabilities can be increased with high-speed paper tape reader-punches, line printers, card readers or alphanumeric display terminals. The LA30 DECrwriter, a totally DEC-designed and built teleprinter, can serve as an alternative to the Teletype. It has several advantages over standard electromechanical typewriter terminals, including higher speed, fewer mechanical parts and very quiet operation.

PDP-11 I/O devices include:

Cassette, TA11

DECterminal alphanumeric display, VT05

DECrwriter teleprinter, LA30

High Speed Line Printers, LS11, LP11

High Speed Paper Tape Reader and Punch, PC11

Teletypes, LT33

Card Readers, CR11, CD11

Graphics Terminal, GT40

Synchronous and Asynchronous Communications Interfaces

1.3.2 Storage Devices

Storage devices range from convenient, small-reel magnetic tape (DEC-tape) units to mass storage magnetic tapes and disk memories. With the UNIBUS, a large number of storage devices, in any combination, may be connected to a PDP-11 system. TU56 DECtapes, highly reliable tape units with small tape reels, designed and built by DEC, are ideal for applications with modest storage requirements. Each DECtape provides storage for 144K 16-bit words. For applications which require handling of large volumes of data, DEC offers the industry compatible TU10 Magtape.

Disk storage include fixed-head disk units and moving-head removable cartridge and disk pack units. These devices range from the 64K RS64 DECdisk memory, to the RP03 Disk Pack which can store up to 20 million words.

Table 1-1 COMPUTERS DESCRIBED IN THIS HANDBOOK

	PDP-11/05	PDP-11/10	PDP-11/35	PDP-11/40
Main Market	OEM	End User	OEM	End User
Front Panel Height	5 $\frac{1}{4}$ " or 10 $\frac{1}{2}$ "	5 $\frac{1}{4}$ " or 10 $\frac{1}{2}$ "	10 $\frac{1}{2}$ "	21"
Central processor	KD11-B		KD11-A	
Max Memory Size (words)	28K (K = 1024)		124K	
Max Address Space (words)	32K		128K	
Instructions	basic set		basic set + 5 extra	
Programming Modes	1		1 (std), or 2 (optional)	
EQUIPMENT:				
Floating Point	(software only)		option	
Memory Management	(not available)		option	
I/O Serial Interface	included with CPU	option	included	
Line Frequency Clock	included with CPU	option	option	
Core memory included	4K or 8K	8K	8K	8K
Teletype or DECwriter	optional	optional	optional	included
Cabinet	optional	optional	optional	included
SERVICES:				
Warranty	30 day, return to factory	90 day, on-site	30 day, return to factory	90 day, on-site
Installation	optional	on-site	optional	on-site
Papertape System	optional	included	optional	included
Software				
Papertape Diagnostic	with first	included	optional	included
Software	system			
Maintenance Manual	with first	included	optional	included
Training	optional	optional	optional	included

PDP-11 storage devices include:

DECtape, TU56
Magtape, TU10
64K word fixed-head disk, RS64
256K word fixed-head disk, RS11
1.2M word moving-head disk, RK05
20M word moving-head disk, RP03

1.4 SOFTWARE

Extensive software, consisting of disk and paper tape systems, is available for PDP-11 Family systems. The larger the PDP-11 configuration, the larger and more comprehensive the software package that comes with it.

1.4.1 Paper Tape Software

The Paper Tape Software system includes:

Editor (ED11)
Assembler (PAL11)
Loaders
On-line Debugging Technique (ODT11)
Input-Output Executive (IOX)
Math Package (FPP11)

1.4.2 Disk Operating System Software

The Disk Operating System software includes:

Text Editor (ED11)
MACRO Assembler (MACRO-11)
Linker (LINK11)
File Utilities Packages (PIP)
On Line Debugging Technique (ODT11)
Librarian (LIBR11)

1.4.3 Higher Level Languages

BASIC

PDP-11 users needing an interactive conversational language can use BASIC which can be run on the paper tape software system with only 8,192 words of core memory. A multi-user extension of BASIC is available so up to eight users can access a PDP-11 with only 8K of core.

BATCH

The BATCH System adds job stream processing to the DOS System.

RSTS-11

The PDP-11 Resource Timesharing System (RSTS-11) with BASIC-PLUS, an enriched version of BASIC, is available for up to 16 terminal users.

FORTRAN

PDP-11 FORTRAN is an ANSI-standard FORTRAN IV compiler.

1.5 NUMBER SYSTEMS


Throughout this Handbook, 3 number systems will be used; octal, binary, and decimal. So as not to clutter all numbers with subscripted bases, the following general convention will be used:

Octal—for address locations, contents of addresses, and operation codes for instructions; in most cases there will be words of 6 octal digits

Binary—for describing a single binary element; when referring to a PDP-11 word it will be 16 bits long

Decimal—for all normal referencing to quantities

Octal Representation

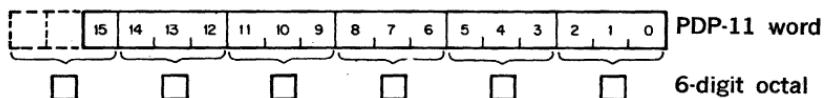

The 16-bit PDP-11 word can be represented conveniently as a 6-digit octal word. Bit 15, the Most Significant Bit (MSB), is used directly as the Most Significant Digit of the octal word. The other 5 octal digits are formed from the corresponding groups of 3 bits in the binary word.

When an extended address of 18 bits is used (shown later in the Handbook), the Most Significant Digit of the octal word is formed from bits 17, 16, and 15. For unsigned numbers, the correspondence between decimal and octal is:

Decimal	Octal
0	000000
$(2^{16}-1) = 65,535$	177777
$(2^{18}-1) = 262,143$	777777 (16-bit limit) (18-bit limit)

2's Complement Numbers

In this system, the first bit (bit 15) is used to indicate the sign;

0=positive

1=negative

For positive numbers, the other 15 bits represent the magnitude directly; for negative numbers, the magnitude is the 2's complement of the remaining 15 bits. (The 2's complement is equal to the 1's complement plus one.) The ordering of numbers is shown below:

Decimal	2's Complement (Octal)	
	Sign Bit	Magnitude Bits
largest positive +32,767	0	77777
+32,766	0	77776
+1	0	00001
0	0	00000
-1	1	77777
-2	1	77776
-32,767	1	00001
most negative -32,768	1	00000

CHAPTER 2

SYSTEM ARCHITECTURE

2.1 UNIBUS

All computer system components and peripherals connect to and communicate with each other on a single high-speed bus known as the UNIBUS—the key to the PDP-11's many strengths. Addresses, data, and control information are sent along the 56 lines of the bus.

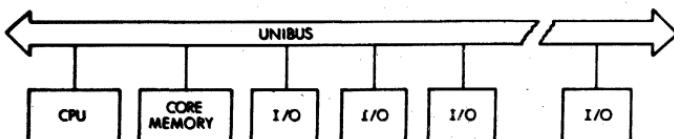


Figure 2-1 PDP-11 System Simplified Block Diagram

The form of communication is the same for every device on the UNIBUS. The processor uses the same set of signals to communicate with memory as with peripheral devices. Peripheral devices also use this set of signals when communicating with the processor, memory or other peripheral devices. Each device, including memory locations, processor registers, and peripheral device registers, is assigned an address on the UNIBUS. Thus, peripheral device registers may be manipulated as flexibly as core memory by the central processor. All the instructions that can be applied to data in core memory can be applied equally well to data in peripheral device registers. This is an especially powerful feature, considering the special capability of PDP-11 instructions to process data in any memory location as though it were an accumulator.

2.1.1 Bidirectional Lines

With bidirectional and asynchronous communications on the UNIBUS, devices can send, receive, and exchange data independently without processor intervention. For example, a cathode ray tube (CRT) display can refresh itself from a disk file while the central processor unit (CPU) attends to other tasks. Because it is asynchronous, the UNIBUS is compatible with devices operating over a wide range of speeds.

2.1.2 Master-Slave Relation

Communication between two devices on the bus is in the form of a master-slave relationship. At any point in time, there is one device that has control of the bus. This controlling device is termed the "bus master." The master device controls the bus when communicating with another device on the bus, termed the "slave." A typical example of this relationship is the processor, as master, fetching an instruction from memory (which is always a slave). Another example is the disk, as

master, transferring data to memory, as slave. Master-slave relationships are dynamic. The processor, for example, may pass bus control to a disk. The disk, as master, could then communicate with a slave memory bank.

Since the UNIBUS is used by the processor and all I/O devices, there is a priority structure to determine which device gets control of the bus. Every device on the UNIBUS which is capable of becoming bus master is assigned a priority. When two devices, which are capable of becoming a bus master, request use of the bus simultaneously, the device with the higher priority will receive control.

2.1.3 Interlocked Communication

Communication on the UNIBUS is interlocked so that for each control signal issued by the master device, there must be a response from the slave in order to complete the transfer. Therefore, communication is independent of the physical bus length (as far as timing is concerned) and the response time of the master and slave devices. The asynchronous operation precludes the need for synchronizing with, and waiting for, clock impulses. Thus, each device is allowed to operate at its maximum possible speed.

Interfaces to the UNIBUS are not time-dependent; there are no pulse-width or rise-time restrictions to worry about. The maximum transfer rate on the UNIBUS is one 16-bit word every 400 nanoseconds, or 2,500,000 words per second.

Input/output devices transferring directly to or from memory are given highest priority and may request bus mastership and steal bus and memory cycles during instruction operations. The processor resumes operation immediately after the memory transfer. Multiple devices can operate simultaneously at maximum direct memory access (DMA) rates by "stealing" bus cycles.

Full 16-bit words or 8-bit bytes of information can be transferred on the bus between a master and a slave. The information can be instructions, addresses, or data. This type of operation occurs when the processor, as master, is fetching instructions, operands, and data from memory, and storing the results into memory after execution of instructions. Direct data transfers occur between a peripheral device control and memory.

2.2 CENTRAL PROCESSOR

The central processor, connected to the UNIBUS as a subsystem, controls the time allocation of the UNIBUS for peripherals and performs arithmetic and logic operations and instruction decoding. It contains multiple high-speed general-purpose registers which can be used as accumulators, address pointers, index registers, and other specialized functions. The processor can perform data transfers directly between I/O devices and memory without disturbing the processor registers; does both single- and double-operand addressing and handles both 16-bit word and 8-bit byte data.

2.2.1 General Registers

The central processor contains 8 general registers which can be used for a variety of purposes. The registers can be used as accumulators, index

registers, autoincrement registers, autodecrement registers, or as stack pointers for temporary storage of data. Chapter 3 on Addressing describes these uses of the general registers in more detail. Arithmetic operations can be from one general register to another, from one memory or device register to another, or between memory or a device register and a general register. Refer to Figure 2-2.

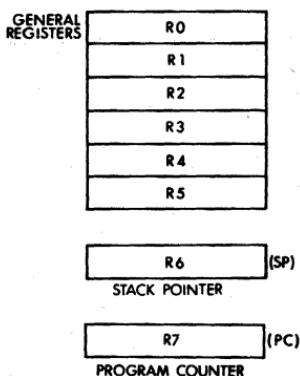


Figure 2-2 The General Registers

R7 is used as the machine's program counter (PC) and contains the address of the next instruction to be executed. It is a general register normally used only for addressing purposes and not as an accumulator for arithmetic operations.

The R6 register is normally used as the Stack Pointer indicating the last entry in the appropriate stack (a common temporary storage area with "Last-in First-Out" characteristics).

2.2.2 Instruction Set

The instruction complement uses the flexibility of the general-purpose registers to provide over 400 powerful hard-wired instructions—the most comprehensive and powerful instruction repertoire of any computer in the 16-bit class. Unlike conventional 16-bit computers, which usually have three classes of instructions (memory reference instructions, operate or AC control instructions and I/O instructions) all operations in the PDP-11 are accomplished with one set of instructions. Since peripheral device registers can be manipulated as flexibly as core memory by the central processor, instructions that are used to manipulate data in core memory may be used equally well for data in peripheral device registers. For example, data in an external device register can be tested or modified directly by the CPU, without bringing it into memory or disturbing the general registers. One can add data directly to a peripheral device register, or compare logically or arithmetically. Thus all PDP-11 instructions can be used to create a new dimension in the treatment of computer I/O and the need for a special class of I/O instructions is eliminated.

The basic order code of the PDP-11 uses both single and double operand address instructions for words or bytes. The PDP-11 therefore performs

very efficiently in one step, such operations as adding or subtracting two operands, or moving an operand from one location to another.

PDP-11 Approach

ADD A,B

;add contents of location A to location B, store results at location B

Conventional Approach

LDA A

;load contents of memory location A into AC

ADD B

;add contents of memory location B to AC

STA B

;store result at location B

Addressing

Much of the power of the PDP-11 is derived from its wide range of addressing capabilities. PDP-11 addressing modes include sequential addressing forwards or backwards, addressing indexing, indirect addressing, 16-bit word addressing, 8-bit byte addressing, and stack addressing. Variable length instruction formating allows a minimum number of bits to be used for each addressing mode. This results in efficient use of program storage space.

2.2.3 Processor Status Word

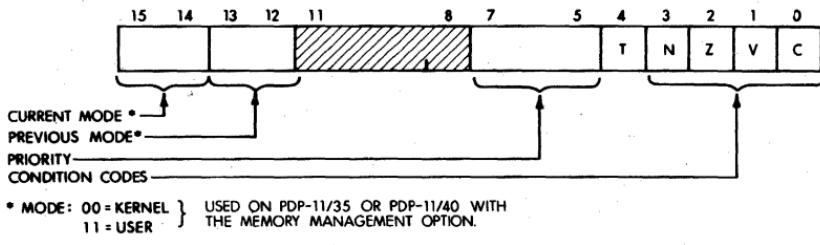


Figure 2-3 Processor Status Word

The Processor Status word (PS), at location 777776, contains information on the current status of the PDP-11. This information includes the current processor priority: current and previous operational modes; the condition codes describing the results of the last instruction; and an indicator for detecting the execution of an instruction to be trapped during program debugging.

Processor Priority

The Central Processor operates at any one of eight levels of priority, 0-7. When the CPU is operating at level 7 an external device cannot interrupt it with a request for service. The Central Processor must be operating at a lower priority than the external device's request in order for the interruption to take effect. The current priority is maintained in the

processor status word (bits 5-7). The 8 processor levels provide an effective interrupt mask.

Condition Codes

The condition codes contain information on the result of the last CPU operation.

The bits are set as follows:

Z = 1, if the result was zero

N = 1, if the result was negative

C = 1, if the operation resulted in a carry from the MSB

V = 1, if the operation resulted in an arithmetic overflow

Trap

The trap bit (T) can be set or cleared under program control. When set, a processor trap will occur through location 14 on completion of instruction execution and a new Processor Status Word will be loaded. This bit is especially useful for debugging programs as it provides an efficient method of installing breakpoints.

2.2.4 Stacks

In the PDP-11, a stack is a temporary data storage area which allows a program to make efficient use of frequently accessed data. A program can add or delete words or bytes within the stack. The stack uses the "last-in, first-out" concept; that is, various items may be added to a stack in sequential order and retrieved or deleted from the stack in reverse order. On the PDP-11, a stack starts at the highest location reserved for it and expands linearly downward to the lowest address as items are added. The stack is used automatically by program interrupts, subroutine calls, and trap instructions. When the processor is interrupted, the central processor status word and the program counter are saved (pushed) onto the stack area, while the processor services the interrupting device. A new status word is then automatically acquired from an area in core memory which is reserved for interrupt instructions (vector area). A return from the interrupt instruction restores the original processor status and returns to the interrupted program without software intervention.

2.3 PDP-11/05 & 11/10 INTERNAL CPU EQUIPMENT

SCL, Serial Communication Line Interface

The SCL interface is contained on one of the CPU modules. The interface is program compatible with the DL11-A, DEC's standard serial interface option, and can handle speeds up to 2,400 baud. Specifically it can control:

DECwriter, LA30, up to 30 characters/sec

Alpha-numeric Terminal, VT05, up to 240 characters/sec

Teletype, up to 10 characters/sec

The SCL interface is not connected to the UNIBUS; it is connected to the CPU by an internal bus. This means that there can be no NPR transfers on the SCL. It also means that a parallel LA30 cannot be used as the local I/O device, only a serial LA30 or a Teletype.

LTC, Line Time Clock

The clock is contained on one of the CPU modules. It is program compatible with the KW11-L, DEC's standard line clock option. The clock senses the 50 or 60 Hz line frequency for internal timing.

Power Supply

The power supply can be operated from either 115 VAC or 230 VAC by a simple change of the power control (within the power supply assembly). The power supply has enough capacity to handle the CPU, 8K of memory, plus additional memory and optional equipment that can mount within the CPU assembly unit.

2.4 PDP-11/35 & 11/40 EQUIPMENT

The central processor is prewired to accept the following options:

- Extended Instruction Set, KE11-E
- Floating Point, KE11-F
- Memory Management, KT11-D
- Programmable Stack Limit, KJ11-A
- Real Time Clock, KW11-I
- I/O Terminal Control, DL11 or LC11

Extended Instruction Set & Floating Point Options

The Extended Instruction Set (EIS) option provides the capability of performing hardware fixed point arithmetic and allows direct implementation of multiply, divide, and multiple shifting. A double-precision 32-bit word can be handled.

The Floating Point Unit uses the EIS as a prerequisite. This option enables the execution of 4 special instructions for floating point addition, subtraction, multiplication, and division. The EIS and Floating Point hardware provide significant time and coding improvement over comparable software routines.

The Floating Point Unit functions as an integral part of the PDP-11 processor, not as a bus device.

Memory Management Option

Memory Management is an advanced memory extension, relocation, and protection feature which will:

- Extend memory space from 28K to 124K words
- Allow efficient segmentation of core for multi-user environments
- Provide effective protection of memory segments in multi-user environments

With this option the machine operates in two modes; Kernel and User. When the machine is in Kernel mode a program has complete control of the machine; when in User mode the processor is inhibited from executing certain instructions and can be denied direct access to the peripherals on the system. This hardware feature can be used to provide complete executive protection in a multi-programming environment. A software operating system can insure that no user (who is operating in User mode) can cause a failure (crash) of the entire system. Full control of the entire system is retained at the console or by an operator who is in Kernel mode.

Bits 12 through 15 of the Processor Status word, see Figure 2-3, are used with the Memory Management option. Mode information includes the present mode, either Kernel or User (bits 15,14) and the mode the machine was in prior to the last interrupt or trap (bits 13,12).

Stack Limit Option

This option allows program control of the lower limit for permissible stack addresses. The normal boundary without this option is (400). If the program attempts to exceed this limit for stack addresses, an indication is given to the program by means of a trap.

The Stack Limit option is included with the Memory Management option.

Power Supply

The power supply can be operated from either 115 VAC or 230 VAC, by making simple equipment changes. The power supply has enough capacity to handle the CPU, 8K of memory, plus additional memory and optional equipment that can mount within the CPU assembly unit.

Other Equipment

The PDP-11/40 is supplied with the following:

- I/O terminal interface control logic
- DECwriter terminal or teletype
- 72" high, standard 19" wide cabinet
- 8K words of core memory

2.5 MEMORY

Memory Organization

A memory can be viewed as a series of locations, with a number (address) assigned to each location. Thus an 8,192-word PDP-11 memory could be shown as in Figure 2-4.

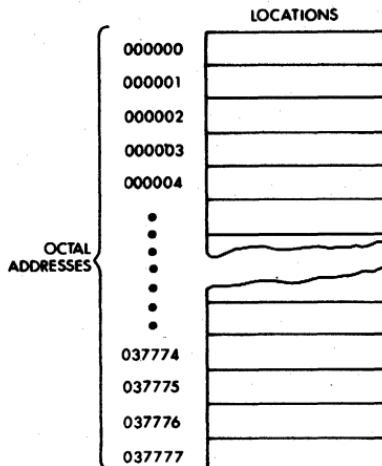


Figure 2-4 Memory Addresses

Because PDP-11 memories are designed to accommodate both 16-bit words and 8-bit bytes, the total number of addresses does not correspond to the number of words. An 8K-word memory can contain 16K bytes and consist of 037777 octal locations. Words always start at even-numbered locations.

A PDP-11 word is divided into a high byte and a low byte as shown in Figure 2-5.

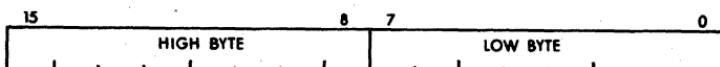


Figure 2-5 High & Low Byte

Low bytes are stored at even-numbered memory locations and high bytes at odd-numbered memory locations. Thus it is convenient to view the PDP-11 memory as shown in Figure 2-6.

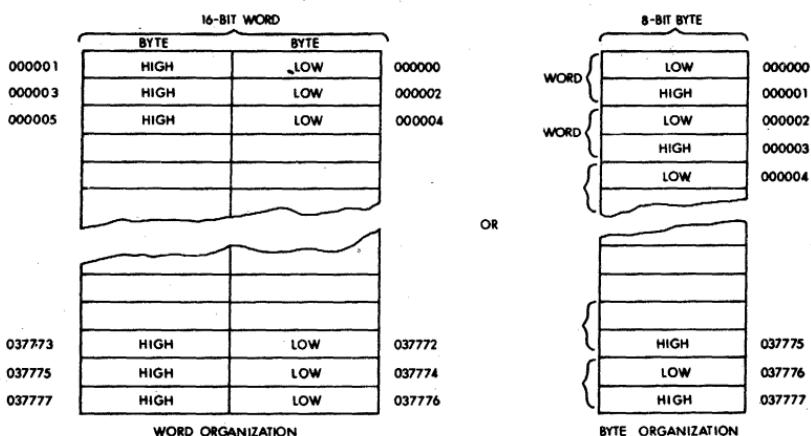


Figure 2-6 Word and Byte Addresses

Certain memory locations have been reserved by the system for interrupt and trap handling, processor stacks, general registers, and peripheral device registers. Addresses from 0 to 370₈ are always reserved and those to 777₈ are reserved on large system configurations for traps and interrupt handling.

A 16-bit word used for byte addressing can address a maximum of 32K words. However, the top 4,096 word locations are reserved for peripheral and register addresses and the user therefore has 28K of core to program. With the PDP-11/35 & 11/40, the user can expand above 28K with the Memory Management option. This device provides an 18-bit

effective memory address which permits addressing up to 124K words of actual memory.

If the Memory Management option is not used, an octal address between 160 000 and 177 777 is interpreted as 760 000 to 777 777. That is, if bit 15, 14 and 13 are 1's, then bits 17 and 16 (the extended address bits) are considered to be 1's, which relocates the last 4K words (8K bytes) to become the highest locations accessed by the UNIBUS. Refer to Section 1.5.

2.6 AUTOMATIC PRIORITY INTERRUPTS

The multi-level automatic priority interrupt system permits the processor to respond automatically to conditions outside the system. Any number of separate devices can be attached to each level.

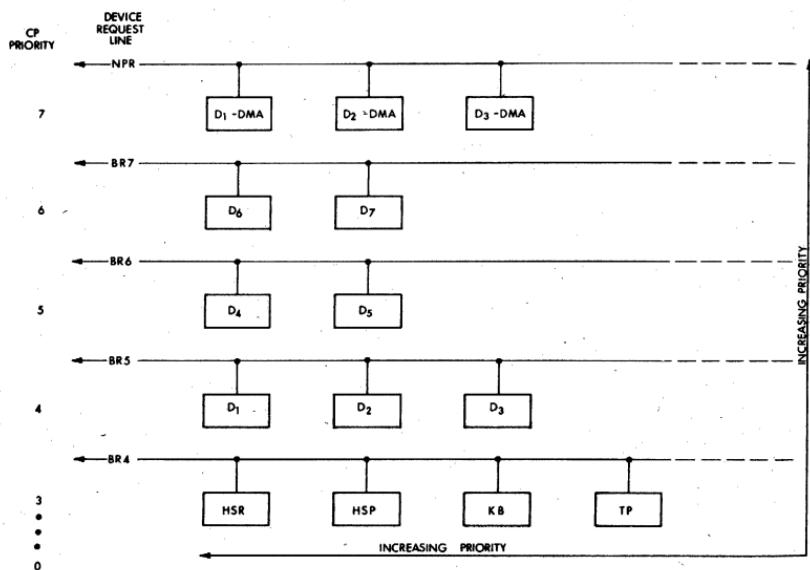


Figure 2-7 UNIBUS Priority

Each peripheral device in the PDP-11 system has a hardware pointer to its own pair of memory words (one points to the device's service routine, and the other contains the new processor status information). This unique identification eliminates the need for polling of devices to identify an interrupt, since the interrupt service hardware selects and begins executing the appropriate service routine after having automatically saved the status of the interrupted program segment.

The devices' interrupt priority and service routine priority are independent. This allows adjustment of system behavior in response to real-time conditions, by dynamically changing the priority level of the service routine.

The interrupt system allows the processor to continually compare its

own programmable priority with the priority of any interrupting devices and to acknowledge the device with the highest level above the processors priority level. Servicing an interrupt for a device can be interrupted for servicing a higher priority device. Service to the lower priority device is resumed automatically upon completion of the higher level servicing. Such a process, called nested interrupt servicing, can be carried out to any level without requiring the software to save and restore processor status at each level.

When a device (other than the central processor) is capable of becoming bus master and requests use of the bus, it is generally for one of two purposes:

1. To make a non-processor transfer of data directly to or from memory
2. To interrupt a program execution and force the processor to go to a specific address where an interrupt service routine is located.

Direct Memory Access

All PDP-11's provide for direct access to memory. Any number of DMA devices may be attached to the UNIBUS. Maximum priority is given to DMA devices thus allowing memory data storage or retrieval at memory cycle speeds. Response time is minimized by the organization and logic of the UNIBUS, which samples requests and priorities in parallel with data transfers.

Direct memory or direct data transfers can be accomplished between any two peripherals without processor supervision. These non-processor request transfers, called NPR level data transfers, are usually made for Direct Memory Access (memory to/from mass storage) or direct device transfers (disk refreshing a CRT display).

Bus Requests

Bus requests from external devices can be made on one of five request lines. Highest priority is assigned to non-processor request (NPR). These are direct memory access type transfers, and are honored by the processor between bus cycles of an instruction execution.

The processor's priority can be set under program control to one of eight levels using bits 7, 6, and 5 in the processor status register. These bits set a priority level that inhibits granting of bus requests on lower levels or on the same level. When the processor's priority is set to a level, for example PS6, all bus requests on BR6 and below are ignored.

When more than one device is connected to the same bus request (BR) line, a device nearer the central processor has a higher priority than a device farther away. Any number of devices can be connected to a given BR or NPR line.

Thus the priority system is two-dimensional and provides each device with a unique priority. Although its priority level is fixed, its actual priority changes as the processor priority varies. Also, each device may be dynamically, selectively enabled or disabled under program control.

Once a device other than the processor has control of the bus, it may do one of two types of operations: data transfers or interrupt operations.

NPR Data Transfers—NPR data transfers can be made between any two peripheral devices without the supervision of the processor. Normally, NPR transfers are between a mass storage device, such as a disk, and core memory. The structure of the bus also permits device-to-device transfers, allowing customer-designed peripheral controllers to access other devices, such as disks, directly.

An NPR device has very fast access to the bus and can transfer at high data rates once it has control. The processor state is not affected by the transfer; therefore the processor can relinquish control while an instruction is in progress. This can occur at the end of any bus cycles except in between a read-modify-write sequence. An NPR device in control of the bus may transfer 16-bit words from memory at memory speed.

2.6.1 Using the Interrupts

Devices that gain bus control with one of the Bus Request lines (BR 7-BR4) can take full advantage of the Central Processor by requesting an interrupt. In this way, the entire instruction set is available for manipulating data and status registers.

When a service routine is to be run, the current task being performed by the central processor is interrupted, and the device service routine is initiated. Once the request has been satisfied, the Processor returns to its former task.

2.6.2 Interrupt Procedure

Interrupt handling is automatic in the PDP-11. No device polling is required to determine which service routine to execute. The operations required to service an interrupt are as follows:

1. Processor relinquishes control of the bus, priorities permitting.
2. When a master gains control, it sends the processor an interrupt command and an unique memory address which contains the address of the device's service routine, called the interrupt vector address. Immediately following this pointer address is a word (located at vector address +2) which is to be used as a new Processor Status.
3. The processor stores the current Processor Status (PS) and the current Program Counter (PC) into CPU temporary registers.
4. The new PC and PS (interrupt vector) are taken from the specified address. The old PS and PC are then pushed onto the current stack. The service routine is then initiated.
5. The device service routine can cause the processor to resume the interrupted process by executing the Return from Interrupt instruction, described in Chapter 4, which pops the two top words from the current processor stack and uses them to load the PC and PS registers.

A device routine can be interrupted by a higher priority bus request any time after the new PC and PS have been loaded. If such an interrupt occurs, the PC and PS of the service routine are automatically stored in the temporary registers and then pushed onto the new current stack, and the new device routine is initiated.

2.6.3 Interrupt Servicing

Every hardware device capable of interrupting the processor has a unique set of locations (2 words) reserved for its interrupt vector. The first word contains the location of the device's service routine, and the second, the Processor Status Word that is to be used by the service routine. Through proper use of the PS, the programmer can switch the operational mode of the processor, and modify the Processor's Priority level to mask out lower level interrupts.

Reentrant Code

Both the interrupt handling hardware and the subroutine call hardware facilitate writing reentrant code for the PDP-11. This type of code allows a single copy of a given subroutine or program to be shared by more than one process or task. This reduces the amount of core needed for multi-task applications such as the concurrent servicing of many peripheral devices.

Power Fail and Restart

The PDP-11's power fail and restart system not only protects memory when power fails, but also allows the user to save the existing program location and status (including all dynamic registers), thus preventing harm to devices, and eliminating the need for reloading programs. Automatic restart is accomplished when power returns to safe operating levels, enabling remote or unattended operations of PDP-11 systems. All standard peripherals in the PDP-11 family are included in the systemized power-fail protect/restart feature.

CHAPTER 3

ADDRESSING MODES

Data stored in memory must be accessed, and manipulated. Data handling is specified by a PDP-11 instruction (MOV, ADD etc.) which usually indicates:

the function (operation code)

a general purpose register to be used when locating the source operand and/or a general purpose register to be used when locating the destination operand.

an addressing mode (to specify how the selected register(s) is/are to be used)

Since a large portion of the data handled by a computer is usually structured (in character strings, in arrays, in lists etc.), the PDP-11 has been designed to handle structured data efficiently and flexibly. The general registers may be used with an instruction in any of the following ways:

as accumulators. The data to be manipulated resides within the register.

as pointers. The contents of the register are the address of the operand, rather than the operand itself.

as pointers which automatically step through core locations. Automatically stepping forward through consecutive core locations is known as autoincrement addressing; automatically stepping backwards is known as autodecrement addressing. These modes are particularly useful for processing tabular data.

as index registers. In this instance the contents of the register, and the word following the instruction are summed to produce the address of the operand. This allows easy access to variable entries in a list.

PDP-11's also have instruction addressing mode combinations which facilitate temporary data storage structures for convenient handling of data which must be frequently accessed. This is known as the "stack."

In the PDP-11 any register can be used as a "stack pointer" under program control, however, certain instructions associated with subroutine linkage and interrupt service automatically use Register 6 as a "hardware stack pointer". For this reason R6 is frequently referred to as the "SP".

R7 is used by the processor as its program counter (PC). It is recommended that R7 not be used as a stack pointer.

An important PDP-11 feature, which must be considered in conjunction with the addressing modes, is the register arrangement;

Six general purpose registers, (R0-R5)


A hardware Stack Pointer (SP), register (R6)

A Program Counter (PC), register (R7).

Instruction mnemonics and address mode symbols are sufficient for writing machine language programs. The programmer need not be concerned about conversion to binary digits; this is accomplished automatically by the PDP-11 MACRO Assembler.

3.1 SINGLE OPERAND ADDRESSING

The instruction format for all single operand instructions (such as clear, increment, test) is:

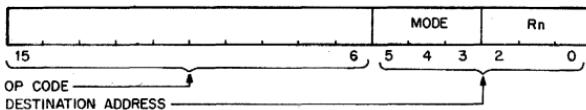


Bits 15 through 6 specify the operation code that defines the type of instruction to be executed.

Bits 5 through 0 form a six-bit field called the destination address field. This consists of two subfields:

- Bits 0 through 2 specify which of the eight general purpose registers is to be referenced by this instruction word.
- Bits 3 through 5 specify how the selected register will be used (address mode). Bit 3 is set to indicate deferred (indirect) addressing.

3.2 DOUBLE OPERAND ADDRESSING

Operations which imply two operands (such as add, subtract, move and compare) are handled by instructions that specify two addresses. The first operand is called the source operand, the second the destination operand. Bit assignments in the source and destination address fields may specify different modes and different registers. The Instruction format for the double operand instruction is:

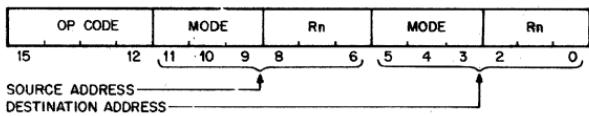

The source address field is used to select the source operand, the first operand. The destination is used similarly, and locates the second operand and the result. For example, the instruction ADD A, B adds the contents (source operand) of location A to the contents (destination operand) of location B. After execution B will contain the result of the addition and the contents of A will be unchanged.

Examples in this section and further in this chapter use the following sample PDP-11 instructions:

Mnemonic	Description	Octal Code
CLR	clear (zero the specified destination)	0050DD
CLRB	clear byte (zero the byte in the specified destination)	1050DD
INC	increment (add 1 to contents of destination)	0052DD
INCB	increment byte (add 1 to the contents of destination byte)	1052DD
COM	complement (replace the contents of the destination by their logical complement; each 0 bit is set and each 1 bit is cleared)	0051DD
COMB	complement byte (replace the contents of the destination byte by their logical complement; each 0 bit is set and each 1 bit is cleared).	1051DD
ADD	add (add source operand to destination operand and store the result at destination address)	06SSDD

DD = destination field (6 bits)

SS = source field (6 bits)

() = contents of

3.3 DIRECT ADDRESSING

The following table summarizes the four basic modes used with direct addressing.

DIRECT MODES

Mode	Name	Assembler Syntax	Function
0	Register	Rn	Register contains operand
2	Autoincrement	(Rn) +	Register is used as a pointer to sequential data then incremented
4	Autodecrement	-(Rn)	Register is decremented and then used as a pointer.
6	Index	X(Rn)	Value X is added to (Rn) to produce address of operand. Neither X nor (Rn) are modified.

3.3.1 Register Mode

OPR Rn

With register mode any of the general registers may be used as simple accumulators and the operand is contained in the selected register. Since they are hardware registers, within the processor, the general registers operate at high speeds and provide speed advantages when used for operating on frequently-accessed variables. The PDP-11 assembler interprets and assembles instructions of the form OPR Rn as register mode operations. Rn represents a general register name or number and OPR is used to represent a general instruction mnemonic. Assembler syntax requires that a general register be defined as follows:

R0 = %0 (% sign indicates register definition)


R1 = %1

R2 = %2, etc.

Registers are typically referred to by name as R0, R1, R2, R3, R4, R5, R6 and R7. However R6 and R7 are also referred to as SP and PC, respectively.

Register Mode Examples (all numbers in octal)

Symbolic	Octal Code	Instruction Name
1. INC R3	005203	Increment
Operation:	Add one to the contents of general register 3	

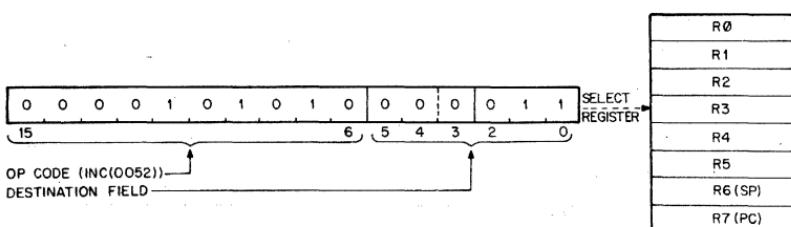

2. ADD R2,R4 060204 Add

Operation: Add the contents of R2 to the contents of R4.

BEFORE	AFTER
R2 000002	R2 000002
R4 000004	R4 000006

3. COMB R4 105104 Complement Byte

Operation: One's complement bits 0-7 (byte) in R4. (When general registers are used, byte instructions only operate on bits 0-7; i.e. byte 0 of the register)

BEFORE	AFTER
R4 022222	R4 022155


3.3.2 Autoincrement Mode

OPR (Rn) +

This mode provides for automatic stepping of a pointer through sequential elements of a table of operands. It assumes the contents of the selected general register to be the address of the operand. Contents of registers are stepped (by one for bytes, by two for words, always by two for R6 and R7) to address the next sequential location. The autoincrement mode is especially useful for array processing and stacks. It will access an element of a table and then step the pointer to address the next operand in the table. Although most useful for table handling, this mode is completely general and may be used for a variety of purposes.


Autoincrement Mode Examples

Symbolic	Octal Code	Instruction Name
1. CLR (R5) +	005025	Clear
Operation:	Use contents of R5 as the address of the operand. Clear selected operand and then increment the contents of R5 by two.	

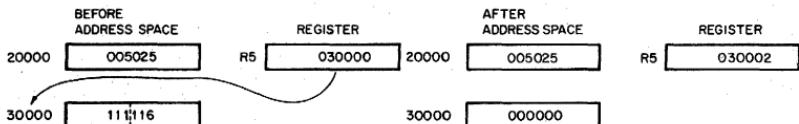


2.	CLRB (R5) +	105025	Clear Byte
----	-------------	--------	------------

Operation:	Use contents of R5 as the address of the operand. Clear selected byte operand and then increment the contents of R5 by one.		
------------	---	--	--

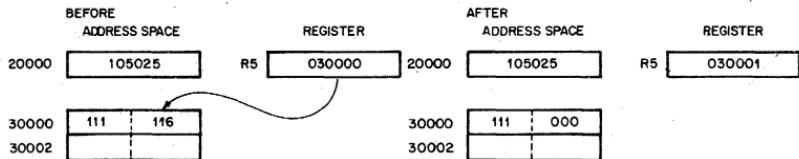

3.	ADD (R2) + ,R4	062204	Add
----	----------------	--------	-----

Operation:	The contents of R2 are used as the address of the operand which is added to the contents of R4. R2 is then incremented by two.		
------------	--	--	--

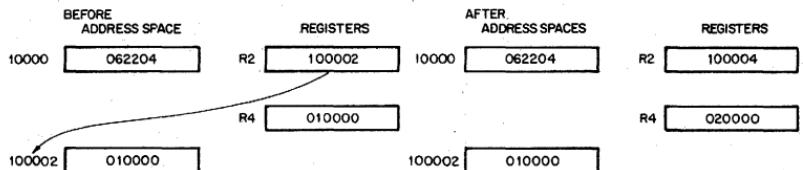

3.3.3 Autodecrement Mode

OPR-(Rn)


This mode is useful for processing data in a list in reverse direction. The contents of the selected general register are decremented (by two for word instructions, by one for byte instructions) and then used as the address of the operand. The choice of postincrement, predecrement features for the PDP-11 were not arbitrary decisions, but were intended to facilitate hardware/software stack operations.

Autodecrement Mode Examples

Symbolic	Octal Code	Instruction Name
----------	------------	------------------


1. INC-(R0) 005240 Increment

Operation: The contents of R0 are decremented by two and used as the address of the operand. The operand is increased by one.

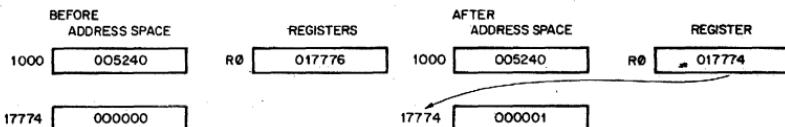


2. INCB-(R0) 105240 Increment Byte

Operation: The contents of R0 are decremented by one then used as the address of the operand. The operand byte is increased by one.

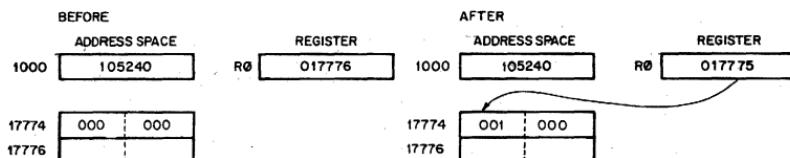

3. ADD-(R3),R0 064300 Add

Operation: The contents of R3 are decremented by 2 then used as a pointer to an operand (source) which is added to the contents of R0 (destination operand).

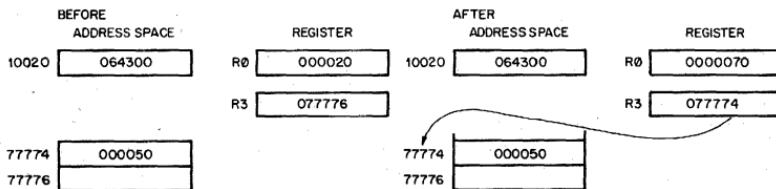

3.3.4 Index Mode

OPR X(Rn)


The contents of the selected general register, and an index word following the instruction word, are summed to form the address of the operand. The contents of the selected register may be used as a base for calculating a series of addresses, thus allowing random access to elements of data structures. The selected register can then be modified by program to access data in the table. Index addressing instructions are of the form OPR X(Rn) where X is the indexed word and is located in the memory location following the instruction word and Rn is the selected general register.

Index Mode Examples

	Symbolic	Octal Code	Instruction Name
1.	CLR 200(R4)	005064 000200	Clear

Operation:


The address of the operand is determined by adding 200 to the contents of R4. The location is then cleared.

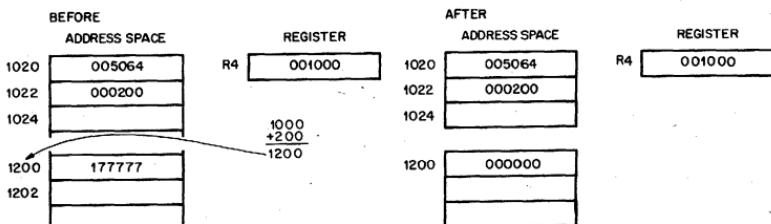

2.	COMB 200(R1)	105161 000200	Complement Byte
----	--------------	------------------	-----------------

Operation:


The contents of a location which is determined by adding 200 to the contents of R1 are one's complemented. (i.e. logically complemented)

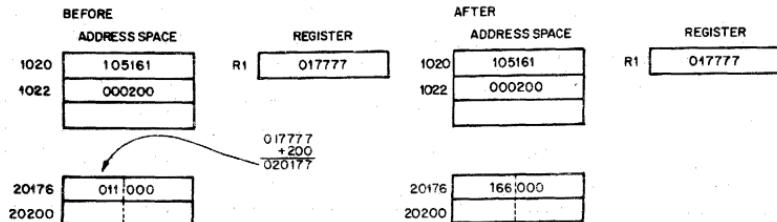

3. ADD 30(R2),20(R5) 066265 Add
 000030
 000020

Operation:

The contents of a location which is determined by adding 30 to the contents of R2 are added to the contents of a location which is determined by adding 20 to the contents of R5. The result is stored at the destination address, i.e. 20(R5)

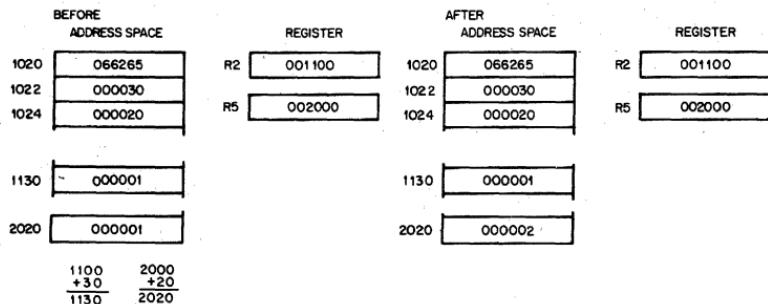

3.4 DEFERRED (INDIRECT) ADDRESSING

The four basic modes may also be used with deferred addressing. Whereas in the register mode the operand is the contents of the selected register, in the register deferred mode the contents of the selected register is the address of the operand.

In the three other deferred modes, the contents of the register selects the address of the operand rather than the operand itself. These modes are therefore used when a table consists of addresses rather than operands. Assembler syntax for indicating deferred addressing is "@"(or "(" when this is not ambiguous). The following table summarizes the deferred versions of the basic modes:

Mode	Name	Assembler Syntax	Function
1	Register Deferred	@Rn or (Rn)	Register contains the address of the operand
3	Autoincrement Deferred	@(Rn) +	Register is first used as a pointer to a word containing the address of the operand, then incremented (always by 2; even for byte instructions).
5	Autodecrement Deferred	@-(Rn)	Register is decremented (always by two; even for byte instructions) and then used as a pointer to a word containing the address of the operand
7	Index Deferred	@X(Rn)	Value X (stored in a word following the instruction) and (Rn) are added and the sum is used as a pointer to a word containing the address of the operand. Neither X nor (Rn) are modified.

Since each deferred mode is similar to its basic mode counterpart, separate descriptions of each deferred mode are not necessary. However, the following examples illustrate the deferred modes.


Register Deferred Mode Example

Symbolic Octal Code Instruction Name

CLR @R5 005015 Clear

Operation:

The contents of location specified in R5 are cleared.

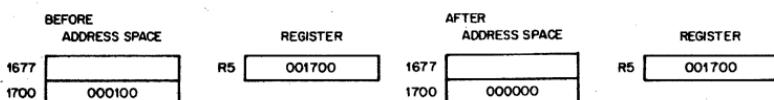


Autoincrement Deferred Mode Example

Symbolic	Octal Code	Instruction Name
INC@(R2) +	005232	Increment

Operation:

The contents of R2 are used as the address of the address of the operand.
Operand is increased by one. Contents of R2 is incremented by 2.

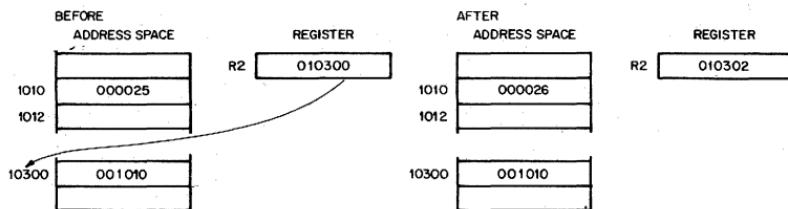


Autodecrement Deferred Mode Example

Symbolic	Octal Code	Complement
COM @-(R0)	005150	

Operation:

The contents of R0 are decremented by two and then used as the address of the address of the operand. Operand is one's complemented. (i.e. logically complemented)

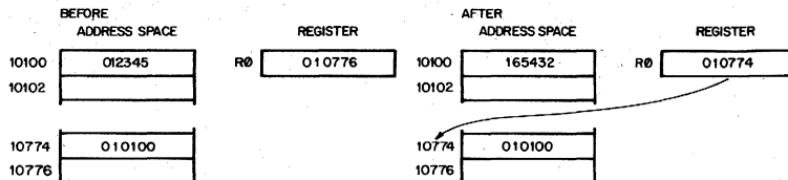


Index Deferred Mode Example

Symbolic	Octal Code	Instruction Name
ADD @ 1000(R2),R1	067201 001000	Add

Operation:

1000 and contents of R2 are summed to produce the address of the address of the source operand the contents of which are added to contents of R1; the result is stored in R1.

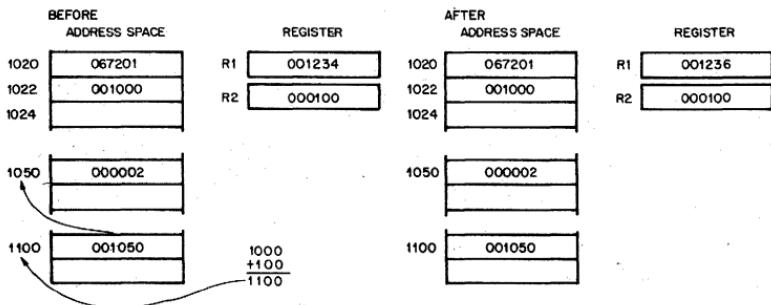

3.5 USE OF THE PC AS A GENERAL REGISTER

Although Register 7 is a general purpose register, it doubles in function as the Program Counter for the PDP-11. Whenever the processor uses the program counter to acquire a word from memory, the program counter is automatically incremented by two to contain the address of the next word of the instruction being executed or the address of the next instruction to be executed. (When the program uses the PC to locate byte data, the PC is still incremented by two.)

The PC responds to all the standard PDP-11 addressing modes. However, there are four of these modes with which the PC can provide advantages for handling position independent code (PIC - see Chapter 5) and unstructured data. When regarding the PC these modes are termed immediate, absolute (or immediate deferred), relative and relative deferred, and are summarized below:

Mode	Name	Assembler Syntax	Function
2	Immediate	#n	Operand follows instruction
3	Absolute	@#A	Absolute Address follows instruction
6	Relative	A	Relative Address (index value) follows the instruction.
7	Relative Deferred	@A	Index value (stored in the word following the instruction) is the relative address for the address of the operand.

The reader should remember that the special effect modes are the same as modes described in 3.3 and 3.4, but the general register selected is R7, the program counter.

When a standard program is available for different users, it often is helpful to be able to load it into different areas of core and run it there. PDP-11's can accomplish the relocation of a program very efficiently through the use of position inde-

pendent code (PIC) which is written by using the PC addressing modes. If an instruction and its objects are moved in such a way that the relative distance between them is not altered, the same offset relative to the PC can be used in all positions in memory. Thus, PIC usually references locations relative to the current location. PIC is discussed in more detail in Chapter 5.

The PC also greatly facilitates the handling of unstructured data. This is particularly true of the immediate and relative modes.

3.5.1 Immediate Mode

OPR #n,DD


Immediate mode is equivalent to using the autoincrement mode with the PC. It provides time improvements for accessing constant operands by including the constant in the memory location immediately following the instruction word.

Immediate Mode Example

Symbolic	Octal Code	Instruction Name
ADD #10,R0	062700 000010	Add

Operation:

The value 10 is located in the second word of the instruction and is added to the contents of R0. Just before this instruction is fetched and executed, the PC points to the first word of the instruction. The processor fetches the first word and increments the PC by two. The source operand mode is 27 (autoincrement the PC). Thus, the PC is used as a pointer to fetch the operand (the second word of the instruction) before being incremented by two to point to the next instruction.

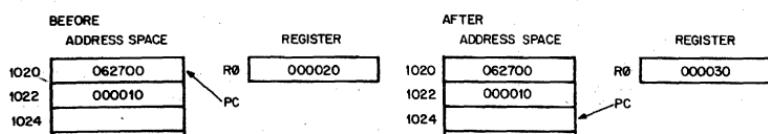

3.5.2 Absolute Addressing

OPR @ #A


This mode is the equivalent of immediate deferred or autoincrement deferred using the PC. The contents of the location following the instruction are taken as the address of the operand. Immediate data is interpreted as an absolute address (i.e., an address that remains constant no matter where in memory the assembled instruction is executed).

Absolute Mode Examples

	Symbolic	Octal Code	Instruction Name
1.	CLR @ # 1100	005037 001100	Clear

Operation:


Clear the contents of location 1100.

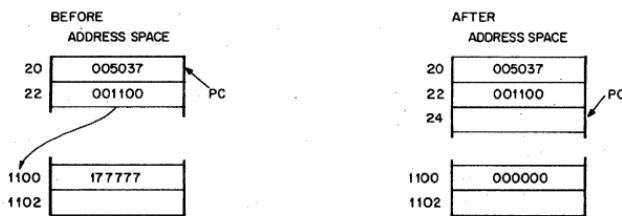

2.	ADD @ # 2000,R3	063703 002000
----	-----------------	------------------

Operation:

Add contents of location 2000 to R3.

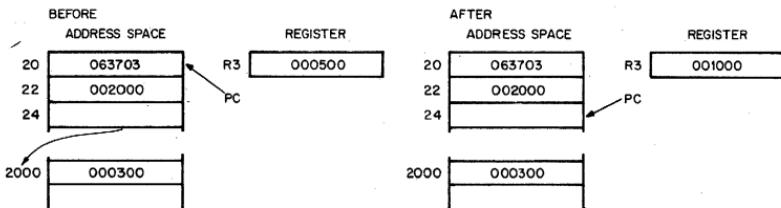

3.5.3 Relative Addressing

OPR A or
OPR X(PC) , where X is the location of A relative to the instruction.


This mode is assembled as index mode using R7. The base of the address calculation, which is stored in the second or third word of the instruction, is not the address of the operand, but the number which, when added to the (PC), becomes the address of the operand. This mode is useful for writing position independent code (see Chapter 5) since the location referenced is always fixed relative to the PC. When instructions are to be relocated, the operand is moved by the same amount.

Relative Addressing Example

Symbolic	Octal Code	Instruction Name
INC A	005267 000054	Increment

Operation:

To increment location A, contents of memory location immediately following instruction word are added to (PC) to produce address A. Contents of A are increased by one.

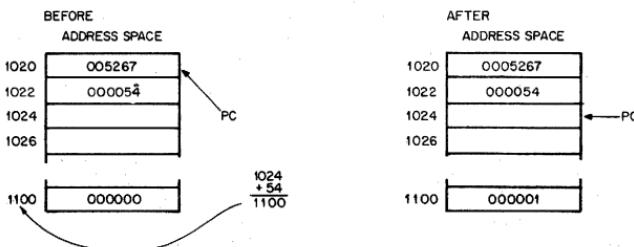

3.5.4 Relative Deferred Addressing

OPR@A, or
OPR@X(PC), where x is location containing address of A, relative to the instruction.


This mode is similar to the relative mode, except that the second word of the instruction, when added to the PC, contains the address of the address of the operand, rather than the address of the operand.

Relative Deferred Mode Example

Symbolic	Octal Code	Instruction Name
CLR @A	005077 000020	Clear

Operation:

Add second word of instruction to PC to produce address of operand. Clear operand.

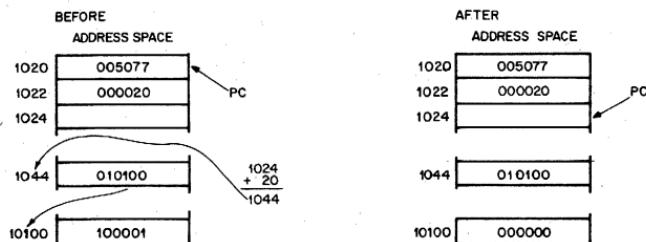

3.6 USE OF STACK POINTER AS GENERAL REGISTER

The processor stack pointer (SP, Register 6) is in most cases the general register used for the stack operations related to program nesting. Auto-decrement with Register 6 "pushes" data on to the stack and autoincrement with Register 6 "pops" data off the stack. Index mode with SP permits random access of items on the stack. Since the SP is used by the processor for interrupt handling, it has a special attribute: autoincrements and autodecrements are always done in steps of two. Byte operations using the SP in this way leave odd addresses unmodified.


3.7 SUMMARY OF ADDRESSING MODES

3.7.1 General Register Addressing


R is a general register, 0 to 7

(R) is the contents of that register

Mode 0 Register OPR R R contains operand

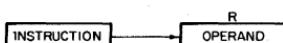


Mode 1 Register deferred OPR (R) R contains address

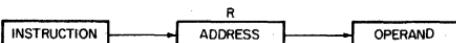


Mode 2 Auto-increment OPR (R)+

R contains address, then increment (R)

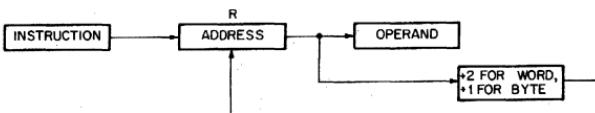


Mode 3 Auto-increment OPR @R+ R contains address of address, then increment (R) by 2

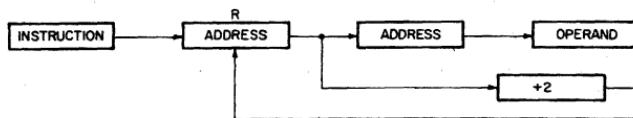


Mode 4 Auto-decrement OPR -(R)

Decrement (R), then R contains address

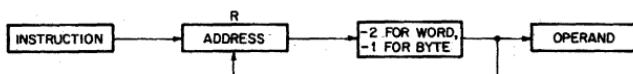


Mode 5 Auto-decrement deferred OPR @-(R)


Decrement (R) by 2, then R contains address of address

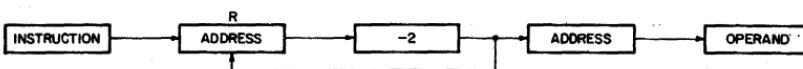

Mode 6 Index Index OPR X(R) (R) + X is address

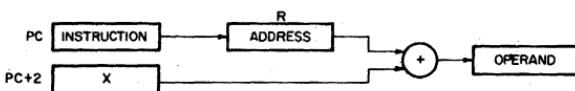


Mode 7 Index deferred OPR @X(R) (R) + X is address of address

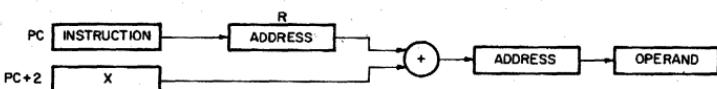


3.7.2 Program Counter Addressing

Register = 7

Mode 2 Immediate OPR #n Operand n follows instruction

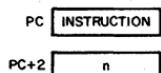


Mode 3 Absolute OPR @#A Address A follows instruction

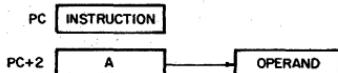


Mode 6 Relative OPR A $\underbrace{PC + 4 + X}_{\text{updated PC}}$ is address

$\underbrace{PC + 4 + X}_{\text{updated PC}}$ is address

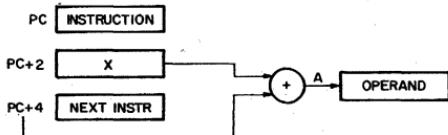

Mode 7 Relative deferred OPR @A

$\underbrace{PC + 4 + X}_{\text{updated PC}}$ is address of address

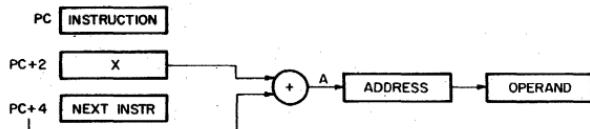

CHAPTER 4

INSTRUCTION SET

4.1 INTRODUCTION

The specification for each instruction includes the mnemonic, octal code, binary code, a diagram showing the format of the instruction, a symbolic notation describing its execution and the effect on the condition codes, a description, special comments, and examples.

MNEMONIC: This is indicated at the top corner of each page. When the word instruction has a byte equivalent, the byte mnemonic is also shown.

INSTRUCTION FORMAT: A diagram accompanying each instruction shows the octal op code, the binary op code, and bit assignments. (Note that in byte instructions the most significant bit (bit 15) is always a 1.)

SYMBOLS:

() = contents of

SS or src = source address

DD or dst = destination address

loc = location

← = becomes

↑ = "is popped from stack"

↓ = "is pushed onto stack"

Λ = boolean AND

∨ = boolean OR

⊻ = exclusive OR

~ = boolean not

Reg or R = register


B = Byte

■ = {
 0 for word
 1 for byte


4.2 INSTRUCTION FORMATS

The major instruction formats are:


Single Operand Group

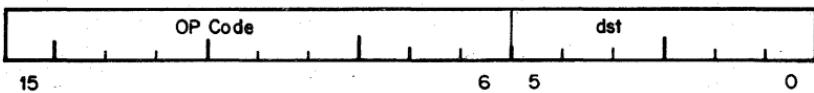


Double Operand Group

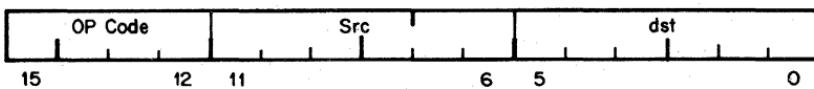

Register-Source or Destination

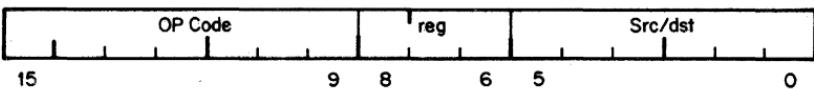

Branch

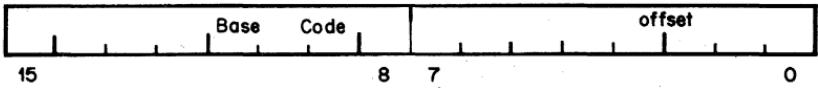

Byte Instructions

The PDP-11 processor includes a full complement of instructions that manipulate byte operands. Since all PDP-11 addressing is byte-oriented, byte manipulation addressing is straightforward. Byte instructions with autoincrement or autodecrement direct addressing cause the specified register to be modified by one to point to the next byte of data. Byte operations in register mode access the low-order byte of the specified register. These provisions enable the PDP-11 to perform as either a word or byte processor. The numbering scheme for word and byte addresses in core memory is:

HIGH BYTE ADDRESS			WORD OR BYTE ADDRESS
002001	BYTE 1	BYTE 0	002000
002003	BYTE 3	BYTE 2	002002

The most significant bit (Bit 15) of the instruction word is set to indicate a byte instruction.

Example:

Symbolic	Octal	
CLR	0050DD	Clear Word
CLRB	1050DD	Clear Byte

4.3 LIST OF INSTRUCTIONS

The PDP-11 instruction set is shown in the following sequence.

▲—A triangle indicates instructions not implemented in the PDP-11/05 and 11/10.

SINGLE OPERAND

Mnemonic	Instruction	Op Code	Page
General			
CLR(B)	clear destination	■050DD	4-6
COM(B)	complement dst	■051DD	4-7
INC(B)	increment dst	■052DD	4-8
DEC(B)	decrement dst	■053DD	4-9
NEG(B)	negate dst	■054DD	4-10
TST(B)	test dst	■057DD	4-11
Shift & Rotate			
ASR(B)	arithmetic shift right	■062DD	4-13
ASL(B)	arithmetic shift left	■063DD	4-14
ROR(B)	rotate right	■060DD	4-15
ROL(B)	rotate left	■061DD	4-16
SWAB	swap bytes	0003DD	4-17
Multiple Precision			
ADC(B)	add carry	■055DD	4-19
SBC(B)	subtract carry	■056DD	4-20
▲ SXT	sign extend	0067DD	4-21

DOUBLE OPERAND

General			
MOV(B)	move source to destination	■1SSDD	4-23
CMP(B)	compare src to dst	■2SSDD	4-24
ADD	add src to dst	06SSDD	4-25
SUB	subtract src from dst	16SSDD	4-26
Logical			
BIT(B)	bit test	■3SSDD	4-28
BIC(B)	bit clear	■4SSDD	4-29
BIS(B)	bit set	■5SSDD	4-30
▲ XOR	exclusive OR	074RDD	4-31

PROGRAM CONTROL


Mnemonic	Instruction	Op Code or Base Code	Page
Branch			
BR	branch (unconditional)	000400	4-33
BNE	branch if not equal (to zero)	001000	4-34
BEQ	branch if equal (to zero)	001400	4-35
BPL	branch if plus	100000	4-36
BMI	branch if minus	100400	4-37
BVC	branch if overflow is clear	102000	4-38
BVS	branch if overflow is set	102400	4-39
BCC	branch if carry is clear	103000	4-40
BCS	branch if carry is set	103400	4-41
Signed Conditional Branch			
BGE	branch if greater than or equal (to zero)	002000	4-43
BLT	branch if less than (zero)	002400	4-44
BGT	branch if greater than (zero)	003000	4-45
BLE	branch if less than or equal (to zero)....	003400	4-46
Unsigned Conditional Branch			
BHI	branch if higher	101000	4-48
BLOS	branch if lower or same	101400	4-49
BHIS	branch if higher or same	103000	4-50
BLO	branch if lower	103400	4-51
Jump & Subroutine			
JMP	jump	0001DD	4-52
JSR	jump to subroutine	004RDD	4-54
RTS	return from subroutine	00020R	4-56
▲ MARK	mark	006400	4-57
▲ SOB	subtract one and branch (if $\neq 0$)	077R00	4-59
Trap & Interrupt			
EMT	emulator trap	104000—104377	4-61
TRAP	trap	104400—104777	4-62
BPT	breakpoint trap	000003	4-63
IOT	input/output trap	000004	4-64
RTI	return from interrupt	000002	4-65
▲ RTT	return from interrupt	000006	4-66
MISCELLANEOUS			
HALT	halt	000000	4-70
WAIT	wait for interrupt	000001	4-71
RESET	reset external bus	000005	4-72
Condition Code Operation			
CLC, CLV, CLZ, CLN, CCC	clear	000240	4-73
SEC, SEV, SEZ, SEN, SCC	set	000260	4-73

4.4 SINGLE OPERAND INSTRUCTIONS

CLR CLRB

clear destination

■050DD

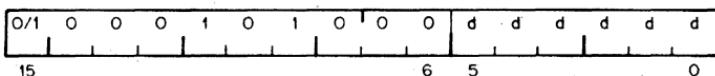

Operation: (dst) <= 0

Condition Codes: N: cleared
Z: set
V: cleared
C: cleared

Description: Word: Contents of specified destination are replaced with zeroes.
Byte: Same

Example: CLR R1


Before	After
$(R1) = 177777$	$(R1) = 000000$
N Z V C 1 1 1 1	N Z V C 0 1 0 0

COM

COMB

complement dst

■051DD

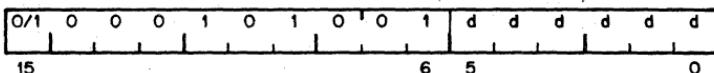

Operation: $(dst) \leftarrow \sim(dst)$

Condition Codes:
N: set if most significant bit of result is set; cleared otherwise
Z: set if result is 0; cleared otherwise
V: cleared
C: set

Description: Replaces the contents of the destination address by their logical complement (each bit equal to 0 is set and each bit equal to 1 is cleared).

Byte: Same

Example: COM R0


Before	After
$(R0) = 013333$	$(R0) = 164444$
N Z V C 0 1 1 0	N Z V C 1 0 0 1

INC

INCB

increment dst

■052DD

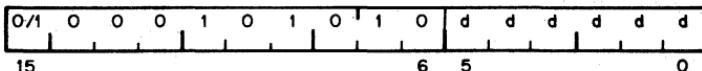

Operation: $(dst) \leftarrow (dst) + 1$

Condition Codes:
N: set if result is <0; cleared otherwise
Z: set if result is 0; cleared otherwise
V: set if (dst) held 077777; cleared otherwise
C: not affected

Description: Word: Add one to contents of destination
Byte: Same

Example: INC R2

Before	After
$(R2) = 000333$	$(R2) = 000334$

N Z V C
0 0 0 0

N Z V C
0 0 0 0

DEC DECB

decrement dst.

■053DD

0/1	0	0	0	1	0	1	0	1	1	d	d	d	d	d	d	0
15										6	5					

Operation: $(dst) \leftarrow (dst) - 1$

Condition Codes:
N: set if result is <0; cleared otherwise
Z: set if result is 0; cleared otherwise
V: set if (dst) was 100000; cleared otherwise
C: not affected

Description: Word: Subtract 1 from the contents of the destination
Byte: Same

Example: DEC R5

Before	After
$(R5) = 000001$	$(R5) = 000000$

NZVC
1000


NZVC
0100

NEG

NEGB

negate dst

■054DD

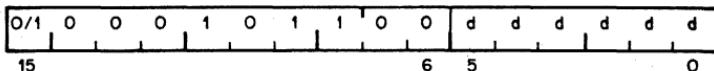

Operation: $(dst) \leftarrow -(dst)$

Condition Codes:
N: set if the result is <0; cleared otherwise
Z: set if result is 0; cleared otherwise
V: set if the result is 100000; cleared otherwise
C: cleared if the result is 0; set otherwise

Description: Word: Replaces the contents of the destination address by its two's complement. Note that 100000 is replaced by itself (in two's complement notation the most negative number has no positive counterpart).
Byte: Same

Example: NEG R0

Before	After
$(R0) = 000010$	$(R0) = 177770$
N Z V C 0 0 0 0	N Z V C 1 0 0 1

TST
TSTB

test dst

■057DD

0/1	0	0	0	1	0	1	1	1	d	d	c	d	d	d	0
15									6	5					0

Operation: (dst) \ll (dst)

Condition Codes: N: set if the result is <0; cleared otherwise
Z: set if result is 0; cleared otherwise
V: cleared
C: cleared

Description: Word: Sets the condition codes N and Z according to the contents of the destination address
Byte: Same

Example: TST R1

	Before	After
(R1) = 012340		(R1) = 012340
N Z V C	0 0 1 1	N Z V C 0 0 0 0

Shifts

Scaling data by factors of two is accomplished by the shift instructions:

ASR - Arithmetic shift right

ASL - Arithmetic shift left

The sign bit (bit 15) of the operand is replicated in shifts to the right. The low order bit is filled with 0 in shifts to the left. Bits shifted out of the C bit, as shown in the following examples, are lost.


Rotates

The rotate instructions operate on the destination word and the C bit as though they formed a 17-bit "circular buffer". These instructions facilitate sequential bit testing and detailed bit manipulation.

ASR ASRB

arithmetic shift right


■062DD

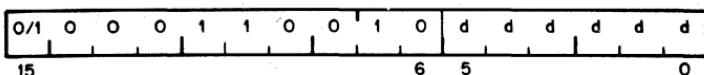


Operation: $(dst) \ll (dst)$ shifted one place to the right

Condition Codes:
N: set if the high-order bit of the result is set (result < 0); cleared otherwise
Z: set if the result = 0; cleared otherwise
V: loaded from the Exclusive OR of the N-bit and C-bit (as set by the completion of the shift operation)
C: loaded from low-order bit of the destination

Description:
Word: Shifts all bits of the destination right one place. Bit 15 is replicated. The C-bit is loaded from bit 0 of the destination.
ASR performs signed division of the destination by two.
Word:

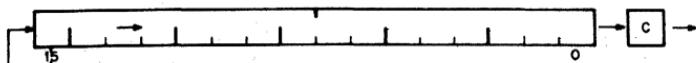

Byte:

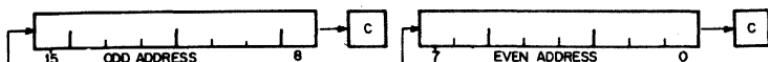


ASL

ASLB

arithmetic shift left

■063DD

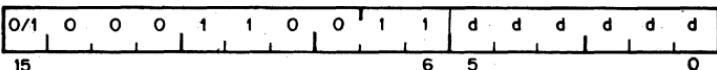

Operation: $(dst) \ll (dst)$ shifted one place to the left


Condition Codes: N: set if high-order bit of the result is set (result < 0); cleared otherwise

Z: set if the result = 0; cleared otherwise


V: loaded with the exclusive OR of the N-bit and C-bit (as set by the completion of the shift operation)

C: loaded with the high-order bit of the destination

Description: Word: Shifts all bits of the destination left one place. Bit 0 is loaded with an 0. The C-bit of the status word is loaded from the most significant bit of the destination. ASL performs a signed multiplication of the destination by 2 with overflow indication.
Word:

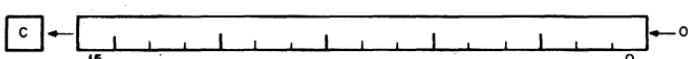


Byte:

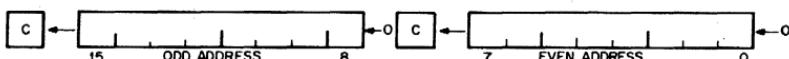

ROR RORB

rotate right

■060DD

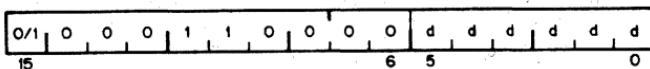


Condition Codes: N: set if the high-order bit of the result is set (result < 0); cleared otherwise
Z: set if all bits of result = 0; cleared otherwise
V: loaded with the Exclusive OR of the N-bit and C-bit (as set by the completion of the rotate operation)
C: loaded with the low-order bit of the destination


Description: Rotates all bits of the destination right one place. Bit 0 is loaded into the C-bit and the previous contents of the C-bit are loaded into bit 15 of the destination.
Byte: Same

Example:

Word:

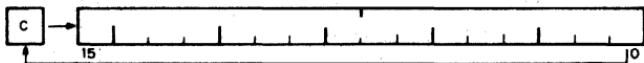


Byte:

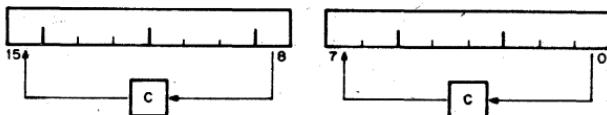

ROL ROLB

rotate left

■061DD

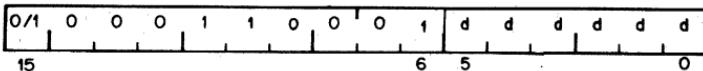


- Condition Codes:**
- N: set if the high-order bit of the result word is set (result < 0); cleared otherwise
 - Z: set if all bits of the result word = 0; cleared otherwise
 - V: loaded with the Exclusive OR of the N-bit and C-bit (as set by the completion of the rotate operation)
 - C: loaded with the high-order bit of the destination


Description: Word: Rotate all bits of the destination left one place. Bit 15 is loaded into the C-bit of the status word and the previous contents of the C-bit are loaded into Bit 0 of the destination.
Byte: Same

Example:

Word:

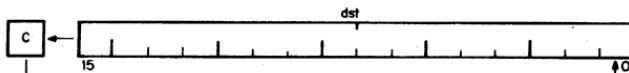


Bytes:

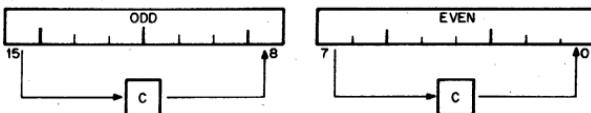

SWAB

swap bytes

0003DD

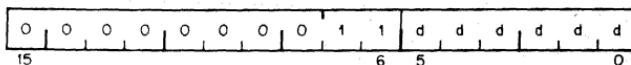

Operation: Byte 1/Byte 0 \leftarrow Byte 0/Byte 1

Condition Codes: N: set if high-order bit of low-order byte (bit 7) of result is set;
cleared otherwise
Z: set if low-order byte of result = 0; cleared otherwise
V: cleared
C: cleared

Description: Exchanges high-order byte and low-order byte of the destination word (destination must be a word address).

Example: SWAB R1

Before	After
$(R1) = 077777$	$(R1) = 177577$


N Z V C
1 1 1 1

N Z V C
0 0 0 0

Multiple Precision

It is sometimes necessary to do arithmetic on operands considered as multiple words or bytes. The PDP-11 makes special provision for such operations with the instructions ADC (Add Carry) and SBC (Subtract Carry) and their byte equivalents.

For example two 16-bit words may be combined into a 32-bit double precision word and added or subtracted as shown below:

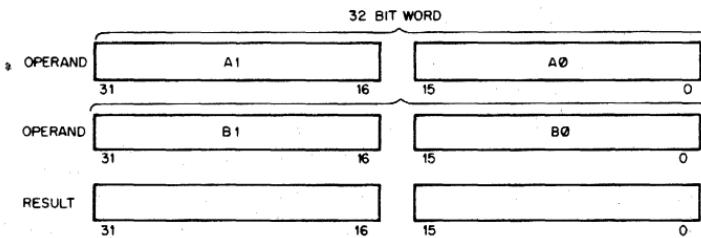

Example:

The addition of -1 and -1 could be performed as follows:

$$-1 = 377777777777$$

$$(R1) = 177777 \quad (R2) = 177777 \quad (R3) = 177777 \quad (R4) = 177777$$

ADD R1,R2

ADC R3


ADD R4,R3

1. After (R1) and (R2) are added, 1 is loaded into the C bit
2. ADC instruction adds C bit to (R3); (R3) = 0
3. (R3) and (R4) are added
4. Result is 37777777776 or -2

ADC ADCB

add carry

■055DD

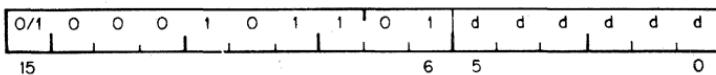

Operation: $(dst) \ll (dst) + (C)$

Condition Codes:
N: set if result < 0; cleared otherwise
Z: set if result = 0; cleared otherwise
V: set if (dst) was 077777 and (C) was 1; cleared otherwise
C: set if (dst) was 177777 and (C) was 1; cleared otherwise

Description: Adds the contents of the C-bit into the destination. This permits the carry from the addition of the low-order words to be carried into the high-order result.
Byte: Same


Example: Double precision addition may be done with the following instruction sequence:

ADD A0,B0	; add low-order parts
ADC B1	; add carry into high-order
ADD A1,B1	; add high order parts

SBC SBCB

subtract carry

■056DD

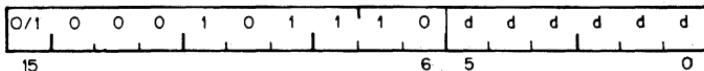

Operation: $(dst) \leftarrow (dst) - (C)$

Condition Codes: N: set if result <0; cleared otherwise
Z: set if result 0; cleared otherwise
V: set if (dst) was 100000; cleared otherwise
C: cleared if (dst) was 0 and C was 1; set otherwise

Description: Word: Subtracts the contents of the C-bit from the destination. This permits the carry from the subtraction of two low-order words to be subtracted from the high order part of the result.
Byte: Same

Example: Double precision subtraction is done by:


```
SUB A0,B0
SBC B1
SUB A1,B1
```

SXT

(not in 11/05 & 11/10)

sign extend

0067DD

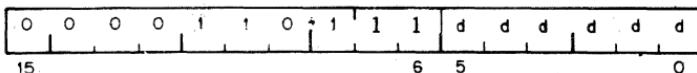

Operation: (dst) \leftarrow 0 if N bit is clear
(dst) \leftarrow -1 N bit is set

Condition Codes:
N: unaffected
Z: set if N bit clear
V: cleared
C: unaffected

Description: If the condition code bit N is set then a -1 is placed in the destination operand: if N bit is clear, then a 0 is placed in the destination operand. This instruction is particularly useful in multiple precision arithmetic because it permits the sign to be extended through multiple words.

Example:

SXT A

Before	After
$(A) = 012345$	$(A) = 177777$
NZVC 1000	NZVC 1000

4.5 DOUBLE OPERAND INSTRUCTIONS

Double operand instructions provide an instruction (and time) saving facility since they eliminate the need for "load" and "save" sequences such as those used in accumulator-oriented machines.

MOV MOVB

move source to destination

■1SSDD

0/1	0	0	1	s	s	s	s	s	d	d	d	d	d	d	d	d
15			12	11					6	5						0

Operation: (dst) \leftarrow (src)

Condition Codes:
N: set if (src) < 0; cleared otherwise
Z: set if (src) = 0; cleared otherwise
V: cleared
C: not affected

Description: Word: Moves the source operand to the destination location. The previous contents of the destination are lost. The contents of the source address are not affected.
Byte: Same as MOV. The MOVB to a register (unique among byte instructions) extends the most significant bit of the low order byte (sign extension). Otherwise MOVB operates on bytes exactly as MOV operates on words.

Example: MOV XXX,R1 ; loads Register 1 with the contents of memory location; XXX represents a programmer-defined mnemonic used to represent a memory location

MOV # 20,R0 ; loads the number 20 into Register 0; "#" indicates that the value 20 is the operand

MOV @ # 20,-(R6) ; pushes the operand contained in location 20 onto the stack

MOV (R6) + ,@ # 177566 ; pops the operand off a stack and moves it into memory location 177566 (terminal print buffer)

MOV R1,R3 ; performs an inter register transfer

MOVB @ # 177562,@ # 177566 ; moves a character from terminal keyboard buffer to terminal buffer

CMP

CMPB

compare src to dst

■2SSDD

0/1	0	1	0	s	s	s	s	s	d	d	d	d	d	d	d	d
15		12	11						6	5						0

Operation: $(src)-(dst)$ [in detail, $(src) + \sim(dst) + 1$]

Condition Codes:


- N: set if result < 0 ; cleared otherwise
- Z: set if result $= 0$; cleared otherwise
- V: set if there was arithmetic overflow; that is, operands were of opposite signs and the sign of the destination was the same as the sign of the result; cleared otherwise
- C: cleared if there was a carry from the most significant bit of the result; set otherwise

Description: Compares the source and destination operands and sets the condition codes, which may then be used for arithmetic and logical conditional branches. Both operands are unaffected. The only action is to set the condition codes. The compare is customarily followed by a conditional branch instruction. Note that unlike the subtract instruction the order of operation is $(src)-(dst)$, not $(dst)-(src)$.

ADD

add src to dst

06SSDD

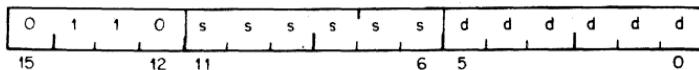

Operation: $(dst) \leftarrow (src) + (dst)$

Condition Codes:
N: set if result <0; cleared otherwise
Z: set if result = 0; cleared otherwise
V: set if there was arithmetic overflow as a result of the operation; that is both operands were of the same sign and the result was of the opposite sign; cleared otherwise
C: set if there was a carry from the most significant bit of the result; cleared otherwise

Description: Adds the source operand to the destination operand and stores the result at the destination address. The original contents of the destination are lost. The contents of the source are not affected. Two's complement addition is performed.

Examples: Add to register: ADD 20,R0

 Add to memory: ADD R1,XXX

 Add register to register: ADD R1,R2


 Add memory to memory: ADD@ # 17750,XXX

XXX is a programmer-defined mnemonic for a memory location.

SUB

subtract src from dst

16SSDD

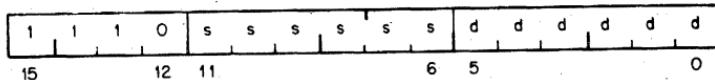

Operation: $(dst) \leftarrow (dst) - (src)$ [in detail $(dst) \leftarrow (dst) + \sim(src) + 1$]

Condition Codes:
N: set if result < 0 ; cleared otherwise
Z: set if result $= 0$; cleared otherwise
V: set if there was arithmetic overflow as a result of the operation, that is if operands were of opposite signs and the sign of the source was the same as the sign of the result; cleared otherwise
C: cleared if there was a carry from the most significant bit of the result; set otherwise

Description: Subtracts the source operand from the destination operand and leaves the result at the destination address. The original contents of the destination are lost. The contents of the source are not affected. In double-precision arithmetic the C-bit, when set, indicates a "borrow".

Example: SUB R1,R2

Before	After
$(R1) = 011111$	$(R1) = 011111$
$(R2) = 012345$	$(R2) = 001234$

N Z V C
1 1 1 1

N Z V C
0 0 0 0

Logical

These instructions have the same format as the double operand arithmetic group. They permit operations on data at the bit level.

BIT BITB

bit test

■3SSDD

0/1	0	1	1	s	s	s	s	s	d	d	d	d	d	d	d
15			12	11					6	5					0

Operation: (src) \wedge (dst)

Condition Codes: N: set if high-order bit of result set; cleared otherwise
Z: set if result = 0; cleared otherwise
V: cleared
C: not affected

Description: Performs logical "and" comparison of the source and destination operands and modifies condition codes accordingly. Neither the source nor destination operands are affected. The BIT instruction may be used to test whether any of the corresponding bits that are set in the destination are also set in the source or whether all corresponding bits set in the destination are clear in the source.


Example: BIT #30.R3 test bits 3 and 4 of R3 to see if both are off

(30)_x=0 000 000 000 011 000

BIC
BICB

bit clear

■4SSDD

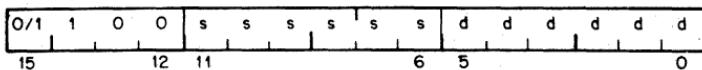

Operation: $(dst) \leftarrow \sim (src) \cdot (dst)$

Condition Codes:
N: set if high order bit of result set; cleared otherwise
Z: set if result = 0; cleared otherwise
V: cleared
C: not affected

Description: Clears each bit in the destination that corresponds to a set bit in the source. The original contents of the destination are lost. The contents of the source are unaffected.

Example: BIC R3,R4

Before
(R3) = 001234

After
(R3) = 001234

(R4) = 001111

(R4) = 000101

N Z V C
1 1 1 1

N Z V C
0 0 0 1

Before:
(R3)=0 000 001 010 011 100
(R4)=0 000 001 001 001 001


After: (R4)=0 000 000 001 000 001

BIS

BISB

bit set

■5SSDD

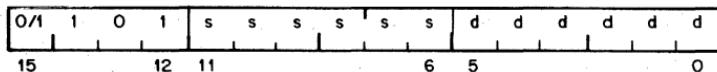

Operation: (dst) \ll (src) v (dst)

Condition Codes:
N: set if high-order bit of result set, cleared otherwise
Z: set if result = 0; cleared otherwise
V: cleared
C: not affected

Description: Performs "Inclusive OR" operation between the source and destination operands and leaves the result at the destination address; that is, corresponding bits set in the source are set in the destination. The contents of the destination are lost.

Example: BIS R0,R1

Before	After
$(R0) = 001234$	$(R0) = 001234$
$(R1) = 001111$	$(R1) = 001335$
N Z V C	N Z V C
0 0 0 0	0 0 0 0


Before: $(R0)=0\ 000\ 001\ 010\ 011\ 100$
 $(R1)=0\ 000\ 001\ 001\ 001\ 001$

After: $(R1)=0\ 000\ 001\ 011\ 011\ 101$

XOR

exclusive OR

074RDD

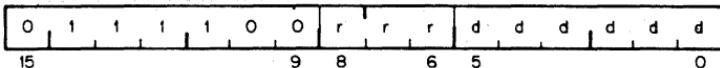

Operation: $(dst) \leftarrow Rv(dst)$

Condition Codes:
N: set if the result <0; cleared otherwise
Z: set if result = 0; cleared otherwise
V: cleared
C: unaffected

Description: The exclusive OR of the register and destination operand is stored in the destination address. Contents of register are unaffected. Assembler format is: XOR R,D

Example:

XOR R0,R2

Before	After
$(R0) = 001234$	$(R0) = 001234$
$(R2) = 001111$	$(R2) = 000325$

Before: $(R0)=0\ 000\ 001\ 010\ 011\ 100$
 $(R2)=0\ 000\ 001\ 001\ 001\ 001$

After: $(R2)=0\ 000\ 000\ 011\ 010\ 101$

4.6 PROGRAM CONTROL INSTRUCTIONS

Branches

The instruction causes a branch to a location defined by the sum of the offset (multiplied by 2) and the current contents of the Program Counter if:

- a) the branch instruction is unconditional
- b) it is conditional and the conditions are met after testing the condition codes (status word).

The offset is the number of words from the current contents of the PC. Note that the current contents of the PC point to the word following the branch instruction.

Although the PC expresses a byte address, the offset is expressed in words. The offset is automatically multiplied by two to express bytes before it is added to the PC. Bit 7 is the sign of the offset. If it is set, the offset is negative and the branch is done in the backward direction. Similarly if it is not set, the offset is positive and the branch is done in the forward direction.

The 8-bit offset allows branching in the backward direction by 200 words (400 bytes) from the current PC, and in the forward direction by 177 words (376 bytes) from the current PC.

The PDP-11 assembler handles address arithmetic for the user and computes and assembles the proper offset field for branch instructions in the form:


Bxx loc

Where "Bxx" is the branch instruction and "loc" is the address to which the branch is to be made. The assembler gives an error indication in the instruction if the permissible branch range is exceeded. Branch instructions have no effect on condition codes.

BR

branch (unconditional)

000400 Plus offset

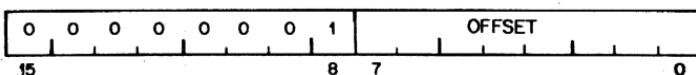

Operation: $\text{PC} \leftarrow \text{PC} + (2 \times \text{offset})$

Description: Provides a way of transferring program control within a range of -128 to +127 words with a one word instruction.

New PC address = updated PC + (2 X offset)

Updated PC = address of branch instruction + 2


Example: With the Branch instruction at location 500, the following offsets apply.

New PC Address	Offset Code	Offset (decimal)
474	375	-3
476	376	-2
500	377	-1
502	000	0
504	001	+1
506	002	+2

BNE

branch if not equal (to zero)

001000 Plus offset

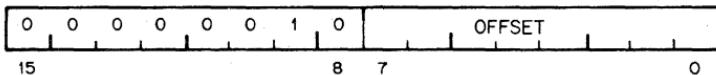

Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $Z = 0$

Condition Codes: Unaffected

Description: Tests the state of the Z-bit and causes a branch if the Z-bit is clear. BNE is the complementary operation to BEQ. It is used to test inequality following a CMP, to test that some bits set in the destination were also in the source, following a BIT, and generally, to test that the result of the previous operation was not zero.

Example: CMP A,B ; compare A and B
 BNE C ; branch if they are not equal

will branch to C if $A \neq B$

and the sequence


ADD A,B ; add A to B
BNE C ; Branch if the result is not
 equal to 0

will branch to C if $A + B \neq 0$

BEQ

branch if equal (to zero)

001400 Plus offset

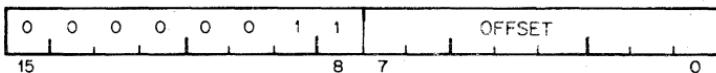

Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $Z = 1$

Condition Codes: Unaffected

Description: Tests the state of the Z-bit and causes a branch if Z is set. As an example, it is used to test equality following a CMP operation, to test that no bits set in the destination were also set in the source following a BIT operation, and generally, to test that the result of the previous operation was zero.

Example: CMP A,B ; compare A and B
 BEQ C ; branch if they are equal

will branch to C if $A = B$ $(A - B = 0)$
and the sequence


ADD A,B ; add A to B
BEQ C ; branch if the result = 0

will branch to C if $A + B = 0$.

BPL

branch if plus

100000 Plus offset

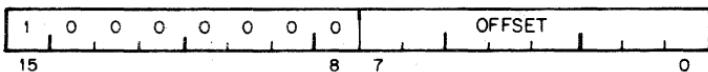


Operation: $\text{PC} \leftarrow \text{PC} + (2 \times \text{offset})$ if N = 0

Description: Tests the state of the N-bit and causes a branch if N is clear, (positive result).

branch if minus


100400 Plus offset

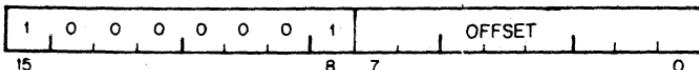**Operation:** $PC \leftarrow PC + (2 \times \text{offset})$ if $N = 1$ **Condition Codes:** Unaffected**Description:** Tests the state of the N-bit and causes a branch if N is set. It is used to test the sign (most significant bit) of the result of the previous operation, branching if negative.

BVC

branch if overflow is clear

102000 Plus offset

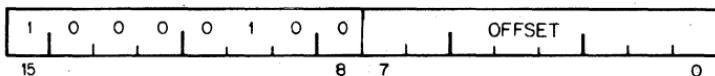


Operation: $PC \leftarrow PC + (2 \times \text{offset}) \text{ if } V=0$

Description: Tests the state of the V bit and causes a branch if the V bit is clear. BVC is complementary operation to BVS.

BVS

branch if overflow is set

102400 Plus offset

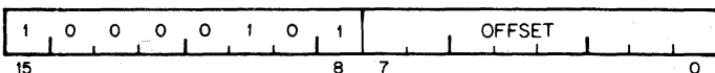


Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $V = 1$

Description: Tests the state of V bit (overflow) and causes a branch if the V bit is set. BVS is used to detect arithmetic overflow in the previous operation.

BCC

branch if carry is clear

103000 Plus offset

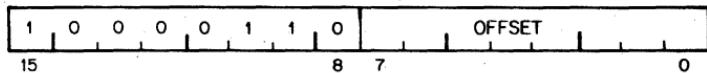


Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if C = 0

Description: Tests the state of the C-bit and causes a branch if C is clear.
BCC is the complementary operation to BCS

BCS

branch if carry is set

103400 Plus offset

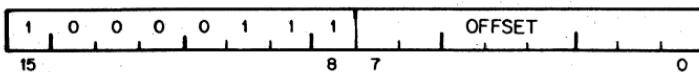

Operation: $PC \leftarrow PC + (2 \times \text{offset}) \text{ if } C = 1$

Description: Tests the state of the C-bit and causes a branch if C is set. It is used to test for a carry in the result of a previous operation.

Signed Conditional Branches

Particular combinations of the condition code bits are tested with the signed conditional branches. These instructions are used to test the results of instructions in which the operands were considered as signed (two's complement) values.

Note that the sense of signed comparisons differs from that of unsigned comparisons in that in signed 16-bit, two's complement arithmetic the sequence of values is as follows:

largest 077777
 077776

positive .

000001
000000
177777
177776

negative .

smallest 100001
 100000

whereas in unsigned 16-bit arithmetic the sequence is considered to be


highest 177777

 .
 .
 .
lowest 000002
 000001
 000000

BGE

branch if greater than or equal
(to zero)

002000 Plus offset

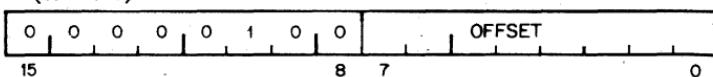


Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $N \vee V = 0$

Description: Causes a branch if N and V are either both clear or both set. BGE is the complementary operation to BLT. Thus BGE will always cause a branch when it follows an operation that caused addition of two positive numbers. BGE will also cause a branch on a zero result.

BLT

branch if less than (zero)

002400 Plus offset

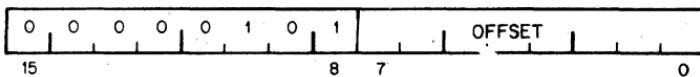


Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $N \vee V = 1$

Description: Causes a branch if the "Exclusive Or" of the N and V bits are 1. Thus BLT will always branch following an operation that added two negative numbers, even if overflow occurred. In particular, BLT will always cause a branch if it follows a CMP instruction operating on a negative source and a positive destination (even if overflow occurred). Further, BLT will never cause a branch when it follows a CMP instruction operating on a positive source and negative destination. BLT will not cause a branch if the result of the previous operation was zero (without overflow).

BGT

branch if greater than (zero)

003000 Plus offset

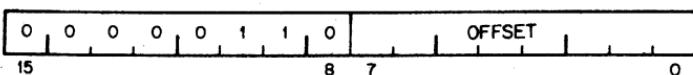


Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $Z \vee (N \vee V) = 0$

Description: Operation of BGT is similar to BGE, except BGT will not cause a branch on a zero result.

BLE

branch if less than or equal (to zero) 003400 Plus offset

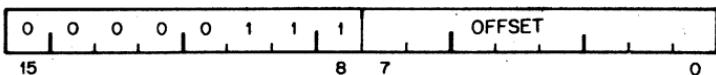

Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $Z \vee (N \vee V) = 1$

Description: Operation is similar to BLT but in addition will cause a branch if the result of the previous operation was zero.


Unsigned Conditional Branches

The Unsigned Conditional Branches provide a means for testing the result of comparison operations in which the operands are considered as unsigned values.

BHI

branch if higher

101000 Plus offset

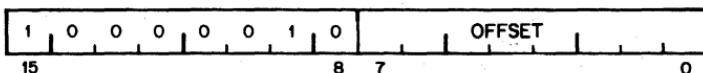


Operation: $PC \leftarrow PC + (2 \times \text{offset})$ if $C = 0$ and $Z = 0$

Description: Causes a branch if the previous operation caused neither a carry nor a zero result. This will happen in comparison (CMP) operations as long as the source has a higher unsigned value than the destination.

BLOS

branch if lower or same

101400 Plus offset

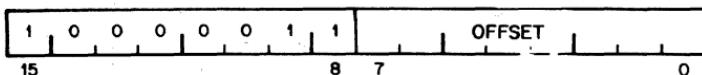


Operation: $PC \leftarrow PC + (2 \times \text{offset}) \text{ if } C \vee Z = 1$

Description: Causes a branch if the previous operation caused either a carry or a zero result. BLOS is the complementary operation to BHI. The branch will occur in comparison operations as long as the source is equal to, or has a lower unsigned value than the destination.

BHIS

branch if higher or same

103000 Plus offset

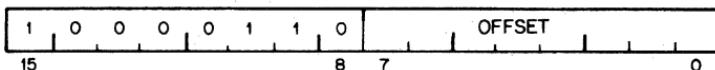


Operation: $PC \leftarrow PC + (2 \times \text{offset}) \text{ if } C = 0$

Description: BHIS is the same instruction as BCC. This mnemonic is included only for convenience.

BLO

branch if lower

103400 Plus offset

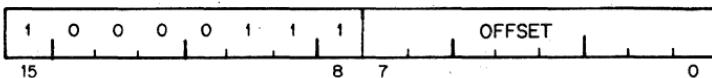

Operation: $PC \leftarrow PC + (2 \times \text{offset}) \text{ if } C=1$

Description: BLO is same instruction as BCS. This mnemonic is included only for convenience.

JMP

jump

0001DD

0	0	0	0	0	0	0	0	1	d	d	d	d	d	d	0
15								6	5						0

Operation: PC<-(dst)

Condition Codes: not affected

Description: JMP provides more flexible program branching than provided with the branch instructions. Control may be transferred to any location in memory (no range limitation) and can be accomplished with the full flexibility of the addressing modes, with the exception of register mode 0. Execution of a jump with mode 0 will cause an "illegal instruction" condition. (Program control cannot be transferred to a register.) Register deferred mode is legal and will cause program control to be transferred to the address held in the specified register. Note that instructions are word data and must therefore be fetched from an even-numbered address. A "boundary error" trap condition will result when the processor attempts to fetch an instruction from an odd address.

Deferred index mode JMP instructions permit transfer of control to the address contained in a selectable element of a table of dispatch vectors.

Subroutine Instructions

The subroutine call in the PDP-11 provides for automatic nesting of subroutines, reentrancy, and multiple entry points. Subroutines may call other subroutines (or indeed themselves) to any level of nesting without making special provision for storage or return addresses at each level of subroutine call. The subroutine calling mechanism does not modify any fixed location in memory, thus providing for reentrancy. This allows one copy of a subroutine to be shared among several interrupting processes. For more detailed description of subroutine programming see Chapter 5.

JSR

jump to subroutine

004RDD

0	0	0	0	1	0	0	r	r	r	d	d	d	d	d	d	d
15					9	8				6	5					0

Operation: $(tmp) \leftarrow (dst)$ (*tmp* is an internal processor register)

$\dagger(SP) \leftarrow reg$ (push reg contents onto processor stack)

$reg \leftarrow PC$ (PC holds location following JSR; this address now put in reg)

$PC \leftarrow (tmp)$ (PC now points to subroutine destination)

Description:

In execution of the JSR, the old contents of the specified register (the "LINKAGE POINTER") are automatically pushed onto the processor stack and new linkage information placed in the register. Thus subroutines nested within subroutines to any depth may all be called with the same linkage register. There is no need either to plan the maximum depth at which any particular subroutine will be called or to include instructions in each routine to save and restore the linkage pointer. Further, since all linkages are saved in a reentrant manner on the processor stack execution of a subroutine may be interrupted, the same subroutine reentered and executed by an interrupt service routine. Execution of the initial subroutine can then be resumed when other requests are satisfied. This process (called nesting) can proceed to any level.

A subroutine called with a JSR *reg,dst* instruction can access the arguments following the call with either autoincrement addressing, $(reg) +$, (if arguments are accessed sequentially) or by indexed addressing, $X(reg)$, (if accessed in random order). These addressing modes may also be deferred, $@(reg) +$ and $@X(reg)$ if the parameters are operand addresses rather than the operands themselves.


JSR PC, dst is a special case of the PDP-11 subroutine call suitable for subroutine calls that transmit parameters through the general registers. The SP and the PC are the only registers that may be modified by this call.

Another special case of the JSR instruction is JSR PC, @(SP)+ which exchanges the top element of the processor stack and the contents of the program counter. Use of this instruction allows two routines to swap program control and resume operation when recalled where they left off. Such routines are called "co-routines."

Return from a subroutine is done by the RTS instruction. RTS reg loads the contents of reg into the PC and pops the top element of the processor stack into the specified register.

Example:


JSR R5, SBR

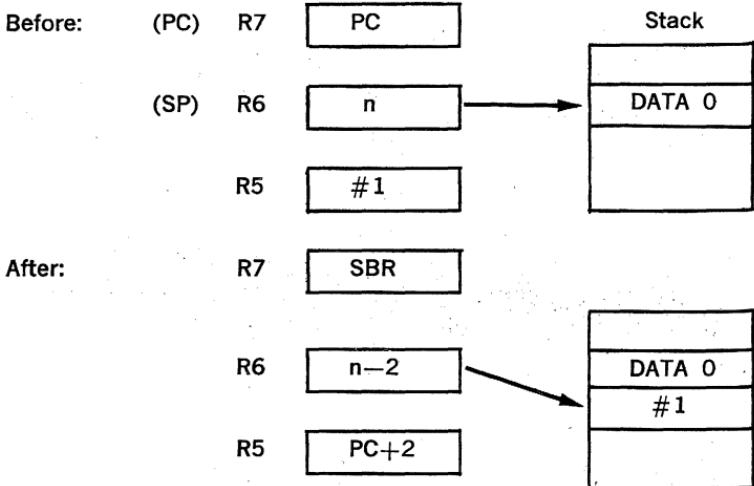

RTS

return from subroutine


00020R

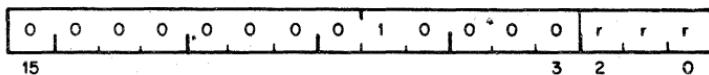

Operation: $\text{PC} \leftarrow \text{reg}$
 $\text{reg} \leftarrow (\text{SP})^A$

Description: Loads contents of reg into PC and pops the top element of the processor stack into the specified register.
Return from a non-reentrant subroutine is typically made through the same register that was used in its call. Thus, a subroutine called with a JSR PC, dst exits with a RTS PC and a subroutine called with a JSR R5, dst, may pick up parameters with addressing modes (R5) +, X(R5), or @X(R5) and finally exits, with an RTS R5

Example: RTS R5

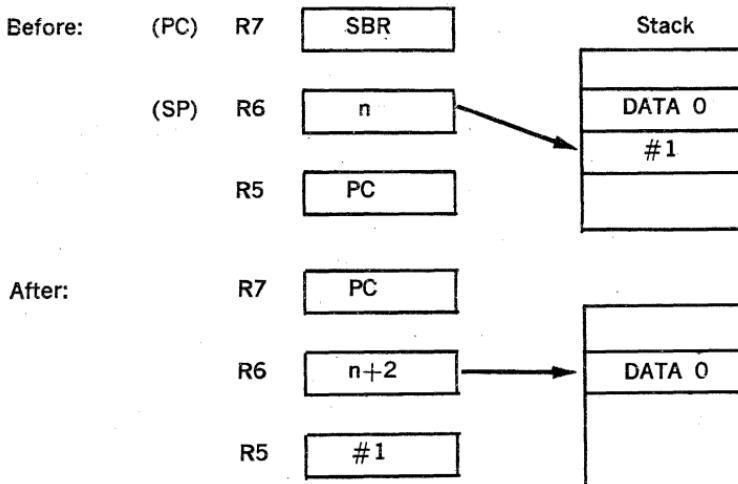

MARK

(not in 11/05 & 11/10)

mark

00 64 NN

0	0	0	0	1	1	0	1	0	0	n	n	n	n	n	n	0
15						8	7	6	5							0

Operation: SP<-SP + 2nn nn = number of parameters
PC<-R5
R5<(SP)▲


Condition Codes: unaffected

Description: Used as part of the standard PDP-11 subroutine return convention. MARK facilitates the stack clean up procedures involved in subroutine exit. Assembler format is: MARK N

Example:

MOV R5,-(SP)	;place old R5 on stack
MOV P1,-(SP)	;place N parameters
MOV P2,-(SP)	;on the stack to be used there by the subroutine
MOV PN,-(SP)	;places the instruction
MOV #MARKN,-(SP)	;MARK N on the stack
MOV SP ,R5	;set up address at Mark N instruction
JSR PC,SUB	;jump to subroutine

At this point the stack is as follows:

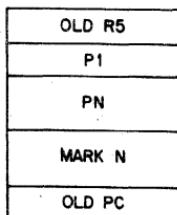

And the program is at the address SUB which is the beginning of the subroutine.

SUB: ;execution of the subroutine itself

RTS R5 ;the return begins: this causes the contents of R5 to be placed in the PC which then results in the execution of the instruction MARK N. The contents of old PC are placed in R5


MARK N causes: (1) the stack pointer to be adjusted to point to the old R5 value; (2) the value now in R5 (the old PC) to be placed in the PC; and (3) contents of the old R5 to be popped into R5 thus completing the return from subroutine.

SOB

(not in the 11/05 & 11/10)

subtract one and branch (if $\neq 0$)

077R00 Plus offset

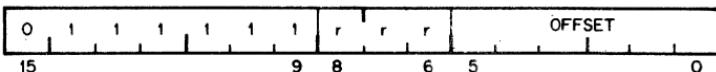

Operation: $R \leftarrow R - 1$ if this result $\neq 0$ then $PC \leftarrow PC - (2 \times \text{offset})$

Condition Codes: unaffected

Description: The register is decremented. If it is not equal to 0, twice the offset is subtracted from the PC (now pointing to the following word). The offset is interpreted as a sixbit positive number. This instruction provides a fast, efficient method of loop control. Assembler syntax is:

SOB R,A

Where A is the address to which transfer is to be made if the decremented R is not equal to 0. Note that the SOB instruction can not be used to transfer control in the forward direction.


Traps

Trap instructions provide for calls to emulators, I/O monitors, debugging packages, and user-defined interpreters. A trap is effectively an interrupt generated by software. When a trap occurs the contents of the current Program Counter (PC) and Program Status Word (PS) are pushed onto the processor stack and replaced by the contents of a two-word trap vector containing a new PC and new PS. The return sequence from a trap involves executing an RTI or RTT instruction which restores the old PC and old PS by popping them from the stack. Trap vectors are located at permanently assigned fixed addresses.

EMT

emulator trap

104000—104377


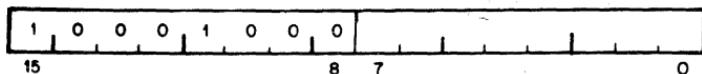


Operation:
▼(SP)↔PS
▼(SP)↔PC
PC←(30)
PS←(32)

Condition Codes:
N: loaded from trap vector
Z: loaded from trap vector
V: loaded from trap vector
C: loaded from trap vector

Description: All operation codes from 104000 to 104377 are EMT instructions and may be used to transmit information to the emulating routine (e.g., function to be performed). The trap vector for EMT is at address 30. The new PC is taken from the word at address 30; the new central processor status (PS) is taken from the word at address 32.


Caution: EMT is used frequently by DEC system software and is therefore not recommended for general use.

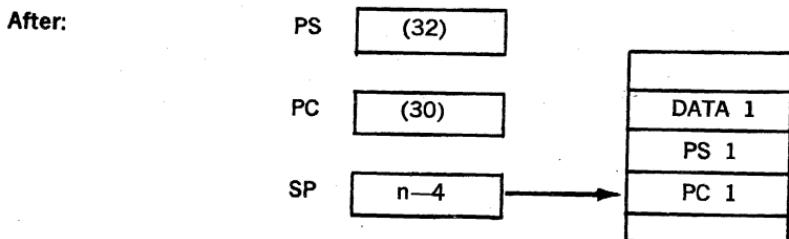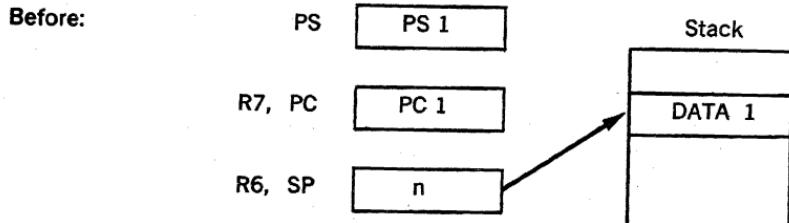

TRAP

trap

104400—104777

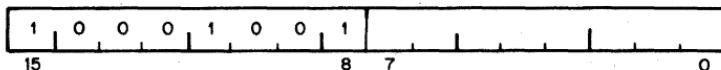

Operation: $\nabla (SP) \leftarrow PS$
 $\nabla (SP) \leftarrow PC$
 $PC \leftarrow (34)$
 $PS \leftarrow (36)$


Condition Codes: N: loaded from trap vector
Z: loaded from trap vector
V: loaded from trap vector
C: loaded from trap vector

Description: Operation codes from 104400 to 104777 are TRAP instructions. TRAPs and EMTs are identical in operation, except that the trap vector for TRAP is at address 34.

Note: Since DEC software makes frequent use of EMT, the TRAP instruction is recommended for general use.

BPT

breakpoint trap 000003

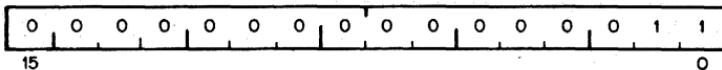

Operation: $\nabla(SP) \leftarrow PS$
 $\nabla(SP) \leftarrow PC$
 $PC \ll (14)$
 $PS \ll (16)$


Condition Codes: N: loaded from trap vector
Z: loaded from trap vector
V: loaded from trap vector
C: loaded from trap vector

Description: Performs a trap sequence with a trap vector address of 14.
Used to call debugging aids. The user is cautioned against employing code 000003 in programs run under these debugging aids.
(no information is transmitted in the low byte.)

IOT

input/output trap

000004

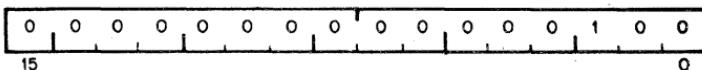


Operation: $\nabla(\text{SP}) \leftarrow \text{PS}$
 $\nabla(\text{SP}) \leftarrow \text{PC}$
 $\text{PC} \leftarrow (20)$
 $\text{PS} \leftarrow (22)$

Condition Codes: N:loaded from trap vector
Z:loaded from trap vector
V:loaded from trap vector
C:loaded from trap vector

Description: Performs a trap sequence with a trap vector address of 20.
Used to call the I/O Executive routine IOX in the paper tape
software system, and for error reporting in the Disk Oper-
ating System.
(no information is transmitted in the low byte)

return from interrupt

000002

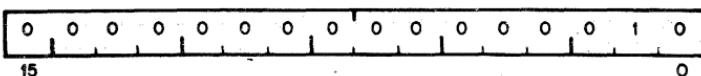
**Operation:** PC<(SP)A
PS <(SP)A**Condition Codes:**
N: loaded from processor stack
Z: loaded from processor stack
V: loaded from processor stack
C: loaded from processor stack**Description:** Used to exit from an interrupt or TRAP service routine. The PC and PS are restored (popped) from the processor stack.

RTT

(not in 11/05 & 11/10)

return from interrupt

000006

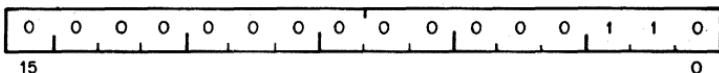

Operation: PC←(SP) ↑
PS←(SP) ↑

Condition Codes: N: loaded from processor stack
Z: loaded from processor stack
V: loaded from processor stack
C: loaded from processor stack

Description: This is the same as the RTI instruction except that it inhibits a trace trap, while RTI permits a trace trap. If a trace trap is pending, the first instruction after the RTT will be executed prior to the next "T" trap. In the case of the RTI instruction the "T" trap will occur immediately after the RTI.

Reserved Instruction Traps - These are caused by attempts to execute instruction codes reserved for future processor expansion (reserved instructions) or instructions with illegal addressing modes (illegal instructions). Order codes not corresponding to any of the instructions described are considered to be reserved instructions. JMP and JSR with register mode destinations are illegal instructions. Reserved and illegal instruction traps occur as described under EMT, but trap through vectors at addresses 10 and 4 respectively.

Stack Overflow Trap

Bus Error Traps - Bus Error Traps are:

1. Boundary Errors - attempts to reference instructions or word operands at odd addresses.
2. Time-Out Errors - attempts to reference addresses on the bus that made no response within a certain length of time. In general, these are caused by attempts to reference non-existent memory, and attempts to reference non-existent peripheral devices.

Bus error traps cause processor traps through the trap vector address 4.

Trace Trap - Trace Trap enables bit 4 of the PS and causes processor traps at the end of instruction executions. The instruction that is executed after the instruction that set the T-bit will proceed to completion and then cause a processor trap through the trap vector at address 14. Note that the trace trap is a system debugging aid and is transparent to the general programmer.

The following are special cases and are detailed in subsequent paragraphs.

1. The traced instruction cleared the T-bit.
2. The traced instruction set the T-bit.
3. The traced instruction caused an instruction trap.
4. The traced instruction caused a bus error trap.
5. The traced instruction caused a stack overflow trap.
6. The process was interrupted between the time the T-bit was set and the fetching of the instruction that was to be traced.
7. The traced instruction was a WAIT.
8. The traced instruction was a HALT.
9. The traced instruction was a Return from Trap

Note: The traced instruction is the instruction after the one that sets the T-bit.

An instruction that cleared the T-bit - Upon fetching the traced instruction an internal flag, the trace flag, was set. The trap will still occur at the end of execution of this instruction. The stacked status word, however, will have a clear T-bit.

An instruction that set the T-bit - Since the T-bit was already set, setting it again has no effect. The trap will occur.

An instruction that caused an Instruction Trap - The instruction trap is sprung and the entire routine for the service trap is executed. If the service routine exits with an RTI or in any other way restores the stacked status word, the T-bit is set again, the instruction following the traced instruction is executed and, unless it is one of the special cases noted above, a trace trap occurs.

An instruction that caused a Bus Error Trap This is treated as an Instruction Trap. The only difference is that the error service is not as likely to exit with an RTI, so that the trace trap may not occur.

An instruction that caused a stack overflow - The instruction completes execution as usual - the Stack Overflow does not cause a trap. The Trace Trap Vector is loaded into the PC and PS, and the old PC and PS are pushed onto the stack. Stack Overflow occurs again, and this time the trap is made.

An interrupt between setting of the T-bit and fetch of the traced instruction - The entire interrupt service routine is executed and then the T-bit is set again by the exiting RTI. The traced instruction is executed (if there have been no other interrupts) and, unless it is a special case noted above, causes a trace trap.

Note that interrupts may be acknowledged immediately after the loading of the new PC and PS at the trap vector location. To lock out all interrupts, the PS at the trap vector should raise the processor priority to level 7.

A WAIT - The trap occurs immediately.

A HALT - The processor halts. When the continue key on the console is pressed, the instruction following the HALT is fetched and executed. Unless it is one of the exceptions noted above, the trap occurs immediately following execution.

A Return from Trap - The return from trap instruction either clears or sets the T-bit. It inhibits the trace trap. If the T-bit was set and RTT is the traced instruction the trap is delayed until completion of the next instruction.

Power Failure Trap - is a standard PDP-11 feature. Trap occurs whenever the AC power drops below 95 volts or outside 47 to 63 Hertz. Two milliseconds are then allowed for power down processing. Trap vector for power failure is at locations 24 and 26.

Trap priorities - in case multiple processor trap conditions occur simultaneously the following order of priorities is observed (from high to low):

11/05 & 11/10
Odd Address
Timeout
Trap Instructions
Trace Trap
Power Failure

11/35 & 11/40
Odd Address
Fatal Stack Violation
Memory Management Violation
Timeout
Trap Instructions
Trace Trap
Warning Stack Violation
Power Failure


The details on the trace trap process have been described in the trace trap operational description which includes cases in which an instruction being traced causes a bus error, instruction trap, or a stack overflow trap.

If a bus error is caused by the trap process handling instruction traps, trace traps, stack overflow traps, or a previous bus error, the processor is halted.

If a stack overflow is caused by the trap process in handling bus errors, instruction traps, or trace traps, the process is completed and then the stack overflow trap is sprung.

4.7 MISCELLANEOUS

HALT

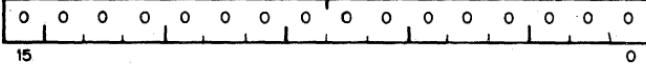halt	000000
	

Condition Codes: not affected


Description: Causes the processor operation to cease. The console is given control of the bus. The console data lights display the contents of R0; the console address lights display the address after the halt instruction. Transfers on the UNIBUS are terminated immediately. The PC points to the next instruction to be executed. Pressing the continue key on the console causes processor operation to resume. No INIT signal is given.

Note: A halt issued in User Mode will generate a trap.

WAIT

wait for interrupt

000001

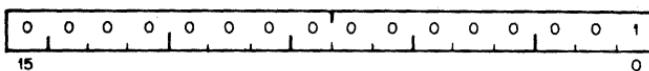


Condition Codes: not affected

Description: Provides a way for the processor to relinquish use of the bus while it waits for an external interrupt. Having been given a WAIT command, the processor will not compete for bus use by fetching instructions or operands from memory. This permits higher transfer rates between a device and memory, since no processor-induced latencies will be encountered by bus requests from the device. In WAIT, as in all instructions, the PC points to the next instruction following the WAIT operation. Thus when an interrupt causes the PC and PS to be pushed onto the processor stack, the address of the next instruction following the WAIT is saved. The exit from the interrupt routine (i.e. execution of an RTI instruction) will cause resumption of the interrupted process at the instruction following the WAIT.

RESET

reset external bus

000005

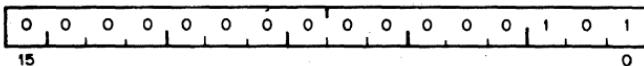

Condition Codes: not affected


Description: Sends INIT on the UNIBUS for 10 ms. All devices on the UNIBUS are reset to their state at power up.

Condition Code Operators

CLN	SEN
CLZ	SEZ
CLV	SEV
CLC	SEC
CCC	SCC

condition code operators


0002XX

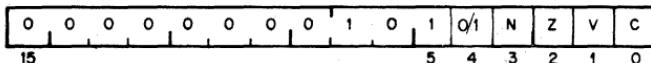

Description: Set and clear condition code bits. Selectable combinations of these bits may be cleared or set together. Condition code bits corresponding to bits in the condition code operator (Bits 0-3) are modified according to the sense of bit 4, the set/clear bit of the operator. i.e. set the bit specified by bit 0, 1, 2 or 3, if bit 4 is a 1. Clear corresponding bits if bit 4 = 0.

Mnemonic	Operation	OP Code
CLC	Clear C	000241
CLV	Clear V	000242
CLZ	Clear Z	000244
CLN	Clear N	000250
SEC	Set C	000261
SEV	Set V	000262
SEZ	Set Z	000264
SEN	Set N	000270
SCC	Set all CC's	000277
CCC	Clear all CC's	000257
	Clear V and C	000243
NOP	No Operation	000240

Combinations of the above set or clear operations may be ORed together to form combined instructions.

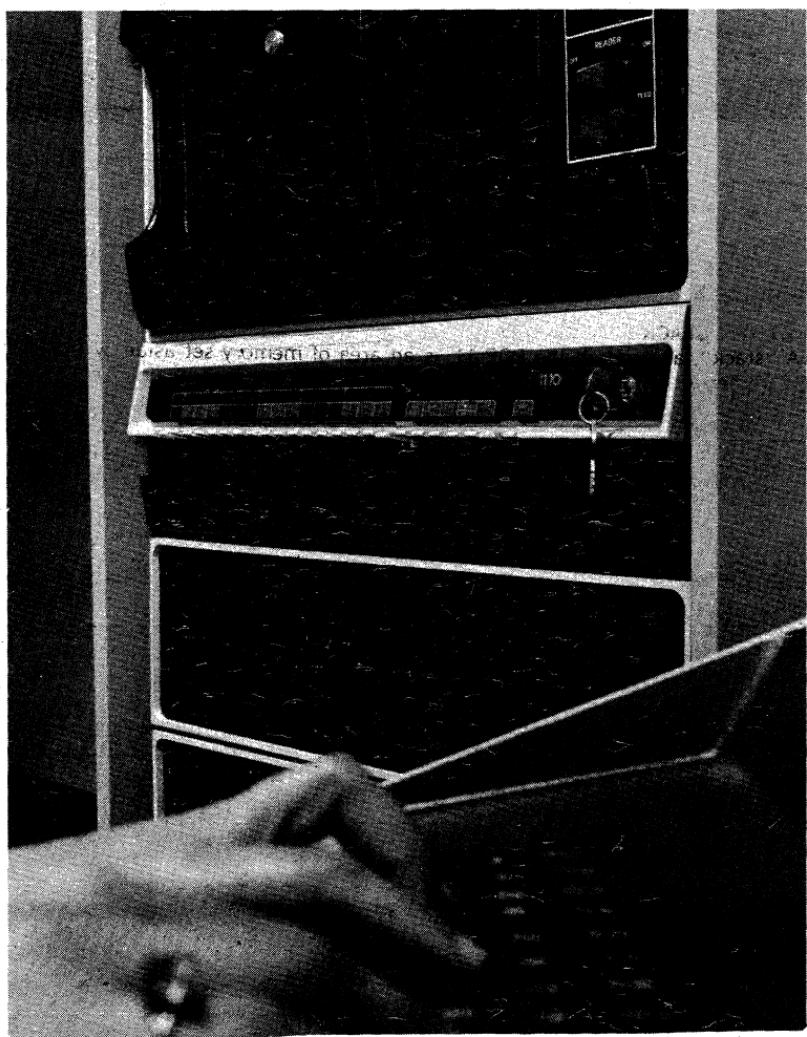

PROGRAMMING TECHNIQUES

In order to produce programs which fully utilize the power and flexibility of the PDP-11, the reader should become familiar with the various programming techniques which are part of the basic design philosophy of the PDP-11. Although it is possible to program the PDP-11 along traditional lines such as "accumulator orientation" this approach does not fully exploit the architecture and instruction set of the PDP-11.

5.1 THE STACK

A "stack", as used on the PDP-11, is an area of memory set aside by the programmer for temporary storage or subroutine/interrupt service linkage. The instructions which facilitate "stack" handling are useful features not normally found in low-cost computers. They allow a program to dynamically establish, modify, or delete a stack and items on it. The stack uses the "last-in, first-out" concept, that is, various items may be added to a stack in sequential order and retrieved or deleted from the stack in reverse order. On the PDP-11, a stack starts at the highest location reserved for it and expands linearly downward to the lowest address as items are added to the stack.

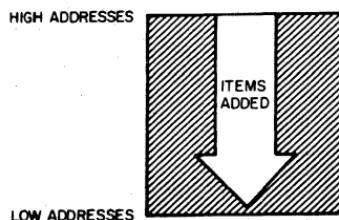


Figure 5-1: Stack Addresses

The programmer does not need to keep track of the actual locations his data is being stacked into. This is done automatically through a "stack pointer." To keep track of the last item added to the stack (or "where we are" in the stack) a General Register always contains the memory address where the last item is stored in the stack. In the PDP-11 any register except Register 7 (the Program Counter-PC) may be used as a "stack pointer" under program control; however, instructions associated with subroutine linkage and interrupt service automatically use Register 6 (R6) as a hardware "Stack Pointer." For this reason R6 is frequently referred to as the system "SP."

Stacks in the PDP-11 may be maintained in either full word or byte units. This is true for a stack pointed to by any register except R6, which must be organized in full word units only.

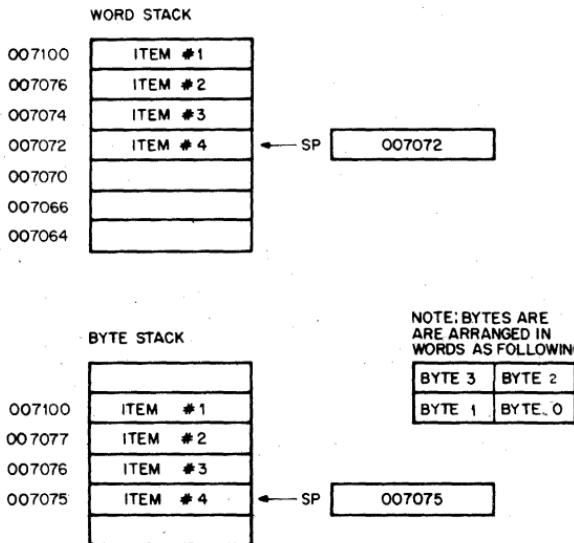


Figure 5-2: Word and Byte Stacks

Items are added to a stack using the autodecrement addressing mode with the appropriate pointer register. (See Chapter 3 for description of the autoincrement/decrement modes).

This operation is accomplished as follows;

MOV Source,-(SP) ;MOV Source Word onto the stack
or

MOVB Source,-(SP) ;MOVB Source Byte onto the stack

This is called a "push" because data is "pushed onto the stack."

To remove an item from stack the autoincrement addressing mode with the appropriate SP is employed. This is accomplished in the following manner:

MOV (SP) + ,Destination ;MOV Destination Word off the stack
or

MOVB (SP) + ,Destination ;MOVB Destination Byte off the stack

Removing an item from a stack is called a "pop" for "popping from the stack." After an item has been "popped," its stack location is considered free and available for other use. The stack pointer points to the last-used location implying that the next (lower) location is free. Thus a stack may represent a pool of shareable temporary storage locations.

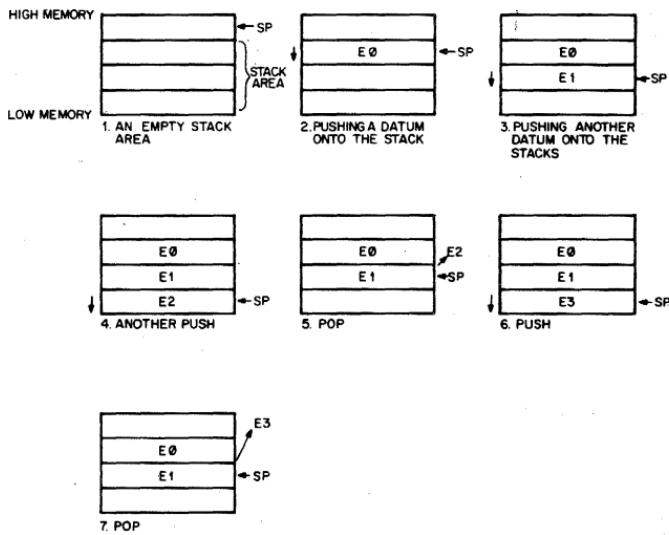


Figure 5-3: Illustration of Push and Pop Operations

As an example of stack usage consider this situation: a subroutine (SUBR) wants to use registers 1 and 2, but these registers must be returned to the calling program with their contents unchanged. The subroutine could be written as follows:

Address	Octal Code	Assembler Syntax
076322	010167	SUBR:
076324	000074	MOV R1,TEMP1 ;save R1
076326	010267	*
076330	000072	MOV R2,TEMP2 ;save R2
.	.	*
.	.	.
076410	016701	MOV TEMP1, R1 ;Restore R1
076412	000006	*
076414	016702	MOV TEMP2, R2 ;Restore R2
076416	000004	*
076420	000207	RTS PC
076422	000000	TEMP1: 0
076424	000000	TEMP2: 0

*Index Constants

Figure 5-4: Register Saving Without the Stack

OR: Using the Stack

Address	Octal Code	Assembler Syntax
010020	010143	SUBR:
010022	010243	MOV R1, -(R3) ;push R1
.	.	MOV R2, -(R3) ;push R2
.	.	.
010130	012301	MOV (R3) + , R2 ;pop R2
010132	012302	MOV (R3) + , R1 ;pop R1
010134	000207	RTS PC

Note: In this case R3 was used as a Stack Pointer

Figure 5-5: Register Saving using the Stack

The second routine uses four less words of instruction code and two words of temporary "stack" storage. Another routine could use the same stack space at some later point. Thus, the ability to share temporary storage in the form of a stack is a very economical way to save on memory usage.

As a further example of stack usage, consider the task of managing an input buffer from a terminal. As characters come in, the terminal user may wish to delete characters from his line; this is accomplished very easily by maintaining a byte stack containing the input characters. Whenever a backspace is received a character is "popped" off the stack and eliminated from consideration. In this example, a programmer has the choice of "popping" characters to be eliminated by using either the MOVB (MOVE BYTE) or INC (INCREMENT) instructions.

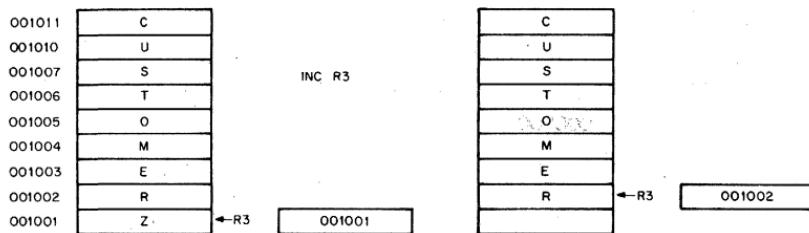


Figure 5-6: Byte Stack used as a Character Buffer

NOTE that in this case using the increment instruction (INC) is preferable to MOVB since it would accomplish the task of eliminating the unwanted character from the stack by readjusting the stack pointer without the need for a destination location. Also, the stack pointer (SP) used in this example cannot be the system stack pointer (R6) because R6 may only point to word (even) locations.

5.2 SUBROUTINE LINKAGE

5.2.1 Subroutine Calls

Subroutines provide a facility for maintaining a single copy of a given routine which can be used in a repetitive manner by other programs located anywhere else in memory. In order to provide this facility, generalized linkage methods must be established for the purpose of control transfer and information exchange between subroutines and calling programs. The PDP-11 instruction set contains several useful instructions for this purpose.

PDP-11 subroutines are called by using the JSR instruction which has the following format.

a general register (R) for linkage —————
 JSR R,SUBR
 an entry location (SUBR) for the subroutine —————

When a JSR is executed, the contents of the linkage register are saved on the system R6 stack as if a MOV reg,-(SP) had been performed. Then the same register is loaded with the memory address following the JSR instruction (the contents of the current PC) and a jump is made to the entry location specified.

Address	Assembler Syntax	Octal Code
001000	JSRR5,SUBR	004567
001002	index constant for SUBR	000060
001064	SUBR: MOV A,B	01nnmm

Figure 5-7: JSR using R5

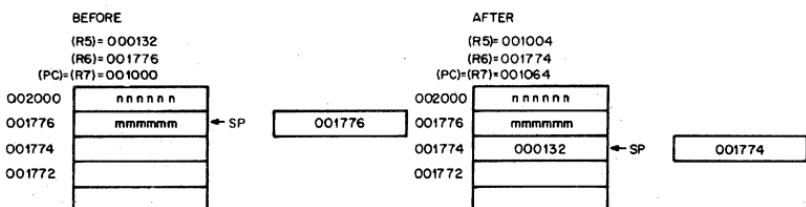


Figure 5-8: JSR

Note that the instruction JSR R6,SUBR is not normally considered to be a meaningful combination.

5.2.2 Argument Transmission

The memory location pointed to by the linkage register of the JSR instruction may contain arguments or addresses of arguments. These arguments may be accessed from the subroutine in several ways. Using Register 5 as the linkage register, the first argument could be obtained by using the addressing modes indicated by (R5), (R5)+, X(R5) for actual data, or @(R5)+, etc. for the address of data. If the autoincrement mode is used, the linkage register is automatically updated to point to the next argument.

Figures 5-9 and 5-10 illustrate two possible methods of argument transmission.

Address Instructions and Data

010400	JSR R5,SUBR	
010402	Index constant for SUBR	SUBROUTINE CALL
010404	arg #1	ARGUMENTS
010406	arg #2	
.	.	
.	.	
020306	SUBR: MOV (R5)+,R1	;get arg #1
020310	MOV (R5)+,R2	;get arg #2 Retrieve Arguments from SUB

Figure 5-9; Argument Transmission -Register Autoincrement Mode

Address	Instructions and Data	
010400	JSR R5,SUBR	
010402	index constant for SUBR	SUBROUTINE CALL
010404	077722	Address of Arg. #1
010406	077724	Address of Arg. #2
010410	077726	Address of Arg. #3
077722	Arg # 1	
077724	arg # 2	arguments
077726	arg # 3	
020306	SUBR:	MOV @(R5) + ,R1 ;get arg #1
020301		MOV @(R5) + ,R2 ;get arg #2

Figure 5-10: Argument Transmission-Register Autoincrement Deferred Mode

Another method of transmitting arguments is to transmit only the address of the first item by placing this address in a general purpose register. It is not necessary to have the actual argument list in the same general area as the subroutine call. Thus a subroutine can be called to work on data located anywhere in memory. In fact, in many cases, the operations performed by the subroutine can be applied directly to the data located on or pointed to by a stack without the need to ever actually move this data into the subroutine area.

Calling Program:	MOV	POINTER, R1
	JSR	PC,SUBR
SUBROUTINE	ADD	(R1) + ,(R1) ;Add item #1 to item #2, place result in item #2, R1 points to item #2 now
		etc.
		or
	ADD	(R1),2(R1) ;Same effect as above except that R1 still points to item #1 etc.

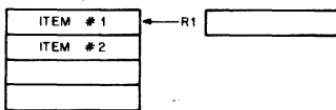


Figure 5-11: Transmitting Stacks as Arguments

Because the PDP-11 hardware already uses general purpose register R6 to point to a stack for saving and restoring PC and PS (processor status word) information, it is quite convenient to use this same stack to save and restore intermediate results and to transmit arguments to and from subroutines. Using R6 in this manner permits extreme flexibility in nesting subroutines and interrupt service routines.

Since arguments may be obtained from the stack by using some form of register indexed addressing, it is sometimes useful to save a temporary copy of R6 in some other register which has already been saved at the beginning of a subroutine. In the previous example R5 may be used to index the arguments while R6 is free to be incremented and decremented in the course of being used as a stack pointer. If R6 had been used directly as the base for indexing and not "copied", it might be difficult to keep track of the position in the argument list since the base of the stack would change with every autoincrement/decrement which occurs.

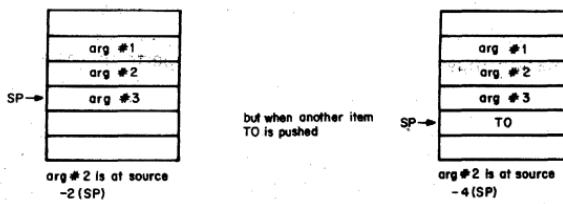


Figure 5-12: Shifting Indexed Base

However, if the contents of R6 (SP) are saved in R5 before any arguments are pushed onto the stack, the position relative to R5 would remain constant.



Figure 5-13: Constant Index Base Using "R6 Copy"

5.2.3 Subroutine Return

In order to provide for a return from a subroutine to the calling program an RTS instruction is executed by the subroutine. This instruction should specify the same register as the JSR used in the subroutine call. When executed, it causes the register specified to be moved to the PC and the top of the stack to be then placed in the register specified. Note that if an RTS PC is executed, it has the effect of returning to the address specified on the top of the stack.

Note that the JSR and the JMP Instructions differ in that a linkage register is always used with a JSR; there is no linkage register with a JMP and no way to return to the calling program.

When a subroutine finishes, it is necessary to "clean-up" the stack by eliminating or skipping over the subroutine arguments. One way this can be done is by insisting that the subroutine keep the number of arguments as its first stack item. Returns from subroutines would then involve calculating the amount by which to reset the stack pointer, resetting the stack pointer, then restoring the original contents of the register which was used as the copy of the stack pointer. The PDP-11/40, however, has a much faster and simpler method of performing these tasks. The MARK instruction which is stored on a stack in place of "number of argument" information may be used to automatically perform these "clean-up" chores.

5.2.4 PDP-11 Subroutine Advantages

There are several advantages to the PDP-11 subroutine calling procedure.

- a. arguments can be quickly passed between the calling program and the subroutine.
- b. if the user has no arguments or the arguments are in a general register or on the stack the JSR PC,DST mode can be used so that none of the general purpose registers are taken up for linkage.
- c. many JSR's can be executed without the need to provide any saving procedure for the linkage information since all linkage information is automatically pushed onto the stack in sequential order. Returns can simply be made by automatically popping this information from the stack in the opposite order of the JSR's.

Such linkage address bookkeeping is called automatic "nesting" of subroutine calls. This feature enables the programmer to construct fast, efficient linkages in a simple, flexible manner. It even permits a routine to call itself in those cases where this is meaningful. Other ramifications will appear after we examine the PDP-11 interrupt procedures.

5.3 INTERRUPTS

5.3.1 General Principles

Interrupts are in many respects very similar to subroutine calls. However, they are forced, rather than controlled, transfers of program execution occurring because of some external and program-independent event (such as a stroke on the teleprinter keyboard). Like subroutines, interrupts have linkage information such

that a return to the interrupted program can be made. More information is actually necessary for an interrupt transfer than a subroutine transfer because of the random nature of interrupts. The complete machine state of the program immediately prior to the occurrence of the interrupt must be preserved in order to return to the program without any noticeable effects. (i.e. was the previous operation zero or negative, etc.) This information is stored in the Processor Status Word (PS). Upon interrupt, the contents of the Program Counter (PC) (address of next instruction) and the PS are automatically pushed onto the R6 system stack. The effect is the same as if:

MOV PS ,-(SP)	; Push PS
MOV R7,-(SP)	; Push PC

had been executed.



The new contents of the PC and PS are loaded from two preassigned consecutive memory locations which are called an "interrupt vector". The actual locations are chosen by the device interface designer and are located in low memory addresses of Kernel virtual space (see interrupt vector list, Appendix B). The first word contains the interrupt service routine address (the address of the new program sequence) and the second word contains the new PS which will determine the machine status including the operational mode and register set to be used by the interrupt service routine. The contents of the interrupt service vector are set under program control.

After the interrupt service routine has been completed, an RTI (return from interrupt) is performed. The two top words of the stack are automatically "popped" and placed in the PC and PS respectively, thus resuming the interrupted program.


5.3.2 Nesting

Interrupts can be nested in much the same manner that subroutines are nested. In fact, it is possible to nest any arbitrary mixture of subroutines and interrupts without any confusion. By using the RTI and RTS instructions, respectively, the proper returns are automatic.


1. Process 0 is running;
SP is pointing to location P0.
2. Interrupt stops process 0
with PC = PC0, and
status = PS0 ;starts process 1.

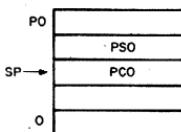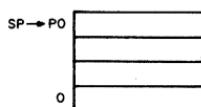


3. Process 1 uses stack for temporary storage (TE0, TE1).

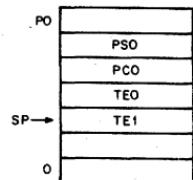


4. Process 1 interrupted with PC = PC1 and status = PS1; process 2 is started

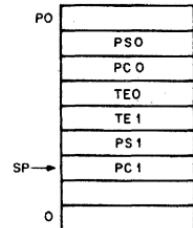


5. Process 2 is running and does a JSR R7,A to Subroutine A with PC = PC2.

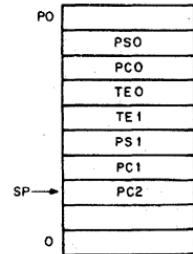


6. Subroutine A is running and uses stack for temporary storage.

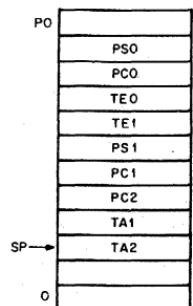


7. Subroutine A releases the temporary storage holding TA1 and TA2.

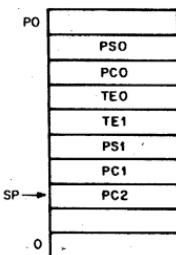


8. Subroutine A returns control to process 2 with an RTS R7, PC is reset to PC2.

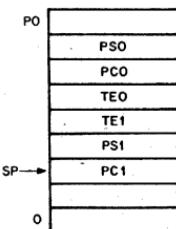

9. Process 2 completes with an RTI instruction (dismisses interrupt) PC is reset to PC(1) and status is reset to PS1; process 1 resumes.

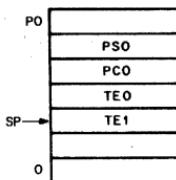

10. Process 1 releases the temporary storage holding TE0 and TE1.

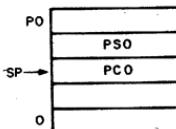

11. Process 1 completes its operation with an RTI PC is reset to PC0 and status is reset to PS0.

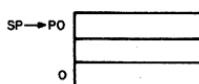



Figure 5-14: Nested Interrupt Service Routines and Subroutines

Note that the area of interrupt service programming is intimately involved with the concept of CPU and device priority levels.

5.4 REENTRANCY


Further advantages of stack organization become apparent in complex situations which can arise in program systems that are engaged in the concurrent handling of several tasks. Such multi-task program environments may range from relatively simple single-user applications which must manage an intermix of I/O interrupt service and background computation to large complex multi-programming systems which manage a very intricate mixture of executive and multi-user programming situations. In all these applications there is a need for flexibility and time/memory economy. The use of the stack provides this economy and flexibility by providing a method for allowing many tasks to use a single copy of the same routine and a simple, unambiguous method for keeping track of complex program linkages.

The ability to share a single copy of a given program among users or tasks is called reentrancy. Reentrant program routines differ from ordinary subroutines in that it is unnecessary for reentrant routines to finish processing a given task before they can be used by another task. Multiple tasks can be in various stages of completion in the same routine at any time. Thus the following situation may occur:

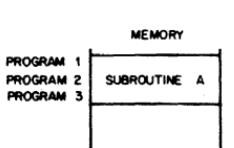

PDP-11 Approach

Programs 1, 2, and 3 can share Subroutine A.

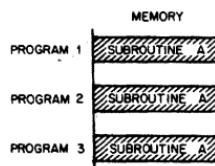

Conventional Approach

A separate copy of Subroutine A must be provided for each program.

Figure 5-15: Reentrant Routines

The chief programming distinction between a non-shareable routine and a reentrant routine is that the reentrant routine is composed solely of "pure code", i.e. it contains only instructions and constants. Thus, a section of program code is reentrant (shareable) if and only if it is "non self-modifying", that is it contains no information within it that is subject to modification.

Using reentrant routines, control of a given routine may be shared as illustrated in Figure 5-16.

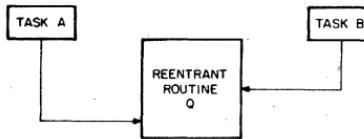


Figure 5-16: Reentrant Routine Sharing

1. Task A has requested processing by Reentrant Routine Q.
2. Task A temporarily relinquishes control (is interrupted) of Reentrant Routine Q before it finishes processing.
3. Task B starts processing in the same copy of Reentrant Routine Q.
4. Task B relinquishes control of Reentrant Routine Q at some point in its processing.
5. Task A regains control of Reentrant Routine Q and resumes processing from where it stopped.

The use of reentrant programming allows many tasks to share frequently used routines such as device interrupt service routines, ASCII-Binary conversion routines, etc. In fact, in a multi-user system it is possible for instance, to construct a reentrant FORTRAN compiler which can be used as a single copy by many user programs.

As an application of reentrant (shareable) code, consider a data processing program which is interrupted while executing a ASCII-to-Binary subroutine which has been written as a reentrant routine. The same conversion routine is used by the device service routine. When the device servicing is finished, a return from interrupt (RTI) is executed and execution for the processing program is then resumed where it left off inside the same ASCII-to-Binary subroutine.

Shareable routines generally result in great memory saving. It is the hardware implemented stack facility of the PDP-11 that makes shareable or reentrant routines reasonable.

A subroutine may be reentered by a new task before its completion by the previous task as long as the new execution does not destroy any linkage information or intermediate results which belong to the previous programs. This usually amounts to saving the contents of any general purpose registers, to be used and restoring them upon exit. The choice of whether to save and restore this information in the calling program or the subroutine is quite arbitrary and depends on the particular application. For example in controlled transfer situations (i.e. JSR's) a main program which calls a code-conversion utility might save the contents of registers which it needs and restore them after it has regained control, or the code conversion routine might save the contents of registers which it uses and restore them upon its completion. In the case of interrupt service routines this save/restore process must be carried out by the service routine itself since the interrupted program has no warning of an impending interrupt. The advantage of

using the stack to save and restore (i.e. "push" and "pop") this information is that it permits a program to isolate its instructions and data and thus maintain its reentrancy.

In the case of a reentrant program which is used in a multi-programming environment it is usually necessary to maintain a separate R6 stack for each user although each such stack would be shared by all the tasks of a given user. For example, if a reentrant FORTRAN compiler is to be shared between many users, each time the user is changed, R6 would be set to point to a new user's stack area as illustrated in Figure 5-17.

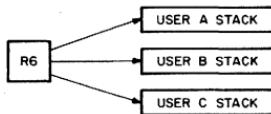


Figure 5-17: Multiple R6 Stack

5.5 POSITION INDEPENDENT CODE - PIC

Most programs are written with some direct references to specific addresses, if only as an offset from an absolute address origin. When it is desired to relocate these programs in memory, it is necessary to change the address references and/or the origin assignments. Such programs are constrained to a specific set of locations. However, the PDP-11 architecture permits programs to be constructed such that they are not constrained to specific locations. These Position Independent programs do not directly reference any absolute locations in memory. Instead all references are "PC-relative" i.e. locations are referenced in terms of offsets from the current location (offsets from the current value of the Program Counter (PC)). When such a program has been translated to machine code it will form a program module which can be loaded anywhere in memory as required.

Position Independent Code is exceedingly valuable for those utility routines which may be disk-resident and are subject to loading in a dynamically changing program environment. The supervisory program may load them anywhere it determines without the need for any relocation parameters since all items remain in the same positions relative to each other (and thus also to the PC).

Linkages to program routines which have been written in position independent code (PIC) must still be absolute in some manner. Since these routines can be located anywhere in memory there must be some fixed or readily locatable linkage addresses to facilitate access to these routines. This linkage address may be a simple pointer located at a fixed address or it may be a complex vector composed of numerous linkage information items.

5.6 CO-ROUTINES

In some situations it happens that two program routines are highly interactive. Using a special case of the JSR instruction i.e. JSR PC,@(R6) + which exchanges the top element of the Register 6 processor stack and the contents of the Program Counter (PC), two routines may be permitted to swap program control and resume operation where they stopped, when recalled. Such routines are called "co-routines". This control swapping is illustrated in Figure 5-18.


Routine #1 is operating, it then executes:

MOV #PC2,-(R6)

JSR PC,@(R6) +

with the following results:

- 1) PC2 is popped from the stack
and the SP autoincremented
- 2) SP is autodecremented and the
old PC (i.e. PC1) is pushed
- 3) control is transferred to the
location PC2 (i.e. routine #2)

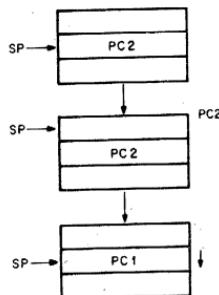

Routine #2 is operating, it then executes:

JSR PC ,@(R6) +

with the result the PC2 is exchanged
for PC1 on the stack and control is
transferred back to routine #1.

Figure 5-18 - Co-Routine Interaction

5.7 PROCESSOR TRAPS

There are a series of errors and programming conditions which will cause the Central Processor to trap to a set of fixed locations. These include Power Failure, Odd Addressing Errors, Stack Errors, Timeout Errors, Memory Parity Errors, Memory Management Violations, Floating Point Processor Exception Traps, Use of Reserved Instructions, Use of the T bit in the Processor Status Word, and use of the IOT, EMT, and TRAP instructions.

5.7.1 Power Failure

Whenever AC power drops below 95 volts for 115v power (190 volts for 230v) or outside a limit of 47 to 63 Hz, as measured by DC power, the power fail sequence is initiated. The Central Processor automatically traps to location 24 and the power fail program has 2 msec. to save all volatile information (data in registers), and condition peripherals for power fail.

When power is restored the processor traps to location 24 and executes the power up routine to restore the machine to its state prior to power failure.

5.7.2 Odd Addressing Errors

This error occurs whenever a program attempts to execute a word instruction on an odd address (in the middle of a word boundary). The instruction is aborted and the CPU traps through location 4.

5.7.3 Time-out Errors

These errors occur when a Master Synchronization pulse is placed on the UNIBUS and there is no slave pulse within a certain length of time. This error usually occurs in attempts to address non-existent memory or peripherals.

The offending instruction is aborted and the processor traps through location 4.

5.7.4 Reserved Instructions

There is a set of illegal and reserved instructions which cause the processor to trap through location 10.

5.7.5 Trap Handling

Appendix B includes a list of the reserved Trap Vector locations, and System Error Definitions which cause processor traps. When a trap occurs, the processor saves the PC and PS on the Processor Stack and begins to execute the trap routine pointed to by the trap vector.

CHAPTER 6

MEMORY MANAGEMENT (FOR THE 11/35 & 11/40)

6.1 GENERAL

6.1.1 Options

This chapter describes the Memory Management option, which mounts in the 11/35 or 11/40 Central Processor assembly unit. The option provides the hardware facilities necessary for complete memory management and protection. It is designed to be a memory management facility for systems where the memory size is greater than 28K words and for multi-user, multi-programming systems where protection and relocation facilities are necessary.

The Stack Limit option, which is included with the Memory Management option, is described at the end of the chapter. The Stack Limit option allows dynamic adjustment of the lower limit of permissible stack addresses.

The options are contained on individual modules that plug into dedicated prewired slots.

KT11-D Memory Management option

KJ11-A Stack Limit option

6.1.2 Programming

The Memory Management hardware has been optimized towards a multi-programming environment and the processor can operate in two modes, Kernel and User. When in Kernel mode, the program has complete control and can execute all instructions. Monitors and supervisory programs would be written in this mode.

When in User Code, the program is prevented from executing certain instructions that could:

- a) cause the modification of the Kernel program.
- b) halt the computer.
- c) use memory space assigned to the Kernel program.

In a multi-programming environment several user programs would be resident in memory at any given time. The task of the supervisory program would be: control the execution of the various user programs, manage the allocation of memory and peripheral device resources, and safeguard the integrity of the system as a whole by careful control of each user program.

In a multi-programming system, the Management Unit provides the means for assigning pages (relocatable memory segments) to a user program and preventing that user from making any unauthorized access to those pages outside his assigned area. Thus, a user can effectively be prevented from accidental or willful destruction of any other user program or the system executive program.

Hardware implemented features enable the operating system to dynamically allocate memory upon demand, while a program is being run. These features are particularly useful when running higher-level language programs, where, for example, arrays are constructed at execution time. No fixed space is reserved for them by the compiler. Lacking dynamic memory allocation capability, the program would have to calculate and allow sufficient memory space to accommodate the worst case. Memory Management eliminates this time-consuming and wasteful procedure.

6.1.3 Basic Addressing

The addresses generated by all PDP-11 Family Central Processor Units (CPUs) are 18-bit direct byte addresses. Although the PDP-11 Family word length and operational logic is all 16-bit length, the UNIBUS and CPU addressing logic actually is 18-bit length. Thus, while the PDP-11 word can only contain address references up to 32K words (64K bytes) the CPU and UNIBUS can reference addresses up to 128K words (256K bytes). These extra two bits of addressing logic provide the basic framework for expanding memory references.

In addition to the word length constraint on basic memory addressing space, the uppermost 4K words of address space is always reserved for UNIBUS I/O device registers. In a basic PDP-11 memory configuration (without Management) all address references to the uppermost 4K words of 16-bit address space (160000-177777) are converted to full 18-bit references with bits 17 and 16 always set to 1. Thus, a 16-bit reference to the I/O device register at address 173224 is automatically internally converted to a full 18-bit reference to the register at address 773224. Accordingly, the basic PDP-11 configuration can directly address up to 28K words of true memory, and 4K words of UNIBUS I/O device registers.

6.1.4 Active Page Registers

The Memory Management Unit uses two sets of eight 32-bit Active Page Registers. An APR is actually a pair of 16-bit registers: a Page Address Register (PAR) and a Page Descriptor Register (PDR). These registers are always used as a pair and contain all the information needed to describe and locate the currently active memory pages.

One set of APR's is used in Kernel mode, and the other in User mode. The choice of which set to be used is determined by the current CPU mode contained in the Processor Status word.

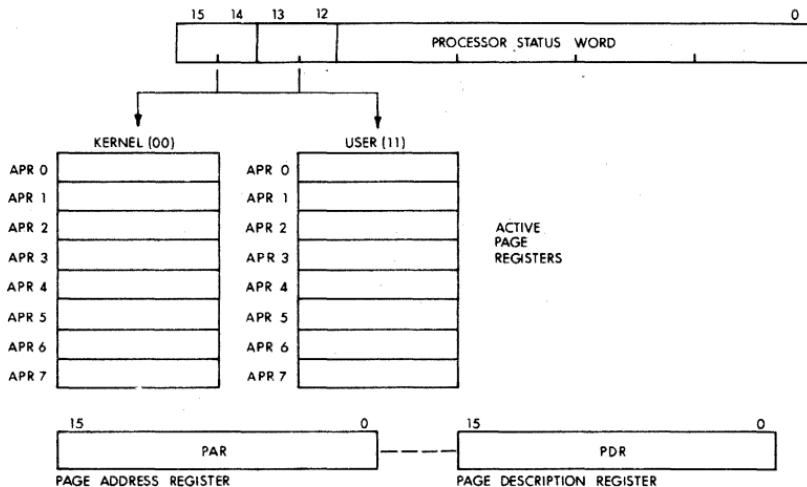


Figure 6-1 Active Page Registers

6.1.5 Capabilities Provided by Memory Management

Memory Size (words):	124K, max (plus 4K for I/O & registers)
Address Space:	Virtual (16 bits) Physical (18 bits)
Modes of Operation:	Kernel & User
Stack Pointers:	2 (one for each mode)
Memory Relocation:	
Number of Pages:	16 (8 for each mode)
Page Length:	32 to 4,096 words
Memory Protection:	no access read only read/write

6.2 RELOCATION

6.2.1 Virtual Addressing

When the Memory Management Unit is operating, the normal 16-bit direct byte address is no longer interpreted as a direct Physical Address (PA) but as a Virtual Address (VA) containing information to be used in constructing a new 18-bit physical address. The information contained in the Virtual Address (VA) is combined with relocation and description information contained in the Active Page Register (APR) to yield an 18-bit Physical Address (PA).

Because addresses are automatically relocated, the computer may be considered to be operating in virtual address space. This means that no matter where a program is loaded into physical memory, it will not have

to be "re-linked"; it always appears to be at the same virtual location in memory.

The virtual address space is divided into eight separate 4K-word pages. Each page is relocated separately. This is a useful feature in multi-programmed timesharing systems. It permits a new large program to be loaded into discontinuous blocks of physical memory.

A page may be as small as 32 words, so that short procedures or data areas need occupy only as much memory as required. This is a useful feature in real-time control systems that contain many separate small tasks. It is also a useful feature for stack and buffer control.

A basic function is to perform memory relocation and provide extended memory addressing capability for systems with more than 28K of physical memory. Two sets of page address registers are used to relocate virtual addresses to physical addresses in memory. These sets are used as hardware relocation registers that permit several user's programs, each starting at virtual address 0, to reside simultaneously in physical memory.

6.2.2 Program Relocation

The page address registers are used to determine the starting address of each relocated program in physical memory. Figure 6-2 shows a simplified example of the relocation concept.

Program A starting address 0 is relocated by a constant to provide physical address 6400₈.

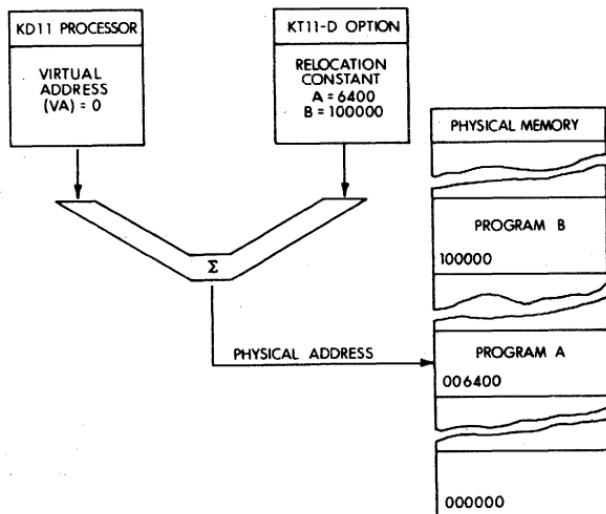


Figure 6-2 Simplified Memory Relocation Example

If the next processor virtual address is 2, the relocation constant will then cause physical address 6402₁₆, which is the second item of Program A, to be accessed. When Program B is running, the relocation constant is changed to 100000₁₆. Then, Program B virtual addresses starting at 0, are relocated to access physical addresses starting at 100000₁₆. Using the active page address registers to provide relocation eliminates the need to "re-link" a program each time it is loaded into a different physical memory location. The program always appears to start at the same address.

A program is relocated in pages consisting of from 1 to 128 blocks. Each block is 32 words in length. Thus, the maximum length of a page is 4096 (128 x 32) words. Using all of the eight available active page registers in a set, a maximum program length of 32,768 words can be accommodated. Each of the eight pages can be relocated anywhere in the physical memory, as long as each relocated page begins on a boundary that is a multiple of 32 words. However, for pages that are smaller than 4K words, only the memory actually allocated to the page may be accessed.

The relocation example shown in Figure 6-3 illustrates several points about memory relocation.

- Although the program appears to be in contiguous address space to the processor, the 32K-word virtual address space is actually scattered through several separate areas of physical memory. As long as the total available physical memory space is adequate, a program can be loaded. The physical memory space need not be contiguous.
- Pages may be relocated to higher or lower physical addresses, with respect to their virtual address ranges. In the example Figure 6-3, page 1 is relocated to a higher range of physical addresses, page 4 is relocated to a lower range, and page 3 is not relocated at all (even though its relocation constant is non-zero).
- All of the pages shown in the example start on 32-word boundaries.
- Each page is relocated independently. There is no reason why two or more pages could not be relocated to the same physical memory space. Using more than one page address register in the set to access the same space would be one way of providing different memory access rights to the same data, depending upon which part of a program was referencing that data.

Memory Units

Block:	32 words
Page:	1 to 128 blocks (32 to 4,096 words)
No. of pages:	8 per mode
Size of relocatable memory:	32,768 words, max (8 x 4,096)

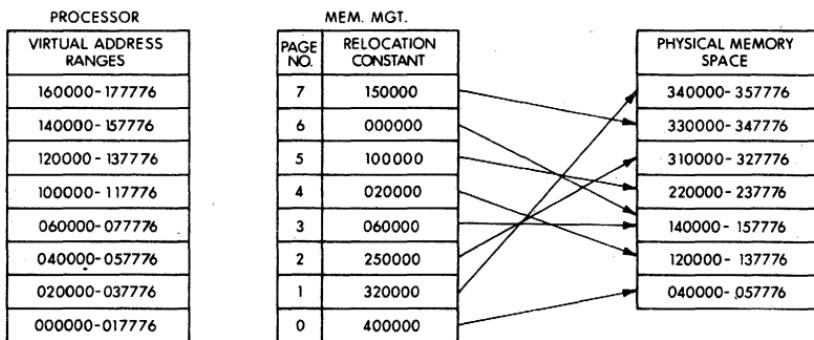


Figure 6-3 Relocation of a 32K Word Program into 124K Word Physical Memory

6.3 PROTECTION

A timesharing system performs multiprogramming; it allows several programs to reside in memory simultaneously, and to operate sequentially. Access to these programs, and the memory space they occupy, must be strictly defined and controlled. Several types of memory protection must be afforded a timesharing system. For example:

- User programs must not be allowed to expand beyond allocated space, unless authorized by the system.
- User must be prevented from modifying common subroutines and algorithms that are resident for all users.
- Users must be prevented from gaining control of or modifying the operating system software.

The Memory Management option provides the hardware facilities to implement all of the above types of memory protection.

6.3.1 Inaccessible Memory

Each page has a 2-bit access control key associated with it. The key is assigned under program control. When the key is set to 0, the page is defined as non-resident. Any attempt by a user program to access a non-resident page is prevented by an immediate abort. Using this feature to provide memory protection, only those pages associated with the current program are set to legal access keys. The access control keys of all other program pages are set to 0, which prevents illegal memory references.

6.3.2 Read-Only Memory

The access control key for a page can be set to 2, which allows read (fetch) memory references to the page, but immediately aborts any attempt to write into that page. This read-only type of memory protection

can be afforded to pages that contain common data, subroutines, or shared algorithms. This type of memory protection allows the access rights to a given information module to be user-dependent. That is, the access right to a given information module may be varied for different users by altering the access control key.

A page address register in each of the sets (Kernel and User modes) may be set up to reference the same physical page in memory and each may be keyed for different access rights. For example, the User access control key might be 2 (read-only access), and the Kernel access control key might be 6 (allowing complete read/write access).

6.3.3 Multiple Address Space

There are two complete separate PAR/PDR sets provided: one set for Kernel mode and one set for User mode. This affords the timesharing system with another type of memory protection capability. The mode of operation is specified by the Processor Status Word current mode field, or previous mode field, as determined by the current instruction.

Assuming the current mode PS bits are valid, the active page register sets are enabled as follows:

PS(bits15, 14)	PAR/PDR Set Enabled
00	Kernel mode
01	
10	} Illegal (all references aborted on access)
11	User mode

Thus, a User mode program is relocated by its own PAR/PDR set, as are Kernel programs. This makes it impossible for a program running in one mode to accidentally reference space allocated to another mode when the active page registers are set correctly. For example, a user cannot transfer to Kernel space. The Kernel mode address space may be reserved for resident system monitor functions, such as the basic Input/Output Control routines, memory management trap handlers, and time-sharing scheduling modules. By dividing the types of timesharing system programs functionally between the Kernel and User modes, a minimum amount of space control housekeeping is required as the timeshared operating system sequences from one user program to the next. For example, only the User PAR/PDR set needs to be updated as each new user program is serviced. The two PAR/PDR sets implemented in the Memory Management Unit option are shown in Figure 6.1.

6.4 ACTIVE PAGE REGISTERS

The Memory Management Unit provides two sets of eight Active Page Registers (APR). Each APR consists of a Page Address Register (PAR) and a Page Descriptor Register (PDR). These registers are always used as a pair and contain all the information required to locate and describe the current active pages for each mode of operation. One PAR/PDR set is used in Kernel mode and the other is used in User mode. The current mode bits (or in some cases, the previous mode bits) of the Processor Status Word determine which set will be referenced for each memory access. A program operating in one mode cannot use the PAR/PDR sets of the other mode to access memory. Thus, the two sets are

a key feature in providing a fully protected environment for a time-shared multi-programming system.

A specific processor I/O address is assigned to each PAR and PDR of each set. Table 6-1 is a complete list of address assignment.

NOTE

UNIBUS devices cannot access PARs or PDRs

In a fully-protected multi-programming environment, the implication is that only a program operating in the Kernel mode would be allowed to write into the PAR and PDR locations for the purpose of mapping user's programs. However, there are no restraints imposed by the logic that will prevent User mode programs from writing into these registers. The option of implementing such a feature in the operating system, and thus explicitly protecting these locations from user's programs, is available to the system software designer.

Table 6-1 PAR/PDR Address Assignments

Kernel Active Page Registers			User Active Page Registers		
No.	PAR	PDR	No.	PAR	PDR
0	772340	772300	0	777640	777600
1	772342	772302	1	777642	777602
2	772344	772304	2	777644	777604
3	772346	772306	3	777646	777606
4	772350	772310	4	777650	777610
5	772352	772312	5	777652	777612
6	772354	772314	6	777654	777614
7	772356	772316	7	777656	777616

6.4.1 Page Address Registers (PAR)

The Page Address Register (PAR), shown in Figure 6-4, contains the 12-bit Page Address Field (PAF) that specifies the base address of the page.

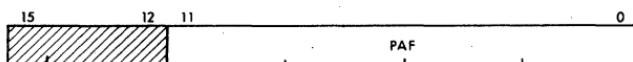


Figure 6-4 Page Address Register

Bits 15-12 are unused and reserved for possible future use.

The Page Address Register may be alternatively thought of as a relocation constant, or as a base register containing a base address. Either interpretation indicates the basic function of the Page Address Register (PAR) in the relocation scheme.

6.4.2 Page Descriptor Registers (PDR)

The Page Descriptor Register (PDR), shown in Figure 6-5, contains information relative to page expansion, page length, and access control.

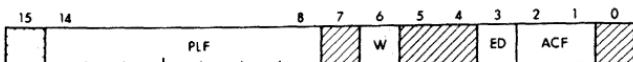


Figure 6-5 Page Descriptor Register

Access Control Field (ACF)

This 2-bit field, bits 2 and 1, of the PDR describes the access rights to this particular page. The access codes or "keys" specify the manner in which a page may be accessed and whether or not a given access should result in an abort of the current operation. A memory reference that causes an abort is not completed and is terminated immediately.

Aborts are caused by attempts to access non-resident pages, page length errors, or access violations, such as attempting to write into a read-only page. Traps are used as an aid in gathering memory management information.

In the context of access control, the term "write" is used to indicate the action of any instruction which modifies the contents of any addressable word. A "write" is synonymous with what is usually called a "store" or "modify" in many computer systems. Table 6-2 lists the ACF keys and their functions. The ACF is written into the PDR under program control.


Table 6-2 Access Control Field Keys

AFC	Key	Description	Function
00	0	Non-resident	Abort any attempt to access this non-resident page
01	2	Resident read-only	Abort any attempt to write into this page.
10	4	(unused)	Abort all Accesses.
11	6	Resident read/ write	Read or Write allowed. No trap or abort occurs.

Expansion Direction (ED)

The ED bit located in PDR bit position 3 indicates the authorized direction in which the page can expand. A logic 0 in this bit ($ED = 0$) indicates the page can expand upward from relative zero. A logic 1 in this bit ($ED = 1$) indicates the page can expand downward toward relative zero. The ED bit is written into the PDR under program control. When the expansion direction is upward ($ED = 0$), the page length is increased by adding blocks with higher relative addresses. Upward expansion is usually specified for program or data pages to add more program or table space. An example of page expansion upward is shown in Figure 6-6.

When the expansion direction is downward ($ED = 1$), the page length is increased by adding blocks with lower relative addresses. Downward expansion is specified for stack pages so that more stack space can be added. An example of page expansion downward is shown in Figure 6-7.

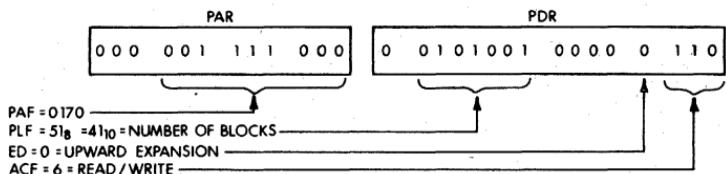

NOTE:

To specify a block length of 42 for an upward expandable page, write highest authorized block no. directly into high byte of PDR. Bit 15 is not used because the highest allowable block number is 177_8 .

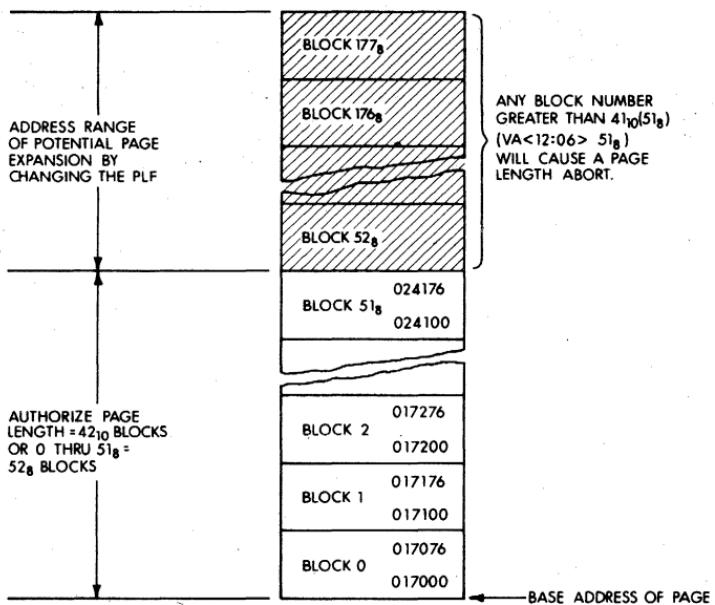


Figure 6-6 Example of an Upward Expandable Page

Written Into (W)

The W bit located in PDR bit position 6 indicates whether the page has been written into since it was loaded into memory. $W = 1$ is affirmative. The W bit is automatically cleared when the PAR or PDR of that page is written into. It can only be set by the control logic.

In disk swapping and memory overlay applications, the W bit (bit 6) can be used to determine which pages in memory have been modified by a user. Those that have been written into must be saved in their current form. Those that have not been written into ($W = 0$), need not be saved and can be overlaid with new pages, if necessary.

Page Length Field (PLF)

The 7-bit PLF located in PDR (bits 14-8)* specifies the authorized length of the page, in 32-word blocks. The PLF holds block numbers from 0 to 177_8 ; thus allowing any page length from 1 to 128_{10} blocks. The PLF is written in the PDR under program control.

PLF for an Upward Expandable Page

When the page expands upward, the PLF must be set to one less than the intended number of blocks authorized for that page. For example, if 52_8 (42_{10}) blocks are authorized, the PLF is set to 51_8 (41_{10}) (Figure 6-6). The KT11-D hardware compares the virtual address block number, VA (bits 12-6) with the PLF to determine if the virtual address is within the authorized page length.

When the virtual address block number is less than or equal to the PLF, the virtual address is within the authorized page length. If the virtual address is greater than the PLF, a page length fault (address too high) is detected by the hardware and an abort occurs. In this case, the virtual address space legal to the program is non-contiguous because the three most significant bits of the virtual address are used to select the PAR/PDR set.


PLF for a Downward Expandable Page

The capability of providing downward expansion for a page is intended specifically for those pages that are to be used as stacks. In the PDP-11, a stack starts at the highest location reserved for it and expands downward toward the lowest address as items are added to the stack.

When the page is to be downward expandable, the PLF must be set to authorize a page length, in blocks, that starts at the highest address of the page. That is always Block 177_8 . Refer to Figure 6-7, which shows an example of a downward expandable page. A page length of 42_{10} blocks is arbitrarily chosen so that the example can be compared with the upward expandable example shown in Figure 6-6.

NOTE

The same PAF is used in both examples. This is done to emphasize that the PAF, as the base address, always determines the lowest address of the page, whether it is upward or downward expandable.

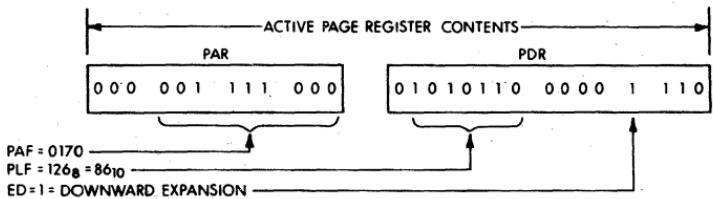

To specify page length for a downward expandable page, write complement of blocks required into high byte of PDR.

In this example, a 42-block page is required.
PLF is derived as follows:

$$42_{10} = 52_8; \text{ two's complement} = 126_8.$$

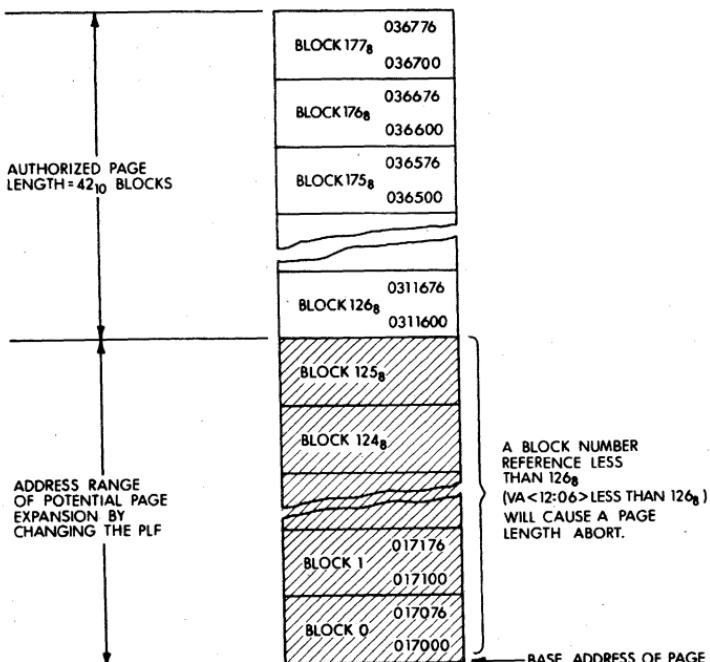


Figure 6-7 Example of a Downward Expandable Page

The calculations for complementing the number of blocks required to obtain the PLF is as follows:

MAXIMUM BLOCK NO.	MINUS	REQUIRED LENGTH	EQUALS	PLF
177_8	-	52_8	=	125_8
127_{10}	-	42_{10}	=	85_{10}

6.5 VIRTUAL & PHYSICAL ADDRESSES

The Memory Management Unit is located between the Central Processor Unit and the UNIBUS address lines. Once installed, the Processor ceases to supply address information to the Unibus. Instead, addresses are sent to the Memory Management Unit where they are either transferred without change or relocated by various constants computed within the Memory Management Unit.

6.5.1 Construction of a Physical Address

The basic information needed for the construction of a Physical Address (PA) comes from the Virtual Address (VA), which is illustrated in Figure 6-8, and the appropriate APR set.

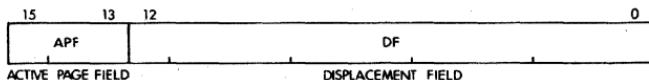


Figure 6-8 Interpretation of a Virtual Address

The Virtual Address (VA) consists of:

1. The Active Page Field (APF). This 3-bit field determines which of eight Active Page Registers (APR0-APR7) will be used to form the Physical Address (PA).
2. The Displacement Field (DF). This 13-bit field contains an address relative to the beginning of a page. This permits page lengths up to 4K words ($2^{13} = 8K$ bytes). The DF is further subdivided into two fields as shown in Figure 6-3.

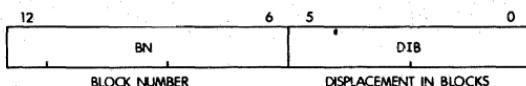


Figure 6-9 Displacement Field of Virtual Address

The Displacement Field (DF) consists of:

1. The Block Number (BN). This 7-bit field is interpreted as the block number within the current page.
2. The Displacement in Block (DIB). This 6-bit field contains the displacement within the block referred to by the Block Number.

The remainder of the information needed to construct the Physical Address comes from the 12-bit Page Address Field (PAF) (part of the Active Page Register) and specifies the starting address of the memory which that APR describes. The PAF is actually a block number in the physical memory, e.g. PAF = 3 indicates a starting address of 96, ($3 \times 32 = 96$) words in physical memory.

The formation of a physical address takes 150 ns.

The formation of the Physical Address is illustrated in Figure 6-10.

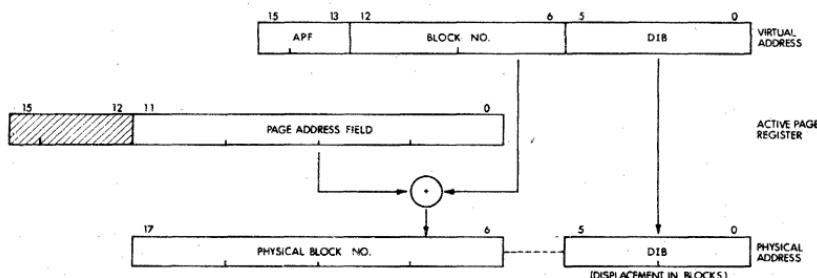


Figure 6-10 Construction of a Physical Address

The logical sequence involved in constructing a Physical Address is as follows:

1. Select a set of Active Page Registers depending on current mode.
2. The Active Page Field of the Virtual Address is used to select an Active Page Register (APR0-APR7).
3. The Page Address Field of the selected Active Page Register contains the starting address of the currently active page as a block number in physical memory.
4. The Block Number from the Virtual Address is added to the block number from the Page Address Field to yield the number of the block in physical memory which will contain the Physical Address being constructed.
5. The Displacement in Block from the Displacement Field of the Virtual Address is joined to the Physical Block Number to yield a true 18-bit Physical Address.

6.5.2 Determining the Program Physical Address

A 16-bit virtual address can specify up to 32K words, in the range from 0 to 177776_8 (word boundaries are even octal numbers). The three most significant virtual address bits designate the PAR/PDR set to be referenced during page address relocation. Table 6-3 lists the virtual address ranges that specify each of the PAR/PDR sets.

Table 6-3 Relating Virtual Address to PAR/PDR Set

Virtual Address Range	PAR/PDR Set
000000-17776	0
020000-37776	1
040000-57776	2
060000-77776	3
100000-117776	4
120000-137776	5
140000-157776	6
160000-177776	7

NOTE

Any use of page lengths less than 4K words causes holes to be left in the virtual address space.

6.6 STATUS REGISTERS

Aborts generated by the hardware are vectored through Kernel virtual location 250. Status Registers #0 and #2 (#1 is used by the PDP-11/45) are used to determine why the abort occurred. Note that an abort to a location which is itself an invalid address will cause another abort. Thus the Kernel program must insure that Kernel Virtual Address 10 is mapped into a valid address, otherwise a loop will occur which will require console intervention.

6.6.1 Status Register 0 (SRO)

SRO contains abort error flags, memory management enable, plus other essential information required by an operating system to recover from an abort or service a memory management trap. The SRO format is shown in Figure 6-11. Its address is 777 572.

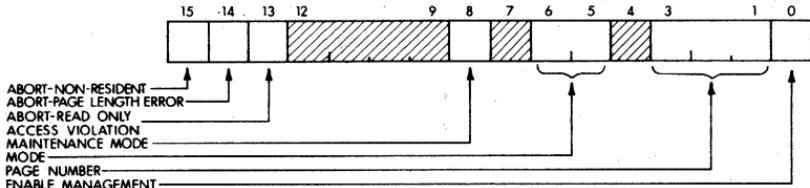


Figure 6-11 Format of Status Register #0 (SRO)

Bits 15-13 are the abort flags. They may be considered to be in a "priority queue" in that "flags to the right" are less significant and should be ignored. For example, a "non-resident" abort service routine would ignore page length and access control flags. A "page length" abort service routine would ignore an access control fault.

NOTE

Bit 15, 14, or 13, when set (abort conditions) cause the logic to freeze the contents of SRO bits 1 to 6 and status register SR2. This is done to facilitate recovery from the abort.

Bits 15-13 are enabled when an address is being relocated. This implies that either SRO, bit 0 is equal to 1 (KT11-D operating) or that SRO, bit 8, is equal to 1 and the memory reference is the final one of a destination calculation (maintenance/destination mode).

Note that SRO bits 0 and 8 can be set under program control to provide meaningful memory management control information. However, information written into all other bits is not meaningful. Only that information which is automatically written into these remaining bits as a result of hardware actions is useful as a monitor of the status of the memory management unit. Setting bits 15-13 under program control will not cause traps to occur. These bits, however, must be reset to 0 after an abort or trap has occurred in order to resume monitoring memory management.

Abort-Nonresident

Bit 15 is the "Abort-Nonresident" bit. It is set by attempting to access a page with an access control field (ACF) key equal to 0 or 4 and setting PS (bits 15, 14) to an illegal mode.

Abort—Page Length

Bit 14 is the "Abort-Page Length" bit. It is set by attempting to access a location in a page with a block number (virtual address bits 12-6) that is outside the area authorized by the Page Length Field (PFL) of the PDR for that page.

Abort-Read Only

Bit 13 is the "Abort-Read Only" bit. It is set by attempting to write in a "Read-Only" page having an access key of 2.

NOTE

There are no restrictions that any abort bits could not be set simultaneously by the same access attempt.

Maintenance/Destination Mode

Bit 8 specifies maintenance use of the Memory Management Unit. It is used for diagnostic purposes. For the instructions used in the initial diagnostic program, bit 8 is set so that only the final destination reference is relocated. It is useful to prove the capability of relocating addresses.

Mode of Operation

Bits 5 and 6 indicate the CPU mode (User or Kernel) associated with the page causing the abort. (Kernel = 00, User = 11). These bits are controlled by the logic that decodes current and previous mode bits of the PS.

Page Number

Bits 3-1 contain the page number of reference. Pages, like blocks, are numbered from 0 upwards. The page number bit is used by the error recovery routine to identify the page being accessed if an abort occurs.

Enable KT11-D

Bit 0 is the "Enable KT11-D" bit. When it is set to 1, all addresses are

relocated and protected by the memory management unit. When bit 0 is set to 0, the memory management unit is disabled and addresses are neither relocated nor protected.

6.6.2 Status Register 2 (SR2)

SR2 is loaded with the 16-bit Virtual Address (VA) at the beginning of each instruction fetch but is not updated if the instruction fetch fails. SR2 is read only; a write attempt will not modify its contents. SR2 is the Virtual Address Program Counter. Upon an abort, the result of SR bits 15, 14, or 13 being set, will freeze SR2 until the SR abort flags are cleared. The address of SR2 is 777 576.

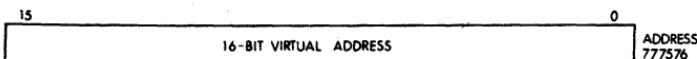


Figure 6-12 Format of Status Register 2(SR2)

6.7 INSTRUCTIONS

Memory Management provides the ability to communicate between two spaces, as determined by the current and previous modes of the Processor Status word (PS).

Mnemonic	Instruction	Op Code
MFPI	move from previous instruction space	0065SS
MTPI	move to previous instruction space	0066DD

These instructions are directly compatible with the larger 11 computer, the PDP-11/45.

MFPI

move from previous instruction space

0065SS

15	6	5	0
0 0 0 0 1 1 0 1	s s s	s s s	

Operation: $(temp) \leftarrow (src)$
 $\downarrow (SP) \leftarrow (temp)$

Condition Codes: N: set if the source < 0 ; otherwise cleared
 Z: set if the source $= 0$; otherwise cleared
 V: cleared
 C: unaffected

Description: This instruction pushes a word onto the current stack from an address in previous space, Processor Status (bits 13, 12). The source address is computed using the current registers and memory map.

Example: MFPI @ (R2) R2 = 1000
 1000 = 37526

The execution of this instruction causes the contents of (relative) 37526 of the previous address space to be pushed onto the current stack as determined by the PS (bits 15, 14).

MTPI

move to previous instruction space

0066DD

15	0	0	0	0	1	1	0	1	1	0	6	5	0
	d	d	d	d	d	d	d	d	d	d			

Operation: (temp) \leftarrow (SP) \uparrow
(dst) \leftarrow (temp)

Condition Codes: N: set if the source <0 ; otherwise cleared
Z: set if the source $=0$; otherwise cleared
V: cleared
C: unaffected

Description: This instruction pops a word off the current stack determined by PS (bits 15, 14) and stores that word into an address in previous space PS (bits 13, 12). The destination address is computed using the current registers and memory map. An example is as follows:

Example: MTPI @ (R2) R2 = 1000
 1000 = 37526

The execution of this instruction causes the top word of the current stack to get stored into the (relative) 37526 of the previous address space.

MTPI AND MFPI, MODE 0, REGISTER 6 ARE UNIQUE IN THAT THESE INSTRUCTIONS ENABLE COMMUNICATIONS TO AND FROM THE PREVIOUS USER STACK.

; MFPI, MODE 0, NOT REGISTER 6

```
MOV #KM+PUM, PSW      ; KMODE, PREV USER
MOV #-1, -2(6)         ; MOVE -1 on kernel stack -2
CLR %0
INC @#SRO             ; ENABLE KT
MFPI %0               ; -(KSP)←R0 CONTENTS
```

The -1 in the kernel stack is now replaced by the contents of R0 which is 0.

; MFPI, MODE 0, REGISTER 6

```
MOV #UM+PUM, PSW      ; SET R16=0
CLR %6
MOV #KM+PUM, PSW      ; K MODE, PREV USER
MOV #-1, -2 (6)
INC @#SRO             ; ENABLE KT
MFPI %6               ; -(KSP)←R16 CONTENTS
```

The -1 in the kernel stack is now replaced by the contents of R16 (user stack pointer which is 0).

To obtain info from the user stack if the status is set to kernel mode, prev user, two steps are needed.

```
MFPI %6                ; get contents of R16=user pointer
MFPI @(6)+              ; get user pointer from kernel stack
                        ; use address obtained to get data
                        ; from user mode using the prev
                        ; mode
```

The desired data from the user stack is now in the kernel stack and has replaced the user stack address.

; MTPI, MODE 0 NOT REGISTER 6

```
MOV # KM+PUM, PSW ; KERNEL MODE, PREV USES
MOV # TAGX, (6) ; PUT NEW PC ON STACK
INC @# SRO ; ENABLE KT
MTPI %7 ; %7 ← (6)+
HLT ; ERROR
TA6X: CLR @# SRO ; DISABLE KT
```

The new PC is popped off the current stack and since this is mode 0 and not register 6 the destination is register 7.

; MTPI, MODE 0, REGISTER 6

```
MOV # UM+PUM, PSW ; user mode, Prev User
CLR %6 ; set user SP=0 (R16)
MOV # KM+PUM, PSW ; Kernel mode, prev user
MOV #-1, -(6) ; MOVE -1 into K stack (R6)
INC @# SRO ; Enable KT
MTPI %6 ; %16 ←(6)+
```

The 0 in R16 is now replaced with -1 from the contents of the kernel stack.

To place info on the user stack if the status is set to kernel mode, prev user mode, 3 separate steps are needed.

```
MFPI %6 ; Get content of R16=user pointer
MOV # DATA, -(6) ; put data on current stack
MTPI @(6)+ ; @(6)+ [final address relocated]←(R6)+
```

The data desired is obtained from the kernel stack then the destination address is obtained from the kernel stack and relocated through the previous mode.

Mode Description

In Kernel mode the operating program has unrestricted use of the machine. The program can map users' programs anywhere in core and thus explicitly protect key areas (including the device registers and the Processor Status word) from the User operating environment.

In User mode a program is inhibited from executing a HALT instruction and the processor will trap through location 10 if an attempt is made to execute this instruction. A RESET instruction results in execution of a NOP (no-operation) instruction.

There are two stacks called the Kernel Stack and the User Stack, used by the central processor when operating in either the Kernel or User mode, respectively.

Stack Limit violations are disabled in User mode. Stack protection is provided by memory protect features.

Interrupt Conditions

The Memory Management Unit relocates all addresses: Thus, when Management is enabled, all trap, abort, and interrupt vectors are considered to be in Kernel mode Virtual Address Space. When a vectored transfer occurs, control is transferred according to a new Program Counter (PC) and Processor Status Word (PS) contained in a two-word vector relocated through the Kernel Active Page Register Set.

When a trap, abort, or interrupt occurs the "push" of the old PC, old PS is to the User/Kernel R6 stack specified by CPU mode bits 15, 14 of the new PS in the vector (00 = Kernel, 11 = User). The CPU mode bits also determine the new APR set. In this manner it is possible for a Kernel mode program to have complete control over service assignments for all interrupt conditions, since the interrupt vector is located in Kernel space. The Kernel program may assign the service of some of these conditions to a User mode program by simply setting the CPU mode bits of the new PS in the vector to return control to the appropriate mode.

User Processor Status (PS) operates as follows:

PS Bits	User RTI, RTT	User Traps, Interrupts	Explicit PS Access
Cond. Codes (3-0)	loaded from stack	loaded from vector	*
Trap (4)	loaded from stack	loaded from vector	cannot be changed
Priority (7-5)	cannot be changed	loaded from vector	*
Previous (13-12)	cannot be changed	copied from PS (15, 14)	*
Current (15-14)	cannot be changed	loaded from vector	*


* Explicit operations can be made if the Processor Status is mapped in User space.

6.8 STACK LIMIT OPTION

This option allows program control of the lower limit for permissible stack addresses. This limit may be varied in increments of $(400)_8$ bytes or $(200)_8$ words, up to a maximum address of 177 400 (almost the top of a 32K memory).

The normal boundary for stack addresses is 400. The Stack Limit option allows this lower limit to be raised, providing more address space for interrupt vectors or other data that should not be destroyed by the program.

There is a Stack Limit Register, with the following format:

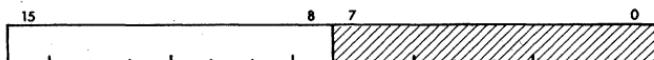

The Stack Limit Register can be addressed as a word at location 777774, or as a byte at location 777775. The register is accessible to the processor and console, but not to any bus device.

The 8 bits, 15 through 8, contain the stack limit information. These bits are cleared by System Reset, Console Start, or the RESET instruction. The lower 8 bits are not used. Bit 8 corresponds to a value of $(400)_8$ or $(256)_{10}$.

Stack Limit Violations

When instructions cause a stack address to exceed (go slower than) a limit set by the programmable Stack Limit Register, a Stack Violation occurs. There is a Yellow Zone (grace area) of 16 words below the Stack Limit which provides a warning to the program so that corrective steps can be taken. Operations that cause a Yellow Zone Violation are completed, then a bus error trap is effected. The error trap, which itself uses the stack, executes without causing an additional violation, unless the stack has entered the Red Zone.

A Red Zone Violation is a Fatal Stack Error. (Odd stack or non-existent stack are the other Fatal Stack Errors.) When detected, the operation causing the error is aborted, the stack is repositioned to address 4, and a bus error occurs. The old PC and PS are pushed into location 0 and 2, and the new PC and PS are taken from locations 4 and 6.

Stack Limit Addresses

The contents of the Stack Limit Register (SL) are compared to the stack address to determine if a violation has occurred. The least significant bit of the register (bit 8) has a value of $(400)_8$. The determination of the violation zones is as follows:


Yellow Zone = $(SL) + (340 \text{ through } 377)_8$ execute, then trap

Red Zone $\leq (SL) + (337)_8$ abort, then trap to location 4

If the Stack Limit Register contents were zero:

Yellow Zone = 340 through 377

Red Zone = 000 through 337

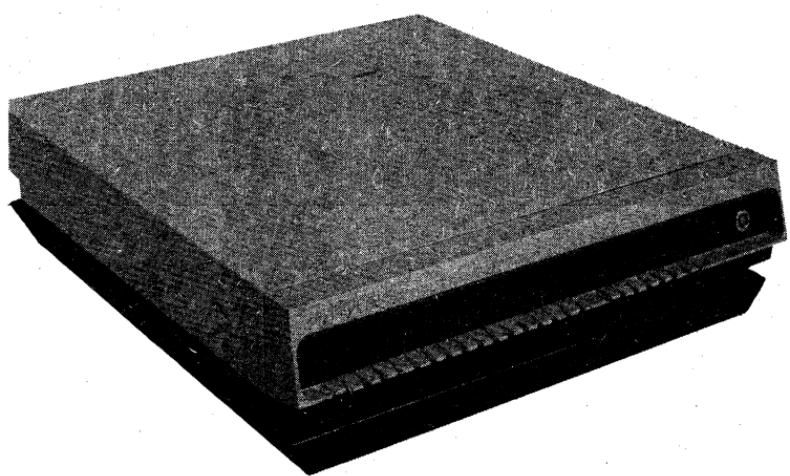

CHAPTER 7

ARITHMETIC OPTIONS (FOR THE 11/35 & 11/40)

7.1 GENERAL

This chapter describes 2 options which mount in the 11/35 or 11/40 Central Processor assembly unit. The Extended Instruction Set (EIS) option allows extended manipulation of fixed point numbers. The Floating Point option (which requires the EIS option) enables direct operations on single precision 32-bit words.

The options are contained on individual modules that plug into dedicated, prewired slots.

KE11-E EIS option

KE11-F Floating Point option

The basic processor timing is not degraded, and NPR latency is not affected by the use of these options.




7.2 EIS OPTION

The Extended Instruction Set option adds the following instruction capability:

Mnemonic	Instruction	Op Code
MUL	multiply	070RSS
DIV	divide	071RSS
ASH	shift arithmetically	072RSS
ASHC	arithmetic shift combined	073RSS

The EIS instructions are directly compatible with the larger 11 computer, the PDP-11/45.

The number formats are:

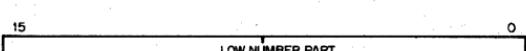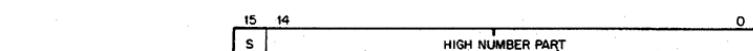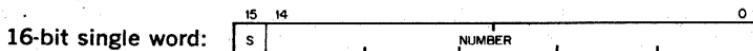

S is the sign bit.

$S = 0$ for positive quantities

$S = 1$ for negative quantities; number is in 2's complement notation

Interrupts are serviced at the end of an EIS instruction.

MUL

multiply

070RSS

0	1	1	1	0	0	0	r	r	r	s	s	s	s	s	s
15				9	8		6	5							0

Operation: R, Rv1 \leftarrow R x(src)

Condition Codes:
N: set if product is <0 ; cleared otherwise
Z: set if product is 0; cleared otherwise
V: cleared
C: set if the result is less than -2^{15} or greater than or equal to $2^{15}-1$.

Description: The contents of the destination register and source taken as two's complement integers are multiplied and stored in the destination register and the succeeding register (if R is even). If R is odd only the low order product is stored. Assembler syntax is : MUL S,R.
(Note that the actual destination is R,Rv1 which reduces to just R when R is odd.)

Example: 16-bit product (R is odd)

```
CLC           ;Clear carry condition code
MOV #400,R1
MUL #10,R1
BCS ERROR      ;Carry will be set if
                ;product is less than
                ; $-2^{15}$  or greater than or equal to  $2^{15}$ 
                ;no significance lost
```

Before	After
(R1) = 000400	(R1) = 004000


Assembler format for all EIS instructions is:

OPR src, R

DIV

divide

071RSS

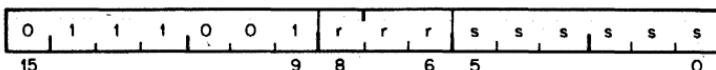

Operation: R, Rv1 \leftarrow R, Rv1 / (src)

Condition Codes:
N: set if quotient < 0 ; cleared otherwise
Z: set if quotient $= 0$; cleared otherwise
V: set if source $= 0$ or if the absolute value of the register is larger than the absolute value of the source. (In this case the instruction is aborted because the quotient would exceed 15 bits.)
C: set if divide 0 attempted; cleared otherwise

Description: The 32-bit two's complement integer in R and Rv1 is divided by the source operand. The quotient is left in R; the remainder in Rv1. Division will be performed so that the remainder is of the same sign as the dividend. R must be even.


Example:
CLR R0
MOV #20001,R1
DIV #2,R0

Before	After		
(R0) = 000000	(R0) = 010000	Quotient	
(R1) = 020001	(R1) = 000001	Remainder	

ASH

shift arithmetically


072RSS

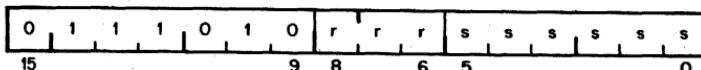

Operation: $R \leftarrow R$ Shifted arithmetically NN places to right or left
Where NN = low order 6 bits of source.

Condition Codes:
N: set if result < 0 ; cleared otherwise
Z: set if result $= 0$; cleared otherwise
V: set if sign of register changed during shift; cleared otherwise
C: loaded from last bit shifted out of register

Description: The contents of the register are shifted right or left the number of times specified by the shift count. The shift count is taken as the low order 6 bits of the source operand. This number ranges from -32 to +31. Negative is a right shift and positive is a left shift.

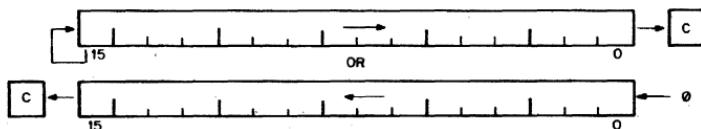

6 LSB of source

011111
000001
111111
100000

Action in general register

Shift left 31 places
shift left 1 place
shift right 1 place
shift right 32 places

Example:

ASH R0, R3


Before
 $(R3)=001234$
 $(R0)=000003$

After
 $(R3)=012340$
 $(R0)=000003$

ASHC

arithmetic shift combined

073RSS

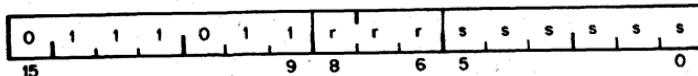


Operation: R, Rv1<=R, Rv1 The double word is shifted NN places to the right or left, where NN = low order six bits of source

Condition Codes:

- N: set if result <0; cleared otherwise
- Z: set if result = 0; cleared otherwise
- V: set if sign bit changes during the shift; cleared otherwise
- C: loaded with high order bit when left Shift ; loaded with low order bit when right shift (loaded with the last bit shifted out of the 32-bit operand)

Description: The contents of the register and the register ORed with one are treated as one 32 bit word, R + 1 (bits 0-15) and R (bits 16-31) are shifted right or left the number of times specified by the shift count. The shift count is taken as the low order 6 bits of the source operand. This number ranges from -32 to + 31. Negative is a right shift and positive is a left shift. When the register chosen is an odd number the register and the register OR'ed with one are the same. In this case the right shift becomes a rotate (for up to a shift of 16). The 16 bit word is rotated right the number of bits specified by the shift count.

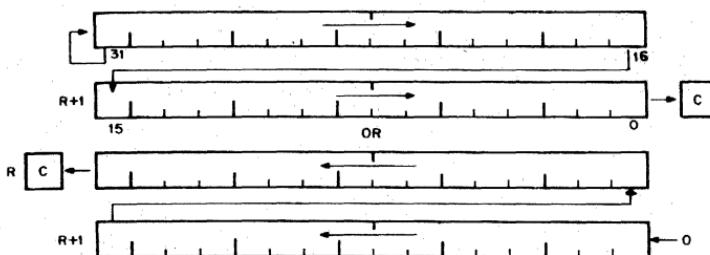


7.3 FLOATING POINT OPTION

The Floating Point instructions used with this option are unique to the PDP-11/35 & 40. However, the OP Codes used do not conflict with any other instructions.

Mnemonic	Instruction	Op Code
FADD	floating add	07500R
FSUB	floating subtract	07501R
FMUL	floating multiply	07502R
FDIV	floating divide	07503R

The number format is:

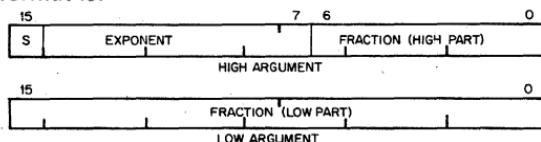

S = sign of fraction; 0 for positive, 1 for negative

Exponent = 8 bits for the exponent, in excess (200)₁₀ notation

Fraction = 23 bits plus 1 hidden bit (all numbers are assumed to be normalized)

The number format is essentially a sign and magnitude representation. The format is identical with the 11/45 for single precision numbers.

Fraction

The binary radix point is to the left (in front of bit 6 of the High Argument), so that the value of the fraction is always less than 1 in magnitude. Normalization would always cause the first bit after the radix point to be a 1, such that the fractional value would be between $\frac{1}{2}$ and 1. Therefore, this bit can be understood and not be represented directly, to achieve an extra 1 bit of resolution.

The first bit to the right of the radix point (hidden bit) is always a 1. The next bit for the fraction is taken from bit 6 of the High Argument. The result of a Floating Point operation is always rounded away from zero, increasing the absolute value of the number.

Exponent

The 8-bit Exponent field (bits 14 to 7) allow exponent values between -128 and +127. Since an excess (200)₁₀ or (128)₁₀ number system is used, the correspondence between actual values and coded representation is as follows:

Actual Value	Representation	
Decimal	Octal	Binary
+127	377	11 111 111
+1	201	10 000 001
0	200	10 000 000
-1	177	01 111 111
-128	000	00 000 000


If the actual value of the exponent is equal to -128, meaning a total value (including the fraction) of less than 2^{-128} , the floating point number will be assumed to be 0, regardless of the sign or fraction bits. The hardware will generate a clean 0 (a 32-bit word of all zeros).

Example of a Number

$$+(12)_{10} = +(1100)_2$$

$$= +(2^4)_{10} \times (.11)_2$$

$$[16 \times (\frac{1}{2} + \frac{1}{4}) = 12]$$

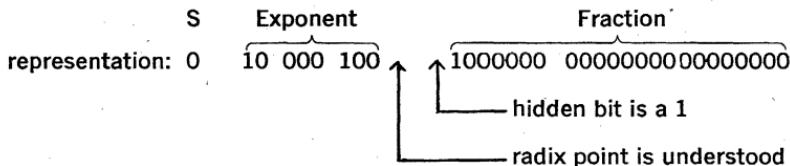

Registers

There are no pre-assigned registers for the Floating Point option. A general purpose register is used as a pointer to specify a stack address. The contents of the register are used to locate the operands and answer for the Floating Point operations as follows:

- (R) = High B argument address
- (R)+2 = Low B argument address
- (R)+4 = High A argument address
- (R)+6 = Low A argument address

After the Floating Point operation, the answer is stored on the stack as follows:

- (R)+4 = address for High part of answer
- (R)+6 = address for Low part of answer

where (R) is the original contents of the general register used.

After execution of the instruction, the general register will point to the High answer, at (R)+4.

Condition Codes

Condition codes are set or cleared as shown in the Instruction Descriptions, in the next part of this section. If a trap occurs as a function of a Floating Instruction, the condition codes are re-interpreted as follows:

- V = 1, if an error occurs
- N = 1, if underflow or divide-by-zero
- C = 1, if divide by zero
- Z = 0

	V	N	C	Z
Overflow	1	0	0	0
Underflow	1	1	0	0
Divide by 0	1	1	1	0

Traps occur through the vector at location 244. A Floating Point instruction will be aborted if a BR request is issued before the instruction is near completion. The Program Counter will point to the aborted Floating instruction so that the interrupt will look transparent.

Assembler format is: OPR R

INSTRUCTIONS

FADD

floating add

07500R

0	1	1	1	1	0	1	0	0	0	0	0	r	r	r
15												3	2	0

Operation: $[(R)+4, (R)+6] \leftarrow [(R)+4, (R)+6] + [(R), (R)+2]$, if result $\geq 2^{-128}$; else $[(R)+4, (R)+6] \leftarrow 0$

Condition Codes:
N: set if result < 0 ; cleared otherwise
Z: set if result $= 0$; cleared otherwise
V: cleared
C: cleared

Description: Adds the A argument to the B argument and stores the result in the A Argument position on the stack. General register R is used as the stack pointer for the operation.

$$A \leftarrow A + B$$

FSUB

floating subtract

07501R

0	1	1	1	1	0	1	0	0	0	0	1	r	r	r
15												3	2	0

Operation: $[(R)+4, (R)+6] \leftarrow [(R)+4, (R)+6] - [(R), (R)+2]$, if result $\geq 2^{-128}$; else $[(R)+4, (R)+6] \leftarrow 0$

Condition Codes:
N: set if result < 0 ; cleared otherwise
Z: set if result $= 0$; cleared otherwise
V: cleared
C: cleared

Description: Subtracts the B Argument from the A Argument and stores the result in the A Argument position on the stack.

$$A \leftarrow A - B$$

FMUL

floating multiply

07502R

0	1	1	1	1	0	1	0	0	0	0	1	0	r	r	r
15													3	2	0

Operation: $[(R)+4, (R)+6] \leftarrow [(R)+4, (R)+6] \times [(R), (R)+2]$ if result $\geq 2^{-128}$; else $[(R)+4, (R)+6] \leftarrow 0$

Condition Codes:
N: set if result < 0; cleared otherwise
Z: set if result = 0; cleared otherwise
V: cleared
C: cleared

Description: Multiplies the A Argument by the B Argument and stores the result in the A Argument position on the stack.
 $A \leftarrow A \times B$

FDIV

floating divide

07503R


0	1	1	1	1	0	1	0	0	0	0	1	1	r	r	r
15													3	2	0

Operation: $[(R)+4, (R)+6] \leftarrow [(R)+4, (R)+6] / [(R), (R)+2]$ if result $\geq 2^{-128}$; else $[(R)+4, (R)+6] \leftarrow 0$

Condition Codes:
N: set if result < 0; cleared otherwise
Z: set if result = 0; cleared otherwise
V: cleared
C: cleared

Description: Divides the A Argument by the B Argument and stores the result in the A Argument position on the stack. If the divisor (B Argument) is equal to zero, the stack is left untouched.

$A \leftarrow A / B$

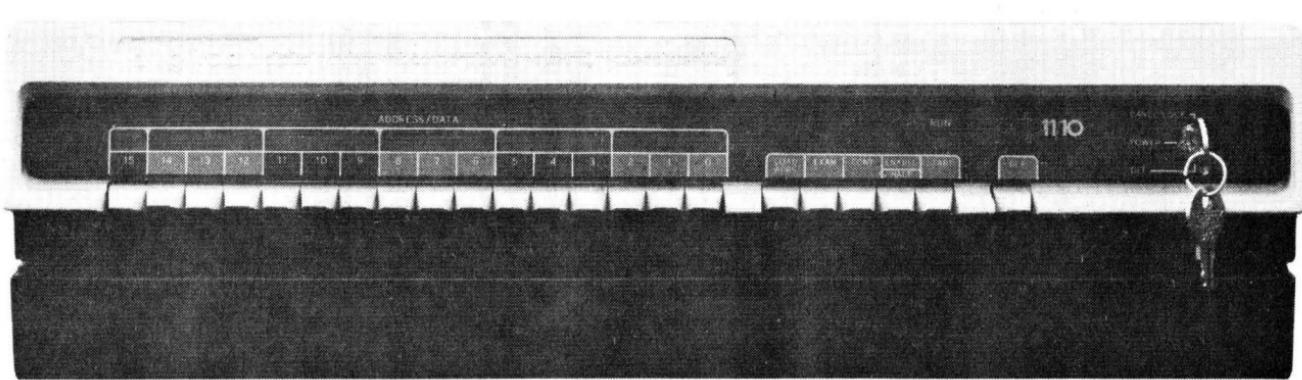

7.10

CHAPTER 8

CONSOLE OPERATION

8.1 PDP-11/05 & 11/10 CONSOLE

8.1.1 Console Elements

The PDP-11/05 and 11/10 Operator's Console provides the following facilities:

- Power Switch (with a key lock)
- ADDRESS/DATA display (16 bits)
- Switch Register (16 switches)
- RUN status light
- Control Switches
 - LOAD ADRS (Load Address)
 - EXAM (Examine)
 - CONT (Continue)
 - ENABLE/HALT
 - START
 - DEP (Deposit)

8.1.2 Console Switches

POWER	OFF	Power to the processor is off.
	POWER	Power to the processor is on and all console Switches function normally.
	PANEL LOCK	Power to the processor is on, but the Control Switches are disabled. The Switch Register is still functional.

Switch Register (Up = 1) (Down = 0)	Used to manually load data or an address into the processor.
--	--

Control Switches

LOAD ADRS (depress to activate)	Transfers contents of the Switch Register to the processor.
	The entered data is displayed in the ADDRESS/DATA lights, and provides an address for EXAM, DEP, and START.

EXAM		Causes the contents of the selected location to be displayed in the ADDRESS/DATA lights. While the EXAM switch is depressed, the address to be examined is displayed. The data itself is displayed when the switch is released.
		If the EXAM switch is depressed again, the contents of the next sequential word location are displayed. (Bus Address is incremented automatically). If an odd address is specified, the next lower even address word will be displayed (except for the general registers, R0 to R7). If a non-existent memory address is specified, no UNIBUS operation will be performed, and the processor will have to be initialized by setting the ENABLE/HALT switch to HALT and then depressing the START switch.
		If the CPU is in the RUN state, the EXAM switch has no effect.
CONT (depress and release to activate)		Causes the processor to continue operation from the point at which it had stopped. The switch has no effect when the CPU is in the RUN state. If the program had stopped, this switch provides a restart without a System Reset.
ENABLE/HALT	{ ENABLE HALT	Allows the CPU to perform normal operations under program control.
START (depress and release to activate)		Causes the CPU to stop after the current instruction. All interrupts and traps will be executed prior to halting. Depressing and then releasing the CONT switch will now cause execution of a single instruction.
		If the program had stopped, depressing the START switch causes a System Reset signal to occur and loads the Program Counter with the address contained in the switches when LOAD ADRS was last depressed. The program will then continue only if the ENABLE/HALT switch is in ENABLE.
		WARNING:
		If the CPU is in the RUN state and the POWER switch is <i>not</i> in PANEL LOCK, the START switch will interrupt the program. The program may even have to be reloaded.

DEP

Deposits contents of the Switch Register into the selected location. While the DEP switch is raised, the address to be loaded is displayed. When the switch is released, the data deposited is displayed.

If the DEP switch is raised again, the Switch Register contents (which were probably modified) are loaded into the next word location. (Bus Address is incremented automatically). If an odd address is specified, the next lower even address word will be used (except for the general registers, R0 to R7). If a non-existent memory address is specified, no UNIBUS operation will be completed and the processor will have to be initialized by setting the ENABLE/HALT switch to HALT and then depressing the START switch.

8.1.3 Indicators**RUN**


Lights when the processor is executing instructions. It is off when the processor is halted. It is on during a WAIT instruction and UNIBUS cycles.

ADDRESS/DATA

Displays either addresses or data, as specified in Table 8-1.

Table 8-1 Information Displayed in ADDRESS/DATA Lights

Condition		ADDRESS/DATA Display
POWER On	{ ENABLE/HALT in HALT ENABLE/HALT in ENABLE}	Contents of location 24. Undefined. Depends on contents of memory.
Load Address	LOAD ADRS switch is depressed	Contents of Switch Register.
Examine	{ EXAM switch is depressed EXAM switch is released}	Address of location that is to be examined. Contents of selected address.
Deposit	{ DEP switch is raised DEP switch is released}	Address of location that is to be loaded. Contents of Switch Register (which is the data deposited).
RUN Light On		Undefined.
Program Halt	{ ENABLE/HALT in HALT HALT instruction executed Double Bus Error (two successive attempts to access non-existent memory or improper odd address)}	Address of instruction to be executed when CONT switch is activated. (same as above) Contents of Program Counter (R7) at time when double bus error occurred.
Program Execution	{ START switch is depressed CONT switch is depressed}	Address of last Load address. Address of instruction to be executed.

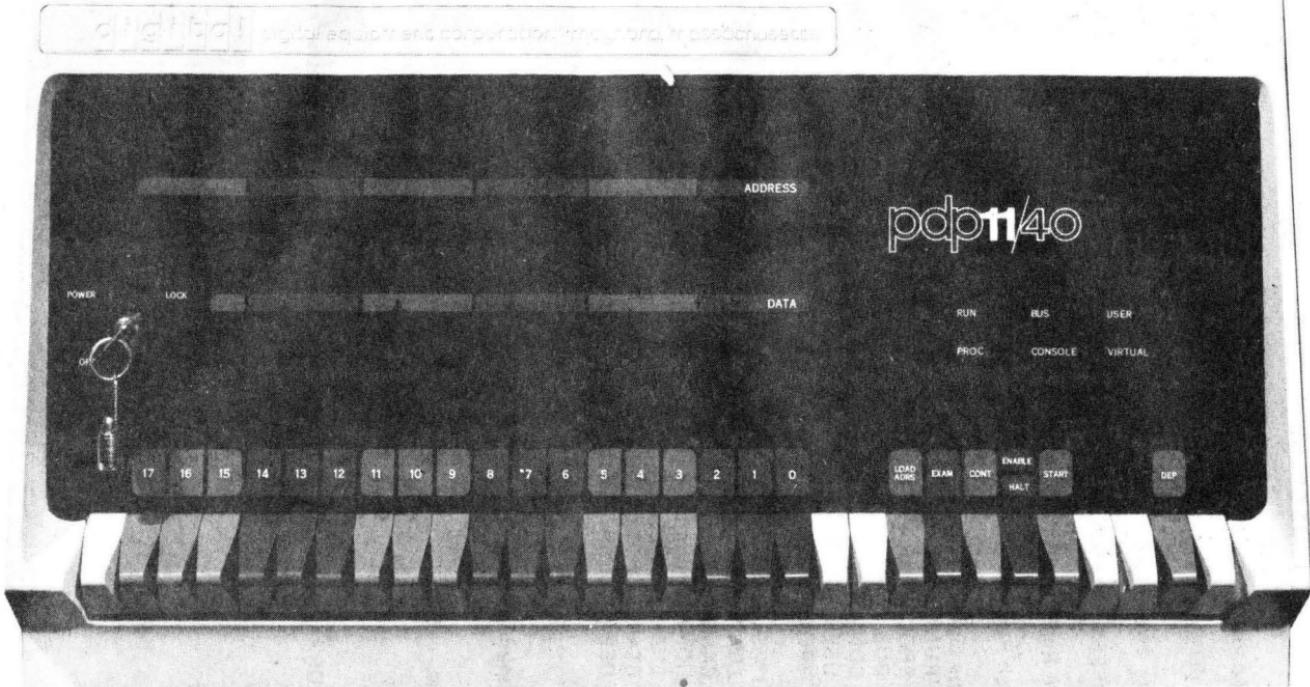

00
01

8.2 PDP-11/35 & 11/40 CONSOLE

8.2.1 Console Elements

The PDP-11/35 & 40 Operator's Console provides the following facilities:

Power Switch (with a key lock)

ADDRESS Register display (18 bits)

DATA Register display (16 bits)

Switch Register (18 switches)

Status Lights

RUN
PROCESSOR
BUS
CONSOLE
USER
VIRTUAL

Control Switches

LOAD ADRS (Load Address)
EXAM (Examine)
CONT (Continue)
ENABLE/HALT
START
DEP (Deposit)

8.2.2 Status Indicators

RUN	Lights when the processor clock is running. It is off when the processor is waiting for an asynchronous peripheral data response, or during a RESET instruction. It is on during a WAIT or HALT instruction.
PROCESSOR	Lights when the processor has control of the bus.
BUS	Lights when the UNIBUS is being used.
CONSOLE	Lights when in console mode (manual operation). Machine is stopped and is not executing the stored program.
USER	Lights when the CPU is executing program instructions in User mode.
VIRTUAL	Lights when the ADDRESS Register display shows the 16-bit Virtual Address.

8.2.3 Console Switches

POWER	{	OFF	Power to the processor is off.
ON		Power to the processor is on and all console switches function normally.	
LOCK		Power to the processor is on, but the Control Switches are disabled. The Switch Register is still functional.	
Switch Register (Up = 1) (Down = 0)	Used to manually load data or an address into the processor.		

Control Switches

LOAD ADRS (depress to activate)	Transfers contents of the Switch Register to the Bus Address register. The resulting Bus Address is displayed in the ADDRESS Register, and provides an address for EXAM, DEP, and START. The LOAD Address is not modified during program execution. To restart a program at the previous Start Location, the START switch is activated.	
EXAM (depress to activate)	Causes the contents of the location specified by the Bus Address to be displayed in the DATA Register. If the EXAM switch is depressed again, the contents of the next sequential word location are displayed. (Bus Address is incremented automatically). If an odd address is specified, the next lower even address word will be displayed. If a non-existent memory address is specified, no UNIBUS operation will be completed, and contents of the Switch Register address (777 570) will be displayed in the DATA register.	
CONT (depress to activate)	Causes the processor to continue operation from the point at which it had stopped. The switch has no effect when the CPU is in the RUN state. If the program had stopped, this switch provides a restart without a System Reset.	
ENABLE/HALT	{ ENABLE HALT }	Allows the CPU to perform normal operations under program control. Causes the CPU to stop. Depressing the CONT switch will now cause execution of a single instruction.

START (depress to activate)	If the CPU is in the RUN state, the START switch has no effect.
DEP (raise to activate)	If the program had stopped, depressing the START switch causes a System Reset signal to occur; the program will then continue only if the ENABLE/HALT switch is in ENABLE.

8.2.4 Displays

ADDRESS Register	Displays the address of data just examined or deposited. During a programmed HALT or WAIT instruction, the display shows the next instruction address.
DATA Register	Displays data just examined or deposited. During HALT, general register R0 contents are displayed. During Single Instruction operation, the Processor Status word (PS) is displayed.

CHAPTER 9

SPECIFICATIONS

9.1 CPU OPERATING SPECIFICATIONS

Temperature: $+10^{\circ}\text{C}$ to $+50^{\circ}\text{C}$

Relative Humidity: 20% to 95% (without condensation)

Input Power: $115\text{ VAC} \pm 10\%$, 47 to 63 Hz
or $230\text{ VAC} \pm 10\%$, 47 to 63 Hz

9.2 PACKAGING

All the PDP-11 CPU's are housed in slide chassis units that can be mounted in standard 19"-racks. The included power supply has sufficient excess capacity to drive core memory modules and peripheral logic mounted within the unit. Module slots are prewired to accept some of the optional equipment.

11/05 & 11/10

The PDP-11/05 and 11/10 are housed in either a 5-1/4" or 10-1/2" high unit. The 10-1/2" unit can slide out and then tilt (5 positions), for convenient access to the internal equipment. The 11/05 and 11/10 have the same CPU, but are available in several arrangements, see Figures 9-1 and 9-2.

11/35

The PDP-11/35 is housed in a 10-1/2" high unit that can slide and tilt. The 11/35 is available in 3 versions; the first 2 have core memory mounted within the CPU assembly, and the third has the memory in an external unit that can hold between 8K and 24K, see Figure 9-3.

11/40

The PDP-11/40 is housed in a 21" high unit. The 11/40 and 11/35 have the same CPU. The power supply does not slide out, but stays mounted stably in the cabinet, which is included. See Figure 9-4.


Standard Cabinet

A standard 19" cabinet has two rows of mounting holes in the front, spaced 18-5/16" apart. The holes are located at 1/2" or 5/8" apart from each other, see Figure 9-5. Standard front panel increments are 1-3/4".



$$(5/8 + 5/8 + 1/2 = 1-3/4)$$

The standard PDP-11 cabinet is 72" high by 21" wide by 30" deep. It is recommended that a service area of at least 35" be allowed in the front and back of the cabinet. Each cabinet contains a power control so that all equipment within the cabinet (and other connected cabinets) can have their AC power turned on and off together.


a. MECHANICAL OUTLINE

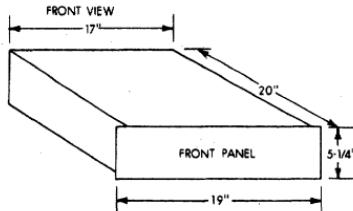

b. PDP-11/05

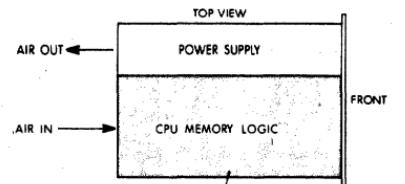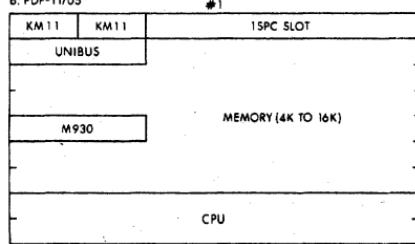

#2

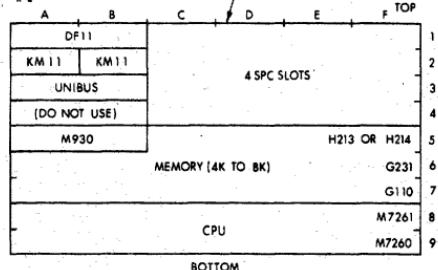

c. PDP-11/10






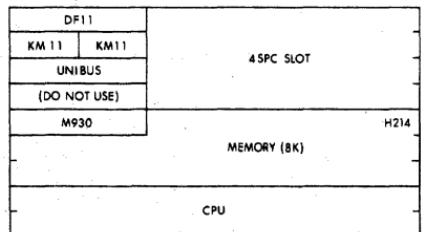


Figure 9-1 5-1/4" PDP-11/05 & 11/10 Assembly Unit

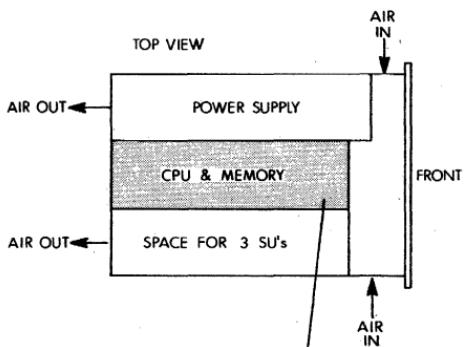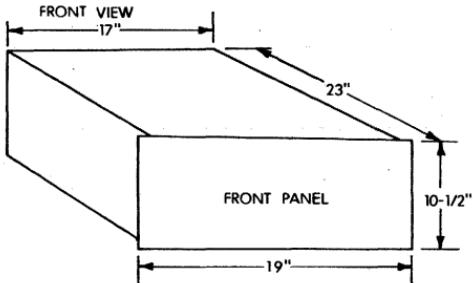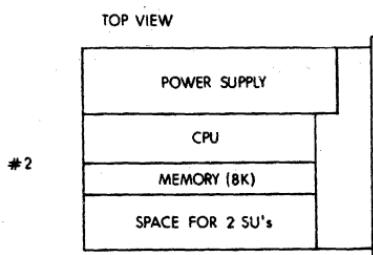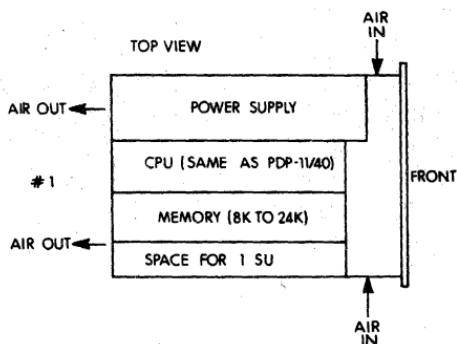

A	B	C	D	E	F	
DF11		SCL		KM11	KM11	1
		CPU			M7260	2
					M7261	3
					G110	4
					G231	5 FRONT
REAR	M930		MEMORY (8K TO 16K)		H214	6
					G110	7
					G231	8
	M930				H214	9

Figure 9-2 10-1/2" PDP-11/05 & 11/10 Assembly Unit

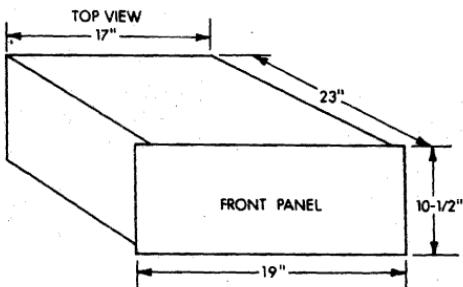

#3 ASSEMBLY UNIT WITH CPU & POWER SUPPLY PLUS 8K MEMORY IN ANOTHER UNIT.

Figure 9-3 PDP-11/35 Assembly Unit

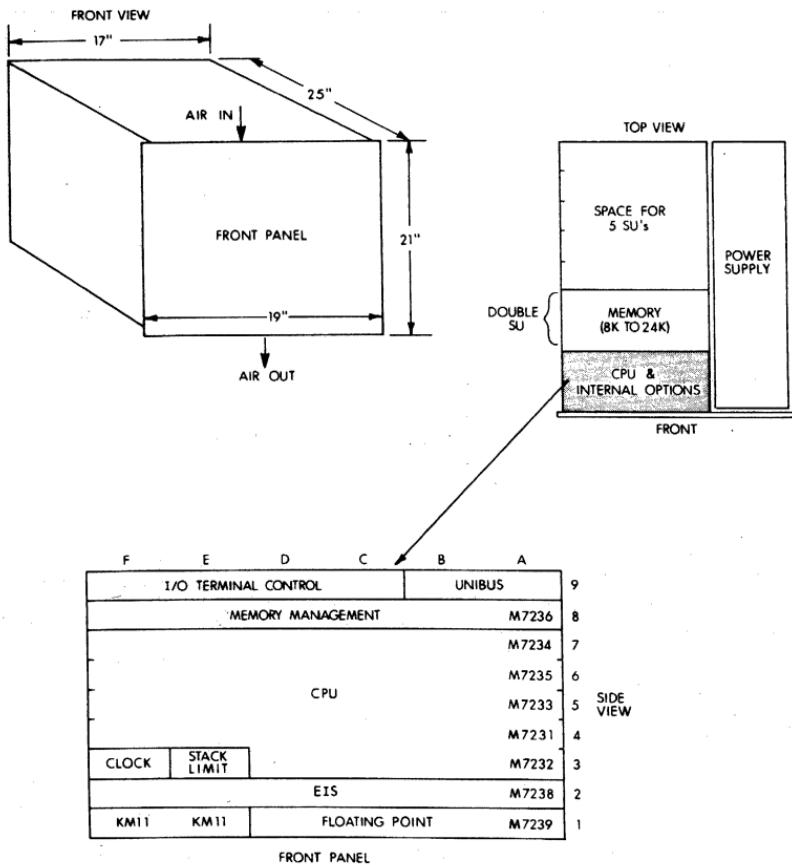


Figure 9-4 PDP-11/40 Assembly Unit

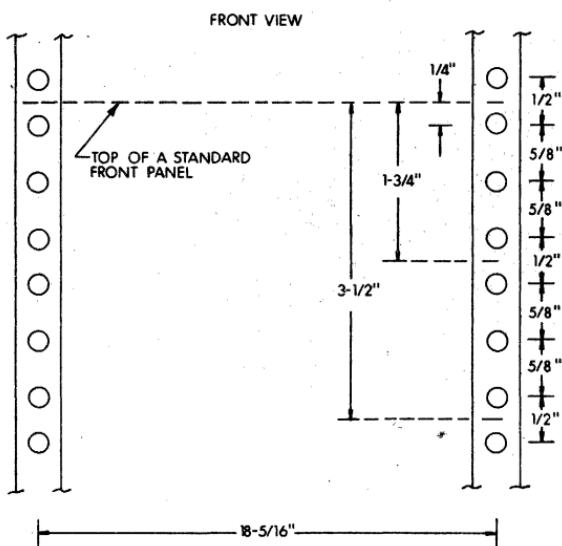


Figure 9-5 Standard 19" Rack

9.3 MOUNTING INFORMATION

There are three basic mounting assemblies for the computers described in this handbook.

Front Panel Height	Computers	Reference
5-1/4"	PDP-11/05, 11/10	Figure 9-6
10-1/2"	PDP-11/05, 11/10, 11/35	Figure 9-7
21"	PDP-11/40	Figure 9-8

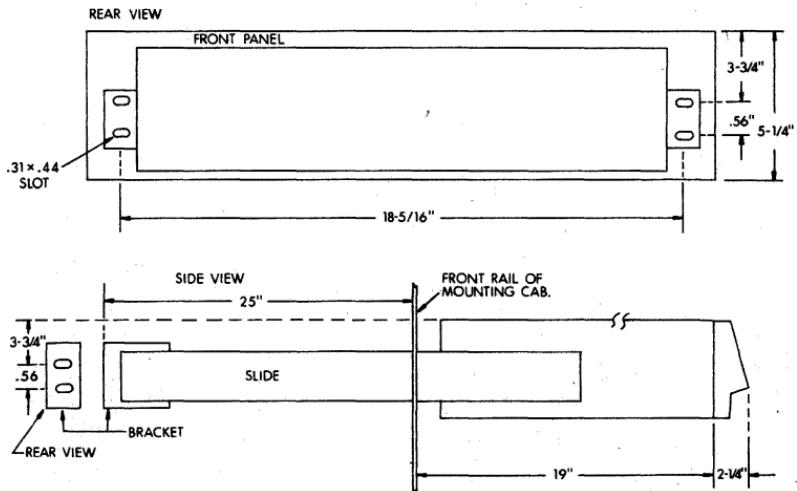


Figure 9-6 5-1/4" High Unit

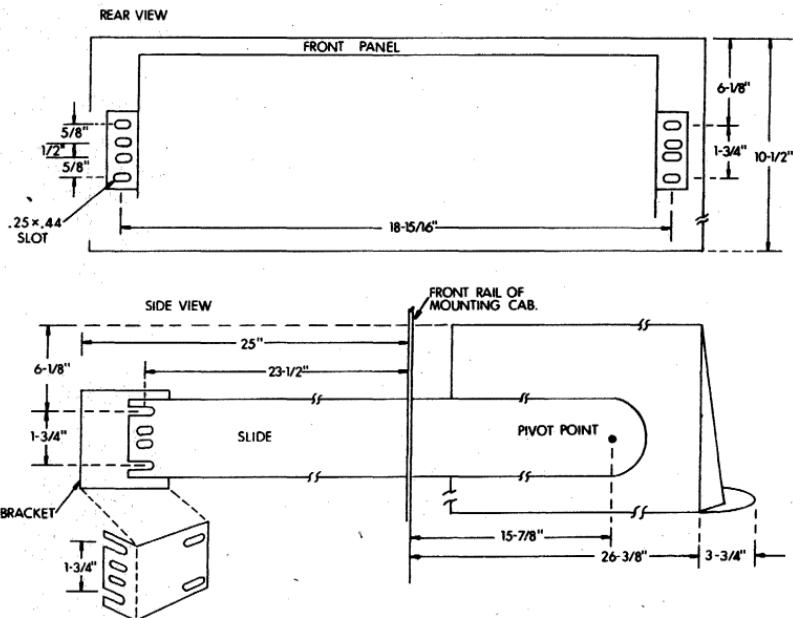


Figure 9-7 10-1/2" High Unit

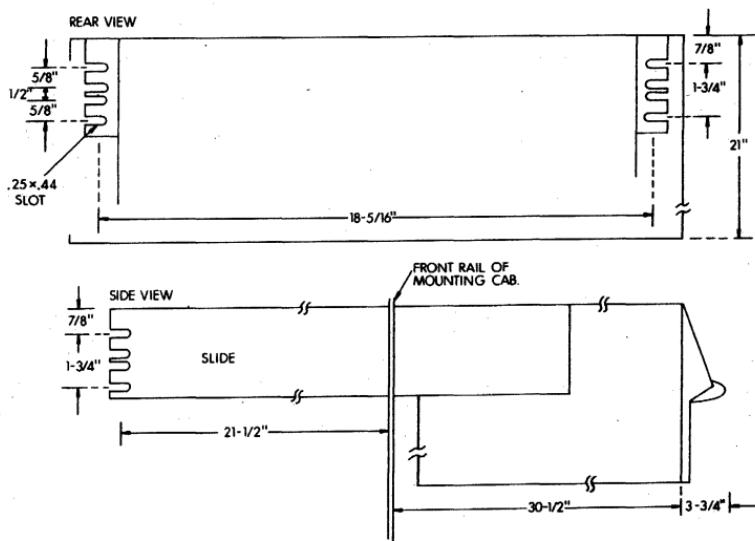


Figure 9-8 21" High Unit

9.4 TABLE OF SPECIFICATIONS

6-6

	11/05	11/05	11/10	11/10	11/35	11/40
Front Panel Height	5-1/4"	10-1/2"	5-1/4"	10-1/2"	10-1/2"	21"
Max Internal Space	9 slots	5 SU	9 slots	5 SU	5 SU	9 SU
Min Memory Size (words)	4K	4K	8K	8K	8K	8K
Max Pre-wired Memory	16K	16K	8K	16K	24K	24K
Max Memory in CPU Assembly	16K	28K	8K	28K	32K	80K
Space for Options (or extra memory)	1 or 4 slots	3 SU	4 slots	3 SU	1 to 3 SU	5 SU
Weight (CPU)	50 lbs	110	50	110	120	200
Power (CPU & 8K of memory)						
Current at 115 VAC	5 amps	5	5	5	7	7
Heat dissipation	500 W	500	500	500	700	700
Excess Current available after CPU & 8K memory						
+5 V	6 amps	15	6	15	11	21
-15 V	3	5	3	5	2	10
+15 V	1	1	1	1	1	1
Current required for each extra 8K memory						
+5 V	1.7 amps	}	→			
-15 V	0.5					

9.5 PDP-11 FAMILY OF COMPUTERS

Central Processor	11/05	11/10	11/15	11/20	11/35	11/40	11/45
Main Market	OEM	End User	OEM	End User	OEM	End User	OEM & End User
Memory	core		core		core		bipolar, MOS, core
Reg to Reg Transfer	2.7 μ s		2.3 μ s		0.9 μ s		0.3 0.45 0.9
Max Mem Size (words)	28K		28K	124K	124K		124K
Max Address Space	32K		32K	128K	128K		128K
General Purpose Reg	8		8		8		16
Stack Processing	yes		yes		yes		yes
Micro-programmed Instructions	yes		no		yes		yes
	basic set		basic set		basic set + XOR, SOB, MARK, SXT, RTT		same as 11/40 + MUL, DIV, ASH, ASHC, SPL
Extended Arithmetic (hardware)	option (external)		option (external)		option (internal) MUL, DIV, ASH, ASHC		standard (int)
Floating Point	software only		software only		hardware option 32-bit word		hardware option 32 or 64-bit word
Stack Limit Address	400 (fixed)		400 (fixed)		400 or programmable (option)		programmable
Memory Management	not available		not available		option MFPI, MTPI		option MFPI, MFPD MTPI, MTPD
Modes	1		1		1 std, 2 opt		3
Automatic Priority Interrupt	4-line multi-level		1-line multi-lev	4-line multi-lev	4-line multi-level		4-line multi-level + 8 software levels
Power Fail and Auto-Restart	standard		option	standard	standard		standard

APPENDIX A

PROGRAMMING DIFFERENCES BETWEEN PDP-11 CPU's

A.1 INTRODUCTION

There are a few minor differences in how the different central processors operate on certain instructions and programming situations. In almost all cases the differences represent an improvement over the first PDP-11 computer, the PDP-11/20, and the operations are more efficient but transparent to the user. In other cases, obscure combinations of addressing modes and registers cause slightly different results.

A.2 DIFFERENCES

The following Table shows the major differences between the CPU's described in this Handbook, and the original PDP-11/20. (The PDP-11/15 operates the same as the 11/20).

TABLE OF PROGRAMMING DIFFERENCES

11/20

11/05 & 11/10

11/35 & 11/40

	I. GENERAL REGISTERS (including PC & SP)		
A.	OPR %R, (R)+ or OPR %R, -(R) OPR %R, @(R)+ OPR %R, @-(R) (Using the same reg. as both source & destination).	Contents of R are incremented by 2 (or decremented by 2) before being used as the source operand.	Initial contents of R are used as the source operand. (same as 11/20)
A-2	B. JMP (R)+ or JSR reg, (R)+ (Jump using auto-increment mode).	Contents of R are incremented by 2, then used as the new PC address.	(same as 11/20) Initial contents of R are used as the new PC.
C.	MOV PC, @#A or MOV PC, A (Moving the incremented PC to a memory address referenced by the PC).	Location A will contain the PC of the Move instruction +4.	Location A will contain PC+2. (same as 11/20)
D.	Stack Pointer (SP), R6 used for referencing.	Using the SP for pointing to odd addresses or non-existent memory causes a HALT (double bus error).	(same as 11/20) Odd address of non-existent memory references with SP cause a fatal trap, with a new stack created at locations 0 & 2.

TABLE OF PROGRAMMING DIFFERENCES (Cont.)

	11/20	11/05 & 11/10	11/35 & 11/40
E. Stack Overflow	Stack limit fixed at 400 (octal). Overflow (going lower) checked after @-(R6), JSR, traps, and address modes 4 & 5. Overflow serviced by an overflow trap. No red zone.	(same as 11/20)	Variable limit with Stack Limit option. Overflow checked after JSR, traps, and address modes 1, 2, 4, & 6. Non-altering references to stack data is always allowed. There is a 16-word yellow (warning) zone. Red zone trap occurs if stack is 16 words below boundary; PS & PC are saved at locations 0 & 2.
A II. TRAPS & INTERRUPTS			
A. RTI instruction	First instruction after RTI is guaranteed to be executed.	(same as 11/20)	If RTI sets the T bit, the T bit trap is acknowledged immediately after the RTI instruction.
B. RTT instruction	(not implemented)	(not implemented)	First instruction after RTT is guaranteed to be executed. Acts like RTI on the 11/20
C. Processor Status (PS) odd byte at location 777 777.	Addressing odd byte of PS (bits 15-8) causes an odd address trap.	Odd byte of PS can be addressed without a trap.	(same as 11/05)
D. T bits of PS	T bit can be loaded by direct address of PS, or from the console.	(same as 11/20)	Only RTI, RTT, traps, and interrupts can load the T bit.

TABLE OF PROGRAMMING DIFFERENCES (Cont.)

	11/20	11/05 & 11/10	11/35 & 11/40
E. Interrupt service routine	The first instruction in the routine is guaranteed to be executed.	The first instruction will not be executed if another interrupt occurs at a higher priority.	(same as 11/05)
F. Priority order of traps & interrupts	Odd address Timeout HALT from console Trap instructions Trace trap Stack overflow Power fail	Odd address Timeout HALT instruction Trap instructions Trace Trap Stack overflow Power fail HALT from console	Odd address Stack overflow (red) Timeout Mem. Mgt. violation HALT Trap instructions Trace trap Stack overflow (yellow) Power fail
III. MISCELLANEOUS			
A. SWAB and V bit	SWAB instruction conditionally sets the V bit.	V bit is cleared.	(same as 11/05)
B. Instruction set	Basic set.	(same as 11/20)	Basic set + MARK, RTT, SOB, SXT, XOR. EIS adds: MUL, DIV, ASH, ASHC. Floating Point adds: FADD, FSUB, FMUL, FDIV.

A.3 COMPATIBILITY

In order to stay compatible with all PDP-11 computers, avoid the following.

1. Using:

OPR %R, (R)+
OPR %R, -(R)
OPR %R, @(R)+
OPR%R, @-(R)

JMP (R)+
JMP %R

JSR reg, (R)+
JSR %R, %R

2. Testing the V bit after SWAB.

3. Using the T bit of the Processor Status word.

APPENDIX B MEMORY MAP

INTERRUPT VECTORS.

000	RESERVED
004	TIME OUT, BUS ERROR
010	RESERVED INSTRUCTION
014	BPT TRAP VECTOR
020	IOT TRAP VECTOR
024	POWER FAIL TRAP VECTOR
030	EMT TRAP VECTOR
034	"TRAP" TRAP VECTOR
040	SYSTEM SOFTWARE
044	SYSTEM SOFTWARE
050	SYSTEM SOFTWARE
054	SYSTEM SOFTWARE
060	TTL IN-BR4
064	TTY OUT-BR4
070	PC11 HIGH SPEED READER-BR4
074	PC11 HIGH SPEED PUNCH
100	KW11L - LINE CLOCK BR6
104	KW11P - PROGRAMMER REAL TIME CLOCK BR6
120	XY PLOTTER
124	DR11B-(BR5 HARDWIRED)
130	ADO1 BR5-(BR7 HARDWIRED)
134	AFC11 FLYING CAP MULTIPLEXER BR4
140	AA11-A,B,C SCOPE BR4
144	AA11 LIGHT PEN BR5
170	USER RESERVED
174	USER RESERVED
200	LP11, LS11 LINE PRINTER CTRL-BR4
204	RF11 DISK CTRL-BR5
210	RC11 DISK CTRL-BR5
214	TC11 DEC TAPE CTRL-BR6
220	RK11 DISK CTRL-BR5
224	TM11 COMPATIBLE MAG TAPE CTRL-BR5
230	CR11/CM11 CARD READER CTRL-BR6
234	UDC11 (BR4, BR6 HARDWIRED)
240	11/45 PIRQ
244	FLOATING POINT ERROR
250	SEGMENTATION TRAP
254	RP11 DISK PACK CTRL-BR5
260	TA11 CASSETTE-BR6
264	
270	USER RESERVED
274	USER RESERVED
300	START OF FLOATING VECTORS

DEVICE ADDRESSES

NOTE: XX MEANS A RESERVED ADDRESS FOR THAT OPTION. OPTION MAY NOT USE IT BUT IT WILL RESPOND TO BUS ADDRESS.

777776	CPU STATUS	
777774	STACK LIMIT REGISTER	
777772	11/45 PIRQ REGISTER	
777716	TO 777700 CPU REGISTERS	
777676	TO 777600 11/45 SEGMENTATION REGISTER	
777656	TO 777650 MX11 #6	
777646	TO 777640 MX11 #5	
777636	TO 777630 MX11 #4	
777626	TO 777620 MX11 #3	
777616	TO 777610 MX11 #2	
777606	TO 777600 MX11 #1	
777576	11/45SSR2	
777574	11/45 SSR1	
777572	11/45 SSR0	
777570	CONSOLE SWITCH REGISTER	
777566	DL11 TTY OUT DBR	
777564	DL11 TTY OUT CSR	
777562	DL11 TTY IN DBR	
777560	DL11 TTY IN CSR	
777556	PC11 HSP DBR	
777554	PC11 HSP CSR	
777552	PC11 HSR DBR	
777550	PC11 HSR CSR	
777546	LKS LINE CLOCK KW11-L	
777516	LP11 DBR	
777514	LP11 CSR	
777512	LP11 XX	
777510	LP11 XX	
777476	RF11 DISK RFLA	LOOK AHEAD
777474	RF11 DISK RFMR	MAINTENANCE
777472	RF11 DISK RFDBR	
777470	RF11 DISK RFDAE	
777466	RF11 DISK RFDAR	
777464	RF11 DISK RFCAR	
777462	RF11 DISK RFWC	
777460	RF11 DISK RFDSC	
777456	RC11 DISK RCDBR	
777454	RC11 MAINTENANCE	
777452	RC11 RCCAR	
777450	RC11 RCWC	
777446	RC11 RCCSR	
777444	RC11 RCCSR1	
777442	RC11 RCER	
777440	RC11 RCLA	

777434	DT11 BUS SWITCH	# 7
777432	BUS SWITCH	# 6
777430	BUS SWITCH	# 5
777426	BUS SWITCH	# 4
777424	BUS SWITCH	# 3
777422	BUS SWITCH	# 2
777420	BUS SWITCH	# 1
777416	RKDB	RK11 DISK
777414	RKMR	
777412	RKDA	
777410	RKBA	
777406	RKWC	
777404	RKCS	
777402	RKER	
777400	RKDS	
777356	TCXX	
777354	TCXX	
777352	TCXX	
777350	TCDT	DEC TAPE (TC11)
777346	TCBA	
777344	TCWC	
777342	TCCM	
777340	TCST	
777336	ASH	EAE (KE11-A) # 2
777334	LSH	
777332	NOR	
777330	SC	
777326	MUL	
777324	MQ	
777322	AC	
777300	DIV	
777316	ASH	EAE (KE11-A) # 1
777314	LSH	
777312	NOR	
777310	SC	
777306	MUL	
777304	MQ	
777302	AC	
777300	DIV	
777166	CR11 XX	
777164	CRDBR2	CR11 CARD READER
777162	CRDBR1	
777160	CRCRSR	
776776	ADO1-D XX	
776774	ADO1-D XX	
776772	ADDBR	A/D CONVERTER ADO1-D
776770	ADCSR	

776766	DAC3	DAC AA11
776764	DAC2	
776762	DAC1	
776760	DAC0	
776756	SCOPE CONTROL - CSR	
776754	AA11 XX	
776752	AA11 XX	
776750	AA11 XX	
776740	RPBR3	RP11 DISK
776736	RPBR2	
776734	RPBR1	
776732	MAINTENANCE #3	
776730	MAINTENANCE #2	
776726	MAINTENANCE #1	
776724	RPDA	
776222	RPCA	
776720	RPBA	
776716	RPWC	
776714	RPCS	
776712	RPER	
776710	RPDS	

776676 TO 776500 MULTI TTY FIRST STARTS AT 776500

776476	TO 776406 MULTIPLE AA11'S SECOND STARTS @ 776760
776476	TO 776460 5TH AA11
776456	TO 776440 4TH AA11
776436	TO 776420 3RD AA11
776416	TO 776400 2ND AA11
NOTE 1ST AA11 IS AT 776750	

776377	TO 776200 DX11
775600	DS11 AUXILIARY LOCATION
775577	TO 775540 DS11 MUX3
775537	TO 775500 DS11 MUX2
775477	TO 775440 DS11 MUX1
775436	TO 775400 DS11 MUX0
775377	TO 775200 DN11
775177	TO 775000 DM11
774777	TO 774400 DP11
774377	TO 774000 DC11

773777 TO 773000 DIODE MEMORY MATRIX

773000	BM792-YA PAPER TAPE BOOTSTRAP
773100	BM792-YB RC,RK,RP,RF AND TC11 - BOOTSTRAP
773200	BM792-YC CARD READER BOOTSTRAP

773300
773400
773500
773600

773700 RESERVED FOR MAINTENANCE LOADER

772776 TO 772700 TYPESET PUNCH
772676 TO 772600 TYPESET READER

772576	AFC-MAINTENANCE
772574	AFC-MUX ADDRESS
772572	AFC-DBR
772570	AFC-CSR
772546	KW11P XX
772544	KW11P COUNTER
772542	KW11P COUNT SET BUFFER
772540	KW11P CSR
772536	TM11 XX
772534	TM11 XX
772532	TM11 LRC
772530	TM11 DBR
772526	TM11 BUS ADDRESS
772524	TM11 BYTE COUNT
772522	TM11 CONTROL
772520	TM11 STATUS
772512	OST CSR
772510	OST EADRS1,2
772506	OST ADRS2
772504	OST ADRS1
772502	OST MASK2
772500	OST MASK1
772416	DR11B/DATA
772414	DR11B/STATUS
772412	DR11B/BA
772410	DR11B/WC
772136	TO 772110 MEMORY PARITY CSR
772136	15
772120	4
772116	3
772114	2
772112	1
772110	0
771776	UDCS - CONTROL AND STATUS REGISTER
771774	UDSR - SCAN REGISTER
771772	MCLK - MAINTENANCE REGISTER
771766	UDC FUNCTIONAL I/O MODULES
771000	UDC FUNCTIONAL I/O MODULES
770776	TO 770700 KG11 CRC OPTION
770776	KG11A KGNU7
770774	KGDBR7
770772	KGBBC7
770770	KGCSR7
770716	KGNU1
770714	KGBCC1
770712	KGDBR1
770710	KGCSR1
770706	KGNU0
770704	KGDBR0
770702	KGBCC0

770700 KG11A KGCSR0
770676 TO 770500 16 LINE FOR DM11BB
770676 DM11BB # 16
770674
770672
770670
770666 DM11BB # 15
770664
770662
770660
770656 DM11BB # 14
770654
770652
770650
770646 DM11BB # 13
770644
770642
770640
770636 DM11BB # 12
770634
770632
770630
770626 DM11BB # 11
770624
770622
770620
770616 DM11BB # 10
770614
770612
770610
770606 DM11BB # 9
770604
770602
770600 DM11BB # 8
770076 LATENCY TESTER
770074 LATENCY TESTER
770072 LATENCY TESTER
770070 LATENCY TESTER
770056 TO 770000 SPECIAL FACTORY BUS TESTERS
767776 TO 764000 FOR USFR and SPECIAL SYSTEMS--DR11A ASSIGNED IN
USER AREA-STARTING AT HIGHEST ADDRESS WORKING DOWN
767776 DR11A # 0
767774
767772
767770
767766 DR11A # 1
767764
767762
767760
767756 DR11A # 2

764000 START NORMAL USER ADDRESSES HERE AND ASSIGN UPWARD.
760004 TO 760000 RESERVED FOR DIAGNOSTIC - SHOULD NOT BE ASSIGNED

APPENDIX C

INSTRUCTION TIMING

C.1 PDP-11/05 & 11/10

INSTRUCTION EXECUTION TIME

The execution time for an instruction depends on the instruction itself and the modes of addressing used. In the most general case, the Instruction Execution Time is the sum of a Basic Time, a Source Address Time, and a Destination Address Time.

$$\text{Instr Time} = \text{Basic Time} + \text{SRC Time} + \text{DST Time}$$

Double Operand instructions require all 3 of these Times, Single Operand instructions require a Basic Time and a DST Time, and with all other instructions the Basic Time is the Instr Time.

All Timing information is in microseconds, unless otherwise noted. Times are typical; processor timing can vary $\pm 10\%$.

SOURCE & DESTINATION ADDRESS TIMES

The SRC and DST Times apply directly to Word and Even Byte instructions. Odd Byte instructions take longer, see Notes following.

Mode	SRC Time*	DST Time**
0	0.0 μ sec	0.0 μ sec
1	0.9	2.4
2	0.9	2.4
3	2.4	3.4
4	0.9	2.4
5	2.4	3.4
6	2.4	3.4
7	3.4	4.7

NOTES:

*—For SCR Time, add 1.3 μ sec for Odd Byte addressing.

**—For DST Time, and Odd Byte addressing:

1. add 1.3 μ sec for a non-modifying instruction (CMPB, BITB, TSTB).
2. add 2.4 μ sec for a modifying instruction.

BASIC TIME

Double Operand

Instruction	Basic Time	
ADD, SUB, BIC, BIS CMP, BIT	3.7 μ sec 2.5	Instr Time = Basic Time + SRC Time + DST Time
MOV	3.7 (3.1 μ sec if Word instruction and mode 0)	

Single Operand

Instruction	Basic Time	
CLR, COM, INC, DEC, NEG, ASR, ASL, ROR, ROL, ADC, SBC	3.4 μ sec	Instr Time = Basic Time + DST Time
TST	2.2	
SWAB	4.3	

Branch Instructions

Instruction	Instr Time (branch)	Instr Time (no branch)
(all branches)	2.5 μ sec	1.9 μ sec

Jump Instructions

Instruction	Basic Time	
JMP	1.0 μ sec	Instr Time = Basic Time +
JSR	3.8	DST Time

Control, Trap & Misc Instructions

Instruction	Instr Time
RTS	3.8
RTI	4.4
SET N,Z,V,C	2.5
CLR N,Z,V,C	2.5
HALT	1.8
WAIT	1.8
RESET	100 msec
IOT, EMT, TRAP, BPT	8.2 μ sec

LATENCY

NPR latency is 7 μ sec, max.

C.2 PDP-11/35 & 11/40

INSTRUCTION EXECUTION TIME

The execution time for an instruction depends on the instruction itself, the modes of addressing used, and the type of memory being referenced. In the most general case, the Instruction Execution Time is the sum of a Source Address Time, a Destination Address Time, and an Execute, Fetch Time.

$$\text{Instr Time} = \text{SRC Time} + \text{DST Time} + \text{EF Time}$$

Some of the instructions require only some of these times, and are so noted. All Timing information is in microseconds, unless otherwise noted. Times are typical; processor timing can vary $\pm 10\%$.

I. BASIC INSTRUCTION SET TIMING

Double Operand

all instructions,

$$\text{except MOV: Instr Time} = \text{SRC Time} + \text{DST Time} + \text{EF Time}$$

$$\text{MOV Instruction: Instr Time} = \text{SRC Time} + \text{EF Time}$$

Single Operand

all instr, except MFPI, MTPI: Instr Time = DST Time + EF Time

MFPI, MTPI instructions: Instr Time = EF Time

Branch, Jump, Control, Trap, & Misc

all instructions: Instr Time = EF Time

NOTES:

1. The times specified generally apply to Word instructions. In most cases Even Byte instructions have the same times, with some Odd Byte instructions taking longer. All exceptions are noted.
2. Timing is given without regard for NRP or BR servicing. Memory types MM11-S, MF11-L, and MM11-L are assumed with direct use of the special processor MSYNA signal and with memory within the CPU mounting assembly. Use of the regular Unibus BUS MSYN signal means 0.08 μ sec must be added for each memory cycle.
3. If the Memory Management (KT11-D) option is installed, instruction execution times increase by 0.15 μ sec for each memory cycle used.

SOURCE ADDRESS TIME

Instruction	Source Mode	SRC Time (A)	Memory Cycles
Double Operand	0	0.00 μ sec	0
	1	.78	1
	2	.84	1
	3	1.74	2
	4	.84	1
	5	1.74	2
	6	1.46	2
	7	2.36	3

NOTE (A): For Source Modes 1 thru 7, add 0.34 μ sec for Odd Byte instructions.

DESTINATION ADDRESS TIME

Instruction	Destination Mode	DST Time (B)	Memory Cycles
Single Operand, and Double Operand (except MOV, JMP, JSR)	0	0.00 μ sec	0
	1	.78 (.90)	1
	2	.84 (.90)	1
	3	1.74 (1.80)	2
	4	.84 (.90)	1
	5	1.74 (1.80)	2
	6	1.46 (1.74)	2
	7	2.36 (2.64)	1

NOTE (B): For Destination Modes 1 thru 7, add 0.34 μ sec for Odd Byte instructions. Use higher values in parentheses () for ADD, SUB, CMP, BIT, BIC, or BIS and a Source Mode of 0.

EXECUTE, FETCH TIME

Double Operand

Instruction (use with SRC Time & DST Time)	SRC Mode 0 DST Mode 0		SRC Mode 1 to 7 DST Mode 0		SRC Mode 0 to 7 DST Mode 1 to 7	
	EF Time	Mem Cyc	EF Time	Mem Cyc	EF Time (C)	Mem Cyc
ADD, CMP, { BIT, BIC, BIS}	0.99 μ s	1	1.60 μ s	1	1.76 μ s	2
SUB XOR	.99 .99	1 1	1.60 —	1 —	1.90 1.76	2 2

NOTE (C): For Destination Modes 1 thru 7, add 0.48 μ sec for Odd Byte instructions.

Instruction	DST Mode	SRC Mode	EF Time (Word instr)	EF Time (Odd or Even Byte)	Memory Cycles
	0	0	0.90 μ sec	1.80 μ sec	0
	0	1 to 7	1.46	1.80	0
MOV	1	0 to 7	2.42	2.56	2
	2	0 to 7	2.42	2.56	2
	3	0 to 7	3.18	3.32	3
	4	0 to 7	2.42	2.56	2
(use with SRC Time)	5	0 to 7	3.18	3.32	3
	6	0	2.84	2.98	3
	6	1 to 7	3.18	3.32	3
	7	0	3.68	3.82	4
	7	1 to 7	4.02	4.16	4

Single Operand

Instruction	Destination Mode 0		Destination Mode 1 to 7	
	EF Time	Mem Cycles	EF Time (D)	Mem Cycles
(use with DST Time)				
CLR, COM, NEG, INC, DEC, ADC, SBC, TST, ROL, ASL, SWAB	0.99 μ s	1	1.77 μ s	2
ROR, ASR SXT	1.25 (E) .90	1 1	2.06 1.77	2 2

NOTE (D): For Destination Modes 1 thru 7, add 0.48 μ sec for Odd Byte instructions.

NOTE (E): For RORB and ASRB, add 0.14 μ sec for Even or Odd Byte instructions.

Instruction	Instr Time	Mem Cycles	Note
MFPI	3.74 μ s	2	
MTPI	3.68	2	These two instructions are implemented only if Memory Management is installed.

Branch Instructions

Instruction	Instr Time (Branch)	Instr Time (No Branch)	Memory Cycles
BR, BNE, BEQ, BPL, BMI, BVC, BVS, BCC, BCS, BGE, BLT, BGT, BLE, BHI, BLOS, BHIS, BLO	1.76 μ sec	1.40 μ sec	1
SOB	2.36	2.04	1

Jump Instructions

Instruction	Destination Mode	Instr Time	Memory Cycles
JMP	1	1.80 μ sec	1
	2	2.10	1
	3	2.30	2
	4	1.90	1
	5	2.30	2
	6	2.36	2
	7	2.92	3
JSR	1	2.94	2
	2	3.24	2
	3	3.44	3
	4	3.04	2
	5	3.44	3
	6	3.50	3
	7	4.06	4

Control, Trap, & Misc Instructions

Instruction	Instr Time	Mem Cyc	Notes
RTS	2.42 μ sec	2	
MARK	2.56	2	
RTI, RTT	2.92	3	
SET N,Z,V,C	1.72	1	
CLR N,Z,V,C	2.02	1	
HALT	2.42	1	Console loop for a switch setting is 0.44 μ sec.
WAIT	2.24	1	WAIT loop for a BR is 1.12 μ sec.
RESET	80 msec	1	
IOT, EMT	5.80 μ sec	5	
TRAP, BPT			

LATENCY

Interrupts (BR requests) are acknowledged at the end of the current instruction. For a typical instruction, with an instruction execution time of 4 μ sec, the average time to request acknowledgement would be 2 μ sec.

Interrupt service time, which is the time from BR acknowledgement to the first subroutine instruction, is 5.42 μ sec, max.

NPR (DMA) latency, which is the time from request to bus mastership for the first NPR device, is 3.50 μ sec, max.

II. EIS, KE11-E, INSTRUCTION TIMING

$$\text{Instr Time} = \text{SRC Time} + \text{EF Time}$$

Source Mode	SRC Time
0	0.28 μsec
1	.78
2	.98
3	1.74
4	.98
5	1.74
6	1.74
7	2.64

Instruction	EF Time	Notes
MUL	8.88 μsec	
DIV	11.30	
ASH (right)	2.58	Add 0.30 μsec per shift.
ASH (left)	2.78	Add 0.30 μsec per shift.
ASHC (no shift)	2.78	
ASHC (shift)	3.26	Add 0.30 μsec per shift.

LATENCY

Interrupts are acknowledged at the end of the current instruction. Interrupt service time is 5.42 μsec , max. NPR latency is 3.50 μsec , max.

III. FLOATING POINT, KE11-F, INSTRUCTION TIMING

$$\text{Instr Time} = \text{Basic Time} + \text{Shift Time for binary pts} + \text{Shift Time for norm}$$

Instr	Basic Time	Time per shift to line up binary points (0 to 23 shifts)	Time per shift for normalization (0 to 25 shifts)
FADD	18.78 μsec	0.30 μsec	0.34 μsec
FSUB	19.08	.30	.34
FMUL	29.00	—	.34
FDIV	46.72	—	.34

Basic instruction times shown for FADD and FSUB assume exponents are equal or differ by one.

LATENCY

If an interrupt request of higher priority than the operating program occurs during a Floating Point instruction, the current instruction will be aborted unless it is near completion. The maximum time from interrupt request to acknowledgement during Floating Point instruction execution is 20.08 μ sec. Interrupt service time is 5.42 μ sec, max. NPR latency is 3.50 μ sec, max.

APPENDIX D

INSTRUCTION INDEX


ADC(B)	4-19	FDIV	7-9
ADD	4-25	FMUL	7-9
ASL(B)	4-14	FSUB	7-8
ASH	7-4	HALT	4-70
ASHC	7-5	INC(B)	4-8
ASR(B)	4-13	IOT	4-64
BCC	4-40	JMP	4-52
BCS	4-41	JSR	4-54
BEQ	4-35	MARK	4-57
BGE	4-43	MFPI	6-18
BGT	4-45	MOV(B)	4-23
BHI	4-48	MTPI	6-19
BHIS	4-50	MUL	7-2
BIC(B)	4-29	NEG(B)	4-10
BIS(B)	4-30	NOP	4-73
BIT(B)	4-28	RESET	4-72
BLT	4-44	ROL(B)	4-16
BLE	4-46	ROR(B)	4-15
BLO	4-51	RTI	4-65
BLOS	4-49	RTS	4-56
BMI	4-37	RTT	4-66
BNE	4-34	SBC(B)	4-20
BPL	4-36	SOB	4-59
BPT	4-63	SUB	4-26
BR	4-33	SWAB	4-17
BVC	4-38	SXT	4-21
BVS	4-39	TRAP	4-62
CLR(B)	4-6	TST(B)	4-11
CMP(B)	4-24	WAIT	4-71
COM(B)	4-7	XOR	4-31
COND. CODES	4-73		
DEC(B)	4-9		
DIV	7-3		
EMT	4-61		
FADD	7-8		

NUMERICAL OP CODE LIST

Op Code	Mnemonic	Op Code	Mnemonic	Op Code	Mnemonic
00 00 00	HALT	00 60 DD	ROR	10 40 00	
00 00 01	WAIT	00 61 DD	ROL	10 43 77	EMT
00 00 02	RTI	00 62 DD	ASR		
00 00 03	BPT	00 63 DD	ASL		
00 00 04	IOT	00 64 NN	MARK	10 44 00	
00 00 05	RESET	00 65 SS	MFPI	10 44 00	TRAP
00 00 06	RTT	00 66 DD	MTPI	10 47 77	
00 00 07	(unused)	00 67 DD	SXT		
00 01 DD	JMP	00 70 00		10 50 DD	CLRB
00 02 OR	RTS	00 77 77	(unused)	10 51 DD	COMB
00 02 10				10 52 DD	INCB
00 02 27	(unused)	01 SS DD	MOV	10 53 DD	DEC B
		02 SS DD	CMP	10 54 DD	NEGB
00 02 3N	SPL	03 SS DD	BIT	10 55 DD	ADCB
00 02 40	NOP	04 SS DD	BIC	10 56 DD	SBCB
		05 SS DD	BIS	10 57 DD	TSTB
00 02 41		06 SS DD	ADD	10 60 DD	RORB
00 02 77	cond codes	07 0R SS	MUL	10 61 DD	ROLB
		07 1R SS	DIV	10 62 DD	ASRB
		07 2R SS	ASH	10 63 DD	ASLB
00 03 DD	SWAB	07 3R SS	ASHC	10 64 00	
		07 4R DD	XOR	10 64 77	(unused)
00 04 XXX	BR				
00 10 XXX	BNE	07 50 OR	FADD		
00 14 XXX	BEQ	07 50 1R	FSUB	10 65 SS	MFPD
00 20 XXX	BGE	07 50 2R	FMUL	10 66 DD	MTPD
00 24 XXX	BLT	07 50 3R	FDIV	10 67 00	
00 30 XXX	BGT			10 77 77	(unused)
00 34 XXX	BLE	07 50 40			
00 4R DD	JSR	07 67 77	(unused)		
00 50 DD	CLR	07 7R NN	SOB	11 SS DD	MOVB
00 51 DD	COM			12 SS DD	CMPB
00 52 DD	INC	10 00 XXX	BPL	13 SS DD	BITB
00 53 DD	DEC	10 04 XXX	BMI	14 SS DD	BICB
00 54 DD	NEG	10 10 XXX	BHI	15 SS DD	BISB
00 55 DD	ADC	10 14 XXX	BLOS	16 SS DD	SUB
00 56 DD	SBC	10 20 XXX	BVC	17 00 00	
00 57 DD	TST	10 24 XXX	BVS	17 77 77	floating point
		10 30 XXX	BCC, BHIS		
		10 34 XXX	BCS, BLO		


APPENDIX E SUMMARY OF PDP11 INSTRUCTIONS

GENERAL REGISTER ADDRESSING

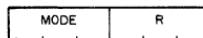

Mode	Name	Symbolic	Description
0	register	R	(R) is operand [ex. R2 = %2]
1	register deferred	(R)	(R) is address
2	auto-increment	(R)+	(R) is adrs; (R)+(1 or 2)
3	auto-incr deferred	@(R)+	(R) is adrs of adrs; (R)+2
4	auto-decrement	-(R)	(R) — (1 or 2); (R) is adrs
5	auto-decr deferred	@-(R)	(R) — 2; (R) is adrs of adrs
6	index	X(R)	(R)+X is adrs
7	index deferred	@X(R)	(R)+X is adrs of adrs

PROGRAM COUNTER ADDRESSING

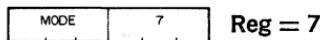

2	immediate	#n	operand n follows instr
3	absolute	@#A	address A follows instr
6	relative	A	instr adrs +4+X is adrs
7	relative deferred	@A	instr adrs +4+X is adrs of adrs

LEGEND

Op Codes

■ = 0 for word/1 for byte
SS = source field (6 bits)
DD = destination field (6 bits)
R = gen register (3 bits), 0 to 7
XXX = offset (8 bits), +127 to -128
N = number (3 bits)
NN = number (6 bits)

Operations

() = contents of
s = contents of source
d = contents of destination
r = contents of register
← = becomes
X = relative address
% = register definition

Boolen

Λ = AND
∨ = inclusive OR
⊻ = exclusive OR
¬ = NOT

Condition Codes

* = conditionally set or cleared
— = not affected
0 = cleared
1 = set

NOTE:

- ▲ = Applies to the 11/35, 11/40, & 11/45 computers
- = Applies to the 11/45 computer

SINGLE OPERAND: OPR dst



Mnemonic	Op Code	Instruction	dst Result	N Z V C
General				
CLR(B)	■ 050DD	clear	0	0 1 0 0
COM(B)	■ 051DD	complement (1's)	$\sim d$	* * 0 1
INC(B)	■ 052DD	increment	$d + 1$	* * * -
DEC(B)	■ 053DD	decrement	$d - 1$	* * * -
NEG(B)	■ 054DD	negate (2's compl)	$\sim d$	* * * *
TST(B)	■ 057DD	test	d	* * 0 0


Rotate & Shift

ROR(B)	■ 060DD	rotate right		* * * *
ROL(B)	■ 061DD	rotate left		* * * *
ASR(B)	■ 062DD	arith shift right	$d/2$	* * * *
ASL(B)	■ 063DD	arith shift left	$2d$	* * * *
SWAB	0003DD	swap bytes		* * * 0

Multiple Precision

ADC(B)	■ 055DD	add carry	$d + C$	* * * *
SBC(B)	■ 056DD	subtract carry	$d - C$	* * * *
▲ SXT	0067DD	sign extend	0 or -1	- * -

DOUBLE OPERAND: OPR src,dst OPR scr,R or OPR R,dst

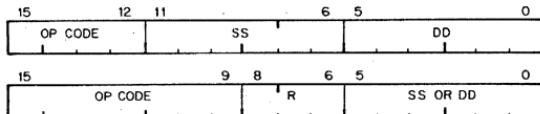

Mnemonic	Op Code	Instruction	Operation	N Z V C
General				
MOV(B)	■ 1SSDD	move	$d \leftarrow s$	* * 0 -
CMP(B)	■ 2SSDD	compare	$s = d$	* * * *
ADD	06SSDD	add	$d \leftarrow s + d$	* * * *
SUB	16SSDD	subtract	$d \leftarrow d - s$	* * * *


Logical

BIT(B)	■ 3SSDD	bit test (AND)	$s \wedge d$	* * 0 -
BIC(B)	■ 4SSDD	bit clear	$d \leftarrow (\sim s) \wedge d$	* * 0 -
BIS(B)	■ 5SSDD	bit set (OR)	$d \leftarrow s \vee d$	* * 0 -

▲ Register

MUL	070RSS	multiply	$r \leftarrow r \times s$	* * 0 *
DIV.	071RSS	divide	$r \leftarrow r/s$	* * * *
ASH	072RSS	shift arithmetically		* * * *
ASHC	073RSS	arith shift combined		* * * *
XOR	074RDD	exclusive OR	$d \leftarrow r \neq d$	* * 0 -

BRANCH B ___ location

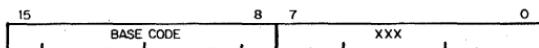

If condition is satisfied:
Branch to location,
New PC \leftarrow Updated PC + (2 x offset)

Op Code = Base Code + XXX

adrs of br instr +2

Mnemonic	Base Code	Instruction	Branch Condition
Branches			
BR	000400	branch (unconditional)	(always)
BNE	001000	br if not equal (to 0)	$\neq 0$ $Z = 0$
BEQ	001400	br if equal (to 0)	$= 0$ $Z = 1$
BPL	100000	branch if plus	$+$ $N = 0$
BMI	100400	branch if minus	$-$ $N = 1$
BVC	102000	br if overflow is clear	$V = 0$
BVS	102400	br if overflow is set	$V = 1$
BCC	103000	br if carry is clear	$C = 0$
BCS	103400	br if carry is set	$C = 1$

Signed Conditional Branches

BGE	002000	br if greater or eq (to 0)	≥ 0	$N \neq V = 0$
BLT	002400	br if less than (0)	< 0	$N \neq V = 1$
BGT	003000	br if greater than (0)	> 0	$Z \vee (N \neq V) = 0$
BLE	003400	br if less or equal (to 0)	≤ 0	$Z \vee (N \neq V) = 1$

Unsigned Conditional Branches

BHI	101000	branch if higher	$>$	$C \vee Z = 0$
BLOS	101400	branch if lower or same	\leq	$C \vee Z = 1$
BHIS	103000	branch if higher or same	\geq	$C = 0$
BLO	103400	branch if lower	$<$	$C = 1$

JUMP & SUBROUTINE:

Mnemonic	Op Code	Instruction	Notes
JMP	0001DD	jump	$PC \leftarrow dst$
JSR	004RDD	jump to subroutine	use same R
RTS	00020R	return from subroutine	
▲MARK	0064NN	mark	aid in subr return
▲SOB	077RNN	subtract 1 & br (if $\neq 0$)	$(R) - 1$, then if $(R) \neq 0$: $PC \leftarrow Updated PC - (2 \times NN)$


TRAP & INTERRUPT:

Mnemonic	Op Code	Instruction	Notes
EMT	104000 to 104377	emulator trap (not for general use)	PC at 30, PS at 32
TRAP	104400 to 104777	trap	PC at 34, PS at 36
BPT	000003	breakpoint trap	PC at 14, PS at 16
IOT	000004	input/output trap	PC at 20, PS at 22
RTI	000002	return from interrupt	
▲RTT	000006	return from interrupt	inhibit T bit trap

MISCELLANEOUS:

Mnemonic	Op Code	Instruction
HALT	000000	halt
WAIT	000001	wait for interrupt
RESET	000005	reset external bus
NOP	000240	(no operation)
● SPL	00023N	set priority level (to N)
▲ MFPI	0065SS	move from previous instr space
▲ MTPI	0066DD	move to previous instr space
● MFPD	1065SS	move from previous data space
● MTPD	1066DD	move to previous data space

CONDITION CODE OPERATORS:

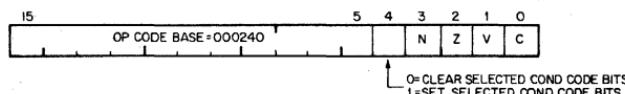

Mnemonic	Op Code	Instruction	N	Z	V	C
CLC	000241	clear C	—	—	—	0
CLV	000242	clear V	—	—	0	—
CLZ	000244	clear Z	—	0	—	—
CLN	000250	clear N	0	—	—	—
CCC	000257	clear all cc bits	0	0	0	0
SEC	000261	set C	—	—	—	1
SEV	000262	set V	—	—	1	—
SEZ	000264	set Z	—	1	—	—
SEN	000270	set N	1	—	—	—
SCC	000277	set all cc bits	1	1	1	1

PDP11/40 FLOATING POINT UNIT:

			N Z V C
FADD	07500R	floating add	* * 0 0
FSUB	07501R	floating subtract	* * 0 0
FMUL	07502R	floating multiply	* * 0 0
FDIV	07503R	floating divide	* * 0 0

DEVICE REGISTER ADDRESSES


Device		Control & Status	Data Buffer	Inter-rupt Vector	Priority Level
KW11-L	Line Clock	777 546	—	100	BR6
KW11-P	Real Time Clock control & status counter	772 540 772 544	772 542	104	BR6
LA30	DECwriter keyboard printer	777 560 777 564	777 562 777 566	60 64	BR4 BR4
LP11	Line Printer	777 514	777 516	200	BR4
LT33	Teletype keyboard printer	777 560 777 564	777 562 777 566	60 64	BR4 BR4
PC11	Paper Tape reader punch	777 550 777 554	777 552 777 556	70 74	BR4 BR4
RC11/RS64	Disk (64K words)		777 456	210	BR5
	look ahead	777 440			
	disk address	777 442			
	error status	777 444			
	command & status	777 446			
	word count	777 450			
	current address	777 452			
	maintenance	777 454			
RF11/RS11	Disk (256K words)		777 472	204	BR5
	control status	777 460			
	word count	777 462			
	current mem adrs	777 464			
	disk address	777 466			
	adrs ext error	777 470			
	maintenance	777 474			
	segment address	777 476			

RK11/RK05	Disk Cartridge		777	416	220	BR5
	drive status	777	400			
	error	777	402			
	control status	777	404			
	word count	777	406			
	current address	777	410			
	disk address	777	412			
	maintenance	777	414			
TC11/TU56	DECtape		777	350	214	BR6
	control	777	340			
	command	777	342			
	word count	777	344			
	current address	777	346			
TM11/TU10	Magtape		772	530	224	BR5
	status	772	520			
	command	772	522			
	byte counter	772	524			
	current address	772	526			
	read lines	772	532			

PROCESSOR REGISTER ADDRESSES

Processor Status Word

PS — 777 776

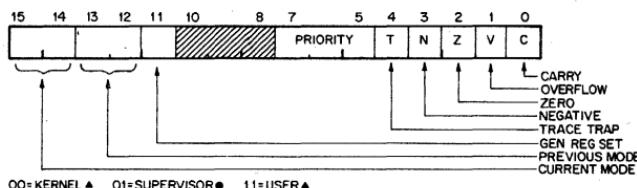

▲ Stack Limit Register — 777 774

● Program Interrupt Request — 777 772

General Registers (console use only)	R0 — 777 700	R4 — 777 704
	R1 — 777 701	R5 — 777 705
	R2 — 777 702	R6 — 777 706
	R3 — 777 703	R7 — 777 707

Console Switches & Display Register — 777 570

INTERRUPT VECTORS

000	(reserved)	240	PIRQ
004	Time Out & other errors	244	Floating Point
010	illegal & reserved instr	250	Memory Management
014	BPT		
020	IOT		
024	Power Fail		
030	EMT		
034	TRAP		

ABSOLUTE LOADER

Starting Address: 500

Memory Size: 4K 017
 8K 037
 12K 057
 16K 077
 20K 117
 24K 137
 28K 157

(or larger)

BOOTSTRAP LOADER

Address	Contents	Address	Contents
— 744	016 701	— 764	000 002
— 746	000 026	— 766	— 400
— 750	012 702	— 770	005 267
— 752	000 352	— 772	177 756
— 754	005 211	— 774	000 765
— 756	105 711	— 776	177 560 (KB) or 177 550 (PR)
— 760	100 376		
— 762	116 162		

digital

digital equipment corporation

112 • 00173 • 2613
D-09-50

Printed in U.S.A.

pdp1 / 05
/ 10
/ 35
/ 40