odometry activity

December 30, 2023

1 04 - Wheel encoder based odometry

"Odometry" is the problem of "measuring the path", or evolution of the pose in time, of the robot.

We can solve the odometry problem by using the measurements from wheel encoders, and a so called "dead-reckoning" model, to estimate the evolution of the pose in time through an iterative procedure, such that:

$$x_{k+1} = x_k + \Delta x_k$$

$$y_{k+1} = y_k + \Delta y_k$$

$$\theta_{k+1} = \theta_k + \Delta \theta_k$$

Where initial conditions (x_0, y_0, θ_0) are assumed to be known. The increments can be calculated by:

1. Determining the rotation of each wheel through the wheel encoder mesurements

$$\Delta \phi_k = N_k \cdot \alpha$$

where N_k is the number of pulses, or "ticks", measured from the encoders in the k-th time interval, $\alpha = \frac{2\pi}{N_{tot}}$ is the rotation per tick, and N_{tot} the total number of ticks per revolution ($N_{tot} = 135$ for the wheel encoders we will be using). This relation is evaluated for each wheel, yielding $\Delta \phi_{l,k}$ and $\Delta \phi_{r,k}$ for the left and right wheels respectively.

2. Deriving the total distance travelled by each wheel

Assuming the wheel radii are the same (equal to R) for both wheels, the distance travelled by each wheel is given by:

$$d_{l/r,k} = R \cdot \Delta \phi_{l/r,k}$$

3. Finding the rotation and distance travelled by the robot (frame)

Under the assumption of no slipping of the robot wheels, we can derive the distance travelled by the origin of the robot frame (point A) and the rotation of the robot $\Delta\theta$:

$$d_{A,k} = \frac{d_{r,k} + d_{l,k}}{2}$$

$$\Delta \theta_k = \frac{d_{r,k} - d_{l,k}}{2L}$$

4. Expressing the robot motion in the world reference frame

Finally, we can express the estimated motion in the world reference frame and find:

$$\Delta x_k = d_{A,k} \cos \theta_k$$
$$\Delta y_k = d_{A,k} \sin \theta_k$$

2 Let's get started!

In this activity you will write a function that produces an estimate of the pose of the Duckiebot, given mesurements from the wheel encoders and an initial position:

```
[]: # Run and do not edit this magic cell.

# It helps getting things to work throughout the Jupyter notebook - in_u
particular importing changes in functions made in files other than this_u
workspace.

%load_ext autoreload
%autoreload 2
```

```
[]: import numpy as np

x0 = y0 = 0.0 # meters
theta0 = np.deg2rad(0) # radians

print(x0,y0, theta0)
```

0.0 0.0 0.0

2.1 1. Determining the rotation of each wheel through the wheel encoder mesurements

We have seen how to read wheel encoder data in the wheel encoder tutorial. We can now use this data to measure the rotation of each wheel.

2.1.1 Wheel encoder calibration factor

Remember that there are 135 ticks per revolution on the wheel encoders we are using.

```
[]: # Write the correct expressions
import numpy as np

N_tot = 135 # total number of ticks per revolution
alpha = 2 * np.pi / N_tot # wheel rotation per tick in radians

print(f"The angular resolution of our encoders is: {np.rad2deg(alpha)} degrees")
```

The angular resolution of our encoders is: 2.666666666666666665 degrees

Assume that at the current update the left and right motor encoders have produced the following measurements:

```
[]: # Feel free to play with the numbers to get an idea of the expected outcome

ticks_left = 1
prev_tick_left = 0

ticks_right = 0
prev_tick_right = 0
```

How much did each wheel rotate?

The left wheel rotated: 2.66666666666666665 degrees The right wheel rotated: 0.0 degrees

2.2 2. Evaluate distance travelled by each wheel

Now let's calculate the distance travelled by each wheel. It depends on the wheel radii. We need to determine them! We could use advanced odometry calibration procedures, but let's take it a step at the time.

If you have a robot, take a ruler and measure your wheel radii (let's assume they are the same):

```
[]: # What is the radius of your wheels (assuming they are identical)?

R = 0.0318 # insert value measured by ruler (meters)
```

Note: the default value used in simulation and on the robot is R = 0.0318m.

```
[]: # What is the distance travelled by each wheel?
```

```
d_left = R*rotation_wheel_left
d_right = R*rotation_wheel_right

print(f"The left wheel travelled: {d_left} meters")
print(f"The right wheel rotated: {d_right} meters")
```

The left wheel travelled: 0.0014800392056911916 meters The right wheel rotated: 0.0 meters

2.2.1 Save your new value of R

If you have a Duckiebot, let's make sure it remembers its new wheel radius! You should already know how to do this from wheel calibration tutorial.

Power you Duckiebot on, make sure it is connected to the network and you can ping it, then open a terminal **on your computer** and type:

dts start_gui_tools ROBOTNAME

rosparam set /ROBOTNAME/kinematics_node/radius R-value

where R-value is the value of the wheel radius you measured (expressed in meters). You can then save it with:

rosservice call /ROBOTNAME/kinematics_node/save_calibration

and finally verify that it has been saved by opening the ROBOTNAME.yaml file in your Dashboard > File Manager > Calibrations > Kinematics page.

You can keep the terminal you just used open, so we can save the baseline measurement too. Let's keep going!

2.3 3. Find the rotation and distance travelled by the Duckiebot

If you have previously set your robot's gain so that the wheels do not slip, the travelled distance of point A (origin of the robot frame) will be given by the average of the distances travelled by the wheels:

```
[]: # How much has the robot travelled?

d_A = (d_left+d_right)/2 # robot distance travelled in robot frame (meters)

print(f"The robot has travelled: {d_A} meters")
```

The robot has travelled: 0.0007400196028455958 meters

To calculate the rotation of the robot we need to measure the baseline too - or the distance between the center of the two wheels:

If you have a robot, take a ruler and measure it!

```
[]: # What is the baseline length of your robot?
```

```
baseline\_wheel2wheel = 0.1 \ \# \ Take \ a \ ruler \ and \ measure \ the \ distance \ between \ the \\ \hookrightarrow center \ of \ the \ two \ wheels \ (meters)
```

Note: the default value, and that used in simulation, is baseline = 0.1m.

We are now ready to calculate the rotation of the Duckiebot:

```
[]: # Of what angle has the robot rotated?

Delta_Theta = (d_right-d_left)/baseline_wheel2wheel # [radians]

print(f"The robot has rotated: {np.rad2deg(Delta_Theta)} degrees")
```

The robot has rotated: -0.848000000000001 degrees

2.3.1 Save your new value of baseline

Let's make sure it remembers its new wheel baseline! You should already know how to do this from wheel calibration tutorial.

Power you Duckiebot on, make sure it is connected to the network and you can ping it, then open a terminal **on your computer** and type:

```
dts start_gui_tools ROBOTNAME
```

rosparam set /ROBOTNAME/kinematics_node/baseline baseline-value

where baseline-value is the value of baseline_wheel2wheel you just measured (expressed in meters). You can then save it with:

```
rosservice call /ROBOTNAME/kinematics_node/save_calibration
```

and finally verify that it has been saved by opening the ROBOTNAME.yaml file in your Dashboard > File Manager > Calibrations > Kinematics page.

3 Write the odometry function

We have been practicing so far.

Now it is time to write the functions that will actually be running on the robot (in simulation or on the physical one).

You will write two functions:

- 1. A function that calculates the rotation of a wheel given a message from the wheel encoders and the previous number of ticks measured;
- 2. The actual odometry function, that will receive as inputs the kinematic model parameters, the pose estimate at the previous iteration, and the rotation of each wheel. The initial position is assumed to be $q_0 = [0, 0, 0]^T$.

3.1 Calculating the rotation of each wheel

Implement the function delta_phi inside the file odometry_activity.py.

This function should output the wheel rotation (in radians) since last measurements, receiving as input the current and previous update wheel encoder readings.

3.2 Estimating the odometry

Implement the function pose_estimation inside the file odometry_activity.py. This function computes the (x, y, theta) estimate by aggregating computed wheel rotations and the (known) geometry of the robot.


3.2.1 Test the pose_estimation() function

Unit tests are useful to check if a piece of code does its intended job. Although the interaction of different functions might yield surprises even when each function produces the expected outcome, it is good pratice to test them in isolation before prime time! These are called "unit tests", and:

If it ain't tested, it's broken.

-Roboticists, level 9

Let's see if the function you wrote above passes the following test!

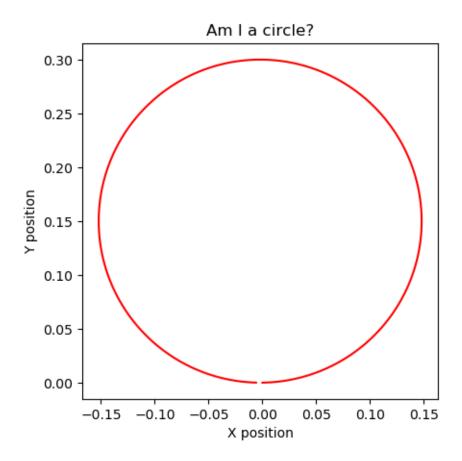

[]: <tests.unit_test.UnitTestOdometry at Oxffff88079910>

A successful test will yield something similar to this:

4 Run the Activity

Let's now see how the odometry is working in pratice.

The first objective of this activity is to run the scripts you just wrote on a simulated and real robot, and see how they perform.

The second objective is reflecting on the outcome and trying to have the theory agree with your observations.

4.1 Running the odometry in simulation

- Open a terminal on your computer, navigate to /duckietown-lx/modcon/ and type dts code build
- 2. Wait for the build to finish, then type:

dts code workbench --sim

- 3. Open VNC on you browser.
- 4. Double-click on the "Odometry" icon on the Desktop

You will see three things opening:

- a terminal
- a pre-configured RVIZ window
- a virtual joystick

Starting the Odometry activity.

In the RVIZ window you will see what your robot sees, and a reference frame in the gridmap. That frame represents the position and orientation of your robot, calculated according to the pose_estimation and delta_phi functions written above (they are beliefs, not "real" states).

Note: it may take some time (>30s) for the images and the odometry to appear, depending on the specifications of your host machine.

Tips:

- You can change the graphical settings of the reference frame (bigger, shorter, more or less
- You can press `Alt` while clicking and dragging anywhere in the RVIZ terminal to move the wi
- VNC opens with the resolution of your browser window when you launch it. If things look cram
- The terminal on your computer will be streaming some debugging data, FYI.
 - 5. Click on the virtual joystick and start driving. You will see the marker move too according to the wheel encoder data that the robot is receiving. You can monitor these (and other) messages by following the procedure learned in the wheel encoders tutorial.
 - 6. Drive as you wish (don't crash or you will have to restart!); we suggest doing a loop. Get back to the initial position and look at the resulting odometry. Is your robot's *belief* accurate? Why, or why not?
 - 7. When you are satisfied with your experience and your odometry, Ctrl-C the terminal on your computer to stop VNC, or Ctrl-C your open terminal in VNC to go back to the desktop.

Do you want to modify your odometry functions before proceeding? Change the cells above, Ctrl-S to save the page, and re-launch dts code workbench --sim.

If you do not have a robot, you can now proceed to the PID control activity. If you have a robot instead, buckle your Duckies up and continue reading, it's time to have some more fun!

4.2 Running the odometry activity on the Duckiebot

The procedure for running this activity on your Duckiebot is very similar to above, and the same tips apply.

- 0. Make sure your Duckiebot is powered on, charged, and connected to the network. Moreover, make sure you have calibrated your robots kinematic parameters.
- 1. Computer -> Open terminal

```
dts code build
dts code workbench -b ROBOTNAME
```

- 2. Open VNC on you browser.
- 3. Double-click on the "Odometry" icon on the Desktop

You will see three things opening:

- a terminal
- a pre-configured RVIZ window
- · a virtual joystick

In the RVIZ window you will see what your robot sees, and a marker in the gridmap. That reference frame represents the position and orientation of your robot according to the pose_estimation and delta_phi functions written above.

- 4. Click on the virtual joystick and start driving. You will see the marker move too according to the wheel encoder data that the robot is receiving. You can monitor these (and other) messages by following the procedure learned in the wheel encoders tutorial.
- 5. Drive as you wish. We suggest driving in your Duckietown for two reasons: (a) you should have calibrated the gain of your motors so not to slip and (b) you will have a reference of the approximate driven path. Or you can drive around your house; or do both. Whatever you do, get back to the initial position (approximately) and look at the resulting odometry. Is your robot's *belief* accurate? Why?
- 6. When you are satisfied with your experience and your odometry, Ctrl-C the terminal on your computer to stop VNC, or Ctrl-C your open terminal in VNC to go back to the desktop.

Do you want to modify your odometry functions before proceeding? Update the pose_estimation and delta_phi functions and re-launch dts code workbench -b ROBOTNAME.

```
<div style="text-align:center;">
        <img src="../../assets/images/odometry/odometry-real-2.png" width="300" alt="successfu"
        <img src="../../assets/images/odometry/less-good-odometry.png" width="300" />
            DB21 Duckiebot good and less good odometries.
</div>
```

4.3 Improving on the results

There are many factor that affect the odometry and cause a drift over time. Although that is unavoidable, having an accurate estimate of the odometry parameters of the robot (R, L) will help. To improve your results above, modify your kinematic calibration parameters and try again.

4.3.1 Reflecting on the experience

The first thing you should have noticed is if your odometry made any sense at all. Did your motion reconstruction follow the actual driving?

Even if your equations were correct, how accurate was the reconstruction? In the short run vs. the long run? Why?

Try driving several loops (you can set how many arrows will be shown, reduce the number to avoid a big mess). Does it get better or worse? Why?

Did you notice anything different in the robot movement vs. the model we made? For example?

On the Duckiebot, how will your odometry change if you tweak you kinematics parameters? Can you get it to do better?

Did you notice any difference between the real world and the simulation? Why do you think that is the case?

Congratulations, you just gave your robot the ability to *represent* itself in the world. It's kind of, nearly, as if it started thinking (or not?)! You can now proceed to the next activity: designing a PID controller for heading control.